

Honeywell

CK62/EDA61K Series

Accessories - Universal and Standard

User Guide

Disclaimer

Honeywell International Inc. (“HII”) reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made. HII makes no representation or warranties regarding the information provided in this publication.

HII shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material. HII disclaims all responsibility for the selection and use of software and/or hardware to achieve intended results.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of HII.

Copyright © 2025 Honeywell Group of Companies. All rights reserved.

Web Address: automation.honeywell.com

Trademarks

Google and Android are trademarks of Google LLC.

Bluetooth trademarks are owned by Bluetooth SIG, Inc., U.S.A. and licensed to Honeywell.

Other product names or marks mentioned in this document may be trademarks or registered trademarks of other companies and are the property of their respective owners.

Patents

For patent information, refer to www.hsmpats.com.

TABLE OF CONTENTS

Customer Support	v
Chapter 1 - Introduction	1
List of Accessories	2
Chapter 2 - Scan Handle	5
Features	5
Out of the Box	6
Attach Scan Handle.....	6
Scan a Bar Code.....	7
Remove Scan Handle.....	8
Chapter 3 - CK62 Universal Cup	9
Out of the Box	9
Features	10
Replacing a Universal Cup	10
Chapter 4 - Protective Boot.....	13
Out of the Box	13
Attach the Protective Boot.....	14
Remove Protective Boot.....	14
Chapter 5 - Universal Dock Home Base	17
Features	17

Out of the Box.....	18
Connect Power.....	18
Charge the Battery Pack.....	19
Replace the Battery Cup.....	20
Chapter 6 - Universal Quad Charging Base.....	23
Features.....	23
Out of the Box.....	23
Charge the Battery Pack.....	24
Chapter 7 - Universal 5-Bay Charging Base.....	25
Features.....	26
Out of the Box.....	27
Insert the Battery Charger.....	28
Connect Power.....	29
Charge the Battery Pack.....	29
Status LED.....	30
Chapter 8 - EDA61K Home Base.....	31
Features.....	31
Out of the Box.....	32
Connect Power.....	32
Charge the Battery.....	33
Chapter 9 - EDA61K Charge Base.....	35
Features.....	35
Out of the Box.....	36
Connect Power.....	36
Charge the Battery.....	37

Customer Support

Technical Assistance

To search our knowledge base for a solution or to log in to the Technical Support portal and report a problem, go to honeywell.com/PSStechnicalsupport.

Product Service and Repair

Honeywell International Inc. provides service for all of its products through service centers throughout the world. Go to automation.honeywell.com and select Support to find a service center near you or to get a Return Material Authorization number (RMA #) before returning a product.

For ongoing and future product quality improvement initiatives, the mobile computer comes equipped with an embedded device lifetime counter function. Honeywell may use the lifetime counter data for future statistical reliability analysis as well as ongoing quality, repair and service purposes.

Limited Warranty

For warranty information, go to automation.honeywell.com and select **Support > Warranties**.

INTRODUCTION

Honeywell offers a full range of universal and standard accessories for the CK62 and EDA61K mobile computers, including:

- Scan handle ([page 5](#))
- CK62 Replacement Cups for Universal Bases ([page 9](#))
- CK62 Protective Boot (see [page 13](#))
- CK62 Universal Home Base ([page 17](#))
- CK62 Universal Quad Charging Base ([page 23](#))
- CK62 Universal 5-Bay Charging Base (see [page 25](#))
- EDA61K Home Base (EDA61K-HB) ([page 31](#))
- EDA61K Quad Charging Base (EDA61K-CB) ([page 35](#))
- AC20 Quad Battery Charger (871-230-101)
- CK6X Quad Battery Charger (CK6X-BC-4BAY)
- CK6X 16-Bay Battery Charger (CK6X-BC-16BAY)

Note: Refer to the *CK6X Quad Battery Charger User Guide* and *CK6X 16-Bay Battery Charger User Guide* available at automation.honeywell.com for details on the CK6X Quad Battery Charger and 16-Bay Battery Charger.

Note: Throughout this manual, all versions of the mobile device are referred to as the computer unless information is specific to a particular model.



Caution: We recommend the use of Honeywell accessories and power adapters. Use of any non-Honeywell accessories or power adapters may cause damage not covered by the warranty.

Mise en garde : Il est recommandé d'utiliser les périphériques, les cordons d'alimentation et les adaptateurs secteur conçus par Honeywell. L'utilisation de tout périphérique, cordon d'alimentation ou adaptateur secteur d'une autre marque est susceptible de provoquer des dommages non couverts par la garantie.



Caution: Make sure that all components are dry prior to using the computers and batteries with accessories. Using wet components may cause damage not covered by the warranty.

Mise en garde : Assurez-vous que tous les composants sont secs avant de connecter les terminaux/batteries à des périphériques. L'insertion de composants humides risque de provoquer des dommages non couverts par la garantie.

List of Accessories

Accessory	Part Number	Use With	
		CK62	EDA61K
Universal Dock Cup	CK62-UCP-N	CK62 without boot	EDA61K
	CK62-UCP-B	CK62 with boot	
Protective Boot	CK62-PB-1	CK62	
Scan Handle	CK62-SH	CK62 without boot	
	EDA61K-SH		EDA61K
Universal Home Base	CK62-HB-UVN	CK62 without boot	EDA61K
	CK62-HB-UVB	CK62 with boot	
Universal 5-Bay Charging Base	CK62-5CB-UVN-BAT	CK62 without boot	EDA61K
	CK62-5CB-UVB-BAT	CK62 with boot	
Universal Quad Charging Base	CK62-CB-UVN	CK62 without boot	EDA61K
	CK62-CB-UVB	CK62 with boot	
EDA61K Home Base	EDA61K-HB	CK62 without boot	EDA61K
EDA61K Quad Charging Base	EDA61K-CB	CK62 without boot	EDA61K
Universal Home Base Replacement Battery Cup	CK6X-UCP-BATTHEB	CK62 battery	
CK6X 16-Bay Battery Charger	CK6X-BC-16BAY	CK62 battery	EDA61K battery
CK6X Quad Battery Charger	CK6X-BC-4BAY	CK62 battery	EDA61K battery
Universal Replacement Quad Battery Cup	CK6X-UCBC-4B	CK62 battery	EDA61K battery

For a complete list of accessories for your mobile computer and their part numbers see the *Accessory catalog* for your device, available for download at automation.honeywell.com.

Contact your local sales representative for ordering information.


Agency Models

CK62-UCP-N, CK62-SH, EDA61K-SH, EDA61K-HB, EDA61K-CB, ME-5bay-NB,
CT40-HB, CT40-QBC

SCAN HANDLE

A scan handle attaches to the mobile computer to provide a handle grip and pull-trigger for barcode scanning.

Features

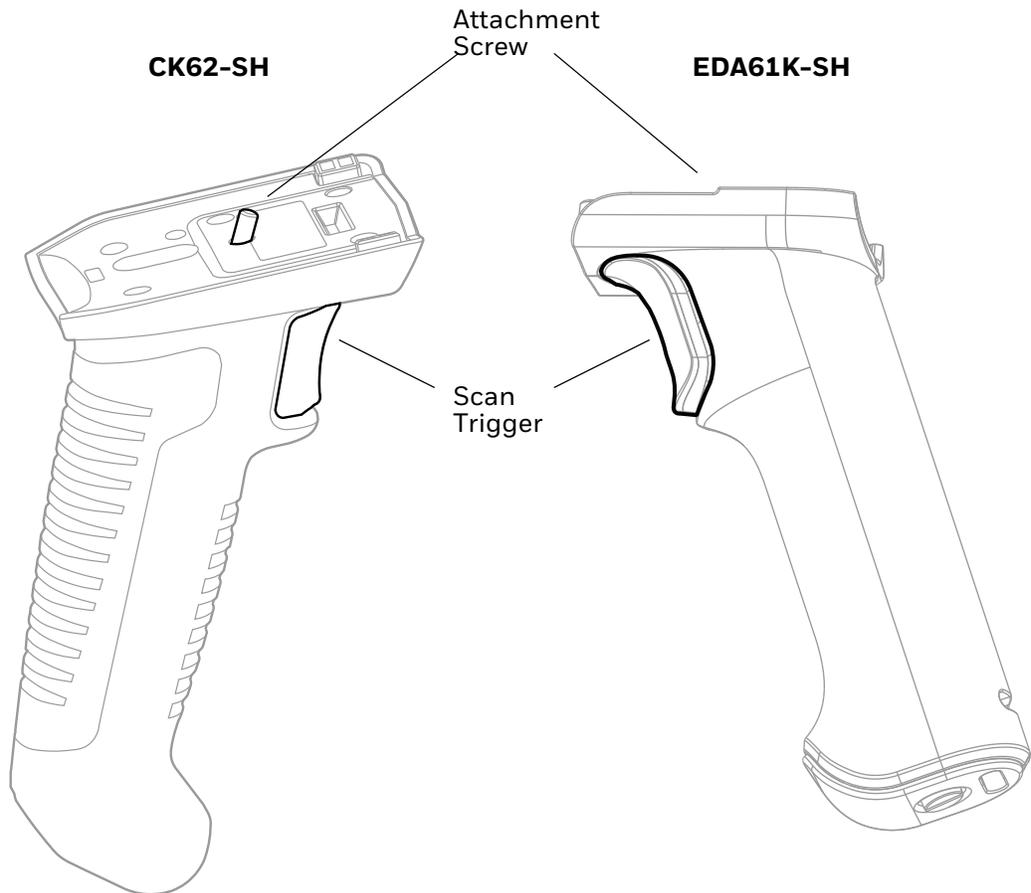

Out of the Box

Make sure that your shipping box contains the following:


- Scan Handle (CK62-SH or EDA61K-SH)

If any items are missing or appear damaged, contact your Customer Account Representative. Keep the original packaging in the event that you need to return the scan handle for service or if you want to store the scan handle while not in use.

Attach Scan Handle

Note: The CK62 mobile computer and scan handle are illustrated. Steps are the same for both models.

1. Insert the attachment screw into the hole on the back of the unit.
2. Use a flathead screwdriver to tighten the screw.

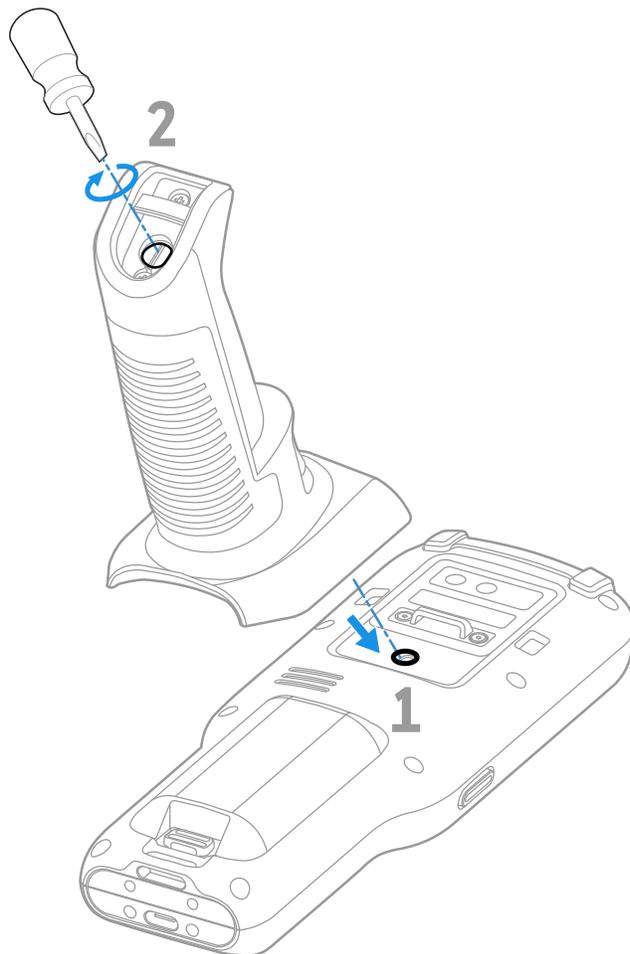

Note: Remove hand strap before assembly.


Scan a Bar Code

Press the trigger on the handle to scan a bar code.



Remove Scan Handle

- 1. Use a flathead screwdriver to loosen the attachment screw.
- 2. Remove the mobile computer from the scan handle.

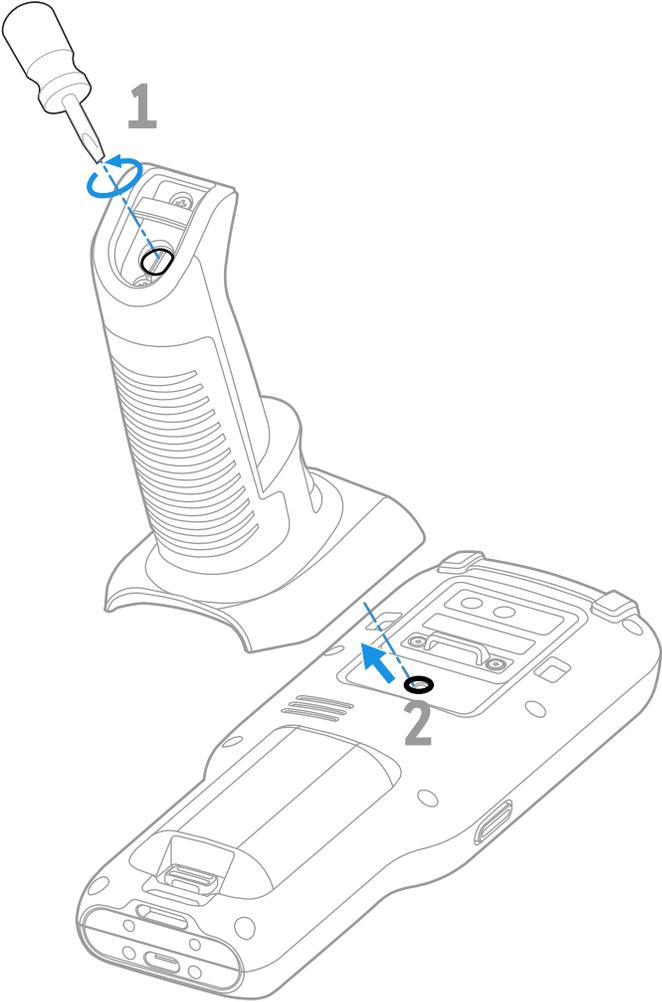

CK62 UNIVERSAL CUP

Universal Bases have removable cups that can be replaced with Universal Cups CK62-UCP-N and CK62-UCP-B. Universal Cup CK62-UCP-N and CK62-UCP-B can be used with CT40 model universal bases for charging only. They do not support data transfer.

CK62-UCP-N is for use with a CK62 computer without a boot. CK62-UCP-B must be used with a CK62 computer with a boot attached.

Out of the Box

Make sure that your shipping box contains the following:


- Universal Cup (CK62-UCP-N/CK62-UCP-B)

If any items are missing or appear damaged, contact your Customer Account Representative. Keep the original packaging in the event that you need to return the scan handle for service or if you want to store the scan handle while not in use.

Features

Model CK62-UCP-B


Cup Release Latch

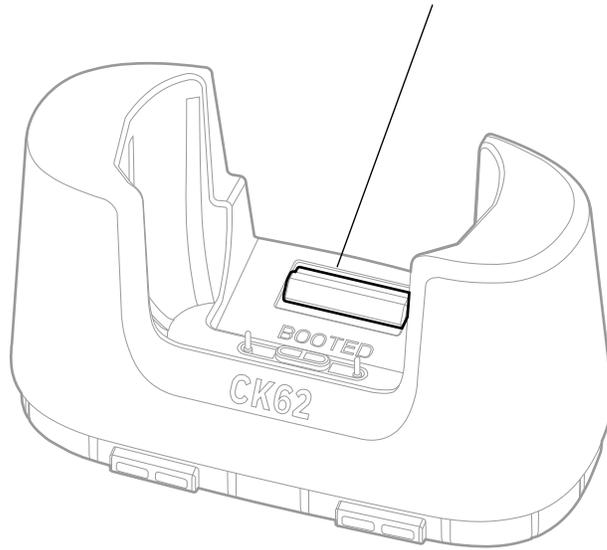


Replacing a Universal Cup

Note: The Universal Charge base is shown in the instructions below for illustration purposes. The steps for removing and inserting a cup are the same for all universal bases.


1. Push the latch towards the front of the base.

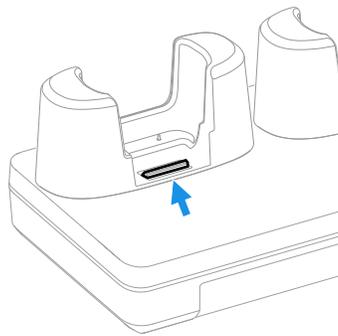


2. Tilt the back of the cup upwards.

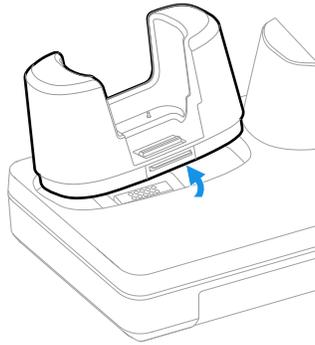


3. Lift the old cup out of the base.

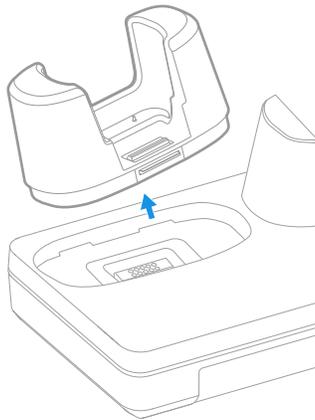

4. Insert the new cup tilted slightly towards the front of the base.

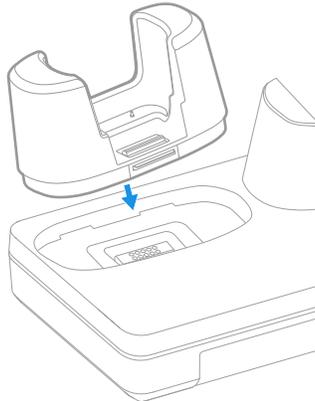

5. Push the cup into the base until it snaps in.

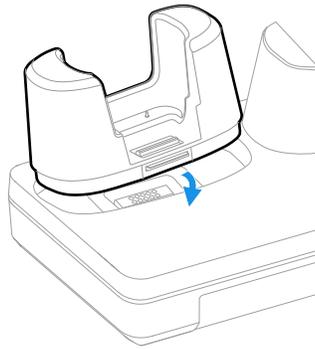

PROTECTIVE BOOT

Honeywell offers the following protective boot for use with a CK62:

- CK62-PB-1

Honeywell also offers a series of boot-compatible communication and charge accessories that do not require you to remove the protective boot from the device before use.

To learn more, see [List of Accessories](#) on page 2.

Note: *The mobile computer does not need to be removed from the protective boot when it is being charged in a CK62 charging accessory with [CK62 Universal Cup](#) model CK62-UCP-B. When charging a mobile computer in a protective boot, users need to be sure that the unit is fully inserted in the charging cup.*

Out of the Box


Make sure that your shipping box contains the following:

- Protective Boot (CK62-PB-1)

If any items are missing or appear damaged, contact your Customer Account Representative. Keep the original packaging in the event that you need to return an item or if you want to store it while not in use.

Attach the Protective Boot

Insert the computer into the top of the boot then press down evenly.

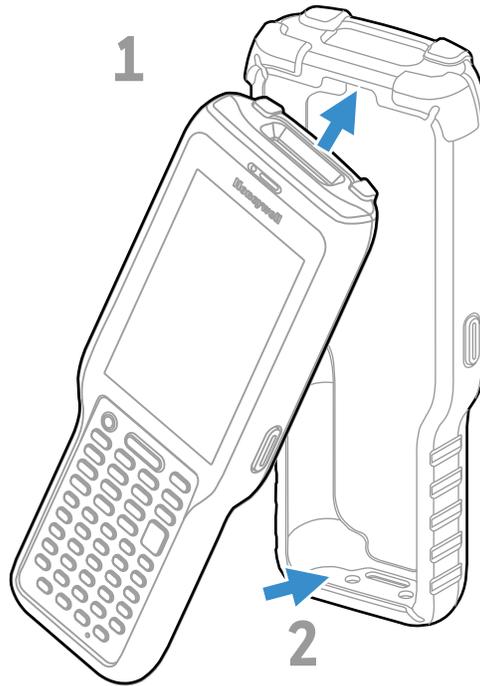


Remove Protective Boot

Note: *The boot does not need to be removed for battery replacement.*

Routinely inspect the protective boot for damage and replace if needed.

1. Hold the unit on both sides with the screen facing toward you. Use your thumbs to apply even pressure to the lip of the boot.
2. Apply gentle pressure to the back of the unit to release the bottom of the unit from the boot.

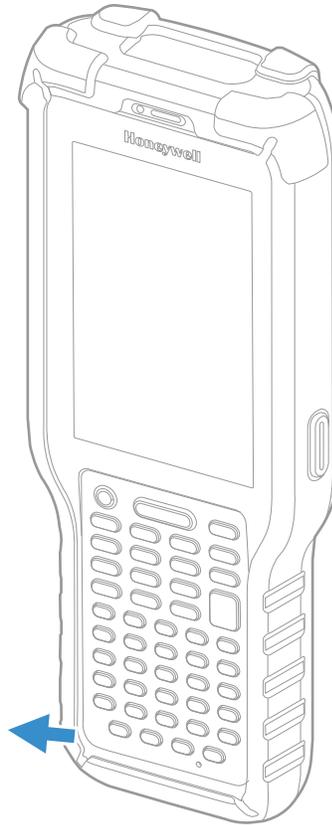


3. Lift the unit up and out of the boot.


UNIVERSAL DOCK HOME BASE

A Home Base is a charge/communication base for one mobile computer and one spare battery. The Home Base has one USB client connector (Type B).

The CK62-HB-UVB Universal Home Base is boot-compatible. The CK62-HB-UVN Universal Home Base must be used with a computer without a boot attached. Universal bases have removable cups that can be replaced. (See [CK62 Universal Cup](#) on page 9.) These bases also have removable battery cups (see page 20).

Features

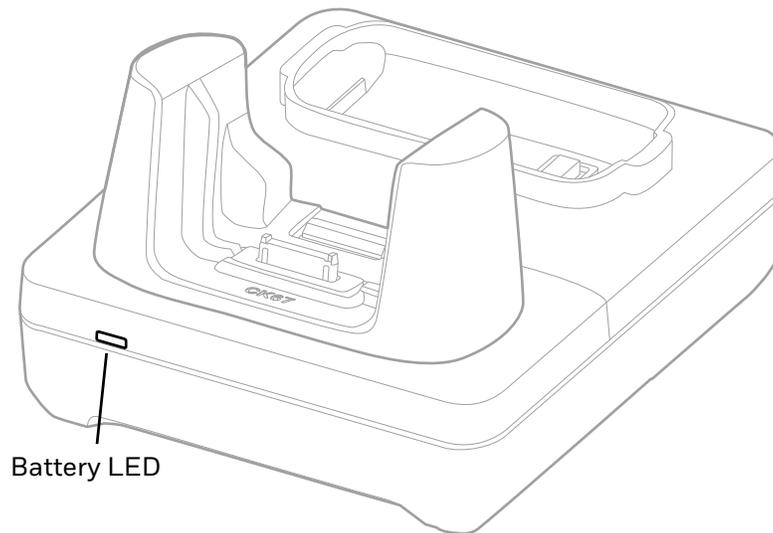

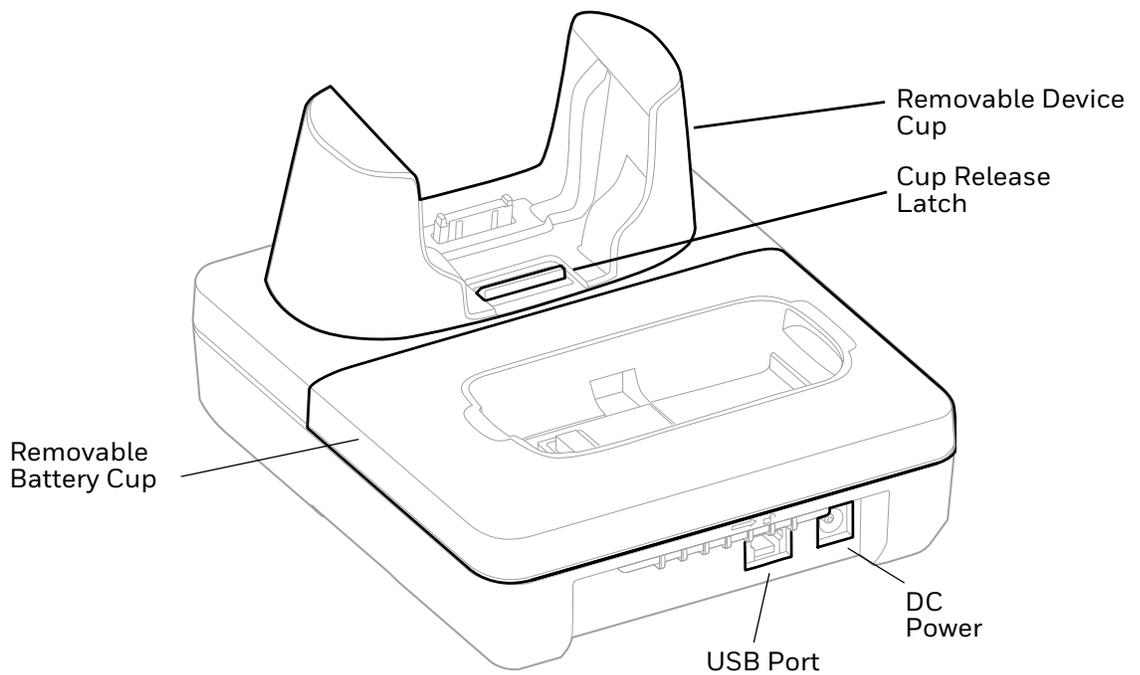

Out of the Box

Make sure that your shipping box contains these items:

- Home Base (CK62-HB-UVN/CK62-HB-UVB)
- Power supply
- Power cord (if purchased)
- Product documentation

If any items are missing or appear damaged, contact your Customer Account Representative. Keep the original packaging in the event that you need to return an item or if you want to store it while not in use.

Connect Power

Use only a UL Listed power supply that has been qualified by Honeywell with an output rated at 12VDC and 3A. The power supply input rating is 90–264 VAC, 50/60 Hz. The operating temperature is -10 °C to 50 °C (14 °F to 122 °F). The maximum output of the base is 5VDC/2A.


1. Plug the power cord into the power supply.
2. Plug the power supply cable into the power connector on the back of the base.
3. Plug the power cord into a standard wall outlet.

Charge the Battery Pack

Insert the computer into the Home Base (CK62-HB-UVN, CK62-HB-UVB). The unit will not charge unless a battery is installed.


CK62-HB-UVN

Mobile computer without protective boot

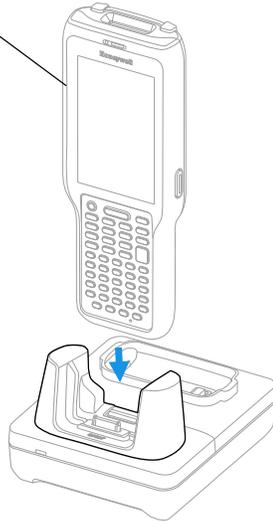



CK62-HB-UVB

Mobile computer with protective boot

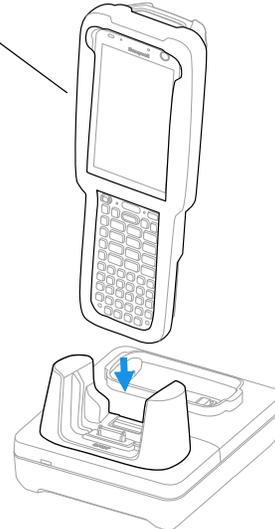

You can also insert a battery pack into the Home Base for charging.

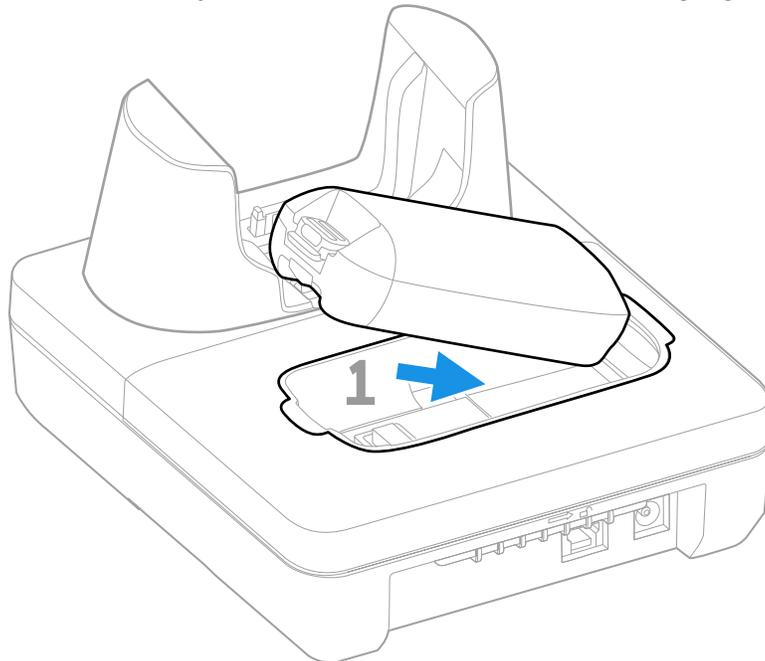

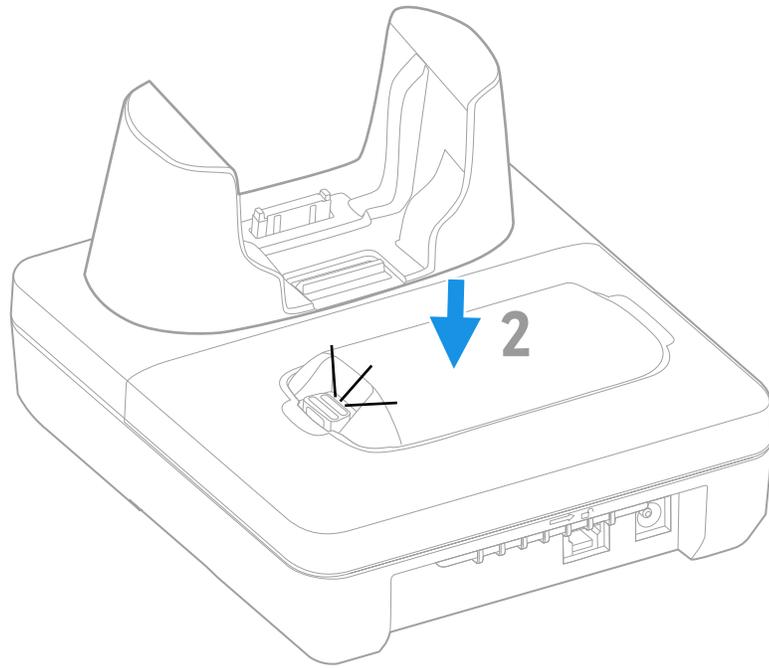


Replace the Battery Cup

The CK62 Home Base and Ethernet Home Base have a replaceable battery cup (CK6X-UCP-BATTHEB).




Caution: Keep the base flat to avoid dropping the battery cup.


1. Remove all cables to allow clear access to the latch.
2. While holding the battery cup latch to the right, lift the back of the cup.

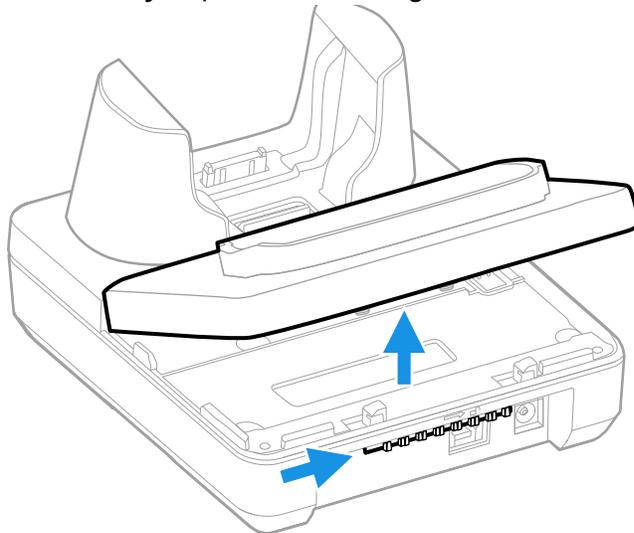


3. Release the latch and lift the old cup out of the base.

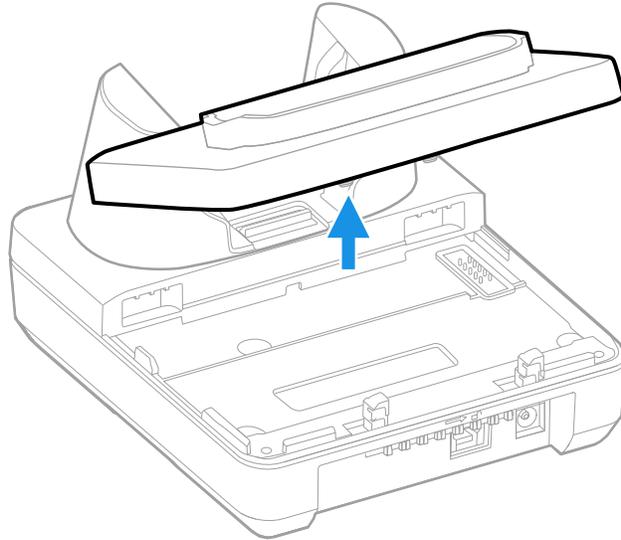

4. Insert the new cup tilted slightly towards the front of the base.

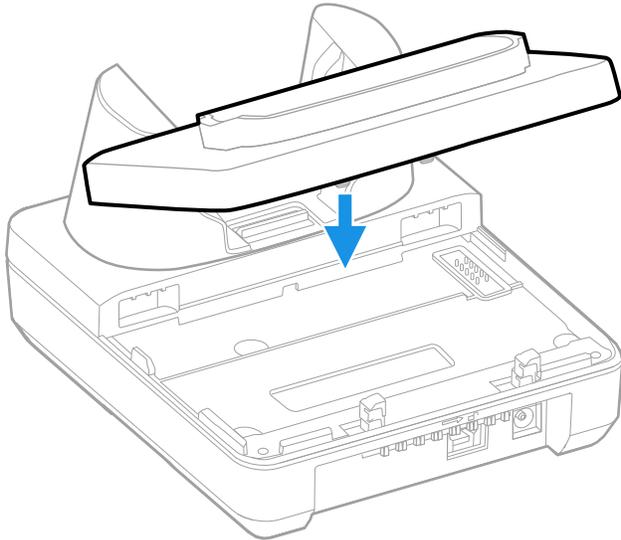

5. While holding the latch to the right, push the back of the cup into the base until it snaps in.

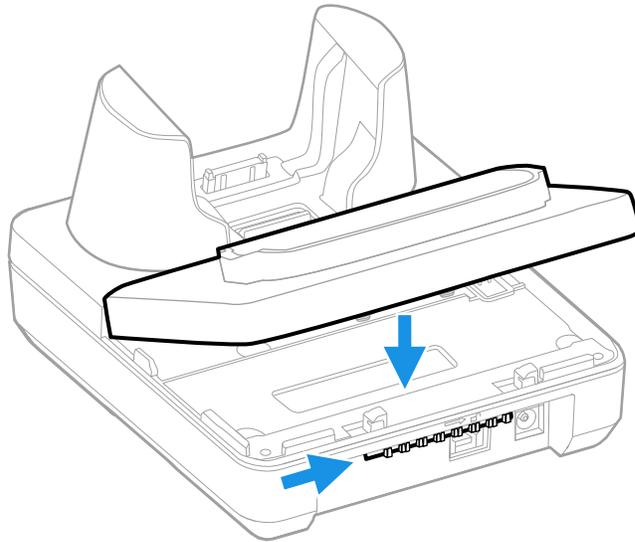

6. Release the latch.

Status LED


LED	Status	Description
Battery	Solid Green	The battery is connected to external power and is fully charged.
	Solid Amber	The battery is connected to external power and is charging.
	Solid Red	There is a battery charging fault, such as over-temperature.

UNIVERSAL QUAD CHARGING BASE

Universal Dock Quad Charging Bases CK62-CB-UVN and CK62-CB-UVB charge up to four mobile computers. Model CK62-CB-UVB is boot compatible.

Universal bases CK62-CB-UVN and CK62-CB-UVB have removable cups that can be replaced (see [CK62 Universal Cup](#) on page 9).

Features

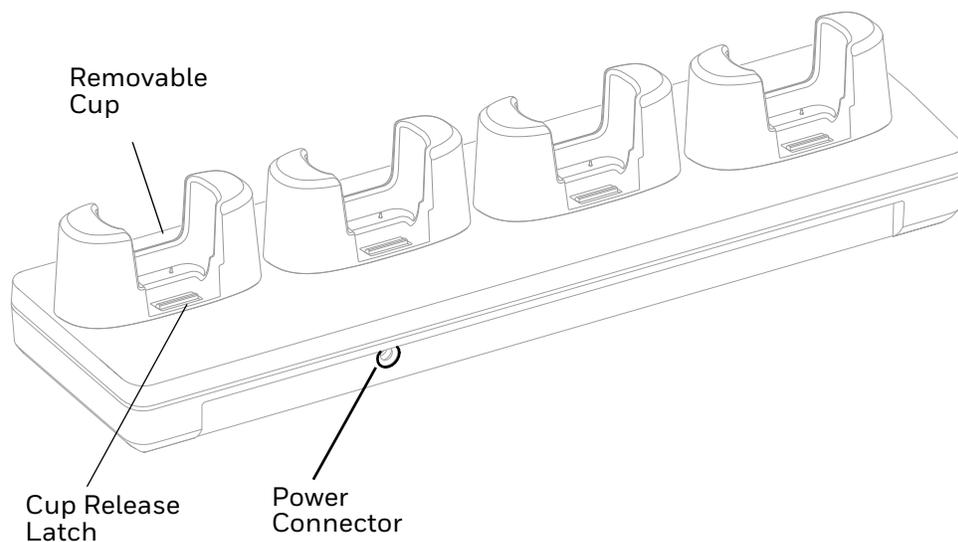

Out of the Box

Make sure your shipping box contains these items:

- Charge Base (CK62-CB-UVN or CK62-CB-UVB)
- Power supply
- Power cord (if purchased)

- Product documentation

If any items are missing or appear damaged, contact your Customer Account Representative. Keep the original packaging in the event that you need to return an item or if you want to store it while not in use.


Connect Power

Use only a UL Listed power supply which has been qualified by Honeywell with an output rated at 12V/7A. The power supply input rating is 100-240 VAC, 50/60 Hz. The operating temperature is -10 °C to 50 °C (14 °F to 122 °F).

1. Plug the power cord into the power supply.
2. Plug the power supply cable into the power connector on the back of the charger.
3. Plug the power cord into a standard wall outlet.

Charge the Battery Pack

- Insert one to four CK62 mobile computers with battery pack inserted into the Charge Base.

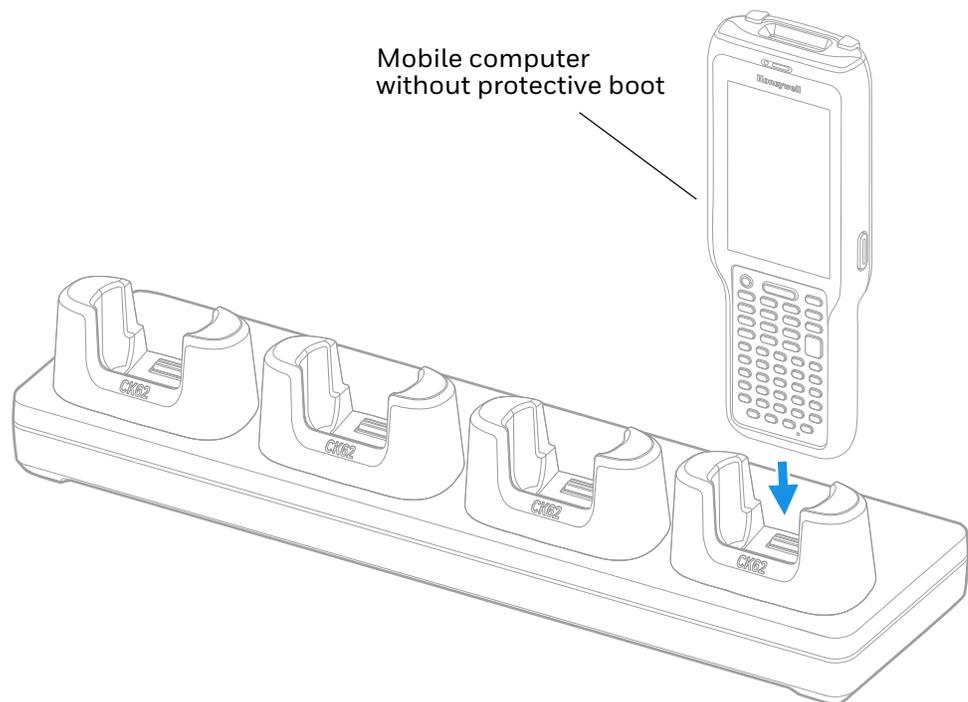

UNIVERSAL 5-BAY CHARGING BASE



The Universal 5-Bay Charging Base provides the flexibility of charging four units and four batteries with the battery charger.

Honeywell offers the following 5-bay chargers for the CK62 mobile computer:

- CK62-5CB-UVN-BAT with one battery charger and four universal cups for use with a CK62 without a protective boot
- CK62-5CB-UVB-BAT with one battery charger and four universal cups for use with a CK62 with a protective boot

Universal bases have removable cups that can be replaced. (See [CK62 Universal Cup](#) on page 9.)

Features

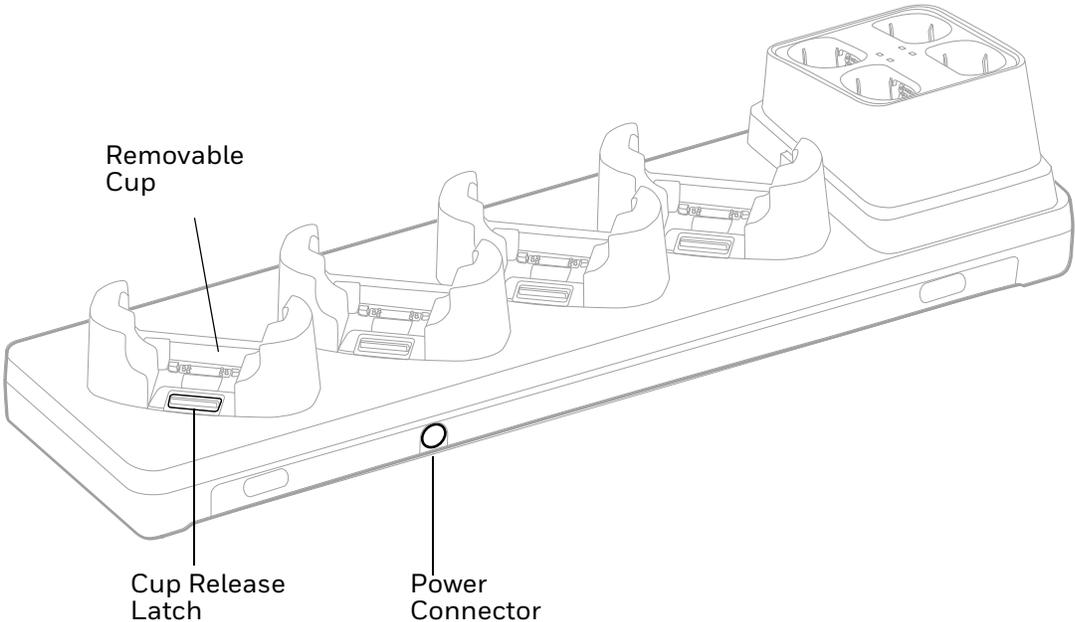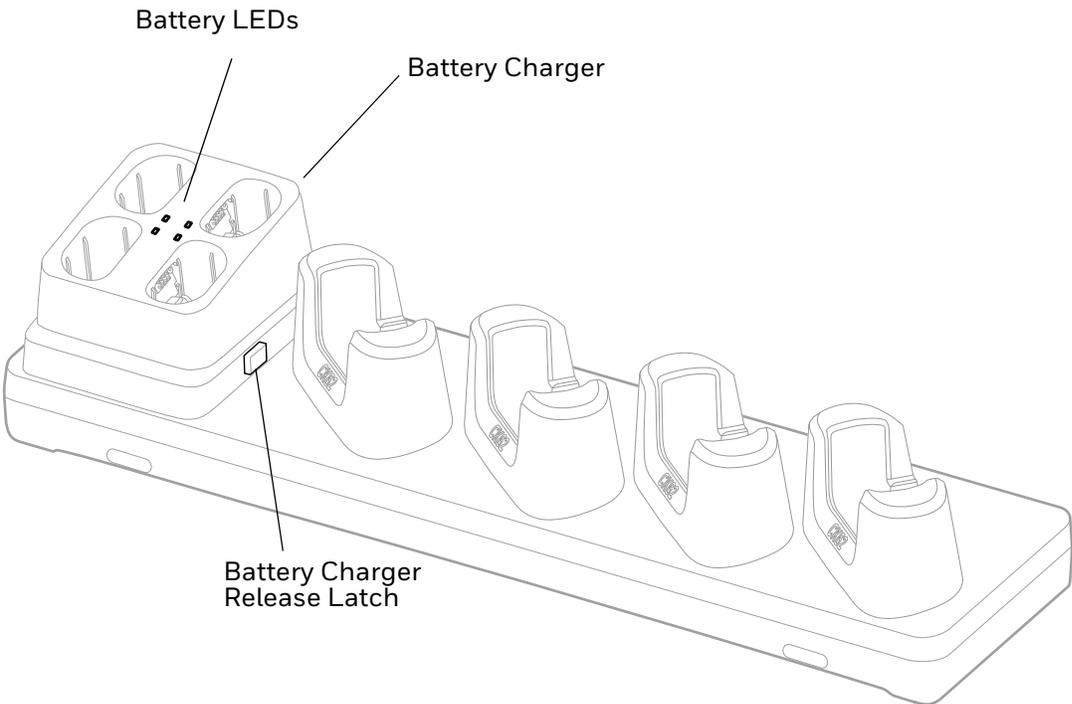

Out of the Box

Make sure that your shipping box contains these items:


- 5-Bay Charging Base (CK62-5CB-UVN-BAT/CK62-5CB-UVB-BAT)
- Power supply
- Power cord (if purchased)
- Product documentation

If any of these items are missing or appear damaged, contact your Customer Account Representative. Keep the original packaging in the event that you need to return the base for service or if you want to store the charger while not in use.


Insert the Battery Charger

Note: The Battery Charger must be installed in the location shown below.

1. Insert the battery charger tilted slightly to the left of the base.

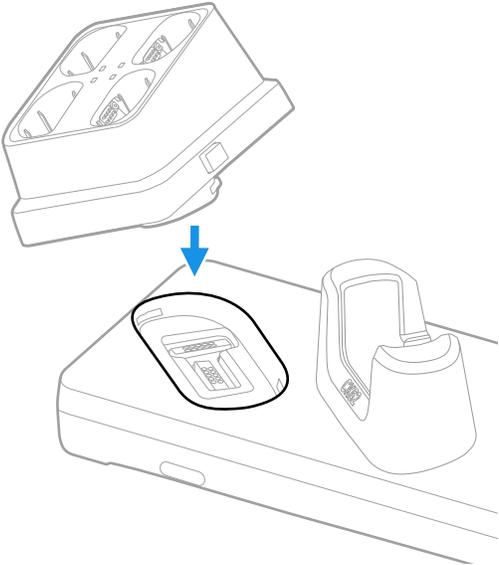

2. Push the battery charger down until it snaps in.

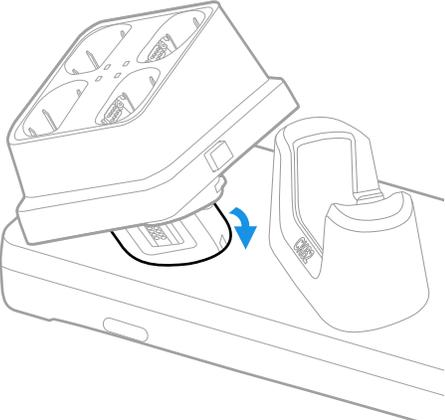


Connect Power

Use only a UL Listed power supply that has been qualified by Honeywell with an output rated at 12V/8.3A. The power supply input rating is 100-240 VAC, 50/60 Hz. The operating temperature is 0 °C to 45 °C (32 °F to 113 °F).

1. Plug the power cord into the power supply.
2. Plug the power supply cable into the power connector on the back of the base.
3. Plug the power cord into a standard wall outlet.

Charge the Battery Pack

Insert a device with a battery installed into the 5-Bay Charge Base or insert a battery into the optional battery charger.

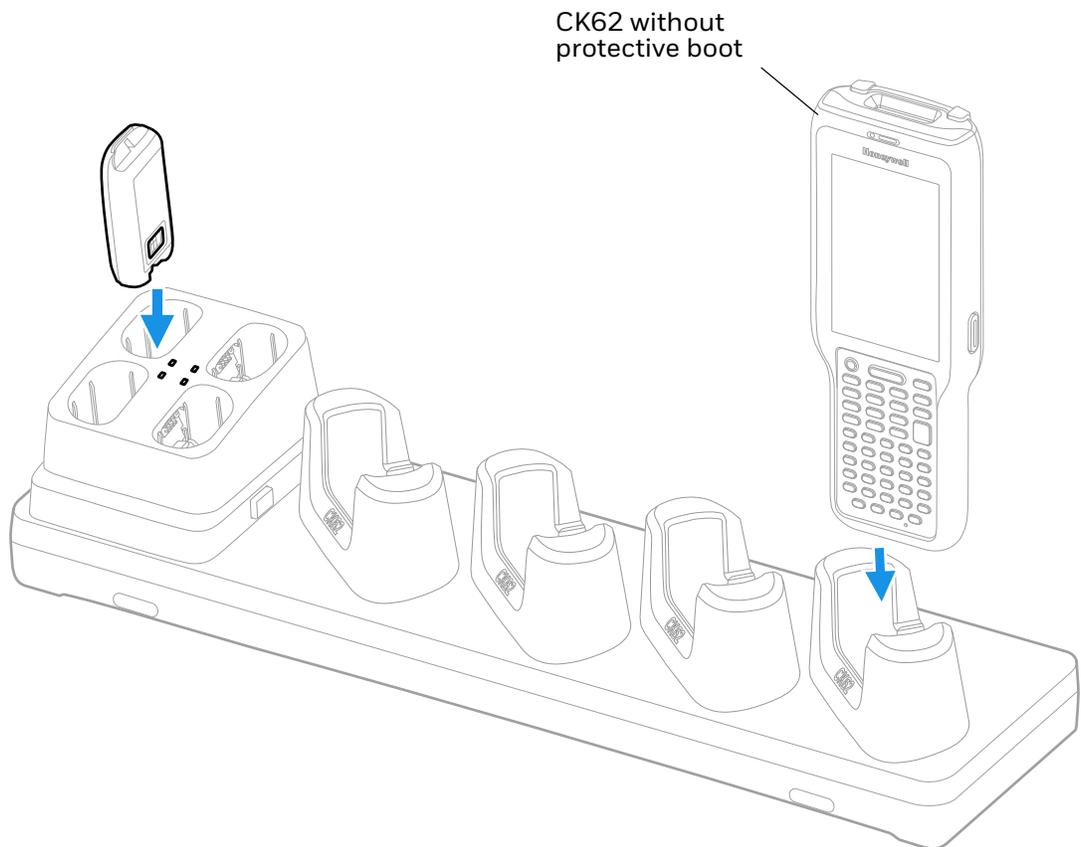


Status LED


LED	Status	Description
Battery	Solid Green	The battery is connected to external power and is fully charged.
	Solid Amber	The battery is connected to external power and is charging.
	Flashing Red	There is a battery charging fault, such as over-temperature.

EDA61K HOME BASE

A Home Base is a charge base for one mobile computer and one spare battery.

Features

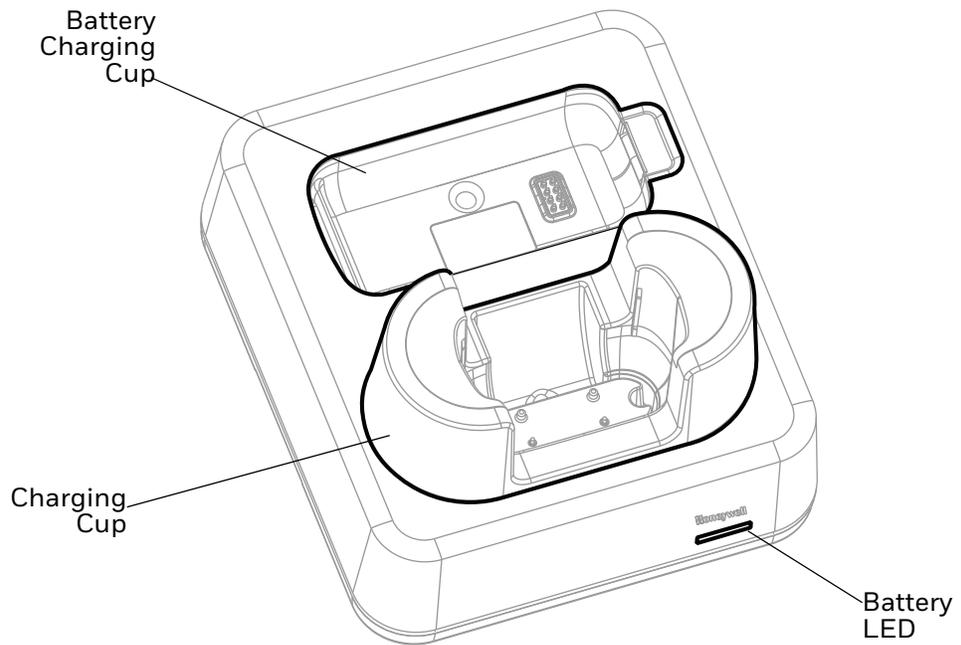

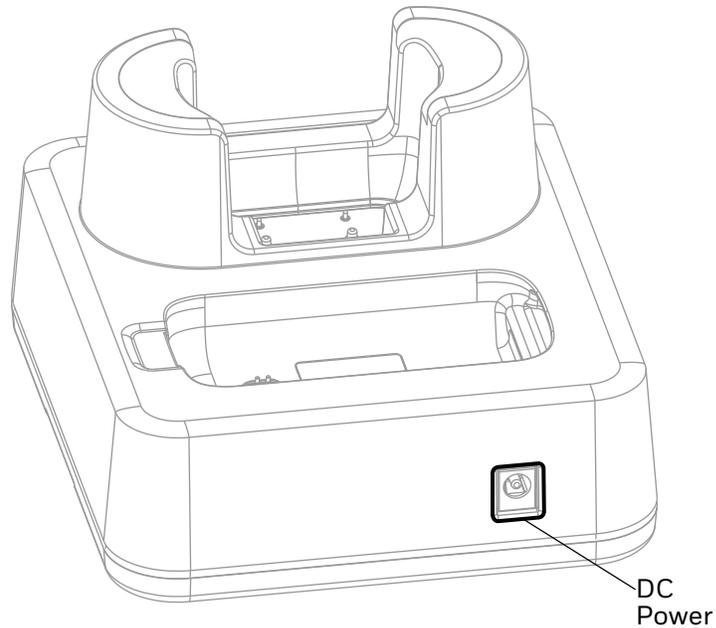

Out of the Box

Make sure that your shipping box contains the following:

- Home Base (EDA61K-HB)
- Power supply
- Power cord
- Product documentation

If any items are missing or appear damaged, contact your Customer Account Representative. Keep the original packaging in the event that you need to return the scan handle for service or if you want to store the scan handle while not in use.


Connect Power

Use only a UL Listed power supply that has been qualified by Honeywell with an output rated at 12V/3A. The power supply input rating is 90-264 VAC, 50/60 Hz. The operating temperature is -10 °C to 50 °C (14 °F to 122 °F). The maximum output of the base is 5VDC/2A.


1. Plug the power cord into the power supply.
2. Plug the power supply cable into the power connector on the back of the base.
3. Plug the power cord into a standard wall outlet.

Charge the Battery

Insert the computer into the Home Base. The unit will not charge unless a battery is installed.

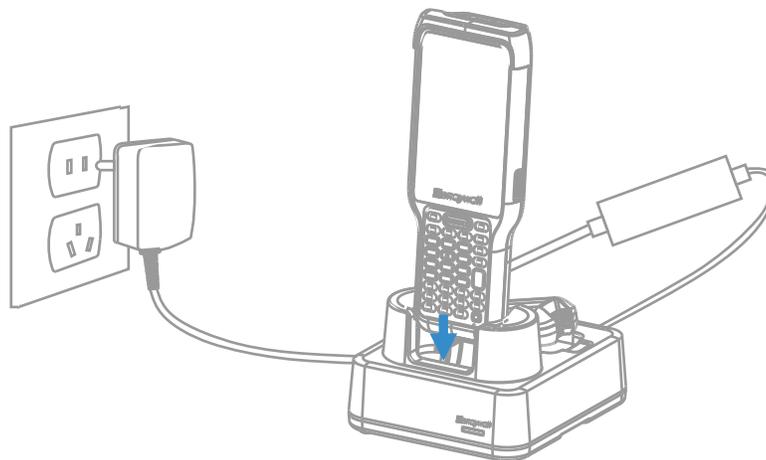

You can also insert a battery into the home base for charging.

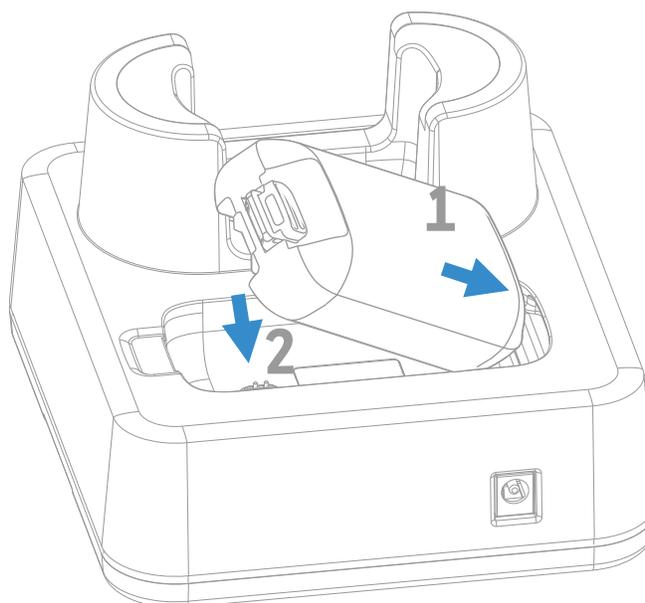



The Battery LED displays as orange to indicate that the spare battery is charging. When the Battery LED is green, the battery is fully charged.

EDA61K CHARGE BASE

The Charge Base provides the ability to charge up to four CK62 or EDA61K mobile computers.

Features

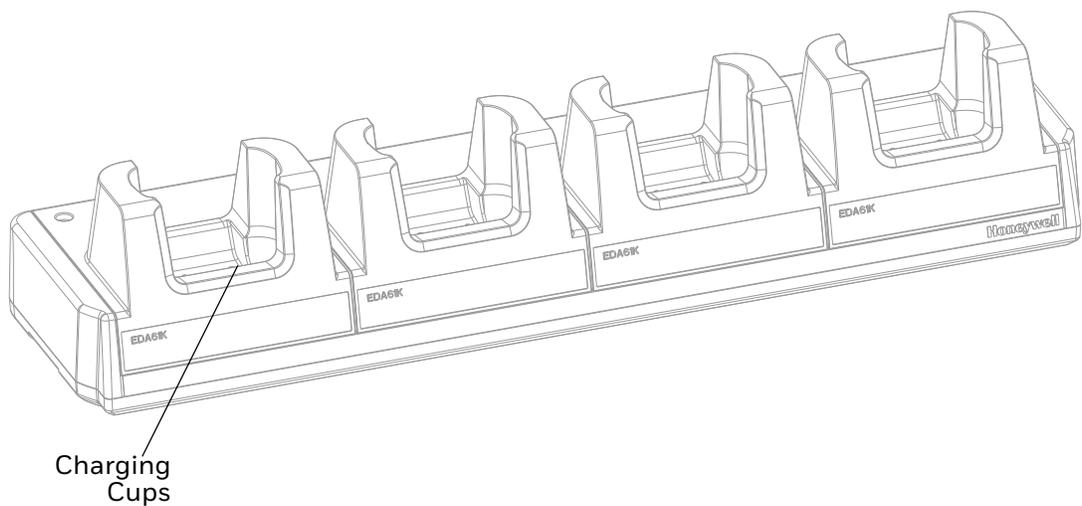

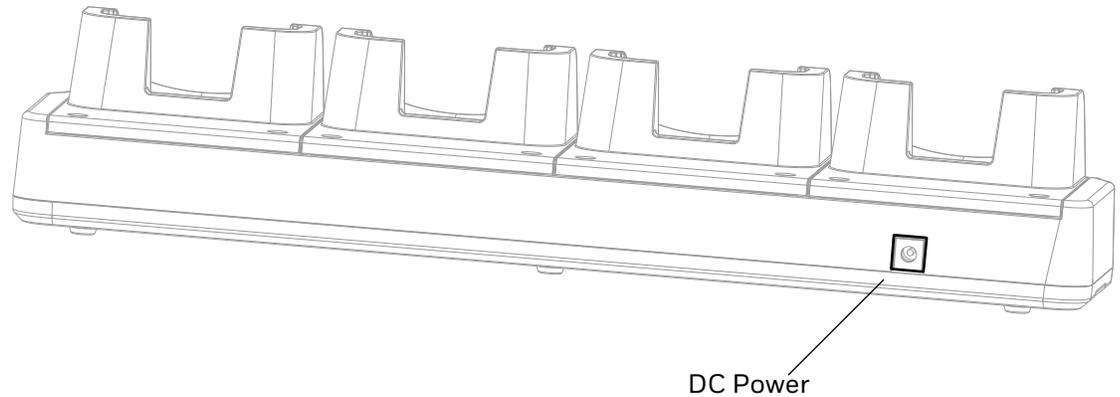

Out of the Box

Make sure that your shipping box contains the following:

- Charge Base (EDA61K-CB)
- Power supply
- Power cord
- Product documentation

If any items are missing or appear damaged, contact your Customer Account Representative. Keep the original packaging in the event that you need to return the scan handle for service or if you want to store the scan handle while not in use.


Connect Power

Use only a UL Listed power supply that has been qualified by Honeywell with an output rated at 12V/7A. The power supply input rating is 90-264 VAC, 50/60 Hz. The operating temperature is -10 °C to 50 °C (14 °F to 122 °F). The maximum output of the base is 5VDC/2A.

1. Plug the power cord into the power supply.
2. Plug the power supply cable into the power connector on the back of the base.
3. Plug the power cord into a standard wall outlet.

Charge the Battery

Insert the computer(s) into the Charge Base. The unit will not charge unless a battery is installed.

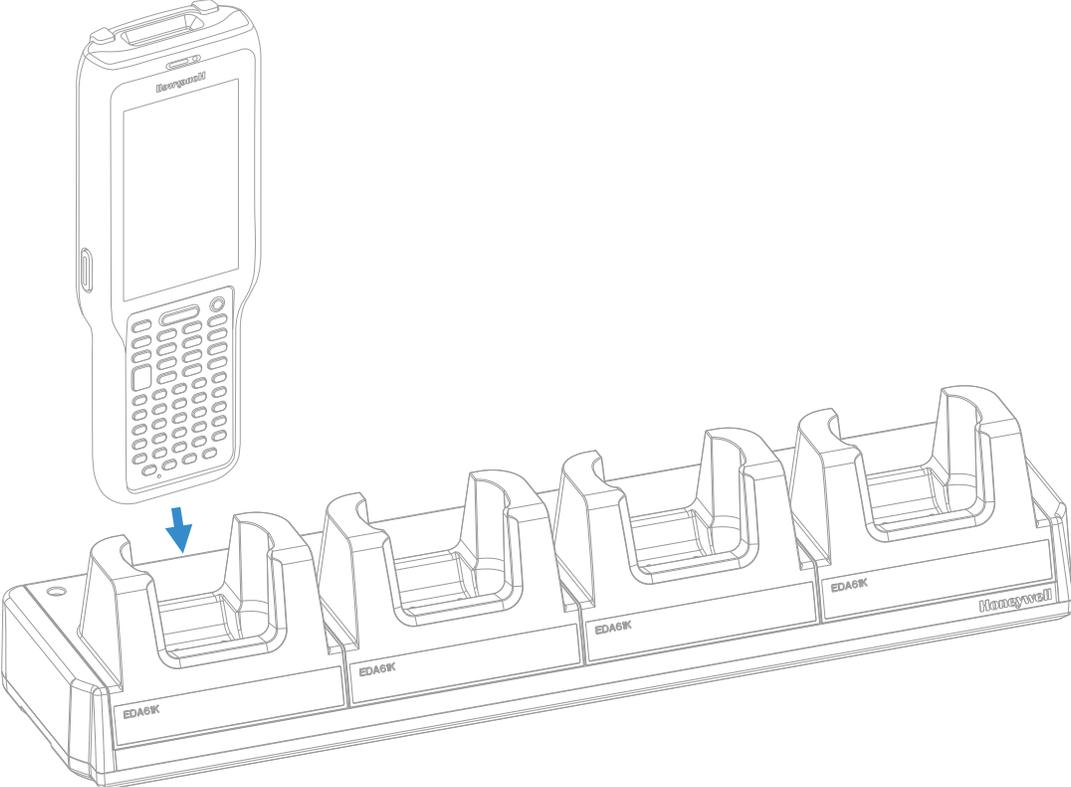

Honeywell
855 S. Mint Street
Charlotte, NC 28202

automation.honeywell.com