


Ramp AR9000RAMPX886

Installation Manual

AR9xxxSPB2

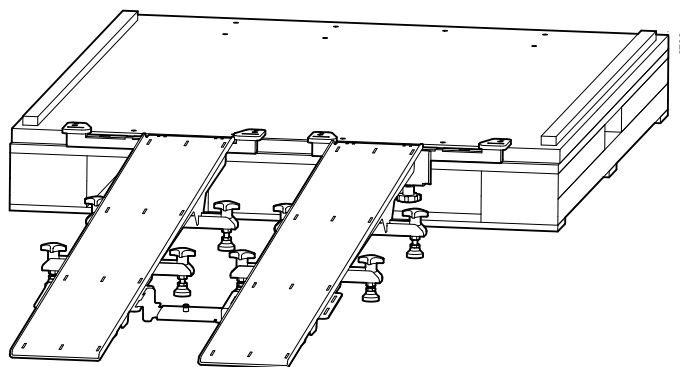

Install the Ramp



⚠ WARNING

TIP HAZARD


In laboratory testing, the ramp withstood 30 times. Before each use, inspect the ramp for damage that may prevent the load from rolling smoothly (for example, broken leveling feet, bent attachments, or warping of the ramp surface). If the ramp is damaged, replace it. Do not use a damaged ramp.

Failure to follow these instructions can result in death, serious injury, or equipment damage.


NOTE: See the unpacking instructions included with your equipment before you install the ramp.

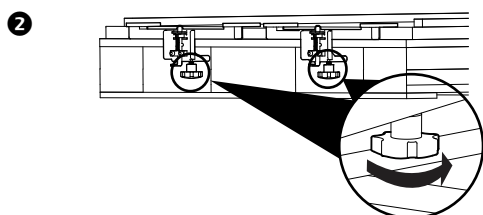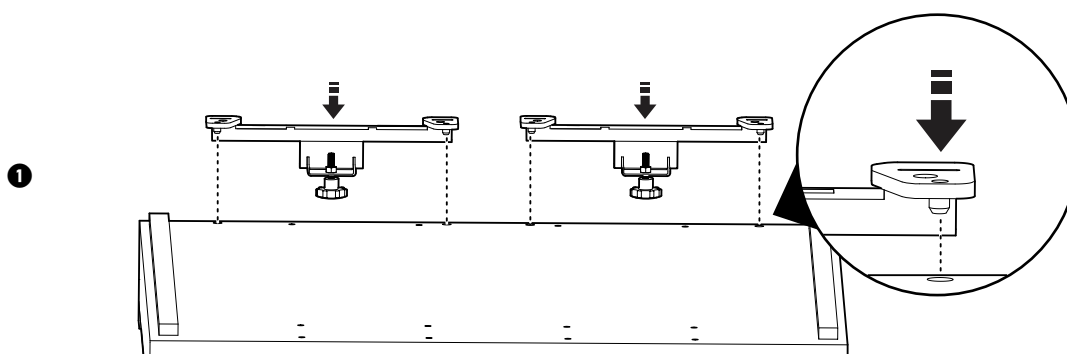


Or

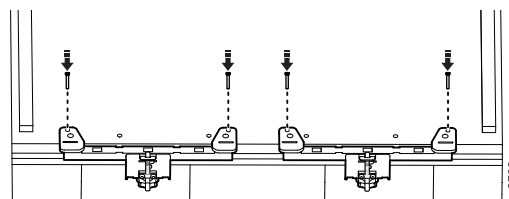


3 600 mm (24 in) width

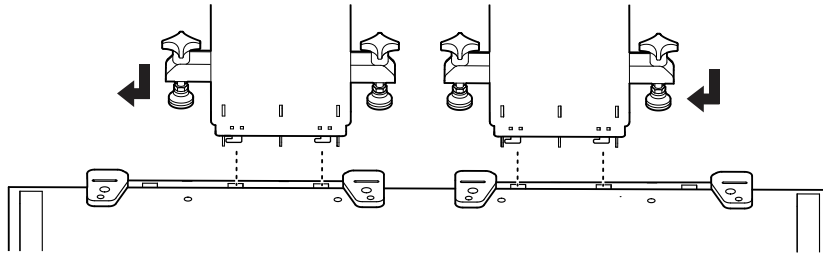


750 or 800 mm (30 or 31 in) width

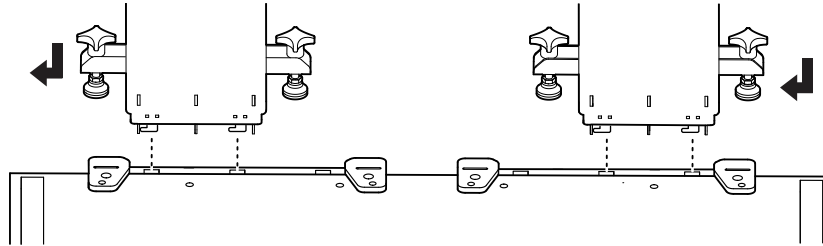


4 600 mm (24 in) width

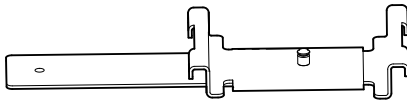


750 or 800 mm (30 or 31 in) width

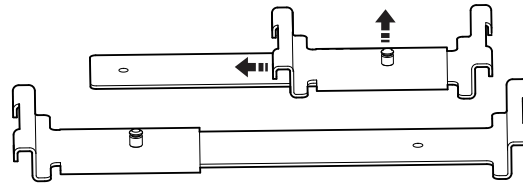


5 600 mm (24 in) width

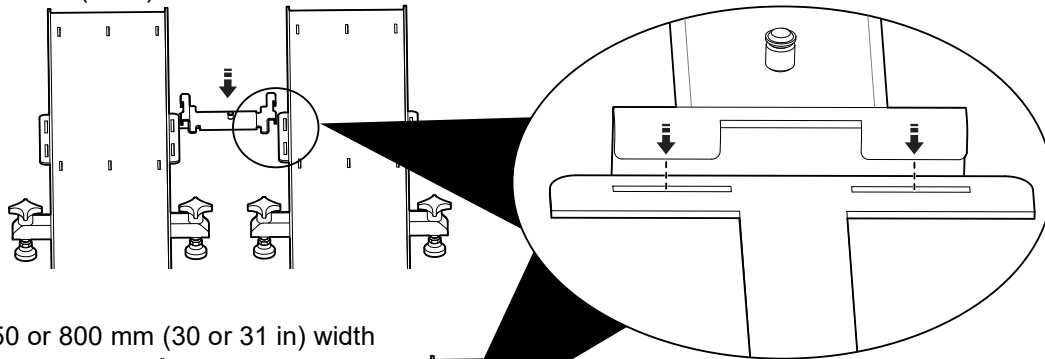

750 or 800 mm (30 or 31 in) width

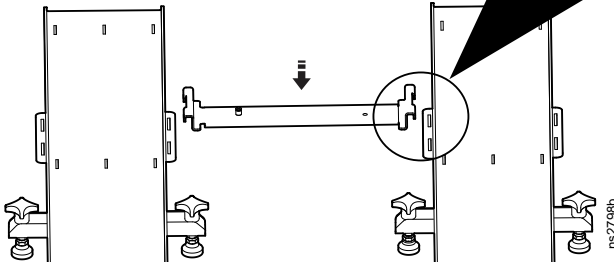

ns2798b

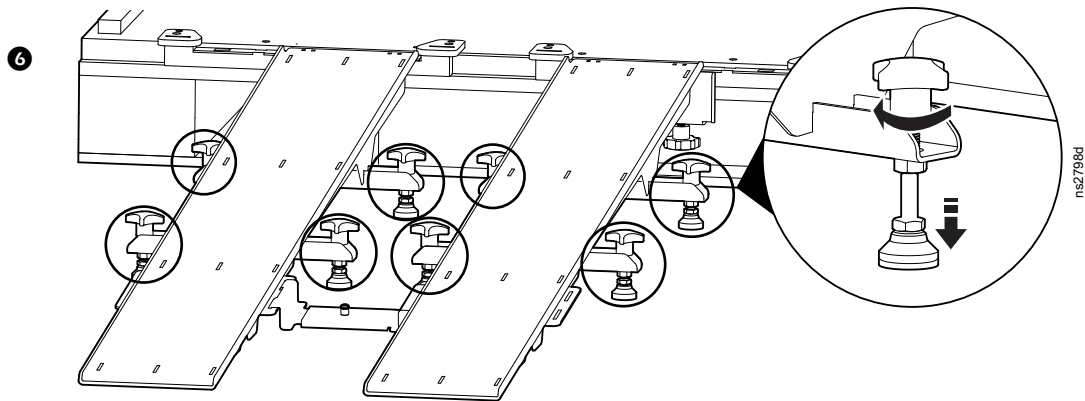



⚠ WARNING

TIP HAZARD



Lower the support feet so that they barely touch the floor. Be sure the end of the ramp does not lift off the floor.

Failure to follow these instructions can result in death, serious injury, or equipment damage.


Uninstall the Ramp

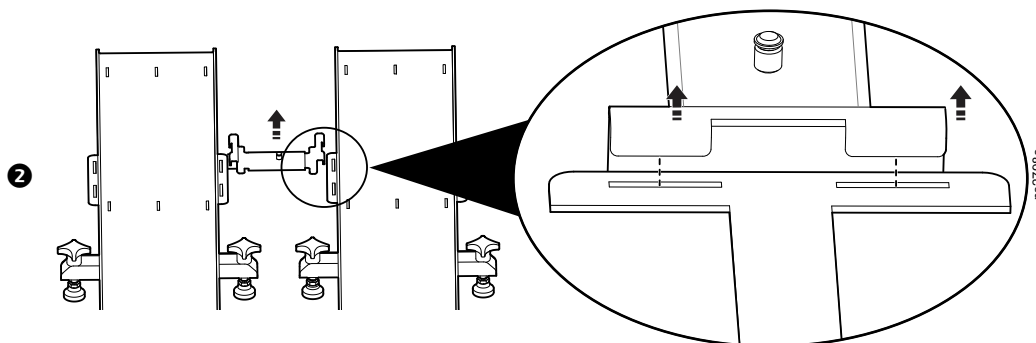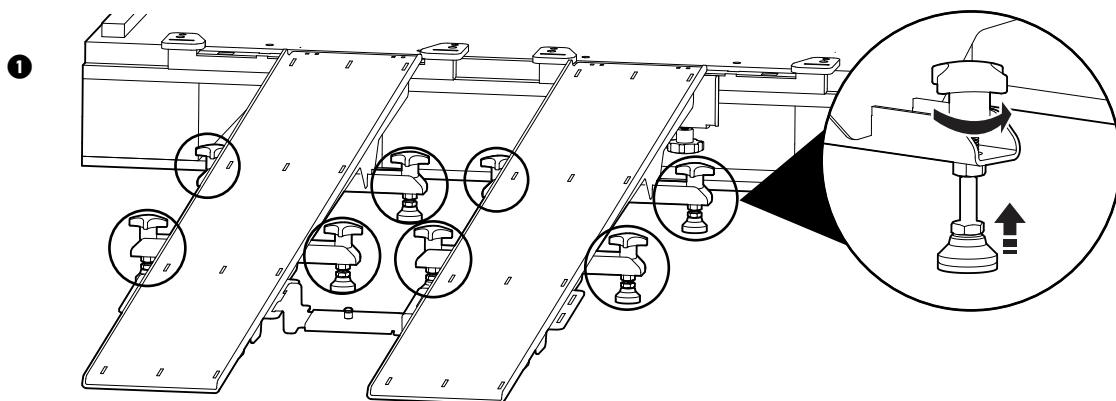


3

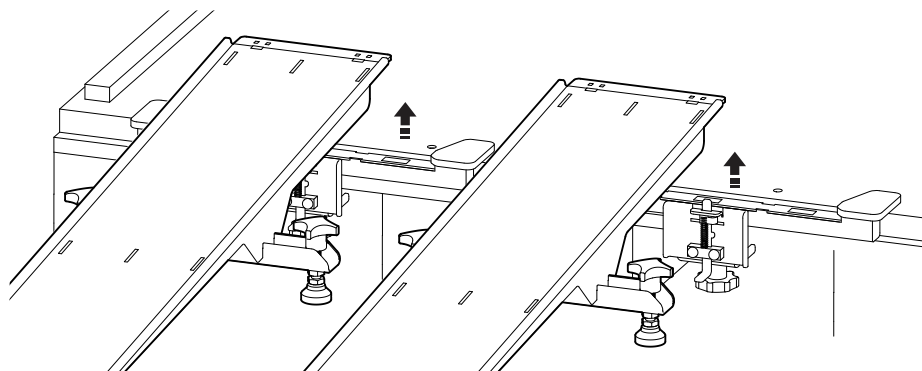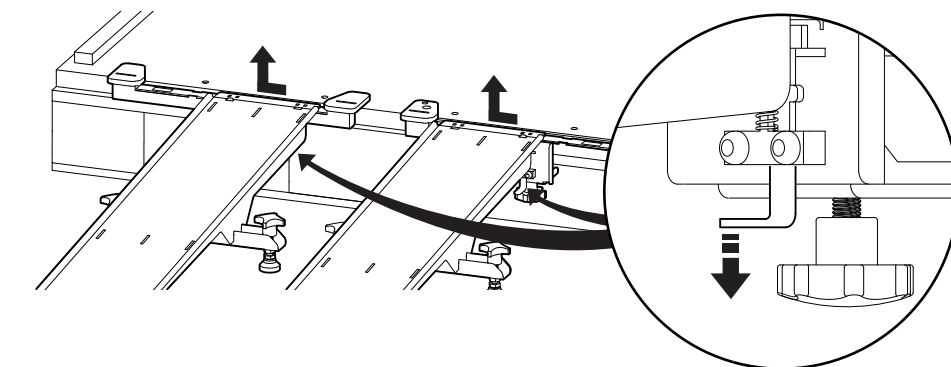


4

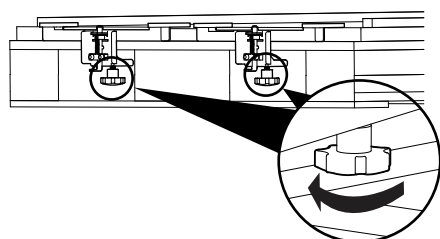

Or

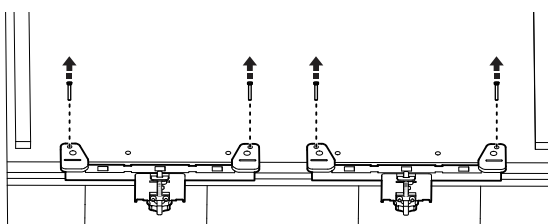

5

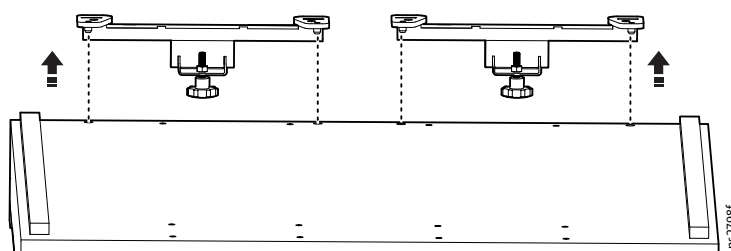

Worldwide Customer Support

Contact www.se.com for more information.

© 2025 Schneider Electric. All Rights Reserved.

EN JPS53272
07/2025