

SonicWave Deployment - Operationalize your SonicWave in three easy steps



Capture Security Center >
Wireless Cloud Management.
Login to cloud.sonicwall.com
to manage your SonicWave

SonicWall Firewall
Requires SonicOS 6.5.4 or
above to manage SonicWave
from SonicWall Firewall

Connect SonicWave to
SonicWall Firewall's WLAN
zone

REGISTER

Download the SonicWall [SonicWiFi App](#)
to register SonicWave



CONNECT AND POWER UP

Power up SonicWave using PoE
(not included) and connect to the
internet

MANAGE

Manage your SonicWave via [Capture Security Center](#) or via [SonicWall Firewall](#)

PACKAGE CONTENTS




1



4



2

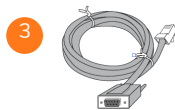

3



5

6



- 1 SonicWave 432o appliance
- 2 8 antennas (4 x 5GHz, 4 x 2.4GHz)
- 3 Serial console cable
- 4 Mounting hardware and grounding kit
- 5 SonicWall SonicWave 432o Quick Start Guide
- 6 Safety, Environmental, and Regulatory Information documents

☎ If any items are missing from the package, contact SonicWall Technical Support at:
<https://www.sonicwall.com/support/contact-support>

ⓘ The PoE for powering the SonicWave 432o is sold separately and is not included in the package.

