


P24h-30 Simplified service manual for dismantling

Model Name: Lenovo P24h-30

Exploded Diagram

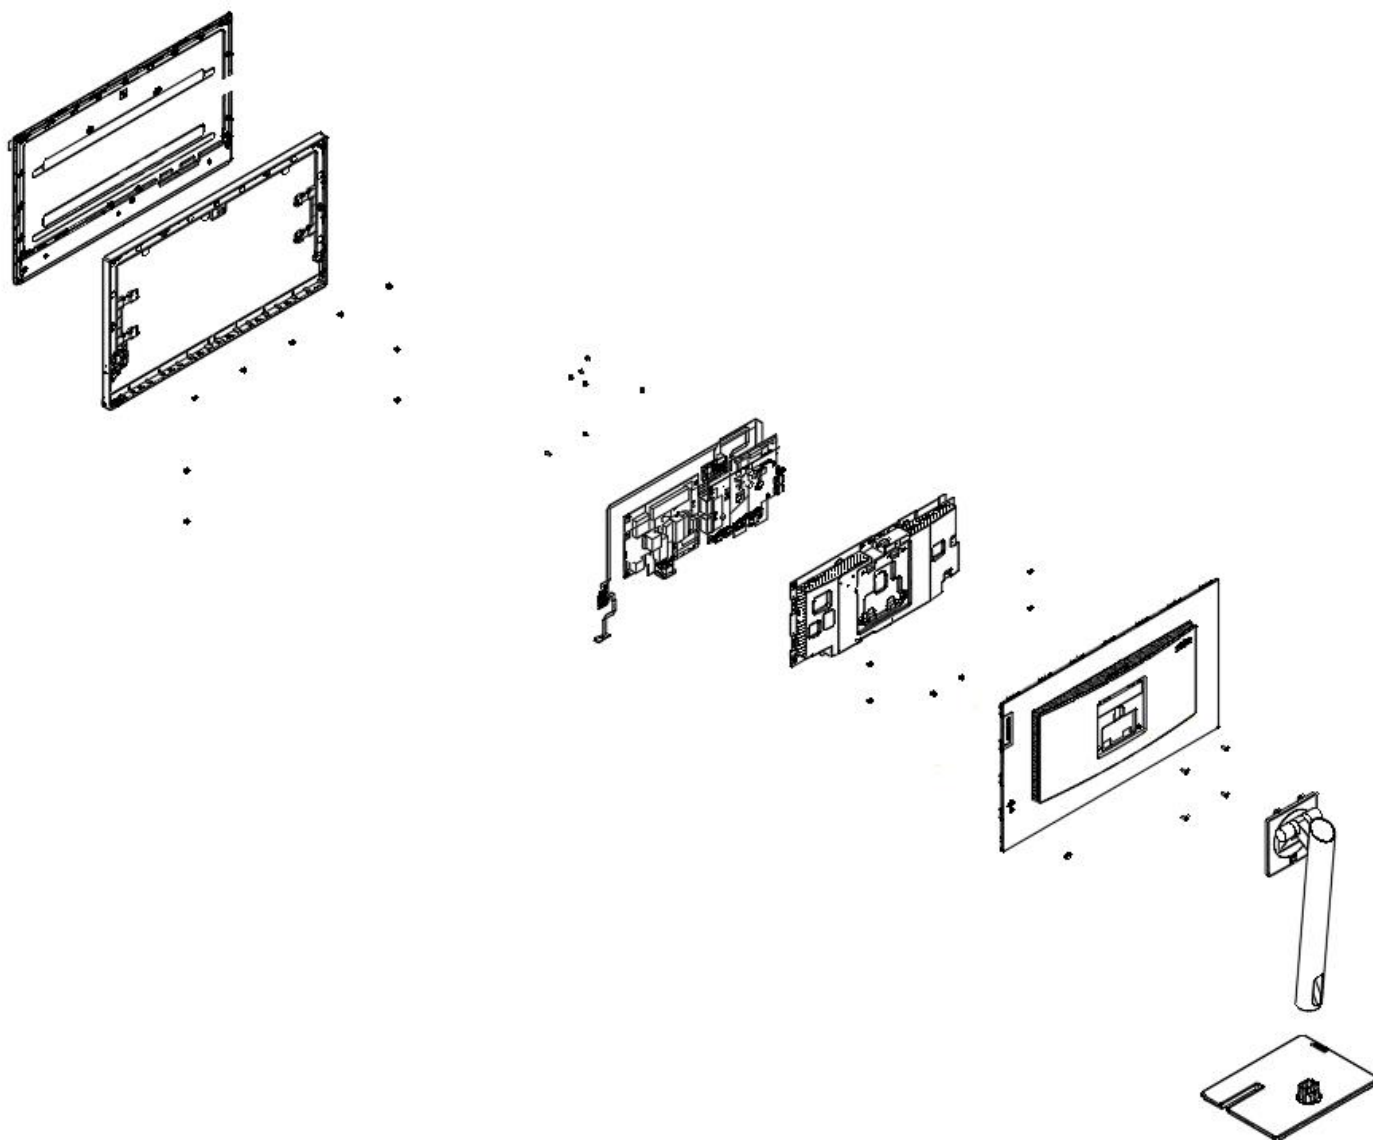

1. Precaution

Please read the precaution as follows to prevent any damages to the LCD Monitor.
Make sure all power connector is removed. Be sure that the LCD Monitor is in power off status.


Prepare soft cloth and sponge as working platform to place LCD monitor horizontally.			
Hold LCD by the side carefully and DON'T touch or press panel directly.			

2. Appropriate tools


Select the Appropriate tools for disassembly and re-assembly.

Phillips screwdriver (#2)	
Phillips screwdriver (#0)	
C/D disassembly tool	
Gloves or soft cloth	


3. Disassembly SOP

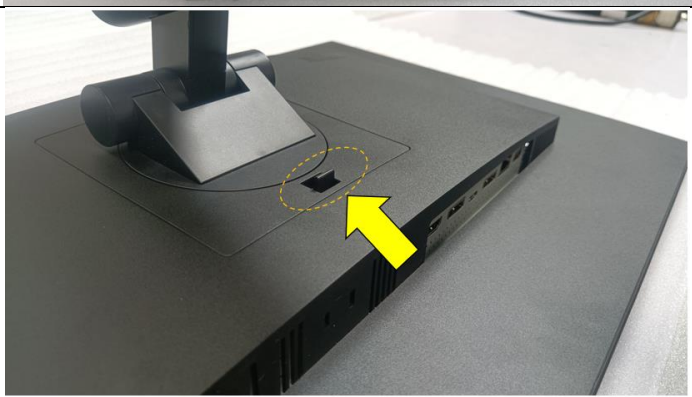Put the monitor on a flat surface (Put the pe bag under the monitor)	
Push the button to release the stand	
Remove the screw * 4pcs Tool : Screwdriver #2	
Use the C/D disassembly tool to release Rear cover hook	


Remove All tape and foil

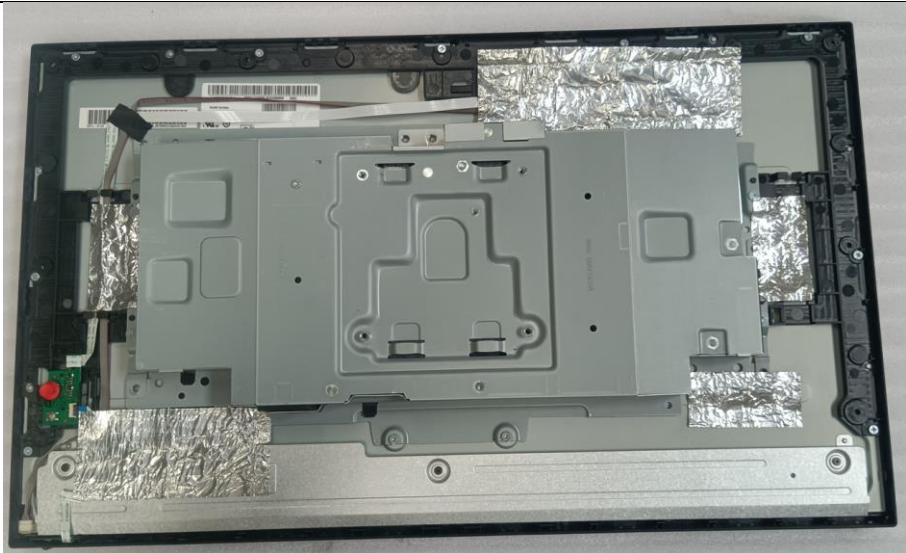

Remove the screw.
Tool : Screwdriver #2

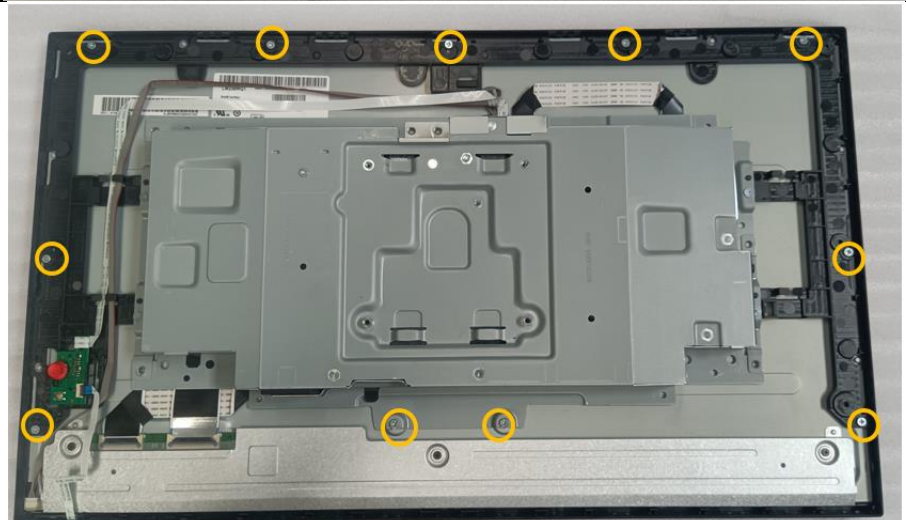


Remove the screw.
Tool : Screwdriver #0

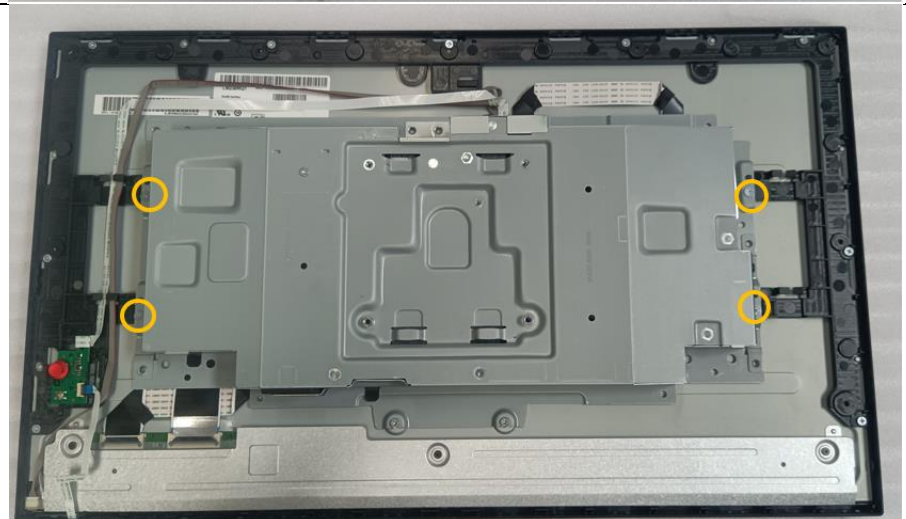

Unplug LVDS line/power key pcb line/light bar line

Release joy-stick key pcb and power key pcb from the the middle frame

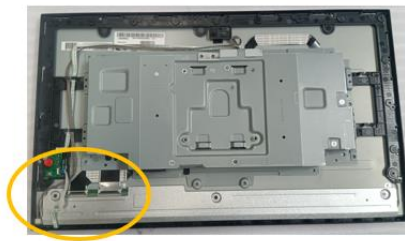


Remove the Main chassis



Release the middle frame from the Panel




Remove acetate tape and mylar sheet from Main chassis

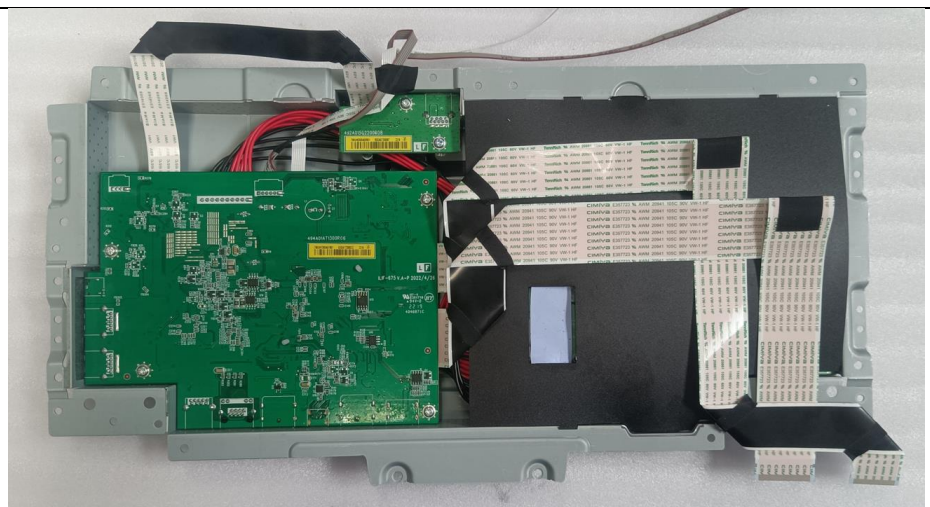


Remove All screw.
Tool : Screwdriver #2

Take out the mylar sheet from Main chassis side

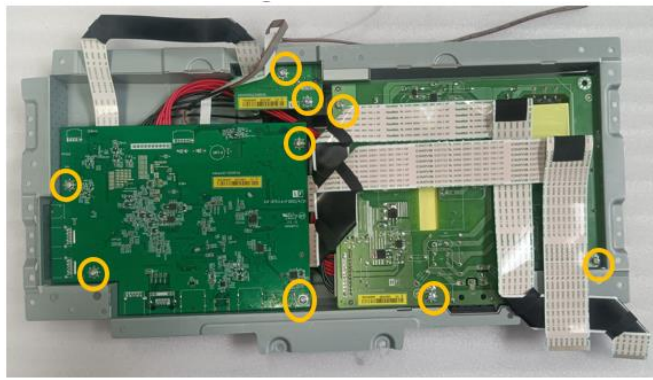

Take out PCB and Peel off all Gasket、mylar、 thermal pads .

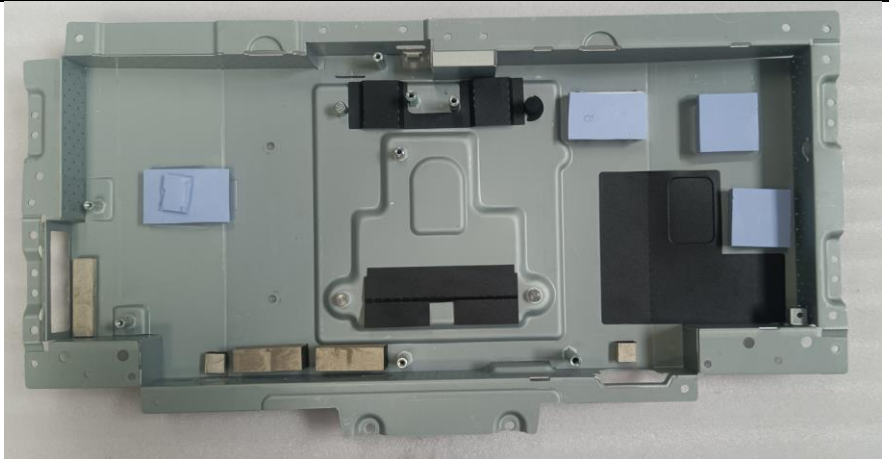

Take out the Thermal pads from pcb

