# USER GUIDE

Gaming

**Content Creation** 

**Business & Productivity** 





# USER GUIDE MSI CENTER S

# Content

Introduction	4
Main Page	4
Advanced Settings	5
Hardware Monitoring	5
General Settings	6
USB Power Share	6
Keyboard Backlit	6
Hibernate/Sleep	6
Close Lid Action	7
Battery Boost	8
Al Zone (optional)	9
Support	
System Info	11

# Introduction

MSI Center S, the exclusive application created only for MSI new Business and Productivity series -- Summit, Prestige, and Modern, delivers optimized productivity, performance, and efficiency to business and diverse users.

Be noted that MSI Center S is only available for MSI Business and Productivity series with 11th Gen Intel<sup>®</sup> Core<sup>™</sup> and 4th Gen AMD<sup>®</sup> Ryzen processors.

# Main Page

Now, let's get familiar to MSI Center S! Here comes an overall user interface shown below, users may read the brief introduction of this user interface before going any further.

- 1. Product Information Model Name, Serial Number, and BIOS Version.
- 2. General Settings USB Power Share, Keyboard Backlit, Close Lid Action, etc.
- Battery Boost (optional) To extend battery life while deactivating discrete graphics function.
- 4. User Scenario Al Engine, Performance, Balanced, and ECO-silent.
- 5. Hardware Monitoring



## **Advanced Settings**

Click the gear to enter the advanced options. There are four Profile partitions. Users can add programs to each Profile. A program can only be added to one Profile. The AI Engine's judgment is based on the programs added by the user as top priority.

In the advanced options, you can choose whether to display the OSD in the lower right corner when switching Profile, and the timing of switching to ECO-silent Mode.

The second setting:     Image: Control of the second set in the second se	MSI Center 8	CT Mula	N #17000	() Connet	- ×
Alvanced Setting:  Autor: Alvanced Setting: Au		0	II STORE	P. obtain	10 <sup>2</sup>
Active Ac	Advanced Settings				×
Vegen val kaventekk viget for eprior pro vente.     Vegen val kaventekk viget for eprior pro vente.     Vegen val kaventekk viget for profer ventek viget vig	Automatic Adjustment Feature				
000 C Stree specific which up an end water and the specific which up any end water and the specific water and the	Al Engine will automatically adj	at the options you select.			<b></b>
Book to purch analysis price of the purch balance.     When the added to purch purch balance bala	OSD				
When the strate space power web/           Image: The strate space of the strate strat	Show the profile switch	ng animation when AI Engine initiates			
When the balany load is laver then 2000 vs. , such to 5 signer balany Mole automatuly,     when to 5 spec balany Mole when the poore has been unplaged.      Holigent Profile     Vocan Add poor typeCife balangee profile. The profile all the applied allows normally the Age.	When to switch to super powe	mode			
Adversicity with its Spee Ratery Made when the power has been suplicited.      Adversicity Finder      More and the set of the superior o	• When the battery level	s lower than 30% 👻 , switch t	o Super Battery Mode automatical	h.	
Intelligent Profile V Too can add Apps to specific intelligent profile. The profile will be applied when running the App.	<ul> <li>Automatically switch to</li> </ul>	Super Battery Mode when the power I	has been unplugged.		
You can add Apps to specific intelligent profile. The profile will be applied when running the App.	Intelligent Profile				
	V You can add Apps to sp	cific intelligent profile. The profile will	I be applied when running the App		

### **Hardware Monitoring**

Swap the positions of the Windows and Fn keys. A dialog box will appear asking the user whether they want to proceed with the switch

MSI Center <sup>B</sup>	C <sup>†</sup> Main	20 Al Zone	D Support		\$
Hardware Monitorir	ng				>
			Intel(R) Core(TM) 17-9750H CPU	@ 2.60GHz 1.1	220 v
CPU Usage	NPU Usage GPU Usa	ige i	NVIDIA GeForce GTX 1660Ti	1.0	420 v
$\frown$	$\frown$		RAM		16 GB
E0 1	E0 E0		CPU Temperature		220 v
50	30 30	· ) ·	CPU Core voltage	1.1	220 v
			CPU SA voltage	1.0	420 v
			CPU IO voltage	0.9	430 v
Disk	Memory		ssp	14.36 GB available	50 %
48∘c	75-c	- 1	HDD =	0 G8 available	00 %
			PCH voltage	1.0	480 v
Clean up Die disk 🍠	Free Up-Memory	<b>)</b> :	SYS Fen	805	8254
	Pree up ( 2.4508		PUMP Fan	0	82M
			CPUFan	0	RPM

## **General Settings**

#### USB Power Share

This function allows users to supply power to external devices through USB when the system is shut down or in hibernation. If the power is unplugged, no power will be supplied. The function is set to Off by default. This function needs to be linked with USB Power Share in Hibernation and Shutdown in the BIOS.

#### Keyboard Backlit

On models with monochrome keyboards, this function can control the keyboard backlight mode. The default is automatic mode. There are three modes in total.

- 1. Keep the lights on: Ensure that the keyboard backlight remains at the brightness level set by the user
- Auto turn-off after 10 seconds: If the user does not touch the keyboard or touchpad within a 10-second period, the keyboard backlight will automatically turn off. Once the user touches the keyboard or touchpad again, the backlight will return to the previously set brightness level.
- Auto mode: When connected to AC power, the keyboard backlight operates in 'Keep the lights on' mode. When on DC power, the backlight switches to 'Auto turn-off after 10 seconds' mode.

#### Hibernate/Sleep

This feature default settting is 'Off' by default when shipped. If enabled, it will first save the settings within the red box below, then change them all to 'Hibernate'. If the feature is turned off again, it will revert to the previously saved settings."

Power an	d sleep buttons and lid settings —	~			
		🚺 On b	attery	Plugg	ed in
٢	When I press the power button:	Hibernate		Hibernate	~
0	When I press the sleep button:	Sleep	$\sim$	Sleep	~
5	When I close the lid:	Hibernate	~	Hibernate	~

#### **Close Lid Action**

This option only controls the behavior when closing the lid while on AC power. There are two choices: 'Default' and 'Do nothing'. If 'Default' is selected, it follows the current Windows settings. If 'Do nothing' is selected, it changes the settings within the red box below to 'Do nothing'.

ower and sleep buttons and lid settings				
	🚺 On ba	ttery	Plugg	ed in
When I press the power button:	Hibernate	~	Hibernate	~
When I press the sleep button:	Sleep	~	Sleep	~
When I close the lid:	Hibernate	~	Hibernate	~

#### Battery Boost

On models equipped with an HDMI MUX, the GPU can be turned off to save power. After powering off, the HDMI output switches to the iGPU via the MUX, allowing the HDMI display to continue functioning normally. This feature is located in the upper right corner of the User Scenario on the homepage and is set to 'Off' by default. When the switch is activated, a warning will prompt the user to restart the system. If the user selects 'Yes,' the system will reboot and enable the Battery Boost function, while HDMI output remains operational. The user can also choose to restart later, in which case an exclamation mark will appear on the screen, reminding the user that a reboot is required to apply the settings.



# Al Zone (optional)

\* Optionally supported for selected models.

MSI Center <sup>®</sup>	C <sup>*</sup> Main	3> Al Zone	D Support		_ ×
Al Zone					
Al Noise Cancellation Pro Al powered noise cancellation soution for a better votor call experience.	Ser Ser	nart Guard art Guard automatically locks e soren upon égarture and es the system upon your en.	Sma sup base	et Brightness Brightness automatically is screen brightness on ambient light levels.	
Speaker Noise Cancel Microphone Noise Cancel	C Sea	art Guard n off my screen when I leave ke my device when I approach	C Stac C Stac C Stack speci or bu	io Effects Effects utilize AI to apply a effects on the camera it-is microphone.	Al
Advanced Settings		Windows settings			

MSI C	enter Ø	C <sup>†</sup> Main	🔅 Al Zone	D Support		
AI Zon	enter #  Noise Cancellation Pro powerd from cancellation Pro powerd from cancellation wild for ward till reprinter. water Noise Cancel Advanced Settings	on for a	S Al Zere	Al seport	Statis Effects The state of the steps upon at the state of the state o	8
	Ŷ		16			

#### Al Noise Cancellation Pro

Toggle speaker and microphone noise reduction from the main screen. Tap the button below for advanced settings.

MSI Center <sup>®</sup>	C Main	20 Al Zone	D Support	8
AI Noise Cancellation	Pro			×
ipeaker Noise Cancel			Microphone Noise Cancel	•
Realtek High Definition Audio		~	Realtek High Definition Audio	~
O Auto Volume Balance			Standard	
			Studio EQ	
1000			O Conference Enhancer	
			O Speaker Phone Mode	
			O front	
			Front (precise)	
	(( ))		O Front+Left	
			O Front+Right	<ul> <li>Voice Amplifier</li> </ul>
			O Front+Rear	Recording Quality
			Speaker Phone Mode	
			Receive vocals from 360 degrees in certain	distance.
			Recently Gamery - Check the quality of 10 Recently in Tanalid Incom Microsoftware (2 M	in the second seco

#### Smart Guard

This feature automatically locks the screen when the user leaves and wakes it up upon their return. Detailed specifications are as follows:

- · Lock on Leave: Locks the screen at a distance of 4 feet after 30 seconds.
- Wake on Approach: Wakes the screen at a distance of 2.5 feet, the user must manually unlock the screen upon return.
- Notes:
  - Enabling the Smart Guard feature will automatically activate the "Wake my device when I approach" setting. If this feature is disabled, the Smart Guard feature will also turn off.
  - The "Turn off my screen when I leave" and "Wake my device when I approach" options are linked to Windows Settings.
  - · Use the button below to open Windows Settings directly.

#### Smart Brightness

This button opens Windows Settings and navigates directly to the page with the Ambient Light Sensor settings.

#### Studio Effects

This button opens the Studio Effects page in Windows Settings.

## Support

Click MSI Recovery to launch the program. The other three buttons link to the official website's Live Update, Support, and Registration pages, respectively.



## System Info

Displays the following system information and allows exporting(.txt) file containing all system details.

MSI Center <sup>B</sup>	C <sup>°</sup> Main	Nº Al Zone	D Support	٢
System Info				
		05	Microsoft Windows 11 Pro 64-bit	Liport Humilino
		Model Name	Prestige 16 Al Studio 81V	
		BIOS Version	£15H5BM5.005	
		BIOS Release Date	2024/01/23	
Prestige 16 Al St	urlio B1V	EC Version	15H5EM51.0041226202309:36:26	
		Serial Number	95715H511015ZNC000123	
		Windows Product Key	29743	
		HDI Build	ZS7-15H5K2M6-JFT 3.0.L65.34.0.0000.10	
		SDK Build	Common SDK : 3.2023.1127.01 NB SDK : 2.0.2311.1601	



MSI.COM



SUPPORT



SOCIAL MEDIA