

Dell Mobile Battery Charger for Latitude 7230 Rugged Extreme Tablet

User's Guide

Rugged Tablet Model: Latitude 7230
Regulatory Model: CHR01M18





NOTE: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.



 
WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2022 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents

- Features 4**
- Setting up the charger 5**
 - LED indicators 8
 - Installing the charger on a wall 8
 - Removing the mount from the charger 9
- Troubleshooting 9**
- Warranty information 9**
 - Limited warranty and return policies 9

Features

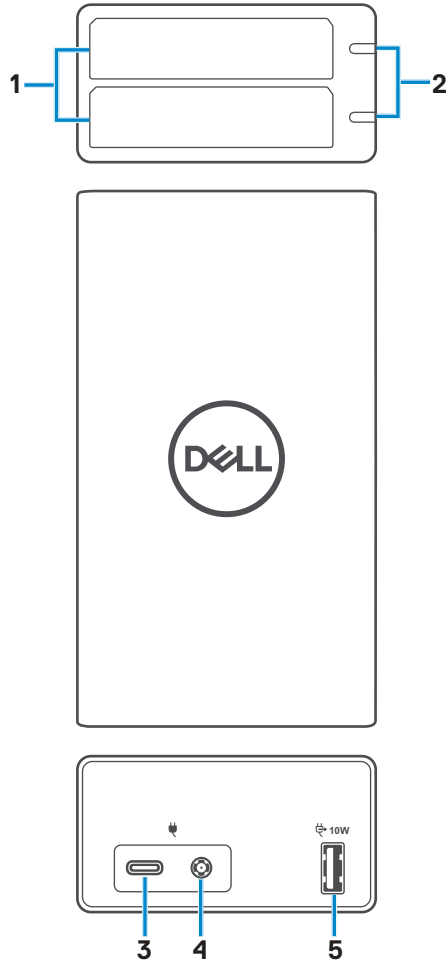


1. Battery compartments
2. LED indicators
3. Power-adaptor port (USB Type-C)
4. Power-adaptor port (4.5 mm DC-in)
5. 10 W USB power-output port

Setting up the charger

⚠ WARNING: Before you begin any of the procedures in this section, read the safety information that is shipped with your charger and tablet. For additional best practices information, see www.dell.com/regulatory_compliance.

1. Connect either a 4.5 mm DC-in or USB Type-C power adapter to the corresponding power adapter port on the charger.


✎ NOTE: For the DC-in power adapter port, use either a 45 W or 65 W power adapter. For the USB Type-C power adapter port use either a 45 W, 65 W, or 90 W power adapter.

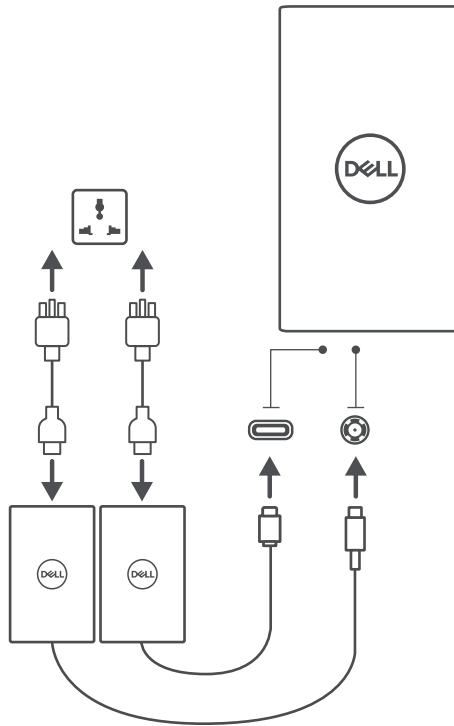


2. Insert a maximum of two tablet batteries with their contacts facing down all the way into the battery compartments until they click into place and the corresponding LED indicator lights up. The battery will take up to two hours to charge depending on its power level.



NOTE: When two batteries are inserted at the same time, the battery in the front compartment (closest to the Dell logo) will charge first. Once the front battery is fully charged, the battery in the rear compartment will begin charging.

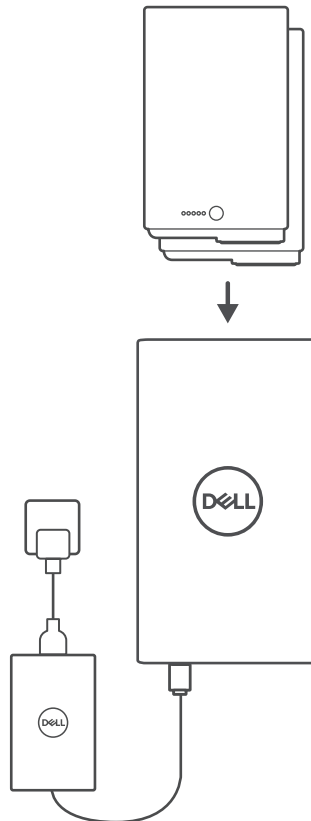

3. (Optional) Connect a device to the 10 W USB power output port to charge the device.

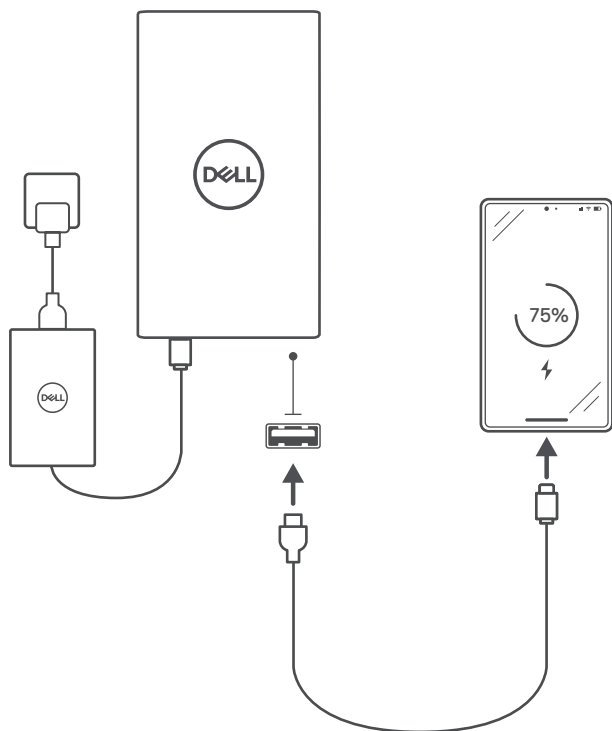


LED indicators

The status indicators for each battery compartment use dual-colored (green and amber) LED lights to indicate the charging status as well as the error status for any inserted batteries. The definition of each behavior for the LEDs are described below.

LED behavior	Definition
Off	No battery inserted or battery fully charged
Solid green	Battery charging
Solid amber	Battery at a very low power level
Alternating amber and green flashes	Unsupported (non-Dell) battery inserted
Flashing amber (4x) then a single green flash	Fatal battery failure


Installing the charger on a wall

The charger comes pre-installed on the wall mount. Use the four screws M4x20 included in the package to mount the charger onto a wall based on the dimensions below.

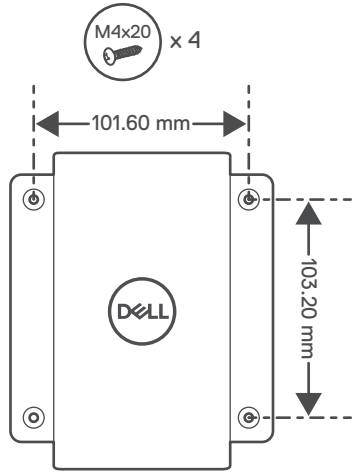

Removing the mount from the charger

Remove the M2x5 screw from the rear side of the charger, and then remove the mount from the charger.

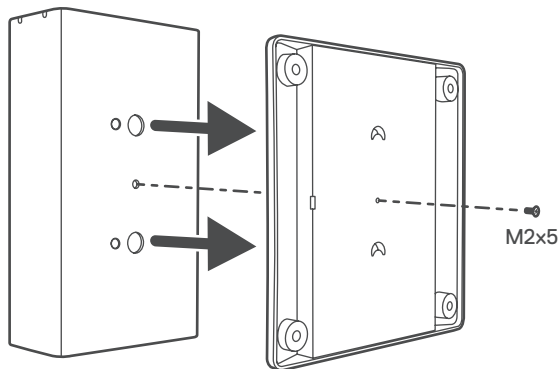

Troubleshooting

NOTE: You can only use the battery charger with batteries from selected Dell tablets. For a list of supported devices, see www.dell.com.

Problem	Possible solutions
Cannot charge the inserted batteries.	<ol style="list-style-type: none">1. Ensure that the power adapter is properly plugged into a power source.2. Remove and re-insert the battery.3. Ensure that there is no foreign substance within the battery slots.4. Clean the battery slots.
Cannot charge a device connected to the USB-A port.	
The LED indicators are behaving abnormally.	

Warranty information

Limited warranty and return policies

Dell-branded products carry a one-year limited hardware warranty. If purchased together with a Dell computer, it will follow the computer's warranty.