



POLY STUDIO R30

ENGLISH

 
 
Poly Studio R30 Product Specifications

Product Specifications
 Power: 12V/3A
 Camera resolution: 2160p, 4K UHD
 Camera type: Single-lens
 Video rate: 30 fps
 Speaker: 84 dB SPL @ 1000 Hz @ 1 meter at maximum volume
 Frequency response: 100 Hz–20 kHz
 Operating temperature: 32 to 104° F
 Diagonal field of view (dFoV): 120°
 Horizontal field of view (hFoV): 110°

BAHASA INDONESIA

Spesifikasi Produk Poly Studio R30

Spesifikasi Produk
 Daya: 12V/3A
 Resolusi kamera: 2160p, 4K UHD
 Jenis kamera: Lensa-tunggal
 Kecepatan video: 30 fps
 Speaker (Pengeras Suara): 84 dB SPL @ 1000 Hz @ 1 meter pada volume maksimum
 Respon frekuensi: 100 Hz–20 kHz
 Suhu pengoperasian: 0 hingga 40°C
 Bidang pandang diagonal (dFoV): 120°
 Bidang pandang horizontal (hFoV): 110°

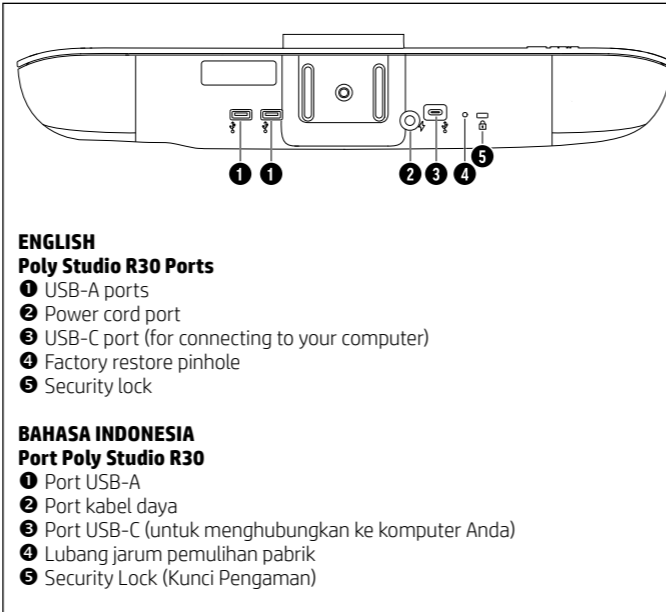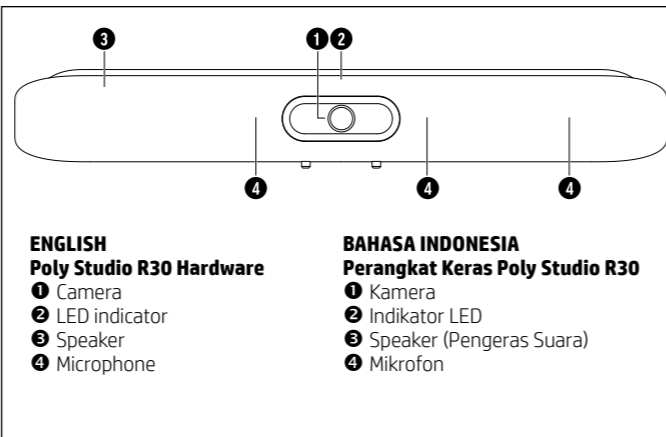

ENGLISH

 
LED Status Indicators

Solid white - Powered on and ready; out of a call and idle; attached to a system in a call, but the camera and microphone are idle
 Pulsing white - Boot initialization in progress
 Pulsing amber - Firmware update in progress
 Alternating blue and white - Bluetooth in discovery mode
 Solid blue - Bluetooth paired
 Solid green - Microphone in use during a call; camera is active
 Green blinking twice - Muted video
 Solid dim green - Speaker is outside the range of Acoustic Fence with Beam Shaping
 Solid red - Muted microphone
 Red blinking three times - Muted audio but speaking voice detected

BAHASA INDONESIA

Indikator Status LED

Putih solid - Dinyalakan dan siaga; keluar dari panggilan dan diam; terpasang ke sistem dalam panggilan, namun kamera dan mikrofon tidak digunakan
 Bergetar putih - Inisialisasi booting sedang berlangsung
 Bergetar kuning - Pembaruan firmware sedang berlangsung
 Biru dan putih bergantian - Bluetooth sedang ditemukan
 Biru solid - Bluetooth dipasang
 Hijau solid - Mikrofon digunakan selama panggilan; kamera aktif
 Hijau berkedip dua kali - Video dimatikan
 Hijau redup solid - Speaker (pengeras suara) berada di luar jangkauan Acoustic Fence dengan Pembentuk Sinar
 Merah solid - Mikrofon dimatikan
 Merah berkedip tiga kali - Audio tidak bersuara tetapi nada suara berbicara terdeteksi

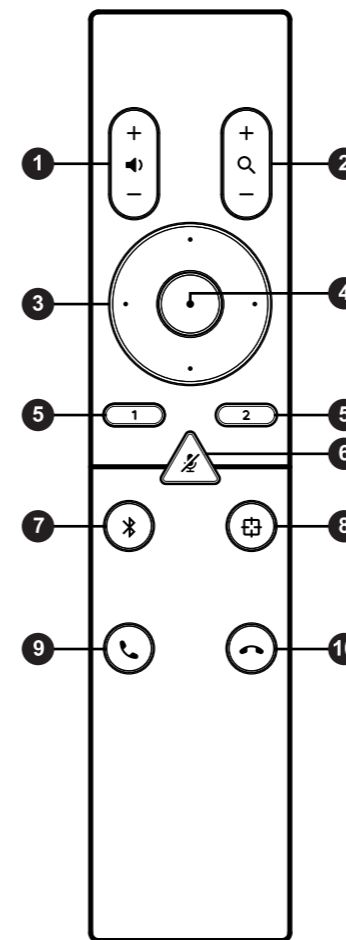

ENGLISH

Poly Studio R30 Remote

1 Volume keys
 2 Zoom keys
 3 Camera navigation
 4 Home
 5 Presets
 6 Mute key
 7 Bluetooth
 8 Tracking key
 9 Answer key
 10 End key

BAHASA INDONESIA

Port Poly Studio R30

1 Tombol Volume
 2 Tombol Zoom (Perbesar/Perkecil)
 3 Navigasi kamera
 4 Home (Beranda)
 5 Preset
 6 Tombol Mute (Bisu/Senyap)
 7 Bluetooth
 8 Tombol Tracking (Pelacakan)
 9 Tombol Answer (Jawab)
 10 Tombol End (Akhir)

support.hp.com/poly

Poly Studio R30



Nomor Registrasi di
 Kementerian Perdagangan: IMKG.205.01.2024

Importir: PT. Hewlett-Packard Indonesia
 Alamat: Gedung Perkantoran Prudential Centre, Kota Kasablanka Lantai 9, Jl. Casablanca Kav. 88 Menteng Dalam, Tebet .12870 Jakarta Selatan, Indonesia

© 2024 Poly. All trademarks are the property of their respective owners.



P00118-001A 01.24
 RMN/型号:P032, 型号: Poly Studio R30

ENGLISH

Instructions for Use

Save a Camera Preset

The two numbered buttons on the Poly Studio R30 remote control serve as preset shortcuts. Turn off the tracking mode before you use camera presets.

1. Adjust the camera to the desired position.
2. Long press the 1 or 2 button on the remote control. The middle LED lights glow white for 3 seconds with a notification sound.

BAHASA INDONESIA

Petunjuk Penggunaan

Simpan Preset Kamera

Dua tombol bernomor pada remote control (kendali jarak jauh) Poly Studio R30 berfungsi sebagai pintasan preset. Matikan mode pelacakan sebelum Anda menggunakan preset kamera.

1. Sesuaikan kamera ke posisi yang diinginkan.
2. Tekan lama tombol 1 atau 2 pada remote control (kendali jarak jauh). Lampu LED tengah menyala putih selama 3 detik dengan suara notifikasi.

ENGLISH

Maintenance Instructions

To effectively clean and disinfect your Poly remote control, you need cotton balls, cotton swabs, and a toothpick.

1. Remove the batteries.
2. Dip a cotton ball into a medicinal isopropyl alcohol and water solution of 70:30, making sure to squeeze out any excess liquid.
3. Wipe the entire surface of the remote control.
4. Dip a cotton swab into the alcohol/water solution and clean around the buttons, then use a clean toothpick to remove debris lodged between buttons.
5. Let the remote control air-dry completely.
6. Reinsert the batteries and store the controller in a box or storage container to minimize exposure to viruses.

BAHASA INDONESIA

Petunjuk Pemeliharaan

Untuk membersihkan dan mendisinfeksi remote control (kendali jarak jauh) Poly secara efektif, Anda memerlukan bola kapas, penyeka kapas, dan tusuk gigi.

1. Keluarkan baterainya.
2. Celupkan bola kapas ke dalam larutan obat isopropil alkohol dan air dengan perbandingan 70:30, pastikan untuk memeras sisa cairan.
3. Seka seluruh permukaan remote control (kendali jarak jauh).
4. Celupkan kapas ke dalam larutan alkohol/air dan bersihkan di sekitar tombol.
5. Biarkan remote control (kendali jarak jauh) benar-benar kering.
6. Masukkan kembali baterai dan simpan pengontrol di dalam kotak atau wadah penyimpanan untuk meminimalkan paparan virus.