



Maintenance and Service Guide

HP EliteBook 6 G1i 13 inch Notebook AI PC

SUMMARY

This guide provides maintenance information about such topics as spare parts, removal and replacement of parts, security, and backing up.

Legal information

© Copyright 2025 HP Development Company, L.P.

AMD is a trademark of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Chrome is a trademark of Google LLC. Intel, Core, Thunderbolt, and vPro are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. USB Type-C, USB-C, and the USB 5 Gbps and 40 Gbps port logos are trademarks or registered trademarks of USB Implementers Forum. DisplayPort and the DisplayPort logo are trademarks owned by the Video Electronics Standards Association (VESA) in the United States and other countries. Miracast and Wi-Fi are registered trademarks of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: April 2025

Document Part Number: P23954-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows is automatically updated, which is always enabled. High-speed internet and Microsoft account required. ISP fees may apply and additional requirements may apply over time for updates. See <http://www.microsoft.com>.

If your product ships with Windows in S Mode: Windows in S Mode works exclusively with apps from the Microsoft Store within Windows. Certain default settings, features, and apps cannot be changed. Some accessories and apps that are compatible with Windows may not work (including some antivirus, PDF writers, driver utilities, and accessibility apps), and performance may vary, even if you switch out of S Mode. If you switch to Windows, you cannot switch back to S Mode. Learn more at [Windows.com/SmodeFAQ](https://windows.com/SmodeFAQ).

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Setup & User Guides**.

To help us improve this document, please send any suggestions, comments, or errors to <mailto:hp.doc.feedback@hp.com>. Include the document part number when submitting your feedback.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.


-
-  **WARNING!** To reduce the possibility of heat-related injuries or of overheating the mobile computer, do not place the mobile computer directly on your lap or obstruct the computer air vents. Use the mobile computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer; or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and AC adapter provided by HP comply with the user-accessible surface temperature limits defined by applicable safety standards.
-

Table of contents

1 Product description	1
2 Components	5
Right.....	5
Left.....	5
Display	7
Low blue light mode (select products only).....	7
Keyboard area.....	9
Touchpad	9
Touchpad settings	9
Adjusting touchpad settings.....	9
Turning on the touchpad	9
Touchpad components	9
Lights	10
Power key and fingerprint reader	11
Special keys	13
Bottom	14
Rear	15
Labels	15
3 Illustrated parts catalog	18
Computer major components.....	18
Display assembly subcomponents	21
Miscellaneous parts.....	23
4 Removal and replacement procedures preliminary requirements	29
Tools required	29
Service considerations.....	29
Plastic parts.....	29
Cables and connectors.....	29
Drive handling	29
Electrostatic discharge information.....	30
Generating static electricity.....	30
Preventing electrostatic damage to equipment	31
Personal grounding methods and equipment.....	31
Grounding the work area.....	32
Recommended materials and equipment.....	32
Cleaning your computer	33
Enabling HP Easy Clean (select products only).....	33
Removing dirt and debris from your computer.....	33

Cleaning your computer with a disinfectant.....	34
Caring for wood veneer (select products only)	35
Packaging and transporting guidelines.....	35
Accessing support information	35
5 Removal and replacement procedures for Customer Self-Repair parts	38
Component replacement procedures	38
Preparation for disassembly.....	38
Bottom cover	38
Battery.....	41
Removing and reinstalling the same battery	41
Installing a new battery	43
Solid-state drive.....	48
WWAN module.....	50
Memory modules.....	52
WLAN module.....	54
6 Removal and replacement procedures for authorized service provider parts.....	56
Component replacement procedures	56
Speakers.....	56
Fan.....	57
I/O board.....	58
Display assembly.....	59
WWAN connector board.....	69
SSD board.....	70
Fingerprint reader	71
NFC module	72
Touchpad	73
Smart card reader	74
Audio jack board.....	75
Heat sink	76
System board	77
Top cover and keyboard.....	80
7 Computer Setup (BIOS), TPM, and HP Sure Start.....	82
Using Computer Setup	82
Navigating and selecting in Computer Setup	82
Restoring factory settings in Computer Setup.....	82
Updating the BIOS	83
Determining the BIOS version	83
Preparing for a BIOS update.....	83
Downloading a BIOS update	84
Installing a BIOS update.....	84
Changing the boot order using the f9 prompt	85
TPM BIOS settings (select products only)	85
Using HP Sure Start (select products only).....	85
8 Backing up, restoring, and recovering.....	86

Backing up information and creating recovery media.....	86
Using Windows tools for backing up.....	86
Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only).....	86
Restoring and recovering your system.....	86
Creating a system restore	87
Restoring and recovery methods	87
Recovering using the HP Recovery USB flash drive	87
Changing the computer boot order	88
Using HP Sure Recover (select products only).....	88
9 Using HP PC Hardware Diagnostics.....	89
Using HP PC Hardware Diagnostics Windows (select products only).....	89
Using an HP PC Hardware Diagnostics Windows hardware failure ID code.....	89
Accessing HP PC Hardware Diagnostics Windows.....	89
Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant.....	89
Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only).....	90
Downloading HP PC Hardware Diagnostics Windows.....	90
Downloading the latest HP PC Hardware Diagnostics Windows version from HP	90
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store	90
Downloading HP Hardware Diagnostics Windows by product name or number (select products only)	91
Installing HP PC Hardware Diagnostics Windows.....	91
Using HP PC Hardware Diagnostics UEFI	91
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code.....	91
Starting HP PC Hardware Diagnostics UEFI.....	91
Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only).....	92
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive.....	92
Downloading the latest HP PC Hardware Diagnostics UEFI version.....	93
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)	93
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only).....	93
Downloading Remote HP PC Hardware Diagnostics UEFI	93
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version.....	93
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number	94
Customizing Remote HP PC Hardware Diagnostics UEFI settings.....	94
10 Specifications.....	95
Computer specifications.....	95
Display specifications.....	96
Solid-state drive specifications	96
11 Statement of memory volatility.....	98
Current BIOS steps	98
Nonvolatile memory usage	100
Questions and answers	101

12 Power cord set requirements	103
Requirements for all countries	103
Requirements for specific countries and regions.....	103
13 Swelling or deformation of notebook battery	106
Swollen notebook batteries	106
Swollen battery is not a safety issue	106
Discontinue using a swollen battery	106
Replace a swollen battery.....	106
Minimize battery swelling.....	106
HP Adaptive Battery Optimizer (consumer notebooks).....	107
HP Battery Health Manager (commercial notebooks).....	107
14 Recycling	108
Index	109

1 Product description

This table provides detailed product information.

Table 1-1 Product components and their descriptions

Category	Description
Product Name	HP EliteBook 6 G1i 13 inch Notebook AI PC
Processors	Intel® Core™ Ultra 7 265U processor Intel Core Ultra 7 255U processor Intel Core Ultra 5 235U processor Intel Core Ultra 5 225U processor
Display	33.8 cm (13.3 in), bent type panel, narrow bezel, camera privacy cover Nontouch WUXGA (1920 x 1200), LCD, UWVA, antiglare, low blue light, sRGB 100%, HP Sure View 5 privacy panel, 800 nits WUXGA (1920 x 1200), LCD, UWVA, antiglare, WLED + low blue light, low power, sRGB 100%, 400 nits WUXGA (1920 x 1200), LCD, UWVA, antiglare, WLED, sRGB 62.5%, 300 nits Touch WUXGA (1920 x 1200), LCD, UWVA, antiglare, sRGB 62.5%, 300 nits <ul style="list-style-type: none">• 16:10 aspect ratio• Maximum hinge open angle: 177° ± 3°• Wide dynamic range• Screen-to-body ratio: 86.90%
Memory	Two customer-replaceable memory module slots supporting up to 64 GB of RAM DDR5-5600 dual-channel support Supports the following configurations: <ul style="list-style-type: none">• 64 GB (32 × 2)• 64 GB (32 × 2) (for use in the People's Republic of China [PRC])• 32 GB (16 × 2) or (32 × 1)• 32 GB (16 × 2) or (32 × 1) (PRC)• 24 GB (12 × 2)• 24 GB (12 × 2) (PRC)• 16 GB (8 × 2) or (16 × 1)• 16 GB (8 × 2) or (16 × 1) (PRC)• 8 GB (8 × 1)

Table 1-1 Product components and their descriptions (continued)

Category	Description
	<ul style="list-style-type: none"> 8 GB (8 × 1) (PRC)
Primary storage	Solid-state drives, PCIe, NVMe, M.2 2280
	2 TB, Gen4 × 4, three layer cell (TLC)
	2 TB, Gen4 × 4, TLC (PRC)
	1 TB, Gen4 × 4, TLC
	1 TB, Gen4 × 4, TLC (PRC)
	1 TB, Gen4 × 4, TLC, self-encrypted OPAL2
	512 GB, Gen4 × 4, TLC
	512 GB, Gen4 × 4, TLC (PRC)
	512 GB, Gen4 × 4, TLC, self-encrypted OPAL2
	512 GB
	512 GB (PRC)
	256 GB, Gen4 × 4, TLC, self-encrypted OPAL2
	256 GB
	256 GB (PRC)
Audio and video	Camera (select products only)
	5 MP + IR (infrared) (wide field-of-view [WFOV])
	FHD camera (narrow field-of-view [NFOV])
	Camera privacy cover
	Audio
	Poly Studio
	Stereo speakers (2 W, 4 ohm per speaker)
	Integrated dual-array microphones (2)
NFC	Near field communications (NFC) module: Mirage WNC XRAV-1
RJ-45 (network) jack	Intel I219-LM (vPro®) GbE PCIe NIC
	Intel I219-V (non-vPro) GbE PCIe NIC
Wireless	Wireless Local Area Network (WLAN) (M.2 2230; select products only)
	Intel AX211 Wi-Fi® 6E Bluetooth® 5.3 vPro WW WLAN
	Intel AX211 Wi-Fi 6E Bluetooth 5.3 non-vPro WW WLAN
	Intel BE201 Wi-Fi 7 Bluetooth 5.4 vPro WW WLAN
	Intel BE201 Wi-Fi 7 Bluetooth 5.4 non-vPro WW WLAN
	<ul style="list-style-type: none"> Compatible with Miracast® devices Two WLAN antennas MU-MIMO support

Table 1-1 Product components and their descriptions (continued)

Category	Description
	<ul style="list-style-type: none"> Supports Gigabit Data Rate
	Wireless Wide Area Network (WWAN) (select products only)
	HP 4G CAT16
	<ul style="list-style-type: none"> eSIM support LTE CAT16: LTE/HSPA+ w/GPS GPS Supports Global Series
	Low Power Wide Area Network (LPWAN) (select products only)
	Qualcomm 9205 LTE-M (CAT-M1 fSVC)
	<ul style="list-style-type: none"> Supports HP Protect & Trace with Wolf Connect service through the subscription term, but does not support mobile broadband use
Ports	Hot plug/unplug and autodetect for correct output to wide-aspect vs. standard aspect video
	Audio-out (headphone)/audio-in (microphone) combo jack
	HDMI 2.1 supporting: up to 4096 × 2160 @ 60 Hz with HDCP 2.2
	USB Type-A 5 Gbps port (power charging, left side)
	USB Type-A 5 Gbps port (power charging, right side)
	USB Type-C® 40 Gbps Thunderbolt™ 4 port (power delivery, DisplayPort™ 2.1, left side) (2)
	RJ-45 (network) jack
	Nano SIM card slot (select products only)
Keyboard/pointing devices	HP Standard Notebook Keyboard, spill-resistant
	Backlit, Durakey
	Backlit, Durakey, privacy
	Not backlit
	Clickpad
	Multitouch gesture support
	Microsoft Precision Touchpad Default Gestures Support
Power requirements	Battery (long life, polymer, fast charge [50% in 30 minutes])
	3 cell, 56 Whr
	3 cell, 48 Whr
	AC adapters (USB Type-C) (select products only)
	65 W, standard, straight
	65 W, standard, straight, halogen free (HF)
	Power cord (select products only)
	C5, 1.0 m (3.3 ft) conventional

Table 1-1 Product components and their descriptions (continued)

Category	Description
	C5, 1.0 m (3.3 ft), conventional, straight, HF
Security	Fingerprint sensor (select products only)
	Camera privacy cover
	Nano Security Lock
	Smart card reader (select products only)
Sensors	Hall effect sensor
	Thermal sensor
	Fingerprint sensor (select products only)
	HP Sure Platform
	HP Tamper Lock
	Ambient light sensor
Operating system	Windows® 11 Pro
	Windows 11 Pro Education
	Windows 11 Home - HP recommends Windows 11 Pro for Business
	Windows 11 Home Single Language - HP recommends Windows 11 Pro for Business
	Windows 11 Pro (Windows 11 Enterprise available with a Volume Licensing Agreement)
	FreeDOS
Serviceability	End user replaceable parts
	AC adapter
	Bottom cover
	Battery
	Solid-state drive
	Memory modules
	WLAN module
	WWAN module
	SIM card

2 Components

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Right

Use the illustration and table to identify the components on the right side of the computer.

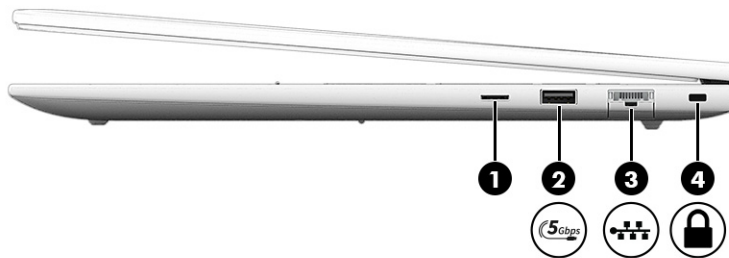





Table 2-1 Right-side components and their descriptions

	Component	Description
(1)	SIM card slot	Supports a wireless subscriber identity module (SIM) card.
(2)	 USB 5 Gbps powered port	Connects and supplies power to a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in Sleep mode. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.
(3)	 RJ-45 (network) jack/status lights	Connects a network cable. <ul style="list-style-type: none">• Green (left): The network is connected.• Amber (right): Activity is occurring on the network.
(4)	 Security cable slot	Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it might not prevent the computer from being mishandled or stolen.

Left

Use the illustration and table to identify the components on the left side of the computer.

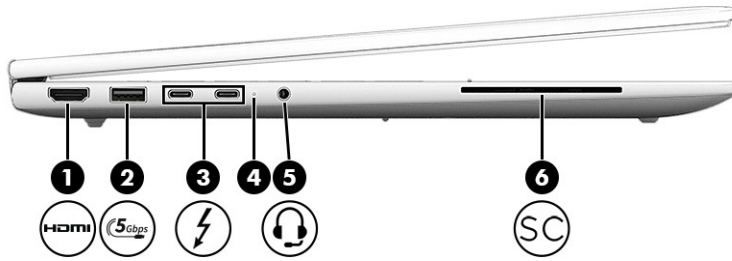


Table 2-2 Left-side components and their descriptions







	Component	Description
(1)	 HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High Definition Multimedia Interface (HDMI) device.
(2)	 USB 5 Gbps powered port	Connects and supplies power to a USB device, provides high-speed data transfer, and (for select products) charges small devices (such as a smartphone) when the computer is on or in sleep mode. NOTE: Use a standard USB Type-A charging cable or cable adapter (purchased separately) when charging a small external device.
(3)	 USB Type-C 40 Gbps power connector and Thunderbolt™ port with HP Sleep and Charge and DisplayPort output	Connects an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery. - and - Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. - and - Connects a display device that has a USB Type-C connector, providing DisplayPort output. NOTE: Your computer might also support a Thunderbolt docking station.
(4)	 Power light	<ul style="list-style-type: none"> • On: The computer is on. • Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components. • Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.

Table 2-2 Left-side components and their descriptions (continued)

	Component	Description
(5)	 Audio-out (headphone)/Audio-in (microphone) combo jack	<p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones.</p> <p>WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>.</p> <p>To access this guide:</p> <ul style="list-style-type: none">■ Select the Search icon in the taskbar, type HP Documentation in the search box, and then select HP Documentation. <p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p>
(6)	 Smart card reader	Supports optional smart cards.

Display

Use the illustration and table to identify the display components.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

⚠ WARNING! To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.

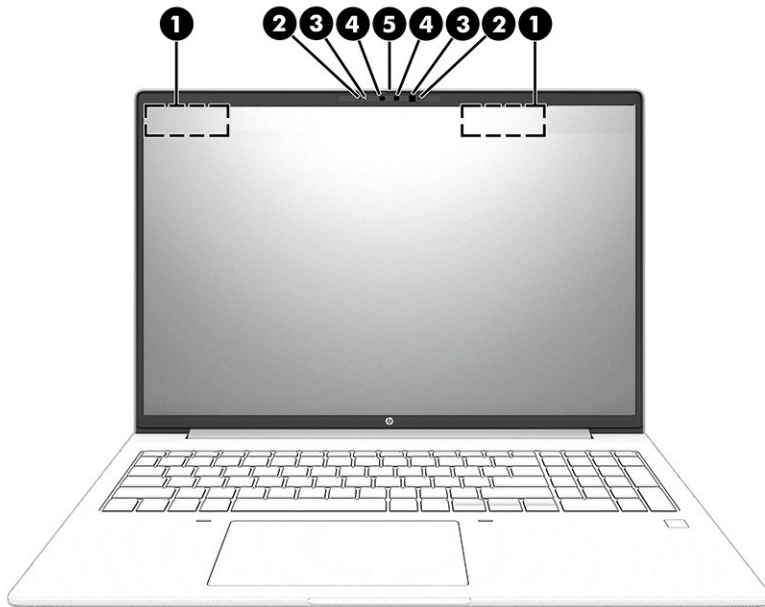


Table 2-3 Display components and their descriptions

	Component	Description
(1)	WLAN antennas* (2)	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2)	Internal microphones (2)	Record sound.
(3)	Camera lights (2)	On: One or more cameras are in use.
(4)	Cameras (2) (select products only)	Allow you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon.
		NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(5)	Camera privacy cover (select products only)	By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera's view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens.
		NOTE: If you have both front-facing and rear-facing cameras, when one camera lens is revealed and ready to use, the other is concealed.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.


For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- Select the **Search** icon in the taskbar, type **HP Documentation** in the search box, and then select **HP Documentation**.

Keyboard area

Keyboards can vary by language.

 **NOTE:** The keyboard, including the function keys and power key (select products only), is disabled in stand, tent, and tablet modes. To enable the keyboard, including the power key, change to the clamshell mode.

Touchpad

The touchpad settings and components are described here.

Touchpad settings

You learn how to adjust the touchpad settings and components here.

Adjusting touchpad settings

Use these steps to adjust touchpad settings and gestures.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Choose a setting.

Turning on the touchpad

Follow these steps to turn on the touchpad.

1. Select the **Search** icon in the taskbar, type `touchpad settings` in the search box, and then press `enter`.
2. Using an external mouse, click the **Touchpad** button.

If you are not using an external mouse, press the `Tab` key repeatedly until the pointer rests on the **touchpad** button. Then press the `spacebar` to select the button.

Touchpad components

Use the illustration and table to identify the touchpad components.

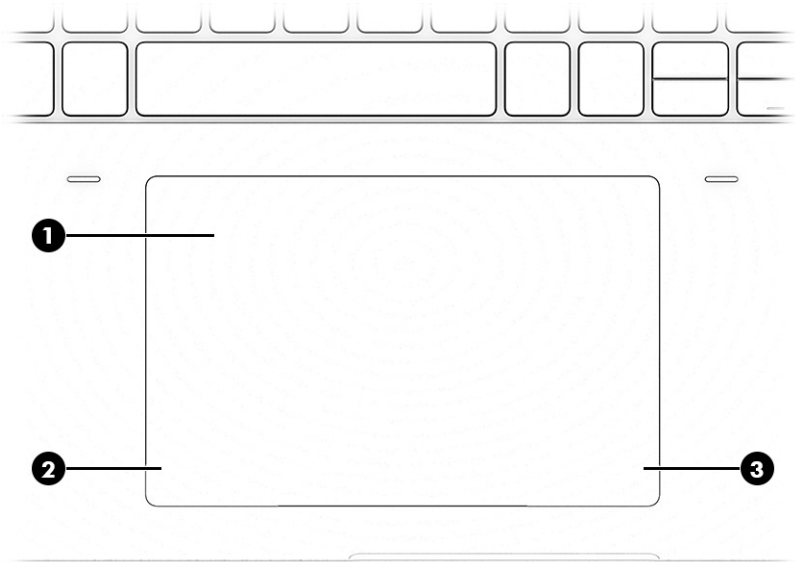


Table 2-4 Touchpad components and their descriptions

	Component	Description
(1)	Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2)	Left control zone	Textured area that allows you to perform additional gestures.
(3)	Right control zone	Textured area that allows you to perform additional gestures.

Lights

Use the illustration and table to identify the lights on the computer.

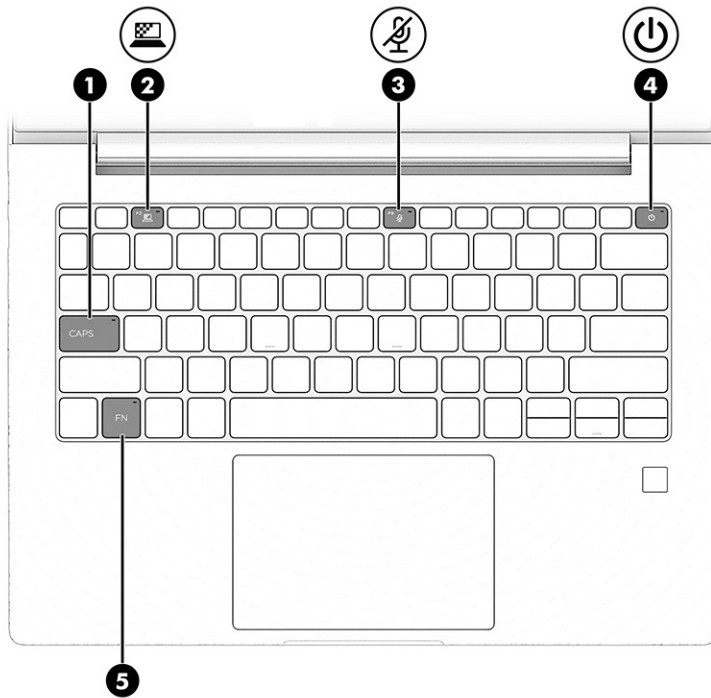






Table 2-5 Lights and their descriptions

	Component	Description
(1)	Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)	 Privacy key light (select products only)	On: Privacy screen is on, which helps prevent side-angle viewing.
(3)	 Microphone mute light	<ul style="list-style-type: none"> On: Microphone is off. Off: Microphone is on.
(4)	 Power light	<ul style="list-style-type: none"> On: The computer is on. Blinking (select products only): The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unnecessary components. Off: Depending on your computer model, the computer is off, in Hibernation, or in Sleep. Hibernation is the power-saving state that uses the least amount of power.
(5)	Fn lock light	On: The fn key is locked.

Power key and fingerprint reader

Fingerprint readers can be located on the touchpad, on a side panel of the computer, or on the top cover below the keyboard.

 **IMPORTANT:** To verify that your computer supports fingerprint reader sign-in, select the **Search** icon in the taskbar, type `Sign-in options` in the search box, and then select the **Sign-on options** app. If

Fingerprint recognition is not listed as an option, then your notebook does not include a fingerprint reader.

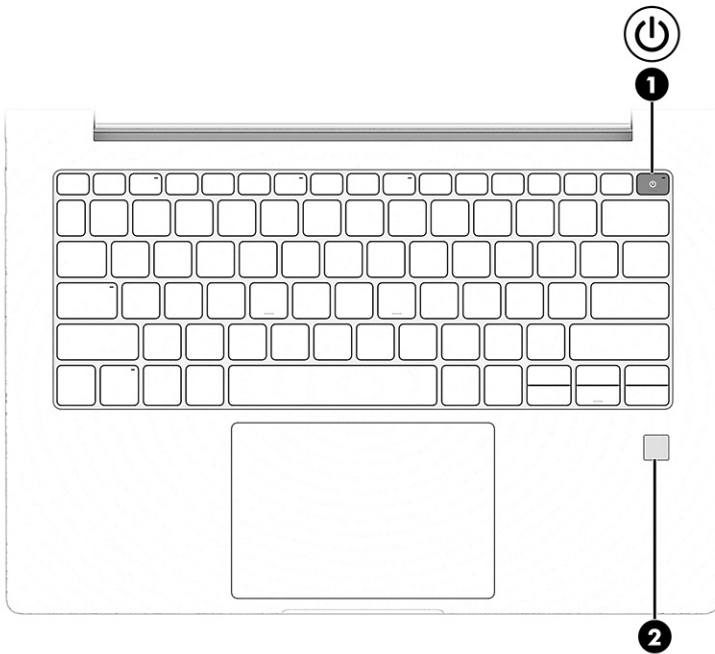


Table 2-6 Power key and fingerprint reader and their descriptions



	Component	Description
(1) 	Power key	<ul style="list-style-type: none"> • When the computer is off, press the key briefly to turn on the computer. • When the computer is on, press the key briefly to initiate Sleep. • When the computer is in the Sleep state, press the key briefly to exit Sleep (select products only). • When the computer is in Hibernation, press the key briefly to exit Hibernation. <p>IMPORTANT: Pressing and holding down the power key results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power key for at least 4 seconds to turn off the computer.</p> <p>To learn more about your power settings, use the Power icon.</p> <ul style="list-style-type: none"> • Right-click the Power icon , and then select Power and sleep settings.

Table 2-6 Power key and fingerprint reader and their descriptions (continued)

Component	Description
(2) Fingerprint reader (select products only)	<p>Allows a fingerprint logon to Windows, instead of a password logon.</p> <ul style="list-style-type: none"> Swipe down across the fingerprint reader. <p>IMPORTANT: To prevent fingerprint logon issues, make sure when you register your fingerprint that all sides of your finger are registered by the fingerprint reader.</p>

Special keys

Use the illustration and table to identify the special keys.

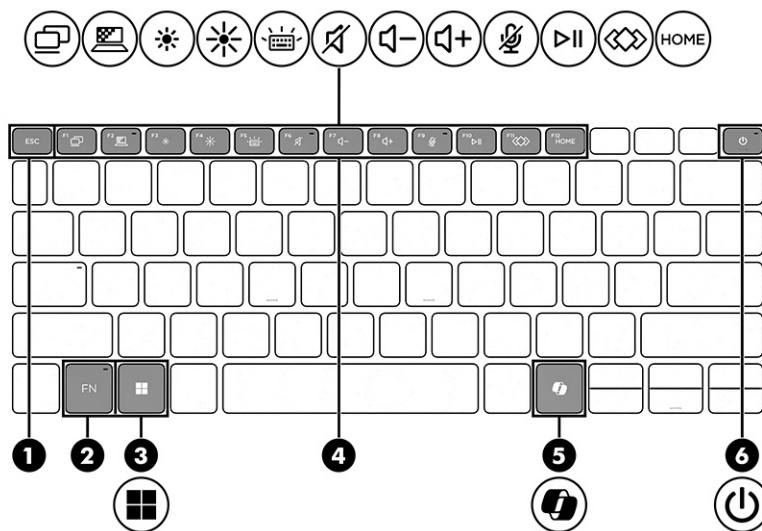


Table 2-7 Special keys and their descriptions




Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with another key. Such key combinations are called <i>hot keys</i> .
(3) Windows key	<p>Opens the Start menu.</p> <p>NOTE: Pressing the Windows key again will close the Start menu.</p>
(4) Action keys	Execute frequently used system functions.
(5)  Windows Copilot key	Opens Windows Copilot (select products only).

Table 2-7 Special keys and their descriptions (continued)

	Component	Description
(6)	 Power key	<ul style="list-style-type: none"> • When the computer is off, press the key briefly to turn on the computer. • When the computer is on, press the key briefly to initiate Sleep. • When the computer is in the Sleep state, press the key briefly to exit Sleep (select products only). • When the computer is in Hibernation, press the key briefly to exit Hibernation. <p>IMPORTANT: Pressing and holding down the power key results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power key for at least 4 seconds to turn off the computer.</p> <p>To learn more about your power settings, use the Power icon.</p> <ul style="list-style-type: none"> • Right-click the Power icon , and then select Power and sleep settings.

Bottom

Use the illustration and table to identify the bottom components.

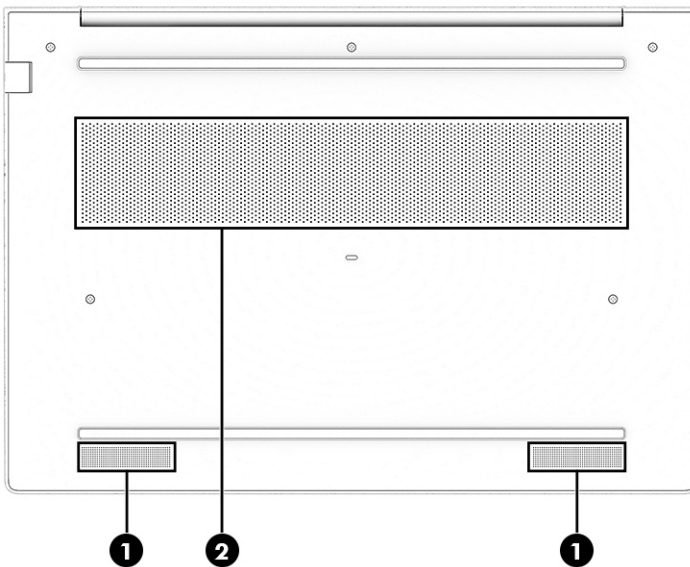


Table 2-8 Bottom components and their descriptions

Component	Description
(1) Speakers (2)	Produce sound.

Table 2-8 Bottom components and their descriptions (continued)

Component	Description
(2) Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Rear

Use the illustration and table to identify the rear component.



Table 2-9 Rear component and its descriptions

Component	Description
Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information you might need when you troubleshoot system problems or travel internationally with the computer. Labels might be in paper form or imprinted on the product.

IMPORTANT: Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble one of the examples shown below. Refer to the illustration that most closely matches the service label on your computer.

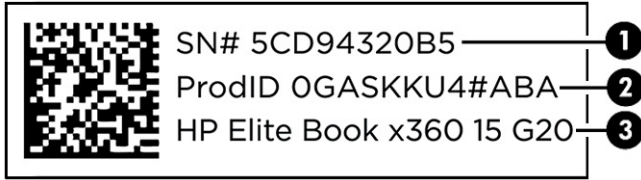


Table 2-10 Service label components

Component	
(1)	Serial number
(2)	Product ID
(3)	HP product name

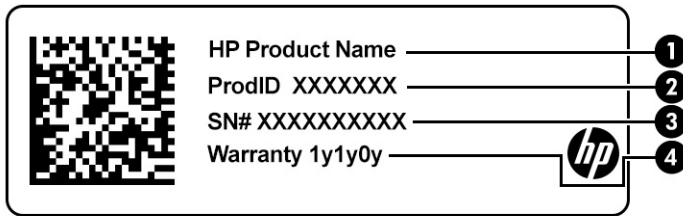


Table 2-11 Service label components

Component	
(1)	HP product name
(2)	Product ID
(3)	Serial number
(4)	Warranty period

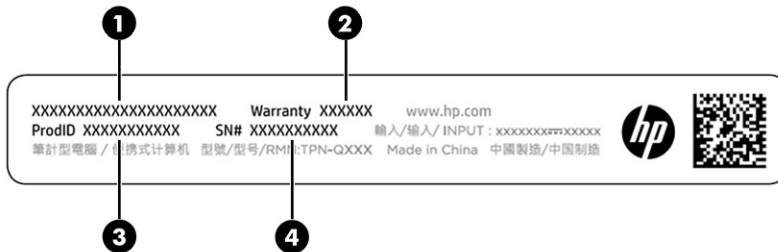


Table 2-12 Service label components

Component	
(1)	HP product name

Table 2-12 Service label components (continued)

Component	
(2)	Warranty period
(3)	Product ID
(4)	Serial number


- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.


3 Illustrated parts catalog

Use this chapter to determine the spare parts that are available for the computer.

Computer major components

To identify the computer major components, use this illustration and table.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

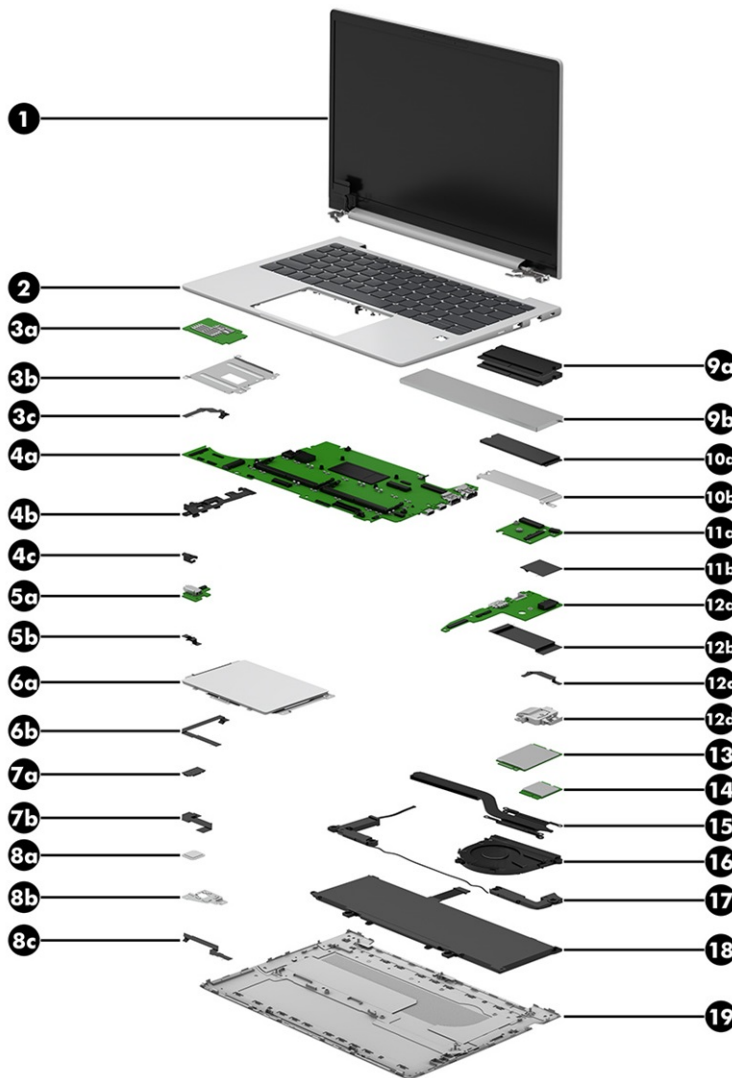


Table 3-1 Computer major component descriptions and part numbers

Item	Component	Spare part number
(1)	Display assembly: Display spare parts are available only as subcomponents. For spare part information, see Display assembly subcomponents on page 21 .	Not available as a spare part
(2)	Top cover and keyboard NOTE: For a detailed list of country codes, see Top cover and keyboard on page 80 .	
	Backlit, privacy	P33566-xx1
	Backlit	P33567-xx1
(3a)	Card reader	N96232-001
(3b)	Card reader bracket (included in the Bracket Kit)	P33245-001
(3c)	Card reader cable (included in the Cable Kit)	P33244-001
(4a)	System board (includes integrated processor, the Windows operating system, and replacement thermal material)	
	Intel Core Ultra 7 265U processor	P35018-601
	Intel Core Ultra 7 265U processor, with WWAN	P35019-001
	Intel Core Ultra 7 255U processor	P35016-601
	Intel Core Ultra 7 255U processor, with WWAN	P35017-001
	Intel Core Ultra 5 235U processor	P35014-601
	Intel Core Ultra 5 235U processor, with WWAN	P35015-001
	Intel Core Ultra 5 225U processor	P35012-601
	Intel Core Ultra 5 225U processor, with WWAN	P35013-001
(4b)	I/O bracket (included in the Plastics/Rubber Kit)	N99999-001
(4c)	Middle hook (included in the Plastics/Rubber Kit)	N99999-001
(5a)	Audio jack board	N96231-001
(5b)	Audio jack board cable (included in the Cable Kit)	P33244-001
(6a)	Touchpad	
	Model with NFC (includes NFC antenna)	N96238-001
	Models without NFC	P33246-001
(6b)	Touchpad cable (included in the Cable Kit)	P33244-001
(7a)	NFC module	914758-001
(7b)	NFC module cable (included in the Cable Kit)	P33244-001
	NFC module antenna (not illustrated)	N96724-001
(8a)	Fingerprint reader	N96242-001
(8b)	Fingerprint reader bracket (included in the Bracket Kit)	P33245-001
(8c)	Fingerprint reader cable (included in the Cable Kit)	P33244-001
	Fingerprint reader blank (included in the Plastics/Rubber Kit) (not illustrated)	N99999-001
(9a)	Memory module (DDR5-5600)	

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	32 GB, nM	N77400-001
	32 GB, NMIC	N97399-001
	16 GB, nM	N77399-001
	16 GB, NMIC	N93773-001
	12 GB, nM	P33447-001
	12 GB, NMIC	P37784-001
	8 GN, nM	N77398-001
(9b)	Memory module shield (included in the Miscellaneous Kit)	P33250-001
	Memory module thermal pad (included in the Miscellaneous Kit) (not illustrated)	P33250-001
(10a)	Solid-state drive (SSD) (PCIe-4 × 4, M.2 2280)	
	2 TB, TLC, nM	N77396-001
	1 TB, TLC, NMIC	N22908-001
	1 TB, TLC, nM	N77395-001
	1 TB, TLC, self-encrypting drive (SED,) NMIC	N24954-001
	1 TB, TLC, SED, nM	N86919-001
	512 GB, NMIC	N44321-001
	512 GB, TLC, nM	N77393-001
	512 GB, nM	N77392-001
	512 GB, TLC, SED, nM	N86921-001
	256 GB, nM	N77391-001
	256 GB, SED	N35225-001
(10b)	SSD shield (included in the SSD Support Parts Kit)	P37723-001
(11a)	WWAN connector board	N96592-001
(11b)	WWAN connector board cable (included in the Cable Kit)	P33244-001
	SSD board (not illustrated)	N96468-001
(12a)	I/O board (includes nano SIM slot, RJ-45 jack, and USB port)	
	NOTE: The I/O board cables are included in the Cable Kit, spare part number P33244-001.	
	For use in vPro models with WWAN	N96226-001
	For use in non-vPro models with WWAN	N96228-001
	For use in vPro models without WWAN	N96227-001
	For use in non-vPro models without WWAN	N96229-001
(12b)	I/O board cable (included in the Cable Kit)	P33244-001
(12c)	Nano SIM cable (included in the Cable Kit, spare part number)	P33244-001
(12d)	RJ-45 jack cover	N96241-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
(13)	WWAN module	
	HP 4G CAT16	P08117-005
	Qualcomm 9205 LTE-M (CAT-M1 fSVC)	P11676-005
	WWAN antenna protector and foil (included in the Miscellaneous Kit (not illustrated))	P33250-001
	WWAN gasket (included in the Miscellaneous Kit) (not illustrated)	P33250-001
(14)	WLAN module	
	Intel AX211 Wi-Fi 6E Bluetooth 5.3 WW WLAN (vPro)	M53363-005
	Intel AX211 Wi-Fi 6E Bluetooth 5.3 WW WLAN (non-vPro)	M53366-005
	Intel BE201 Wi-Fi 7 Bluetooth 5.4 WW WLAN (vPro)	N86465-005
	Intel BE201 Wi-Fi 7 Bluetooth 5.4 WW WLAN (non-vPro)	N86466-005
	WLAN antenna protector (included in the Miscellaneous Kit) (not illustrated)	P33250-001
(15)	Heat sink (includes replacement thermal material)	N96236-001
(16)	Fan	N96235-001
(17)	Speakers (left and right)	N96243-001
(18)	Battery	
	3 cell, 56 Whr, Li-ion battery	N70706-001
	3 cell, 48 Whr, Li-ion battery	N70705-001
(19)	Bottom cover	
	Metal	N96240-001
	Plastic	N96239-001

Display assembly subcomponents

To identify the display assembly subcomponents, use this illustration and table.

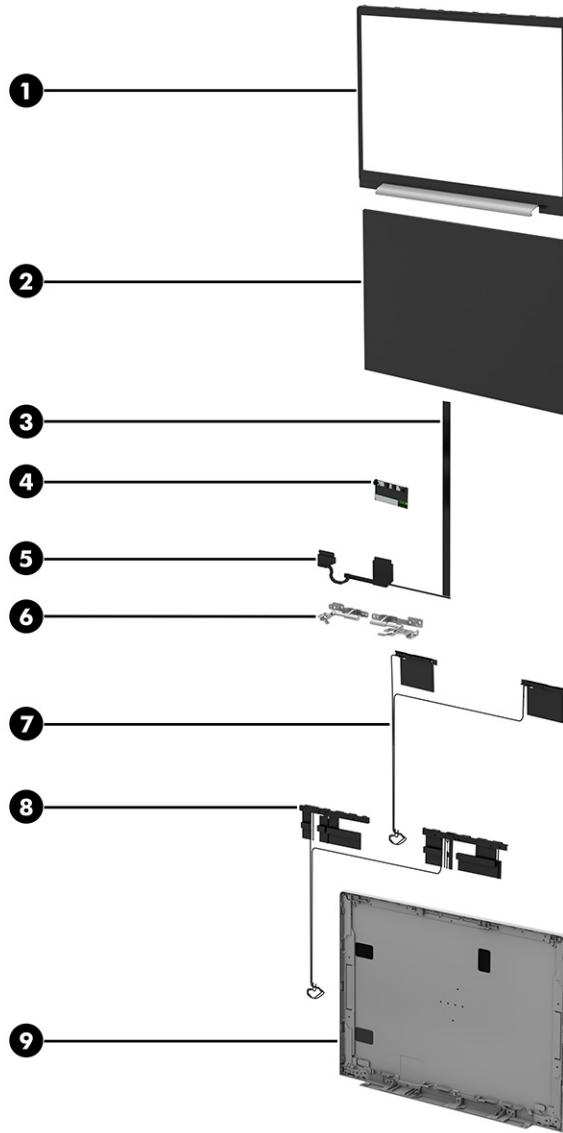


Table 3-2 Display component descriptions and part numbers

Item	Component	Spare part number
(1)	Display bezel	
	Model with an infrared camera and privacy display	N96500-001
	Models with an infrared camera	N96498-001
	Models with an FHD camera	N96499-001
	Models without a camera	P33247-001
(2)	Display panel (includes cable and display and bezel adhesive)	
	Touch panel, 300 nits	P35021-001
	Nontouch panel, 300 nits	P35020-001

Table 3-2 Display component descriptions and part numbers (continued)

Item	Component	Spare part number
	Nontouch panel, 400 nits	P35023-001
	Nontouch panel, privacy display, 800 nits	P35022-001
(3)	Camera/microphone module cable (included in the Display Cable Kit (includes display and bezel adhesive)	P33252-001
(4)	Camera/microphone module (includes sponge and display and bezel adhesive) NOTE: The camera/microphone module cable is included in the Display Cable Kit, spare part number P33252-001.	
	Infrared camera	P33249-001
	FHD	P33248-001
	Microphone module (not illustrated, includes display and bezel adhesive)	P00492-001
(5)	Display panel cable (included in the Display Cable Kit)	P33252-001
(6)	Display hinges (left and right) (includes display and bezel adhesive)	N96249-001
	ALS board (not illustrated, includes display and bezel adhesive)	N96247-001
(7)	WLAN antennas (includes WLAN antennas and cables and display and bezel adhesive)	N96246-001
(8)	WWAN antennas (includes WWAN antennas and cables and display and bezel adhesive)	N96246-001
(9)	Display back cover (includes wireless antenna cables and bezel adhesive)	
	for use in models with an FHD camera, no WWAN, 300 nits	P35252-001
	For use in models with an IR camera, no WWAN, 300 nits	P35253-001
	For use in models with an IR camera, WWAN, 300 nits	P35254-001
	For use in models with an FHD camera, WWAN, 300 nits	P35255-001
	For use in models with an IR camera, no WWAN, privacy panel, 800 nits	P35256-001
	For use in models with an IR camera, WWAN, privacy panel, 800 nits	P35257-001
	For use in models with an IR camera, no WWAN, 400 nits	P35258-001
	For use in models with an FHD camera, no WWAN, 400 nits	P35259-001
	For use in models with an IR camera, WWAN, 400 nits	P35260-001
	Tape Kit (includes bezel and display panel adhesive) (not illustrated)	P25344-001

Miscellaneous parts

To identify the miscellaneous parts, use this table.

Table 3-3 Miscellaneous part descriptions and part numbers

Component	Spare part number
AC adapter	
280 W (PFC, 3 prong, 7.4 mm, slim)	M52952-001
120 W (PFC, 4.5 mm)	M95377-001

Table 3-3 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
120 W HP Smart adapter (PFC, 7.4 mm, slim)	L89695-001
65 W (nPFC, USB-C®, 1.8 m [6.0 ft])	L67440-001
65 W AC adapter (nPFC, USB Type-C, 1.8 m [6.6 ft], halogen free)	N90678-001
65 W AC adapter (USB Type-C)	N05175-001
Adapter	
HP HDMI-to-VGA adapter	701943-001
HP HDMI-to-VGA adapter (TAA)	N25154-001
HP USB-C-to-RJ45 adapter	M95985-001
HP USB-C-to-VGA adapter	831751-001
USB-C-to-DisplayPort G2 adapter and cable	N81436-001
USB-C-to-USB A adapter	L65254-001
DisplayPort-to-DVI adapter	753744-001
USB-C-to-USB-A adapter (TAA)	N22602-001
USB-C-to-RJ-45 adapter hub	916838-001
HP 17.3 Inch Business Laptop Backpack	M55004-001
HP Business 17.3 Laptop Case	M55005-001
HP Business 14.1 Laptop Case	M55007-001
HP Business 14.1 Laptop Sleeve	M55008-001
HP 16 Inch Executive Laptop Bag	M19980-001
HP Everyday 16 Laptop Bag	P04345-001
HP Everyday 16 Laptop Backpack	P04346-001
HP Executive 16 Laptop Backpack	N19979-001
HP Prelude Pro 15.6 Top Load Case	M03618-001
HP Prelude Pro 15.6 Backpack	M03617-001
HP Prelude 15.6 Backpack	M16116-001
HP Prelude 15.6 Top Load Case	M16117-001
Bracket Kit (includes fingerprint reader bracket and smart card bracket)	P33245-001
Cable Kit (includes ambient light sensor cable, fingerprint reader cable, nano SIM cable, touchpad cable, WWAN module cable, I/O board cable, audio cable, NFC cable, card reader cable, and display bezel and panel adhesive)	P33244-001
Misc Parts Kit (includes memory shield and thermal pad, fingerprint reader conductive tape, WLAN protective tape, WWAN module gasket and foil, WLAN module protective tape, camera privacy cover rubber, and display bezel and panel adhesive)	P33250-001
Cable	
HP Thunderbolt 4 280 W cable	M88059-001
HP Thunderbolt 4 120 W cable	M88058-001

Table 3-3 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
USB Type-A male-to-USB Type-C male cable (1.0 m [3.3 ft])	L65253-001
Docking stations	
HP Thunderbolt G4 280 W dock (with WLAN)	M97106-001
HP Thunderbolt G4 280 W dock (without WLAN) (TAA)	N17491-001
HP Thunderbolt G4 120 W dock (with WLAN)	M97105-001
HP Thunderbolt G4 120 W dock (without WLAN) (TAA)	N17490-001
HP Thunderbolt 120 W dock (includes cable)	L15809-001
HP USB Type-C dock (includes cable)	N64086-001
HP Thunderbolt 4 100 W G6 Dock (with WLAN)	P34015-001
HP Thunderbolt 4 100 W G6 Dock (without WLAN) (TAA)	P34016-001
HP Thunderbolt 4 180 W G6 Dock (with WLAN)	P34009-001
HP Thunderbolt 4 180 W G6 Dock (without WLAN) (TAA)	P34010-001
HP Thunderbolt 4 280 W G6 Dock (with WLAN)	P34012-001
Bottom case for use with G6 docking station	P34055-001
Top cover for use with G6 docking station	P34054-001
Cable Kit (100 W/180 W) for use with G6 docking station	P34060-001
Cable Kit (280 W) for use with G6 docking station	P34061-001
PCA board for use with G6 docking station (models with WLAN)	P34056-001
PCA board for use with G6 docking station (models without WLAN)	P34057-001
Power button for use with G6 docking station	P34106-001
Fan for use with 100 W G6 docking station	P34059-001
Fan for use with 180 W/280 W G6 docking station	P34058-001
Screw Kit for use with G6 docking station	P34017-001
Screw Kit for use with G4 docking station	L64089-001
Bottom cover for use with G4 docking station	L65256-001
HP USB External DVD+-RW Drive	747080-001
Duckhead adapter (for use in Japan)	L33157-001
Hub	
USB Type-C G3, multiport, travel hub	N60372-001
HP USB Type-C universal multiport hub	M96882-001
HP nano lock	918431-001
Mouse	
HP 235 3 button wireless mouse	M86086-001
HP 435 wireless mouse	M62277-001

Table 3-3 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
USB mouse	L95713-001
HP 125 Laser Wired Mouse	M27884-001
HP 510/515 Rechargeable Mouse	N86885-001
External keyboard	P21347-001
HP 320 Wired Keyboard	P24877-001
HP 125 G2 Wired Keyboard	
Plastics/Rubber Kit (includes battery latches, card reader blank, fingerprint reader blank, I/O holder, nano SIM card blank, SSD support frame)	N99999-001
Power cord (C5, 1.0 m [3.3 ft], conventional with sticker):	
For use in Argentina	L19357-001
For use in Australia	L19358-001
For use in Brazil	L19359-001
For use in Denmark	L19360-001
For use in Europe	L19361-001
For use in India	L19363-001
For use in Israel	L19362-001
For use in Italy	L19364-001
For use in Japan	L19365-001
For use in North America	L19367-001
For use in the People's Republic of China	L19368-001
For use in South Africa	L19369-001
For use in South Korea	L19366-001
For use in Switzerland	L19370-001
For use in Taiwan	L19372-001
For use in Thailand	L19371-001
For use in Thailand (bundle)	M85418-001
For use in the United Kingdom	L19373-001
Power cord (C5, 1.0 m [3.3 ft], conventional with sticker, HF):	
For use in Denmark	M79264-001
For use in Europe	M79266-001
For use in Switzerland	M79265-001
For use in the United Kingdom	M82711-001
Power cord (C5, 1.0 m [3.3 ft], premium with tag):	
For use in Australia	N24670-001
For use in Denmark	N24672-001

Table 3-3 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
For use in Europe	N24669-001
For use in India	N24679-001
For use in Israel	N24678-001
For use in Japan	N24680-001
For use in North America	N24671-001
For use in the People's Republic of China	N24676-001
For use in South Africa	N24674-001
For use in South Korea	N24675-001
For use in Switzerland	N24673-001
For use in Taiwan	N24677-001
For use in Thailand (bundle)	M85421-001
For use in the United Kingdom	N24668-001
Power cord (C5, 1.8 m [6.0 ft], conventional with sticker):	
For use in Argentina	L19357-002
For use in Australia	L19358-002
For use in Denmark	L19360-002
For use in Europe	L19361-002
For use in India	L19363-002
For use in Israel	L19362-002
For use in Italy	L19364-002
For use in Japan	L19365-002
For use in North America	L19367-002
For use in the People's Republic of China	L19368-002
For use in South Africa	L19369-002
For use in South Korea	L19366-002
For use in Switzerland	L19370-002
For use in Taiwan	L19372-002
For use in Thailand	L19371-002
For use in the United Kingdom	L19373-002
Power cord (C13, 1.0 m [3.3 ft], premium with tag)	
For use in Argentina	L32029-001
For use in Brazil	L32030-001
For use in Italy	L32031-001
Power cord (C13, 1.0 m [3.3 ft], premium with tag LW)	

Table 3-3 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
For use in Australia	N24670-001
For use in Denmark	N24672-001
For use in Europe	N24669-001
For use in India	N24679-001
For use in Israel	N24678-001
For use in Japan	N24680-001
For use in North America	N24671-001
For use in the People's Republic of China	N24676-001
For use in South Africa	N24674-001
For use in South Korea	N24675-001
For use in Switzerland	N24673-001
For use in Taiwan	N24677-001
For use in Thailand (bundle)	M85413-001
For use in the United Kingdom	N24668-001
Screw Kit	P33251-001

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.


Tools required

You need the following tools to complete the removal and replacement procedures:

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.


 **NOTE:** As you remove each subassembly from the computer, place the subassembly and all accompanying screws away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors


Handle cables with extreme care to avoid damage.

 **IMPORTANT:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.

 **IMPORTANT:** Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:


- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation or Sleep mode, turn the computer on, and then shut it down through the operating system.

- Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
 - Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.
 - Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.
 - Avoid dropping drives from any height onto any surface.
 - After removing a hard drive or an optical drive, place it in a static-proof bag.
 - Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.
 - Avoid exposing a drive to temperature extremes or liquids.
 - If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package “FRAGILE.”
-

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.

 **IMPORTANT:** To prevent damage to the device when you remove or install internal components, observe these precautions:

- Keep components in their electrostatic-safe containers until you are ready to install them.
 - Before touching an electronic component, discharge static electricity by using the guidelines described in [Personal grounding methods and equipment on page 31](#).
 - Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
 - If you remove a component, place it in an electrostatic-safe container.
-


Generating static electricity

Follow these static electricity guidelines:

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	55% relative humidity	40% relative humidity	10% relative humidity
Walking across carpet	7,500 V	15,000 V	35,000 V
Walking across vinyl floor	3,000 V	5,000 V	12,000 V
Motions of bench worker	400 V	800 V	6,000 V
Removing dual in-line packages (DIPs) from plastic tube	400 V	700 V	2,000 V
Removing DIPs from vinyl tray	2,000 V	4,000 V	11,500 V
Removing DIPs from polystyrene foam	3,500 V	5,000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7,000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5,000 V	11,000 V	21,000 V

 **NOTE:** Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.

As little as 700 V of static electricity can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity.

The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components:

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.
- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snug against bare skin. Verify that the ground cord is connected and fits snugly into the banana plug connector on the grounding mat or workstation.
- You can use **heel straps, toe straps, and boot straps** at standing workstations. These straps are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Method	Voltage
Antistatic plastic	1,500
Carbon-loaded plastic	7,500
Metallized laminate	15,000

Grounding the work area

To prevent static damage at the work area, follow these precautions:

- Cover the work surface with approved static-dissipative material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- Avoid contact with pins, leads, or circuitry.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity:

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages
- Conductive plastic bags

- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

Cleaning your computer

Cleaning your computer regularly removes dirt and debris so that your device continues to operate at its best. Use the following information to safely clean the external surfaces of your computer.

Enabling HP Easy Clean (select products only)

HP Easy Clean helps you to avoid accidental input while you clean the computer surfaces. This software disables devices such as the keyboard, touch screen, and touchpad for a preset amount of time so that you can clean all computer surfaces.


1. Start HP Easy Clean in one of the following ways:
 - Select the **Start** menu, and then select **HP Easy Clean**.
 - Select the **HP Easy Clean** icon in the taskbar.
 - Select **Start**, and then select the **HP Easy Clean** tile.
2. Now that your device is disabled for a short period, see [Removing dirt and debris from your computer on page 33](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 34](#) for guidelines to help prevent the spread of harmful bacteria and viruses.

Removing dirt and debris from your computer


Here are the recommended steps to clean dirt and debris from your computer.

For computers with wood veneer, see [Caring for wood veneer \(select products only\) on page 35](#).

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.

 **CAUTION:** To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with water. The cloth should be moist, but not dripping wet.

 **IMPORTANT:** To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.



IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

See [Cleaning your computer with a disinfectant on page 34](#) for recommended steps to clean the high-touch, external surfaces on your computer to help prevent the spread of harmful bacteria and viruses.

Cleaning your computer with a disinfectant

The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria.

After cleaning the external surfaces of your computer using the steps in [Removing dirt and debris from your computer on page 33](#), [Caring for wood veneer \(select products only\) on page 35](#), or both, you might also choose to clean the surfaces with a disinfectant. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.

Follow these steps when disinfecting high-touch, external surfaces on your computer:

1. Wear disposable gloves made of latex (or nitrile gloves, if you are latex-sensitive) when cleaning the surfaces.
2. Turn off your device and unplug the power cord and other connected external devices. Remove any installed batteries from items such as wireless keyboards.



CAUTION: To prevent electric shock or damage to components, never clean a product while it is turned on or plugged in.

3. Moisten a microfiber cloth with a mixture of 70% isopropyl alcohol and 30% water. The cloth should be moist, but not dripping wet.



CAUTION: Do not use any of the following chemicals or any solutions that contain them, including spray-based surface cleaners: bleach, peroxides (including hydrogen peroxide), acetone, ammonia, ethyl alcohol, methylene chloride, or any petroleum-based materials, such as gasoline, paint thinner, benzene, or toluene.



IMPORTANT: To avoid damaging the surface, avoid abrasive cloths, towels, and paper towels.

4. Wipe the exterior of the product gently with the moistened cloth.



IMPORTANT: Keep liquids away from the product. Avoid getting moisture in any openings. If liquid makes its way inside your HP product, it can cause damage to the product. Do not spray liquids directly on the product. Do not use aerosol sprays, solvents, abrasives, or cleaners containing hydrogen peroxide or bleach that might damage the finish.

5. Start with the display (if applicable). Wipe carefully in one direction, and move from the top of the display to the bottom. Finish with any flexible cables, like power cord, keyboard cable, and USB cables.
6. Be sure that surfaces have completely air-dried before turning the device on after cleaning.
7. Discard the gloves after each cleaning. Clean your hands immediately after you remove the gloves.

Caring for wood veneer (select products only)

Your product might feature high-quality wood veneer. As with all natural wood products, proper care is important for best results over the life of the product. Because of the nature of natural wood, you might see unique variations in the grain pattern or subtle variations in color, which are normal.

- Clean the wood with a dry, static-free microfiber cloth or chamois.
- Avoid cleaning products containing substances such as ammonia, methylene chloride, acetone, turpentine, or other petroleum-based solvents.
- Do not expose the wood to sun or moisture for long periods of time.
- If the wood becomes wet, dry it by dabbing with an absorbent, lint-free cloth.
- Avoid contact with any substance that might dye or discolor the wood.
- Avoid contact with sharp objects or rough surfaces that might scratch the wood.

See [Removing dirt and debris from your computer on page 33](#) for the recommended steps to clean the high-touch, external surfaces on your computer. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. See [Cleaning your computer with a disinfectant on page 34](#) for sanitizing guidelines to help prevent the spread of harmful bacteria and viruses.

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Accessing support information

To find the HP support that you need, use this information.

Table 4-3 Support information locations



Service consideration	Path to access information
<p>Records of reported failure incidents stored on the computer</p>	<p>Windows®:</p> <p>Preoperating system failures are logged in the BIOS Event Log. To view the BIOS Event Log:</p> <ol style="list-style-type: none"> 1. Press the power button. 2. Immediately and repeatedly press esc when the power button light turns white. <p>NOTE: If you do not press esc at the appropriate time, you must restart the computer and again repeatedly press esc when the power button light turns white to access the utility.</p> <ol style="list-style-type: none"> 3. Press f10 to enter the BIOS setup. 4. Complete one of these tasks: <ul style="list-style-type: none"> • (On commercial products) Under the Main tab, select BIOS event log, and then select View BIOS Event Log. • (On consumer products) Under the Main tab, select System Log. <p>Post-operating system failures are logged in the Event Viewer.</p> <ol style="list-style-type: none"> 1. Turn on the computer and allow the operating system to open. 2. Select the search icon  in the taskbar. 3. Type <code>Event Viewer</code>, and then press enter. 4. Select the log from the left panel. Details display in the right panel. <p>Chrome™:</p> <ol style="list-style-type: none"> 1. Go to support.google.com/chrome. 2. Search <code>collect Chrome device logs</code>.
<p>Technical bulletins</p>	<p>To locate technical bulletins:</p> <ol style="list-style-type: none"> 1. Go to www.hp.com. 2. Place the cursor over Problem solving to display more options. 3. Select Support & Troubleshooting. 4. Type the serial number, product number, or product name to go to the product support page. 5. Select Advisories to view technical bulletins.
<p>Repair professionals</p>	<p>To locate repair professionals:</p> <ol style="list-style-type: none"> 1. Go to www.hp.com. 2. Place the cursor over Support resources to display more options. 3. Select Authorized service providers.


Table 4-3 Support information locations (continued)

Service consideration	Path to access information
Component and diagnosis information, failure detection, and required action	To locate diagnosis information and actions: <ol style="list-style-type: none"><li data-bbox="703 310 1203 336">1. Go to http://www.hp.com/go/techcenter/pcdiags.<li data-bbox="703 361 938 386">2. Select Get Support.<li data-bbox="703 411 1445 457">3. Near the bottom of the window, select Notebook PCs, and then select your location.

5 Removal and replacement procedures for Customer Self-Repair parts


This chapter provides removal and replacement procedures for Customer Self-Repair parts.


 **NOTE:** The Customer Self-Repair program is not available in all locations. Installing a part that is not supported by the Customer Self-Repair program can void your warranty. Check your warranty to determine whether Customer Self-Repair is supported in your location.

 **NOTE:** The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

Component replacement procedures

To remove and replace computer components, use these procedures.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To remove and replace computer components, use these procedures:

For initial safety procedures, see [Removal and replacement procedures preliminary requirements on page 29](#).

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation or Sleep mode, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

To remove the bottom cover, use this procedure and illustration.


Table 5-1 Bottom cover descriptions and part numbers

Description	Spare part number
Metal	N96240-001
Plastic	N96239-001


Before removing the bottom cover, prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).

Remove the bottom cover:

1. Close the computer and rest it upside down on a flat work surface with the front toward you.
2. Loosen the five Phillips captive screws that secure the bottom cover to the computer.

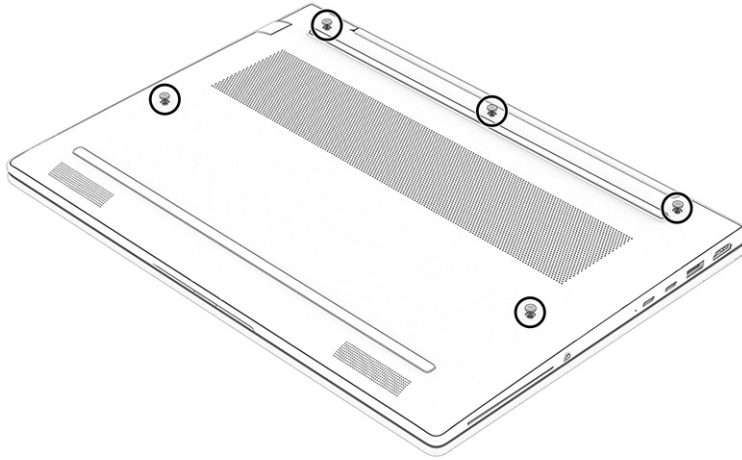

3. Use a plastic, thin tool (1) to separate the rear edge of the bottom cover from the computer.
4. Swing the rear edge of the bottom cover (2) up and forward until it releases from the computer, and then remove the bottom cover (3).

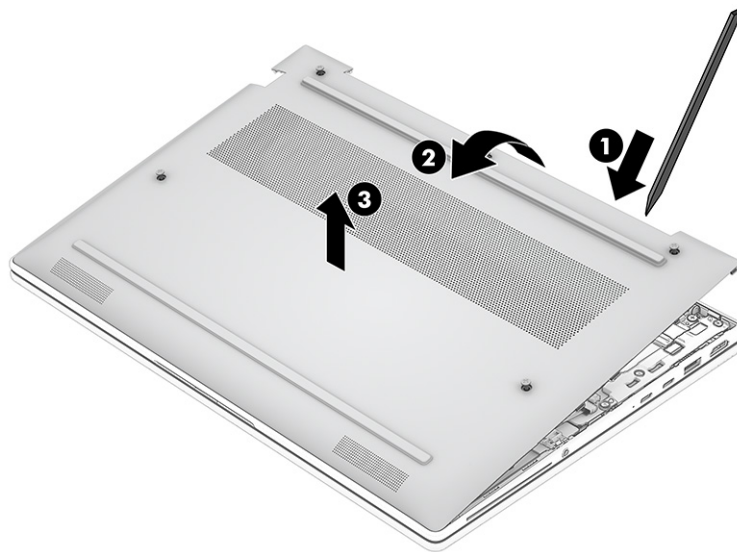

To replace the bottom cover, reverse the removal procedures.

When replacing the bottom cover:






- Remove the Feature Byte label from the inside of the old bottom cover and place it on the inside of the new bottom cover.

- Remove the service tag label from the inside of the old bottom cover and place it on the outside of the new bottom cover.

Be sure to keep these labels with the computer, as the label is required for any future repairs.

Service tag and Feature Byte labels


NOTE: Label appearance might vary.

 HP Long Model Name ProdID AA123AV S/N# CNJ1234567 Warranty 1y1ydy	← Service Tag label →	 HP Fortis Flip G11 11 ProdID BFPQ4ESABIN S/N# SC050480R Warranty 1y1ydy
Build ID: XXXXXXXXXXXXX21BYTES Build  Feature Byte: XXXXXXXXXXXX1112222AAAAAAAAAXX XXXXXXXXXXXX1112222AAAAAAAAAXX XXXXXXXXXXXX1112222AAAAAAAAAXX XXXXXXXXXXXX1112222AAAAAAAAAXX  Keyboard Type:	← Feature Byte label →	Feature Byte: 67A8R7B7M7R7W7m4A8aDapqaa6V9W eMAKfgu8mEmVn7mVngpDpLprpqrNkxZ.Ti  Keyboard Type:0 Host Based Mac Address: See Label on System Board


New bottom cover label locations

Inside of bottom cover (place Feature Byte label here)

NOTE: Bottom cover appearance might vary.

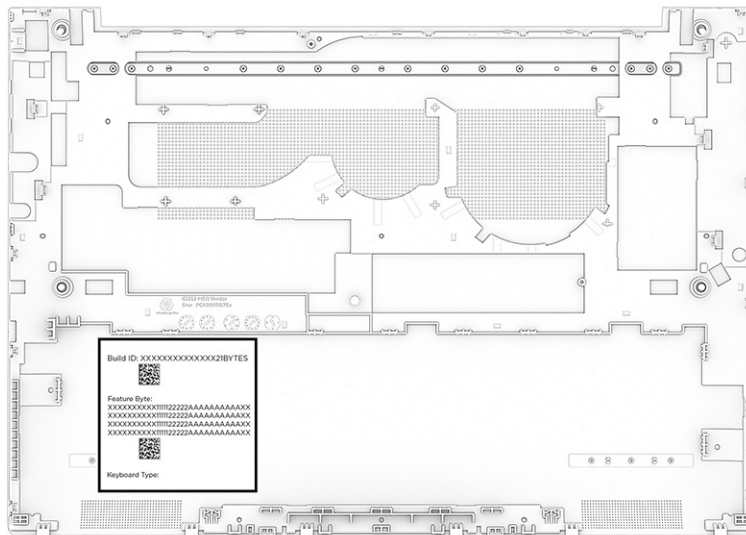

Outside of bottom cover (place service tag label here)

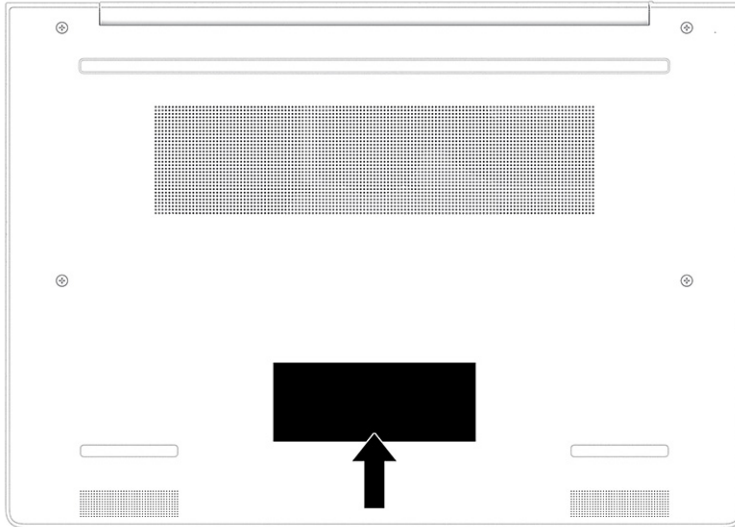

Battery

The battery removal procedure differs depending on whether you are removing and replacing the existing battery or installing a new battery. To install a new battery, you must use a revive kit.

- To remove and replace the existing battery, see [Battery on page 41](#).
- To install a new battery, see [Installing a new battery on page 43](#).

Removing and reinstalling the same battery

To remove the battery and reinstall it, use this procedure and illustration.

⚠ WARNING! To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
 - Do *not* cause an external puncture or rupture to the battery, which can cause a short inside the battery that can result in battery thermal runaway.
 - Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
 - Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
 - Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.
-

For additional battery information, see the *Regulatory, Safety, and Environmental Notices*. To access this guide, select the **Search** icon in the taskbar, type `HP Documentation` in the search box, and then select **HP Documentation**.

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).


2. Remove the bottom cover (see [Bottom cover on page 38](#)).

⚠ WARNING! To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

📄 IMPORTANT: Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

Remove the battery:


1. Disconnect the battery cable (1) from the system board.
2. Slide the battery latches (2) toward the front of the computer.
3. Remove the battery (3) from the computer.

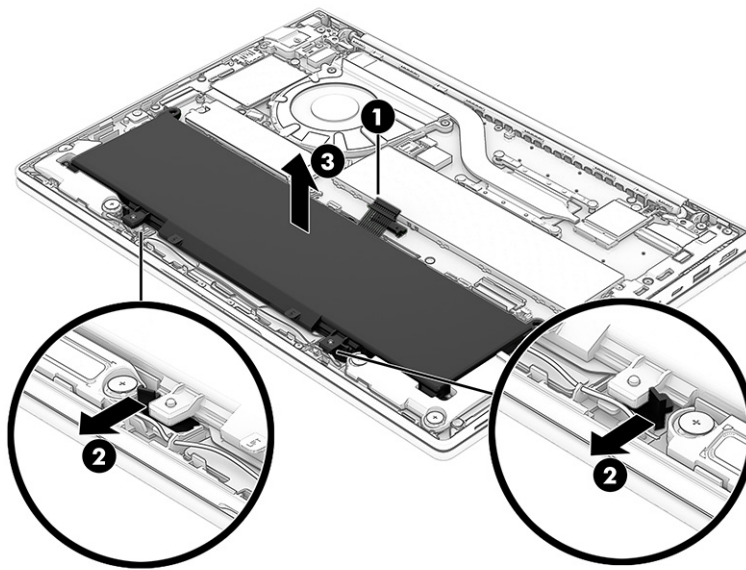


4. To remove the battery latches, rotate the latches (1), and then use a tool to release the latches (2) from the computer.


It is not necessary to remove the battery latches during normal battery replacement. Only replace the latches if they are missing or broken.

The battery latches are included in the Plastics/Rubber Kit, spare part number N99999-001.

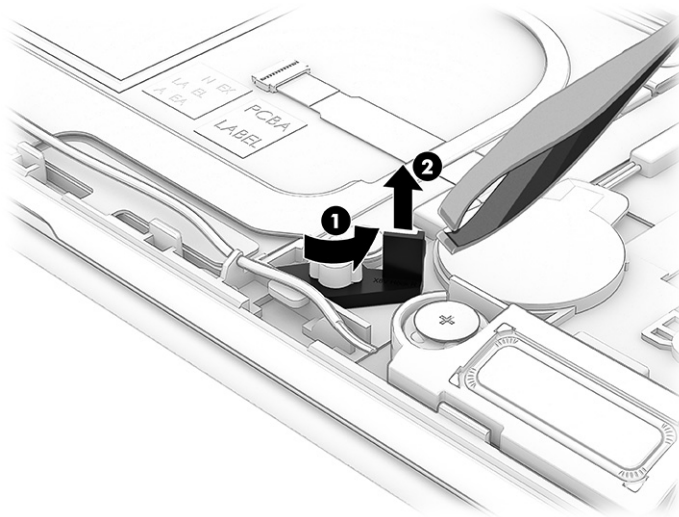

To reinstall the battery, reverse the removal procedures.

 **NOTE:** When replacing the battery, be sure to align the battery on the pins and then lock the latches.

 **NOTE:** When replacing the battery or reconnecting the battery cable, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

Installing a new battery


To install a battery, use these procedures and illustrations. You must use a revive kit to remove the old battery and install a new one. The revive kit includes an empty containment tray and a containment tray with a battery preinstalled.

Table 5-2 Battery descriptions and part numbers

Description	Spare part number
3 cell, 56 Whr	N70706-001
3 cell, 48 Whr	N70705-001

Before starting this replacement procedure:


- Ensure other individuals are sufficiently clear of your workspace.
- Ensure your workspace is clear of any flammable material such as paper or oils.
- Locate the nearest ABC dry chemical fire-extinguisher for use in an emergency.

 **WARNING!** This procedure requires removing the battery or disconnecting the battery cable. Use care to avoid bending, twisting, or puncturing the battery regardless of its condition. Failure to follow this replacement guide or to use HP recommended tools might damage the system and/or cause a safety hazard.

- Do *not* remove the battery from the containment tray.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.


- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.


Should a part become stuck or difficult to remove when opening a unit where a swollen battery is suspected, or if the battery becomes stuck in the unit, stop, and contact HP Support for assistance. Do not try to remove a battery by force.

 **NOTE:** Latch locations and internal components might vary.


Before removing the battery, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).

 **WARNING!** To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

 **IMPORTANT:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.


1. Remove the battery using the revive kit:
 - a. Disconnect the battery cable from the system board. The connector location might vary.

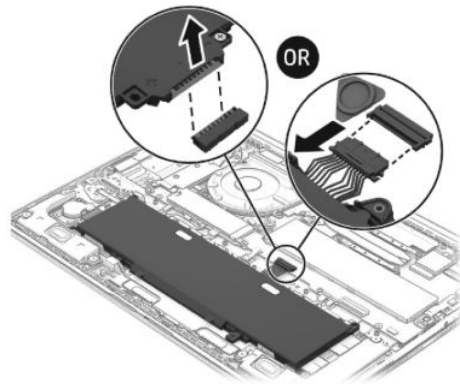


- b. Open the empty battery containment tray.




- c. Remove the paper backing layer from the adhesive on the tray.

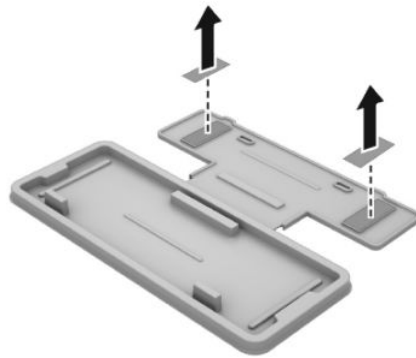


- d. Turn the tray (1) over so that the adhesive is facing down.
e. Place the tray (2) centered on the battery.
f. Press down on the indentations on the tray (3) to adhere it to the battery.

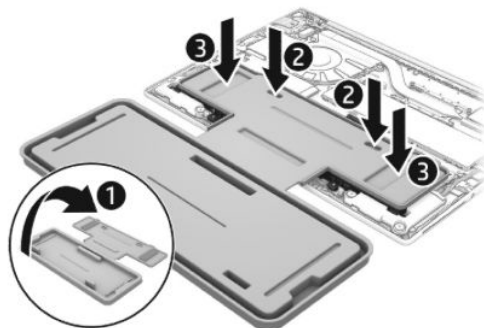


- g. Rotate to unlock the latches **(1)** that secure the battery to the computer. Number of latches and latch locations might vary.
- h. Lift the top of the tray **(2)** to remove the battery from the computer.

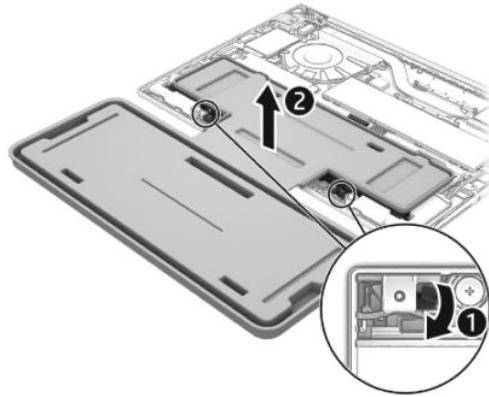


- i. Rotate the battery up and over into the cavity of the containment tray.

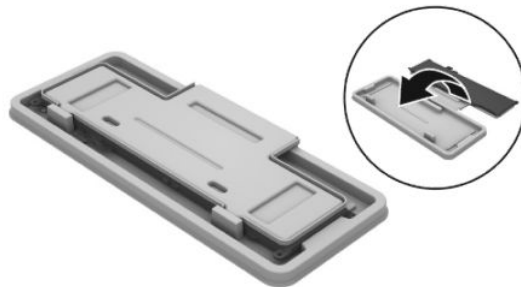


 **NOTE:** Please recycle responsibly. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

- 2. Install the battery using the revive kit:
 - a. Open the containment tray that includes the new battery.


- b. Turn the tray (1) over so the battery is facing downward, and then insert the battery (2) into the computer. Adhesive secures the battery to the tray.

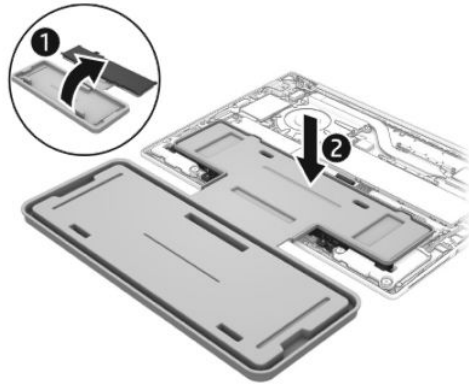


- c. Rotate to lock the latches (1) to secure the battery. Number of latches and latch locations might vary.
- d. Lift the containment tray (2) off the battery.

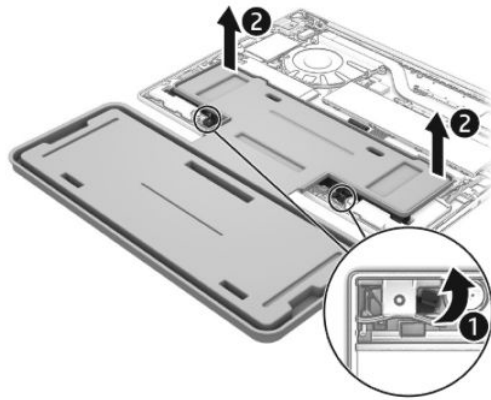

- e. Connect the battery cable to the system board. The connector location might vary.

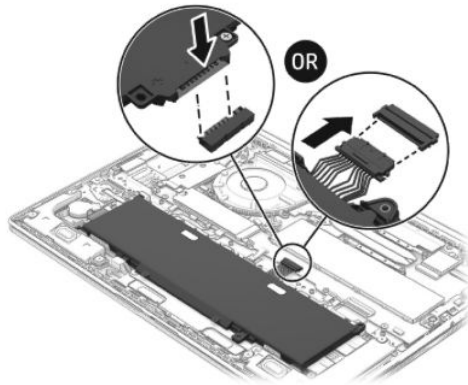

 **NOTE:** When replacing the battery, be sure to completely reassemble the computer and plug in the AC adapter before turning the computer on.

Solid-state drive

To remove the solid-state drive (SSD), use these procedures and illustrations.

Table 5-3 SSD descriptions and part numbers


Description	Spare part number
2 TB, TLC, nM	N77396-001
1 TB, TLC, NMIC	N22908-001
1 TB, TLC, nM	N77395-001
1 TB, TLC, self-encrypting drive (SED,) NMIC	N24954-001
1 TB, TLC, SED, nM	N86919-001
512 GB, NMIC	N44321-001
512 GB, TLC, nM	N77393-001
512 GB, nM	N77392-001
512 GB, TLC, SED, nM	N86921-001
256 GB, nM	N77391-001
256 GB, SED	N35225-001
SSD shield (included in the SSD Support Parts Kit)	P37723-001

Before removing the SSD, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 41](#)).


Remove the SSD:

1. Remove the Phillips M2.0 × 2.5 screw (1) and the Phillips M2.0 × 4.0 screw (2) that secure the SSD shield to the computer.
2. Remove the SSD shield (3).
3. Remove the SSD (4) by pulling the drive away from the slot at an angle.

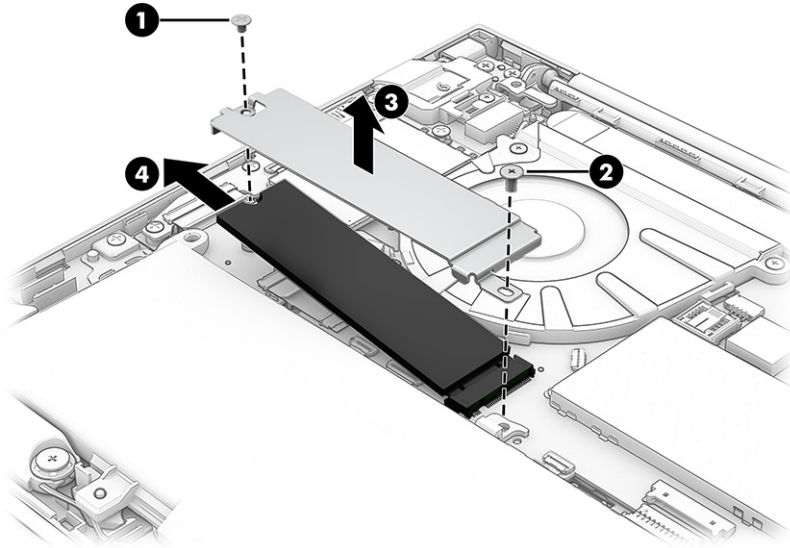


4. Be sure a thermal pad is installed on the SSD shield before installing a new SSD.

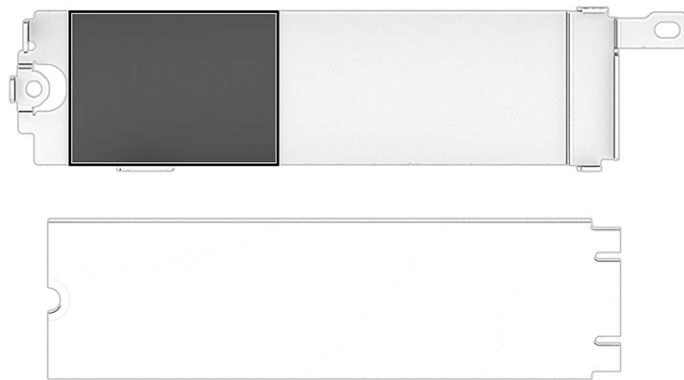


 **NOTE:** You do not need to remove the SSD screw hole bracket when replacing an SSD. However, if the bracket comes loose, use the following steps to completely remove and replace it.


5. Pull the bracket straight up and off the system board.

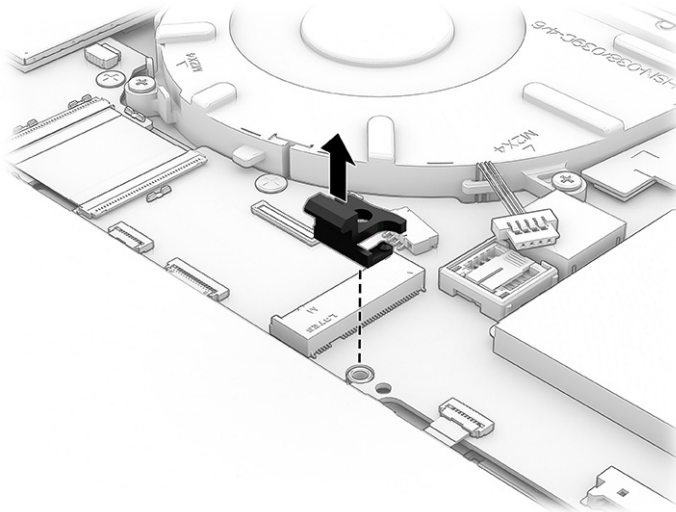

6. To install the SSD screw hole bracket, insert the bracket onto the system board at the orientation shown in the following illustration.

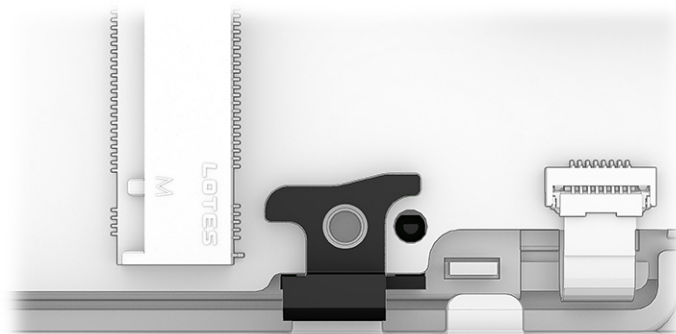

To replace the SSD, reverse the removal procedures.

 **NOTE:** The SSD is designed with a notch to prevent incorrect insertion.

WWAN module

To remove the WWAN module, use this procedure and illustration.

Table 5-4 WWAN module descriptions and part numbers

Description	Spare part number
HP 4G CAT16	P08117-005
Qualcomm 9205 LTE-M (CAT-M1 fSVC)	P11676-005

Table 5-4 WWAN module descriptions and part numbers (continued)

Description	Spare part number
WWAN module antenna protector (included in the Miscellaneous Kit)	P33250-001

IMPORTANT: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WWAN module, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 41](#)).

Remove the WWAN module:


1. Remove the protector **(1)** that secures the WWAN antenna cables to the WWAN module.
2. Carefully disconnect the WWAN antenna cables **(2)** from the terminals on the WWAN module.

The #5 WWAN antenna cable connects to the WWAN module #5 Main terminal. The #6 WWAN antenna cable connects to the WWAN module #6 Aux terminal.


3. Remove the Phillips M2.0 × 2.9 screw **(3)** that secures the WWAN module to the system board.
4. Remove the WWAN module **(4)** by pulling the module away from the slot at an angle.

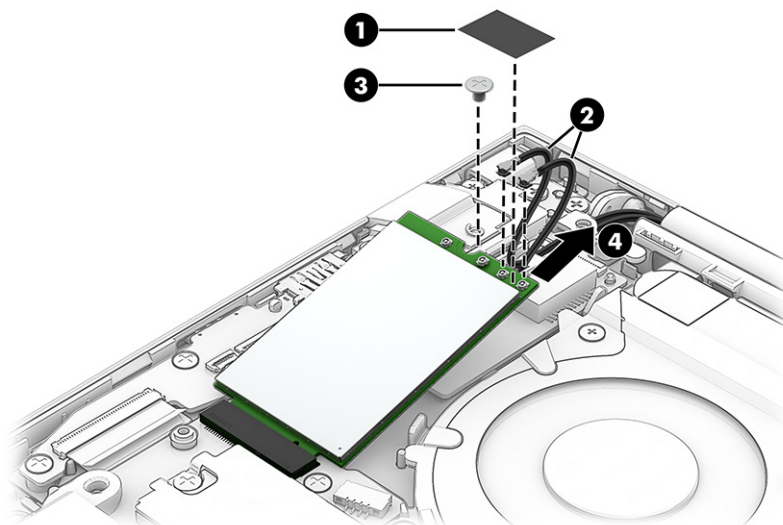

5. If the WWAN antenna is not connected to the terminal on the WWAN module, install a protective sleeve on the antenna connector, as shown in the following illustration.

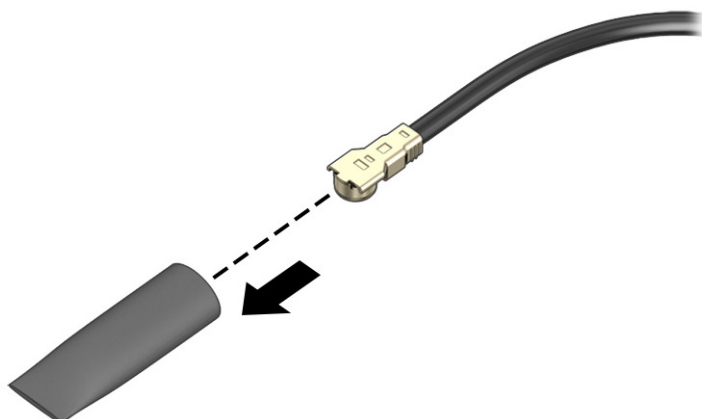

To replace the WWAN module, reverse the removal procedures.

 **NOTE:** The WWAN module is designed with a notch to prevent incorrect insertion.

Memory modules

To remove the memory modules, use this procedure and illustration.

Table 5-5 Memory module descriptions and part numbers


Description	Spare part number
32 GB, nM	N77400-001
32 GB, NMIC	N97399-001
16 GB, nM	N77399-001
16 GB, NMIC	N93773-001
12 GB, nM	P33447-001
12 GB, NMIC	P37784-001
8 GN, nM	N77398-001
Memory module thermal pad (included in the Miscellaneous Kit)	P33250-001
Memory module shield (included in the Miscellaneous Kit)	P33250-001


Before removing the memory, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 41](#)).

If you are replacing a memory module, remove the existing memory module:


1. Remove the memory module shield (1).


 **IMPORTANT:** When replacing the memory module shield, be sure to insert the edges of the shield into the clips (2) that are built into the system board.

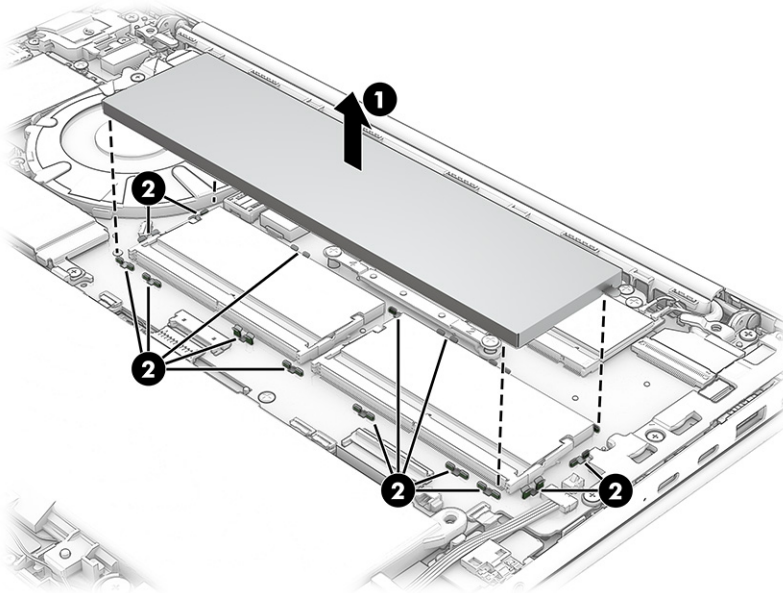

To protect a memory module after removal, place it in an electrostatic-safe container.

2. Spread the two retention clips outward (1) until the memory module tilts up at a 45° angle, and then remove the module (2). Use the same procedure to remove all memory modules.


 **IMPORTANT:** To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

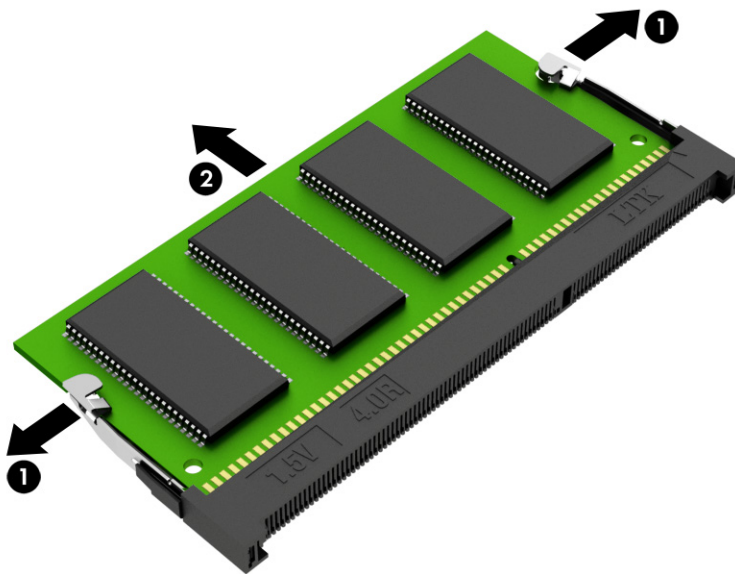

To protect a memory module after removal, place it in an electrostatic-safe container.

To install a memory module:

1. Align the notched edge of the module with the tab in the slot (1), and then press the module into the slot at an angle until it is seated (2).
2. Press down on the module until the side retention clips snap into place (3).

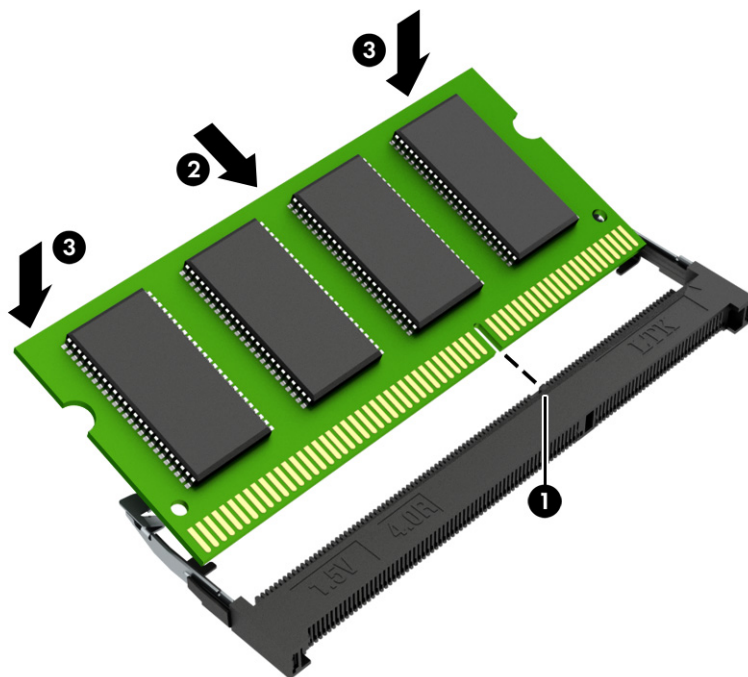

WLAN module

To remove the WLAN module, use this procedure and illustration.

Table 5-6 WLAN module descriptions and part numbers

Description	Spare part number
Intel AX211 Wi-Fi 6E Bluetooth 5.3 WW WLAN (vPro)	M53363-005
Intel AX211 Wi-Fi 6E Bluetooth 5.3 WW WLAN (non-vPro)	M53366-005
Intel BE201 Wi-Fi 7 Bluetooth 5.4 WW WLAN (vPro)	N86465-005
Intel BE201 Wi-Fi 7 Bluetooth 5.4 WW WLAN (non-vPro)	N86466-005
Antenna protector (available in the Miscellaneous Kit)	P33250-001

IMPORTANT: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 41](#)).

Remove the WLAN module:


1. Remove the antenna protector (1) that secures the WLAN antenna cables to the WLAN module.
2. Carefully disconnect the WLAN antenna cables (2) from the terminals on the WLAN module.

Computer models have either one or two WLAN antennas. On models with two antennas, the #1 WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 WLAN antenna cable connects to the WLAN module #2 Aux terminal.


3. Remove the Phillips M2.0 × 2.9 screw (3) that secures the WLAN module to the system board.
4. Lift the edge of the WLAN module (4) up until it rests at an angle.
5. Remove the WLAN module (5) by pulling the module away from the slot at an angle.

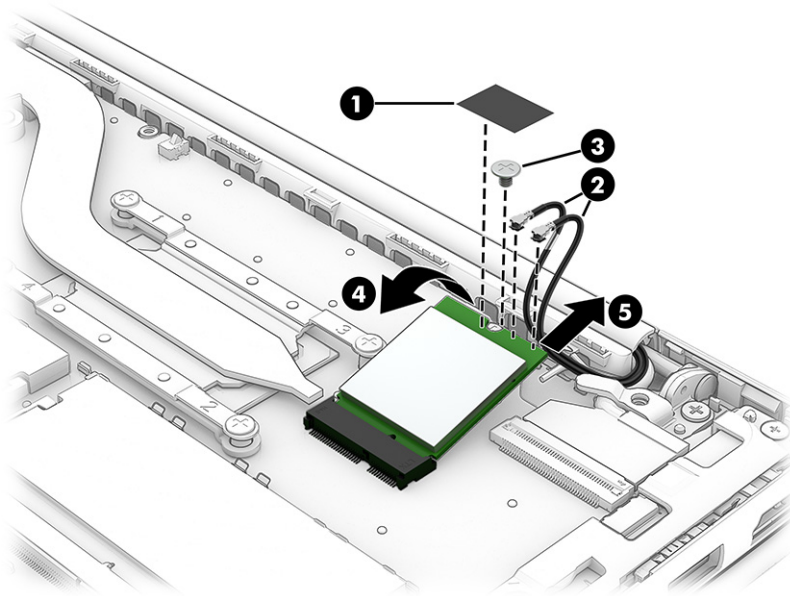

6. If the WLAN antenna is not connected to the terminal on the WLAN module, install a protective sleeve on the antenna connector, as shown in the following illustration.

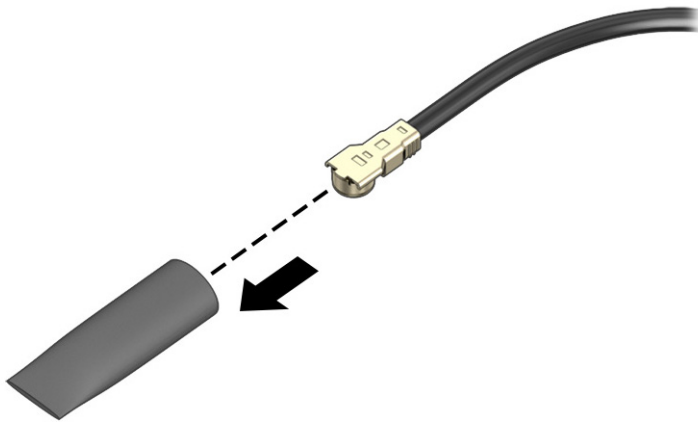



To replace the WLAN module, reverse the removal procedures.


 **NOTE:** The WLAN module is designed with a notch to prevent incorrect insertion.

6 Removal and replacement procedures for authorized service provider parts

This chapter provides removal and replacement procedures for authorized service provider parts.


 **IMPORTANT:** Only an authorized service provider should access the components described in this chapter. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

 **NOTE:** The [HP Support YouTube Channel](#) (in English) has videos that provide step-by-step removal and replacement instructions for many common parts and models.

Component replacement procedures

To remove and replace computer components, use the procedures described in this section.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <https://partsurfer.hp.com/>, select your country or region, and then follow the on-screen instructions.

Make special note of each screw size and location during removal and replacement.

Speakers

To remove the speakers, use this procedure and illustration.

Table 6-1 Speakers description and part number

Description	Spare part number
Speakers (include left and right speakers, cables, and four rubber isolators)	N96243-001


Before removing the speakers, follow these steps:


1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 41](#)).

Remove the speakers:

1. Disconnect the speaker cable **(1)** from the system board.
2. Release the speaker cable **(2)** from the retention clip above the right speaker.
3. Release the speaker cable **(3)** from the retention clips below the touchpad.
4. Remove the four Phillips M2.0 × 2.5 broadhead screws **(4)** that secure the speakers to the computer.

5. Remove the speakers (5) from the computer.

 **NOTE:** When removing the speakers, make note of the location of the rubber isolator locations (6). The absence of or damage to these isolators can result in degraded speaker performance.

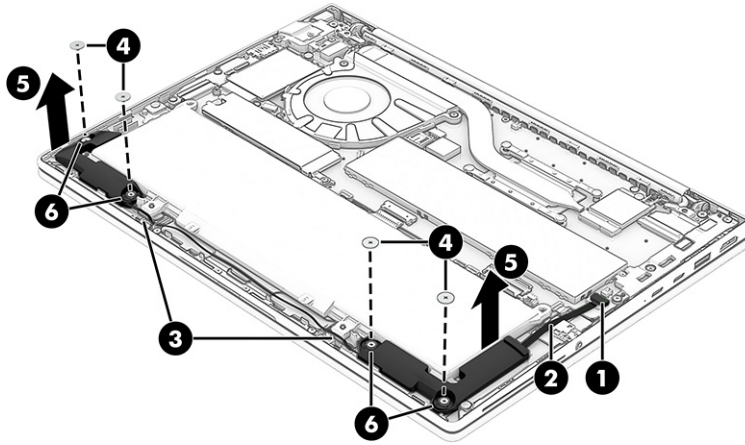

To replace the speakers, reverse the removal procedures.

Fan

To remove the fan, use these procedures and illustrations.

Table 6-2 Fan description and part number

Description	Spare part number
Fan (includes cable)	N96235-001


Before removing the fan, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 41](#)).

Remove the fan:

1. Release the display tuner cable from the retention clips (1) that are built into the fan.
2. Disconnect the fan cable (2) from the system board.
3. Remove the three Phillips M2.0 × 4.6 screws (3) that secure the fan to the system board.

- Remove the fan **(4)** from the system board.

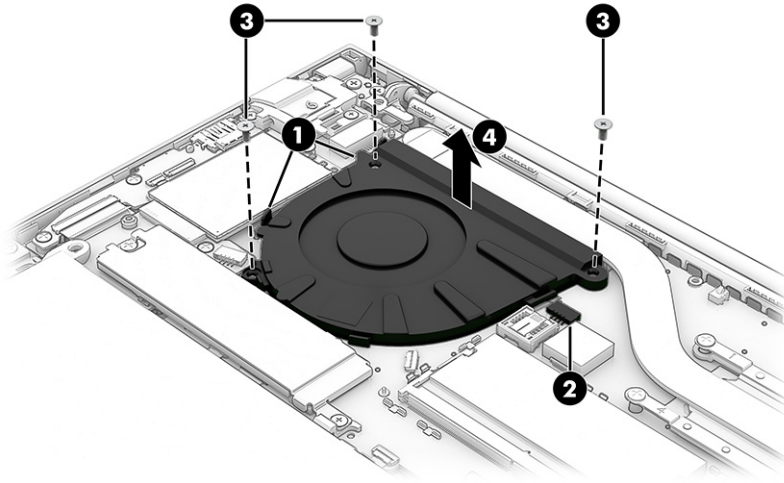

To replace the fan, reverse the removal procedures.

I/O board

To remove the I/O board, use this procedure and illustration.

Table 6-3 I/O board descriptions and part numbers

Description	Spare part number
I/O board (includes nano SIM slot, RJ-45 jack, and USB port)	
For use in vPro models with WWAN	N96226-001
For use in non-vPro models with WWAN	N96228-001
For use in vPro models without WWAN	N96227-001
For use in non-vPro models without WWAN	N96229-001
I/O board cables	P33244-001
RJ-45 jack cover	N96241-001


Before removing the I/O board, follow these steps:

- Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
- Remove the bottom cover (see [Bottom cover on page 38](#)).
- Disconnect the battery cable from the system board (see [Battery on page 41](#)).

Remove the I/O board:

- Release the WWAN antenna cables and the display tuner cable from the retention clip **(1)** that is built into the RJ-45 jack cover.
- Disconnect the thin cable **(2)** and thick cable **(3)** from the ZIF connectors on the I/O board.
- Remove the three Phillips M2.0 × 4.6 screws **(4)** and the two Phillips M2.0 × 2.4 screws **(5)** that secure the I/O board and RJ-45 jack cover to the computer.

4. Remove the RJ-45 jack cover **(6)** from the computer.
5. Lift the back inside of the board **(7)** up, and then pull it **(8)** up and into the computer to remove it from the computer.

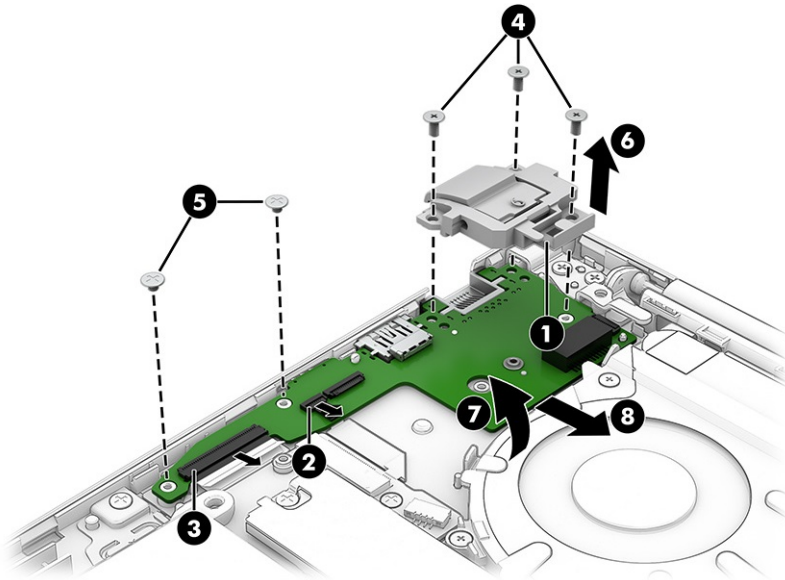

To replace the I/O board, reverse the removal procedures.

Display assembly

To remove and disassemble the display assembly, use these procedures and illustrations.

The display assembly is available only at the subcomponent level. Subcomponent level spare part information is available in the subcomponent level disassembly subsection.

Before removing the display assembly, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Disconnect the battery cable from the system board (see [Battery on page 41](#)).


Remove the display assembly:

1. Remove the antenna protector **(1)** from the WWAN module.

The WWAN protector is included in the Miscellaneous Kit, spare part number P33250-001.
2. Carefully disconnect the WWAN antenna cables **(2)** from the terminals on the WWAN module.

The #5 WWAN antenna cable connects to the WWAN module #5 Main terminal. The #6 WWAN antenna cable connects to the WWAN module #6 Aux terminal.
3. Disconnect the display hub cable **(3)** from the WWAN connector board.

4. Release the cables from the retention clips (4).

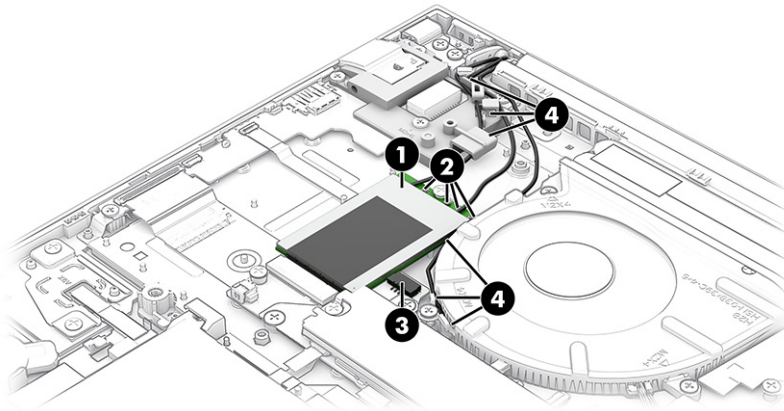

5. Remove the WLAN antenna protector (1) from the WLAN module.


The WLAN antenna protector is included in the Miscellaneous Kit, spare part number P33250-001.

6. Carefully disconnect the WLAN antenna cables (2) from the terminals on the WLAN module.


The #1 WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 WLAN antenna cable connects to the WLAN module #2 Aux terminal.

7. Disconnect the display cable (3) from the system board ZIF connector.


8. Release the cables from the retention clips (4) that are built into the computer.

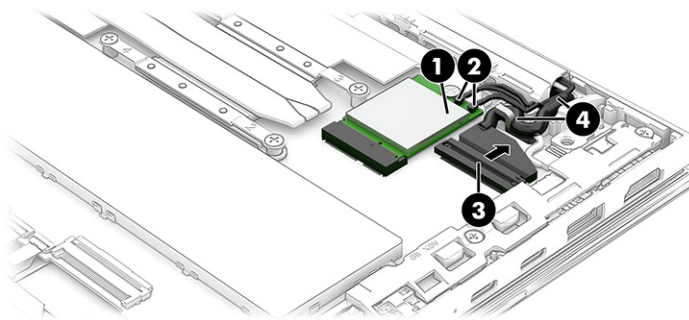

9. Remove the five Phillips M2.5 × 4.0 screws that secure the display assembly to the computer.

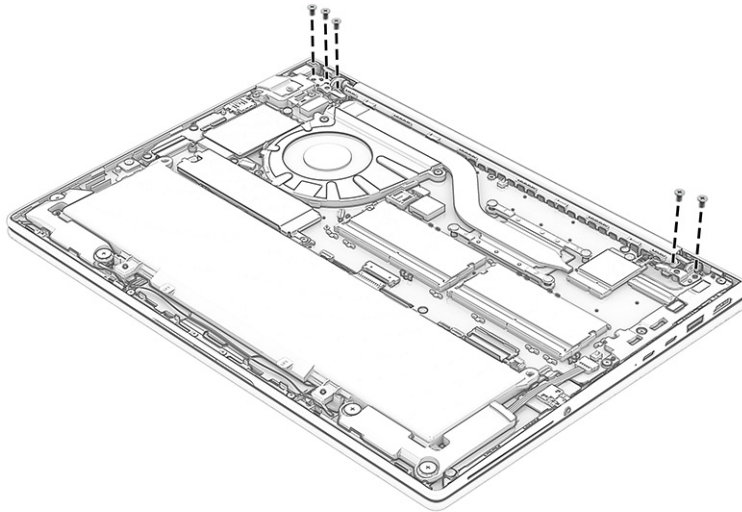

10. Swing the top edge of the display assembly (1) down and away from the computer until it rests at a 90-degree angle.
11. Separate the display assembly (2) from the computer.

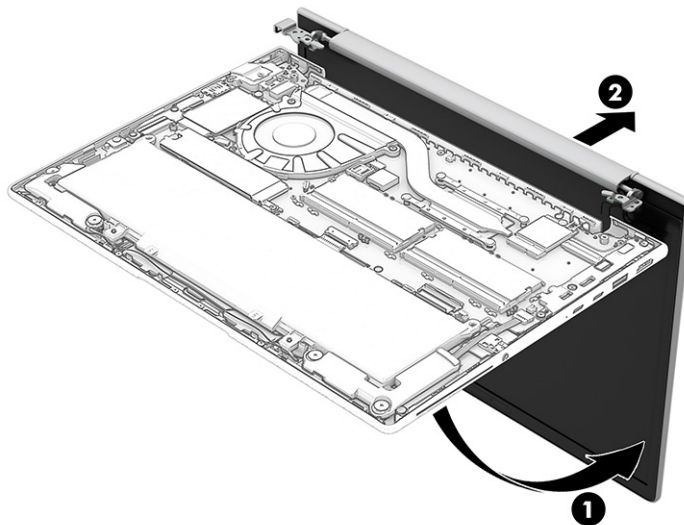

12. To remove the display bezel and access the display assembly internal components:


To avoid damaging the display panel, do not use a tool to release the inside edges of the display bezel. You can use a tool only when you insert it from the outside edges of the top, left, and right edges of the bezel. Use your fingers to lift up on the bezel. Avoid pressing down on the panel during bezel removal.

- a. Use a thin plastic tool (1), such as a case utility tool, to separate the outside edges of the display bezel from the display assembly.

- b.** In the following sequence, release the top **(2)**, left **(3)** and right, and bottom **(4)** edges of the display bezel from the display assembly.
- c.** Remove the display bezel **(5)**.

The display bezel is available using the following spare part numbers:


- N96500-001: Models with an infrared camera and privacy display
- N96498-001: Models with an infrared camera
- N96499-001: Models with an FHD camera
- P33247-001: Models without a camera

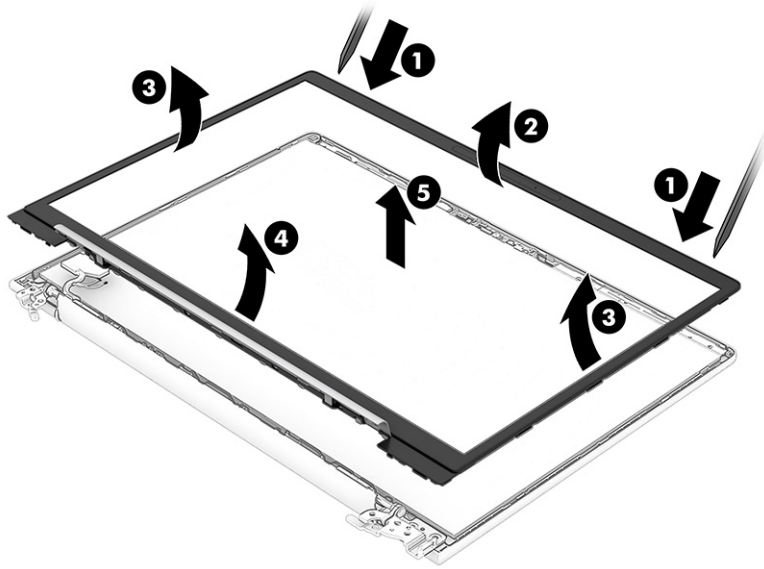


13. To remove the display panel:

- a.** Locate the display panel retention tape **(1)** in the upper and lower corners of the display assembly.
- b.** Use a pair of tweezers **(2)** to grasp the tape.

- c. Carefully pull the tape **(3)** up as far as it will stretch.

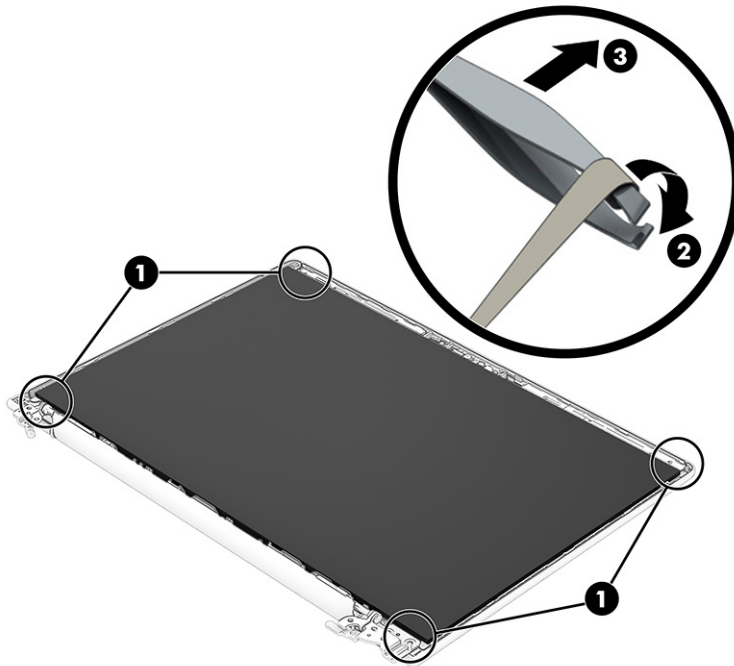

- d. When replacing the display panel retention tape, place the tape in the locations shown in the following image.

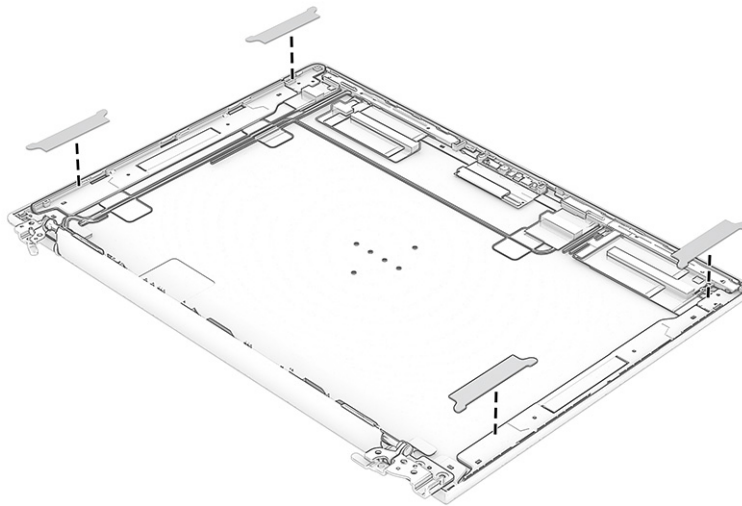


- e. Lift the top edge of the display panel **(1)** and swing it up and forward until it rests upside down in front of the display back cover.
- f. Release the retention tape **(2)** that secures the display panel cable to the display panel.
- g. Release the locking bar **(3)** that secures the display panel cable to the display panel.

- h.** Disconnect the display panel cable **(4)** from the display panel.

The display panel is available using the following spare part numbers:


- P35021-001: Touch panel, 300 nits
- P35020-001: Nontouch panel, 300 nits
- P35023-001: Nontouch panel, 400 nits
- P35022-001: Nontouch privacy panel, 800 nits

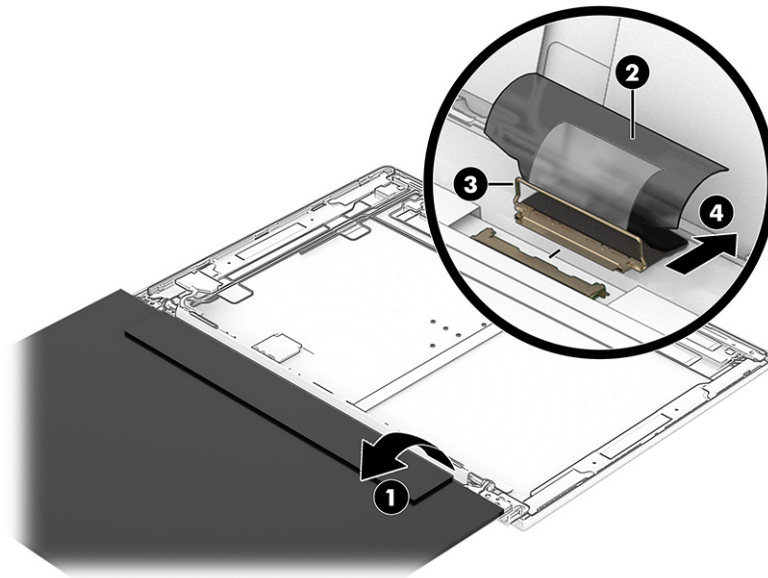

- 14.** To remove the display panel cable:


- a.** Release the display panel cable from the retention clips **(1)** and routing channel that are built into the bottom edge of the display back cover.

- b. Detach the camera (2) and cable (3) from the display back cover. The camera and cable are attached with double-sided adhesive.

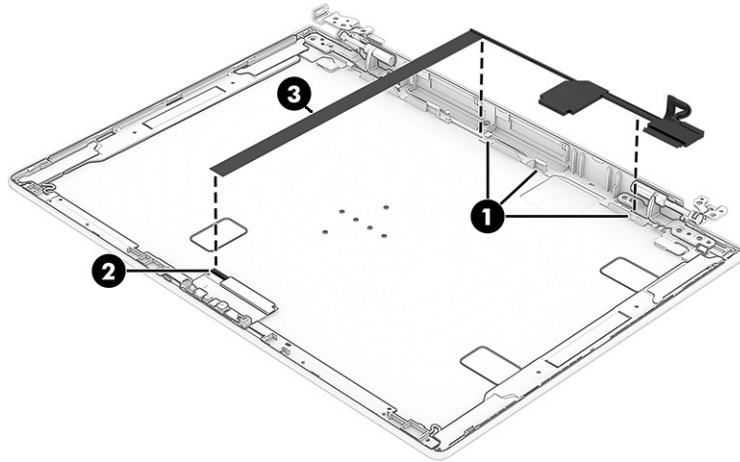

- c. Disconnect the cable from the ZIF connector (1) on the camera, and then disconnect the display panel cable (2) from the camera.


The display panel cable is included in the Display Cable Kit, spare part number P33252-001.

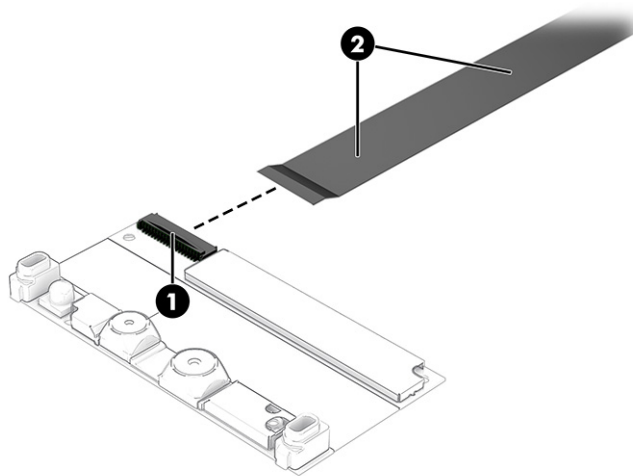

15. To remove an IR camera:

- a. Disconnect the cable from the ZIF connector (1).
- b. Starting on the left side of the camera module, use a tool (2) to release the module, and then remove the camera module (3).

The IR camera is available using spare part number P33249-001.

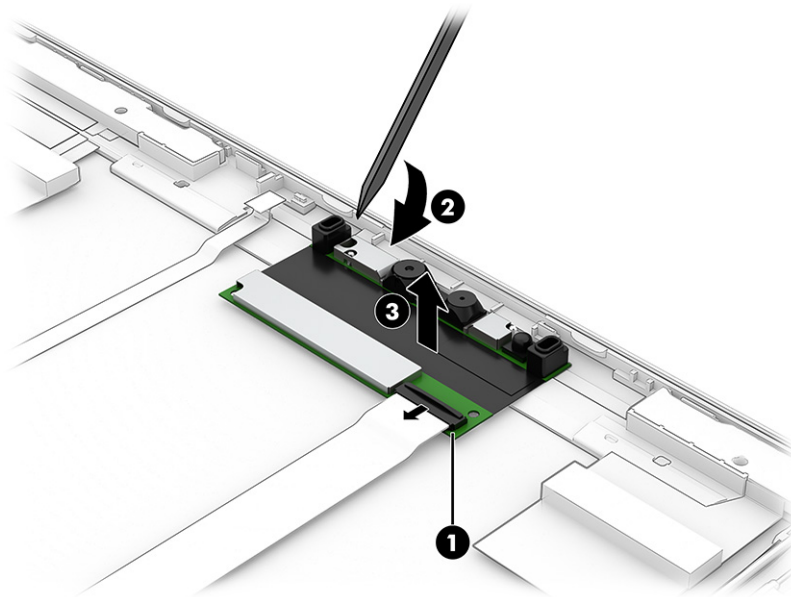



- c. When installing a new IR camera, be sure to add new tape that matches the shape of the tape on the old camera module.

16. To remove an FHD camera or the microphone:

- a. Starting on the left side of the camera, use a tool (1) to release the camera.
- b. Lift the camera (2) up, and then disconnect the cable from the reverse ZIF connector (3) on the module.

The FHD camera is available using spare part number P33248-001. The microphone is available using spare part number P00492-001.

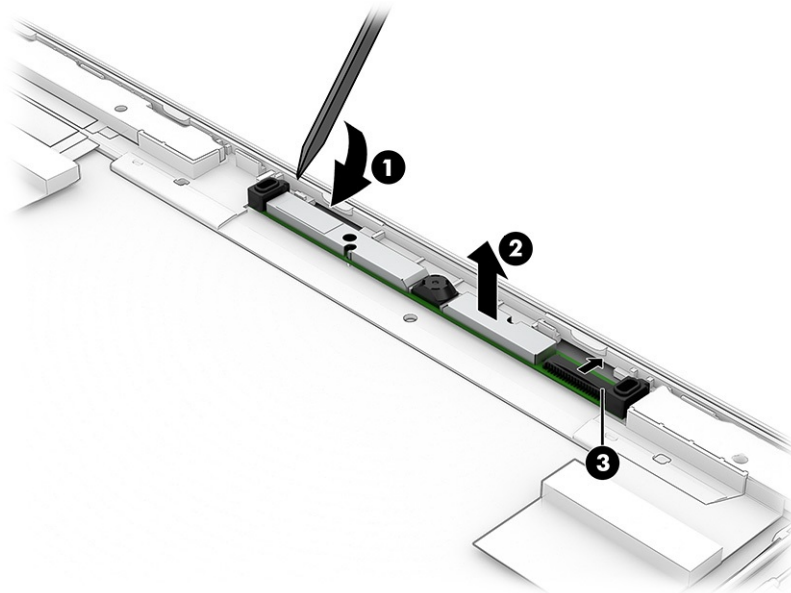


 **NOTE:** During installation, note that the cable routes under the camera before it connects to the camera.

17. To remove the ALS board:

- a.** Disconnect the cable from the ZIF connector **(1)** on the ALS board.
- b.** Use a tool **(2)** to detach the ALS board from the display back cover. The board is attached with double-sided adhesive.
- c.** Remove the ALS board **(3)**.


The ALS board is available using spare part number N96247-001.

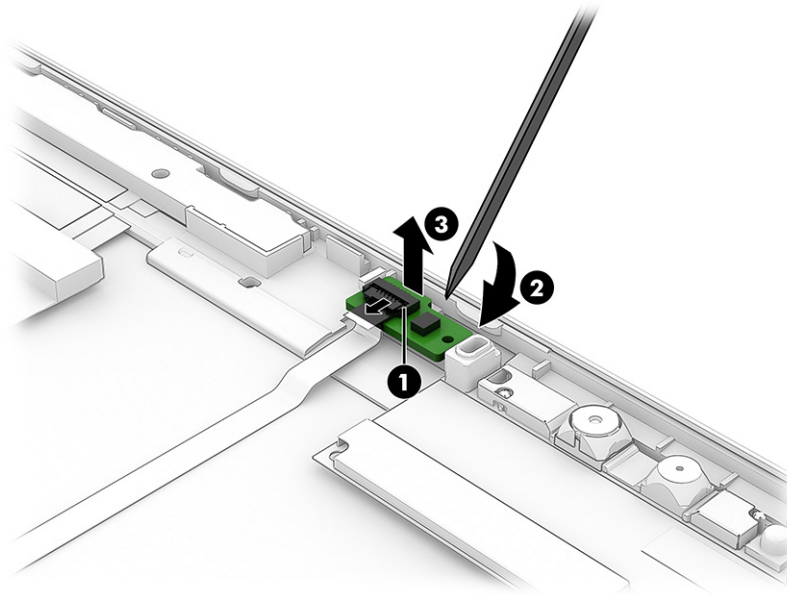

18. To remove the WWAN and WLAN antennas:


- a.** Release the adhesive tabs **(1)** that secure the WWAN antenna cables to the display back cover.

- b. Detach the WWAN antennas (2) from the display back cover. The WLAN antennas are attached with double-sided adhesive.

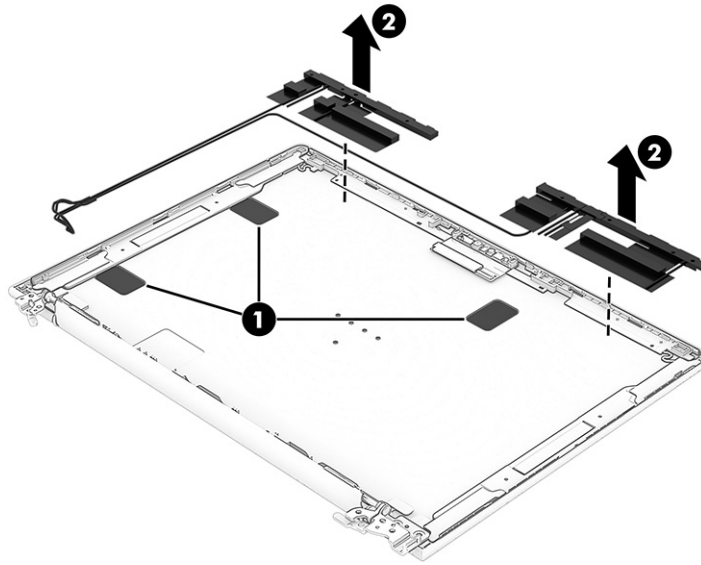

- c. Release the adhesive tabs (1) that secure the WLAN antenna cables to the display back cover.
- d. Detach the WLAN antennas (2) from the display back cover. The WLAN antennas are attached to the display back cover with double-sided adhesive.

The wireless antennas are available as spare part number N96246-001.

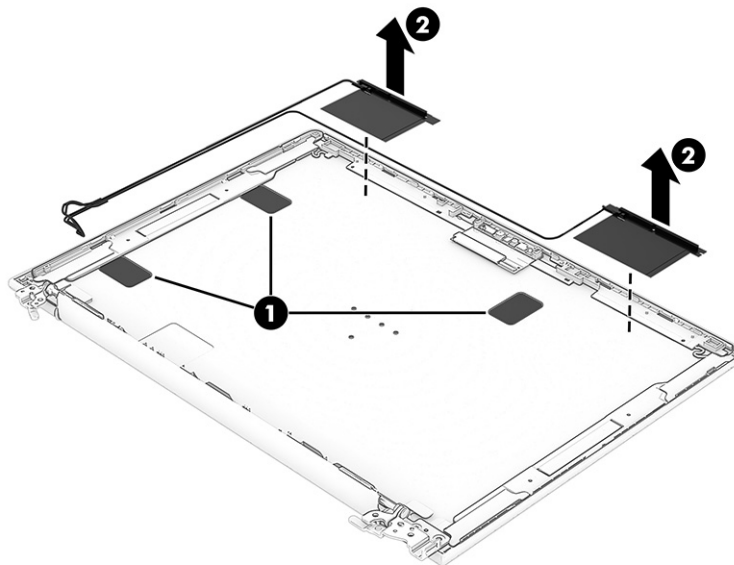


19. To remove the hinges:

- a. Remove the six Phillips M2.5 × 4.2 screws (1) that secure the display hinges to the display back cover.
- b. Remove the cables (2) from the right hinge.

- c. Remove the cables **(3)** from the left hinge.
- d. Remove the hinges **(4)**.

The hinges are available using spare part number N96249-001.

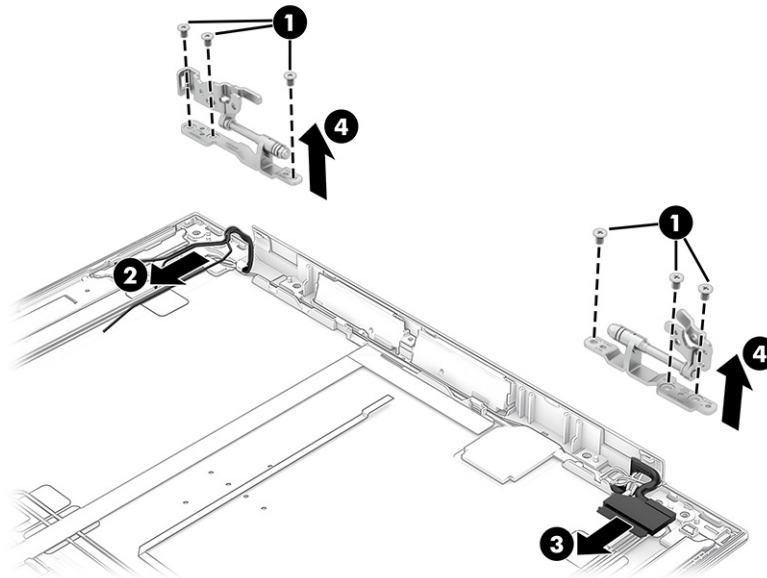

To reassemble and replace the display assembly, reverse the removal procedures.

WWAN connector board

To remove the WWAN connector board, use this procedure and illustration.

Table 6-4 WWAN connector board descriptions and part numbers

Description	Spare part number
WWAN connector board	N96592-001
WWAN connector board cable (included in the Cable Kit)	P33244-001


Before removing the WWAN connector board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Remove the battery (see [Battery on page 41](#)).
4. Remove the WLAN module (see [WWAN module on page 50](#)).

Remove the WWAN connector board:

1. Disconnect the cable from the small ZIF connector **(1)** on the I/O board.
2. Disconnect the cable from the wide ZIF connector **(2)** on the WWAN board.
3. Remove the Phillips M2.0 × 4.0 screw **(3)** that secures the board to the computer.

4. Lift the board (4) up enough to access the connector underneath.
5. Disconnect the cable from the ZIF connector (5) on the bottom of the WWAN connector board.

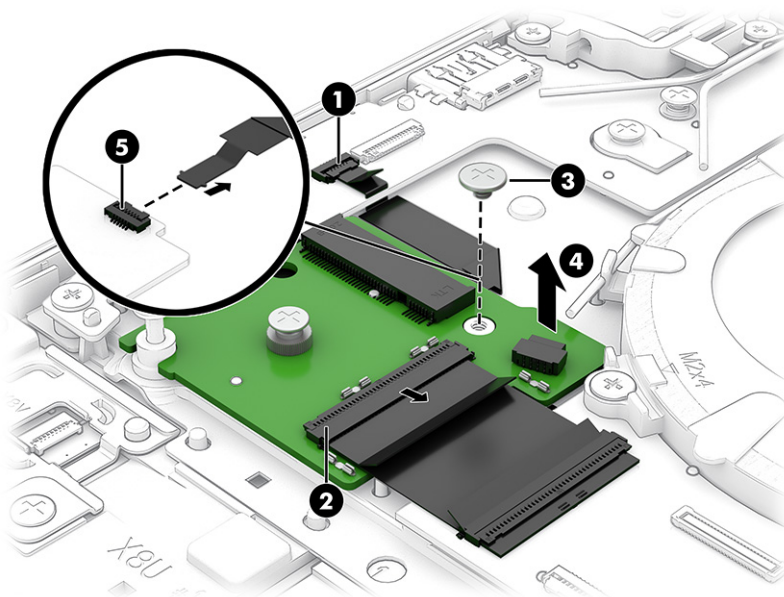

To replace the WWAN connector board, reverse the removal procedures.

SSD board

To remove the SSD board, use this procedure and illustration.

Table 6-5 SSD board description and part number

Description	Spare part number
SSD board	N96468-001


Before removing the SSD board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Remove the battery (see [Battery on page 41](#)).
4. Remove the SSD (see [Solid-state drive on page 48](#)).
5. Remove the WWAN connector board (see [WWAN connector board on page 69](#)).

Remove the SSD board:

1. Remove the Phillips M2.0 × 1.8 screw (1) that secures the SSD board to the computer.

2. Remove the SSD board **(2)** from the computer.

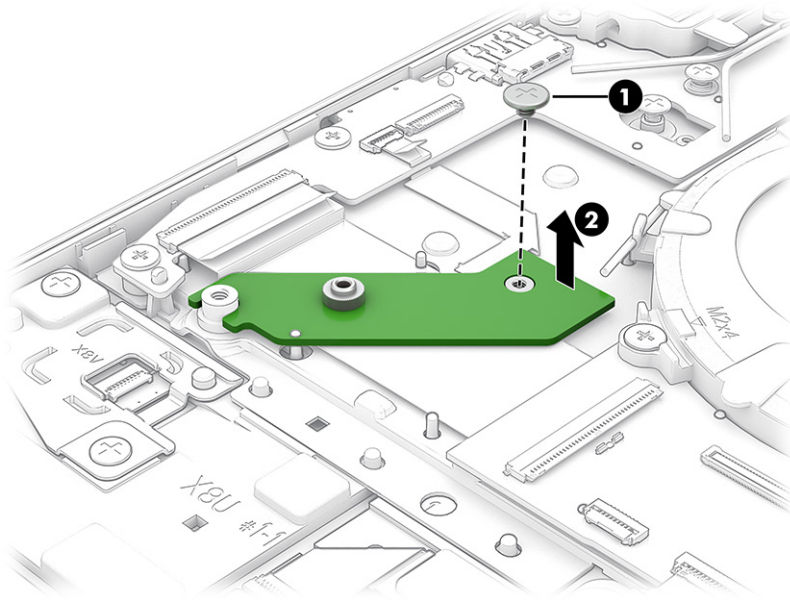

To replace the SSD board, reverse the removal procedures.

Fingerprint reader

To remove the fingerprint reader, use this procedure and illustration.

Table 6-6 Fingerprint reader descriptions and spare part numbers

Description	Spare part number
Fingerprint reader	N96242-001
Fingerprint reader cable	P33244-001
Fingerprint reader bracket	N96233-001


Before removing the fingerprint reader, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Remove the battery (see [Battery on page 41](#)).

Remove the fingerprint reader:

1. Disconnect the cable from the ZIF connector **(1)** on the fingerprint reader board.
2. Remove the two Phillips M2.0 × 2.9 screws **(2)** that secure the fingerprint reader to the computer.
3. Remove the fingerprint reader bracket **(3)** from the computer.

4. Remove the fingerprint reader **(4)** from the computer.

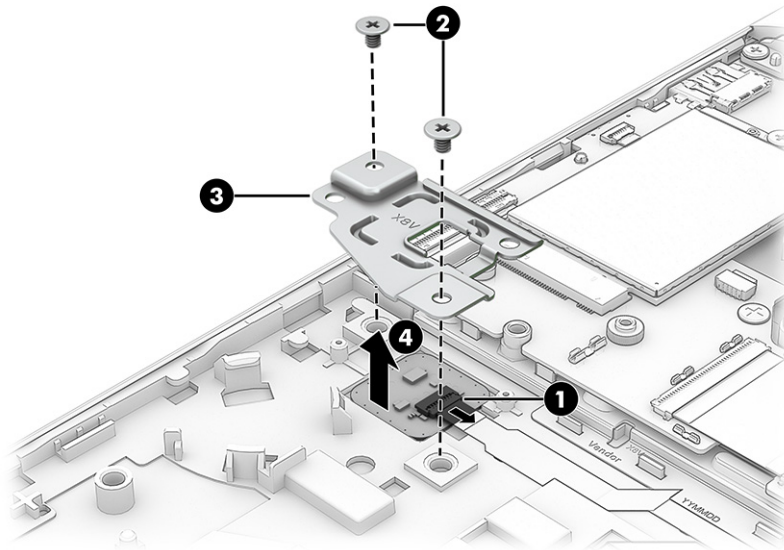

To replace the fingerprint reader, reverse the removal procedures.

NFC module

To remove the NFC module, use this procedure and illustration.

Table 6-7 NFC module descriptions and part numbers

Description	Spare part number
NFC module	914758-001
NFC module cable (included in the Cable Kit)	P33244-001
NFC module antenna	N96724-001


Before removing the NFC module, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Remove the battery (see [Battery on page 41](#)).
4. Remove the WWAN module (see [WWAN module on page 50](#)).
5. Remove the WWAN connector board (see [WWAN connector board on page 69](#)).

Remove the NFC module:

1. Remove the tape **(1)** from the top of the NFC module.
2. Disconnect the system board cable from the ZIF connector **(2)** on the top of the NFC module.
3. Disconnect the touchpad antenna cable from the ZIF connector **(3)** on the bottom of the NFC module.

- Detach the NFC module **(4)** from the computer. The NFC module is attached to the computer with double-sided adhesive.

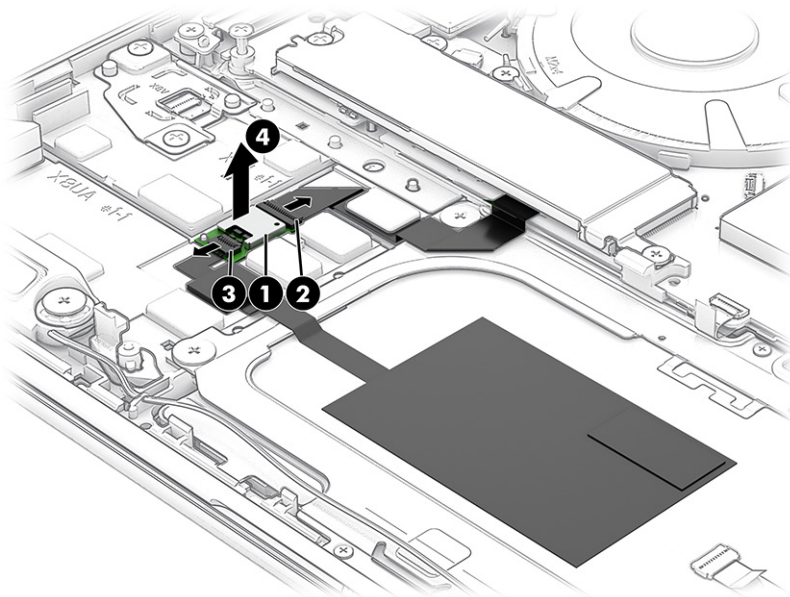

To replace the NFC module, reverse the removal procedure.

Touchpad

To remove the touchpad, use this procedure and illustration.

Table 6-8 Touchpad descriptions and part numbers

Description	Spare part number
Touchpad for use in models with NFC (includes NFC antenna)	N96238-001
Touchpad for use in models without NFC	P33246-001
Touchpad cable (included in the Cable Kit)	P33244-001


Before removing the touchpad, follow these steps:

- Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
- Remove the bottom cover (see [Bottom cover on page 38](#)).
- Remove the battery (see [Battery on page 41](#)).

Remove the touchpad:

- Remove the speaker cable from the clips **(1)** below the touchpad.
- Remove the tape from the module, and then disconnect the cable from the reverse ZIF connector **(2)** on the touchpad.
- Disconnect the cable from the reverse ZIF connector **(3)** on the NFC module.
- Remove the conductive tape **(4)** from the top of the touchpad.

5. Remove the four Phillips M2.0 × 2.5 broadhead screws (5) that secure the touchpad to the computer.
6. Remove the three Phillips M1.5 × 2.9 screws (6) that secure the touchpad to the computer.
7. Lift the bottom edge of the touchpad (7) upward, and then pull the touchpad (8) away from the computer and out from under the bottom edge of the system board.

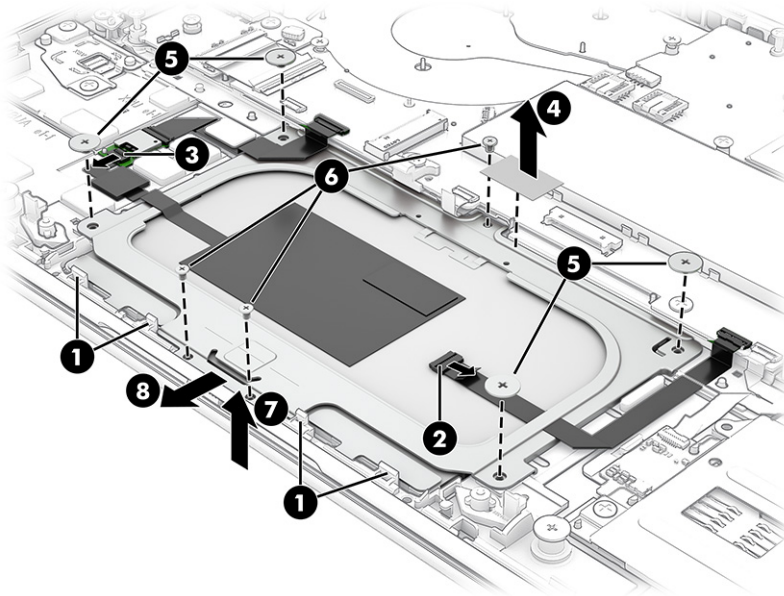

To replace the touchpad, reverse the removal procedures.

Smart card reader

To remove the smart card reader, use this procedure and illustration.

Table 6-9 Smart card reader descriptions and part numbers

Descriptions	Spare part numbers
Smart card reader	N96232-001
Smart card reader cable (included in Cable Kit)	P33244-001


Before removing the smart card reader, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Remove the battery (see [Battery on page 41](#)).
4. Remove the left speaker (see [Speakers on page 56](#)).

Remove the smart card reader:

1. Remove the four Phillips M2.0 × 2.5 screws (1) from the smart card reader bracket.
2. Remove the bracket (2).
3. Disconnect the cable from the ZIF connector (3) on the system board.

4. Remove the smart card reader (4) from the computer.

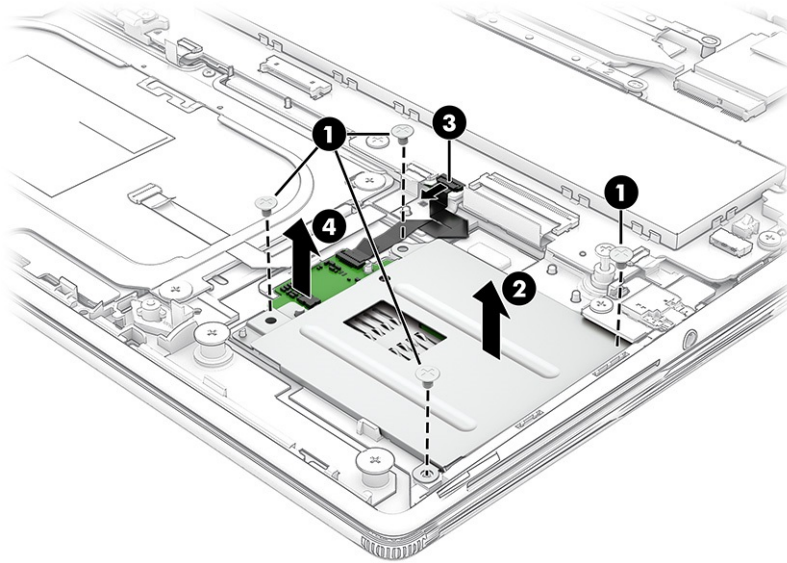

To install the smart card reader, reverse this procedure.

Audio jack board

To remove the audio jack board, use this procedure and illustration.

Table 6-10 Audio jack board descriptions and part numbers

Description	Spare part number
Audio jack board	N96231-001
Audio jack board cable (included in the Cable Kit)	N96230-001


Before removing the audio jack board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Remove the battery (see [Battery on page 41](#)).

Remove the audio jack board:

1. Disconnect the cable from the ZIF connector (1) on the system board.
2. Remove the Phillips M2.0 × 4.9 screw (2) that secures the board to the computer.
3. Release the speaker cable from the retention clip (3) on the board.

4. Lift the left side of the audio jack board (4) up, and then remove it (5) from the computer.

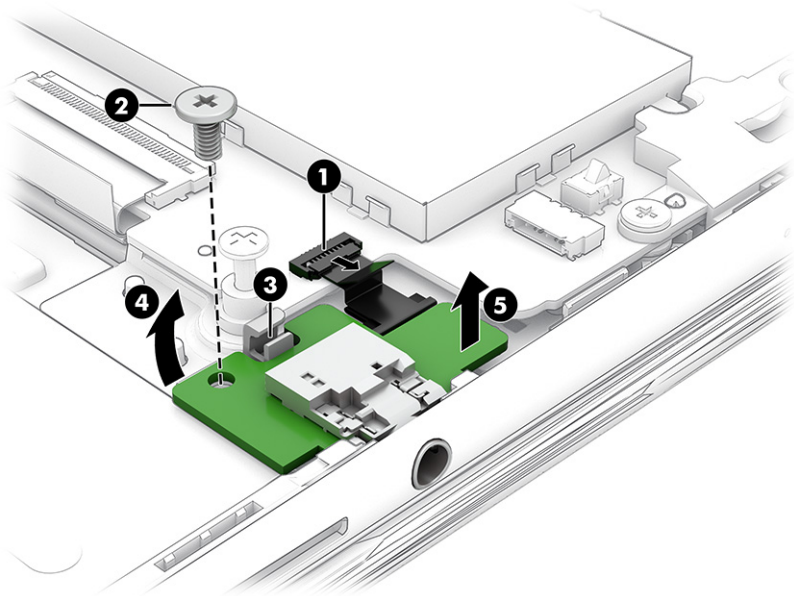

To replace the audio jack board, reverse the removal procedures.

Heat sink

To remove the heat sink, use these procedures and illustrations.

Table 6-11 Heat sink description and part number

Description	Spare part number
Heat sink (includes replacement thermal material)	N96235-001


Before removing the heat sink, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Remove the battery (see [Battery on page 41](#)).

Remove the heat sink:


1. Remove the four Phillips M2.0 × 2.4 screws (1) that secure the heat sink to the system board.

- Remove the heat sink (2) from the system board.

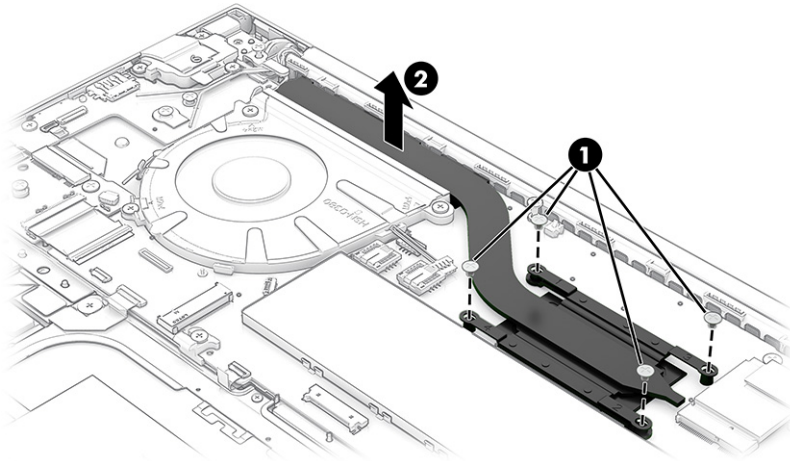

- Thoroughly clean the thermal material from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits. The following illustration shows the replacement thermal material locations.

Thermal paste is used on the heat sink area that services the processor.

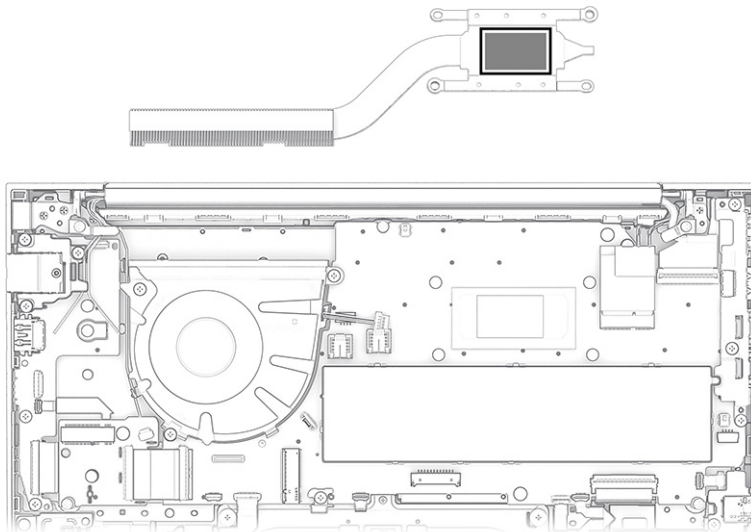

To replace the heat sink, reverse the removal procedures.

System board

To remove the system board, use these procedures and illustrations.

Table 6-12 System board descriptions and part numbers

Description	Spare part number
Intel Core Ultra 7 265U processor	P35018-601
Intel Core Ultra 7 265U processor, with WWAN	P35019-001

Table 6-12 System board descriptions and part numbers (continued)

Description	Spare part number
Intel Core Ultra 7 255U processor	P35016-601
Intel Core Ultra 7 255U processor, with WWAN	P35017-001
Intel Core Ultra 5 235U processor	P35014-601
Intel Core Ultra 5 235U processor, with WWAN	P35015-001
Intel Core Ultra 5 225U processor	P35012-601
Intel Core Ultra 5 225U processor, with WWAN	P35013-001

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly (see [Preparation for disassembly on page 38](#)).
2. Remove the bottom cover (see [Bottom cover on page 38](#)).
3. Remove the battery (see [Battery on page 41](#)).
4. Remove the SSD (see [Solid-state drive on page 48](#)).
5. Remove the WWAN module (see [WWAN module on page 50](#)).
6. Remove the fan (see [Fan on page 57](#)).
7. Remove the WWAN connector board (see [WWAN connector board on page 69](#)).


When you replace the system board, be sure to remove the following components (as applicable) the and from the defective system board and install them on the replacement system board:

- Memory modules (see [Memory modules on page 52](#))
- WLAN module (see [WLAN module on page 54](#))
- Heat sink (see [Heat sink on page 76](#))

Remove the system board:


1. Disconnect the following cables from the system board:
 - Remove the antenna cover from the WLAN module (select products only) **(1)**
 - Antenna cables from the WLAN module (select products only) **(2)**
 - Display cable (ZIF) **(3)**
 - Speaker cable **(4)**
 - Audio jack cable **(5)**
 - Keyboard cable (reverse ZIF) **(6)**
 - Card reader cable (ZIF) **(7)**
 - Touchpad cable (ZIF) **(8)**
 - Keyboard backlight cable (ZIF) **(9)**

- NFC cable (ZIF) (10)
- Fingerprint reader cable (ZIF) (select products only) (11)
- I/O board cable (reverse ZIF) (12)

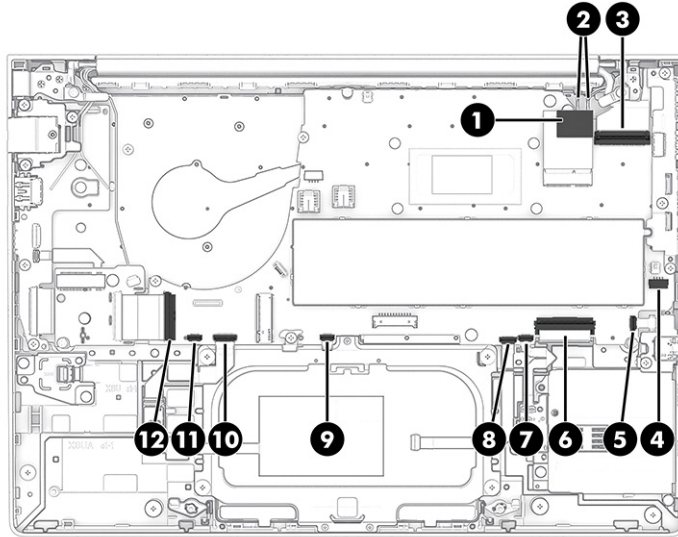

2. Remove the two Phillips M2.0 × 2.3 screws (1) that secure the system board to the computer.
3. Remove the three Phillips M2.0 × 4.7 screws (2) that secure the system board and I/O bracket to the computer.
4. Remove the I/O bracket (3).


The I/O bracket is included in the Plastics/Rubber Kit, spare part number N99999-001.

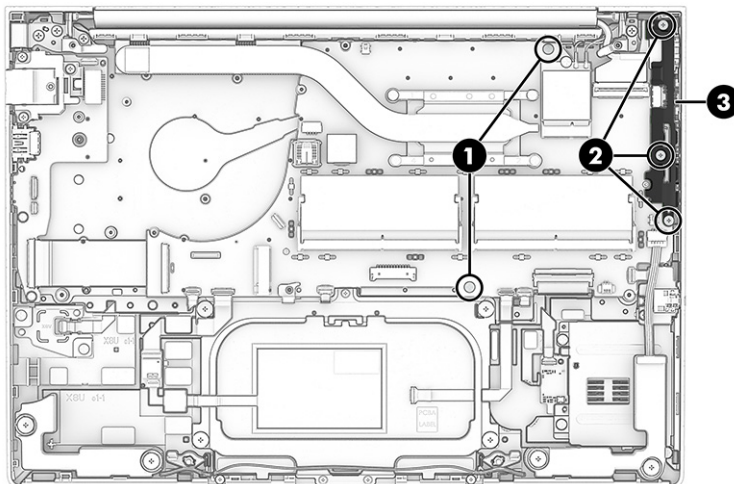

- Lift the left side of the system board (1) until it rests at an angle, and then remove the system board (2) by sliding it up and to the left at an angle.

When removing the system board, be sure to make note of the location of the middle hook (3). The middle hook can be dislodged when removing the system board.

The middle hook is included in the Plastics/Rubber Kit, spare part number N99999-001.

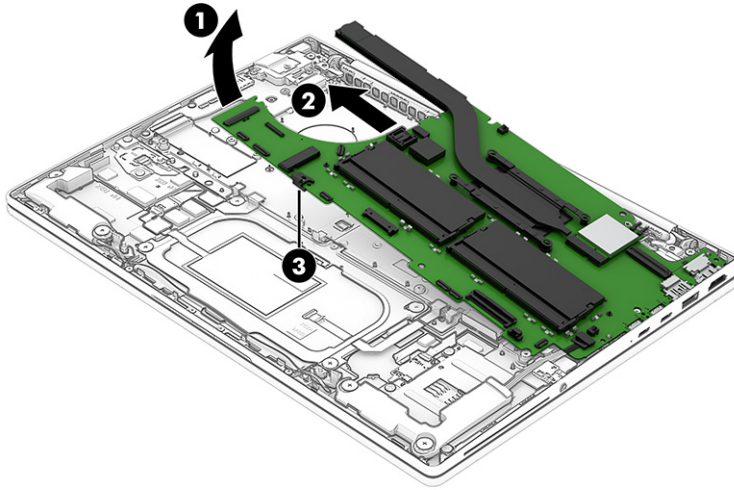

To install the system board, reverse the removal procedures.

Top cover and keyboard

The top cover and keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part number for the top covers and keyboards. The second table provides the country codes.

Table 6-13 Top cover and keyboard descriptions and spare part numbers

Description	Spare part number
Backlit, privacy	P33566-xx1
Backlit	P33567-xx1

Table 6-14 Spare part country codes

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	India	-D61	Slovenia	-BA1
Brazil	-201	Israel	-BB1	South Korea	-AD1
Bulgaria	-261	Italy	-061	Spain	-071
The Czech Republic and Slovakia	-FL1	Japan	-291	Sweden and Finland	-B71
Denmark	-081	Kazakhstan	-DF1	Switzerland	-BG1

Table 6-14 Spare part country codes (continued)


For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Denmark, Finland, and Norway	-DH1	Latin America	-161	Taiwan	-AB1
Estonia	-E41	The Netherlands	-B31	Thailand	-281
France	-051	Northwest Africa	-FP1	Turkey	-141
French Canada	-DB1	Norway	-091	Turkey-F	-541
Germany	-041	Portugal	-131	Ukraine	-BD1
Greece	-151	Romania	-271	United Kingdom	-031
Hungary	-211	Russia	-251	United States	-001
Iceland	-DD1	Saudi Arabia	-171		

7 Computer Setup (BIOS), TPM, and HP Sure Start

HP provides several tools to help set up and protect your computer.

Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as hard drives, display, keyboard, mouse, and printer). Computer Setup includes settings for types of devices installed, the startup sequence of the computer, and amount of system and extended memory.

 **NOTE:** Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

To start Computer Setup, turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.


Navigating and selecting in Computer Setup

You can navigate and select in Computer Setup using one or more methods.

- To select a menu or a menu item, use the **tab** key and the keyboard arrow keys and then press **enter**, or use a pointing device to select the item.
- To scroll up and down, select the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key on the keyboard.
- To close open dialog boxes and return to the main Computer Setup screen, press **esc**, and then follow the on-screen instructions.

To exit Computer Setup, choose one of the following methods:

- To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.


- To save your changes and exit Computer Setup menus, select **Main**, select **Save Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

Your changes go into effect when the computer restarts.


Restoring factory settings in Computer Setup

To return all settings in Computer Setup to the values that were set at the factory, follow these steps.


 **NOTE:** Restoring defaults will not change the hard drive mode.

1. Start Computer Setup. See [Using Computer Setup on page 82](#).
2. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

 **NOTE:** On select products, the selections might display **Restore Defaults** instead of **Apply Factory Defaults and Exit**.

Your changes go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

Updating the BIOS

Updated versions of the BIOS might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.


Some download packages contain a file named Readme.txt, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Computer Setup (BIOS), first determine the BIOS version on your computer.

If you are already in Windows, you can access BIOS version information (also known as *ROM date* and *System BIOS*) by pressing **fn+esc** (select products only). Or you can use Computer Setup.


1. Start Computer Setup. See [Using Computer Setup on page 82](#).
2. Select **Main**, and then select **System Information**.
3. To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

To check for later BIOS versions, see [Preparing for a BIOS update on page 83](#).

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.

 **IMPORTANT:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to the following types of reliable external power:

- The HP AC adapter provided with the computer (select products only)
 - A replacement AC adapter provided by HP
 - An AC adapter with the power rating specified on the product label
-

Do not download or install a BIOS update while the computer is operating under these circumstances:

- Running on battery power

- Docked in an optional docking device
- Connected to an optional docking power source

During the download and installation, follow these instructions:

- Do not disconnect power on the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Perform one of these tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon (select products only) in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.



NOTE: If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps.

1. Select the **Search** icon in the taskbar, type `file` in the search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an `.exe` extension (for example, `filename.exe`).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.



NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.


Changing the boot order using the f9 prompt


To dynamically choose a boot device for the current startup sequence, follow these steps.

1. Access the Boot Device Options menu:
 - Turn on or restart the computer, and when the HP logo appears, press **f9** to enter the Boot Device Options menu.
2. Select a boot device, press **enter**, and then follow the on-screen instructions.

TPM BIOS settings (select products only)

TPM provides additional security for your computer. You can modify the TPM settings in Computer Setup (BIOS).

 **IMPORTANT:** Before enabling Trusted Platform Module (TPM) functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable. For any compliance issues arising from your operation or usage of TPM that violates the previously mentioned requirement, you shall bear all the liabilities wholly and solely. HP will not be responsible for any related liabilities.

 **NOTE:** If you change the TPM setting to Hidden, TPM is not visible in the operating system.

To access TPM settings in Computer Setup:

1. Start Computer Setup. See [Using Computer Setup on page 82](#).
2. Select **Security**, select **TPM Embedded Security**, and then follow the on-screen instructions.

Using HP Sure Start (select products only)


Select computer models are configured with HP Sure Start, a technology that monitors the computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start automatically restores the BIOS to its previously safe state, without user intervention.


HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. Advanced users can customize the default configuration.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

8 Backing up, restoring, and recovering

You can use Windows tools or HP software to back up your information, create a restore point, reset your computer, create recovery media, or restore your computer to its factory state. Performing these standard procedures can return your computer to a working state faster.

 **IMPORTANT:** If you are performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.


 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only.

Using Windows tools for backing up

HP recommends that you back up your information immediately after initial setup. You can do this task either using Windows Backup locally with an external USB flash drive or using online tools.


 **NOTE:** If computer storage is 32 GB or less, Microsoft System Restore is disabled by default.


Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive (select products only)

You can use the HP Cloud Recovery Download Tool to create an HP Recovery bootable USB flash drive.

For details:

- Go to <http://www.hp.com>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have and follow the on-screen instructions.

 **NOTE:** In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

 **IMPORTANT:** HP recommends that you follow the [Restoring and recovery methods on page 87](#) to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Restoring and recovering your system

You have several tools available to recover your system both within and outside of Windows if the desktop cannot load.

HP recommends that you attempt to restore your system using the [Restoring and recovery methods on page 87](#).

Creating a system restore


System Restore is available in Windows. The System Restore software can automatically or manually create restore points, or snapshots, of the system files and settings on the computer at a particular point.

When you use System Restore, it returns your computer to its state at the time you made the restore point. Your personal files and documents should not be affected.

Restoring and recovery methods

After you run the first method, test to see whether the issue still exists before you proceed to the next method, which might now be unnecessary.


1. Run a Microsoft System Restore.
2. Run Reset this PC.

 **NOTE:** The options **Remove everything** and then **Fully clean the drive** can take several hours to complete and leave no information on your computer. It is the safest way to reset your computer before you recycle it.

3. Recover using the HP Recovery USB flash drive. For more information, see [Recovering using the HP Recovery USB flash drive on page 87](#).

For more information about the first two methods, see the Get Help app:


- Select the **Start** button, select **All apps**, select the **Get Help** app, and then enter the task you want to perform.

 **NOTE:** You must be connected to the internet to access the Get Help app.

Recovering using the HP Recovery USB flash drive


You can use the HP Recovery USB flash drive to recover the operating system and drivers that were installed at the factory. On select products, you can create recovery media on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create a recovery USB flash drive \(select products only\) on page 86](#).

 **NOTE:** In select countries, if you cannot create the HP Recovery USB flash drive yourself, contact support. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.


To recover your system:

- Insert the HP Recovery USB flash drive, and then restart the computer.

 **NOTE:** HP recommends that you follow the [Restoring and recovery methods on page 87](#) to restore your computer before you obtain and use the HP USB flash drive. Using a recent backup can return your machine to a working state sooner than using the HP USB flash drive. After the system is restored, reinstalling all the operating system software released since your initial purchase can be a lengthy process.

Changing the computer boot order

If your computer does not restart using the HP Recovery USB flash drive, you can change the computer boot order, which is the order of devices listed in BIOS for startup information.

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

To change the boot order:

1. Insert the HP Recovery USB flash drive.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, and then quickly press and hold one of the following buttons:
 - Volume up
 - Volume down

Then select **f9**.
3. Select the USB flash drive to boot from, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC operating system (OS) recovery solution built into the hardware and software. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the operating system
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Follow the on-screen instructions to find your product and locate your documentation.

9 Using HP PC Hardware Diagnostics

You can use the HP PC Hardware Diagnostics utility to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) Remote HP PC Hardware Diagnostics UEFI, a firmware feature.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 90](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit failure ID code is generated for select component tests. For interactive tests, such as keyboard, mouse, or audio and video palette, you must perform troubleshooting steps before you can receive a failure ID.

You have several options after you receive a failure ID:

- Select **Next** to open the Event Automation Service (EAS) page, where you can log the case.
- Scan the QR code with your mobile device, which takes you to the EAS page, where you can log the case.
- Select the box next to the 24-digit failure ID to copy your failure code and send it to support.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Support Assistant or the Start menu.

Accessing HP PC Hardware Diagnostics Windows from HP Support Assistant

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant:

1. Complete one of the following tasks:
 - Select the **Search** icon in the taskbar, type `support` in the search box, and then select the **HP Support Assistant** app.
 - Select the question mark icon in the taskbar.
2. Select **Fixes & Diagnostics**.

3. Select **Run hardware diagnostics**, and then select **Launch**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from the Start menu (select products only)

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from the Start menu:

1. Select the **Start** button, and then select **All apps**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware issues in Windows**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store


You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store:

1. Select the Microsoft Store app on your desktop or select the **Search** icon in the taskbar, and then type `Microsoft Store` in the search box.
2. Type `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.

 **NOTE:** For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.


The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics Unified Extensible Firmware Interface (UEFI) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

 **NOTE:** For some products, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 92](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit failure ID code is generated.

For assistance in solving the problem, complete one of these tasks:

- Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your failure ID and product number automatically filled in. Follow the on-screen instructions.
- Contact support, and provide the failure ID code.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 93](#).

- b. Hard drive

- c. BIOS

3. When the diagnostic tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.

Starting HP PC Hardware Diagnostics UEFI through HP Hotkey Support software (select products only)

This section describes how to start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software.



NOTE: You must disable fast boot to access HP PC Hardware Diagnostics UEFI from the HP System Information application.

To disable fast boot:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Boot Options**.
3. Clear **Fast Boot**.
4. Select **Save Changes and Exit**, and then select **Yes**.

To start HP PC Hardware Diagnostics UEFI through HP Hotkey Support software, follow this procedure:

1. From the **Start** menu, open the HP System Information Application or press **fn+esc**.
2. In HP System Information screen, select **Run System Diagnostics**, select **Yes** to run the application, and then select **Restart**.



IMPORTANT: To prevent loss of data, save your work in all open apps before restarting your computer.



NOTE: When the restart is complete, the computer opens the HP PC Hardware Diagnostics UEFI Application. Proceed with the troubleshooting tests.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.

- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then run the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, select **Diagnose Other Potential Issues**, scroll down to **Remote PC Hardware Diagnostics UEFI**, and then select **Learn More**.

Downloading Remote HP PC Hardware Diagnostics UEFI

Remote HP PC Hardware Diagnostics UEFI is also available as a SoftPak that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest Remote HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.

2. Select **Diagnose PC Hardware Issues outside of the OS**, scroll down to the expanded window that appears, and then select **Download**.
3. A pop-up that asks what you want to do with the file opens. Select **Open** or **Save As**. The latest version of the diagnostics tool opens or downloads to the selected location.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download Remote HP PC Hardware Diagnostics UEFI by product name or number.



NOTE: For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform several customizations.

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics UEFI**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage, such as a hard drive or USB flash drive, to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Main**, then select **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

10 Specifications

This chapter provides specifications for your computer system.

Computer specifications

This section provides specifications for your computer. When you travel with your computer, the computer dimensions and weights, as well as input power ratings and operating specifications, provide helpful information.

Table 10-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	303.1 mm	11.93 in
Depth	215.1 mm	8.47 in
Height (front)	10.9 mm	0.43 in
Height (rear)	17.0 mm	0.67 in
Height (maximum, metal)	19.9 mm	0.78 in
Height (maximum, plastic)	20.9 mm	0.82 in
Weight		
48 Whr battery	1.3 kg	2.87 lb
56 Whr battery	1.32 kg	2.91 lb
Input power		
Operating voltage and current	19.5 V DC @ 2.31 A - 45 W	
	19.5 V DC @ 3.33 A - 65 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft

Table 10-1 Computer specifications (continued)

	Metric	U.S.
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft



NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.

Display specifications

This section provides specifications for your display.

Table 10-2 Display specifications

	Metric	U.S.
Active diagonal size	33.8 cm	13.3 in
Resolution	1920 × 1200 (WUXGA)	
Surface treatment	Antiglare	
Brightness	800 nits 400 nits 300 nits	
Viewing angle	UWVA	
Backlight	WLED	
Display panel interface	eDP	

Solid-state drive specifications

This section provides specifications for your solid-state drives.

Table 10-3 Solid-state drive specifications

	512 GB*	1 TB*	2 TB*
Dimensions			
Height	1.0 mm	1.0 mm	1.0 mm
Length	50.8 mm	50.8 mm	50.8 mm
Width	28.9 mm	28.9 mm	28.9 mm
Weight	< 10 g	< 10 g	< 10 g
Interface type			
Ready time, maximum (to not busy)	< 1.0 ms	1.0 ms	1.0 ms
Access times, logical	0.1 ms	0.1 ms	0.1 ms
Transfer rate			
Sequential read	up to 2150 MBps	up to 2150 MBps	up to 3800 MBps

Table 10-3 Solid-state drive specifications (continued)

	512 GB*	1 TB*	2 TB*
Random read	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs
Sequential write	up to 1550 MBps	up to 1550 MBps	up to 2670 MBps
Random write	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs
Total logical sectors	1,000,215,216	1,500,336,388	2,998,846
Operating temperature	0°C to 70°C (32°F to 158°F)	0°C to 70°C (32°F to 158°F)	0°C to 70°C (32°F to 158°F)

*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications might differ slightly.

Certain restrictions and exclusions apply. Contact support for details.

11 Statement of memory volatility

For general information regarding nonvolatile memory in HP business computers, and to restore nonvolatile memory that can contain personal data after the system has been turned off and the hard drive has been removed, use these instructions.

HP business computer products that use Intel®-based or AMD®-based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP, with the following assumptions:

- No subsequent modifications were made to the system.
- No applications, features, or functionality were added to or installed on the system.

Following system shutdown and removal of all power sources from an HP business computer system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and also remains in nonvolatile memory. Use the following steps to remove personal data from the computer, including the nonvolatile memory found in Intel-based and AMD-based system boards.



NOTE: If your tablet has a keyboard base, connect to the keyboard base before beginning steps in this chapter.

Current BIOS steps

Use these instructions to restore nonvolatile memory.

1. Follow these steps to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.
 - a. Turn on or restart the computer, and then quickly press **esc**.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- b. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes** to load defaults. The computer restarts.
- c. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- d. Select the **Security** menu, select **Restore Security Settings to Factory Defaults**, and then select **Yes** to restore security level defaults. The computer restarts.
- e. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- f. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.
- g. If a DriveLock password is set, select the **Security** menu, and scroll down to **Hard Drive Utilities** under the **Utilities** menu. Select **Hard Drive Utilities**, select **DriveLock**, and then clear the check box for **DriveLock password on restart**. Select **OK** to proceed.
- h. Select the **Main** menu, and then select **Reset BIOS Security to factory default**. Select **Yes** at the warning message. The computer restarts.
- i. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



NOTE: If the system has a BIOS administrator password, type the password at the prompt.

- j. Select the **Main** menu, select **Apply Factory Defaults and Exit**, select **Yes** to save changes and exit, and then select **Shutdown**.
 - k. Restart the system. If the system has a Trusted Platform Module (TPM), fingerprint reader, or both, one or two prompts will appear—one to clear the TPM and the other to Reset Fingerprint Sensor. Press or tap **f1** to accept or **f2** to reject.
 - l. Remove all power and system batteries for at least 24 hours.
2. Complete one of the following tasks:
- Remove and retain the storage drive.
 - Clear the drive contents by using a third-party utility designed to erase data from an SSD.
 - Clear the contents of the drive by using the following BIOS Setup Secure Erase command option steps:



NOTE: If you clear data using Secure Erase, you cannot recover it.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu and scroll down to the **esc** menu.
- c. Select **Hard Drive Utilities**.
- d. Finish by completing one of these tasks:
 - Under **Utilities**, select **Secure Erase**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.
 - Clear the contents of the drive using the following Disk Sanitizer commands steps:
 - i. Turn on or restart the computer, and then quickly press **esc**.
 - ii. Select the **Security** menu and scroll down to the **Utilities** menu.
 - iii. Select **Hard Drive Utilities**.

- iv. Under **Utilities**, select **Disk Sanitizer**, select the hard drive with the data that you want to clear, and then follow the on-screen instructions to continue.



NOTE: The amount of time it takes for Disk Sanitizer to run can take several hours. Plug the computer into an AC outlet before starting.

Nonvolatile memory usage

Use this table to troubleshoot nonvolatile memory usage.

Table 11-1 Troubleshooting information for nonvolatile memory usage

Description	Volatility description	Storage user data	How to erase
Primary storage device, holds the OS, applications, and application settings	Nonvolatile, 8-256 GB of eMMC or NVMe SSD storage, removable	Yes ¹	Follow instructions below under “Erase the Primary Storage Device.”
System memory (RAM), holds transient data during system operation	Volatile, SODIMM socket. Removable (4 GB/8 GB/16 GB)	Yes	Unplug unit from power.
Permanent system BIOS settings	Nonvolatile; 16 KB; stored	No ²	Follow instructions below under “Clearing BIOS Settings.”
System boot ROM (BIOS)	Nonvolatile memory, 128 Mbit (16 MB) socketed, removable	No	Download the latest BIOS for your model from the HP website and follow the instructions to flash the BIOS that are on the website.
RTC (CMOS) RAM	Volatile memory, 256 bytes located in AMD embedded System on Chip (SoC)	No	<p>Desktop computers with a CMOS button:</p> <p>Unplug unit from main power, remove top cover and press the Clear CMOS button.</p> <p>Notebook and desktop computers without a CMOS button:</p> <ol style="list-style-type: none"> 1. Press and hold power button for 12 seconds. 2. Press Windows key + V, and then press power button.
Keyboard/mouse (ROM)	Nonvolatile, 2 KB embedded in the super I/O controller (SIO2)	Yes	N/A
Keyboard/mouse (RAM)	Volatile, 256 bytes embedded in the super I/O controller (SIO2)	No	Unplug unit from main power.
LOM EEPROM	Nonvolatile, 2 MB embedded in LAN controller	No	N/A
Trusted Platform Module (TPM)	Nonvolatile; 51 KB ROM for firmware and 38 KB system parametric data	No ³	Follow instructions below under “Clearing TPM.”

¹ Under typical operation, the only user data stored on the primary storage device are preferences for device configuration and settings for connections. However, the administrator can configure the system to allow users to store data locally.


² The only user data potentially stored in BIOS Settings are the ownership and asset tags, administrator password, and startup password.

³ The Trusted Platform Module might contain encrypted passwords or certificates generated from user or administrator input.

Questions and answers

Use this section to answer your questions about nonvolatile memory.

1. How can the BIOS settings be restored (returned to factory settings)?

 **IMPORTANT:** The restore defaults feature does not securely erase any information on your hard drive. See question and answer 6 for steps to securely erase information.

The restore defaults feature does not reset the Custom Secure Boot keys. See question and answer 7 for information about resetting the keys.

- Turn on or restart the computer, and then quickly press **esc**.
- Select **Main**, and then select **Apply Factory Defaults and Exit**.
- Follow the on-screen instructions.
- Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

2. What is a UEFI BIOS?

The Unified Extensible Firmware Interface (UEFI) BIOS is an industry-standard software interface between the platform firmware and an operating system (OS). It replaces the older legacy BIOS architecture.

The UEFI BIOS provides an interface to display the system information and configuration settings and to change the configuration of your computer before an OS is loaded. BIOS provides a secure runtime environment that supports a GUI. In this environment, you can use either a pointing device (touch screen, touchpad, pointing stick, or USB mouse) or the keyboard to navigate and make menu and configuration selections. The UEFI BIOS also contains basic system diagnostics.

In addition, the UEFI BIOS works to initialize the computer's hardware before loading and executing the OS; the runtime environment allows the loading and execution of software programs from storage devices to provide more functionality, such as advanced hardware diagnostics (with the ability to display more detailed system information) and advanced firmware management and recovery software.

3. Where is the UEFI BIOS located?

The UEFI BIOS is located on a flash memory chip. You must use a utility to write to the chip.

4. What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?

The DIMM SPD memory contains information about the memory module, such as size, serial number, data width, speed and timing, voltage, and thermal information. This information is written by the module manufacturer and stored on an EEPROM. You cannot write to this EEPROM when the memory module is installed in a computer. Third-party tools do exist that can write to the EEPROM when the memory module is not installed in a computer. Various third-party tools are available to read SPD memory.

5. What is meant by “Restore the nonvolatile memory found in Intel-based system boards”?

This message relates to clearing the Real Time Clock (RTC) CMOS memory that contains computer configuration data.

6. How can the BIOS security be reset to factory defaults and erase the data?



IMPORTANT: Resetting results in the loss of information.

These steps do not reset Custom Secure Boot Keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select **Main**, and then select **Reset Security to Factory Defaults**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

7. How can the Custom Secure Boot Keys be reset?

Secure Boot is a feature to ensure that only authenticated code can start on a platform. If you enabled Secure Boot and created Custom Secure Boot Keys, disabling Secure Boot does not clear the keys. You must also select to clear the Custom Secure Boot Keys. Use the same Secure Boot access procedure that you used to create the Custom Secure Boot Keys, but select to clear or delete all Secure Boot Keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu, select **Secure Boot Configuration**, and then follow the on-screen instructions.
- c. At the **Secure Boot Configuration** window, select **Secure Boot**, select **Clear Secure Boot Keys**, and then follow the on-screen instructions to continue.

12 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V AC to 120 V AC, or from 220 V AC to 240 V AC.

The three-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V AC or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 12-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1

Table 12-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
Germany	VDE	1
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
United Kingdom	ASTA	1
United States	UL	2

1. The flexible cord must be Type HO5VV-F, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, three-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V AC) or NEMA 6-15P (15 A, 250 V AC) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, three-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V AC) configuration.
4. The flexible cord must be Type RVV, three-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type HO5VV-F three-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF three-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.

7. For 127 V AC, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V AC), with UL and CSA or C-UL marks. For 240 V AC, the flexible cord must be Type H05VV-F three-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

13 Swelling or deformation of notebook battery

To protect your hardware from potential damage, HP recommends that if you are experiencing battery swelling, stop using the notebook until you can replace the battery.

You can contact HP to understand what battery replacement options are available. To learn more about Lithium-ion batteries and the factors that can accelerate battery swelling, see https://support.hp.com/us-en/document/ish_6824662-6824706-16.

Swollen notebook batteries

You might notice that your notebook battery has become somewhat deformed or swollen over time. In some cases, the battery swelling might be significant enough to impact other components of the system including the touchpad, keyboard, and chassis.

Swollen battery is not a safety issue

A swollen battery does not present a safety issue. It is the result of the generation of gases per the normal degradation of the battery cell over time.

HP has worked closely with our battery cell suppliers and third-party industry experts to help minimize the potential for HP batteries to swell over time and to identify that swollen batteries are not a safety issue.

Discontinue using a swollen battery

To protect your hardware from potential damage, HP recommends that, if you are experiencing battery swelling, you stop using the notebook until the battery can be replaced.

You can contact <https://www.hp.com/go/contacthp> to understand what battery replacement options are available.

Replace a swollen battery

If a battery is under warranty, HP will replace the battery per the terms and conditions of the HP Worldwide Limited Warranty or applicable HP Care Packs.

For batteries no longer under warranty, contact HP to purchase a genuine HP replacement battery.

Minimize battery swelling

Multiple factors can accelerate battery swelling.

To help mitigate battery swelling over time, you can use either HP Adaptive Battery Optimizer (consumer notebooks) or HP Battery Health Manager (commercial notebooks) settings to improve battery longevity and performance for various use scenarios.

HP Adaptive Battery Optimizer (consumer notebooks)

HP Adaptive Battery Optimizer technology can help mitigate the factors that cause the battery to swell. It is available on select HP OMEN, HP Spectre, HP Pavilion, and HP ENVY notebook computers.

HP Adaptive Battery Optimizer has been available on select gaming notebooks since 2019 and select consumer notebooks since 2020. To learn more about enabling HP Adaptive Battery Optimizer on your HP notebook, see <https://support.hp.com/us-en/document/c06310986>.

HP Battery Health Manager (commercial notebooks)

HP Battery Health Manager provides an easy-to-manage solution to help mitigate factors that cause the battery to swell. It is available on select HP ProBook and HP EliteBook notebook computers.

HP Battery Health Manager is available on select commercial notebooks manufactured since 2016. To learn more about HP Battery Health Manager, see https://support.hp.com/us-en/document/ish_4449597-3519507-16.

14 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

A

- AC adapter
 - spare part numbers 23
- adapter
 - spare part numbers 24
- ALS board
 - removal 67
 - spare part number 23, 67
- antenna
 - illustrated 23
 - removal 67
 - spare part number 23, 68
- audio jack board
 - illustrated 19, 75
 - removal 75
 - spare part number 19, 75
- audio jack board cable
 - illustrated 19
 - spare part number 19
- audio-out (headphone)/audio-in (microphone) combo jack, identifying 7
- audio, product description 2

B

- backup, creating 86
- backups 86
- bag
 - spare part number 24
- battery
 - illustrated 21
 - removal 41
 - spare part numbers 21, 41
- battery latch
 - removal 42
 - spare part number 42
- battery swelling 106
- bezel
 - removal 61
 - spare part numbers 62
- BIOS
 - determining version 83
 - downloading an update 84
 - preparing for an update 83
 - updating 83
- Bluetooth label 15

- boot order
 - changing using the f9 prompt 85
 - boot order, changing 88
 - bottom cover
 - illustrated 21
 - removal 38
 - spare part numbers 21, 38
 - Bracket Kit
 - contents 24
 - spare part number 24
 - buttons
 - power 12, 14
- ## C
- cable
 - spare part numbers 24
 - Cable Kit
 - contents 24
 - spare part number 24
 - camera 8
 - identifying 8
 - camera light, identifying 8
 - camera module
 - removal 65, 66
 - spare part numbers 65, 66
 - camera privacy cover, identifying 8
 - camera/microphone module
 - illustrated 23
 - spare part numbers 23
 - camera/microphone module cable
 - illustrated 23
 - spare part number 23
 - caps lock light, identifying 11
 - card reader
 - illustrated 19
 - spare part number 19
 - card reader bracket
 - illustrated 19
 - spare part number 19
 - card reader cable
 - illustrated 19
 - spare part number 19
 - caring for your computer 33
 - cautions
 - electrostatic discharge 29, 30
 - cleaning your computer 33

- caring for wood veneer 35
- disinfecting 34
- HP Easy Clean 33
- removing dirt and debris 33
- components
 - bottom 14
 - display 7
 - keyboard area 9
 - left side 5
 - rear 15
 - right side 5
- Computer Setup
 - navigating and selecting 82
 - restoring factory settings 82
 - starting 82
- computer specifications 95
- connector, power 6
- control zone 10

D

- display
 - specifications 95, 96
- display assembly
 - removal 59
 - spare part numbers 59
 - subcomponents 21
- display back cover
 - illustrated 23
 - spare part numbers 23
- display bezel
 - illustrated 22
 - spare part numbers 22
- display components 7
- display panel
 - product description 1
 - removal 62
- display panel assembly
 - illustrated 22
 - spare part numbers 22
- display panel cable
 - illustrated 23
 - removal 64
 - spare part number 23
 - spare part numbers 65
- dock
 - spare part numbers 25
- duck head adapter, spare part number 25

- E**
- electrostatic discharge (ESD) 29, 30
 - preventing damage 29-31
 - esc key, identifying 13
- F**
- fan
 - illustrated 21
 - removal 57
 - spare part number 21, 57
 - fingerprint reader
 - illustrated 19, 71
 - removal 71
 - spare part number 19, 71
 - fingerprint reader blank
 - illustrated 19
 - spare part number 19
 - fingerprint reader bracket
 - illustrated 19
 - spare part number 19, 71
 - fingerprint reader cable
 - illustrated 19
 - spare part number 19
 - fingerprint reader, identifying 13
 - fn key, identifying 13
 - fn lock light, identifying 11
- G**
- grounding methods 29-31
 - guidelines
 - packaging 29, 35
 - transporting 29, 35
 - workstation 29
- H**
- hard drive
 - product description 2
 - specifications 95
 - HDMI port, identifying 6
 - heat sink
 - illustrated 21
 - removal 76
 - spare part number 21
 - spare part numbers 76
 - hinge
 - illustrated 23
 - removal 68
 - spare part number 23, 69
 - HP PC Hardware Diagnostics UEFI
 - downloading 92
 - failure ID code 91
 - HP Hotkey Support
 - software 92
 - starting 91, 92
 - using 91
 - HP PC Hardware Diagnostics
 - Windows
 - accessing 89, 90
 - downloading 90
 - failure ID code 89
 - installing 91
 - using 89
 - HP Recovery media
 - recovery 87
 - HP Sure Recover 88
 - HP Sure Start 98
 - hub, spare part numbers 25
- I**
- I/O board
 - illustrated 20, 58
 - removal 58
 - spare part numbers 20, 58
 - I/O board cable
 - illustrated 20
 - I/O bracket
 - I/O bracket
 - illustrated 19
 - removal 79
 - spare part number 19, 79
 - I/O cable
 - spare part number 20
 - illustrated parts catalog 18
 - internal microphones, identifying 8
- J**
- jacks
 - audio-out (headphone)/audio-in (microphone) combo 7
 - network 5
 - RJ-45 (network) 5
- K**
- keyboard
 - product description 3
 - keys
 - esc 13
 - fn 13
 - Windows 13
 - Windows Copilot 13
- L**
- labels
 - Bluetooth 15
 - regulatory 15
 - serial number 15
 - service 15
 - wireless certification 15
 - WLAN 15
 - left control zone, identifying 10
 - left side components 5
 - lights
 - camera 8
 - caps lock 11
 - fn lock 11
 - microphone mute 11
 - power 6, 11
 - privacy key 11
 - RJ-45 (network) 5
 - low blue light mode 7
- M**
- memory
 - nonvolatile 98
 - volatile 98
 - memory module
 - illustrated 19
 - product description 1
 - spare part numbers 19
 - memory module shield
 - illustrated 20
 - removal 53
 - spare part number 20
 - memory module thermal pad
 - spare part number 20, 52
 - memory modules
 - removal 52
 - spare part numbers 52
 - microphone
 - product description 2
 - microphone module
 - removal 66
 - spare part number 23, 66
 - microphone mute light, identifying 11
 - middle hook
 - middle hook
 - illustrated 19
 - removal 80
 - spare part number 19, 80
 - model name 1
 - mouse, spare part numbers 25

N

- nano SIM cable
 - illustrated 20
 - spare part number 20
- network jack, identifying 5
- NFC module
 - illustrated 19, 72
 - removal 72
 - spare part number 19, 72
- NFC module cable
 - illustrated 19
 - spare part number 19
- NFC, product description 2
- nonvolatile memory 98

O

- operating system, product description 4
- optical drive, spare part number 25

P

- packaging guidelines 29, 35
- Plastics/Rubber Kit
 - contents 26
 - spare part number 26
- pointing device, product description 3
- ports
 - HDMI 6
 - product description 3
 - USB SuperSpeed 5, 6
 - USB Type-C power connector and Thunderbolt port with HP Sleep and Charge 6
- power button, identifying 12, 14
- power connector
 - identifying USB Type-C 6
- power cord
 - requirements for all countries 103
 - requirements for specific countries and regions 103
 - set requirements 103
 - spare part numbers 26, 27
- power lights 6, 11
- power requirements, product description 3
- primary storage
 - product description 2
- privacy key light 11
- processor
 - product description 1

- product description
 - audio 2
 - display panel 1
 - hard drive 2
 - keyboard 3
 - memory module 1
 - microphone 2
 - NFC 2
 - operating system 4
 - pointing device 3
 - ports 3
 - power requirements 3
 - primary storage 2
 - processors 1
 - product name 1
 - RJ-45 (network) jack 2
 - security 4
 - sensors 4
 - serviceability 4
 - solid-state drive 2
 - video 2
 - wireless 2
- product name 1
- product name and number, computer 15

R

- recovery 86
 - discs 87
 - media 87
 - USB flash drive 87
- recovery media 86
 - creating using HP Cloud Recovery Download Tool 86
 - creating using Windows tools 86
- regulatory information
 - regulatory label 15
 - wireless certification labels 15
- Remote HP PC Hardware Diagnostics UEFI settings
 - customizing 94
 - using 93
- removal and replacement procedures 38, 56
- removing personal data from volatile system memory 98
- restoring 86
- restoring and recovery methods 87
- right control zone, identifying 10
- right side components 5
- RJ-45 (network) jack, identifying 5

- RJ-45 (network) jack, product description 2
- RJ-45 (network) lights, identifying 5
- RJ-45 jack cover
 - illustrated 20
 - spare part number 20, 58
- RJ45 jack cover
 - removal 59

S

- Screw Kit, spare part number 28
- security cable slot, identifying 5
- security, product description 4
- sensors, product description 4
- serial number, computer 15
- service labels, locating 15
- serviceability, product description 4
- setup utility
 - navigating and selecting 82
 - restoring factory settings 82
- SIM card slot, identifying 5
- slots
 - security cable 5
 - SIM card 5
 - smart card 7
- smart card reader
 - removal 74
 - spare part number 74
- smart card slot, identifying 7
- solid-state drive
 - product description 2
 - specifications 96
- spare part country codes 80
- speakers
 - illustrated 21
 - removal 56
 - spare part number 21, 56
- speakers, identifying 14
- special keys, using 13
- specifications
 - computer 95
 - display 95, 96
 - hard drive 95
 - solid-state drive 96
- SSD
 - illustrated 20
 - removal 48
 - spare part numbers 20, 48
- SSD board
 - removal 70
 - spare part number 20, 70

- SSD shield
 - illustrated 20
 - removal 49
 - spare part number 20
- static electricity 29, 30
- support information 35
- Sure Start
 - using 85
- swelling or deformation of notebook battery 106
- system board
 - illustrated 19
 - removal 77
 - spare part numbers 19, 77
- system memory, removing personal data from volatile 98
- system restore 87
- system restore point, creating 86

T

- top cover and keyboard
 - illustrated 19
 - spare part numbers 19, 80
- touchpad
 - illustrated 19
 - removal 73
 - settings 9
 - spare part number 19
 - spare part numbers 73
- touchpad cable
 - illustrated 19
 - spare part number 19
- touchpad zone, identifying 10
- TPM settings 85
- transporting guidelines 29, 35
- traveling with the computer 15

U

- USB powered port, identifying 5, 6
- USB Type-C power connector and Thunderbolt port with HP Sleep and Charge, identifying 6

V

- vent, identifying 15
- video, product description 2

W

- Windows
 - backup 86
 - recovery media 86
 - system restore point 86

- Windows Copilot key, identifying 13
- Windows key, identifying 13
- Windows tools, using 86
- wireless antenna
 - illustrated 23
 - removal 67
 - spare part number 23, 68
- wireless antennas, identifying 8
- wireless certification label 15
- wireless, product description 2
- WLAN antenna
 - illustrated 23
 - spare part number 23
- WLAN antenna plate
 - removal 60
 - spare part number 60
- WLAN antenna protector
 - spare part number 21
- WLAN antennas, identifying 8
- WLAN device 15
- WLAN label 15
- WLAN module
 - illustrated 21
 - removal 54
 - spare part numbers 21, 54
- workstation guidelines 29
- WWAN antenna
 - illustrated 23
 - spare part number 23
- WWAN antenna plate
 - removal 59
 - spare part number 59
- WWAN antenna protector and foil
 - spare part number 21
- WWAN connector board
 - illustrated 20, 69
 - removal 69
 - spare part number 20, 69
- WWAN connector board cable
 - illustrated 20
 - spare part number 20
- WWAN gasket
 - spare part number 21
- WWAN module
 - illustrated 21
 - removal 50
 - spare part number 50
 - spare part numbers 21