

Getac


F110

Handgrip Strap
User Guide

Introduction

This product provides multiple functions in one piece for F110/RC11. The functions include a rotatable hand grip, a kickstand, two stylus holders, and four D-rings.

Depending on the individual F110/RC11 model, your handgrip strap is one of the below four types.

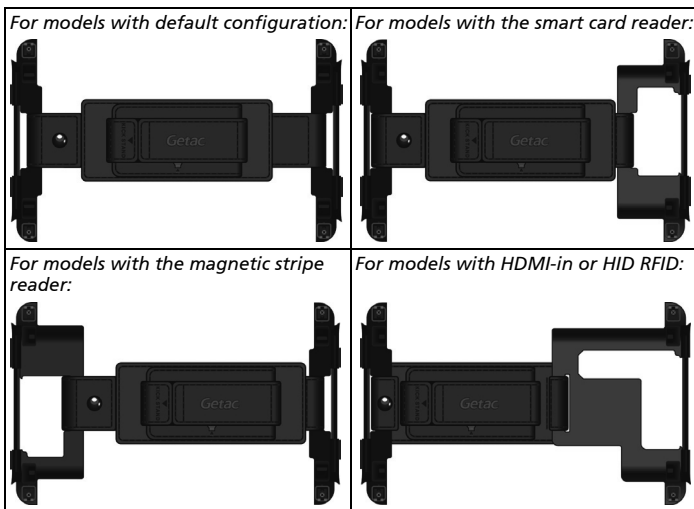


Installation

NOTE: Though all the following illustrations show only one type of the products as the example, the information apply to all four types.


1. Take the stylus out of the slot on F110/RC11.
2. This product has two brackets to be installed to the left and right sides of F110/RC11. One of the brackets has the strap attached to it.

To install the bracket, first align and fit its two front hooks to the front of F110/RC11 at an angle (❶); the hooks should grasp the bumper frame of F110/RC11. Then, press the rear part of the bracket toward the back of F110/RC11 to engage the bracket (❷).

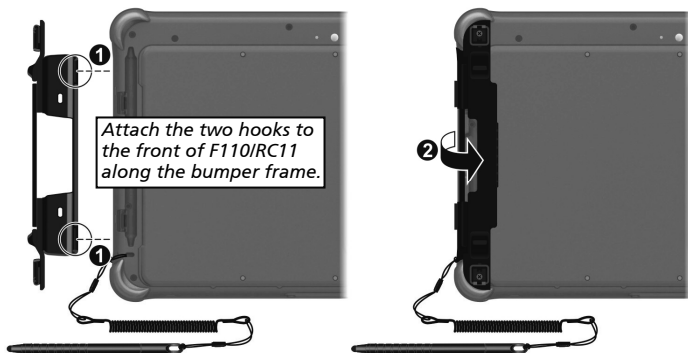

Install the other bracket to the other side of F110/RC11 in the same way.

3. Pull the free end of the strap through the opposite bracket and button up.

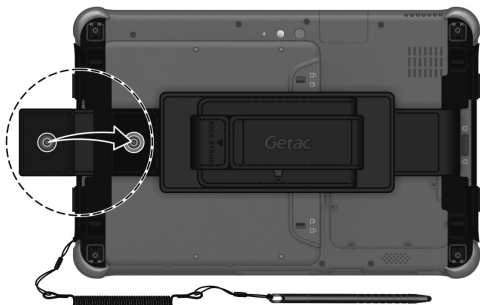

Applications

Hand Grip

Insert your fingers through the hand grip to hold F110/RC11.




This imprint indicates the surface on which you put your hand.



The hand grip is rotatable. The tightness can be adjusted.

Kickstand

1. Rotate the hand grip sideways as shown below.
2. Pull apart to open the hook-and-loop fastener.

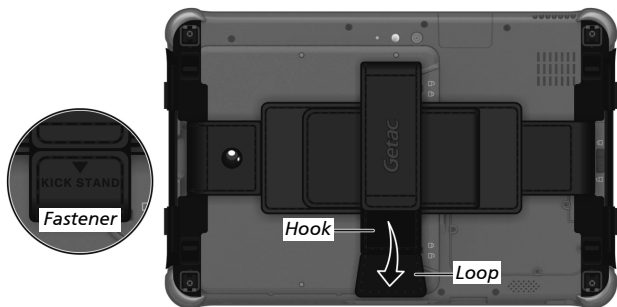

3. Extend the hand grip to form a triangle.



NOTE: When closing the hand grip, be sure to fold up the flexible band properly. Keep the folded band inside the hand grip in a flat and smooth condition.

Stylus Holders and D-rings

There are two stylus holders and four D-rings.



Notes

- If you want to seat F110/RC11 on the office dock, this handgrip strap should be removed.
- The leather part of the handgrip strap is made of PU material. It is normal for such material to undergo hydrolysis after some time of use and therefore peels off. You can replace the handgrip strap when needed.



5 6 1 8 8 5 7 1 0 0 6 R 0 0