 


1. Introduction


This Keyboard Dock provides keyboard, touchpad, and I/O functions. With the Keyboard Dock attached, your UX10 is converted into a notebook computer.

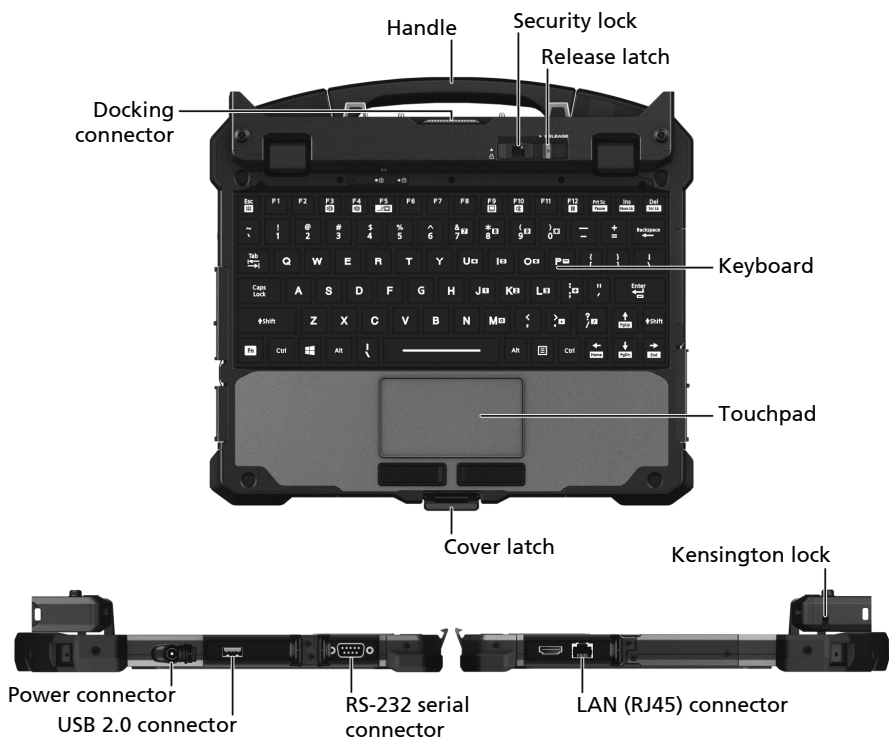

2. Attaching and Detaching the Keyboard Dock


Attaching

 1. Disconnect the AC adapter from UX10.
2. Align and put UX10 down on the holder (❶). The release latch should click into place.
3. Slide the lock of the release latch upwards to the locked position (❷).



Detaching

 1. Slide the lock of the release latch downwards to the unlocked position (❶).



2. Push the release latch toward the right, and while holding the latch (❷), lift UX10 out of the holder (❸).

 


3. Closing and Opening

Closing

After closing UX10, lift the cover latch to engage it on UX10.

CAUTION: Make sure the cover latch is engaged on UX10 while carrying the UX10 and Keyboard Dock set around.

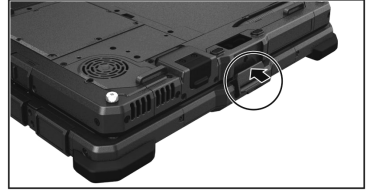

Opening

Pry open the cover latch (1) and lift up UX10 (2).

 
CAUTION: There is a limit to the tilting angle. Do not go beyond the limit (120 degrees).

While using the touchscreen function in Notebook Mode, extend the handle to stabilize the Keyboard Dock.



4. Connecting to Power

Connect the AC adapter (the one supplied with UX10) to the Keyboard Dock when you want to power/charge UX10 with external power.

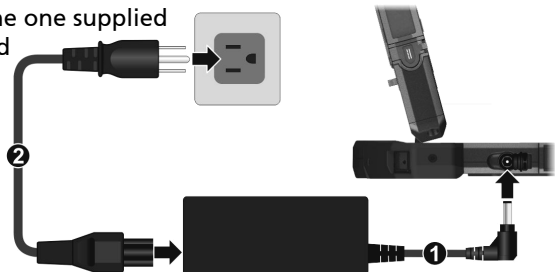

5. Using the Keyboard



The keyboard has all the standard functions of a full-sized computer keyboard plus an **Fn** key added for specific functions.





The standard functions of the keyboard can be divided into four major categories:

- **Typewriter keys**
Typewriter keys are similar to the keys on a typewriter. Several keys are added such as the **Ctrl**, **Alt**, **Esc**, and lock keys for special purposes.
- **Cursor-control keys**
Cursor-control keys include up/down/left/right arrow keys, **Page Up**, **Page Down**, **Home**, **End**, **Insert**, and **Delete** keys. They are generally used for moving and editing purposes.
- **Numeric keys**
A 15-key numeric keypad is embedded in the typewriter keys. When Num Lock is on, the numeric keys are activated; meaning you can use these keys to enter numerals.
- **Function keys**
On the top row of the keys are the function keys: **F1** to **F12**. Function keys are multi-purpose keys that perform functions defined by individual programs.


Windows Keys

The keyboard has two keys that perform Windows-specific functions:  Windows Logo key and  Application key.

The  Windows Logo key opens the **Start** menu and performs software-specific functions when used in combination with other keys. The  Application key usually has the same effect as a right mouse click.

Hot Keys

Hot keys refer to a combination of keys that can be pressed any time to activate special functions. You can easily identify the hot keys with the icons imprinted on the keytop. The hot keys are:

Keys	Descriptions
Fn + Esc	Switches the keyboard backlight on or off.
Fn + F3	Decreases the sound volume.
Fn + F4	Increases the sound volume.
Fn + F5	Switches the display output to the next choice if an external display is connected. The hot keys are equivalent to  Windows logo key + P.
Fn + F9	Switches the touchpad off or on.
Fn + F10	Switches the system sound output off (mute) or on.
Fn + F12	Serves as the sleep button that you can define with Windows' Power Options .

6. Using the Touchpad

The touchpad consists of a rectangular pad (work surface) and left and right buttons. As you slide your fingertip across the pad, the pointer (also called cursor) on the screen moves accordingly.



Here are some common terms that you should know when using the touchpad:

Terms	Actions
Point	Move your finger on the pad until the cursor points to the selection on the screen.
Click	Press and release the left button. –or– Tap gently anywhere on the pad.
Double-click	Press and release the left button twice in quick succession. –or– Tap twice on the pad rapidly.
Drag and drop	Press and hold the left button, then move your finger until you reach your destination (drag). Finally, release the button (drop) when you finish dragging your selection to the destination. The object will drop into the new location. –or– Gently tap twice on the pad and on the second tap, keep your finger in contact with the pad. Then, move your finger across the pad to drag the selected object to your destination. When you lift your finger from the pad, the selected object will drop into place.

Configuring the Touchpad

You may want to configure the touchpad to suit your needs. To configure the touchpad, go to **Control Panel**.

7. *Class B Regulations*

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission Radio Frequency Interference Statement

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Please note:

The use of a non-shielded interface cable with this equipment is prohibited.




Company name	Getac Inc.
Address	15495 Sand Canyon Rd., Suite 350 Irvine, CA 92618 USA
Phone	+1-949-681-2900



Company name	Getac Technology GmbH.
Address	Kanzlerstrasse 4 40472 Dusseldorf, Germany
Phone	+49 (0) 211-984819-0



Company name	Getac UK Ltd.
Address	Getac House, Stafford Park 12, Telford, Shropshire, TF3 3BJ, UK
Phone	+44 (0) 1952-207-222

 

5 6 1 5 1 4 1 1 0 0 1 6 R 0 0