 


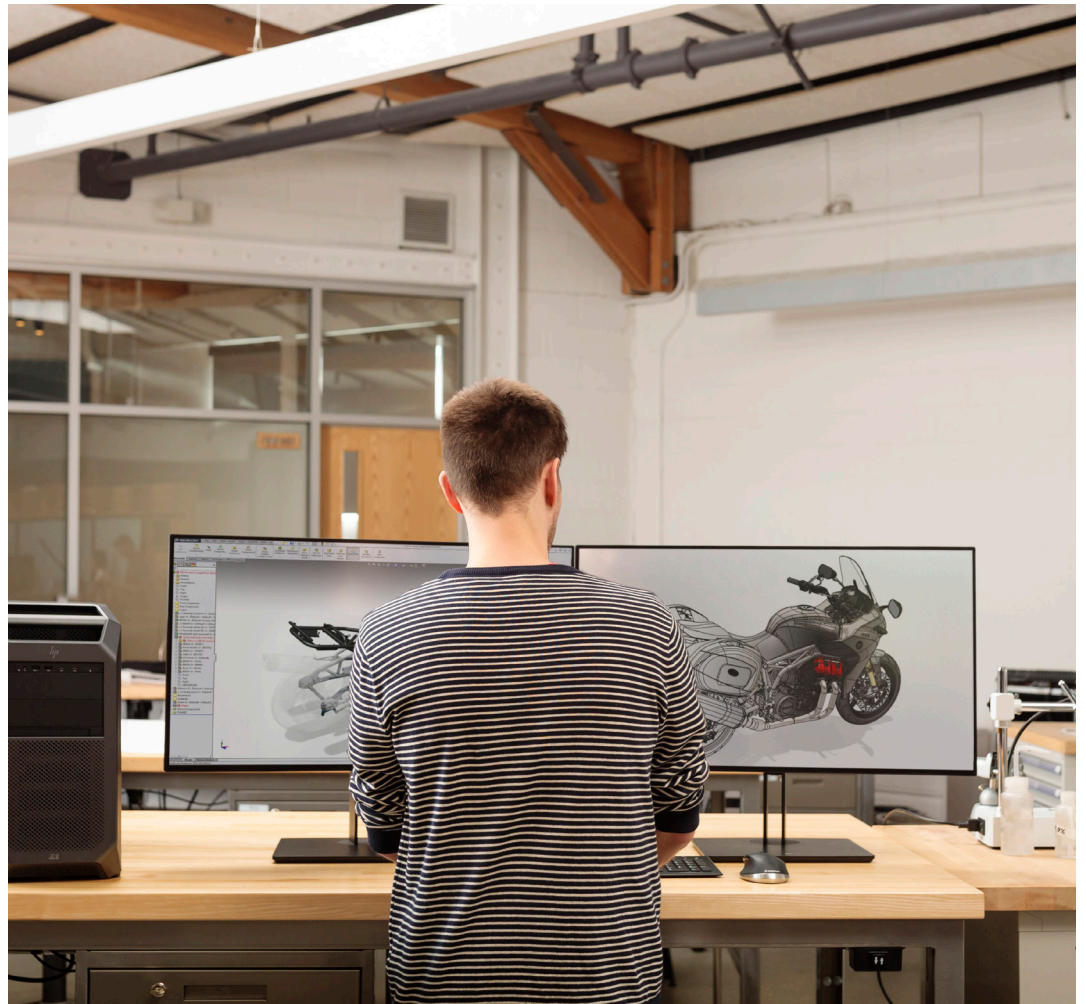

# Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-39
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136



# Linux Hardware Matrix

## General notes that apply to all platforms

Last updated: March 2024

### Purpose of the Linux Hardware Matrix

The HP Workstations Linux Hardware Matrix provides per-platform advisory information about the functionality of HP Workstations and the hardware components applicable to them, under several Linux distributions such as Red Hat Enterprise Linux (RHEL), SUSE Linux Enterprise Desktop (SLED), and Ubuntu LTS.

For similar information about Linux component support in older HP Workstations, please refer to the Archive Linux Hardware Matrix. You can find this by searching for the platform at [www.hp.com/go/workstationsupport](http://www.hp.com/go/workstationsupport) and choosing the Manuals content.

**The Linux Hardware Matrix does not represent the issue support that you can expect from the Linux OS distributor. Please see the section below entitled "Important information about OS support."**



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136



## About Linux OS release streams

As technology advances, newer releases of Linux distributions are more likely to have sufficient support for new hardware (processors and chipset architectures, storage controllers, etc.) than are older releases in the same streams. **"As a result, it is not often reasonable to expect older releases in the stream to enable newer platforms."**

The Linux Hardware Matrix shows information for releases that provide reasonably complete functionality for the platform and components, using drivers that are part of the distribution, unless noted to the contrary. The releases shown are typically the most current at the time that the platform was launched, but in some cases an already-existing release may provide good functionality. It is advisable to apply the distributor's most recent maintenance updates in order to get defect and security fixes (and in some cases, additional hardware enablement).



## Important information about OS support

 
Distributors of enterprise-class Linux releases have certification processes that verify that a particular platform is functional and supportable. Most distributors will not support issues that arise on non-certified platforms. Therefore, it is important that you consult the vendor's certification website to verify certification for the OS release you are planning to use.

### Here are the sites for distributions covered in this document:

SUSE: <https://www.suse.com/yessearch/Search.jsp>

RED HAT: <https://access.redhat.com/ecosystem/search/#/ecosystem>

UBUNTU: <http://www.ubuntu.com/certification/desktop>



## How to use this document

Please remember that the general notes on this page apply to all platforms in this Linux Hardware Matrix. If you print out platform pages, be sure to print this one also.

The platform-specific pages in this matrix are formatted as follows:

- The platform is identified at the top of the page. For some platforms, the original releases on which the platform was certified by Linux distributors are noted. However, the Linux vendor certification site is always the authoritative source.
- Built-in (onboard) and optional components are listed in the left-hand column. This set of components initially represents what was listed as available at the time the platform was launched. The list may be updated periodically as new options are added. However, it is not an authoritative list of product options. Please see the platform specification (QuickSpecs), available at [www.hp.com](http://www.hp.com), for the most up-to-date list.
- One or more OS distribution columns are shown to the right of the components column. The headers of these columns identify the OSes for which functionality has been evaluated by HP. In some cases, these columns have been updated since the platform was launched. Component functionality is expected to be retained later in the same OS release stream, and some missing functionality might be added. For example, a component might be usable in RHEL 6.1 "or later," implying RHEL 6.2, 6.3... (See the note above entitled "About Linux OS Release Streams.")
- A solid circle in a cell represents usable functionality with the combination of OS release shown in the column header and the component, using drivers that are part of the distribution.
- A blank cell represents absence of functionality with default drivers. This does not mean that the component is necessarily useless—you may have to download and possibly build a driver from another source, such as the component manufacturer's website or an open source community site. Or, as mentioned, the support might have been added in a subsequent release in the same OS stream, or an available update.
- A number represents a reference to a footnote. Footnotes are located at the bottom of the page.
- If a version of enterprise Linux is not shown on a platform's page, it should be interpreted as that particular version cannot be supported on the system. This may often be the case comparing one generation of system to the newer generation (i.e. N vs N+1).



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z1 G6 Entry Tower

**Certified on RHEL 8.6, RHEL 9.0, Ubuntu 20.04.**  
**Certifications in progress - SLE 15/SP4 and Ubuntu 22.04.**

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.2 or later (x86_64)	Ubuntu 20.04.2 or later (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•
HP Localization Kit	1	1	1
<b>All Supported Processors</b>			
10th generation Intel® Core™ i9/i7/i5/i3/Pentium® processors	•	•	•
<b>Graphics Card (Video Card) (See footnote 2)</b>			
No Graphics Card	•	•	•
Intel® UHD Graphics 630 (on v10 Core™ Pentium® Gold G6600/G6500/i3/i5/i7/i9-10xxx processors)	2, 10	2, 10	2, 10
Intel® UHD Graphics 610 for v10 Pentium® Gold G6400 processors	2, 10	2, 10	2, 10
AMD Radeon™ RX 550X (4 GB HDMI)	3	3	3
AMD Radeon™ R7 430 (2 GDDR5 DP+VGA)	3	3	3
AMD Radeon™ R4 430 (2 GB GDDR5 2DP)	3	3	3
NVIDIA® GeForce® consumer graphics cards	4	4	4
NVIDIA® P400 (2 GB Frame buffer)	4	4	4
NVIDIA® P620 (2 GB Frame buffer)	4	4	4
NVIDIA® P1000 (4 GB Frame buffer)	4	4	4
NVIDIA® P2200 (5 GB Frame buffer)	4	4	4
NVIDIA® Quadro® RTX 4000 (8 GB Frame buffer)	4	4	4
NVIDIA® Quadro® RTX 5000 (16 GB Frame buffer)	4	4	4
<b>System RAM</b>			
Minimum (GB)	4 GB	4 GB	4 GB
Maximum (GB)	128 GB	128 GB	128 GB
<b>Storage</b>			
All Supported Solid State Drives	•	•	•
All Supported SATA Disk Drives	•	•	•
All Supported PCIe NVMe SSD's	•	•	•
HP Media Card Reader	•	•	•
<b>Network Cards</b>			
Intel® Ethernet Network Adapter i210-T1 1 Gb NIC	•	•	•
<b>Integrated Components</b>			
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•
Intel® AMT functionality on Wired LAN	8	8	8
Intel® AX201 Wireless LAN (802.11 a/b/g/n/ac/ax) and BT5	•	•	•
Realtek RTL8822CE 2x2 wireless LAN (802.11ac) + BT5	•	•	•
Onboard Audio	•	•	•
Onboard Intel® integrated SATA RAID (0/1/5/10)	9	9	9
Serial port (RS-232)	•	•	•
USB 3.2 G1 Type A ports (5Gbps)	•	•	•
USB 3.2 G2 Type A and Type-C™ ports (10Gbps)	•	•	•
Flexible I/O port options (including DP 1.4, HDMI 2.0a, VGA, USB)	•	•	•
HP BD-RE (Blu-Ray writer)	5	5	5



Linux Hardware Matrix

# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z1 G6 Entry Tower (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.2 or later (x86_64)	Ubuntu 20.04.2 or later (x86_64)
<b>Removable CD/DVD Media</b>			
HP DVD-ROM Drive	•	•	•
HP DVD RW Supermulti Drive	5	5	5
<b>Input/Output Devices</b>			
HP USB mouse options	•	•	•
HP USB keyboard options	•	•	•
HP Printers	6	6	6
All Supported Monitors	•	•	•
TPM Module / SmartCard	7	7	7
HP Serial Port Adapter	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The Intel® HD graphics works with the in-box frame buffer drivers. Support for the "native" Intel® driver and modesetting driver on v10 processors (CometLake) is not available for some release streams as of this edition of the table.

<sup>3</sup> AMD Radeon™ Pro graphics are supported by the amdgpu-pro driver stack. An 18.10 or later driver is recommended for this platform. Some OS distributions may have the amdgpu-open driver built in.

<sup>4</sup> HP recommends use of NVIDIA® driver 460.73.01 (or newer) on NVIDIA® graphics options.

<sup>5</sup> Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes.

<sup>6</sup> For more info about Linux driver support for HP printers, please visit <http://www.hpip.net>.

<sup>7</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software.

<sup>8</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>9</sup> For SATA device support, older Linux kernels may not carry hardware IDs to recognize the Intel® Comet Lake-S PCH chipset for AHCI in RAID-mode. Disabling the default RAID-mode for the storage controller in the "System Options" section of the F10 Setup menu for BIOS will enable proper AHCI SATA support for most kernels.

<sup>10</sup> Integrated Intel® HD graphics are enabled by default in factory default BIOS settings regardless of additional graphics cards. If your Linux distribution cannot support simultaneous mixed-mode graphics and drivers, then disable the integrated video options under the Advanced settings tab in F10 Setup menu for built-in options. This will hide integrated graphics devices when discrete graphics cards are also installed.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z1 G5 Entry Tower

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.  
 HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.1 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>HP Workstation Base System</b>					
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•
HP Localization Kit	1	1	1	1	1
<b>All Supported Processors</b>					
8th and 9th generation Intel® Core™ i7/i5/i3/Pentium® processors	•	•	•	•	•
<b>Graphics Card (Video Card)</b>					
No Graphics Card	•	•	•	•	•
Intel® UHD Graphics 630 & 610 (on v8 Core™ i3/i5/i7/Pentium® processors)	•	•	•	•	•
Intel® UHD Graphics 630 for (on v9 Core™ i3/i5/i7/Pentium® processors)	•	•	•	•	•
AMD Consumer graphics cards	2	2	2	2	2
NVIDIA® Consumer graphics cards	2	2	2	2	2
NVIDIA® Quadro® P400 (2 GB Frame buffer)	3	3	3	3	3
NVIDIA® Quadro® P620 (2 GB Frame buffer)	3	3	3	3	3
<b>System RAM</b>					
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum (GB) X-series processor/W processor	64 GB	64 GB	64 GB	64 GB	64 GB
<b>Hard Disks</b>					
All Supported Solid State Drives	•	•	•	•	•
All Supported SATA Disk Drives <= 2 TB	•	•	•	•	•
All Supported SATA Disk Drives > 2 TB	4	4	4	4	4
<b>Storage acceleration</b>					
Intel® Optane™ 16 GB memory module					
<b>Network Cards</b>					
Intel® i210-T1 PCIe Single Port 1 Gb NIC	•	•	•	•	•
<b>Integrated Components</b>					
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•	•
Intel® AMT functionality on Wired LAN	7	7	7	7	7
Intel® AX200 802.11 a/b/g/n/ac/ax (Wi-Fi 6) WLAN + Bluetooth® 5 PCIe NIC	8	8	8	8	•
Intel® 9560 Wireless LAN (802.11 a/b/g/n/ac) and Bluetooth® 5 Module	•	•	•	•	•
Realtek RTL8822BE/8821CE (802.11ac) with Bluetooth®	•	•	•	•	•
Onboard Audio (Conexant CX20632)	•	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1)	•	•	•	•	•
USB 3.1 G1 Type A ports	•	•	•	•	•
USB 3.1 G2 Type-C™ ports	•	•	•	•	•
Flexible I/O port options (including Thunderbolt™ 3 options)	•	•	•	•	•
<b>Removable CD/DVD Media</b>					
HP 9.5 mm Slim DVD-ROM Drive	•	•	•	•	•
HP 9.5 mm Slim DVD Writer Drive	•	•	•	•	•
HP 9.5 mm Slim Blu-Ray writer Drive	•	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z1 G5 Entry Tower (continued)

**Product Items/Features**  
(Blank box indicates the listed component is NOT functional w/ as-is OS)

RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.1 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
----------------------------	----------------------------	----------------------------------	----------------------------------	--------------------------------

### Input/Output Devices (no spaceball support)

HP USB mouse options	•	•	•	•
HP USB keyboard options	•	•	•	•
HP Media Card Reader	•	•	•	•
HP Printers	5	5	5	5
TPM Module / SmartCard	6	6	6	6
HP Serial Port Adapter	•	•	•	•
HP Serial Port + Parallel Port Adapter	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Support for consumer grade graphics cards is provided directly from the graphics vendor. HP does not provide software support for consumer cards.

<sup>3</sup> For NVIDIA® Professional Quadro® cards, HP recommends using the 418.56 (or newer) driver.

<sup>4</sup> Single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. The OS's listed can create GPT formatted storage drives/volumes but this requires installation of the OS in UEFI mode. Once formatted and installed, the OS can access the entirety of storage drives/volumes.

<sup>5</sup> For more info about Linux driver support for HP printers, please visit <http://www.hpip.net>.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software.

<sup>7</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>8</sup> The AX200 Wi-Fi/BT solution may not yet be supported in existing distributions unless they are quite recent. Please check with your distribution provider for details.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Mini G9 Workstation

Certified on RHEL 8.6 (12th Gen), RHEL 8.8 (13th Gen), RHEL 8.9 (14th Gen)\*\*, RHEL 9.0 (12th Gen), RHEL 9.2 (13th Gen), RHEL 9.3 (14th Gen)\*\* Ubuntu 20.04, Ubuntu 22.04. SLE 15/SP5 certifications in progress. RHEL 7, SLED 12 and Ubuntu 18.04 are not supportable by HP on Z2 G9.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel architecture used in this system. HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/ SP4 or later (x86_64)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)
<b>HP Workstation Base System</b>					
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•
HP Localization Kit	1	1	1	1	1
<b>All Supported Processors</b>					
12th generation Intel® Core™ i9/i7/i5/i3 processors	•	•	•	•	•
13th generation Intel® Core™ i9/i7/i5/i3 processors	12	RHEL 8.8 or later	RHEL 9.2 or later	12	•
14th generation Intel Core™ i9/i7/i5 processors	14	14	14	14	14
<b>Graphics Card (Video Card)</b>					
No Graphics Card	•	•	•	•	•
Intel® UHD Graphics 770 (on v12 Core™ i9/i7/i5-12xxx processors)	2, 8	2, 8	2, 8	2, 8	2, 8
Intel® UHD Graphics 730 (on v12 Core™ i5/i3-12xxx processors)	2, 8	2, 8	2, 8	2, 8	2, 8
Intel® UHD Graphics 770 (on v13 Core™ i9/i7/i5-13xxx processors)	2,8	2,8	2,8	2,8	2,8
Intel® UHD Graphics 730 (on v13 Core™ i5/i3-13xxx processors)	2,8	2,8	2,8	2,8	2,8
Intel® UHD Graphics 770 (on v14 Core™ i9/i7/i5-14xxx processors)	2,8	2,8	2,8	2,8	2,8
Intel® UHD Graphics 730 (on v14 Core™ i5-14xxx processors)	2,8	2,8	2,8	2,8	2,8
NVIDIA® T400 (2 GB / 4 GB Frame buffer)	3	3	3	3	3
NVIDIA® T600 (4 GB Frame buffer)	3	3	3	3	3
NVIDIA® T1000 (4 GB / 8 GB Frame buffer)	3	3	3	3	3
NVIDIA® RTX® A2000 (6 GB / 12 GB Frame buffer)	3	3	3	3	3
<b>System RAM</b>					
Minimum (GB)	8 GB	8 GB	8 GB	8 GB	8 GB
Maximum (GB)	128 GB	128 GB	128 GB	128 GB	128 GB
<b>Hard Disks</b>					
Intel® Volume Management Device (VMD) - BIOS F10 Setup (Advanced >> System Options)	10	10	10	10	10
All HP-configurable Solid State Drives	10	10	10	10	10
HP Z Turbo Drive PCIe® NVMe™ SSD storage	10	10	10	10	10
<b>Integrated Components</b>					
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•	•
Intel® AMT functionality on Wired LAN	7	7	7	7	7
Intel® AX211 Wireless 6E LAN (802.11 a/b/g/n/ac/ax) and Bluetooth 5.2 Module	•	•	•	•	•
Intel® BE200 Wireless 7 LAN (802.11 a/b/d/e/g/n/ac/ax/be) and Bluetooth 5.4 Module	14	14	14	14	14,15
Onboard Audio (Realtek ALC3205)	•	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1)	13	13	13	13	13
USB 3.2 G1 Type A ports (5Gbps)	•	•	•	•	•
USB 3.2 G2 Type A and Type-C™ ports (10Gbps)	•	•	•	•	•
USB 3.2 G2x2 Type-C™ ports (20Gbps)	•	•	•	•	•
Flexible I/O port options (including Thunderbolt™ 3 options)	11	11	11	11	11



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Mini G9 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/ SP4 or later (x86_64)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)
<b>Removable CD/DVD Media (External USB)</b>					
HP DVD RW Supermulti Drive	4	4	4	4	4
HP BD-RE (Blu-Ray writer)	4	4	4	4	4
<b>Input/Output Devices</b>					
HP USB mouse options	9	9	9	9	9
HP USB keyboard options	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•
HP Printers	5	5	5	5	5
TPM Module / SmartCard	6	6	6	6	6
HP Serial Port Adapter	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The Intel HD graphics works with the in-box frame buffer drivers. Support for the "native" Intel driver and modesetting driver on v12 processors (AlderLake), v13 (RaptorLake), v14 (RaptorLake Refresh) may not be available for users requiring older Linux release streams.

<sup>3</sup> HP recommends use of NVIDIA® driver 470.86 (or newer) on NVIDIA® graphics options.

<sup>4</sup> Linux open-source toolset (growisofs) supports DVD+RW and Blu-ray media on the listed OSes.

<sup>5</sup> For more info about Linux open-source driver support for HP printers, please visit <http://www.hp.com>.

<sup>6</sup> Open-source support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software supported by your preferred Linux distributor.

<sup>7</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>8</sup> Integrated Intel® HD graphics are enabled by default in factory default BIOS settings regardless of additional graphics cards. If your Linux distribution cannot support simultaneous mixed-mode graphics and drivers, then disable the integrated video options under the Advanced settings tab in F10 Setup menus for built-in options. This will hide integrated graphics devices when discrete graphics cards are also installed.

<sup>9</sup> Spaceball input devices require drivers that may or may not be compatible with your Linux distribution or version. Please refer to the manufacturer site for additional support of these devices.

<sup>10</sup> Intel® Volume Management Device (VMD) technology is an additional layer of NVMe storage device management that may not be compatible with older Linux kernels lacking current controller IDs such as `0x467F` for 12th Gen Core processors (see [kernel.org](http://kernel.org): `<VERSION>/root/drivers/pci/controller/vmd.c`). This can cause some storage device drivers to fail and make storage devices invisible under these conditions. VMD RAID controller management can be disabled in system BIOS under the Advanced / System Options menu if necessary.

<sup>11</sup> Older Linux kernels may not properly recognize the Allied Telesys AT-29M2 1GbE Fibre Networking module based upon AT-29M2AF chipsets (lsusb command will report ID 07C9:0012). A vendor workaround procedure involves patching the lan78xx USB networking kernel module with vendor ID (0x07C9) and product ID (0x0012) for specific kernel sources compatible with a user-installed Linux operating system (`linux-version/drivers/net/usb/lan78xx.c`). Additional details available at [HP.com](http://HP.com) under Linux drivers for this platform.

<sup>12</sup> The distro version listed does not fully support 13th Generation processors. See certified version numbers in the page header for specific 13th Generation processor support. Some features such as the VMD storage controller (which differs between the different SKUs of the processors) are not recognized by the kernels in these listed distros.

<sup>13</sup> Intel does not support Intel Rapid Storage Technology (iRST) on Linux. Availability for 12th, 13th, 14th (and beyond) generation Intel Core processors using Intel Volume Management Device (VMD) is subject completely to open-source community enablement. iRST-defined RAID volumes (via F3 BIOS setup) require VMD-aware versions of mdadm patched for recognizing RAID metadata and domains managed by VMD. All other distributions (certified or not) only support software mdadm-defined operations for definition, grouping (assemblage), etc. outside of their installation scenarios to create and work with software RAID volumes. SATA volumes for iRST and VMD are not recognized by mdadm on Linux at this time. Red Hat Enterprise Linux (RHEL 8.8 or later for 13th generation Intel Core products) recognizes NVMe RAID volumes defined by iRST + VMD. Consult your distro provider for additional support details.

<sup>14</sup> 14th Generation Intel Core processors with support for Intel Wi-Fi 7 (5 Gig) will require future kernel and firmware revisions. Currently, CPU-only (without BE200 wireless support) are certified supportable with RHEL 8.9, RHEL 9.3 releases. SLED15/SP5 and Ubuntu 22.04.4 can also support 14th Gen Intel Core CPU-only. Intel BE200 wireless (Wi-Fi 7 / Bluetooth) module support is pending release at this time. Please contact your OS vendor for more information.

<sup>15</sup> Z2 G9 workstations with Intel 14th Generation Core processors and Intel BE200 wireless options will currently support Wi-Fi 6E speeds when delivered on configurations purchased with Ubuntu 22.04 preloaded with certified OS images for HP. Check with your distribution for Intel BE200 firmware and driver updates that will enable the device and allow Wi-Fi 7 capability.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Mini G5 Workstation

Certified on Ubuntu 20.04 and RHEL 8.3

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/SP2 or later (x86_64)	RHEL 8.3 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 18.04.5 or later (x86_64)	Ubuntu 20.04 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>HP Workstation Base System</b>						
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•	•
HP Localization Kit	1	1	1	1	1	1
<b>All Supported Processors</b>						
10th generation Intel® Core™ i7/i5/i3 and Xeon® processors	•	•	•	•	•	•
Graphics Card (Video Card) (See footnote 2)						
Intel® HD Graphics 630 (on v10 Core™ i3/i5/i7-10xxx processors)	2	2	2	2	2	2
Intel® HD Graphics P630 for v10 Xeon® W processors based on Unified Memory Architecture	2	2	2	2	2	2
AMD Radeon™ Pro WX 3200 with 4 GB of graphics memory	3	3	3	3	3	3
NVIDIA® Quadro® P620 with 4 GB of graphics memory	4, 7	4, 7	4, 7	4, 7	4, 7	4, 7
NVIDIA® Quadro® T1000 with 4 GB of graphics memory	4, 7	4, 7	4, 7	4, 7	4, 7	4, 7
NVIDIA® Quadro® T2000 with 4 GB of graphics memory	4, 7	4, 7	4, 7	4, 7	4, 7	4, 7
NVIDIA® Quadro® RTX 3000 with 6 GB frame buffer	4, 7	4, 7	4, 7	4, 7	4, 7	4, 7
<b>System RAM</b>						
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB	64 GB	64 GB	64 GB	64 GB	64 GB
<b>Hard Disks</b>						
All Supported 2.5" AHCI SATA Drives	9	9	9	9	9	9
All Supported SATA Solid State Drives	9	9	9	9	9	9
HP Z Turbo Drive G2 PCIe® NVMe™ SSD storage	•	•	•	•	•	•
<b>Integrated Components</b>						
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•	•	•
Intel® AMT functionality on Wired LAN	8	8	8	8	8	8
Intel® AX201 Wireless LAN (802.11 a/b/g/n/ac/ax) and Bluetooth® 5 Module	•	•	•	•	•	•
Onboard Audio (Realtek ALC3601)	•	•	•	•	•	•
USB 3.1 G1 Type A ports	•	•	•	•	•	•
USB 3.1 G2 Type-C™ ports	•	•	•	•	•	•
Flexible I/O port options (including Thunderbolt™ 3 options)	10	10	10	10	10	10
<b>Input/Output Devices (no spaceball support)</b>						
HP USB mouse options	•	•	•	•	•	•
HP USB keyboard options	•	•	•	•	•	•
HP Printers	6	6	6	6	6	6
All Supported Monitors	•	•	•	•	•	•
TPM Module / SmartCard	5	5	5	5	5	5
HP Serial Port Adapter	•	•	•	•	•	•



## Linux Hardware Matrix

# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

## HP Z2 Mini G5 Workstation (continued)

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The Intel® HD graphics works with the in-box frame buffer drivers. Support for the "native" Intel® driver and modesetting driver on v<sup>10</sup> processors (CometLake) is not available for some release streams as of this edition of the table.

<sup>3</sup> AMD Radeon™ Pro graphics are supported by the amdgpu-pro driver stack. An 18.10 or later driver is recommended for this platform. Some OS distributions may have the amdgpu-open driver built in.

<sup>4</sup> HP recommends use of NVIDIA® driver 460.67 (or newer) on NVIDIA® graphics options.

<sup>5</sup> Usability of the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software.

<sup>6</sup> For more info about Linux driver support for HP printers, please visit <http://www.hplic.net>.

<sup>7</sup> On the performance model, the NVIDIA® and AMD gpus support a maximum of only four DisplayPort outputs in any combination of connections (one of which may require an adapter to accommodate displays). Heterogenous use of the Intel® graphics port is not recommended until general improvements are made in Linux for heterogeneous GPU support.

<sup>8</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution.

<sup>9</sup> For SATA device support, older Linux kernels may not carry hardware IDs to recognize the Intel® CometLake-H PCH chipset for AHCI in RAID-mode. Disabling the default RAID-mode for the storage controller in the "System Options" section of the F10 Setup menu for BIOS will enable proper AHCI SATA support for most kernels.

<sup>9</sup> The HP Flex 1GbE Fiber LC single port option is not currently supported out of the box with any current Linux distribution. Contact HP for instructions on how to make use of this module if interested. All other Flex options are functional.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Mini G4 Workstation Performance & Entry models



Certified on RHEL 7.5, RHEL 8.0, SLES12/SP4+WE and SLES/SLED 15.

As of this edition of this matrix, some enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12/ SP4 or later (x86_64)	SLED 15 or later (x86_64)	RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.1 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>HP Workstation Base System</b>							
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•	•	•
HP Localization Kit	1	1	1	1	1	1	1
<b>All Supported Processors</b>							
8th generation Intel® Core™ i7/i5/i3 and Xeon® processors	•	•	•	•	•	•	•
<b>Graphics Card (Video Card) (See footnote 2)</b>							
Intel® HD Graphics 630 (on v8 Core™ i3/i5/i7-8xxx processors)	2	2	2	2	2	2	•
Intel® HD Graphics P630 for v8 Xeon® E processors based on Unified Memory Architecture	2	2	2	2	2	2	•
AMD Radeon™ Pro WX 3200 (4 GB GDDR5 Frame buffer)	3, 10	3, 10	3, 10	3, 10	3, 10	3, 10	3, 10
AMD Radeon™ Pro WX 4150 with 4 GB of graphics memory	3	3	3	3	3	3	•
NVIDIA® Quadro® P600 with 4 GB of graphics memory	4, 7	4, 7	4, 7	4, 7	4, 7	4, 7	4, 7
NVIDIA® Quadro® P1000 with 4 GB of graphics memory	4, 7	4, 7	4, 7	4, 7	4, 7	4, 7	4, 7
<b>System RAM</b>							
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	32 GB	32 GB	32 GB	32 GB	32 GB	32 GB	32 GB
<b>Hard Disks</b>							
All Supported 2.5" AHCI SATA Drives	•	•	•	•	•	•	•
All Supported SATA Solid State Drives	•	•	•	•	•	•	•
HP Z Turbo Drive G2 PCIe® NVMe™ SSD storage	•	•	•	•	•	•	•
<b>Integrated Components</b>							
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•	•	•	•
Intel® AMT functionality on Wired LAN	9	9	9	9	9	9	9
Intel® 9560 Wireless LAN (802.11 a/b/g/n/ac) and Bluetooth® 5 Module	•	•	•	•	8	•	•
Onboard Audio (Conexant CX20632)	•	•	•	•	•	•	•
USB 3.1 G1 Type A ports	•	•	•	•	•	•	•
USB 3.1 G2 Type C™ ports	•	•	•	•	•	•	•
Flexible I/O port options (including Thunderbolt™ 3 options)	•	•	•	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Mini G4 Workstation Performance & Entry models (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12/ SP4 or later (x86_64)	SLED 15 or later (x86_64)	RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.1 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
--	---	---------------------------------	----------------------------------	----------------------------------	---	---	---

### Input/Output Devices (no spaceball support)

HP USB mouse options	•	•	•	•	•	•	•
HP USB keyboard options	•	•	•	•	•	•	•
HP Printers	6	6	6	6	6	6	6
All Supported Monitors	•	•	•	•	•	•	•
TPM Module / SmartCard	5	5	5	5	5	5	5
HP Serial Port Adapter	•	•	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The Intel® HD graphics works with the in-box frame buffer drivers. Support for the "native" Intel® driver and modesetting driver on v8 processors (CoffeeLake) is not available for most release streams as of this edition of the table.

<sup>3</sup> AMD Radeon™ Pro graphics are supported by the amdgpu-pro driver stack. An 18.10 or later driver is recommended for this platform. Some OS distributions may have the amdgpu-open driver built in. AMD Pro driver support for Ubuntu 18.04 is pending.

<sup>4</sup> Canonical provides up-to-date versions of the Nvidia® proprietary driver in their software repositories. HP recommends customer use one of the choices provided by Canonical as well as use their software update tool.

<sup>5</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software.

<sup>6</sup> For more info about Linux driver support for HP printers, please visit <http://www.hp.com>

<sup>7</sup> On the performance model, the NVIDIA® and AMD gpus support a maximum of only four DisplayPort outputs in any combination of connections (one of which may require an adapter to accommodate displays). Heterogeneous use of the Intel® graphics port is not recommended until general improvements are made in Linux for heterogeneous GPU support.

<sup>8</sup> Intel® 9560 Wireless support for WLAN on Ubuntu 16.04.5 is currently not functional due to firmware version incompatibility (although Bluetooth® is supported on this release). The Ubuntu 18.04 LTS release stream is fully functional for integrated WLAN and Bluetooth®.

<sup>7</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>8</sup> It may be necessary to use the 'nomodeset' option at install time if the distribution's install does not function properly with this card.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Mini G3 Workstation Performance & Entry models



Officially certified on RHEL 7.4, SLED 12/SP2, and SLED 12/SP3.  
No certification on Ubuntu 16.04 is planned at this time, but HP is supporting use of 16.04.1 (or newer) on this platform.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 6.8 or later (x86_64)	RHEL 7.5 or later (x86_64)	SLED 12/SP2 or later (x86_64)	Ubuntu 16.04.1 (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
All supported 7th generation Intel® Core™ i7, i5 and Xeon® processors	•	•	•	•
Hyperthreading	•	•	•	•
<b>Graphics Card (Video Card)</b>				
Intel® HD Graphics 530 (on v5 Core™ i3/i5/i7-6xxx processors)	2, 5	2, 5	2, 5	2, 5
Intel® HD Graphics P530 for v5 Xeon® E3 processors based on Unified Memory Architecture (UMA)	2, 5	2, 5	2, 5	2, 5
Intel® HD Graphics 630 (on v6 Core™ i3/i5/i7-6xxx processors)	2, 5	2, 5	2, 5	2, 5
Intel® HD Graphics P630 for v6 Xeon® E3 processors based on Unified Memory Architecture (UMA)	2, 5	2, 5	2, 5	2, 5
NVIDIA® Quadro® M620 with 2 GB of graphics memory	3, 5	3, 5	3, 5	3, 5, 6
<b>System RAM</b>				
Minimum (GB)	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	32 GB	32 GB	32 GB	32 GB
<b>Hard Disks</b>				
All supported 2.5" AHCI SATA Drives	•	•	•	•
All Supported SATA SSD's	•	•	•	•
All Supported HP Z Turbo Drive NVMe PCIe-attached storage	•	•	•	•
<b>Onboard Components</b>				
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•
Onboard Audio (Realtek HD ALC221-VB)	•	•	•	•
Intel® 8265 Wireless LAN (802.11ac) and Bluetooth® 4.2 Module	7	7	7	7
USB 3.1 ports (premium model only)	•	•	•	•
USB 3.0 ports	•	•	•	•
<b>Input/Output Devices (no spaceball support)</b>				
TPM Module	4	4	4	4
HP Serial Port Adapter	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The Intel® HD graphics works with the in-box frame-buffer drivers. Support for the "native" Intel® driver on v5 processors (Skylake) is not available for most release streams as of this edition of the table.

<sup>3</sup> HP recommends use of NVIDIA® driver 375.20 (or newer) on NVIDIA® graphics options.

<sup>4</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>5</sup> On the performance model, at this time only the 3 DP outputs associated with the NVIDIA® Quadro® M620 will be usable with Linux distros. You can enable the 4th DP port for the Intel® graphics, but it does not currently operate well in conjunction with the NVIDIA® option. HP recommends that customers not use the Intel® port until general improvements are made in Linux for heterogeneous GPU support.

<sup>6</sup> In order to install Ubuntu 16.04.1 with the NVIDIA® Quadro® M620 graphics option, you will need to add 'nomodeset' to the boot line during installation and again post installation with the installed kernel.

<sup>7</sup> SUSE added support for the 8265 wlan/bt option in SLED 12/SP2. Kernel update 4.4.74-92.29.1 is required for the proper driver.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 SFF G9 Workstation

Certified on RHEL 8.6 (12th Gen), RHEL 8.8 (13th Gen), RHEL 8.9 (14th Gen)\*\*, RHEL 9.0 (12th Gen), RHEL 9.2 (13th Gen), RHEL 9.3 (14th Gen)\*\* Ubuntu 20.04, Ubuntu 22.04. SLE 15/SP5 certifications in progress.

RHEL 7, SLED 12 and Ubuntu 18.04 are not supportable by HP on Z2 G9. As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/ SP4 or later (x86_64)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)
<b>HP Workstation Base System</b>					
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•
HP Localization Kit	1	1	1	1	1
<b>All Supported Processors</b>					
12th generation Intel® Core™ i9/i7/i5/i3 processors	•	•	•	•	•
13th generation Intel® Core™ i9/i7/i5/i3 processors	15	RHEL 8.8 or later	RHEL 9.2 or later	15	•
14th generation Intel Core™ i9/i7/i5 processors	17	17	17	17	17
<b>Graphics Card (Video Card)</b>					
No Graphics Card	•	•	•	•	•
Intel® UHD Graphics 770 (on v12 Core™ i9/i7/i5-12xxx processors)	2, 11	2, 11	2, 11	2, 11	2, 11
Intel® UHD Graphics 730 (on v12 Core™ i5/i3-12xxx processors)	2, 11	2, 11	2, 11	2, 11	2, 11
Intel® UHD Graphics 770 (on v13 Core™ i9/i7/i5-13xxx processors)	2,11	2, 11	2, 11	2, 11	2,11
Intel® UHD Graphics 730 (on v13 Core™ i5/i3-13xxx processors)	2, 11	2, 11	2, 11	2, 11	2,11
Intel® UHD Graphics 770 (on v14 Core™ i9/i7/i5-14xxx processors)	2,11	2, 11	2, 11	2, 11	2,11
Intel® UHD Graphics 730 (on v14 Core™ i5-13xxx processors)	2,11	2, 11	2, 11	2, 11	2,11
AMD Radeon™ Pro W6600 (8 GB Frame buffer)	3	3	3	3	3
AMD Radeon™ RX 6700 XT (12 GB Frame buffer)	3	3	3	3	3
NVIDIA® T400 (2 GB / 4 GB Frame buffer)	4	4	4	4	4
NVIDIA® T600 (4 GB Frame buffer)	4	4	4	4	4
NVIDIA® T1000 (4 GB / 8 GB Frame buffer)	4	4	4	4	4
NVIDIA® RTX® A2000 (6 GB / 12 GB Frame buffer)	4	4	4	4	4
NVIDIA® RTX® A4000 (16 GB Frame buffer)	4	4	4	4	4
<b>System RAM</b>					
Minimum (GB)	8 GB	8 GB	8 GB	8 GB	8 GB
Maximum (GB)	128 GB	128 GB	128 GB	128 GB	128 GB
<b>Hard Disks</b>					
Intel® Volume Management Device (VMD) - BIOS F10 Setup (Advanced >> System Options)	13	13	13	13	13
All HP-configurable Solid State Drives	10, 13	10, 13	10, 13	10, 13	10, 13
All HP-configurable SATA Disk Drives <= 2 TB	10, 13	10, 13	10, 13	10, 13	10, 13
All HP-configurable SATA Disk Drives > 2 TB	5, 10, 13	5, 10, 13	5, 10, 13	5, 10, 13	5, 10, 13
HP Z Turbo Drive PCIe® NVMe™ SSD storage	13	13	13	13	13
<b>Network Cards</b>					
Intel® i350-T2 PCIe Dual Port 1 Gb NIC	•	•	•	•	•
Intel® i350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•	•
Intel® X550 10GbE Dual Port Adapter	•	•	•	•	•
Intel® Ethernet Network Adapter i225-T1 2.5 Gb NIC	•	•	•	•	•
NVIDIA Mellanox ConnectX-6 DX 10/25GbE SFP28 NIC	•	•	•	•	•
<b>Integrated Components</b>					
Wired LAN - Intel i219LM Gigabit Ethernet	•	•	•	•	•
Intel AMT functionality on Wired LAN	9	9	9	9	9



# Contents & navigation

- Purpose of the Linux Hardware Matrix 1-2
- Desktop Workstations 3-64
  - HP Entry Tower/Z1 3-6
  - HP Z2 Mini Workstation 7-13
  - HP Z2 SFF / Z240 SFF Workstation 14-23
  - HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation 24-37
  - HP ZCentral 4R Workstation 40-41
  - HP Z4 Workstation 42-49
  - HP Z6 Workstation 50-59
  - HP Z8 Fury Workstation 60-61
  - HP Z8 Workstation 62-68
- Mobile Workstations 69-136
  - HP ZBook Firefly/14u/15u Workstation 69-86
  - HP ZBook Power/15v Workstation 87-96
  - HP ZBook Studio/Create Workstation 97-108
  - HP ZBook Fury/15/17 Mobile Workstation 109-136

## HP Z2 SFF G9 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/ SP4 or later (x86_64)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)
Intel® AX211 Wireless 6E LAN (802.11 a/b/g/n/ac/ax) and Bluetooth 5.2 Module	•	•	•	•	•
Intel® BE200 Wireless 7 LAN (802.11 a/b/d/e/g/n/ac/ax/be) and Bluetooth 5.4 Module	17	17	17	17	17,18
Onboard Audio (Realtek ALC3252)	•	•	•	•	•
Onboard Intel integrated SATA RAID (0/1)	16	16	16	16	16
USB 3.2 G1 Type A ports (5Gbps)	•	•	•	•	•
USB 3.2 G2 Type A and Type-C™ ports (10Gbps)	•	•	•	•	•
USB 3.2 G2x2 Type-C™ ports (20Gbps)	•	•	•	•	•
Flexible I/O port options (including Thunderbolt™ 3 options)	14	14	14	14	14
<b>Removable CD/DVD Media</b>					
HP DVD-ROM Drive	10, 13	10, 13	10, 13	10, 13	10, 13
HP DVD RW Supermulti Drive	6, 10, 13	6, 10, 13	6, 10, 13	6, 10, 13	6, 10, 13
HP BD-RE (Blu-Ray writer)	6, 10, 13	6, 10, 13	6, 10, 13	6, 10, 13	6, 10, 13
<b>Input/Output Devices</b>					
HP USB mouse options	12	12	12	12	12
HP USB keyboard options	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•
HP Printers	7	7	7	7	7
TPM Module / SmartCard	8	8	8	8	8
HP Serial Port Adapter	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The Intel HD graphics works with the in-box frame buffer drivers. Support for the "native" Intel driver and modesetting driver on v12 processors (AlderLake), v13 (RaptorLake), v14 (RaptorLake Refresh) may not be available for users requiring older Linux release streams.

<sup>3</sup> AMD Radeon™ Pro graphics are supported by AMD with the amdgpu-pro driver stack.

<sup>4</sup> HP recommends use of NVIDIA® driver 470.86 (or newer) on NVIDIA® graphics options.

<sup>5</sup> Single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. The OS's listed can create GPT formatted storage drives/volumes but this requires installation of the OS in UEFI mode. Once formatted and installed, the OS can access the entirety of storage drives/volumes.

<sup>6</sup> Linux open-source toolset (growisofs) supports DVD+RW and Blu-ray media on the listed OSes.

<sup>7</sup> For more info about Linux open-source driver support for HP printers, please visit <http://www.hpip.net>.

<sup>8</sup> Open-source support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software supported by your preferred Linux distributor.

<sup>9</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>10</sup> For SATA device enablement, older Linux kernels may not carry hardware IDs to recognize the Intel® AlderLake-S PCH chipset for AHCI in RAID-mode. Disabling the default RAID-mode for the storage controller in the "System Options" section of the F10 Setup menu for BIOS will enable proper AHCI SATA support for most kernels.

<sup>11</sup> Integrated Intel® HD graphics are enabled by default in factory default BIOS settings regardless of additional graphics cards. If your Linux distribution cannot support simultaneous mixed-mode graphics and drivers, then disable the integrated video options under the Advanced settings tab in F10 Setup menus for built-in options. This will hide integrated graphics devices when discrete graphics cards are also installed.

<sup>12</sup> Spaceball input devices require drivers that may or may not be compatible with your Linux distribution or version. Please refer to the manufacturer site for additional support of these devices.

<sup>13</sup> Intel® Volume Management Device (VMD) technology is an additional layer of NVMe storage device management that may not be compatible with older Linux kernels lacking current controller IDs such as 0x467F for 12th Gen Core processors (see [kernel.org](http://kernel.org): <VERSION>/root/drivers/pci/controller/vmd.c). This can cause some storage device drivers to fail and make storage devices invisible under these conditions. VMD RAID controller management can be disabled in system BIOS under the Advanced / System Options menu if necessary.

<sup>14</sup> Older Linux kernels may not properly recognize the Allied Telesys AT-29M2 1GbE Fibre Networking module based upon AT-29M2AF chipsets (lsusb command will report ID 07C9:0012). A vendor workaround procedure involves patching the lan78xx USB networking kernel module with vendor ID (0x07C9) and product ID (0x0012) for specific kernel sources compatible with a user-installed Linux operating system ([linux-version/drivers/net/usb/lan78xx.c](http://linux-version/drivers/net/usb/lan78xx.c)). Additional details available at [HP.com](http://HP.com) under Linux drivers for this platform.

<sup>15</sup> The distro version listed does not fully support 13th Generation processors. See certified version numbers in the page header for specific 13th Generation processor support. Some features such as the VMD storage controller (which differs between the different SKUs of the processors) are not recognized by the kernels in these listed distros.

<sup>16</sup> Intel does not support Intel Rapid Storage Technology (iRST) on Linux. Availability for 12th, 13th, 14th (and beyond) generation Intel Core processors using Intel Volume Management Device (VMD) is subject completely to open-source community enablement. iRST-defined RAID volumes (via F3 BIOS setup) require VMD-aware versions of mdadm patched for recognizing RAID metadata and domains managed by VMD. All other distributions (certified or not) only support software mdadm-defined operations for definition, grouping (assemblage), etc. outside of their installation scenarios to create and work with software RAID volumes. SATA volumes for iRST and VMD are not recognized by mdadm on Linux at this time. Red Hat Enterprise Linux (RHEL 8.8 or later for 13th generation Intel Core products) recognizes NVMe RAID volumes defined by iRST + VMD. Consult your distro provider for additional support details.

<sup>17</sup> 14th Generation Intel Core processors with support for Intel Wi-Fi 7 (5 Gig) will require future kernel and firmware revisions. Currently, CPU-only (without BE200 wireless support) are certified supportable with RHEL 8.9, RHEL 9.3 releases. SLED15/SP5 and Ubuntu 22.04.4 can also support 14th Gen Intel Core CPU-only. Intel BE200 wireless (Wi-Fi 7 / Bluetooth) module support is pending release at this time. Please contact your OS vendor for more information.

<sup>18</sup> Z2 G9 workstations with Intel 14th Generation Core processors and Intel BE200 wireless options will currently support Wi-Fi 6E speeds when delivered on configurations purchased with Ubuntu 22.04 preloaded with certified OS images for HP. Check with your distribution for Intel BE200 firmware and driver updates that will enable the device and allow Wi-Fi 7 capability.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 SFF G8 Workstation

Certified on RHEL 8.4 and Ubuntu 20.04, RHEL 9.0 certification in progress. RHEL 7, SLED 12 and Ubuntu 18.04 are not HP supportable on Z2 G8. As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system. HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/SP3 or later (x86_64)	RHEL 8.3 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.2 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>HP Workstation Base System</b>					
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•
HP Localization Kit	1	1	1	1	1
<b>All Supported Processors</b>					
11th generation Intel® Core™ i9/i7/i5 and Xeon® W processors	•	•	•	•	•
<b>Graphics Card (Video Card) (See footnote 2)</b>					
No Graphics Card	•	•	•	•	•
Intel® UHD Graphics 750 (on v11 Core™ i5/i7/i9-11xxx processors)	2, 12	2, 12	2, 12	2, 12	2, 12
Intel® UHD Graphics P750 for v11 Xeon® W processors based on Unified Memory Architecture	2, 12	2, 12	2, 12	2, 12	2, 12
AMD Radeon™ Pro WX 3200 (4 GB Frame buffer)	3	3	3	3	3
NVIDIA® Quadro® T400 (2 GB Frame buffer)	4	4	4	4	4
NVIDIA® Quadro® T600 (4 GB Frame buffer)	4	4	4	4	4
NVIDIA® Quadro® T1000 (4 GB Frame buffer)	4	4	4	4	4
NVIDIA® Quadro® RTX 3000 (6 GB Frame buffer)	4	4	4	4	4
NVIDIA® RTX A2000 (6 GB Frame buffer)	4	4	4	4	4
<b>System RAM</b>					
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	128 GB	128 GB	128 GB	128 GB	128 GB
<b>Hard Disks</b>					
All HP-configurable Solid State Drives	11	11	11	11	11
All HP-configurable SATA Disk Drives <= 2 TB	11	11	11	11	11
All HP-configurable SATA Disk Drives > 2 TB	5, 11	5, 11	5, 11	5, 11	5, 11
HP Z Turbo Drive PCIe® NVMe™ SSD storage	•	•	•	•	•
<b>Network Cards</b>					
Intel® i350-T2 PCIe Dual Port 1 Gb NIC	•	•	•	•	•
Intel® i350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•	•
Aquantia® AQN-108 Single-Port 5GbE NIC	6	6	6	6	6
Intel® X550 10GbE Dual Port Adapter	•	•	•	•	•
Intel® Ethernet Network Adapter i225-T1 2.5 Gb NIC	•	•	•	•	•
HP 10GbE SFP+ SR Transceiver	•	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 SFF G8 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/SP3 or later (x86_64)	RHEL 8.3 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.2 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>Integrated Components</b>					
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•	•
HP Z Turbo Drive PCIe® NVMe™ SSD storage	10	10	10	10	10
Intel® AX201 Wireless LAN (802.11 a/b/g/n/ac/ax) and Bluetooth 5 Module	•	•	•	•	•
Onboard Audio (Realtek ALC3205)	•	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1)	•	•	•	•	•
USB 3.2 G1 Type A ports (5Gbps)	•	•	•	•	•
USB 3.2 G2 Type A and Type-C™ ports (10Gbps)	•	•	•	•	•
USB 3.2 G2x2 Type-C™ ports (20Gbps)	•	•	•	•	•
Flexible I/O port options (including Thunderbolt™ 3 options)	14	14	14	14	14
<b>Removable CD/DVD Media</b>					
HP DVD-ROM Drive	11	11	11	11	11
HP DVD RW Supermulti Drive	7, 11	7, 11	7, 11	7, 11	7, 11
HP BD-RE (Blu-Ray writer)	7, 11	7, 11	7, 11	7, 11	7, 11
<b>Input/Output Devices</b>					
HP USB mouse options	13	13	13	13	13
HP USB keyboard options	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•
HP Printers	8	8	8	8	8
All HP-configurable Monitors	•	•	•	•	•
TPM Module / SmartCard	10	10	10	10	10
HP Serial Port Adapter	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The Intel® HD graphics works with the in-box frame buffer drivers. Support for the "native" Intel® driver and modesetting driver on v11 processors (RocketLake) is not available for some release streams as of this edition of the table.

<sup>3</sup> AMD Radeon™ Pro graphics are supported by AMD with the amdgpu-pro driver stack.

<sup>4</sup> HP recommends use of NVIDIA® driver 460.84 (or newer) on NVIDIA® graphics options.

<sup>5</sup> Single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. The OS's listed can create GPT formatted storage drives/volumes but this requires installation of the OS in UEFI mode. Once formatted and installed, the OS can access the entirety of storage drives/volumes.

<sup>6</sup> The driver for the Aquantia Nbase-T AQN-108 aftermarket NIC is not in-box for most of the listed Linux streams. Driver source can be found at the Aquantia site [www.aquantia.com/driver-download/](http://www.aquantia.com/driver-download/).

<sup>7</sup> Linux open-source toolset (growisofs) supports DVD+RW and Blu-ray media on the listed OSes.

<sup>8</sup> For more info about Linux open-source driver support for HP printers, please visit <http://www.hpip.net>.

<sup>9</sup> Open-source support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software supported by your preferred Linux distributor.

<sup>10</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>11</sup> For SATA device enablement, older Linux kernels may not carry hardware IDs to recognize the Intel® RocketLake-S PCH chipset for AHCI in RAID-mode. Disabling the default RAID-mode for the storage controller in the "System Options" section of the F10 Setup menu for BIOS will enable proper AHCI SATA support for most kernels.

<sup>12</sup> Integrated Intel® HD graphics are enabled by default in factory default BIOS settings regardless of additional graphics cards. If your Linux distribution cannot support simultaneous mixed-mode graphics and drivers, then disable the integrated video options under the Advanced settings tab in F10 Setup menus for built-in options. This will hide integrated graphics devices when discrete graphics cards are also installed.

<sup>13</sup> Spaceball input devices require drivers that may or may not be compatible with your Linux distribution or version. Please refer to the manufacturer site for additional support of these devices.

<sup>14</sup> The HP Flex 1GbE Fiber LC single port option is not currently supported out of the box with any current Linux distribution. Contact HP for instructions on how to make use of this module if interested. All other Flex options are functional.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 SFF G5 Workstation

Certified on RHEL 8.3 and Ubuntu 20.04.

RHEL 7, SLED 12 and Ubuntu 16.04 are not supported on Z2 G5.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/SP2 or later (x86_64)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
10th generation Intel® Core™ i7/i5/i3 and Xeon® processors	•	•	•	•
<b>Graphics Card (Video Card) (See footnote 2)</b>				
No Graphics Card	•	•	•	•
Intel® HD Graphics 630 (on v10 Core™ i3/i5/i7-10xxx processors)	2	2	2	2
Intel® HD Graphics P630 for v10 Xeon® W processors based on Unified Memory Architecture	2	2	2	2
AMD Radeon™ Pro WX 3200 (4 GB Frame buffer)	3	3	3	3
NVIDIA® Quadro® P400 (2 GB Frame buffer)	4	4	12	12
NVIDIA® Quadro® P620 (2 GB Frame buffer)	4	4	12	12
NVIDIA® Quadro® P1000 (4 GB Frame buffer)	4	4	12	12
NVIDIA® Quadro® T400 (2 GB Frame buffer)	4	4	12	12
NVIDIA® Quadro® T600 (4 GB Frame buffer)	4	4	12	12
NVIDIA® Quadro® T1000 (4 GB Frame buffer)	4	4	12	12
NVIDIA® Quadro® RTX 3000 (6 GB Frame buffer)	4	4	12	12
NVIDIA® RTX™ A2000 (6 GB Frame buffer)	4	4	12	12
<b>System RAM</b>				
Minimum (GB)	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB	64 GB	64 GB	64 GB
<b>Hard Disks</b>				
All Supported Solid State Drives	11	11	11	11
All Supported SATA Disk Drives <= 2 TB	11	11	11	11
All Supported SATA Disk Drives > 2 TB	5, 11	5, 11	5, 11	5, 11
Intel® Optane™ 905p Series AIC SSD (up to 480 GB)	•	•	•	•
HP Z Turbo Drive G2 PCIe® NVMe™ SSD storage	•	•	•	•
<b>Network Cards</b>				
Intel® i350-T2 PCIe Dual Port 1 Gb NIC	•	•	•	•
Intel® i350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•
Aquantia® AQN-108 Single-Port 5GbE NIC	6	6	6	6
Intel® X550 10GbE Dual Port Adapter	•	•	•	•
Intel® X710-DA2 10GbE Dual Port Adapter (and HP SFP+ SR Transceiver)	•	•	•	•
HP 10GbE SFP+ SR Transceiver	•	•	•	•
Allied Telesis AT-2914SX/LC-901 1 Gb Fiber NIC	•	•	•	•
<b>Integrated Components</b>				
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•
Intel® AMT functionality on Wired LAN	10	10	10	10
Intel® AX201 Wireless LAN (802.11 a/b/g/n/ac/ax) and Bluetooth 5 Module	•	•	•	•
Onboard Audio (Realtek ALC3601)	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1)	•	•	•	•
USB 3.1 G1 Type A ports	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

## HP Z2 SFF G5 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/SP2 or later (x86_64)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
USB 3.1 G2 Type-C™ ports	•	•	•	•
Flexible I/O port options (including Thunderbolt™ 3 options)	13	13	13	13
<b>Removable CD/DVD Media</b>				
HP DVD-ROM Drive	11	11	11	11
HP DVD RW Supermulti Drive	7, 11	7, 11	7, 11	7, 11
HP BD-RE (Blu-Ray writer)	7, 11	7, 11	7, 11	7, 11
<b>Input/Output Devices (no spaceball support)</b>				
HP USB mouse options	•	•	•	•
HP USB keyboard options	•	•	•	•
HP Media Card Reader	•	•	•	•
HP Printers	8	9	9	9
All Supported Monitors	•	•	•	•
TPM Module / SmartCard	9	10	10	10
HP Serial Port Adapter	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The Intel® HD graphics works with the in-box frame buffer drivers. Support for the "native" Intel® driver and modesetting driver on v10 processors (CometLake) is not available for some release streams as of this edition of the table.

<sup>3</sup> AMD Radeon™ Pro graphics are supported by the amdgpu-pro driver stack. An 18.10 or later driver is recommended for this platform. Some OS distributions may have the amdgpu-open driver built in.

<sup>4</sup> HP recommends use of NVIDIA® driver 460.67 (or newer) on NVIDIA® graphics options.

<sup>5</sup> Single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. The OS's listed can create GPT formatted storage drives/volumes but this requires installation of the OS in UEFI mode. Once formatted and installed, the OS can access the entirety of storage drives/volumes.

<sup>6</sup> The driver for the Aquantia Nbase-T AQN-108 aftermarket NIC is not in-box for most of the listed Linux streams. Driver source can be found at the Aquantia site [www.aquantia.com/driver-download/](http://www.aquantia.com/driver-download/).

<sup>7</sup> Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes.

<sup>8</sup> For more info about Linux driver support for HP printers, please visit <http://www.hpip.net>.

<sup>9</sup> Usability of the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software

<sup>10</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>11</sup> For SATA device support, older Linux kernels may not carry hardware IDs to recognize the Intel® CometLake-H PCH chipset for AHCI in RAID-mode. Disabling the default RAID-mode for the storage controller in the "System Options" section of the F10 Setup menu for BIOS will enable proper AHCI SATA support for most kernels.

<sup>12</sup> Canonical provides up-to-date versions of the NVIDIA® proprietary driver in their software repositories. HP recommends customer use one of the offered choices provided by Canonical as well as use their software update tool.

<sup>13</sup> The HP Flex 1GbE Fiber LC single port option is not currently supported out of the box with any current Linux distribution. Contact HP for instructions on how to make use of this module if interested. All other Flex options are functional.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 SFF G4 Workstation

Certified on RHEL 7.5, RHEL 8.0, SLES 12/SP4+WE and SLES/SLED 15.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12/ SP4 or later (x86_64)	SLED 15 or later (x86_64)	RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.1 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>HP Workstation Base System</b>							
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•	•	•
HP Localization Kit	1	1	1	1	1	1	1
<b>All Supported Processors</b>							
8th generation Intel® Core™ i7/i5/i3 and Xeon® processors	•	•	•	•	•	•	•
<b>Graphics Card (Video Card) (See footnote 2)</b>							
No Graphics Card	•	•	•	•	•	•	•
Intel® HD Graphics 630 (on v8 Core™ i3/i5/i7-8xxx processors)	2	2	2	2	2	2	•
Intel® HD Graphics P630 for v8 Xeon® E processors based on Unified Memory Architecture	2	2	2	2	2	2	•
AMD FirePro WX 3100 (4 GB Frame buffer)	3	3	3	3	3	3	•
AMD FirePro WX 3200 (4 GB Frame Buffer)	3	3	3	3	3	3	•
AMD FirePro WX 4100 (4 GB Frame buffer)	3	3	3	3	3	3	•
NVIDIA® Quadro® P400 (2 GB Frame buffer)	4	4	4	4	13	13	13
NVIDIA® Quadro® P620 (2 GB Frame buffer)	4	4	4	4	13	13	13
NVIDIA® Quadro® P1000 (4 GB Frame buffer)	4	4	4	4	13	13	13
<b>System RAM</b>							
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	646 GB	646 GB	646 GB	646 GB	646 GB	646 GB	646 GB
<b>Hard Disks</b>							
All Supported Solid State Drives	•	•	•	•	•	•	•
All Supported SATA Disk Drives <= 2 TB	•	•	•	•	•	•	•
All Supported SATA Disk Drives > 2 TB	5	5	5	5	5	5	5
Intel® Optane™ 905p Series AIC SSD (up to 480 GB)	•	•	•	•	•	•	•
HP Z Turbo Drive G2 PCIe® NVMe™ SSD storage	12	12	12	12	12	12	12
<b>Network Cards</b>							
Intel® I350-T2 PCIe Dual Port 1 Gb NIC	•	•	•	•	•	•	•
Intel® I350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•	•	•	•
Aquanta® AQN-108 Single-Port 5GbE NIC	6	6	6	6	6	6	6
Intel® X550 10GbE Dual Port Adapter	•	•	•	•	•	•	•
Intel® X710-DA2 10GbE Dual Port Adapter (and HP SFP + SR Transceiver)	•	•	•	•	•	•	•
HP 10GbE SFP+ SR Transceiver	•	•	•	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 SFF G4 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12/ SP4 or later (x86_64)	SLED 15 or later (x86_64)	RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.1 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>Integrated Components</b>							
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•	•	•	•
Intel® AMT functionality on Wired LAN	11	11	11	11	11	11	11
Intel® 9560 Wireless LAN (802.11 a/b/g/n/ac) and Bluetooth® 5 Module	•	•	•	•	7	•	•
Onboard Audio (Conexant CX20632)	•	•	•	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1)	•	•	•	•	•	•	•
USB 3.1 G1 Type A ports	•	•	•	•	•	•	•
USB 3.1 G2 Type C™ ports	•	•	•	•	•	•	•
Flexible I/O port options (including Thunderbolt™ 3 options)	•	•	•	•	•	•	•
<b>Removable CD/DVD Media</b>							
HP DVD-ROM Drive	•	•	•	•	•	•	•
HP DVD RW Supermulti Drive	8	8	8	8	8	8	8
HP BD-RE (Blu-Ray writer)	8	8	8	8	8	8	8
<b>Input/Output Devices (no spaceball support)</b>							
HP USB mouse options	•	•	•	•	•	•	•
HP USB keyboard options	•	•	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•	•	•
HP Printers	9	9	9	9	9	9	9
All Supported Monitors	•	•	•	•	•	•	•
TPM Module / SmartCard	10	10	10	10	10	10	10
HP Serial Port Adapter	•	•	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The Intel® HD graphics works with the in-box frame buffer drivers. Support for the "native" Intel® driver and modesetting driver on v8 processors (CoffeeLake) is not available for most release streams as of this edition of the table.

<sup>3</sup> AMD Radeon™ Pro graphics are supported by the amdgpu-pro driver stack. An 18.10 or later driver is recommended for this platform. Some OS distributions may have the amdgpu-open driver built in.

<sup>4</sup> HP recommends using NVIDIA® driver 440.100 or newer for NVIDIA® graphics on this platform.

<sup>5</sup> Single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. The OS's listed can create GPT formatted storage drives/volumes but this requires installation of the OS in UEFI mode. Once formatted and installed, the OS can access the entirety of storage drives/volumes.

<sup>6</sup> The driver for the Aquantia Nbase-T AQN-108 aftermarket NIC is not in-box for most of the listed Linux streams. Driver source can be found at the Aquantia site [www.aquantia.com/driver-download/](http://www.aquantia.com/driver-download/).

<sup>7</sup> Intel® 9560 Wireless support for WLAN on Ubuntu 16.04.5 is currently not functional due to firmware version incompatibility (although Bluetooth® is supported on this release). The Ubuntu 18.04 LTS release stream is fully functional for integrated WLAN and Bluetooth®.

<sup>8</sup> Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes.

<sup>9</sup> For more info about Linux driver support for HP printers, please visit <http://www.hplip.net>.

<sup>10</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software.

<sup>11</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>12</sup> There are currently issues installing enterprise Linux distros on M.2 and Z Turbo options when the system is running in legacy BIOS mode. HP recommends using the system in its default UEFI BIOS mode when using these storage devices.

<sup>13</sup> Canonical provides up-to-date versions of the NVIDIA® proprietary driver in their software repositories. HP recommends customer use one of the choices provided by Canonical as well as use their software update tool.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z240 SFF Workstation



Certified on RHEL 6.8, 7.2. Certified on SLED 11/SP4, 12/SP1.  
Currently no Ubuntu certifications planned.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED11 SP4 or later (x86_64)	SLED12 SP1 or later (x86_64)	RHEL 6.7 or later (x86_64)	RHEL 7.2 or later (x86_64)	Ubuntu 14.04 LTS, 14.04.3 or later (x86_64)	Ubuntu 16.04 LTS, base release or later (x86_64)
<b>HP Workstation Base System</b>						
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•	•
HP Localization Kit	1	1	1	1	1	1
<b>All Supported Processors</b>						
All supported v5 and v6 Intel® Core™ i5, i7, and Xeon® processors	•	•	•	•	•	•
Hyperthreading	•	•	•	•	•	•
<b>Graphics Card (Video Card) (see footnote 14)</b>						
No Graphics Card	•	•	•	•	•	•
Intel® Onboard graphics (HD 530/HD P530 for v5, HD 630/HD P630 for v6)	9	9	9	9	9	9
AMD FirePro W2100	•	•	•	•	•	•
AMD FirePro W4300	•	•	•	•	•	•
AMD Radeon™ Pro WX 4100	11	11	11	11	11	11
NVIDIA® NVS 310 1 GB	•	•	•	•	•	•
NVIDIA® NVS 315	•	•	•	•	•	•
NVIDIA® NVS 510	•	•	•	•	•	•
NVIDIA® Quadro® K1200	•	•	•	•	•	•
NVIDIA® Quadro® K420 2 GB	•	•	•	•	•	•
NVIDIA® Quadro® K620	•	•	•	•	•	•
NVIDIA® Quadro® P400	12	12	12	12	12	12
NVIDIA® Quadro® P600	12	12	12	12	12	12
NVIDIA® Quadro® P1000	12	12	12	12	12	12
<b>System RAM</b>						
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB	64 GB	64 GB	64 GB	64 GB	64 GB
<b>Hard Disks</b>						
All Supported SSD Disk Drives	•	•	•	•	•	•
All Supported SATA Disk Drives less than 3 TB	•	•	•	•	•	•
All Supported SATA Disk Drives 3 TB and larger	3	3	3	3	3	3
All Supported USB Drive Keys	•	•	•	•	•	•
HP Z Turbo Drive PCIe-attached storage	4	4	4	4	4	4
<b>Network Cards (no modem support)</b>						
Aquantia Nbase-T PCIe NIC	•	13	•	13	13	13
Intel® I210-T1GbE PCIe NIC	•	•	•	•	•	•
Intel® I350-T2 Dual-Port I350-T4 Quad-Port 1GbE PCIe NIC	•	•	•	•	•	•
Intel® X520 10GbE Dual Port Adapter (and HP SFP + SR Transceiver)	•	•	•	•	•	•



# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

## HP Z240 SFF Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED11 SP4 or later (x86_64)	SLED12 SP1 or later (x86_64)	RHEL 6.7 or later (x86_64)	RHEL 7.2 or later (x86_64)	Ubuntu 14.04 LTS, 14.04.3 or later (x86_64)	Ubuntu 16.04 LTS, base release or later (x86_64)
Intel® X540 10GBase-T Dual Port Adapter (RJ45 -Copper)	•	•	•	•	•	•
Intel® 8260 802.11 a/b/g/n/ac & Bluetooth® PCIe	10	10	10	10	10	10
<b>Onboard Components</b>						
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•	•	•
Onboard Audio (Realtek ALC221 codec)	8	8	8	•	•	•
Onboard SATA RAID	2	2	2	2	2	2
<b>Add Ons</b>						
Thunderbolt™ PCI-E Card (see footnote 15)						
<b>Removable CD/DVD Media</b>						
HP DVD-ROM Drive	•	•	•	•	•	•
HP DVD+RW Supermulti Drive	5	5	5	5	5	5
HP BD-RE (Blu-Ray writer)	5	5	5	5	5	5
<b>Input/Output Devices (no spaceball support)</b>						
HP Scroll Mouse, USB	•	•	•	•	•	•
HP Standard Keyboard, USB	•	•	•	•	•	•
HP Keyboard and Mouse, PS/2	•	•	•	•	•	•
TPM Module/ Smart Card	7	7	7	7	7	7
HP Media Card Reader	•	•	•	•	•	•
HP Printers	6	6	6	6	6	6
All Supported Monitors	•	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Hardware RAID is not supported on SATA drives. Software RAID is available in most Linux OSes and can be used with SATA or PCIe storage devices.

<sup>3</sup> In general, single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. OSes listed can format GPT for the boot drive or volume but may require installation of UEFI boot support, and can access GPT-formatted data volumes.

<sup>4</sup> The Z Turbo Drive G2 PCIe-attached storage device has its own controller and is supported by the standard nvme kernel module in supported OSes. Updates are needed for SLED11 SP4 and SLED12 SP1 to operate with these NVME devices.

<sup>5</sup> Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes.

<sup>6</sup> For more info about Linux driver support for HP printers, go to <http://www.hpip.net>.

<sup>7</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>8</sup> An ALSA kernel "quirk" is required for the system built-in speaker to be usable. Not all listed distributions include it; some may provide it in an update.

<sup>9</sup> The Intel® HD graphics works with the in-box frame-buffer drivers. Reliable behavior from the "native" Intel® driver is not available for most release streams as of this edition of the table.

<sup>10</sup> As of this edition of the table, only a few enterprise distributions have support for the Intel® 8260 WLAN/BT combo device. Look for updates from the distributors.

<sup>11</sup> AMD Radeon™ Pro graphics cards are supported by the newer amdgpu-pro vendor driver. OS streams are supported at specific release version levels, starting with these: SLED 12 SP2, RHEL 6.8, RHEL 7.3, Ubuntu 14.04.5, and Ubuntu 16.04.1. There is no amdgpu-pro driver for SLED 11.

<sup>12</sup> HP recommends the following minimum NVIDIA® driver versions for: P400, P600, and P1000 (375.39).

<sup>13</sup> The driver for the Aquantia Nbase-T AQN-108 aftermarket NIC is not in-box for most of the listed Linux streams. Driver source can be found at the Aquantia site <https://www.aquantia.com/driver-download/>.

<sup>14</sup> Get the latest drivers: "HP Installer Kit for Linux - HP Driver CD (or DVD) for Linux-distribution-name" ISO images from <http://www.hp.com/support>. Select your language, choose Software and Drivers, type z240 in the Enter my HP model number field, select Find my product, and then select HP Z240 Small Form Factor Workstation from the results. Under Download options, select Get drivers, software & firmware. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>15</sup> Newer Linux kernels may provide device functionality through the Thunderbolt™ module. Such kernels are likely to be available in leading-edge distributions, but inclusion of the support with any Enterprise Linux distribution is at the distributor's discretion. As an example, RHEL 7.2 enables more functionality than RHEL 7.1.



# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Tower G9 Workstation

Certified on RHEL 8.6 (12th Gen), RHEL 8.8 (13th Gen), RHEL 8.9 (14th Gen)\*\*, RHEL 9.0 (12th Gen), RHEL 9.2 (13th Gen), RHEL 9.3 (14th Gen)\*\* Ubuntu 20.04, Ubuntu 22.04. SLE 15/SP5 certifications in progress. RHEL 7, SLED 12 and Ubuntu 18.04 are not supportable by HP on Z2 G9. As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel architecture used in this system. HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/SP4 or later (x86_64)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)
<b>HP Workstation Base System</b>					
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•
HP Localization Kit	1	1	1	1	1
<b>All Supported Processors</b>					
12th generation Intel® Core™ i9/i7/i5/i3 processors	•	•	•	•	•
13th generation Intel® Core™ i9/i7/i5/i3 processors	16	RHEL 8.8 or later	RHEL 9.2 or later	16	•
14th generation Intel Core™ i9/i7/i5 processors	18	18	18	18	18
<b>Graphics Card (Video Card)</b>					
No Graphics Card	•	•	•	•	•
Intel® UHD Graphics 770 (on v12 Core™ i9/i7/i5-12xxx processors)	2, 12	2, 12	2, 12	2, 12	2, 12
Intel® UHD Graphics 730 (on v12 Core™ i5/i3-12xxx processors)	2, 12	2, 12	2, 12	2, 12	2, 12
Intel® UHD Graphics 770 (on v13 Core™ i9/i7/i5-13xxx processors)	2, 12	2, 12	2, 12	2, 12	2, 12
Intel® UHD Graphics 730 (on v13 Core™ i5/i3-13xxx processors)	2, 12	2, 12	2, 12	2, 12	2, 12
Intel® UHD Graphics 770 (on v14 Core™ i9/i7/i5-14xxx processors)	2,12	2,12	2,12	2,12	2,12
Intel® UHD Graphics 730 (on v14 Core™ i5-14xxx processors)	2,12	2,12	2,12	2,12	2,12
AMD Radeon™ PRO W6800 (32 GB Frame buffer)	4	4	4	4	4
AMD Radeon™ RX 6700 XT (12 GB Frame buffer)	4	4	4	4	4
NVIDIA® T400 (2 GB / 4 GB Frame buffer)	5	5	5	5	5
NVIDIA® T600 (4 GB Frame buffer)	5	5	5	5	5
NVIDIA® T1000 (4 GB / 8 GB Frame buffer)	5	5	5	5	5
NVIDIA® RTX® A2000 (6 GB / 12 GB Frame buffer)	5	5	5	5	5
NVIDIA® RTX® A4000 (16 GB Frame buffer)	5	5	5	5	5
NVIDIA® RTX® A5000 (24 GB Frame buffer)	5	5	5	5	5
<b>System RAM</b>					
Minimum (GB)	8 GB	8 GB	8 GB	8 GB	8 GB
Maximum (GB)	128 GB	128 GB	128 GB	128 GB	128 GB
<b>Hard Disks</b>					
Intel® Volume Management Device (VMD) - BIOS F10 Setup (Advanced >> System Options)	14	14	14	14	14
All HP-configurable Solid State Drives	11, 14	11, 14	11, 14	11, 14	11, 14
All HP-configurable SATA Disk Drives <= 2 TB	11, 14	11, 14	11, 14	11, 14	11, 14
All HP-configurable SATA Disk Drives > 2 TB	6, 11, 14	6, 11, 14	6, 11, 14	6, 11, 14	6, 11, 14
HP Z Turbo Drive PCIe® NVMe™ SSD storage	14	14	14	14	14
<b>Network Cards</b>					
Intel® i350-T2 PCIe Dual Port 1 Gb NIC	•	•	•	•	•
Intel® i350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•	•
Intel® X550 10GbE Dual Port Adapter	•	•	•	•	•
Intel® Ethernet Network Adapter i225-T1 2.5 Gb NIC	•	•	•	•	•
NVIDIA® Mellanox ConnectX-6 DX 10/25GbE SFP28 NIC	•	•	•	•	•
<b>Integrated Components</b>					
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•	•
Intel AMT functionality on Wired LAN	10	10	10	10	10
Intel® AX211 Wireless 6E LAN (802.11 a/b/g/n/ac/ax) and Bluetooth 5.2 Module	•	•	•	•	•



# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Tower G9 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/ SP4 or later (x86_64)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)
Intel® BE200 Wireless 7 LAN (802.11 a/b/d/e/g/n/ac/ax/be) and Bluetooth 5.4 Module	18	18	18	18	18,19
Onboard Audio (Realtek ALC3205)	•	•	•	•	•
Onboard Intel integrated SATA RAID (0/1)	17	17	17	17	17
USB 3.2 G1 Type A ports (5Gbps)	•	•	•	•	•
USB 3.2 G2 Type A and Type-C™ ports (10Gbps)	•	•	•	•	•
USB 3.2 G2x2 Type-C™ ports (20Gbps)	•	•	•	•	•
Flexible I/O port options (including Thunderbolt™ 3 options)	15	15	15	15	15
<b>Removable CD/DVD Media</b>					
HP DVD-ROM Drive	11, 14	11, 14	11, 14	11, 14	11, 14
HP DVD RW Supermulti Drive	7, 11, 14	7, 11, 14	7, 11, 14	7, 11, 14	7, 11, 14
HP BD-RE (Blu-Ray writer)	7, 11, 14	7, 11, 14	7, 11, 14	7, 11, 14	7, 11, 14
<b>Input/Output Devices</b>					
HP USB mouse options	13	13	13	13	13
HP USB keyboard options	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•
HP Printers	8	8	8	8	8
TPM Module / SmartCard	9	9	9	9	9
HP Serial Port Adapter	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The Intel® HD graphics works with the in-box frame buffer drivers. Support for the "native" Intel driver and modesetting driver on v12 processors (AlderLake), v13 (RaptorLake), v14 (RaptorLake Refresh) may not be available for users requiring older Linux release streams.

<sup>3</sup> Support for consumer grade graphics cards is provided directly from the graphics vendor. HP does not provide software support for consumer cards.

<sup>4</sup> AMD Radeon™ PRO graphics are supported by AMD with the amdgpu-pro driver stack.

<sup>5</sup> HP recommends use of NVIDIA® driver 470.86 (or newer) on NVIDIA® graphics options.

<sup>6</sup> Single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. The OS's listed can create GPT formatted storage drives/volumes but this requires installation of the OS in UEFI mode. Once formatted and installed, the OS can access the entirety of storage drives/volumes.

<sup>7</sup> Linux open-source toolset (growisofs) supports DVD+RW and Blu-ray media on the listed OSes.

<sup>8</sup> For more info about Linux open-source driver support for HP printers, please visit <http://www.hpip.net>.

<sup>9</sup> Open-source support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software supported by your preferred Linux distributor.

<sup>10</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>11</sup> For SATA device enablement, older Linux kernels may not carry hardware IDs to recognize the Intel® AlderLake-S PCH chipset for AHCI in RAID-mode. Disabling the default RAID-mode for the storage controller in the "System Options" section of the F10 Setup menu for BIOS will enable proper AHCI SATA support for most kernels.

<sup>12</sup> Integrated Intel® HD graphics are enabled by default in factory default BIOS settings regardless of additional graphics cards. If your Linux distribution cannot support simultaneous mixed-mode graphics and drivers, then disable the integrated video options under the Advanced settings tab in F10 Setup menus for built-in options. This will hide integrated graphics devices when discrete graphics cards are also installed.

<sup>13</sup> Spaceball input devices require drivers that may or may not be compatible with your Linux distribution or version. Please refer to the manufacturer site for additional support of these devices.

<sup>14</sup> Intel® Volume Management Device (VMD) technology is an

additional layer of NVMe storage device management that may not be compatible with older Linux kernels lacking current controller IDs such as 0x467F for 12th Gen Core processors (see [kernel.org: <VERSION>/root/drivers/pci/controller/vmd.c](https://kernel.org: <VERSION>/root/drivers/pci/controller/vmd.c)). This can cause some storage device drivers to fail and make storage devices invisible under these conditions. VMD RAID controller management can be disabled in system BIOS under the Advanced / System Options menu if necessary.

<sup>15</sup> Older Linux kernels may not properly recognize the Allied Telesys AT-29M2 1GbE Fibre Networking module based upon AT-29M2AF chipsets (lsusb command will report ID 07C9:0012). A vendor workaround procedure involves patching the lan78xx USB networking kernel module with vendor ID (0x07C9) and product ID (0x0012) for specific kernel sources compatible with a user-installed Linux operating system ([linux-version/drivers/net/usb/lan78xx.c](https://linux-version/drivers/net/usb/lan78xx.c)). Additional details available at [HP.com](https://www.hp.com) under Linux drivers for this platform.

<sup>16</sup> The distro version listed does not fully support 13th Generation processors. See certified version numbers in the page header for specific 13th Generation processor support. Some features such as the VMD storage controller (which differs between the different SKUs of the processors) are not recognized by the kernels in these listed distros.

<sup>17</sup> Intel does not support Intel Rapid Storage Technology (iRST) on Linux. Availability for 12th, 13th, 14th (and beyond) generation Intel Core processors using Intel Volume Management Device (VMD) is subject completely to open-source community enablement. iRST-defined RAID volumes (via F3 BIOS setup) require VMD-aware versions of mdadm patched for recognizing RAID metadata and domains managed by VMD. All other distributions (certified or not) only support software mdadm-defined operations for definition, grouping (assemblage), etc. outside of their installation scenarios to create and work with software RAID volumes. SATA volumes for iRST and VMD are not recognized by mdadm on Linux at this time. Red Hat Enterprise Linux (RHEL 8.8 or later for 13th generation Intel Core products) recognizes NVMe RAID volumes defined by iRST + VMD. Consult your distro provider for additional support details.

<sup>18</sup> 14th Generation Intel Core processors with support for Intel Wi-Fi 7 (3 Gig) will require future kernel and firmware revisions. Currently, CPU-only (without BE200 wireless support) are certified supportable with RHEL 8.9, RHEL 9.3 releases. SLED15/SP5 and Ubuntu 22.04.4 can also support 14th Gen Intel Core CPU-only. Intel BE200 wireless (Wi-Fi 7 / Bluetooth) module support is pending release at this time. Please contact your OS vendor for more information.

<sup>19</sup> Z2 G9 workstations with Intel 14th Generation Core processors and Intel BE200 wireless options will currently support Wi-Fi 6E speeds when delivered on configurations purchased with Ubuntu 22.04 preloaded with certified OS images for HP. Check with your distribution for Intel BE200 firmware and driver updates that will enable the device and allow Wi-Fi 7 capability.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Tower G8 Workstation

Certified on RHEL 8.4, and ubuntu 20.04. RHEL 9.0 and Ubuntu 22.04 certifications in progress.

RHEL 7, SLED 12 and Ubuntu 18.04 are not HP supportable on Z2 G8.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/SP3 or later (x86_64)	RHEL 8.3 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.2 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>HP Workstation Base System</b>					
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•
HP Localization Kit	1	1	1	1	1
<b>All Supported Processors</b>					
11th generation Intel® Core™ i9/i7/i5 and Xeon® W processors	•	•	•	•	•
<b>Graphics Card (Video Card) (See footnote 2)</b>					
No Graphics Card	•	•	•	•	•
Intel® UHD Graphics 750 (on v11 Core™ i5/i7/i9-11xxx processors)	2, 13	2, 13	2, 13	2, 13	2, 13
Intel® UHD Graphics P750 for v11 Xeon® W processors based on Unified Memory Architecture	2, 13	2, 13	2, 13	2, 13	2, 13
NVIDIA® Consumer graphics cards	3	3	3	3	3
AMD Radeon™ Pro WX 3200 (4 GB Frame buffer)	4	4	4	4	4
AMD Radeon™ Pro W5500 (8 GB Frame buffer)	4	4	4	4	4
AMD Radeon™ Pro W5700 (8 GB Frame buffer)	4	4	4	4	4
AMD Radeon™ Pro W6600 (8 GB Frame buffer)	4	4	4	4	4
AMD Radeon™ Pro W6800 (32 GB Frame buffer)	4	4	4	4	4
NVIDIA® Quadro® T400 (2 GB Frame buffer)	5	5	5	5	5
NVIDIA® Quadro® T600 (4 GB Frame buffer)	5	5	5	5	5
NVIDIA® Quadro® T1000 (4 GB Frame buffer)	5	5	5	5	5
NVIDIA® RTX™ A2000 (6 GB Frame buffer)	5	5	5	5	5
NVIDIA® RTX™ A4000 (16 GB Frame buffer)	5	5	5	5	5
NVIDIA® RTX™ A4500 (20 GB Frame buffer)	5	5	5	5	5
NVIDIA® RTX™ A5000 (24 GB Frame buffer)	5	5	5	5	5
<b>System RAM</b>					
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	128 GB	128 GB	128 GB	128 GB	128 GB
<b>Hard Disks</b>					
All HP-configurable Solid State Drives	12	12	12	12	12
All HP-configurable SATA Disk Drives <= 2 TB	12	12	12	12	12
All HP-configurable SATA Disk Drives > 2 TB	6, 12	6, 12	6, 12	6, 12	6, 12
HP Z Turbo Drive PCIe® NVMe™ SSD storage	•	•	•	•	•



## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Tower G8 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/SP3 or later (x86_64)	RHEL 8.3 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.2 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>Network Cards</b>					
Intel® i350-T2 PCIe Dual Port 1 Gb NIC	•	•	•	•	•
Intel® i350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•	•
Aquantia® AQN-108 Single-Port 5GbE NIC	7	7	7	7	7
Intel® X550 10GbE Dual Port Adapter	•	•	•	•	•
Intel® Ethernet Network Adapter i225-T1 2.5 Gb NIC	•	•	•	•	•
HP 10GbE SFP+ SR Transceiver	•	•	•	•	•
<b>Integrated Components</b>					
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•	•
Intel® AMT functionality on Wired LAN	11	11	11	11	11
Intel® AX201 Wireless LAN (802.11 a/b/g/n/ac/ax) and Bluetooth® 5 Module	•	•	•	•	•
Onboard Audio (Realtek ALC3205)	•	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1)	•	•	•	•	•
USB 3.2 G1 Type A ports (5Gbps)	•	•	•	•	•
USB 3.2 G2 Type A and Type-C™ ports (10Gbps)	•	•	•	•	•
USB 3.2 G2x2 Type-C™ ports (20Gbps)	•	•	•	•	•
Flexible I/O port options (including Thunderbolt™ 3 options)	15	15	15	15	15
<b>Removable CD/DVD Media</b>					
HP DVD-ROM Drive	12	12	12	12	12
HP DVD RW Supermulti Drive	8, 12	8, 12	8, 12	8, 12	8, 12
HP BD-RE (Blu-Ray writer)	8, 12	8, 12	8, 12	8, 12	8, 12
<b>Input/Output Devices</b>					
HP USB mouse options	14	14	14	4	4
HP USB keyboard options	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•
HP Printers	9	9	9	9	9
All HP-configurable Monitors	•	•	•	•	•
TPM Module / SmartCard	10	10	10	10	10
HP Serial Port Adapter	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The Intel® HD graphics works with the in-box frame buffer drivers. Support for the "native" Intel® driver and modesetting driver on v11 processors (RocketLake) is not available for some release streams as of this edition of the table.

<sup>3</sup> Support for consumer grade graphics cards is provided directly from the graphics vendor. HP does not provide software support for consumer cards.

<sup>4</sup> AMD Radeon™ Pro graphics are supported by AMD with the amdgpu-pro driver stack.

<sup>5</sup> HP recommends use of NVIDIA® driver 460.84 (or newer) on NVIDIA® graphics options.

<sup>6</sup> Single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. The OS's listed can create GPT formatted storage drives/volumes but this requires installation of the OS in UEFI mode. Once formatted and installed, the OS can access the entirety of storage drives/volumes.

<sup>7</sup> The driver for the Aquantia Nbase-T AQN-108 aftermarket NIC is not in-box for most of the listed Linux streams. Driver source can be found at the Aquantia site [www.aquantia.com/driver-download/](http://www.aquantia.com/driver-download/).

<sup>8</sup> Linux open-source toolset (growisofs) supports DVD+RW and Blu-ray media on the listed OSes.

<sup>9</sup> For more info about Linux open-source driver support for HP printers, please visit <http://www.hpip.net>.

<sup>10</sup> Open-source support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software supported by your preferred Linux distributor.

<sup>11</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>12</sup> For SATA device enablement, older Linux kernels may not carry hardware IDs to recognize the Intel® RocketLake-S PCH chipset for AHCI in RAID-mode. Disabling the default RAID-mode for the storage controller in the "System Options" section of the F10 Setup menu for BIOS will enable proper AHCI SATA support for most kernels.

<sup>13</sup> Integrated Intel® HD graphics are enabled by default in factory default BIOS settings regardless of additional graphics cards. If your Linux distribution cannot support simultaneous mixed-mode graphics and drivers, then disable the integrated video options under the Advanced settings tab in F10 Setup menus for built-in options. This will hide integrated graphics devices when discrete graphics cards are also installed.

<sup>14</sup> Spaceball input devices require drivers that may or may not be compatible with your Linux distribution or version. Please refer to the manufacturer site for additional support of these devices.

<sup>15</sup> The HP Flex 1GbE Fiber LC single port option is not currently supported out of the box with any current Linux distribution. Contact HP for instructions on how to make use of this module if interested. All other Flex options are functional.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Tower G5 Workstation

Certified on RHEL 8.3 and Ubuntu 20.04.

RHEL 7, SLED 12 and Ubuntu 16.04 are not supported on Z2 G5.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/SP2 or later (x86_64)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
10th generation Intel® Core™ i7/i5/i3 and Xeon® processors	•	•	•	•
<b>Graphics Card (Video Card) (See footnote 2)</b>				
No Graphics Card	•	•	•	•
Intel® HD Graphics 630 (on v10 Core™ i3/i5/i7-10xxx processors)	2	2	2	2
Intel® HD Graphics P630 for v10 Xeon® W processors based on Unified Memory Architecture	2	2	2	2
NVIDIA® Consumer graphics cards	3	3	3	3
AMD Radeon™ Pro WX 3200 (4 GB Frame buffer)	4	4	4	4
AMD Radeon™ Pro W5500 (8 GB Frame buffer)	4	4	4	4
AMD Radeon™ Pro W5700 (8 GB Frame buffer)	4	4	4	4
NVIDIA® Quadro® P400 (2 GB Frame buffer)	5	5	13	13
NVIDIA® Quadro® P620 (2 GB Frame buffer)	5	5	13	13
NVIDIA® Quadro® P1000 (4 GB Frame buffer)	5	5	13	13
NVIDIA® Quadro® T400 (2 GB Frame buffer)	5	5	13	13
NVIDIA® Quadro® T600 (4 GB Frame buffer)	5	5	13	13
NVIDIA® Quadro® T1000 (4 GB Frame buffer)	5	5	13	13
NVIDIA® Quadro® P2200 (5 GB Frame buffer)	5	5	13	13
NVIDIA® Quadro® RTX 4000 (8 GB Frame buffer)	5	5	13	13
NVIDIA® Quadro® RTX 5000 (16 GB Frame buffer)	5	5	13	13
NVIDIA® Quadro® RTX 6000 (24 GB Frame buffer)	5	5	13	13
NVIDIA® RTX™ A2000 (6 GB Frame buffer)	5	5	13	13
NVIDIA® RTX™ A4000 (16 GB Frame buffer)	5	5	13	13
<b>System RAM</b>				
Minimum (GB)	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB	64 GB	64 GB	64 GB
<b>Hard Disks</b>				
All Supported Solid State Drives	12	12	12	12
All Supported SATA Disk Drives <= 2 TB	12	12	12	12
All Supported SATA Disk Drives > 2 TB	6, 12	6, 12	6, 12	6, 12
Intel® Optane™ 905p Series AIC SSD (up to 480 GB)	•	•	•	•
HP Z Turbo Drive G2 PCIe® NVMe™ SSD storage	•	•	•	•
<b>Network Cards</b>				
Intel® i350-T2 PCIe Dual Port 1 Gb NIC	•	•	•	•
Intel® i350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•
Aquantia® AQN-108 Single-Port 5GbE NIC	7	7	7	7
Intel® X550 10GbE Dual Port Adapter	•	•	•	•
Intel® X710-DA2 10GbE Dual Port Adapter (and HP SFP+ SR Transceiver)	•	•	•	•
HP 10GbE SFP+ SR Transceiver	•	•	•	•
Allied Telesis AT-2914SX/LC-9011 Gb Fiber NIC	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Tower G5 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/SP2 or later (x86_64)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>Integrated Components</b>				
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•
Intel® AMT functionality on Wired LAN	11	11	11	11
Intel® AX201 Wireless LAN (802.11 a/b/g/n/ac/ax) and Bluetooth® 5 Module	•	•	•	•
Onboard Audio (Realtek ALC3601)	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1)	•	•	•	•
USB 3.1 G1 Type A ports	•	•	•	•
USB 3.1 G2 Type-C™ ports	•	•	•	•
Flexible I/O port options (including Thunderbolt™ 3 options)	14	14	14	14
<b>Removable CD/DVD Media</b>				
HP DVD-ROM Drive	12	12	12	12
HP DVD RW Supermulti Drive	8, 12	8, 12	8, 12	8, 12
HP BD-RE (Blu-Ray writer)	8, 12	8, 12	8, 12	8, 12
<b>Input/Output Devices (no spaceball support)</b>				
HP USB mouse options	•	•	•	•
HP USB keyboard options	•	•	•	•
HP Media Card Reader	•	•	•	•
HP Printers	9	9	9	9
All Supported Monitors	•	•	•	•
TPM Module / SmartCard	10	10	10	10
HP Serial Port Adapter	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The Intel® HD graphics works with the in-box frame buffer drivers. Support for the "native" Intel® driver and mode setting driver on v10 processors (CometLake) is not available for some release streams as of this edition of the table.

<sup>3</sup> Support for consumer grade graphics cards is provided directly from the graphics vendor. HP does not provide software support for consumer cards.

<sup>4</sup> AMD Radeon™ Pro graphics are supported by the amdgpu-pro driver stack. An 18.10 or later driver is recommended for this platform. Some OS distributions may have the amdgpu-open driver built in.

<sup>5</sup> HP recommends use of NVIDIA® driver 460.84 (or newer) on NVIDIA® graphics options.

<sup>6</sup> Single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. The OS's listed can create GPT formatted storage drives/volumes but this requires installation of the OS in UEFI mode. Once formatted and installed, the OS can access the entirety of storage drives/volumes.

<sup>7</sup> The driver for the Aquantia Nbase-T AQN-108 aftermarket NIC is not in-box for most of the listed Linux streams. Driver source can be found at the Aquantia site [www.aquantia.com/driver-download/](http://www.aquantia.com/driver-download/).

<sup>8</sup> Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes.

<sup>9</sup> For more info about Linux driver support for HP printers, please visit <http://www.hp.com>.

<sup>10</sup> Usability of the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software.

<sup>11</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>12</sup> For SATA device support, older Linux kernels may not carry hardware IDs to recognize the Intel® CometLake-H PCH chipset for AHCI in RAID-mode. Disabling the default RAID-mode for the storage controller in the "System Options" section of the F10 Setup menu for BIOS will enable proper AHCI SATA support for most kernels.

<sup>13</sup> Canonical provides up-to-date versions of the NVIDIA® proprietary driver in their software repositories. HP recommends customer use one of the offered choices provided by Canonical as well as use their software update tool.

<sup>14</sup> The HP Flex 1GbE Fiber LC single port option is not currently supported out of the box with any current Linux distribution. Contact HP for instructions on how to make use of this module if interested. All other Flex options are functional.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Tower G4 Workstation

Certified on RHEL 7.5, RHEL 8.0, SLES 12/SP4+WE and SLES/SLED 15.  
As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.  
HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12/SP4 or later (x86_64)	SLED 15 or later (x86_64)	RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.1 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>HP Workstation Base System</b>							
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•	•	•
HP Localization Kit	1	1	1	1	1	1	1
<b>All Supported Processors</b>							
8th and 9th generation Intel® i3/i5/i7/i9 and Xeon® processors	•	•	•	•	•	•	•
<b>Graphics Card (Video Card) (See footnote 2)</b>							
No Graphics Card	•	•	•	•	•	•	•
Intel® HD Graphics 630 (on v8 Core™ i3/i5/i7-8xxx processors)	2	2	2	2	2	2	•
Intel® HD Graphics P630 for v8 Xeon® E processors based on Unified Memory Architecture	2	2	2	2	2	2	•
AMD FirePro WX 3100 (4 GB Frame buffer)	3	3	3	3	3	3	•
AMD FirePro WX 3200 (4 GB Frame buffer)	3	3	3	3	3	3	•
AMD FirePro WX 4100 (4 GB Frame buffer)	3	3	3	3	3	3	•
AMD Radeon™ Pro W5500 (8 GB Frame buffer)	7	7	7	7	7	7	7
AMD Radeon™ Pro W5700 (8 GB Frame buffer)	7	7	7	7	7	7	7
AMD FirePro WX 7100 (8 GB Frame buffer)	3	3	3	3	3	3	•
NVIDIA® Quadro® P400 (2 GB Frame buffer)	4	4	4	4	4	4	4
NVIDIA® Quadro® P620 (2 GB Frame buffer)	4	4	4	4	4	4	4
NVIDIA® Quadro® P1000 (4 GB Frame buffer)	4	4	4	4	4	4	4
NVIDIA® Quadro® P2000 (5 GB Frame buffer)	4	4	4	4	4	4	4
NVIDIA® Quadro® P4000 (8 GB Frame buffer)	4	4	4	4	4	4	4
NVIDIA® Quadro® P5000 (16 GB Frame buffer)	4	4	4	4	4	4	4
NVIDIA® Quadro® RTX 4000 (8 GB Frame buffer)	4	4	4	4	4	4	4
NVIDIA® Quadro® RTX 5000 (16 GB Frame buffer)	4	4	4	4	4	4	4
NVIDIA® Quadro® RTX 6000 (24 GB Frame buffer)	4	4	4	4	4	4	4
<b>System RAM</b>							
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB	64 GB	64 GB	64 GB	64 GB	64 GB	64 GB
<b>Hard Disks</b>							
All Supported Solid State Drives	•	•	•	•	•	•	•
All Supported SATA Disk Drives <= 2 TB	•	•	•	•	•	•	•
All Supported SATA Disk Drives > 2 TB	5	5	5	5	5	5	5



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z2 Tower G4 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12/SP4 or later (x86_64)	SLED 15 or later (x86_64)	RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.1 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
Intel® Optane™ 905p Series AIC SSD (up to 480 GB)	•	•	•	•	•	•	•
HP Z Turbo Drive G2 PCIe® NVMe™ SSD storage	12	12	12	12	12	12	12
<b>Network Cards</b>							
Intel® I350-T2 PCIe Dual Port 1 Gb NIC	•	•	•	•	•	•	•
Intel® I350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•	•	•	•
Aquantia® AQN-108 Single-Port 5GbE NIC	6	6	6	6	6	6	6
Intel® X550 10GbE Dual Port Adapter	•	•	•	•	•	•	•
Intel® X710-DA2 10GbE Dual Port Adapter (and HP SFP+ SR Transceiver)	•	•	•	•	•	•	•
<b>Integrated Components</b>							
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•	•	•	•
Intel® AMT functionality on Wired LAN	11	11	11	11	11	11	11
Intel® 9560 Wireless LAN (802.11 a/b/g/n/ac) and Bluetooth® 5 Module	•	•	•	•	7	•	•
Onboard Audio (Conexant CX20632)	•	•	•	•	•	•	•
Onboard Intel® integrated SATA RAID (O/1)	•	•	•	•	•	•	•
USB 3.1 G1 Type A ports	•	•	•	•	•	•	•
USB 3.1 G2 Type C™ ports	•	•	•	•	•	•	•
Flexible I/O port options (including Thunderbolt™ 3 options)	•	•	•	•	•	•	•
<b>Removable CD/DVD Media</b>							
HP DVD-ROM Drive	•	•	•	•	•	•	•
HP DVD RW Supermulti Drive	8	8	8	8	8	8	8
HP BD-RE (Blu-Ray writer)	8	8	8	8	8	8	8
<b>Input/Output Devices (no spaceball support)</b>							
HP USB mouse options	•	•	•	•	•	•	•
HP USB keyboard options	•	•	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•	•	•
HP Printers	9	9	9	9	9	9	9
All Supported Monitors	•	•	•	•	•	•	•
TPM Module/SmartCard	10	10	10	10	10	10	10
HP Serial Port Adapter	•	•	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The Intel® HD graphics works with the in-box frame buffer drivers. Support for the "native" Intel® driver and modesetting driver on v8 processors (CoffeeLake) is not available for most release streams as of this edition of the table.

<sup>3</sup> AMD Radeon™ Pro graphics are supported by the amdgpu-pro driver stack. An 18.10 or later driver is recommended for this platform. Some OS distributions may have the amdgpu-open driver built in.

<sup>4</sup> Canonical provides up-to-date versions of the NVIDIA® proprietary driver in their software repositories. HP recommends customer use one of the choices provided by Canonical as well as use their software update tool.

<sup>5</sup> Single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. The OS's listed can create GPT formatted storage drives/volumes but this requires installation of the OS in UEFI mode. Once formatted and installed, the OS can access the entirety of storage drives/volumes.

<sup>6</sup> The driver for the Aquantia Nbase-T AQN-108 aftermarket NIC is not in-box for most of the listed Linux streams. Driver source can be found at the Aquantia site [www.aquantia.com/driver-download/](http://www.aquantia.com/driver-download/).

<sup>7</sup> Intel® 9560 Wireless support for WLAN on Ubuntu 16.04.5 is currently not functional due to firmware version incompatibility (although Bluetooth® is supported on this release).

<sup>8</sup> Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes.

<sup>9</sup> For more info about Linux driver support for HP printers, please visit <http://www.hpip.net>.

<sup>10</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software.

<sup>11</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>12</sup> There are currently issues installing enterprise Linux distros on M.2 and Z Turbo options when the system is running in legacy BIOS mode. HP recommends using the system in its default UEFI BIOS mode when using these storage devices.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z240 Tower Workstation

Certified on RHEL 6.8, 7.2. Certified on SLED 11/SP4, 12/SP1.  
Currently no Ubuntu certifications planned.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED11 SP4 or later (x86_64)	SLED12 SP1 or later (x86_64)	RHEL 6.7 or later (x86_64)	RHEL 7.2 or later (x86_64)	Ubuntu 14.04 LTS, 14.04.3 or later (x86_64)	Ubuntu 16.04 LTS, base release or later (x86_64)
<b>HP Workstation Base System</b>						
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•	•
HP Localization Kit	1	1	1	1	1	1
<b>All Supported Processors</b>						
All supported v5 and v6 Intel® Core™ i5, i7, and Xeon® processors	•	•	•	•	•	•
Hyperthreading	•	•	•	•	•	•
<b>Graphics Card (Video Card) (See footnote 14)</b>						
No Graphics Card	•	•	•	•	•	•
Intel® Onboard graphics (HD 530/HD P530 for v5, HD 630/HD P630 for v6)	9	9	9	9	9	9
AMD FirePro W2100	•	•	•	•	•	•
AMD FirePro W4300	•	•	•	•	•	•
AMD FirePro W5100	•	•	•	•	•	•
AMD FirePro W7100	•	•	•	•	•	•
AMD Radeon™ Pro WX 4100	12	12	12	12	12	12
AMD Radeon™ Pro WX 7100	12	12	12	12	12	12
NVIDIA® NVS 310 1 GB	•	•	•	•	•	•
NVIDIA® NVS 315	•	•	•	•	•	•
NVIDIA® NVS 510	•	•	•	•	•	•
NVIDIA® Quadro® K1200	•	•	•	•	•	•
NVIDIA® Quadro® K420 2 GB	•	•	•	•	•	•
NVIDIA® Quadro® K620	•	•	•	•	•	•
NVIDIA® Quadro® K2200	•	•	•	•	•	•
NVIDIA® Quadro® M2000 4 GB	10	10	10	10	10	10
NVIDIA® Quadro® M4000	10	10	10	10	10	10
NVIDIA® Quadro® M5000 8 GB	10	10	10	10	10	10
NVIDIA® Quadro® P400	10	10	10	10	10	10
NVIDIA® Quadro® P600	10	10	10	10	10	10
NVIDIA® Quadro® P1000	10	10	10	10	10	10
NVIDIA® Quadro® P2000	10	10	10	10	10	10
NVIDIA® Quadro® P4000	10	10	10	10	10	10
NVIDIA® Quadro® P5000	10	10	10	10	10	10
<b>System RAM</b>						
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB	64 GB	64 GB	64 GB	64 GB	64 GB
<b>Hard Disks</b>						
All Supported Solid State Disk Drives	•	•	•	•	•	•
All Supported SATA Disk Drives less than 3 TB	•	•	•	•	•	•
All Supported SATA Disk Drives 3 TB and larger	3	3	3	3	3	3
All Supported USB Drive Keys	•	•	•	•	•	•
HP Z Turbo Drive PCIe-attached storage	4	4	4	4	4	4
Intel® 750 Series PCIe Storage	4	4	4	4	4	4



# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z240 Tower Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED11 SP4 or later (x86_64)	SLED12 SP1 or later (x86_64)	RHEL 6.7 or later (x86_64)	RHEL 7.2 or later (x86_64)	Ubuntu 14.04 LTS, 14.04.3 or later (x86_64)	Ubuntu 16.04 LTS, base release or later (x86_64)
<b>Network Cards (no modem support)</b>						
Aquantia Nbase-T PCIe NIC		13		13	13	13
Intel® I210-T1 GbE PCIe NIC	•	•	•	•	•	•
Intel® I350-T2 Dual-Port and I350-T4 Quad-Port 1GbE PCIe NIC	•	•	•	•	•	•
Intel® X520 10GbE Dual Port Adapter (and HP SFP+ SR Transceiver)	•	•	•	•	•	•
Intel® X540 10GBase-T Dual Port Adapter (RJ45 -Copper)	•	•	•	•	•	•
Intel® 8260 802.11 a/b/g/n/ac & Bluetooth® PCIe	11	11	11	11	11	11
<b>Onboard Components</b>						
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•	•	•
Onboard Audio (Realtek ALC221 codec)	8	8	8	•	•	•
Onboard SATA RAID	2	2	2	2	2	2
<b>Add Ons</b>						
Thunderbolt™ PCIe card (see footnote 15)						
<b>Removable CD/DVD Media</b>						
HP DVD-ROM Drive	•	•	•	•	•	•
HP DVD RW Supermulti Drive	5	5	5	5	5	5
HP BD-RE (Blu-Ray writer)	5	5	5	5	5	5
<b>Input/Output Devices (no spaceball support)</b>						
HP Scroll Mouse, USB	•	•	•	•	•	•
HP Standard Keyboard, USB	•	•	•	•	•	•
HP Keyboard and Mouse, PS/2	•	•	•	•	•	•
TPM Module/Smart Card	7	7	7	7	7	7
HP Media Card Reader	•	•	•	•	•	•
HP Printers	6	6	6	6	6	6
All Supported Monitors	•	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Hardware RAID is not supported on SATA drives. Software RAID is available in most Linux OSes and can be used with SATA or PCIe storage devices.

<sup>3</sup> In general, single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. OSes listed can format GPT for the boot drive or volume but may require installation of UEFI boot support, and can access GPT-formatted data volumes.

<sup>4</sup> The Z Turbo Drive G2 PCIe-attached storage device has its own controller and is supported by the standard nvme kernel module in supported OSes. Updates are needed for SLED11 SP4 and SLED12 SP1 to operate with these NVME devices. Other NVME storage devices have similar requirements.

<sup>5</sup> Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes.

<sup>6</sup> For more info about Linux driver support for HP printers, go to <http://www.hpip.net>

<sup>7</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>8</sup> An ALSA kernel "quirk" is required for the system built-in speaker to be usable. Not all listed distributions include it; some may provide it in an update.

<sup>9</sup> The Intel® HD graphics works with the in-box frame-buffer drivers. Reliable behavior from the "native" Intel® driver is not available

for most release streams as of this edition of the table.

<sup>10</sup> HP recommends the following minimum NVIDIA® driver versions for M4000 and M5000 (352.41); M2000 (361.45.11); P400, P600, P1000, P2000, and P4000 (375.39); and P5000 (367.57).

<sup>11</sup> As of this edition of the table, only a few enterprise distributions have support for the Intel® 8260 WLAN/BT combo device. Look for updates from the distributors.

<sup>12</sup> AMD Radeon™ Pro graphics cards are supported by the newer amdgpu-pro vendor driver. OS streams are supported at specific release version levels, starting with these: SLED 12 SP2, RHEL 6.8, RHEL 7.3, Ubuntu 14.04.5, and Ubuntu 16.04.1. There is no amdgpu-pro driver for SLED 11.

<sup>13</sup> The driver for the Aquantia Nbase-T AQN-108 aftermarket NIC is not in-box for most of the listed Linux streams. Driver source can be found at the Aquantia site <https://www.aquantia.com/driver-download/>.

<sup>14</sup> Get the latest drivers: "HP Installer Kit for Linux - HP Driver CD (or DVD) for Linux-distribution-name" ISO images from <http://www.hp.com/support> Select your language, choose Software and Drivers, type z240 in the Enter my HP model number field, select Find my product, and then select HP Z240 Tower Workstation from the results. Under Download options, select Get drivers, software & firmware. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>15</sup> Newer Linux kernels may provide device functionality through the Thunderbolt™ module. Such kernels are likely to be available in leading-edge distributions, but inclusion of the support with any Enterprise Linux distribution is at the distributor's discretion. As an example, RHEL 7.2 enables more functionality than RHEL 7.1.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z238 Microtower Workstation



### Certifications pending.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED11 SP4 or later (x86_64)	SLED12 SP1 or later (x86_64)	RHEL 6.7 or later (x86_64)	RHEL 7.2 or later (x86_64)	Ubuntu 14.04 LTS, 14.04.3 or later (x86_64)
<b>HP Workstation Base System</b>					
Base system includes: Chassis, System Board, USB, Power Supply, etc.	•	•	•	•	•
HP Localization Kit	1	1	1	1	1
<b>All Supported Processors</b>					
All supported v5 and v6 Intel® Core™ i5, i7, and Xeon® processors	•	•	•	•	•
Hyperthreading	•	•	•	•	•
<b>Graphics Card (Video Card) (see footnote 10)</b>					
No Graphics Card	•	•	•	•	•
Intel® Onboard graphics (HD 530/HD P530 for v5, HD 630/HD P630 for v6)	9	9	9	9	9
AMD FirePro W2100	•	•	•	•	•
NVIDIA® NVS 315	•	•	•	•	•
NVIDIA® Quadro® K1200	•	•	•	•	•
NVIDIA® Quadro® K420 2 GB	•	•	•	•	•
NVIDIA® Quadro® K620	•	•	•	•	•
<b>System RAM</b>					
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB	64 GB	64 GB	64 GB	64 GB
<b>Hard Disks</b>					
All Supported SSD Disk Drives	•	•	•	•	•
All Supported SATA Disk Drives less than 3 TB	•	•	•	•	•
All Supported SATA Disk Drives 3 TB and larger	3	3	3	3	3
All Supported USB Drive Keys	•	•	•	•	•
HP Z Turbo Drive PCIe-attached storage	4	4	4	4	4
<b>Network Cards (no modem support)</b>					
Intel® i210-T1 GbE PCIe NIC	•	•	•	•	•
<b>Onboard Components</b>					
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•	•
Onboard Audio (Realtek ALC221 codec)	8	8	8	•	•
Onboard SATA RAID	2	2	2	2	2
<b>Removable CD/DVD Media</b>					
HP DVD-ROM Drive	•	•	•	•	•
HP DVD+RW Supermulti drive	5	5	5	5	5
<b>Input/Output Devices (no spaceball support)</b>					
HP Scroll Mouse, USB	•	•	•	•	•
HP Standard Keyboard, USB	•	•	•	•	•
HP Keyboard and Mouse, PS/2	•	•	•	•	•
TPM Module/ Smart Card	7	7	7	7	7
HP Media Card Reader	•	•	•	•	•
HP Printers	6	6	6	6	6
All Supported Monitors	•	•	•	•	•



Linux Hardware Matrix

# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z238 Microtower Workstation (continued)

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Hardware RAID is not supported on SATA drives. Software RAID is available in most Linux OSes and can be used with SATA or PCIe storage devices.

<sup>3</sup> In general, single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. OSes listed can format GPT for the boot drive or volume but may require installation of UEFI boot support, and can access GPT-formatted data volumes.

<sup>4</sup> The Z Turbo Drive G2 PCIe-attached storage device has its own controller and is supported by the standard nvme kernel module in supported OSes. Updates are needed for SLED11 SP4 and SLED12 SP1 to operate with these NVME devices.

<sup>5</sup> Linux growisofs supports DVD+RW media on the listed OSes.

<sup>6</sup> For more info about Linux driver support for HP printers, go to <http://www.hpip.net>.

<sup>7</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>8</sup> An ALSA kernel "quirk" is required for the system built-in speaker to be usable. Not all listed distributions include it; some may provide it in an update.

<sup>9</sup> The Intel® HD graphics works with the in-box frame-buffer drivers. Reliable behavior from the "native" Intel® driver is not available for most release streams as of this edition of the table.

<sup>10</sup> Get the latest drivers: "HP Installer Kit for Linux - HP Driver CD (or DVD) for Linux-distribution-name" ISO images from <http://www.hp.com/support>. Select your language, choose Software and Drivers, type z238 in the Enter my HP model number field, select Find my product, and then select HP Z228 Microtower Workstation from the results. Under Download options, select Get drivers, software & firmware. HP Workstations can be ordered with a variety of localization options that may vary by platform.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z228 Microtower Workstation

Originally certified with RHEL 6.3 (x86\_64) and SLED 11 SP2 (x86\_64).  
 Certified with RHEL 5.8 (x86\_64) in October 2012.



Product Items/Features (Blank box or unlisted -> component is NOT functional w/ as-is OS)	SLED11 SP3 or later (x86_64)	RHEL 6.5 or later (x86_64)	RHEL 7.0 or later (x86_64)	Ubuntu 14.04 LTS or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, USB, Power Supply, etc.	•	•	•	•
Localization Kit (see footnote 1)				
HP Localization Kit	•	•	•	•
<b>Software</b>				
Remote Graphics Software				
<b>All Supported Processors</b>				
All Supported Processors (single-CPU configs)	•	•	•	•
Hyperthreading	•	•	•	•
<b>Firmware Features</b>				
CSM (Compatibility Support Module) Mode	•	•	•	•
2.1 UEFI Mode	•	•	•	•
Intel® AMT remote manageability				
<b>Graphics Card (Video Card) (see footnote 2)</b>				
No Graphics Card	•	•	•	•
Intel® Onboard Graphics	8	8	8	8
NVIDIA® NVS 315	•	•	•	•
NVIDIA® Quadro® K420	•	•	•	•
NVIDIA® Quadro® K620	•	•	•	•
NVIDIA® Quadro® K1200	•	•	•	•
AMD FirePro W2100	•	•	•	•
<b>System RAM</b>				
Minimum (GB)	2 GB	2 GB	2 GB	2 GB
Maximum (GB)	32 GB	32 GB	32 GB	32 GB
<b>Hard Disks</b>				
SATA Controllers	5	5	5	5
All Supported SSD Disk Drives	•	•	•	•
All Supported SATA Disk Drives less than 3 TB	•	•	•	•
All Supported SATA Disk Drives 3 TB and larger	7	7	7	7
All Supported USB Drive Keys	•	•	•	•
<b>Network Cards (no modem support)</b>				
Intel® I210-T1 GbE PCIe NIC	•	•	•	•
<b>Onboard Components</b>				
Onboard LAN - Intel® I217LM Gigabit Ethernet	•	•	•	•
Onboard Audio	•	•	•	•
Onboard SATA RAID	4	4	4	4
Onboard USB 3.0	•	•	•	•
<b>Add Ons</b>				
IEEE 1394B PCI-E Card	•	•	•	•
<b>Removable CD/DVD Media</b>				
HP 16x DVD-ROM Drive	•	•	•	•
HP 16x Super Multi DVD+RW	3	3	3	3



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z228 Microtower Workstation (continued)

Product Items/Features (Blank box or unlisted -> component is NOT functional w/ as-is OS)	SLED11 SP3 or later (x86_64)	RHEL 6.5 or later (x86_64)	RHEL 7.0 or later (x86_64)	Ubuntu 14.04 LTS or later (x86_64)
<b>Input/Output Devices (no spaceball support)</b>				
HP Mouse, PS/2 or USB	•	•	•	•
HP Standard Keyboard, USB/PS2	•	•	•	•
<b>TPM Module/ Smart Card</b>				
HP Media Card Reader	•	•	•	•
HP Printers	6	6	6	6
All Supported Monitors	•	•	•	•

<sup>1</sup> HP systems can usually be ordered with a localization that affects documentation, keyboards, and other components. Typical Linux distributions are not installed as pre-localized, but the user can choose a language and keyboard layout during post-installation configuration, or during the "first boot" when the OS comes preloaded on the system.

<sup>2</sup> Get the latest drivers: "HP Installer Kit for Linux - HP Driver CD (or DVD) for Linux-distribution-name" ISO images from <http://www.hp.com/support>. Select your language, choose Software and Drivers, type z228mt in the Enter my HP model number field, and select Find my product. Under Download options, select Get drivers, software & firmware. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>3</sup> Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes. For drives that have the Lightscribe functionality, go to [www.lightscribe.com](http://www.lightscribe.com) for software to enable the labeling feature.

<sup>4</sup> Hardware RAID is not supported on SATA drives. Software RAID is available in most Linux OSes.

<sup>5</sup> The Z228 can support up to 2 SATA drives.

<sup>6</sup> For more info about Linux driver support for HP printers, go to <http://www.hpip.net>.

<sup>7</sup> In general, single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. Newer Linux OSes can format GPT for the boot drive or volume but may require installation of UEFI boot support. OSes listed can all access GPT-formatted volumes.

<sup>8</sup> Depending on the OS release, the kernel DRM and X.org "Intel" driver may not support the Intel® graphics correctly.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z4 Rack G5 Workstation

Certified on RHEL 8.8, RHEL 9.2, Ubuntu 22.04 and SLE 15/SP5 certification  
RHEL 7, SLED 12 and Ubuntu 18.04 are not supportable by HP on Z4 Rack G5.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel architecture used in this system.  
HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/SP5 or later (x86_64)	RHEL 8.8 or later (x86_64)	RHEL 9.2 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
Intel® Xeon® W-2400 processors (W3/W5/W7)	•	•	•	•
<b>Graphics Card (Video Card) (See footnote 2)</b>				
No Graphics Card	•	•	•	•
AMD Radeon™ Pro W6800 (32 GB Frame buffer)	3	3	3	3
NVIDIA® T400 (4 GB Frame buffer)	4	4	4	4
NVIDIA® T1000 (8 GB Frame buffer)	4	4	4	4
NVIDIA® RTX® A2000 (12 GB Frame buffer)	4	4	4	4
NVIDIA® RTX® A4000 (16 GB Frame buffer)	4	4	4	4
NVIDIA® RTX® A4500 (20 GB Frame buffer)	4	4	4	4
NVIDIA® RTX® A5000 (24 GB Frame buffer)	4	4	4	4
NVIDIA® RTX® A6000 (48 GB Frame buffer)	4	4	4	4
NVIDIA® RTX® 6000 Ada (48 GB Frame buffer)	4, 5	4, 5	4, 5	4, 5
<b>System RAM</b>				
Minimum (GB)	16 GB	16 GB	16 GB	16 GB
Maximum (GB)	256 GB	256 GB	256 GB	256 GB
<b>Hard Disks</b>				
All HP-configurable Solid State Drives	•	•	•	•
All HP-configurable SATA Disk Drives	•	•	•	•
HP Z Turbo Drive PCIe® NVMe™ SSD storage	•	•	•	•
HP Z Turbo Drive Dual Pro PCIe-4x4 NVMe Carrier	•	•	•	•
HP Z4 Rack 2.5 in Drive Carrier	•	•	•	•
HP Z4 Rack 2.5 in M.2 Adapter Carrier	•	•	•	•
HP Z4 Rack G5 2.5 in Dual Driver Cage Adapter	•	•	•	•
HP Z4 Rack G5 3.5 in in Driver Cage Adapter	•	•	•	•
<b>Network Cards</b>				
Intel X550-T2 10GBASE-T Dual Port NIC	•	•	•	•
Intel I225-T1 Single Port 2.5GbE PCIe NIC	•	•	•	•
Allied Telesis AT-2914SX/LC-901 1GB LC Fibre NIC	•	•	•	•
Allied Telesis AT-2911T/2-901 Dual Port 1GbE NIC	•	•	•	•
NVIDIA Mellanox ConnectX-6 DX Dual Port 10/25GbE SFP28 NIC	•	•	•	•
Intel Ethernet I350-T4 4-Port 1 Gb NIC	•	•	•	•
<b>Integrated Components</b>				
Wired LAN - Intel I219LM Gigabit Ethernet	•	•	•	•
Intel AMT functionality on Wired LAN	8	8	8	8
Onboard Audio (Realtek ALC3205)	•	•	•	•
USB 3.2 G1 Type A ports (5Gbps)	•	•	•	•
USB 3.2 G2x2 Type-C™ ports (20Gbps)	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z4 Rack G5 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 15/ SP5 or later (x86_64)	RHEL 8.8 or later (x86_64)	RHEL 9.2 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>Add Ons</b>				
HP 10GBase-T Flex Port	•	•	•	•
HP 2.5GbE LAN Flex Port	•	•	•	•
HP 1GbE Fibre LC Single Flex Port	•	•	•	•
HP Serial Port v3 Flex IO	•	•	•	•
HP Anywhere Remote System Controller	•	•	•	•
HP Anywhere Integrated Remote System Controller	•	•	•	•
<b>Input/Output Devices (no spaceball support)</b>				
HP USB mouse options	•	•	•	•
HP USB keyboard options	•	•	•	•
HP Media Card Reader	•	•	•	•
HP Printers	6	6	6	6
TPM Module	7	7	7	7
HP Internal Serial Port and PS/2 Port	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Support for consumer grade graphics cards is provided directly from the graphics vendor. HP does not provide software support for consumer cards.

<sup>3</sup> AMD Radeon Pro graphics are supported by AMD with the amdgpu-pro driver stack.

<sup>4</sup> HP recommends use of NVIDIA® driver 525.xx (or newer) on NVIDIA® graphics options.

<sup>5</sup> An Nvidia R525 driver is required for Ada generation cards.

<sup>6</sup> For more info about Linux open-source driver support for HP printers, please visit <http://www.hpip.net>.

<sup>7</sup> Open-source support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software supported by your preferred Linux distributor.

<sup>8</sup> Intel support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZCentral 4R Workstation

Certified on RHEL 8.3, SLE 15/SP3 & SP4, Ubuntu 20.04 and Ubuntu 22.04. HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirement.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.4 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 18.04 LTS or later (x86_64)	Ubuntu 20.04 LTS or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
Intel® Xeon® W-22xx series processors	•	•	•	•
Hyperthreading	•	•	•	•
<b>Graphics Card (Video Card) (See footnote 2)</b>				
No Graphics Card	•	•	•	•
NVIDIA® Quadro® P400 (2 GB Frame buffer)	2	2	2	2
NVIDIA® Quadro® P1000 (4 GB Frame buffer)	2	2	2	2
NVIDIA® Quadro® T400 (2 GB Frame buffer)	2	2	2	2
NVIDIA® Quadro® T1000 (4 GB Frame buffer)	2	2	2	2
NVIDIA® Quadro® P2200 (5 GB Frame buffer)	2	2	2	2
NVIDIA® Quadro® RTX 4000 (8 GB Frame buffer)	2	2	2	2
NVIDIA® Quadro® RTX 5000 (16 GB Frame buffer)	2	2	2	2
NVIDIA® RTX™ A4000 (16 GB Frame buffer)	2	2	2	2
NVIDIA® RTX™ A5000 (24 GB Frame buffer)	2	2	2	2
NVIDIA® RTX™ A6000 (48 GB Frame buffer)	2	2	2	2
NVIDIA® Quadro® RTX 6000 (24 GB Frame buffer)	2	2	2	2
NVIDIA® Quadro® RTX 8000 (48 GB Frame buffer)	2	2	2	2
<b>System RAM</b>				
Minimum (GB)	16 GB	16 GB	16 GB	16 GB
Maximum (GB)	256 GB	256 GB	256 GB	256 GB
<b>Hard Disks</b>				
All Supported Solid State Drives	•	•	•	•
All Supported SATA Disk Drives <= 2 TB	•	•	•	•
All Supported SATA Disk Drives > 2 TB	3	3	3	3
All Supported M.2 NVMe PCIe Solid State Drives	•	•	•	•
HP Z Turbo Drive PCIe-attached storage	4	4	4	4
<b>Network Cards</b>				
Allied Telesis AT2914SX/LC-901 1 Gb LC Fiber NIC	•	•	•	•
Intel® I210-T1 GbE PCIe NIC	•	•	•	•
Intel® X550 10GbE Dual Port Adapter	•	•	•	•
<b>Integrated Components</b>				
Intel® I219LM Gigabit Ethernet (1 Gb)	•	•	•	•
Intel® AMT functionality (Intel® I219LM)	5	5	5	5
Aquantia AQN-107 (10Gbase-T)	•	•	•	•
Onboard Audio (Realtek ALC221 codec)	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1/5/10)	•	•	•	•
USB 3.2 Gen1 Type A ports	•	•	•	•
USB 3.3 Gen 2 Type-C™ ports (on FIO-P module)	6	6	6	6
USB 2.0 / 3.2 Gen 1 internal ports	•	•	•	•
TPM 2.0 Module	7	7	7	7



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZCentral 4R Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.4 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 18.04 LTS or later (x86_64)	Ubuntu 20.04 LTS or later (x86_64)
<b>Removable CD/DVD Media</b>				
HP DVD-ROM Drive	•	•	•	•
HP DVD RW Supermulti Drive	8	8	8	8
HP BD-RE (Blu-Ray writer)	8	8	8	8
<b>Input/Output Devices (no spaceball support)</b>				
HP Scroll Mouse, USB	•	•	•	•
HP Standard Keyboard, USB	•	•	•	•
HP Keyboard and Mouse, PS/2	•	•	•	•
HP Media Card Reader	•	•	•	•
HP Printers	9	9	9	9
All Supported Monitors	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> HP recommends using NVIDIA® driver 460.84 or newer for NVIDIA® graphics on this platform.

<sup>3</sup> Single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. The OSes listed can create GPT formatted storage drives/volumes but this requires installation of the OS in UEFI mode. Once formatted and installed, the OS can access the entirety of storage drives/volumes.

<sup>4</sup> There are currently issues installing enterprise Linux distros on M.2 and HP Z turbo options when the system is running in legacy BIOS mode. HP recommends using the system in its default UEFI BIOS mode when using these storage devices.

<sup>5</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor of your choice.

<sup>6</sup> There is a problem discovered recently with improper USB C hotplug device recognition that will require a fix in BIOS, which will be delivered in a future BIOS release. HP will update this footnote when the version of that BIOS release is known.

<sup>7</sup> Usable functionality for the TPM or other security devices may vary by OS distribution. Any use of the TPM module does require additional software.

<sup>8</sup> Linux growisofs supports DVD+RW and Blu-Ray media on the listed OSes.

<sup>9</sup> For more info about Linux driver support for HP printers, please visit <http://www.hplip.net>



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z4 G5 Workstation

Certified on Ubuntu 20.04, RHEL 8.7, RHEL 9.1.  
 Certifications in progress for Ubuntu 22.04, SLE 15/SP5  
 Older enterprise distributions not listed below are not supportable by HP on Z4 G5  
 HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	Ubuntu 20.04.5 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)	RHEL 8.7 or later (x86_64)	RHEL 9.1 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
Intel® Xeon® W-2400 processors (W3/W5/W7)	•	•	•	•
<b>Graphics Card (Video Card)</b>				
No Graphics Card	•	•	•	•
Intel® Arc Pro A40 (6GB)				
AMD® Radeon™ RX 6400 (4GB)	•	•	•	•
AMD RadeonPro W6600 (8 GB)	•	•	•	•
AMD Radeon™ RX 6700 XT (12 GB)	•	•	•	•
AMD RadeonPro W6800 (32 GB)	•	•	•	•
NVIDIA® T400 (4 GB)	2	2	2	2
NVIDIA® T1000 (4 GB / 8 GB)	2	2	2	2
NVIDIA® Long-Life T1000E (8 GB)	2	2	2	2
NVIDIA® RTX® Long-Life A2000E (12 GB)	2	2	2	2
NVIDIA® RTX® A2000 (12 GB Frame buffer)	2	2	2	2
NVIDIA® RTX® Long-Life A4000E (16 GB)	2	2	2	2
NVIDIA® RTX® A4000 (16 GB)	2	2	2	2
NVIDIA® RTX® A4500 (20 GB)	2	2	2	2
NVIDIA® RTX® Long-Life A5000E (24 GB)	2	2	2	2
NVIDIA® RTX® A5000 (24 GB)	2	2	2	2
NVIDIA® RTX® A6000 (48 GB)	2	2	2	2
NVIDIA® RTX® 6000 Ada (48 GB)	3	3	3	3
<b>System RAM</b>				
Minimum (GB)	16 GB	16 GB	16 GB	16 GB
Maximum (GB)	1 TB	1 TB	1 TB	1 TB
<b>Hard Disks</b>				
All HP-configurable Solid State Drives	•	•	•	•
All HP-configurable SATA Disk Drives	•	•	•	•
HP Z Turbo Drive Dual Pro PCIe-4x4 NVMe Carrier	•	•	•	•
SATA RAID [0, 1, 5, 10]	•	•	•	•
Intel® Virtual RAID on CPU (Intel® VROC) for NVMe			7	•
HP CRU QX428 Removable with 200mm Cable Frame/Carrier	•	•	•	•
HP DX175 Removable HDD Frame/Carrier	•	•	•	•
<b>Network Cards</b>				
Intel® i350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•
Intel® X550 10GbE Dual Port Adapter	•	•	•	•
Intel® Ethernet Network Adapter i225-T1 2.5 Gb NIC	•	•	•	•
Intel® AX210 Wireless 6E LAN (802.11 a/b/g/n/ac/ax) and Bluetooth 5.2 Module	•	•	•	•
Allied Telesis AT-2914SX/LC-901 1GB LC Fiber NIC	•	•	•	•
Allied Telesis AT-2911T/2-901 Dual Port 1GbE NIC	•	•	•	•
NVIDIA Mellanox ConnectX-6 DX 10/25GbE SFP28 NIC	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z4 G5 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	Ubuntu 20.04.5 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)	RHEL 8.7 or later (x86_64)	RHEL 9.1 or later (x86_64)
<b>Integrated Components</b>				
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•
Intel® AMT functionality on Wired LAN	4	4	4	4
Onboard Audio (Realtek ALC3205-CG)	•	•	•	•
USB 3.2 G1 Type A ports (5Gbps)	•	•	•	•
USB 3.2 G2 Type A and Type-C™ ports (10Gbps)	•	•	•	•
USB 3.2 G2x2 Type-C™ ports (20Gbps)	•	•	•	•
<b>Add Ons</b>				
HP 10GBase-T Flex Port	•	•	•	•
HP 2.5GbE LAN Flex Port	•	•	•	•
HP Flex 1GbE Single Port NIC	•	•	•	•
HP 1GbE Fiber LC Single Flex Port	•	•	•	•
Serial Port v2	•	•	•	•
Dual USB-A 3.2 Gen1	•	•	•	•
USB-C 3.2 Gen2	•	•	•	•
WiFi6 + BT5.2 WLAN w/ INTAnt	•	•	•	•
<b>Removable CD/DVD Media</b>				
HP 9.5mm Slim DVD-ROM Drive	•	•	•	•
HP 9.5mm Slim DVD RW Supermulti Drive	•	•	•	•
HP 9.5mm Slim BDXL Blu-Ray Writer Drive	•	•	•	•
<b>Input/Output/Misc Devices</b>				
HP USB mouse options	•	•	•	•
HP USB keyboard options	•	•	•	•
HP Media Card Reader	•	•	•	•
HP Printers	5	5	5	5
TPM Module	6	6	6	6

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> HP recommends use of NVIDIA® driver 525.xx (or newer) on NVIDIA® graphics options.

<sup>3</sup> An Nvidia R525 driver is required for Ada generation cards

<sup>4</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>5</sup> For more info about Linux open-source driver support for HP printers, please visit <http://www.hpip.net>.

<sup>6</sup> Open-source support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software supported by your preferred Linux distributor.

<sup>7</sup> HP Recommends RHEL 8.8 or later for Intel® Virtual RAID on CPU (Intel® VROC) for NVMe.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z4 G4 Workstation

Certified on RHEL 7.4, RHEL 8.0, RHEL 9.0, SLED 12/SP3, SLED 15 and Ubuntu 20.04.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12 SP3 or later (x86_64)	SLED 15 or later (x86_64)	RHEL 6.9 or later (x86_64)	RHEL 7.4 or later (x86_64)	RHEL 8.0 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 16.04 LTS or later (x86_64)	Ubuntu 18.04 LTS or later (x86_64)	Ubuntu 20.04 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
--	-------------------------------------	---------------------------------	----------------------------------	----------------------------------	----------------------------------	----------------------------------	---	---	--------------------------------------	--------------------------------------

### HP Workstation Base System

Base system includes: Chassis, System Board, Power Supply, etc.

HP Localization Kit	1	1	1	1	1	1	1	1	1	1
---------------------	---	---	---	---	---	---	---	---	---	---

### All Supported Processors

Intel® Xeon® W and i7/i9 Core X-series processors	•	•	•	•	•	•	•	•	•	•
---	---	---	---	---	---	---	---	---	---	---

Hyperthreading	•	•	•	•	•	•	•	•	•	•
----------------	---	---	---	---	---	---	---	---	---	---

### Graphics Card (Video Card)

No Graphics Card	•	•	•	•	•	•	•	•	•	•
------------------	---	---	---	---	---	---	---	---	---	---

AMD FirePro W2100 (2 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
---------------------------------------	---	---	---	---	---	---	---	---	---	---

AMD FirePro WX 3100 (4 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
---	---	---	---	---	---	---	---	---	---	---

AMD FirePro WX 3200 (4 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
---	---	---	---	---	---	---	---	---	---	---

AMD FirePro WX 4100 (4 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
---	---	---	---	---	---	---	---	---	---	---

AMD Radeon™ Pro W5500 (8 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
---	---	---	---	---	---	---	---	---	---	---

AMD Radeon™ Pro W5700 (8 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
---	---	---	---	---	---	---	---	---	---	---

AMD Radeon™ Pro W6600 (8 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
---	---	---	---	---	---	---	---	---	---	---

AMD Radeon™ Pro W6800 (32 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
--	---	---	---	---	---	---	---	---	---	---

AMD FirePro WX 7100 (8 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
---	---	---	---	---	---	---	---	---	---	---

AMD FirePro WX 9100 (16 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
--	---	---	---	---	---	---	---	---	---	---

NVIDIA® Quadro® P400 (2 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
--	---	---	---	---	---	---	----	----	----	----

NVIDIA® Quadro® P600 (2 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
--	---	---	---	---	---	---	----	----	----	----

NVIDIA® Quadro® P620 (2 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
--	---	---	---	---	---	---	----	----	----	----

NVIDIA® Quadro® P1000 (4 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
---	---	---	---	---	---	---	----	----	----	----

NVIDIA® Quadro® T400 (2 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
--	---	---	---	---	---	---	----	----	----	----

NVIDIA® Quadro® T600 (4 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
--	---	---	---	---	---	---	----	----	----	----

NVIDIA® Quadro® T1000 (4 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
---	---	---	---	---	---	---	----	----	----	----

NVIDIA® Quadro® P2000 (5 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
---	---	---	---	---	---	---	----	----	----	----

NVIDIA® Quadro® P2200 (5 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
---	---	---	---	---	---	---	----	----	----	----

NVIDIA® Quadro® P4000 (8 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
---	---	---	---	---	---	---	----	----	----	----

NVIDIA® Quadro® P5000 (16 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
--	---	---	---	---	---	---	----	----	----	----



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z4 G4 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12 SP3 or later (x86_64)	SLED 15 or later (x86_64)	RHEL 6.9 or later (x86_64)	RHEL 7.4 or later (x86_64)	RHEL 8.0 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 16.04 LTS 16.04.3 or later (x86_64)	Ubuntu 18.04 LTS or later (x86_64)	Ubuntu 20.04 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
NVIDIA® Quadro® P6000 (24 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
NVIDIA® Quadro® GP100 (16 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
NVIDIA® Quadro® GV100 (32 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
NVIDIA® Quadro® RTX 4000	8	8	8	8	8	8	13	13	13	13
NVIDIA® Quadro® RTX 5000	8	8	8	8	8	8	13	13	13	13
NVIDIA® Quadro® RTX 6000	8	8	8	8	8	8	13	13	13	13
NVIDIA® RTX™ A2000 (6 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
NVIDIA® RTX™ A4000 (16 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
NVIDIA® RTX™ A4500 (20 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
NVIDIA® RTX™ A5000 (24 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
NVIDIA® RTX™ A6000 (48 GB Frame buffer)	8	8	8	8	8	8	13	13	13	13
NVIDIA® Quadro® RTX 8000	8	8	8	8	8	8	13	13	13	13
<b>System RAM</b>										
Minimum (GB)	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB
Maximum (GB) X-series processor/W processor	128/ 256 GB	128/ 256 GB	128/ 256 GB	128/ 256 GB	128/ 256 GB	128/ 256 GB	128/ 256 GB	128/ 256 GB	128/ 256 GB	128/ 256 GB
<b>Hard Disks</b>										
All Supported Solid State Drives	•	•	•	•	•	•	•	•	•	•
All Supported SATA Disk Drives <= 2 TB	•	•	•	•	•	•	•	•	•	•
All Supported SATA Disk Drives > 2 TB	2	2	2	2	2	2	2	2	2	2
All Supported M.2 NVMe PCIe Solid State Drives	•	•	•	•	•	•	•	•	•	•
All Support SAS Disk Drives										
HP Z Turbo Drive PCIe-attached storage	11	11	11	11	11	11	11	11	•	•
<b>Network Cards</b>										
Allied Telesis AT-2911T/2 Dual Port 1 GbE NIC	•	•	•	•	•	•	•	•	•	•
Allied Telesis AT2914SX/LC-901 1 Gb LC Fiber NIC	•	•	•	•	•	•	•	•	•	•
Intel® I210-T1 GbE PCIe NIC	•	•	•	•	•	•	•	•	•	•
Intel® I350-T2 PCIe Dual Port 1 Gb NIC	•	•	•	•	•	•	•	•	•	•
Intel® I350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•	•	•	•	•	•	•
Aquantia® AQN-108 Single-Port 5GbE NIC	10	10	10	10	10	10	10	10	•	•
Intel® X550 10GbE Dual Port Adapter	•	•	•	•	•	•	•	•	•	•
Intel® X710-DA2 10GbE Dual Port Adapter (and HP SFP+ SR Transceiver)	•	•	•	•	•	•	•	•	•	•
Intel® 10GBase-T Dual Port Adapter (RJ-45 Copper)	•	•	•	•	•	•	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z4 G4 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12 SP3 or later (x86_64)	SLED 15 or later (x86_64)	RHEL 6.9 or later (x86_64)	RHEL 7.4 or later (x86_64)	RHEL 8.0 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 16.04 LTS or later (x86_64)	Ubuntu 18.04 LTS or later (x86_64)	Ubuntu 20.04 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
Intel® 8265 802.11 a/b/g/n/ac & Bluetooth® PCIe	•	•	•	•	•	•	•	•	•	•
<b>Integrated Components</b>										
LAN port 0 - Intel® i219LM Gigabit Ethernet	•	•	•	•	•	•	•	•	•	•
LAN port 1 - Intel® i210 Gigabit Ethernet	•	•	•	•	•	•	•	•	•	•
Intel® AMT functionality on LAN port 0	9	9	9	9	9	9	9	9	9	9
Onboard Audio (Realtek ALC221 codec)	•	•	•	•	•	•	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1/5/10)	•	•	•	•	•	•	•	•	•	•
USB 3.1 G1 Type A ports	•	•	•	•	•	•	•	•	•	•
USB 3.1 G2 Type C™ ports (on FIO-P module)	•	•	•	•	•	•	•	•	•	•
USB 2.0/3.1 G1 internal ports	•	•	•	•	•	•	•	•	•	•
TPM 2.0 Module	6	6	6	6	6	6	6	6	6	6
<b>Add Ons</b>										
MicroSemi SmartHBA2100-4i4e SAS controller	3	3	3	3	3	3	3	3	3	3
<b>Removable CD/DVD Media</b>										
HP DVD-ROM Drive	•	•	•	•	•	•	•	•	•	•
HP DVD RW Supermulti Drive	4	4	4	4	4	4	4	4	4	4
HP BD-RE (Blu-Ray writer)	4	4	4	4	4	4	4	4	4	4
<b>Input/Output Devices (no spaceball support)</b>										
HP Scroll Mouse, USB	•	•	•	•	•	•	•	•	•	•
HP Standard Keyboard, USB	•	•	•	•	•	•	•	•	•	•
HP Keyboard and Mouse, PS/2	•	•	•	•	•	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•	•	•	•	•	•
HP Printers	5	5	5	5	5	5	5	5	5	5
All Supported Monitors	•	•	•	•	•	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Single drives or volumes larger than 2<sup>2</sup> TB can only be fully accessed using GPT formatting. The OS's listed can create GPT formatted storage drives/volumes but this requires installation of the OS in UEFI mode. Once formatted and installed, the OS can access the entirety of storage drives/ volumes.

<sup>3</sup> The MicroSemi 2100-4i4e is not currently being supported on enterprise Linux distros by HP Inc.

<sup>4</sup> Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes.

<sup>5</sup> For more info about Linux driver support for HP printers, please visit <http://www.hpip.net>.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software.

<sup>7</sup> AMD Radeon™ Pro graphics cards are now supported in Linux by the recently released amdgpu open source driver. OS streams are supported at specific release version levels, starting with these: SLED 12/SP2, RHEL 6.9, RHEL 7.4, RHEL 8.0, Ubuntu 16.04.2. For RHEL 6.9 with certain AMD cards, it may be necessary to remove "rhgb" from the boot line in order for the X server to start correctly with the amdgpu-pro driver

<sup>8</sup> HP recommends using NVIDIA® driver <sup>460.84</sup> or newer for NVIDIA® graphics on this platform.

<sup>9</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor of your choice.

<sup>10</sup> The driver for the Aquantia Nbase-T AQN-108 aftermarket NIC is not in-box for most of the listed Linux streams. Driver source can be found at the Aquantia site <https://www.aquantia.com/driver-download/>.

<sup>11</sup> There are currently issues installing enterprise Linux distro.s on M.2 and Z Turbo options when the system is running in legacy BIOS mode. HP recommends using the system in its default UEFI BIOS mode when using these storage devices.

<sup>12</sup> UEFI mode only. RHEL 6.9 currently does not support running in legacy BIOS on this platform.

<sup>13</sup> Canonical provides up-to-date versions of the NVIDIA® proprietary driver in their software repositories. HP recommends customer use one of the choices provided by Canonical as well as use their software update tool.

<sup>14</sup> RHEL 7.6 (or newer versions) is the earliest version of RHEL 7 that can be used with Intel® Cascade Lake processors in the HP Z8 G4. Skylake processors can be used with RHEL 7.4 and newer releases of RHEL 7.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z440 Workstation

**Certified on RHEL 6.5 and RHEL 7.0. Certified on Ubuntu 14.04 LT (BIOS 1.25 required).**  
**Certified on SLED 11 SP3 and SLED 12 (NVIDIA® graphics).**  
 Other certifications pending.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED11 SP3 or later (x86_64)	SLED12 or later (x86_64)	RHEL 6.5 or later (x86_64)	RHEL 7.0 or later (x86_64)	Ubuntu 14.04 LTS or later (x86_64)	Ubuntu 16.04 LTS or later (x86_64)
<b>HP Workstation Base System</b>						
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•	•
HP Localization Kit	1	1	1	1	1	1
<b>All Supported Processors</b>						
All supported v3 (Haswell) & v4 (Broadwell) E5-16xx Xeon® processors (see footnote 14)	•	•	•	•	•	•
<b>Graphics Card (Video Card) (see footnote 15)</b>						
No Graphics Card	•	•	•	•	•	•
AMD FirePro W2100	•	•	•	•	•	•
AMD FirePro W4300	•	•	•	•	•	•
AMD FirePro W5100	•	•	•	•	•	•
AMD FirePro W7100	•	•	•	•	•	•
AMD Radeon™ Pro WX 4100	11	11	11	11	11	11
AMD Radeon™ Pro WX 7100	11	11	11	11	11	11
NVIDIA® NVS 310 512 MB and 1 GB	•	•	•	•	•	•
NVIDIA® NVS 315 1 GB	•	•	•	•	•	•
NVIDIA® NVS 510 2 GB	•	•	•	•	•	•
NVIDIA® Quadro® NVS K420 1 GB and 2 GB	•	•	•	•	•	•
NVIDIA® Quadro® K620 2 GB	•	•	•	•	•	•
NVIDIA® Quadro® K2200 4 GB	•	•	•	•	•	•
NVIDIA® Quadro® K4200 4 GB	•	•	•	•	•	•
NVIDIA® Quadro® K5200 8 GB	•	•	•	•	•	•
NVIDIA® Quadro® K6000 12 GB	•	•	•	•	•	•
NVIDIA® Quadro® M2000 4 GB	9	9	9	9	9	9
NVIDIA® Quadro® M4000 8 GB	9	9	9	9	9	9
NVIDIA® Quadro® M5000 8 GB	9	9	9	9	9	9
NVIDIA® Quadro® P400	9	9	9	9	9	9
NVIDIA® Quadro® P600	9	9	9	9	9	9
NVIDIA® Quadro® P1000	9	9	9	9	9	9
NVIDIA® Quadro® P2000	9	9	9	9	9	9
NVIDIA® Quadro® P4000	9	9	9	9	9	9
NVIDIA® Quadro® P6000	9	9	9	9	9	9
<b>High Performance GPU Computing</b>						
NVIDIA® Tesla® K40	8	8	8	8	8	8
<b>System RAM</b>						
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	128 GB	128 GB	128 GB	128 GB	128 GB	128 GB
<b>Hard Disks</b>						
All Supported SAS Disk Drives	2	2	2	2	2	2
All Supported Solid State Drives	•	•	•	•	•	•
All Supported SATA Disk Drives less than 3 TB	•	•	•	•	•	•
Supported SATA Disk Drives 3 TB and larger	3	3	3	3	3	3



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z440 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED11 SP3 or later (x86_64)	SLED12 or later (x86_64)	RHEL 6.5 or later (x86_64)	RHEL 7.0 or later (x86_64)	Ubuntu 14.04 LTS or later (x86_64)	Ubuntu 16.04 LTS or later (x86_64)
All Supported USB Drive Keys	•	•	•	•	•	•
HP Z Turbo Drive and Z Turbo QuadPro PCIe-attached storage	4	4, 13	4	4, 13	4	4, 13
Intel® 750 Series PCIe Storage	4	4	4	4	4	4
<b>Network Cards (no modem support)</b>						
Aquantia Nbase-T PCIe NIC		12		12	12	12
Intel® Ethernet I210-T1 PCIe NIC	•	•	•	•	•	•
Intel® I350-T2 Dual-Port I350-T4 Quad-Port 1GbE PCIe NIC	•	•	•	•	•	•
Intel® X540 10GBase-T Dual Port Adapter (RJ45 -Copper)	•	•	•	•	•	•
Intel® 361T 1GbE dual port PCI NIC	•	•	•	•	•	•
Intel® Ethernet X520 10GbE dual port PCIe NIC	•	•	•	•	•	•
Intel® 7260 802.11a/b/g/n PCIe WLAN NIC	•	•	•	•	•	•
Intel® 8260 802.11 a/b/g/n/ac & Bluetooth® PCIe	10	10	10	10	10	10
<b>Onboard Components</b>						
Integrated Intel® SATA sSATA Controller	2	2	2	2	2	2
Wired LAN - Intel® i218LM Gigabit Ethernet	7	7	•	•	•	•
Onboard Audio (Realtek ALC221 codec)	•	•	•	•	•	•
Onboard SATA RAID	2	2	2	2	2	2
<b>Add Ons</b>						
LSI 9217-4i4e 8-port SAS 6 Gb/s RAID Controller	2	2	2	2	2	2
LSI 9270-8i 8-port SAS 6 Gb/s ROC RAID Controller & iBBU9 battery backup unit	2	2	2	2	2	2
Thunderbolt™ PCIe card (see footnote 16)						
1394b Firewire PCIe card	•	•	•	•	•	•
<b>Removable CD/DVD Media</b>						
HP DVD-ROM Drive	•	•	•	•	•	•
HP DVD RW Supermulti Drive	5	5	5	5	5	5
HP BD-RE (Blu-Ray writer)	5	5	5	5	5	5
<b>Input/Output Devices (no spaceball support)</b>						
HP Scroll Mouse, USB	•	•	•	•	•	•
HP Standard Keyboard, USB	•	•	•	•	•	•
HP Keyboard and Mouse, PS/2	•	•	•	•	•	•
<b>TPM Module/ Smart Card (see footnote 17)</b>						
HP Media Card Reader	•	•	•	•	•	•
HP Printers	6	6	6	6	6	6
All Supported Monitors	•	•	•	•	•	•



Linux Hardware Matrix

Contents & navigation

Table with 2 columns: Category and Page Range. Includes Desktop Workstations (HP Entry Tower/Z1, HP Z2 Mini Workstation, HP Z2 SFF / Z240 SFF Workstation, HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation, HP ZCentral 4R Workstation, HP Z4 Workstation, HP Z6 Workstation, HP Z8 Fury Workstation, HP Z8 Workstation) and Mobile Workstations (HP ZBook Firefly/14u/15u Workstation, HP ZBook Power/15v Workstation, HP ZBook Studio/Create Workstation, HP ZBook Fury/15/17 Mobile Workstation).

HP Z440 Workstation (continued)

1 Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

2 Hardware RAID is supported using the LSI 9217-4i4e (RAID 0/1/1E/10 SATA & SAS) and the LSI 9270-8i (RAID 0/1/5/6/10 SATA & SAS). SATA RAID is supported on sSATA ports (0/1/5/10 SATA only).

3 In general, single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. OSes listed can format GPT for the boot drive or volume but may require installation of UEFI boot support, and can access GPT-formatted data volumes.

4 The Z Turbo Drive PCIe-attached storage device has its own controller and is supported by the standard ahci kernel module in supported OSes. Z Turbo Drive G2 is an NVME device and is supported by the kernel NVME module. Z Turbo QuadPro is an enclosure for several NVME devices. Updates are needed for SLED11 SP4 and SLED12 SP1 to operate with these NVME devices. Other NVME storage devices have similar requirements.

5 Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes.

6 For more info about Linux driver support for HP printers, go to http://www.hpip.net.

7 SLED 11/SP3 requires an update kernel to operate this on-board network interface properly. Please check with SuSE support for the appropriate update.

8 The NVIDIA® K40 is a GPU-compute device without graphics. The base OS will more or less ignore it. To make use of this device, the proprietary driver must be installed. The minimum driver version for support of K40 is 319.72.

9 HP recommends the following minimum NVIDIA® driver versions for M4000 and M5000 (352.41); M2000 (361.45.11); P400, P600, P1000, P2000, and P4000 (375.39); and P6000 (367.57).

10 As of this edition of the table, only a few enterprise distributions have support for the Intel® 8260 WLAN/BT combo device. Look for updates from the distributors.

11 AMD Radeon™ Pro graphics cards are supported by the newer amdgppu-pro vendor driver. OS streams are supported at specific release version levels, starting with these: SLED 12 SP2; RHEL 6.8; RHEL 7.3; Ubuntu 14.04.5; Ubuntu 16.04.1. There is no amdgppu-pro driver for SLED 11.

12 The driver for the Aquantia Nbase-T AQN-108 aftermarket NIC is not in-box for most of the listed Linux streams. Driver source can be found at the Aquantia site www.aquantia.com/driver-download/.

13 There are currently issues installing enterprise Linux distros on M.2 and Z Turbo options when the operating system is booted by legacy BIOS method. HP recommends installing the system in UEFI boot setup when using these storage devices.

14 Correct operation with the "Broadwell" family of processors may require a later release of OS stream than the "Haswell" family. The following OS releases are known to be capable: SLED11 SP4, SLED12 SP1, RHEL 6.8, RHEL 7.2.

15 Get the latest drivers: "HP Installer Kit for Linux - HP Driver CD (or DVD) for Linux-distribution-name" ISO images from http://www.hp.com/support/z440. Under Download options, select Get drivers, software & firmware. HP Workstations can be ordered with a variety of localization options that may vary by platform. The default in-box graphics drivers (e.g., nouveau and radeon) may not always handle newer graphics cards correctly. In some cases, even OS installation must be done using a "basic mode" or by specifying a frame-buffer driver (e.g., "xdriver=fbdev").

16 Newer Linux kernels may provide device functionality through the Thunderbolt™ module. Such kernels are likely to be available in leading-edge distributions, but inclusion of the support with any Enterprise Linux distribution is at the distributor's discretion. For example, RHEL 7.2 is more capable than RHEL 7.1.

17 The TPM and Smartcard readers can be used with the addition of extra software packages which support operation of these devices.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z6 G5 A Workstation

Certified on RHEL 8.9, RHEL 9.3, Ubuntu 22.04

Enterprise Linux distributions earlier than the certified versions are not supportable by HP on Z6 G5 A.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.9 or later (x86_64)	RHEL 9.3 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•
HP Localization Kit	1	1	1
<b>All Supported Processors</b>			
AMD® Ryzen Threadripper Pro 7x5WX processors (12-96C)	•	•	•
<b>Graphics Card (Video Card)</b>			
No Graphics Card	•	•	•
AMD® Radeon™ RX 6400 (4 GB Frame buffer)	•	•	•
AMD® Radeon™ Pro W7500 (8 GB Frame buffer)	•	•	•
AMD® Radeon™ Pro W7600 (8 GB Frame buffer)	•	•	•
AMD® Radeon™ Pro W7900 (48 GB Frame buffer)	•	•	•
NVIDIA® T400 (4 GB Frame buffer)	2	2	2
NVIDIA® T1000 (8 GB Frame buffer)	2	2	2
NVIDIA® RTX® A2000 (12 GB Frame buffer)	2	2	2
NVIDIA® RTX® A4000 (16 GB Frame buffer)	2	2	2
NVIDIA® RTX® 4000 Ada (16 GB Frame buffer)	2,3	2,3	2,3
NVIDIA® RTX® A4500 (20 GB Frame buffer)	2	2	2
NVIDIA® RTX® 4500 Ada (24 GB Frame buffer)	2,3	2,3	2,3
NVIDIA® RTX® 5000 Ada (32 GB Frame buffer)	2,3	2,3	2,3
NVIDIA® RTX® 6000 Ada (48 GB Frame buffer)	2	2	2
<b>System RAM</b>			
Minimum (GB)	16 GB	16 GB	16 GB
Maximum (GB)	1 TB <sup>4</sup>	1 TB <sup>4</sup>	1 TB <sup>4</sup>
<b>Hard Disks</b>			
All HP-configurable Solid State Drives	•	•	•
All HP-configurable SATA Disk Drives	•	•	•
HP Z Turbo Drive Quad Pro PCIe-4x4 NVMe Carrier	•	•	•
On-board software RAID for SATA/NVMe	5,6	5,6	5,6
<b>Network Cards</b>			
Intel® AX210 Wi-Fi 6E non-vPro + Bluetooth® 5.2 wireless card with External Antenna WLAN	•	•	•
Intel® X550-T2 10GBASE-T Dual Port NIC	•	•	•
Intel® I226-T1 Single Port 2.5GbE PCIe NIC	•	•	•
Allied Telesis AT-2914SX/LC-901 1GB LC Fibre NIC	•	•	•
Allied Telesis AT-2911T/2-901 Dual Port 1GbE NIC	•	•	•
NVIDIA Mellanox ConnectX-6 DX Dual Port 10/25GbE SFP28 NIC	•	•	•
Intel® Ethernet I350-T4 4-Port 1 Gb NIC	•	•	•
HP Dual Port 10GbE NIC G2	•	•	•
<b>Integrated Components</b>			
Wired LAN - Realtek RTL8111EPP 1 Gigabit Ethernet with DASH manageability	7	7	7
Onboard Audio (Realtek ALC3205)	•	•	•
USB 3.2 G1 Type A ports (5Gbps)	•	•	•
USB 3.2 G2x2 Type-C™ ports (20Gbps)	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z6 G5 A Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.9 or later (x86_64)	RHEL 9.3 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>Add Ons</b>			
HP Flex USB-C 3.1 Gen2	•	•	•
HP Flex Dual USB-A 3.1 Gen1	•	•	•
HP Flex 10GbE Single Port	•	•	•
HP Flex 2.5GbE LAN Single Port	•	•	•
HP Flex 1GbE Fibre Single Port LC			
HP Flex 1GbE Single Port NIC	•	•	•
HP Flex MediaTek RZ616 Wi-Fi 6 +Bluetooth 5.3 WLAN with Internal Antenna	•	•	•
HP Serial Port v3 Flex IO	•	•	•
HP Type-C SuperSpeed USB 20Gbps Front v3 Premium Module	•	•	•
HP Anywhere Remote System Controller	•	•	•
HP Anywhere Integrated Remote System Controller	•	•	•
<b>Input/Output Devices</b>			
HP USB mouse options	•	•	•
HP USB keyboard options	•	•	•
Optical drives	•	•	•
HP Media Card Reader	•	•	•
HP Printers	8	8	8
TPM Module	9	9	9
HP Internal Serial Port and PS/2 Port	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> HP recommends use of NVIDIA\* driver 535.xx (or newer) on NVIDIA\* graphics options.

<sup>3</sup> An Nvidia R535 driver is minimally required for this Ada generation card.

<sup>4</sup> 1 TB total memory capacity can be supported when 128GB DIMM's become available

<sup>5</sup> The on-board RAID solution for Z6 G5 A is currently only supported by a closed source driver available from AMD.

Contact AMD if interested in using the RAID feature via their driver or use the mdraid feature available in all Linux distros.

<sup>6</sup> The AMD RAID configurations created/initialized in BIOS will not be recognized by any Linux distribution installer.

Such RAID configurations will be ignored during installation.

<sup>7</sup> DASH manageability support varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>8</sup> For more info about Linux open-source driver support for HP printers, please visit <http://www.hpip.net>.

<sup>9</sup> Open-source support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software supported by your preferred Linux distributor.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z6 G5 Workstation

Certified on Ubuntu 20.04, 22.04, RHEL 8.7, RHEL 9.1.  
 Certifications in progress for SLE 15/SP5  
 Older enterprise distributions not listed below are not supportable by HP on Z6 G5.  
 HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	Ubuntu 20.04.5 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)	RHEL 8.7 or later (x86_64)	RHEL 9.1 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
Intel® Xeon® W-3400 processors (W5/W7/W9)	•	•	•	•
<b>Graphics Card (Video Card)</b>				
No Graphics Card	•	•	•	•
Intel® Arc Pro A40 (6GB)				
AMD® Radeon™ RX 6400 (4GB)	•	•	•	•
AMD RadeonPro W6600 (8 GB)	•	•	•	•
AMD Radeon™ RX 6700 XT (12 GB)	•	•	•	•
AMD RadeonPro W6800 (32 GB)	•	•	•	•
NVIDIA® T400 (4 GB)	2	2	2	2
NVIDIA® T1000 (4 GB / 8 GB)	2	2	2	2
NVIDIA® Long-Life T1000E (8 GB)	2	2	2	2
NVIDIA® RTX® Long-Life A2000E (12 GB)	2	2	2	2
NVIDIA® RTX® A2000 (12 GB Frame buffer)	2	2	2	2
NVIDIA® RTX® Long-Life A4000E (16 GB)	2	2	2	2
NVIDIA® RTX® A4000 (16 GB)	2	2	2	2
NVIDIA® RTX® A4500 (20 GB)	2	2	2	2
NVIDIA® RTX® Long-Life A5000E (24 GB)	2	2	2	2
NVIDIA® RTX® A5000 (24 GB)	2	2	2	2
NVIDIA® RTX® A6000 (48 GB)	2	2	2	2
NVIDIA® RTX® 6000 Ada (48 GB)	3	3	3	3
<b>System RAM</b>				
Minimum (GB)	16 GB	16 GB	16 GB	16 GB
Maximum (GB)	1 TB	1 TB	1 TB	1 TB
<b>Hard Disks</b>				
All HP-configurable Solid State Drives	•	•	•	•
All HP-configurable SATA Disk Drives	•	•	•	•
HP Z Turbo Drive Dual Pro PCIe-4x4 NVMe Carrier	•	•	•	•
SATA RAID [0, 1, 5, 10]	•	•	•	•
Intel® Virtual RAID on CPU (Intel® VROC) for NVMe			7	•
HP CRU QX428 Removable with 200mm Cable Frame/Carrier	•	•	•	•
HP DX175 Removable HDD Frame/Carrier	•	•	•	•
<b>Network Cards</b>				
Intel® i350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•
Intel® X550 10GbE Dual Port Adapter	•	•	•	•
Intel® Ethernet Network Adapter i225-T1 2.5 Gb NIC	•	•	•	•
Intel® AX210 Wireless 6E LAN (802.11 a/b/g/n/ac/ax) and Bluetooth 5.2 Module	•	•	•	•
Allied Telesis AT-2914SX/LC-901 1GB LC Fiber NIC	•	•	•	•
Allied Telesis AT-2911T/2-901 Dual Port 1GbE NIC	•	•	•	•



## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z6 G5 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	Ubuntu 20.04.5 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)	RHEL 8.7 or later (x86_64)	RHEL 9.1 or later (x86_64)
NVIDIA Mellanox ConnectX-6 DX 10/25GbE SFP28 NIC	•	•	•	•
<b>Integrated Components</b>				
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•
Intel® AMT functionality on Wired LAN	4	4	4	4
Onboard Audio (Realtek ALC3205-CG)	•	•	•	•
USB 3.2 G1 Type A ports (5Gbps)	•	•	•	•
USB 3.2 G2 Type A and Type-C™ ports (10Gbps)	•	•	•	•
USB 3.2 G2x2 Type-C™ ports (20Gbps)	•	•	•	•
<b>Add Ons</b>				
HP 10GBase-T Flex Port	•	•	•	•
HP 2.5GbE LAN Flex Port	•	•	•	•
HP Flex 1GbE Single Port NIC	•	•	•	•
HP 1GbE Fiber LC Single Flex Port	•	•	•	•
Serial Port v2	•	•	•	•
Dual USB-A 3.2 Gen1	•	•	•	•
USB-C 3.2 Gen2	•	•	•	•
WiFi6 + BT5.2 WLAN w/ INTAnt	•	•	•	•
<b>Removable CD/DVD Media</b>				
HP 9.5mm Slim DVD-ROM Drive	•	•	•	•
HP 9.5mm Slim DVD RW Supermulti Drive	•	•	•	•
HP 9.5mm Slim BDXL Blu-Ray Writer Drive	•	•	•	•
<b>Input/Output/Misc Devices</b>				
HP USB mouse options	•	•	•	•
HP USB keyboard options	•	•	•	•
HP Media Card Reader	•	•	•	•
HP Printers	5	5	5	5
TPM Module	6	6	6	6

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> HP recommends use of NVIDIA® driver <sup>525</sup>.xx (or newer) on NVIDIA® graphics options.

<sup>3</sup> An Nvidia R<sup>525</sup> driver is required for Ada generation cards

<sup>4</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS.

Please check with the distribution vendor you have interest in.

<sup>5</sup> For more info about Linux open-source driver support for HP printers, please visit <http://www.hpip.net>.

<sup>6</sup> Open-source support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software supported by your preferred Linux distributor.

<sup>7</sup> HP Recommends RHEL 8.8 or later for Intel® Virtual RAID on CPU (Intel® VROC) for NVMe.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z6 G4 Workstation

Certified on RHEL 7.4, RHEL 8.0, RHEL 9.0, SLED 12/SP3, SLED 15, Ubuntu 18.04, Ubuntu 20.04.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12 SP3 (x86_64)	SLED 15 or later (x86_64)	RHEL 6.9 or later (x86_64)	RHEL 7.4 or later (x86_64)	RHEL 8.0 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 16.04 LTS, 16.04.3 or later (x86_64)	Ubuntu 18.04 LTS or later (x86_64)	Ubuntu 20.04 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>HP Workstation Base System</b>										
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	12	16	•	•	•	•	•	•
HP Localization Kit	1	1	1	1	1	1	1	1	1	1
<b>All Supported Processors</b>										
Xeon® Skylake 81xx/61xx/51xx/41xx/31xx Processors (single and dual CPU configs)	•	•	•	•	•	•	•	•	•	•
Xeon® Cascade lake 82xx/62xx/42xx/32xx Processors (single and dual CPU configs)	•	•	•	•	•	•	•	•	•	•
Hyperthreading	•	•	•	•	•	•	•	•	•	•
<b>Graphics Card (Video Card)</b>										
No Graphics Card	•	•	•	•	•	•	•	•	•	•
AMD FirePro W2100 (2 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro WX 3100 (4 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD FirePro WX 3200 (4 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro WX 4100 (4 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro W5500 (8 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro W5700 (8 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro W6600 (8 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro W6800 (32 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro WX 7100 (8 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro WX 9100 (16 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
NVIDIA® Quadro® P400 (2 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P600 (2 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P620 (2 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P1000 (4 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® T400 (2 GB Frame buffer)	8	8	8	8	8	8	8	15	15	15
NVIDIA® Quadro® T600 (4 GB Frame buffer)	8	8	8	8	8	8	8	15	15	15
NVIDIA® Quadro® T1000 (4 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P2000 (5 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P2200 (5 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15



## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z6 G4 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12 SP3 or later (x86_64)	SLED 15 (x86_64)	RHEL 6.9 (x86_64)	RHEL 7.4 (x86_64)	RHEL 8.0 (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 16.04 LTS, 16.04.3 or later (x86_64)	Ubuntu 18.04 LTS or later (x86_64)	Ubuntu 20.04 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
NVIDIA® Quadro® P4000 (8 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P5000 (16 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P6000 (24 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® GP100 (16 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® RTX 4000	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® RTX 5000	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® RTX 6000	8	8	8	8	8	8	15	15	15	15
NVIDIA® RTX™ A2000 (6 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® RTX™ A4000 (16 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® RTX™ A5000 (24 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® RTX™ A6000 (48 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® RTX 8000	8	8	8	8	8	8	15	15	15	15
<b>System RAM</b>										
Minimum (GB)	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB
Maximum (GB)	384 GB	384 GB	384 GB	384 GB	384 GB	384 GB	384 GB	384 GB	384 GB	384 GB
<b>Persistent Memory Module</b>										
Intel® DC Persistent Memory Module	13	13		14	14	14				
<b>Hard Disks</b>										
All Supported Solid State Drives	•	•	•	•	•	•	•	•	•	•
All Supported SATA Disk Drives <= 2 TB	•	•	•	•	•	•	•	•	•	•
All Supported SATA Disk Drives > 2 TB	2	2	2	2	2	2	2	2	2	2
All Supported M.2 NVMe PCIe Solid State Drives	10	10	10	10	10	10	10	10	•	•
All Supported SAS Disk Drives										
HP Z Turbo Drive PCIe-attached storage	10	10	10	10	10	10	10	10	•	•
<b>Network Cards</b>										
Allied Telesis AT-2911T/2 Dual Port 1 GbE NIC	•	•	•	•	•	•	•	•	•	•
Allied Telesis AT2914SX/LC-901 1 Gb LC Fiber NIC	•	•	•	•	•	•	•	•	•	•
Aquantia Nbase-T PCIe NIC	11	11	11	11	11	11	11	11	•	•
Intel® I210-T1 GbE PCIe NIC	•	•	•	•	•	•	•	•	•	•
Intel® I350-T2 PCIe Dual Port 1 Gb NIC	•	•	•	•	•	•	•	•	•	•
Intel® I350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•	•	•	•	•	•	•
Intel® X550 10 GbE Dual Port Adapter	•	•	•	•	•	•	•	•	•	•
Intel® X710-DA2 10GbE Dual Port Adapter (and HP SFP+ SR Transceiver)	•	•	•	•	•	•	•	•	•	•
Intel® 10GBase-T Dual Port Adapter (RJ-45 Copper)	•	•	•	•	•	•	•	•	•	•
Intel® 8265 802.11 a/b/g/n/ac & Bluetooth® PCIe	•	•	•	•	•	•	•	•	•	•



## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z6 G4 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12 SP3 or later (x86_64)	SLED 15 or later (x86_64)	RHEL 6.9 or later (x86_64)	RHEL 7.4 or later (x86_64)	RHEL 8.0 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 16.04 LTS, 16.04.3 or later (x86_64)	Ubuntu 18.04 LTS or later (x86_64)	Ubuntu 20.04 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>Integrated Components</b>										
LAN port 0 - Intel® I219LM Gigabit Ethernet	•	•	•	•	•	•	•	•	•	•
LAN port 1 - Intel® x722 Gigabit Ethernet	•	•	•	•	•	•	•	•	•	•
Intel® AMT functionality on LAN port 0	9	9	9	9	9	9	9	9	9	9
Onboard Audio (Realtek ALC221 codec)	•	•	•	•	•	•	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1/5/10)	•	•	•	•	•	•	•	•	•	•
USB 3.1 G1 Type A ports	•	•	•	•	•	•	•	•	•	•
USB 3.1 G2 Type C™ ports (on Front I/O Premium module)	•	•	•	•	•	•	•	•	•	•
USB 2.0/3/1 G1 internal ports	•	•	•	•	•	•	•	•	•	•
TPM 2.0 Module	6	6	6	6	6	6	6	6	6	6
<b>Add Ons</b>										
MicroSemi SmartHBA2100-4i4e SAS controller	3	3	3	3	3	3	3	3	3	3
<b>Removable CD/DVD Media</b>										
HP DVD-ROM Drive	•	•	•	•	•	•	•	•	•	•
HP DVD RW Supermulti Drive	4	4	4	4	4	4	4	4	4	4
HP BD-RE (Blu-Ray writer)	4	4	4	4	4	4	4	4	4	4
<b>Input/Output Devices (no spaceball support)</b>										
HP USB mouse options	•	•	•	•	•	•	•	•	•	•
HP USB keyboard options	•	•	•	•	•	•	•	•	•	•
HP PS/2 keyboard/mouse	•	•	•	•	•	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•	•	•	•	•	•
HP Printers	5	5	5	5	5	5	5	5	5	5
All Supported Monitors	•	•	•	•	•	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. The OS's listed can create GPT formatted storage drives/volumes, but this requires installation of the OS in UEFI mode. Once formatted and installed, the OS can access the entirety of storage drives/volumes.

<sup>3</sup> The MicroSemi 2100-4i4e is not currently being supported on enterprise Linux distros by HP Inc.

<sup>4</sup> Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes.

<sup>5</sup> For more info about Linux driver support for HP printers, please visit <http://www.hpip.net>.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module does require additional software.

<sup>7</sup> AMD Radeon™ Pro graphics cards are now supported in Linux by the recently released amdgpu open source driver. OS streams are supported at specific release version levels, starting with these: SLED 12/SP2, RHEL 6.9, RHEL 7.4, RHEL 8.0 and Ubuntu 16.04.2. The amdgpu pro driver is available on the AMD website. "Enterprise" drivers are posted quarterly, e.g. "18.Q2" was the latest at the time this published. For RHEL 6.9 and certain AMD cards, it may be necessary to remove "rhgb" from the boot line in order for the X server to start with the amdgpu-pro driver.

<sup>8</sup> HP recommends using NVIDIA® driver 460.84 or newer for NVIDIA® graphics on this platform

<sup>9</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor of your choice.

<sup>10</sup> There are currently issues installing enterprise Linux distros on M.2 and Z Turbo options when the system is running in legacy BIOS mode. HP recommends using the system in its default UEFI BIOS mode when using these storage devices.

<sup>11</sup> The driver for the Aquantia Nbase-T AQN-108 aftermarket NIC is not in-box for most of the listed Linux streams. Driver source can be found at the Aquantia site <https://www.aquantia.com/driver-download>.

<sup>12</sup> UEFI mode only. RHEL 6.9 currently does not support running in legacy BIOS on this platform.

<sup>13</sup> Intel® DCPMM is supported on SLED 12 SP 4 or later and SLED 15.

<sup>14</sup> Intel® DCPMM is supported on RHEL 7.6 or later and RHEL 8.0 or later. The filesystem dax (fsdax) feature is in tech preview for RHEL 7.6 and later and RHEL 8.0.

<sup>15</sup> Canonical provides up-to-date versions of the NVIDIA® proprietary driver in their software repositories. HP recommends customer use one of the choices provided by Canonical as well as use their software update tool.

<sup>16</sup> RHEL 7.6 (or newer versions) is the earliest version of RHEL 7 that can be used with Intel® Cascade Lake processors in the HP Z8 G4. Skylake processors can be used with RHEL 7.4 and newer releases of RHEL 7.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z640 Workstation

Certified with RHEL 6.5 and RHEL 7.0. Certified with Ubuntu 14.04 LTS. (BIOS 1.25 required). Certified with SLED 11 SP3 and SLED 12. (NVIDIA® graphics). Other certifications pending.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED11SP3 or later (x86_64)	SLED12 or later (x86_64)	RHEL 6.5 or later (x86_64)	RHEL 7.0 or later (x86_64)	Ubuntu 14.04 LTS or later (x86_64)	Ubuntu 16.04 LTS or later (x86_64)
<b>HP Workstation Base System</b>						
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•	•
HP Localization Kit	1	1	1	1	1	1
<b>All Supported Processors</b>						
All supported v3 (Haswell) & v4 (Broadwell) E5-16xx & E5-26xx Xeon® processors (see footnote 12)	•	•	•	•	•	•
<b>Graphics Card (Video Card) (see footnote 13)</b>						
No Graphics Card	•	•	•	•	•	•
AMD FirePro W2100	•	•	•	•	•	•
AMD FirePro W4300	•	•	•	•	•	•
AMD FirePro W5100	•	•	•	•	•	•
AMD FirePro W7100	•	•	•	•	•	•
AMD Radeon™ Pro WX 4100	11	11	11	11	11	11
AMD Radeon™ Pro WX 7100	11	11	11	11	11	11
NVIDIA® NVS 310 512 MB and 1 GB	•	•	•	•	•	•
NVIDIA® NVS 315 1 GB	•	•	•	•	•	•
NVIDIA® NVS 510 2 GB	•	•	•	•	•	•
NVIDIA® Quadro® NVS K420 1 GB and 2 GB	•	•	•	•	•	•
NVIDIA® Quadro® K620 2 GB	•	•	•	•	•	•
NVIDIA® Quadro® K2200 4 GB	•	•	•	•	•	•
NVIDIA® Quadro® K4200 4 GB	•	•	•	•	•	•
NVIDIA® Quadro® K5200 8 GB	•	•	•	•	•	•
NVIDIA® Quadro® K6000 12 GB	•	•	•	•	•	•
NVIDIA® Quadro® M2000 4 GB	9	9	9	9	9	9
NVIDIA® Quadro® M4000 8 GB	9	9	9	9	9	9
NVIDIA® Quadro® M5000 8 GB	9	9	9	9	9	9
NVIDIA® Quadro® M6000 12 GB and 24 GB	9	9	9	9	9	9
NVIDIA® Quadro® P600	9	9	9	9	9	9
NVIDIA® Quadro® P2000	9	9	9	9	9	9
NVIDIA® Quadro® P4000	9	9	9	9	9	9
NVIDIA® Quadro® P5000	9	9	9	9	9	9
NVIDIA® Quadro® P6000	9	9	9	9	9	9
<b>High Performance GPU Computing</b>						
NVIDIA® Tesla® K40	8	8	8	8	8	8
<b>System RAM</b>						
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum (GB) (with two processors installed)	256 GB	256 GB	256 GB	256 GB	256 GB	256 GB
<b>Hard Disks</b>						
All Supported SAS Disk Drives	2	2	2	2	2	2
All Supported Solid State Drives	•	•	•	•	•	•
All Supported SATA Disk Drives less than 3 TB	•	•	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

## HP Z640 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED11SP3 or later (x86_64)	SLED12 or later (x86_64)	RHEL 6.5 or later (x86_64)	RHEL 7.0 or later (x86_64)	Ubuntu 14.04 LTS or later (x86_64)	Ubuntu 16.04 LTS or later (x86_64)
Supported SATA Disk Drives 3 TB and larger	3	3	3	3	3	3
All Supported USB Drive Keys	•	•	•	•	•	•
HP Z Turbo Drive and Z Turbo QuadPro PCIe-attached storage	4	4	4	4	4	4
Intel® 750 Series PCIe Storage	4	4	4	4	4	4
<b>Network Cards (no modem support)</b>						
Intel® Ethernet I210-T1 PCIe NIC	•	•	•	•	•	•
Intel® I350-T4 Quad-Port 1GbE NIC	•	•	•	•	•	•
Intel® 361T 1GbE dual port PCI NIC	•	•	•	•	•	•
Intel® Ethernet X520 10GbE dual port PCIe NIC	•	•	•	•	•	•
Intel® X540 10GBase-T Dual Port Adapter (RJ45 - Copper)	2	2	2	2	2	2
Intel® 7260 802.11a/b/g/n PCIe WLAN NIC	•	•	•	•	•	•
Intel® 8260 802.11 a/b/g/n/ac & Bluetooth® PCIe	10	10	10	10	10	10
<b>Onboard Components</b>						
Integrated Intel® SATA sSATA Controller	2	2	2	2	2	2
Wired LAN - Intel® I218LM Gigabit Ethernet	7	7	•	•	•	•
Onboard Audio (Realtek ALC221 codec)	•	•	•	•	•	•
Onboard SATA RAID	2	2	2	2	2	2
<b>Add Ons</b>						
LSI 9217-4i4e 8-port SAS 6Gb/s RAID Controller	2	2	2	2	2	2
LSI 9270-8i 8-port SAS 6Gb/s ROC RAID Controller & iBBU9 battery backup unit	2	2	2	2	2	2
Thunderbolt™ PCIe card (see footnote 14)						
1394b Firewire PCIe card	•	•	•	•	•	•
<b>Removable CD/DVD Media</b>						
HP DVD-ROM Drive	•	•	•	•	•	•
HP DVD RW Supermulti Drive	5	5	5	5	5	5
HP BD-RE (Blu-Ray writer)	5	5	5	5	5	5
<b>Input/Output Devices (no spaceball support)</b>						
HP Scroll Mouse, USB	•	•	•	•	•	•
HP Standard Keyboard, USB	•	•	•	•	•	•
HP Keyboard and Mouse, PS/2	•	•	•	•	•	•
TPM Module/Smart Card (see footnote 15)						
HP Media Card Reader	•	•	•	•	•	•
HP Printers	6	6	6	6	6	6
All Supported Monitors	•	•	•	•	•	•



## Linux Hardware Matrix

# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z640 Workstation (continued)

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Hardware RAID is supported using the LSI 9217-4i4e (RAID 0/1/1E/10 SATA & SAS) and the LSI 9270-8i (RAID 0/1/5/6/10 SATA & SAS). SATA RAID is supported on sSATA ports(0/1/5/10 SATA only).

<sup>3</sup> In general, single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. OSes listed can format GPT for the boot drive or volume but may require installation of UEFI boot support, and can access GPT-formatted data volumes.

<sup>4</sup> The Z Turbo Drive PCIe-attached storage device has its own controller and is supported by the standard ahci kernel module in supported OSes. Z Turbo Drive G2 is an NVME device and is supported by the kernel NVME module. Z Turbo QuadPro is an enclosure for several NVME devices. Updates are needed for SLED11 SP4 and SLED12 SP1 to operate with these NVME devices. Other NVME storage devices have similar requirements.

<sup>5</sup> Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes.

<sup>6</sup> For more info about Linux driver support for HP printers, go to <http://www.hpip.net>.

<sup>7</sup> SLED 11/SP3 requires an update kernel to operate this on-board network interface properly. Please check with SuSE support for the appropriate update.

<sup>8</sup> The NVIDIA® K40 is a GPU-compute device without graphics. The base OS will more or less ignore it. To make use of this device, the proprietary driver must be installed. The minimum driver version for support of K40 is 319.72.

<sup>9</sup> HP recommends the following minimum NVIDIA® driver versions for M6000 12 GB (346.47); M6000 24 GB (361.28); M4000 and M5000 (352.41); M2000 (361.45.11); P600, P2000, and P4000 (375.39); and P5000 and P6000 (367.57).

<sup>10</sup> As of this edition of the table, only a few enterprise distributions have support for the Intel® 8260 WLAN/BT combo device. Look for updates from the distributors. The following OS releases are known to be capable: SLED11 SP4, SLED12 SP1, RHEL 7.2.

<sup>11</sup> AMD Radeon™ Pro graphics cards are supported by the newer amdgpu-pro vendor driver. OS streams are supported at specific release version levels, starting with these: SLED 12 SP2; RHEL 6.8; RHEL 7.3; Ubuntu 14.04.5; Ubuntu 16.04.1. There is no amdgpu-pro driver for SLED 11.

<sup>12</sup> Correct operation with the "Broadwell" family of processors may require a later release of OS stream than the "Haswell" family. The following OS releases are known to be capable: SLED11 SP4, SLED12 SP1, RHEL 6.8, RHEL 7.2.

<sup>13</sup> Get the latest drivers: "HP Installer Kit for Linux - HP Driver CD (or DVD) for Linux-distribution-name" ISO images from <http://www.hp.com/support/z440>. Under Download options, select Get drivers, software & firmware. HP Workstations can be ordered with a variety of localization options that may vary by platform. The default in-box graphics drivers (e.g., nouveau and radeon) may not always handle newer graphics cards correctly. In some cases, even OS installation must be done using a "basic mode" or by specifying a frame-buffer driver (e.g., "xdriver=fbdev").

<sup>14</sup> Newer Linux kernels may provide device functionality through the Thunderbolt™ module. Such kernels are likely to be available in leading-edge distributions, but inclusion of the support with any Enterprise Linux distribution is at the distributor's discretion.

<sup>15</sup> The TPM and Smartcard readers can be used with the addition of extra software packages which support operation of these devices.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z8 Fury G5 Workstation

Certified on Ubuntu 20.04, 22.04, RHEL 9.1, RHEL 8.7

Certifications in progress for SLE 15/SP5

Older enterprise distributions not listed below are not supportable by HP on Z8 Fury G5.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	Ubuntu 20.04.5 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)	RHEL 8.7 or later (x86_64)	RHEL 9.1 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
Intel® Xeon® W-3400 processors (W5/W7/W9)	•	•	•	•
<b>Graphics Card (Video Card)</b>				
No Graphics Card	•	•	•	•
Intel® Arc Pro A40 (6GB)				
AMD® Radeon™ RX 6400 (4GB)	•	•	•	•
AMD RadeonPro W6600 (8 GB)	•	•	•	•
AMD Radeon™ RX 6700 XT (12 GB)	•	•	•	•
AMD RadeonPro W6800 (32 GB)	•	•	•	•
NVIDIA® T400 (4 GB)	2	2	2	2
NVIDIA® T1000 (4 GB / 8 GB)	2	2	2	2
NVIDIA® Long-Life T1000E (8 GB)	2	2	2	2
NVIDIA® RTX® Long-Life A2000E (12 GB)	2	2	2	2
NVIDIA® RTX® A2000 (12 GB Frame buffer)	2	2	2	2
NVIDIA® RTX® Long-Life A4000E (16 GB)	2	2	2	2
NVIDIA® RTX® A4000 (16 GB)	2	2	2	2
NVIDIA® RTX® A4500 (20 GB)	2	2	2	2
NVIDIA® RTX® Long-Life A5000E (24 GB)	2	2	2	2
NVIDIA® RTX® A5000 (24 GB)	2	2	2	2
NVIDIA® RTX® A6000 (48 GB)	2	2	2	2
NVIDIA® RTX® 6000 Ada (48 GB)	3	3	3	3
<b>System RAM</b>				
Minimum (GB)	16 GB	16 GB	16 GB	16 GB
Maximum (GB)	2 TB	2 TB	2 TB	2 TB
<b>Hard Disks</b>				
All HP-configurable Solid State Drives	•	•	•	•
All HP-configurable SATA Disk Drives	•	•	•	•
HP Z Turbo Drive Dual Pro PCIe-4x4 NVMe Carrier	•	•	•	•
SATA RAID [0, 1, 5, 10]	•	•	•	•
Intel® Virtual RAID on CPU (Intel® VROC) for NVMe			7	•
HP CRU QX428 Removable with 200mm Cable Frame/Carrier	•	•	•	•
HP DX175 Removable HDD Frame/Carrier	•	•	•	•
<b>Network Cards</b>				
Intel® i350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•
Intel® X550 10GbE Dual Port Adapter	•	•	•	•
Intel® Ethernet Network Adapter i225-T1 2.5 Gb NIC	•	•	•	•
Intel® AX210 Wireless 6E LAN (802.11 a/b/g/n/ac/ax) and Bluetooth 5.2 Module	•	•	•	•
Allied Telesis AT-2914SX/LC-901 1GB LC Fiber NIC	•	•	•	•
Allied Telesis AT-2911T/2-901 Dual Port 1GbE NIC	•	•	•	•
NVIDIA Mellanox ConnectX-6 DX 10/25GbE SFP28 NIC	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z8 Fury G5 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	Ubuntu 20.04.5 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)	RHEL 8.7 or later (x86_64)	RHEL 9.1 or later (x86_64)
<b>Integrated Components</b>				
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•
Wired LAN - Intel® i210AT Gigabit Ethernet	•	•	•	•
Intel® AMT functionality on Wired LAN	4	4	4	4
Onboard Audio (Realtek ALC3205-CG)	•	•	•	•
USB 3.2 G1 Type A ports (5Gbps)	•	•	•	•
USB 3.2 G2 Type A and Type-C™ ports (10Gbps)	•	•	•	•
USB 3.2 G2x2 Type-C™ ports (20Gbps)	•	•	•	•
<b>Removable CD/DVD Media</b>				
HP 9.5mm Slim DVD-ROM Drive	•	•	•	•
HP 9.5mm Slim DVD RW Supermulti Drive	•	•	•	•
HP 9.5mm Slim BDXL Blu-Ray Writer Drive	•	•	•	•
<b>Input/Output/Misc Devices</b>				
HP USB mouse options	•	•	•	•
HP USB keyboard options	•	•	•	•
HP Media Card Reader	•	•	•	•
HP Printers	5	5	5	5
TPM Module	6	6	6	6

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> HP recommends use of NVIDIA® driver <sup>525</sup>.xx (or newer) on NVIDIA® graphics options.

<sup>3</sup> An Nvidia R<sup>525</sup> driver is required for Ada generation cards

<sup>4</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS.

Please check with the distribution vendor you have interest in.

<sup>5</sup> For more info about Linux open-source driver support for HP printers, please visit <http://www.hplip.net>.

<sup>6</sup> Open-source support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software supported by your preferred Linux distributor.

<sup>7</sup> HP Recommends RHEL 8.8 or later for Intel® Virtual RAID on CPU (Intel® VROC) for NVMe.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z8 G5 Workstation

Certified on Ubuntu 20.04, 22.04, RHEL 8.7, RHEL 9.1  
 Certifications in progress for SLE 15/SP5  
 Older enterprise distributions not listed below are not supportable by HP on Z8 G5.  
 HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	Ubuntu 20.04.5 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)	RHEL 8.7 or later (x86_64)	RHEL 9.1 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
Intel® Xeon® Sapphire Rapids Scalable processors (Silver - 4xxx/5xxx, Gold - 5xxx/6xxx)	•	•	•	•
<b>Graphics Card (Video Card)</b>				
No Graphics Card	•	•	•	•
Intel® Arc Pro A40 (6GB)				
AMD® Radeon™ RX 6400 (4GB)	•	•	•	•
AMD RadeonPro W6600 (8 GB)	•	•	•	•
AMD Radeon™ RX 6700 XT (12 GB)	•	•	•	•
AMD RadeonPro W6800 (32 GB)	•	•	•	•
NVIDIA® T400 (4 GB)	2	2	2	2
NVIDIA® T1000 (4 GB / 8 GB)	2	2	2	2
NVIDIA® Long-Life T1000E (8 GB)	2	2	2	2
NVIDIA® RTX® Long-Life A2000E (12 GB)	2	2	2	2
NVIDIA® RTX® A2000 (12 GB Frame buffer)	2	2	2	2
NVIDIA® RTX® Long-Life A4000E (16 GB)	2	2	2	2
NVIDIA® RTX® A4000 (16 GB)	2	2	2	2
NVIDIA® RTX® A4500 (20 GB)	2	2	2	2
NVIDIA® RTX® Long-Life A5000E (24 GB)	2	2	2	2
NVIDIA® RTX® A5000 (24 GB)	2	2	2	2
NVIDIA® RTX® A6000 (48 GB)	2	2	2	2
NVIDIA® RTX® 6000 Ada (48 GB)	3	3	3	3
<b>System RAM</b>				
Minimum (GB)	16 GB	16 GB	16 GB	16 GB
Maximum (GB)	1 TB	1 TB	1 TB	1 TB
<b>Hard Disks</b>				
All HP-configurable Solid State Drives	•	•	•	•
All HP-configurable SATA Disk Drives	•	•	•	•
HP Z Turbo Drive Dual Pro PCIe-4x4 NVMe Carrier	•	•	•	•
SATA RAID [0, 1, 5, 10]	•	•	•	•
Intel® Virtual RAID on CPU (Intel® VROC) for NVMe			7,8	8
HP CRU QX428 Removable with 200mm Cable Frame/Carrier	•	•	•	•
HP DX175 Removable HDD Frame/Carrier	•	•	•	•
<b>Network Cards</b>				
Intel® i350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•
Intel® X550 10GbE Dual Port Adapter	•	•	•	•
Intel® Ethernet Network Adapter i225-T1 2.5 Gb NIC	•	•	•	•
Intel® AX210 Wireless 6E LAN (802.11 a/b/g/n/ac/ax) and Bluetooth 5.2 Module	•	•	•	•
Allied Telesis AT-2914SX/LC-901 1GB LC Fiber NIC	•	•	•	•
Allied Telesis AT-2911T/2-901 Dual Port 1GbE NIC	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

## HP Z8 G5 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	Ubuntu 20.04.5 or later (x86_64)	Ubuntu 22.04.2 or later (x86_64)	RHEL 8.7 or later (x86_64)	RHEL 9.1 or later (x86_64)
NVIDIA Mellanox ConnectX-6 DX 10/25GbE SFP28 NIC	.	.	.	.
<b>Integrated Components</b>				
Wired LAN - Intel® i219LM Gigabit Ethernet	.	.	.	.
Wired LAN - Intel® i210AT Gigabit Ethernet	.	.	.	.
Intel® AMT functionality on Wired LAN	4	4	4	4
Onboard Audio (Realtek ALC3205-CG)	.	.	.	.
USB 3.2 G1 Type A ports (5Gbps)	.	.	.	.
USB 3.2 G2 Type A and Type-C™ ports (10Gbps)	.	.	.	.
USB 3.2 G2x2 Type-C™ ports (20Gbps)	.	.	.	.
<b>Removable CD/DVD Media</b>				
HP 9.5mm Slim DVD-ROM Drive	.	.	.	.
HP 9.5mm Slim DVD RW Supermulti Drive	.	.	.	.
HP 9.5mm Slim BDXL Blu-Ray Writer Drive	.	.	.	.
<b>Input/Output/Misc Devices</b>				
HP USB mouse options	.	.	.	.
HP USB keyboard options	.	.	.	.
HP Media Card Reader	.	.	.	.
HP Printers	5	5	5	5
TPM Module	6	6	6	6

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> HP recommends use of NVIDIA® driver <sup>525.xx</sup> (or newer) on NVIDIA® graphics options.

<sup>3</sup> An Nvidia R<sup>525</sup> driver is required for Ada generation cards

<sup>4</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor you have interest in.

<sup>5</sup> For more info about Linux open-source driver support for HP printers, please visit <http://www.hpip.net>.

<sup>6</sup> Open-source support for the TPM or other security devices varies by OS distribution. Any use of the TPM module requires additional software supported by your preferred Linux distributor.

<sup>7</sup> HP Recommends RHEL 8.8 or later for Intel® Virtual RAID on CPU (Intel® VROC) for NVMe.

<sup>8</sup> BIOS version 1.01.28 or later required to use Intel® Virtual RAID on CPU (Intel® VROC) for NVMe on the HP Z8 G5.



Linux Hardware Matrix

# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z8 G4 Workstation

Certified on RHEL 7.4, RHEL 8.0, RHEL 9.0, SLED 12/SP3, SLED 15, Ubuntu 18.04 LTS, Ubuntu 20.04 LTS.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



## Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)

	SLED 12 SP3 or later (x86_64)	SLED 15 or later (x86_64)	RHEL 6.9 or later (x86_64)	RHEL 7.4 or later (x86_64)	RHEL 8.0 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 16.04 LTS or later (x86_64)	Ubuntu 18.04 LTS or later (x86_64)	Ubuntu 20.04 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>HP Workstation Base System</b>										
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	12	16	•	•	•	•	•	•
HP Localization Kit	1	1	1	1	1	1	1	1	1	1
<b>All Supported Processors</b>										
Xeon® Skylake 81xx/61xx/51xx/41xx/31xx Processors (single and dual CPU configs)	•	•	•	•	•	•	•	•	•	•
Xeon® Cascade lake 82xx/62xx/42xx/32xx Processors (single and dual CPU configs)	•	•	•	•	•	•	•	•	•	•
Hyperthreading	•	•	•	•	•	•	•	•	•	•
<b>Graphics Card (Video Card)</b>										
No Graphics Card	•	•	•	•	•	•	•	•	•	•
AMD FirePro W2100 (2 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro WX 3100 (4 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD FirePro WX 3200 (4 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro WX 4100 (4 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro W5500 (8 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro W5700 (8 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro W6600 (8 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro W6800 (32 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro WX 7100 (8 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
AMD Radeon™ Pro WX 9100 (16 GB Frame buffer)	7	7	7	7	7	7	7	7	•	•
NVIDIA® Quadro® P400 (2 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P600 (2 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P620 (2 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P1000 (4 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® T400 (2 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® T600 (4 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® T1000 (4 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P2000 (5 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P2200 (5 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P4000 (8 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15



# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z8 G4 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12 SP3 or later (x86_64)	SLED 15 or later (x86_64)	RHEL 6.9 or later (x86_64)	RHEL 7.4 or later (x86_64)	RHEL 8.0 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 16.04 LTS or later (x86_64)	Ubuntu 18.04 LTS or later (x86_64)	Ubuntu 20.04 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
NVIDIA® Quadro® P5000 (16 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® P6000 (24 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® GP100 (16 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® GV100 (32 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® RTX 4000	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® RTX 5000	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® RTX 6000	8	8	8	8	8	8	15	15	15	15
NVIDIA® RTX™ A2000 (6 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® RTX™ A4000 (16 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® RTX™ A5000 (24 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® RTX™ A6000 (48 GB Frame buffer)	8	8	8	8	8	8	15	15	15	15
NVIDIA® Quadro® RTX 8000	8	8	8	8	8	8	15	15	15	15
<b>System RAM</b>										
Minimum (GB)	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB	8 GB
Maximum (GB)	3 TB	3 TB	3 TB	3 TB	3 TB	3 TB	3 TB	3 TB	3 TB	3 TB
<b>Persistent Memory Module</b>										
Intel® DC Persistent Memory Module	13	13		14	14	14				
<b>Hard Disks</b>										
All Supported Solid State Drives	•	•	•	•	•	•	•	•	•	•
All Supported SATA Disk Drives <= 2 TB	•	•	•	•	•	•	•	•	•	•
All Supported SATA Disk Drives > 2 TB	2	2	2	2	2	2	2	2	2	2
All Supported M.2 NVMe PCIe Solid State Drives	10	10	10	10	10	10	10	10	10	10
<b>All Supported SAS Disk Drives</b>										
HP Z Turbo Drive PCIe-attached storage	10	10	10	10	10	10	10	10	10	10
<b>Network Cards</b>										
Allied Telesis AT-2911T/2 Dual Port 1 GbE NIC	•	•	•	•	•	•	•	•	•	•
Allied Telesis AT2914SX/LC-9011 Gb LC Fiber NIC	•	•	•	•	•	•	•	•	•	•
Aquantia Nbase-T PCIe NIC	11	11	11	11	11	11	11	11	11	11
Intel® I210-T1 GbE PCIe NIC	•	•	•	•	•	•	•	•	•	•
Intel® I350-T2 PCIe Dual Port 1 Gb NIC	•	•	•	•	•	•	•	•	•	•
Intel® I350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•	•	•	•	•	•	•
Intel® I350-T4 PCIe Quad Port 1 Gb NIC	•	•	•	•	•	•	•	•	•	•
Intel® X550 10GbE Dual Port Adapter	•	•	•	•	•	•	•	•	•	•
Intel® X710-DA2 10GbE Dual Port Adapter (and HP SFP+ SR Transceiver)	•	•	•	•	•	•	•	•	•	•
Intel® 10GBase-T Dual Port Adapter (RJ-45 Copper)	•	•	•	•	•	•	•	•	•	•
<b>Integrated Components</b>										
LAN port 0 - Intel® i219LM Gigabit Ethernet	•	•	•	•	•	•	•	•	•	•
LAN port 1 - Intel® x722 Gigabit Ethernet	•	•	•	•	•	•	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z8 G4 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED 12 SP3 or later (x86_64)	SLED 15 or later (x86_64)	RHEL 6.9 or later (x86_64)	RHEL 7.4 or later (x86_64)	RHEL 8.0 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 16.04 LTS 16.04.3 or later (x86_64)	Ubuntu 18.04 LTS or later (x86_64)	Ubuntu 20.04 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
Intel® AMT functionality on LAN port 0	9	9	9	9	9	9	9	9	9	9
Onboard Audio (Realtek ALC221 codec)	•	•	•	•	•	•	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1/5/10)	•	•	•	•	•	•	•	•	•	•
USB 3.1 G1 Type A ports	•	•	•	•	•	•	•	•	•	•
USB 3.1 G2 Type-C™ ports (on Front I/O Premium module)	•	•	•	•	•	•	•	•	•	•
USB 2.0/3.1 G1 internal ports	•	•	•	•	•	•	•	•	•	•
TPM 2.0 Module	6	6	6	6	6	6	6	6	6	6
<b>Add Ons</b>										
MicroSemi SmartHBA2100-4i4e SAS controller	3	3	3	3	3	3	3	3	3	3
<b>Removable CD/DVD Media</b>										
HP DVD-ROM Drive	•	•	•	•	•	•	•	•	•	•
HP DVD RW Supermulti Drive	4	4	4	4	4	4	4	4	4	4
HP BD-RE (Blu-Ray writer)	4	4	4	4	4	4	4	4	4	4
<b>Input/Output Devices (no spaceball support)</b>										
HP USB mouse options	•	•	•	•	•	•	•	•	•	•
HP USB keyboard options	•	•	•	•	•	•	•	•	•	•
HP PS/2 keyboard/mouse	•	•	•	•	•	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•	•	•	•	•	•
HP Printers	5	5	5	5	5	5	5	5	5	5
All Supported Monitors	•	•	•	•	•	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. The OS's listed can create GPT formatted storage drives/volumes, but this requires installation of the OS in UEFI mode. Once formatted and installed, the OS can access the entirety of storage drives/volumes.

<sup>3</sup> The MicroSemi 2100-4i4e is not currently being supported on enterprise Linux distros by HP Inc.

<sup>4</sup> Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes.

<sup>5</sup> For more info about Linux driver support for HP printers, please visit <http://www.hpip.net>.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module does require additional software.

<sup>7</sup> AMD Radeon™ Pro graphics cards are now supported in Linux by the recently released amdgpu open source driver. OS streams are supported at specific release version levels, starting with these: SLED 12/SP2, RHEL 6.9, RHEL 7.4, RHEL 8.0 and Ubuntu 16.04.2. For RHEL 6.9 with certain AMD cards, it may be necessary to remove "rhgb" from the boot line in order for the X server to start correctly with the amdgpu-pro driver.

<sup>8</sup> HP recommends using NVIDIA® driver 460.84 or newer for NVIDIA® graphics on this platform.

<sup>9</sup> Intel® support for AMT varies by distribution and requires additional software packages be added to the base OS. Please check with the distribution vendor of your choice.

<sup>10</sup> There are currently issues installing enterprise Linux distros on M.2 and Z Turbo options when the system is running in legacy BIOS mode. HP recommends using the system in its default UEFI BIOS mode when using these storage devices.

<sup>11</sup> The driver for the Aquantia Nbase-T AQN-108 aftermarket NIC is not in-box for most of the listed Linux streams. Driver source can be found at the Aquantia site <https://www.aquantia.com/driver-download/>.

<sup>12</sup> UEFI mode only. RHEL 6.9 currently does not support running in legacy BIOS on this platform.

<sup>13</sup> Intel® DCPMM is supported on SLED 12 SP 4 or later and SLED 15.

<sup>14</sup> Intel® DCPMM is supported on RHEL 7.6 or later and RHEL 8.0 or later. The filesystem dax (fsdax) feature is in tech preview for RHEL 7.6 and later and RHEL 8.0.

<sup>15</sup> Canonical provides up-to-date versions of the NVIDIA® proprietary driver in their software repositories. HP recommends customer use one of the choices provided by Canonical as well as use their software update tool.

<sup>16</sup> RHEL 7.6 (or newer versions) is the earliest version of RHEL 7 that can be used with Intel® Cascade Lake processors in the HP Z8 G4. Skylake processors can be used with RHEL 7.4 and newer releases of RHEL 7.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z840 Workstation

Certified with RHEL 6.5 and RHEL 7.0. Certified with Ubuntu 14.04 LTS (BIOS 1.25 required). Certified with SLED 11 SP3 and SLED 12 (NVIDIA® graphics). Other certifications pending.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	SLED11 SP3 or later (x86_64)	SLED12 or later (x86_64)	RHEL 6.5 or later (x86_64)	RHEL 7.0 or later (x86_64)	Ubuntu 14.04 LTS or later (x86_64)	Ubuntu 16.04 LTS or later (x86_64)
Supported SATA Disk Drives 3 TB and larger	3	3	3	3	3	3
All Supported USB Drive Keys	•	•	•	•	•	•
HP Z Turbo Drive and Z Turbo QuadPro PCIe-attached storage	4	4	4	4	4	4
Intel® 750 Series PCIe Storage	4	4	4	4	4	4
<b>Network Cards (no modem support)</b>						
Intel® Ethernet I210-T1 PCIe NIC	•	•	•	•	•	•
Intel® I350-T4 Quad-Port 1GbE NIC	•	•	•	•	•	•
Intel® 361T 1GbE dual port PCI NIC	•	•	•	•	•	•
Intel® Ethernet X520 10GbE dual port PCIe NIC	•	•	•	•	•	•
Intel® X540 10GBase-T Dual Port Adapter (RJ45 -Copper)	•	•	•	•	•	•
Intel® 7260 802.11a/b/g/n PCIe WLAN NIC	•	•	•	•	•	•
Intel® 8260 802.11 a/b/g/n/ac & Bluetooth® PCIe	10	10	10	10	10	10
<b>Onboard Components</b>						
Integrated Intel® SATA sSATA Controller	2	2	2	2	2	2
Integrated LSI 2308 SAS Controller with RAID	2	2	2	2	2	2
Wired LAN - Intel® I210 Gigabit Ethernet	•	•	•	•	•	•
Wired LAN - Intel® I218LM Gigabit Ethernet	7	7	•	•	•	•
Onboard Audio (Realtek ALC221 codec)	•	•	•	•	•	•
Onboard SATA RAID	2	2	2	2	2	2
<b>Add Ons</b>						
LSI 9270-8i 8-port SAS 6 Gb/s ROC RAID Controller & iBBU9 battery backup unit	2	2	2	2	2	2
Thunderbolt™ PCIe card (see footnote 15)	•	•	•	•	•	•
1394b Firewire PCIe card	•	•	•	•	•	•
<b>Removable CD/DVD Media</b>						
HP DVD-ROM Drive	•	•	•	•	•	•
HP DVD RW Supermulti Drive	5	5	5	5	5	5
HP BD-RE (Blu-Ray writer)	5	5	5	5	5	5
<b>Input/Output Devices (no spaceball support)</b>						
HP Scroll Mouse, USB	•	•	•	•	•	•
HP Standard Keyboard, USB	•	•	•	•	•	•
HP Keyboard and Mouse, PS/2	•	•	•	•	•	•
TPM Module/ Smart Card (see footnote 16)	•	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•	•
HP Printers	6	6	6	6	6	6
All Supported Monitors	•	•	•	•	•	•



## Linux Hardware Matrix

# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP Z840 Workstation (continued)

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Hardware RAID is supported using the LSI 2308 SAS (RAID 0/1/1e SATA & SAS) and the LSI 9270-8i (RAID 0/1/5/6/10 SATA & SAS). SATA RAID is supported on sSATA ports (0/1/5/10 SATA only).

<sup>3</sup> In general, single drives or volumes larger than 2.2 TB can only be fully accessed using GPT formatting. OSes listed can format GPT for the boot drive or volume but may require installation of UEFI boot support, and can access GPT-formatted data volumes.

<sup>4</sup> The Z Turbo Drive PCIe-attached storage device has its own controller and is supported by the standard ahci kernel module in supported OSes. Z Turbo Drive G2 is an NVME device and is supported by the kernel NVME module. Z Turbo QuadPro is an enclosure for several NVME devices. Updates are needed for SLED11 SP4 and SLED12 SP1 to operate with these NVME devices. Other NVME storage devices have similar requirements.

<sup>5</sup> Linux growisofs supports DVD+RW and Blu-ray media on the listed OSes.

<sup>6</sup> For more info about Linux driver support for HP printers, go to <http://www.hpip.net>.

<sup>7</sup> SLED 11/SP3 requires an update kernel to operate this on-board network interface properly. Please check with SuSE support for the appropriate update.

<sup>8</sup> The NVIDIA® K40 is a GPU-compute device without graphics. The base OS will more or less ignore it. To make use of this device, the proprietary driver must be installed. The minimum driver version for support of K40 is 319.72.

<sup>9</sup> HP recommends the following minimum NVIDIA® driver versions for M6000 12 GB (346.47); M6000 24 GB (361.28); M4000 and M5000 (352.41); M2000 (361.45.11); P2000, P4000, and GP100 (375.39); and P5000 and P6000 (367.57).

<sup>10</sup> As of this edition of the table, only a few enterprise distributions have support for the Intel® 8260 WLAN/BT combo device. Look for updates from the distributors.

<sup>11</sup> AMD Radeon™ Pro graphics cards are supported by the newer amdgpu-pro vendor driver. OS streams are supported at specific release version levels, starting with these: SLED 12 SP2; RHEL 6.8; RHEL 7.3; Ubuntu 14.04.5; Ubuntu 16.04.1. There is no amdgpu-pro driver for SLED 11.

<sup>12</sup> Correct operation with the "Broadwell" family of processors may require a later release of OS stream than the "Haswell" family. The following OS releases are known to be capable: SLED11 SP4, SLED12 SP1, RHEL 6.8, RHEL 7.2.

<sup>13</sup> Get the latest drivers: "HP Installer Kit for Linux - HP Driver CD (or DVD) for Linux-distribution-name" ISO images from <http://www.hp.com/support/z840>. Under Download options, select Get drivers, software & firmware. HP Workstations can be ordered with a variety of localization options that may vary by platform. The default in-box graphics drivers (e.g., nouveau and radeon) may not always handle newer graphics cards correctly. In some cases, even OS installation must be done using a "basic mode" or by specifying a frame-buffer driver (e.g., "xdriver=fbdev").

<sup>14</sup> Issues have been observed with several distributions during system boot with 1TB of RAM. Often these seem to be associated with the in-box mode-setting graphics drivers (nouveau and radeon). Mode-setting can be prevented by adding nomodeset to the kernel boot parameters.

<sup>15</sup> For more info about Linux driver support for HP printers, go to <http://www.hpip.net>.

<sup>16</sup> As of this edition of the table, only a few enterprise distributions have support for the Intel® 8260 WLAN/BT combo device. Look for updates from the distributors.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 16 G10 Workstation

No certifications pending or planned  
 HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.8 (x86_64)	RHEL 9.2 (x86_64)	Ubuntu 22.04.3 (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Laptop, System Board, Power Supply, etc.	•	•	•
HP Localization Kit	1	1	1
<b>All Supported Processors</b>			
All Supported Intel® 12th generation Core™ i5 and i7 processors (Alder Lake)	•	•	•
<b>System RAM</b>			
Minimum (GB)	8 GB	8 GB	8 GB
Maximum (GB)	64GB DDR5-5600	64GB DDR5-5600	64GB DDR5-5600
<b>Graphics Card (Video Card)</b>			
Intel® Iris® Xe Graphics 1	•	•	•
NVIDIA RTX A500 (4 GB of GDDR6 memory)	•	•	•
<b>Display - internal panel</b>			
16" diagonal FHD 16") diagonal WUXGA Bent, anti-glare UWVA, 250 nits, 45% NTSC	•	•	•
16" diagonal WUXGA Bent, Low Blue Light, anti-glare UWVA eDP+PSR, 400 nits, 100% sRGB, Low Power, Ambient Light Sensor	•	•	•
16" diagonal WUXGA Bent, Low Blue Light, anti-glare UWVA eDP1.3+PSR, 1000 nits, 100% sRGB with HP Sure View Reflect integrated privacy screen, Ambient Light Sensor+Ambient Color Sensor	•	•	•
16.0" diagonal, 2.8K (2880 x 1800), OLED IPS BrightView, 400 nits, DCI-P3 100% eDP 1.4+PSR, Ambient Light Sensor+Ambient Color Sensor	•	•	•
<b>Display - touch enabled</b>			
16" diagonal FHD 16") diagonal WUXGA Bent, anti-glare UWVA, 250 nits, 45% NTSC, touch on panel	3	3	3
<b>Hard Disks</b>			
All Supported M.2 Solid State Drives	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•
<b>Onboard Components</b>			
Onboard Audio	•	•	•
Audio combo jack	•	•	•
Intel AX211 Wi-Fi 6E+BT 5.3 M.2 160MHz CNVi World-Wide WLAN vPro® & non-vPro®	•	•	•
Intel® 5000 5G Solution WWAN	•	•	•
Intel® XMM 7560 R+ LTE-Advanced Pro WWAN(Cat 16)3	•	•	•
5MP camera (with 88 degree Field of View) with HP Auto Frame	4	4	4
Thunderbolt™ 4 with USB4 Type-C® 40Gbps signaling rate (USB Power Delivery, DisplayPort™ 1.4)	•	•	•
SuperSpeed USB Type-A 5Gbps signaling rate [USB 3.2 Gen 1 Type A/charging, non-charging]	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 16 G10 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.8 (x86_64)	RHEL 9.2 (x86_64)	Ubuntu 22.04.3 (x86_64)
<b>Input/Output Devices</b>			
Clickpad/touchpad	•	•	•
Dedicated function keys	•	•	•
NFC controller module			
TPM Module	5	5	5
Finger print reader	•	•	•
Smart Card	•	•	•
External HDMI port 2.0	7	7	•
<b>Dock options</b>			
HP Thunderbolt™ 280W G4 Dock	6	6	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> On this distribution, the graphics does not operate well in hybrid mode for installation. The recommendation is to use UMA mode for installation. After installation, enable hybrid mode and install the NVIDIA driver.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>4</sup> IR camera is not supported in Linux at this time

<sup>5</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>6</sup> The HDMI and DP ports do not function properly with this release

<sup>7</sup> The HDMI port is functional with UMA configurations, but not with NVIDIA hybrid graphics



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 14 G10 Workstation

No certifications pending or planned  
 HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.8 (x86_64)	RHEL 9.2 (x86_64)	Ubuntu 22.04.3 (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Laptop, System Board, Power Supply, etc.	•	•	•
HP Localization Kit	1	1	1
<b>All Supported Processors</b>			
All Supported Intel 13th generation Core i5, i7 processors (Raptor Lake)	•	•	•
<b>System RAM</b>			
Minimum (GB)	8 GB	8 GB	8 GB
Maximum (GB)	64GB DDR5-5600	64GB DDR5-5600	64GB DDR5-5600
<b>Graphics Card (Video Card)</b>			
Intel® Iris® Xe Graphics 1	•	•	•
NVIDIA RTX A500 (4 GB of GDDR6 memory)	•	•	•
<b>Display - internal panel</b>			
14" diagonal WUXGA Bent, anti-glare UWVA, 250 nits, 45% NTSC	•	•	•
14" diagonal WUXGA Bent, Low Blue Light, anti-glare UWVA eDP+PSR, 400 nits, 100% sRGB, Low Power, Ambient Light Sensor	•	•	•
14" diagonal WUXGA Bent, Low Blue Light, anti-glare UWVA eDP1.3+PSR, 1000 nits, 100% sRGB with HP Sure View Reflect integrated privacy screen, Ambient Light Sensor+Ambient Color Sensor	•	•	•
14" diagonal, WQXGA Bent, anti-glare UWVA eDP 1.4+PSR, 500 nits, 100% HP DreamColor	•	•	•
<b>Display - touch enabled</b>			
14" diagonal WUXGA Bent, anti-glare UWVA, 250 nits, 45% NTSC, touch on panel	3	3	3
<b>Hard Disks</b>			
All Supported M.2 Solid State Drives	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•
<b>Onboard Components</b>			
Onboard Audio	•	•	•
Audio combo jack	•	•	•
Intel AX211 Wi-Fi6E+BT5.3 M.2 160MHz CNVi World-Wide WLAN vPro® & non-vPro®	•	•	•
Intel® 5000 5G Solution WWAN	•	•	•
Intel® XMM 7560 R+ LTE-Advanced Pro WWAN(Cat 16)3	•	•	•
5MP camera (with 88 degree Field of View) with HP Auto Frame	4	4	4
Thunderbolt™ 4 with USB4 Type-C® 40Gbps signaling rate (USB Power Delivery, DisplayPort™ 1.4)	•	•	•
SuperSpeed USB Type-A 5Gbps signaling rate [USB 3.2 Gen 1 Type A/charging, non-charging]	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 14 G10 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.8 (x86_64)	RHEL 9.2 (x86_64)	Ubuntu 22.04.3 (x86_64)
--	----------------------	----------------------	-------------------------------

Input/Output Devices			
Clickpad/touchpad	•	•	•
Dedicated function keys	•	•	•
NFC controller module			
TPM Module	5	5	5
Finger print reader	•	•	•
Smart Card	•	•	•
External HDMI port 2.0	7	7	•
Dock options			
HP Thunderbolt™ 280W G4 Dock	6	6	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> On this distribution, the graphics does not operate well in hybrid mode for installation. The recommendation is to use UMA mode for installation. After installation, enable hybrid mode and install the NVIDIA driver.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>4</sup> IR camera is not supported in Linux at this time.

<sup>5</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>6</sup> The HDMI and DP ports do not function properly with this release.

<sup>7</sup> The HDMI port is functional with UMA configurations, but not with NVIDIA hybrid graphics.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 14 G10 A Workstation

No certifications pending or planned  
 HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



**Product Items/Features**  
 (Blank box indicates the listed component is NOT functional w/ as-is OS)

**Ubuntu 22.04.3 (x86\_64)**

<b>HP Workstation Base System</b>	
Base system includes: Laptop, System Board, Power Supply, etc.	•
HP Localization Kit	1
<b>All Supported Processors</b>	
All Supported AMD Ryzen™ 76xx/78xx/79xx processors	•
<b>System RAM</b>	
Minimum (GB)	8 GB
Maximum (GB)	64GB DDR5-5600
<b>Graphics Card (Video Card)</b>	
AMD Radeon™ Graphics	•
<b>Display - internal panel</b>	
15.6" diagonal, FHD (1920 x 1080), narrow bezel, anti-glare, 250 nits, 45% NTSC	•
15.6" diagonal, FHD (1920 x 1080), narrow bezel, anti-glare, Low Blue Light, 400nits, Low-Power, 100% sRGB	•
15.6" diagonal, QHD (2560 x 1440), narrow bezel, anti-glare, Low Blue Light, 300 nits, 100% sRGB	•
<b>Display - touch enabled</b>	
15.6" diagonal, FHD (1920 x 1080), narrow bezel, anti-glare, Touch on Panel (TOP), 250nits, 45% NTSC	2
<b>Hard Disks</b>	
All Supported M.2 Solid State Drives	•
All Supported M.2 SATA SED Solid State Drives	•
<b>Onboard Components</b>	
Onboard Audio	•
Audio combo jack	•
RTK GBE Ethernet Controller RTL8111FPH-CG LAN (DASH and non-DASH)	•
Mediatek RZ616 Wi-Fi 6E Bluetooth® 5.3 AIM-T WLAN wireless card	•
HD camera	3
5MP camera (with 88 degree Field of View) with HP Auto Frame	3
Thunderbolt™ 4 with USB4 Type-C® 40Gbps signaling rate (USB Power Delivery, DisplayPort™ 1.4)	•
SuperSpeed USB Type-A 5Gbps signaling rate [USB 3.2 Gen 1 Type A/charging, non-charging]	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 14 G10 A Workstation (continued)

**Product Items/Features**  
(Blank box indicates the listed component is NOT functional w/ as-is OS)

**Ubuntu**  
**22.04.3**  
**(x86\_64)**

<b>Input/Output Devices</b>	
Clickpad/touchpad	•
Dedicated function keys	•
NFC controller module	
TPM Module	4
Finger print reader	•
Smart Card	•
External HDMI port 2.0b	•
<b>Dock options</b>	
HP Thunderbolt™ 280W G4 Dock	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>3</sup> IR camera is not supported in Linux at this time

<sup>4</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>5</sup> The HDMI/DP ports of the dock are not functional



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 16 inch G9 Workstation

No certifications pending or planned

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Laptop, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
All Supported Intel® 12th generation Core™ i5 and i7 processors (Alder Lake)	•	•	•	•
<b>System RAM</b>				
Minimum (GB)	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB DDR5/4800 memory	64 GB DDR5/4800 memory	64 GB DDR5/4800 memory	64 GB DDR5/4800 memory
<b>Graphics Card (Video Card)</b>				
Intel® Iris® Xe® Graphics	•	•	•	•
NVIDIA® Quadro® T550 (4 GB of GDDR6 memory)	2	2	2, 11	2
<b>Display - non-touch</b>				
16" diagonal WUXGA Bent, anti-glare UWVA, 250 nits, 45% NTSC (1920 x 1200)	•	•	•	•
16" diagonal WUXGA Bent, Low Blue Light, anti-glare UWVA eDP+PSR, 400 nits, 100% sRGB (1920 x 1200)	•	•	•	•
16" diagonal WUXGA Bent, Low Blue Light, anti-glare UWVA eDP1.3+PSR, 1000 nits, 100% sRGB with HP Sure View Reflect integrated privacy screen (1920 x 1200)	•	•	•	•
<b>Display - touch enabled</b>				
16" diagonal WUXGA Bent, anti-glare UWVA, 250 nits, 45% NTSC for 5MP+IR camera for WWAN Touch on Panel (1920 x 1200)	3	3	3	3
<b>Hard Disks</b>				
All Supported M.2 Solid State Drives	•	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•	•
<b>Onboard Components</b>				
Onboard Audio	4	4	4	4
Audio jack	•	•	•	•
Intel® AX211 Wi-Fi6E+BT5.2 M.2 160MHz CNVi World-Wide WLAN vPro	•	•	•	•
Intel® XMM 5000 5G Solution WWAN	•	•	•	•
Intel® XMM 7560 R+ LTE-Advanced Pro WWAN (Cat 16)	•	•	•	•
5 MP webcam	•	•	•	•
5 MP+IR webcam	5	5	5	5
SuperSpeed USB Type-A 5Gbps signaling rate [USB 3.1 Gen 1 Type A]	•	•	•	•
Thunderbolt™ 4 with USB4 Type-C™ 40Gbps signaling rate (USB Power Delivery, DisplayPort™ 1.4)	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 16 inch G9 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>Input/Output Devices</b>				
Clickpad/touchpad	7	7	•	•
Dedicated function keys	8	9	•	•
Fingerprint sensor				
NFC controller module				
TPM Module	10	10	10	10
Smart Card reader	•	•	•	•
External HDMI port 2.0b		•	•	•
<b>Dock options</b>				
HP Thunderbolt Dock G2	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> In hybrid mode, you may have to use 'nomodeset' initially to get the OS installed or change the BIOS to UMA mode. Following this, attempt to allow the on-line update to install the latest NVIDIA® closed source driver for hybrid mode.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>4</sup> Audio playback/output is not functional at this time. The built-in microphone does function.

<sup>5</sup> IR camera is not supported in Linux at this time.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>7</sup> The right virtual button does not function. May require application of gnome-tweaks package.

<sup>8</sup> The brightness control and airplane mode keys do not function.

<sup>9</sup> The brightness control function keys do not work.

<sup>10</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>11</sup> With the initial 20.04.4 bits, UMA-only mode needs to be enabled in BIOS or run with 'nomodeset'. After updating to the latest update content, hybrid mode may be re-enabled.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 14 inch G9 Workstation

No certifications pending or planned

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Laptop, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
All Supported Intel® 12th generation Core™ i5 and i7 processors (Alder Lake)	•	•	•	•
<b>System RAM</b>				
Minimum (GB)	8 GB	8 GB	8 GB	8 GB
Maximum (GB)	64 GB DDR5/4800 memory	64 GB DDR5/4800 memory	64 GB DDR5/4800 memory	64 GB DDR5/4800 memory
<b>Graphics Card (Video Card)</b>				
Intel® Iris® Xe® Graphics	•	•	•	•
NVIDIA® Quadro® T550 (4 GB of GDDR6 memory)	2	2	2, 11	2
<b>Display - non-touch</b>				
14" diagonal WUXGA Bent, anti-glare UWVA, 250 nits, 45% NTSC (1920 x 1200)	•	•	•	•
14" diagonal WUXGA Bent, Low Blue Light, anti-glare UWVA eDP+PSR, 400 nits, 100% sRGB (1920 x 1200)	•	•	•	•
14" diagonal WUXGA Bent, Low Blue Light, anti-glare UWVA eDP1.3+PSR, 1000 nits, 100% sRGB with HP Sure View Reflect integrated privacy screen (1920 x 1200)	•	•	•	•
<b>Display - touch enabled</b>				
14" diagonal WUXGA Bent, anti-glare UWVA, 250 nits, 45% NTSC for Touch on Panel (1920 x 1200)	3	3	3	3
<b>Hard Disks</b>				
All Supported M.2 Solid State Drives	•	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•	•
<b>Onboard Components</b>				
Onboard Audio	4	4	4	4
Audio jack	•	•	•	•
Intel® AX211 Wi-Fi6E+BT5.2 M.2 160MHz CNVi World-Wide WLAN vPro	•	•	•	•
Intel® XMM 5000 5G Solution WWAN				
Intel® XMM 7560 R+ LTE-Advanced Pro WWAN (Cat 16)				
5 MP webcam	•	•	•	•
5 MP+IR webcam	5	5	5	5
SuperSpeed USB Type-A 5Gbps signaling rate [USB 3.1 Gen 1 Type A]	•	•	•	•
Thunderbolt™ 4 with USB4 Type-C™ 40Gbps signaling rate (USB Power Delivery, DisplayPort™ 1.4)	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 14 inch G9 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>Input/Output Devices</b>				
Clickpad/touchpad	7	7	•	•
Dedicated function keys	8	9	•	•
Fingerprint sensor				
NFC controller module				
TPM Module	10	10	10	10
Smart Card reader	•	•	•	•
External HDMI port 2.0b		•	•	•
<b>Dock options</b>				
Zbook dock with Thunderbolt 3™	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> In hybrid mode, you may have to use 'nomodeset' initially to get the OS installed or change the BIOS to UMA mode. Following this, attempt to allow the on-line update to install the latest Nvidia closed source driver for hybrid mode.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>4</sup> Audio playback/output is not functional at this time. The built-in microphone does function.

<sup>5</sup> IR camera is not supported in Linux at this time.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>7</sup> The right virtual button does not function. May require application of gnome-tweaks package.

<sup>8</sup> The brightness control and airplane mode keys do not function.

<sup>9</sup> The brightness control function keys do not work.

<sup>10</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>11</sup> With the initial <sup>20,04,5</sup> bits, UMA-only mode needs to be enabled in BIOS or run with 'nomodeset'. After updating to the latest update content, hybrid mode may be re-enabled.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 14/15 inch G8 Workstation

No certifications pending or planned

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Laptop, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
All Supported Intel® 11th generation Core™ i5 and i7 processors (Tiger Lake)	•	•	•	•
<b>System RAM</b>				
Minimum (GB)	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB DDR4/3200 non ECC SDRAM	64 GB DDR4/3200 non ECC SDRAM	64 GB DDR4/3200 non ECC SDRAM	64 GB DDR4/3200 non ECC SDRAM
<b>Graphics Card (Video Card)</b>				
Intel® Iris® Xe® Graphics	•	•	•	•
NVIDIA® Quadro® T500 (4 GB of GDDR6 memory)	•	•	•	•
<b>Display - 14" internal panel</b>				
14" diagonal, FHD (1920 x 1080), IPS, anti-glare, 400 nits, low power 100% sRGB	•	•	•	•
14" diagonal, FHD (1920 x 1080), IPS, anti-glare, 250 nits, 45% NTSC	•	•	•	•
14" diagonal, FHD (1920 x 1080), IPS, anti-glare, 500 nits, 100% DCI-P3, HP DreamColor panel	•	•	•	•
14" diagonal, FHD (1920 x 1080), IPS, anti-glare, 1000 nits, 72% NTSC, HP Sure View Reflect integrated privacy screen	•	•	•	•
<b>Display - 15" internal panel</b>				
15.6" diagonal, FHD (1920 x 1080), IPS, anti-glare, 400 nits, low power, 100% sRGB )	•	•	•	•
15.6" diagonal, 4K UHD (3840 x 2160), IPS, anti-glare, 400 nits, low power, 100% sRGB	•	•	•	•
15.6" diagonal, FHD (1920 x 1080), IPS, anti-glare, 250 nits, 45% NTSC	•	•	•	•
15.6" diagonal, FHD (1920 x 1080), IPS, anti-glare, 1000 nits, 72% NTSC, HP Sure View Reflect integrated privacy screen 1	•	•	•	•
<b>Display - touch enabled</b>				
14" diagonal, FHD (1920 x 1080), touch, IPS, anti-glare, 250 nits, 45% NTSC	2	2	2	2
15.6" diagonal, FHD (1920 x 1080), touch, IPS, anti-glare, 250 nits, 45% NTSC	2	2	2	2
<b>Hard Disks</b>				
All Supported M.2 Solid State Drives	•	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•	•
<b>Onboard Components</b>				
Onboard Audio	•	•	•	•
Audio jack	•	•	•	•
Intel® Wi-Fi 6 AX201(2x2) and Bluetooth® 5 combo (vPro & non-vPro)	•	•	•	•
Intel® XMM 7360 LTE Advanced CAT 9 WWAN				
Qualcomm Snapdragon X55 5G Modem				
720p HD webcam	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 14/15 inch G8 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
720p HD webcam with IR	3	3	3	3
Thunderbolt™ 4 with USB4™ Type-C™ 40Gbps signaling rate* (USB Power Delivery, DisplayPort™ 1.4, HP Sleep and Charge**) [USB Type-C™ with Thunderbolt™ 4]	•	•	•	•
SuperSpeed USB Type-A 5Gbps signaling rate [USB 3.1 Gen 1 Type A]	•	•	•	•
<b>Input/Output Devices</b>				
Clickpad/touchpad	•	•	•	•
Dedicated function keys	•	•	•	•
NFC controller module				
TPM Module	4	4	4	4
Smart Card	•	•	•	•
External HDMI port 2.0b	•	•	•	•
<b>Dock options</b>				
HP Thunderbolt Dock with Thunderbolt™ 3	6	6	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>3</sup> IR camera is not supported in Linux at this time.

<sup>4</sup> Support for the TPM or other security devices varies by OS distribution.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 14/15 G7 Workstation



### No certifications pending

Enterprise-class Linux releases older than those listed do not enable the Intel® Comet Lake architecture used in this system.  
HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements..

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Laptop, Power Supply, etc.	•	•	•
<b>All Supported Processors</b>			
All Supported Intel® 10th generation Core™ i5, i7 processors	•	•	•
<b>Graphics Card (Video Card)</b>			
Intel® UHD integrated graphics	•	•	•
NVIDIA® Quadro® P520 (4 GB of GDDR6 memory)	1	2	2
<b>System RAM</b>			
Minimum (GB)	4 GB	4 GB	4 GB
Maximum (GB)	64 GB non-ECC	64 GB non-ECC	64 GB non-ECC
<b>Display-internal panel</b>			
15.6" diagonal FHD IPS eDP + PSR anti-glare, 100% sRGB at 400 nits with ambient light sensor (1920 x 1080)	•	•	•
15.6" diagonal FHD IPS eDP anti-glare, 45% NTSC at 250 nits (1920 x 1080)	•	•	•
15.6" diagonal 4K UHD IPS eDP + PSR anti-glare, 100% sRGB, 400 nits with ambient light sensor (3840 x 2160)	•	•	•
15.6" diagonal FHD IPS eDP anti-glare touch screen, 45% NTSC at 250 nits (1920 x 1080)	3	3	3
14" diagonal FHD IPS eDP + PSR anti-glare, 100% sRGB at 400 nits with ambient light sensor (1920 x 1080)	•	•	•
14" diagonal FHD IPS eDP anti-glare, 45% NTSC at 250 nits (1920 x 1080)	•	•	•
HP Sure View Reflect Integrated Privacy Display 14" diagonal FHD IPS eDP + PSR anti-glare, 72% NTSC at 1000 nits (1920 x 1080)	•	•	•
14" diagonal 4K UHD HDR-400 IPS eDP 1.4 + PSR anti-glare, 95% sRGB, 550 nits with ambient light sensor (3840 x 2160)	•	•	•
14" diagonal FHD IPS eDP touch screen 45% NTSC at 250 nits (1920 x 1080)	3	3	3
<b>Hard Disks</b>			
All Supported M.2 Solid State Drives	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•
<b>Onboard Components</b>			
Onboard Audio	4	7	4
Intel® Wi-Fi 6 AX201(2x2) and Bluetooth® 5 combo (vPro® & non-vPro®)	•	8	•
WWAN Intel® XMM™ 7360 LTE Advanced CAT 9			
WWAN Intel® XMM™ 7560 LTE-Advanced Pro Cat 16			
720p HD webcam	•	•	•
720p HD webcam with IR	5	5	5
USB 3.1 gen 2 / Thunderbolt™ 3 ports	•	•	•
Function hot key functionality	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Firefly 14/15 G7 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>Input/Output Devices</b>			
Touchpad + Keys	•	•	•
TPM Module	6	6	6
Fingerprint sensor			
SD 4.0 Media Card Reader	•	•	•
External HDMI 1.4b port	•	•	•
<b>Dock options</b>			
ZBook dock with Thunderbolt™ 3	•	•	•

<sup>1</sup> HP recommends use of NVIDIA® driver 450.55 (or newer) on NVIDIA® graphics options.

<sup>2</sup> Canonical regularly releases an NVIDIA® driver that can be applied by the Ubuntu software update mechanism. HP recommends using this driver and update method on Ubuntu 18.04 and 20.04.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops.

<sup>4</sup> The left channel for audio output works, while the right channel does not at this time.

<sup>5</sup> IR camera not supported in Linux at this time.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module may require additional software from the distribution being used.

<sup>7</sup> In 18.04.5, the audio components do not function. There are updates available in 18.04 repos which will enable audio once installed.

<sup>8</sup> 18.04.5, the Wi-Fi/BT solution is not functional. There are updates available in 18.04 repos which will enable Wi-Fi and BT.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 14u/15u G6 Workstation

At this time, the Linux distributions listed are supported by HP but none are officially certified with the listed distribution. HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.6 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.2 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>HP Workstation Base System</b>					
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•
HP Localization Kit	1	1	1	1	1
<b>All Supported Processors</b>					
All support Intel® 7th/8th generation Core™ i5, i7 processors	•	•	•	•	•
<b>Graphics Card (Video Card)</b>					
Intel® UHD integrated 630 graphics on Core™ 8th generation processors	•	•	•	•	•
Intel® HD integrated 620 graphics on Core™ 7th generation processors	•	•	•	•	•
AMD Radeon™ Pro WX3200 (4 GB GDDR5 Frame buffer)	•	•	•	•	•
<b>System RAM</b>					
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum non-ECC SDRAM (GB)	32 GB	32 GB	32 GB	32 GB	32 GB
<b>Display-internal panel, non-touch</b>					
HP SureView Integrated Privacy Display [9] (15.6") diagonal FHD IPS eDP + PSR anti-glare, 100% sRGB at 700 nits (1920x1080)	7	7	7	7	7
15.6" diagonal UHD IPS eDP + PSR anti-glare, 100% sRGB at 400 nits with ambient light sensor (3840x 2160)	•	•	•	•	•
15.6" diagonal FHD IPS eDP + PSR anti-glare, 100% sRGB at 400 nits with ambient light sensor (1920x1080)	•	•	•	•	•
15.6" diagonal FHD IPS eDP anti-glare, 67% sRGB at 250 nits (1920x1080)	•	•	•	•	•
15.6" diagonal FHD IPS eDP touch screen with Corning® Gorilla® Glass 3, 67% sRGB at 220 nits (1920x1080)	•	•	•	•	•
HP SureView Integrated Privacy Display [9] 35.6 cm (14.0") diagonal FHD IPS eDP + PSR Anti-Glare LED-backlit, 950 cd/m², 100% sRGB (1920 x 1080)	7	7	7	7	7
35.6 cm (14.0") diagonal UHD IPS 100% Adobe RGB eDP + PSR Anti-Glare LED-backlit, 600 cd/m² (3840 x 2160)	•	•	•	•	•
35.6 cm (14.0") diagonal UHD IPS eDP + PSR Anti-Glare LED-backlit, 400 cd/m², 100% sRGB (3840 x 2160)	•	•	•	•	•
35.6 cm (14.0") diagonal FHD IPS eDP + PSR Anti-Glare LED-backlit 400 cd/m², 100% sRGB (1920 x 1080)	•	•	•	•	•
35.6 cm (14.0") diagonal FHD IPS eDP Anti-Glare LED-backlit, 250 cd/m², 67% sRGB (1920 x 1080)	•	•	•	•	•
<b>Display - internal panel with touch</b>					
15.6" diagonal FHD IPS eDP On-Cell touch screen with Corning® Gorilla® Glass 3, 67% sRGB at 250 nits (1920x1080)	2	2	2	2	2
HP SureView Integrated Privacy Display9 35.6 cm (14.0") diagonal FHD IPS Anti-Glare LED-backlit On-Cell Touch with Corning® Gorilla® Glass 3, 900 cd/m², 100% sRGB (1920 x 1080)	2, 7	2, 7	2, 7	2, 7	2, 7



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 14u/15u G6 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.6 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.2 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
35.6 cm (14.0") diagonal FHD IPS eDP Anti-Glare LED-backlit On-Cell Touch with Corning® Gorilla® Glass 3, 250 cd/m², 67% sRGB (1920 x 1080)	2	2	2	2	2
35.6 cm (14.0") diagonal FHD IPS eDP eDP + PSR Edge-to-Edge Touch Glass LED-backlit with Corning® Gorilla® Glass 3, 250 cd/m², 67% sRGB (1920 x 1080)	2	2	2	2	2
<b>Hard Disks</b>					
All Supported M.2 SSD's	•	•	•	•	•
All Supported SATA Disk Drives	•	•	•	•	•
All Supported Z Turbo NVMe PCIe SSD's	•	•	•	•	•
<b>Integrated Components</b>					
Wired LAN - Intel® i219-LM Gigabit Ethernet (vPro®)	•	•	•	•	•
Wired LAN - Intel® i219-V Gigabit Ethernet (non-vPro® versions)	•	•	•	•	•
Intel® Dual Band Wireless 6 AX200 802.11a/b/g/n/ac/ax (2x2) Wi-Fi® and Bluetooth® 5.0 Combo, vPro®	3	3	3	3	•
Intel® Dual Band Wireless-AC 9560 802.11a/b/g/n/ac (2x2) Wi-Fi® and Bluetooth® 5 Combo, vPro® & non-vPro®	•	•	•	•	•
Intel®XMM 7560 LTE-Advanced mobile broadband module					
Intel® XMM 7360 LTE-Advanced mobile broadband module					
Intel®XMM 7262 LTE-Advanced mobile broadband module					
NFC - NXP NPC300 option module					
Miracast support					
Onboard Audio	8	8	8	8	8
720 HD webcam (with and without IR option)	•	•	•	•	•
USB 3.1 Gen 1 (Type A) ports	•	•	•	•	•
USB 3.1 Gen 2 (Type-C™) port - USB 3.1 Gen 2, PCIe Gen 3, DisplayPort 1.3, Thunderbolt™ 3	•	•	•	•	•
TPM 2.0 Module	4	4	4	4	4
<b>Input/Output Devices</b>					
Trackpad + buttons	•	6	•	6	•
Smart Card reader	•	•	•	•	•
External HDMI port	•	•	•	•	•
<b>Dock options</b>					
HP ZBook Dock with Thunderbolt™ 3 G2	5	5	5	5	5

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Touch is only supported as equivalent to a single button pointer device. Any multi-touch/gesture capability supported by Linux desktops must be programmed by the user within the desktop environment.

<sup>3</sup> The Ax200 wireless solution is not yet supported by Linux distributions. The Bluetooth® controller should be functional.

<sup>4</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module may require additional software from the distribution.

<sup>5</sup> The speaker and volume controls in the audio module are functional, but the telephony controls are not.

<sup>6</sup> This distribution's Gnome desktop does not enable the virtual right mouse button of the trackpad by default. One must execute this command to enable it: "gsettings set org.gnome.desktop.peripherals.touchpad click-method 'areas'".

<sup>7</sup> Basic Control of SureView capabilities works under Linux with select function keys. There is no on-screen control of SureView with Linux.

<sup>8</sup> Audio output via speakers function. Audio input via built-in microphone is currently not functional due to a missing driver. Please check with your distro vendor for the availability of the snd-sof-pci driver in ALSA.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 14u/15u G5 Workstation

At this time, the Linux distributions listed are supported by HP but none are officially certified with the listed distribution. HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.6 or later (x86_64)	RHEL 8.0 or later (x85_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.2 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
All support Intel® 7th/8th generation Core™ i5, i7 processors	•	•	•	•
<b>Graphics Card (Video Card)</b>				
Intel® UHD integrated 630 graphics on Core™ 8th generation processors	•	•	•	•
Intel® HD integrated 620 graphics on Core™ 7th generation processors	•	•	•	•
AMD Radeon™ Pro WX3100 (2 GB GDDR5 Frame buffer)	•	•	•	•
<b>System RAM</b>				
Minimum (GB)	4 GB	4 GB	4 GB	4 GB
Maximum non-ECC SDRAM (GB)	32 GB	32 GB	32 GB	32 GB
<b>Display - internal panel</b>				
15.6" diagonal FHD IPS eDP anti-glare, 67% sRGB at 220 nits (1920x1080)	•	•	•	•
15.6" diagonal FHD IPS eDP + PSR anti-glare, 100% sRGB at 400 nits with ambient light sensor (1920x1080)	•	•	•	•
15.6" diagonal UHD IPS eDP + PSR anti-glare, 100% sRGB at 400 nits with ambient light sensor (3480x 2160)	•	•	•	•
HP SureView Integrated Privacy Display 15.6" diagonal FHD IPS eDP + PSR anti-glare 100% sRGB at 650 nits (1920x1080)	6	6	6	6
15.6" diagonal FHD IPS eDP touch screen with Corning® Gorilla® Glass 3, 67% sRGB at 220 nits (1920x1080)	•	•	•	•
14.0" diagonal LED backlit FHD UWVA eDP anti-glare (1920 x 1080)	•	•	•	•
14.0" diagonal LED backlit FHD UWVA eDP+PSR anti-glare (1920 x 1080)	•	•	•	•
14.0" diagonal Touch LED-backlit FHD UWVA eDP (1920 x 1080)	•	•	•	•
14.0" diagonal Touch LED-backlit FHD UWVA eDP+PSR, anti-glare + SureView Privacy filter (1920 x 1080)	6	6	6	6
14.0" diagonal LED backlit UHD UWVA eDP+PSR (3840 x 2160)	•	•	•	•
<b>Hard Disks</b>				
All Supported M.2 SSD's	•	•	•	•
All Supported SATA Disk Drives	•	•	•	•
All Supported Z Turbo NVMe PCIe SSD's	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 14u/15u G5 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.6 or later (x86_64)	RHEL 8.0 or later (x85_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.2 or later (x86_64)
<b>Integrated Components</b>				
Wired LAN - Intel® i219-LM Gigabit Ethernet (vPro®)	•	•	•	•
Wired LAN - Intel® i219-V Gigabit Ethernet (non-vPro® versions)	•	•	•	•
Wireless LAN - Intel® Dual Band Wireless-AC 8265 802.11 AC (2x2) Wi-Fi + Bluetooth® 4.2 Combo Adaptor* (vPro® & non-vPro®)	•	•	•	•
Wireless LAN - Realtek RTL8822BE 802.11ac 2x2 Wi-Fi and Bluetooth® 4.2 combo adapter	•	•	•	•
Wireless 4G (LTE) mobile broadband module support				
NFC - NXP NPC300 option module				
<b>Miracast</b>				
Onboard Audio (Conexant codec)	•	•	•	•
720 HD webcam (with and without IR option)	•	•	•	•
USB 3.1 Gen 1 (Type A) ports	•	•	•	•
USB 3.1 Gen 2 (Type-C™) ports - USB 3.1 Gen 2, PCIe Gen 3, DisplayPort 1.3, Thunderbolt™ Corning® Gorilla® 3	•	•	•	•
TPM 2.0 Module	3	3	3	3
<b>Input/Output Devices</b>				
Trackpad + buttons	•	5	•	5
Smart Card reader	•	•	•	•
HP Media Card Reader	•	•	•	•
External HDMI port	•	•	•	•
<b>Dock options</b>				
HP ZBook Dock with Thunderbolt™ 3 G2	4	4	4	4

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Intel® Optane™ cache memory modules are not supported by Linux at this time.

<sup>3</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module may require additional software from the distribution.

<sup>4</sup> The speaker and volume controls in the audio module are functional, but the telephony controls are not.

<sup>5</sup> This distribution's Gnome desktop does not enable the virtual right mouse button of the trackpad by default. One must execute this command to enable it: "gsettings set org.gnome.desktop.peripherals.touchpad click-method 'areas'".

<sup>6</sup> Basic Control of SureView capabilities works under Linux with select function keys. There is no on-screen control of SureView with Linux.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Power G10 Workstation

No certifications pending or planned  
 HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.8 or later (x86_64)	RHEL 9.2 or later (x86_64)	Ubuntu 22.04.3 (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Laptop, System Board, Power Supply, etc.	•	•	•
HP Localization Kit	1	1	1
<b>All Supported Processors</b>			
All Supported Intel 13th generation Core i5, i7 & i9 H series processors (Raptor Lake)	•	•	•
<b>System RAM</b>			
Minimum (GB)	8 GB	8 GB	8 GB
Maximum (GB)	64GB DDR5-5600	64GB DDR5-5600	64GB DDR5-5600
<b>Graphics Card (Video Card)</b>			
Intel® Iris® Xe Graphics 1	•	•	•
NVIDIA RTX A500 (4 GB of GDDR6 memory)	•	•	•
NVIDIA RTX A1000 (6 GB of GDDR6 memory)	•	•	•
NVIDIA RTX A2000 (8 GB of GDDR6 memory)	•	•	•
NVIDIA RTX A3000 (8 GB of GDDR6 memory)	•	•	•
<b>Display - internal panel</b>			
15.6" diagonal FHD (1920x1080) Anti-Glare, UWVA, 45% CG, 250nits, eDP 1.2, bent type LCD panel	•	•	•
15.6" diagonal FHD (1920 x 1080) Anti-Glare, UWVA, Low Blue Light, 100% CG, 400nits, eDP 1.4, Low-Power, bent type LCD panel	•	•	•
15.6" diagonal QHD (2560 x 1440) Anti-Glare, UWVA, Low Blue Light, 100% CG, 300nits, , eDP 1.4, bent type LCD panel	•	•	•
<b>Display - touch enabled</b>			
15.6" diagonal FHD (1920x1080) Anti-Glare, UWVA, Touch on Panel (TOP), 45% CG, 250nits, eDP 1.2, bent type LCD panel	3	3	3
<b>Hard Disks</b>			
All Supported M.2 Solid State Drives	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•
<b>Onboard Components</b>			
Onboard Audio	•	•	•
Audio combo jack	•	•	•
Wired LAN - Intel i219LM/VGigabit Ethernet (vPro and non-vPro configurations)	•	•	•
Intel® AX211 Wi-Fi6E+Bluetooth® 5.3 M.2 1216 160MHz CNVi World-Wide WLAN vPro® wireless	•	•	•
5MP camera (with 88 degree Field of View) with HP Auto Frame	4	4	4
Thunderbolt™ 4 with USB4 Type-C® 40Gbps signaling rate (USB Power Delivery, DisplayPort™ 1.4)	•	•	•
SuperSpeed USB Type-A 5Gbps signaling rate [USB 3.2 Gen 1 Type A/charging, non-charging]	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Power G10 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.8 or later (x86_64)	RHEL 9.2 or later (x86_64)	Ubuntu 22.04.3 (x86_64)
<b>Input/Output Devices</b>			
Clickpad/touchpad	•	•	•
Dedicated function keys	•	•	•
NFC controller module			
TPM Module	5	5	5
Finger print reader	•	•	•
Smart Card	•	•	•
External HDMI port 2.1	•	•	
<b>Dock options</b>			
HP Thunderbolt™ 280W G4 Dock	6	6	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> On this distribution, the graphics does not operate well in hybrid mode for installation. The recommendation is to use UMA mode for installation. After installation, enable hybrid

mode and install the NVIDIA driver.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>4</sup> IR camera is not supported in Linux at this time

<sup>5</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>6</sup> The HDMI and DP ports do not function properly with this release. Updates are available from Red Hat repositories which will improve the HDMI connectivity to external displays.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Power G10 A Workstation

No certifications pending or planned  
 HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.8 or later (x86_64)	RHEL 9.2 or later (x86_64)	Ubuntu 20.04.6 (x86_64)	Ubuntu 22.04.3 (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Laptop, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
All Supported AMD Ryzen™ 76xx/78xx/79xx processors	•	•	•	•
<b>System RAM</b>				
Minimum (GB)	8 GB	8 GB	8 GB	8 GB
Maximum (GB)	64GB DDR5-5600	64GB DDR5-5600	64GB DDR5-5600	64GB DDR5-5600
<b>Graphics Card (Video Card)</b>				
AMD Radeon™ Graphics	•	•	•	•
NVIDIA RTX A1000 (6 GB of GDDR6 memory)	•	•	•	•
NVIDIA RTX 2000 (8 GB of GDDR6 memory)	•	•	•	•
NVIDIA RTX 4050	•	•	•	•
<b>Display - internal panel</b>				
15.6" diagonal, FHD (1920 x 1080), narrow bezel, anti-glare, 250 nits, 45% NTSC	•	•	•	•
15.6" diagonal, FHD (1920 x 1080), narrow bezel, anti-glare, Low Blue Light, 400nits, Low-Power, 100% sRGB	•	•	•	•
15.6" diagonal, QHD (2560 x 1440), narrow bezel, anti-glare, Low Blue Light, 300 nits, 100% sRGB	•	•	•	•
<b>Display - touch enabled</b>				
15.6" diagonal, FHD (1920 x 1080), narrow bezel, anti-glare, Touch on Panel (TOP), 250nits, 45% NTSC	2	2	2	2
<b>Hard Disks</b>				
All Supported M.2 Solid State Drives	•	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•	•
<b>Onboard Components</b>				
Onboard Audio	•	•	•	•
Audio combo jack	•	•	•	•
RTK GBE Ethernet Controller RTL8111FPH-CG LAN (DASH and non-DASH)	•	•	•	•
Mediatek RZ616 Wi-Fi 6E Bluetooth® 5.3 AIM-T WLAN wireless card			•	
Realtek 8852CE Wi-Fi 6E Bluetooth® 5.3 WLAN				•
HD camera	3	3	3	3
5MP camera (with 88 degree Field of View) with HP Auto Frame	3	3	3	3
Thunderbolt™ 4 with USB4 Type-C® 40Gbps signaling rate (USB Power Delivery, DisplayPort™ 1.4)	•	•	•	•
SuperSpeed USB Type-A 5Gbps signaling rate [USB 3.2 Gen 1 Type A/charging, non-charging]	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Power G10 A Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.8 or later (x86_64)	RHEL 9.2 or later (x86_64)	Ubuntu 20.04.6 (x86_64)	Ubuntu 22.04.3 (x86_64)
<b>Input/Output Devices</b>				
Clickpad/touchpad	•	•	•	•
Dedicated function keys	•	•	•	•
NFC controller module				
TPM Module	4	4	4	4
Finger print reader	•	•		•
Smart Card	•	•	•	•
External HDMI port 2.1	•	•	6	•
<b>Dock options</b>				
HP Thunderbolt™ 280W G4 Dock	5	5	5	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are

optimized for a satisfactory touch experience.

<sup>3</sup> IR camera is not supported in Linux at this time

<sup>4</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>5</sup> The HDMI/DP ports of the dock are not functional

<sup>6</sup> Vanilla 8.8 does not support HDMI-connected external displays well enough to be usable. If you apply the latest RHEL updates to get to kernel 4.18.0-513, this will improve the HDMI support significantly.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Power 15.6 inch G9 Workstation

### No certifications pending or planned

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
All Supported Intel® 12th generation Core™ i5, i7 and i9 processors (Alder Lake)	•	•	•	•
<b>System RAM</b>				
Minimum (GB)	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB DDR5/4800 memory	64 GB DDR5/4800 memory	64 GB DDR5/4800 memory	64 GB DDR5/4800 memory
<b>Graphics Card (Video Card)</b>				
Intel® Iris® Xe® Graphics	•	•	•	•
NVIDIA® Quadro® T600 (4 GB of GDDR6 memory)	•	•	2	2
NVIDIA® RTX® A1000 (4 GB of GDDR6 memory)	•	•	2	2
NVIDIA® RTX® A2000 (8 GB of GDDR6 memory)	•	•	2	2
<b>Display - non-touch</b>				
15.6 inch FHD (1920x1080) Anti-Glare WLED UWVA 45percent cg 250nits eDP 1.2 w/o PSR	•	•	•	•
15.6 inch FHD (1920x1080) Anti-Glare WLED UWVA sRGB 100percent cg 400nits eDP 1.4+PSR2	•	•	•	•
<b>Display - touch enabled</b>				
15.6 inch FHD (1920x1080) Anti-Glare WLED UWVA 45percent cg 250nits eDP 1.2 w/o PSR	3	3	3	3
<b>Hard Disks</b>				
All Supported M.2 Solid State Drives	•	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•	•
Onboard Components				
<b>Onboard Audio</b>				
Audio jack			•	•
Wired LAN - Intel® i219LM Gigabit Ethernet (vPro and non-vPro configurations)	•	•		
Intel® AX211 Wi-Fi6E+BT5.2 M.2 160MHz CNVi World-Wide WLAN vPro				
720p HD webcam	•	•	•	•
720p HD+IR webcam	4	4	4	4
SuperSpeed USB Type-A 5Gbps signaling rate [USB 3.1 Gen 1 Type A] charging	•	•	•	•
Thunderbolt™ 4 with USB4 Type-C™ 40Gbps signaling rate (USB Power Delivery, DisplayPort™ 1.4)			•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Power 15.6 inch G9 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 or later (x86_64)	Ubuntu 22.04 or later (x86_64)
<b>Input/Output Devices</b>				
Clickpad/touchpad	•	•	•	•
Dedicated function keys	5	5	5	5
Fingerprint sensor				
NFC controller module				
TPM Module	6	6	6	6
Smart Card reader	•	•	•	•
External HDMI port 2.0b				
<b>Dock options</b>				
ZBook dock with Thunderbolt™ 3	7	7	7	7

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> On this distribution, the graphics does not operate properly in hybrid mode. UMA is the only graphics mode that works.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>4</sup> IR camera is not supported in Linux at this time.

<sup>5</sup> Only the audio-related function keys work with this distribution.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>7</sup> The HDMI/DP ports of the dock are not functional.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Power 15.6 inch G8 Workstation

No certifications pending or planned

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 (x86_64)	Ubuntu 22.04 (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Laptop, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
All Supported Intel® 11th generation Core i5, i7 & i9 processors (Tiger Lake)	•	•	•	•
<b>System RAM</b>				
Minimum (GB)	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB DDR4/3200 non ECC SDRAM	64 GB DDR4/3200 non ECC SDRAM	64 GB DDR4/3200 non ECC SDRAM	64 GB DDR4/3200 non ECC SDRAM
<b>Graphics Card (Video Card)</b>				
Intel® Iris® Xe® Graphics	•	•	•	•
NVIDIA® Quadro® T600 (4 GB of GDDR6 memory)	•	•	•	•
NVIDIA® Quadro® T1200 (4 GB of GDDR6 memory)	•	•	•	•
NVIDIA® Quadro® RTX A2000 (4 GB of GDDR6 memory)	•	•	•	•
<b>Display - internal panel</b>				
15.6" diagonal FHD IPS eDP1.2 anti-glare bent WLED-backlit and ambient light sensor 250 nits 45% NTSC (1920 x 1080)	•	•	•	•
15.6" diagonal FHD Low Power IPS eDP1.4 + PSR2 anti-glare bent WLED-backlit and ambient light sensor 400 nits 100% sRGB (1920 x 1080)	•	•	•	•
15.6" diagonal UHD Low Power IPS eDP 1.4 + PSR2 +PSR anti-glare bent WLED-backlit and ambient light sensor 400 nits 100% sRGB (3840 x 2160)	•	•	•	•
<b>Display - touch enabled</b>				
15.6" diagonal FHD IPS eDP1.2 anti-glare bent WLED-backlit Touch On Cell screen with ambient light sensor 250 nits 45% NTSC (1920 x 1080)	2	2	2	2
<b>Hard Disks</b>				
All Supported M.2 Solid State Drives	•	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•	•
<b>Onboard Components</b>				
Onboard Audio	3	3	3	3
Audio combo jack	3	3	3	3
Wired LAN - Intel® i219LM/VGigabit Ethernet (vPro and non-vPro configurations)	•	•	•	•
Intel® Wi-Fi 6 AX201(2x2) and Bluetooth® 5 combo (vPro & non-vPro)	•	•	•	•
720p HD webcam	•	•	•	•
720p HD webcam with IR	4	4	4	4
USB Type-C™ (Thunderbolt™ 4, pass through support DisplayPort™ 1.4, USB 3.1 Gen 2, with BC 1.2)	•	•	•	•
SuperSpeed USB Type-A 5Gbps signaling rate [USB 3.1 Gen 1 Type A/charging, non-charging]	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Power 15.6 inch G8 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.4 (x86_64)	Ubuntu 22.04 (x86_64)
<b>Input/Output Devices</b>				
Clickpad/touchpad	•	•	•	•
Dedicated function keys	•	•	•	•
NFC controller module				
TPM Module	5	5	5	5
Smart Card	•	•	•	•
External HDMI port 2.0b	•	•	•	•
<b>Dock options</b>				
HP Thunderbolt™ Dock G2	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>3</sup> Audio does not function in the right channel.

<sup>4</sup> IR camera is not supported in Linux at this time.

<sup>5</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>6</sup> The 1GbE port on the LOM is not functional with this distro.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Power G7 Workstation



### No certifications are pending

Enterprise-class Linux releases older than those listed do not enable the Intel® Comet Lake architecture used in this system. HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•
<b>All Supported Processors</b>			
All Supported Intel® 10th generation Core™ i5, i7, i9 and Xeon® processors	•	•	•
<b>Graphics Card (Video Card)</b>			
Intel® UHD integrated graphics	•	•	•
NVIDIA® Quadro® P620 (4 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® T1000 with Max-Q Design (4 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® T2000 with Max-Q Design (4 GB of GDDR6 memory)	1	2	2
<b>System RAM</b>			
Minimum (GB)	4 GB	4 GB	4 GB
Maximum (GB)	32 GB with ECC 64 GB non-ECC	32 GB with ECC 64 GB non-ECC	32 GB with ECC 64 GB non-ECC
<b>Display-internal panel</b>			
15.6" diagonal FHD IPS eDP1.2 anti-glare bent WLED-backlit and ambient light sensor 250 nits 45% NTSC (1920 x 1080)	•	•	•
15.6" diagonal FHD Low Power IPS eDP1.4 + PSR2 anti-glare bent WLED-backlit and ambient light sensor 400 nits 100% sRGB 1920 x 1080)	•	•	•
15.6" diagonal UHD Low Power IPS eDP 1.4 + PSR2 +PSR anti-glare bent WLED-backlit and ambient light sensor 400 nits 100% sRGB (3840 x 2160)	•	•	•
15.6" diagonal FHD IPS eDP1.2 anti-glare bent WLED-backlit Touch On Cell screen with ambient light sensor 250 nits 45% NTSC (1920 x 1080)	3	3	3
<b>Hard Disks</b>			
All Supported M.2 Solid State Drives	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•
<b>Onboard Components</b>			
Onboard Audio	•	•	•
Intel® Wi-Fi 6 AX201(2x2) and Bluetooth® 5 combo (vPro® & non-vPro®)	•	•	•
WWAN Intel® XMM™ 7360 LTE Advanced CAT 9			
WWAN Intel® XMM™ 7560 LTE-Advanced Pro Cat 16			
720p HD webcam	•	•	•
720p HD webcam with IR	4	4	4
USB 3.1 gen 2 / Thunderbolt™ 3 ports	•	•	•
Function hot key functionality	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Power G7 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>Input/Output Devices</b>			
Touchpad + Keys	•	•	•
TPM Module	5	5	5
Fingerprint sensor			
SD 4.0 Media Card Reader	•	•	•
External HDMI 1.4b port	•	•	•
<b>Dock options</b>			
ZBook dock with Thunderbolt™ 3	•	•	•

<sup>1</sup> HP recommends use of NVIDIA® driver 450.55 (or newer) on NVIDIA® graphics options.

<sup>2</sup> Canonical regularly releases an NVIDIA® driver that can be applied by the Ubuntu software update mechanism. HP recommends using this driver and update method on Ubuntu 18.04 and 20.04.

<sup>3</sup> The left channel for audio output works, while the right channel does not at this time.

<sup>4</sup> IR camera not supported in Linux at this time.

<sup>5</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module may require additional software from the distribution being used.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Studio G10 Workstation

### No certifications pending or planned

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.8 or later (x86_64)	RHEL 9.2 or later (x86_64)	Ubuntu 22.04.3 (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Laptop, System Board, Power Supply, etc.	•	•	•
HP Localization Kit	1	1	1
<b>All Supported Processors</b>			
All Supported Intel 13th generation Core i5, i7 and i9 processors (Raptor Lake)	•	•	•
<b>System RAM</b>			
Minimum (GB)	16GB	16GB	16GB
Maximum (GB)	64GB DDR5-4800 non-ECC SODIMM	64GB DDR5-4800 non-ECC SODIMM	64GB DDR5-4800 non-ECC SODIMM
<b>Graphics Card (Video Card)</b>			
Intel® UHD Graphics	•	•	•
NVIDIA RTX™ A1000 6GB Laptop GPU (6 GB DDR5 GDDR6 dedicated)	•	7	2
NVIDIA RTX™ 2000 Ada Generation Laptop GPU (8 GB DDR5 GDDR6 dedicated)	•	7	2
NVIDIA RTX™ 3000 Ada Generation Laptop GPU (8 GB DDR5 GDDR6 dedicated)	•	7	2
NVIDIA RTX™ 4000 Ada Generation Laptop GPU (12 GB DDR5 GDDR6 dedicated)	•	7	2
NVIDIA GeForce RTX™ 4070	•	7	2
NVIDIA GeForce RTX™ 4080	•	7	2
<b>Display - non-touch</b>			
16.0" WQUXGA DreamColor (3840 x 2400) Anti-Glare UWVA LED DCI-P3 NB2Y 500 eDP1.4 w/o PSR 100 120Hz bent LCD Panel	•	•	•
16.0" WUXGA (1920 x 1200) Anti-Glare UWVA WLED+LBL sRGB NB2Y 400 eDP 1.4+PSR2 Low-Power 100 bent LCD Panel	•	•	•
<b>Display - touch enabled</b>			
16.0" WQUXGA (3840 x 2400) BrightView UWVA DCI-P3 NBZ2 400 eDP 1.4+PSR 100 bent OLED Panel	3	3	3
<b>Hard Disks</b>			
All Supported M.2 Solid State Drives	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•
<b>Onboard Components</b>			
Onboard Audio			•
Audio jack		•	•
Intel® AX211 Wi-Fi6E+BT5.2 M.2 160MHz CNVi World-Wide WLAN vPro/non-vPro			•
720p HD IR camera	4	4	4
SuperSpeed USB Type-A 5Gbps signaling rate [USB 3.1 Gen 1 Type A] charging	•	•	•
Thunderbolt™ 4 with USB4™ Type-C® 40Gbps signaling rate (USB Power Delivery, DisplayPort™ 1.4, HP Sleep and Charge)	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Studio G10 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.8 or later (x86_64)	RHEL 9.2 or later (x86_64)	Ubuntu 22.04.3 (x86_64)
<b>Input/Output Devices</b>			
Clickpad/touchpad	•	•	•
Dedicated function keys	5	5	•
Finger print sensor	•	•	
NFC controller module			
TPM Module	6	6	6
<b>Dock options</b>			
HP Thunderbolt 280W G4 Dock			

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> On this distribution, the graphics does not operate well in hybrid mode for installation. The recommendation is to use UMA mode for installation. After installation, enable hybrid mode and install the NVIDIA driver.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>4</sup> IR camera is not supported in Linux at this time

<sup>5</sup> Only the audio-related function keys work with this distribution.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>7</sup> Systems with NVIDIA graphics must be installed with 'nomodeset' added to the boot line. After installation, you will need to install the NVIDIA proprietary driver for the system to use the NVIDIA/Intel hybrid setup successfully.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Studio 16 inch G9 Workstation

Certified on Ubuntu 20.04.

Ubuntu 22.04 certification in progress.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.5 (x86_64)	Ubuntu 22.04.1 (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Laptop, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
All Supported Intel® 12th generation Core™ i5, i7 and i9 processors (Alder Lake)	•	•	•	•
<b>System RAM</b>				
Minimum (GB)	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB DDR5/4800 non-ECC memory	64 GB DDR5/4800 non-ECC memory	64 GB DDR5/4800 non-ECC memory	64 GB DDR5/4800 memory
<b>Graphics Card (Video Card)</b>				
Intel® Iris® Xe Graphics	•	•	•	•
NVIDIA RTX™ A1000 (4 GB of GDDR6 memory)	2	2	2	2
NVIDIA RTX™ A2000 (8 GB of GDDR6 memory)	2	2	2	2
NVIDIA RTX™ A3000 (12 GB of GDDR6 memory)	2	2	2	2
NVIDIA RTX™ A4500 (16 GB of GDDR6 memory)	2	2	2	2
NVIDIA RTX™ A5500 (16 GB of GDDR6 memory)	2	2	2	2
NVIDIA® GeForce 3060 (6 GB of GDDR6 memory)	2	2	2	2
NVIDIA® GeForce 3070 Ti (8 GB of GDDR6 memory)	2	2	2	2
NVIDIA® GeForce 3080 Ti (16 GB of GDDR6 memory)	2	2	2	2
<b>Display - non-touch</b>				
16.0" diagonal, WUXGA (1920 x 1200), IPS, anti-glare, 1000 nits, 72% NTSC, HP Sure View Reflect integrated privacy screen	•	•	•	•
16.0" diagonal, WUXGA (1920 x 1200), IPS, narrow bezel, anti-glare, WLED+LBL, 400 nits, low power, 100% sRGB	•	•	•	•
16.0" diagonal, 4K WQUXGA (3840 x 2400), 120 Hz, IPS, UWVA, anti-glare, 500 nits, 100% DCI-P3, HP DreamColor	•	•	•	•
<b>Display - touch enabled</b>				
16.0" diagonal, 4K WQUXGA (3840 x 2400), OLED, LBL, multitouch-enabled, UWVA, BrightView, TS, Corning® Gorilla® Glass 5, 400 nits, 100% DCI-P31	3	3	3	3
<b>Hard Disks</b>				
All Supported M.2 Solid State Drives	•	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•	•
<b>Onboard Components</b>				
Onboard Audio			•	•
Audio jack	•		•	•
Intel® AX211 Wi-Fi 6E+BT5.2 WLAN (vPro and non-vPro configurations)	•	•	•	•
720p HD Webcam	•	•		•
720p HD+IR webcam	4	4	4	4
SuperSpeed USB Type-A 5Gbps signaling rate [USB 3.1 Gen 1 Type A] charging	•	•	•	•
Thunderbolt™ 4 with USB4 TypeC® 40Gbps signaling rate (USB Power Delivery, DisplayPort™ 1.4)	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Studio 16 inch G9 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.5 (x86_64)	Ubuntu 22.04.1 (x86_64)
<b>Input/Output Devices</b>				
Clickpad/touchpad	•	•	•	•
Dedicated function keys	5	5	6	•
Finger print sensor				
NFC controller module				
TPM Module	7	7	7	7
MicroSD 7.1 card reader	•	•	•	•
<b>Dock options</b>				
Thunderbolt Dock G2	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> On this distribution, the graphics does not operate well in hybrid mode for installation. The recommendation is to use UMA mode for installation. After installation, enable hybrid mode and install the NVIDIA® driver.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>4</sup> IR camera is not supported in Linux at this time.

<sup>5</sup> Only the audio-related function keys work with this distribution.

<sup>6</sup> The digital mic button and the airplane mode keys are not functional on this distribution.

<sup>7</sup> Support for the TPM or other security devices varies by OS distribution.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Studio/Create G7 Workstation



### Certified on Ubuntu 20.04

Enterprise-class Linux releases older than those listed do not enable the Intel® Comet Lake architecture used in this system. HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 (x86_64)	Ubuntu 20.04 (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•
<b>All Supported Processors</b>			
All Supported Intel® 10th generation Core™ i5, i7, i9 and Xeon® processors	•	•	•
<b>Graphics Card (Video Card)</b>			
Intel® UHD integrated graphics	•	•	•
<b>System RAM</b>			
Minimum (GB)	4 GB	4 GB	4 GB
Maximum (GB)	32 GB non-ECC	32 GB non-ECC	32 GB non-ECC
<b>Create Graphics Options</b>			
NVIDIA® GeForce® RTX 2070 with Max-Q Design (8 GB GDDR6 dedicated)	1	2	2
NVIDIA® GeForce® RTX 2070 Super with Max-Q Design (8 GB GDDR6 dedicated)	1	2	2
NVIDIA® GeForce® RTX 2080 Super with Max-Q Design (8 GB GDDR6 dedicated)	1	2	2
<b>Studio Graphics Options</b>			
NVIDIA® Quadro® T1000 w/Max-Q design (4 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® T2000 w/Max-Q design (4 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® RTX 3000 (6 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® RTX 4000 w/Max-Q Design (8 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® RTX 5000 w/Max-Q Design (16 GB of GDDR6 memory)	1	2	2
<b>Display-internal panel</b>			
15.6" diagonal 4K UHD (3840 x 2160) IPS eDP+ PSR anti-glare, 100% DCI-P3, 600 nits VESA DisplayHDR 400 Certified Next Gen HP DreamColor Panel	•	•	•
15.6" diagonal FHD (1920 x 1080) IPS eDP + PSR anti-glare, 100% sRGB at 400 nits (1W) low power panel	•	•	•
15.6" diagonal FHD (1920 x 1080) IPS eDP + PSR anti-glare, 72% NTSC at 1000 nits HP Sure View Reflect Integrated Privacy Panel	•	•	•
15.6" diagonal 4K UHD (3840 x 2160) UWVA eDP + PSR Brightview 100% DCI-P3, 400 nits OLED VESA DisplayHDR 500 True Black Certified panel with Corning® Gorilla® Glass 6 Touch Screen	3	3	3
<b>Hard Disks</b>			
All Supported M.2 Solid State Drives	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Studio/Create G7 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 (x86_64)	Ubuntu 20.04 (x86_64)
<b>Onboard Components</b>			
Onboard Audio	4	4	4
Intel® Wi-Fi 6 AX201(2x2) and Bluetooth® 5 combo (vPro® & non-vPro®)	•	•	•
720p HD with Temporal Noise Reduction webcam with IR	5	5	5
USB 3.1 gen 1 port	•	•	•
USB 3.1 gen 2 / Thunderbolt™ 3 ports	•	•	•
Function hot key functionality	•	•	•
<b>Input/Output Devices</b>			
Touchpad	•	•	•
TPM Module	6	6	6
Fingerprint sensor			
SD 4.0 Media Card Reader	•	•	•
HDMI 2.0 port(non-RTX configs)	•	•	•
External mini DisplayPort 1.4 port (RTX configs)	•	•	•
<b>Dock options</b>			
ZBook dock with Thunderbolt™ 3	•	•	•

<sup>1</sup> HP recommends use of NVIDIA® driver 450.55 (or newer) on NVIDIA® graphics options.

<sup>2</sup> Canonical regularly releases an NVIDIA® driver that can be applied by the Ubuntu software update mechanism. HP recommends using this driver and update method on Ubuntu 18.04 and 20.04.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops.

<sup>4</sup> The left channel for audio output works, while the right channel does not at this time.

<sup>5</sup> IR camera not supported in Linux at this time.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module may require additional software from the distribution being used.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Studio G5 Mobile Workstation

Certified on RHEL 8.0.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.4 or later (x86_64)	Ubuntu 18.04 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>HP Workstation Base System</b>					
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•
HP Localization Kit	1	1	1	1	1
<b>All Supported Processors</b>					
All support Intel® 8th generation Core™ i5, i7 and Xeon® processors	•	•	•	•	•
<b>Graphics Card (Video Card)</b>					
Intel® UHD integrated 630 graphics on Core™ i5/i7 processors	•	•	•	•	•
Intel® UHD integrated P630 graphics on Xeon® processors	•	•	•	•	•
NVIDIA® Quadro® P1000 (4 GB Frame buffer)	3, 5	3, 5	3, 5	3, 5	3, 5
<b>System RAM</b>					
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	32 GB	32 GB	32 GB	32 GB	32 GB
<b>Display - internal panel</b>					
15.6" diagonal FHD IPS eDP + PSR anti-glare, 400 nits with ambient light sensor (1920x1080)	•	•	•	•	•
15.6" diagonal HP Sure View FHD IPS eDP+PSR anit-glare, 650 nits (1920x1080)	•	•	•	•	•
15.6" diagonal UHD IPS eDP + PSR anti-glare, 400 nits with ambient light sensor (3840x2160)	•	•	•	•	•
15.6" diagonal HP DreamColor Technology, UHD IPS eDP + PSR anti-glare, 600 nits, 100% Adobe RGB with 10-bit color (3840x2160)	•	•	•	•	•
<b>Hard Disks</b>					
All Supported M.2 SSD's	•	•	•	•	•
Intel® Optane™ Cache memory	9	9	9	9	9
All Supported Z Turbo NVMe PCIe SSD's	•	•	•	•	•
HP 3D DriveGuard	9	9	9	9	9
<b>Integrated Components</b>					
Wireless LAN - Intel® dual-band wireless-AC 9560 802.11ac (2x2) Wi-Fi and Bluetooth® 5.0 combo, vPro®	6	6	6	6	•
Wireless LAN - Intel® dual-band wireless-AC 9560 802.11ac (2x2) Wi-Fi and Bluetooth® 5.0 combo, non-vPro®	6	6	6	6	•
Intel® XMM 7360 LTE-Advanced mobile broadband module					
Intel® It4132 LTE/HSPA+ 4G mobile broadband module					
NFC Mirage WNC XRAV-1					
Onboard Audio (Conexant codec)	•	•	•	•	•
HP webcam	•	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1)	•	•	•	•	•
USB 3.0 Type A ports	•	•	•	•	•
USB 3.1 G2 Type C™ ports (USB 3.1 Gen 2, PCIe Gen 3, DisplayPort 1.3, Thunderbolt™ 3)	•	•	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Studio G5 Mobile Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.4 or later (x86_64)	Ubuntu 18.04 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
USB 2.0/3/1 G1 internal ports	•	•	•	•	•
TPM 2.0 Module	7	7	7	7	7
<b>Input/Output Devices</b>					
Trackpad + buttons	8	8	8	8	•
Smart Card reader	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•
External HDMI port	10	10	10	10	10
<b>Dock options</b>					
HP ZBook Dock with Thunderbolt™ 3	•	•	•	•	•
HP ZBook Dock with Thunderbolt™ 3 G2 with optional audio module	11	11	11	11	11
HP USB Type-C™ Elite dock	•	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> AMD Radeon™ Pro graphics cards are now supported in Linux by the amdgpu open source driver. OS streams are supported at specific release version levels, starting with these: RHEL 7.5, Ubuntu 16.04.4 and 18.04.

<sup>3</sup> HP recommends the following minimum revision of the NVIDIA® driver: 390.67 (or newer).

<sup>4</sup> At the time this document was published, AMD had not yet released a pro version of their driver for these enterprise Linux distributions. Please check at a later time or check the availability of a released driver at the [hp.com/support/workstations](http://hp.com/support/workstations) support website.

<sup>5</sup> For installation, HP recommends setting the BIOS gfx mode to 'discrete'. It may be necessary to boot with the 'nomodeset' option for installation to work around issues with the inbox gfx driver.

<sup>6</sup> The current supported Linux distros have the correct iwlmwifi driver, but may lack the latest Intel® 9560 firmware to properly operate the Wi-Fi solution. Check with your distribution vendor for updates.

<sup>7</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module may require additional software from the distribution.

<sup>8</sup> The trackpad is not functional out of the box with any of these distributions at this time. To use the G5 Studio, one will have to use an external USB pointer device until such time as a work-around is found or a permanent solution is available. Please check with your distribution vendor.

<sup>9</sup> This option is not supported on Linux distributions.

<sup>10</sup> With NVIDIA®-based configurations, it is recommended to use the NVIDIA® closed source driver when using externally connected displays.

<sup>11</sup> The speaker and volume controls in the audio module are functional, but the telephony controls are not.

 


Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Studio G4 Mobile Workstation

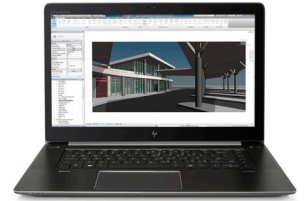

### RHEL 7 certifications pending.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.3 or later (x86_64)	Ubuntu 16.04.1 or later (x86_64)
<b>HP Workstation Base System</b>		
Base system includes: Chassis, System Board, Power Supply, etc.	•	•
HP Localization Kit	1	1
<b>All Supported Processors</b>		
All supported 7th generation Intel® Core™ i7, i5 and Xeon® processors	•	•
<b>System RAM</b>		
Minimum (GB)	4 GB	4 GB
Maximum (GB)	32 GB	32 GB
<b>Graphics Card (Video Card)</b>		
Intel® HD integrated graphics 630 on Core™ i7 processors	5	5
Intel® HD integrated graphics P630 on Xeon® processors	5	5
NVIDIA® Quadro® M1200 with 4 GB of graphics memory	6	6
<b>Display - internal panel</b>		
15.6" diagonal LED-backlet FHD UWVA IPS eDP anti-glare + panel self refresh (PSR) (1920x1080)	•	•
15.6" diagonal UHD UWVA IPS LED anti-glare (3840x2160)	•	•
15.6" diagonal Touch LED-backlit FHD UWVA IPS (1920x1080)	7	7
<b>Hard Disks</b>		
All Supported M.2 AHCI Solid State Drives	•	•
All Supported HP Z Turbo Drive NVMe PCIe-attached storage	•	•
All Supported M.2 AHCI SED Solid State Drives	8	8
<b>Onboard Components</b>		
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•
Onboard Audio (Conexant codec)	•	•
Onboard SATA RAID	2	2
Intel® dual-band wireless AC 8265 802.11 AC/a/b/g/n (2x2) Wi-Fi + Bluetooth® (vPro® & non-vPro®)	•	•
HP webcam	•	•
Thunderbolt™ 3 ports	3	3
USB 3.0 ports	•	•
<b>Input/Output Devices</b>		
Touchpad	11	•
TPM Module	4	4
External HDMI port	•	•
<b>Dock Options</b>		
ZBook Dock with Thunderbolt™ 3	9, 10	10, 12
HP USB Type-C™ Elite dock		



Linux Hardware Matrix

# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Studio G4 Mobile Workstation (continued)

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Hardware RAID is not supported on SATA drives. Software RAID is available in most Linux OSes and can be used with SATA or PCIe storage devices.

<sup>3</sup> Newer Linux kernels may provide device functionality through the Thunderbolt™ module. Such kernels are likely to be available in leading-edge distributions, but inclusion of the support with any Enterprise Linux distribution is at the distributor's discretion.

<sup>4</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>5</sup> The Intel® HD graphics works with the in-box frame-buffer drivers. Support for the "native" Intel® driver on v7 processors (Kabylake) is not available for most release streams as of this edition of the table.

<sup>6</sup> HP recommends use of NVIDIA® driver 375.66 (or newer) on NVIDIA® graphics options.

<sup>7</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>8</sup> SED drives work with Linux. There is, however, no Linux support available for manipulating encryption settings via the Opal API.

<sup>9</sup> The Thunderbolt™ dock is compatible with RHEL 7 on this ZBook model, starting with RHEL 7.3.

<sup>10</sup> With NVIDIA®-based configurations, it is recommended to use the NVIDIA® closed source driver when using externally connected displays.

<sup>11</sup> The Touchpad requires a post RHEL 7.3 z-stream update. A simple work-around can also be used in lieu of the z-stream fix by adding the boot option 'module\_blacklist=i2c-hid' to the boot command line.

<sup>12</sup> The Thunderbolt™ dock is compatible with Ubuntu 16.04, starting with 16.04.1. The one known limitation is that the audio headphone jack does not work.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Studio G3 Mobile Workstation



RHEL 7 certifications pending. RHEL 6 certifications unlikely.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 6.8 or later	RHEL 7.2 or later (x86_64)	Ubuntu 16.04.1 or later
<b>HP Workstation Base System</b>			
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•
HP Localization Kit	1	1	1
<b>All Supported Processors</b>			
All Supported Processors (single-CPU configs)	•	•	•
Hyperthreading	•	•	•
<b>System RAM</b>			
Minimum (GB)	4 GB	4 GB	4 GB
Maximum (GB)	32 GB	32 GB	32 GB
<b>Graphics Card (Video Card)</b>			
Intel® HD integrated graphics 530	5	5	5
Intel® HD integrated graphics P530	5	5	5
Intel® HD integrated pro graphics P580 (available 1H16)	5	5	5
NVIDIA® Quadro® M1000M with 2 GB of graphics memory	6	6	6, 12
NVIDIA® Quadro® M2000M with 4 GB of graphics memory	6	6	6, 12
<b>Display - internal panel</b>			
15.6" diagonal LED-backlit FHD UWVA IPS eDP anti-glare + panel self refresh (PSR) (1920x1080)	•	•	•
15.6" diagonal LED backlit FHD SVA eDP anti-glare (1920x1080)	•	•	•
15.6" diagonal LED UHD UWVA IPS LED anti-glare DreamColor (3840x2160) (available in 1H16)	•	•	•
15.6" diagonal Touch LED-backlit FHD UWVA IPS (1920x1080) (available in 1H16)	7	7	7
<b>Hard Disks</b>			
All Supported M.2 AHCI Solid State Drives	•	•	•
All Supported HP Z Turbo Drive NVMe PCIe-attached storage	•	•	•
All Supported M.2 AHCI SED Solid State Drives	8	8	8
<b>Onboard Components</b>			
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•
Onboard Audio (Conexant codec)	•	•	•
Onboard SATA RAID	2	2	2
Intel® dual-band wireless AC 8260 802.11 AC/a/b/g/n (2x2) Wi-Fi + Bluetooth® (vPro® & non-vPro®)	10	10	10
HP webcam	•	•	•
Thunderbolt™ 3 ports	•	3	•
USB 3.0 ports	•	•	•
<b>Input/Output Devices</b>			
Touchpad	•	11	•
TPM Module	4	4	4
External HDMI port	•	•	•
<b>Dock Options</b>			
ZBook Dock with Thunderbolt™ 3	•	9	9



Linux Hardware Matrix

# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Studio G3 Mobile Workstation (continued)

- <sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.
- <sup>2</sup> Hardware RAID is not supported on SATA drives. Software RAID is available in most Linux OSes and can be used with SATA or PCIe storage devices. Software RAID may not support RAID of the boot volume.
- <sup>3</sup> Newer Linux kernels may provide device functionality through the Thunderbolt™ module. Such kernels are likely to be available in leading-edge distributions, but inclusion of the support with any Enterprise Linux distribution is at the distributor's discretion.
- <sup>4</sup> Support for the TPM or other security devices varies by OS distribution.
- <sup>5</sup> The Intel® HD graphics works with the in-box frame-buffer drivers. Support for the "native" Intel® driver on v5 processors (Skylake) is not available for most release streams as of this edition of the table.
- <sup>6</sup> HP recommends use of NVIDIA® driver 361.28 (or newer) for configurations with NVIDIA® graphics.
- <sup>7</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.
- <sup>8</sup> SED drives work with Linux. There is, however, no Linux support available for manipulating encryption settings via the Opal API.
- <sup>9</sup> As of this edition, the docking station has not been tested for compatibility with Linux distributions. The supported state of the various I/O ports will be updated as new information becomes available over time.
- <sup>10</sup> As of this edition, the Bluetooth® functionality of this "combo" device has not been enabled in any tested distribution. However, the wireless LAN capability is functional.
- <sup>11</sup> Red Hat introduced a regression in RHEL 7.3 in which the Touchpad ceases to function. Adding the option "module\_blacklist=i2c\_hid" to the kernel boot line will work around this issue. Red Hat is working on an errata to fix this issue prior to the release of 7.4.
- <sup>12</sup> In order to install Ubuntu 16.04.1 on this graphics option, HP recommends that you change the graphics mode in BIOS to use the 'discrete' setting. You may also need to add 'nomodeset' to the boot line during installation.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Fury G10 Workstation

No certifications pending or planned  
 HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.8 or later (x86_64)	RHEL 9.2 or later (x86_64)	Ubuntu 22.04.3 (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Laptop, System Board, Power Supply, etc.	•	•	•
HP Localization Kit	1	1	1
<b>All Supported Processors</b>			
All Supported Intel 13th generation Core i5, i7 and i9 processors (Raptor Lake)	•	•	•
<b>System RAM</b>			
Minimum (GB)	8 GB	8 GB	8 GB
Maximum (GB)	128 GB DDR5-4800 ECC/non-ECC SODIMM	128 GB DDR5-4800 ECC/non-ECC SODIMM	128 GB DDR5-4800 ECC/non-ECC SODIMM
<b>Graphics Card (Video Card)</b>			
Intel® UHD Graphics	•	•	•
NVIDIA RTX™ A1000 6GB Laptop GPU (6 GB DDR5 GDDR6 dedicated)	•	•	•
NVIDIA RTX™ 2000 Ada Generation Laptop GPU (8 GB DDR5 GDDR6 dedicated)	•	•	2
NVIDIA RTX™ 3500 Ada Generation Laptop GPU (12 GB DDR5 GDDR6 dedicated)	•	•	2
NVIDIA RTX™ 4000 Ada Generation Laptop GPU (12 GB DDR5 GDDR6 dedicated)	•	•	2
NVIDIA RTX™ 5000 Ada Generation Laptop GPU (16 GB DDR5 GDDR6 dedicated)	•	•	2
<b>Display - non-touch</b>			
16.0" diagonal, WUXGA (1920 x 1200), IPS, anti-glare, 1000 nits, 72% NTSC, HP Sure View Reflect integrated privacy screen	•	•	•
16.0" diagonal, WUXGA (1920 x 1200), IPS, narrow bezel, anti-glare, WLED+LBL, 400 nits, low power, 100% sRGB	•	•	•
16.0" diagonal, 4K WQUXGA (3840 x 2400), 120 Hz, IPS, UWVA, anti-glare, 500 nits, 100% DCI-P3, HP DreamColor1	•	•	•
15.6" diagonal FHD (1920x1080) Anti-Glare WLED UWVA, 45% NTSC, 250 nits eDP 1.2 w/o PSR bent Narrow Bezel	•	•	•
<b>Display - touch enabled</b>			
16.0" diagonal, 4K WQUXGA (3840 x 2400), OLED, LBL, multitouch-enabled, UWVA, BrightView, TS, Corning® Gorilla® Glass 5, 400 nits, 100% DCI-P3	•	•	•
16.0" diagonal, WUXGA (1920 x 1200), touch, IPS anti-glare, micro-edge, 400 nits, sRGB 100% eDP 1.4+PSR21	3	3	3
<b>Hard Disks</b>			
All Supported M.2 Solid State Drives	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•
<b>Onboard Components</b>			
Onboard Audio			•
Audio jack			•
Wired LAN - Intel i219LM Gigabit Ethernet (vPro and non-vPro configurations)	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Fury G10 Workstation (Continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.8 or later (x86_64)	RHEL 9.2 or later (x86_64)	Ubuntu 22.04.3 (x86_64)
Intel® AX211 Wi-Fi 6E+BT 5.2 M.2 160MHz CNVi World-Wide WLAN vPro			•
Intel® XMM™ 7560 LTE Advanced Pro1 Intel® 5G Solution 50002			
Intel® 5G Solution 50002			
5MP+IR Camera 13th Gen (88 deg FOV)	4	4	4
SuperSpeed USB Type-A 5Gbps signaling rate [USB 3.1 Gen 1 Type A] charging	•	•	•
"Thunderbolt™ 4 with USB4™ Type-C* 40Gbps signaling rate (USB Power Delivery, DisplayPort™ 1.4, HP Sleep and Charge)"	•	•	•
<b>Input/Output Devices</b>			
Clickpad/touchpad	•	•	•
Dedicated function keys	5	5	•
Finger print reader	•	•	•
NFC controller module			
TPM Module	6	6	6
Smart Card reader	•	•	•
Mini DisplayPort™ 1.4 with UMA and Discrete Graphics	7	7	
External HDMI port 2.0b	7	7	
<b>Dock options</b>			
HP Thunderbolt 280W G4 Dock	7	7	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> On this distribution, the graphics does not operate well in hybrid mode for installation. The recommendation is to use UMA mode for installation. After installation, enable hybrid mode and install the NVIDIA driver.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>4</sup> IR camera is not supported in Linux at this time

<sup>5</sup> Only the audio-related function keys work with this distribution

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>7</sup> These external display ports work if the NVIDIA closed source driver is installed. They do not function with the open source Nouveau driver.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Fury 16 G9 Workstation

Certified on Ubuntu 20.04

Ubuntu 22.04 certification in-progress

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.5 (x86_64)	Ubuntu 22.04 (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Laptop, System Board, Power Supply, etc.	.	.	.	.
HP Localization Kit	1	1	8	1
<b>All Supported Processors</b>				
All Supported Intel® 12th generation Core i5, i7, i9 and Xeon processors - Alder Lake	.	.	.	.
<b>System RAM</b>				
Minimum (GB)	8 GB	8 GB	8 GB	8 GB
Maximum (GB)	128 GB DDR5-4800 ECC & non-ECC	128 GB DDR5-4800 ECC & non-ECC	128 GB DDR5-4800 ECC & non-ECC	128 GB DDR5-4800 ECC & non-ECC
<b>Graphics Card (Video Card)</b>				
Intel® UHD integrated graphics	.	.	.	.
AMD Radeon™ Pro 6600M (8 GB of GDDR6 memory)	.	.	.	.
NVIDIA RTX™ A1000 (4 GB of GDDR6 memory)	2	2	2	2
NVIDIA RTX™ A2000 (8 GB of GDDR6 memory)	2	2	2	2
NVIDIA RTX™ A3000 (12 GB of GDDR6 memory)	2	2	2	2
NVIDIA RTX™ A4000 (16 GB of GDDR6 memory)	2	2	2	2
NVIDIA RTX™ A5500 (16 GB of GDDR6 memory)	2	2	2	2
<b>Display - internal panel</b>				
16.0" diagonal, WUXGA (1920 x 1200), IPS, anti-glare, 1000 nits, 72% NTSC, HP Sure View Reflect integrated privacy screen	.	.	.	.
16.0" diagonal, WUXGA (1920 x 1200), IPS, narrow bezel, anti-glare, WLED+LBL, 400 nits, low power, 100% sRGB	.	.	.	.
16.0" diagonal, 4K WQUXGA (3840 x 2400), 120 Hz, IPS, UWVA, anti-glare, 500 nits, 100% DCI-P3, HP DreamColor	.	.	.	.
15.6" diagonal FHD (1920x1080) Anti-Glare WLED UWVA, 45% NTSC, 250 nits eDP 1.2 w/o PSR bent Narrow Bezel	.	.	.	.
<b>Display - touch enabled</b>				
16.0" diagonal, 4K WQUXGA (3840 x 2400), OLED, LBL, multitouch-enabled, UWVA, BrightView, TS, Corning® Gorilla® Glass 5, 400 nits, 100% DCI-P31	3	3	3	3
<b>Hard Disks</b>				
All Supported M.2 Solid State Drives	.	.	.	.
VMD RAID	.	.	.	.
<b>Onboard Components</b>				
Wired LAN - Intel® i219LM Gigabit Ethernet (vPro and non-vPro configurations)	.	.	.	.
Onboard Audio speakers	.	.	.	.
Intel® Wi-Fi 6E AX211(2x2) and Bluetooth® 5.3 combo (vPro & non-vPro)	.	.	.	.
Wireless WAN - Intel® XMM™ 7560 LTE-Advanced CAT 16	4	4	4	4
Wireless WAN - Intel® 5G Solution 5000	4	4	4	4
5MP+IR Camera	5	5	5	5



Linux Hardware Matrix

# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.6 or later (x86_64)	RHEL 9.0 or later (x86_64)	Ubuntu 20.04.5 (x86_64)	Ubuntu 22.04 (x86_64)
<b>Input/Output Devices</b>				
Touchpad/clickpad	•	•		•
Dedicated function keys	6	•		•
NFC controller module				
TPM Module	7	7		7
Smart Card				
SD 7.0 Media Card Reader				•
External HDMI 2.1 port	•	•		•
External mini DisplayPort 1.4 port with UMA and Discrete graphics	•	•		•
Headphone/microphone	•	•		•
USB SuperSpeed Type-A 5Gbps signaling rate (charging) [USB 3.1 Gen 1 Type A charging/non-charging]	•	•		•
Thunderbolt™ 4 with USB4™ Type-C 40 Gbps signaling rate(USB Power Delivery, DisplayPort™ 1.4, HP Sleep and Charge)	•	•		•
<b>Dock options</b>				
HP Thunderbolt 280W G4 Dock				•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The NVIDIA® driver will not install properly at this time due to an issue related to the system BIOS. As a result, complete acceleration using the Nvidia driver is not possible until the issue is resolved. Please operate in generic hybrid mode using the nouveau driver. Check hp.com/support for updates.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>4</sup> There is no current Linux driver which supports this WWAN device.

<sup>5</sup> IR cameras are not well supported by Linux at this time.

<sup>6</sup> The airplane mode key is not functional.

<sup>7</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>8</sup> System must be installed with the certified OEM <sup>20,04</sup> image. The public <sup>20,04,5</sup> image crashes at this time. Canonical is working to resolve.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Fury 15 G8 Workstation

## Ubuntu 20.04 certification complete

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system. HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.5 or later (x86_64)	Ubuntu 18.04.6 (x86_64)	Ubuntu 20.04.4 (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Laptop, System Board, Power Supply, etc.	•	•	•
HP Localization Kit	1	1	1
<b>All Supported Processors</b>			
All Supported Intel® 11th generation Core i5, i7, i9 and Xeon® processors - Tiger Lake	•	•	•
<b>System RAM</b>			
Minimum (GB)	4 GB	4 GB	4 GB
Maximum (GB)	64 GB ECC 128 GB non-ECC	64 GB ECC 128 GB non-ECC	64 GB ECC 128 GB non-ECC
<b>Graphics Card (Video Card)</b>			
Intel® UHD integrated graphics	•	•	•
AMD Radeon™ PRO W6600M (8 GB of GDDR6 memory)	•	•	•
NVIDIA® Quadro® T1200 (4 GB of GDDR6 memory)	2	2	2
NVIDIA® Quadro® A2000 (4 GB of GDDR6 memory)	2	2	2
NVIDIA® Quadro® RTX A3000 (6 GB of GDDR6 memory)	2	2	2
NVIDIA® Quadro® RTX A4000 (8 GB of GDDR6 memory)	2	2	2
NVIDIA® Quadro® RTX A5000 (16 GB of GDDR6 memory)	2	2	2
<b>Display - internal panel</b>			
15.6" diagonal FHD (1920 x 1080) IPS eDP1.2 anti-glare WLED-backlit and ambient light sensor 250 nits 45% NTSC	•	•	•
15.6" diagonal FHD (1920 x 1080) IPS eDP1.3 + PSR anti-glare WLED-backlit and ambient light sensor 400 nits 72% NTSC	•	•	•
15.6" diagonal FHD (1920 x 1080) IPS eDP1.3 + PSR anti-glare WLED-backlit and ambient light sensor 1000 nits 72% NTSC Next Gen HP SureView Reflect	•	•	•
Next Gen HP DreamColor display 15.6" diagonal UHD (3840 x 2160) IPS 120Hz eDP1.4 + PSR2 anti-glare BV LED-backlit and ambient light sensor 600 nits 100% DCI-P3	•	•	•
15.6" diagonal UHD (3840 x 2160) IPS eDP1.4 + PSR2 WLED-backlit touch screen with Corning® Gorilla® Glass 5 and ambient light sensor 600 nits 100% DCI-P3 1	3	3	3
<b>VR options (sold separately)</b>			
HP Reverb headset			
HP Reverb G2 headset			
<b>Hard Disks</b>			
All supported AHCI SATA Drives	•	•	•
All Supported M.2 Solid State Drives	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•
VMD RAID			



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Fury 15 G8 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.5 or later (x86_64)	Ubuntu 18.04.6 (x86_64)	Ubuntu 20.04.4 (x86_64)
<b>Onboard Components</b>			
Wired LAN - Intel® i219LM Gigabit Ethernet (vPro and non-vPro configurations)	•		•
Onboard Audio		4	•
Intel® Wi-Fi 6 AX201 (2x2) and Bluetooth® 5 combo (vPro & non-vPro)	•	•	•
Wireless WAN - Intel® XMM™ 7360 LTE-Advanced CAT 9	5	5	5
720p HD webcam		•	•
720p HD webcam with IR	6	6	6
<b>Input/Output Devices</b>			
Touchpad/joystick	7	7	•
Dedicated function keys	•	8	•
NFC controller module			
TPM Module	9	9	9
Smart Card	•	•	•
SD 7.0 Media Card Reader			
External HDMI 2.0b/2.1 port	•		•
External mini DisplayPort 1.4 port	•		•
Headphone/microphone		•	•
USB SuperSpeed Type-A 5Gbps signaling rate (charging) [USB 3.1 Gen 1 Type A charging/non-charging]	•	•	•
USB Type-C™ (Thunderbolt™ 4, pass through support DisplayPort™ 1.4, USB 4, with BC 1.2)	•	•	•
<b>Dock options</b>			
ZBook dock with Thunderbolt™ 3		10	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The NVIDIA® driver will not install properly at this time due to an issue likely related to the system BIOS. As a result, complete acceleration using the NVIDIA® driver is not possible until the issue is resolved. Please operate in generic hybrid mode using the nouveau driver. Check hp.com/support for updates.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>4</sup> Audio playback/output is functional, audio recording via the built-in mic is not functional.

<sup>5</sup> There is no current Linux driver which enables this WWAN device.

<sup>6</sup> IR cameras are not supported in Linux at this time.

<sup>7</sup> The clickpad nor its virtual buttons are not functional with this distribution release. Addition of a wired or wireless mouse will be required to add a functioning pointer device for this distribution.

<sup>8</sup> The display brightness keys (f3/f4) and the airplane mode key (f11) are not functional.

<sup>9</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>10</sup> Dock USB ports & audio jack are functional. The network port, the external DP and VGA connections are not functional.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Fury 17 G8 Workstation

### Ubuntu 20.04 certification complete

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system. HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.5 or later (x86_64)	Ubuntu 18.04.6 (x86_64)	Ubuntu 20.04.4 (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Laptop, System Board, Power Supply, etc.	•	•	•
HP Localization Kit	1	1	1
<b>All Supported Processors</b>			
All Supported Intel® 11th generation Core i5, i7, i9 and Xeon® processors - Tiger Lake	•	•	•
<b>System RAM</b>			
Minimum (GB)	4 GB	4 GB	4 GB
Maximum (GB)	64 GB ECC 128 GB non-ECC	64 GB ECC 128 GB non-ECC	64 GB ECC 128 GB non-ECC
<b>Graphics Card (Video Card)</b>			
Intel® UHD integrated graphics	•	•	•
AMD Radeon™ PRO W6600M (8 GB of GDDR6 memory)	•	•	•
NVIDIA® Quadro® T1200 (4 GB of GDDR6 memory)	2	2	2
NVIDIA® Quadro® A2000 (4 GB of GDDR6 memory)	2	2	2
NVIDIA® Quadro® RTX A3000 (6 GB of GDDR6 memory)	2	2	2
NVIDIA® Quadro® RTX A4000 (8 GB of GDDR6 memory)	2	2	2
NVIDIA® Quadro® RTX A5000 (16 GB of GDDR6 memory)	2	2	2
<b>Display - internal panel</b>			
17.3" diagonal FHD (1920 x 1080) eDP anti-glare WLED-backlit and ambient light sensor 300 nits 72% NTSC	•	•	•
17.3" diagonal UHD (3840 x 2160) IPS eDP1.4 + PSR2 anti-glare WLED-backlit and ambient light sensor 550 nits 100% DCI-P3	•	•	•
17.3" diagonal UHD (3840 x 2160) IPS HDR 400 eDP1.4 + PSR2 anti-glare WLED-backlit and ambient light sensor 550 nits 100% DCI-P3 Next Gen HP DreamColor display	•	•	•
17.3" diagonal UHD (3840 x 2160) IPS HDR 400 eDP1.4 + PSR2 WLED-backlit touch screen with Corning® Gorilla® Glass 5 and ambient light sensor 550 nits 100% DCI-P3	3	3	3
<b>VR options (sold separately)</b>			
HP Reverb headset			
HP Reverb G2 headset			
<b>Hard Disks</b>			
All supported 2.5" AHCI SATA Drives	•	•	•
All Supported M.2 Solid State Drives	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•
VMD RAID			



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Fury 17 G8 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.5 or later (x86_64)	Ubuntu 18.04.6 (x86_64)	Ubuntu 20.04.4 (x86_64)
<b>Onboard Components</b>			
Wired LAN - Intel® i219LM Gigabit Ethernet (vPro and non-vPro configurations)	•		•
Onboard Audio		4	•
Intel® Wi-Fi 6 AX201 (2x2) and Bluetooth® 5 combo (vPro & non-vPro)	•	•	•
Wireless WAN - Intel® XMM™ 7360 LTE-Advanced CAT 9	5	5	5
720p HD webcam		•	•
720p HD webcam with IR	6	6	6
<b>Input/Output Devices</b>			
Touchpad/joystick	7	7	•
Dedicated function keys	•	8	•
NFC controller module			
TPM Module	9	9	9
Smart Card	•	•	•
SD 7.0 Media Card Reader			
External HDMI 2.0b/2.1 port	•		•
External mini DisplayPort 1.4 port	•		•
Headphone/microphone	•	•	•
USB SuperSpeed Type-A 5Gbps signaling rate (charging) [USB 3.1 Gen 1 Type A charging/non-charging]	•	•	•
USB Type-C™ (Thunderbolt™ 4, pass through support DisplayPort™ 1.4, USB 4, with BC 1.2)	•	•	•
<b>Dock options</b>			
ZBook dock with Thunderbolt™ 3		10	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> The NVIDIA® driver will not install properly at this time due to an issue related to the system BIOS. As a result, complete acceleration using the NVIDIA® driver is not possible until the issue is resolved. Please operate in generic hybrid mode using the nouveau driver. Check hp.com/support for updates.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>4</sup> Audio playback/output is functional, audio recording via the built-in mic is not functional.

<sup>5</sup> There is no current Linux driver which enables this WWAN device.

<sup>6</sup> IR cameras are not supported in Linux at this time.

<sup>7</sup> The clickpad nor its virtual buttons are not functional with this distribution release. Addition of a wired or wireless mouse will be required to add a functioning pointer device for this distribution.

<sup>8</sup> The display brightness keys (f<sup>3</sup>/f<sup>4</sup>) and the airplane mode key (f<sup>1</sup>) are not functional.

<sup>9</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>10</sup> Dock ports & audio jack are functional. The external DP and VGA video connections are not functional.

 


Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Fury 15 G7 Workstation

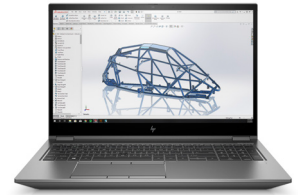

### Certified on Ubuntu 20.04

Enterprise-class Linux releases older than those listed do not enable the Intel® Comet Lake architecture used in this system. HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 (x86_64)	Ubuntu 20.04 (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•
<b>All Supported Processors</b>			
All Supported Intel® 10th generation Core™ i5, i7, i9 and Xeon® processors	•	•	•
<b>Graphics Card (Video Card)</b>			
Intel® UHD integrated graphics	•	•	•
AMD Radeon™ RX 5500M (4 GB of GDDR6 memory)			
AMD Radeon™ Pro W5500M (4 GB of GDDR6 memory)			
NVIDIA® Quadro® T1000 w/Max-Q design (4 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® T2000 w/Max-Q design (4 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® RTX 3000 (6 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® RTX 4000 w/Max-Q Design (8 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® RTX 5000 w/Max-Q Design (16 GB of GDDR6 memory)	1	2	2
<b>System RAM</b>			
Minimum (GB)	4 GB	4 GB	4 GB
Maximum (GB)	64 GB ECC 128 GB non-ECC	64 GB ECC 128 GB non-ECC	64 GB ECC 128 GB non-ECC
<b>Display-internal panel</b>			
15.6" diagonal FHD (1920 x 1080) IPS eDP1.2 anti-glare WLED-backlit and ambient light sensor 250 nits 45% CG	•	•	•
15.6" diagonal FHD (1920 x 1080) IPS eDP1.3 + PSR anti-glare WLED-backlit and ambient light sensor 400 nits 72% CG	•	•	•
15.6" diagonal FHD (1920 x 1080) IPS eDP1.3 + PSR anti-glare WLED-backlit and ambient light sensor 1000 nits 72% CG Next Gen HP SureView Reflect	•	•	•
15.6" diagonal UHD (3840 x 2160) IPS HDR 400 eDP1.4 + PSR2 anti-glare BV LED-backlit and ambient light sensor 600 nits 100% DCI-P3 Next Gen HP Dream Color display	•	•	•
15.6" diagonal UHD (3840 x 2160) IPS HDR 400 eDP1.4 + PSR2 WLED-backlit touch screen with Corning® Gorilla® Glass 5 and ambient light sensor 600 nits 100% DCI-P3	3	3	3
<b>Hard Disks</b>			
All supported 2.5" AHCI SATA Drives	•	•	•
All Supported M.2 Solid State Drives	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Fury 15 G7 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 (x86_64)	Ubuntu 20.04 (x86_64)
<b>Onboard Components</b>			
Wired LAN - Intel® i219LM Gigabit Ethernet (vPro® and non-vPro® configurations)	•	•	•
Onboard Audio (Conexant codec)	4	4	4
Onboard SATA RAID	•	•	•
Intel® Wi-Fi 6 AX201(2x2) and Bluetooth® 5 combo (vPro® & non-vPro®)	•	•	•
Wireless WAN - Intel® XMM™ 7360 LTE Advanced CAT 9			
720p HD webcam	•	•	•
720p HD webcam with IR	5	5	5
USB 3.1 gen 2 / Thunderbolt™ 3 ports	•	•	•
USB 3.1 gen 1 ports	•	•	•
Function hot key functionality	•	•	•
<b>Input/Output Devices</b>			
Touchpad + joystick	•	•	•
Fingerprint sensor			
NFC controller module			
TPM Module	6	6	6
Smart Card	•	•	•
SD 4.0 Media Card Reader	•	•	•
External HDMI 2.0b port	•	•	•
External mini DisplayPort 1.4 port	•	•	•
<b>Dock options</b>			
ZBook dock with Thunderbolt™ 3	•	•	•

<sup>1</sup> HP recommends use of NVIDIA® driver 450.55 (or newer) on NVIDIA® graphics options.

<sup>2</sup> Canonical regularly releases an NVIDIA® driver that can be applied by the Ubuntu software update mechanism. HP recommends using this driver and update method on Ubuntu 18.04 and 20.04.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops.

<sup>4</sup> The left channel for audio output works, while the right channel does not at this time.

<sup>5</sup> IR camera not supported in Linux at this time.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module may require additional software from the distribution being used.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Fury 17 G7

### Certified on Ubuntu 20.04

Enterprise-class Linux releases older than those listed do not enable the Intel® Comet Lake architecture used in this system. HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 (x86_64)	Ubuntu 20.04 (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•
<b>All Supported Processors</b>			
All support Intel® 10th generation Core™ i5, i7, i9 and Xeon® processors	•	•	•
<b>Graphics Card (Video Card)</b>			
Intel® UHD integrated graphics	•	•	•
AMD Radeon™ RX 5500M (4 GB of GDDR6 memory)			
AMD Radeon™ Pro W5500M (4 GB of GDDR6 memory)			
NVIDIA® Quadro® T1000® w/Max-Q design (4 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® T2000 w/Max-Q design (4 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® RTX 3000 (6 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® RTX 4000 w/Max-Q Design (8 GB of GDDR6 memory)	1	2	2
NVIDIA® Quadro® RTX 5000 w/Max-Q Design (16 GB of GDDR6 memory)	1	2	2
<b>System RAM</b>			
Minimum (GB)	4 GB	4 GB	4 GB
Maximum (GB)	64 GB ECC 128 GB non-ECC	64 GB ECC 128 GB non-ECC	64 GB ECC 128 GB non-ECC
<b>Display-internal panel</b>			
17.3" diagonal FHD (1920 x 1080) IPS eDP anti-glare WLED-backlit and ambient light sensor 300 nits 72% CG	•	•	•
17.3" diagonal UHD (3840 x 2160) IPS eDP1.4 + PSR2 anti-glare WLED-backlit and ambient light sensor 550 nits 100% DCI-P3	•	•	•
17.3" diagonal UHD (3840 x 2160) IPS HDR 400 eDP1.4 + PSR2 anti-glare WLED-backlit and ambient light sensor 550 nits 100% DCI-P3 Next Gen HP Dream Color display	•	•	•
17.3" diagonal UHD (3840 x 2160) IPS HDR 400 eDP1.4 + PSR2 WLED-backlit touch screen with Corning® Gorilla® Glass 5 and ambient light sensor 550 nits 100% DCI-P3	3	3	3
<b>Hard Disks</b>			
All supported 2.5" AHCI SATA Drives	•	•	•
All Supported M.2 Solid State Drives	•	•	•
All Supported M.2 SATA SED Solid State Drives	•	•	•
<b>Onboard Components</b>			
Wired LAN - Intel® i219LM Gigabit Ethernet (vPro® and non-vPro® configurations)	•	•	•
Onboard Audio	4	4	4
Onboard SATA RAID	•	•	•
Intel® Wi-Fi 6 AX201(2x2) and Bluetooth® 5 combo (vPro® & non-vPro® )	•	•	•
Wireless WAN - Intel® XMM™ 7360 LTE Advanced CAT 9			



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook Fury 17 G7 (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 8.3 or later (x86_64)	Ubuntu 18.04.5 (x86_64)	Ubuntu 20.04 (x86_64)
720p HD webcam	•	•	•
720p HD webcam with IR	5	5	5
USB 3.1 gen 2 / Thunderbolt™ 3 ports	•	•	•
USB 3.1 gen 1 ports	•	•	•
Function hot key functionality	•	•	•
<b>Input/Output Devices</b>			
Touchpad/touchpad keys/joystick/	•	•	•
Fingerprint sensor			
NFC controller module			
TPM Module	6	6	6
Smart Card	•	•	•
SD 4.0 Media Card Reader	•	•	•
External HDMI 2.0b port	•	•	•
External mini DisplayPort 1.4 port	•	•	•
<b>Dock options</b>			
ZBook dock with Thunderbolt™ 3	•	•	•

<sup>1</sup> HP recommends use of NVIDIA® driver 450.55(or newer) on NVIDIA® graphics options.

<sup>2</sup> Canonical regularly releases an NVIDIA® driver that can be applied by the Ubuntu software update mechanism. HP recommends using this driver and update method on Ubuntu 18.04 and 20.04.

<sup>3</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops.

<sup>4</sup> The left channel for audio output works, while the right channel does not at this time.

<sup>5</sup> IR camera not supported in Linux at this time.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module may require additional software from the distribution being used.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 15 G6 Mobile Workstation



**Certified on RHEL 8.**

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.6 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.2 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>HP Workstation Base System</b>					
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•
HP Localization Kit	1	1	1	1	1
<b>All Supported Processors</b>					
All support Intel® 9th generation Core™ i5, i7, i9 and Xeon® processors	•	•	•	•	•
<b>Graphics Card (Video Card)</b>					
Intel® UHD integrated 630 graphics on Core™ i5/i7/i9 processors	•	•	•	•	•
Intel® UHD integrated P630 graphics on Xeon® processors	•	•	•	•	•
NVIDIA® Quadro® T1000 (4 GB GDDR5 Frame buffer)	2	2	2	2	2
NVIDIA® Quadro® T2000 (4 GB GDDR5 Frame buffer)	2	2	2	2	2
NVIDIA® Quadro® RTX 3000 (6 GB GDDR6 Frame buffer)	2	2	2	2	2
<b>System RAM</b>					
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum ECC SDRAM (GB)	64 GB	64 GB	64 GB	64 GB	64 GB
Maximum non-ECC SDRAM (GB)	128 GB	128 GB	128 GB	128 GB	128 GB
<b>Display - internal panel</b>					
HP SureView Integrated Privacy Display Gen 3 15.6" diagonal FHD eDP + PSR anti-glare WLED-backlit 1000 nits 72% sRGB (1920 x 1080)	10	10	10	10	10
HP Dream Color display 15.6" diagonal UHD anti-glare WLED-backlit 600 nits 100% DCI P3 (3840 x 2160)	•	•	•	•	•
15.6" diagonal UHD eDP+ PSR anti-glare WLED-backlit 400 nits 72% sRGB (3840 x 2160)	•	•	•	•	•
15.6" diagonal FHD eDP + PSR anti-glare WLED-backlit 400 nits 72% sRGB (1920 x 1080)	•	•	•	•	•
15.6" diagonal FHD eDP anti-glare WLED-backlit 250 nits 45% sRGB (1920 x 1080)	•	•	•	•	•
<b>Touch-enabled Display - internal panel</b>					
HP SureView Integrated Privacy Display Gen 3 15.6" diagonal FHD eDP + PSR anti-glare WLED-backlit touch screen with Corning® Gorilla® Glass 5 1000 nits 72% sRGB (1920 x 1080)	3, 10	3, 10	3, 10	3, 10	3, 10
15.6" diagonal UHD eDP + PSR anti-glare WLED-backlit touch screen with Corning® Gorilla® Glass 5 and ambient light sensor 400 nits 72% sRGB (3840 x 2160)	3	3	3	3	3
<b>Hard Disks</b>					
All Supported M.2 SSD's	•	•	•	•	•
All Supported SATA Disk Drives	•	•	•	•	•
All Supported Z Turbo NVMe PCIe SSD's	•	•	•	•	•
<b>Storage acceleration</b>					
16 GB PCIe® NVMe™ Intel® Optane™ Memory for storage acceleration	4	4	4	4	4



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 15 G6 Mobile Workstation (continued)

**Product Items/Features**  
(Blank box indicates the listed component is NOT functional w/ as-is OS)

	RHEL 7.6 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.2 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>Integrated Components</b>					
Wired LAN - Intel® i219LM Gigabit Ethernet (vPro® & non-vPro® versions)	•	•	•	•	•
Wireless LAN -Intel® Dual Band Wi-Fi 6 AX200 (2x2) and Bluetooth® 5 combo, vPro®	5	5	5	5	•
Wireless LAN -Intel® Dual Band Wi-Fi 6 AX200 (2x2) and Bluetooth® 5 combo, non-vPro®	5	5	5	5	•
Intel® XMM 7360 LTE-Advanced mobile broadband module					
NFC optional module					
Onboard Audio (Realtek codec)	11	11	11	11	•
Webcam	•	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1)	•	•	•	•	•
USB 3.0 Type A ports	•	•	•	•	•
USB 3.1 G2 Type-C™ ports (USB 3.1 Gen 2, PCIe Gen 3, DisplayPort 1.3, Thunderbolt™ 3)	•	•	•	•	•
TPM 2.0 Module	6	6	6	6	6
<b>Input/Output Devices</b>					
Trackpad + buttons	•	•	9	•	•
Smart Card reader	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•
External HDMI port	7	7	7	7	7
Fingerprint sensor	9	9	9	9	9
<b>Dock options</b>					
HP ZBook Dock with Thunderbolt™ 3 G2	8	8	8	8	8

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> HP recommends the following minimum revision of the NVIDIA® driver: 418.56 (or newer).

<sup>3</sup> Touch is only supported as equivalent to a single button pointer device. Any multi-touch/gesture capability supported by Linux desktops must be programmed by the user within the desktop environment.

<sup>4</sup> Intel® Optane™ cache memory modules are not supported by Linux at this time.

<sup>5</sup> The Ax200 wireless solution is not yet supported by Linux distributions. The Bluetooth® controller should be functional.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module may require additional software from the distribution.

<sup>7</sup> With NVIDIA®-based configurations, it is recommended to use the NVIDIA® closed-source driver when using externally connected displays.

<sup>8</sup> The speaker and volume controls in the audio module are functional, but the telephony controls are not.

<sup>9</sup> The fingerprint sensor device is recognized/enumerated by the kernel. However, all of the setup and configuration to use the sensor for authentication must be completed by the user. FYI: The required software to do this is not typically installed by enterprise distributions.

<sup>10</sup> Basic Control of SureView capabilities works under Linux with select function keys. There is no on-screen control of SureView with Linux.

<sup>11</sup> Audio output via speakers function. Audio input via built-in microphone is currently not functional due to a missing driver. Please check with your distro vendor for the availability of the snd-sof-pci driver in ALSA.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 17 G6 Workstation

Certified on RHEL 8.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.6 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.2 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
<b>HP Workstation Base System</b>					
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•	•
HP Localization Kit	1	1	1	1	1
<b>All Supported Processors</b>					
All support Intel® 9th generation Core™ i5, i7, i9 and Xeon® processors	•	•	•	•	•
<b>Graphics Card (Video Card)</b>					
Intel® UHD integrated 630 graphics on Core™ i5/i7/i9 processors	•	•	•	•	•
Intel® UHD integrated P630 graphics on Xeon® processors	•	•	•	•	•
NVIDIA® Quadro® T1000 (4 GB GDDR5 Frame buffer)	2	2	2	2	2
NVIDIA® Quadro® T2000 (4 GB GDDR5 Frame buffer)	2	2	2	2	2
NVIDIA® Quadro® RTX 3000 (6 GB GDDR6 Frame buffer)	2	2	2	2	2
NVIDIA® Quadro® RTX 4000 (8 GB GDDR6 Frame buffer)	2	2	2	2	2
NVIDIA® Quadro® RTX 5000 (16 GB GDDR6 Frame buffer)	2	2	2	2	2
<b>System RAM</b>					
Minimum (GB)	4 GB	4 GB	4 GB	4 GB	4 GB
Maximum ECC SDRAM (GB)	64 GB	64 GB	64 GB	64 GB	64 GB
Maximum non-ECC SDRAM (GB)	128 GB	128 GB	128 GB	128 GB	128 GB
<b>Display-internal panel</b>					
HP DreamColor display 17.3" diagonal UHD anti-glare WLED-backlit 400 nits, 100% Adobe RGB (3840 X 2160)	•	•	•	•	•
17.3" diagonal FHD eDP anti-glare WLED-backlit 300 nits, 72% sRGB (1920 x 1080) with Ambient Light Sensor	•	•	•	•	•
<b>Touch-enabled Display-internal panel</b>					
17.3" diagonal UHD eDP + PSR anti-glare WLED-backlit Corning® Gorilla® Glass 5 touch, 400 nits, 95% sRGB with Ambient Light Sensor (3840 x 2160)	3	3	3	3	3
<b>Hard Disks</b>					
All Supported M.2 SSD's	•	•	•	•	•
All Supported SATA Disk Drives	•	•	•	•	•
All Supported Z Turbo NVMe PCIe SSD's	•	•	•	•	•
<b>Storage acceleration</b>					
16 GB PCIe® NVMe™ Intel® Optane™ Memory for storage acceleration	4	4	4	4	4
<b>Integrated Components</b>					
Wired LAN - Intel® i219LM Gigabit Ethernet (vPro® & non-vPro® versions)	•	•	•	•	•
Wireless LAN -Intel® Dual Band Wi-Fi 6 AX200 (2x2) and Bluetooth® 5 combo, vPro®	5	5	5	5	•
Wireless LAN -Intel® Dual Band Wi-Fi 6 AX200 (2x2) and Bluetooth® 5 combo, non-vPro®	5	5	5	5	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 17 G6 Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.6 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.5 or later (x86_64)	Ubuntu 18.04.2 or later (x86_64)	Ubuntu 20.04 or later (x86_64)
Intel® XMM 7360 LTE-Advanced mobile broadband module					
NFC optional module					
Onboard Audio (Realtek codec)	11	11	11	11	•
1080p FHD webcam with IR camera	•	•	•	•	•
720p HD webcam	•	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1)	•	•	•	•	•
USB 3.0 Type A ports	•	•	•	•	•
USB 3.1 G2 Type-C™ ports (USB 3.1 Gen 2, PCIe Gen 3, DisplayPort 1.3, Thunderbolt™ 3)	•	•	•	•	•
TPM 2.0 Module	6	6	6	6	6
<b>Input/Output Devices</b>					
Trackpad + buttons	•	•	9	•	•
Smart Card reader	•	•	•	•	•
HP Media Card Reader	•	•	•	•	•
External HDMI port	7	7	7	7	7
Fingerprint sensor	10	10	10	10	10
<b>Dock options</b>					
HP ZBook Dock with Thunderbolt™ 3 G2	8	8	8	8	8

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> HP recommends the following minimum revision of the NVIDIA® driver: 418.56 (or newer).

<sup>3</sup> Touch is only supported as equivalent to a single button pointer device. Any multi-touch/gesture capability supported by Linux desktops must be programmed by the user within the desktop environment.

<sup>4</sup> Intel® Optane™ cache memory modules are not supported by Linux at this time.

<sup>5</sup> The Ax200 wireless solution is not yet supported by Linux distributions. The Bluetooth® controller should be functional.

<sup>6</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module may require additional software from the distribution.

<sup>7</sup> With NVIDIA®-based configurations, it is recommended to use the NVIDIA® closed-source driver when using externally connected displays.

<sup>8</sup> The speaker and volume controls in the audio module are functional, but the telephony controls are not.

<sup>9</sup> The trackpad is not functional with 16.04.x so it is necessary to use an external mouse/pointer device until the system can complete updates from Canonical repositories post-installation.

<sup>10</sup> The fingerprint sensor device is recognized/enumerated by the kernel. However, all of the setup and configuration to use the sensor for authenticate must be done by the user. FYI: The required software is not typically installed by enterprise distributions.

<sup>11</sup> Audio output via speakers function. Audio input via built-in microphone is currently not functional due to a missing driver. Please check with your distro vendor for the availability of the snd-sof-pci driver in ALSA.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 15 G5 Mobile Workstation

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.  
 HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.4 or later (x86_64)	Ubuntu 18.04 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
All support Intel® 8th generation Core™ i7, i5 and Xeon® processors	•	•	•	•
<b>Graphics Card (Video Card)</b>				
Intel® UHD integrated 630 graphics on Core™ i5/i7 processors	•	•	•	•
Intel® UHD integrated P630 graphics on Xeon® processors	•	•	•	•
AMD Radeon™ Pro WX 4150 (4 GB Frame buffer)	2, 4, 5	2, 5	2, 4, 5	2, 4, 5
NVIDIA® Quadro® P1000 (4 GB Frame buffer)	3, 5	3, 5	3, 5	3, 5
NVIDIA® Quadro® P2000 (4 GB Frame buffer)	3, 5	3, 5	3, 5	3, 5
<b>System RAM</b>				
Minimum (GB)	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB	64 GB	64 GB	64 GB
<b>Display - internal panel</b>				
15.6" diagonal FHD IPS eDP anti-glare, 220 nits (1920x1080)	•	•	•	•
15.6" diagonal FHD IPS eDP + PSR anti-glare, 400 nits with ambient light sensor (1920x1080)	•	•	•	•
15.6" diagonal HP Sure View FHD IPS eDP+PSR Touch-screen with Corning® Gorilla® Glass 4 650 nits (1920x1080)	•	•	•	•
15.6" diagonal UHD IPS eDP + PSR anti-glare, 400 nits with ambient light sensor (3840x2160)	•	•	•	•
15.6" diagonal UHD IPS eDP + PSR Touch-screen with Corning® Gorilla® Glass 4 400 nits with ambient light sensor (3840x2160)	•	•	•	•
15.6" diagonal HP DreamColor Technology, UHD IPS eDP + PSR anti-glare, 600 nits, 100% Adobe RGB with 10-bit color (3840x2160)	•	•	•	•
<b>Hard Disks</b>				
All Supported M.2 SSD's	•	•	•	•
Intel® Optane™ Cache memory	9	9	9	9
All Supported SATA Disk Drives	•	•	•	•
All Supported Z Turbo NVMe PCIe SSD's	•	•	•	•
HP 3D DriveGuard	9	9	9	9
<b>Integrated Components</b>				
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•
Wireless LAN - Intel® dual-band wireless-AC 9560 802.11ac (2x2) Wi-Fi and Bluetooth® 5.0 combo, vPro®	•	•	•	•
Wireless LAN - Intel® dual-band wireless-AC 9560 802.11ac (2x2) Wi-Fi and Bluetooth® 5.0 combo, non-vPro®	•	•	•	•
Intel® XMM 7360 LTE-Advanced mobile broadband module				
Intel® It4132 LTE/HSPA+ 4G mobile broadband module				
NFC Mirage WNC XRAV-1				



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 15 G5 Mobile Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.4 or later (x86_64)	Ubuntu 18.04 or later (x86_64)
Onboard Audio (Conexant codec)	•	•	•	•
HP webcam	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1)	•	•	•	•
USB 3.0 Type A ports	•	•	•	•
USB 3.1 G2 Type-C™ ports (USB 3.1 Gen 2, PCIe Gen 3, DisplayPort 1.3, Thunderbolt™ 3)	•	•	•	•
USB 2.0/3/1 G1 internal ports	•	•	•	•
TPM 2.0 Module	7	7	7	7
<b>Input/Output Devices</b>				
Trackpad + buttons	•	•	8	8
Smart Card reader	•	•	•	•
HP Media Card Reader	•	•	•	•
External HDMI port	10	10	10	10
<b>Removable CD/DVD Media</b>				
HP DVD RW Supermulti Drive	•	•	•	•
<b>Dock options</b>				
HP ZBook Dock with Thunderbolt™ 3	•	•	•	•
HP ZBook Dock with Thunderbolt™ 3 G2 with optional audio module	11	11	11	11
HP USB Type-C™ Elite dock	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> AMD Radeon™ Pro graphics cards are now supported in Linux by the amdgpu open source driver. OS streams are supported at specific release version levels, starting with these: RHEL 7.5, Ubuntu 16.04.4 and 18.04.

<sup>3</sup> HP recommends the following minimum revision of the NVIDIA® driver: 390.67 (or newer).

<sup>4</sup> At the time this document was published, AMD had not yet released a pro version of their driver for these enterprise Linux distributions. Please check at a later time or check the availability of a released driver at the [hp.com/support/workstations](http://hp.com/support/workstations) support website.

<sup>5</sup> For installation, HP recommends setting the BIOS gfx mode to 'discrete'. It may be necessary to boot with the 'nomodeset' option for installation to work around issues with the inbox gfx driver.

<sup>6</sup> The current supported Linux distros have the correct iwlmwifi driver but may lack the latest Intel® 9560 firmware to properly operate the Wi-Fi solution. Check with your distribution vendor for updates.

<sup>7</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module may require additional software from the distribution.

<sup>8</sup> On Ubuntu 16.04.4 the trackpad has issues initially after installation that require manual work-arounds in the `/etc/X11/xorg.conf` file. See HP support website for documentation on how to accomplish this. Until this issue is worked around, the desktop user experience is very poor, as the cursor randomly jumps into "follow" mode.

<sup>9</sup> This option is not supported on Linux distributions.

<sup>10</sup> With NVIDIA®-based configurations, it is recommended to use the NVIDIA® closed source driver when using externally connected displays. It is not currently recommended to use externally connected monitors with AMD graphics options.

<sup>11</sup> The speaker and volume controls in the audio module are functional, but the telephony controls are not.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 17 G5 Mobile Workstation

Certified on Ubuntu 18.04

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



	RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.4 or later (x86_64)	Ubuntu 18.04 or later (x86_64)
<b>HP Workstation Base System</b>				
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•	•
HP Localization Kit	1	1	1	1
<b>All Supported Processors</b>				
All support Intel® 8th generation Core™ i5, i7 and Xeon® processors	•	•	•	•
<b>Graphics Card (Video Card)</b>				
Intel® UHD integrated 630 graphics on Core™ i5/i7 processors	•	•	•	•
Intel® UHD integrated P630 graphics on Core™ i5/i7 and Xeon® processor	•	•	•	•
AMD Radeon™ Pro WX 4170 (4 GB Frame buffer)	2, 4, 5	2, 5	2, 4, 5	2, 4, 5
NVIDIA® Quadro® P1000 (4 GB Frame buffer)	3, 5	3, 5	3, 5	3, 5
NVIDIA® Quadro® P2000 (4 GB Frame buffer)	3, 5	3, 5	3, 5	3, 5
NVIDIA® Quadro® P3200 (6 GB Frame buffer)	3, 5	3, 5	3, 5	3, 5
NVIDIA® Quadro® P4200 (8 GB Frame buffer)	3, 5	3, 5	3, 5	3, 5
NVIDIA® Quadro® P5200 (16 GB Frame buffer)	3, 5	3, 5	3, 5	3, 5
<b>System RAM</b>				
Minimum (GB)	4 GB	4 GB	4 GB	4 GB
Maximum (GB)	64 GB	64 GB	64 GB	64 GB
<b>Display - internal panel</b>				
17.3" diagonal HD+ IPS eDP anti-glare, 220 nits (1600x900)	•	•	•	•
17.3" diagonal FHD IPS eDP anti-glare, 300 nits with ambient light sensor (1920x1080)	•	•	•	•
17.3" diagonal UHD IPS + PSR Touch-screen, 400 nits w/ambient light sensor (3840x2160)	•	•	•	•
17.3" diagonal HP DreamColor Technology, UHD IPS eDP + PSR, anti-glare, 400 nits, 100% Adobe RGB with 10 bit color (3840x2160)	•	•	•	•
<b>Hard Disks</b>				
All Supported M.2 SSD's	•	•	•	•
Intel® Optane™ Cache memory	9	9	9	9
All Supported SATA Disk Drives	•	•	•	•
All Supported Z Turbo NVMe PCIe SSD's	•	•	•	•
HP 3D DriveGuard	9	9	9	9
<b>Integrated Components</b>				
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•	•
Wireless LAN - Intel® dual-band wireless-AC 9560 802.11ac (2x2) Wi-Fi and Bluetooth® 5.0 combo, vPro®	•	•	6	6
Wireless LAN - Intel® dual-band wireless-AC 9560 802.11ac (2x2) Wi-Fi and Bluetooth® 5.0 combo, non- vPro®	•	•	6	6
Intel® XMM 7360 LTE-Advanced mobile broadband module				
Intel® It4132 LTE/HSPA+ 4G mobile broadband module				



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 17 G5 Mobile Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.5 or later (x86_64)	RHEL 8.0 or later (x86_64)	Ubuntu 16.04.4 or later (x86_64)	Ubuntu 18.04 or later (x86_64)
NFC Mirage WNC XRAV-1				
Onboard Audio (Conexant codec)	•	•	•	•
HP webcam	•	•	•	•
Onboard Intel® integrated SATA RAID (0/1)	•	•	•	•
USB 3.0 Type A ports	•	•	•	•
USB 3.1 G2 Type C™ ports (USB 3.1 Gen 2, PCIe Gen 3, DisplayPort 1.3, Thunderbolt™ 3)	•	•	•	•
USB 2.0/3/1 G1 internal ports	•	•	•	•
TPM 2.0 Module	7	7	7	7
<b>Input/Output Devices</b>				
Trackpad + buttons	•	•	8	8
Smart Card reader	•	•	•	•
HP Media Card Reader	•	•	•	•
External HDMI port	10	10	10	10
<b>Removable CD/DVD Media</b>				
HP DVD RW Supermulti Drive	•	•	•	•
<b>Dock options</b>				
HP ZBook Dock with Thunderbolt™ 3	•	•	•	•
HP ZBook Dock with Thunderbolt™ 3 G2 with optional audio module	11	11	11	11
HP USB Type-C™ Elite dock	•	•	•	•

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> AMD Radeon™ Pro graphics cards are now supported in Linux by the amdgpu open source driver. OS streams are supported at specific release version levels, starting with these: RHEL 7.5, Ubuntu 16.04.4 and 18.04.

<sup>3</sup> HP recommends the following minimum revision of the NVIDIA® driver: 410.101 (or newer).

<sup>4</sup> At the time this document was published, AMD had not yet released a pro version of their driver for these enterprise Linux distributions. Please check at a later time or check the availability of a released driver at the [hp.com/support/workstations](http://hp.com/support/workstations) support website.

<sup>5</sup> For installation, HP recommends setting the BIOS gfx mode to 'discrete'. It may be necessary to boot with the 'nomodeset' option for installation to work around issues with the inbox gfx driver.

<sup>6</sup> The current supported Linux distros have the correct iwlmwifi driver, but may lack the latest Intel® 9560 firmware to properly operate the Wi-Fi solution. Check with your distribution vendor for updates.

<sup>7</sup> Support for the TPM or other security devices varies by OS distribution. Any use of the TPM module may require additional software from the distribution.

<sup>8</sup> On Ubuntu 16.04.4 the trackpad has issues initially after installation that require manual work-arounds in the `/etc/X11/xorg.conf` file. See HP support website for documentation on how to accomplish this. Until this issue is worked around, the desktop user experience is very poor, as the cursor randomly jumps into "follow" mode.

<sup>9</sup> This option is not supported on Linux distributions.

<sup>10</sup> With NVIDIA®-based configurations, it is recommended to use the NVIDIA® closed source driver when using externally connected displays. It is not currently recommended to use externally connected displays with AMD graphics options at this time.

<sup>11</sup> The speaker and volume controls in the audio module are functional, but the telephony controls are not.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 15 G4 Mobile Workstation

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.  
 HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.



Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.3 or later (x86_64)	Ubuntu 16.04.1 or later (x86_64)
<b>HP Workstation Base System</b>		
Base system includes: Chassis, System Board, Power Supply, etc.	•	•
HP Localization Kit	1	1
<b>All Supported Processors</b>		
All supported 7th generation Intel® Core™ i7, i5 and Xeon® processors	•	•
<b>System RAM</b>		
Minimum (GB)	4 GB	4 GB
Maximum (GB)	64 GB	64 GB
<b>Graphics Card (Video Card)</b>		
Intel® HD integrated graphics 630 on Core™ i7 processors	5	5
Intel® HD integrated graphics P630 on Xeon® processors	5	5
AMD WX4150 with 4 GB of graphics memory		
NVIDIA® Quadro® M1200 with 4 GB of graphics memory	6	6
NVIDIA® Quadro® M2200 with 4 GB of graphics memory	6	6
<b>Display - internal panel</b>		
15.6" diagonal LED-backlit FHD UWVA IPS eDP anti-glare + panel self refresh (PSR) (1920x1080)	•	•
15.6" diagonal LED backlit FHD SVA eDP anti-glare + panel self refresh (PSR) (1920x1080)	•	•
15.6" diagonal LED UHD UWVA IPS LED anti-glare DreamColor (3840x2160)	•	•
15.6" diagonal Touch LED-backlit FHD UWVA IPS (1920x1080)	7	7
<b>Hard Disks</b>		
All supported 2.5" AHCI SATA Drives	•	•
All Supported M.2 Solid State Drives	•	•
All Supported HP Z Turbo Drive NVMe PCIe-attached storage	•	•
All Supported M.2 AHCI SED Solid State Drives	8	8
<b>Onboard Components</b>		
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•
Onboard Audio (Conexant codec)	•	•
Onboard SATA RAID	2	2
Intel® dual-band wireless AC 8265 802.11 AC/a/b/g/n (2x2) Wi-Fi + Bluetooth® (vPro® * non-vPro®)	•	•
Mobile Broadband - HP It4120 Qualcomm Snapdragon X5 LTE mobile broadband		
Mobile Broadband - HP It4132, LTE/HSPA+ 4G w/GPS		
Mobile Broadband - HP s3210 HSPA+ Intel® Mobile Broadband and Module		
HP webcam	•	•
Thunderbolt™ 3 ports	3	3
USB 3.0 ports	•	•
<b>Input/Output Devices</b>		
Touchpad	•	•
TPM Module	4	4
Smart Card	•	•
HP Media Card Reader	•	•
External HDMI port	•	•
External VGA port	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 15 G4 Mobile Workstation (continued)

**Product Items/Features**  
(Blank box indicates the listed component is NOT functional w/ as-is OS)

**RHEL 7.3 or later (x86\_64)**

**Ubuntu 16.04.1 or later (x86\_64)**

### Dock Options

ZBook dock with Thunderbolt™ 3	9, 11	10, 11
HP USB Type-C™ Elite dock		

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Hardware RAID is not supported on SATA drives. Software RAID is available in most Linux OSes and can be used with SATA or PCIe storage devices.

<sup>3</sup> Newer Linux kernels may provide device functionality through the Thunderbolt™ ports. Such kernels are likely to be available in leading-edge distributions, but inclusion of the support with any Enterprise Linux distribution is at the distributor's discretion.

<sup>4</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>5</sup> The Intel® HD graphics works with the in-box frame-buffer drivers. Support for the "native" Intel® driver on v7 processors (Kabylake) is not available for most release streams as of this edition of the table.

<sup>6</sup> HP recommends use of NVIDIA® driver 375.66 (or newer) on NVIDIA® graphics options.

<sup>7</sup> As of this edition of the table, only basic touch capability was available in most Linux desktop managers and no desktops are optimized for a satisfactory touch experience.

<sup>8</sup> SED drives work with Linux. There is, however, no Linux support available for manipulating encryption settings via the Opal API.

<sup>9</sup> The Thunderbolt™ dock is compatible with RHEL 7 on this ZBook model, starting with RHEL 7.3.

<sup>10</sup> The Thunderbolt™ dock is compatible with Ubuntu 16.04, starting with 16.04.1. The one known limitation is that the audio headphone jack does not work.

<sup>11</sup> With NVIDIA®-based configurations, it is recommended to use the NVIDIA® closed source driver when using externally connected displays. It is not currently recommended to use the dock with AMD graphics options at this time.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 17 G4 Mobile Workstation



RHEL 7 certifications pending.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.3 or later (x86_64)	Ubuntu 16.04.1 or later (x86_64)
<b>HP Workstation Base System</b>		
Base system includes: Chassis, System Board, Power Supply, etc.	•	•
HP Localization Kit	1	1
<b>All Supported Processors</b>		
All supported 7th generation Intel® Core™ i7, i5 and Xeon® processors	•	•
<b>System RAM</b>		
Minimum (GB)	4 GB	4 GB
Maximum (GB)	64 GB	64 GB
<b>Graphics Card (Video Card)</b>		
Intel® HD integrated graphics 630 on Core™ i7 processors	5	5
Intel® HD integrated graphics P630 on Xeon® processors	5	5
AMD WX4170 with 4 GB of graphics memory		
NVIDIA® Quadro® M1200 with 4 GB of graphics memory	6	6, 11
NVIDIA® Quadro® M2200 with 4 GB of graphics memory	6	6, 11
NVIDIA® Quadro® P3000 with 6 GB of graphics memory	6	6, 11
NVIDIA® Quadro® P4000 with 8 GB of graphics memory	6	6, 11
NVIDIA® Quadro® P5000 with 16 GB of graphics memory	6	6, 11
<b>Display - internal panel</b>		
17.3" diagonal FHD UWVA IPS eDP anti-glare. LED backlit (1920x1080)	•	•
17.3" diagonal LED backlit HD+ SVA anti-glare (1600x900)	•	•
17.3" diagonal UHD UWVA IPS LED anti-glare DreamColor (3840x2160)	•	•
17.3" diagonal Touch LED-backlit FHD UWVA IPS (1920x1080)	7	7
<b>Hard Disks</b>		
All supported 2.5" AHCI SATA Drives	•	•
All Supported M.2 Solid State Drives	•	•
All Supported HP Z Turbo Drive NVMe PCIe-attached storage	•	•
All Supported M.2 SATA SED Solid State Drives	8	8
<b>Onboard Components</b>		
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•
Onboard Audio (Conexant codec)	•	•
Onboard SATA RAID	2	2
Intel® dual-band wireless AC 8265 802.11 AC/a/b/g/n (2x2) Wi-Fi + Bluetooth® (vPro® & non-vPro®)	•	•
Mobile Broadband - HP It4120 Qualcomm Snapdragon X5 LTE mobile broadband		
Mobile Broadband - HP It4132, LTE/HSPA+ 4G w/GPS		
Mobile Broadband - HP s3210 HSPA+ Intel® Mobile Broadband Module		
HP webcam	•	•
Thunderbolt™ 3 ports	3	3
USB 3.0 ports	•	•
<b>Input/Output Devices</b>		
Touchpad	•	•
TPM Module	4	4
Smart Card	•	•
HP Media Card Reader	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 17 G4 Mobile Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 7.3 or later (x86_64)	Ubuntu 16.04.1 or later (x86_64)
External HDMI port	•	•
External VGA port	•	•
<b>Dock Options</b>		
ZBook dock with Thunderbolt™ 3	9, 11	10, 11
HP USB Type-C™ Elite dock		

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Hardware RAID is not supported on SATA drives. Software RAID is available in most Linux OSes and can be used with SATA or PCIe storage devices.

<sup>3</sup> Newer Linux kernels may provide device functionality through the Thunderbolt™ ports. Such kernels are likely to be available in leading-edge distributions, but inclusion of the support with any Enterprise Linux distribution is at the distributor's discretion.

<sup>4</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>5</sup> The Intel® HD graphics works with the in-box frame-buffer drivers. Support for the "native" Intel® driver on v7 processors (Kaby lake) is not available for most release streams as of this edition of the table.

<sup>6</sup> HP recommends use of NVIDIA® driver 375.66 (or newer) on NVIDIA® graphics options.

<sup>7</sup> As of this edition of the table, only basic touch capability was available in most Linux desktop managers and no desktops are optimized for a satisfactory touch experience.

<sup>8</sup> SED drives work with Linux. There is, however, no Linux support available for manipulating encryption settings via the Opal API.

<sup>9</sup> The Thunderbolt™ dock is compatible with RHEL 7 on this ZBook model, starting with RHEL 7.3.

<sup>10</sup> The Thunderbolt™ dock is compatible with Ubuntu 16.04, starting with 16.04.1. The one known limitation is that the audio headphone jack does not work.

<sup>11</sup> With NVIDIA®-based configurations, it is recommended to use the NVIDIA® closed source driver when using externally connected displays. It is not currently recommended to use the dock with AMD graphics options at this time.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 15 G3 Mobile Workstation



RHEL 7 certifications pending. RHEL 6 certifications unlikely.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 6.8 or later (x86_64)	RHEL 7.2 or later (x86_64)	Ubuntu 16.04.1 or later (x86_64)
<b>HP Workstation Base System</b>			
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•
HP Localization Kit	1	1	1
<b>All Supported Processors</b>			
All Supported Processors (single-CPU configs)	•	•	•
Hyperthreading	•	•	•
<b>System RAM</b>			
Minimum (GB)	4 GB	4 GB	4 GB
Maximum (GB)	64 GB	64 GB	64 GB
<b>Graphics Card (Video Card)</b>			
Intel® HD integrated graphics 530	5	5	5
Intel® HD integrated graphics P530	5	5	5
Intel® HD integrated pro graphics P580 (available 1H16)	5	5	5
AMD W5170M with 2 GB of graphics memory	•	•	•
NVIDIA® Quadro® M1000M with 2 GB of graphics memory	6	6	6, 10
NVIDIA® Quadro® M2000M with 4 GB of graphics memory	6	6	6, 10
<b>Display - internal panel</b>			
15.6" diagonal LED-backlit FHD UWVA IPS eDP anti-glare + panel self refresh (PSR) (1920x1080)	•	•	•
15.6" diagonal LED backlit FHD SVA eDP anti-glare (1920x1080)	•	•	•
15.6" diagonal LED UHD UWVA IPS LED anti-glare DreamColor (3840x2160) (available in 1H16)	•	•	•
15.6" diagonal Touch LED-backlit FHD UWVA IPS (1920x1080) (available in 1H16)	7	7	7
<b>Hard Disks</b>			
All supported 2.5" AHCI SATA Drives	•	•	•
All Supported M.2 Solid State Drives	•	•	•
All Supported HP Z Turbo Drive NVMe PCIe-attached storage	•	•	•
All Supported M.2 AHCI SED Solid State Drives	13	13	13
<b>Onboard Components</b>			
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•
Onboard Audio (Conexant codec)	•	•	•
Onboard SATA RAID	2	2	2
Intel® dual-band wireless AC 8260 802.11 AC/a/b/g/n (2x2) Wi-Fi + Bluetooth® (vPro® & non-vPro®)	9	9	9
Wireless WAN - It4120 Qualcomm Snapdragon X5 LTE mobile broadband capability	•	•	•
Wireless WAN - hs3110 HSPA+ Intel® mobile broadband capability	•	•	•
HP webcam	•	•	•
Thunderbolt™ 3 ports	•	3	•
USB 3.0 ports	•	•	•



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 15 G3 Mobile Workstation (continued)

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 6.8 or later (x86_64)	RHEL 7.2 or later (x86_64)	Ubuntu 16.04.1 or later (x86_64)
<b>Input/Output Devices</b>			
Touchpad	•	•	•
TPM Module	4	4	4
Smart Card	•	•	•
HP Media Card Reader		•	•
External HDMI port	•	•	•
External VGA port	•	•	•
<b>Dock Options</b>			
ZBook dock with Thunderbolt™ 3		8, 12	11, 12
HP USB Type-C™ Elite dock			

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Hardware RAID is not supported on SATA drives. Software RAID is available in most Linux OSes and can be used with SATA or PCIe storage devices. Software RAID may not support RAID of the boot volume.

<sup>3</sup> Newer Linux kernels may provide device functionality through the Thunderbolt™ ports. Such kernels are likely to be available in leading-edge distributions, but inclusion of the support with any Enterprise Linux distribution is at the distributor's discretion.

<sup>4</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>5</sup> The Intel® HD graphics works with the in-box frame-buffer drivers. Support for the "native" Intel® driver on v5 processors (Skylake) is not available for most release streams as of this edition of the table.

<sup>6</sup> HP recommends use of NVIDIA® driver 361.28 (or newer) for configurations with NVIDIA® graphics.

<sup>7</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>8</sup> The Thunderbolt™ dock is compatible with RHEL 7 on this ZBook model, starting with RHEL 7.3.

<sup>9</sup> As of this edition, the Bluetooth® functionality of this "combo" device has not been enabled in any tested distribution. However, the wireless LAN capability is functional.

<sup>10</sup> In order to install Ubuntu 16.04.1 (or later versions) on this graphics option, HP recommends that you change the graphics mode in BIOS to use the 'discrete' setting. You may also need to add 'nomodeset' to the boot line during installation.

<sup>11</sup> The Thunderbolt™ dock is compatible with Ubuntu 16.04, starting with 16.04.1. The one known limitation is that the audio headphone jack does not work.

<sup>12</sup> With NVIDIA®-based configurations, it is recommended to use the NVIDIA® closed source driver when using externally connected displays. It is not currently recommended to use the dock with AMD graphics options at this time.

<sup>13</sup> SED drives work with Linux. There is, however, no Linux support available for manipulating encryption settings via the Opal API.



Linux Hardware Matrix

## Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 17 G3 Mobile Workstation



RHEL 7 certifications pending. RHEL 6 certifications unlikely.

As of this edition of this matrix, some Enterprise-class Linux releases enable the Intel® architecture used in this system.

HP considers enablement for the CPU, chipset, and the on-board LAN to be minimum requirements.

Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 6.8 or later	RHEL 7.2 or later (x86_64)	Ubuntu 16.04.1 or later
<b>HP Workstation Base System</b>			
Base system includes: Chassis, System Board, Power Supply, etc.	•	•	•
HP Localization Kit	1	1	1
<b>All Supported Processors</b>			
All Supported Processors (single-CPU configs)	•	•	•
Hyperthreading	•	•	•
<b>System RAM</b>			
Minimum (GB)	4 GB	4 GB	4 GB
Maximum (GB)	64 GB	64 GB	64 GB
<b>Graphics Card (Video Card)</b>			
Intel® HD integrated graphics 530	5	5	5
Intel® HD integrated graphics P530	5	5	5
Intel® HD integrated pro graphics P580 (available 1H16)	5	5	5
AMD W6150M with 4 GB of graphics memory	•	•	•
NVIDIA® Quadro® M1000M with 2 GB of graphics memory	6	6	6, 11
NVIDIA® Quadro® M2000M with 4 GB of graphics memory	6	6	6, 11
NVIDIA® Quadro® M3000M with 4 GB of graphics memory	6	6	6, 11
NVIDIA® Quadro® M4000M with 4 GB of graphics memory	6	6	6, 11
NVIDIA® Quadro® M5000M with 8 GB of graphics memory	6	6	6, 11
<b>Display - internal panel</b>			
17.3" diagonal FHD UWVA IPS eDP anti-glare. LED backlit (1920x1080)	•	•	•
17.3" diagonal LED backlit HD+ SVA eDP anti-glare (1600x900)	•	•	•
17.3" diagonal UHD UWVA IPS LED anti-glare DreamColor (3840x2160) (available in 1H16)	•	•	•
17.3" diagonal Touch LED-backlit FHD UWVA IPS (1920x1080) (available in 1H16)	7	7	7
<b>Hard Disks</b>			
All supported 2.5" AHCI SATA Drives	•	•	•
All Supported M.2 Solid State Drives	•	•	•
All Supported HP Z Turbo Drive NVMe PCIe-attached storage	•	•	•
All Supported M.2 SATA SED Solid State Drives	8	8	8
<b>Onboard Components</b>			
Wired LAN - Intel® i219LM Gigabit Ethernet	•	•	•
Onboard Audio (Conexant codec)	•	•	•
Onboard SATA RAID	2	2	2
Intel® dual-band wireless AC 8260 802.11 AC/a/b/g/n (2x2) Wi-Fi + Bluetooth® (vPro® & non-vPro®)	10	10	10
Wireless WAN - It4120 Qualcomm Snapdragon X5 LTE mobile broadband capability	•	•	•
Wireless WAN - hs3110 HSPA+ Intel® mobile broadband capability	•	•	•
HP webcam	•	•	•
Thunderbolt™ 3 ports	•	3	•
USB 3.0 ports	•	•	•
Product Items/Features (Blank box indicates the listed component is NOT functional w/ as-is OS)	RHEL 6.8 or later	RHEL 7.2 or later (x86_64)	Ubuntu 16.04.1 or later
<b>Input/Output Devices</b>			



Linux Hardware Matrix

# Contents & navigation

• Purpose of the Linux Hardware Matrix	1-2
• Desktop Workstations	3-64
• HP Entry Tower/Z1	3-6
• HP Z2 Mini Workstation	7-13
• HP Z2 SFF / Z240 SFF Workstation	14-23
• HP Z2 Tower / Z240 Tower / Z238 Microtower Workstation	24-37
• HP ZCentral 4R Workstation	40-41
• HP Z4 Workstation	42-49
• HP Z6 Workstation	50-59
• HP Z8 Fury Workstation	60-61
• HP Z8 Workstation	62-68
• Mobile Workstations	69-136
• HP ZBook Firefly/14u/15u Workstation	69-86
• HP ZBook Power/15v Workstation	87-96
• HP ZBook Studio/Create Workstation	97-108
• HP ZBook Fury/15/17 Mobile Workstation	109-136

# HP ZBook 17 G3 Mobile Workstation (continued)

Touchpad	•	•	•
TPM Module	4	4	4
Smart Card	•	•	•
HP Media Card Reader		•	•
External HDMI port	•	•	•
External VGA port	•	•	•
<b>Dock Options</b>			
ZBook dock with Thunderbolt™ 3		9, 13	12, 13
HP USB Type-C™ Elite dock			

<sup>1</sup> Typical Linux distributions support many possible localizations. If you're installing the OS yourself, you can make selections for language and keyboard layout during that process. For a pre-loaded Linux OS, similar choices can be made during the "firstboot" process. In some cases, extra font packages may be available. HP Workstations can be ordered with a variety of localization options that may vary by platform.

<sup>2</sup> Hardware RAID is not supported on SATA drives. Software RAID is available in most Linux OSes and can be used with SATA or PCIe storage devices. Software RAID may not support RAID of the boot volume.

<sup>3</sup> Newer Linux kernels may provide device functionality through the Thunderbolt™ ports. Such kernels are likely to be available in leading-edge distributions, but inclusion of the support with any Enterprise Linux distribution is at the distributor's discretion.

<sup>4</sup> Support for the TPM or other security devices varies by OS distribution.

<sup>5</sup> The Intel® HD graphics works with the in-box frame-buffer drivers. Support for the "native" Intel® driver on v5 processors (Skylake) is not available for most release streams as of this edition of the table.

<sup>6</sup> HP recommends use of NVIDIA® driver 361.28 (or newer) for configurations with NVIDIA® graphics.

<sup>7</sup> As of this edition of the table, only basic touch capability was available in most Linux desktops and no desktops are optimized for a satisfactory touch experience.

<sup>8</sup> SED drives work with Linux. There is, however, no Linux support available for manipulating encryption settings via the Opal API.

<sup>9</sup> The Thunderbolt™ dock is compatible with RHEL 7 on this ZBook model, starting with RHEL 7.3.

<sup>10</sup> As of this edition, the Bluetooth® functionality of this "combo" device has not been enabled in any tested distribution. However, the wireless LAN capability is functional.

<sup>11</sup> In order to install Ubuntu 16.04.1 on this graphics option, HP recommends that you change the graphics mode in BIOS to use the 'discrete' setting. You may also need to add 'nomodeset' to the boot line during installation.

<sup>12</sup> The Thunderbolt™ dock is compatible with Ubuntu 16.04, starting with 16.04.1. The one known limitation is that the audio headphone jack does not work.

<sup>13</sup> With NVIDIA®-based configurations, it is recommended to use the NVIDIA® closed source driver when using externally connected displays. It is not currently recommended to use the dock with AMD graphics options at this time.

# The future of remote compute is bright

[LEARN MORE](#)

© Copyright 2024 HP Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein. AMD is a trademark of Advanced Micro Devices, Inc. Intel® and Xeon are trademarks of Intel® corporation or its subsidiaries in the U.S. and/or other countries. Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries. NVIDIA is a trademark or registered trademark of NVIDIA Corporation in the U.S. and other countries. Red Hat and Enterprise Linux are registered trademarks of Red Hat, Inc. in the United States and other countries.

4AA7-6280ENW, March 2024

