

Read this first

The ThinkSmart Core Kit solution provides several modules to fit different conferencing scenarios. You can choose the modules to be deployed according to your actual meeting environment.

Prerequisites for deployment

- At least one external display with cable for HDMI-out connection
- Keyboard and mouse
- RJ45 Ethernet cable
- HDMI cable for HDMI-in connection

Deployment procedure

1. Set up ThinkSmart Cam (optional).
2. Set up ThinkSmart Bar (XL) (optional).
3. Connect a keyboard, a mouse, an external display, an Ethernet cable, the power adapter, and Controller to ThinkSmart Core.
4. Use the keyboard and mouse to complete Windows OOBE settings and claim the device to ThinkSmart Manager.
5. Remove the keyboard and mouse and connect ThinkSmart Cam and ThinkSmart Bar (XL) to ThinkSmart Core.
6. Use Controller to complete the conferencing software configuration.
7. Mount ThinkSmart Core. You are ready to start your meeting from now on!

Detailed instructions to the above steps are provided in the following resources. Choose any of them for instructional information during the deployment.

Video Gallery



https://support.lenovo.com/docs/thinksmart_core_kit_pub_package

Deployment Guide (Microsoft Teams Rooms)



https://support.lenovo.com/docs/thinksmart_core_kit_teams

Deployment Guide (Zoom Rooms)



https://support.lenovo.com/docs/thinksmart_core_kit_zoom

First Edition (March 2023) © Copyright Lenovo 2023.

LENOVO and the LENOVO logo are trademarks of Lenovo. All other trademarks are the property of their respective owners.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Printed in China PN: SP41F36349

