



ThinkPad E14 Gen 6 / ThinkPad E16 Gen 2



Get started

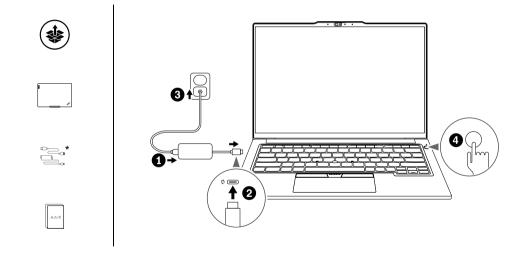


Overview

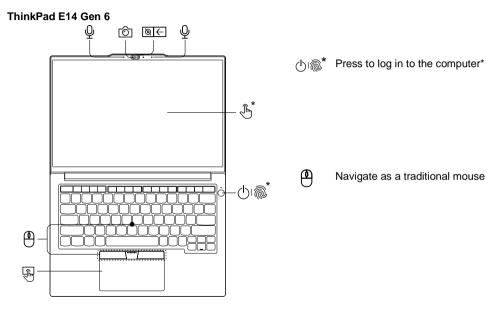

Overview

ThinkPad E16 Gen 2

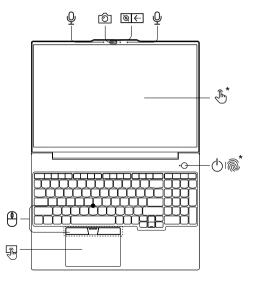




Press to log in to the computer*

Φ

Navigate as a traditional mouse


Overview

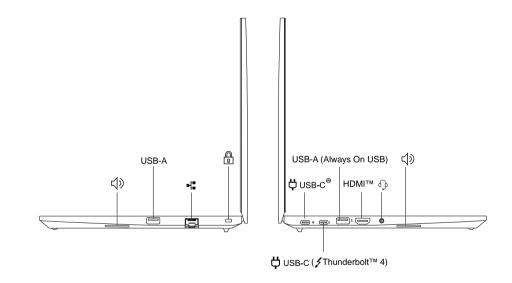


Read the statement on USB transfer rate in the User Guide. To access the User Guide, refer to methods mentioned on the back cover.

Lenovo Vantage

Access Lenovo Vantage to adjust device settings, check for system updates, and have your device warranty status.

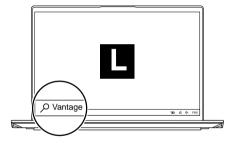

Lenovo Smart Meeting

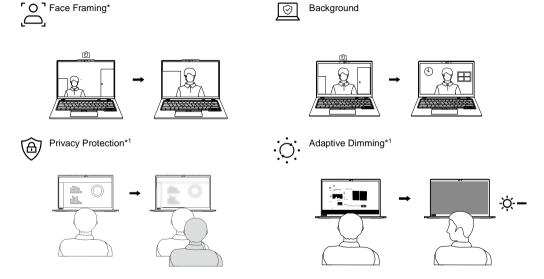

¹ The initial version doesn't have these functions. Functions will be available by software update soon.

[English]

Specific absorption rate (SAR)

YOUR DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Refer to the following for 10g SAR limit and maximum reported SAR values: 10g SAR limit: 2 W/kg (body-worn SAR); 4 W/kg (limb SAR)

Maximum SAR with 0 mm separation distance:

Product name	Body-worn SAR value	Limb SAR value
ThinkPad E14 Gen 6	0.308 W/kg	0.308 W/kg
ThinkPad E16 Gen 2	0.441 W/kg	0.441 W/kg

For more information about SAR, refer to the Safety and Warranty Guide that came with your device.

European Union (EU) / United Kingdom (UK) — radio frequency and power

This radio equipment operates with the following frequency bands and maximum radiofrequency power:

Technology	Frequency [MHz]	Maximum transmit power
WLAN 802.11b/g/n/ax Bluetooth BR/EDR/LE	2400 - 2483.5	< 20 dBm
WLAN 802.11a/n/ac/ax	5150 - 5350; 5470 - 5725	< 23 dBm
WLAN 802.11a/n/ac/ax	5725 - 5875	< 13.98 dBm
WLAN 802.11ax	5945 - 6425	< 23 dBm

Note: Not all wireless bands may be enabled depending on your product configuration. Usage of this device is limited to indoor locations in the bands 5150 - 5350 MHz and 5945 - 6425 MHz.

Access User Guide

