

SparcoTM
B R A N D

**AUTOMATIC
 NUMBERING
 MACHINE**
**5 WHEEL
 7 MOVEMENT**

SPR-80057

Manufactured for S.P. Richards Co.
 Made in China

INSTRUCTIONS

Press handle (1) halfway down, depress thumb tab (2) and remove the ink pad from the machine. Ink pad thoroughly and replace it in the numbering machine. For the best impressions, apply ink to pad several hours prior to use.

Raise the action indicator (3) by disengaging the gears. Move the setting point (4) to the desired position.

The figures on the action indicator identify the following movements:

- 0- repeat same number indefinitely
- 1 - Consecutive 123456789
 123456789...etc
- 2 - Duplicate 11 22 33 44...etc
- 3 - Triplicate 111 222 333...etc
- Between 2 and 3 - Sextuplicate
 111111 222222 333333 444444...etc

To Change Figures

Put the machine in locked position by depressing handle, pushing the lock button (5) into the shaft.

Set figures to desired position with the stylus which is furnished. (Always use the wooden stylus to move figure wheel - metal tools will damage the numbers.)


If a column or columns do not appear in the impression (except the first columns), turn the wheel to zero and press down and slightly forward on the zero with the stylus. The zeros will be depressed and columns will not appear in the impression.

Tap the handle gently to release the lock button. The machine is ready for use.

NOTE: Be sure any cycle is complete before attempting to reset the machine to a different movement.

The guide plate is designed to allow the numbers to be lined up in a specified space. The indentations on the guide plate prevent blotting of the impressions.

DO NOT USE RUBBER STAMP INK

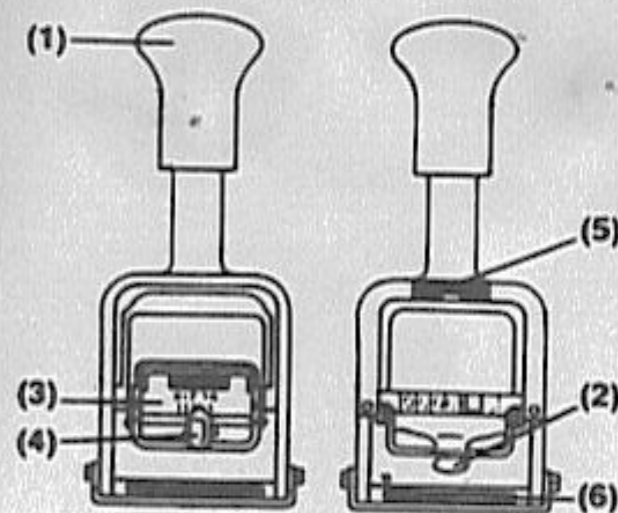

- (1) Handle
- (2) Pad Holder
- (3) Action Indicator
- (4) Setting Point
- (5) Lock Button
- (6) Indentation