

ERGOHUMAN STANDARD LEM4ERG(N) ASSEMBLY INSTRUCTION

PARTS LIST

<p>①</p>  <p>CASTER × 5</p>	<p>④</p>  <p>ARMREST × 2</p>
<p>②</p>  <p>BASE × 1</p>	<p>⑤</p>  <p>SEAT CUSHION × 1</p>
<p>③</p>  <p>GAS LIFT × 1</p>	<p>⑥</p>  <p>BACK CUSHION × 1</p>

HARDWARE

TYPE A ARM SCREWS & WASHER
(FOR FRONT SCREW OPENING)

	1/4" x 1"
	SPARE SCREW

TYPE B ARM SCREWS & WASHER
(FOR REAR SCREW OPENING)

	1/4" x 5/8"
	SPARE SCREW


TYPE C BACK SCREWS

	M8 x 17mm
	SPARE SCREW


ALLEN WRENCH



STEP 1

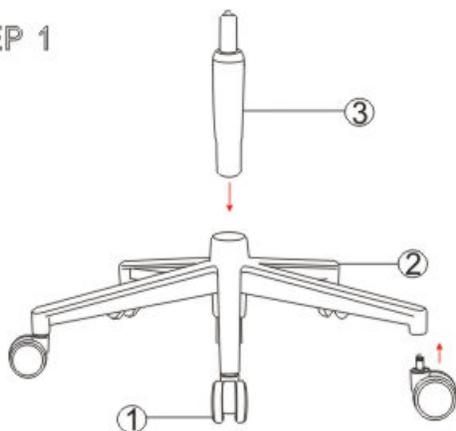

STEP 2

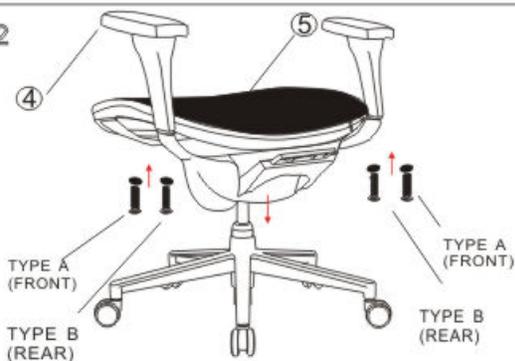

Please follow Step 2 closely. Type B shorter screw is for the hole closer to the mechanism. Type A longer screw is the hole farther away from the mechanism.

STEP 3



STEP 4



Every 6 months, please make sure all bolts, screws and knobs are fully tightened to ensure stability.

PREVENTIVE MAINTENANCE AND WARNING

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE CHAIR AS STEP STOOL/LADDER.
DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS ARE TIGHT. AT LEAST EVERY SIX MONTHS CHECK ALL BOLTS, SCREWS TO BE SURE THEY ARE TIGHT.
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- FAILURE TO FOLLOW THESE WARNINGS CAN RESULT IN SERIOUS INJURY.

FOR ASSEMBLY ASSISTANCE CALL
CUSTOMER SERVICE: 1-800-637-0005
METRO NY: 1-516-481-9500
9:00 AM TO 5:00PM (EASTERN)