 
 

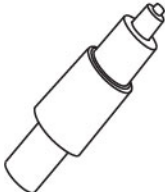
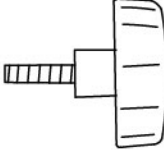


**IMPORTANT NOTICE:
HARDWARE PACKAGE IS ATTACHED ON THE
BOTTOM OF SEAT CUSHION.**

MODEL: B1681

(1)x1	(2)x1	(3)x1 (L)x1 (R)
		
Back Cushion	Seat Cushion	Left-Arm-L Right-Arm-R
(4)x1	(5)x1	(6)x 5
		
Gas Lift W/ Cover	Base	Caster
(7)x1	(8)x1	(9)x1
		
TU009-EXT	TU009	
(A)*2   M6*25 Arm Screws (B)*4   M6*40 Arm Screws		

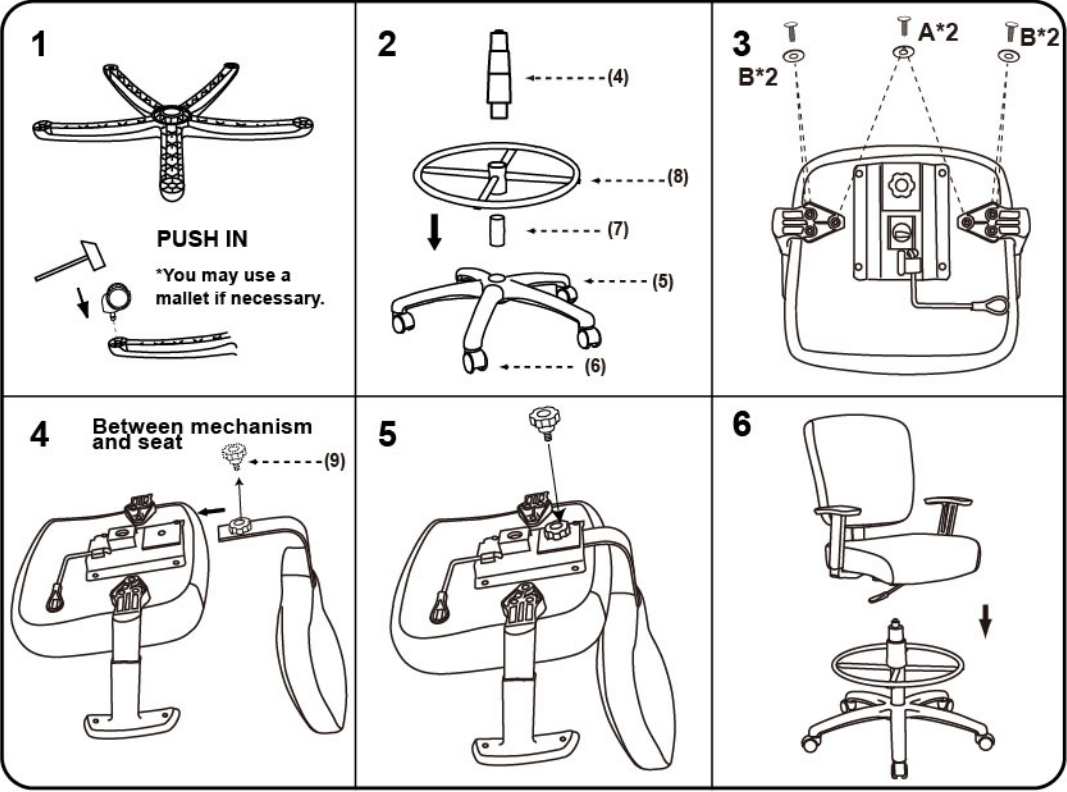

**Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using.
This chair is only intended for sitting. Any other use will void the warranty.**

