 


Explorer™ TV Cart


Assembly Instructions

ETCM-SB
ETCMHD-SB


Included:

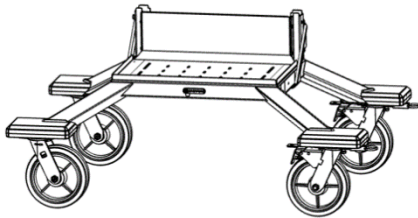


Cart Base (x1)

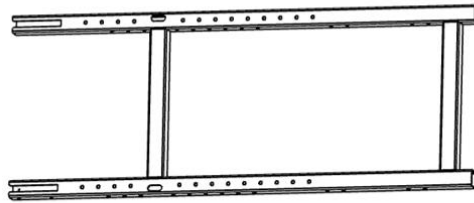


Upright (x1)

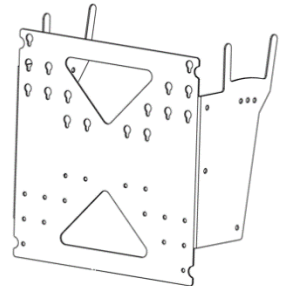


TV Mount (x1)

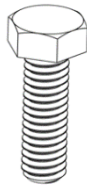

030-2302
1" Hex Head Screw (x8)

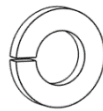

030-2303
Lock Washer (x8)

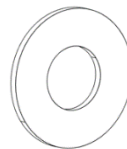


030-2335
Flat Washer (x8)



030-2322
2.5" Carriage Bolt (x4)



030-2323
Locknut (x4)

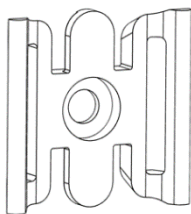

030-2249
Cable Management Loop (x3)



030-2244
Push Rivet (x3)



031-8122
Velcro Strap (x3)




1/2" Wrench (x1)



044-5666
TV Mount Hardware (x1)

ETCMHD-SB will also include:

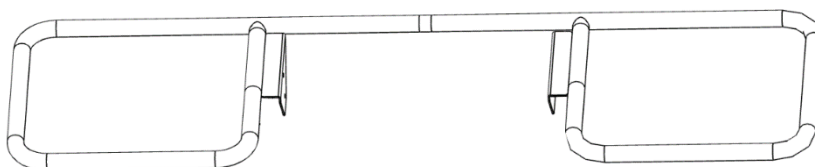

Cart Handle




030-2322
2.5" Carriage Bolt (x4)




030-2323
Locknut (x4)

Assembly Steps:


1. Unbox and Remove Packaging

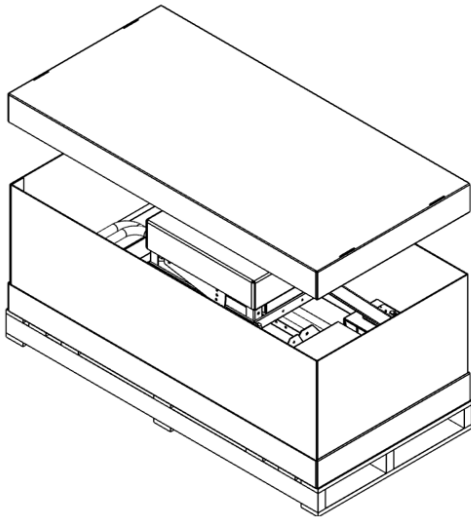


Cut off straps and remove top tray

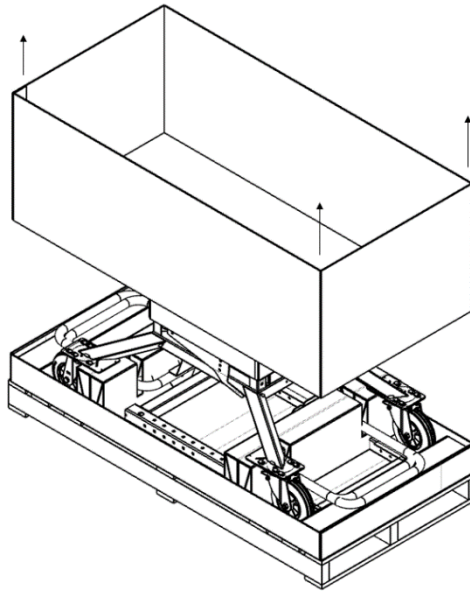


Lift the outer wrap up and off

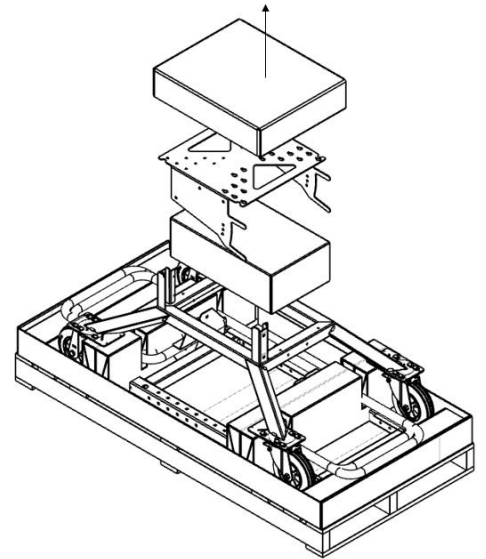


Remove TV Mount & center internal supports

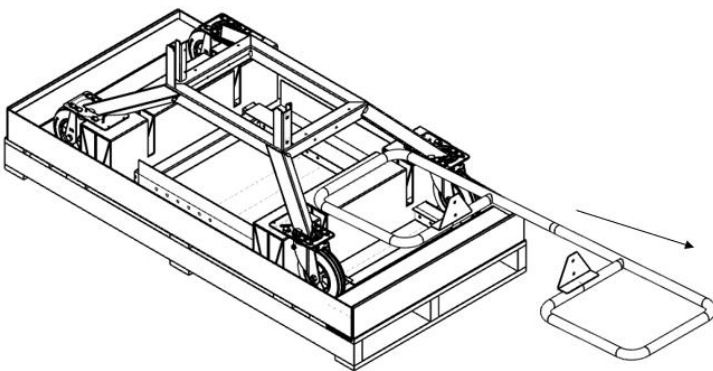


**Slide the Handle up and out
(for model ETCMHD-SB)**

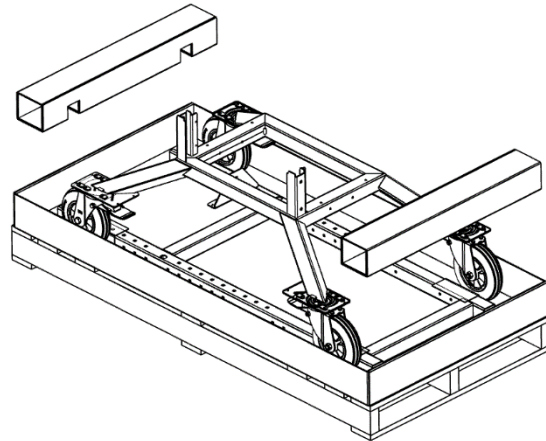

Remove remaining support pieces

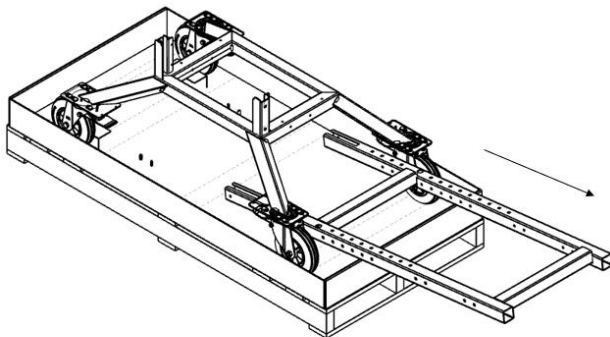

Slide the Upright up and out

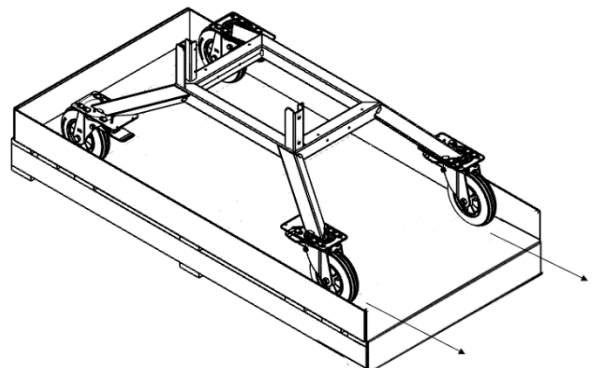

**Unfold end flap on bottom tray
and roll Base off pallet**

2. Attach Upright to Base

Hardware:

030-2302 (x4) – Hex Head Screws



030-2303 (x4) – Lock Washers

030-2335 (x4) – Flat Washers


010-8837 (x1) – Hex Wrench





Push the “ON” tab down on the two locking casters so frame does not move.

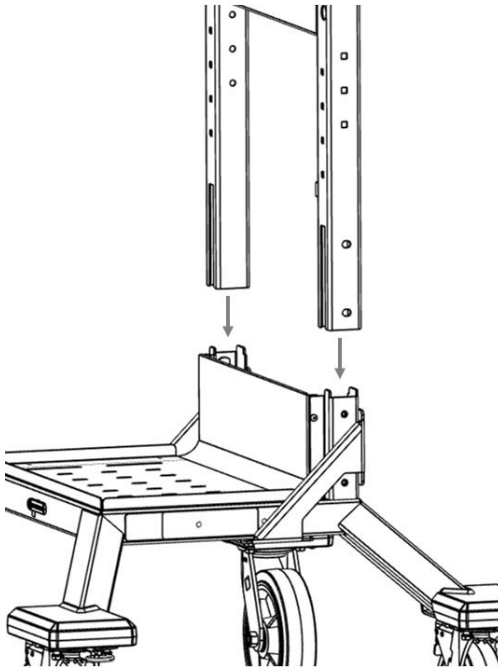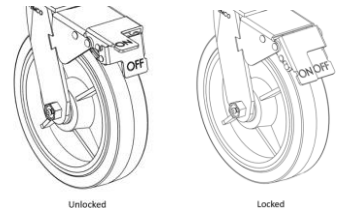

Install the Upright on the Base by sliding it onto the two posts.

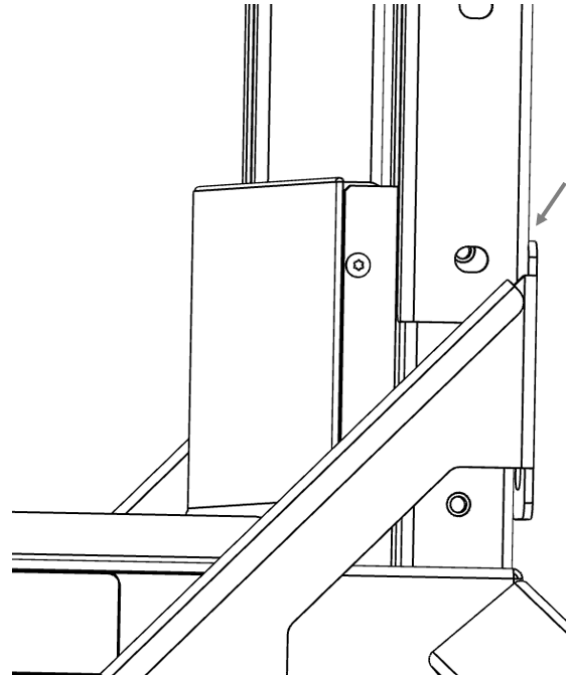

Ensure the upright slides between the mounting bracket and gusset.

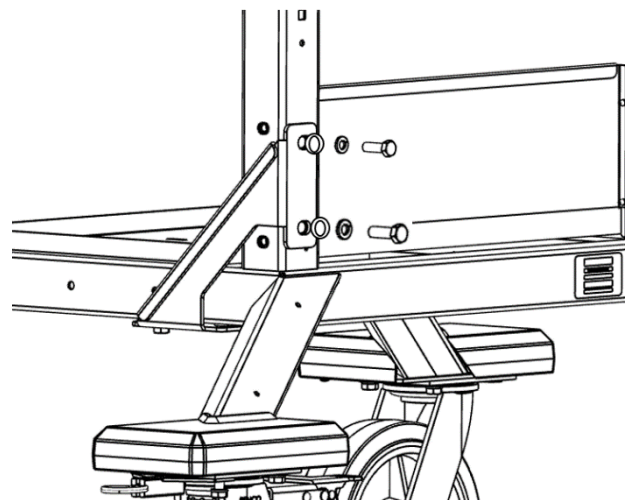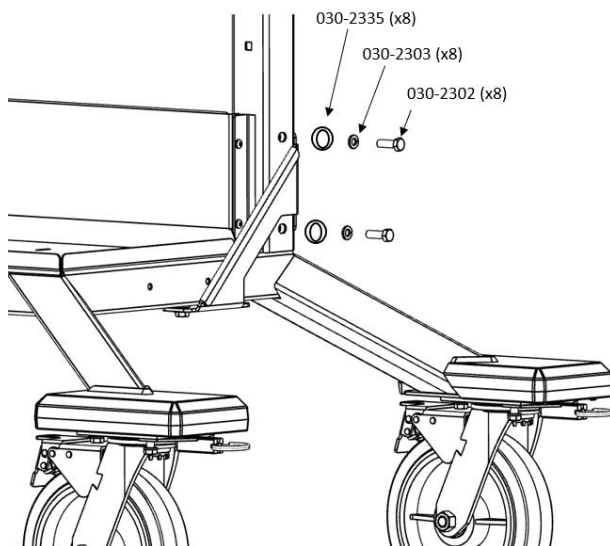

Secure the uprights using washers and 1” screws; tighten with the wrench.

Note: there are eight (8) total mounting points: (2) on each side and (4) in the rear.

3. Install TV Mount to Upright


Hardware:

030-2322 (x4) – Carriage Bolts


030-2323 (x4) – Lock Nuts

010-8837 (x1) – Hex Wrench


NOTE: It is recommended that 75"+ monitors go on the lower holes to prevent hitting the top of the doorway

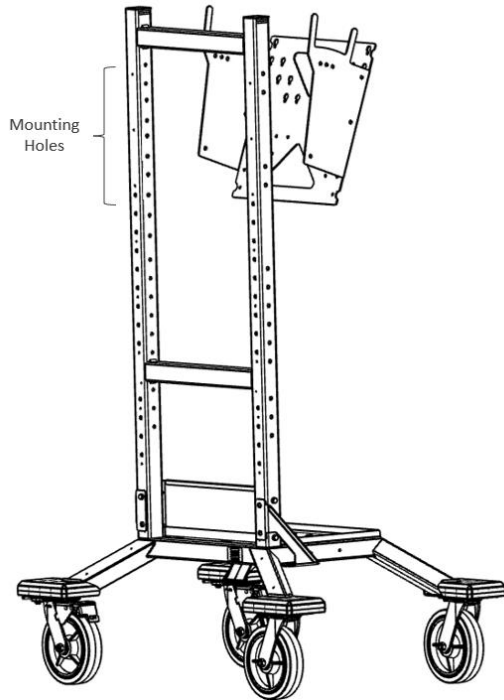


Line up bottom of TV Mount with the desired mounting holes.

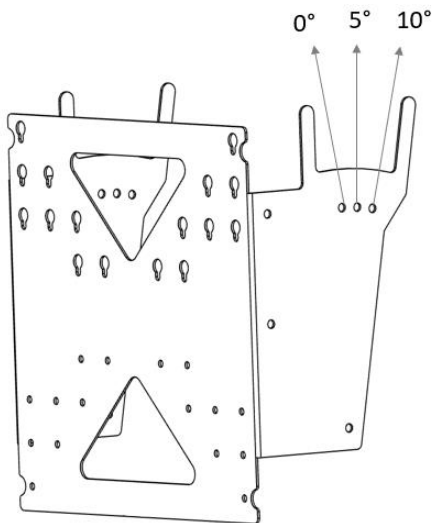

Select the tilt of the monitor.

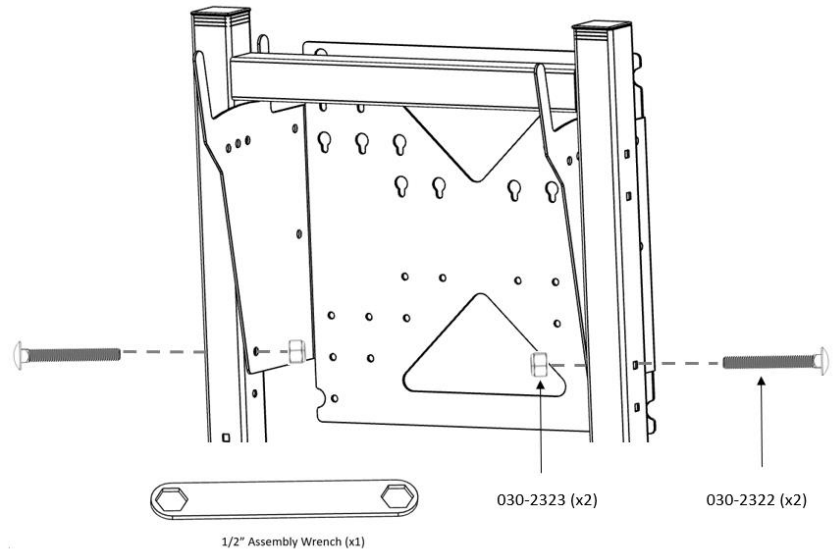

Attach with Carriage Bolts and Nuts, starting with the lower holes first.

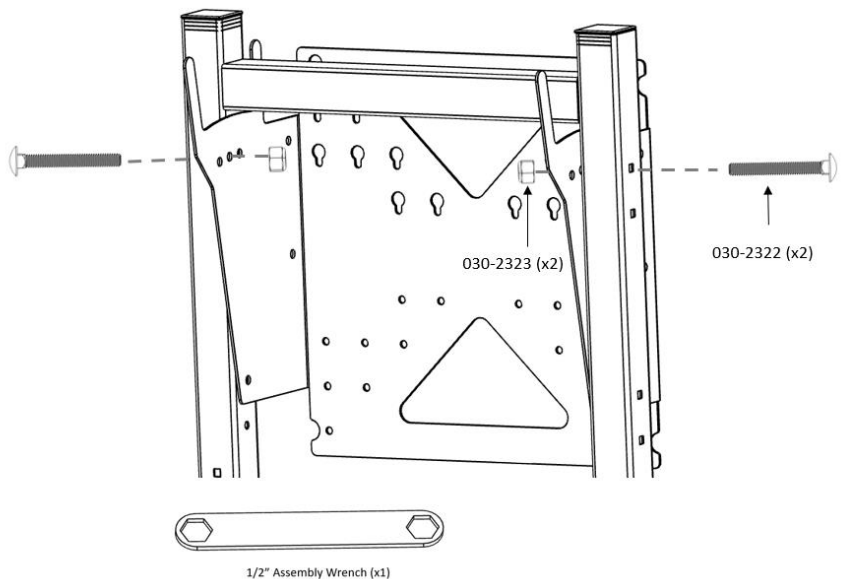

Secure the top of the mount with Carriage Bolts and Nuts, then tighten all four with wrench.

4. Mount your TV

Hardware:

M6 or M8 Set Screws (x4)

M6 or M8 Washers (x4)

M6 or M8 Wingnuts (x4)



Caution: Two person install




Caution: Display not to exceed 200 pounds



Caution: Ensure caster brakes are locked



Caution: Do not overtighten set screws

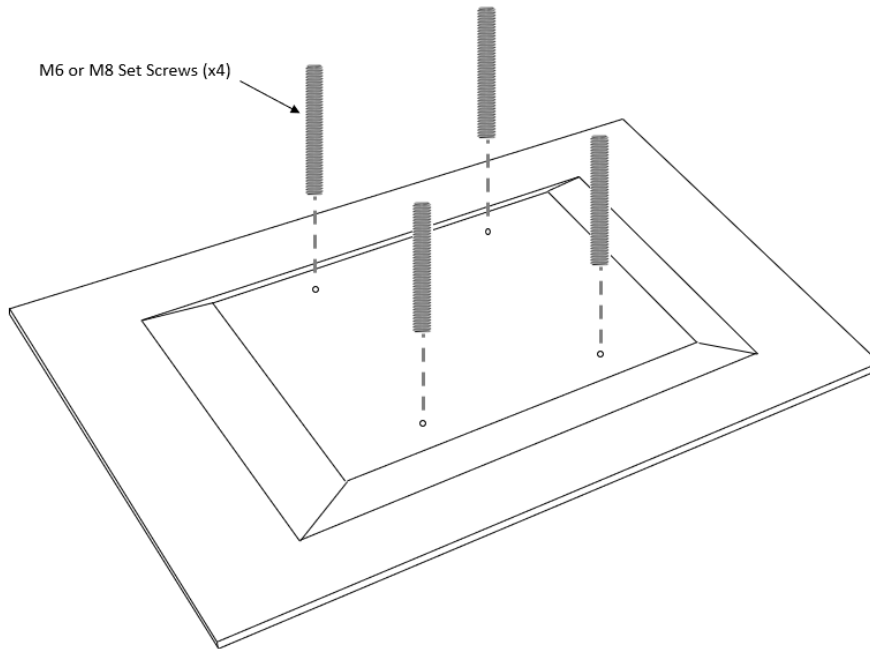


Determine the hole size on the back of the TV to be mounted – M6 or M8 – and insert the appropriately sized set screws.

M6 / M8 Wingnuts (x4)

M6 / M8 Lock Washers (x4)

M6 / M8 Washers (x4)

Secure the TV to the Mount with washers, lock washers and wing nuts (M6 or M8).

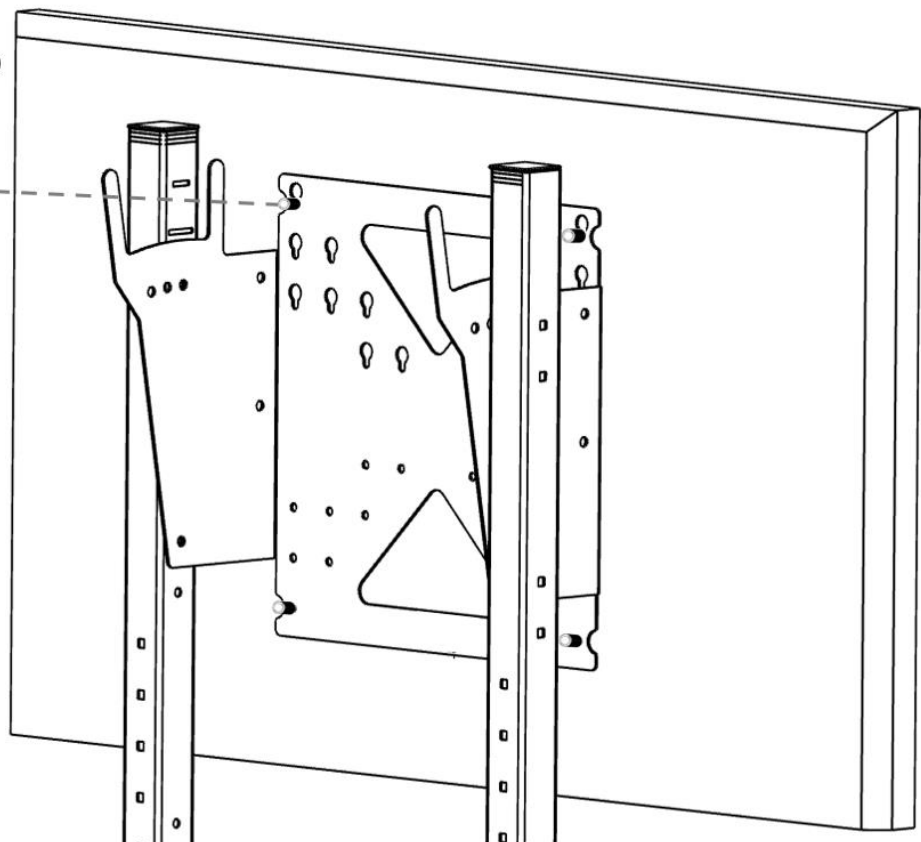


5. Manage the Power Cord

Hardware:


030-2249 (x3) – Cable Management Loop

030-2244 (x3) – Push Rivet

031-8122 (x3) – Velcro Strap

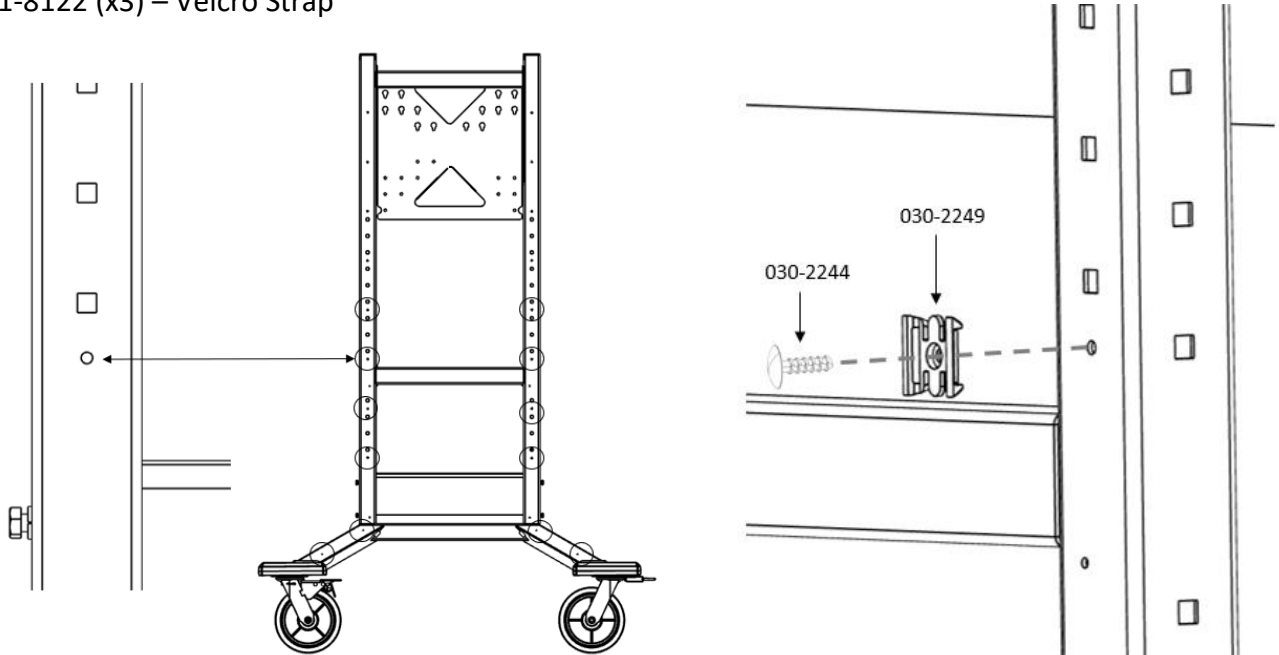

1. There is a series of small holes on each side of the frame for locating the cable management loops. Install loops with push rivets.

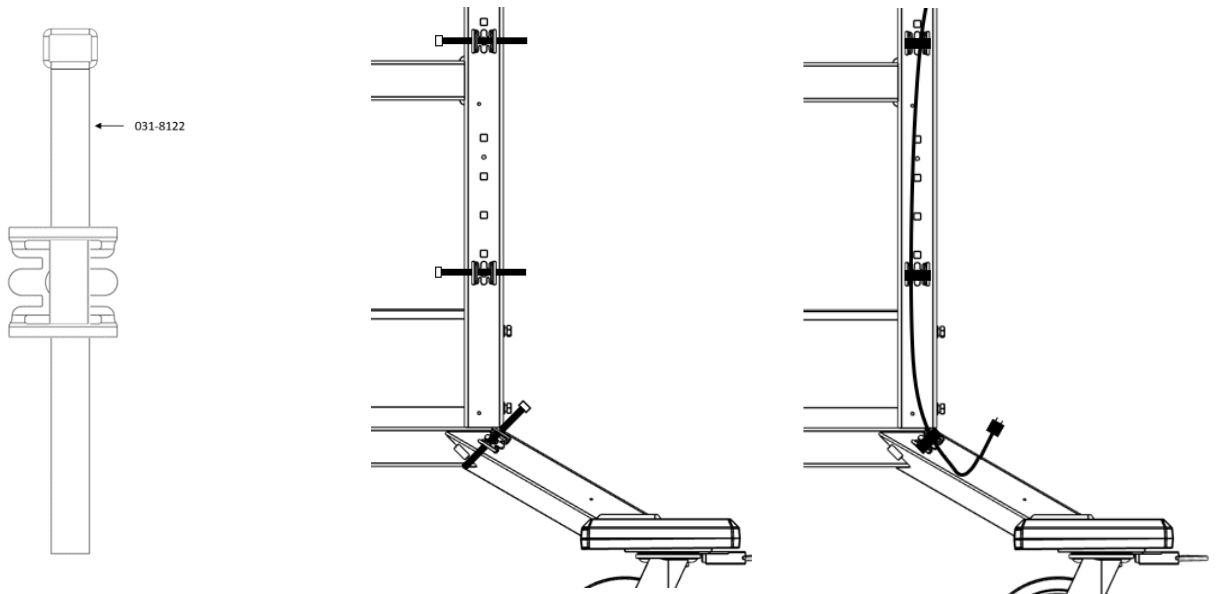

2. Slide the Velcro through the loops, route your power cord and secure it using the straps.