


SEAMLESS Connect Universal dvLED Floor-to-Ceiling LEDFCM Series

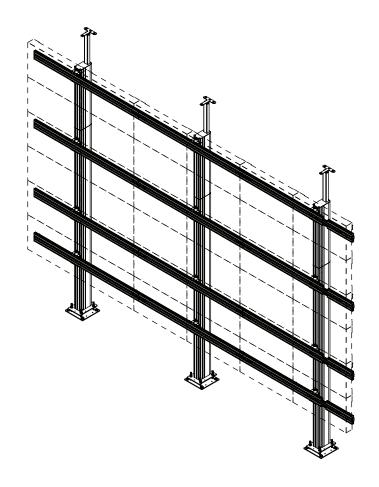








A WARNING

ENG - This product is designed to be installed on solid concrete. Hardware is included for solid concrete installation. Before installing make sure the supporting surface will support the combined load of the equipment and hardware. Screws must be tightly secured. Do not overtighten screws or damage can occur and product may fail. Never exceed the Maximum Load Capacity. Always use an assistant or mechanical lifting equipment to safely lift and position equipment. This product is intended for indoor use only. Use of this product outdoors could lead to product failure or personal injury. Be careful not to pinch fingers when operating the mount. For support please call customer care at 1-800-865-2112.

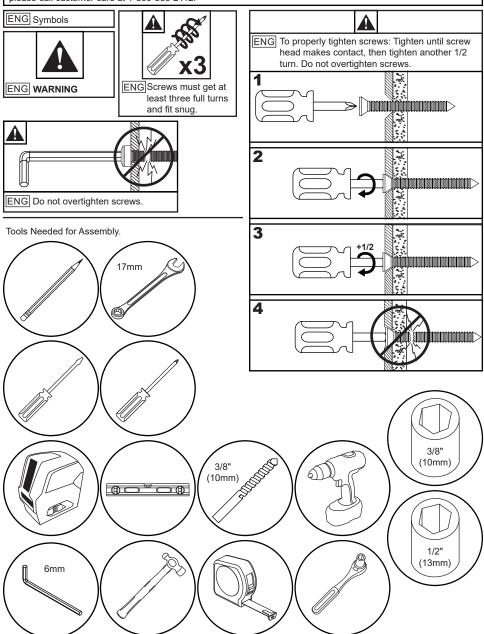


Parts (Before beginning, make sure you have all parts shown below). *Refer to parts list included with your model.

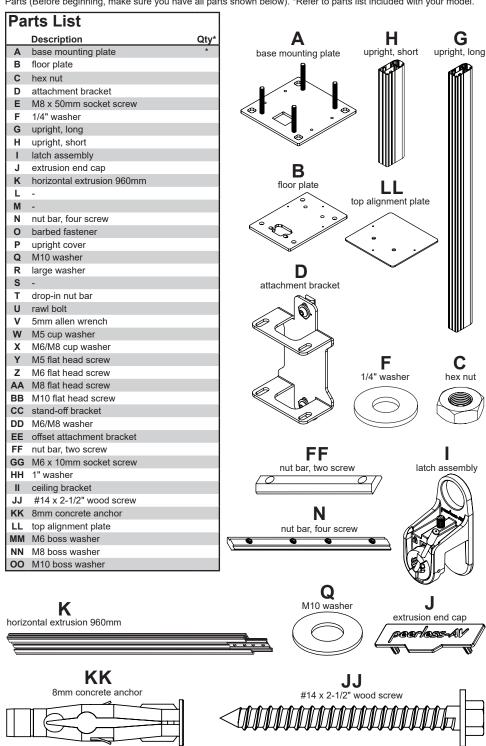

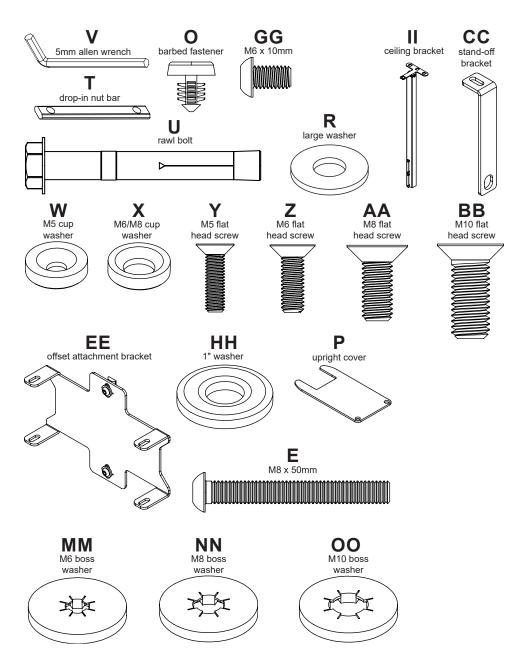


Parts List					
	Description	Qty.			
AAA	spacer	2			
BBB	3mm allen wrench	1			
ccc	laser target	2			
DDD	4mm allen wrench	1			
EEE	spacer extension	2			
FFF	shim plate	2			
GGG	M4 flat head screw	12			

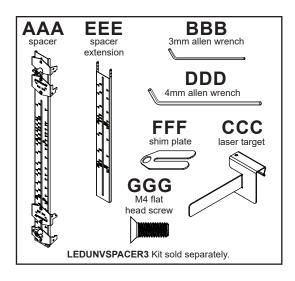

1

Scan QR Code provided to obtain dvLED configurator drawing specific to your model.

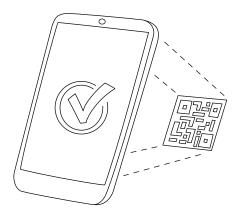







UK


Join vertical uprights using nut bars provided. Arrange so that longest upright is at the bottom. Ensure threaded holes are at bottom of the bottom upright.



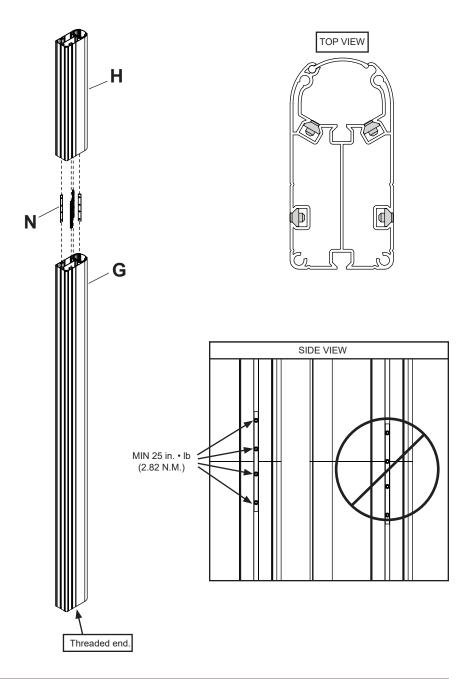


Reference configuration drawing specific to your model for spacing of base mounting plates.

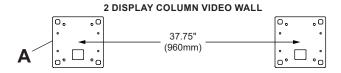


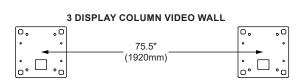


4 DISPLAY COLUMN VIDEO WALL

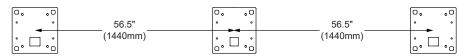

5 DISPLAY COLUMN VIDEO WALL

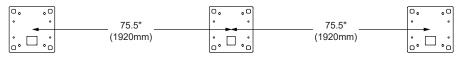

>5 DISPLAY COLUMN VIDEO WALL

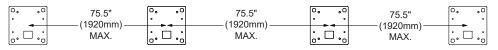

Position upright in center of each display column on the ends.


Spacing between two uprights going towards the video wall center shall not exceed 75.5" (1920mm).

For display widths that measure 960mm, follow the above layout illustrations for spacing of vertical uprights (base mounting plates).

For displays widths that measure less than 960mm, position one vertical upright (base mounting plate) at the center of the first and last display column. Place vertical uprights and skip every other display columns towards the center of the video wall.


A WARNING


ENG - When installing Peerless mounts on a concrete floor, the floor must be at least 8" thick with a minimum compressive strength of 2000 psi. Never attach concrete expansion anchors to concrete covered with plaster, drywall, or other finishing material.

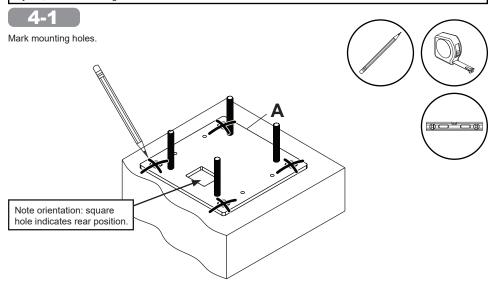


4-2

Drill mounting holes into supporting surface (3" (76mm) minimum depth required).

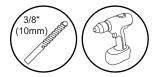

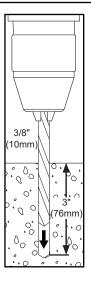



Align base mounting plates. Install using concrete anchors provided. Install M10 nuts and M10 washers onto threaded posts.

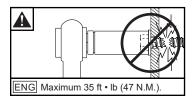





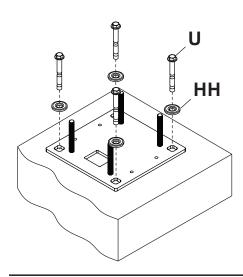


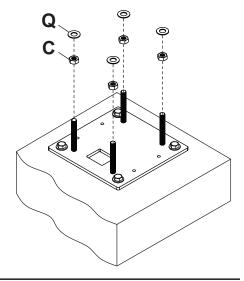


4-4


Attach floor plate to the bottom of long vertical upright, with cut out hole to the rear.



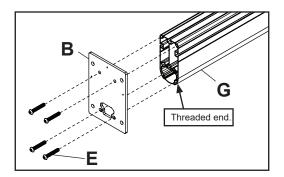

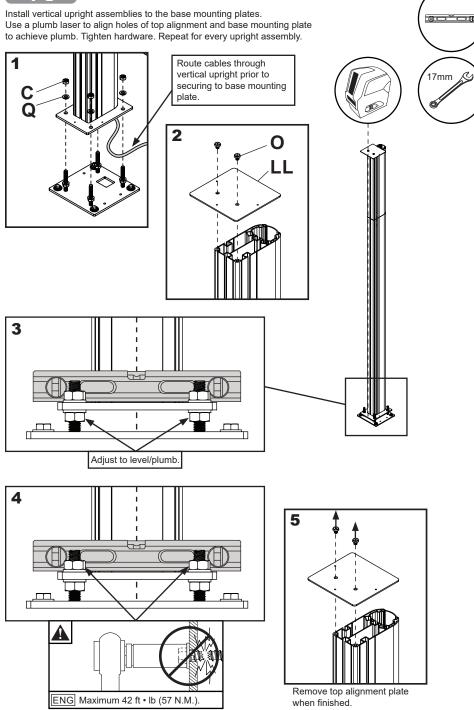


Slide brackets onto vertical upright. Note, your configuration may require vertical upright installed with offset bracket (EE). Refer to configuration drawing specific to your model. Hand tighten hardware.

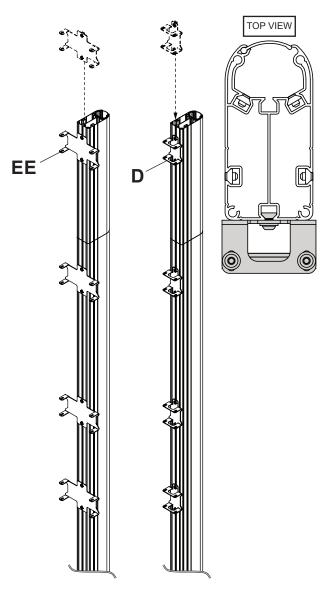


5-2

Slide ceiling brackets into vertical uprights. Hand tighten hardware.

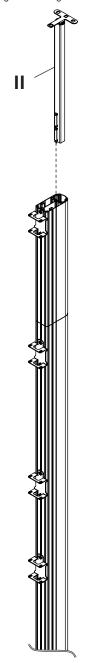

A WARNING


ENG - When installing Peerless ceiling mounts on a concrete ceiling, the ceiling must be at least 8" thick with a minimum compressive strength of 2000 psi. Never attach concrete expansion anchors to concrete covered with plaster, drywall, or other finishing material.

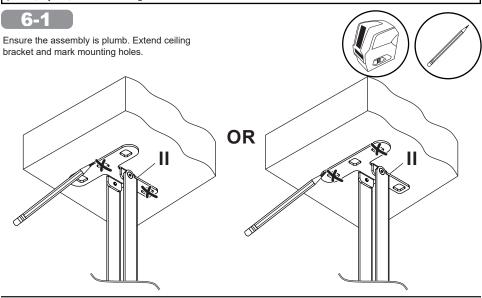

6-2

3/8"


Lower ceiling bracket and drill mounting holes into supporting surface (3" (76mm) minimum depth required).

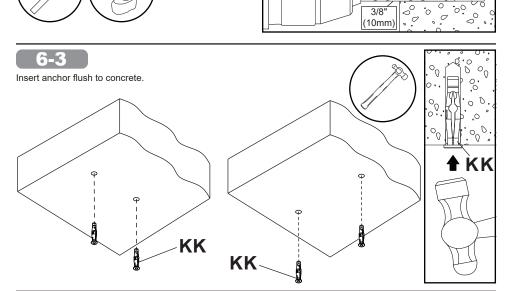



Extend ceiling bracket to flush with mounting surface. Install using concrete anchors and wood screws provided.





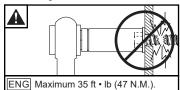

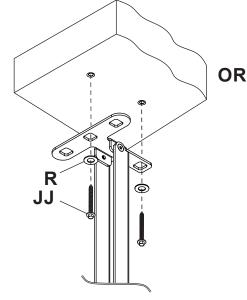

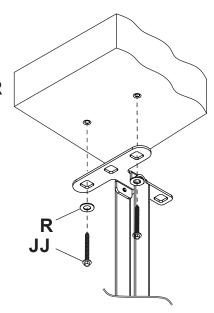

Tighten hardware inside ceiling bracket channel.


MIN 25 in. • lb (2.82 N.M.)







For displays narrower than 960mm, determine the required extrusion length with the following extrusion cut to length formula:

Video Wall Width - 0.25" (6mm) = Extrusion Length

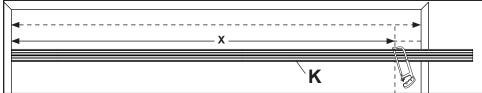

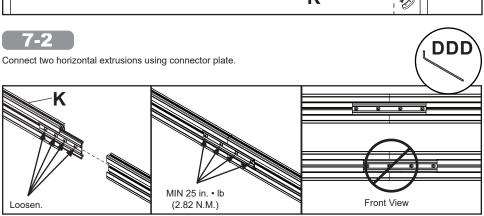


Slide nut bars into top and bottom channels of horizontal extrusions.

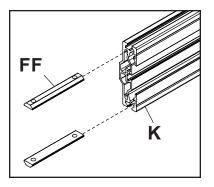


8-2

Position horizontal extrusions into the openings of the attachment brackets. Align nut bars inside the top and bottom channels of horizontal extrusion with holes of attachment brackets. Secure using hardware provided.

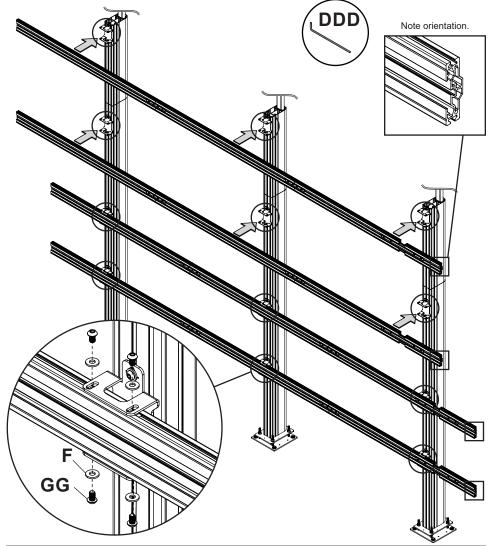



Determine the combined height of TWO displays being mounted and locate the same dimension on the front of spacer. If height is above 686mm, attach spacer extension. If height is not listed on the spacer, use measurement of the combined height of TWO displays to set custom spacing.

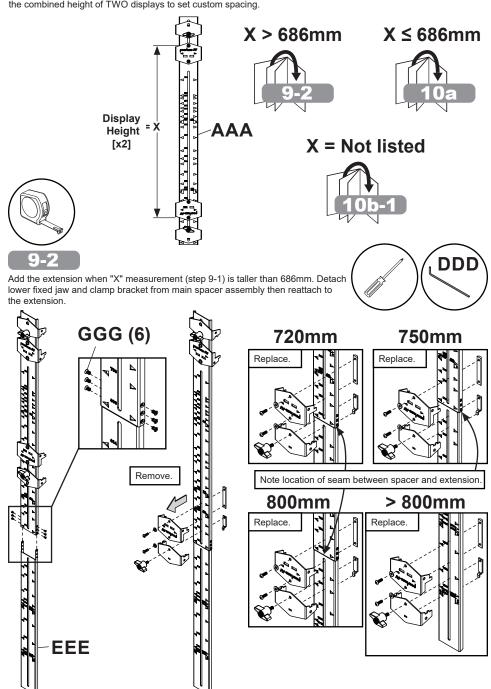



10a

Move spacer bracket and clamp to align window of spacer bracket with corresponding height value (measurement "X", step 9-1).

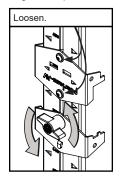

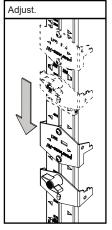

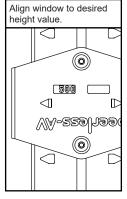


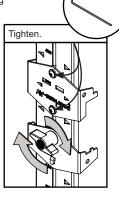




If the combined height of TWO displays is not listed on the spacer, measure them to set custom spacing. Remove top spacer clamp. Move upper spacer bracket to the zero position. Loosen lower spacer bracket to insert shim plate underneath to allow spacer bracket to slide freely.




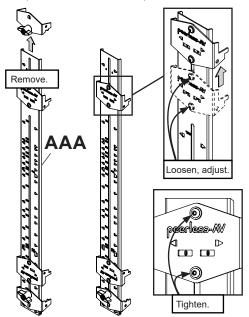

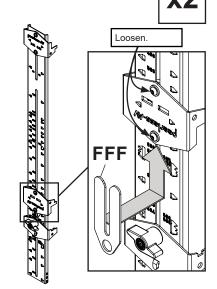



10b-2

With spacer brackets positioned wide enough to fit TWO displays inside, position notch of top spacer bracket flush with top edge of display. Slide the bottom spacer bracket to the bottom edge of display. Tighten screws of bottom spacer bracket.

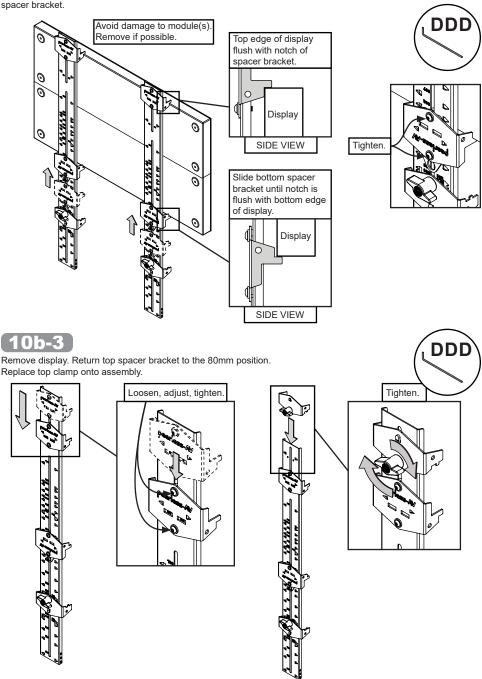

Refer to drawing specific to your model for measurements to locate top horizontal extrusion's height. The top of attachment bracket shall be flush with top of vertical upright. If a lower A.F.F. (Above Finished Floor) height is desired, adjust the height of the top horizontal extrusion as needed.

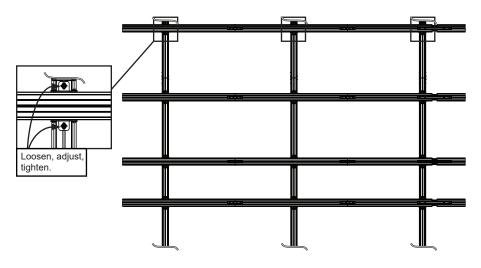


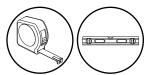

11-2


Adjust height of remaining extrusions using the spacers. Clamp the lower spacer jaw assembly to an unadjusted extrusion assembly. Clamp the upper spacer jaw assembly to extrusion previously installed. Vertically align extrusions with a laser. Tighten hardware.



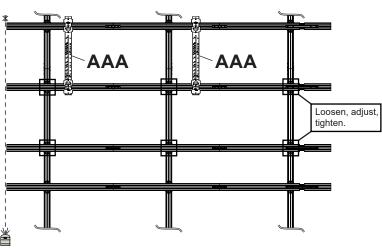




Refer to configuration drawing specific to your model to locate height of bottom horizontal extrusion. $\mathbf{Y} = \mathbf{Bottom}$ of horizontal extrusion second from the bottom to the top of bottom horizontal extrusion.

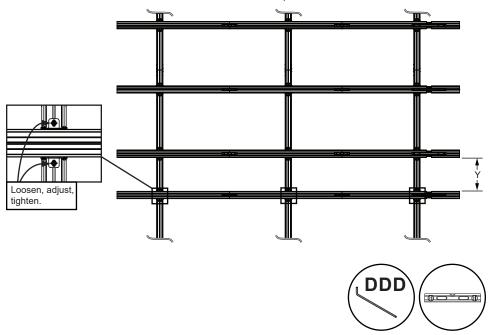



Set laser level so that it is parallel to the mount. With horizontal extrusion set all the way back, measure from the face of the extrusion to laser, in various locations. Mount laser target at the attachment bracket location that is near the mount's high point, determined by the shortest distance from the extrusion to the laser. Adjust extrusion out slightly, tighten adjustment screws and mark laser line on the target. Move target to a location near the next attachment bracket, adjusting depth until the laser is on the line, tightening screws as you go. Continue until all attachment brackets are adjusted.




Double check using a straight edge to span three extrusions. Adjust low and high spots as needed.

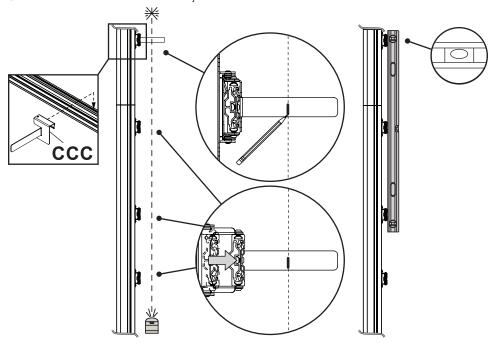

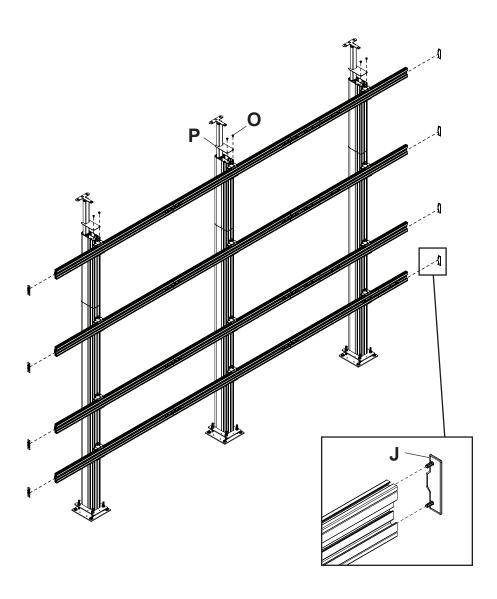


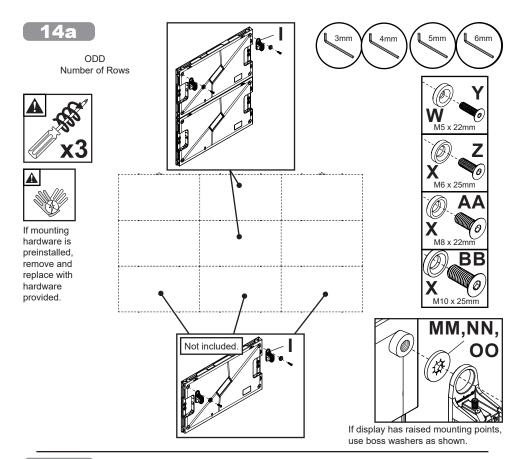




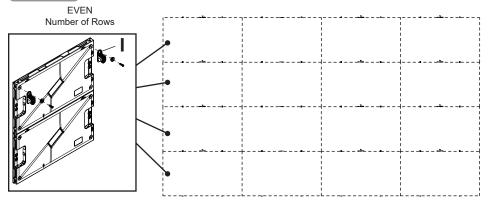


Join two cabinets together vertically using connecting system. Two displays attached together are then mounted onto extrusion as one.

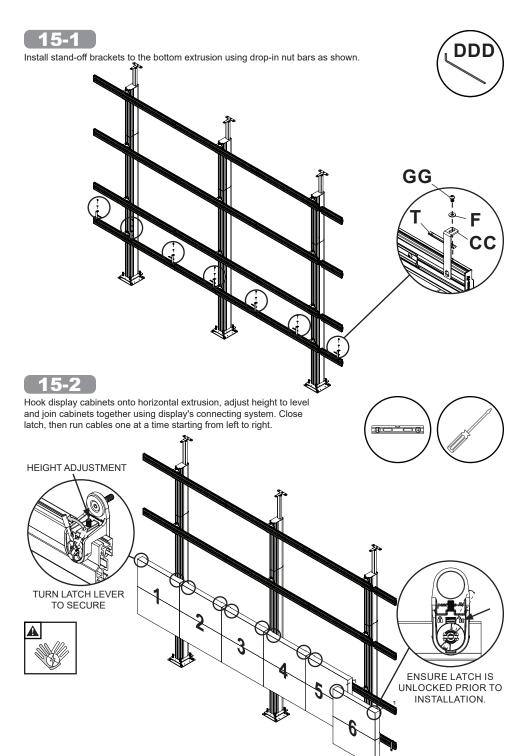


One stand-off bracket shall be located at every seam between two displays. Secure stand-off brackets to the bottom mounting holes of the bottom row of displays.

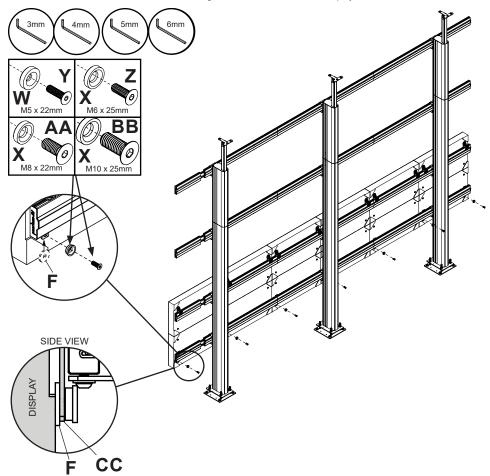

Hook display cabinets onto horizontal extrusion, adjust height to level and join cabinets together using display's connecting system. Close latch, then run cables one at a time starting from left to right.

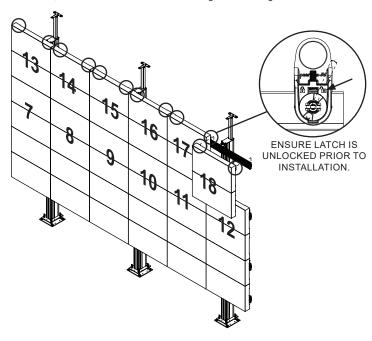

To remove, start from the top right. Open latch assemblies, disconnect cables, separate cabinets and remove displays one at a time.

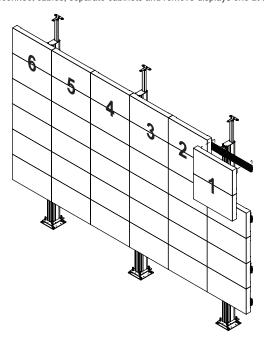

This page intentionally left blank.

ENG Warranty	ESP Garantía	FRN Garantie	DEU Garantie	NEL Garantie
ITL Garanzia	ČEŠ Záruka	SLK Záruka	POR Garantia	TÜR Garanti

www.peerless-av.com/warranty • www.peerless-av.com • www.peerless-av.com/patents



Peerless-AV 2300 White Oak Circle Aurora, IL 60502, USA info@peerless-av.com

(800) 865-2112 (630) 375-5100 Peerless-AV EMEA Unit 2, Curo Park Frogmore, St. Albans, Hertfordshire, AL2 2DD United Kingdom

+44 (0) 1923 200 100

Peerless-AV B.V. Papendorpseweg 75 3528 BJ Utrecht The Netherlands

+31 (0) 70 770 8037

Peerless-AV Latin America Av. de las Industrias 413 Parque Industrial Escobedo General Escobedo N.L., México 66062

+52 (81) 8384-8300