



OKLAHOMA SOUND CORPORATION

ARISTOCRAT
Sound Floor Lectern

ASSEMBLY MANUAL



MODEL #6010

INTRODUCTION

Aristocrat Sound Lectern — Model 6010

Perfect for the smallest to largest venues. Executive style podium include 50 Watt Multimedia amplifier with two built in 8" speakers surrounded by gold appointments. Includes Microphones, Holders, Digital Timepiece & rolls on four casters. For audiences up to 2,500 people. Assembly required.

Colors: Walnut, Light Oak, Medium Oak, Mahogany/Black Edging

Dimensions: 25¼" W x 46" H x 20¼" D.

ASSEMBLY TIPS

- Do not use a sharp instrument such as a knife or a screwdriver to open the packaging, as this may scratch or possibly damage the unit.
- All assembly should be done on a clean protected surface such as carpet or similar.
- Make sure that you have all the required parts. A list of all the parts are listed.
- Read instructions carefully and follow diagrams to ensure easy & correct assembly.

CARE OF YOUR CABINET

- All exterior and interior exposed surfaces are melamine covered as well as edges in matching patterned melamine material. To refresh the appearance, wipe the surface with a cloth soaked lightly in furniture oil. Avoid speaker grill area. Your cabinet will look as good as new.

TECHNICAL SPECIFICATIONS

Power Output ..50W RMS at 10% THD

MicElectret Condenser Mic (2)

Aux.....150 mV>220K

Frequency100HZ-25KHZ

Response..... + 3dB

Power Supply ..110-120V ohms DC 10.8 12V

Fuse2A Normal

Output8 ohms

Accessories.....Handheld mic; clip-on

mic; gooseneck;




Shockmount mic holder;

digital clock

Manufacturers Warranty

Our Lecterns undergo the most rigid and exacting tests for superior quality and performance before leaving the factory. Oklahoma Sound Corporation warrants this product to be free from defective material and workmanship on the electronic product speakers and microphones for two years from the date of resale by an authorized Oklahoma Sound distributor. Oklahoma Sound will replace defective parts and repair malfunctioning products under this warranty when the defect occurs under normal installation and use, provided the unit is returned to our factory via prepaid transportation after direct authorization and approval by Oklahoma Sound. This warranty provides that examination of the returned product must disclose in our judgement, a manufacturing defect. This warranty does not extend to any product which has been subject to misuse, neglect, accident, improper installation, or where the serial number has been removed or defected and is given in lieu of any other warranty implied or expressed and will not cover any consequential damages.

ASSEMBLY PARTS

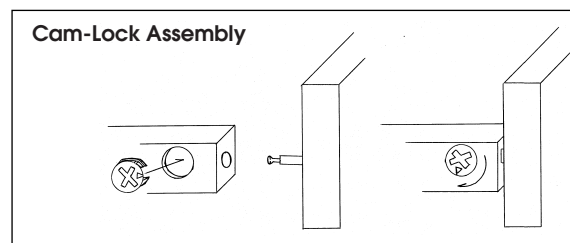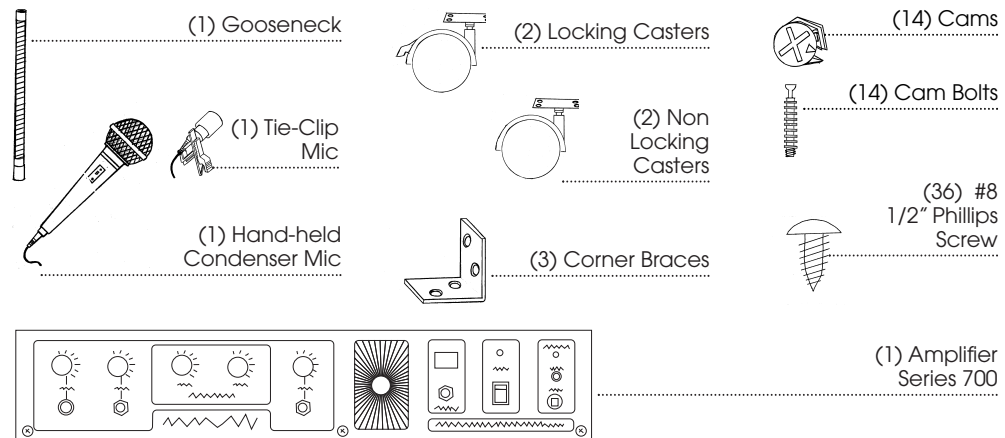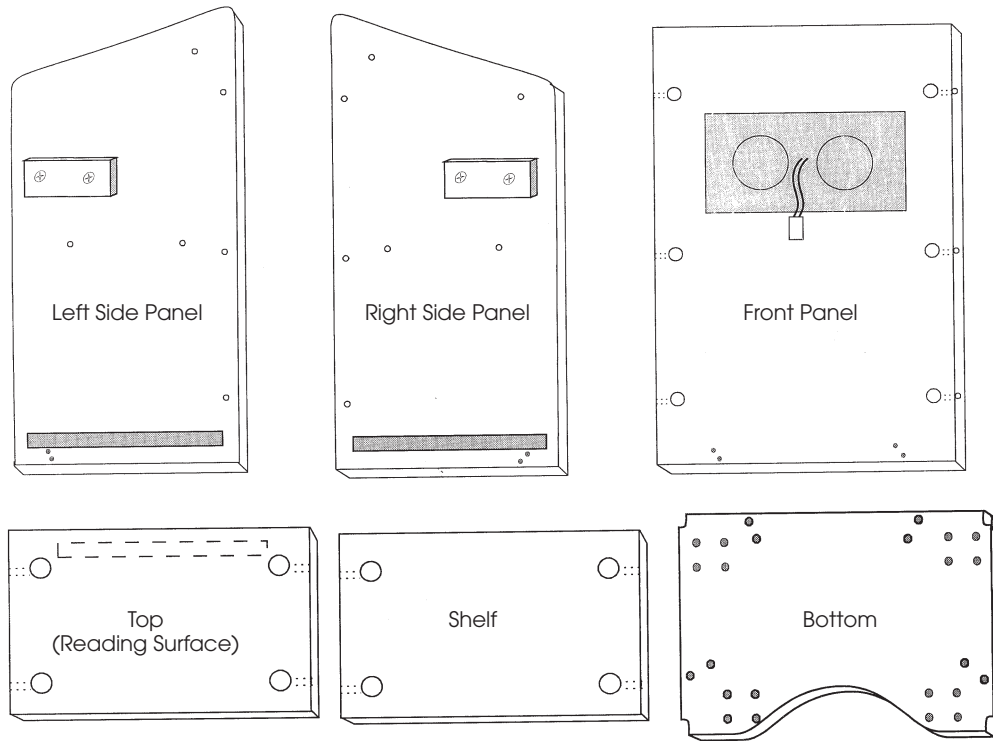

Tool Required

- #2 Phillips Head Screwdriver

INSTALLATION OF HARDWARE

- 1) Lay out the wood panels as shown in diagram "A" (make sure the factory drilled holes are facing upwards). You can determine the top of the front panel by identifying the edge cut on an angle.
- 2) Identify the holes numbered "1" in Diagram A. Screw the bolts into the inserts with a #2 Phillips-head screwdriver. Be sure to tighten the screws all the way. Note: Be careful not to over-tighten the bolts as this will strip the wood!!
- 3) Insert the cams in the larger holes as shown on diagram. MAKE SURE THE ARROW ON THE CAM IS POINTING TO CLOSEST EDGE & ALIGNED WITH THE HOLE ON THE EDGE.
- 5) On the BOTTOM panel, screw in the four casters. The locking casters should be screwed into the bottom closest to the T-Molded contoured edge. The second pair of non-locking casters should be screwed in closest to the unfinished edge.
- 6) The 4 corner braces should be screwed into the bottom panel. There are pre-drilled holes to guide you for proper placement. (Diagram A)

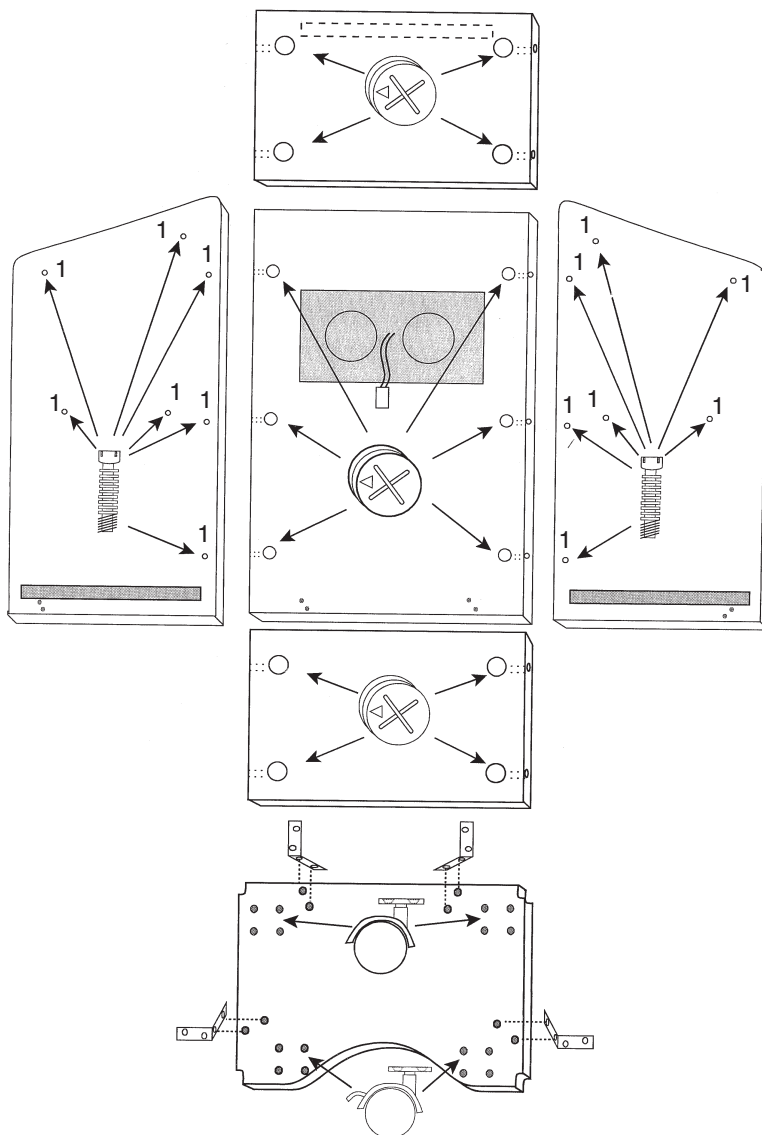


Diagram A

ASSEMBLY OF LECTERN

It is important that the instructions on the assembly are followed carefully

- 1) The first step of assembly will be to align the holes on the front panel edges with the three cam bolts on the side panel, tighten cams by turning clockwise until locked.
- 2) Next will be the Top and Shelf. Make sure the cams on the "TOP" & "SHELF" face the bottom of the lectern. The two highest bolts align with the two holes on the edge of the "TOP" (these holes reach until the cams). The two bolts in the center of the right side panel will align with the two holes on the edge of the shelf. Gently push the shelves down on to the cam bolts until the shelf is completely on the right side panel. Tighten.
- 3) Taking the "BOTTOM" panel, with the casters facing the bottom of the unit insert panel into the groove, make sure that the panel is all the way in the groove. Screw in the corner braces to the side and the front panel, there are pre-drilled holes to guide you. (Diagram B)


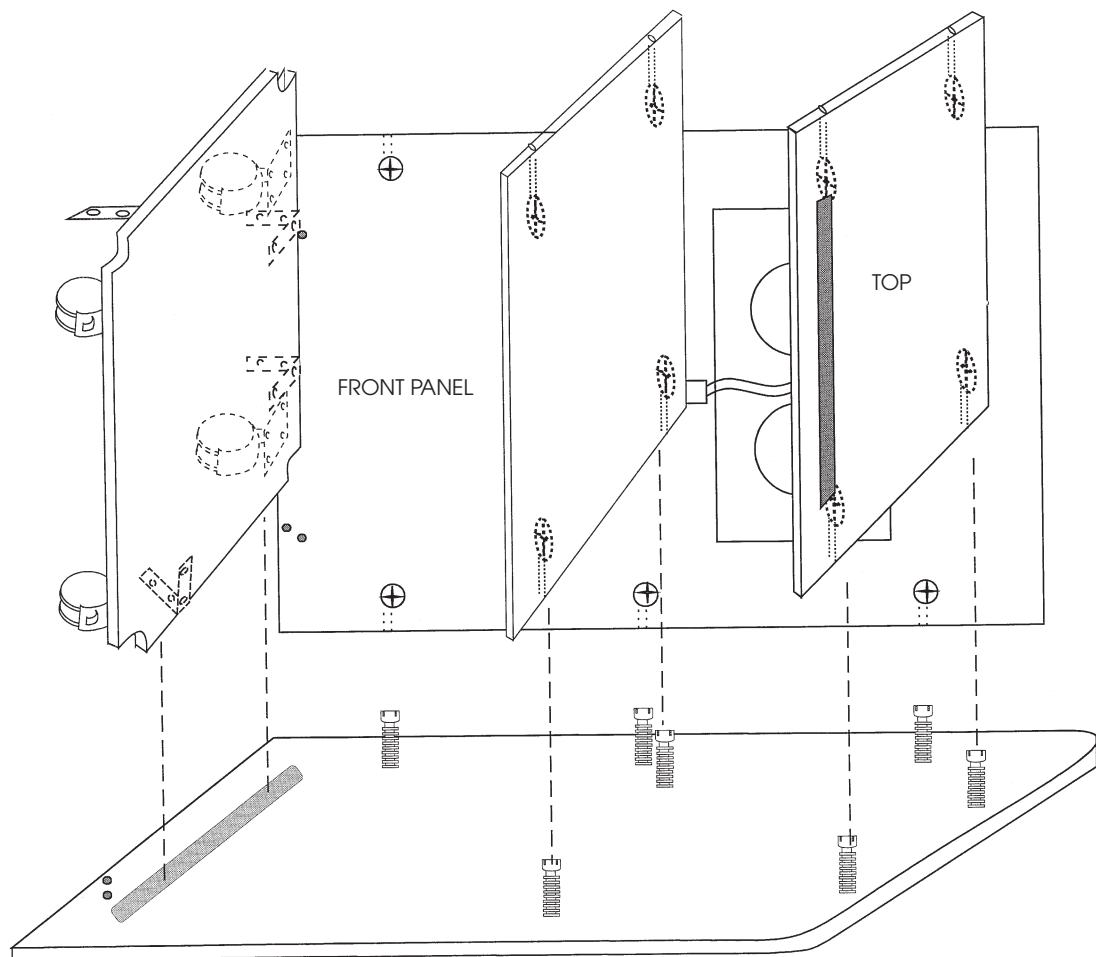



Diagram B


- 5) Now apply the left side panel to the semi assembled unit. Be sure to align the cam bolts to the holes on both the front panel & the shelf.. Be sure that the "BOTTOM" is securely in groove. Tighten cams. (Diagram C)

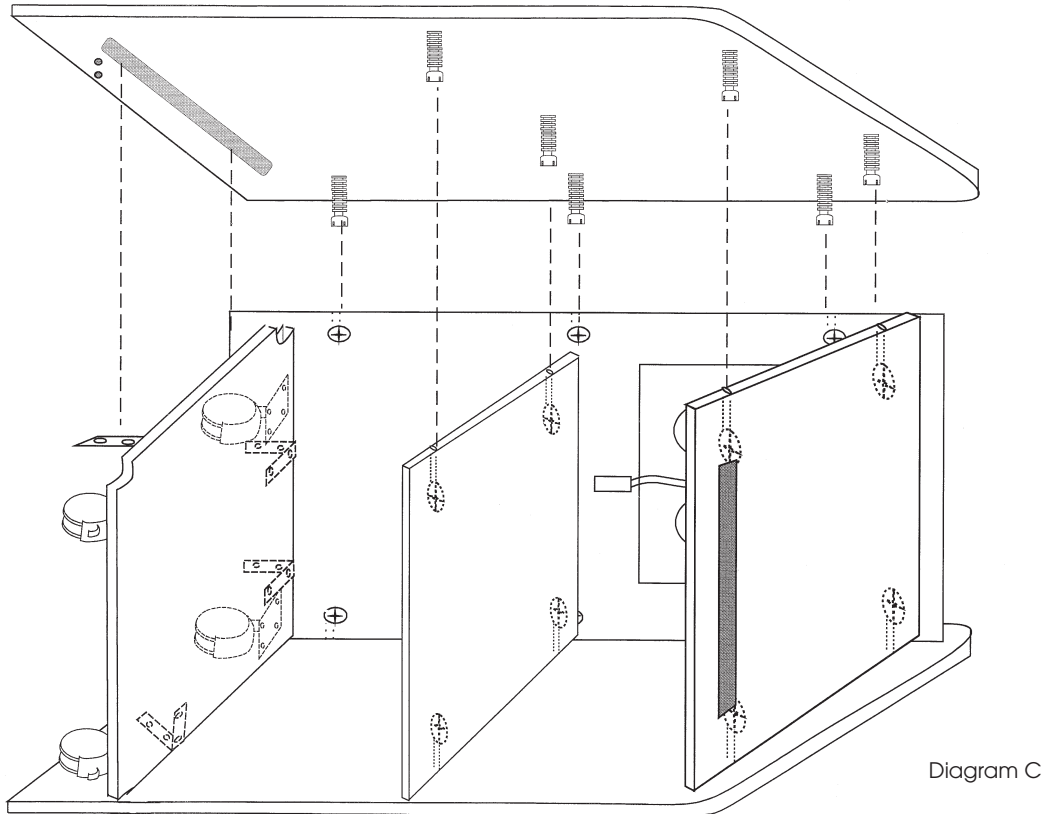

- 6) Screw the Corner braces, on the bottom of lectern, into the "SIDE PANEL" & the "FRONT PANEL".
- 7) Connect the plug coming out of the speakers on the front panel to the plug coming out of the back of the amp. Fit the amp between the two sides and bring the amp up until it reaches the cleats (wood stub) then from the bottom of the amp screw in four screws. (Diagram D)
- 8) Once again go over all the cams & check to make sure the lectern is sturdy.
- 9) Screw on gooseneck, mic holder and install microphone for sound use.

Congratulations! You have successfully assembled your lectern, which- if cared for correctly- should give you long & satisfactory usage.

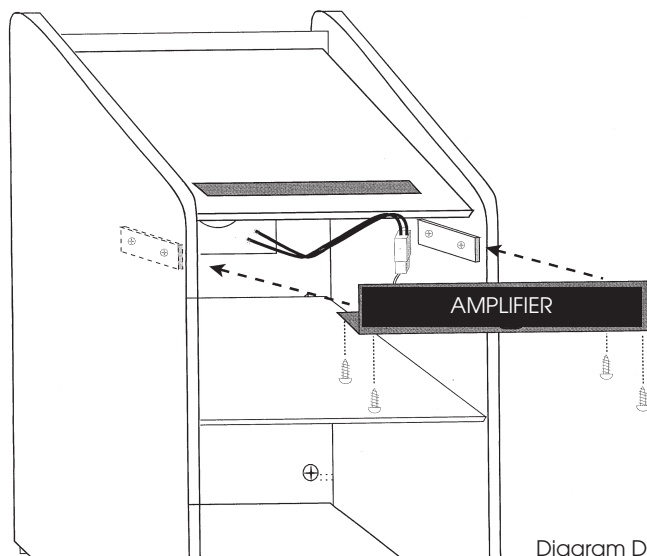

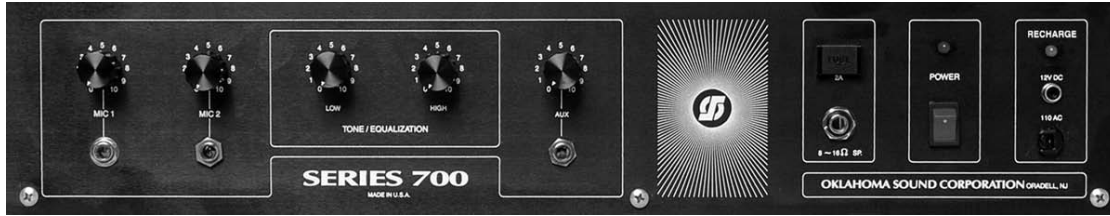

700 SERIES AMPLIFIER OPERATING INSTRUCTIONS

Operating Precautions

Before operating the amplifier, be sure you fully understand all instructions and features of the amplifier. DO NOT turn amplifier on until all input and output connections have been made. NEVER replace fuses unless power is off.

Microphone Input Connection

The microphone input accepts 1/4" phone jack. Do not position microphone next to or facing speakers. This may cause acoustic feedback.

Auxiliary Input

One auxiliary input is provided for radio tuner, tape recorder, CD player or multi-media equipment. Output level is adjusted by the auxiliary volume control.

Tone / Equalization Controls

The Low and High frequency controls are similar to the bass and treble controls found on most stereo systems. Optimum tone is achieved by first setting both knobs halfway; adjust Low and High frequency controls to suit environment.

Auxiliary / Line Out

Connect additional speaker line to navy line out connector of the amplifier. For maximum power transfer and to avoid amplifier overload, be sure that the total impedance of the speaker line matches the output impedance setting on amplifier. *Be sure* that speaker terminals are not shorted together by speaker line connecting cables. Can also be used for a recording device.

Power Supply 12V DC Operation

Connect a 12 volt rechargeable battery 5 Amp (not included) to the battery input connector located on the panel of the amplifier (using 6' battery cable). Be sure that the positive pole of battery is connected to the white wire terminal (+) and the negative pole to the Brass wire (-). When lectern is plugged into a standard wall outlet, the battery will automatically recharge. Green indicator light illuminates during recharge mode.

Precautions

- Set Mic volume control on lowest when turning unit on.
- Insure correct polarity for D.C. supply connections.
- Reverse connection will blow the fuse and may damage internal circuitry.
- Always replace fuse with specified rating.

Removal and Installation of Amplifier

If your amplifier has to be removed for servicing — follow these simple steps:

- 1) Disconnect A/C wall plug.
- 2) Remove 4 side screws two on each side panel under amp top.
- 3) Disconnect speaker wire at rear of amplifier.
- 4) Pack it into a strong box with ample cushioning and return to factory.
- 5) To install new amplifier reverse the above procedure.

OPTIONAL/ADDITIONAL EQUIPMENT

BRASS READING LAMP / #BRL

Attach an elegant brushed brass reading lamp to the reading table of your new Speaker Stand. Not only will you shed light on the subject, but you will add pizzaz to your new stand.



#BRL

RECHARGEABLE BATTERY / #PS12V

Connect this 12V 5 amp rechargeable battery pack with included cable to any of our lecterns for battery power. 20 hour life. Lecterns recharge battery overnight.



#PS12V

ARISTOCRAT CONTOUR

FLOOR LECTERN / #600

The perfect lectern for the most demanding, upscale look in your conference, training and formal meeting rooms. Contoured style with radius curves. Available in three woodgrain thermofused melamine laminate on MDF. Two built in shelves and our side mounted slide-out shelf for A/V presentation equipment. Accented by attractive T-Mold edging. Moves effortlessly on four easy roll castors, two locking. Ready to assemble.

Dimensions: 23" W x 46½" H x 16" D

Walnut, Lt. Oak, Med. Oak, Mahogany.



#600

ARISTOCRAT CONTOUR

TABLE TOP LECTERN / #60

Same upscale styling as its full floor sister, but in an easy-go table top version. Move this attractive, affordable lectern from room to room and keep your notes in order and your audiences wowed. Made of thermofused laminate in four color selections with T-mold edging. Protective non marring glides included. Assembly required.

Dimensions: 25" W x 15" H x 20" D

Walnut, Lt. Oak, Med. Oak, Mahogany.



#60

For these products please contact your dealer or Oklahoma Sound Corp.

OKLAHOMA SOUND CORP.

599 Industrial Avenue, Paramus, NJ 07652

Tel: 201-261-4111 • Fax: 201-261-4571

Web-Site <http://www.oklahomasound.com>

e-mail: info@oklahomasound.com