



SPECIFICATION SHEET Dishwasher Rinse Aid

Finish® Liquid Dishwasher Cleaner

Dual action formula tackles the hidden grease and limescale deep inside your dishwasher



Product Information

| Product | Units/Case | Unit Size | Reckitt Item # |
|-----------------------------------|------------|-----------|----------------|
| Finish® Liquid Dishwasher Cleaner | 6 | 8.45 oz | 51700-95315 |

Shipping Specifications

| | |
|----------------|-----------------------|
| Reckitt Item # | 51700-95315 |
| Package Size | 8.45 oz |
| Case Pack | 6 |
| Pallet Cases | 240 |
| Tie/High | 40/6 |
| Case Weight | 4.19 lbs |
| Case Cube | 0.13 cu. ft |
| Case L x W x H | 7.84 x 5.67 x 5.20 in |
| Item D x W x H | 1.26 x 5.39 x 5.00 in |
| Item Cube | 0.020 cu. ft |
| Item Weight | 0.66 lbs |
| Item UPC | 0-51700-95315-8 |
| CSC Case GTIN | 10051700953155 |

Technical Specifications

| | |
|----------------|-----------------------------------|
| Technical Data | Finish® Liquid Dishwasher Cleaner |
| Color/Form | Blue/Liquid |
| Fragrance | Minty |
| pH | 1.3 to 1.7 |

USE AEAS

- Dishwashers

DIRECTIONS FOR USE

1 bottle = 1 wash. Use every 3 months. Do not remove cap. Remove sticker from top of bottle to expose wax plug. Place bottle upside down in the bottom dish rack. Keep cap on and make sure the wax plug is exposed. DO NOT USE ANY SOAP OR DISHWASHER DETERGENT. Run the dishwasher empty on the hottest cycle (i.e. pots & pans, sanitization, etc.). Discard empty bottle at the end of the cycle. Fits all dishwashers.

For additional product information and Safety Data Sheet,
please visit www.rbnainfo.com

