



SPECIFICATION SHEET Dishwasher Tabs

Finish® Powerball® Deep Clean

Deep cleaning you can count on. A powerful performance breaks soils and removes the toughest stains.



Product Information

Finish® Powerball® Deep Clean	Units/Case	Unit Size	Reckitt Item #
Individually Wrapped - Fresh Scent	4	94 ct	51700-97330

Shipping Specifications

Reckitt Item #	51700-97330
Package Size	94 ct
Case Pack	4
Pallet Cases	60
Tie/High	15/4
Case Weight	16.62 lbs
Case Cube	0.69 cu. ft
Case L x W x H	15.16 x 7.87 x 10.00 in
Item D x W x H	3.74 x 7.56 x 9.88 in
Item Cube	0.162 cu. ft
Item Weight	4.08 lbs
Item UPC	0-51700-97330-9
CSC Case GTIN	10051700973306

Technical Specifications

Technical Data	Finish® Powerball® Deep Clean
Color/Form	White, Blue, Red/Solid
Fragrance	Fresh
pH	9.6 to 10

USE AEAS

- Dishwashers

DIRECTIONS FOR USE

Remove one tablet from its protective wrapper. Place the unwrapped tablet in the main dishwasher/detergent dispenser and close. Use one tablet per wash load. If tablet does not fit, consult the dishwasher manufacturer or manual for advice.

For additional product information and Safety Data Sheet,
please visit www.rbnainfo.com

