

# ZEBRA TC22/ TC27 CRADLE

7160-1856

The Zebra TC22/TC27 handheld computer cradle offers a rugged option to withstand the demands of today's mobile work environments. This product offers a simple and easy solution to secure your devices and helps prevent costly damages. Combine a Gamber-Johnson mounting solution with a Zebra TC22/TC27 cradle to create the best solution for any mobile work environment.

WEIGHT	HEIGHT	WIDTH	DEPTH
0.45 lbs / 0.2 kg	7.4 in / 18.8 cm	3.5 in / 8.89 cm	3 in / 7.62 cm

## GAMBER-JOHNSON MOUNTING OPTIONS

- 7170-1016: Zebra TC22-TC27 Cradle w-Zirkona medium joiner mount
- 7170-1017: Zebra TC22-TC27 Cradle w-Zirkona medium joiner suction cup mount
- 7160-1466: Zirkona 4" Diamond Mount with 6" Medium Dog-Bone and AMPs Plate

Find additional mounting options at [www.gamberjohnson.com](http://www.gamberjohnson.com)

## TESTING

- Vibration- Operational Random
- Vibration- Non-Operational Random
- Mechanical Shock -Bump
- Mechanical Shock- Safety Testing



## FEATURES

- Compatible with Zebra TC22/TC27 Handheld (Requires Zebra rugged boot: Zebra part number SG-TC2L-BOOT-01)
- Cradle accommodates the Zebra TC22/TC27 hand strap.
- Cradle accommodates Zebra extended battery
- Adjustable cable restraint holds USB-C cord securely in place. (USB-C cord not included with 7160-1856)
- Lightweight, small form factor designed to be resilient and reliable in harsh material handling and enterprise environments.
- Reduce costly damages by safely securing your device.
- Attaches to Gamber-Johnson mounting solutions using the AMPs hole pattern.
- Easy one-handed docking and releasing operation. Our living hinge design allows unit to easily slide into place and is secured in place.



RUGGED. RELIABLE. RESPONSIVE.

# ZEBRA TC22/TC27 CRADLE

7160-1856

## INSERTING THE DEVICE INTO THE CRADLE:

1. If you are using a USB-C cable to charge the device, the USB-C cable needs to be inserted into the bottom of the device before inserting the device into the cradle.
2. Insert the bottom of the device into the bottom of the cradle. If you have a USB-C cable inserted, the cable needs to go between the cable restraint fingers on the bottom of the cradle. **(REF. IMAGES 1 & 2)**
3. Cable restraint bracket adjusts up and down to hold the USB-C cable plugged into the device.
4. Rotate the top of the device into the cradle. The top latch will flex upward when the device is pushed into the cradle. **(REF. IMAGES 3 & 4)**
5. To remove the device, push upward on the top latch and pull outward on the device. **(REF. IMAGES 5 & 6)**

**NOTE:** the USB-C cable will come out with the device. Remove the cable from the bottom of the device by hand. Pulling the device outward to reach the cables limit, could damage the cable or the device.

