

MSI
MEGA PLAYER 536

User's Guide

Table of Contents

Safety Instructions	4
Chapter 1. Introduction	5
How to Use This Guide	6
Unpack.....	7
Chapter 2. Getting Started	8
Overview	8
LCD Display.....	10
Main Menu	10
Normal Playback Mode.....	11
Li-ion Battery Recharge	12
Battery Consuming Reference.....	12
Hold Switch.....	12
Chapter 3. Utility Installation	13
Connect MEGA PLAYER 536 to Your Computer.....	13
Install Utilities	13
Copy songs with Windows Media Player 9.....	14
Synchronize songs with Windows Media Player 10.....	15
Firmware Recovery or Updating	16
Safety Remove MEGA PLAYER 536 from Computer	17
Chapter 4. Basic Usage	19
Using Touch Button.....	19
Using Navigation Buttons	20
Using Exit/Submenu Button.....	20
Power On.....	20
Power Off	20
Music/Voice Playback	21
Adding songs to Playlist.....	22
Deleting songs in Playlist	22
Setting SRS(WOW) Enhancement Effect	23
Setting EQ	24
Setting Repeat Mode	24
Viewing Photos.....	25
Slideshow	26
Rotating Photos	26
Playing Video	27

FM Radio Mode (Optional).....	28
File Browser	29
Setting.....	31
Setting Record Quality	31
Setting Record File Type.....	32
Setting Slide Interval.....	33
Setting Slide Repeat	33
Setting Power Off.....	34
Setting Backlight Off.....	35
Setting Language.....	36
Setting Date and Time	36
Setting Brightness.....	37
Resetting to original setting.....	38
Device Information.....	39
Encoding MP3 Directly from CD.....	39
Microphone Recording.....	40
Radio Broadcast Recording (Option)	41
Language Learning Function.....	42
Reset Button	43
Appendix A. Specifications.....	44
Appendix B. Utility CD.....	45
Install Firmware Recovery Utility.....	45
Install Windows Media Player Plug-In.....	45
Install Adobe Acrobat Reader.....	45
Read MEGA PLAYER 536 User Manual.....	45

Safety Instructions

1. Always read the safety instructions carefully.
2. Keep this User's Guide for future reference.
3. Keep this equipment away from humidity.
4. Never pour any liquid into the opening that could damage or cause electrical shock.
5. If any of the following situations arises, get the equipment checked by a service personnel:
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment has not worked well or you can not get it work according to User's Guide.
 - The equipment has been dropped and been damaged.
6. If any failure occurred to **MEGA PLAYER 536**, use a clip or a pin to click the Reset button on the back side, and then slide the Power switch once to power on the system.
7. Do not change the default folders in the **MEGA PLAYER 536**, or the device might function abnormally.
8. Do not format the built-in hard disk.

Chapter 1. Introduction

Congratulations on becoming a new user of **MEGA PLAYER 536**. The new **MEGA PLAYER 536** will improve the convenience of listening music, viewing photos, videos and sharing data. We are proud to tell our users that **MEGA PLAYER 536** is thoroughly tested and certified by our reputation for unsurpassed dependability and customer satisfaction.

MEGA PLAYER 536 is a high performance portable digital audio/video player and a photo browser that enables users not only to play MP3, WMA, WMA with DRM audio files or M-JPEG video files, show JPEG graphic files, listen to the **FM** radio broadcast (FM radio is an optional function), and record voice, FM program or directly record whenever needed, but also to store personal data in the memory of this device.

Here are the major features:

- **Digital Audio Player** – supports MP3, WMA and WMA with DRM audio files playback.
- **Video Player** – supports M-JPEG format and the smaller the 320x240 pixels video files.
- **Photo Browser** – supports JPEG graphic files and provides slideshow function.
- **FM Radio (optional)** – the FM Radio module, while optional, receiving FM Radio function will be plus in **MEGA PLAYER 536**.
- **Voice Recorder** – provides synchronous recording function for voice.
- **Radio Program / CD Direct Recording** – provides synchronous recording function for FM or directly from a CD player, recorded files will be stored in MP3 or WAV format.

- **Language Learning Function** – enables users to repeat particular section during normal playback. With this function, users will be able to pay attention on the repeated playback to learn language.
- **EQ and SRS effect** – you are able to select SRS effect or one of EQ mode to enjoy your music listening.
- **SD/ MMC Card** – supports SD/ MMC card, plug the card into slot to read the files inside.
- **Photo Bank** – you can transfer the data from the digital camera to the internal HDD. Especially when your digital camera memory is full and you want to release the space, it is a helpful function.
- **USB Flash Disk** – allows users to store data needed in **MEGA PLAYER 536**. (The capacity depends on the model you bought.)

How to Use This Guide

This User's Guide provides instructions and illustrations on how to install and operate your **MEGA PLAYER 536**. We assume that those users whose operating system is at least Windows ME / 2000 / XP are familiar with their OS, and are capable to follow the step-by-step instructions to install the driver of **MEGA PLAYER 536**. For users who are not able to manage the operating system properly, it is suggested to learn more about Microsoft Windows by referring to your Microsoft Windows manual before installing the provided utility.

Chapter 1, **Introduction**, tells you the descriptions of all the accessories of **MEGA PLAYER 536**. Please check if you have all the accessories included when you open the packing box. If any item is damaged or missing, please contact the vendor where you purchased **MEGA PLAYER 536** directly.

Chapter 2, **Getting Started**, introduces the function keys on **MEGA PLAYER 536**, the LCD Display status in different mode.

Chapter 3, **Utility Installation**, describes how to install **MEGA PLAYER 536** and the specially designed utility for your new **MEGA PLAYER 536**.

Chapter 4, **Basic Usage**, describes how to use **MEGA PLAYER 536** in various ways. It is recommended to read this chapter carefully before using **MEGA PLAYER 536**.

Appendix A, **Specification**, provides the specification and accessories of **MEGA PLAYER 536**.

Appendix B, **Utilities CD**

Unpack

Please unpack your **MEGA PLAYER 536** and check that the following accessories are complete with nothing missing.

MEGA PLAYER 536 (Portable Digital Audio Player)

Earphone

USB Regular Cable

USB Host Cable

Driver Disk (User's Manual included)


Quick Starting Guide


Power Adaptor

Line-in Cable

Chapter 2. Getting Started

Overview

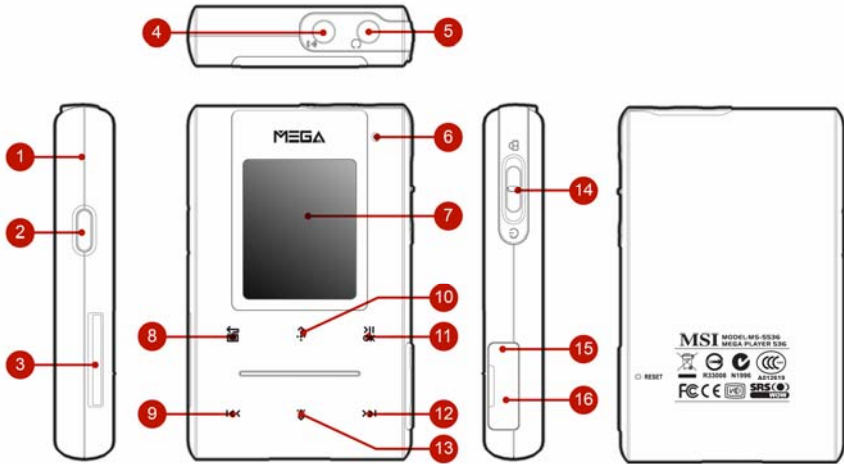

1. **MIC** Internal Microphone.
2. **Record/Repeat A->B** Press to record voice or enable the A to B repeat function.
3. **SD/ MMC Card Slot** Plug SD or MMC card to read and manage the files.
4. **Line-In Jack** Plug the external Line-In device here.
5. **Earphone Jack** Plug the supplied earphone here.
6. **LED Indicator** Indicate the device status.
7. **Display Window** Read status and information at this window.
8.  **Exit/Submenu Button** Press it to exit from menu.
Down and hold it for two seconds to display the

options available.

9. ⏮ Left/Previous/Rewind Button

Press it to go the previous track.

Press and hold to move back within a track.

10. ⏶ Up/Volume Up Button

Press it to select menu items.

Press it to increase volume level.

11. ⏵ Play/Pause/Enter Button

Press it to play the selection of track. While playing press the button to pause and press it again to resume the track.

Press it to confirm the item selection.

12. ⏭ Right/Forward Button

Press it to go the next track.

Press and hold to move fast-forward within a track.

13. ⏵ Down/Volume Down Button

Press it to select menu items.

Press it to decrease volume level.

14. Power/Hold

Push to Power position to power on.

Push and hold to Power position to power off.

Switch to hold position to prevent any miss touching while **MEGA PLAYER 536** is recording or playing. Switch to the middle to unlock the prevention.

15. USB Connector

Connect one end of the supplied USB extension cable here.


- Connect USB Host cable to DSC or USB flash disks.

- Connect regular USB cable to computers.

Connect to the power adapter.


16. DC Connector

LCD Display

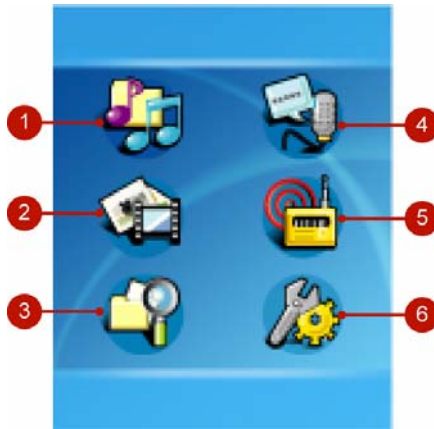


Main Menu

- | | |
|------------------------|---------------------------------------|
| 1. Music | Play music |
| 2. Multi-Media | Play multimedia files |
| 3. File Browser | Management files |
| 4. Record | Play recorded voice, music and radio. |
| 5. Radio | Listen to the radio (Optional) |
| 6. Setting | Adjust setting values of the device |

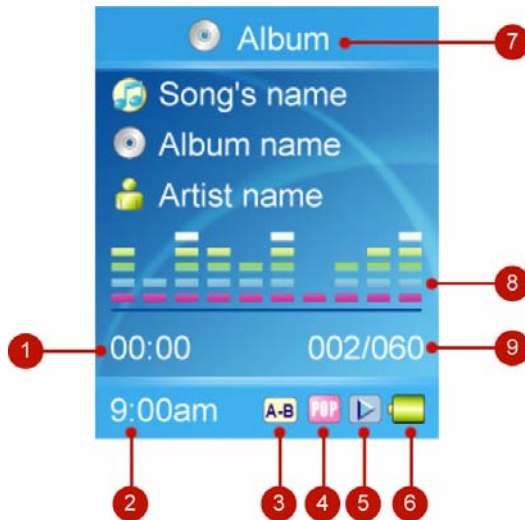 

Normal Playback Mode

1. **Track Timer** Displays the on going timer of the current playback file.
2. **Clock** Displays current local time.
3. **Repeat/A-B** Indicates when A to B Section Repeat function is enabled.
4. **EQ/SRS** Indicates  status or the EQ mode settings that include Normal, Classical, POP, Rock, and Jazz.
5. **Play/Pause/Stop** Displays the music or voice files playback status.
6. **Battery** Indicates the Battery Status.
7. **Info of music** Indicates Title, Artist and Album Title.
8. **Equalizer** Shows the equalizer bar of current playback.
9. **Track Number** Display the current playback number and the total number of sound tracks.

Li-ion Battery Recharge

MEGA PLAYER 536 comes with a Li-ion rechargeable battery. To use the device for the very first time, remember to charge the Li-ion battery. Follow the instructions below:

1. Open the rubber cover of **MEGA PLAYER 536** USB/DC port, you will see a DC input port inside.
2. Connect **MEGA PLAYER 536** to the adapter, and plug it to AC power outlet.
3. While recharging is on going, the LED will be light in orange color. If the LED changes to green, the battery is full of power. The built-in battery is 80-percent charged in about three hours, and fully charged in about five hours.
4. To stop recharging, disconnect cable from **MEGA PLAYER 536**.

Note: The built-in battery will not be recharged when MEGA PLAYER 536 is connected to the computer with the supplied USB cable.

Battery Consuming Reference

MEGA PLAYER 536 comes with a Li-ion rechargeable battery.

Note: Before using for the first time, we recommend eight hours for a full battery charge.


Hold Switch

MEGA PLAYER 536 has a Hold Switch, which is located on the side of the device for preventing any accidental operation while **MEGA PLAYER 536** is recording or playing. Once the Hold Switch is slide to the lock position, all function keys on **MEGA PLAYER 536** will be disabled instantly.

Chapter 3. Utility Installation

Connect MEGA PLAYER 536 to Your Computer

1. Open the rubber cover of **MEGA PLAYER 536** USB/DC port, you will see a mini USB (AB-type) port inside.
2. Plug one end of the supplied USB regular cable to **MEGA PLAYER 536**, and plug the other end to your computer.

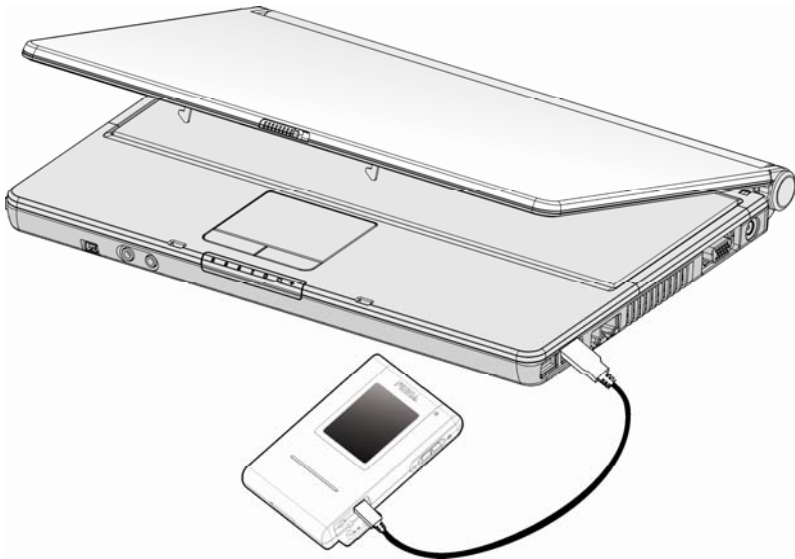

3. Once **MEGA PLAYER 536** is connected to computer, it should be detected by the operating system automatically.

Install Utilities

The supplied Driver CD includes a **MEGA PLAYER 536** specialized utility. It is recommended to install even if your operating system is Windows ME, 2000


or XP. Then, your system can recognize and fully support this device. The driver program includes a Windows Media Player plug-in function. Simply insert the supplied disk into the CD drive, and then follow the on-screen instructions to complete the installation.

Copy songs with Windows Media Player 9

Once you installed the **MEGA PLAYER 536** utility, you will be able to update and synchronize songs and information of songs with Windows Media Player.

Note: Requires Windows Media Player 9 or higher

1. Connect **MEGA PLAYER 536** to your computer.
2. Start **Windows Media Player 9**.

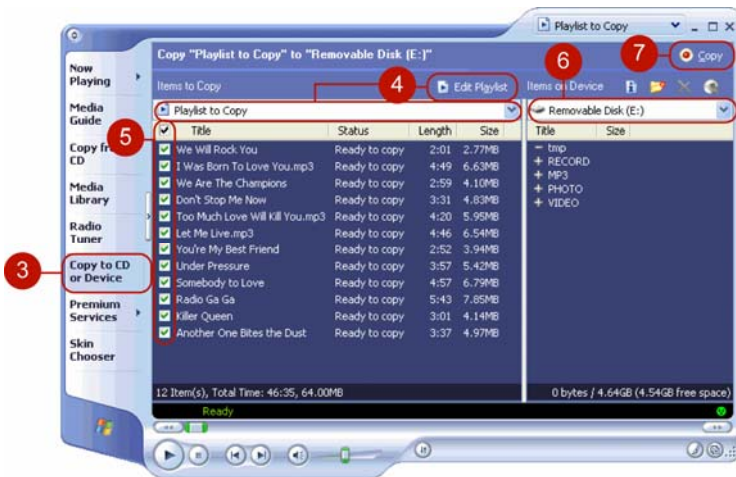


3. Click “Copy to CD or Device”.
4. In the Items to Copy pane, in the drop-down list, click the playlist, category, or other item that you want to copy.
5. Clear the check boxes next to any files you do not want to copy.
6. In the Items on Device pane, in the drop-down list, click the device **Portable Digital Player**.


7. Click the **Copy** button.
8. When an item is copied to MEGA PLAYER 536, the Status column in the Items to Copy pane displays the following information for each item:
 - **Inspecting**. Windows Media Player verifies that there is enough storage space on the portable device, and inspects the selected files for errors.
 - **Converting/Converted** (includes the percentage of conversion done). If necessary, each file is converted to the selected quality level or compression rate.
 - **Copying** (includes the percentage of copy done). The file is being copied.
 - **Complete**. The copy is done.

Synchronize songs with Windows Media Player 10

 1. Connect **MEGA PLAYER 536** to your computer.

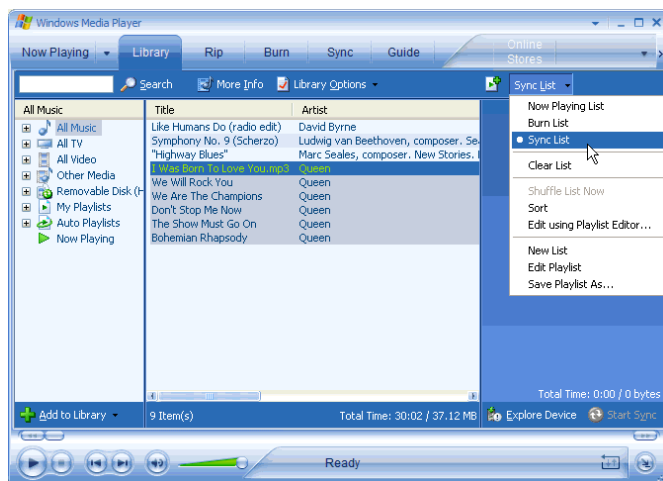

2. Start **Windows Media Player 10**.
3. In the **Library** feature, in the **Playlist** pane, click <List name> **List**, and then click **Sync List**.

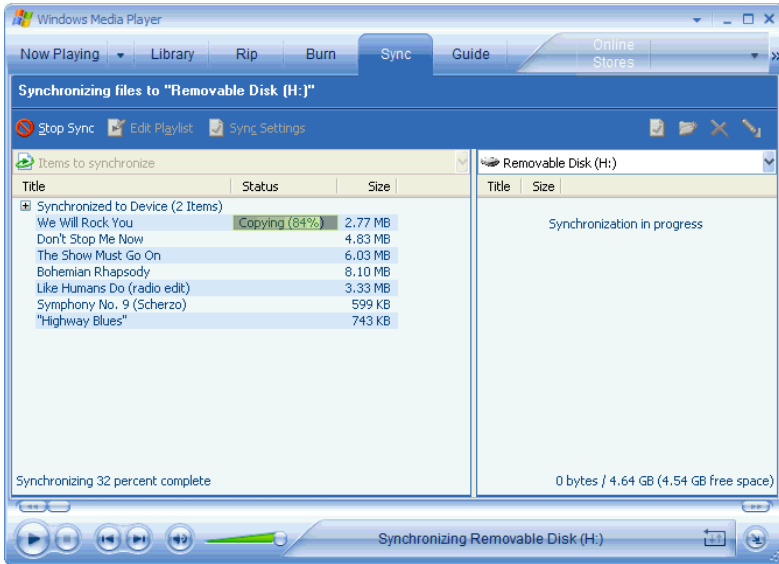

4. In the Items on Device pane, select **Portable Digital Player**.
5. Click the **Start Sync** button in the List pane.
 - Once you installed the **MEGA PLAYER 536** utility, you will be able to update and synchronize songs and information of songs with Windows Media Player.

Firmware Recovery or Updating

NOTE: THIS IS AN ADVANCED OPERATION. NORMAL USERS ARE NOT RECOMMENDED TO PERFORM THIS OPERATION!


To recover or update the firmware, download the latest firmware from MSI website or on the supplied CD, and then unpack the file. After the data is unpacked a folder will be created containing the files required for the firmware update.

1. Connect **MEGA PLAYER 536** to your computer.
2. Double-click the "Firmware Recovery Utility" icon included in the folder

where the files were unpacked.

3. Click “Update”, it will take few seconds.


Note: If you update firmware, the data and files stored inside may be all erased! Make sure you have a backup before you update.

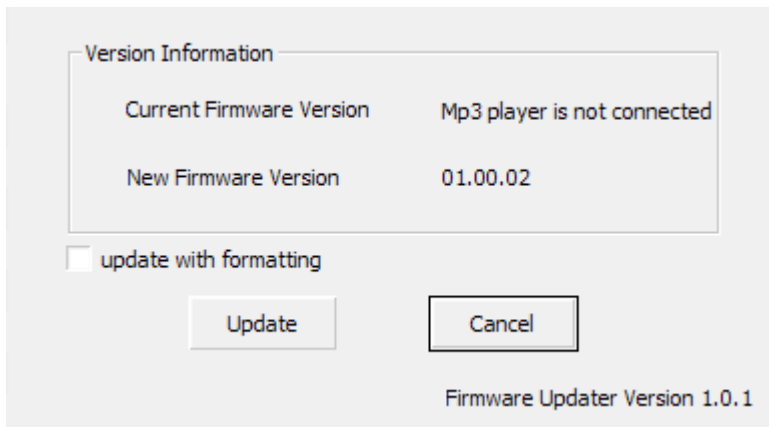


4. Turn the device off, and then disconnect the USB cable from the device.

Safety Remove MEGA PLAYER 536 from Computer

After managing the files or updating firmware, you have to follow the steps to safely remove the **MEGA PLAYER 536**, to prevent system or device corrupt:

1. While an USB device is connecting to computer, there will be an  icon on the task bar. Double click the icon to bring the Safely Remove Hardware dialog box. You can find all the devices connected on the display. To remove **MEGA PLAYER 536**, close all the programs related, and click **USB Mass Storage Device** and **Stop** button.

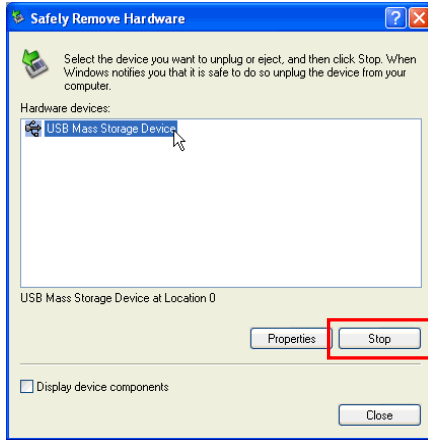

2. Click **USB Mass Storage Device** and **OK**

There will be the following message, and you can remove the device now.




Chapter 4. Basic Usage


Using Touch Button

Down and hold the \uparrow or \downarrow button to scroll through menu items rapidly.

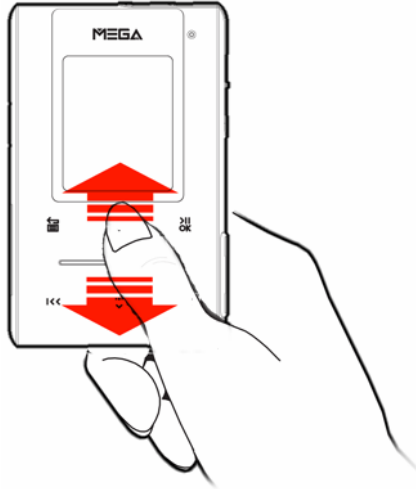

 

 



 
 
Note: when you touch the button the blue LED under the panel should lighten automatically.

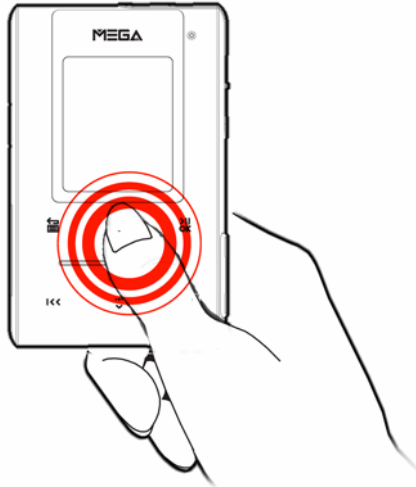



Lightly tap a button to select an item.



Using Navigation Buttons

Use Navigation Buttons to navigate through menus, play music, play video, browse photos and arrange files. In this document, we will use the term, “Select”, to mean that you should lightly tap the  /  /  /  button to browse through options, and then select the option by lightly tap the  button. You can adjust volume levels with the  /  button. Tap the  button to up to increase volume,  to decrease volume, also pause during music or video is playing with  button, and then tap the  button again to resume.

Using Exit/Submenu Button

Use the  button to exit from folders, menus or call submenu. In this document, we will use the term, “Call submenu”, to mean that you should down and hold  button for two seconds to display the options available.

Power On

1. Slide Power Switch once.
2. The screen will display the last mode.


Note: Start Logo will be displayed at the first time power on.

Power Off

Slide the Power switch and hold for two seconds.

Music/Voice Playback


1. To play music stored on the built-in hard disk or SD card, select the **Music** item in Main Menu.
To play recorded voice, select the **Record** item.

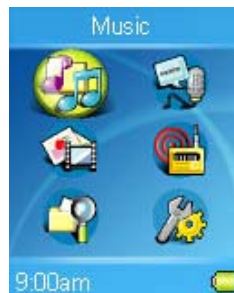

2. Select a music file to play or select a Playlist item to play music files according to the play list.


Note:

- To play music from the SD card which is installed in the SD card slot, select the **SD** item, and then select a music file.
 - To play all of your music by the same artist/album, select the **Artist/Album** item.
 - Please refer to Chapter 2 Synchronizing music with Windows Media Player. Otherwise, the playlist of Artist or Album might not be updated.
-

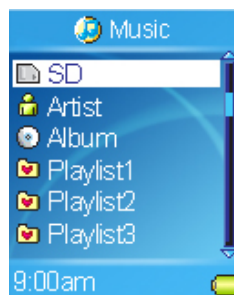


Adding songs to Playlist

1. In playback mode, call submenu.
2. Select the **Add to PL** item.

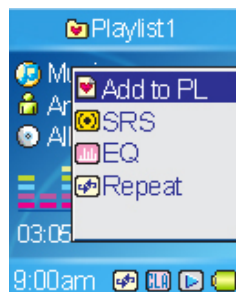


3. Select a Playlist number you want to add to.

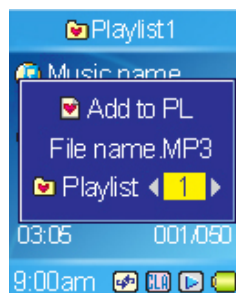

Deleting songs in Playlist


1. Select the **Music** item in Main Menu.
2. Select the Playlist you want edit.
3. Use $\hat{\downarrow}$ or $\hat{\uparrow}$ button to scroll the song you want to delete, and then call submenu.
4. Select Delete in the submenu.

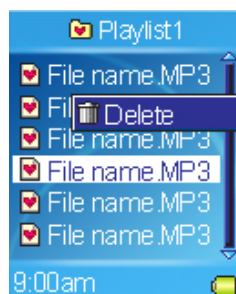


Setting Enhancement Effect

WOW is a special combination of SRS audio technologies that creates a thrilling experience with deep rich bass from sound source. **Note that once SRS is enabled, the EQ settings will be disabled at the same time.**


1. In playback mode, call submenu.
2. Select the SRS item.

 is a trademark of SRS Labs, Inc.


WOW technology is incorporated under license from SRS Labs, Inc.

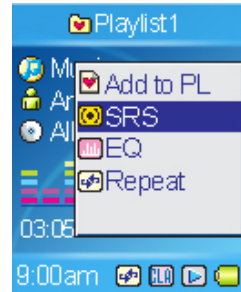

3. Select On to enable the SRS(WOW) effect.
Select Off to disable the SRS(WOW) effect.

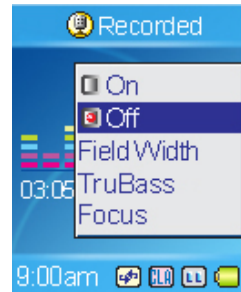


4. Also you can select the other sound effects Field Width, TruBass, or Focus and then adjust the values.

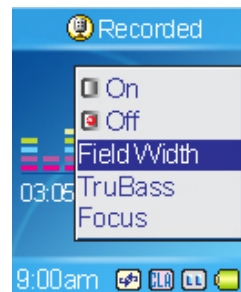

Setting EQ


MEGA PLAYER 536 provides various **EQ** modes, such as **POP**, **Rock**, **Jazz**, and **Classical**, for users to choose as following step to increase the enjoyment of listening to music, and to meet the personal need or habit.

1. In playback mode, call submenu.
2. Select the **EQ** item.

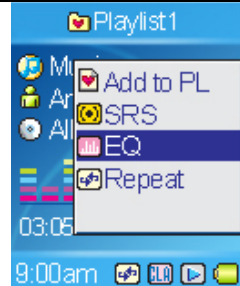


3. Select Normal, POP, Rock, Jazz or Classical.

Note: Once EQ is enabled, the SRS(WOW) settings will be disabled at the same time.

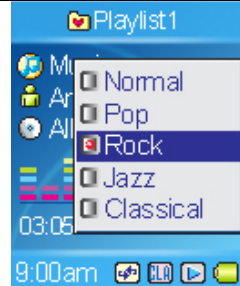


Setting Repeat Mode

1. In playback mode, call submenu.
2. Select the **Repeat** item.

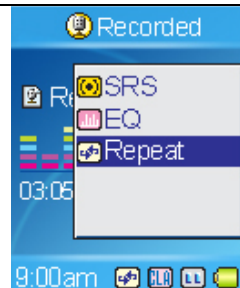

3. Select one of the following items in the **Repeat** mode screen.

- a. **Normal:** Plays users selected tracks in sequential order.
- b. **Repeat one:** Repeat the current track.
- c. **Repeat All:** Repeat all selected tracks.
- d. **Shuffle:** Plays all selected tracks in random order, once only.
- e. **Shuffle REP:** Plays and repeats all selected tracks, in random order.

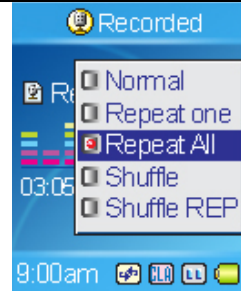

Viewing Photos

1. To view photos stored on the built-in hard disk or SD card, select the **Multi Media** item in Main Menu.




2. Select **Photo** item in Multi Media menu.




3. Select a photo file to view in Browser Menu.


Note:

- To view photo from the SD card which is installed in the SD card slot, select the **SD** item, and then select a music file.

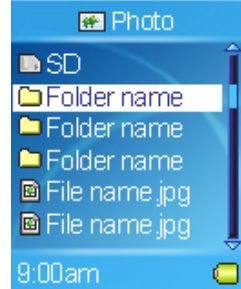

Slideshow

To play slideshow, tap  button while viewing photos. You can set how long each image is displayed, please refer to **Setting Slide Interval**.

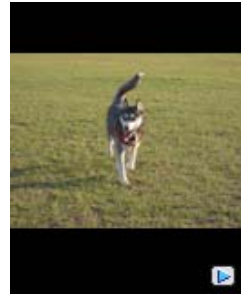

Rotating Photos

To rotate photos, call submenu while viewing photos, and then select the **Rotate** item.




Playing Video

1. To play video stored on the built-in hard disk or SD card, select the **Multi Media** item in Main Menu.




2. Select **Video** item in Multi Media menu.




3. Select a video file to play in Browser Menu.
4. You can tap the  button to pause or resume the video.

Note:

- To play video from the SD card which is installed in the SD card slot, select the **SD** item, and then select a video file.

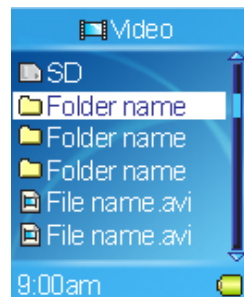

FM Radio Mode (Optional)

1. To listen to the radio broadcast, select the **Radio** item in Main Menu.
2. When the radio frequency appears on the LCD screen, tap the >>| or |<< button to adjust and search the frequency you want, or select the CH by tap the  button. also you can hold down the buttons to adjust faster.



To save the frequency in a channel, call submenu, select the **Save CH** item. Select a CH(Channel), and then use left button to select “Yes”.



To automatically scan and save radio stations, call submenu, and then select the **Auto Preset** item.




File Browser

MEGA PLAYER 536 provides an easy access to files management. File Browser can arrange files stored on the SD card and the built-in hard disk. If you want to read files stored on the SD card, Please plug the SD card first.



In addition **MEGA PLAYER 536** can backup data as a data/photo bank from portable disks and digital cameras.

If you want to manage files on the USB device, or backup data to the USB device, firstly plug one end of the USB Host cable to the **MEGA PLAYER 536** USB port, the other end to the

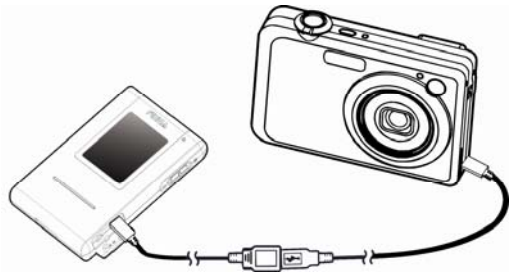


proprietary cable of the USB device, such as digital camera and USB stick, and then go through with following steps.

Note: The USB device should be turned on the power before connection, or it will not be detected by MEGA PLAYER 536.

Note: Some outdated USB disk or digital cameras may not support.

Note: We strongly recommend that using MEGA PLAYER 536's power adaptor while it connect to USB device. When MEGA PLAYER 536 in low battery status, plugged with the power-consuming USB device may cause system power insufficiency and then turn off automatically.


-
1. Select the **File Browser** item in Main Menu.

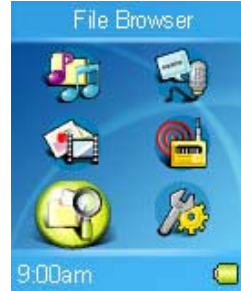

-
2. Select the **file** you want to copy or delete.

-
3. Call submenu, select one of the following items in the submenu.

- a. **Copy to hdd:** Copy the file to MEGA PLAYER 536 built-in hard disk.
- b. **Copy to usb:** Copy the file to the USB device.
- c. **Delete:** Select Delete and then select YES to confirm and remove the file.

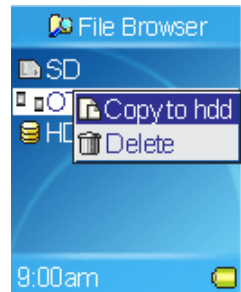

*Note: You can only use **File Browser** to delete files on the SD card, therefore the **Copy** item is not available for **SD** submenu.*

-
4. When the file is copying or deleting, a percentage pop-up window will appear on the screen.
 5. When it is complete, the “Finish” message will show on the screen.

Note: Please do not remove the SD card or turn off the device until it is completed.

Setting

MEGA PLAYER 536's setting can be adjusted to suit your needs.




Setting Record Quality

1. Select the **Setting** item in Main Menu.
2. Select **Record**.



3. Select the **Quality** item.

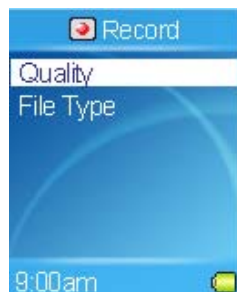

-
4. Select one of the items you want in the **Quality** selection screen.




Setting Record File Type

This function can encode the audio source to MP3 format files directly when users are recording.

1. Select the **Setting** item in Main Menu.
2. Select the **Record** item.



3. Select the **File Type** item.

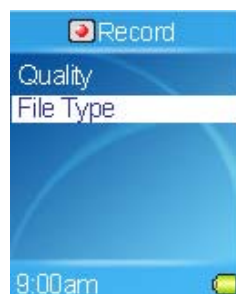

-
4. Select the File Type setting that you want.



Setting Slide Interval

You can set how long each image is displayed.

1. Select the **Setting** item in Main Menu.
2. Select the **Slide Interval** item.



3. Select a Slide Interval setting that you want.



Setting Slide Repeat

You can repeat to play photo slideshow.

-
1. Select the **Setting** item in Main Menu.
 2. Select the **Slide Repeat** item.



-
3. Select On to repeat slideshow. Select Off to play the slideshow only once.



Setting Power Off

You can set the timer under **Power Off** setting to turn off **MEGA PLAYER 536** automatically when it is playing or recording for a certain time.

-
1. Select the **Setting** item in Main Menu.
 2. Select the **Power Off** item.



-
3. Select the Power Off setting you want.




Setting Backlight Off

Backlight timer program can save the power. After having been idle for few seconds, the device will run the Backlight timer program automatically and cease the backlight, you can press any button to wake the backlight up.

1. Select the **Setting** item in Main Menu.
2. Select the **Backlight Off** item.



3. Select the Backlight Off setting that you want.

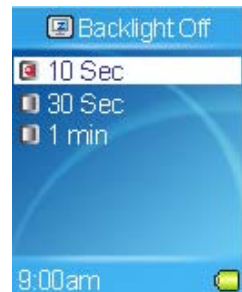

Setting Language

1. Select the **Setting** item in Main Menu.
2. Select the **Language** item.



3. Select a language you want to use.




Setting Date and Time


1. Select the **Setting** item in Main Menu.
2. Select the **Date/Time** item.



-
3. To adjust how the time is displayed, select the Time Format item, and then select 12 hour or 24 hour.
 4. Select **Set Time** or **Set date** to change the time or date settings.




-
5. The current time or date is displayed.
 6. Set the time or date, and then tap the  button to confirm and exit.

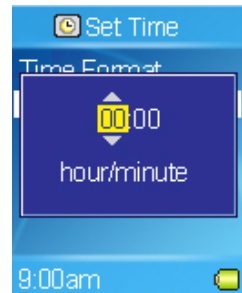

Setting Brightness

1. Select the **Setting** item in Main Menu.
2. Select the **Brightness** item.



-
3. Adjust the brightness setting, and then tap the  button to confirm and exit.



Resetting to original setting

1. Select the **Setting** item in Main Menu.
2. Select the **Master Reset** item.




3. Select the **Yes** item.




Device Information

1. Select the **Setting** item in Main Menu.
2. Select the **Info** item.

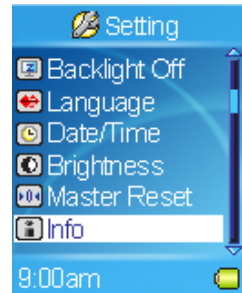


3. You can read device information on the screen.

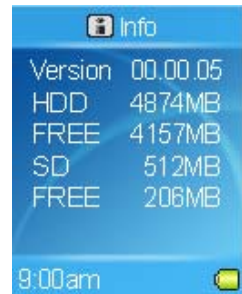

Encoding MP3 Directly from CD

MEGA PLAYER 536 has a build-in CD-to-MP3 encoder, that's able to record via Line-In.

1. Connect to a Walkman, Computer, Radio, TV, and Audio Equipment or plug a Microphone.

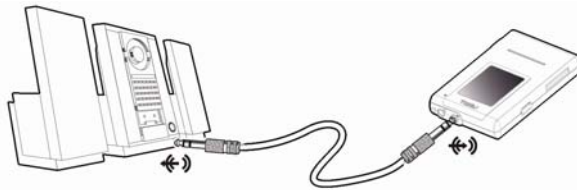


-
1. Set **Setting** -> **Record** -> **File Type** to **MP3**.

(Please refer to **Setting Record File Type** in Cheaper 4)

2. Press the **A**→**B/REC** button to start recording and then play music from the audio source.



3. On the Display, a recording file should be generated and placed under the folder of [/RECORD/]. The file name sequence starts from [**LineIn001.mp3**], and then [**LineIn002.MP3**], and so forth.

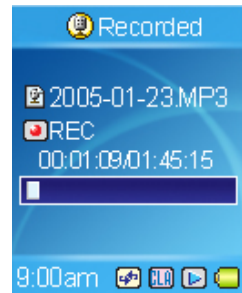

4. Press the **A**→**B/REC** button again to stop recording, and you will see the status jump to the file list in the RECORD folder.




Microphone Recording

MEGA PLAYER 536 also works as a synchronizing recorder. You are allowed to use it for Microphone Recording. In different word, you can use it to record your own voice, an interview or a speech via internal microphone. To do the


Microphone Recording, please follow the steps shown below.

1. Press the **A→B/REC** button to start recording.

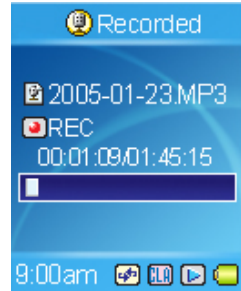

-
2. On the Display, a recording file should be generated and placed under the folder of [/RECORD/]. The file name sequence starts from [LineIn001.mp3], and then [LineIn002.mp3], and so forth.

-
3. Press the **A→B/REC** button again to stop recording. It will be encoded to a MP3 format file and save in the RECORD folder in the **MEGA PLAYER 536** automatically, and you will see the status jump to the file list in the RECORD folder.

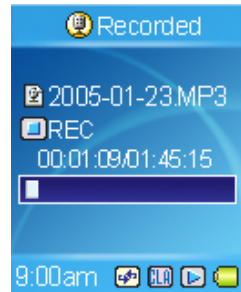

Radio Broadcast Recording (Option)

1. Select a radio broadcast channel that you want to record.
2. Press the **A→B/REC** button to start recording.
3. On the Display, a recording file should be generated and placed under the folder of [/RECORD/]. The file name sequence starts from [FM01.MP3], and then [FM02.MP3], and so forth.



-
- Press the **A→B/REC** button again to stop recording, and you will see the status return to the previous status.




Language Learning Function


MEGA PLAYER 536 enables users to listen to a particular section repeatedly during music or voice playback. With this function, users will be able to pay attention to the repeated section and to achieve the result of language learning.

During music playback:


- Press the **A→B/REC** button to set the starting point when playback. The **A-** icon will appear on the middle bottom of the screen.

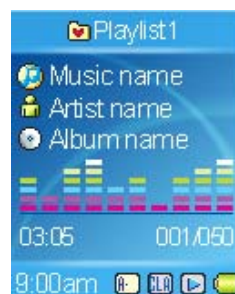

-
2. Press the **A→B/REC** button again to set the terminal point. The **A-B** icon will appear on the screen. You will hear the repeating playback that you have set previously again and again.

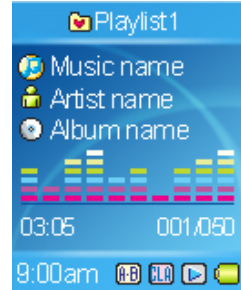

-
3. Press the **A→B/REC** button again back to the normal playback. Meanwhile the **A-B** icon will disappear on the screen.

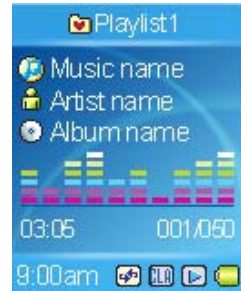


Reset Button

NOTE: THIS IS AN ADVANCED OPERATION. NORMAL USERS ARE NOT RECOMMENDED TO PERFORM THIS OPERATION!

MEGA PLAYER 536 provides a **Reset Button** on the back side of device. Please note that you only need to use this button if the device does not respond for several minutes. The button is like a power down button of the device. You can turn off the device by using a reset tip, such as a straightened paper clip with diameter of 1.2mm. Once you Press reset button, the adjustments you made during last operation will be gone.



Appendix A. Specifications

MEGA PLAYER 536	
Dimension	88.5 (W) x 50 (D) x 15.6 (H) mm
Weight	95g (with built-in battery)
Operating Temperature	0°C ~ 45°C
Storage Temperature	0°C ~ +60°C
Audio Spec	Max Output : 36mW rms (18mW / channel), support SRS  function. Frequency: 20 to 20K Hz SNR: >90dB
LCD module	1.8" CSTN 128x160 pixels module
Line-In / Voice / FM Recording	Record format: MP3, WAV
USB Flash Disk	1. Meets USB specification revision 2.0 2. Supports OS: Windows ME, Windows 2000, Windows XP Home/ Pro, Mac OS 9 and above
Built-in HDD	1"HDD
I/O Input	1. Stereo Audio-out, 3.5mm 2. Stereo line-in jack, 3.5mm 3. USB port for USB Slave and USB Host.
EMI and Safety	FCC Class B, CE ,BSMI, CB
Interface Language	Supports up to more than 10 languages which may vary from country to country.
Earphone	Stereo output: 30mW rms (15mW / channel)
Battery Life	Up to 8hrs audio playback.

Appendix B. Utility CD

Insert the supplied CD disk into the CD drive.

- **Install Firmware Recovery Utility**

Recover the firmware of the device.

- **Install Windows Media Player Plug-In**

This plug-in allows you to synchronize data of songs with Windows Media Player 9 series or higher.

- **Install Adobe Acrobat Reader**

A free software for viewing and printing Portable Document Format (PDF) files. To read the **MEGA PLAYER 536** User Manual, you also have to install the Adobe Acrobat Reader.

- **Read MEGA PLAYER 536 User Manual**

This PDF document is packed in the CD, click on the button to read.