



How to Use This Manual  
 Printing This Manual

# MX860 series On-screen Manual

MC-3456-V1.00



## Basic Guide

Describes the summary of this product.



## Advanced Guide

Describes the detailed function of this product.



## Troubleshooting



## Contents

### Safety Precautions

### Overview of the Machine

- Main Components
- How to Navigate Menus on the LCD

### Setting Up the Machine

- Confirming the Telephone Line Connection
- Specifying the Basic Settings for the Machine
- Setting the Receive Mode

### Printing from a Memory Card

- Printing Photos Saved on the Memory Card
- Using Various Functions
- Inserting the Memory Card

### Copying

- Making Copies
- Using Various Copy Functions

### Scanning

- Saving Scanned Data
- Using Various Scan Functions

### Printing from Your Computer

- Printing Photos (Easy-PhotoPrint EX)
- Printing Documents (Windows)
- Printing Documents (Macintosh)

### Faxing

- Sending Faxes
- Using Various Sending Functions
- Receiving Faxes
- Using Various Receiving Functions
- Using Useful Fax Functions

### Other Usages

- Printing the Notebook or Graph Paper
- Printing Photos Directly from Your Digital Camera or Mobile Phone
- Machine Settings
- Solution Menu and My Printer

### Loading Paper / Originals

- Loading Paper
- Loading Originals

### Routine Maintenance

- Replacing an Ink Tank
- When Printing Becomes Faint or Colors Are Incorrect
- Cleaning the Paper Feed Roller
- Cleaning the Pad in the Cassette

### Appendix

- Legal Limitations on Use of Your Product and Use of Images
- Tips on How to Use Your Machine

**Basic Guide****Advanced Guide** **Troubleshooting**




[Contents](#) > Safety Precautions

## **⚠ Safety Precautions**

Please read the safety warnings and cautions provided in this manual to ensure that you use the machine safely. Do not attempt to use the machine in any way not described in this manual. It causes unexpected accident, fire, or electric shock.

### **⚠ Warning**


- This product emits low level magnetic flux. If you use a cardiac pacemaker and feel abnormalities, please move away from this product and consult your doctor.
- The following are instructions that, if ignored, could result in death or serious personal injury caused by incorrect operation of the equipment. These must be observed for safe operation.

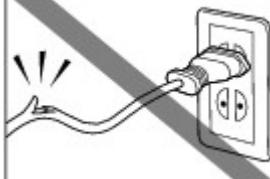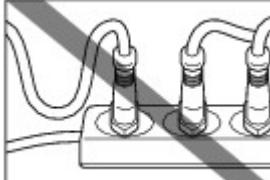
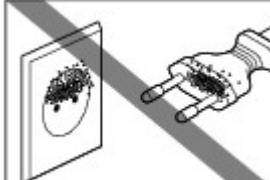
Choosing a location	<b>Do not place the machine close to flammable solvents such as alcohol or thinners.</b>
Power supply	<p><b>Never attempt to plug in or unplug the machine from the power supply when your hands are wet.</b></p> <p><b>Always push the plug all the way into the power outlet.</b></p> <div style="text-align: center;">  <p><b>Never damage, modify, stretch or excessively bend or twist the power cord. Do not place heavy objects on the power cord.</b></p> </div> <div style="text-align: center;">  <p><b>Never plug the machine into a power socket that is shared with other equipment (extension lead/cord, 2- or 3-way adapter, etc.).</b></p> </div> <p><b>Never use the machine if the power cord is bundled or knotted.</b></p> <p><b>If you detect smoke, unusual smells or strange noises around the machine, immediately unplug the machine at the power supply and call for service.</b></p> <div style="text-align: center;">  <p><b>Periodically, unplug the machine and use a dry cloth to wipe off any dust or dirt collected on the plug and the power outlet. If the machine is placed at a location exposed to a lot of dust, smoke, or high humidity, the dust collected on the plug absorbs moisture and may cause insulation failure and fire.</b></p> </div> <p><b>If you hear thunder, disconnect the power supply of the machine and refrain from using it. Leaving the machine plugged in may cause fire, electric shock, or damage to the machine, depending on the thunder storm.</b></p> <p><b>Use the power cable included with the machine.</b></p>
Cleaning the machine	<div style="text-align: center;">  <p><b>Use a damp cloth to clean the machine. Never use flammable solvents such as alcohol, benzene or thinners.</b></p> <p><b>If flammable solvents come in contact with electrical components inside the machine, it could cause a fire or electric shock.</b></p> </div> <p><b>Always unplug the machine from the power outlet before</b></p>

	<b>cleaning the machine.</b> If you accidentally switch the machine on while cleaning it, you could injure yourself or damage the machine.
<b>Maintaining the machine</b>	<b>Do not attempt to disassemble or modify the machine. There are no user serviceable parts inside the machine.</b> The machine contains high-voltage components. Never attempt any maintenance procedure not described in this guide.
	<b>Do not connect other than recommended devices to the Direct Print Port or cable connector on the machine. It could cause a fire or electric shock.</b>
<b>Working around the machine</b>	<b>Do not use highly flammable sprays near the machine.</b> This could cause a fire or electric shock if the spray comes into contact with electrical components inside the machine.

## Caution

- The following are instructions that, if ignored, could result in personal injury or material damage caused by incorrect operation of the equipment. These must be observed for safe operation.
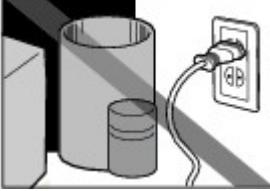
<b>Choosing a location</b>	<b>Do not install the machine in a location that is unstable or subject to excessive vibration.</b>
	<b>Do not install the machine in locations that are very humid or dusty, in direct sunlight, outdoors, or close to a heating source.</b>
	<b>To avoid the risk of fire or electric shocks, install the machine in a location with an ambient temperature range of 5°C to 35°C (41°F to 95°F) and humidity of 10% to 90% (condensation free).</b>
	<b>Do not place the machine on a thick rug or carpet.</b>
	<b>Do not place the machine with its back attached to the wall.</b>
<b>Power supply</b>	 <b>Ensure that the area around the power outlet is kept clear at all times so you can easily unplug the power cord if necessary.</b>
	 <b>Never remove the plug by pulling on the cord.</b>
	 <b>Do not use an extension lead/cord.</b>
<b>Working around the machine</b>	<b>Never put your hands or fingers in the machine while it is printing.</b>
	<b>When moving the machine, carry the machine at both ends.</b>
	<b>Do not hold the Operation Panel.</b>
	<b>Do not place any object on the machine.</b>
	<b>Do not place metal objects (paper clips, staples, etc.) or containers of flammable solvents (alcohol, thinners, etc.) on top of the machine.</b>
	<b>If any foreign object (metal or liquid) fall into the machine, unplug the power cord and call for service.</b>

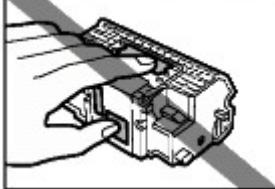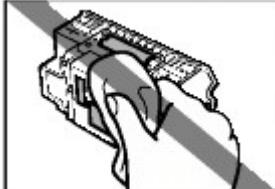	<p><b>Do not transport or use the machine on a slant, vertically or upside-down, as the ink may leak and damage the machine.</b></p>
	<p><b>When loading a thick book on the Platen Glass, do not press hard on the Document Cover. The Platen Glass may break and cause injury.</b></p>
<b>Print Heads and ink tanks</b>	<p><b>Keep ink tanks out of the reach of children.</b> In case ink is accidentally licked or swallowed, rinse out mouth or give one or two glasses of water to drink. If irritation or discomfort occurs, obtain medical advice immediately.</p> <p><b>In case ink gets in contact with eyes, rinse with water immediately.</b> <b>In case ink gets in contact with skin, wash with soap and water immediately.</b> If irritation to eyes or skin persists, obtain medical advice immediately.</p> <p><b>Do not shake Print Heads or ink tanks.</b> Ink may leak out and stain clothing or the surrounding area.</p>
	<p><b>Never touch the electrical contacts on a Print Head after printing.</b> The metal parts may be very hot and could cause burns.</p> 
	<p><b>Do not throw ink tanks into fire.</b></p>
	<p><b>Do not attempt to disassemble or modify the Print Head and ink tanks.</b></p>
	<p><b>Do not handle the Print Head and ink tanks roughly such as applying them excessive pressure or dropping them.</b></p> 
	<p><b>Do not rinse or wipe the Print Head and ink tanks.</b></p>
	<p><b>Once you have installed the Print Head and ink tanks, do not remove them unnecessarily.</b></p>

● **Note when you place the machine near other electrical appliances such as fluorescent lamps**

Place the machine at least 5.91 inches / 15 cm away from other electrical appliances such as fluorescent lamps. If the machine is placed closer to those, it may not be able to work properly due to fluorescent noises.

● **When you disconnect the power plug**

When you disconnect the power plug, always press the **ON** button and be sure that the mode buttons (such as the **COPY** button, etc.) stop flashing and all lamps on the Operation Panel go out. If you disconnect the power plug from the power outlet when any lamp on the Operation Panel is lit or flashing, the Print Head cannot be protected and you may not be able to print later.

● **Radio wave interference**

Since the microwave oven and the wireless LAN system use the same frequency bandwidth, the microwave oven can be the potential source of interference when the microwave oven is on. Placing this product close to microwave oven may result in the poor status of radio.

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > Overview of the Machine

# Overview of the Machine

This section shows the component names of the machine and describes the basic operations you need to know before using it.

## Main Components

[Front View](#)[Rear View](#)[Inside View](#)[Operation Panel](#)

## How to Navigate Menus on the LCD


[Basic Operation in Each Mode](#)[Basic Operation on the Settings Screen](#)[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Overview of the Machine](#) > Main Components

## Main Components

- ▶ [Front View](#)
- ▶ [Rear View](#)
- ▶ [Inside View](#)
- ▶ [Operation Panel](#)

### ■ Front View

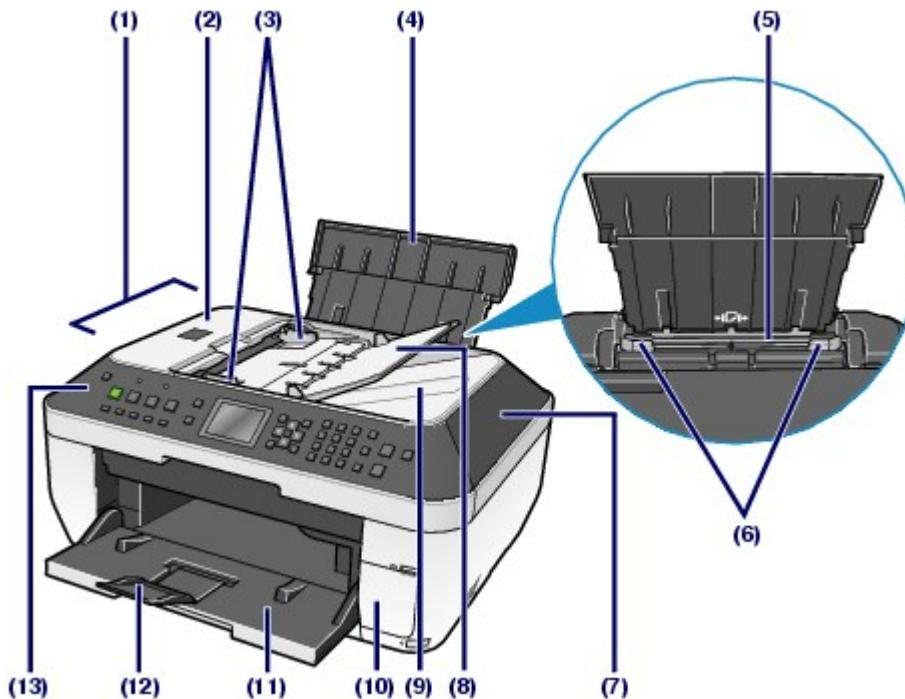

#### (1) ADF (Auto Document Feeder)

Load a document to copy, scan, or fax. The document loaded in the Document Tray are scanned automatically one sheet at a time.

See [Loading a Document in the ADF](#).

#### (2) Document Feeder Cover

Open when clearing jammed documents.

#### (3) Document Guides

Adjust these guides to match the width of document in the ADF.

#### (4) Paper Support

Raise and tip back to load paper in the Rear Tray.

#### (5) Rear Tray

Load various sizes or types of paper which you can use on the machine. Two or more sheets of the same size and type of paper can be loaded at the same time, and fed automatically one sheet at a time.

See [Loading Paper](#).

#### (6) Paper Guides

Slide to align with both sides of the paper stack.

#### (7) Document Cover

Open to load an original on the Platen Glass.

#### (8) Document Tray

Open to load a document in the ADF. You can load two or more sheets of document of the same size and thickness. Load the document with the side you want to scan facing up.

#### (9) Document Output Slot

Documents scanned from the Document Tray are delivered here.

#### (10) Card Slot Cover

Open to insert a memory card.

**(11) Paper Output Tray**

Opens automatically when printing or copying starts and printed papers are ejected.


**(12) Output Tray Extension**

Open to support the printouts. Open it when printing or copying.

**(13) Operation Panel**

Use to change the settings of the machine or to operate it.

See [Operation Panel](#).

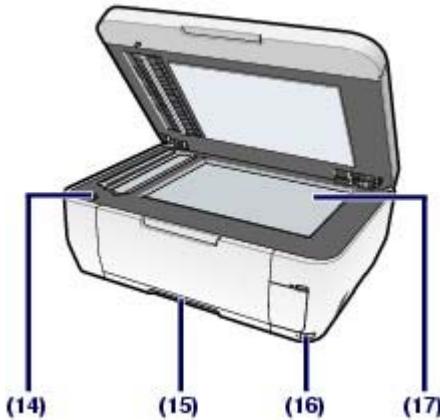**(14) Scanning Unit Detection Button**

Locks the Scanning Unit (Cover) while the Document Cover is open. This button is pressed down when the Document Cover is closed, so that you can open the Scanning Unit (Cover). (You do not need to touch this button.)

For information on the Scanning Unit (Cover), see [Scanning Unit \(Cover\)](#).

**(15) Cassette**

Load A4, B5, A5, or Letter-sized plain paper and insert it into the machine. Two or more sheets of the same size of paper can be loaded at the same time, and fed automatically one sheet at a time.

See [Loading Paper](#).

**(16) Direct Print Port**

Connect a PictBridge compliant device such as a digital camera or the optional Bluetooth Unit BU-30\* to print directly.

See [Printing Photos Directly from Your Digital Camera or Mobile Phone](#).

You can also insert a USB flash drive to this port to save scanned data on it.

Refer to the on-screen manual: [Advanced Guide](#)

\* The Bluetooth Unit is not available in some countries or regions depending on the local laws and regulations. For details, contact your service center.

**⚠ Warning**

- Do not connect any equipment other than PictBridge compliant devices, the optional Bluetooth Unit BU-30, and USB flash drives to the Direct Print Port of the machine. This may cause fire, electric shock, or damage to the machine.


**❗ Important**

- Do not touch the metal casing.
- Do not use the USB cable longer than around 10 feet / 3 meters to connect any PictBridge compliant device to the machine since it may affect the operation of other peripheral devices.

**(17) Platen Glass**

Load an original to copy, scan, or fax.

**■ Rear View**

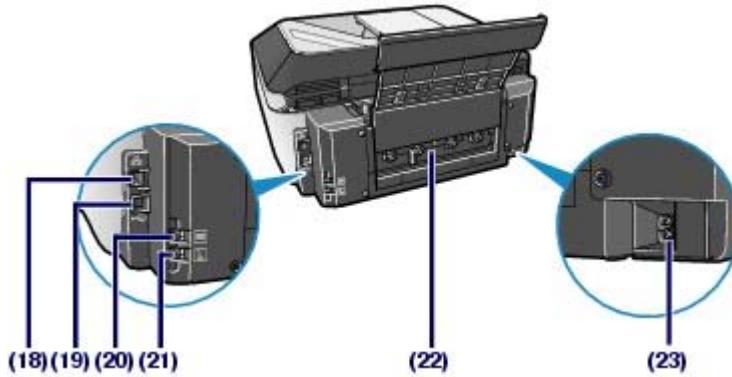

### (18) Wired LAN Connector

Plug in the LAN cable to connect the machine to a LAN.

#### Important

- Do not touch the metal casing.

### (19) USB Port

Plug in the USB cable to connect the machine with a computer.

#### Important

- Do not touch the metal casing.
- Do not plug in or unplug the USB cable while the machine is printing from or scanning originals to the computer.

### (20) External Device Jack

Connects an external device such as telephone, answering machine, or modem.

#### Important

- Do not touch the metal casing.

#### Note

- Remove the Telephone connector cap to connect the external device.

### (21) Telephone Line Jack

Connects with the telephone line.

#### Caution

- To avoid an electric shock, do not touch the metal casing.


### (22) Rear Cover

Detach to remove jammed paper.

### (23) Power Cord Connector

Plug in the supplied power cord.

## ■ Inside View

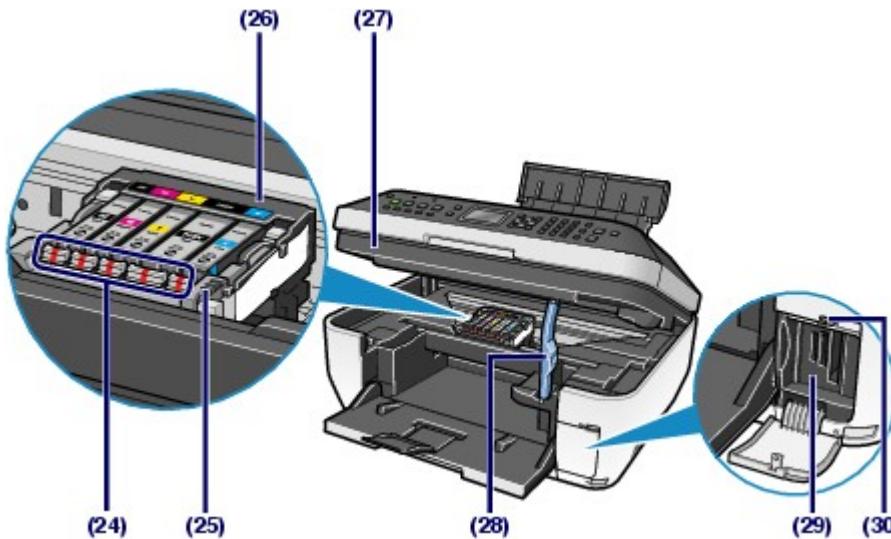**(24) Ink lamp**

Lights or flashes red to indicate the ink tank status.

See [Checking the Ink Status](#).

**(25) Print Head Lock Lever**

Locks the Print Head into place.

**Important**

- Do not raise this lever after installing the Print Head.

**(26) Print Head Holder**

Install the Print Head.

**(27) Scanning Unit (Cover)**

Scans the original. Open it to replace ink tanks, to check ink lamps, or to remove jammed paper inside the machine. To open the Scanning Unit (Cover), lift it with the Document Cover closed.

**(28) Scanning Unit Support**

Holds the Scanning Unit (Cover) being opened.

**(29) Card Slot**

Insert a memory card.

See [Inserting the Memory Card](#).


**(30) Access lamp**

Lights or flashes to indicate the memory card status.

See [Inserting the Memory Card](#).

**Note**

- For details on installing the Print Head and ink tanks, refer to the printed manual: *Getting Started*.

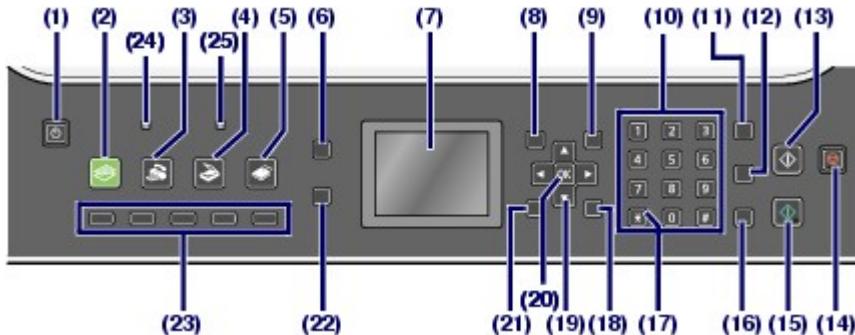**■ Operation Panel****(1) ON button**

Turns the power on or off. Before turning on the power, make sure that the Document Cover is closed.



## Important

### Disconnecting the power plug

- When disconnecting the power plug after turning off the power, be sure to confirm that all lamps on the Operation Panel are not lit. If the power plug is disconnected from the wall outlet while any lamp on the Operation Panel is lit or flashing, the machine may become unable to print properly since the Print Head is not protected.
- If the power plug is disconnected, the date/time settings as well as all documents stored in memory will be lost. Send an unsent fax or print a necessary document before the power plug is disconnected.



## Note

- The machine cannot receive faxes when the power is turned off.
- The power cannot be turned off while the machine is sending or receiving a fax, or when there are unsent faxes in the machine's memory.

### (2) COPY button

Switches the machine to copy mode. Flashes when you turn on the machine.

### (3) FAX button

Switches the machine to fax mode.

### (4) SCAN button

Switches the machine to scan mode.

### (5) MEMORY CARD button

Switches the machine to memory card mode.

### (6) FAX Quality button

Selects the scan contrast and resolution of the fax you are sending.

### (7) LCD (Liquid Crystal Display)

Displays messages, menu selections, and the operational status.



## Note

- The LCD will turn off if the machine is not operated for about 5 minutes. To restore the display, press any button except the **ON** button or perform the print operation. The display will be also restored when receiving faxes.

### (8) Menu button

Displays the menu screen.

### (9) Settings button

Changes the available settings in each mode such as page size, media type, image correction, etc.

### (10) Numeric buttons

Used to enter numerical values such as the number of copies, as well as fax/telephone numbers and characters.

### (11) Redial/Pause button

Displays the list of numbers dialed with the Numeric buttons to redial the selected number.

Also, used to enter pause time between or after numbers when dialing or registering numbers for example International calls.

### (12) Coded Dial button

The list of registered names appears in the Search TEL number screen, and use the **#** button to display the coded speed dial codes in the list. You can specify the destination's number from the list of registered names or the list of coded speed dial codes.

In the list of registered names, enter the first letter of a pre-registered name to search a pre-registered fax/telephone number or group. You can also use the **▲** (Up) or **▼** (Down) button to select a desired destination.

In the list of coded speed dial codes, enter a two-digit code to select a desired destination.

### (13) Black button

Starts to make black & white print, copy, scan, fax, etc.

### (14) Stop button

Cancels operation when print, transmission, or scan job is in progress.

**(15) Color button**

Starts to make color print, copy, scan, fax, etc.

**(16) Hook button**

Connects or disconnects the telephone line.

**(17) Tone button**

In the fax mode, switches to tone dialing temporarily or used to dial with the Numeric buttons, and also changes the input mode when entering characters.

In the memory card mode, used to crop a part of photo (trimming).

**(18) Two-Sided button**

Specifies the settings for duplex copying.

**(19) ▲ (Up) ▼ (Down) ◀ (Left) ► (Right) buttons**

Scrolls through menu selections and increases/decreases setting values, such as the number of copies.

You can use these buttons when ▲ (Up), ▼ (Down), ► (Right), and ◀ (Left) are displayed on the LCD.

Also, the ◀ (Left) button cancels the entered character, and the ► (Right) button enters a space between characters when entering characters.

**(20) OK button**

Selects a menu or setting item. See [How to Navigate Menus on the LCD](#).

Resolves an error when printing is in progress or resumes the machine's normal operation after removing jammed paper or to eject documents remaining in the ADF.

**(21) Back button**

Cancels operations and returns the LCD to the previous screen.

**(22) Change Display button**

Switches the image display in the memory card mode to the full-screen display or four-image display.

**(23) One-Touch Speed Dial buttons**

Used to dial pre-registered fax/telephone numbers or groups with a simple operation.

**(24) In Use/Memory lamp**

Flashes when sending or receiving faxes, and lights when there are documents saved in the machine's memory.

**(25) Alarm lamp**

Lights or flashes orange when an error, such as paper-out or ink-out, occurs.

 **Note**

● The machine makes the beep sound when pressing buttons on the Operation Panel.

To change the beep volume, see [Machine Settings](#).



 [Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Overview of the Machine](#) > How to Navigate Menus on the LCD

## How to Navigate Menus on the LCD

You can use the machine to print photos in a memory card, make copies, send/receive faxes, or scan originals without a computer. You can also make good use of the various functions of the machine with the menu screen and the settings screen on the LCD.

This section describes the basic operation to use the menu screen and the settings screen in each mode.


- ▶ [Basic Operation in Each Mode](#)
- ▶ [Basic Operation on the Settings Screen](#)

### ■ Basic Operation in Each Mode

Press the mode button (A) to switch the screen to the desired mode first.

Then, use the **Menu** button (B) to select available functions in each mode.

To change the page size, media type, or image correction, press the **Settings** button (C).

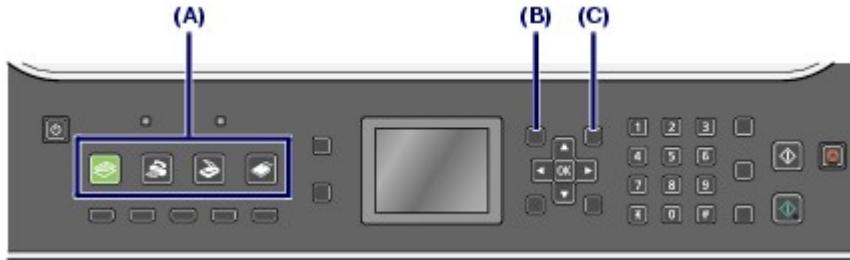

#### Note

- Use the ▲ (Up), ▼ (Down), ◀ (Left), or ▶ (Right) button to select the item, and press the **OK** button to set it.
- You can return the LCD to the previous screen by pressing the **Back** button.
- Press the **SCAN** button to display the Scanned data processing screen, then select whether to save scanned data in a computer or on a USB flash drive or a memory card inserted in the machine.
- Press the **MEMORY CARD** button to display the Card menu screen, and select whether to select and print a photo in a memory card or use various layouts.
- For details on each item, see [Menu Screens](#).
- To select Maintenance or Device settings, press the **Menu** button to display the Settings menu in any mode.

### ● Menu Screens


#### Note

- For details on maintenance, see [Routine Maintenance](#).



#### Copy mode

- Copy menu screen

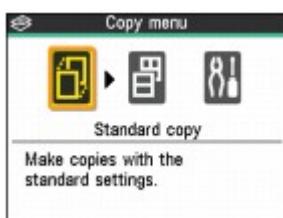

Standard copy: See [Copying](#).

Special copy: See [Using Various Copy Functions](#).

Two-sided copy

2-on-1 copy

- 4-on-1 copy
- Borderless copy
- Image repeat
- Collated copy
- Faded-restored copy
- Frame erase
- Sticker copy
- Binding margin copy
- Punch hole removal copy


Settings: See [Settings](#).

- Copy settings screen (See [Changing the Settings](#).)



## Fax mode

- Fax menu screen

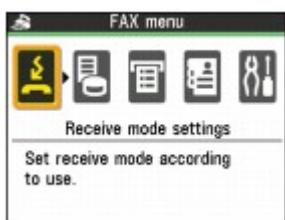

Receive mode settings: See [Setting the Receive Mode](#).

- Fax priority mode
- Fax only mode
- DRPD\*1
- Network switch\*2
- TEL priority mode

Memory reference: See [Receiving a Fax in the Memory of the Machine \(Memory Receiving\)](#).

- Print memory list
- Print specified document
- Delete specified doc.
- Print all received docs
- Delete all docs in memory

Print reports/lists: See [Using Useful Fax Functions](#).

- Activity report
- Telephone number list
- User's data list
- Memory list
- Rejected number list
- Caller history list\*2

TEL number registration: Refer to the on-screen manual: [Advanced Guide](#).


- One-touch speed dial
- Coded speed dial
- Group dial
- Rejected numbers

Settings: See [Settings](#).

\*1 This setting is only available in US and Canada.

\*2 This setting may not be available depending on the country or region of purchase.


- Fax paper settings screen (See [Preparing for Receiving a Fax](#).)

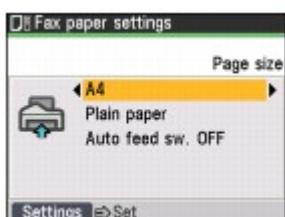



## Scan mode

- Scanned data processing screen

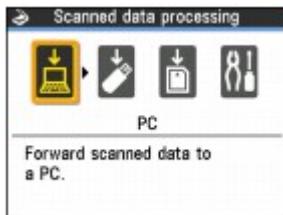

PC: See [Using Various Scan Functions](#).


USB flash drive: Refer to the on-screen manual: [Advanced Guide](#).

Memory card: Refer to the on-screen manual: [Advanced Guide](#).

Settings: See [Settings](#).

- Scan & save settings screen

When USB flash drive or Memory card is selected in the Scanned data processing screen, the following screen will appear.  
Refer to the on-screen manual: [Advanced Guide](#).

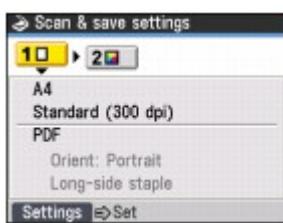

## Memory card mode

- Card menu screen



Multiselect print: See [Changing the Settings](#).

Special photo print: See [Using Various Functions](#).

Layout print

Sticker print

Print all photos

Photo Index print

DPOF print

Captured info

Photo Index Sheet: See [Using Photo Index Sheet to print](#).

Photo Index Sheet print

Scan sheet and print


Settings: See [Settings](#).

- Memory card settings screen



## Settings

- Maintenance screen (See [Routine Maintenance](#).)

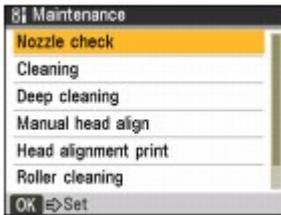

Nozzle check

Cleaning

Deep cleaning


Manual head align

Head alignment print

Roller cleaning

Bottom plate cleaning: Refer to the on-screen manual: [Advanced Guide](#).

## ● Device settings screen

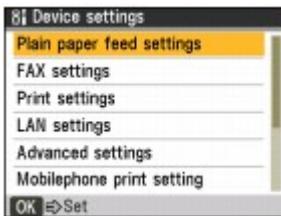

Plain paper feed settings: See [Plain paper feed settings](#).

FAX settings: See [FAX settings](#).

User settings

Transmission settings

Reception settings

Print settings: See [Print settings](#).

Prevent paper abrasion

Extended copy amount

LAN settings: See [LAN settings](#).

Change WLAN/LAN

WLAN settings

WLAN setting list

LAN setting list

IPv4/IPv6 setting

WSD setting

Print LAN details

Reset LAN settings

Advanced settings: See [Advanced settings](#).

Read/write attribute

Volume control

Country select \*1

Quiet mode

Key repeat

Two-sided output setting

Mobilephone print settings \*2: See [Mobilephone print setting](#).

Paper size

Media type

Image optimizer

Layout

Bluetooth settings \*2: See [Bluetooth settings](#).

Device name

Access refusal

Security

Passkey

PictBridge settings: See [PictBridge settings](#).

Language selection: See [Language selection](#).

Reset setting: See [Reset setting](#).

Telephone no. only

Setting only

Reset both

\*1 May not appear depending on the country or region of purchase.

\*2 Appears only when the optional Bluetooth unit is attached to the machine.

- Select template screen (See [Printing the Notebook or Graph Paper](#).)



## ■ Basic Operation on the Settings Screen

You can change the settings in each mode by pressing the **Settings** button, when printing in the copy mode, fax mode, or memory card mode, or when saving scanned data on a USB flash drive in the scan mode.

You can change the print settings such as page size, media type, image correction method, etc.

This section describes the procedure to change the settings, taking the procedure to specify

4"x6"(10x15cm) for the page size in the memory card mode as an example.

When printing from a computer, see [Printing from Your Computer](#).

### Note

- To change the settings when printing from a PictBridge compliant device or wireless communication device, refer to the on-screen manual: [Advanced Guide](#).

## 1. Display the settings screen.

(1) Press the **MEMORY CARD** button to switch to the memory card mode.

(2) Press the **Settings** button.

The Memory card settings screen will appear.



## 2. Select the settings tab.

(1) Use the **◀** (Left) or **▶** (Right) button to select the settings tab.

Example: Select Settings Tab 1 here.



## 3. Select the setting item.

(1) Use the **▲** (Up) or **▼** (Down) button to select the setting item.


Example: Select A4 here.



#### 4. Change the setting.

- (1) Use the **◀** (Left) or **▶** (Right) button to change the setting.

Example: Change to 4"x6"(10x15cm) here.

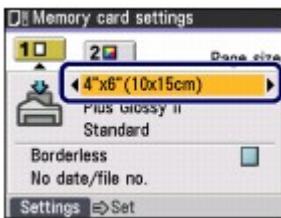

#### 5. Complete setting.

- (1) Press the **Settings** button.



#### Note

##### For details on the setting Items

- For the settings in the copy mode, see [Changing the Settings](#).
- For the settings in the memory card mode, see [Changing the Settings](#).
- For the settings in the fax mode, see [Preparing for Receiving a Fax](#).  
You can also change the image quality or density of sending faxes with the **FAX Quality** button. For details, see [Sending a Fax with the Numeric Buttons](#).
- For the settings when saving scanned data on a USB flash drive or a memory card in the scan mode or when printing from a wireless communication device or PictBridge compliant device.  
Refer to the on-screen manual: [Advanced Guide](#).



[Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > Setting Up the Machine

# Setting Up the Machine

This section describes typical examples of connecting and setting up the machine before using the faxing functions.

## Confirming the Telephone Line Connection

- [Connecting Various Lines](#)
- [Setting the Telephone Line Type](#)

## Specifying the Basic Settings for the Machine

- [Registering Sender Information](#)
- [Guidelines for Entering Numbers, Letters, and Symbols](#)
- [Entering the Date and Time](#)
- [Setting Daylight Saving Time \(Summer Time\)](#)
- [Registering Your Name and Fax/Telephone Number](#)
- [Other Basic Setting Items](#)

## Setting the Receive Mode

- [Selecting a Receive Mode](#)

[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Setting Up the Machine](#) > Confirming the Telephone Line Connection

## Confirming the Telephone Line Connection

For the basic connection of the machine, refer to the printed manual: *Getting Started*. This guide describes other typical connections.

The machine cannot send/receive faxes if the connection is incorrect. Connect the machine correctly.

► [Connecting Various Lines](#)

► [Setting the Telephone Line Type](#)

 **Important**

**If the Power Disconnects Unexpectedly**

If there is a power failure or if you accidentally disconnect the power plug, the date/time settings as well as all documents stored in memory will be lost. The settings for user data such as one-touch speed dial, coded speed dial, group dial, and rejected numbers will be retained.

If the power disconnects, the following will apply:

- You will not be able to send or receive faxes, make copies, or scan originals.
- When you are connecting the telephone or answering machine, whether or not you can use it depends upon your telephone line, telephone, or answering machine.


### ■ Connecting Various Lines

These are examples and could not be guaranteed to suit every connecting condition. For details, refer to the instruction manual supplied with the network device (control devices such as an xDSL (Digital Subscriber Line) modem or terminal adapter) you are connecting to this machine.

 **Note**

- xDSL is the generic term for the high speed digital communication technology with telephone line such as ADSL/HDSL/SDSL/VDSL.

#### ● Connecting a Telephone or Answering Machine via a Computer

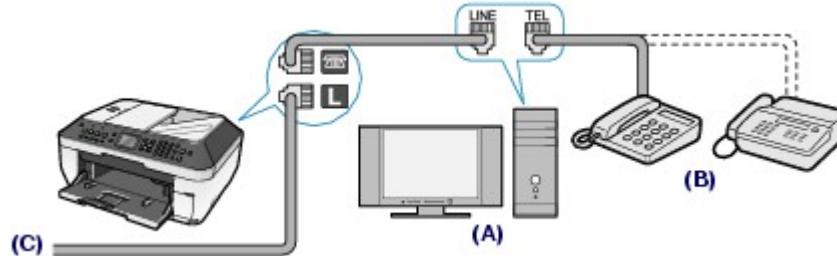

- (A) Computer
- (B) Telephone or answering machine
- (C) Analog line

 **Note**


- Before connecting a telephone or answering machine, remove the Telephone connector cap.

### For users in the UK

If the connector of the external device cannot be connected to the jack on the machine, you will need to purchase a B.T. adapter to connect as follows:

Attach the B.T. adapter to the modular cable connecting the external device, then connect the B.T. adapter to the  (External device) jack.

#### ● Connecting to an xDSL

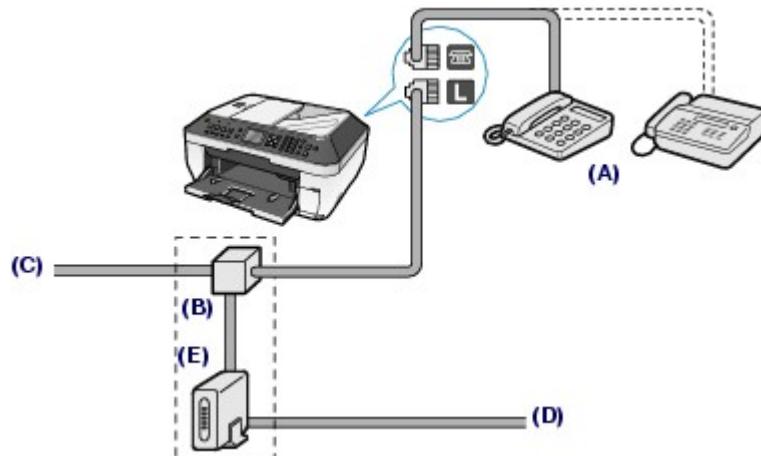

(A) Telephone or answering machine

#### Note

- Before connecting a telephone or answering machine, remove the Telephone connector cap.

(B) Splitter

(C) Digital Subscriber Line

(D) Computer

(E) xDSL modem (splitter may be built-in to the modem)

#### Important

- Do not branch the telephone line before the splitter (wall side). And also, do not connect splitters in parallel. The machine may not be able to operate properly.

#### Note

- When connecting to the xDSL line, select the same line type as you are subscribing in Telephone line type.

## ● Connecting to an ISDN Line

For details on ISDN (Integrated Service Digital Network) connection and settings, refer to the manuals supplied with your terminal adapter or dial-up router.

## ■ Setting the Telephone Line Type

Before using your machine, make sure you set the correct telephone line type for your telephone line. If you are unsure of your telephone line type, contact your telephone company. For xDSL or ISDN connections, contact the telephone company or service provider to confirm your line type.

#### Note

- Rotary pulse is not supported depending on the selected country in Country select displayed when you start the machine for the first time after purchase. The Telephone line type menu will not appear in such country.
- You can print the User's data list to check the current setting.  
For details, refer to the on-screen manual: [Advanced Guide](#).

### 1. Display the Telephone line type screen.

(1) Press the **FAX** button, and press the **Menu** button.


(2) Use the **◀** (Left) or **▶** (Right) button to select **Settings** , and press the **OK** button.

(3) Use the **◀** (Left) or **▶** (Right) button to select **Device settings** , and press the **OK** button.

- (4) Use the ▲ (Up) or ▼ (Down) button to select FAX settings, and press the **OK** button.
- (5) Use the ▲ (Up) or ▼ (Down) button to select User settings, and press the **OK** button.
- (6) Use the ▲ (Up) or ▼ (Down) button to select Telephone line type, and press the **OK** button.

**2.** Select the telephone line type.

- (1) Use the ▲ (Up) or ▼ (Down) button to select the telephone line type.

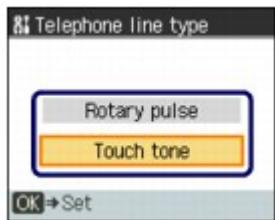

Rotary pulse: Suitable for pulse dialing.

Touch tone: Suitable for tone dialing.

- (2) Press the **OK** button.

**3.** Return to the fax standby screen.

- (1) Press the **FAX** button.



 [Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Setting Up the Machine](#) > Specifying the Basic Settings for the Machine

## Specifying the Basic Settings for the Machine

This section describes the basic settings for the machine such as how to register the sender information, to enter numbers and letters, to set daylight saving time, etc.

- ▶ Registering Sender Information
- ▶ Guidelines for Entering Numbers, Letters, and Symbols
- ▶ Entering the Date and Time
- ▶ Setting Daylight Saving Time (Summer Time)
- ▶ Registering Your Name and Fax/Telephone Number
- ▶ Other Basic Setting Items

[↑ Page top](#)


**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Setting Up the Machine](#) > [Specifying the Basic Settings for the Machine](#) > Registering Sender Information

## ■ Registering Sender Information

A fax you receive may have information, such as the sender's name or the company name, the sender's phone or fax number, and the date and time of the transmission, printed in small type at the top of each page. Such sender information is called Transmit Terminal Identification, or TTI.

You can register the TTI in this machine, so that the recipient of the fax will know who sent it, and when it was sent.

Below is an example of how your sender information would print on a fax sent from your machine:

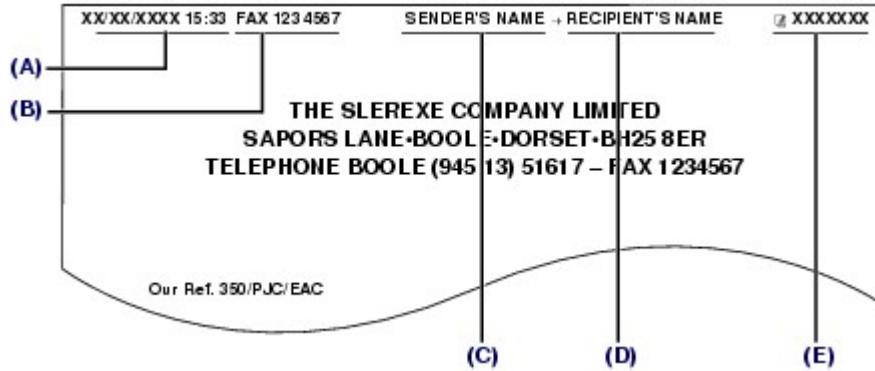

- (A) Date and time of transmission
- (B) Sender's fax/telephone number
- (C) Sender's name
- (D) Displays the recipient's name when sending from coded speed dial.
- (E) Page number

### Note

#### For the sender information

- For the sender information, the settings other than the descriptions in this guide are listed below.  
For details, refer to the on-screen manual: [Advanced Guide](#).
  - When sending a fax in black & white, you can set the sender information to print inside or outside the image area.
  - For color sending, the sender information is printed inside the print area and the recipient's name is not printed.
  - You can select FAX or TEL to be displayed in front of the number.
  - Three date display formats are available.
  - You can print the User's data list to confirm the sender information you have registered.

[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**

[Contents](#) > [Setting Up the Machine](#) > [Specifying the Basic Settings for the Machine](#) > Guidelines for Entering Numbers, Letters, and Symbols

## ■ Guidelines for Entering Numbers, Letters, and Symbols

The following characters are assigned to the Numeric buttons.

Button	Uppercase letter mode	Lowercase letter mode	Number mode
1			1
2	ABCÄÄÀÃÂÆÇ	abcâäáâââæç	2
3	DEFËÉÈÊ	defëéèê	3
4	GHÏÏÎÎ	gh i ï î	4
5	JKL	jkl	5
6	MNOÑØÖÓÒÔÔÔ	mnoñøöóòôôô	6
7	PQRSþ	pqrsþ	7
8	TUVÜÙÙÛ	tuvüùùû	8
9	WXYZÝ	wxyzý	9
0			0
#	-SP*★#!";:^_= ?\$_@%&+()[]{}<>		
*	Press the <b>Tone</b> button to switch to uppercase letter mode (:A), lowercase letter mode (:a), or number mode (:1).		

\* SP indicates a space.

Follow the procedure below to enter letters and numbers when you register names and fax/phone numbers for the sender information or a speed dial.

### 1. Switch the input mode.

(1) Press the **Tone** button to switch to uppercase letter mode (:A), lowercase letter mode (:a), or number mode (:1).

You can see what mode you are in by the character displayed to the right of Unit name, Name, or Group name.

Example: uppercase letter mode



### Note

- Here describes the unit name/telephone number registration. To display the Unit name/TEL no. registr. screen, see [Registering Your Name and Fax/Telephone Number](#).


**2.** Use the Numeric buttons to enter a character.

Press the button repeatedly until the character you want to enter appears.


- **To enter a character that is assigned to the same button as the previous entry (ex., to enter "A" after "C"):**

Press the ► (Right) button, and press the same Numeric button.

- (1) Press the **2** button three times.

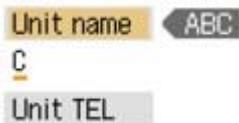

- (2) Press the ► (Right) button, and press the **2** button again.

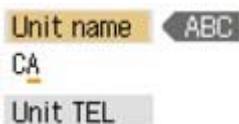

- **To enter a space:**

Press the ► (Right) button twice. In number mode, press the ► (Right) button once.

- **To delete a character:**

Press the ◀ (Left) button.

- **To delete an entire entry:**

Press and hold the ◀ (Left) button.



[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Setting Up the Machine](#) > [Specifying the Basic Settings for the Machine](#) > Entering the Date and Time

## ■ Entering the Date and Time

**Note**

- Three date display formats are available: YYYY/MM/DD, MM/DD/YYYY, and DD/MM/YYYY. For details, refer to the on-screen manual: [Advanced Guide](#).
- When the machine is connected to a computer with the MP Drivers installed, the date and time setting will be copied from the computer to the machine. As long as the date and time is set accurately on your computer, you do not need to set it on the machine.
- If you disconnect the power plug or when there is a power failure, the date and time setting on the machine will be reset. When you connect the machine to a computer with the MP Drivers installed, the setting will be copied to the machine once again.

### 1. Display the Date/time setting screen.

(1) Press the **FAX** button, and press the **Menu** button.

(2) Use the **◀** (Left) or **▶** (Right) button to select **Settings** , and press the **OK** button.

(3) Use the **◀** (Left) or **▶** (Right) button to select **Device settings** , and press the **OK** button.

(4) Use the **▲** (Up) or **▼** (Down) button to select **FAX settings**, and press the **OK** button.

(5) Use the **▲** (Up) or **▼** (Down) button to select **User settings**, and press the **OK** button.

(6) Use the **▲** (Up) or **▼** (Down) button to select **Date/time setting**, and press the **OK** button.

### 2. Enter the date and time.

(1) Use the Numeric buttons to enter the date and time (in 24-hour format).

Enter only the last two digits of the year.

**Note**

- You can also use the **▲** (Up) or **▼** (Down) button to change the number.
- If you misentered the date and time, press the **◀** (Left) or **▶** (Right) button to move the cursor under the number to enter the correct number.

(2) Press the **OK** button.

### 3. Return to the fax standby screen.

(1) Press the **FAX** button.



[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**

Contents > Setting Up the Machine > Specifying the Basic Settings for the Machine > Setting Daylight Saving Time (Summer Time)

## ■ Setting Daylight Saving Time (Summer Time)

Some countries adopt the daylight saving time (summer time) system that shifts the clock time forward at certain periods of the year.

You can set your machine to automatically change the time by registering the day and time that daylight saving (summer time) begins and ends.

### **Important**

- Not all the latest information of all countries or regions are applied for Summer time setting by default. You need to change the default setting according to the latest information of your country or region.

### **Note**

- This setting may not be available depending on the country or region of purchase.

## 1. Display the Summer time setting screen.

(1) Press the **FAX** button, and press the **Menu** button.

(2) Use the **◀** (Left) or **▶** (Right) button to select **Settings** , and press the **OK** button.

(3) Use the **◀** (Left) or **▶** (Right) button to select **Device settings** , and press the **OK** button.

(4) Use the **▲** (Up) or **▼** (Down) button to select **FAX settings**, and press the **OK** button.

(5) Use the **▲** (Up) or **▼** (Down) button to select **User settings**, and press the **OK** button.

(6) Use the **▲** (Up) or **▼** (Down) button to select **Summer time setting**, and press the **OK** button.

## 2. Enable summer time.

(1) Use the **▲** (Up) or **▼** (Down) button to select **ON** to enable summer time.




To disable summer time, select **OFF**.


(2) Press the **OK** button.

## 3. Set the date and time that summer time starts.

(1) Use the **▲** (Up) or **▼** (Down) button to select **Start date/time**, and press the **OK** button.

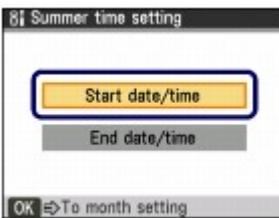


- (2) Use the ▲ (Up) or ▼ (Down) button to select the month when summer time starts, and press the **OK** button.

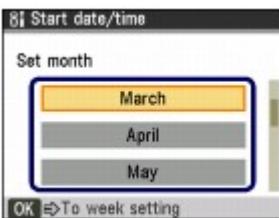

- (3) Use the ▲ (Up) or ▼ (Down) button to select the week when summer time starts, and press the **OK** button.




- (4) Use the ▲ (Up) or ▼ (Down) button to select the day of the week when summer time starts, and press the **OK** button.

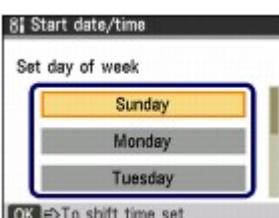

- (5) Use the Numeric buttons to enter the time (in 24-hour format) when summer time starts.

Precede single digits with a zero.

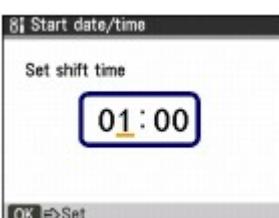


- (6) Press the **OK** button.

The summer time start date/time will be set.


#### 4. Set the date and time that summer time ends.

- (1) Use the ▲ (Up) or ▼ (Down) button to select End date/time, and press the **OK** button.

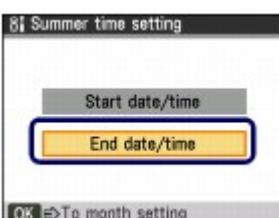

- (2) Use the ▲ (Up) or ▼ (Down) button to select the month when summer time


ends, and press the **OK** button.

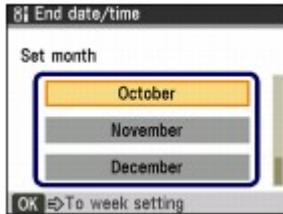

- (3) Use the ▲ (Up) or ▼ (Down) button to select the week when summer time ends, and press the **OK** button.




- (4) Use the ▲ (Up) or ▼ (Down) button to select the day of the week when summer time ends, and press the **OK** button.

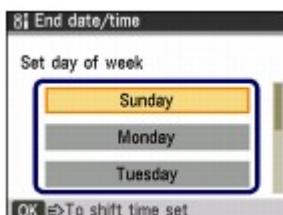

- (5) Use the Numeric buttons to enter the time (in 24-hour format) when summer time ends.

Precede single digits with a zero.

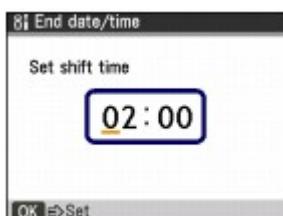

- (6) Press the **OK** button.

The summer time end date/time will be set.

5. Return to the fax standby screen.

- (1) Press the **FAX** button.



[Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**

Contents > Setting Up the Machine > Specifying the Basic Settings for the Machine > Registering Your Name and Fax/Telephone Number

## ■ Registering Your Name and Fax/Telephone Number

### Important

- Before sending a fax, be sure to enter your fax/telephone number in Unit TEL in the Unit name/TEL no. registr. screen. (for US only)

### 1. Display the Unit name/TEL no. registr. screen.

(1) Press the **FAX** button, and press the **Menu** button.

(2) Use the **◀** (Left) or **▶** (Right) button to select **Settings** , and press the **OK** button.

(3) Use the **◀** (Left) or **▶** (Right) button to select **Device settings** , and press the **OK** button.


(4) Use the **▲** (Up) or **▼** (Down) button to select **FAX settings**, and press the **OK** button.

(5) Use the **▲** (Up) or **▼** (Down) button to select **User settings**, and press the **OK** button.

(6) Use the **▲** (Up) or **▼** (Down) button to select **Unit name/TEL no. registr.**, and press the **OK** button.

### 2. Enter your name.

(1) Use the Numeric buttons to enter your name (max. 24 characters, including spaces).

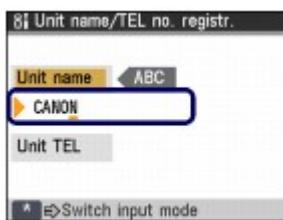

### Note

- For details on how to enter or delete characters, see [Guidelines for Entering Numbers, Letters, and Symbols](#).

(2) Press the **OK** or **▼** (Down) button.

### 3. Enter your fax/telephone number.

(1) Use the Numeric buttons to enter your fax/telephone number (max. 20 digits,

including spaces).

To enter a plus sign (+) before the number, press the  button.



### Note

- For details on how to enter or delete numbers, see [Guidelines for Entering Numbers, Letters, and Symbols](#).

**(2)** Press the **OK** button.

**4.** Return to the fax standby screen.

**(1)** Press the **FAX** button.



 [Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**

[Contents](#) > [Setting Up the Machine](#) > [Specifying the Basic Settings for the Machine](#) > Other Basic Setting Items

## ■ Other Basic Setting Items

You can select the following items in User settings of FAX settings.

For details, refer to the on-screen manual: [Advanced Guide](#).

### ● Auto print

Prints received faxes automatically when the machine received it. When OFF is selected, received faxes will be stored in the memory and also TX/RX reports, MULTI TX (Transmission) report, and Activity report are not printed automatically.

### ● Date display format

Sets the format of dates displayed on the LCD and printed on sent faxes.

Three date formats are available; YYYY/MM/DD, MM/DD/YYYY, and DD/MM/YYYY.

### ● TTI position

Selects the position to print the sender information (outside or inside the image area).

After selecting the print position, select FAX to print "FAX" or TEL to print "TEL" before your fax/telephone number.

### ● Offhook alarm

Sets whether to set off an alarm when the handset is off hook.

### ● Volume control

Adjusts the ringing volume or line monitor volume during the transmission.

### ● RX ring level

Selects the level of the ringing sound the machine makes when it receives a fax.

### ● Activity report

Prints the history of sent and received faxes. The machine is set to print an Activity report after every 20 transactions by default. You can also print it manually.



[↑ Page top](#)

## Setting the Receive Mode

### ■ Selecting a Receive Mode

There are four receive modes as follows. Select a receive mode according to your needs.

- You receive mainly faxes and sometimes voice calls:

Select Fax priority mode.

- You have a dedicated telephone line for fax use only:

Select Fax only mode.

- You receive mainly voice calls and sometimes faxes:

Select TEL priority mode.

- You have subscribed to a ring pattern detection service provided by your telephone company:

Select DRPD\*1 or Network switch\*2.

\*1 This setting is only available in US and Canada.

\*2 This setting may not be available depending on the country or region of purchase.

### Note

- The receiving operation procedure varies depending on the selected receive mode. For the receiving method depending on each receive mode, see [Receiving Faxes](#).
- If you want to use a single telephone line for faxes and voice calls, you need to connect a telephone or an answering machine to the External Device Jack of this machine.


### 1. Display the Receive mode settings screen.

(1) Press the **FAX** button, and press the **Menu** button.

(2) Use the **◀** (Left) or **▶** (Right) button to select Receive mode settings, and press the **OK** button.


### 2. Select a receive mode.

(1) Use the **▲** (Up) or **▼** (Down) button to select a receive mode, and press the **OK** button.

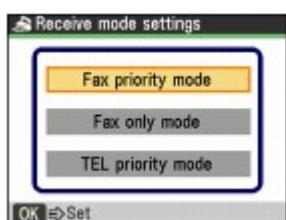

### 3. Return to the fax standby screen.


(1) Press the **FAX** button.

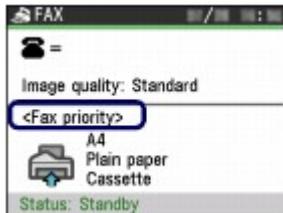

The selected receive mode will appear on the LCD.

## ● You Receive Mainly Faxes and Sometimes Voice Calls:

You want to receive faxes automatically (Fax priority mode).

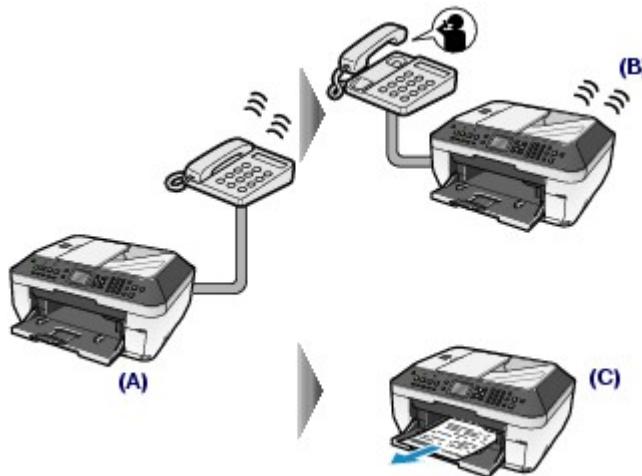

(A) Incoming call

(B) Voice call:

The machine will ring. Pick up the handset to answer the call.

(C) Fax:

The machine receives faxes automatically.

### Note

- If a telephone is connected to the machine, the telephone will ring when the call comes regardless of the receive mode.
- To make the telephone not ring when a call comes, select OFF in Incoming ring of Reception settings.

## ● You Have a Dedicated Telephone Line for Fax Use Only:

You want to receive only faxes automatically (Fax only mode).




(A) Incoming call

(B) Receives faxes automatically.

## ● You Receive Mainly Voice Calls and Sometimes Faxes:

You want to receive faxes manually (TEL priority mode).

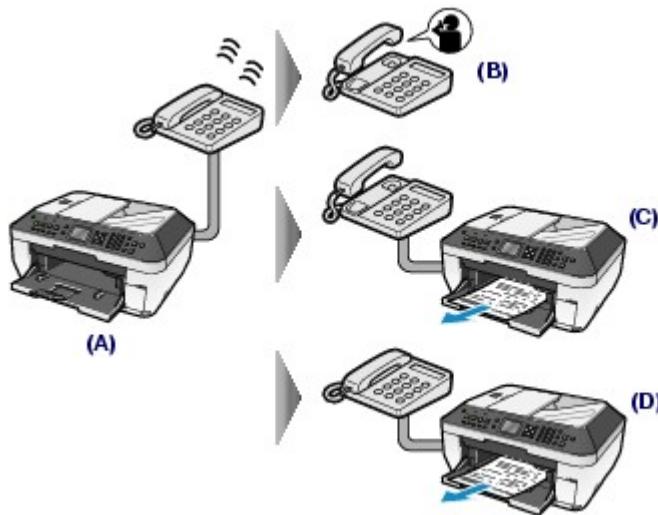

(A) Incoming call

(B) Voice call:

The telephone will ring. Pick up the handset to answer the call.

(C) Fax:

The telephone will ring. If you pick up the handset and hear the fax tone, the machine will switch to the fax automatically and receive the fax.

#### Note

- If the machine will not switch to the fax, press the **Color** or **Black** button to receive the fax.

(D) When the answering machine responds:


Voice call: The answering machine responds to the call.

Fax: The machine receives the fax automatically.

### ● If You Have Subscribed to a Ring Pattern Detection Service Provided by Your Telephone Company:

The machine automatically receives a fax and voice call respectively with a different ring pattern.

- You have subscribed to the Distinctive Ring Pattern Detection (DRPD) service (US and Canada only) (DRPD).

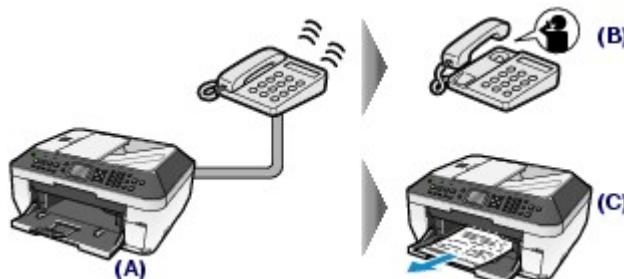

(A) Incoming call:

The machine judges whether call is voice or fax by the ringing pattern. In the meanwhile the telephone rings.

(B) Voice call:


The telephone continues to ring. Pick up the handset to answer the call.

(C) Fax:

The fax is received automatically when the machine detects the registered fax ring pattern.

- You want the machine to automatically switch between fax and voice calls by the call ring patterns (Network Switch). (Select Network switch)

\* This setting may not be available depending on the country or region of purchase.

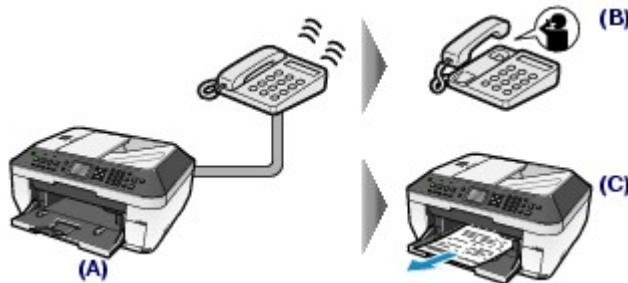

## (A) Incoming call:

The machine judges whether call is voice or fax by the ringing pattern. In the meanwhile the telephone rings.

## (B) Voice call:

The telephone continues to ring. Pick up the handset to answer the call.

## (C) Fax:

The fax is received automatically when the machine detects the fax ring pattern.

## ● Setting the DRPD Ring Pattern (US and Canada only)

If you have subscribed to a Distinctive Ring Pattern Detection (DRPD) service provided by your telephone company, your telephone company will assign two or more telephone numbers with distinctive ring patterns to your single telephone line, allowing you to have different numbers for fax calls and voice calls using only one telephone line. Your machine will automatically monitor the ring pattern, and will automatically receive the fax if the ring pattern is a fax call.

To use DRPD, follow the procedure below to set the fax ring pattern that matches the pattern assigned by your telephone company.

### Note

- Contact your local telephone company for detailed information on this service.

### 1. Display the DRPD: FAX ring pattern screen.

(1) Press the **FAX** button, and press the **Menu** button.

(2) Use the **◀** (Left) or **▶** (Right) button to select **Settings** , and press the **OK** button.

(3) Use the **◀** (Left) or **▶** (Right) button to select **Device settings** , and press the **OK** button.

(4) Use the **▲** (Up) or **▼** (Down) button to select **FAX settings**, and press the **OK** button.

(5) Use the **▲** (Up) or **▼** (Down) button to select **Reception settings**, and press the **OK** button.

(6) Use the **▲** (Up) or **▼** (Down) button to select **DRPD: FAX ring pattern**, and press the **OK** button.

### 2. Select the ring pattern.

(1) Use the **▲** (Up) or **▼** (Down) button to select the ring pattern that your telephone company assigned to your fax number.

Select from Normal ring, Double ring, Short-short-long, Short-long-short, or Other ring type.



(2) Press the **OK** button.

**3.** Return to the fax standby screen.

(1) Press the **FAX** button.



[↑ Page top](#)

**Basic Guide**[Advanced Guide](#) [Troubleshooting](#)[Contents](#) > Printing from a Memory Card

# Printing from a Memory Card

You can preview each photo taken with the digital camera on the LCD of the machine, and print the photos.

There are also the useful functions for printing thumbnails of photos saved on the memory card onto A4 or Letter size paper, printing these photos selected from thumbnails, and printing photos selected from thumbnails in a specified layout.

## Printing Photos Saved on the Memory Card

[Changing the Settings](#)

## Using Various Functions

### Inserting the Memory Card

[Before Inserting the Memory Card](#)[Inserting the Memory Card](#)[Removing the Memory Card](#)[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Printing from a Memory Card](#) > Printing Photos Saved on the Memory Card

## Printing Photos Saved on the Memory Card

Preview each photo saved on the memory card on the LCD of the machine, and print the photos. This section describes the basic operation, using the settings to print borderless photos on 4" x 6" / 10 x 15 cm paper as an example. For the operation, see the notes and operation procedure described in the reference page.




### You need to prepare:

A memory card on which photos are saved. See [Before Inserting the Memory Card](#).



Paper for printing. See [Media Types You Can Use](#).

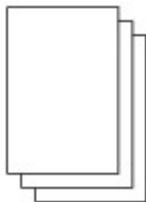

### 1. Prepare for printing.

#### (1) Make sure that the power is turned on.

See [Operation Panel](#).

#### (2) Load paper.

See [Loading Paper](#).

Here we load 4" x 6" / 10 x 15 cm photo paper in the Rear Tray.

#### Note

- To print on A4 or Letter-sized plain papers, make sure that they are loaded in the Cassette. For other sizes or types of paper, load them in the Rear Tray.

#### (3) Open the Paper Output Tray gently, and open the Output Tray Extension.



## 2. Insert a memory card.

### (1) Press the **MEMORY CARD** button.

The Card menu screen will appear.

### (2) Insert a memory card **WITH THE LABELED SIDE FACING TO THE LEFT** into the Card Slot.

For the types of memory cards you can use and the locations to insert them, see [Inserting the Memory Card](#).



### (3) Use the **◀** (Left) or **▶** (Right) button to select Multiselect print , and press the **OK** button.

The photo selection screen will appear.

#### Note

- You can also display the photo selection screen in Multiselect print by inserting a memory card while the screen in the copy mode or fax mode, and any settings screen appears.
- You can also select useful printing functions other than Multiselect print.  
See [Using Various Functions](#).
- When Writable from USB PC or Writable from LAN PC is selected in Read/write attribute, you cannot print image data on the memory card using the Operation Panel on the machine. Press the **Menu** button to select Settings, and set Read/write attribute to Not writable from PC in Advanced settings of Device settings.  
For details, refer to the on-screen manual: [Advanced Guide](#).


## 3. Select photos to print.

### (1) Use the **◀** (Left) or **▶** (Right) button to display the photo you want to print.

#### Note

-  may appear on the LCD while reading photos. If you use the **◀** (Left) or **▶** (Right) button to display the photo while  appears on the LCD, the desired photo may not be selected.

- (2) Use the ▲ (Up) or ▼ (Down) button or Numeric button to specify the number of copies.

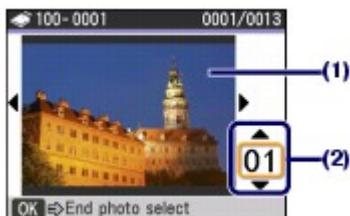

- (3) Repeat the procedures of (1) and (2) to specify the number of copies for each photo.

#### Note

##### Other options

- To change the display of photos, see [Changing the Display](#).
- To crop a part of photo (Trimming), see [Cropping a Part of Photo](#).

- (4) Press the **OK** button.

The print confirmation screen will appear.

## 4. Start printing.

- (1) Confirm the page size, media type, print quality, etc.

Here we confirm that 4"x6"(10x15cm) is selected for Page size and the type of loaded photo paper for Media type.

To change the settings, press the **Settings** button to select the item to change.

See [Basic Operation on the Settings Screen](#) and [Changing the Settings](#).


#### Note

- When Plain paper is selected for Media type and A4 or 8.5"x11"(LTR) for Page size, the arrow image will appear at the Cassette as shown in the figure below.
- When other sizes or types of paper are selected, the arrow image (A) will appear at the Rear Tray.
- Confirm that the selected paper is loaded in the correct paper source.

- (2) Confirm the number of sheets to be used for printing the selected photos.

- (3) Press the **Color** button.

The machine starts printing photos.

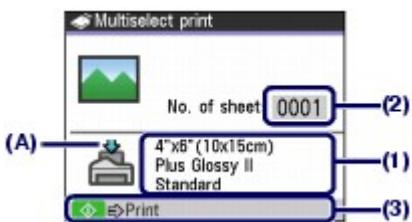

#### Note


- Press the **Stop** button to cancel printing.
- Printing does not start if you press the **Black** button.
- You can display the Card menu screen and select other useful printing functions, if you press the **Back** button after printing is completed.
- To remove the memory card, see [Removing the Memory Card](#).

## ■ Changing the Settings

You can use the **Settings** button to change the print settings such as page size, media type, or print quality to print.

For details, see [Basic Operation on the Settings Screen](#).

## ● Settings Tab 1

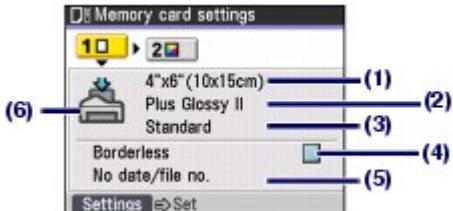

### (1) Page size

Select the page size of the paper to print: 4"x6"(10x15cm), A4, etc.

### (2) Media type

Select the media type of the paper to print: Plus Glossy II, Plain paper, etc.

#### Note

- If you do not select the page size and media type correctly, the machine may feed paper from the wrong paper source or may not print with the proper print quality.  
See [Paper Source to Load Paper](#).

### (3) Print quality

Adjust the print quality: High or Standard.

### (4) Border

Select bordered or borderless print: Bordered or Borderless.

#### Note

- When Plain paper is selected for Media type, you cannot select Borderless.

### (5) Date/file no.

Select whether to print the shooting date or file number: Print date only, Print file no. only, etc.

### (6) Paper source

The arrow image will appear at the paper source depending on the paper you selected for Page size or Media type.

The arrow image will appear at the Cassette when you selected A4 or Letter-sized plain paper. For other papers, it will appear at the Rear Tray.

Confirm that the selected paper is loaded in the paper source displayed on the screen.

For details on the paper source setting, refer to the on-screen manual: [Advanced Guide](#).

#### Note

- The settings of the page size, media type, image correction, borderless print, image correction, etc. will be retained, and these settings will appear next time when the Memory card settings screen is displayed even if the power is turned off and on.
- Combination of some items cannot be specified depending on the function.
- In Settings Tab 2 of the Memory card settings screen displayed by pressing the **Settings** button, you can correct photos automatically or manually.  
For details, refer to the on-screen manual: [Advanced Guide](#).

## Using Photo Index Sheet to print

thumbnails of photos on the memory card are printed on A4 or Letter-sized paper (this printed sheet is called Photo Index Sheet). You can select photos, number of copies, page size, etc. on this sheet, and print them.

Select Photo Index Sheet in the Card menu screen, then Photo Index Sheet print . For details on the operation, refer to the on-screen manual: [Advanced Guide](#).



[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**


[Contents](#) > [Printing from a Memory Card](#) > Using Various Functions

## Using Various Functions

You can print photos on a memory card in various ways when you select Special photo print  in the Card menu screen. You can also use the useful functions to print photos on the memory card. For details, refer to the on-screen manual: [Advanced Guide](#).

### ● Printing Photos in Various Layouts

You can select various layouts when you select Special photo print  in the Card menu screen. You can also select DPOF print.

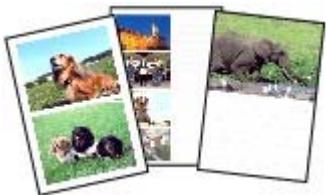

Layout print




Sticker print



Photo Index print



Print all photos

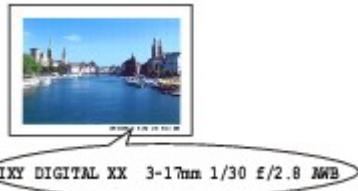

Captured info print

### ● Changing the Display

You can change the display of photos by pressing the **Change Display** button in the photo selections screen.



Four-screen display



Full-screen display

### ● Cropping a Part of Photo

You can crop a part of photo by pressing the  button in the photo selection screen.




**Trimming**

## ● Correcting Images

In Settings Tab 2 of the Memory card settings screen displayed by pressing the **Settings** button, you can correct photos automatically. You can also correct manually; adjusting brightness, contrast, or color hue, or enhancing photos.

For details, refer to the on-screen manual: [Advanced Guide](#).

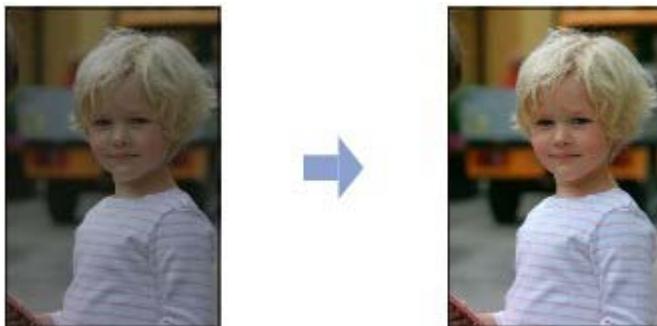

Auto photo fix ON (Default)



 [Page top](#)

## Inserting the Memory Card

### Before Inserting the Memory Card

The following types of memory cards and image data are compatible with the machine.

#### Important

- If you took and saved photos on a type of memory card that does not guarantee the operation on your digital camera, the image data may be unreadable on the machine or damaged. For information on memory cards that your digital camera guarantees operation, refer to the instruction manual supplied with your digital camera.
- Format the memory card with a digital camera compliant with the Design rule for Camera File system (Exif 2.2/2.21 compliant), TIFF (Exif 2.2/2.21 compliant). The memory card may not be compatible with the machine if it is formatted on a computer.

### Memory Cards that Do Not Require a Card Adapter


	<ul style="list-style-type: none"> <li>● SD Secure Digital memory card</li> <li>● SDHC memory card</li> <li>● MultiMediaCard (ver. 4.1)</li> <li>● MultiMediaCard Plus (ver. 4.1)</li> </ul>
	<ul style="list-style-type: none"> <li>● Compact Flash (CF) Card Supports Type I/II (3.3 V)</li> <li>● Microdrive</li> </ul>
	<ul style="list-style-type: none"> <li>● Memory Stick</li> <li>● Memory Stick PRO</li> <li>● Memory Stick Duo</li> <li>● Memory Stick PRO Duo</li> </ul>

### Memory Cards that Require a Card Adapter

#### Important

- Be sure to attach the special card adapters to the following memory cards before inserting to the Card Slot.
- If one of the following memory cards is inserted without the card adapter, you may not be able to remove the memory card. In this case, refer to " [Troubleshooting](#) " in the on-screen manual:  
[Advanced Guide](#).

	<ul style="list-style-type: none"> <li>● miniSD Card *1</li> <li>● miniSDHC Card *1</li> </ul>
	<ul style="list-style-type: none"> <li>● microSD Card *1</li> <li>● microSDHC Card *1</li> </ul>
	<ul style="list-style-type: none"> <li>● xD-Picture Card *2</li> <li>● xD-Picture Card Type M *2</li> <li>● xD-Picture Card Type H *2</li> </ul>
	<ul style="list-style-type: none"> <li>● RS-MMC (ver. 4.1) *3</li> <li>● Memory Stick Micro *4</li> </ul>

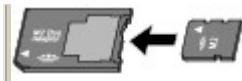

\*1 Use the special "SD Card Adapter".

\*2 Requires purchase of a separate compact flash card adapter for xD-Picture Card.

\*3 Use the special card adapter.

\*4 Use the special Duo size adapter or full size adapter.

## ● Printable Image Data

This machine accepts images taken with a camera compliant with the Design rule for Camera File system (Exif 2.2/2.21 compliant), TIFF (Exif 2.2/2.21 compliant). Other image or movie types such as RAW images cannot be printed.

## ■ Inserting the Memory Card

### Important

- When a memory card is inserted into the Card Slot, the **Access** lamp is lit. When the **Access** lamp is flashing, the machine is accessing the memory card. In this case, do not touch the area around the Card Slot.



### Note

- When Writable from USB PC or Writable from LAN PC is selected in Read/write attribute of Advanced settings under Device settings in the Settings menu, you cannot print image data from the memory card or save scanned data on the memory card using the Operation Panel of the machine. After using the Card Slot as the memory card drive of a computer, remove the memory card and be sure to set Read/write attribute to Not writable from PC. For details, refer to the on-screen manual: [Advanced Guide](#).
- When you use a computer to edit or enhance photos saved on a memory card, be sure to print them from the computer. If you use the Operation Panel, the photos may not be printed properly.

### 1. Prepare your memory card.

Attach a special card adapter if your memory card requires one.

See [Memory Cards that Require a Card Adapter](#).

### 2. Make sure that the power is turned on, and open the Card Slot Cover.



### 3. Insert only one memory card into the Card Slot.


The location to insert a memory card varies depending on each type of memory card. Insert your memory card straightforward WITH THE LABELED SIDE FACING TO THE LEFT into the Card Slot, according to the insert location in the figure below.

When the memory card is inserted properly, the **Access** lamp (A) will light up.


Be sure to attach the card adapter to the memory card with the mark \* (asterisk) below, and then insert it into the Card Slot.

**For Memory Stick Duo, Memory Stick PRO Duo, or Memory Stick Micro (with the Duo size adapter)**

\*:

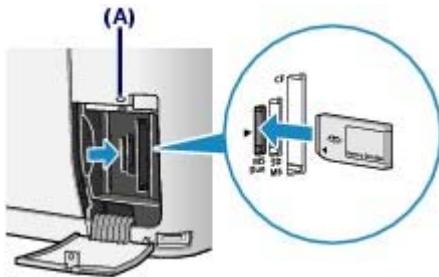

For SD Secure Digital memory card, SDHC memory card, miniSD Card\*, miniSDHC Card\*, microSD Card\*, microSDHC Card\*, Memory Stick, Memory Stick PRO, Memory Stick Micro (with the full size adapter)\*, MultiMediaCard (ver. 4.1), MultiMediaCard Plus (ver. 4.1), or RS-MMC (ver. 4.1) \*:

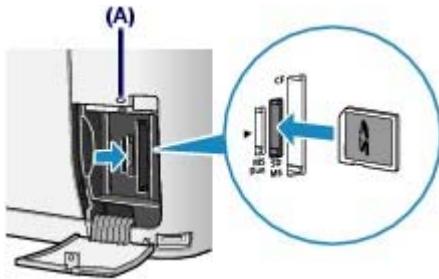

For Compact Flash (CF) Card, Microdrive, xD-Picture Card\*, xD-Picture Card Type M\*, or xD-Picture Card Type H\*:



### Important

- Part of the memory card will stick out of the Card Slot, but do not force it into the slot any further. This can damage the machine or the memory card.
- Make sure that the memory card is correctly oriented before inserting it into the Card Slot. If you force the memory card into the Card Slot in the wrong orientation, the memory card or the machine can be damaged.
- Do not insert more than one memory card at a time.

## 4. Close the Card Slot Cover.

## ■ Removing the Memory Card



### Important

- If you used the Card Slot as the memory card drive of a computer, you must perform the "safe removal" operation on your computer before physically removing the memory card from the machine.
  - In Windows, if you are connecting the machine with a USB cable, right-click the removable disk icon and click Eject. If Eject does not appear on the screen, make sure that the **Access** lamp is lit, and then remove the memory card.
  - If you used the Card Slot via the wired LAN, you do not need to perform the "safe removal" operation on your computer.
- In Macintosh, drag (Mount drive) into the Trash.

## 1. Open the Card Slot Cover.

**2.** Make sure that the **Access** lamp is lit, and remove the memory card.

Hold the part of the memory card that is protruding and remove it straightforward from the machine.

 **Important**

- Do not remove the memory card while the **Access** lamp is flashing. The **Access** lamp flashes while the machine is reading or writing data from/to the memory card. If you remove the memory card or turn off the power while the **Access** lamp is flashing, the data saved on the memory card can be damaged.

**3.** Close the Card Slot Cover.

 [Page top](#)

**Basic Guide**[Advanced Guide](#) [Troubleshooting](#)[Contents](#) > Copying

# Copying

You can copy in the various methods such as enlarging/reducing or copying two original pages onto a single sheet of paper.

## Making Copies

[Changing the Settings](#)

## Using Various Copy Functions


[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Copying](#) > Making Copies

## Making Copies


This section describes the basic operation, using the settings to copy an original of A4 size on plain paper as an example.

For the operation, see the notes and operation procedure described in the reference page.

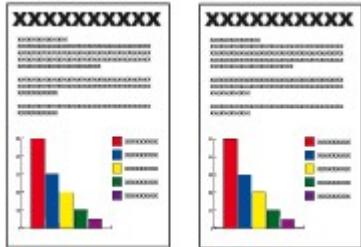


### You need to prepare:

Originals to copy. See [Originals You Can Load](#).

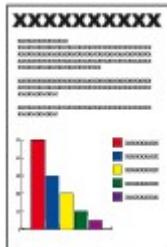

Paper for printing. See [Media Types You Can Use](#).

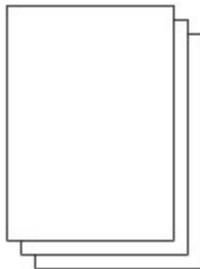

### 1. Prepare for copying.

(1) Make sure that the power is turned on.

See [Operation Panel](#).

(2) Press the **Copy** button to select the copy mode, if another copy mode has been selected.

The copy standby screen will appear.

(3) Load paper.

See [Loading Paper](#).

Here we make sure that A4 plain papers are loaded in the Cassette.

#### Note

- To print on A4 or Letter-sized plain papers, make sure that they are loaded in the Cassette.  
For other sizes or types of paper, load them in the Rear Tray.

(4) Open the Paper Output Tray gently, and open the Output Tray Extension.



### (5) Load an original on the Platen Glass or in the ADF.

Load the original with the copying side FACING DOWN and align it with the alignment mark as shown below.

#### Note

- For details on the type and condition of an original which you can copy and how to load the original in the ADF, see [Loading a Document in the ADF](#).




## 2. Start copying.

- Use the ▲ (Up) or ▼ (Down) button or the Numeric buttons to specify the number of copies.
- Use the ◀ (Left) or ▶ (Right) button to adjust the intensity (brightness). Press the ◀ (Left) button to decrease the intensity and the ▶ (Right) button to increase it.
- Confirm the page size, media type, and other settings.

Here we confirm that A4 for Page size, Plain paper for Media type, and Standard for Print quality are specified.

#### Note

- When you select Plain paper in Media type, and A4, B5, A5, or 8.5"x11"(LTR), the arrow image (A) will appear at the Cassette as shown in the figure below. For other papers, the arrow image will appear at the Rear Tray. Make sure that the selected paper is loaded in the correct paper source.
- To change or confirm the page size, media type, magnification (B), and other settings, press the **Settings** button. See [Changing the Settings](#).
- To make copies in various layout, press the ◀ (Left) or ▶ (Right) button to select the functions. See [Using Various Copy Functions](#).

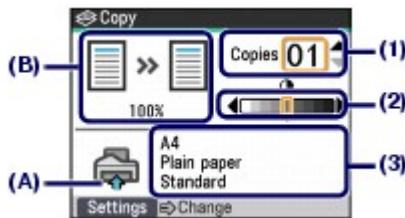

- (4) Press the **Color** button for color copying, or the **Black** button for black & white copying.

The machine starts copying.

Remove the original on the Platen Glass after copying is completed.

### Important

- Do not open the Document Cover or move the loaded original until copying is completed.

### Note


- Press the **Stop** button to cancel copying.
- The machine can receive faxes even in the copy mode (after pressing the **COPY** button).

## ■ Changing the Settings

You can use the **Settings** button to change the print settings such as page size, media type, or print quality to print.

For the operation, [Basic Operation on the Settings Screen](#).

### ● Settings Tab 1

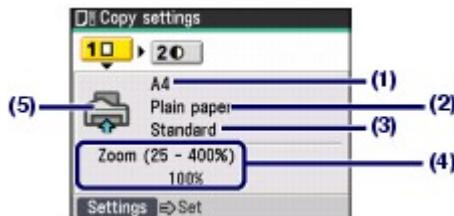

#### (1) Page size

Select the page size of the paper to print: A4, B5, etc.

#### (2) Media type

Select the media type of the paper to print: Plain paper, Plus Glossy II, etc.

### Note

- If you do not select the media type correctly, the machine may feed paper from the wrong paper source or may not print with the proper print quality. See [Paper Source to Load Paper](#).

#### (3) Print quality

Adjust the print quality according to the original to copy: High, Standard, etc. The available print quality settings depend on the paper selected in Media type.

#### (4) Magnification

Specify the enlargement/reduction manner. You can specify the copy scale by selecting the optional number or the page size: A4 to 8.5"x11", A4 to B5, etc. If you do not want to enlarge/reduce the page size, select Same magnification. For details, refer to the on-screen manual: [Advanced Guide](#).

#### (5) Paper source

The arrow image will appear at the paper source depending on the paper you selected for Page size or Media type.

The arrow image will appear at the Cassette when you selected A4 or Letter-sized plain paper. For other papers, it will appear at the Rear Tray.

Confirm that the selected paper is loaded in the paper source displayed on the screen.

For details on the paper source setting, refer to the on-screen manual: [Advanced Guide](#).

 Note


- The settings of the page size, media type, print quality, automatic intensity, etc. are retained, and these settings will appear next time when the Copy menu is selected even if the power is turned off and on.
- Combination of some items cannot be specified depending on the function.
- If you select Fast with the media type set to Plain paper and the quality is not as good as expected, select Standard or High and then try copying again.
- For details on automatic intensity adjustment and date/page number print setting in Settings Tab 2, refer to the on-screen manual: [Advanced Guide](#).

 Page top


**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Copying](#) > Using Various Copy Functions

## Using Various Copy Functions

You can make a copy in various ways when you select Special copy  in the Copy menu screen. For details, refer to the on-screen manual: [Advanced Guide](#).

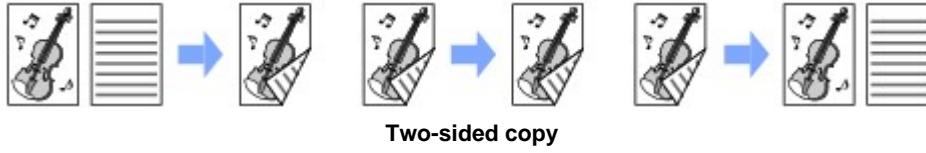


Two-sided copy

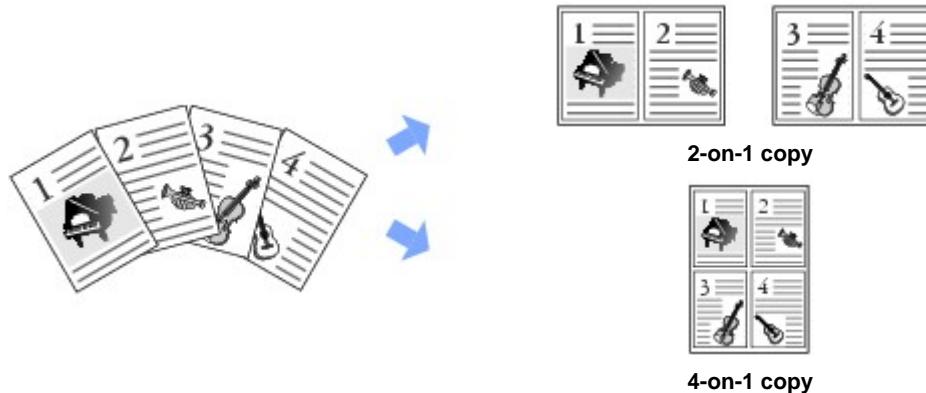

2-on-1 copy

4-on-1 copy

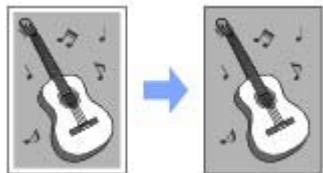

Borderless copy


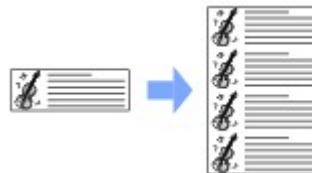


Image repeat




(A) Collated copy is not selected

(B) Collated copy is selected

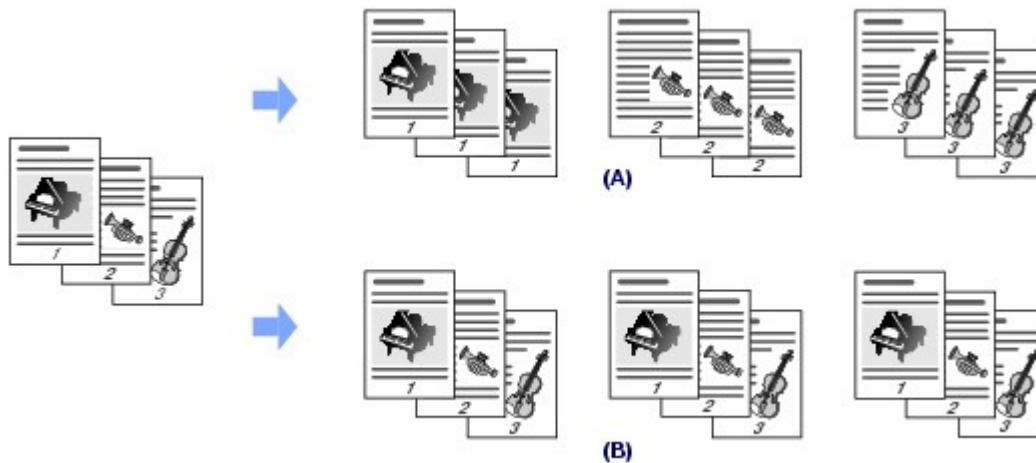


Faded-restored copy

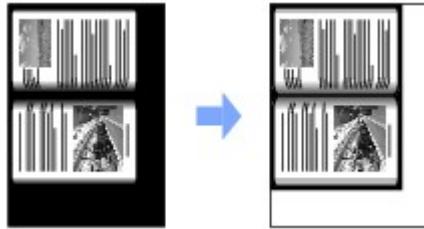


Frame erase



Sticker copy

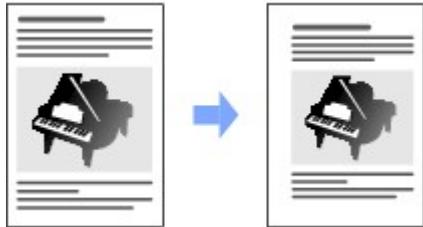

Binding margin copy

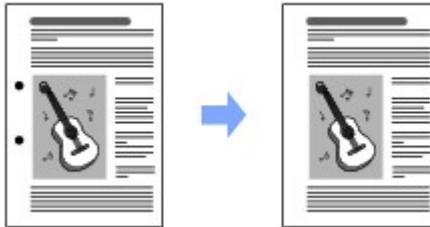


Punch hole removal copy

## Note

### Printing the date & page Number:

- In Settings Tab 2 of the Copy settings screen displayed by pressing the **Settings** button, you can specify whether to print date/page number. You can use this setting with the Special copy function. For details, refer to the on-screen manual: [Advanced Guide](#).

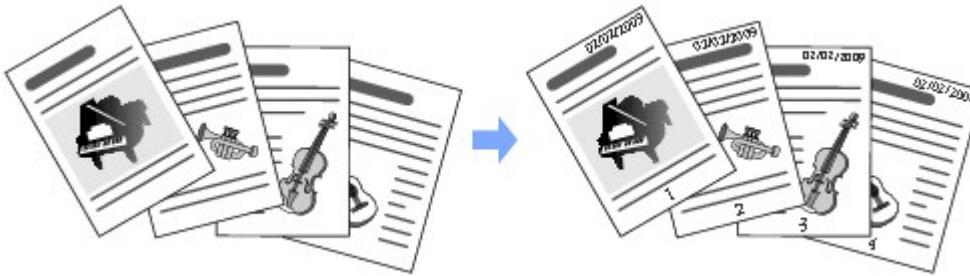

[Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > Scanning

# Scanning

You can send scanned data to your computer, edit or process them with the supplied software application, then save them. You can also save scanned data on a USB flash drive inserted into the machine.

## Saving Scanned Data

[Preparing for scanning with the Operation Panel](#)  
[Saving Scanned Data on the Computer](#)

## Using Various Scan Functions

[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Scanning](#) > Saving Scanned Data

## Saving Scanned Data

This section describes the operation to detect the type of original on the Platen Glass or in the ADF automatically with Auto detect, and save it on a computer connecting with the USB cable or via a network. For other operations to save scanned data on the USB flash drive or to scan originals with a computer, refer to the on-screen manual: [Advanced Guide](#).

 **Important**

- Please note that Canon shall not be liable for any damage or loss of the data for any reason whatsoever, even within the warranty period of the machine.

 **Note**

- The machine can detect the types of original with Auto detect: photo, Hagaki, business card, magazine, newspaper, text document, and DVD/CD. For other originals, select the type of originals to scan them.

### ■ Preparing for scanning with the Operation Panel

Before scanning images, confirm the following:

- **Are the necessary software (MP Drivers and MP Navigator EX) installed?**

If the software is not yet installed, refer to the printed manual: [Getting Started](#).

- **Does the original to be scanned meet the requirements for an original to be set on the Platen Glass or in the ADF?**

For details, see [Originals You Can Load](#).

- **If the machine is connected via USB or wired LAN**

Confirm that the connection with USB cable or LAN cable between the machine and the computer is physically secure.

 **Important**

- Do not insert or remove USB cable or LAN cable when scanning images with the machine, or when the computer is in sleep or standby mode.

- **If the machine is connected over a network**

When you use a computer connected over a network, confirm the following:

- **Is the Canon IJ Network Scan Utility installed?**

If the software is not yet installed, refer to the printed manual: [Getting Started](#).

- **Is the machine selected in the settings screen of the Canon IJ Network Scan Utility?**

For details on the setting procedure, refer to the on-screen manual: [Advanced Guide](#).

- **Is the Canon IJ Network Scan Utility running?**

For details, see "[Troubleshooting](#)" in the on-screen manual: [Advanced Guide](#).

 **Note**

- If you do not intend to send scanned images to a computer over a network with the Operation Panel on the machine, you do not need to use the Canon IJ Network Scan Utility.

- **If you are using Mac OS X v.10.3.9**

You need to set MP Navigator EX as the starting application software in Image Capture under Applications of Mac OS X.

(1) Select Applications on the Go menu, then double-click the Image Capture icon.

(2) Click Options at lower left of the scanner window, select MP Navigator EX 2 in Application to launch when scanner button is pressed, then click OK.

To quit Image Capture, select Quit Image Capture on the Image Capture menu.

### Important

If Options is not displayed, do the following:

- Select Preferences on the Image Capture menu, click Scanner, and click Use TWAIN software whenever possible to clear the option. Then quit Image Capture and restart it.

## ■ Saving Scanned Data on the Computer

### 1. Prepare for scanning.

(1) Make sure that the power is turned on.

(2) Load an original on the Platen Glass or in the ADF.

For details, see [Loading Originals](#).

### 2. Select the scan operation.

(1) Press the **SCAN** button.

(2) Make sure that PC  is selected, and press the **OK** button.  
The computer selection screen will appear.

(3) Use the ▲ (Up) or ▼ (Down) button to select the computer to save scanned data, and press the **OK** button.

Here we select Local (USB).

The document type selection screen will appear.

### Note

- For the network connection, select the computer name to save scanned data in the list.
- For the connection via USB only, only Local (USB) appears on the LCD.

(4) Use the ▲ (Up) or ▼ (Down) button to select the type of original and position to load it, and press the **OK** button.

Here we select Auto detect.

### Important

- Make sure that the originals have been loaded correctly according to the type of original that you have selected. For details, see [Loading Originals](#).

### Note

- If the computer connected over a network is selected in (3), Auto detect does not appear on the LCD.
- The type of original other than Auto detect includes Document (platen), Photo (platen), Document (ADF simplex), and Document (ADF duplex). If you select other than Auto detect, you can save all scanned data in a PDF file, attach it to a mail, open it with a software application.  
Refer to the on-screen manual: [Advanced Guide](#).
- When selecting Auto detect to scan an original, it will be scanned according to the settings of MP Navigator EX. For details, refer to the on-screen manual: [Advanced Guide](#).

### 3. Start scanning.

(1) Make sure that the original is loaded on the Platen Glass or in the ADF.

**(2) Press the Color or Black button.**

The settings configured with MP Navigator EX apply when scanning.

**Important**

- If the position or size of an image is not scanned in correctly depending on the type of original, refer to the on-screen manual: [Advanced Guide](#) and change the Document Type and Document Size settings in MP Navigator EX to match the original being scanned.
- Computers connected over a network are displayed on the LCD when the following conditions are met.
  - Canon IJ Network Scan Utility is installed on the computer.
  - This machine is selected in the settings screen of the Canon IJ Network Scan Utility.

**Note**

- The operation after scanning the original depends on the scan operation setting you have selected in (4) of step 2. For details on how to modify the operation settings, refer to the on-screen manual: [Advanced Guide](#).

**When using Windows Vista:**

- The program selection screen may be displayed after performing step 3. In this case, select MP Navigator EX Ver2.1 and click OK.  
You can set MP Navigator EX to launch whenever performing step 3. For details, refer to the on-screen manual: [Advanced Guide](#).

**When using Windows XP:**

- The program selection screen may be displayed after performing step 3 for the first time. In this case, specify MP Navigator EX Ver2.1 as the application software to use, select Always use this program for this action, then click OK. From the next time, MP Navigator EX is automatically started.



[Page top](#)


**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Scanning](#) > Using Various Scan Functions

## Using Various Scan Functions

In the scan menu, you can save scanned data on a USB flash drive, memory card, or a computer. For details, refer to the on-screen manual: [Advanced Guide](#).


### ● Selecting a Place to Save the Scanned Data

You can save the scanned data on a USB flash drive other than a computer.

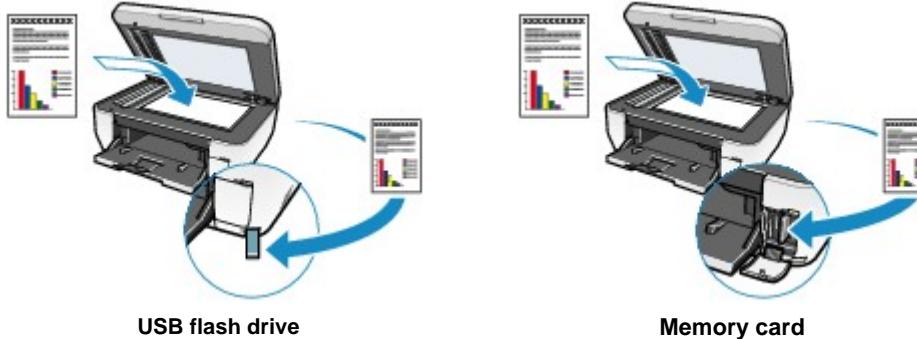

### ● Selecting Various Data Processings

To save the scanned data on the computer, you can select the data processing for scanned data if other than Auto detect in Document type is selected.

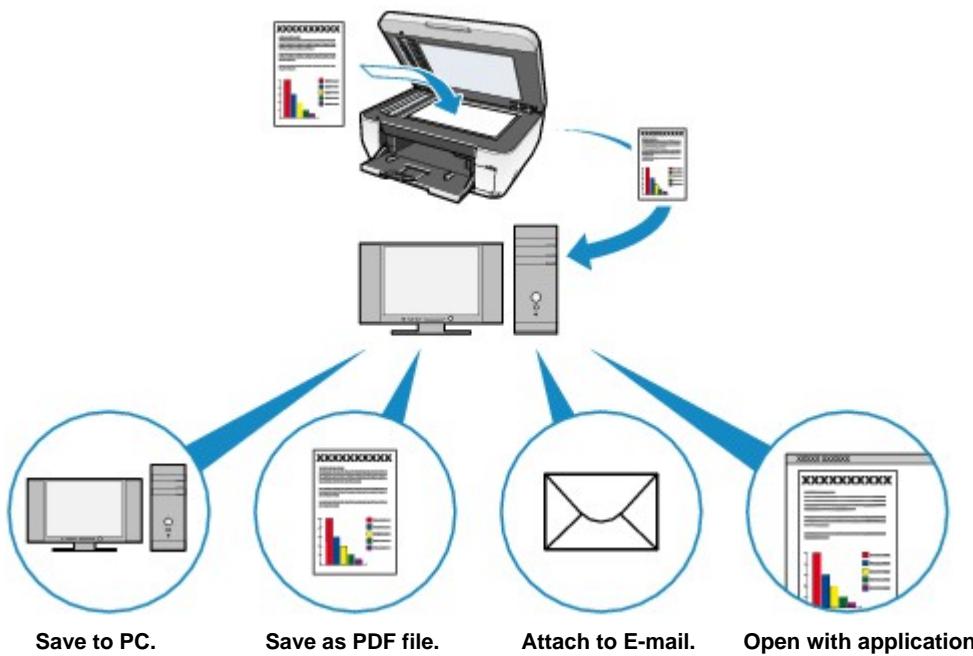**Note**

- Options for scan operation can be specified with MP Navigator EX. For details, refer to the on-screen manual: [Advanced Guide](#).

[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > Printing from Your Computer

# Printing from Your Computer

This section describes how to print documents or photos with a computer.

You can easily print photos taken with your digital camera by using Easy-PhotoPrint EX supplied with your machine.

## Printing Photos (Easy-PhotoPrint EX)

[Using Various Functions of Easy-PhotoPrint EX](#)

## Printing Documents (Windows)

## Printing Documents (Macintosh)

[For Mac OS X v.10.5.x](#)[For Mac OS X v.10.4.x or Mac OS X v.10.3.9](#)[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**

[Contents](#) > [Printing from Your Computer](#) > Printing Photos (Easy-PhotoPrint EX)

## Printing Photos (Easy-PhotoPrint EX)

Print image data saved on your computer with Easy-PhotoPrint EX supplied with your machine. This section describes the procedure, using print setting for borderless photo print on 4" x 6" / 10 x 15 cm paper as a sample. For details on Easy-PhotoPrint EX, refer to the on-screen manual: [Advanced Guide](#).

### Note

- The screens used in this section are for printing with Windows. The operations are also the same for printing with Macintosh.
- Install Easy-PhotoPrint EX from the *Setup CD-ROM* when it has not been installed or has been uninstalled. To install Easy-PhotoPrint EX, select Easy-PhotoPrint EX in Custom Install.

### 1. Prepare for printing.

#### (1) Make sure that the machine is turned on.

See [Operation Panel](#).

#### (2) Load paper.

See [Loading Paper](#).

Here we load 4" x 6" / 10 x 15 cm photo paper in the Rear Tray.

#### (3) Open the Paper Output Tray gently, and open the Output Tray Extension.



### 2. Start Easy-PhotoPrint EX, and select Photo Print.

#### (1) Start Easy-PhotoPrint EX.



Double-click  (Easy-PhotoPrint EX) on the desktop.



Click Here: [Easy-PhotoPrint EX](#)



Select the Go menu, Applications, Canon Utilities, Easy-PhotoPrint EX, then double-click Easy-PhotoPrint EX.

### Note



- To start Easy-PhotoPrint EX from Solution Menu, double-click  (Solution Menu) on the desktop and click  (Print photos or albums, etc.). See [To Start Solution Menu](#).

- To start Easy-PhotoPrint EX from the Start menu, select All Programs (Programs in Windows 2000), Canon Utilities, Easy-PhotoPrint EX, then Easy-PhotoPrint EX.




- To start Easy-PhotoPrint EX from Solution Menu, click (Solution Menu) in the Dock and click (Print photos or albums, etc.).  
See [To Start Solution Menu](#).

## (2) Click Photo Print.



- You can select Album, Calendar, Stickers, etc., besides Photo Print.  
See [Using Various Functions of Easy-PhotoPrint EX](#).

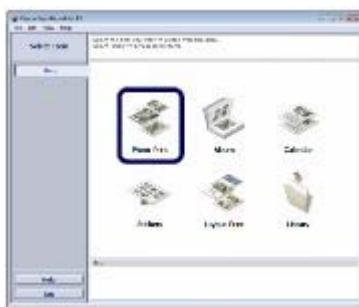

## 3. Select a photo to print.

### (1) Select the folder in which images are saved.


### (2) Click the image to print.

The number of copies appears as "1", and the image you selected appears in the selected image area (A). You can select two or more images at the same time.



- To print two or more copies, click (Up arrow) to change the number of copies.
- To cancel the selection, click the image to cancel in the selected image area and click (Delete Imported Image). You can also use (Down arrow) to change the number of copies to zero.
- You can also correct or enhance the selected image.  
See [Using Various Functions of Easy-PhotoPrint EX](#).

## (3) Click Select Paper.

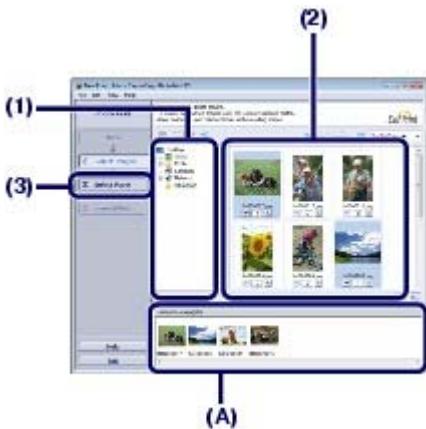

## 4. Select the loaded paper.

- Make sure that your machine's name is selected in Printer.
- Make sure that Automatically Select is selected in Paper Source.

### Note

- For details on other paper feeding, refer to the on-screen manual: [Advanced Guide](#).


### (3) Select the size and type of the paper to print in Paper Size and Media Type.

Here we select 4"x6" 10x15cm in Paper Size and the type of loaded photo paper in Media Type.

### Note

- If you select A4 or Letter-sized plain paper when Automatically Select is selected in Paper Source, the machine feeds the paper from the Cassette. If you select other sizes or types of paper such as photo paper, the machine feeds the paper from the Rear Tray.
- If you select the wrong page size or media type, the machine may feed paper from the wrong paper source or may not print with the proper print quality.

### (4) Click Layout/Print.

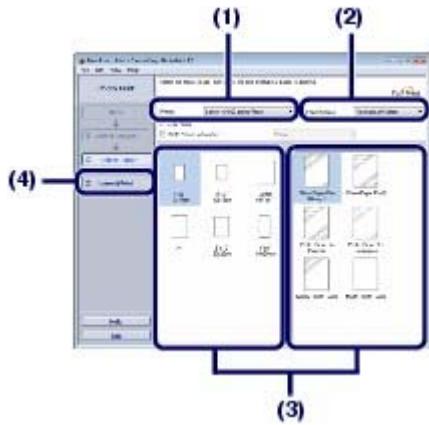

### 5. Select a layout and start printing.

#### (1) Select the layout of photo.

Here we select Borderless [full].

The preview will appear in the selected layout for confirmation of the required print result.

### Note

- You can change the direction of photo or crop a part of photo (trimming) to print.  
For details on the operation, refer to the on-screen manual: [Advanced Guide](#).

#### (2) Click Print.



### Note

#### Windows

- To cancel a print job in progress, press the **Stop** button on the machine or click Cancel Printing on the printer status monitor. After canceling the print job, blank sheets of paper may be ejected.
- To display the printer status monitor, click Canon XXX Printer (where "XXX" is your machine's name) on the taskbar.

#### Macintosh

- Click the printer icon in the Dock to display the list of print jobs in progress.
- To cancel a print job in progress, select the desired job in the Name list and click Delete.

To temporarily stop a job in progress, click Hold. To temporarily stop all the jobs in the list, click Pause Printer. After canceling the print job, blank sheets of paper may be ejected.



[Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**

[Contents](#) > [Printing from Your Computer](#) > [Printing Photos \(Easy-PhotoPrint EX\)](#) > Using Various Functions of Easy-PhotoPrint EX

## ■ Using Various Functions of Easy-PhotoPrint EX


This section describes a few of the useful functions of Easy-PhotoPrint EX.  
For details on the operation, refer to the on-screen manual: [Advanced Guide](#).

### ● Creating Your Own Prints

You can create an album or calendar using your photos.



Album

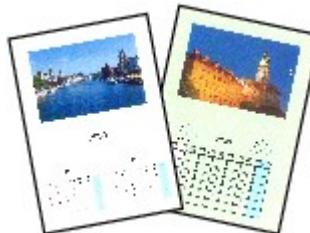

Calendar




Stickers



Layout Print

### ● Correcting Images

You can use Red-Eye Correction, Face Sharpener, Digital Face Smoothing, Brightness, Contrast, etc. to adjust, correct, or enhance images automatically or manually.

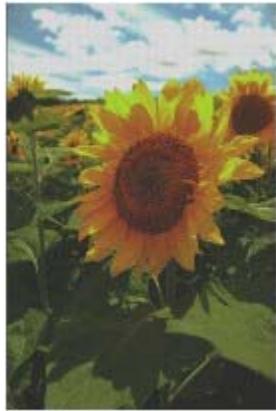

Brightness



[Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Printing from Your Computer](#) > [Printing Documents \(Windows\)](#)

## Printing Documents (Windows)

This section describes the procedure to print A4 document on plain papers.

For details, refer to the on-screen manual: [Advanced Guide](#).

 **Note**

- Operations may vary depending on your software application. For details on the operation, refer to the instruction manual of your application.
- If your machine is connected to a computer, you can send faxes using the fax driver from any software application that has a printing function. For details, refer to the on-screen manual: [Advanced Guide](#).
- The screens used in this section are for printing with Windows Vista operating system Ultimate Edition (hereafter referred to as "Windows Vista").

### 1. Make sure that the machine is turned on.

See [Operation Panel](#).

### 2. Load paper.

See [Loading Paper](#).

Here we make sure that A4 plain paper is loaded in the Cassette.

 **Note**

- Load A4, B5, A5, or Letter-sized plain paper in the Cassette and other sizes or types of paper such as photo paper in the Rear Tray.

### 3. Open the Paper Output Tray gently, and open the Output Tray Extension.

### 4. Create (or open) a document to print using an appropriate software application.

### 5. Open the printer driver setup window.

- (1) Select Print on the File menu or the command bar in your software application.  
The Print dialog box will appear.

- (2) Make sure that your machine's name is selected.

 **Note**

- If another printer's name is selected, click and select your machine's name.

- (3) Click Preferences (or Properties).



## 6. Specify the required print settings.

### (1) Select Business Document in Commonly Used Settings.



- When the print object such as Business Document or Photo Printing is selected in Commonly Used Settings, the items in Additional Features will be selected automatically. The settings suitable for the print object such as media type or print quality will also appear.
- When you specify two or more copies in Copies, the Collate check box will be selected.


### (2) Make sure of the displayed settings.

Here we make sure that Plain Paper in Media Type, Standard in Print Quality, A4 in Printer Paper Size, and Automatically Select in Paper Source are selected.



- The settings can be changed. However, after changing Printer Paper Size, confirm that the setting for Page Size in the Page Setup sheet matches the setting set in the software application. For details, refer to the on-screen manual: [Advanced Guide](#).
- If you select A4 or Letter-sized plain paper when Automatically Select is selected in Paper Source, the machine feeds the paper from the Cassette. If you select other sizes or types of paper such as photo paper, the machine feeds the paper from the Rear Tray. If you select the wrong page size or media type, the machine may feed paper from the wrong paper source or may not print with the proper print quality.

### (3) Click OK.

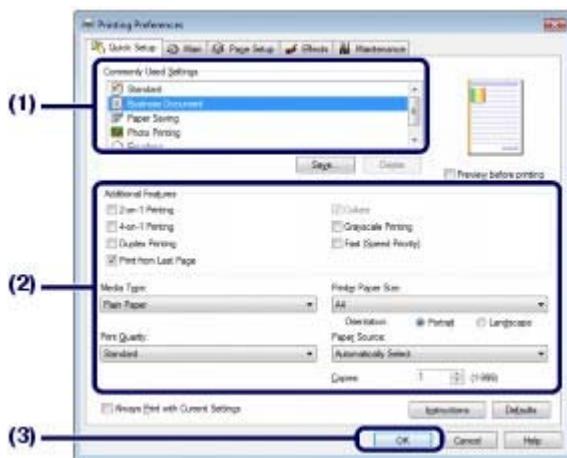

- For details on the printer driver functions, click Help or Instructions to view the online help or the on-screen manual: [Advanced Guide](#). The Instructions button appears on the Quick Setup, Main and Maintenance sheets if the on-screen manual is installed on your computer.
- You can name the changed setting and add to Commonly Used Settings. For details refer to the on-screen manual: [Advanced Guide](#).
- To display the current settings next time when you open the printer driver setup window, select the Always Print with Current Settings check box. Some software applications may not have this function.

- To display the preview to confirm the print result, select the Preview before printing check box. Some software applications may not have a preview function.
- You can specify the detailed print settings with Main sheet or Page Setup sheet.  
For details, refer to the on-screen manual: [Advanced Guide](#).

## 7. Start printing.

Click Print (or OK) to start printing.



### Note

- To cancel a print job in progress, press the **Stop** button on the machine or click Cancel Printing on the printer status monitor. After canceling the print job, blank sheets of paper may be ejected.  
To display the printer status monitor, click Canon XXX Printer (where "XXX" is your machine's name) on the taskbar.
- If printed ruled lines are misaligned or print results are unsatisfactory, adjust the print head position.  
See [Aligning the Print Head](#).



[Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Printing from Your Computer](#) > [Printing Documents \(Macintosh\)](#)

## Printing Documents (Macintosh)

This section describes the procedure to print A4 document on plain papers.

For details, refer to the on-screen manual: [Advanced Guide](#).

**Note**

- Operations may vary depending on your software application. For details on the operation, refer to the instruction manual of your application.

### ■ For Mac OS X v.10.5.x

#### 1. Make sure that the machine is turned on.

See [Operation Panel](#).

#### 2. Load paper.

See [Loading Paper](#).

Here we make sure that A4 plain paper is loaded in the Cassette.

**Note**

- Load A4, B5, A5, or Letter-sized plain paper in the Cassette and other sizes or types of paper such as photo paper in the Rear Tray.

#### 3. Open the Paper Output Tray gently, and open the Output Tray Extension.

#### 4. Create (or open) a document to print using an appropriate software application.

#### 5. Open the Print dialog box.

Select Print on the File menu in your software application.

The Print dialog box will appear.

**Note**

- If the dialog box below appears, click  (Down arrow).




#### 6. Specify the required print settings.

(1) Make sure that your machine's name is selected in Printer.

(2) Select the page size of the loaded paper in Paper Size.

Here we select A4.

(3) Select Quality & Media in the pop-up menu.

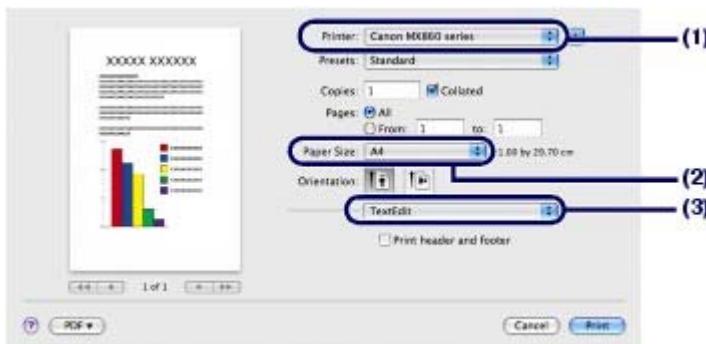

**(4) Select the media type of the loaded paper in Media Type.**

Here we select Plain Paper.



### Note

- If you select A4 or Letter-sized plain paper when Automatically Select is selected in Paper Source, the machine feeds the paper from the Cassette. If you select other sizes or types of paper such as photo paper, the machine feeds the paper from the Rear Tray.
- If you select the wrong page size or media type, the machine may feed paper from the wrong paper source or may not print with the proper print quality.

**(5) Make sure that Automatically Select is selected in Paper Source.**




- For details on other paper feeding, refer to the on-screen manual: [Advanced Guide](#).

**(6) Select the print quality in Print Quality.**

Here we select Standard.



- For details on the print quality, refer to the on-screen manual: [Advanced Guide](#).

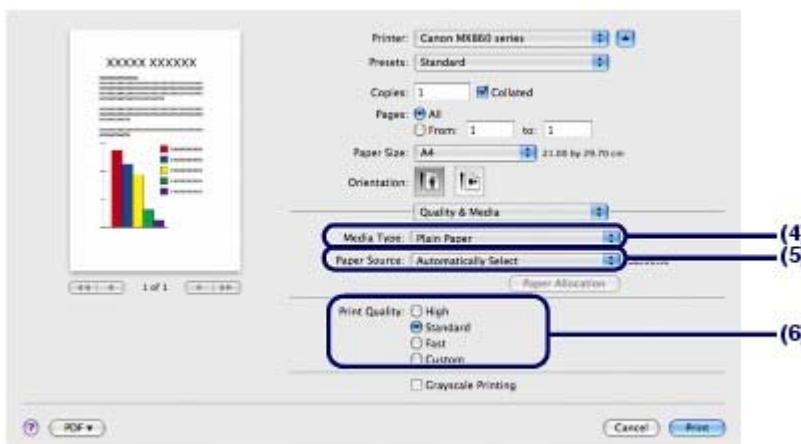

### Note

- For details on the printer driver functions, click ⓘ (Question) on the Quality & Media, Color Options, Borderless Printing, or Duplex Printing & Margin screen to view the on-screen manual: [Advanced Guide](#). If the on-screen manual is not installed, it will not appear even if ⓘ (Question) is clicked.
- The preview appears on the left of the dialog box to confirm the print result. Some software applications may not have a preview function.

**7. Start printing.**

Click Print to start printing.



### Note

- Click the printer icon in the Dock to display the list of print jobs in progress.
- To cancel a print job in progress, select the desired job in the Name list and click Delete. To temporarily stop a job in progress, click Hold. To temporarily stop all the jobs in the list, click Pause Printer. After canceling the print job, blank sheets of paper may be ejected.
- If printed ruled lines are misaligned or print results are unsatisfactory, adjust the print head position.  
See [Aligning the Print Head](#).

## ■ For Mac OS X v.10.4.x or Mac OS X v.10.3.9

### Note

- The screens used in this section are for printing with Mac OS X v.10.4.x.

### 1. Make sure that the machine is turned on.

See [Operation Panel](#).

### 2. Load paper.

See [Loading Paper](#).

Here we make sure that A4 plain paper is loaded in the Cassette.

### Note

- Load A4, B5, A5, or Letter-sized plain paper in the Cassette and other sizes or types of paper such as photo paper in the Rear Tray.

### 3. Open the Paper Output Tray gently, open the Output Tray Extension.

### 4. Create (or open) a document to print using an appropriate software application.

### 5. Specify the page size.

#### (1) Select Page Setup on the File menu in your software application.

The Page Setup dialog box will appear.

#### (2) Make sure that your machine's name is selected in Format for.

When using the machine over a network, your machine's name and MAC address are displayed in Format for.

#### (3) Select the page size of the loaded paper to print in Paper Size.

Here we select A4.

#### (4) Click OK.



## 6. Specify the required print settings.

**(1) Select Print on the File menu in your software application.**

The Print dialog box will appear.

**(2) Make sure that your machine's name is selected in Printer.**

**(3) Select Quality & Media in the pop-up menu.**

**(4) Select the media type of the loaded paper to print in Media Type.**

Here we select Plain Paper.

### Note

- If you select A4 or Letter-sized plain paper when Automatically Select is selected in Paper Source, the machine feeds the paper from the Cassette. If you select other sizes or types of paper such as photo paper, the machine feeds the paper from the Rear Tray.
- If you select the wrong page size or media type, the machine may feed paper from the wrong paper source or may not print with the proper print quality.

**(5) Make sure that Automatically Select is selected in Paper Source.**

### Note


- For details on other paper feeding, refer to the on-screen manual: [Advanced Guide](#).

**(6) Select the print quality in Print Quality.**

Here we select Standard.

### Note

- For details on the print quality, refer to the on-screen manual: [Advanced Guide](#).

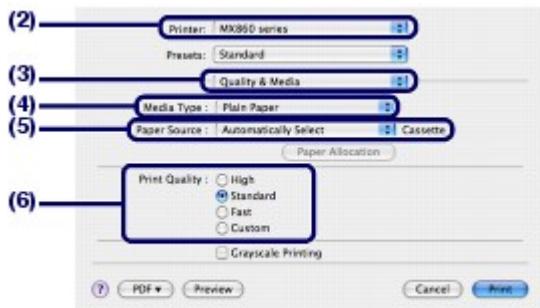

### Note

- For details on the printer driver functions, click (Question) on the Quality & Media, Color Options, Special Effects, Borderless Printing, or Duplex Printing & Margin screen to view the on-screen manual: [Advanced Guide](#). If the on-screen manual is not installed, it will not appear even if (Question) is clicked.
- To display the preview to confirm the print result, click Preview. Some software applications may not have a preview function.

## 7. Start printing.

Click Print to start printing.

### Note

- Click the printer icon in the Dock to display the list of print jobs in progress.
- To cancel a print job in progress, select the desired job in the Name list and click Delete. To temporarily stop a job in progress, click Hold. To temporarily stop all the jobs in the list, click Stop Jobs. After canceling the print job, blank sheets of paper may be ejected.
- If printed ruled lines are misaligned or print results are unsatisfactory, adjust the print head position. See [Aligning the Print Head](#).



[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > Faxing

# Faxing

This section describes the basic operation to send or receive faxes with the fax functions of the machine.

## Sending Faxes

- [Sending a Fax with the Numeric Buttons](#)
- [Redialing the Number Dialed with the Numeric Buttons](#)
- [Sending a Fax with the One-Touch Speed Dial](#)
- [Registering Recipient's Numbers to the One-Touch Speed Dial](#)
- [Adjusting the Sending Quality](#)

## Using Various Sending Functions

- [Settings for Sending Faxes](#)

## Receiving Faxes

- [Preparing for Receiving a Fax](#)
- [Receiving a Fax in Each Receive Mode](#)
- [Receiving a Fax in the Memory of the Machine \(Memory Receiving\)](#)

## Using Various Receiving Functions

- [Settings for Receiving Faxes](#)

## Using Useful Fax Functions

[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Faxing](#) > [Sending Faxes](#)

## Sending Faxes

This section describes the operation to send a fax with the Numeric buttons and to register the recipient's numbers to the one-touch speed dial and send a fax. For other operations, refer to the on-screen manual: [Advanced Guide](#).

- ▶ [Sending a Fax with the Numeric Buttons](#)
- ▶ [Redialing the Number Dialed with the Numeric Buttons](#)
- ▶ [Sending a Fax with the One-Touch Speed Dial](#)
- ▶ [Registering Recipient's Numbers to the One-Touch Speed Dial](#)
- ▶ [Adjusting the Sending Quality](#)

 **Note**

- A PBX (Private Branch Exchange) is an on-site telephone switchboard. If your machine is connected through a PBX or other telephone switching systems, you have to dial the outside line access number first, and then the number of the party you are calling.

### ■ Sending a Fax with the Numeric Buttons

#### 1. Preparing for sending a fax.

- (1) Make sure that the power is turned on.

See [Operation Panel](#).

- (2) Load a document on the Platen Glass or in the ADF.

See [Loading Originals](#).

 **Important**


- When sending a double-sided document, set the document on the Platen Glass. You cannot scan double-sided documents from the ADF.

 **Note**

- For details on the types and conditions of document which you can fax, see [Originals You Can Load](#).

- (3) Press the **FAX** button.

The fax standby screen will appear.

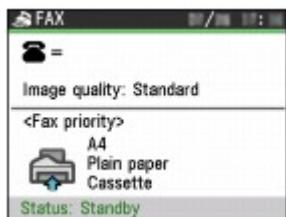


- (4) Adjust the image quality (fax resolution) or density (scan contrast) as necessary.

See [Adjusting the Sending Quality](#).

#### 2. Sending the fax.

● **When the document was loaded on the Platen Glass:**

- (1) Use the Numeric buttons to dial the recipient's number.

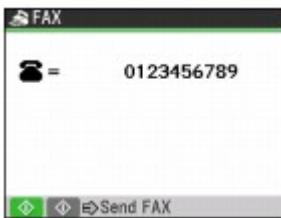

- (2) Press the **Color** button for color sending, or the **Black** button for black & white sending.

**Important**

- Color sending requires that the recipient's fax machine supports color faxing.

- (3) Press the **OK** button.

The machine starts sending the fax.

**Note**

**When sending two or more pages of document:**

- Load the next page, and press the same button as you pressed in (2) of step 2. Repeat the same procedure to scan all pages of the document, and press the **OK** button.
- When you have sent the first page with the **Black** button, the following pages will be sent in black and white.

● **When the document was loaded in the ADF:**

- (1) Use the Numeric buttons to dial the recipient's number.

- (2) Press the **Color** button for color sending, or the **Black** button for black & white sending.

The machine scans the document automatically and starts sending the fax.

**Important**

- Color sending requires that the recipient's fax machine supports color faxing.

**Note**

- To cancel sending a fax, press the **Stop** button, and follow the instructions on the LCD.
- If documents remain in the ADF after pressing the **Stop** button during scanning, "Document in ADF. Press OK to discharge document." will appear on the LCD. Press the **OK** button so that the remaining document is automatically fed out.

**Automatic redialing**

- When sending a fax and the recipient's line is busy, the machine will redial the number after a specified interval. Auto redial is enabled by default.  
Auto redial can be enabled or disabled by selecting ON or OFF.  
Select ON to specify the number of redialing in Redial time and redialing interval in Redial interval.

## ■ Redialing the Number Dialed with the Numeric Buttons

### 1. Prepare for sending a fax.

- (1) Make sure that the power is turned on.

See [Operation Panel](#).

- (2) Load a document on the Platen Glass or in the ADF.

See [Loading Originals](#).

- (3) Press the **FAX** button.

The fax standby screen will appear.

- (4) Adjust the image quality (fax resolution) or density (scan contrast) as necessary.

See [Adjusting the Sending Quality](#).

## 2. Select the telephone number in the redial list.

### (1) Press the **Redial/Pause** button.

The fax numbers dialed with the Numeric buttons will be listed.

### (2) Use the ▲ (Up) or ▼ (Down) button to select the number to redial.



### (3) Press the **OK** button.

The selected number will appear in the fax standby screen.

## 3. Send the fax.

Press the **Color** button for color sending, or the **Black** button for black & white sending.



### Important

- Color sending requires that the recipient's fax machine supports color faxing.

## ■ Sending a Fax with the One-Touch Speed Dial

You can send a fax with easy operation if you register recipient's numbers to the **One-Touch Speed Dial** button (01 to 05) on the Operation Panel.

## 1. Prepare for sending a fax.

### (1) Make sure that the power is turned on.


See [Operation Panel](#).

### (2) Load a document on the Platen Glass or in the ADF.

See [Loading Originals](#).

### (3) Press the **FAX** button.

The fax standby screen will appear.

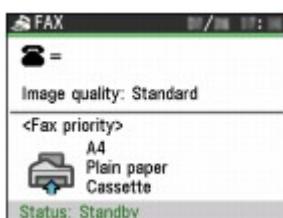

### (4) Adjust the image quality (fax resolution) or density (scan contrast) as necessary.

See [Adjusting the Sending Quality](#).

## 2. Send the fax.

### (1) Press the **One-Touch Speed Dial** button.

Press the **One-Touch Speed Dial** (01 to 05) button assigned the number you want to dial.

### (2) Press the **Color** button for color sending, or the **Black** button for black & white sending.



### Important

- Color sending requires that the recipient's fax machine supports color faxing.

## ■ Registering Recipient's Numbers to the One-Touch Speed Dial

## 1. Display the One-touch speed dial screen.

(1) Press the **FAX** button, and press the Menu button.

(2) Use the **◀** (Left) or **▶** (Right) button to select TEL number registration , and press the **OK** button.

(3) Use the **▲** (Up) or **▼** (Down) button to select One-touch speed dial, and press the **OK** button.

## 2. Register a recipient's number to the one-touch speed dial.

(1) Use the **▲** (Up) or **▼** (Down) button to select an unoccupied one-touch speed dial number (01 to 05), and press the **OK** button.

### Note


- Select an unoccupied number to register a new recipient's number.

The message asking whether to edit or delete the registered information will appear if an occupied number is selected.

(2) Use the Numeric buttons to enter a recipient's name (max. 16 characters, including spaces).


(3) Press the **OK** or **▼** (Down) button.

(4) Use the Numeric buttons to enter the recipient's fax/telephone number (max. 60 digits (40 digits for Korea), including spaces).

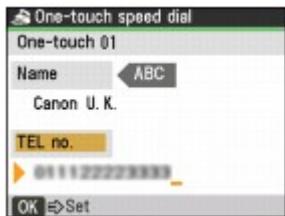

(5) Press the **OK** button.

The registered name will appear at the selected number on the One-touch speed dial screen.

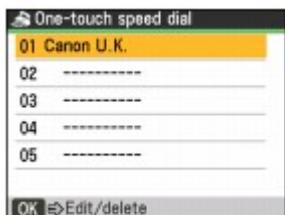

### Note

- Press the **FAX** button to save the registered information and will return to the fax standby screen.


## ■ Adjusting the Sending Quality

You can adjust the image quality (fax resolution) or density (scan contrast) of the document you send. The higher you set the image quality setting, the better the output quality will be at the other end, but the longer it will take for the transmission. Contrast is the degree of difference between light and dark. Increasing the scan contrast thickens the whole fax image, or light penciled texts and such can be thickened. Adjust the image quality and density according to the type of document you are sending.

## 1. Press the **FAX** button, and press the **FAX Quality** button.

**2.** Select the image quality (fax resolution).

- (1) Use the ▲ (Up) or ▼ (Down) button to select FAX resolution.

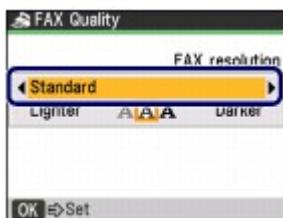

- (2) Use the ◀ (Left) or ▶ (Right) button to select the image quality.

Standard: Suitable for text-only documents.

Fine: Suitable for fine-print documents.

Extra fine: Suitable for detailed illustration or fine-print quality documents.

If the recipient's fax machine is not compatible with Extra fine (300x300dpi), the fax will be sent in the Standard or Fine resolution.


Photo: Suitable for photographs.

**Note**

- The color fax is sent with the resolution for Photo.

**3.** Select the density (scan contrast).

- (1) Use the ▲ (Up) or ▼ (Down) button to select Scan contrast.

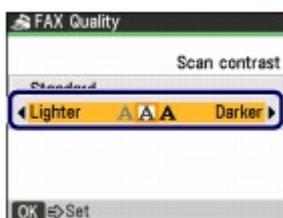

- (2) Use the ◀ (Left) or ▶ (Right) button to select the density.

Pressing the ◀ (Left) button decreases the contrast, and pressing the ▶ (Right) button increases the contrast.

- (3) Press the OK button.



[Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Faxing](#) > Using Various Sending Functions

## Using Various Sending Functions


You can send a fax in various ways as follows.

For details, refer to the on-screen manual: [Advanced Guide](#).

### ● Sending a Fax after Speaking on Telephone

You can send a fax manually after speaking on telephone if you want to talk to the recipient before sending a fax, or if the recipient has a fax machine that can not receive fax automatically.

You can dial with the telephone connected to the machine.

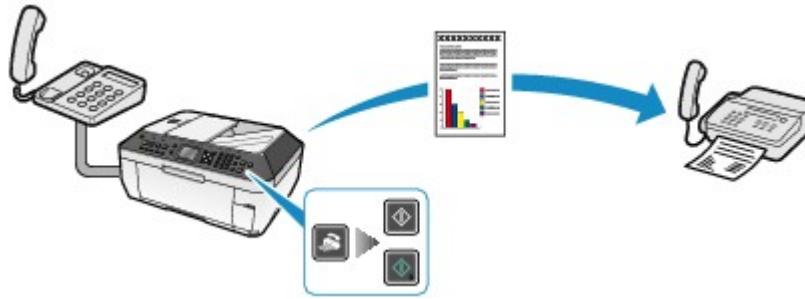

### ● Sending a Fax with Easy Operation by Registering Numbers

Registering fax or telephone numbers for coded speed dial or group dial enables you to send faxes easily.

#### • Coded speed dial




#### • Group dial



### ● Sending Same Documents to Several Recipients (Sequential Broadcasting)

You can select the recipient's numbers registered in coded speed dial or group dial and send the same document to several recipients (max. 21 destinations) in one operation.

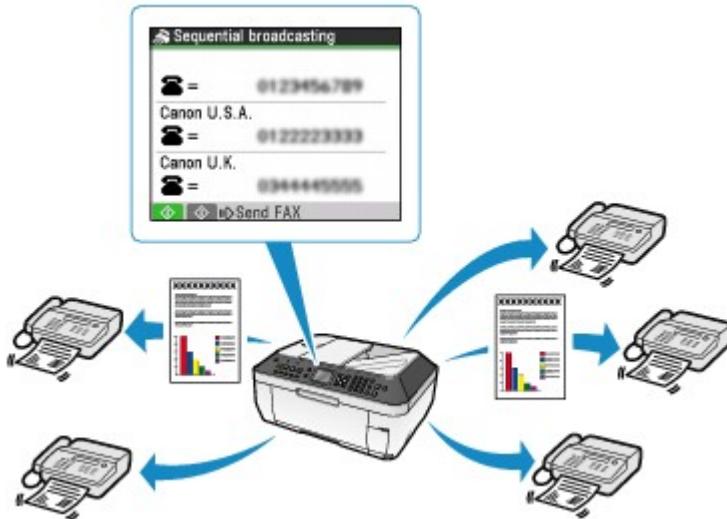

## ● Fax Number Re-entry (Prevent Dialing Wrong Number)

To prevent dialing a wrong number, the machine allows you to enter the recipient's number with the Numerical buttons, press the **Color** or **Black** button or the **OK** button, and reenter the recipient's number again for confirmation.



## ● Sending from Your Computer (Windows Only)

If the machine is connected to a computer, you can send faxes using the fax driver from any application software that has a printing function.



## ● Dial Search

Searches names registered for one-touch dial or coded speed dial to display them in a list, and dials them.

### Note

- You can use many information services such as banks, airline reservations, or hotel reservations. These services require tone dialing for their services, so that you need to temporarily switch to tone dialing if your machine is connected to a rotary pulse line.

## ■ Settings for Sending Faxes

The machine has various settings for receiving faxes as follows. Change the settings as necessary. For details, refer to the on-screen manual: [Advanced Guide](#).

## ● ECM TX

Sends faxes in ECM (Error Correction Mode). When the recipient's fax machine is compatible with ECM, the machine resends the fax after correcting errors automatically.

- **Pause time settings**

Sets the length of time paused for each press of the **Redial/Pause** button when entering fax/telephone number.

- **TX start speed**

Selects the fax sending speed.

- **Color transmission**

When faxing color documents using the ADF, scan documents in black & white and send them if the recipient's fax machine does not support color faxing.

- **TX report**

Prints a sending report automatically after the machine sends faxes. You can select Do not print, Print error only, or Print for each TX.

- **Dial tone detect**

The machine sends faxes after confirming the dial tone.

- **Check RX fax info**

Checks whether the dialed fax/telephone number and the recipient's fax/telephone number are the same. If not, stop sending faxes.



[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Faxing](#) > Receiving Faxes

## Receiving Faxes

This section describes the operation to receive a fax with the machine depending on the receive mode.

This section also describes the operation to print documents stored in the memory of the machine such as when an error occurred.

- ▶ [Preparing for Receiving a Fax](#)
- ▶ [Receiving a Fax in Each Receive Mode](#)
- ▶ [Receiving a Fax in the Memory of the Machine \(Memory Receiving\)](#)

### ■ Preparing for Receiving a Fax

Prepare for receiving a fax according to the following procedure.

#### 1. Make sure that the power is turned on.

See [Operation Panel](#).

#### 2. Make sure of the receive mode setting.

See [Setting the Receive Mode](#).

#### 3. Load the paper for printing.

See [Loading Paper](#).

When a fax is received, the machine feeds plain paper from the paper source for plain paper and print on them.

The machine is set to feed plain paper from the Cassette by default.

For setting the paper source for plain paper, refer to the on-screen manual: [Advanced Guide](#).

#### 4. Specify the paper for printing.

(1) Press the **FAX** button.

(2) Press the **Settings** button.

The Fax paper settings screen will appear.


(3) Specify the page size.

You can specify A4, 8.5"x11"(LTR), or 8.5"x14"(Legal).

(4) Select the automatic feed switch.

OFF: Feeds plain paper in the paper source for plain paper.

ON: If plain papers run out either in the Cassette or Rear Tray, the machine automatically switches to another paper source.

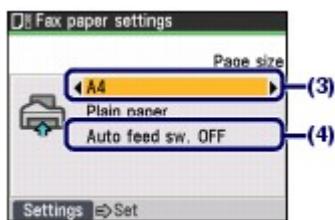

(5) Press the **Settings** button.

The specified settings will be selected.

### ■ Receiving a Fax in Each Receive Mode

**Note**

- If you want to use a single telephone line for faxes and voice calls, you need to connect a

telephone or an answering machine to the External Device Jack of this machine.

- The operation for receiving a fax varies depending on the receive mode. For the receive mode, see [Setting the Receive Mode](#).

## ● When Fax priority mode is selected:

When the receive mode is in Fax priority mode, receive a call as follows.



**1.** A fax or voice call incomes.

**2.** Receive the fax or voice call.

Fax: The machine will receive it automatically.



Voice call: The machine will ring when a voice call incomes.

Pick up the handset to answer the call.



### Note

- It takes a little time until the machine rings when the call is a voice call.
- If a telephone is connected to the machine, the telephone will ring when the call incomes regardless of the receive mode.
- To make the telephone not ring when a call incomes, select OFF in Incoming ring of Reception settings.

#### For Fax priority mode

- When the receive mode is in Fax priority mode, select Fax priority mode in Reception settings under FAX settings in Device settings and change the following settings.
  - Ring start time: The time the machine takes to determine whether a call is a fax or a voice call
  - Telephone ring time: The time the machine rings when the call was a voice call
  - Default action: Whether or not the machine receives the fax after the specified ring time has elapsed

## ● When Fax only mode is selected:

When the receive mode is in Fax only mode, the machine will receive a fax automatically if a fax incomes thorough a dedicated telephone line for fax.



 Note

- The machine will not ring when it receives faxes.
- If you want to use the machine with a telephone or answering machine, connect it to the machine and change to Fax priority mode or TEL priority mode.

## ● When TEL priority mode is selected:

When the receive mode is in TEL priority mode, receive a call as follows.



### 1. A fax or voice call incomes.

When the telephone rings, pick up the handset.



### 2. Receive the fax or voice call.

Fax: The telephone will ring. If you pick up the handset and hear the fax tone, the machine will switch to the fax automatically and receive the fax.

 Note

- If the machine will not switch to the fax, press the **Color** or **Black** button to receive the fax.




Voice call: Pick up the handset to answer the call.



When connecting the answering machine:

Voice call: The answering machine responds to the call.

Fax: The machine receives the fax automatically.

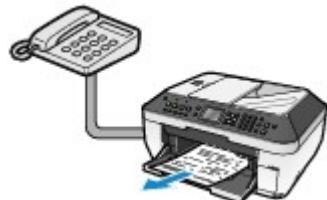 Note

- The machine can be set to receive faxes automatically after the telephone rings for a specified length of time. Set Manual/auto switch in Reception settings under FAX settings to ON, and

then specify the automatic reception start time.

Refer to the on-screen manual: [Advanced Guide](#).

- If the telephone connecting to the machine is located away from the machine, pick up the handset of the telephone connecting to the machine and dial 25 (the remote reception ID) to receive faxes (remote reception). The remote reception is only available for the touch tone dial. The remote reception can be disabled.  
Refer to the on-screen manual: [Advanced Guide](#).
- Set your answering machine to answering mode and adjust it as follows:
  - The entire message should be no longer than 15 seconds.
  - In the message, tell your callers how to send a fax.
- If you have subscribed to Duplex Ringing service in Hong Kong, the machine will receive faxes automatically even if you set the receiving mode of the machine to TEL priority mode.

## ● When DRPD is selected:

For Distinctive Ring Pattern Detection (DRPD):

When the receive mode is DRPD, receive a call as follows.



### 1. A fax or voice call incomes.

The machine judges whether call is voice or fax by the ringing pattern. In the meanwhile the telephone rings.

### 2. Receive the fax or voice call.

Fax: The machine will receive it automatically when the machine detects the registered fax ring pattern.



Voice call: The telephone continues to ring. Pick up the handset to answer the call.



### Note

- If you selected DRPD, you need to select the appropriate ring pattern on the machine. For details, see [Setting the DRPD Ring Pattern \(US and Canada only\)](#).

## ● When Network switch is selected

When the receive mode is Network switch, receive a call as follows.



## 1. A fax or voice call incomes.

The machine judges whether call is voice or fax by the ringing pattern. In the meanwhile the telephone rings.

## 2. Receive the fax or voice call.

Fax: The machine will receive it automatically when the machine detects the registered fax ring pattern.



Voice call: The telephone continues to ring. Pick up the handset to answer the call.



### Note

- The name of this service varies depending on the country or region of purchase. This setting may not be also available depending on the country or region of purchase.
- To use this feature, you need to subscribe to a compatible service provided by your telephone company. Contact your telephone company for details.

## ■ Receiving a Fax in the Memory of the Machine (Memory Receiving)

If the machine was not able to send a fax, or if the machine was not able to print a received fax, the machine stores the unsent or unprinted fax in its memory (memory receiving). If an error occurred when sending a fax, they are not stored. You can print a list of stored documents (the memory list) or print a specified document.

### Important

- If you disconnect the power plug, all the documents stored in memory are deleted. Send or print necessary documents before disconnecting the power plug.

If the machine receives a fax under one of the following conditions, the machine will automatically store the received fax in its memory.

- Ink has run out while receiving a fax.

Replace the empty ink tank. The fax in memory will be automatically printed.

### Note

- You can set to print received faxes forcibly even if an ink has run out. However, a part of contents or all contents of the fax may not be printed since the ink has run out. And also, the contents of fax will not be stored in memory. In addition, if ink has already run out, it is recommended that OFF be selected for Auto print in User settings to store the received fax in memory once and print the fax manually after replacing the ink tank.

For details, refer to the on-screen manual: [Advanced Guide](#).

- Paper has run out while receiving a fax.

Load the paper and press the **OK** button. The fax in memory will be automatically printed.

- Paper other than A4, Letter, or Legal-sized paper are loaded.

Load A4, Letter, or Legal-size paper, and confirm the paper setting.

See [Preparing for Receiving a Fax](#).

- You pressed the **Stop** button to cancel printing of a fax.

Press the **FAX** button.

### Note

- The machine can store up to approximately 250 pages (approximately 30 documents)\* of faxes in

memory.

- When OFF is selected for Auto print in User settings, print the faxes stored in the memory from the Memory reference screen.  
For details, see [Other Basic Setting Items](#).
- If the memory becomes full, the machine cannot receive any more faxes. Print or delete the documents stored in memory, and make the sender resend the faxes. See [Printing Faxes in the Memory](#).

\* When using ITU-T No.1 chart (Standard mode)



 [Page top](#)


**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Faxing](#) > Using Various Receiving Functions

## Using Various Receiving Functions

The machine has various receiving functions as follows.  
For details, refer to the on-screen manual: [Advanced Guide](#).

### ● Fax Reception Rejection

Select ON in Fax reception reject to reject faxes from the uninformed numbers, the numbers which are not registered to the coded speed dial, or the numbers registered as reject number.

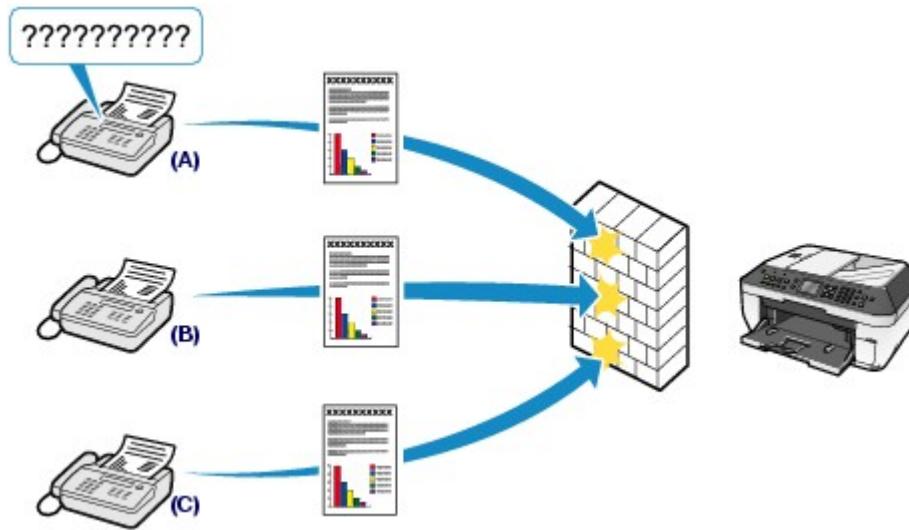

(A) Recipient's fax/telephone number is not registered to the coded speed dial.

(B) Recipient's fax/telephone number is registered to the rejected number.


(C) Recipient's fax/telephone number is not informed.

### ● Remote Reception

If the machine is located away from the telephone, pick up the handset of the telephone connected to the machine and dial 25 (the remote reception ID) to receive faxes (remote reception).

The remote reception can be enabled or disabled with Remote RX.

Select ON to change Remote RX ID (remote reception ID).

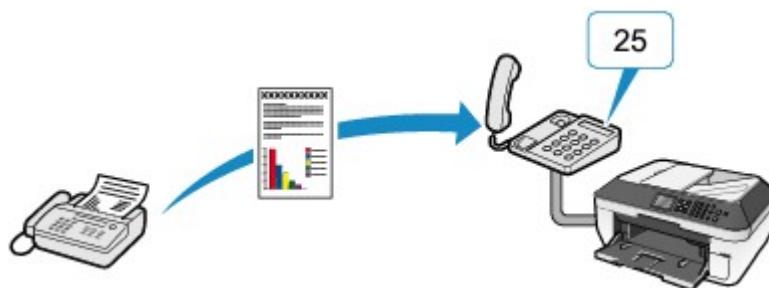

## ■ Settings for Receiving Faxes

The various settings of the machine for receiving faxes are listed below. Change the settings as necessary.

For details, refer to the on-screen manual: [Advanced Guide](#).

### ● ECM RX

Receives faxes in ECM (Error Correction Mode). When the sender's fax machine is compatible with ECM, it resends the fax after correcting errors automatically.

### ● Fax priority mode

Selects the detailed settings when the receive mode is set to Fax priority mode.

## ● Incoming ring

Makes the external device ring with an incoming call when the receive mode is set to Fax only mode or Fax priority mode.

## ● Manual/auto switch

Receives faxes automatically after the external device rang a specified length of time when the receive mode is set to TEL priority mode.

## ● RX image reduction

Reduces to print received faxes automatically so that they fit in the selected page size.

## ● RX start speed

Selects the fax receiving speed.

## ● RX report

Prints a reception report automatically after the machine receives faxes. You can select Do not print, Print error only, or Print for each TX.

## ● Caller rejection

Rejects the calls from the specific destinations if you have subscribed to the Caller ID service.

### Note

- This setting may not be available depending on the country or region of purchase.



 [Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**

[Contents](#) > [Faxing](#) > Using Useful Fax Functions

## Using Useful Fax Functions

The machine has various fax functions as follows.

For details, refer to the on-screen manual: [Advanced Guide](#).

### ● Memory reference

Print memory list: Prints a list of documents in the memory.

Print specified document: Prints a specified document in the memory.

Delete specified doc.: Deletes a specified document in the memory.

Print all received docs: Prints all received documents in the memory at the same time.

Delete all docs in memory: Delete all documents in the memory at the same time.

### ● Print reports/lists

#### ● Activity report

Prints the history of sent and received faxes. The machine prints an Activity report after every 20 transactions.

02/02 2009 12:14 FAX 0122334455 CANON 001						
***** *** ACTIVITY REPORT *** *****						
ST. TIME	DESTINATION NUMBER	DESTINATION ID	NO.	MODE	PGS.	RESULT
02/02 10:14	0700000000	Canon France	0001	TRANSMIT	COL	1 OK 00'31
02/02 10:22	0677770000	Canon Italy	0002	TRANSMIT	ECM	1 OK 00'22
02/02 10:31	0233334444	Canon U.K.	5001	AUTO RX	ECM	2 OK 00'44
02/02 10:33	0122223333	Canon U.S.A.	0003	TRANSMIT	ECM	1 OK 00'10

#### ● Telephone number list

02/02 2009 12:14 FAX 0122334455 CANON 001						
***** *** CODED SPEED DIAL TELEPHONE NO. LIST *** *****						
NO.	02/02 2009 12:14 FAX 0122334455 CANON 001					
[* 03]	000					
[* 02]	000					
[* 01]	000					
[* 00]	000					
[* 04]	GRO					

02/02 2009 12:14 FAX 0122334455 CANON 001						
***** *** ONE-TOUCH SPEED DIAL TELEPHONE NO. LIST *** *****						
NO.	02/02 2009 12:14 FAX 0122334455 CANON 001					
[ 02]	000					
[ 03]	000					
[ 01]	000					
[ 00]	000					
[ 04]	GRO					

02/02 2009 12:14 FAX 0122334455 CANON 001						
***** *** GROUP DIAL TELEPHONE NO. LIST *** *****						
NO.	02/02 2009 12:14 FAX 0122334455 CANON 001					
[ 04]	Europe 01	[ 03] 0700000000			Canon Germany	
		[* 02] 0677770000			Canon Italy	
[ 04]	Europe 02	[* 02] 0677770000			Canon Italy	
		[* 03] 0700000000			Canon France	

### ● TEL number registration

Coded speed dial: Registers a frequently used fax/telephone number for a coded speed dial code.

Group dial: Registers two or more fax/telephone numbers for a group dial.

Rejected numbers: Registers a fax/telephone number to reject a call for a reject number.

### ● Printing Faxes in the Memory

#### Conditions of the memory receiving

If the machine receives a fax under one of the following conditions, the machine will not be able to print the received fax and will automatically store it in its memory.

● Ink has run out while receiving a fax.

● Paper has run out while receiving a fax.

● Paper other than A4, Letter, or Legal-sized paper are loaded.

- OFF is selected for Auto Print in User Settings.
- You pressed the Stop button to cancel printing of a fax.

**1.** Make sure that the plain paper is loaded in the Cassette.

See [Loading Paper](#).


**2.** Display the Memory reference screen.

- (1) Press the **FAX** button, and press the **Menu** button.

- (2) Use the **◀** (Left) or **▶** (Right) button to select Memory reference , and press the **OK** button.

**3.** Print all the received documents in the memory.

- (1) Use the **▲** (Up) or **▼** (Down) button to select Print all received docs, and press the **OK** button.

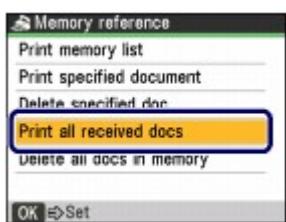


 **Note**

- To print the list of documents in the memory, select Print memory list.
- To print a specified document, select Print specified document.
- To delete a specified document, select Delete specified doc..
- To delete all documents in the memory at the same time, select Delete all docs in memory.


- (2) Use the **▲** (Up) or **▼** (Down) button to select Yes, and press the **OK** button.

The machine starts printing documents in the memory one by one.

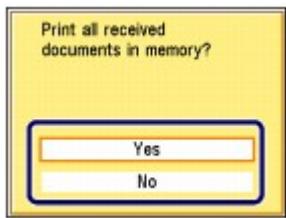

- (3) Use the **▲** (Up) or **▼** (Down) button to select Yes.

To keep the document in the memory, select No.

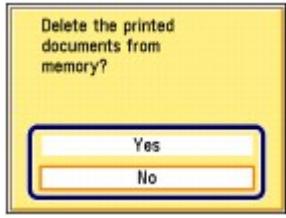

- (4) Press the **OK** button.

 **Note**

- The deletion confirmation screen will appear each time after one document is printed. Repeat the same procedure until all documents are printed.



[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > Other Usages

# Other Usages

This section describes the operation to print the notebook or graph paper, the setting items of the machine, and the function to print directly from a digital camera or mobile phone.  
This section also introduces other useful functions; Solution Menu and My Printer.

## Printing the Notebook or Graph Paper

[Printing the Various Template Forms](#)

## Printing Photos Directly from Your Digital Camera or Mobile Phone

[Printing Photos from a PictBridge Compliant Device](#)[Printing Photos from a Wireless Communication Device](#)

## Machine Settings


## Solution Menu and My Printer

[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Other Usages](#) > Printing the Notebook or Graph Paper


## Printing the Notebook or Graph Paper

This section describes the operation to select and print the template forms.

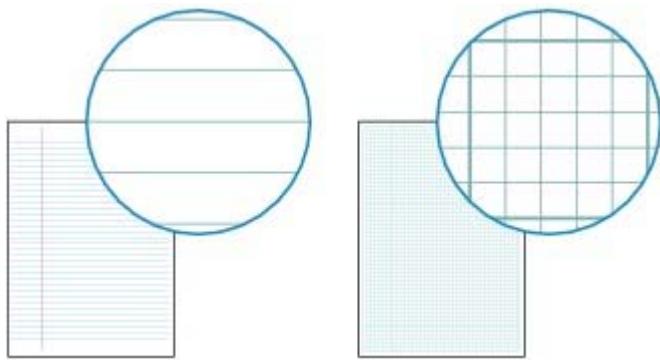

### You need to prepare:

A4, B5, or Letter-sized plain paper. See [Media Types You Can Use](#).

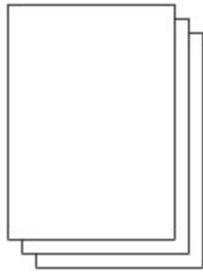

### 1. Prepare for printing.

- (1) Make sure that the power is turned on.

See [Operation Panel](#).

- (2) Make sure that the A4, B5, or Letter-sized plain papers are loaded in the Cassette.

See [Loading Paper in the Cassette](#).

- (3) Open the Paper Output Tray gently, and open the Paper Output Extension.


### 2. Select a template form.

- (1) Press the **Menu** button.

- (2) Use the **◀** (Left) or **▶** (Right) button to select Settings , and press the **OK** button.

- (3) Use the **◀** (Left) or **▶** (Right) button to select Template print , and press the **OK** button.

- (4) Use the **◀** (Left) or **▶** (Right) button to select a template form to print, and press the **OK** button.

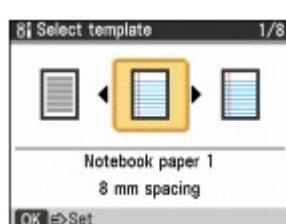

 Note

- For details on the available template forms, see [Printing the Various Template Forms](#).

**3. Start printing.**


(1) Use the ▲ (Up) or ▼ (Down) button to select No. of copies, and use the ◀ (Left) or ▶ (Right) button to specify the number of copies.

(2) Confirm the page size or two-sided copy settings.

Use the ▲ (Up) or ▼ (Down) button to select an item to change, and use the ◀ (Left) or ▶ (Right) button to change the setting.

 Note

- You can only select A4, B5, or 8.5"x11"(LTR) for Page size. B5 may not be available depending on the selected template. The media type is limited to Plain paper and cannot be changed.

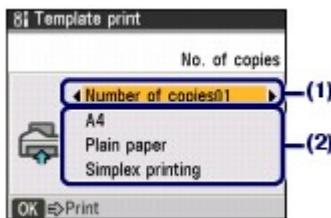


(3) Press the **OK** button.


The machine starts printing.

## ■ Printing the Various Template Forms


This section describes the template forms you can select in Template print.

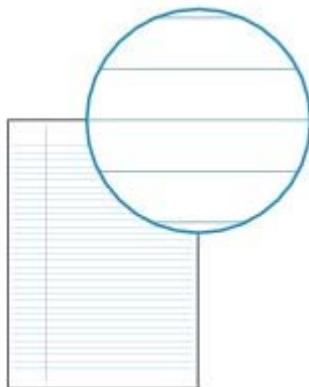


Notebook paper 1  
8 mm spacing

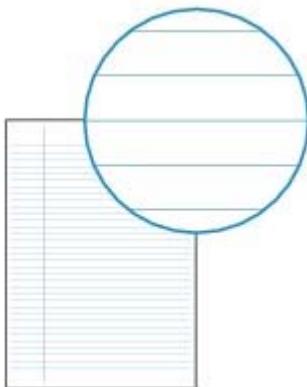


Notebook paper 2  
7 mm spacing

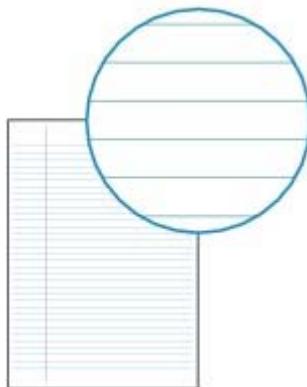

Notebook paper 3  
6 mm spacing

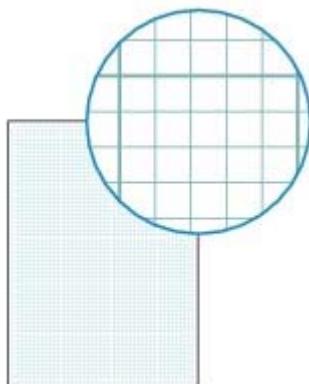

Graph paper 1  
Graph 5 mm

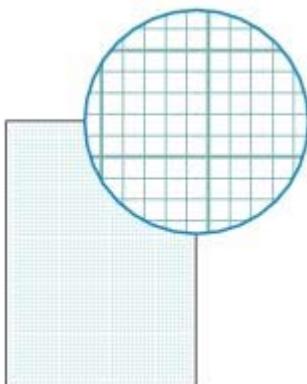

Graph paper 2  
Graph 3 mm



Checklist  
List with checkboxes



Staff paper 1  
Staff paper 10 staves



Staff paper 2  
Staff paper 12 staves



[Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Other Usages](#) > Printing Photos Directly from Your Digital Camera or Mobile Phone


## Printing Photos Directly from Your Digital Camera or Mobile Phone

### ■ Printing Photos from a PictBridge Compliant Device

Connecting the PictBridge compliant device to this machine with a USB cable that is recommended by the device's manufacturer, you can print saved images directly.

For details on how to print saved images connecting with the PictBridge compliant device, refer to the on-screen manual: [Advanced Guide](#).

For details on the print settings on the PictBridge compliant device, refer to the instruction manual supplied with the device.

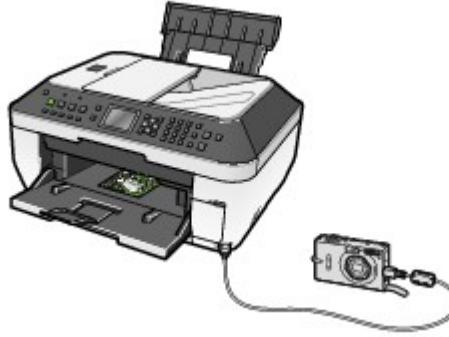

#### Connectable devices:

Any PictBridge compliant device can be connected to this machine regardless of the manufacturer or model as long as it is compliant with the PictBridge Standard.

#### Important

- Do not use the USB cable longer than around 10 feet / 3 meters to connect any PictBridge compliant device to the machine since it may affect the operation of other peripheral devices.

#### Note

- PictBridge is the standard to print your photos directly without using a computer, connecting a device such as a digital still camera, digital camcorder, or camera-equipped mobile phone.



(PictBridge) A device with this mark is PictBridge compliant.

#### Printable image data format:

This machine accepts images\* taken with a camera compliant with the Design rule for Camera File system and PNG files.

\*Exif 2.2/2.21 compliant

#### Note

- When printing from the PictBridge compliant device, set the print quality using the Operation Panel on the machine. You cannot set the print quality on the PictBridge compliant device.

### ■ Printing Photos from a Wireless Communication Device

If the optional Bluetooth Unit BU-30 is connected to the machine, you can print image data with wireless communication from Bluetooth compatible mobile phones or computers.

For details, refer to the on-screen manual: [Advanced Guide](#).



[Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Other Usages](#) > Machine Settings

## Machine Settings

This section describes the items you can set or change in Device settings of the Settings menu. For details on setting or changing, refer to the on-screen manual: [Advanced Guide](#).

### ● Plain paper feed settings

Selects the paper source (Rear Tray or Cassette) in which you load plain paper. The machine feeds plain paper from the Cassette by default. Use this setting to change the paper source for plain paper to the Rear Tray.

### ● FAX settings

#### User settings

Configure the basic settings for faxing, such as auto print, date/time setting, unit name/telephone number registration, volume control, telephone line selection, etc.

#### Transmission settings

Configure the basic settings for sending faxes, such as ECM transmission, pause time settings, auto redial, fax number re-entry, etc.

#### Reception settings

Configure the basic settings for receiving faxes, such as ECM reception, fax priority mode, incoming ring, fax reception reject, etc.

### ● Print settings

#### Prevent paper abrasion

Use this setting only if the print surface becomes smudged.

#### Extended copy amount

Selects the amount of image that extends off the paper when making borderless copies.

### ● LAN settings

#### Change wireless/wired

Switches between wireless LAN and wired LAN networks.

#### Wireless LAN settings

Configures the wireless LAN connection with WPS (Wi-Fi Protected Setup) or WCN (Windows Connect Now). WCN setting is only available for Windows Vista.  
For details, refer to the printed manual: *Getting Started*.

#### Wireless LAN setting list

Displays the wireless LAN network configurations of the machine on the LCD.

#### LAN setting list

Displays the wired LAN network configurations of the machine on the LCD.

#### IPv4/IPv6 setting

Configures the IP version (IPv4 or IPv6). We recommend IPv4 for general use.

## WSD setting

Switches the WSD (a network protocol supported by Windows Vista) configuration (Active or Inactive).

## Print LAN details

Print the network configurations on the machine.

## Reset LAN settings

Sets the network configurations on the machine back to the default.

# ● Advanced settings

## Read/write attribute

Selects whether to use the Card Slot of the machine as the memory card drive of a computer.

## Volume control

Adjusts the beep volume when pressing the buttons on the Operation Panel, or the alarm volume.

## Country select

Selects the country where you are using the machine.



### Note

- This setting may not be available depending on the country or region of purchase.

## Quiet mode

Enables this function if you want to reduce the operating noise of the machine, such as when using the machine at night (when copying, printing from the PictBridge compliant device, printing with wireless communication, etc.).

## Key repeat

Enables to increase or decrease numbers rapidly by pressing and holding down the button when inputting numbers. When this setting is disabled, holding down the button is the same as pressing it once.

## Two-sided output setting

Selects the paper output setting for double-sided documents.

If you select Fast - by back/front, documents are ejected from the ADF with the front and back pages of each sheet in the reverse order, to make the processing time shorter.

# ● Mobilephone print setting

Specifies paper, layout, etc. when you print from the wireless communication device. This setting appears only when the optional Bluetooth Unit is connected to the machine.

# ● Bluetooth settings

Changes the Bluetooth settings, such as the device name or passkey. This setting appears only when the optional Bluetooth Unit is connected to the machine.

# ● PictBridge settings

Specifies paper, print quality, etc. when you print from the PictBridge compliant device.

## ● Language selection

Changes the language for LCD messages and menus.

## ● Reset setting

Sets the machine settings back to the default by selecting Telephone no. only, Setting only, or Reset both. However, the LAN settings, the values set for the print head alignment, and the language set in the Language selection are not reset.



 [Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Other Usages](#) > Solution Menu and My Printer

## Solution Menu and My Printer

Using Solution Menu or My Printer, you can easily get the information on the machine or change the print settings by only clicking buttons on a screen.

With Solution Menu, you can start the software applications supplied with the machine or display the operating instructions. It also provides you with the information on troubleshooting.

With My Printer, you can display the printer driver setup window of the printer driver. It also provides you with the information on how to take an action when you have trouble with the operation. My Printer is not available in Macintosh.

### ● To Start Solution Menu



**Double-click  (Solution Menu) on the desktop.**



Click Here: [Solution Menu](#)



**Click  (Solution Menu) in the Dock.**

\* The screens below are for Windows Vista.



Click the button of a function to use.

↓ After starting Solution Menu, click the button on the title bar to reduce the window size.



### Note

- Install Solution Menu from the *Setup CD-ROM* when it has not been installed or has been uninstalled. To install Solution Menu, select Solution Menu in Custom Install.
- The buttons displayed on the screen may vary depending on the country or region of purchase.



- To start Solution Menu from the Start menu, select All Programs (Programs in Windows 2000), Canon Utilities, Solution Menu, then Solution Menu.



- To start Solution Menu from the menu bar, select the Go menu, Applications, Canon Utilities, Solution Menu, then double-click Solution Menu.

### ● To Start My Printer



**Double-click  (My Printer) on the desktop.**



## Note

- You can also start My Printer from Solution Menu.
- Install My Printer from the *Setup CD-ROM* when it has not been installed or has been uninstalled. To install My Printer, select My Printer in Custom Install.
- To start My Printer from the Start menu, select All Programs (Programs in Windows 2000), Canon Utilities, My Printer, then My Printer.



[↑ Page top](#)

[Basic Guide](#)[Advanced Guide](#) [Troubleshooting](#)[Contents](#) > Loading Paper / Originals

# Loading Paper / Originals

This section describes types of paper or originals you can load, how to load printing paper in the Rear Tray or Cassette, and how to load originals to copy or scan, or documents for faxing.

## Loading Paper

- [Paper Source to Load Paper](#)
- [Loading Paper in the Cassette](#)
- [Loading Paper in the Rear Tray](#)
- [Media Types You Can Use](#)
- [Media Types You Cannot Use](#)

## Loading Originals

- [Position to Load an Original](#)
- [Loading an Original on the Platen Glass](#)
- [Loading a Document in the ADF](#)
- [Originals You Can Load](#)

[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Loading Paper / Originals](#) > [Loading Paper](#)

## Loading Paper

- ▶ [Paper Source to Load Paper](#)
- ▶ [Loading Paper in the Cassette](#)
- ▶ [Loading Paper in the Rear Tray](#)
- ▶ [Media Types You Can Use](#)
- ▶ [Media Types You Cannot Use](#)

### ■ Paper Source to Load Paper

The machine has two paper sources to feed paper; Cassette and Rear Tray.

You can load paper in either one of the paper sources, depending on the page size and media type of paper. If you select Automatically Select in Paper Source, paper is fed from the Cassette or Rear Tray depending on the selection of the page size or media type.

See [Media Types You Can Use](#).

 **Note**

- For details on Automatically Select, see [Printing Documents \(Windows\)](#) or [Printing Documents \(Macintosh\)](#).  
For details on other paper feeding, refer to the on-screen manual: [Advanced Guide](#).
- If you select A4, B5, A5, or Letter-sized plain paper when Automatically Select is selected in Paper Source, the machine feeds the paper from the Cassette. If you select other sizes or types of paper such as photo paper, the machine feeds the paper from the Rear Tray.  
When printing, select the correct page size and media type. If you select the wrong page size or media type, the machine may feed paper from the wrong paper source or may not print with the proper print quality.  
For details on how to load paper in each paper source, see [Loading Paper in the Cassette](#) or [Loading Paper in the Rear Tray](#).
- If Auto feed sw. is set to ON on the Fax paper settings screen, the machine will switch the paper source automatically when papers run out in the paper source for plain paper and print received faxes.


### ● Loading Plain Paper in the Cassette

When you use A4, B5, A5, or Letter-sized plain paper, load it in the Cassette.

The Cassette is inserted at the bottom of the machine.

The machine feeds paper from the Cassette automatically by selecting plain paper (A4, B5, A5, or Letter size) in the print settings with the Operation Panel or the printer driver when printing.

For details on how to change the paper source setting, refer to the on-screen manual: [Advanced Guide](#).

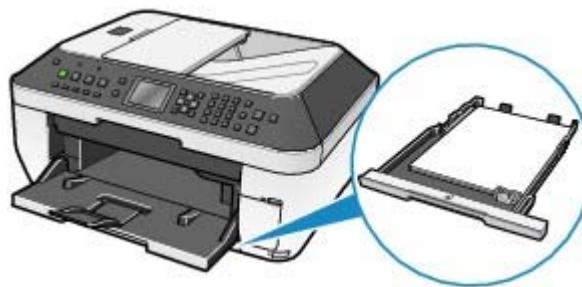

### ● Loading Photo Paper in the Rear Tray

When you use photo paper, load it in the Rear Tray.

The machine feeds paper from the Rear Tray automatically by selecting the media types other than plain paper, such as photo paper, in the print settings with the Operation Panel or the printer driver when printing.

When you use plain paper other than A4, B5, A5, or Letter size, also load it in the Rear Tray.



[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Loading Paper / Originals](#) > [Loading Paper](#) > Loading Paper in the Cassette

## ■ Loading Paper in the Cassette

### Important

- If you cut plain paper into small size such as 4" x 6" / 10 x 15 cm, 4" x 8" / 101.6 x 203.2 mm, 5" x 7" / 13 x 18 cm, or 2.16" x 3.58" / 55.0 x 91.0 mm (Card size) to perform trial print, it can cause paper jams.

### Note


- You can load only A4, B5, A5, or Letter-sized plain paper in the Cassette. Load other sizes or types of paper in the Rear Tray.
- We recommend Canon genuine photo paper for printing photos.  
For details on the Canon genuine paper, see [Media Types You Can Use](#).
- You can use general copy paper.  
For the page size and paper weight you can use for this machine, see [Media Types You Can Use](#).

You can load only A4, B5, A5, or Letter-sized plain paper in the Cassette.

See [Media Types You Can Use](#).

### 1. Prepare paper for printing.

Align the loading paper. Flatten the four corners of paper before loading it.

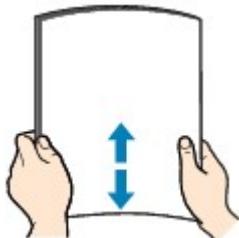

### Note

- Align the edges of paper neatly before loading. Loading paper without aligning the edges may cause paper jams.
- If paper is curled, hold the curled corners and gently bend them in the opposite direction until the paper becomes completely flat.  
For details on how to flatten curled paper, refer to "Troubleshooting" in the on-screen manual: [Advanced Guide](#).

### 2. Load the paper.

#### (1) Pull out the Cassette from the machine.



#### (2) Load the paper stack WITH THE PRINT SIDE FACING DOWN and THE LEADING EDGE TO THE FAR SIDE, and align it against the right side of the Cassette.

**(3) Slide the Paper Guide (A) to align with the mark of paper size.**


The Paper Guide (A) will stop when it aligns with the corresponding mark of paper size.

**Note**

- There may be a little space between the Paper Guide (A) and the paper stack.

**(4) Slide the Paper Guide (B) on the left to align completely with the side of the paper stack.****Note**

- Do not load higher than the Load Limit Mark (C).

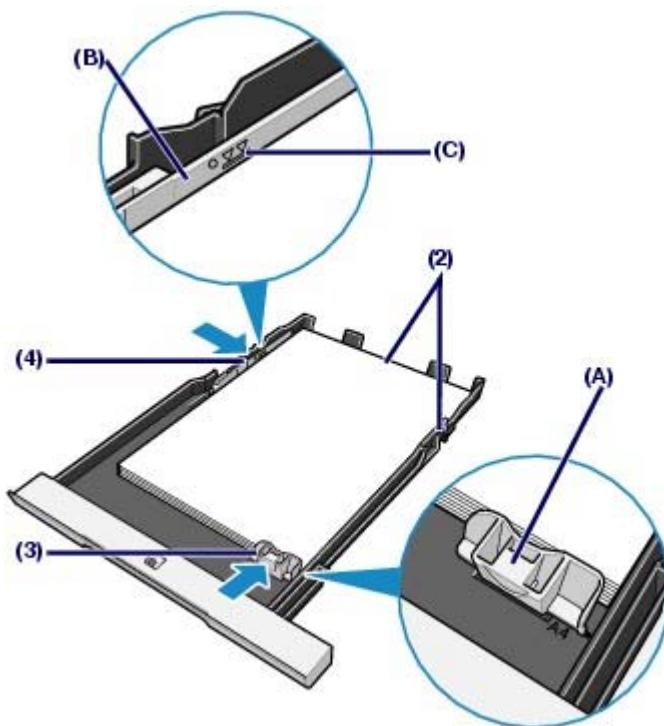**(5) Insert the Cassette into the machine.**

Push the Cassette all the way into the machine.

**3. Open the Paper Output Tray gently, and open the Output Tray Extension.****Note****After loading paper**

- When using the machine to copy or print without a computer, select the size and type of the loaded paper in Page size and Media type of the settings screen in each mode.  
See [Changing the Settings](#) in "Printing Photos Saved on the Memory Card" and [Changing the Settings](#) in "Making Copies".
- When printing with a computer, select the size and type of the loaded paper in Printer Paper Size (or Paper Size) and Media Type in the printer driver.  
See [Printing Documents \(Windows\)](#) or [Printing Documents \(Macintosh\)](#).



[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Loading Paper / Originals](#) > [Loading Paper](#) > Loading Paper in the Rear Tray**■ Loading Paper in the Rear Tray****● Loading Photo Paper****1. Prepare paper for printing.**


Align the loading paper. Flatten the four corners of paper before loading it.

See [Prepare paper for printing](#). in "Loading Paper in the Cassette".

**2. Load the paper.**

(1) Open the Paper Support, raise it, then tip it back.


(2) Open the Paper Output Tray gently, and open the Output Tray Extension.

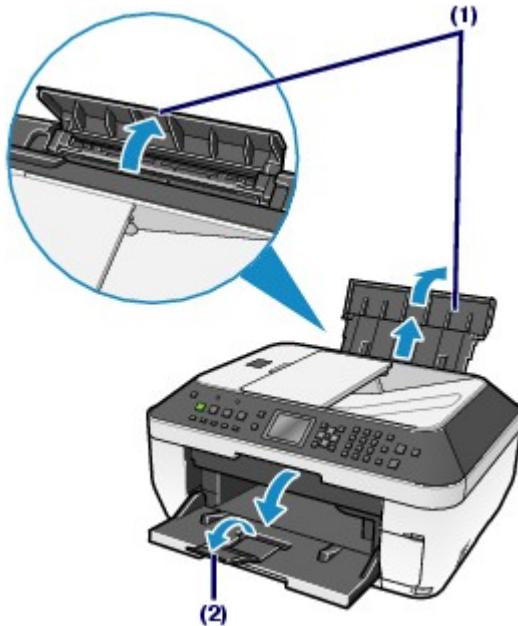

(3) Slide the Paper Guides (A) to open them, and load the paper in the center of the Rear Tray WITH THE PRINT SIDE FACING YOU.


**Important**

- Always load paper in the portrait orientation (B). Loading paper in the landscape orientation (C) can cause paper jams.

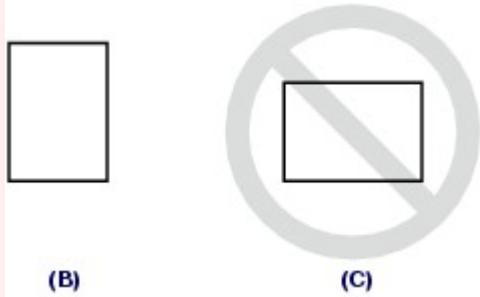


(4) Slide the Paper Guides (A) to align them with both sides of the paper stack.

Do not slide the Paper Guides too hard. The paper may not be fed properly.

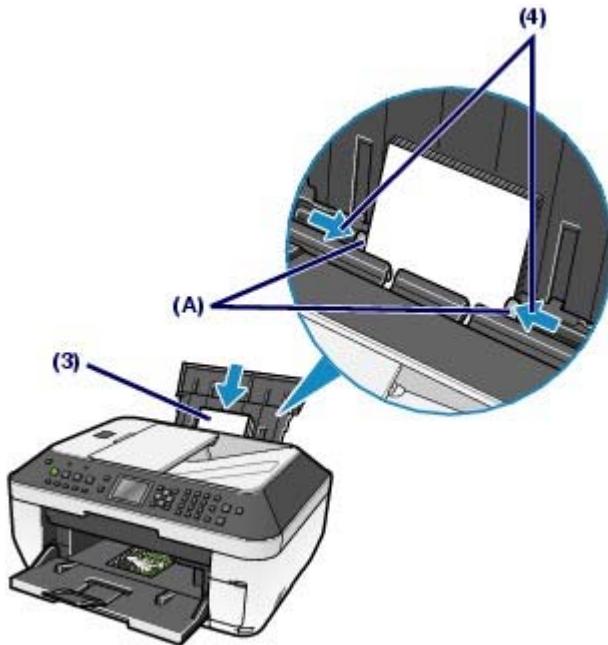

### Note

- Do not load sheets of paper higher than the Load Limit Mark (D).

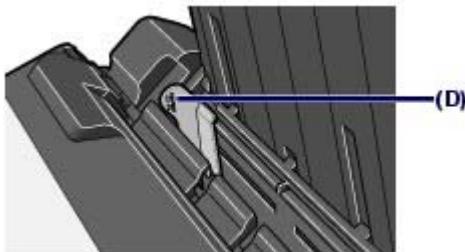

#### After loading paper

- When using the machine to copy or print without a computer, select the size and type of the loaded paper in Page size and Media type of the settings screen in each mode.  
See [Changing the Settings](#) in "Printing Photos Saved on the Memory Card" and [Changing the Settings](#) in "Making Copies".
- When printing with a computer, select the size and type of the loaded paper in Printer Paper Size (or Paper Size) and Media Type in the printer driver.  
See [Printing Documents \(Windows\)](#) or [Printing Documents \(Macintosh\)](#).

## ● Loading Envelopes

You can print on European DL and US Comm. Env. #10-sized envelopes.

The address is automatically rotated and printed according to the envelope's direction by specifying with the printer driver properly.

### Important


- You can only print on envelopes with the computer.
- You cannot use the following envelopes.
  - Envelopes with an embossed or treated surface
  - Envelopes with a double flap (or sticker flaps)
  - Envelopes whose gummed flaps are already moistened and adhesive

### Note

- You cannot load envelopes in the Cassette. Load them in the Rear Tray.

### 1. Prepare envelopes.


- Press down on all four corners and edges of the envelopes to flatten them.

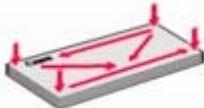

- If the envelopes are curled, hold the opposite corners and gently twist them in the opposite direction.



- If the corner of the envelope flap is folded, flatten it.
- Use a pen to press the leading edge in the inserting direction flat and sharpen the crease.

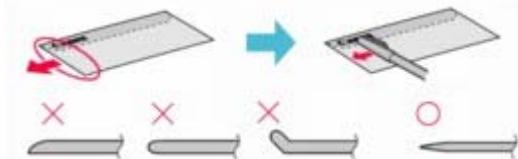

The figures above show a side view of the leading edge of the envelope.

### Important

- The envelopes may jam in the machine if they are not flat or the edges are not aligned. Make sure that no curl or puff exceeds 0.1 inches / 3 mm.

## 2. Load envelopes.

(1) Open the Paper Support, raise it, then tip it back.

(2) Open the Paper Output Tray gently, and open the Output Tray Extension.


(3) Slide the Paper Guides (A) to open them and load the envelopes in the center of the Rear Tray WITH THE ADDRESS SIDE FACING YOU.

The folded flap of the envelope will be faced down on the left side.

Up to 10 envelopes can be loaded at once.

(4) Slide the Paper Guides (A) to align them with both sides of the envelopes.

Do not slide the Paper Guides too hard. The envelopes may not be fed properly.

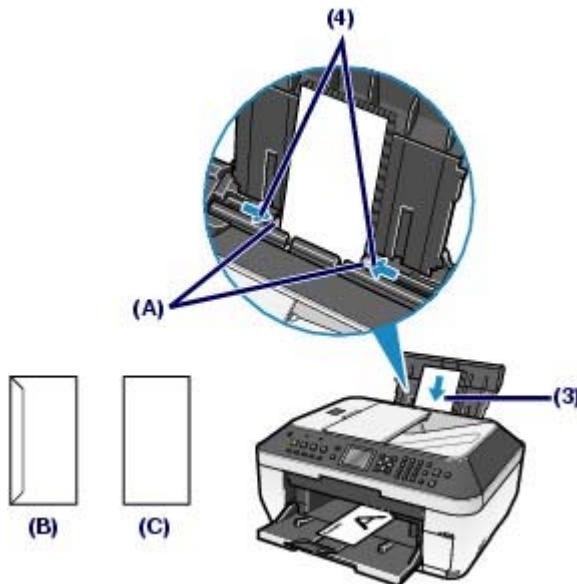

(B) Rear side

(C) Address side

### 3. Specify the settings in the printer driver.

(1) Select Envelope in Commonly Used Settings (or Media Type).

(2) Select the size for envelopes.



Select DL Env. or Comm. Env. #10 in the Envelope Size Setting window.



Select DL Envelope or #10 Envelope in Paper Size.

(3) Select Landscape in Orientation.

#### Important

- If you do not specify Envelope Size Setting (or Printer Paper Size/Paper Size) or Orientation properly, the address will be printed upside down or will be turned to 90 degrees.

#### Note

- In Windows, if the print result is upside down, select Rotate 180 degrees in Additional Features with the printer driver.
- For details on the printer driver settings, see [Printing Documents \(Windows\)](#) or [Printing Documents \(Macintosh\)](#).



[Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**

[Contents](#) > [Loading Paper / Originals](#) > [Loading Paper](#) > Media Types You Can Use

## ■ Media Types You Can Use

Choose paper suitable for printing, for the best print results. Canon provides you various types of paper to enhance the fun of printing, such as stickers as well as papers for photo or document. We recommend the use of Canon genuine paper for printing your important photos.

### ● Media Types

#### Commercially available papers

Name of Paper <Model No.> *1	Paper Load Limit		Paper Output Tray Load Limit	Settings in Media Type	
	Rear Tray	Cassette		Operation Panel	Printer Driver
Plain Paper (Recycled paper)	Approx. 150 sheets	A4, B5, A5, and Letter / 8.5" x 11": Approx. 150 sheets	Approx. 50 sheets	Plain paper	Plain Paper
Envelopes*3	10 envelopes	Not loadable*4	*5	-	Envelope

#### Canon genuine papers

Name of Paper < Model No.> *1	Paper Load Limit		Paper Output Tray Load Limit	Settings in Media Type	
	Rear Tray	Cassette		Operation Panel	Printer Driver
For printing photos:					
Photo Paper Pro Platinum<PT-101>*6	A4, Letter / 8.5" x 11", 5" x 7" / 13 x 18 cm, and 8" x 10" / 20 x 25 cm: 10 sheets	Not loadable*4	*5	Pro Platinum	Photo Paper Pro Platinum
Photo Paper Pro II<PR -201>*6	4" x 6" / 10 x 15 cm: 20 sheets			Pro II	Photo Paper Pro II
Glossy Photo Paper "Everyday Use" <GP- 501>*6				Glossy	Glossy Photo Paper
Photo Paper Glossy< GP-502>*6				Glossy	Glossy Photo Paper
Photo Paper Plus Glossy II<PP-201>*6				Plus Glossy II	Photo Paper Plus Glossy II
Photo Paper Plus Semi-gloss<SG-201 >*6				Plus Semi- gloss	Photo Paper Plus Semi- gloss
Matte Photo Paper< MP-101>				Matte	Matte Photo Paper
For printing business documents:					
High Resolution Paper <HR-101N>*3	80 sheets	Not loadable*4	50 sheets	-	High Resolution Paper
For creating your own prints:					



T-Shirt Transfers<TR-301> <sup>*3</sup>	1 sheet	Not loadable <sup>*4</sup>	<sup>*5</sup>	-	T-Shirt Transfers
Photo Stickers<PS-101> <sup>*7, *8</sup>	1 sheet			Glossy	Glossy Photo Paper

\*1 Paper with a Model Number is Canon genuine paper. Refer to the instruction manual supplied with the paper for detailed information on the printable side and notes on handling paper. For information on the page sizes available for each Canon genuine paper, visit our website. You may not be able to purchase some Canon genuine papers depending on the country or region of purchase. Paper is not sold in the US by Model Number. Purchase paper by name.

\*2 Proper feeding of paper may not be possible at the maximum capacity depending on the type of paper or environmental conditions (either very high or low temperature or humidity). In such cases, reduce the number of paper you load at a time to less than half (100% recycled paper can be used).

\*3 Available only when printing from your computer.

\*4 Feeding this paper from the Cassette can damage the machine. Always load in the Rear Tray.

\*5 We recommend that you remove the previously printed sheet from the Paper Output Tray before continuously printing to avoid blurs and discoloration.

\*6 When loading paper in stacks, the print side may become marked as it is fed or paper may not feed properly. In this case, load one sheet at a time.

\*7 When copying onto sticker paper, be sure to select Sticker copy on the Special copy menu. To copy onto sticker paper, the type of paper does not need to be specified.

See [Using Various Copy Functions](#).

When printing photos saved on a memory card onto sticker paper, be sure to select Sticker print in the Memory card menu. To print onto sticker paper from the Memory card menu, the type of paper does not need to be specified.

See [Printing Photos in Various Layouts](#).

When printing photos saved on your mobile phone onto sticker paper, select Stickers for the page size in Mobilephone print setting. Refer to the on-screen manual: [Advanced Guide](#).

\*8 When printing photos onto stickers from your computer, you can specify the print setting easily by using the Easy-Photo Print EX provided with the Setup CD-ROM.

## Note

- To specify the page size and media type when printing photos saved on mobile phones, refer to the on-screen manual: [Advanced Guide](#).

## ● Page Sizes

You can use the following page sizes.

- You can load plain paper of the following page sizes in the Cassette:  
A4, B5, A5, and Letter sizes  
Plain paper of other sizes cannot be loaded in the Cassette. Load them in the Rear Tray.

## Note

- In Macintosh, Choukei 3 and Choukei 4 are not available.

### Standard sizes:

- Letter (8.50 x 11.00 inches / 215.9 x 279.4 mm)
- Legal (8.50 x 14.00 inches / 215.9 x 355.6 mm)
- A5 (5.83 x 8.27 inches / 148.0 x 210.0 mm)
- A4 (8.27 x 11.69 inches / 210.0 x 297.0 mm)
- B5 (7.17 x 10.12 inches / 182.0 x 257.0 mm)
- 4" x 6" (4.00 x 6.00 inches / 10 x 15 cm)
- 4" x 8" (4.00 x 8.00 inches / 101.6 x 203.2 mm)
- 5" x 7" (5.00 x 7.00 inches / 13 x 18 cm)
- 8" x 10" (8.00 x 10.00 inches / 20 x 25 cm)
- L (3.50 x 5.00 inches / 89.0 x 127.0 mm)
- 2L (5.00 x 7.01 inches / 127.0 x 178.0 mm)
- Hagaki (3.94 x 5.83 inches / 100.0 x 148.0 mm)

- Hagaki 2 (7.87 x 5.83 inches / 200.0 x 148.0 mm)
- Comm. Env. #10 (4.12 x 9.50 inches / 104.6 x 241.3 mm)
- DL Env. (4.33 x 8.66 inches / 110.0 x 220.0 mm)
- Choukei 3 (4.72 x 9.25 inches / 120.0 x 235.0 mm)
- Choukei 4 (3.54 x 8.07 inches / 90.0 x 205.0 mm)
- Youkei 4 (4.13 x 9.25 inches / 105.0 x 235.0 mm)
- Youkei 6 (3.86 x 7.48 inches / 98.0 x 190.0 mm)
- Card (2.16 x 3.58 inches / 55.0 x 91.0 mm)
- Wide (4.00 x 7.10 inches / 101.6 x 180.6 mm)

### Non-standard sizes:

You can also specify a custom size within the following range.

- Minimum size: 2.17 x 3.58 inches / 55.0 x 91.0 mm (Rear Tray)  
5.83 x 8.27 inches / 148.0 x 210.0 mm (Cassette)
- Maximum size: 8.50 x 26.61 inches / 215.9 x 676.0 mm (Rear Tray)  
8.50 x 11.69 inches / 215.9 x 297.0 mm (Cassette)

### ● Paper Weight

17 to 28 lb / 64 to 105 gsm (plain paper except for Canon genuine paper)

Do not use heavier or lighter paper (except for Canon genuine paper), as it could jam in the machine.

### ● Notes on Storing Paper

- Take out only the necessary number of paper from the package, just before printing.
- To avoid curling, when you do not print, put unused paper back into the package and keep it on a level surface. And also, store it avoiding heat, humidity, and direct sunlight.



[Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Loading Paper / Originals](#) > [Loading Paper](#) > Media Types You Cannot Use

## ■ Media Types You Cannot Use

Do not use the following types of paper. Using such paper will not only produce unsatisfactory results, but can also cause the machine to jam or malfunction.

- Folded, curled, or wrinkled paper
- Damp paper
- Paper that is too thin (weighing less than 17 lb / 64 gsm)
- Paper that is too thick (plain paper, except for Canon genuine paper, weighing more than 28 lb / 105 gsm)
- Paper thinner than a postcard, including plain paper or notepad paper cut to a small size (when printing on A5 or smaller sized paper)
- Picture postcards
- Postcards affixed with photos or stickers
- Envelopes with a double flap (or sticker flaps)
- Envelopes with an embossed or treated surface
- Envelopes whose gummed flaps are already moistened and adhesive
- Any type of paper with holes
- Paper that is not rectangular
- Paper bound with staples or glue
- Paper with adhesives
- Paper decorated with glitter, etc.

[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Loading Paper / Originals](#) > [Loading Originals](#)

## Loading Originals

This section describes how to load originals on the Platen Glass or in the ADF.

- ▶ [Position to Load an Original](#)
- ▶ [Loading an Original on the Platen Glass](#)
- ▶ [Loading a Document in the ADF](#)
- ▶ [Originals You Can Load](#)

### ■ Position to Load an Original

The machine has two positions to load an original: Platen Glass and ADF.

Select the position to load the original according to the size or type or usage.

See [Originals You Can Load](#).

#### ● Loading Documents, Photos, Book on the Platen Glass

When copying, faxing, or scanning documents, photos, or book sheet by sheet, load it on the Platen Glass.

To scan original at optimum quality, also load it on the Platen Glass.



#### ● Loading two or more sheets of document of the same size and thickness in the ADF

When copying, faxing, or scanning two or more sheets of document of the same size, thickness, and weight at one time, load it in the ADF. You can also load a sheet of document in the ADF.



#### Note

- In the copy and scan modes, the two-sided document can also be scanned in the ADF.



 [Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Loading Paper / Originals](#) > [Loading Originals](#) > Loading an Original on the Platen Glass

## ■ Loading an Original on the Platen Glass

Load originals to copy, fax, or scan an original on the Platen Glass.

### Important

- After loading the original, be sure to close the Document Cover before starting to copy, fax, or scan.
- When scanning from a computer using a software application or saving the scanned data by selecting PC on the Scanned data processing screen in the scan mode using the Operation Panel on the machine, you need to load originals in a different way.  
For details, refer to the on-screen manual: [Advanced Guide](#).

### 1. Load an original on the Platen Glass.


#### (1) Open the Document Cover.

##### Important

- Do not place any object on the Document Cover. It will fall into the Rear Tray when the Document Cover is opened and cause the machine to malfunction.


#### (2) Load the original with the side to copy, fax, or scan FACING DOWN on the Platen Glass.

Align the corner of the original with the alignment mark .

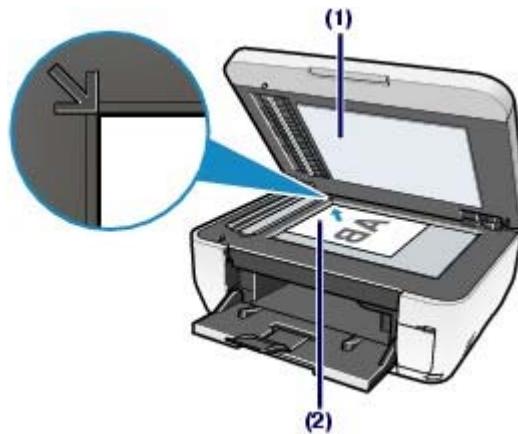

##### Important

- Do not place any object weighing more than 4.4 lb / 2.0 kg on the Platen Glass.
- Do not press or put weight on the original with pressure exceeding 4.4 lb / 2.0 kg. Doing so may cause the scanner to malfunction or the Platen Glass to break.
- The machine cannot scan the shaded area (A) (0.04 inches / 1 mm from the edges of the Platen Glass).

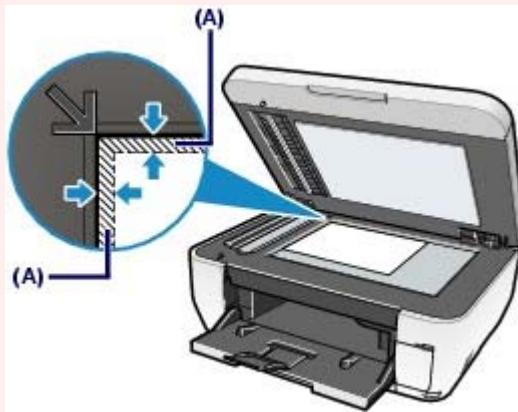

- When you press the **SCAN** button to select USB flash drive or Memory card, and specify

Scan size, Scan size is the one measured from the alignment mark 

## 2. Close the Document Cover gently.

Do not hold the LCD or the Operation Panel.



### Caution

- Be sure to hold the Document Cover firmly when closing it, and be careful not to get your fingers caught.



 [Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**

[Contents](#) > [Loading Paper / Originals](#) > [Loading Originals](#) > Loading a Document in the ADF

## ■ Loading a Document in the ADF

Load a Document to copy, fax, or scan in the ADF.

 **Note**

- To scan a document at optimum quality, load it on the Platen Glass.

**1.** Make sure that any original has been removed on the Platen Glass.

**2.** Load a document in the ADF.

**(1)** Open the Document Tray.



**(2)** Insert the document in the Document Tray until it beeps.


Load the document with the side to copy, fax, or scan FACING UP in the Document Tray.

 **Note**

- When Alarm volume is set to OFF, the alarm will not beep even if the document is inserted in the Document Tray.

**(3)** Adjust the Document Guides to match the width of the document.

Do not slide the Document Guides too hard. The document may not be fed properly.

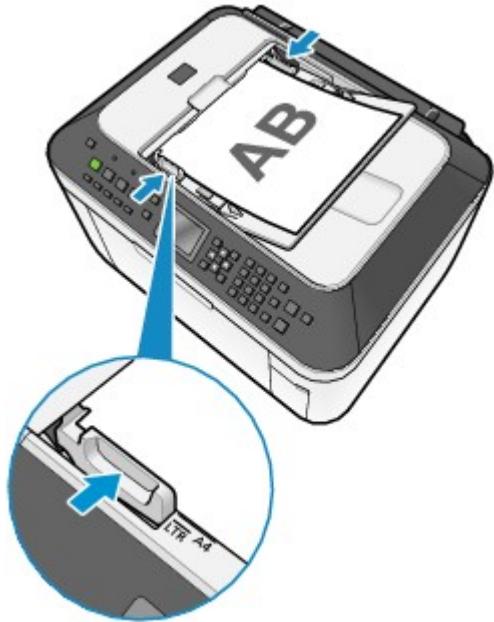

[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**

[Contents](#) > [Loading Paper / Originals](#) > [Loading Originals](#) > Originals You Can Load

## ■ Originals You Can Load

The originals you can load on the Platen Glass or in the ADF for copying, scanning, or faxing are as follows:

	Platen Glass	ADF
<b>Types of originals</b>	<ul style="list-style-type: none"> <li>● Photos</li> <li>● Texts (documents, books, magazines, etc.)</li> <li>● Documents that are not suitable for the ADF</li> </ul>	Multipage plain documents of the same size, thickness, and weight
<b>Size (W x L)</b>	Max. 8.5 x 11.7 inches / 216 x 297 mm	<ul style="list-style-type: none"> <li>● Max. 8.5 x 14.0 inches / 216 x 356 mm</li> <li>● Min. 5.8 x 5.8 inches / 148 x 148 mm</li> </ul> Only A4 or Letter-sized documents for two-sided copy/scan, 2-on-1 copy and 4-on-1 copy
<b>Quantity</b>	1 sheet	<ul style="list-style-type: none"> <li>● A4 or Letter size: Max. 35 sheets (20 lb / 75 gsm paper), up to 0.20 inches / 5 mm in height</li> <li>● Legal size: Max. 30 sheets (20 lb / 75 gsm paper), up to 0.16 inches / 4 mm in height</li> <li>● Other sizes: 1 sheet</li> </ul>
<b>Thickness</b>	Max. 0.39 inches / 10 mm	0.002 to 0.005 inches / 0.06 to 0.13 mm
<b>Weight</b>	-	13 to 24 lb / 50 to 90 gsm

### Note

- Make sure any glue, ink, correction fluid, or the like on the document is completely dry before loading it on the Platen Glass or in the ADF.  
However, do not load glued documents in the ADF even if the glue is dry, as this may cause paper jams.
- Remove all staples, paper clips, and the like before feeding the document.
- Load Legal-sized documents in the ADF.
- Do not load the following types of documents in the ADF. They will jam.
  - Wrinkled or creased paper
  - Curled paper
  - Torn paper
  - Paper with holes
  - Glued paper
  - Carbon paper or carbon-backed paper
  - Surface treated paper
  - Onion skin or thin paper
  - Photo or thick paper



 [Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > Routine Maintenance

# Routine Maintenance

This section describes how to replace ink tanks when they run out of ink, to clean the machine when the print result is faint, or to take an action when paper does not feed properly.

## Replacing an Ink Tank

[Replacing Procedure](#)[Checking the Ink Status](#)

## When Printing Becomes Faint or Colors Are Incorrect

[Printing the Nozzle Check Pattern](#)[Examining the Nozzle Check Pattern](#)[Cleaning the Print Head](#)[Cleaning the Print Head Deeply](#)[Aligning the Print Head](#)

## Cleaning the Paper Feed Roller

## Cleaning the Pad in the Cassette

[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Routine Maintenance](#) > Replacing an Ink Tank

## Replacing an Ink Tank

When ink runs out while printing is in progress, an error message appears on the LCD or your computer screen. Make sure which ink tank has run out of ink and replace it with a new one.



### Note

- If the error message appears, confirm the displayed message and take an appropriate action.  
For details, refer to "An Error Message Is Displayed on the LCD" in "[Troubleshooting](#)" of the on-screen manual: *Advanced Guide*.
- For information on the compatible ink tanks, refer to the printed manual: *Getting Started*.
- If print results become faint or white streaks appear despite sufficient ink levels, see [When Printing Becomes Faint or Colors Are Incorrect](#).

## ■ Replacing Procedure

When the ink tanks run out of ink, follow the procedure below to replace them.

### Important

#### Handling ink

- To maintain optimal print quality, we recommend the use of specified Canon brand ink tanks. Refilling ink is not recommended.
- If you remove an ink tank, replace it immediately. Do not leave the machine with ink tanks removed.
- Use new ink tanks for replacement. Installing used ink tanks may cause the nozzles to clog. Furthermore, with such ink tanks, the machine will not be able to inform you when to replace the ink tanks properly.
- Once an ink tank has been installed, do not remove it from the machine and leave it out in the open. This will cause the ink tank to dry out, and the machine may not operate properly when it is reinstalled. To maintain optimal printing quality, use an ink tank within six months of first use.


### Note

- Color ink may be consumed even when printing a black-and-white document or when black-and-white printing is specified. Every ink is also consumed in the standard cleaning and deep cleaning of the Print Head, which may be necessary to maintain the machine's performance. When an ink tank is out of ink, replace it immediately with a new one.

**1.** Make sure that the power is turned on, and open the Paper Output Tray gently.

**2.** Lift the Scanning Unit (Cover), then hold it open with the Scanning Unit Support (A).

The Print Head Holder moves to the replacement position.

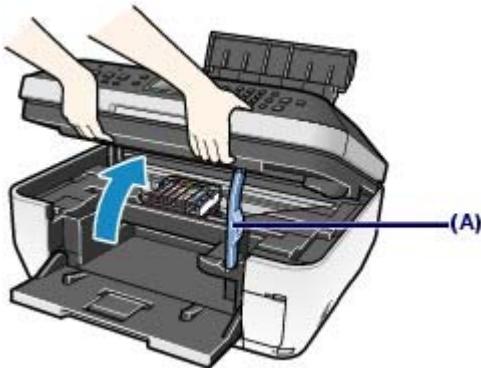

### **Caution**

- Do not hold the Print Head Holder to stop or move it forcibly. Do not touch the Print Head Holder until it stops completely.

### **Important**

- Do not touch the metallic parts or other parts inside the machine.
- Do not place any object on the Document Cover. It will fall into the Rear Tray when the Document Cover is opened and cause the machine to malfunction.
- Do not hold the LCD or the Operation Panel.
- If the Document Cover is open, you cannot open the Scanning Unit (Cover). Be sure to lift the Scanning Unit (Cover) with the Document Cover closed.
- If the Scanning Unit (Cover) is left open, the Print Head Holder moves to the right. In this case, close and reopen the Scanning Unit (Cover).


### **Note**

- The machine may make operating noise when the Print Head Holder moves to the replacement position.

## 3. Replace the ink tank with the lamp flashing fast.

Push the tab (B) and lift the ink tank to remove.

Do not touch the Print Head Lock Lever (C).

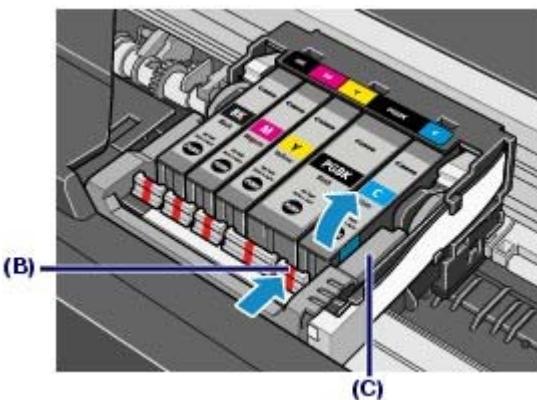

### **Important**


- Handle the ink tank carefully to avoid staining of clothing or the surrounding area.
- Discard the empty ink tank according to the local laws and regulations regarding disposal of consumables.

### **Note**

- Do not remove two or more ink tanks at the same time. Be sure to replace ink tanks one by one when replacing two or more ink tanks.
- For details on ink lamp flashing speed, see [Checking the Ink Status](#).

#### 4. Prepare the new ink tank.

- (1) Take the new ink tank out of its package, pull the orange tape (1) in the direction of the arrow to peel it off, then remove the film (2).

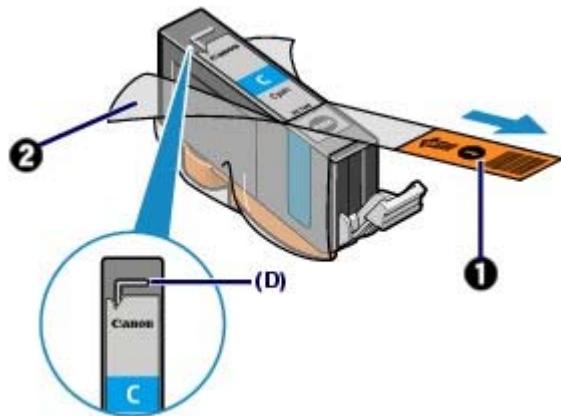


##### Important

- Make sure that the film is completely removed from the air hole (D). If the air hole is blocked with the remaining film, ink may leak out or may not eject properly.

- (2) Hold the orange protective cap (E) as indicated in the figure below, then twist and remove it from the bottom of the ink tank.

Remove the protective cap while holding it to prevent the ink from staining your fingers.

Discard the protective cap once it is removed.

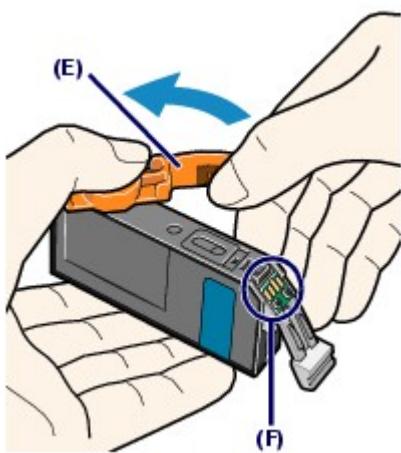

##### Important

- Do not touch the electrical contacts (F) on the ink tank. It can cause the machine to malfunction or become unable to print.


##### Important

- If you shake the ink tank, the ink may leak out and stain your hands and the surrounding area. Be careful to handle the ink tank.
- Do not squeeze the side of ink tanks as this may cause the ink to leak out.
- Be careful not to stain your hands and the surrounding area with ink on the removed protective cap.
- Do not reattach the protective cap once you have removed it. Discard it according to the local laws and regulations regarding disposal of consumables.
- Do not touch the open ink port once the protective cap is removed, as this may prevent the ink from being ejected properly.

#### 5. Install the new ink tank.


- (1) Insert the front end of ink tank into the Print Head at a slant.

Make sure that the position of the ink tank matches the label.

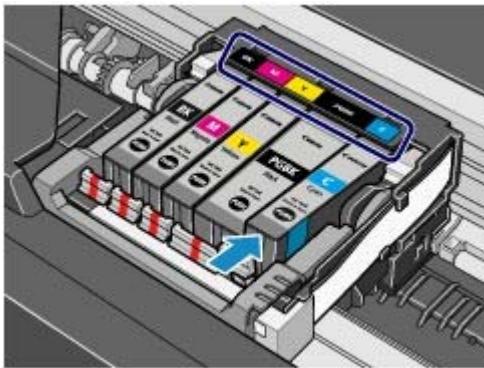

- (2) Press the mark  (Push) on the ink tank until the ink tank snaps firmly into place.

Make sure that the ink lamp lights up red.

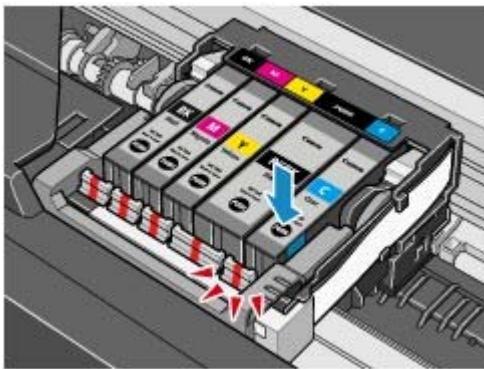

#### **Important**

- You cannot print if the ink tank is installed in the wrong position. Be sure to install the ink tank in the correct position according to the label on the Print Head Holder.
- You cannot print unless all the ink tanks are installed. Be sure to install all the ink tanks.

6. Lift the Scanning Unit (Cover) slightly to set the Scanning Unit Support back to its original position, and gently close the Scanning Unit (Cover).

#### **Caution**

- When setting the Scanning Unit Support back to its original position, be sure to hold the Scanning Unit (Cover) firmly using both hands, and be careful not to get your fingers caught.

#### **Important**

- Do not hold the LCD or the Operation Panel.

#### **Note**

- If the error message appears after the Scanning Unit (Cover) is closed, refer to "Troubleshooting" in the on-screen manual: *Advanced Guide*.
- When you start printing after replacing the ink tank, the machine starts cleaning the Print Head automatically. Do not perform any other operations until the machine completes the cleaning of the Print Head.
- If printed ruled lines are misaligned or the print head position is misaligned, adjust the print head position.  
See [Aligning the Print Head](#).
- The machine may make noise during operation, but this is normal.

**Basic Guide****Advanced Guide** **Troubleshooting**

[Contents](#) > [Routine Maintenance](#) > [Replacing an Ink Tank](#) > [Checking the Ink Status](#)

## ■ Checking the Ink Status

You can check the ink status on the LCD or with ink lamps.

### ● With the LCD on the Machine

Make sure that the power is turned on, and press the mode button ( **COPY**, **FAX**, **SCAN**, or **MEMORY CARD**). The current remaining ink volume will appear on the LCD.



The ink with (Ink low) is running low. You can continue printing for a while, but we recommend you to have a new ink tank available.

#### Note

- You can also check the ink status on a screen of the LCD displayed while printing.


### ● With Ink Lamps

**(1)** Make sure that the power is turned on, and open the Paper Output Tray gently.

**(2)** Lift the Scanning Unit (Cover), then hold it open with the Scanning Unit Support.

See [Lift the Scanning Unit \(Cover\), then hold it open with the Scanning Unit Support \(A\).](#) in "Replacing Procedure".

**(3)** Check the ink lamps.

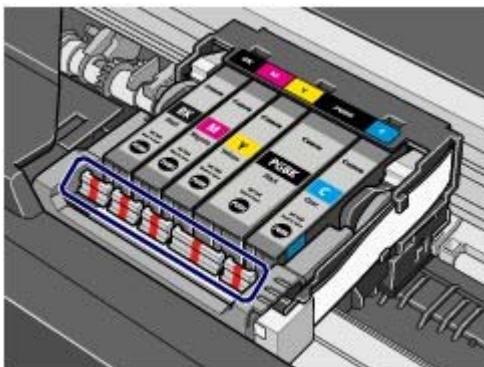

#### ● Ink lamp is on

The ink tank is correctly installed and there is sufficient ink left for printing.

#### ● Ink lamp is flashing

**Flashing slowly (at around 3-second intervals)**



Ink is low. You can continue printing for a while, but we recommend you to have a new ink tank available.

**Flashing fast (at around 1-second intervals)**



The ink tank is installed in the wrong position or it is empty. Make sure that the ink tank is installed in the correct position as indicated by the label on the Print Head Holder. If the position is correct but the lamp flashes, the ink tank is empty. Replace it with a new one.

#### ● Ink lamp is off

The ink tank is not installed properly or the function for detecting the remaining ink level is disabled. If the ink tank is not installed properly, press the mark (Push) on the ink tank until the ink tank clicks into place. If it does not click into place, make sure that the orange protective cap has been removed from the bottom of the ink tank. If the function for detecting the remaining ink level is disabled, replace the ink tank with a new

one. See [Replacing Procedure](#).

If the ink lamp is still off after reinstalling the ink tank, there has been an error and the machine cannot print. Check the error message displayed on the LCD.

Refer to "Troubleshooting" in the on-screen manual: *Advanced Guide*.



[Page top](#)

**Basic Guide****Advanced Guide Troubleshooting**[Contents](#) > [Routine Maintenance](#) > When Printing Becomes Faint or Colors Are Incorrect

## When Printing Becomes Faint or Colors Are Incorrect

If print results are blurred or colors are not printed correctly, the print head nozzles are probably clogged.

Follow the procedure below to print the nozzle check pattern, check the print head nozzle condition, then clean the Print Head.

If printed ruled lines are misaligned or print results are otherwise unsatisfactory, aligning the Print Head may improve print quality.

**Important**

- Do not rinse or wipe the Print Head and ink tanks. This can cause trouble with the Print Head and ink tanks.

**Note****Before performing maintenance**

- Open the Scanning Unit (Cover) and make sure that all lamps on the ink tanks are lit red.  
If not, see [Checking the Ink Status](#) and take an appropriate action.
- Increasing the print quality in the printer driver settings may improve the print result.  
For details, refer to the on-screen manual: [Advanced Guide](#).

### ● When the Print Results Are Blurred or Uneven:

**Step 1**

See [Printing the Nozzle Check Pattern](#).

See [Examining the Nozzle Check Pattern](#).

If the pattern is missing:



After cleaning the Print Head, print and examine the nozzle check pattern.

**Step 2**

See [Cleaning the Print Head](#).

If the problem is not resolved after cleaning the Print Head twice:

**Step 3**

See [Cleaning the Print Head Deeply](#).

**Note**

- If you have performed the procedure until step 3 and the problem has not been resolved, turn off the power and clean the Print Head deeply again after 24 hours. Do not disconnect the power plug when turning off the power.  
If the problem is still not resolved, the Print Head may be damaged. Contact your service center.

### ● When the Print Results Are Not Even such as the Ruled Lines Are Misaligned:

See [Aligning the Print Head](#).

**Note**

- You can also perform the maintenance operations from your computer.  
For details, refer to the on-screen manual: [Advanced Guide](#).



[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**

Contents > Routine Maintenance > When Printing Becomes Faint or Colors Are Incorrect > Printing the Nozzle Check Pattern

## ■ Printing the Nozzle Check Pattern

Print the nozzle check pattern to determine whether the ink ejects properly from the print head nozzles.

### Note

- If the remaining ink level is low, the nozzle check pattern will not be printed correctly. Replace the ink tank whose ink is low.  
See [Replacing an Ink Tank](#).

**You need to prepare: a sheet of A4 or Letter-sized plain paper**

1. Make sure that the power is turned on.

See [Operation Panel](#).

2. Make sure that one or more sheets of A4 or Letter-sized plain paper are loaded in the Cassette.

3. Open the Paper Output Tray gently, and open the Output Tray Extension.

4. Print the nozzle check pattern.

(1) Press the **Menu** button.


(2) Use the **◀** (Left) or **▶** (Right) button to select **Settings** , and press the **OK** button.

The Settings screen will appear.

(3) Use the **◀** (Left) or **▶** (Right) button to select **Maintenance** , and press the **OK** button.

The Maintenance screen will appear.

(4) Use the **▲** (Up) or **▼** (Down) button to select **Nozzle check**, and press the **OK** button.

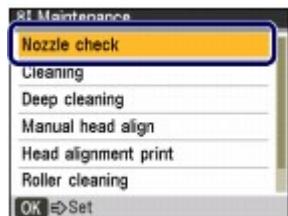

The pattern print confirmation screen will appear.

(5) Use the **▲** (Up) or **▼** (Down) button to select **Yes**, and press the **OK** button.

The nozzle check pattern will be printed and two pattern confirmation screens will appear alternately.

5. Examine the nozzle check pattern.

See [Examining the Nozzle Check Pattern](#).



[↑ Page top](#)


**Basic Guide****Advanced Guide** **Troubleshooting**

[Contents](#) > [Routine Maintenance](#) > [When Printing Becomes Faint or Colors Are Incorrect](#) > Examining the Nozzle Check Pattern

## ■ Examining the Nozzle Check Pattern


Examine the nozzle check pattern, and clean the Print Head if necessary.

1. Check if there are no missing lines in the pattern (1) or no horizontal white streaks in the pattern (2).

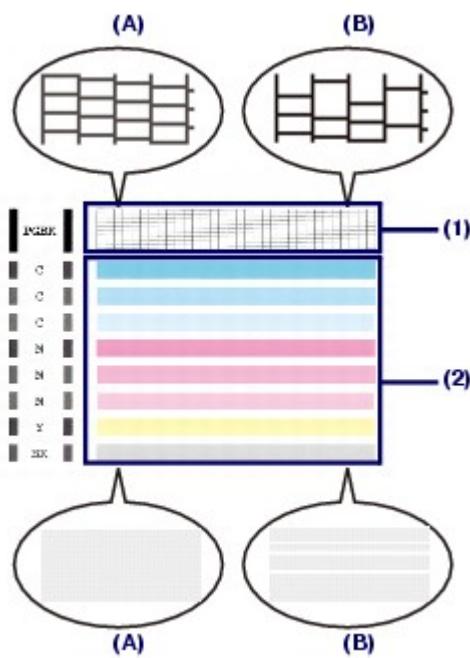

- (A) No missing lines/No horizontal white streaks  
 (B) Lines are missing/Horizontal white streaks are present

2. Select the pattern that is closer to the printed nozzle check pattern on the confirmation screen.

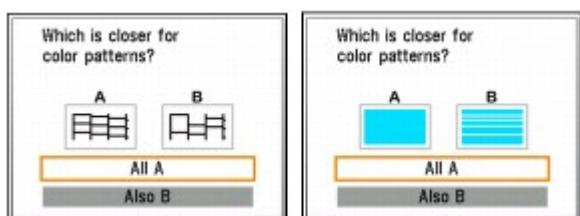

For (A) (no missing lines or no horizontal white streaks) in both (1) and (2):

- (1) Use the ▲ (Up) or ▼ (Down) button to select All A and press the **OK** button.  
 The cleaning is not required. The screen returns to the Maintenance screen.

For (B) (lines are missing or horizontal white streaks are present) in (1) or (2), or in both (1) and (2):

- (1) Use the ▲ (Up) or ▼ (Down) button to select Also B and press the **OK** button.  
 Clean the Print Head. The cleaning confirmation screen will appear.

- (2) Use the ▲ (Up) or ▼ (Down) button to select Yes and press the **OK** button.  
 The machine starts cleaning the Print Head.

See [Cleaning the Print Head](#).

 [Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Routine Maintenance](#) > [When Printing Becomes Faint or Colors Are Incorrect](#) > Cleaning the Print Head

## ■ Cleaning the Print Head

Clean the Print Head if lines are missing or if horizontal white streaks are present in the printed nozzle check pattern. Cleaning unclogs the nozzles and restores the print head condition. Cleaning the Print Head consumes ink, so clean the Print Head only when necessary.

**You need to prepare:** a sheet of A4 or Letter-sized plain paper

- 1.** Make sure that the power is turned on.

See [Operation Panel](#).

- 2.** Make sure that one or more sheets of A4 or Letter-sized plain paper are loaded in the Cassette.

- 3.** Open the Paper Output Tray gently, and open the Output Tray Extension.

- 4.** Clean the Print Head.

**(1)** Press the **Menu** button.


**(2)** Use the **◀** (Left) or **▶** (Right) button to select **Settings** , and press the **OK** button.

The Settings screen will appear.

**(3)** Use the **◀** (Left) or **▶** (Right) button to select **Maintenance** , and press the **OK** button.

The Maintenance screen will appear.

**(4)** Use the **▲** (Up) or **▼** (Down) button to select **Cleaning**, and press the **OK** button.

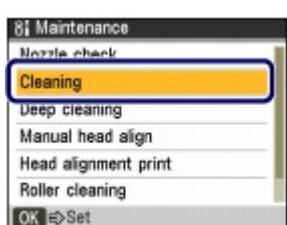

The confirmation screen will appear.

**(5)** Use the **▲** (Up) or **▼** (Down) button to select **Yes**, and press the **OK** button.

The machine starts cleaning the Print Head.

Do not perform any other operations until the machine completes the cleaning of the Print Head. This takes about 1 minute 30 seconds.

The pattern print confirmation screen will appear.

**(6)** Use the **▲** (Up) or **▼** (Down) button to select **Yes**, and press the **OK** button.

The nozzle check pattern will be printed.

- 5.** Check the nozzle check pattern.

See [Examining the Nozzle Check Pattern](#).

## Note

- If the problem is not resolved after cleaning the Print Head twice, clean the Print Head deeply.  
See [Cleaning the Print Head Deeply](#).



[Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**

Contents > Routine Maintenance > When Printing Becomes Faint or Colors Are Incorrect > Cleaning the Print Head Deeply

## ■ Cleaning the Print Head Deeply

If print quality does not improve by the standard cleaning of the Print Head, clean the Print Head deeply. Cleaning the Print Head deeply consumes more ink than the standard cleaning of the Print Head, so clean the Print Head deeply only when necessary.

**You need to prepare:** a sheet of A4 or Letter-sized plain paper

**1.** Make sure that the power is turned on.

See [Operation Panel](#).

**2.** Make sure that one or more sheets of A4 or Letter-sized plain paper are loaded in the Cassette.

**3.** Open the Paper Output Tray gently, and open the Output Tray Extension.

**4.** Clean the Print Head deeply.

**(1)** Press the **Menu** button.


**(2)** Use the **◀** (Left) or **▶** (Right) button to select **Settings** , and press the **OK** button.

The Settings screen will appear.

**(3)** Use the **◀** (Left) or **▶** (Right) button to select **Maintenance** , and press the **OK** button.

The Maintenance screen will appear.

**(4)** Use the **▲** (Up) or **▼** (Down) button to select **Deep cleaning**, and press the **OK** button.

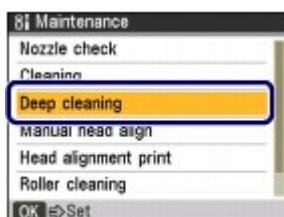

The confirmation screen will appear.

**(5)** Use the **▲** (Up) or **▼** (Down) button to select **Yes**, and press the **OK** button.

The machine starts cleaning the Print Head deeply.

Do not perform any other operations until the machine completes the deep cleaning of the Print Head. This takes about 2 minutes.

The print pattern confirmation screen will appear.

**(6)** Use the **▲** (Up) or **▼** (Down) button to select **Yes**, and press the **OK** button.

The nozzle check pattern will be printed.

**5.** Examine the nozzle check pattern.

See [Examining the Nozzle Check Pattern](#).

If a particular color is not printed properly, replace the ink tank of that color.

See [Replacing an Ink Tank](#).

If the problem is not resolved, turn off the power and clean the Print Head deeply again after 24 hours. Do not disconnect the power plug when turning off the power.  
If the problem is still not resolved, the Print Head may be damaged. Contact your service center.



[Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Routine Maintenance](#) > [When Printing Becomes Faint or Colors Are Incorrect](#) > Aligning the Print Head

## ■ Aligning the Print Head

If printed ruled lines are misaligned or print results are otherwise unsatisfactory, adjust the print head position.

**You need to prepare: three sheets of A4 or Letter-sized plain paper**

- 1.** Make sure that the power is turned on.

See [Operation Panel](#).

- 2.** Make sure that three or more sheets of A4 or Letter-sized plain paper are loaded in the Cassette.

- 3.** Open the Paper Output Tray gently, and open the Output Tray Extension.

- 4.** Print the print head alignment pattern.

**(1)** Press the **Menu** button.

**(2)** Use the **◀** (Left) or **▶** (Right) button to select **Settings** , and press the **OK** button.

The Settings screen will appear.

**(3)** Use the **◀** (Left) or **▶** (Right) button to select **Maintenance** , and press the **OK** button.

The Maintenance screen will appear.

**(4)** Use the **▲** (Up) or **▼** (Down) button to select **Manual head align**, and press the **OK** button.



The confirmation screen will appear.

### Note

- Use the **▲** (Up) or **▼** (Down) button to select **Head alignment print** to print the current head position adjustment values.

**(5)** Use the **▲** (Up) or **▼** (Down) button to select **Yes**, and press the **OK** button.


The print head alignment pattern will be printed.

**(6)** Check the pattern is printed correctly, and use the **▲** (Up) or **▼** (Down) button to select **Yes**, and press the **OK** button.

The Manual head align screen will appear.

## 5. Adjust the print head position.

- (1) Check the printed patterns, and use the **◀** (Left) or **▶** (Right) button to select the pattern number that has the least noticeable streaks for column A.

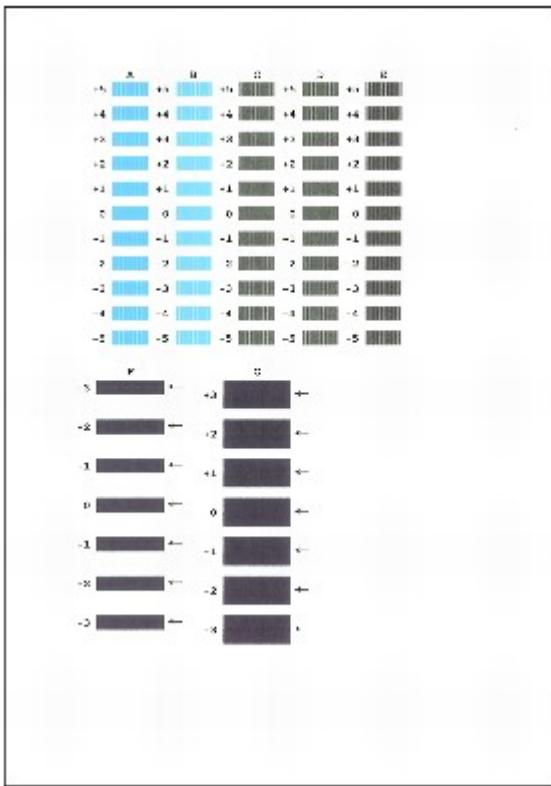

### Note

- Refer to the samples below to select the pattern that has the least noticeable white streaks.



(A)



(B)



(C)



(D)


- (A) Less noticeable vertical white streaks
- (B) Noticeable vertical white streaks
- (C) Less noticeable horizontal white streaks
- (D) Noticeable horizontal white streaks

- (2) Repeat the same procedure to input the pattern number for each column from B to G, and press the **OK** button.

- (3) Confirm the message for print head alignment, and press the **OK** button.

The second page of print head alignment sheets will be printed.


- (4) Check the printed patterns and use the **◀** (Left) or **▶** (Right) button to input the pattern number that has the least noticeable vertical streaks for each column from H to Q, then press the **OK** button.

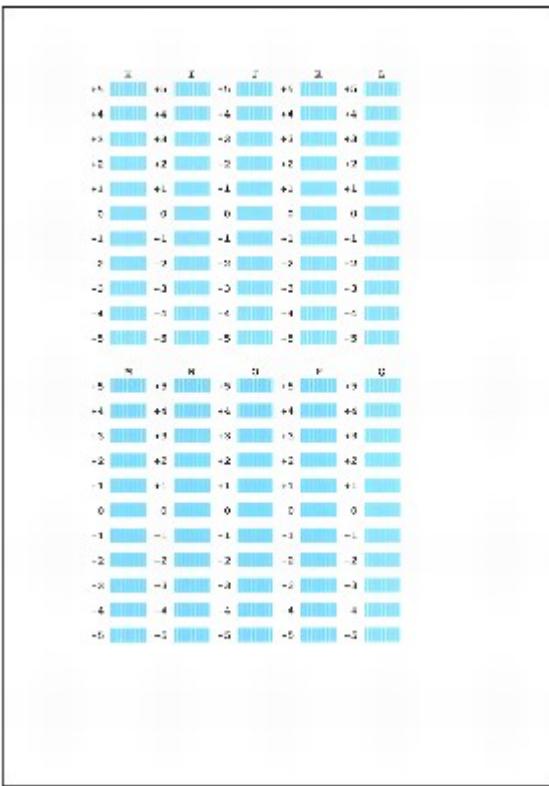

**(5)** Confirm the message for print head alignment, and press the **OK** button.

The third page of print head alignment sheets will be printed.

**(6)** Check the printed patterns and use the **◀** (Left) or **▶** (Right) button to input the pattern number that has the least noticeable stripes for each column from a to j, then press the **OK** button.

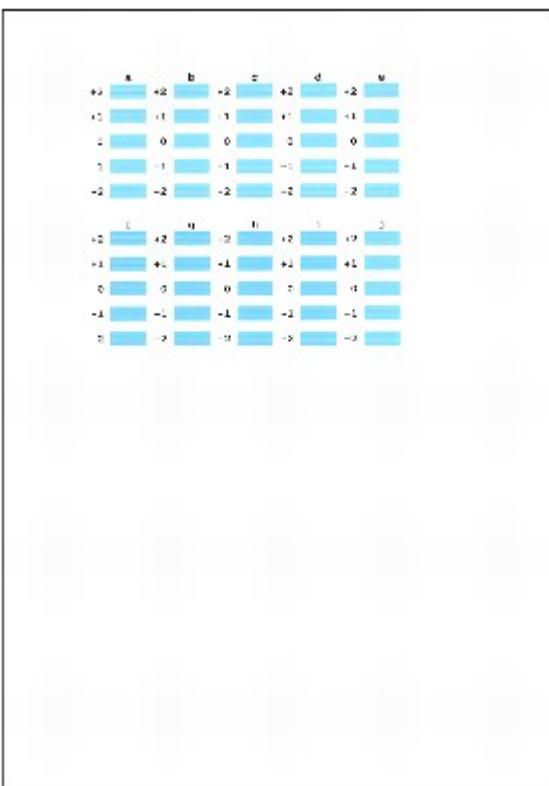

### Note

- Refer to the samples below to select the pattern that has the least noticeable horizontal white stripes.



(E)



(F)

- (E) Less noticeable horizontal white stripes  
 (F) More noticeable horizontal white stripes



[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Routine Maintenance](#) > Cleaning the Paper Feed Roller

## Cleaning the Paper Feed Roller

If the Paper Feed Roller is dirty or paper powder is attached to it, paper may not be fed properly. In this case, clean the Paper Feed Roller. Cleaning will wear out the Paper Feed Roller, so perform this only when necessary.

**You need to prepare: three sheets of A4 or Letter-sized plain paper**

**1.** Make sure that the power is turned on, and remove any paper in the Cassette and Rear Tray.

**2.** Open the Paper Output Tray gently, and open the Output Tray Extension.

**3.** Clean the Paper Feed Roller.

(1) Press the **Menu** button.


(2) Use the **◀** (Left) or **▶** (Right) button to select Settings , and press the **OK** button.

The Settings screen will appear.

(3) Use the **◀** (Left) or **▶** (Right) button to select Maintenance , and press the **OK** button.

The Maintenance screen will appear.

(4) Use the **▲** (Up) or **▼** (Down) button to select Roller cleaning, and press the **OK** button.

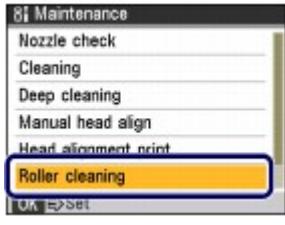

The confirmation screen appears.

(5) Use the **▲** (Up) or **▼** (Down) button to select Yes, and press the **OK** button.

(6) Select the paper source to clean (Rear tray or Cassette), and press the **OK** button.

The Paper Feed Roller will rotate as it is cleaned.

**4.** Make sure that the Paper Feed Roller stops rotating, and load paper.

Load three sheets of A4 or Letter-sized plain paper in the paper source you selected in the procedure of (6) in step 3.

**5.** Repeat the procedures of (4) to (6) in step 3 again.


The paper will be ejected after cleaning.

If the problem is not resolved after cleaning the Paper Feed Roller (A) in the Rear Tray, turn off the power, disconnect the power plug, then wipe the Paper Feed Roller located in the center inside the Rear Tray

with a moistened cotton swab or the like. Rotate the roller manually in the direction of the arrow (B) as you clean it. Do not touch the roller with your fingers; rotate it with the cotton swab.

### Important

- If the power plug is disconnected, the date/time settings as well as all documents stored in memory will be lost. Send an unsent fax or print a necessary document before the power plug is disconnected.

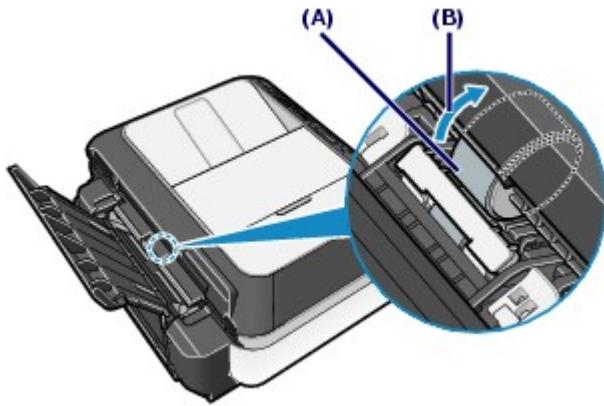

If this does not solve the problem, contact your service center.



 [Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Routine Maintenance](#) > Cleaning the Pad in the Cassette


## Cleaning the Pad in the Cassette

If the Pad in the Cassette is smeared with paper powder or dirt, two or more sheets of paper may be ejected. Follow the procedure below to clean the Pad in the Cassette.

**You need to prepare:** cotton swab

**1.** Pull out the Cassette from the machine, and remove all the papers.

**2.** Clean the Pad (A) sideways with a moistened cotton swab.

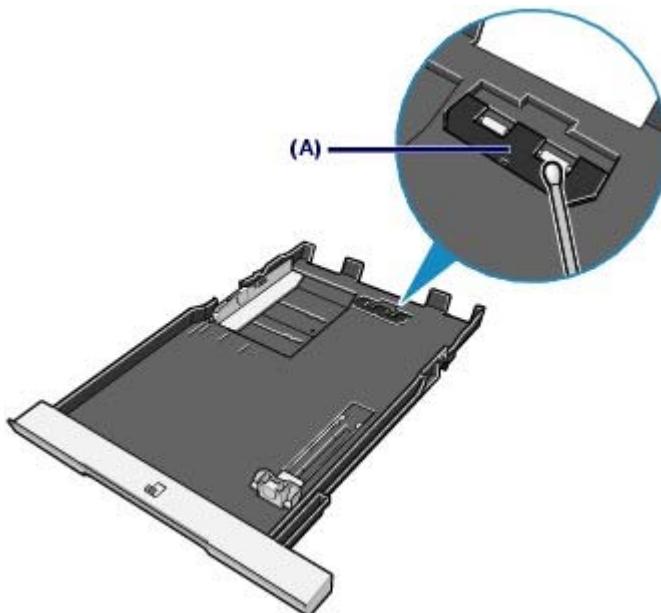**Important**

- After cleaning the smeared Pad, dry it completely.

If the problem is not resolved, contact your service center.



[↑ Page top](#)

[Basic Guide](#)[Advanced Guide](#) [Troubleshooting](#)[Contents](#) > Appendix

# Appendix

[Legal Limitations on Use of Your Product and Use of Images](#)

[Tips on How to Use Your Machine](#)



[↑ Page top](#)

**Basic Guide****Advanced Guide** **Troubleshooting**[Contents](#) > [Appendix](#) > Legal Limitations on Use of Your Product and Use of Images

## Legal Limitations on Use of Your Product and Use of Images

It may be unlawful to make copies of, scan, print, or use reproductions of the following documents.

The list provided is non-exhaustive. When in doubt, check with a legal representative in your jurisdiction.

- Paper money
- Money orders
- Certificates of deposit
- Postage stamps (canceled or uncanceled)
- Identifying badges or insignias
- Selective service or draft papers
- Checks or drafts issued by governmental agencies
- Motor vehicle licenses and certificates of title
- Traveler's checks
- Food stamps
- Passports
- Immigration papers
- Internal revenue stamps (canceled or uncanceled)
- Bonds or other certificates of indebtedness
- Stock certificates
- Copyrighted works/works of art without permission of copyright owner

[↑ Page top](#)

**Basic Guide****Advanced Guide Troubleshooting**[Contents](#) > [Appendix](#) > Tips on How to Use Your Machine

## Tips on How to Use Your Machine

This section introduces the tips on how to use your machine and for printing with optimal quality.

### ■ Ink is used for various purposes.

#### ● How is ink used for various purposes other than printing?

Ink may be used for purposes other than printing. Ink is not only used for printing, but also for cleaning the Print Head to maintain the optimal printing quality.


The machine has the function to automatically clean the ink jet nozzles to prevent clogging. In the cleaning procedure, ink is pumped out from the nozzles. Used ink for nozzle cleaning is limited to a small amount.

#### ● Does black-and-white printing use color ink?

The use of each ink varies depending on the color of image to be printed or the contents of document. Two kinds of black ink (PGBK and BK) are used automatically depending on the media type to print or on the settings of the printer driver. PGBK is used mainly for printing text-based documents and BK is used mainly for printing photos, illustration, etc. Black-and-white printing may also use ink other than black ink. So, color ink is consumed even when printing in black-and-white.

#### ● Ink lamp indicates when ink is running low.

The inside of the ink tank consists of (A) the part where ink is preserved and (B) the sponge with absorbed ink.

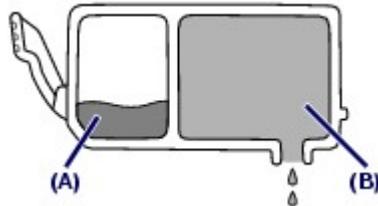

When the ink (A) runs out, the ink lamp flashes slowly to indicate that the ink is running low. Then, when the ink (B) runs out, the ink lamp flashes fast to indicate that the ink tank needs to be replaced with a new one.

See [Replacing an Ink Tank](#).

### ■ Printing on special paper: How to print with optimal quality!?

#### ● Tip!: Check the machine status before printing!

##### ● Is the Print Head OK?

If print head nozzles are clogged, print will be faint and papers will be wasted. Print the nozzle check pattern to check the Print Head.

See [When Printing Becomes Faint or Colors Are Incorrect](#).

##### ● Is the inside of the machine smeared with ink?

After printing large quantities of paper or performing borderless printing, the area where papers go through may get smeared with ink. Clean the inside of your machine with the Bottom Plate Cleaning.

Refer to the on-screen manual: [Advanced Guide](#).

#### ● Tip!: Check how to load the paper correctly!

##### ● Is the paper loaded in the correct orientation?

When loading paper in the Rear Tray or Cassette, make sure the orientation of paper.



(A)

(A) Rear Tray



(B)

(B) Cassette

- To load paper in the Rear Tray, load paper with the printing side facing you.
- To load paper in the Cassette, load paper with the printing side facing down.

### ● Is the paper curled?

The curled paper causes paper jam. Flatten the curled paper, then reload it.

Refer to "[Troubleshooting](#)" in the on-screen manual: *Advanced Guide*.

### ● Tip!: After loading paper, be sure to specify the paper settings!

After loading paper, be sure to select the loaded paper in Media type of the Operation Panel or Media Type of the printer driver. If the type of paper is not selected, you may not be able to get the satisfactory print result.

See [Loading Paper](#).

There are various types of paper: paper with special coating on the surface for printing photos with optimal quality and paper suitable for documents. Media type of the Operation Panel or Media Type of the printer driver has different settings for each type of paper in advance (such as using ink, ejecting ink, or distance from nozzles) so that you can print on each paper with the optimal image quality. You can print with different settings in Media type (or Media Type) suitable for each type of loaded paper.

## ■ Use the Stop button to cancel printing!

### ● Tip!: Never press the ON button!

If you press the **ON** button while printing is in progress, the print data sent from the computer queues in the machine and you may not be able to continue to print.

Press the **Stop** button to cancel printing.

### Note

- If you cannot cancel printing by pressing the **Stop** button while printing from a computer, open the printer driver setup window to delete the unnecessary print jobs from the printer status monitor (Windows).

## ■ How to maintain the optimal printing quality?

The key to printing with the optimal printing quality is to prevent the Print Head from drying or clogging. Always follow the following steps for optimal printing quality.

### ● Follow the procedure below to disconnect the power plug.

- 1 Press the **ON** button on the machine to turn it off.
- 2 Make sure that all lamps on the Operation Panel are not lit.
- 3 Disconnect the power plug from the wall outlet, or turn off the extender cable connector.  
If you press the **ON** button to turn off the power, the machine caps the Print Head (nozzles) automatically to prevent from drying. If you disconnect the power plug from the wall outlet or turn off the extender cable connector before all lamps on the Operation Panel are turned off, the Print Head will not be capped properly and this will cause drying or clogging.  
To disconnect the power plug, be sure to follow this procedure.

### ● Print periodically!

Just as the tip of a felt pen becomes dry and unusable if it has not been used for a long time, even if it is capped, the Print Head too, may become dried or clogged if the machine has not been used for a long time.

We recommend the machine to be used at least once a month.

### Note


- Depending on the type of paper, ink may blur if you trace the printed area with a highlight pen or paint-stick, or bleed if water or sweat comes in contact with the printed area.

## ■ Does the machine need to be handled with care when using or transporting?

- Tip!: Do not use or transport the machine vertically or slanted!

If the machine is used or transported vertically or slanted, the machine may become damaged or ink may leak from the machine.

Be sure not to use or transport the machine vertically or slanted.

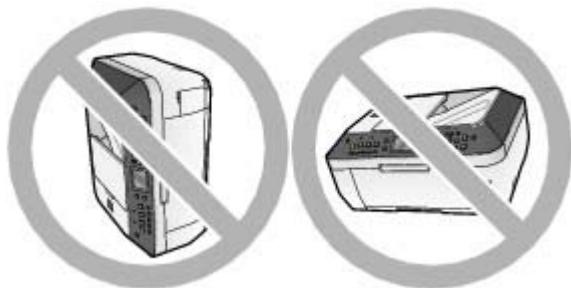

- Tip!: Do not place any object on the Document Cover!

Do not place any object on the Document Cover. It will fall into the Rear Tray when the Document Cover is opened and cause the machine to malfunction.


Also, place the machine where objects will not fall on it.



## ■ Colors are uneven, and print results are blurred.

- Tip!: Print the nozzle check pattern to check if the nozzles are clogged.

If the print head nozzles are clogged, colors may become uneven or the print results may be blurred.

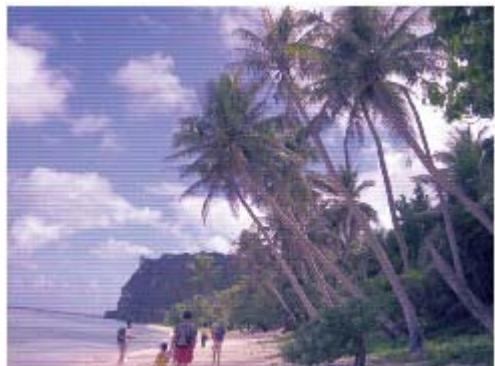

**In this case**



## Print the nozzle check pattern

Check the printed check pattern to see if the nozzles are clogged.  
See [When Printing Becomes Faint or Colors Are Incorrect](#).



[Page top](#)



Printing
Scanning
Copying
Faxing
Troubleshooting
How to Use This Manual
Printing This Manual
Maintenance
About Bluetooth Communication
Changing the Machine Settings
Appendix
About Network Communication

When you display this On-screen Manual in a language environment other than English, some English descriptions may be displayed.

## Printing

### Printing from a Computer

Printing with the Bundled Application Software

What Is Easy-PhotoPrint EX?

Printing Photos

Starting Easy-PhotoPrint EX

Selecting a Photo

Selecting the Paper

Printing

Creating an Album

Starting Easy-PhotoPrint EX

Selecting the Paper and Layout

Selecting a Photo

Editing

Printing

Printing Calendars

Starting Easy-PhotoPrint EX

Selecting the Paper and Layout

Selecting a Photo

Editing

Printing

Printing Stickers

Starting Easy-PhotoPrint EX

Selecting the Paper and Layout

Selecting a Photo

Editing

Printing

Printing Layout

Starting Easy-PhotoPrint EX

Selecting the Paper and Layout

Selecting a Photo

Editing

Printing

Correcting and Enhancing Photos

Using the Auto Photo Fix Function

Using the Red-Eye Correction Function

Using the Face Brightener Function

Using the Face Sharpener Function

Using the Digital Face Smoothing Function

Using the Blemish Remover Function

Basic Guide

Adjusting Images

Correct/Enhance Images Window

#### Questions and Answers

How Can I Move (or Copy) the Saved File?

Which Side of the Displayed Image Does the Printing Start from?

How Do I Print with Even Margins?

What Is "C1" or "C4"?

#### Photo Print Settings

Printing Vivid Photos

Reducing Photo Noise

Cropping Photos (Photo Print)

Printing Dates on Photos (Photo Print)

Printing Multiple Photos on One Page

Printing an Index

Printing ID Photos (ID Photo Print)

Printing Photo Information

Saving Photos

Opening Saved Files

#### Other Settings

Changing Layout

Changing Background

Adding Photos

Swapping Positions of Photos

Replacing Photos

Changing Position, Angle and Size of Photos

Cropping Photos

Framing Photos

Printing Dates on Photos

Attaching Comments to Photos

Adding Text to Photos

Saving

Setting Holidays

Setting Calendar Display

Opening Saved Files

#### Printing with Other Application Software

##### Various Printing Methods

Printing with Easy Setup

Setting a Page Size and Orientation

Setting the Number of Copies and Printing Order

Setting the Stapling Margin

Borderless Printing

Fit-to-Page Printing

Scaled Printing

Page Layout Printing

Poster Printing

Booklet Printing

Duplex Printing

Stamp/Background Printing

Saving a Stamp Setting

- Saving Image Data to be Used as a Background
- Printing an Envelope
- Switching the Paper Source to Match the Purpose
- Displaying the Print Results before Printing
- Setting Paper Dimensions (Custom Size)
- Changing the Print Quality and Correcting Image Data
  - Selecting a Combination of the Print Quality Level and a Halftoning Method
  - Printing a Color Document in Monochrome
  - Specifying Color Correction
  - Optimal Photo Printing of Image Data
  - Adjusting Colors with the Printer Driver
  - Printing with ICC Profiles
  - Adjusting Color Balance
  - Adjusting Brightness
  - Adjusting Intensity
  - Adjusting Contrast
  - Simulating an Illustration
  - Representing Image Data with a Single Color
  - Presenting Image Data with Vivid Colors
  - Smoothing Jagged Outlines
  - Changing Color Properties to Improve Coloration
  - Reducing Photo Noise
- Overview of the Printer Driver
  - Printer Driver Operations
  - Canon IJ Printer Driver
  - How to Open the Printer Driver Setup Window
  - Maintenance Tab
  - Canon IJ Status Monitor
  - The Canon IJ Preview

### **Printing Using the Operation Panel of the Machine**

- Printing Lined Paper or Graph Paper
  - Printing Template Forms Such As Lined Paper or Graph Paper
- Printing from a Memory Card
  - Printing Photographs Saved on a Memory Card
    - Setting Items
    - Printing by Using the Photo Index Sheet
- Using Useful Printing Functions
  - Printing Memory Card Photos in Various Layouts
  - Settings for Printing a Photo on a Memory Card
  - Printing Several Photos on a Single Sheet of Paper (Layout Print)
  - Printing on Stickers (Sticker Print)
  - DPOF print
  - Captured info print
  - Photo index print
  - Print all photos
- Using Useful Display Functions
  - Changing the Display

Printing a Specified Area (Trimming)

Setting Up the Card Slot as the Memory Card Drive of the Computer

### Printing Photographs Directly from a Compliant Device or a Wireless Communication Device

Printing Photographs Directly from a Compliant Device

Printing Photographs Directly from a Compliant Device

About PictBridge Print Settings

Settings on a PictBridge Compliant Device

Settings on the Machine

Printing Photographs from a Wireless Communication Device

Setting the Page Size, Media Type, and Layout When Printing from a Mobile Phone

Displaying the Mobilephone print setting screen

Printing via Bluetooth Communication

Printing through Bluetooth Communication

Changing the Bluetooth Settings

## Scanning

### Scanning

Scanning Images

Scanning Images

Before Scanning

Placing Documents

Saving Scanned Data on the USB Flash Drive/Memory Card Using the Operation Panel of the Machine

Saving Scanned Data on the USB Flash Drive/Memory Card Using the Operation Panel of the Machine

Setting Items

Saving Scanned Data to PC Using the Operation Panel of the Machine

Saving Scanned Data to PC Using the Operation Panel of the Machine

Appendix: Various Scan Settings

Network Scan Settings

Selecting a Response to Commands from the Operation Panel Using MP Navigator EX

Scanning with the Bundled Application Software

What Is MP Navigator EX (Supplied Scanner Software)?

Let's Try Scanning

Starting MP Navigator EX

Scanning Photos and Documents

Scanning Multiple Documents at One Time

Scanning Multiple Documents at One Time from the ADF (Auto Document Feeder)

Scanning Both Sides of Documents at One Time

Scanning Images Larger than the Platen (Stitch Assist)

Easy Scanning with One-click

Useful MP Navigator EX Functions

Correcting/Enhancing Images Automatically

Correcting/Enhancing Images Manually

Adjusting Images  
Searching Images  
Classifying Images into Categories  
Utilizing Images in MP Navigator EX  
Saving  
Saving as PDF Files  
Creating/Editing PDF Files  
Printing Documents  
Printing Photos  
Sending via E-mail  
Editing Files  
Setting Passwords for PDF Files  
Opening/Editing Password-protected PDF Files  
MP Navigator EX Screens  
Navigation Mode Screen  
Scan/Import Documents or Images Tab  
View & Use Images on your Computer Tab  
Custom Scan with One-click Tab  
Photos/Documents (Platen) Screen (Scan/Import Window)  
Scan Settings Dialog Box (Photos/Documents)  
Stack of Documents (ADF) Screen (Scan/Import Window)  
Scan Settings Dialog Box (Stack of Documents (ADF))  
Save Dialog Box  
Save as PDF file Dialog Box  
PDF Settings Dialog Box  
Memory Card Screen (Scan/Import Window)  
View & Use Window  
Create/Edit PDF file Window  
Print Document Dialog Box  
Print Photo Dialog Box  
Send via E-mail Dialog Box  
Correct/Enhance Images Window  
One-click Mode Screen  
Save Dialog Box (One-click Mode Screen)  
Scan Settings Dialog Box  
Save Dialog Box  
Exif Settings Dialog Box  
PDF Dialog Box  
Save as PDF file Dialog Box  
Mail Dialog Box  
OCR Dialog Box  
Custom Dialog Box  
Preferences Dialog Box  
General Tab  
Scanner Button Settings Tab (Save)  
Scanner Button Settings Tab (Attach to E-mail)  
Scanner Button Settings Tab (Open with Application)

Appendix: Opening Files Other than Scanned Images

- Importing Images Saved on a Memory Card
- Opening Images Saved on a Computer
- Scanning with Other Application Software
  - What Is ScanGear (Scanner Driver)?
  - Scanning with Advanced Settings Using ScanGear (Scanner Driver)
    - Starting ScanGear (Scanner Driver)
    - Scanning in Basic Mode
    - Scanning in Advanced Mode
    - Scanning in Auto Scan Mode
    - Scanning Multiple Documents from the ADF (Auto Document Feeder) in Advanced Mode
    - Scanning Multiple Documents at One Time in Advanced Mode
  - Correcting Images and Adjusting Colors with ScanGear (Scanner Driver)
    - Correcting Images (Unsharp Mask, Reduce Dust and Scratches, Fading Correction, etc.)
    - Adjusting Colors Using a Color Pattern
    - Adjusting Saturation and Color Balance
    - Adjusting Brightness and Contrast
    - Adjusting Histogram
    - Adjusting Tone Curve
    - Setting Threshold
  - ScanGear (Scanner Driver) Screens
    - Basic Mode Tab
    - Advanced Mode Tab
    - Input Settings
    - Output Settings
    - Image Settings
    - Color Adjustment Buttons
    - Auto Scan Mode Tab
    - Preferences Dialog Box
    - Scanner Tab
    - Preview Tab
    - Scan Tab
    - Color Settings Tab
  - Appendix: Useful Information on Scanning
    - Adjusting Cropping Frames
    - Resolution
    - File Formats
    - Color Matching
  - Canon IJ Network Scan Utility Screens
    - Canon IJ Network Scan Utility Menu and Setting Screen
- Other Scanning Methods
  - Scanning with WIA Driver
  - Scanning Using the Control Panel (Windows XP Only)

## Copying

### Printing Using the Operation Panel of the Machine

Copying

## Making Copies

Setting Items

Reducing or Enlarging a Copy

### Using Useful Copy Functions

Special Copy

Settings for Special Copy

Copying onto Both Sides of the Paper (Two-sided Copy)

Copying without Borders (Borderless Copy)

Copying Two Pages to Fit onto a Single Page (2-on-1 Copy)

Copying Four Pages to Fit onto a Single Page (4-on-1 Copy)

Repeating an Image on a Page (Image Repeat)

Making Multiple Copies of an Entire Document (Collated Copy)

Copying with Fade Restoration (Fade-Restored Copy)

Copying Thick Originals Such as Books (Frame Erase)

Copying on Stickers (Sticker Copy)

Copying with Binding Margin (Binding Margin Copy)

Removing Punch Hole Marks (Punch Hole Removal Copy)

## Faxing

### Faxing

Sending/Receiving Faxes Using the Operation Panel of the Machine

Sending Faxes

Sending a Fax after Speaking on Telephone

Registering Recipients for Speed Dialing

Registering Coded Speed Dial Numbers

Registering Group Dial Numbers

Changing Registered Information

Deleting Registered Information

Printing a List of the Registered Destinations

Sending a Fax Using the Speed Dialing Feature

Searching a Registered Dial Code Number by Name (Directory Dialing)

Sending the Same Document to Several Recipients (Sequential Broadcasting)

Resending Faxes (Redialing a Busy Number)

Automatic Redialing

Manual Redialing

Using the Useful Transmission Functions

Using the Information Services

Transmission/Reception of Faxes Using ECM

Preventing Mistransmission of Faxes

Sending Faxes after Dialing Twice (Fax Number Re-entry)

Sending Faxes after Checking Information (Checking the Recipient's Information)

- Receiving Faxes
- Changing the Print Settings
- Setting the Number of Rings for Fax Calls
- Using the Useful Reception Functions
- Memory Reception
- Remote Reception
- Rejecting Fax Reception
  - Registering/Editing/Deleting the Rejected Number on the TEL Number Registration Screen
- Using the Caller ID Service to Reject Calls
- Document Stored in Memory
  - Printing a Document in Memory
  - Deleting a Document in Memory
- Summary of Reports and Lists
- Sending Faxes from a Computer
  - Sending a FAX
  - Creating an Address Book
    - Edit or Remove a Recipient from an Address Book
    - Search for a Recipient in an Address Book

## Troubleshooting

### Troubleshooting

- Troubleshooting
- If an Error Occurs
- The Machine Cannot Be Powered On
- An Error Message Is Displayed on the LCD
- A Message for Faxing Is Displayed on the LCD
- LCD Cannot Be Seen At All
- An Unintended Language Is Displayed on the LCD
- Cannot Install the MP Drivers
- Cannot Connect to Computer with a USB Cable Properly
  - Printing or Scanning Speed Is Slow / Hi-Speed USB Connection Does Not Work/"This device can perform faster" Message Is Displayed
- Print Results Not Satisfactory
  - Cannot Print to End of Job
  - Part of the Page Is Not Printed
  - No Printing Results/Printing Is Blurred/Colors Are Wrong/White Streaks
  - Lines Are Misaligned
  - Printed Paper Curls or Has Ink Blots
  - Paper Is Smudged/Printed Surface Is Scratched
  - Back of the Paper Is Smudged
  - Vertical Lines Are Printed on the Sides of the Printout
  - Colors Are Uneven or Streaked
- Printing Does Not Start
- Copying/Printing Stops Before It Is Completed
- Machine Moves But Ink Is Not Ejected
- Printing Speed Is Not as Fast as Expected
- Print Head Holder Does Not Move to the Position for Replacing

Paper Does Not Feed Properly

Paper Does Not Feed from the Paper Source Specified in the Printer Driver

Paper Jams

Document Jams in the ADF

If the Stop button is pressed while the machine is scanning the document:

Removing the jammed document from the Document Tray:

Removing the jammed document from the inner side of the Document Cover:

Removing the jammed document from the Document Output Slot:

Message Appears on the Computer Screen

B200 Printer error has occurred. Unplug the power cord and contact the service center. Is Displayed

\*\*\*\* Printer error has occurred. Turn off power then back on again. If problem persists, see the manual. Is Displayed

Error Regarding Automatic Duplex Printing Is Displayed

Writing Error/Output Error/Communication Error

Error Number: 300 Is Displayed

Error Number: 1700 Is Displayed

Ink Info Number: 1600 Is Displayed

Ink Info Number: 1683 Is Displayed

Ink Info Number: 1688 Is Displayed

Error Number: 2001 Is Displayed

Error Number: 2002 Is Displayed

Other Error Messages

The Inkjet Printer/Scanner/Fax Extended Survey Program Screen Is Displayed

The Inkjet Printer/Scanner/Fax Extended Survey Program Icon Appears

Cannot Print Properly with Automatic Duplex Printing

For Windows Users

Printer Status Monitor Is Not Displayed

Error Message Appears on a PictBridge Compliant Device

Cannot Print Properly from a Wireless Communication Device

Cannot Print Properly from a Photo Index Sheet

Cannot Remove a Memory Card

Problems with Scanning

Scanner Does Not Work

ScanGear (Scanner Driver) Does Not Start

Error Message Appears and the ScanGear (Scanner Driver) Screen Does Not Appear

Scan Quality (Image Displayed on the Monitor) Is Poor

Scanned Image Is Surrounded by Extra White Areas

Cannot Scan Properly with Multi Crop

Cannot Scan Properly in Auto Scan Mode

Slow Scanning Speed

"There is not enough memory." Message Is Displayed

Computer Stops Operating during Scanning

Scanner Does Not Work After Upgrading Windows

**Software Problems**

E-mail Software Program You Want to Use Does Not Appear in the Screen for Selecting an E-mail Software Program

Scanned Image Is Printed Enlarged (Reduced)

Scanned Image Is Enlarged (Reduced) on the Computer Monitor

Scanned Image Does Not Open

**MP Navigator EX Problems**

Cannot Scan at the Correct Size

Position or Size of the Image Cannot be Detected Correctly When Scanning Using the Operation Panel

Document Is Placed Correctly, but the Scanned Image Is Slanted

Document Is Placed Correctly, but the Orientation Changes in the Scanned Image

**Problems with Faxing****Problems Receiving Faxes**

Cannot Receive a Fax, Cannot Print a Fax

Machine Does Not Switch Automatically between Voice and Fax Calls

Quality of Received Fax is Poor

Errors Often Occur When You Receive a Fax

**Problems Sending Faxes**

Cannot Send a Fax

Cannot Perform Sequential Broadcasting by Redialing, or Cannot Dial Using the Numeric Buttons

Cannot Send a Fax Clearly

Errors Often Occur When You Send a Fax

**Telephone Problems**

Cannot Dial

Telephone Disconnects During a Call

**FAQs**

If You Cannot Resolve the Problem

Instructions for Use (Printer Driver)

General Notes (Scanner Driver)

General Notes (Fax Driver)

**Using Easy-PhotoPrint EX****Using MP Navigator EX****About Solution Menu**

## Advanced Guide

Advanced Guide > How to Use This Manual

---

# How to Use This Manual


- ▶ Operating the Contents Pane
- ▶ Operating the Explanation Window
- ▶ Printing This Manual
- ▶ Using Keywords to Find a Topic
- ▶ Registering Topics to My Manual
- ▶ Symbols Used in this Document
- ▶ Trademarks

[Page top ↑](#)

## Advanced Guide

Advanced Guide > How to Use This Manual > Operating the Contents Pane

# Operating the Contents Pane

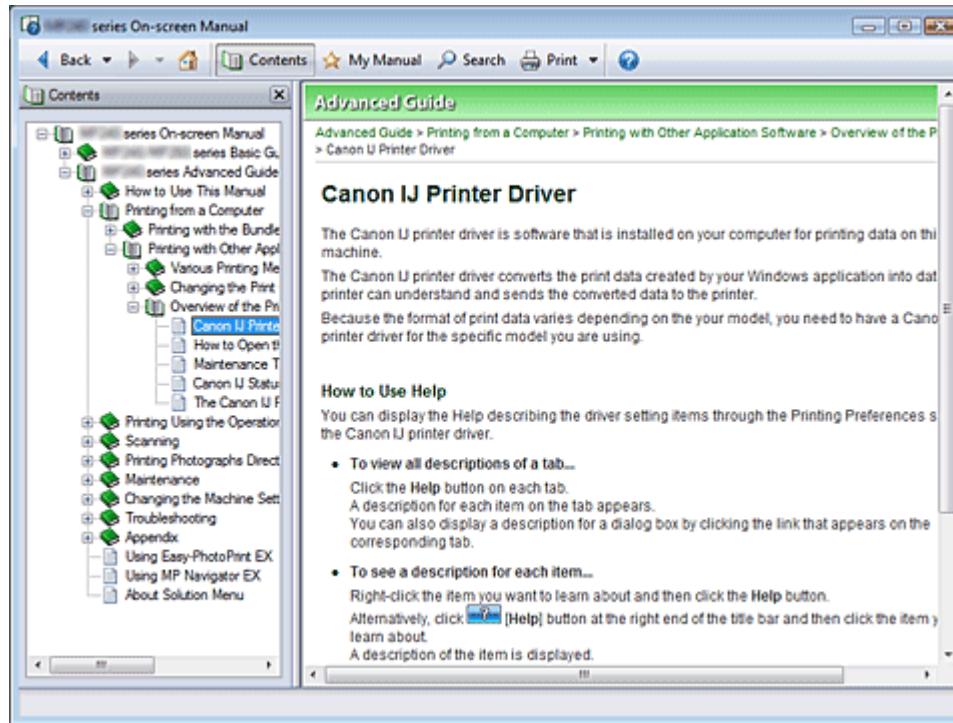

When you click a title displayed in the Contents pane found to the left of the On-screen Manual, the pages of that title are displayed in the description window on the right side.

When you click found to the left of , the titles found in the lower hierarchies are displayed.

### Note


- Click to close or display the Contents pane.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > How to Use This Manual > Operating the Explanation Window

### Operating the Explanation Window

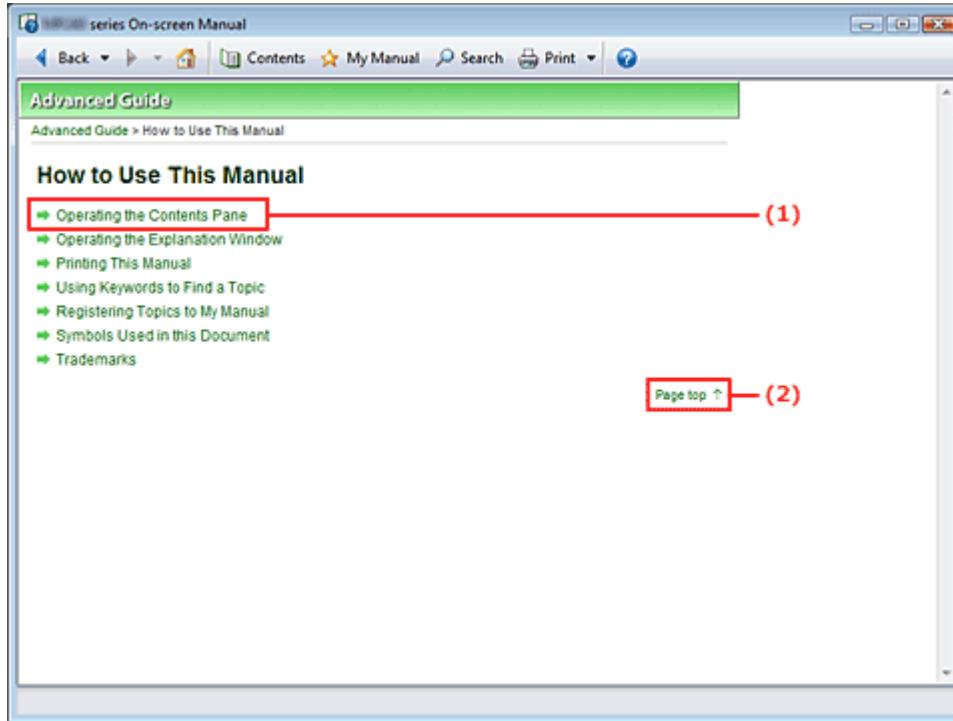

(1) Click the green characters to jump to the corresponding page.

(2) The cursor jumps to the top of this page.

Page top ↑

## Advanced Guide

Advanced Guide > How to Use This Manual > Printing This Manual

# Printing This Manual



Click to display the Print pane to the left of the On-screen Manual.

### Note

- Click to close or display the Print pane.
- Click , and then click Option Settings to display the Option Settings dialog box. You can then set up the printing operation.
  - Print document title and page number  
When this check box is checked, the manual name and the page number are printed in the header (top of the document).
  - Print background color and images  
When this check box is checked, the background color and the image are printed. Some images are printed regardless of whether this check box is checked or not.
  - Check number of pages to be printed before printing  
When this check box is checked, the Print Page Count Confirmation dialog box is displayed before printing starts. This dialog box allows you to check how many pages will be printed.
- To display the Print dialog box, click and then click Print Settings. When the dialog box is displayed, select the printer to be used for printing.  
After selecting the printer to be used, click Properties... to specify the print settings.

The following four methods of printing are available:

- Current Document
- Selected Documents
- My Manual
- All Documents

### Current Document

You can print the currently displayed topic.

#### 1. From Select Target, select Current Document

The title of the currently displayed topic is displayed in the Documents to Be Printed list.

 **Note**

- By selecting Print linked documents, you can also print documents that are linked to the current document. The linked documents are added to the Documents to Be Printed list.
- Click Print Preview to display and check what the print results will look like before you actually print the document.

**2. Click Start Printing**

The Print Page Count Confirmation dialog box is displayed.

**3. Execute print**

Confirm the number of pages to be printed, and then click Yes.

The topics that are currently displayed are printed.

**Selected Documents**

You can select and print the topics that you want printed.

**1. From Select Target, select Selected Documents**

The titles of all topics are displayed in the Documents to Be Printed list.

**2. Select the topics to be printed**

From the Documents to Be Printed list, select the title check boxes of the topics to be printed.

 **Note**

- When you select the Automatically select documents in lower hierarchies check box, the check boxes of all titles found in the lower hierarchies are selected.
- Click Select All to select the check boxes of all titles.
- Click Clear All to clear the check boxes of all titles.
- Click Print Preview to display and check what the print results will look like before you actually print the document.

**3. Click Start Printing**

The Print Page Count Confirmation dialog box is displayed.

**4. Execute print**

Confirm the number of pages to be printed, and then click Yes.

All topics with selected check boxes are printed.

**My Manual**

You can select and print topics registered in My Manual.

For details about My Manual, see "[Registering Topics to My Manual](#)."

**1. From Select Target, select My Manual**

The titles of the topics that have been registered to My Manual are displayed in the Documents to Be Printed list.

**2. Select the topics to be printed**

From the Documents to Be Printed list, select the title check boxes of the topics to be printed.

 **Note**

- Click Select All to select the check boxes of all titles.
- Click Clear All to clear the check boxes of all titles.
- Click Print Preview to display and check what the print results will look like before you actually print the document.

**3. Click Start Printing**

The Print Page Count Confirmation dialog box is displayed.

#### 4. Execute print

Confirm the number of pages to be printed, and then click Yes.

All topics with selected check boxes are printed.

### All Documents

You can print all topics of the On-screen Manual.

#### 1. From Select Target, select All Documents

The titles of all topics are displayed in the Documents to Be Printed list, and the check boxes are automatically selected.



#### Note

- If you clear the check box of a topic, that topic is not printed.
- Click Select All to select the check boxes of all titles.  
Click Clear All to clear the check boxes of all titles.
- Click Print Preview to display and check what the print results will look like before you actually print the document.

#### 2. Click Start Printing

The Print Page Count Confirmation dialog box is displayed.

#### 3. Execute print

Confirm the number of pages to be printed, and then click Yes.

All topics are printed.



#### Important

- A large amount of paper is necessary to print all topics. Before printing, be sure to check the number of print pages displayed in the Print Page Count Confirmation dialog box.
- The Print Preview dialog box allows you to scale the printing to the paper width or to set the zoom rate. However, if the print data extends outside the paper because of the new zoom rate, that portion of the document will not be printed on the paper.

[Page top ↑](#)


## Advanced Guide

Advanced Guide > How to Use This Manual > Using Keywords to Find a Topic

# Using Keywords to Find a Topic

You can enter a keyword to search for a target page.

All installed On-screen Manuals (user's guides) are searched.

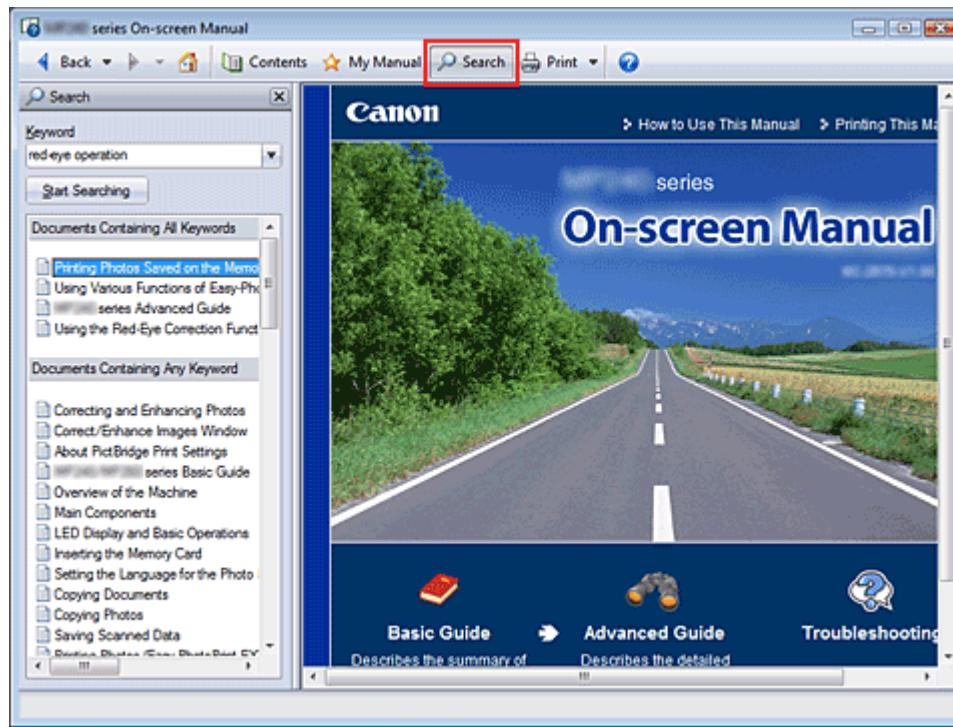

### 1. Click Search

The Search pane is displayed to the left of the On-screen Manual.

#### Note

- Click to close or display the Search pane.

### 2. Enter a keyword

In Keyword, enter a keyword for the item to be checked.

If you want to enter multiple keywords, insert a space between the keywords.

#### Note

- You can enter up to 10 keywords or up to 255 characters.
- Uppercase and lowercase are not discriminated.
- The program can also search for keywords that contain spaces.

### 3. Click Start Searching

The search is started, and the titles of topics containing the keyword are displayed in the search results list.

When you execute a search by entering multiple keywords, the search results are displayed as shown below.

#### [Documents Containing Perfect Match]

Topics containing the entire search character string (including spaces) exactly as entered (perfect match)

#### [Documents Containing All Keywords]

Topics containing all keywords that were entered

#### [Documents Containing Any Keyword]

Topics containing at least one of the keywords that were entered

**4. Display the topic that you want to read**

From the search results list, double-click (or select and press Enter) the title of the topic you want to read.

When the pages of that title are displayed, the keywords found on those pages are highlighted.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > How to Use This Manual > Registering Topics to My Manual

# Registering Topics to My Manual

Register frequently read pages as My Manual topics so that you can refer to those pages easily at any time.



## 1. Display the topic

Display the topic to be added to My Manual.

## 2. Click

The My Manual pane is displayed to the left of the On-screen Manual.

### Note

- Click to close or display the My Manual pane.

## 3. Register the topic to My Manual

Click Add.

The currently displayed topic is added to List of My Manual.

### Note

- Alternatively, from the Recently Displayed Documents list, double-click (or select and press Enter) the topic to be added to My Manual to display that topic, and then click Add.

## 4. Display My Manual

When you double-click (or select and press Enter) a topic displayed in List of My Manual, that topic is displayed in the Description window.

### Note

- To delete a topic from List of My Manual, select that topic from the list, and then click Delete (or press Delete).

## Advanced Guide

Advanced Guide > How to Use This Manual > Symbols Used in this Document

# Symbols Used in this Document

### **Warning**

Instructions that, if ignored, could result in death or serious personal injury caused by incorrect operation of the equipment. These must be observed for safe operation.

### **Caution**

Instructions that, if ignored, could result in personal injury or material damage caused by incorrect operation of the equipment. These must be observed for safe operation.

### **Important**

Instructions that must be observed for safe operation.

### **Note**

Instructions as notes for operation or additional explanations.

### **Windows**

Indicates operations in Windows.

### **Macintosh**

Indicates operations in Macintosh.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > How to Use This Manual > Trademarks

### Trademarks

- Microsoft is a registered trademark of Microsoft Corporation.
- Windows is a trademark or registered trademark of Microsoft Corporation in the U.S. and/or other countries.
- Windows Vista is a trademark or registered trademark of Microsoft Corporation in the U.S. and/or other countries.
- Macintosh and Mac are trademarks of Apple Inc., registered in the U.S. and other countries.
- Adobe, Adobe Photoshop, Adobe RGB and Adobe RGB (1998) are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and or other countries.
- Bluetooth is a trademark of Bluetooth SIG, Inc.,U.S.A. and licensed to Canon Inc.

### Exif Print

This machine supports Exif Print.

Exif Print is a standard for enhancing the communication between digital cameras and printers. By connecting to an Exif Print-compliant digital camera, the camera's image data at the time of shooting is used and optimized, yielding extremely high quality prints.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer

---

### Printing from a Computer

- ▶ [Printing with the Bundled Application Software](#)
- ▶ [Printing with Other Application Software](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software

# Printing with the Bundled Application Software

- ▶ What Is Easy-PhotoPrint EX?
- ▶ Printing Photos
- ▶ Creating an Album
- ▶ Printing Calendars
- ▶ Printing Stickers
- ▶ Printing Layout
- ▶ Correcting and Enhancing Photos
- ▶ Questions and Answers
- ▶ Photo Print Settings
- ▶ Other Settings

[Page top ↑](#)

## Advanced Guide


Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > What Is Easy-PhotoPrint EX?

### Easy-PhotoPrint EX

## What Is Easy-PhotoPrint EX?

Easy-PhotoPrint EX allows you to create albums, calendars and stickers easily using photos taken with digital cameras.

You can also print borderless photos easily.

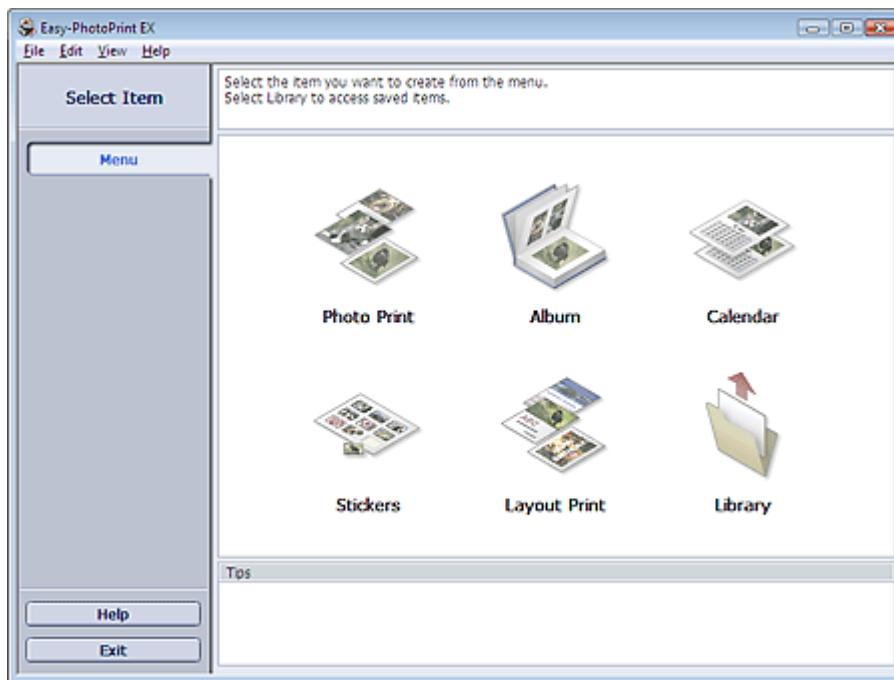

### Important

- Easy-PhotoPrint EX does not support Windows 95, Windows 98, Windows Me, or Windows NT4.
- Easy-PhotoPrint EX can only be used with Canon inkjet printers. It does not support some printers, including Canon compact printers (SELPHY CP series).
- If a printer that supports Easy-PhotoPrint EX is not installed, you cannot print items you create.
- If Easy-PhotoPrint EX is installed on a computer that already has Easy-LayoutPrint installed, Easy-LayoutPrint will be replaced by Easy-PhotoPrint EX.

### Note

- Printing on paper larger than A4 is available with supported printers only. See your printer manual for details.
- See Help of Easy-PhotoPrint EX for descriptions of Easy-PhotoPrint EX screens.  
Click Help in a screen or dialog box, or select Easy-PhotoPrint EX Help from the Help menu. Help appears.

### About Exif Print

Easy-PhotoPrint EX supports "Exif Print." Exif Print is a standard for enhancing the communication between digital cameras and printers.

By connecting to an Exif Print-compliant digital camera, the image data at the time of shooting is used and optimized, yielding extremely high quality prints.

### Starting Easy-PhotoPrint EX from Other Applications

Easy-PhotoPrint EX can be started from other applications.

See the application's manual for details on the procedure for starting.

The Photo Print function is available with the following applications:

- MP Navigator EX Ver.1.00 or later
- ZoomBrowser EX Ver.6.0 or later
- Digital Photo Professional Ver.3.2 or later

### Important

- Easy-PhotoPrint EX is subject to the following restrictions when started from Digital Photo Professional:
  - Menu does not appear in the step button area on the left side of the screen.
  - Images cannot be corrected/enhanced.
  - Image display order cannot be changed.
  - Edited images cannot be saved.
  - Options other than Enable ICC Profile cannot be selected for Color correction for printing on the Advanced tab of the Preferences dialog box. Therefore, you cannot use the Vivid Photo and Photo Noise Reduction functions.

The Album function is available with the following applications:

- MP Navigator EX Ver.1.00 or later
- ZoomBrowser EX Ver.5.8 or later

### Supported Image File Formats (Extensions)

- BMP (.bmp)
- JPEG (.jpg, .jpeg)
- TIFF (.tif, .tiff)
- PICT (.pict, .pct)
- Easy-PhotoPrint image files (.epp)

### Important

- When selecting an image, if there is a TIFF file in the selected folder, the image may not be displayed correctly or Easy-PhotoPrint EX may shut down depending on the TIFF format. In such cases, move the TIFF file to another folder or recreate the file in a different file format, and then select the folder again.

### Note



- The thumbnails of files in unsupported formats are displayed as (Question Mark).
- When Easy-PhotoPrint EX is started from Digital Photo Professional, all image files supported by Digital Photo Professional will be displayed.

### File Formats (Extensions) Supported by Easy-PhotoPrint EX

- Easy-PhotoPrint EX Photo Print file (.el6)
- Easy-PhotoPrint EX Album file (.el1)
- Easy-PhotoPrint EX Stickers file (.el2)
- Easy-PhotoPrint EX Calendar file (.el4)
- Easy-PhotoPrint EX Layout file (.el5)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Photos


### Easy-PhotoPrint EX

## Printing Photos

Easy-PhotoPrint EX allows you to print your favorite photos in a variety of layouts.

You can also create borderless photos easily.

Corrections suitable for photos will be applied automatically when printing.

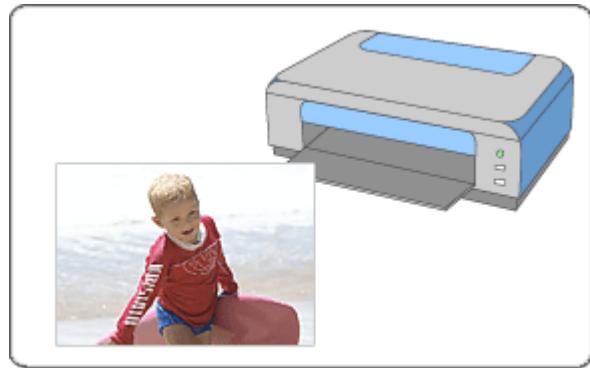

### Steps

1. Starting Easy-PhotoPrint EX
2. Selecting a Photo
3. Selecting the Paper
4. Printing

### Try This

- ▶ Correcting and Enhancing Photos
- ▶ Printing Vivid Photos
- ▶ Reducing Photo Noise
- ▶ Cropping Photos (Photo Print)
- ▶ Printing Dates on Photos (Photo Print)
- ▶ Printing Multiple Photos on One Page
- ▶ Printing an Index
- ▶ Printing ID Photos (ID Photo Print)
- ▶ Printing Photo Information
- ▶ Saving Photos
- ▶ Opening Saved Files

### Questions and Answers

- ▶ How Can I Move (or Copy) the Saved File?
- ▶ Which Side of the Displayed Image Does the Printing Start from?
- ▶ How Do I Print with Even Margins?

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Photos > Starting Easy-PhotoPrint EX


Easy-PhotoPrint EX



### Starting Easy-PhotoPrint EX

1. From the Start menu, select (All) Programs > Canon Utilities > Easy-PhotoPrint EX > Easy-PhotoPrint EX.

Easy-PhotoPrint EX starts and Menu appears.

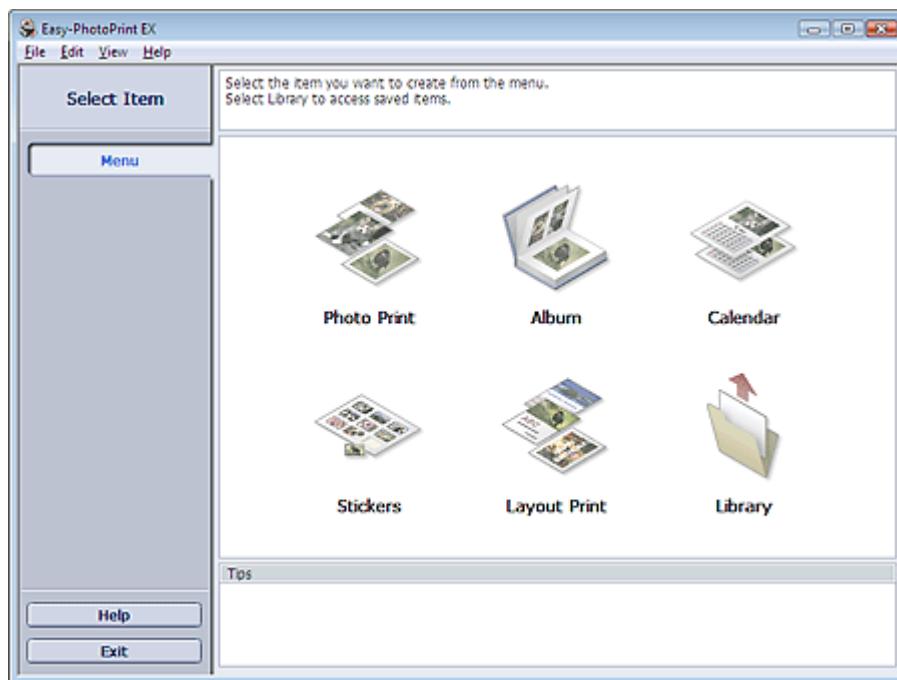

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Photos > Selecting a Photo


Easy-PhotoPrint EX



### Selecting a Photo

#### 1. Click Photo Print from Menu.

The Select Images screen appears.

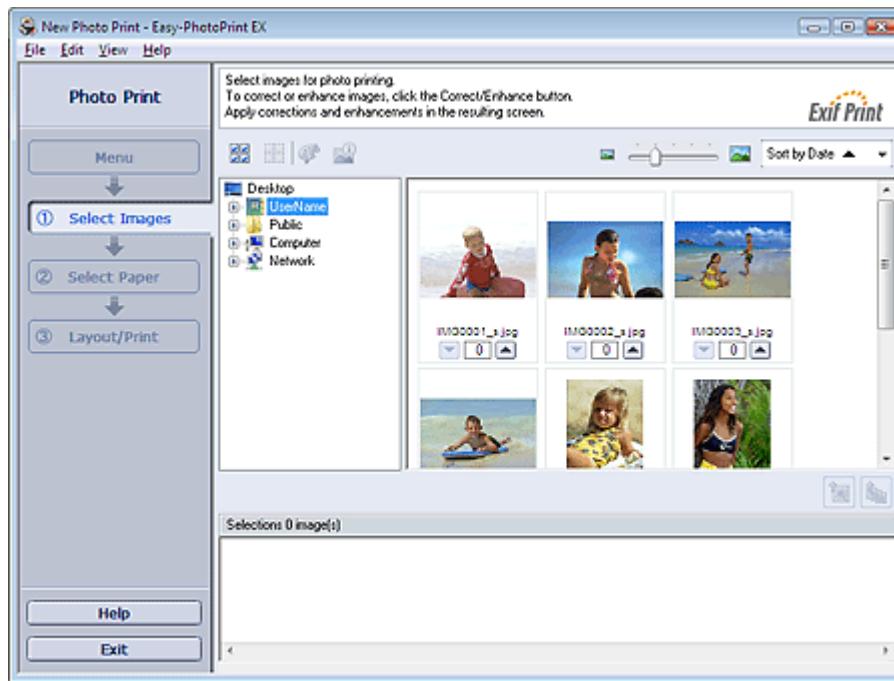

#### Important

- The thumbnails (reduced images) displayed in the screen may appear as follows:
  - A black line appears along an edge of the image.
  - An edge of the image appears cropped.However, such images will be displayed normally when enlarged or previewed, and print results will not be affected.

#### 2. Select the folder that contains the image you want to print from the folder tree area.

The images in the folder will be displayed as thumbnails (miniatures).

#### Important

- If Easy-PhotoPrint EX is started from another application (MP Navigator EX, ZoomBrowser EX or Digital Photo Professional), the folder tree area will not be displayed.  
The images opened in the application will be displayed as thumbnails.

#### 3. Click the image you want to print.

The number of copies appears as "1" below the clicked image, while the selected image itself will appear in the selected image area.

#### Note

- To delete an image in the selected image area, select the image you want to delete and click  (Delete Imported Image).  
To delete all images from the selected image area, click  (Delete All Imported Images).
- To print two or more copies of an image, click  (Up arrow) until the number of copies you

- want is reached. To reduce the number of copies shown in the box, click  (Down arrow).
- You can change the order of photos using the list located at the top right corner of the screen.
  - You can select the printing order from Sort by Date and Sort by Name.
- 

### Note

- You can correct or enhance the selected image before printing.  
 [Correcting and Enhancing Photos](#)
  - See Help for details on the Select Images screen.
- 



[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Photos > Selecting the Paper


Easy-PhotoPrint EX



## Selecting the Paper

### 1. Click Select Paper.

The Select Paper screen appears.

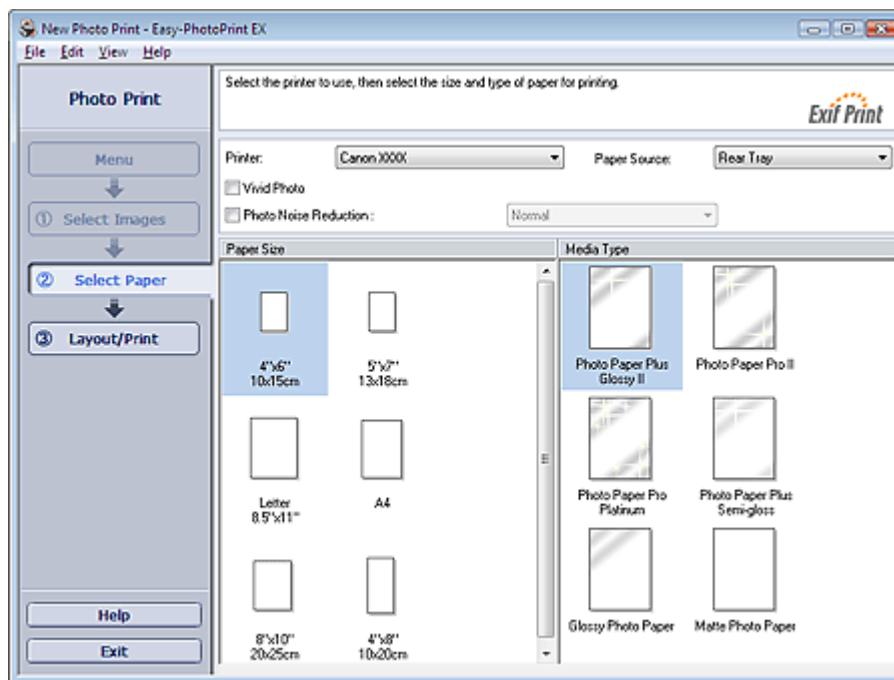

### 2. Set the following items according to the printer and paper to be used:

Printer

Paper Source

Paper Size

Media Type

### Note

- The paper sizes and media types may vary depending on the printer. See Help for details.
- The paper sources may vary depending on the printer and the media type.

### Important

- When Fine Art is selected for Paper Size, a 1.38 inch (35 mm) margin is automatically left at the top and bottom of the paper.

It is recommended that you check the print range with the image shown in Preview before printing.

### Note

- You can print photos with more vivid colors or you can reduce the photo noise.
  - ▶ [Printing Vivid Photos](#)
  - ▶ [Reducing Photo Noise](#)
- See Help for details on the Select Paper screen.



## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Photos > Printing


Easy-PhotoPrint EX



## Printing

### 1. Click Layout/Print.

The Layout/Print screen appears.

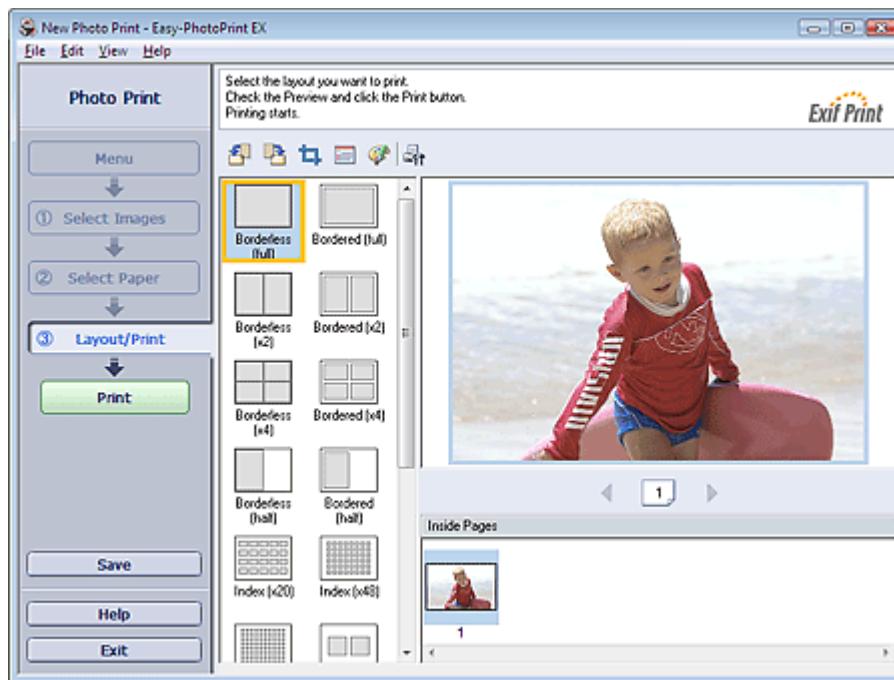

#### Important

- The thumbnails (reduced images) displayed in the screen may appear as follows:
  - A black line appears along an edge of the image.
  - An edge of the image appears cropped.However, such images will be displayed normally when enlarged or previewed, and print results will not be affected.

### 2. Select a layout you want to use.

Click a borderless layout to print borderless photos.

#### Note

- The layouts that can be selected may vary depending on the printer, paper size, and media type.

### 3. Click Print.

#### Important

- When you print on large size paper such as A3/A3+, some computers cannot print properly if you print more than one page or copy at a time. It is recommended that you print page by page when you print on such paper.
- While printing on paper larger than A4 or printing high-resolution images, data may be printed only to the middle if many images are printed at one time. In such cases, select the Spool print job page by page checkbox in the Preferences dialog box, and then print again.

To display the Preferences dialog box, click (Settings) or select Preferences... from the File menu.

- When Fine Art is selected for Paper Size, a 1.38 inch (35 mm) margin is automatically left at the top and bottom of the paper.

It is recommended that you check the print range with the image shown in Preview before printing.

- The photo print settings will be discarded if you exit Easy-PhotoPrint EX without saving the settings.  
It is recommended that you save the printed image if you want to print it again.  
▶ [Saving Photos](#)
- When you print on a bordered layout, the margins on the left and right or the top and bottom may become wider than the other.  
▶ [How Do I Print with Even Margins?](#)

## Note

- You can crop images or print dates on photos.  
▶ [Cropping Photos \(Photo Print\)](#)  
▶ [Printing Dates on Photos \(Photo Print\)](#)
- You can correct or enhance the selected image before printing.  
▶ [Correcting and Enhancing Photos](#)
- You can specify advanced Photo Print settings (number of copies, print quality, etc.) in the Preferences dialog box.  
  
To display the Preferences dialog box, click  (Settings) or select Preferences... from the File menu.  
■ See Help for details on the Layout/Print screen.



[Page top↑](#)


## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Creating an Album

Easy-PhotoPrint EX

# Creating an Album

Easy-PhotoPrint EX allows you to create your own personalized photo album.

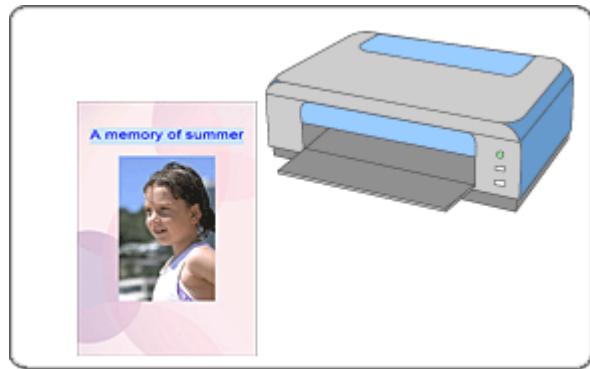

## Steps

1. Starting Easy-PhotoPrint EX
2. Selecting the Paper and Layout
3. Selecting a Photo
4. Editing
5. Printing

## Try This

- ▶ Correcting and Enhancing Photos
- ▶ Changing Layout
- ▶ Changing Background
- ▶ Adding Photos
- ▶ Swapping Positions of Photos
- ▶ Replacing Photos
- ▶ Changing Position, Angle and Size of Photos
- ▶ Cropping Photos
- ▶ Framing Photos
- ▶ Printing Dates on Photos
- ▶ Attaching Comments to Photos
- ▶ Adding Text to Photos
- ▶ Saving
- ▶ Opening Saved Files

## Questions and Answers

- ▶ How Can I Move (or Copy) the Saved File?
- ▶ What Is "C1" or "C4"?

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Creating an Album > Starting Easy-PhotoPrint EX


Easy-PhotoPrint EX



## Starting Easy-PhotoPrint EX

1. From the Start menu, select (All) Programs > Canon Utilities > Easy-PhotoPrint EX > Easy-PhotoPrint EX.

Easy-PhotoPrint EX starts and Menu appears.

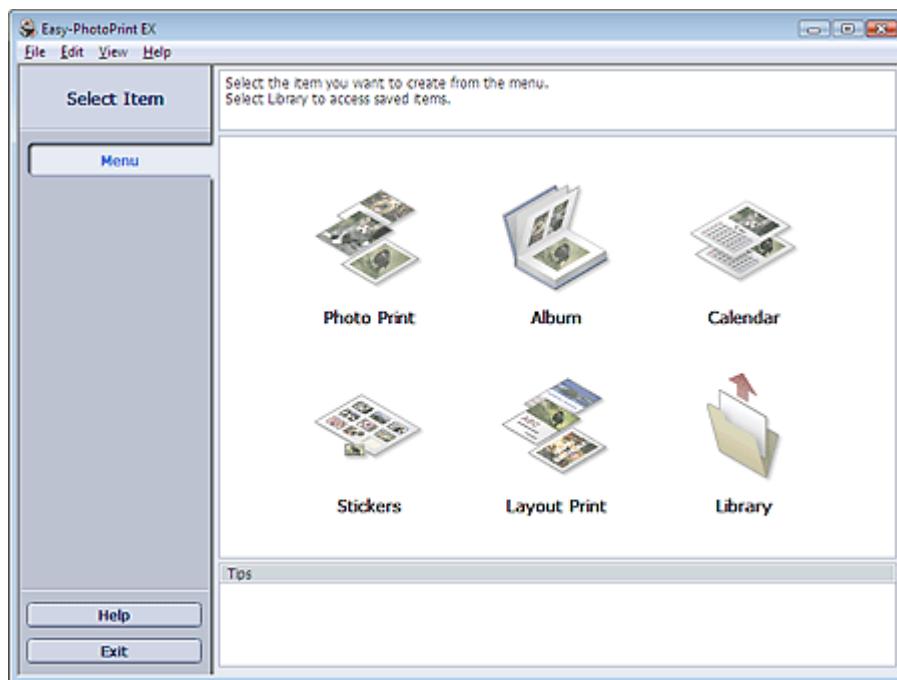

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Creating an Album > Selecting the Paper and Layout


Easy-PhotoPrint EX



## Selecting the Paper and Layout

### 1. Click Album from Menu.

The Page Setup screen appears.

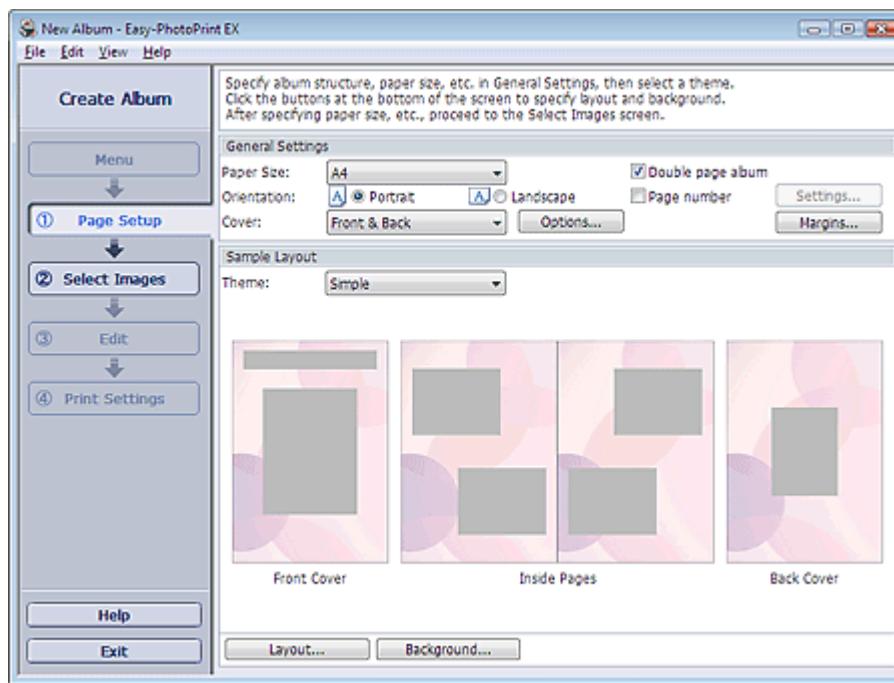

### 2. Set the following items in the General Settings section:

- Paper Size
- Orientation
- Cover
- Double page album
- Page number

### Note

- See Help on the paper size that can be selected.
- You can select whether to display images on the inside of the front and back covers in the Cover Options dialog box. To display the Cover Options dialog box, select Front or Front & Back for Cover and click Options....
- Select the Double page album checkbox to enable the spread page layout (consisting of two-page master). In a double-page album, you can arrange an image across the left and right pages.
- You can customize the page numbers (position, font size, etc.) in the Page Number Settings dialog box. To display the Page Number Settings dialog box, select the Page number checkbox and click Settings....
- You can customize the margins of the front cover, inside pages and back cover in the Margin Settings dialog box. To display the Margin Settings dialog box, click Margins....

### 3. Select the theme you want to use from Theme in Sample Layout.

### 4. If you want to change the layout, click Layout....

The Change Layout dialog box appears.

In the Change Layout dialog box, you can change the layout or select whether to print the date (on

which the picture was taken) on the photo.

### Note

- The layouts that can be selected may vary depending on the Paper Size, Orientation, Double page album, or the type of page selected (front cover, inside pages or back cover).
- You can customize the date (position, size, color, etc.) in the Date Settings dialog box. To display the Date Settings dialog box, select the Print date checkbox in the Change Layout dialog box and click Date Settings....

## 5. If you want to change the background, click Background....

The Change Background dialog box appears.

In the Change Background dialog box, you can paint the background in a single color or paste an image file to it.

### Note

- See Help for details on the Page Setup screen.



[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Creating an Album > Selecting a Photo


Easy-PhotoPrint EX



### Selecting a Photo

#### 1. Click Select Images.

The Select Images screen appears.

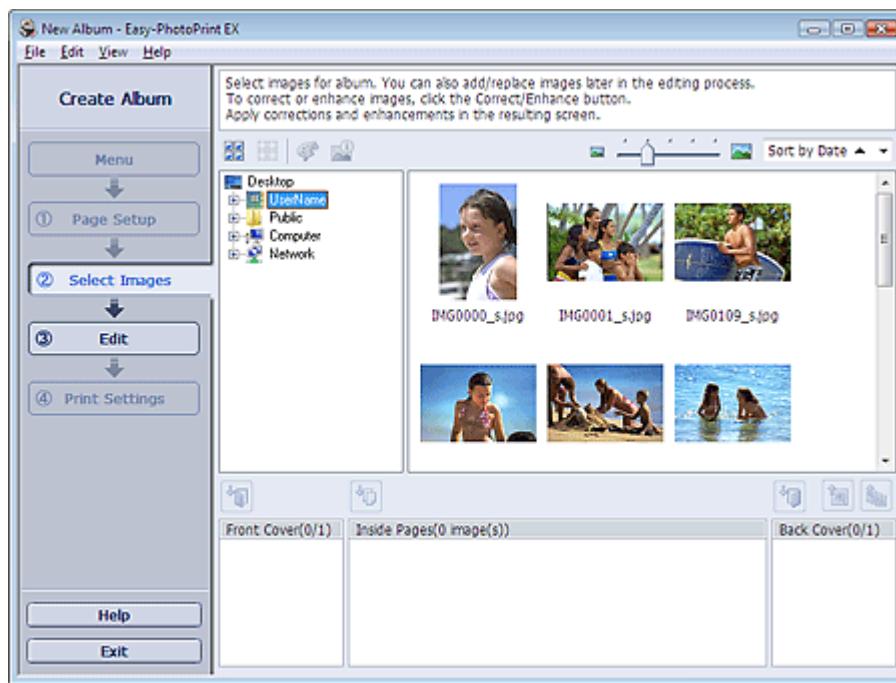

#### 2. Select the folder that contains the image you want to print from the folder tree area.

The images in the folder will be displayed as thumbnails (miniatures).

#### Important

- If Easy-PhotoPrint EX is started from another application (MP Navigator EX or ZoomBrowser EX), the folder tree area will not be displayed.  
The images opened in the application will be displayed as thumbnails.

#### 3. Select the image(s) you want to print, and click one of the buttons below.



To print on the front cover, click (Import to Front Cover).



To print on the inside pages, click (Import to Inside Pages).



To print on the back cover, click (Import to Back Cover).

The selected image(s) are displayed in the selected image area.

You can also select the image(s) you want to print by dragging them into the selected image area.

#### Note

- To delete an image in the selected image area, select the image you want to delete and click



(Delete Imported Image).



To delete all images from the selected image area, click (Delete All Imported Images).

#### Note

- See Help for details on the Select Images screen.



[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Creating an Album > Editing


Easy-PhotoPrint EX



## Editing

### 1. Click Edit.

The Edit screen appears.

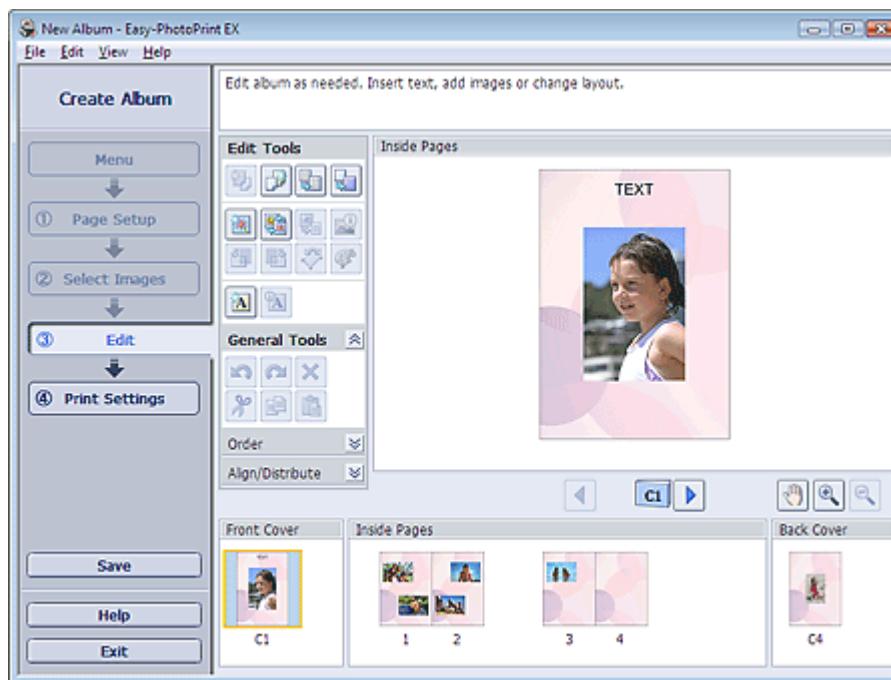


### 2. Edit your album if necessary.

- ▶ Changing Layout
- ▶ Changing Background
- ▶ Adding Photos
- ▶ Swapping Positions of Photos
- ▶ Replacing Photos
- ▶ Changing Position, Angle and Size of Photos
- ▶ Cropping Photos
- ▶ Framing Photos
- ▶ Printing Dates on Photos
- ▶ Attaching Comments to Photos
- ▶ Adding Text to Photos

### Important

- The edit information will be discarded if you exit Easy-PhotoPrint EX without saving the edited album. It is recommended that you save the item if you want to edit it again.

The page numbers on the front and back covers of the album are displayed as follows:

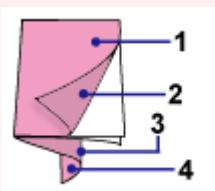

C1: Front cover

C2: Inside the front cover

C3: Inside the back cover

C4: Back cover

- ▶ Saving

 **Note**

- 
- See Help for details on the Edit screen.
- 

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Creating an Album > Printing


Easy-PhotoPrint EX



## Printing

### 1. Click Print Settings.

The Print Settings screen appears.

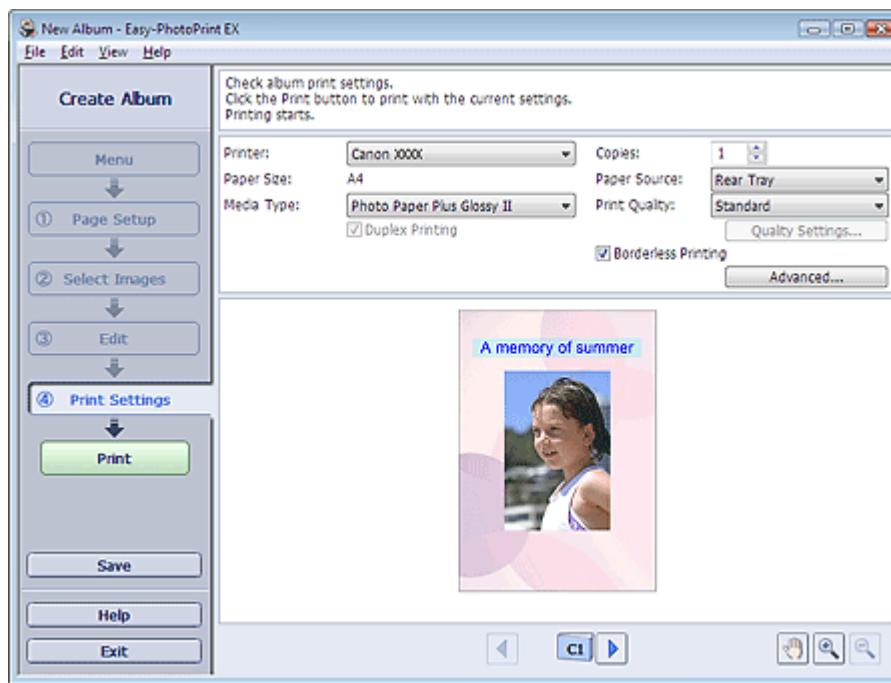

### 2. Set the following items according to the printer and paper to be used:

Printer

Media Type

Copies

Paper Source

Print Quality

Borderless Printing

### Note

- The media types may vary depending on the printer and the paper size.
- Duplex Printing appears if the selected printer and media type support duplex printing. Select this checkbox to print on both sides of the paper.
- Automatic appears if you select the Duplex Printing checkbox after selecting a printer that supports automatic duplex printing and media type that supports duplex printing. Select this checkbox to print on both sides of the paper automatically.
- The paper sources may vary depending on the printer and the media type.
- You can set a custom print quality level in the Print Quality Settings dialog box. To display the Print Quality Settings dialog box, select Custom for Print Quality and click Quality Settings....
- Select the Borderless Printing checkbox to print borderless photos.
- You can specify the print range and the amount of extension for borderless printing in the Print Settings dialog box. To display the Print Settings dialog box, click Advanced....

### 3. Click Print.

### Note

- See Help for details on the Print Settings screen.



[Page top↑](#)


## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Calendars

Easy-PhotoPrint EX

# Printing Calendars

Easy-PhotoPrint EX allows you to create your own calendar using your favorite photos.

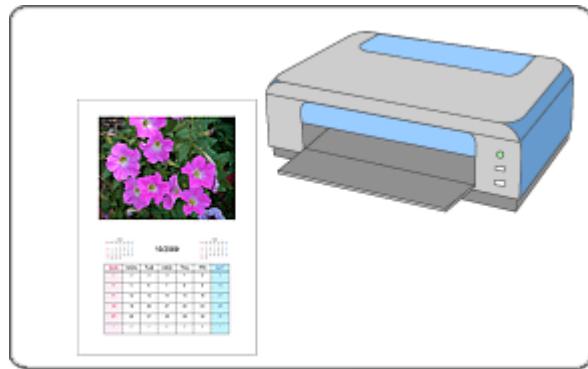

## Steps

1. Starting Easy-PhotoPrint EX
2. Selecting the Paper and Layout
3. Selecting a Photo
4. Editing
5. Printing

## Try This

- ▶ Correcting and Enhancing Photos
- ▶ Changing Layout
- ▶ Changing Background
- ▶ Adding Photos
- ▶ Swapping Positions of Photos
- ▶ Replacing Photos
- ▶ Changing Position, Angle and Size of Photos
- ▶ Cropping Photos
- ▶ Framing Photos
- ▶ Printing Dates on Photos
- ▶ Adding Text to Photos
- ▶ Setting Calendar Display
- ▶ Setting Holidays
- ▶ Saving
- ▶ Opening Saved Files

## Questions and Answers

- ▶ How Can I Move (or Copy) the Saved File?

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Calendars > Starting Easy-PhotoPrint EX


Easy-PhotoPrint EX



## Starting Easy-PhotoPrint EX

1. From the Start menu, select (All) Programs > Canon Utilities > Easy-PhotoPrint EX > Easy-PhotoPrint EX.

Easy-PhotoPrint EX starts and Menu appears.

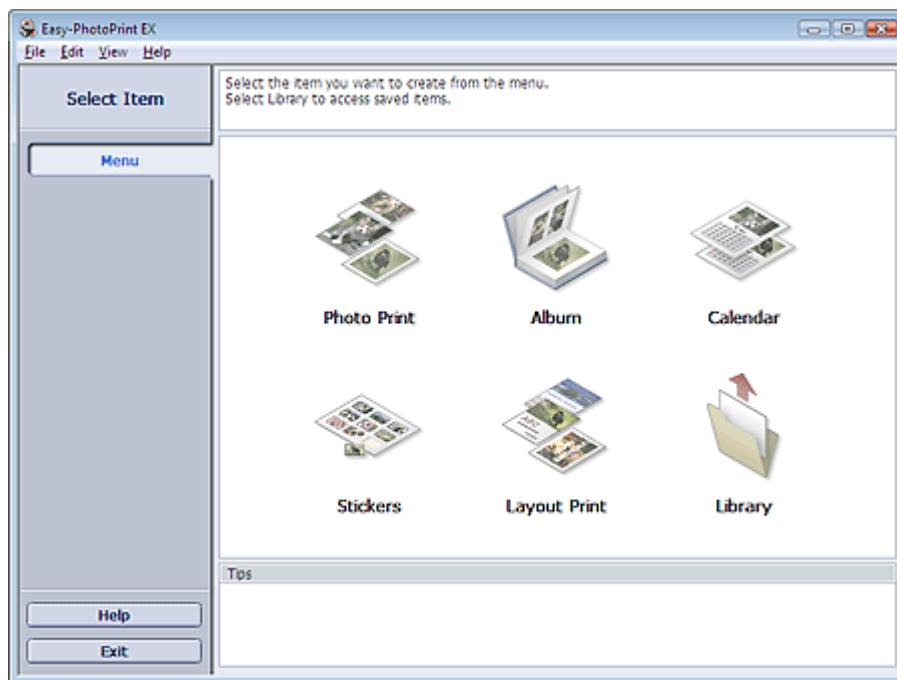

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Calendars > Selecting the Paper and Layout


Easy-PhotoPrint EX



## Selecting the Paper and Layout

### 1. Click Calendar from Menu.

The Page Setup screen appears.

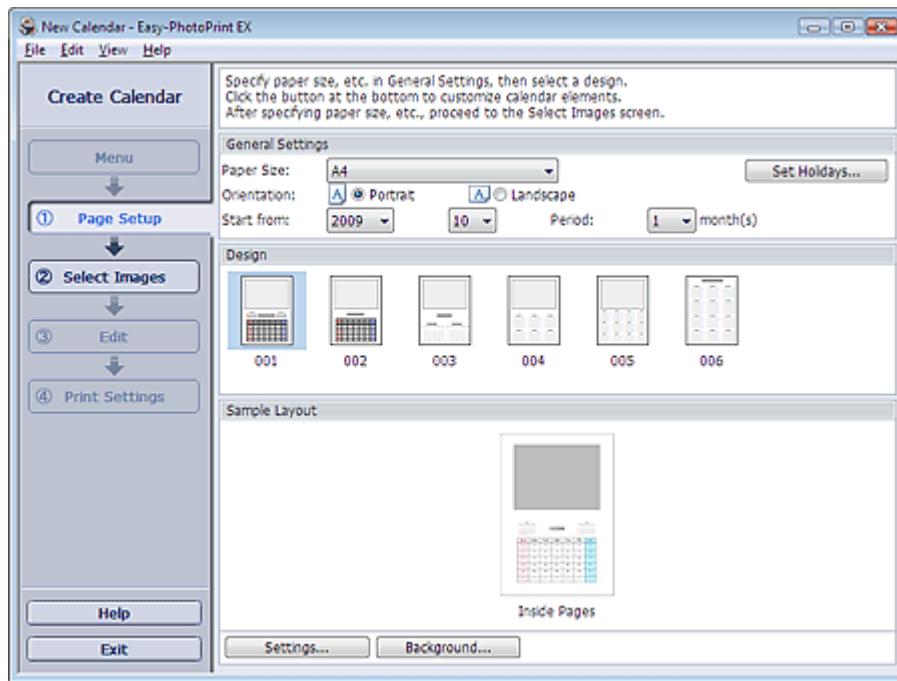

### 2. Set the following items in the General Settings section:

Paper Size

Orientation

Start from

Period

#### Note

- See Help on the paper size that can be selected.
- You can add holidays to your calendar.

➡ Setting Holidays

### 3. Select a layout for Design.

If necessary, make advanced settings on the calendar and set the background.

#### Note

- You can customize the calendar display (font colors of the dates and days of the week, position and size of the calendar, etc.).  
➡ Setting Calendar Display
- You can paint the background in a single color or paste an image file to it in the Change Background dialog box. To display the Change Background dialog box, click Background....

#### Note

- See Help for details on the Page Setup screen.



[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Calendars > Selecting a Photo

Easy-PhotoPrint EX



## Selecting a Photo

### 1. Click Select Images.

The Select Images screen appears.



### 2. Select the folder that contains the image you want to print from the folder tree area.

The images in the folder will be displayed as thumbnails (miniatures).

### 3. Select the image(s) you want to print and click (Import to Inside Pages).

The selected image(s) are displayed in the selected image area.

You can also select the image(s) you want to print by dragging them into the selected image area.

#### Note

- To delete an image in the selected image area, select the image you want to delete and click



(Delete Imported Image).



To delete all images from the selected image area, click (Delete All Imported Images).

#### Note

- See Help for details on the Select Images screen.



[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Calendars > Editing


Easy-PhotoPrint EX



## Editing

### 1. Click Edit.

The Edit screen appears.

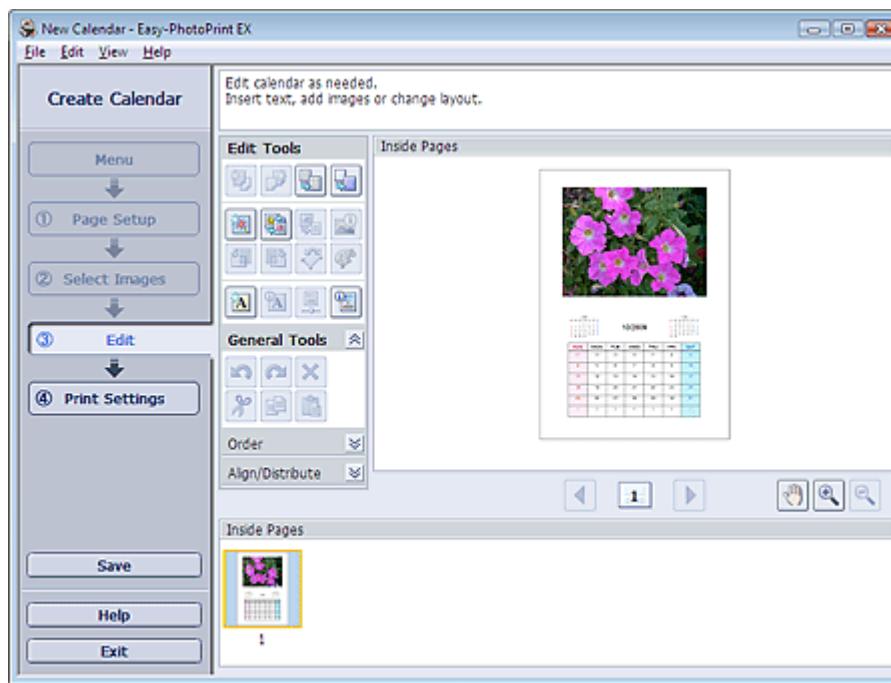

### 2. Edit the calendar if necessary.

- ▶ Changing Layout
- ▶ Changing Background
- ▶ Adding Photos
- ▶ Swapping Positions of Photos
- ▶ Replacing Photos
- ▶ Changing Position, Angle and Size of Photos
- ▶ Cropping Photos
- ▶ Framing Photos
- ▶ Printing Dates on Photos
- ▶ Adding Text to Photos
- ▶ Setting Calendar Display
- ▶ Setting Holidays

### Important

- The edit information will be discarded if you exit Easy-PhotoPrint EX without saving the edited calendar. It is recommended that you save the item if you want to edit it again.

- ▶ Saving

### Note

- See Help for details on the Edit screen.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Calendars > Printing


Easy-PhotoPrint EX



## Printing

### 1. Click Print Settings.

The Print Settings screen appears.

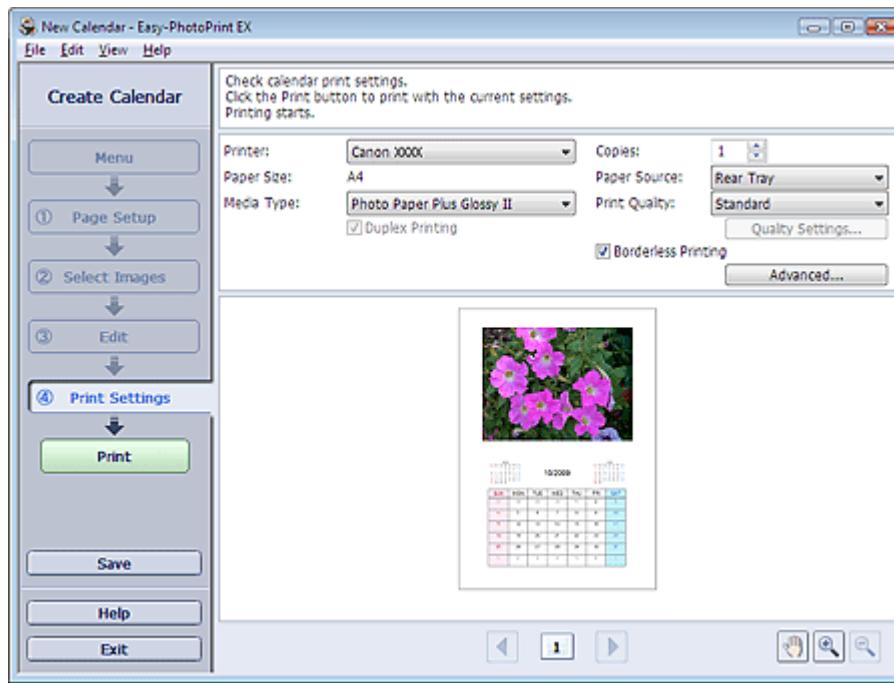

### 2. Set the following items according to the printer and paper to be used:

Printer

Media Type

Copies

Paper Source

Print Quality

Borderless Printing

### Note

- The media types may vary depending on the printer and the paper size.
- Duplex Printing appears if the selected printer and media type support duplex printing. Select this checkbox to print on both sides of the paper.
- Automatic appears if you select the Duplex Printing checkbox after selecting a printer that supports automatic duplex printing and media type that supports duplex printing. Select this checkbox to print on both sides of the paper automatically.
- The paper sources may vary depending on the printer and the media type.
- You can set a custom print quality level in the Print Quality Settings dialog box. To display the Print Quality Settings dialog box, select Custom for Print Quality and click Quality Settings....
- You can specify the print range and the amount of extension for borderless printing in the Print Settings dialog box. To display the Print Settings dialog box, click Advanced....

### 3. Click Print.

### Note

- See Help for details on the Print Settings screen.



[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Stickers

Easy-PhotoPrint EX

### Printing Stickers

You can print your favorite photos on compatible sticker sheets.



#### Steps

1. Starting Easy-PhotoPrint EX
2. Selecting the Paper and Layout
3. Selecting a Photo
4. Editing
5. Printing

#### Try This

- ▶ Correcting and Enhancing Photos
- ▶ Adding Photos
- ▶ Swapping Positions of Photos
- ▶ Replacing Photos
- ▶ Changing Position, Angle and Size of Photos
- ▶ Cropping Photos
- ▶ Framing Photos
- ▶ Adding Text to Photos
- ▶ Saving
- ▶ Opening Saved Files

#### Questions and Answers

- ▶ How Can I Move (or Copy) the Saved File?

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Stickers > Starting Easy-PhotoPrint EX


Easy-PhotoPrint EX



## Starting Easy-PhotoPrint EX

1. From the Start menu, select (All) Programs > Canon Utilities > Easy-PhotoPrint EX > Easy-PhotoPrint EX.

Easy-PhotoPrint EX starts and Menu appears.

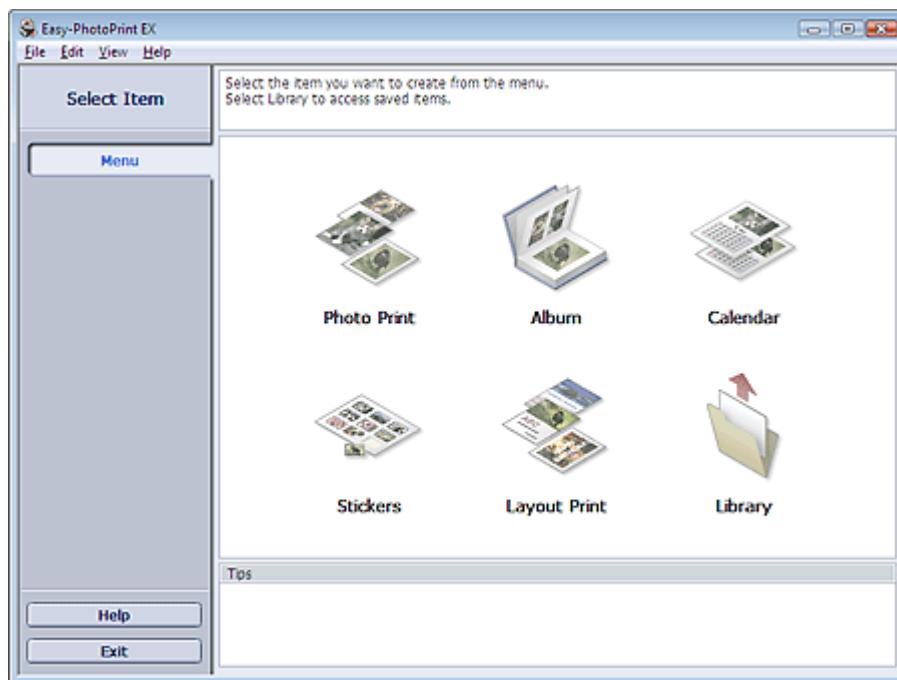

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Stickers > Selecting the Paper and Layout


Easy-PhotoPrint EX



## Selecting the Paper and Layout

### 1. Click Stickers from Menu.

The Page Setup screen appears.

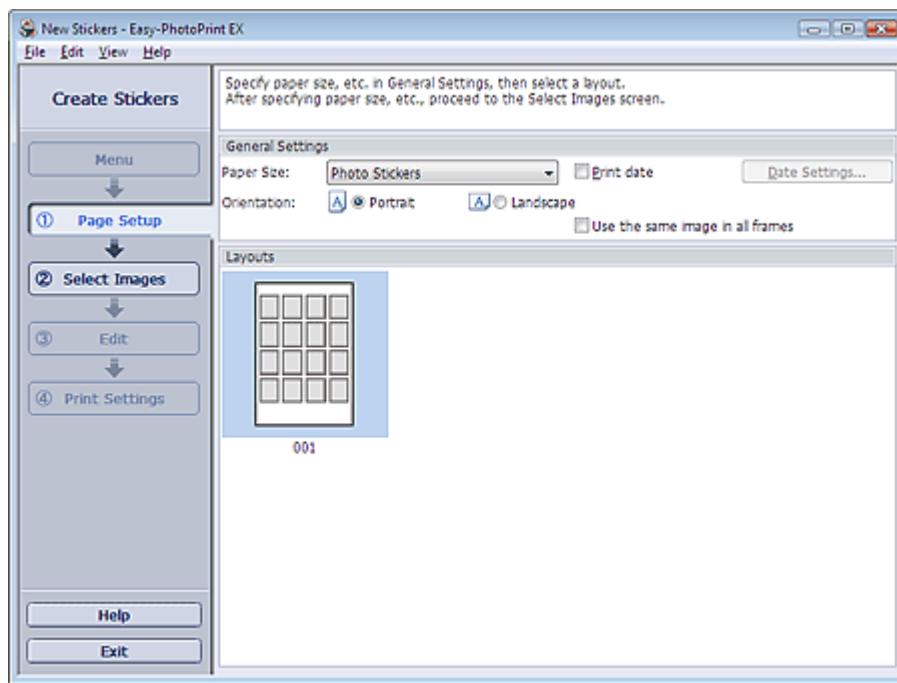

### 2. Set the following items in the General Settings section:

Paper Size

Orientation

Print date

Use the same image in all frames

### Note

- Paper sizes other than Photo Stickers cannot be selected.
- Select the Use the same image in all frames checkbox to use the same image in all the frames on the page.
- You can customize the date (position, size, color, etc.) in the Date Settings dialog box. To display the Date Settings dialog box, select the Print date checkbox and click Date Settings....

### Note

- See Help for details on the Page Setup screen.



[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Stickers > Selecting a Photo

Easy-PhotoPrint EX



## Selecting a Photo

### 1. Click Select Images.

The Select Images screen appears.



### 2. Select the folder that contains the image you want to print from the folder tree area.

The images in the folder will be displayed as thumbnails (miniatures).

### 3. Select the image(s) you want to print and click (Import to Inside Pages).

The selected image(s) are displayed in the selected image area.

You can also select the image(s) you want to print by dragging them into the selected image area.

### Note

- To delete an image in the selected image area, select the image you want to delete and click



(Delete Imported Image).



To delete all images from the selected image area, click (Delete All Imported Images).

### Note

- See Help for details on the Select Images screen.



[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Stickers > Editing


Easy-PhotoPrint EX



### Editing

#### 1. Click Edit.

The Edit screen appears.

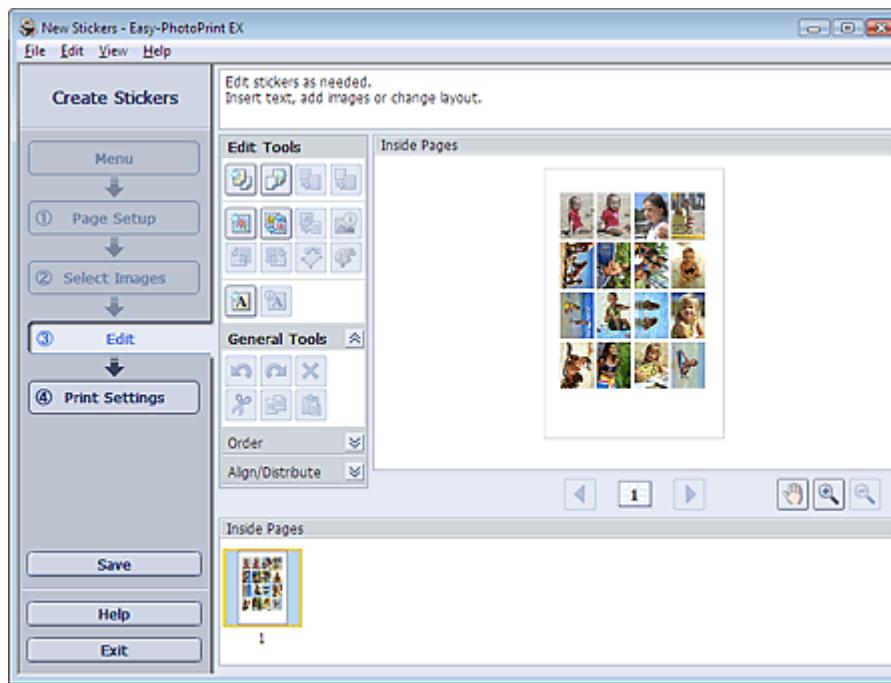

#### 2. Edit the stickers if necessary.

- ▶ Adding Photos
- ▶ Swapping Positions of Photos
- ▶ Replacing Photos
- ▶ Changing Position, Angle and Size of Photos
- ▶ Cropping Photos
- ▶ Printing Dates on Photos
- ▶ Adding Text to Photos

#### Important

- The edit information will be discarded if you exit Easy-PhotoPrint EX without saving the edited stickers. It is recommended that you save the item if you want to edit it again.
  - ▶ Saving

#### Note

- See Help for details on the Edit screen.



[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Stickers > Printing


Easy-PhotoPrint EX



## Printing

### 1. Click Print Settings.

The Print Settings screen appears.

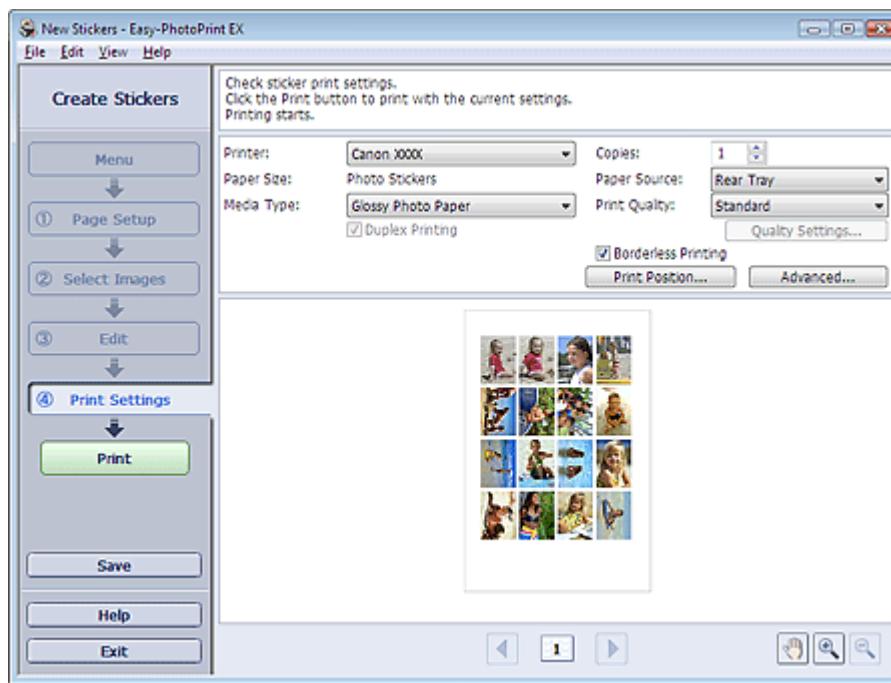

### 2. Set the following items according to the printer and paper to be used:

Printer

Media Type

Copies

Paper Source

Print Quality

Borderless Printing

#### Note

- The media types may vary depending on the printer and the paper size.
- The paper sources may vary depending on the printer and the media type.
- You can set a custom print quality level in the Print Quality Settings dialog box. To display the Print Quality Settings dialog box, select Custom for Print Quality and click Quality Settings....
- You can adjust the printing position in the Adjust Print Position dialog box. To display the Adjust Print Position dialog box, click Print Position....
- You can specify the print range and the amount of extension for borderless printing in the Print Settings dialog box. To display the Print Settings dialog box, click Advanced....

### 3. Click Print.

#### Note

- See Help for details on the Print Settings screen.



[Page top↑](#)


## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Layout

Easy-PhotoPrint EX

### Printing Layout

You can add text to your favorite photos and print them in a variety of layouts.

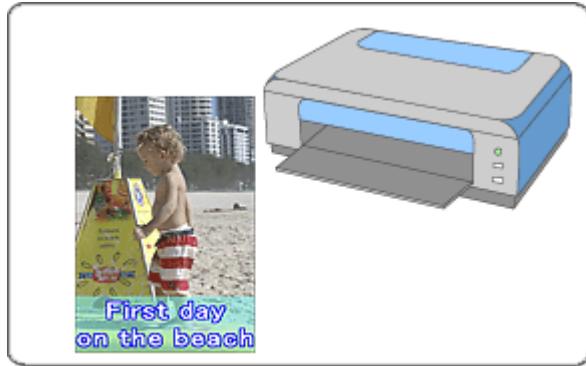

#### Steps

1. Starting Easy-PhotoPrint EX
2. Selecting the Paper and Layout
3. Selecting a Photo
4. Editing
5. Printing

#### Try This

- ▶ Correcting and Enhancing Photos
- ▶ Changing Layout
- ▶ Adding Photos
- ▶ Swapping Positions of Photos
- ▶ Replacing Photos
- ▶ Changing Position, Angle and Size of Photos
- ▶ Cropping Photos
- ▶ Printing Dates on Photos
- ▶ Adding Text to Photos
- ▶ Saving
- ▶ Opening Saved Files

#### Questions and Answers

- ▶ How Can I Move (or Copy) the Saved File?

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Layout > Starting Easy-PhotoPrint EX


Easy-PhotoPrint EX



### Starting Easy-PhotoPrint EX

1. From the Start menu, select (All) Programs > Canon Utilities > Easy-PhotoPrint EX > Easy-PhotoPrint EX.

Easy-PhotoPrint EX starts and Menu appears.

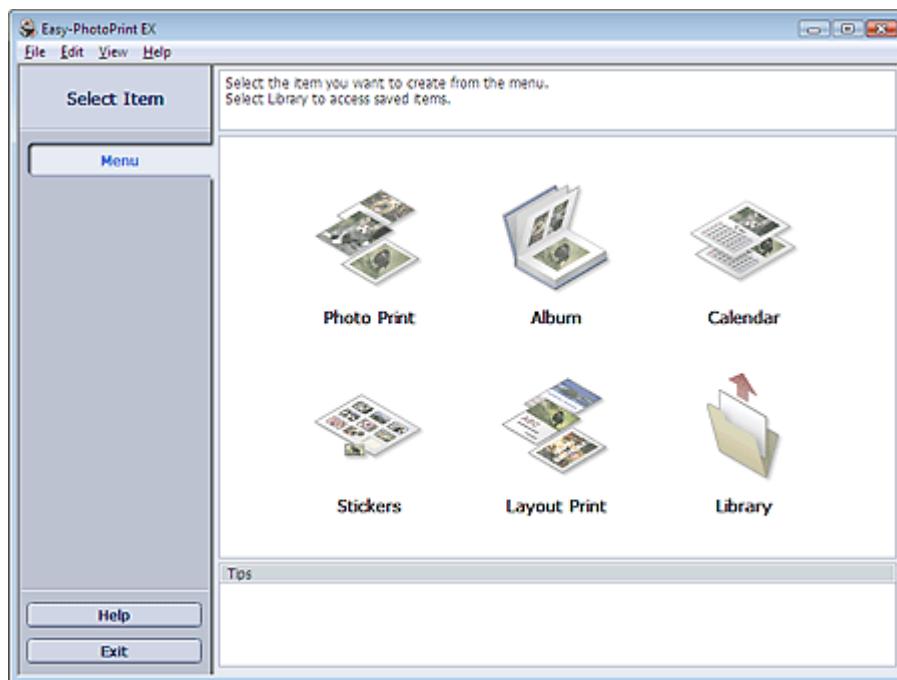

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Layout > Selecting the Paper and Layout


Easy-PhotoPrint EX



## Selecting the Paper and Layout

### 1. Click Layout Print from Menu.

The Page Setup screen appears.

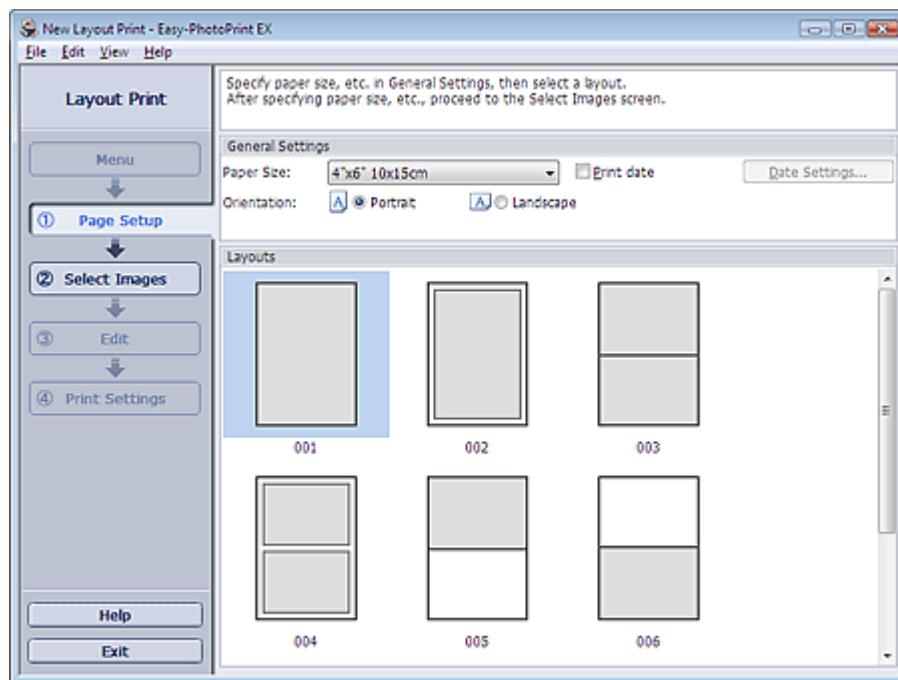

### 2. Set the following items in the General Settings section:

Paper Size

Orientation

Print date

#### Note

- See Help on the paper size that can be selected.
- You can customize the date (position, size, color, etc.) in the Date Settings dialog box. To display the Date Settings dialog box, select the Print date checkbox and click Date Settings....

### 3. Select a layout from Layouts.

#### Note

- The layouts may vary depending on the Orientation.

#### Note

- See Help for details on the Page Setup screen.



[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Layout > Selecting a Photo

Easy-PhotoPrint EX



## Selecting a Photo

### 1. Click Select Images.

The Select Images screen appears.



### 2. Select the folder that contains the image you want to print from the folder tree area.

The images in the folder will be displayed as thumbnails (miniatures).

### 3. Select the image(s) you want to print and click (Import to Inside Pages).

The selected image(s) are displayed in the selected image area.

You can also select the image(s) you want to print by dragging them into the selected image area.

### Note

- To delete an image in the selected image area, select the image you want to delete and click



(Delete Imported Image).

To delete all images from the selected image area, click  (Delete All Imported Images).

### Note

- See Help for details on the Select Images screen.



[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Layout > Editing


Easy-PhotoPrint EX



## Editing

### 1. Click Edit.

The Edit screen appears.

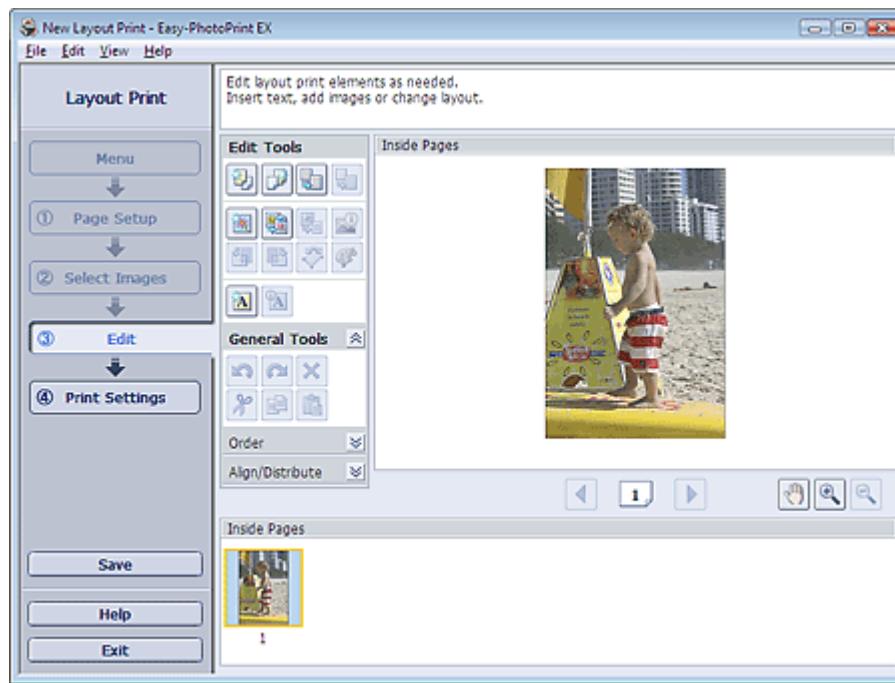

### 2. Edit the layout if necessary.

- ▶ Changing Layout
- ▶ Adding Photos
- ▶ Swapping Positions of Photos
- ▶ Replacing Photos
- ▶ Changing Position, Angle and Size of Photos
- ▶ Cropping Photos
- ▶ Printing Dates on Photos
- ▶ Adding Text to Photos

### Important

- The edit information will be discarded if you exit Easy-PhotoPrint EX without saving the edited layout. It is recommended that you save the item if you want to edit it again.  
▶ Saving

### Note

- See Help for details on the Edit screen.



[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Printing Layout > Printing


Easy-PhotoPrint EX



## Printing

### 1. Click Print Settings.

The Print Settings screen appears.

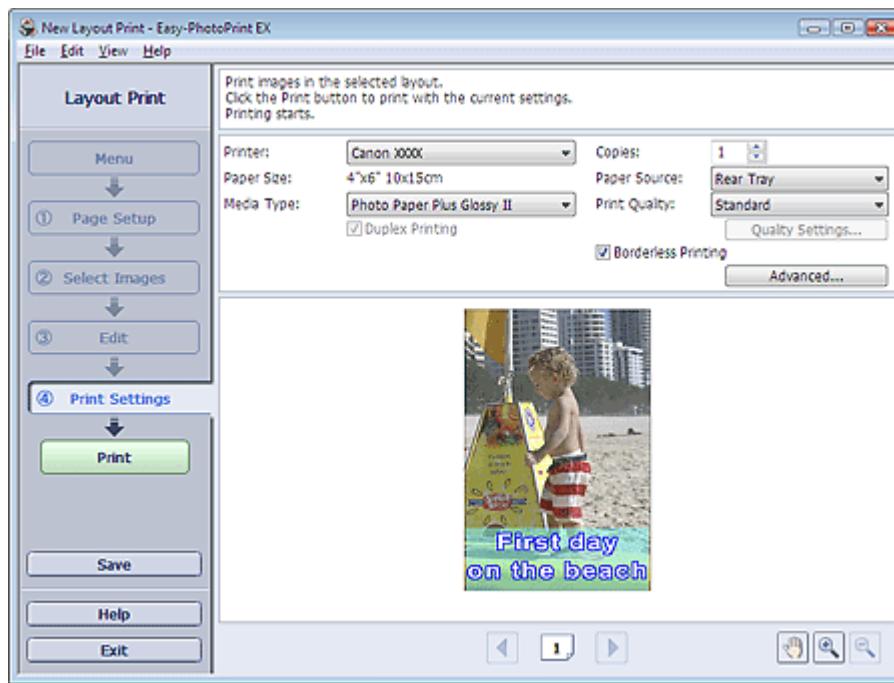

### 2. Set the following items according to the printer and paper to be used:

Printer

Media Type

Copies

Paper Source

Print Quality

Borderless Printing

### Note

- The media types may vary depending on the printer and the paper size.
- Duplex Printing appears if the selected printer and media type support duplex printing. Select this checkbox to print on both sides of the paper.
- Automatic appears if you select the Duplex Printing checkbox after selecting a printer that supports automatic duplex printing and media type that supports duplex printing. Select this checkbox to print on both sides of the paper automatically.
- The paper sources may vary depending on the printer and the media type.
- You can set a custom print quality level in the Print Quality Settings dialog box. To display the Print Quality Settings dialog box, select Custom for Print Quality and click Quality Settings....
- Select the Borderless Printing checkbox to print borderless photos.
- You can specify the print range and the amount of extension for borderless printing in the Print Settings dialog box. To display the Print Settings dialog box, click Advanced....

### 3. Click Print.

### Note

- See Help for details on the Print Settings screen.



[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Correcting and Enhancing Photos

Easy-PhotoPrint EX

# Correcting and Enhancing Photos

You can correct and enhance images.

Click  (Correct/Enhance Images) in the Select Images or Edit screen, or in the Layout/Print screen of Photo Print. You can make the following corrections and enhancements in the Correct/Enhance Images window.

### Important

- For Photo Print, if you select Enable ICC Profile in the Advanced tab of the Preferences dialog box, you cannot correct/enhance images.

### Note

- See "Correct/Enhance Images Window" for details on the Correct/Enhance Images window.

## Auto Photo Fix

This function will automatically analyze the captured scene and apply suitable corrections.

▶ Using the Auto Photo Fix Function

## Red-Eye Correction Function

You can correct red eyes caused by a camera flash.

▶ Using the Red-Eye Correction Function

## Face Brightener Function

You can brighten dark faces caused by bright background.

▶ Using the Face Brightener Function

## Face Sharpener Function

You can sharpen out-of-focus faces in a photo.

▶ Using the Face Sharpener Function

## Digital Face Smoothing Function

You can enhance skin beautifully by removing blemishes and wrinkles.

▶ Using the Digital Face Smoothing Function

## Blemish Remover Function

You can remove moles.

▶ Using the Blemish Remover Function

## Image Adjustment

You can adjust brightness and contrast or sharpen the entire image.

You can also blur the outline of the subjects or remove the base color.

▶ Adjusting Images

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Correcting and Enhancing Photos > Using the Auto Photo Fix Function

Easy-PhotoPrint EX

## Using the Auto Photo Fix Function


Apply optimum corrections automatically to the photos used for an album, calendar, etc.

### Important

- The Auto Photo Fix function is not available for Photo Print. Photo Print allows you to automatically apply suitable corrections to all photos when printing, by selecting Auto Photo Fix in Color correction for printing on the Advanced tab of the Preferences dialog box. To display the Preferences dialog box, click  (Settings) in the Layout/Print screen or select Preferences... from the File menu.
- Once image is corrected with Auto Photo Fix and saved, it cannot be corrected again with Auto Photo Fix.  
Also, Auto Photo Fix may not be available for images edited using an application, digital camera, etc. manufactured by other companies.

1. Select photos in the Select Images screen, then click  (Correct/Enhance Images).

The Correct/Enhance Images window appears.

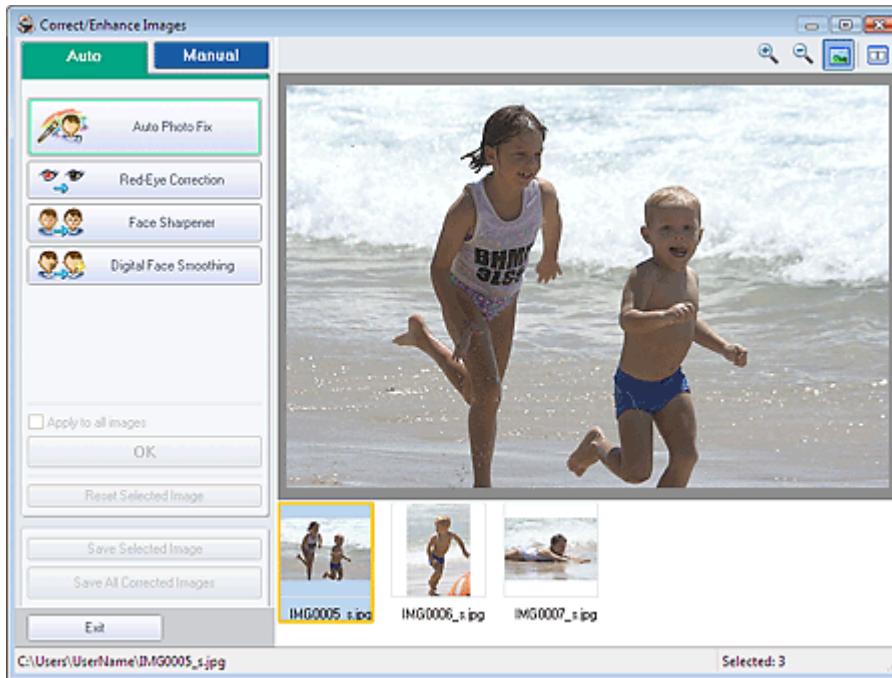

### Note

- You can also display the Correct/Enhance Images window by clicking  (Correct/Enhance Images) in the Layout/Print or Edit screen. In that case, only the image displayed in Preview can be corrected/enhanced.
- See "Correct/Enhance Images Window" for details on the Correct/Enhance Images window.

2. Select the image you want to correct from the list displayed in the lower part of the Correct/Enhance Images window.

The image appears in Preview.

### Note

- If only one image is selected, the thumbnail does not appear below Preview.

3. Make sure that Auto is selected.

**4. Click Auto Photo Fix, then click OK.**

The entire photo is corrected automatically and the  (Correction/Enhancement) mark appears on the upper left of the image.

 **Note**

- Click  (Compare) to display the images before and after the correction side by side so that you can compare and check the result.
- Click Reset Selected Image to undo the correction operation.
- If you want to apply the correction to all the selected images at once, select the Apply to all images checkbox.

**5. Click Save Selected Image or Save All Corrected Images.**

You can save corrected images as new files.

 **Note**

- To save only the image you like, click Save Selected Image. To save all images, click Save All Corrected Images.
- Only JPEG/Exif file format is available for corrected images.

**6. Click Exit.** **Important**

- The corrections will be lost if you exit before saving corrected images.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Correcting and Enhancing Photos > Using the Red-Eye Correction Function

Easy-PhotoPrint EX

## Using the Red-Eye Correction Function

You can correct red eyes caused by a camera flash.


You can perform the Red-Eye Correction function either automatically or manually.

### Note

- Photo Print allows you to automatically correct red eyes when printing. To correct automatically, select Enable Auto Photo Fix in Color correction for printing on the Advanced tab of the Preferences dialog box and select the Enable Red-Eye Correction checkbox.

1. Select photos in the Select Images screen, then click  (Correct/Enhance Images).

The Correct/Enhance Images window appears.

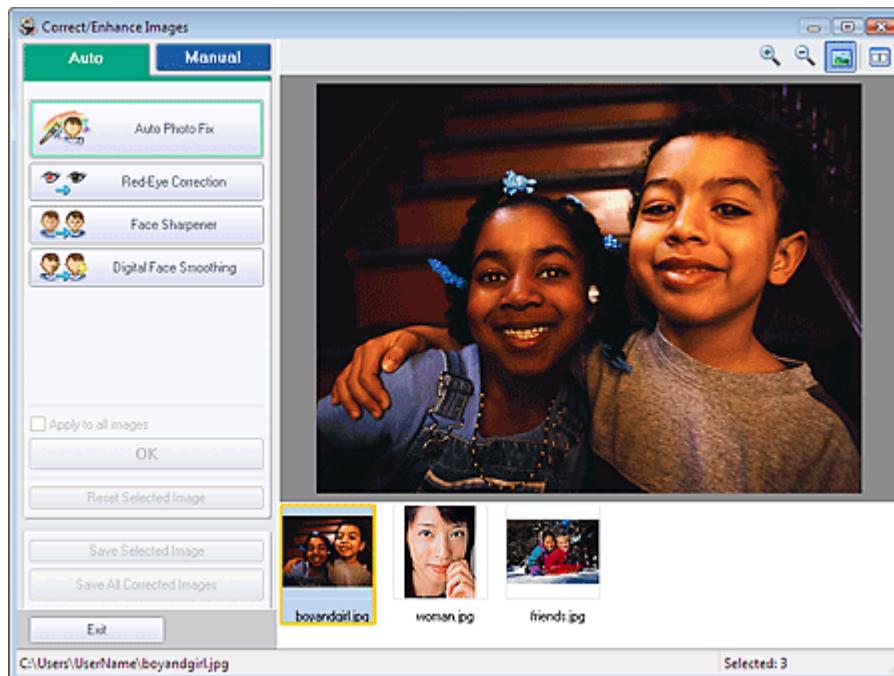

### Note

- You can also display the Correct/Enhance Images window by clicking  (Correct/Enhance Images) in the Layout/Print or Edit screen. In that case, only the image displayed in Preview can be corrected/enhanced.
- See "[Correct/Enhance Images Window](#)" for details on the Correct/Enhance Images window.

2. Select the image you want to correct from the list displayed in the lower part of the Correct/Enhance Images window.

The image appears in Preview.

### Note

- If only one image is selected, the thumbnail does not appear below Preview.

### Auto Correction

3. Make sure that Auto is selected.

**4. Click Red-Eye Correction.****5. Click OK.**

Red eyes are corrected and the  (Correction/Enhancement) mark appears on the upper left of the image.

**Important**


- Areas other than the eyes may be corrected depending on the image.

**Note**

- Click  (Compare) to display the images before and after the correction side by side so that you can compare and check the result.
- Click Reset Selected Image to undo the correction operation.
- If you want to apply the correction to all the selected images at once, select the Apply to all images checkbox.

**Manual Correction****3. Click Manual, then click Correct/Enhance.****4. Click Red-Eye Correction.**

Move the cursor over the image. The shape of the cursor changes to  (Paintbrush).

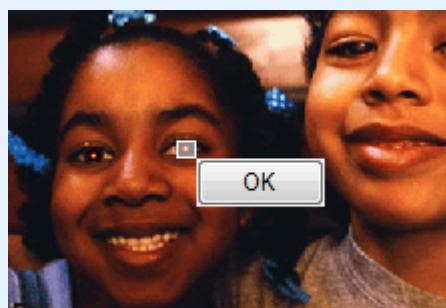**5. Drag to select the red area you want to correct, then click OK that appears over the image.**

Red eye is corrected and the  (Correction/Enhancement) mark appears on the upper left of the image.

**Note**

- Effect levels can be changed using the slider below Red-Eye Correction.
- Click Undo to undo the preceding correction operation.

## 6. Click Save Selected Image or Save All Corrected Images.

You can save corrected images as new files.

### Note

- To save only the image you like, click Save Selected Image. To save all images, click Save All Corrected Images.
- Only JPEG/Exif file format is available for corrected images.

## 7. Click Exit.

### Important

- The corrections will be lost if you exit before saving corrected images.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Correcting and Enhancing Photos > Using the Face Brightener Function


Easy-PhotoPrint EX

# Using the Face Brightener Function

You can brighten dark faces caused by bright background.

1. Select photos in the Select Images screen, then click  (Correct/Enhance Images).

The Correct/Enhance Images window appears.

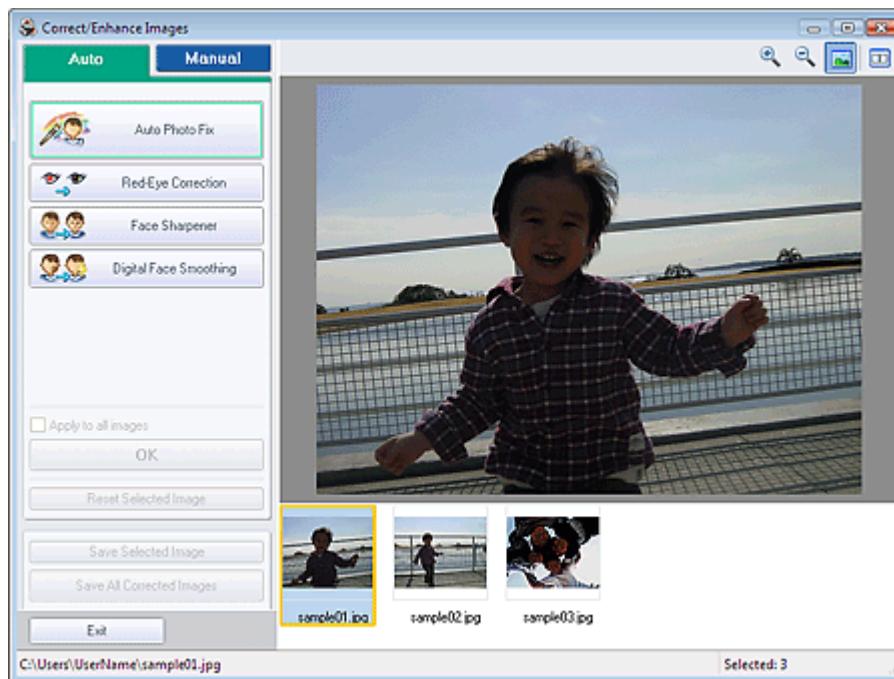

### Note

- You can also display the Correct/Enhance Images window by clicking  (Correct/Enhance Images) in the Layout/Print or Edit screen. In that case, only the image displayed in Preview can be corrected/enhanced.
- See "[Correct/Enhance Images Window](#)" for details on the Correct/Enhance Images window.

2. Select the image you want to correct from the list displayed in the lower part of the Correct/Enhance Images window.

The image appears in Preview.

### Note

- If only one image is selected, the thumbnail does not appear below Preview.


3. Click Manual, then click Correct/Enhance.

4. Click Face Brightener.

Move the cursor over the image. The shape of the cursor changes to  (Cross).



5. Drag to select the area you want to correct, then click OK that appears over the image.

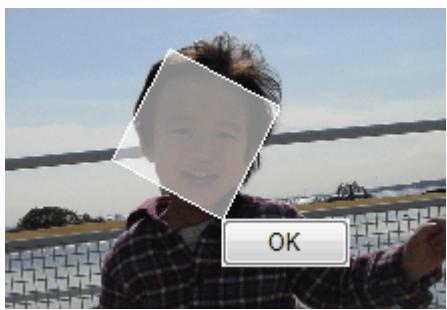

The entire image is corrected so that the selected area containing the face becomes brighter, and the (Correction/Enhancement) mark appears on the upper left of the image.

#### Note

- You can also drag to rotate the selected area.
- Effect levels can be changed using the slider below Face Brightener.
- Click Undo to undo the preceding correction operation.

6. Click Save Selected Image or Save All Corrected Images.

You can save corrected images as new files.

#### Note

- To save only the image you like, click Save Selected Image. To save all images, click Save All Corrected Images.
- Only JPEG/Exif file format is available for corrected images.

7. Click Exit.

#### Important

- The corrections will be lost if you exit before saving corrected images.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Correcting and Enhancing Photos > Using the Face Sharpener Function

Easy-PhotoPrint EX


## Using the Face Sharpener Function

You can sharpen out-of-focus faces in a photo.

You can perform the Face Sharpener function either automatically or manually.

1. Select photos in the Select Images screen, then click  (Correct/Enhance Images).

The Correct/Enhance Images window appears.

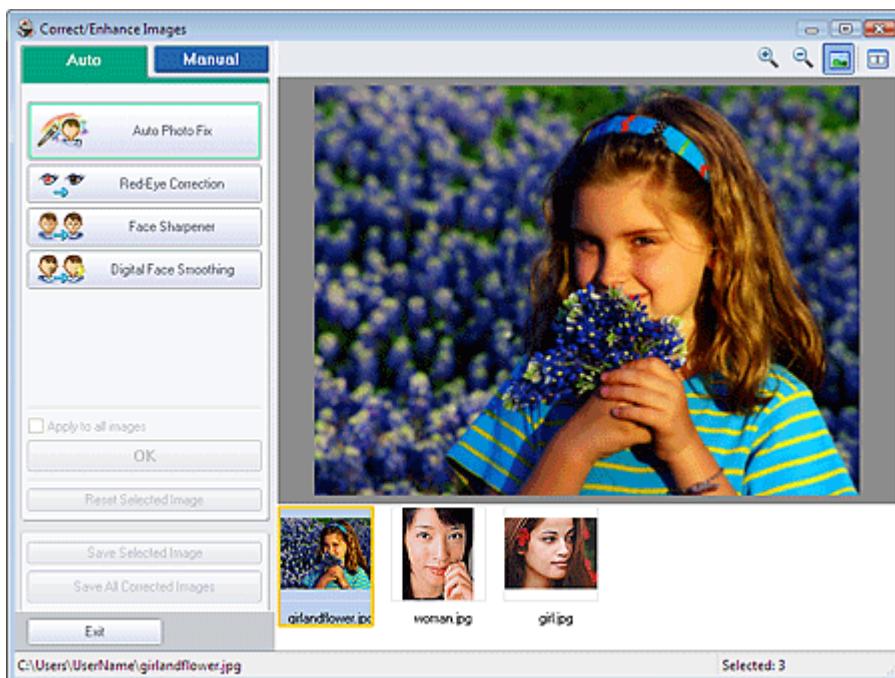

### Note

- You can also display the Correct/Enhance Images window by clicking  (Correct/Enhance Images) in the Layout/Print or Edit screen. In that case, only the image displayed in Preview can be corrected/enhanced.
- See "Correct/Enhance Images Window" for details on the Correct/Enhance Images window.

2. Select the image you want to correct from the list displayed in the lower part of the Correct/Enhance Images window.

The image appears in Preview.

### Note

- If only one image is selected, the thumbnail does not appear below Preview.

### Auto Correction

3. Make sure that Auto is selected.

4. Click Face Sharpener.

5. Click OK.

The face is sharpened and the  (Correction/Enhancement) mark appears on the upper left of the image.

### Note

- Effect levels can be changed using the slider below Face Sharpener.
- Click  (Compare) to display the images before and after the correction side by side so that you can compare and check the result.
- Click Reset Selected Image to undo the correction operation.
- If you want to apply the correction to all the selected images at once, select the Apply to all images checkbox.

### Manual Correction

**3.** Click Manual, then click Correct/Enhance.

**4.** Click Face Sharpener.

Move the cursor over the image. The shape of the cursor changes to  (Cross).



**5.** Drag to select the area you want to correct, then click OK that appears over the image.



The facial area in and around the selected area is sharpened and the  (Correction/Enhancement) mark appears on the upper left of the image.

### Note

- You can also drag to rotate the selected area.
- Effect levels can be changed using the slider below Face Sharpener.
- Click Undo to undo the preceding correction operation.

**6.** Click Save Selected Image or Save All Corrected Images.

You can save corrected images as new files.

 **Note**

- To save only the image you like, click Save Selected Image. To save all images, click Save All Corrected Images.
- Only JPEG/Exif file format is available for corrected images.

**7. Click Exit.** **Important**

- The corrections will be lost if you exit before saving corrected images.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Correcting and Enhancing Photos > Using the Digital Face Smoothing Function

Easy-PhotoPrint EX


# Using the Digital Face Smoothing Function

You can enhance skin beautifully by removing blemishes and wrinkles.

You can perform the Digital Face Smoothing function either automatically or manually.

1. Select photos in the Select Images screen, then click  (Correct/Enhance Images).

The Correct/Enhance Images window appears.

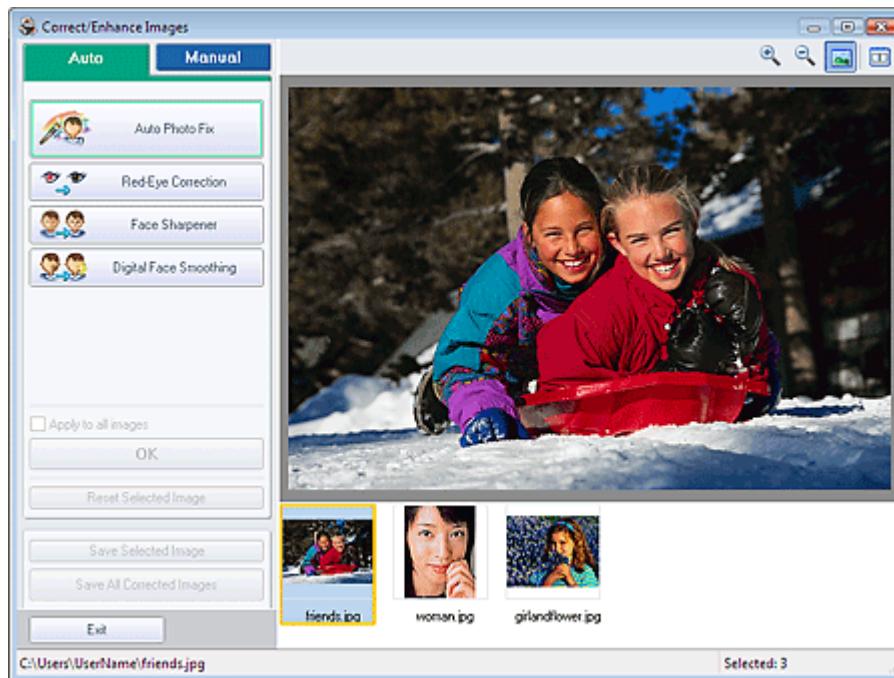

### Note

- You can also display the Correct/Enhance Images window by clicking  (Correct/Enhance Images) in the Layout/Print or Edit screen. In that case, only the image displayed in Preview can be corrected/enhanced.
- See "Correct/Enhance Images Window" for details on the Correct/Enhance Images window.

2. Select the image you want to enhance from the list displayed in the lower part of the Correct/Enhance Images window.

The image appears in Preview.

### Note

- If only one image is selected, the thumbnail does not appear below Preview.

## Auto Enhancement

3. Make sure that Auto is selected.
4. Click Digital Face Smoothing.
5. Click OK.

Skin is enhanced beautifully and the  (Correction/Enhancement) mark appears on the upper left of the image.

### Note

- Effect levels can be changed using the slider below Digital Face Smoothing.
- Click  (Compare) to display the images before and after the enhancement side by side so that you can compare and check the result.
- Click Reset Selected Image to undo the enhancement operation.
- If you want to apply the enhancement to all the selected images at once, select the Apply to all images checkbox.

### Manual Enhancement


3. Click Manual, then click Correct/Enhance.

4. Click Digital Face Smoothing.

Move the cursor over the image. The shape of the cursor changes to  (Cross).



5. Drag to select the area you want to enhance, then click OK that appears over the image.

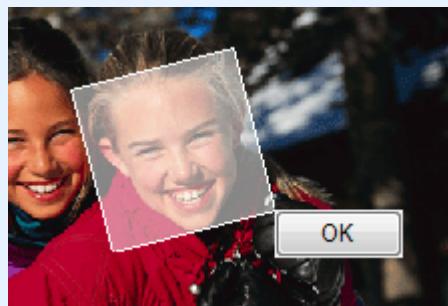

Skin in and around the selected area is enhanced beautifully and the  (Correction/Enhancement) mark appears on the upper left of the image.

### Note

- You can also drag to rotate the selected area.
- Effect levels can be changed using the slider below Digital Face Smoothing.
- Click Undo to undo the preceding enhancement operation.

6. Click Save Selected Image or Save All Corrected Images.

You can save enhanced images as new files.

 **Note**

- To save only the image you like, click Save Selected Image. To save all images, click Save All Corrected Images.
- Only JPEG/Exif file format is available for enhanced images.

**7. Click Exit.** **Important**

- The enhancements will be lost if you exit before saving enhanced images.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Correcting and Enhancing Photos > Using the Blemish Remover Function


Easy-PhotoPrint EX

## Using the Blemish Remover Function

You can remove moles.

1. Select photos in the Select Images screen, then click  (Correct/Enhance Images).

The Correct/Enhance Images window appears.

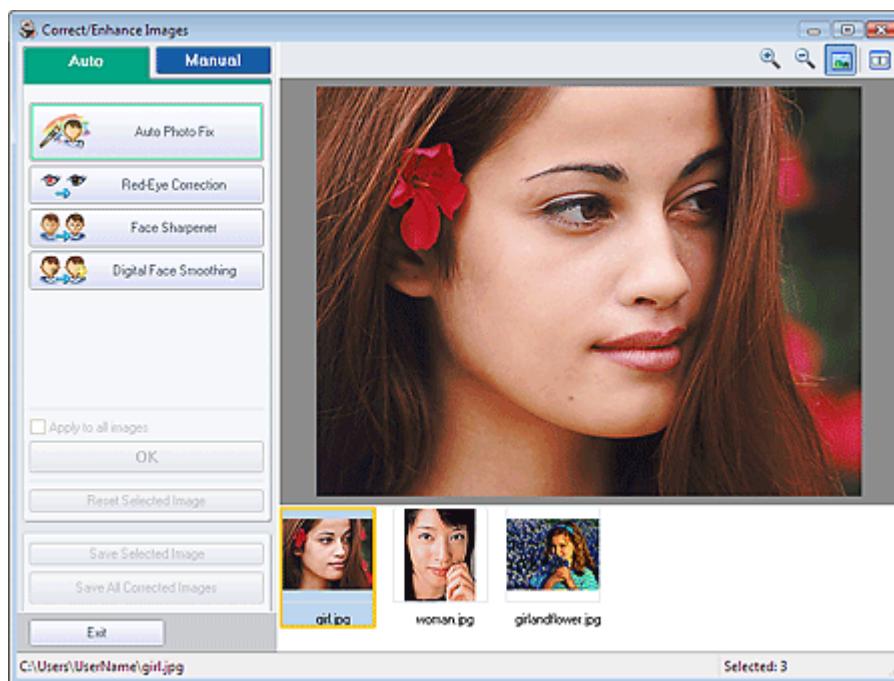

### Note

- You can also display the Correct/Enhance Images window by clicking  (Correct/Enhance Images) in the Layout/Print or Edit screen. In that case, only the image displayed in Preview can be corrected/enhanced.
- See "[Correct/Enhance Images Window](#)" for details on the Correct/Enhance Images window.

2. Select the image you want to enhance from the list displayed in the lower part of the Correct/Enhance Images window.

The image appears in Preview.


### Note

- If only one image is selected, the thumbnail does not appear below Preview.


3. Click Manual, then click Correct/Enhance.

4. Click Blemish Remover.

Move the cursor over the image. The shape of the cursor changes to  (Cross).

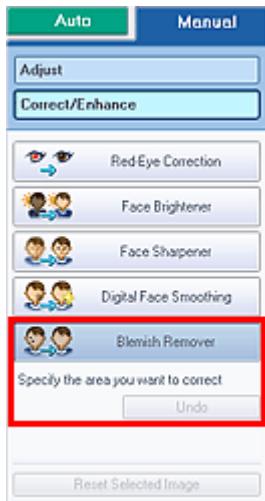

5. Drag to select the area you want to enhance, then click OK that appears over the image.

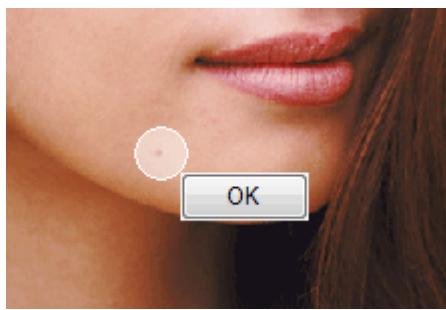

Moles in and around the selected area are removed and the  (Correction/Enhancement) mark appears on the upper left of the image.

#### Note

- Click Undo to undo the preceding enhancement operation.

6. Click Save Selected Image or Save All Corrected Images.

You can save enhanced images as new files.

#### Note

- To save only the image you like, click Save Selected Image. To save all images, click Save All Corrected Images.
- Only JPEG/Exif file format is available for enhanced images.

7. Click Exit.

#### Important

- The enhancements will be lost if you exit before saving enhanced images.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Correcting and Enhancing Photos > Adjusting Images


Easy-PhotoPrint EX

### Adjusting Images

You can make fine adjustments to the overall brightness, contrast, etc. of images.

1. Select photos in the Select Images screen, then click  (Correct/Enhance Images).

The Correct/Enhance Images window appears.

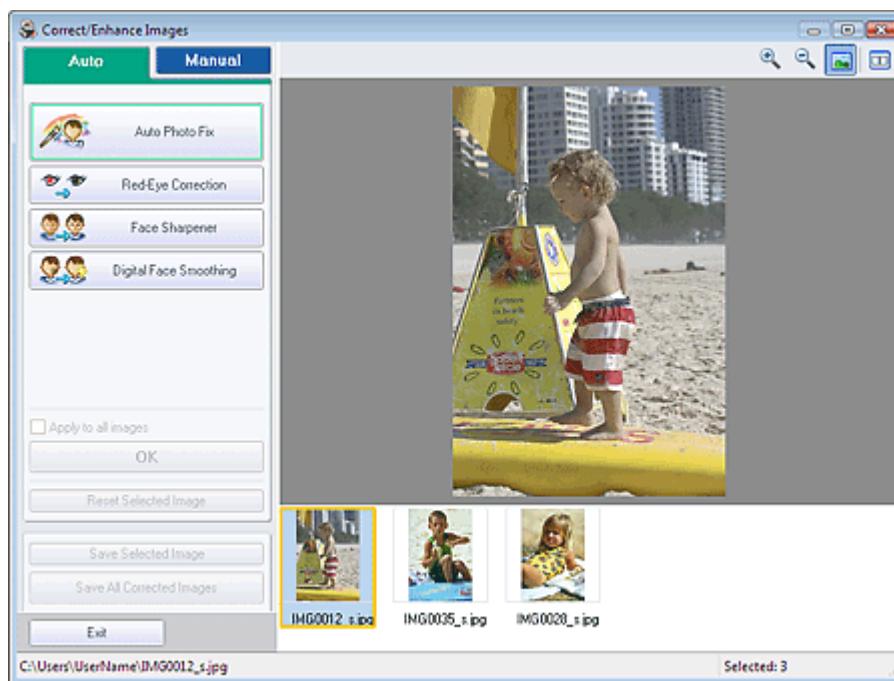

#### Note

- You can also display the Correct/Enhance Images window by clicking  (Correct/Enhance Images) in the Layout/Print or Edit screen. In that case, only the image displayed in Preview can be corrected/enhanced.
- See "[Correct/Enhance Images Window](#)" for details on the Correct/Enhance Images window.

2. Select the image you want to adjust from the list displayed in the lower part of the Correct/Enhance Images window.

The image appears in Preview.

#### Note

- If only one image is selected, the thumbnail does not appear below Preview.

3. Click Manual, then click Adjust.

4. Move the slider of the item you want to adjust and set the effect level.

The following adjustments are available:


Brightness

Contrast

Sharpness

Blur

Show-through Removal

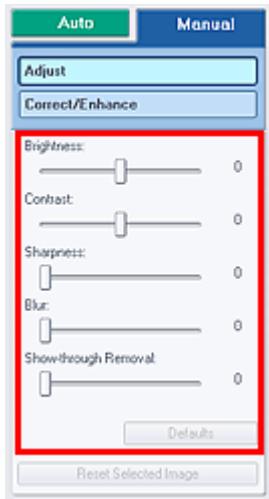

### Note

- Click Defaults to reset all adjustments.

## 5. Click Save Selected Image or Save All Corrected Images.

You can save adjusted images as new files.

### Note

- To save only the image you like, click Save Selected Image. To save all images, click Save All Corrected Images.
- Only JPEG/Exif file format is available for adjusted images.

## 6. Click Exit.

### Important

- The adjustments will be lost if you exit before saving adjusted images.

[Page top↑](#)

## Advanced Guide


Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Correcting and Enhancing Photos > Correct/Enhance Images Window

Easy-PhotoPrint EX

## Correct/Enhance Images Window

You can correct/enhance images in this window.

To display the Correct/Enhance Images window, click  (Correct/Enhance Images) in the Select Images or Edit screen, or in the Layout/Print screen of Photo Print.

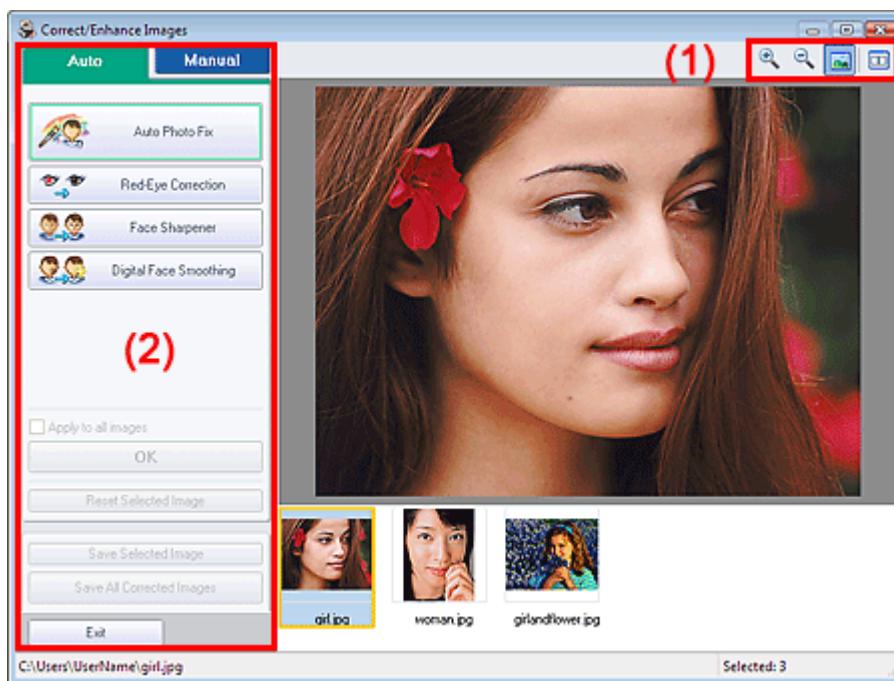

### (1)Toolbar

#### Toolbar



Displays the enlarged or reduced preview of the page.




Displays the entire image in Preview.



Displays the Compare Images window. You can compare the images before and after the correction/enhancement side by side.

The image before the correction/enhancement is displayed on the left, and the image after the correction/enhancement is displayed on the right.

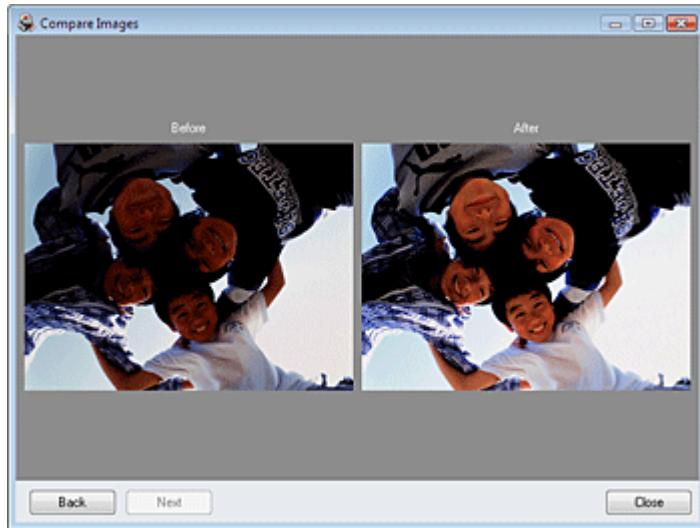


## (2) Task Area

Available tasks and settings may vary between the Auto and Manual tabs.

Click Auto or Manual to display the corresponding tab.

### Auto Tab

Select to correct automatically.

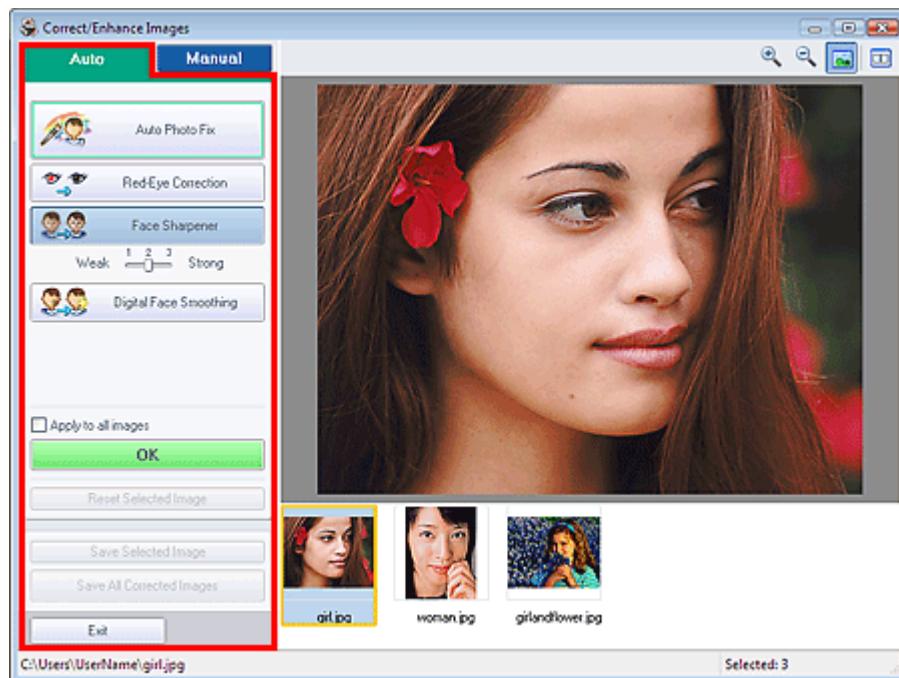

#### Auto Photo Fix

Applies automatic corrections suitable for photos.

#### Important

- The Auto Photo Fix function is not available for Photo Print. Photo Print allows you to automatically apply suitable corrections to all photos when printing. Select this option in Color correction for printing on the Advanced tab of the Preferences dialog box. To display the Preferences dialog box, click (Settings) in the Layout/Print screen or select Preferences... from the File menu.

#### Red-Eye Correction

Corrects red eyes.

#### Note

- For Photo Print, you can also correct red eyes by selecting Enable Auto Photo Fix in Color correction for printing on the Advanced tab of the Preferences dialog box and selecting the

Enable Red-Eye Correction checkbox.

### Face Sharpener

Sharpens out-of-focus faces.

You can adjust the effect level using the slider.

### Digital Face Smoothing

Enhances skin beautifully by removing blemishes and wrinkles.

You can adjust the effect level using the slider.

### Apply to all images

Automatically corrects all the images displayed in the list.

### OK

Applies the selected effect to the selected image or all images.

### Reset Selected Image

Cancels all corrections and enhancements applied to the selected image.

### Save Selected Image

Saves the selected image in the list that applied corrections and enhancements.

### Save All Corrected Images

Saves all the images that applied corrections and enhancements displayed in the list.

### Exit

Click to close the Correct/Enhance Images window.


## Manual Tab

Select to correct manually.

Use Adjust to adjust brightness and contrast, or to sharpen the entire image.

Use Correct/Enhance to correct/enhance specific areas.

### Adjust

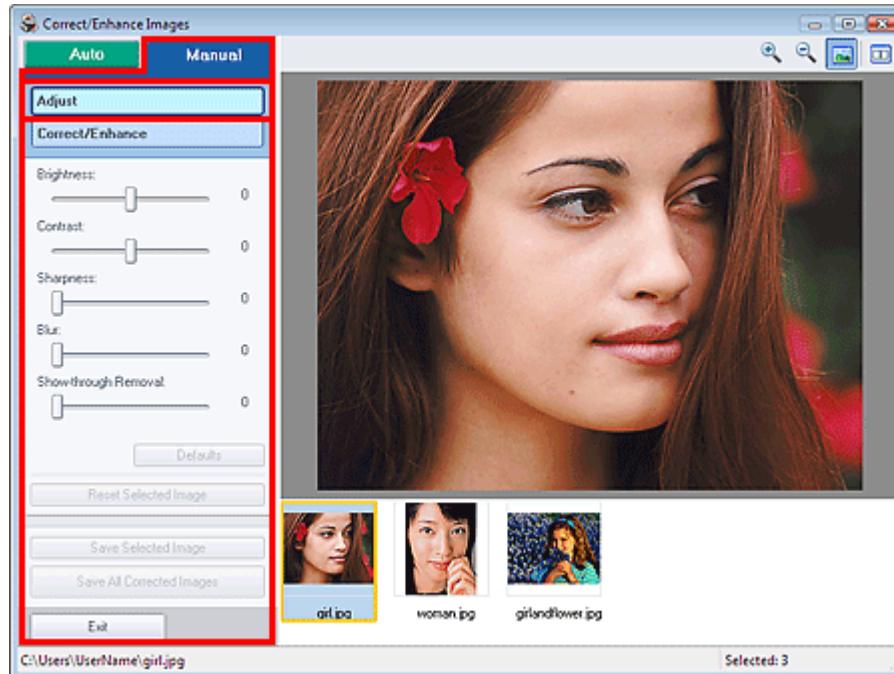

### Brightness

Adjusts the overall image brightness.

Move the slider to the left to darken and right to brighten the image.

### Contrast

Adjusts the contrast of the image. Adjust the contrast when the image is flat due to lack of contrast.

Move the slider to the left to decrease and right to increase the contrast of the image.

### Sharpness

Emphasizes the outline of the subjects to sharpen the image. Adjust the sharpness when the photo is out of focus or text is blurred.

Move the slider to the right to sharpen the image.

### Blur

Blurs the outline of the subjects to soften the image.

Move the slider to the right to soften the image.

### Show-through Removal

Removes show-through of text from the reverse side or removes the base color. Adjust the show-through level to prevent text on the reverse side of thin document or the base color of the document from appearing on the image.

Move the slider to the right to increase the show-through removal effect.

### Defaults

Resets each adjustment (brightness, contrast, sharpness, blur, and show-through removal).

### Reset Selected Image

Cancels all adjustments applied to the selected image.

### Save Selected Image

Saves the selected image in the list that applied adjustments.

### Save All Corrected Images

Saves all the images that applied adjustments displayed in the list.

### Exit

Click to close the Correct/Enhance Images window.

## Correct/Enhance



### Red-Eye Correction

Corrects red eyes.

You can specify the area you want to apply the effect to. You can adjust the effect level using the slider.

### Note

- For Photo Print, red eyes are automatically corrected when Enable Auto Photo Fix is selected in Color correction for printing on the Advanced tab of the Preferences dialog box and the Enable Red-Eye Correction checkbox is selected. To disable the automatic correction, deselect the checkbox.

### Face Brightener

Corrects the entire image so that the selected facial area is brightened.

You can adjust the effect level using the slider.

### Face Sharpener

Sharpens out-of-focus faces.

You can specify the area you want to apply the effect to. You can adjust the effect level using the

slider.

**Digital Face Smoothing**

Enhances skin beautifully by removing blemishes and wrinkles.

You can specify the area you want to apply the effect to. You can adjust the effect level using the slider.

**Blemish Remover**

Removes moles.

You can specify the area you want to apply the effect to.

**OK**

Applies the selected effect to the specified area.

**Undo**

Cancels the latest correction/enhancement.

**Reset Selected Image**

Cancels all corrections and enhancements applied to the selected image.

**Save Selected Image**

Saves the selected image in the list that applied corrections and enhancements.

**Save All Corrected Images**

Saves all the images that applied corrections and enhancements displayed in the list.

**Exit**

Click to close the Correct/Enhance Images window.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Questions and Answers

Easy-PhotoPrint EX

### Questions and Answers

- ▶ How Can I Move (or Copy) the Saved File?
- ▶ Which Side of the Displayed Image Does the Printing Start from?
- ▶ How Do I Print with Even Margins?
- ▶ What Is "C1" or "C4"?

[Page top↑](#)

## Advanced Guide


Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Questions and Answers  
> How Can I Move (or Copy) the Saved File?



## How Can I Move (or Copy) the Saved File?

If you want to move (or copy) a file created and saved with Easy-PhotoPrint EX from one folder to another, you need to move (or copy) the folder that was automatically created when originally saving that file as well.

For example, when you save a file named "MyAlbum.el1," a folder named "MyAlbum.el1.Data" is automatically created in the same folder that contains the "MyAlbum.el1" file. If you want to move (or copy) the "MyAlbum.el1" file to another folder, move (or copy) the "MyAlbum.el1.Data" folder as well. The "MyAlbum.el1.Data" folder contains the photos used in the album.

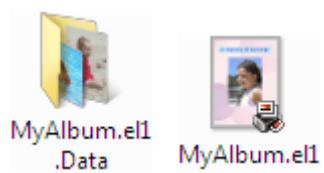

### Note

- The icons may vary depending on the items.

### Important

- Do not change the Data folder name; otherwise you will not be able to display the photos you edited with Easy-PhotoPrint EX.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Questions and Answers  
> Which Side of the Displayed Image Does the Printing Start from?

Easy-PhotoPrint EX



## Which Side of the Displayed Image Does the Printing Start from?

As shown below, printing starts from the left side of the image displayed in the Layout/Print screen.



Outputs the paper in the direction as the arrow indicates.

See your printer manual for details on how to load paper (to print on the front/back, etc.).

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Questions and Answers  
> How Do I Print with Even Margins?

Easy-PhotoPrint EX



## How Do I Print with Even Margins?

When you print on a bordered layout, the margins on the left and right or the top and bottom may become wider than the other, depending on the image and printer.

To always print with even margins, select the Always crop images when selecting a layout with margins checkbox on the Advanced tab of the Preferences dialog box.

To display the Preferences dialog box, click (Settings) in the Layout/Print screen or select Preferences... from the File menu.

Crop the photo to apply even margins individually.

▶ [Cropping Photos \(Photo Print\)](#)

### Note

- This setting is available for Photo Print only.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Questions and Answers  
> What Is "C1" or "C4"?


Easy-PhotoPrint EX



### What Is "C1" or "C4"?

When an album is printed, labels such as "C1" and "C4" are printed as page numbers.

The "C1" and "C4" represent the front cover and back cover, respectively.

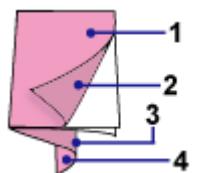

C1: Front cover

C2: Inside the front cover

C3: Inside the back cover

C4: Back cover

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Photo Print Settings

Easy-PhotoPrint EX

# Photo Print Settings

- ▶ Printing Vivid Photos
- ▶ Reducing Photo Noise
- ▶ Cropping Photos (Photo Print)
- ▶ Printing Dates on Photos (Photo Print)
- ▶ Printing Multiple Photos on One Page
- ▶ Printing an Index
- ▶ Printing ID Photos (ID Photo Print)
- ▶ Printing Photo Information
- ▶ Saving Photos
- ▶ Opening Saved Files

[Page top↑](#)

## Advanced Guide


Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Photo Print Settings > Printing Vivid Photos

Easy-PhotoPrint EX



## Printing Vivid Photos

Select the Vivid Photo checkbox in the Select Paper screen to boost the colors in a photo before printing.

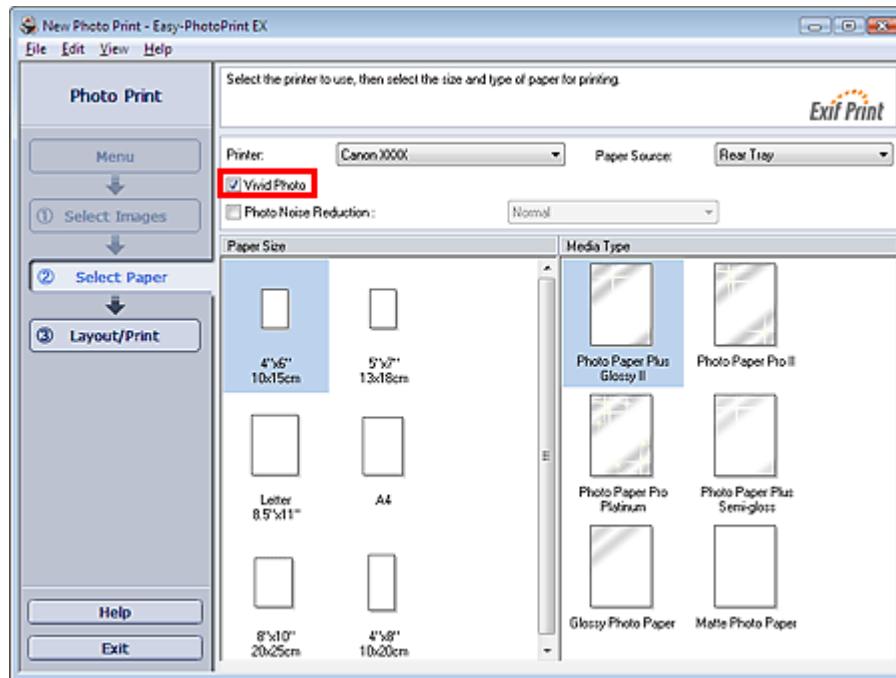

### Important

- This function is available only with a printer that supports Vivid Photo.
- This function is not available when Enable ICC Profile is selected on the Advanced tab of the Preferences dialog box.

### Note

- Even if you select the Vivid Photo checkbox, this effect applies only to the print result. The original image or preview image will not be affected.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Photo Print Settings > Reducing Photo Noise


Easy-PhotoPrint EX



### Reducing Photo Noise

When a photo is taken in a dark location such as night scene using digital camera, noise may appear in the image.

Select the Photo Noise Reduction checkbox in the Select Paper screen to reduce noise in the image and make the printed photos more vivid.

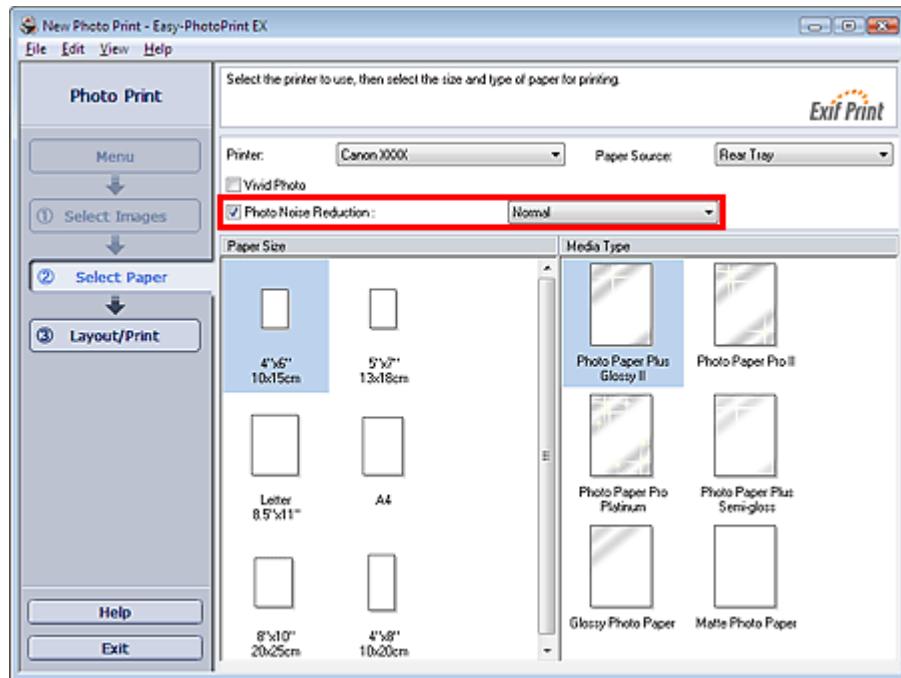

#### Important

- This function is not available when Enable ICC Profile is selected on the Advanced tab of the Preferences dialog box.

#### Note

- When the noise is severe, change Normal to Strong.
- The noise reduction effect applies only to the print result. The original image or preview image will not be affected.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Photo Print Settings > Cropping Photos (Photo Print)


Easy-PhotoPrint EX



## Cropping Photos (Photo Print)


Cropping a photo is the act of removing the unnecessary portions of the photo by selecting the necessary portions.

Click (Crop Image) in the Layout/Print screen or double-click the preview image. Move the white frame to the portion to print and click OK.

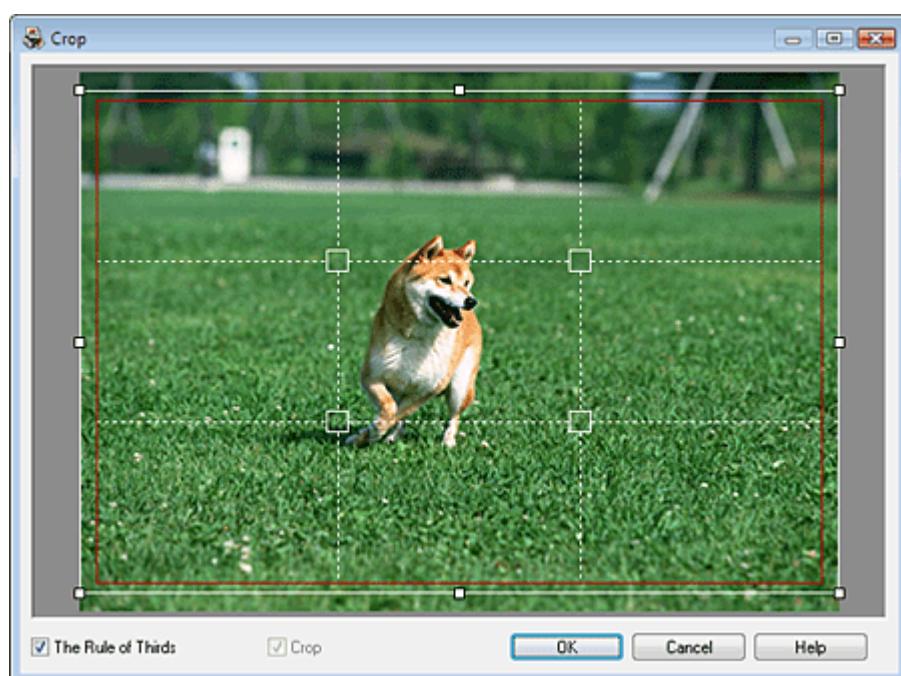

### Note

- To move the cropping area, place the cursor within the white frame and drag it. Drag the white lines to enlarge/reduce the cropping area.
- Select the The Rule of Thirds checkbox to display white broken lines. To create a balanced composition, drag any of the intersecting points (white squares) or white broken lines over the main subject of the photo.

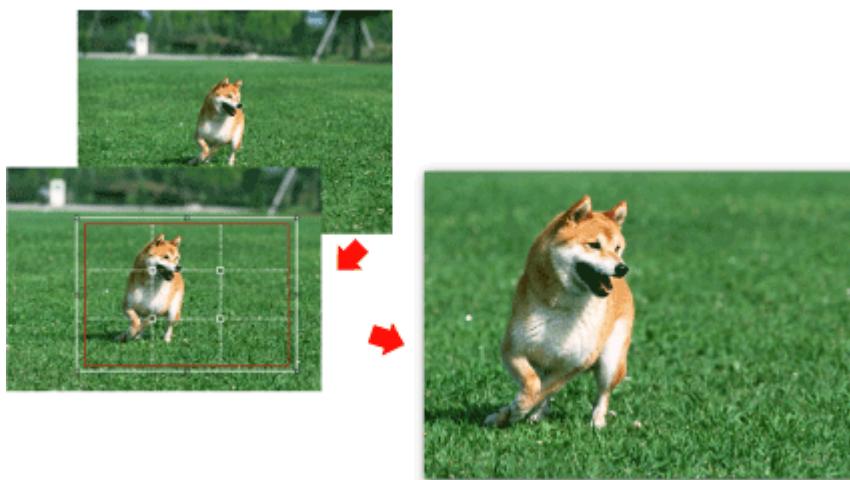

- The cropping effect applies only to the print result. The original image will not be cropped.
- See Help for details on the Crop window.

[Page top↑](#)

## Advanced Guide


Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Photo Print Settings > Printing Dates on Photos (Photo Print)

Easy-PhotoPrint EX



### Printing Dates on Photos (Photo Print)

To print the date the photo was taken on the photo, click (Date Settings) in the Layout/Print screen, then select the Print date checkbox in the Date Settings dialog box.

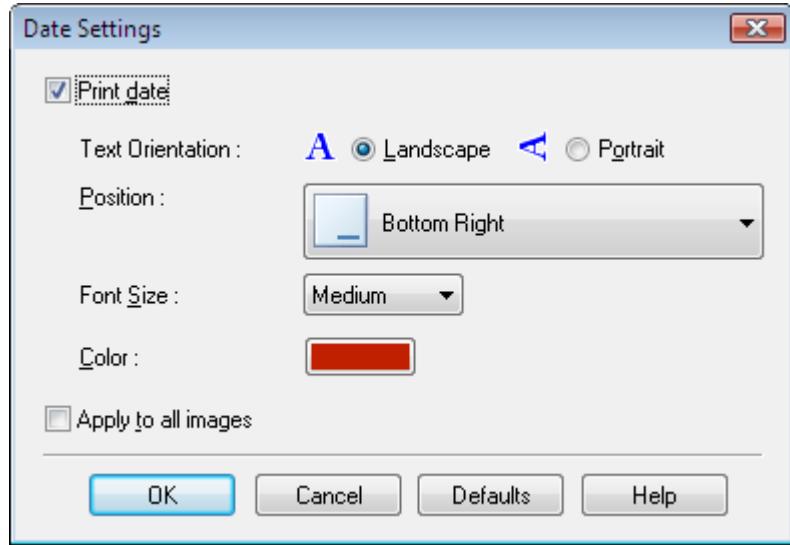

#### Note

- The date is displayed in the short date format (mm/dd/yyyy, etc.) specified in your operating system.
- See Help for details on setting dates.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Photo Print Settings > Printing Multiple Photos on One Page

Easy-PhotoPrint EX



## Printing Multiple Photos on One Page

You can print multiple photos on one page by selecting a multiple-photo layout in the Layout/Print screen.



### Note

- See the following section for details on how to select photos.  
▶ [Selecting a Photo](#)
- The available number of photos and layout may vary depending on the media type.
- Photos are arranged in the following order.

Example: Borderless (x4)



- You can change the printing order in Printing Order on the Print tab of the Preferences dialog box. You can select the printing order from By Date, By Name and By Selection.

To display the Preferences dialog box, click (Settings) or select Preferences... from the File menu.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Photo Print Settings > Printing an Index

Easy-PhotoPrint EX



### Printing an Index

You can print an index of selected photos. An index print shows the thumbnails of the photos in one page. It is convenient for managing your photos.

To print an index, select Index from the layouts in the Layout/Print screen.



#### Important

- Index print will be disabled if you select any of the following paper sizes.
  - Credit Card
  - Fine Art A4
  - Fine Art A3
  - Fine Art A3+
  - Fine Art Letter
- You can print up to 80 images on one page.

#### Note

- See the following section for details on how to select photos.  
➡ [Selecting a Photo](#)

- Photos are arranged in the following order.

Example: Index (x20)

1	2	3	4	5
6	7	8	9	10
11	12	13	14	15
16	17	18	19	20

- You can change the printing order in Printing Order on the Print tab of the Preferences dialog box. You can select the printing order from By Date, By Name, and By Selection.

To display the Preferences dialog box, click (Settings) or select Preferences... from the File menu.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Photo Print Settings > Printing ID Photos (ID Photo Print)

**Easy-PhotoPrint EX**




## Printing ID Photos (ID Photo Print)

You can print a variety of ID photos.

### Important

- The photo may not qualify as an official ID photo depending on its use.  
For details, contact the party to whom you will be submitting the photo.


To print ID photos, select 4"x6" 10x15cm for Paper Size in the Select Paper screen, and select a layout of the ID photo from the layouts in the Layout/Print screen.

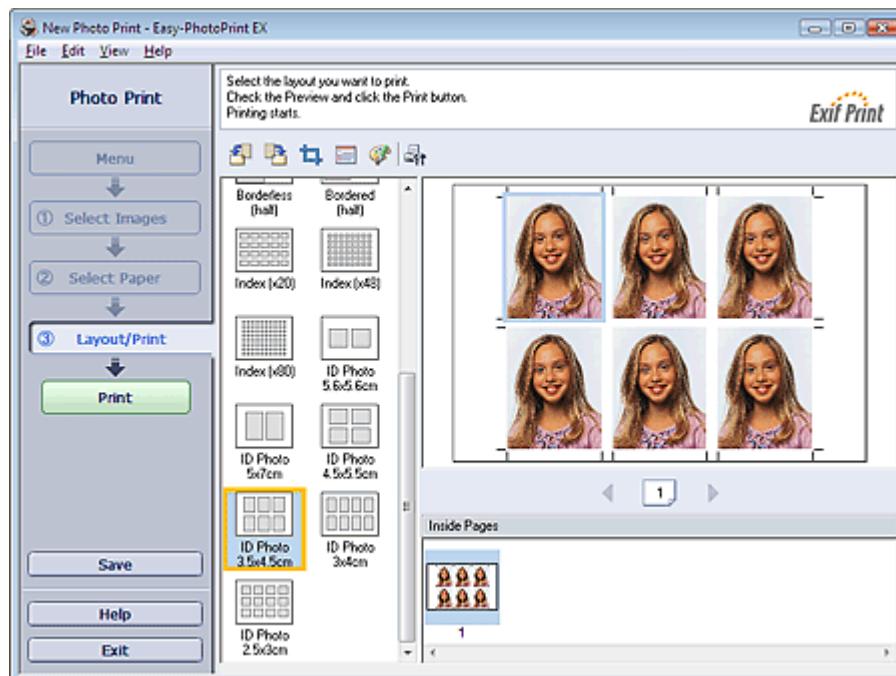

### Note

- See the following section for details on how to select photos.  
**▶ Selecting a Photo**
- Photos are arranged in the following order.

Example: ID Photo 3.5x4.5cm

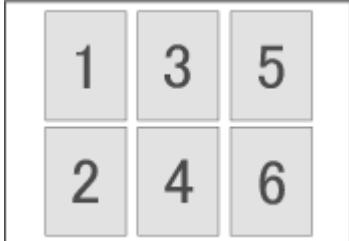

- You can change the printing order in Printing Order on the Print tab of the Preferences dialog box.  
You can select the printing order from By Date, By Name, and By Selection.

To display the Preferences dialog box, click (Settings) or select Preferences... from the File menu.

## Advanced Guide


Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Photo Print Settings > Printing Photo Information

Easy-PhotoPrint EX



### Printing Photo Information

Select Captured Info from the layouts in the Layout/Print screen to print the photo and the Exif information side by side.

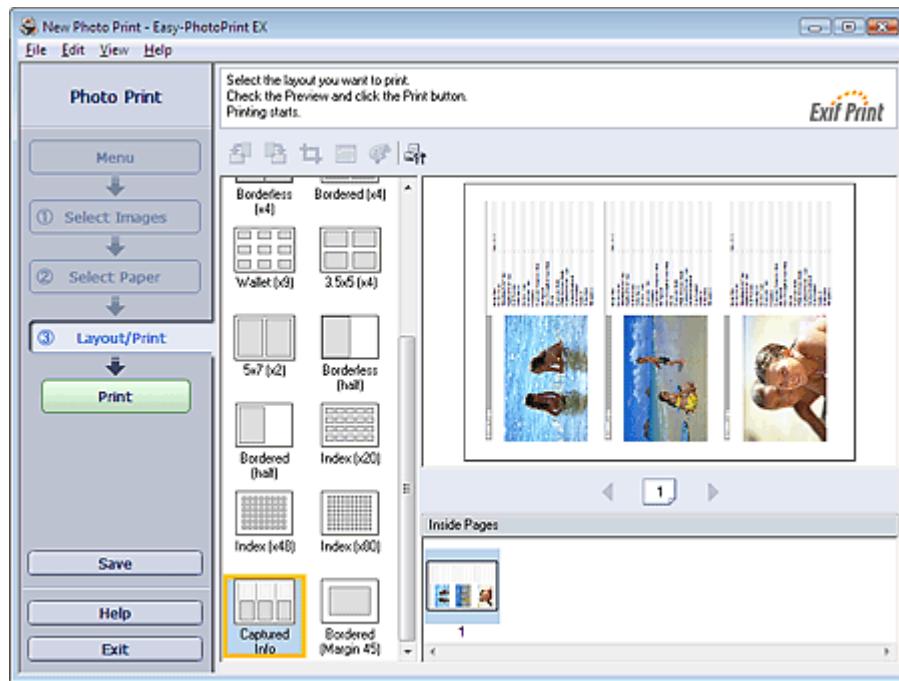

#### Note

- See the following section for details on how to select photos.  
→ [Selecting a Photo](#)
- This function is available only on paper sizes Letter 8.5"x11" and A4.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Photo Print Settings > Saving Photos


Easy-PhotoPrint EX



## Saving Photos

You can save edited photos. The information of cropping and layout can be saved.

Click Save in the Layout/Print screen.

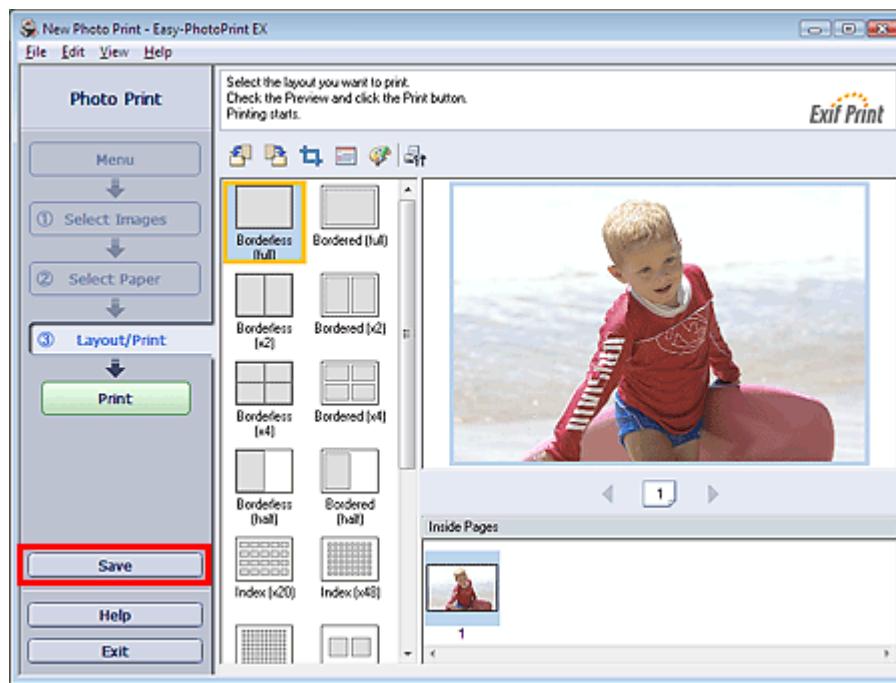

When the Save As dialog box appears, specify the save location and file name, then click Save.

### Important

- If you edit a saved file and save it again, the file will be overwritten.  
To save a file again with a new name or to a different location, select Save As... from the File menu and save.

### Note

- Save will not be displayed in the Select Images or Select Paper screen.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Photo Print Settings > Opening Saved Files


Easy-PhotoPrint EX



## Opening Saved Files

You can open files created with Easy-PhotoPrint EX.

### 1. Click Library from Menu.

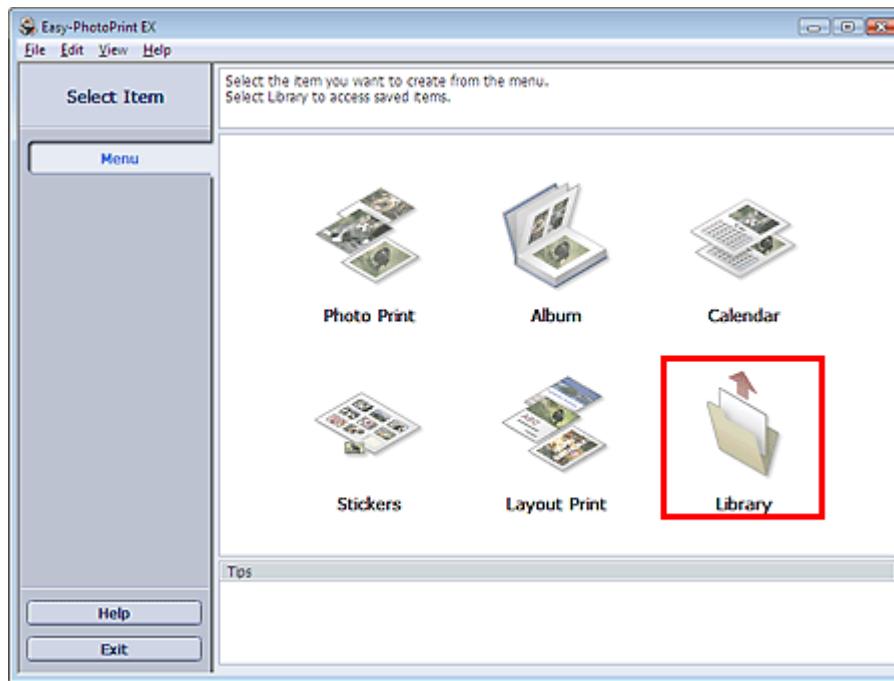

The Open dialog box appears.

You can check files created and saved with Easy-PhotoPrint EX by icon view (only for Windows Vista) or thumbnail view.

### Important

- When using 64bit Edition of Windows Vista or Windows XP, the contents of files cannot be displayed on Explorer.

### 2. Select the file you want to open and click Open.

The Layout/Print screen appears.

### Note

- Easy-PhotoPrint EX supports the following file format (extension).
  - Easy-PhotoPrint EX Photo Print file (.el6)

### 3. Edit the file if necessary.

### Note

- You can open files created with Easy-PhotoPrint EX with the following methods, besides from Library in Menu.
  - Double-click or click the file.
  - From the File menu, click Open..., then select the file you want to edit.
- You can also open a recently used file by clicking the file name shown in the File menu.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings

Easy-PhotoPrint EX

### Other Settings

- ▶ Changing Layout
- ▶ Changing Background
- ▶ Adding Photos
- ▶ Swapping Positions of Photos
- ▶ Replacing Photos
- ▶ Changing Position, Angle and Size of Photos
- ▶ Cropping Photos
- ▶ Framing Photos
- ▶ Printing Dates on Photos
- ▶ Attaching Comments to Photos
- ▶ Adding Text to Photos
- ▶ Saving
- ▶ Setting Holidays
- ▶ Setting Calendar Display
- ▶ Opening Saved Files

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Changing Layout

Easy-PhotoPrint EX




## Changing Layout

You can change the layout of each page separately.

Select the page you want to change the layout of in the Edit screen, then click  (Change Layout). Select the layout you want to use in the Change Layout dialog box and click OK.

### Album

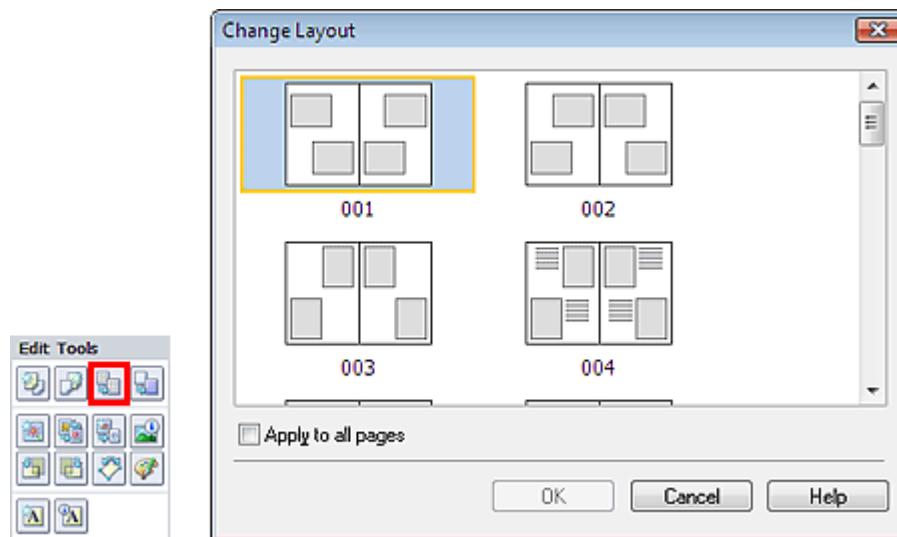


### Important

- If the new layout has a different number of frames per page from the current layout, the following will happen:
  - If the number of layout frames is increased : Images will move from the subsequent pages to fill all the frames in the new layout.
  - If the number of layout frames is decreased : Pages with the new layout will be added until all the images on the pages with the current layout can be fitted.
- If you change the current layout for the front or back cover to one that has fewer layout frames, any image that does not fit in the new layout will be deleted, starting with the last image that was added to the former layout page.

### Note

- The layouts that can be selected may vary depending on the Paper Size, Orientation, or the type of page selected (front cover, inside pages or back cover).
- Select the Apply to all pages checkbox to change the layouts of all pages to the one you newly selected.

### Calendar

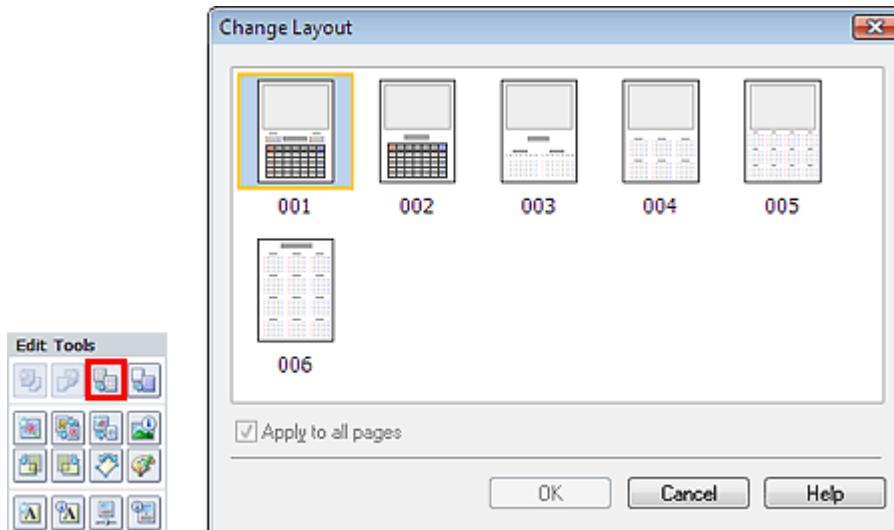


### Important

- The layouts of all pages are changed to the selected layout.
- All images that do not fit in the new layout will be collected on the last page.

### Note

- The layouts that can be selected may vary depending on the Paper Size and Orientation.

## Layout Print

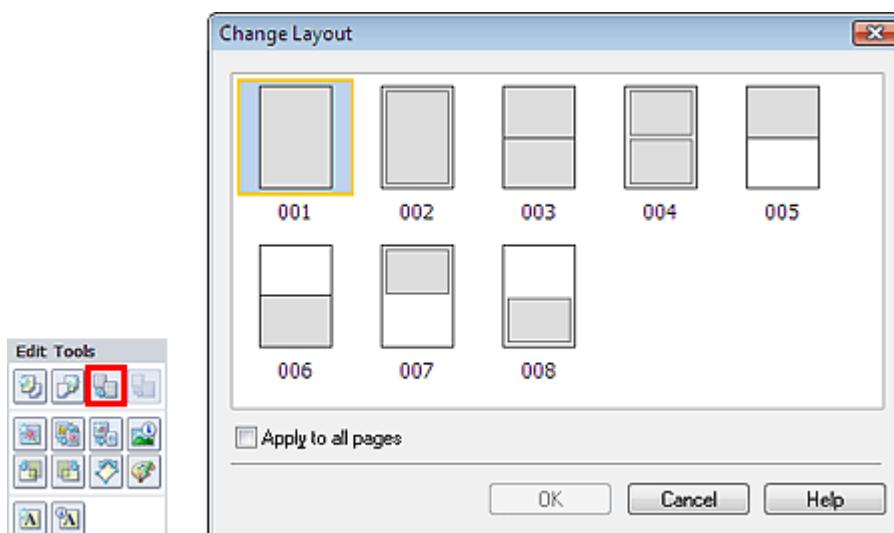

### Important

- If the new layout has a different number of frames per page from the current layout, the following will happen:
  - If the number of layout frames is increased : Images will move from the subsequent pages to fill all the frames in the new layout.
  - If the number of layout frames is decreased : Pages with the new layout will be added until all the images on the pages with the current layout can be fitted.

### Note

- The layouts that can be selected may vary depending on the Paper Size and Orientation.
- Select the Apply to all pages checkbox to change the layouts of all pages to the one you newly selected.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Changing Background

Easy-PhotoPrint EX



## Changing Background

You can change the background of each page.


### Important

- You cannot change the background of the Photo Print, Stickers, and Layout Print.

Click **Background...** in the Page Setup screen or select the page you want to change the background of in the Edit screen, then click (Change Background).

### Note

- The screens for Album printing are used as examples in the following descriptions. The screens may vary depending on what you create.

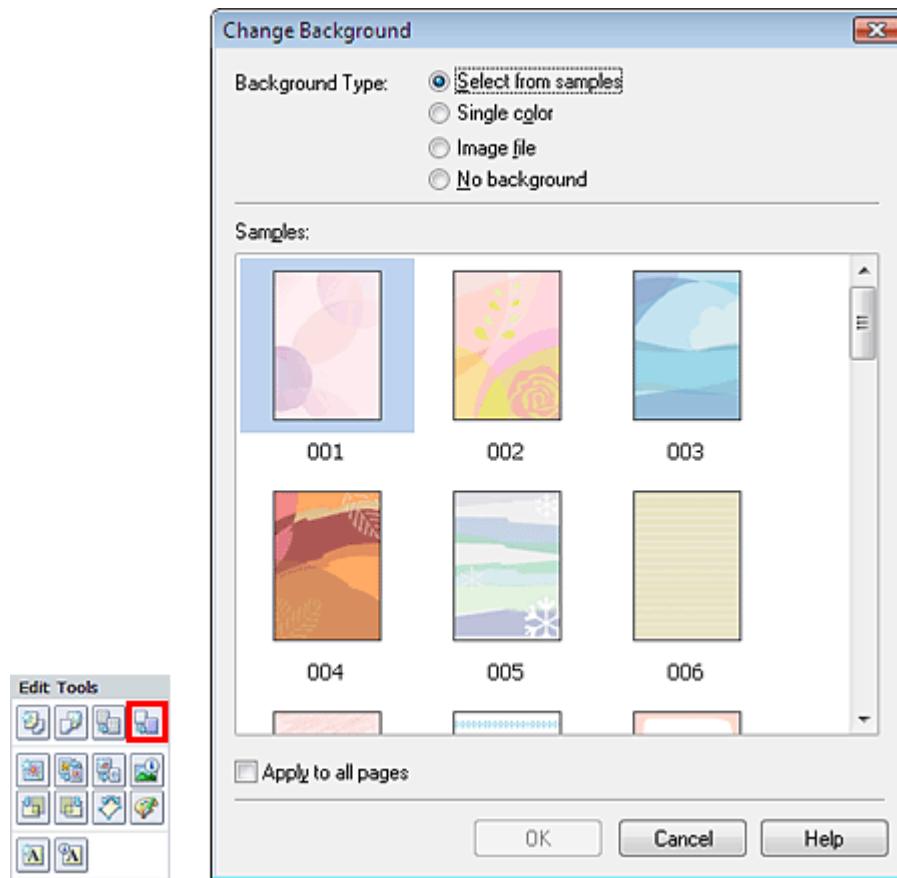

Select the type of background you want to use in the Change Background dialog box.

### When Select from samples is Selected


Select the image you want to use from Samples and click OK.

### Note

- Select from samples will be displayed only if Album has been selected.


### When Single color is Selected

Select the color you want to use from Standard color or Custom color and click OK.

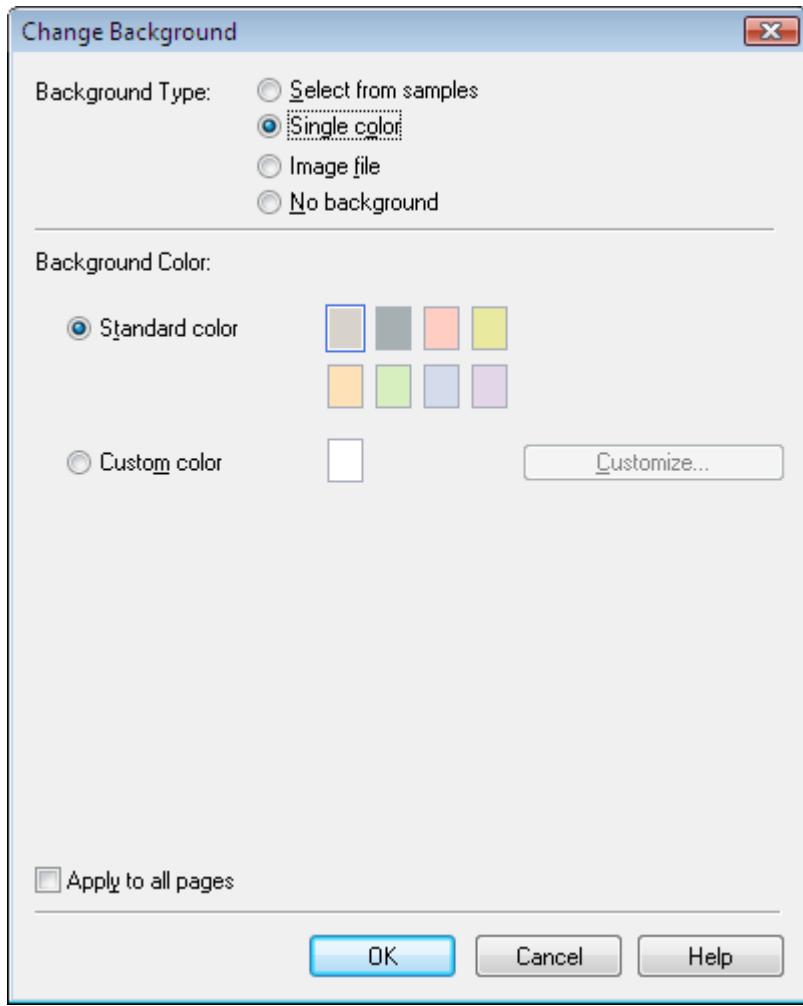

### When Image file is Selected

Set Image File Path and Image Layout, then click OK.

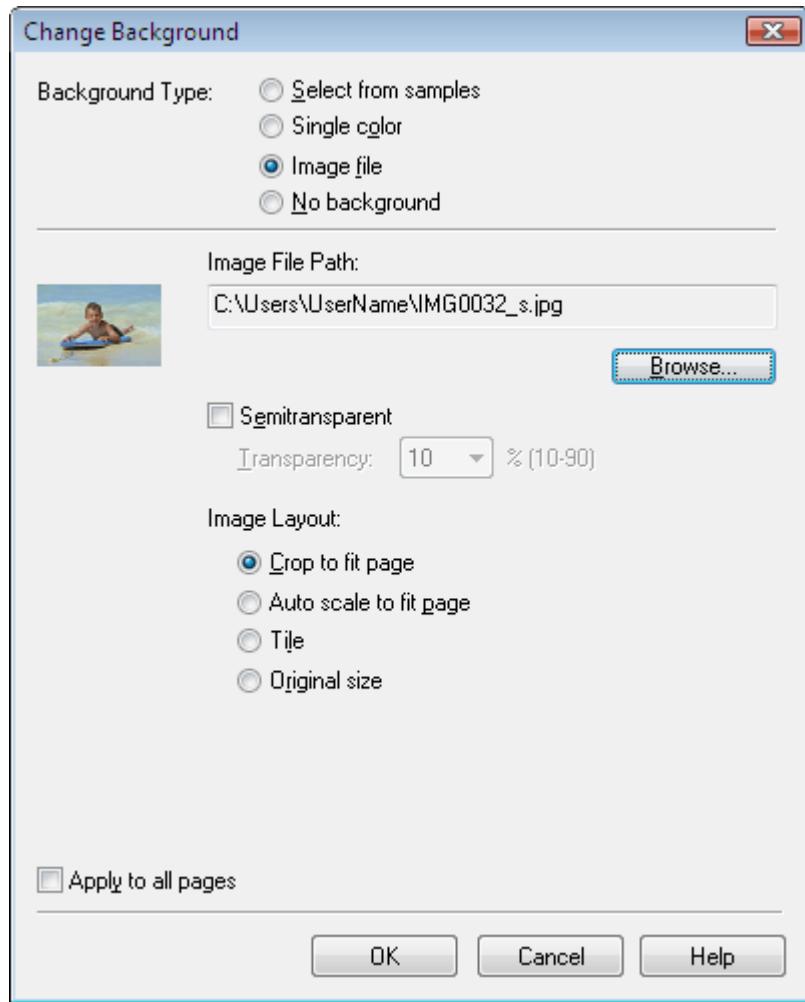

### Note

- See Help for details on how to set the background in the Change Background dialog box.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Adding Photos

### Easy-PhotoPrint EX




## Adding Photos

You can add images to pages.

Select the page you want to add photos in the Edit screen, then click (Add Image).

### Note

- The screens for Album printing are used as examples in the following descriptions. The screens may vary depending on what you create.

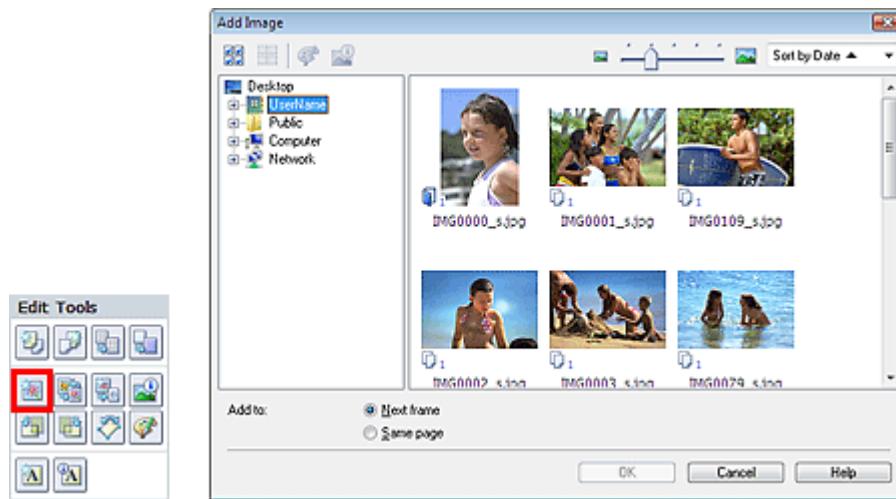

Select the folder containing the image you want to add from the folder tree area on the left of the Add Image dialog box, and select the image you want to add from the thumbnail window on the right.

### Note

- Click an image to select it (background turns blue) or deselect it (background turns white). You can also select multiple images.

Select an option for Add to and click OK.

### Important

- You can add up to 20 images at one time to a single page.
- Up to 99 of the same images can be added to all pages combined.
- You cannot add two or more of the same image at one time. Add it one at a time.
- When the number of pages increases due to added images, you cannot add images beyond page 400.

### Note

- In the Add Image dialog box, you can select all images at one time or change the display size and order of the thumbnails. See Help for details.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Swapping Positions of Photos

### Easy-PhotoPrint EX



## Swapping Positions of Photos

You can swap the positions of images.

Click (Swap Image Positions) in the Edit screen.

### Note

- The screens for Album printing are used as examples in the following descriptions. The screens may vary depending on what you create.



Select the target and source images you want to swap, then click Swap.

When you finish swapping all images you want to swap, click Back to Edit.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Replacing Photos


### Easy-PhotoPrint EX



## Replacing Photos

You can replace an image with another image.

Select the image you want to replace in the Edit screen, then click (Replace Selected Image).

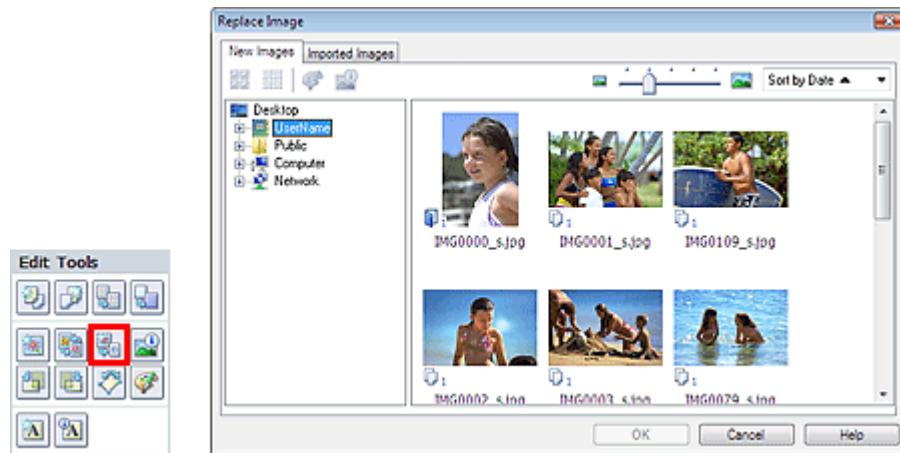

Select the folder containing the image you want to replace with from the folder tree area on the left of the Replace Image dialog box.

Select the image you want to replace with from the thumbnail window on the right of the screen and click OK.

If you want to select from the images already imported, click the Imported Images tab and select the image you want to replace with from the thumbnail window and click OK.

### Important

- You cannot select multiple images in the Replace Image dialog box.

### Note

- If you select multiple images in the Edit screen and use the replacement function, all the images selected in the Edit screen will be replaced with the image selected in the Replace Image dialog box.
- When images are replaced, the following settings of the old image are inherited to the new image.
  - Position
  - Size
  - Frame
  - Position and size of the dateThe cropping information and image orientation are not inherited.
- In the Replace Image dialog box, you can change the display size and order of the thumbnails. See Help for details.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Changing Position, Angle and Size of Photos


### Easy-PhotoPrint EX



## Changing Position, Angle and Size of Photos

You can adjust the position, angle and size of images.

Select the image of which you want to change the position or size in the Edit screen and click  (Edit Image) or double-click the image.

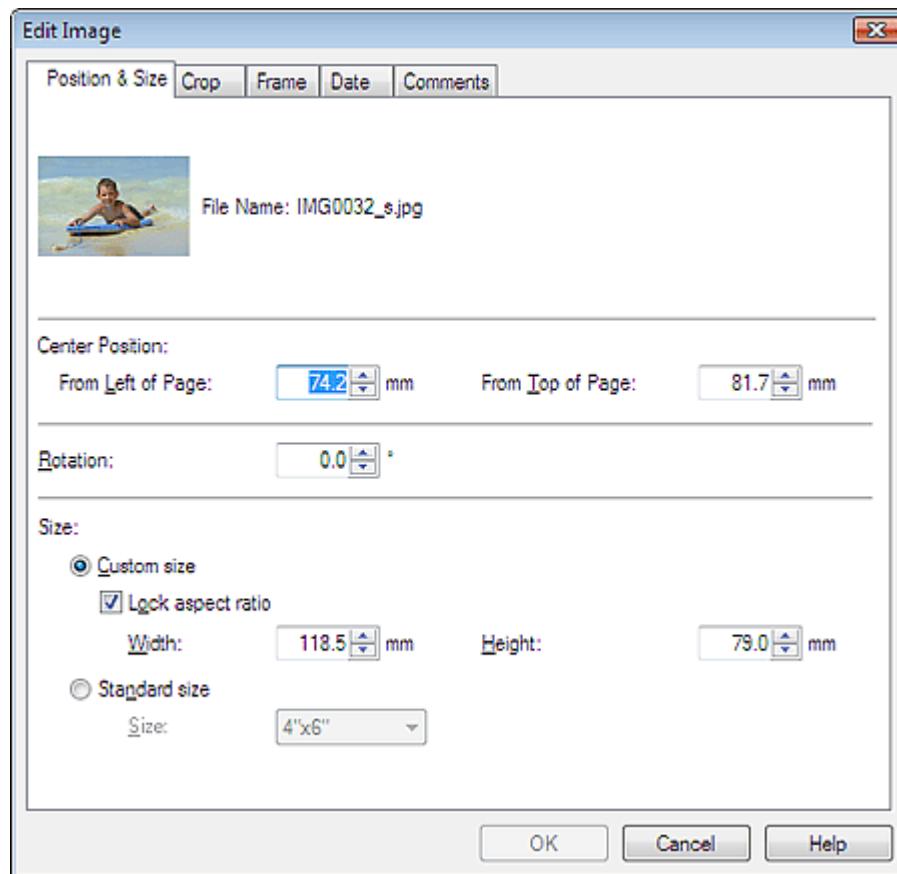

Set the Center Position, Rotation and Size, then click OK.

### Note

- You can also change the position and size of an image by dragging it in the Edit screen.
- Select an image in the Edit screen, then click  (Free Rotate) and drag a corner of the image to rotate it.
- See Help for details on the position and size of images.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Cropping Photos

### Easy-PhotoPrint EX




## Cropping Photos

Cropping an image is the act of removing the unnecessary portions of the image by selecting the necessary portions.

Select the image you want to crop in the Edit screen and click (Edit Image) or double-click the image.

Click the Crop tab in the Edit Image dialog box.

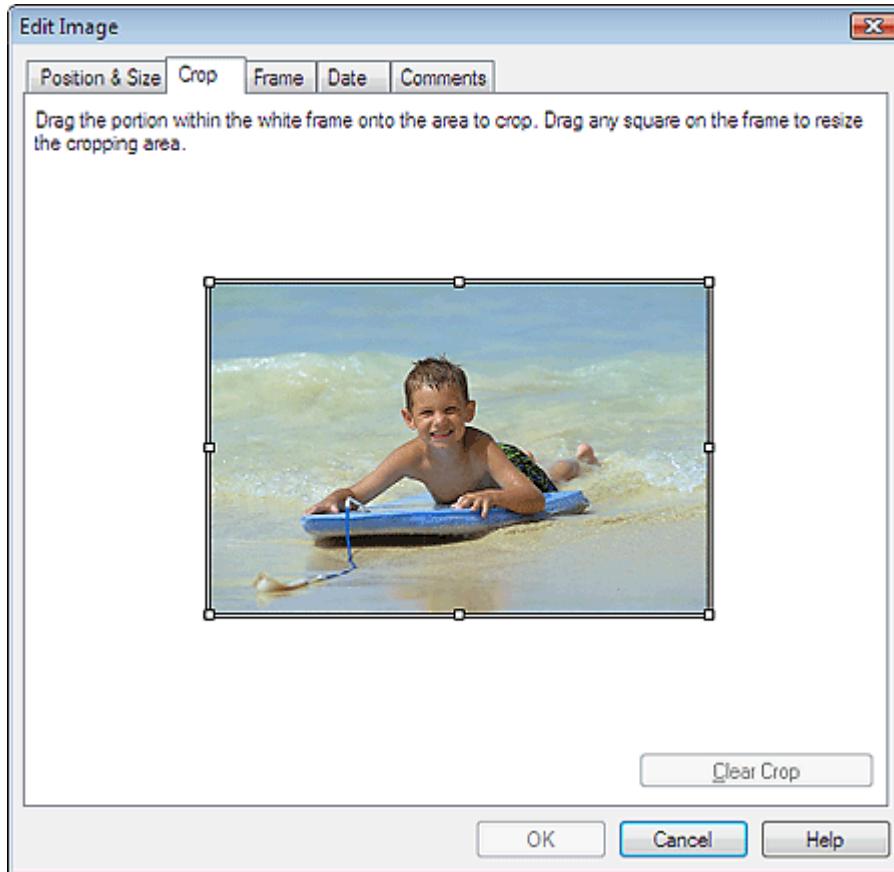

Drag the white squares on the image to change the area to be cropped and click OK.

### Note

- See Help for details on cropping.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Framing Photos

Easy-PhotoPrint EX



## Framing Photos


You can add frames to images.

### Important

- You cannot add frames to images in Photo Print, Stickers, and Layout Print.

Select the image you want to frame in the Edit screen and click (Edit Image) or double-click the image.

Click the Frame tab in the Edit Image dialog box.

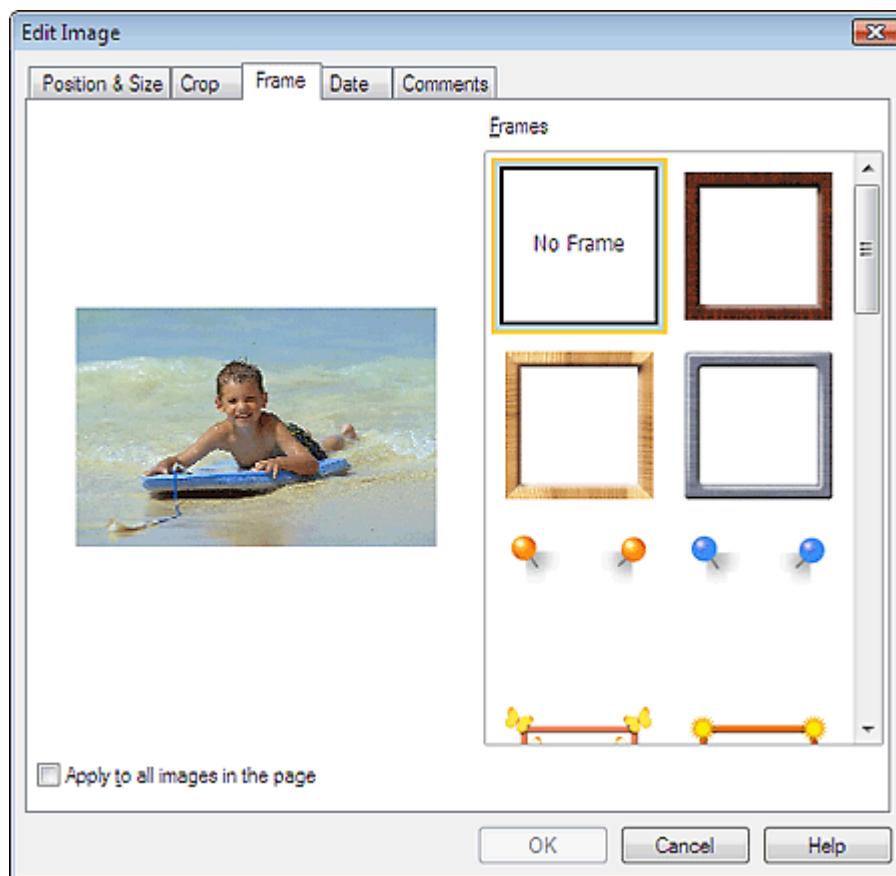

Select the frame you want to use from Frames and click OK.

### Important

- You cannot print dates on framed photos.

### Note

- Select the Apply to all images in the page checkbox to add the same frame to all the images on a selected page at one time.
- See Help for details on frames.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Printing Dates on Photos

### Easy-PhotoPrint EX




## Printing Dates on Photos

You can print dates on images.

Select the image you want to print the date in the Edit screen and click (Edit Image) or double-click the image.

Click the Date tab in the Edit Image dialog box.

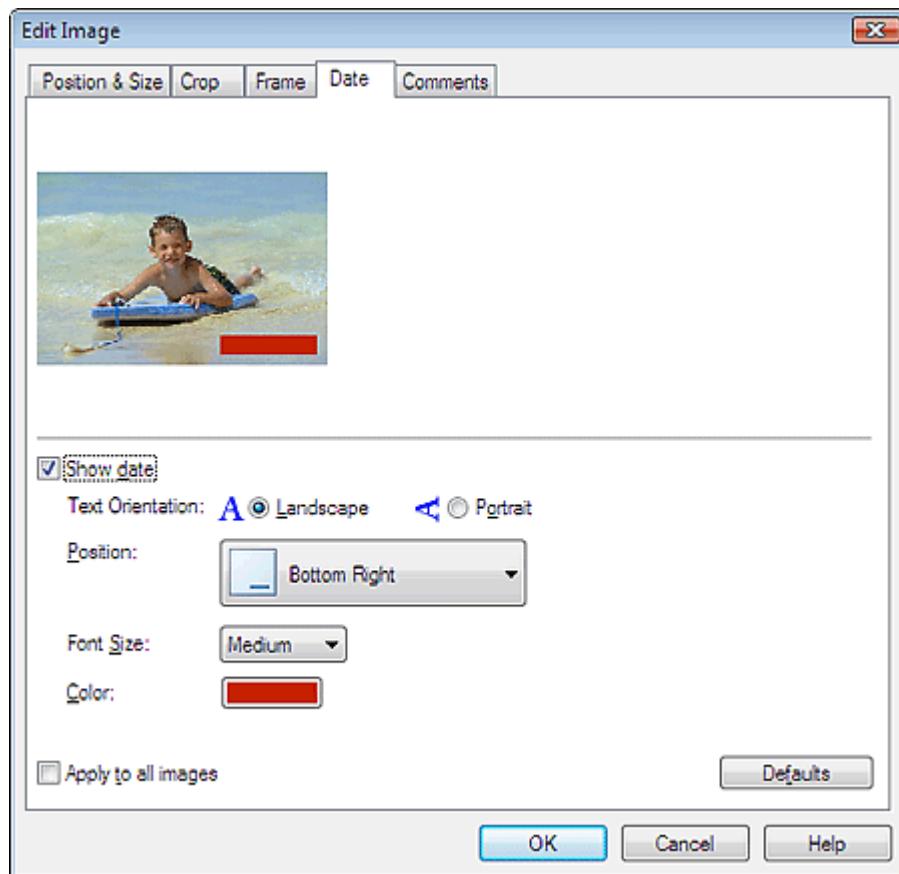

Select the Show date checkbox.

Set the Text Orientation, Position, Font Size and Color, then click OK.

### Important

- You cannot print dates on framed images.

### Note

- The date is displayed in the short date format (mm/dd/yyyy, etc.) specified in your operating system.
- See Help for details on setting dates.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Attaching Comments to Photos

Easy-PhotoPrint EX



## Attaching Comments to Photos

You can attach comments to images and display them in your album. The photo name, shooting date and comments are displayed (from top to bottom) in a comment box.




### Important

- You cannot attach comments to Photo Print, Calendar, Stickers, and Layout Print.

Select the image you want to attach comments to in the Edit screen and click (Edit Image) or double-click the image.

Click the Comments tab in the Edit Image dialog box.

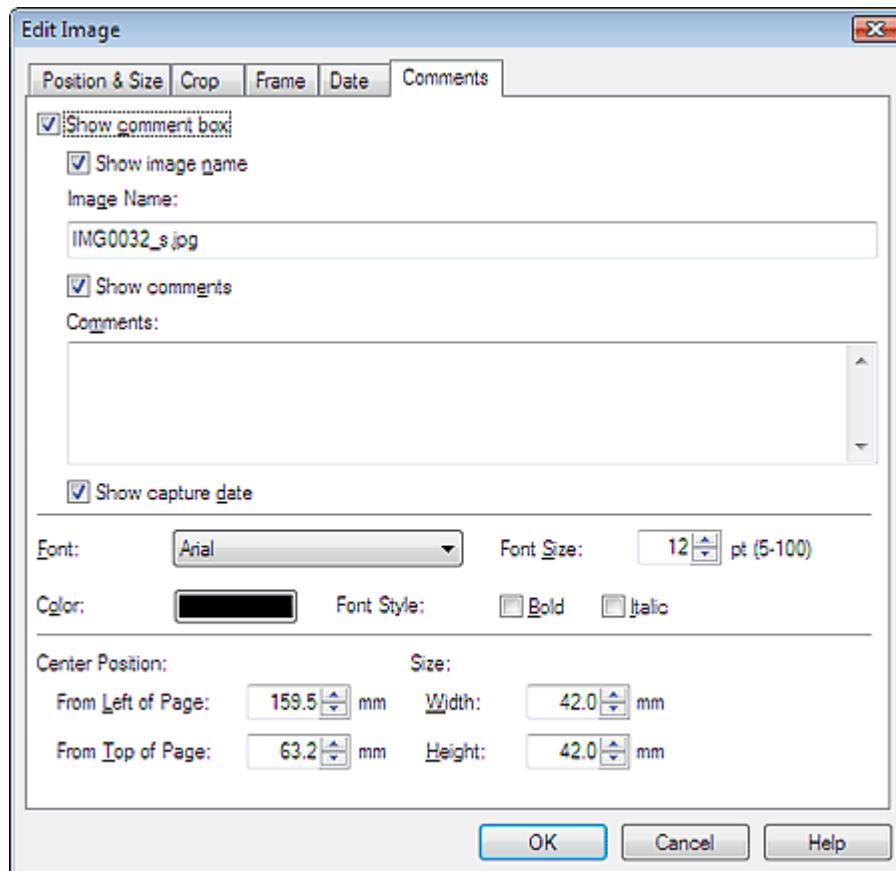

Select the Show comment box checkbox.

Select the checkboxes of the items you want to display, and enter comments.

Set the size and color of font, and position of the comments, etc., then click OK.

 Note

- 
- See Help for details on comments.
- 

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Adding Text to Photos

### Easy-PhotoPrint EX




## Adding Text to Photos

You can add text to photos.

Click (Add Text) in the Edit screen and drag the mouse over the area in which you want to add text.

### Note

- The screens for Album printing are used as examples in the following descriptions. The screens may vary depending on what you create.

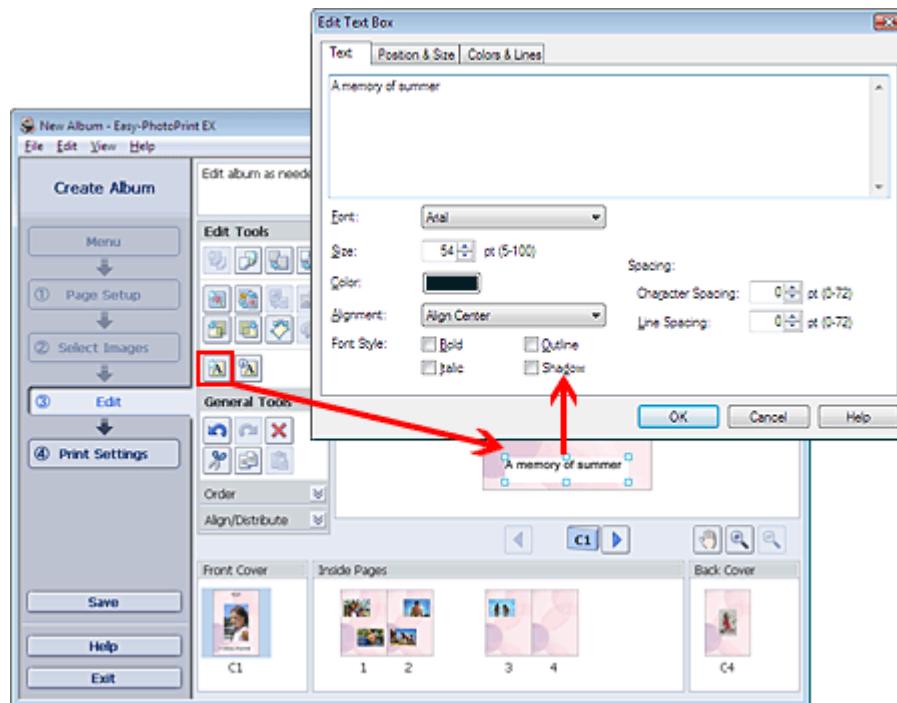

Select the Text tab in the Edit Text Box dialog box and enter text.

### Note

- In the Edit Text Box dialog box, you can change the position, angle and size of the text. You can also set the color and line of the text box. See Help for details.
- To change the entered text, select it and click (Edit Text Box). The Edit Text Box dialog box appears. You can change the text.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Saving

### Easy-PhotoPrint EX



## Saving

You can save edited items.

Click Save in the Edit or Print Settings screen.

### Note

- The screens for Album printing are used as examples in the following descriptions. The screens may vary depending on what you create.



When the Save As dialog box appears, specify the save location and file name, then click Save.

### Important

- If you edit a saved file and save it again, the file will be overwritten.  
To save a file again with a new name or to a different location, select Save As... from the File menu and save.

### Note

- Save will not be displayed in the Page Setup or Select Images screen.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Setting Holidays

Easy-PhotoPrint EX




### Setting Holidays

You can add holidays to your calendar.




Click Set Holidays... in the Page Setup screen of Calendar, or click (Setup Period/Holiday) in the Edit screen and click Set Holidays... in the Calendar General Settings dialog box to display the Holiday Settings dialog box.

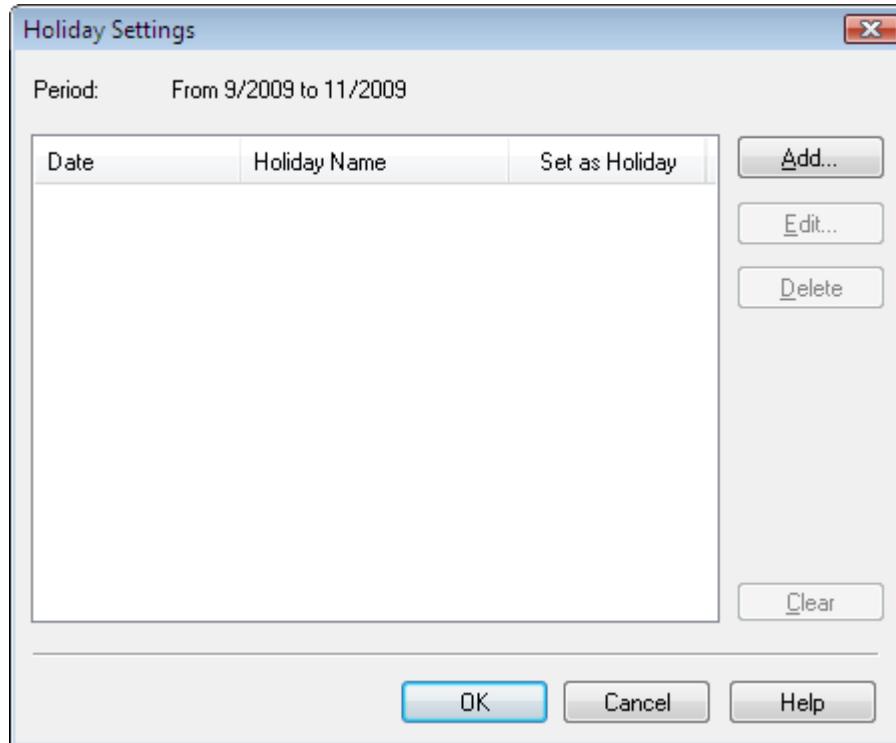

To add a holiday, click Add.... The Add/Edit Holiday dialog box appears. To edit a saved holiday, select it and click Edit....

To delete a holiday, select it and click Delete. To delete all the saved holidays within your calendar period, click Clear.

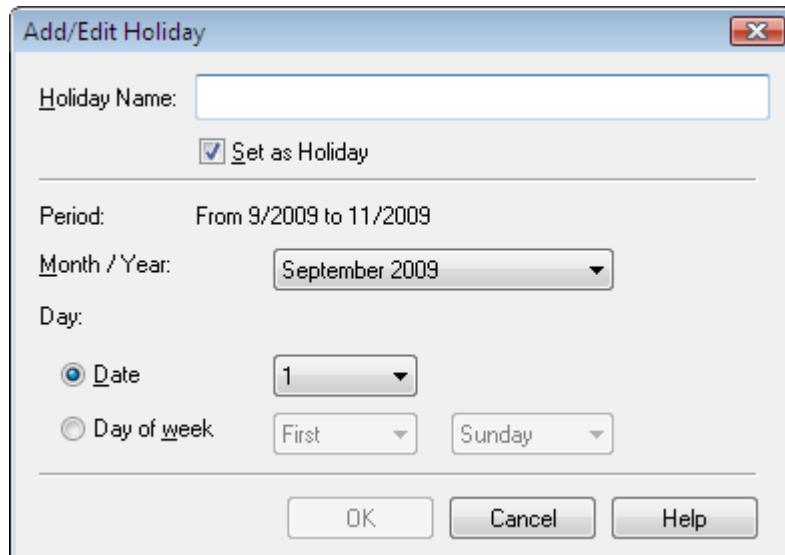

Enter the name in Holiday Name and specify the date.

Select the Set as Holiday checkbox to display that day as a holiday in your calendar.

## Note

- See Help for details on each dialog box.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Setting Calendar Display

Easy-PhotoPrint EX



## Setting Calendar Display

You can customize the calendar display (fonts, lines, colors, position, size, etc.).


Click **Settings...** in the Page Setup screen of Calendar, or select a calendar in the Edit screen and click



(Setup Calendar) to display the Calendar Settings dialog box.

### Important

- The Position & Size tab is displayed only when the Calendar Settings dialog box is displayed from the Edit screen.

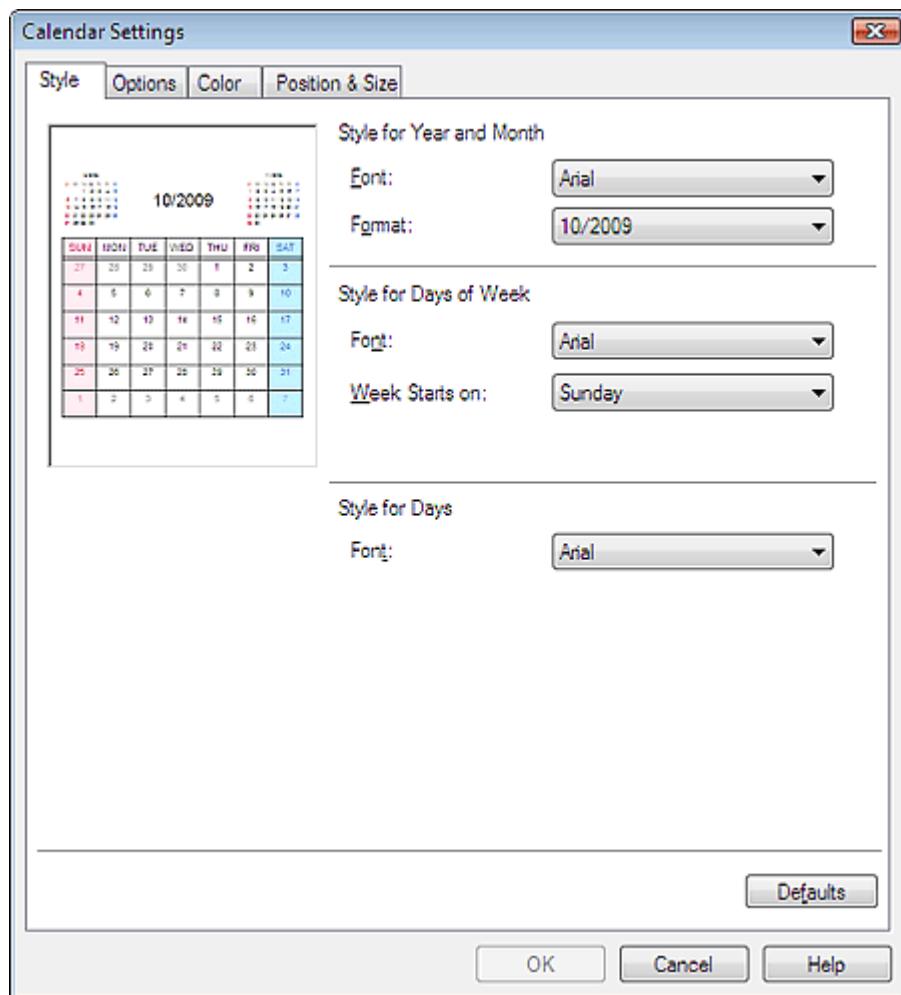

### Note

- See Help for details on the Calendar Settings dialog box.

## Advanced Guide


Advanced Guide > Printing from a Computer > Printing with the Bundled Application Software > Other Settings > Opening Saved Files



## Opening Saved Files

You can open files created with Easy-PhotoPrint EX.

### 1. Click Library from Menu.

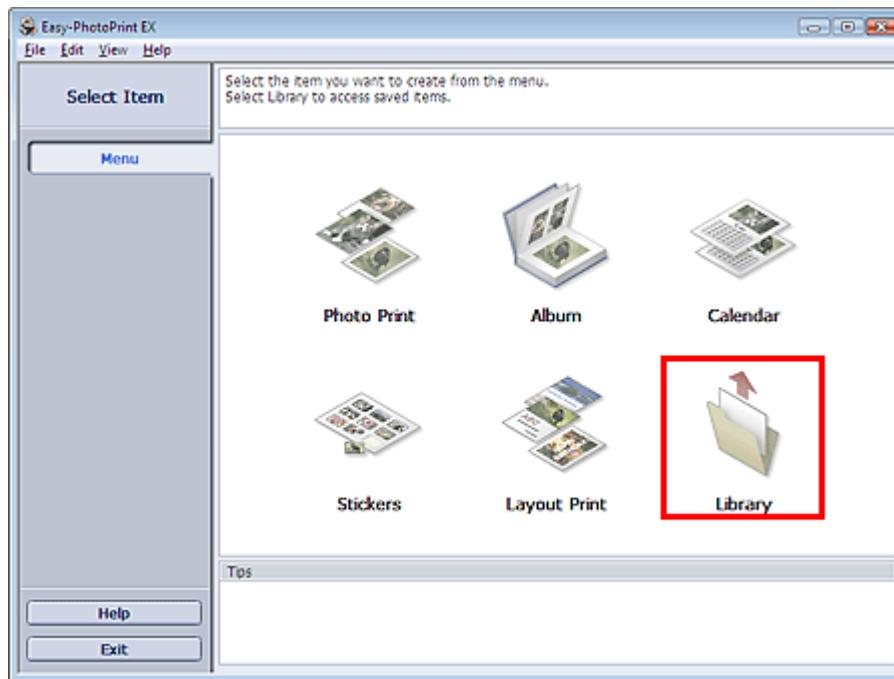

The Open dialog box appears.

You can check files created and saved with Easy-PhotoPrint EX by icon view (only for Windows Vista) or thumbnail view.

### Important

- When using 64bit Edition of Windows Vista or Windows XP, the contents of files cannot be displayed on Explorer.

### 2. Select the file you want to open and click Open.

The Edit screen appears.

### Note

- Easy-PhotoPrint EX supports the following file formats (extensions).
  - Easy-PhotoPrint EX Album file (.el1)
  - Easy-PhotoPrint EX Stickers file (.el2)
  - Easy-PhotoPrint EX Calendar file (.el4)
  - Easy-PhotoPrint EX Layout file (.el5)

### 3. Edit the file if necessary.

### Note

- See the following sections for details on the editing procedures.
  - Editing Album
  - Editing Calendar
  - Editing Stickers
  - Editing Layout Print

 **Note**

- 
- You can open files created with Easy-PhotoPrint EX with the following methods, besides from Library in Menu.
    - Double-click or click the file.
    - From the File menu, click Open..., then select the file you want to edit.
  - You can also open a recently used file by clicking the file name shown in the File menu.
- 

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software

---

# Printing with Other Application Software

- ▶ Various Printing Methods
- ▶ Changing the Print Quality and Correcting Image Data
- ▶ Overview of the Printer Driver

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods

# Various Printing Methods

- ▶ Printing with Easy Setup
- ▶ Setting a Page Size and Orientation
- ▶ Setting the Number of Copies and Printing Order
- ▶ Setting the Stapling Margin
- ▶ Borderless Printing
- ▶ Fit-to-Page Printing
- ▶ Scaled Printing
- ▶ Page Layout Printing
- ▶ Poster Printing
- ▶ Booklet Printing
- ▶ Duplex Printing
- ▶ Stamp/Background Printing
- ▶ Saving a Stamp Setting
- ▶ Saving Image Data to be Used as a Background
- ▶ Printing an Envelope
- ▶ Switching the Paper Source to Match the Purpose
- ▶ Displaying the Print Results before Printing
- ▶ Setting Paper Dimensions (Custom Size)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Printing with Easy Setup

# Printing with Easy Setup


A simple procedure that is necessary for printing data properly with this machine, is as follows:

## 1. Open the printer driver setup window

## 2. Select a frequently used profile

In Commonly Used Settings, select a printing profile suited for the purpose.

When you select a printing profile, the Additional Features, Media Type, and Printer Paper Size settings are automatically switched to the values that were preset.

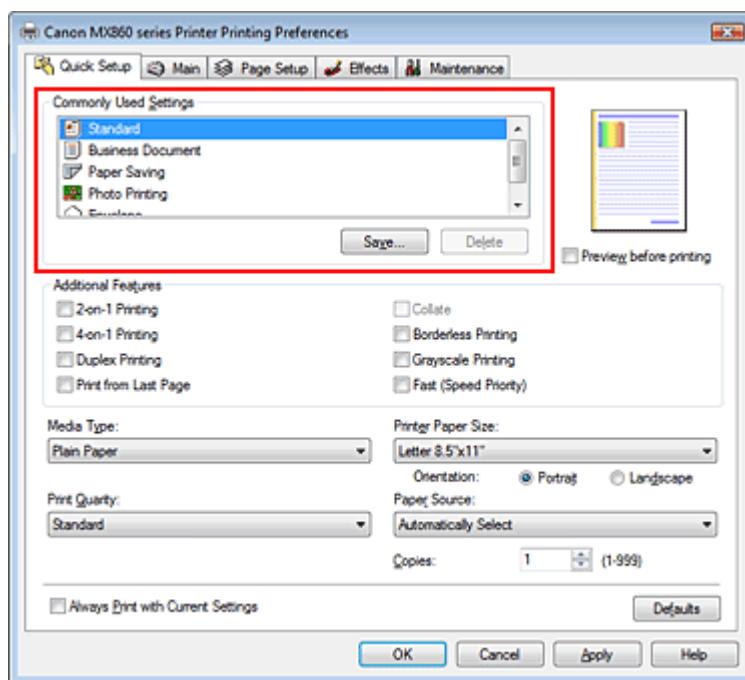

## 3. Select the print quality

Select High, Standard, or Fast for Print Quality.

## 4. Select the paper source

Select Automatically Select, Rear Tray, Cassette, Continuous Autofeed, or Paper Allocation from Paper Source.

### Important

- The paper source settings that can be selected may differ depending on the paper type and size.

## 5. Complete the setup

Click OK.

When you execute print, the document is printed with settings suited for the purpose.

### Important

- If you check the Always Print with Current Settings check box, all settings on the Quick Setup, Main, Page Setup, and Effects tabs are saved, and you can print with the same settings from the next time as well.
- Click Save... to register the specified settings. For instructions on registering settings, see "Registering a Frequently Used Printing Profile".

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Setting a Page Size and Orientation

# Setting a Page Size and Orientation

The paper size and orientation are essentially determined by the application. If the page size and orientation set for Page Size and Orientation on the Page Setup tab are same as those set with the application, you do not need to select them on the Page Setup tab.


If you are not able to specify them with the application, the procedure for selecting a page size and orientation is as follows:

You can also set Page Size and Orientation on the Quick Setup tab.

## 1. Open the printer driver setup window

## 2. Select the paper size

Select a page size from the Page Size list on the Page Setup tab.

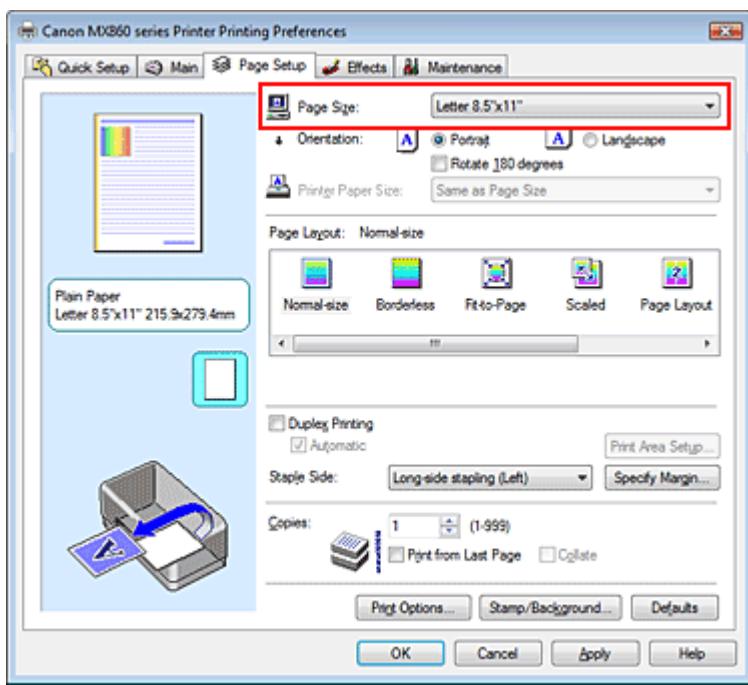

## 3. Select Orientation

Select Portrait or Landscape for Orientation. Check Rotate 180 degrees check box if you want to perform printing with the original being rotated 180 degrees.

## 4. Complete the setup

Click OK.


The document will be printed with the selected page size and the orientation.

## Advanced Guide


Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Setting the Number of Copies and Printing Order

# Setting the Number of Copies and Printing Order


Default Setting

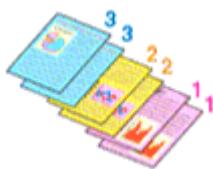


Print from Last Page

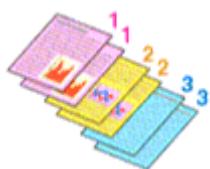

Collate

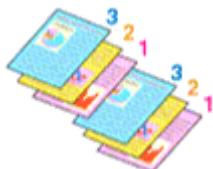

Print from Last Page + Collate

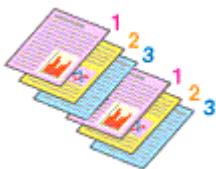


The procedure for specifying the number of copies and printing order is as follows:  
You can also set the number of copies on the Quick Setup tab.

### 1. Open the printer driver setup window

### 2. Specify the number of copies to be printed

For Copies on the Page Setup tab, specify the number of copies to be printed.

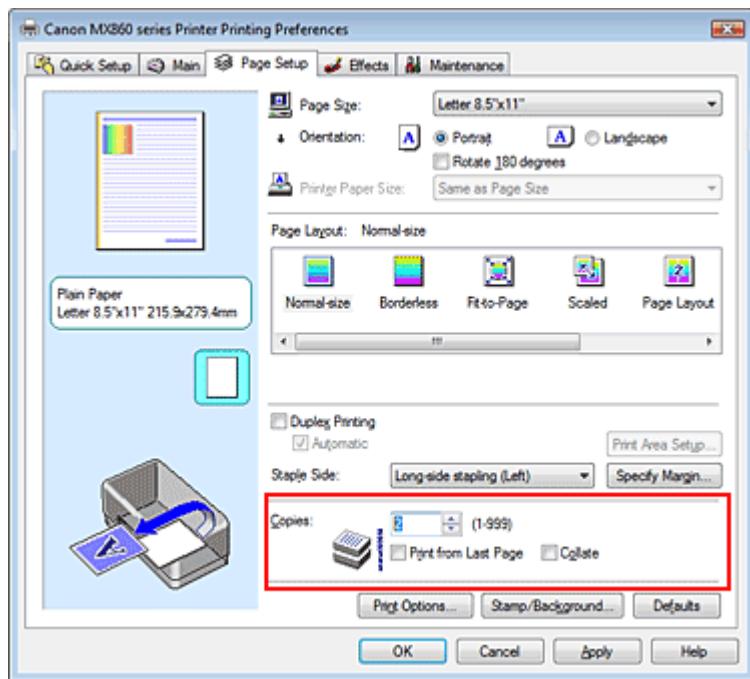

### 3. Specify the print sequence

Check the Print from Last Page check box if you want to print from the last page in order. If you do this, you do not need to sort pages into their correct order after printing.

### 4. Set up collated printing when you specify multiple copies in the Copies box

Check the Collate check box if you are specifying multiple copy together.  
Uncheck this check box to print all pages with the same page number together.

### 5. Complete the setup

Click OK.

The specified number of copies will be printed with the specified printing order.

## **Important**

- If the application software that you used to create the document has the same function, give priority to the printer driver settings. However, if the print results are not acceptable, specify the function settings on the application software. If you specify the number of copies and the printing order with both the application and this printer driver, the number of copies may be multiplied numbers of the two settings or the specified printing order may not be enabled.
- Print from Last Page and Collate appear grayed out and are unavailable if Booklet is selected for Page Layout.
- Print from Last Page appears grayed out and is unavailable if Poster is selected for Page Layout.

## **Note**


- By setting both Print from Last Page and Collate, you can perform printing so that papers are collated one by one starting from the last page.  
These settings can be used in combination with Borderless, Normal-size, Fit-to-Page, Scaled, Page Layout, and Duplex Printing.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Setting the Stapling Margin

### Setting the Stapling Margin

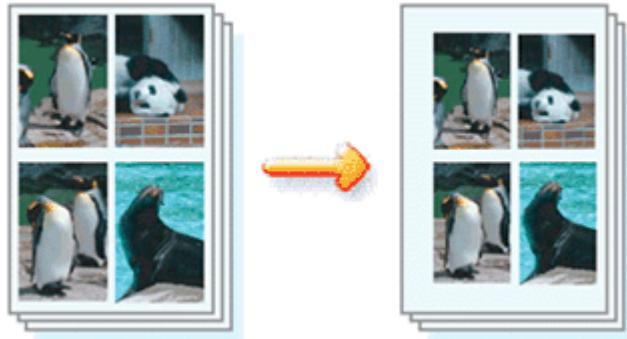


The procedure for setting the stapling direction and the width of the stapling margin is as follows:

1. Open the printer driver setup window

2. Specify the side to be stapled


Check the position of the stapling margin from Staple Side on the Page Setup tab.

The printer analyzes the Orientation and Page Layout settings, and automatically selects the best staple position. If you want to change the setting, select from the list.

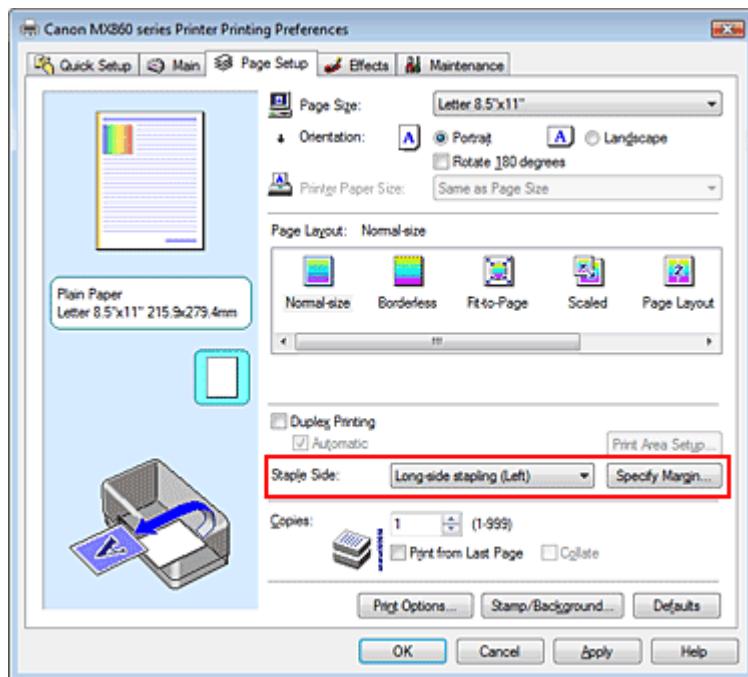

3. Set the margin width

If necessary, click **Specify Margin...** and set the width of the stapling margin, and then click **OK**.

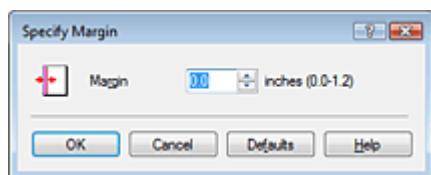

4. Complete the setup

Click **OK** on the Page Setup tab.

When you execute print, the data is printed with the specified staple side and margin.

 **Important**

- Staple Side and Specify Margin... appear grayed out and are unavailable when:
  - Poster or Booklet is selected for Page Layout.
  - Scaled is selected for Page Layout (If Duplex Printing is also selected, only Staple Side is selectable).
  - Borderless is selected for Page Layout.


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Borderless Printing

# Borderless Printing

The borderless printing function allows you to print data without any margin by enlarging the data so that it extends slightly off the paper. Without the borderless printing function, a margin is provided around the printed data. If you want to print data such as a photo without providing any margin around it, select Borderless Printing.

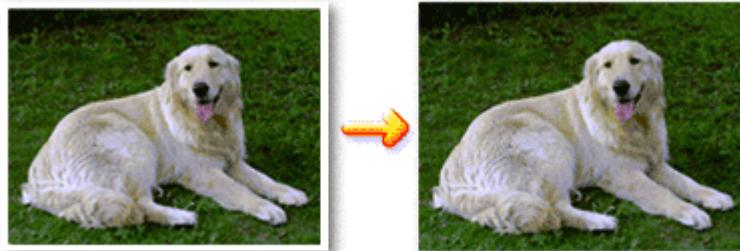


The procedure for performing borderless printing is as follows:

## Setting Borderless Printing

### 1. Open the printer driver setup window

### 2. Set borderless printing

Select Borderless from the Page Layout list on the Page Setup tab.

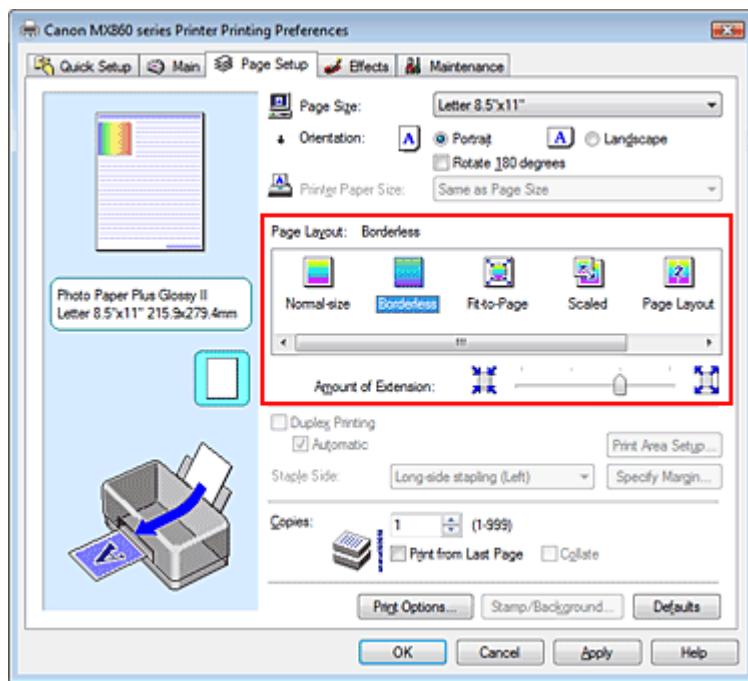

Click OK when the confirmation message appears.

When a message prompting you to change the media type appears, select a media type from the list and click OK.

### 3. Check the paper size

Check the Page Size list. If you want to change, select another page size from the list. The list displays only sizes that can be used for borderless printing.

### 4. Adjust the amount of extension from the paper

Adjust the amount of extension using the Amount of Extension slider as necessary.

Moving the slider to the right makes the amount larger and moving the slider to the left makes the amount smaller.

It is recommended to set the slider at the second position from the right for most cases.



### Important

- If you set the slider at the rightmost position, the back side of the paper may become smudged.

## 5. Complete the setup

Click OK.

The data will be printed without any margins on the paper.

### Important

- If a page size that cannot be used for borderless printing is selected, the size is automatically changed to the valid page sizes for borderless printing.
- When High Resolution Paper, T-Shirt Transfers, or Envelope is selected from the Media Type list on the Main tab, you cannot perform borderless printing.
- When Borderless is selected, the Printer Paper Size, Staple Side (when Duplex Printing is not selected) settings, and the Stamp/Background... button on the Page Setup tab appear grayed out and are unavailable.
- Print quality may deteriorate or the sheet may be stained at the top and bottom depending on the type of the media used.
- When the ratio of the height to the width differs greatly from the image data, a portion of the image may not be printed depending on the size of the media used.

In this case, crop the image data with an application software according to the paper size.

### Note

- When Plain Paper is selected for Media Type on the Main tab, borderless printing is not recommended, and therefore the dialog box for media selection appears.

If you are using plain paper for test printing, select Plain Paper, and click OK.

## Expanding the Range of the Document to Print

Specifying a large amount of extension allows you to perform borderless printing with no problems. However, the portion of the document that extends off the paper range will not be printed. Subjects around the perimeter of a photo may not be printed.

Try borderless printing once. If you are not satisfied with the result of borderless printing, reduce the amount of extension. The extension amount becomes shorter as the Amount of Extension slider is moved to the left.

### Important

- If the amount of extension is shortened, an unexpected margin may be produced on the print, depending on the size of the paper.

### Note

- If the Amount of Extension slider is set to the leftmost position, image data will be printed in the full size.
- If Preview before printing is checked on the Main tab, you can confirm before printing whether there will be no border.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Fit-to-Page Printing

### Fit-to-Page Printing




The procedure for printing document, which is enlarged or reduced to fit to the page size, is as follows:

#### 1. Open the printer driver setup window

#### 2. Set fit-to-page printing

Select Fit-to-Page from the Page Layout list on the Page Setup tab.

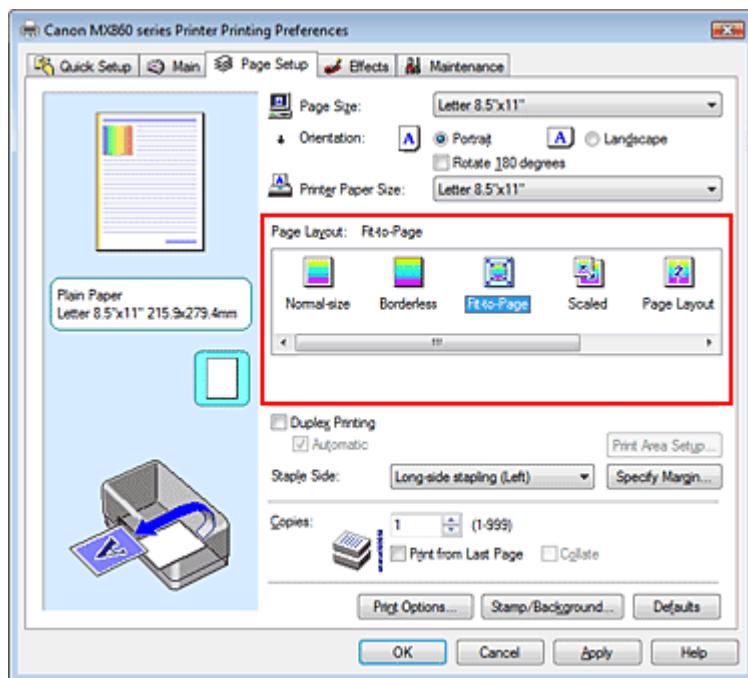

#### 3. Select the paper size for the data


Using Page Size, select the page size that was set with your application.

#### 4. Select the print paper size

Select the size of the paper loaded in the machine from the Printer Paper Size list.

If the printer paper size is smaller than the Page Size, the page image will be reduced. If the printer paper size is larger than the page size, the page image will be enlarged.

The current settings are displayed in the Settings Preview on the left side of the printer driver.

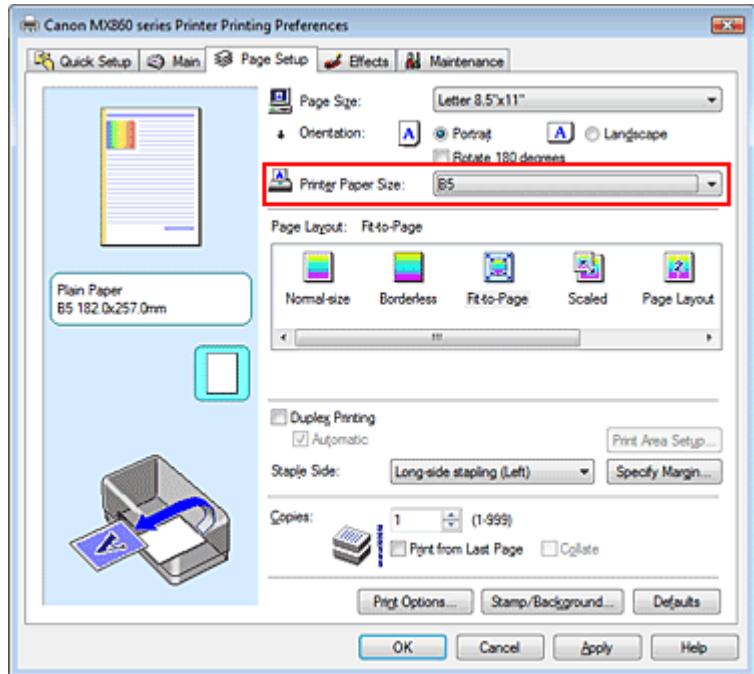

## 5. Complete the setup

Click OK.

When you execute print, the document will be enlarged or reduced to fit to the page size.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Scaled Printing

# Scaled Printing




The procedure for printing a document with pages enlarged or reduced is as follows:

### 1. Open the printer driver setup window

### 2. Set scaled printing

Select Scaled from the Page Layout list on the Page Setup tab.

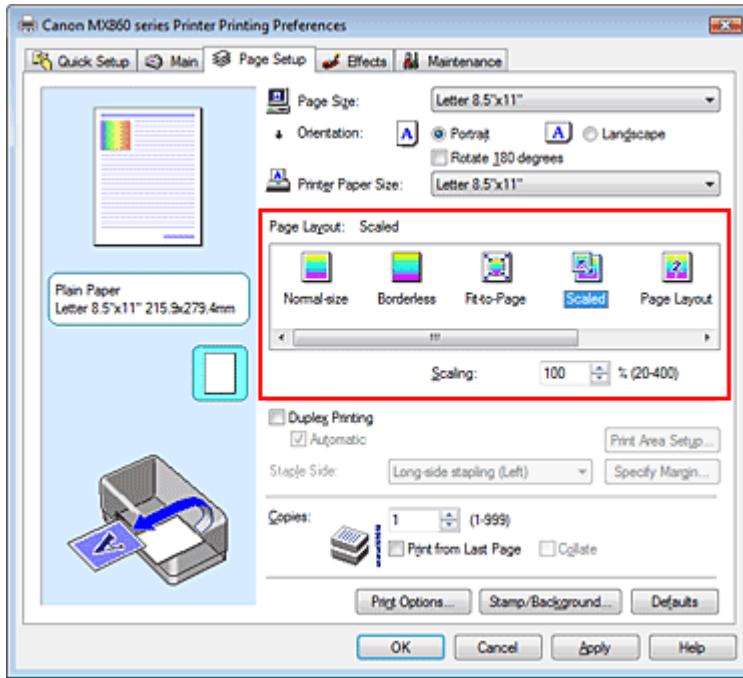


### 3. Select the paper size for the data

Using Page Size, select the page size that was set with your application.

### 4. Set the scaling rate by using one of the following methods:


- **Select a Printer Paper Size**

Select a printer paper size, which is different from the Page Size, from the Printer Paper Size list. If the printer paper size is smaller than the Page Size, the page image will be reduced. If the printer paper size is larger than the page size, the page image will be enlarged.

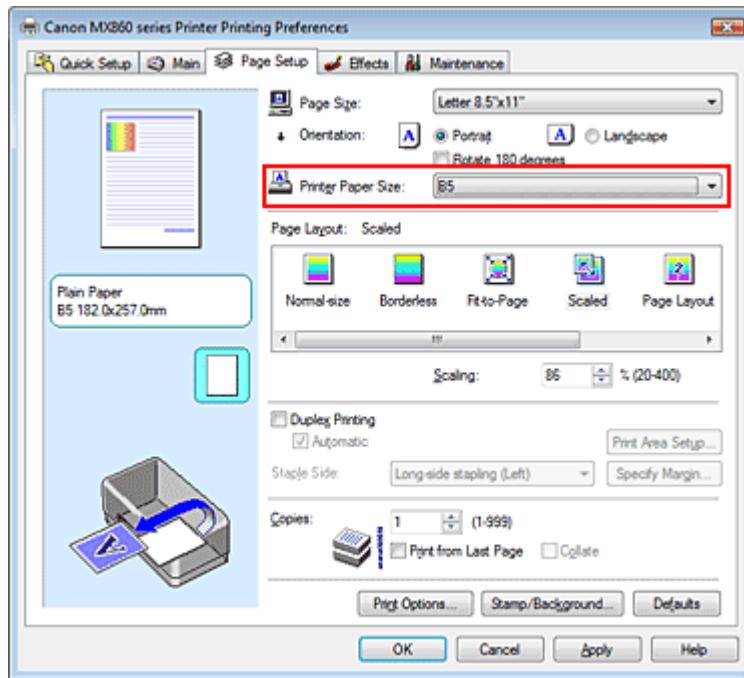

- Specify a scaling factor

Directly type in a value into the Scaling box.

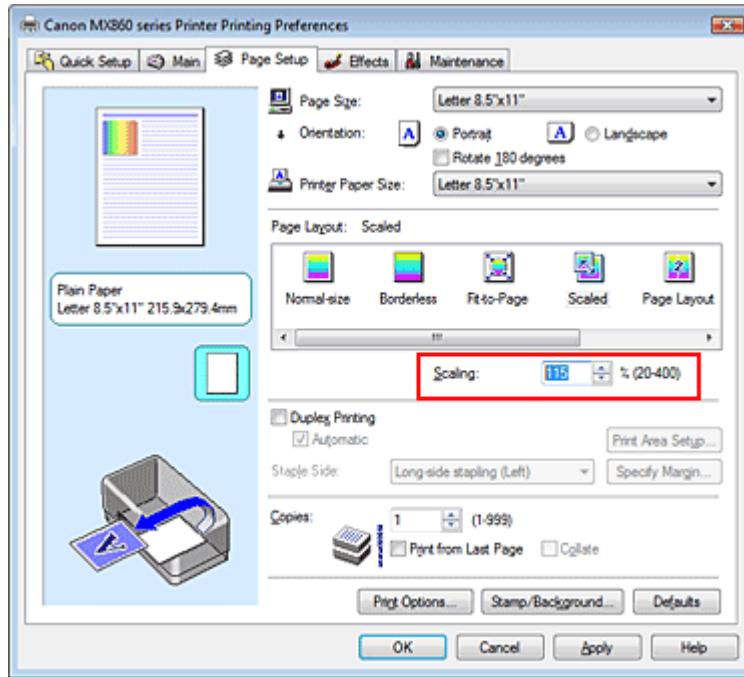

The current settings are displayed in the Settings Preview on the left side of the printer driver.

## 5. Complete the setup

Click OK.

When you execute print, the document will be printed with the specified scale.

### Important

- If the application software with which you created the original has the scaled printing function, configure the settings on your application software. You do not need to also configure the same setting in the printer driver.
- When Scaled is selected, the Staple Side list box appears grayed out and is unavailable (when Duplex Printing is not selected).

### Note


- Selecting Scaled changes the printable area of the document.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Page Layout Printing

# Page Layout Printing

The page layout printing function allows you to print more than one page image on a single sheet of paper.

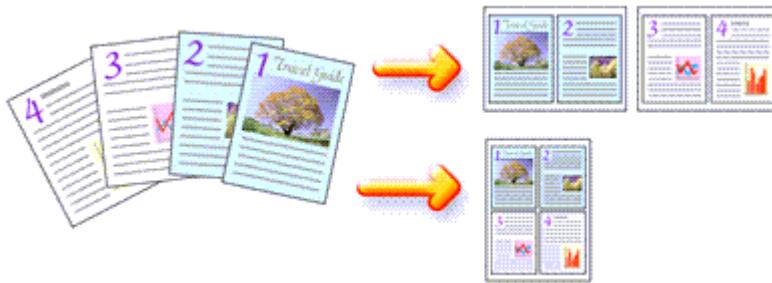


The procedure for performing page layout printing is as follows:

### 1. Open the printer driver setup window

### 2. Set page layout printing

Select Page Layout from the Page Layout list on the Page Setup tab.

The current settings are displayed in the Settings Preview on the left side of the printer driver.

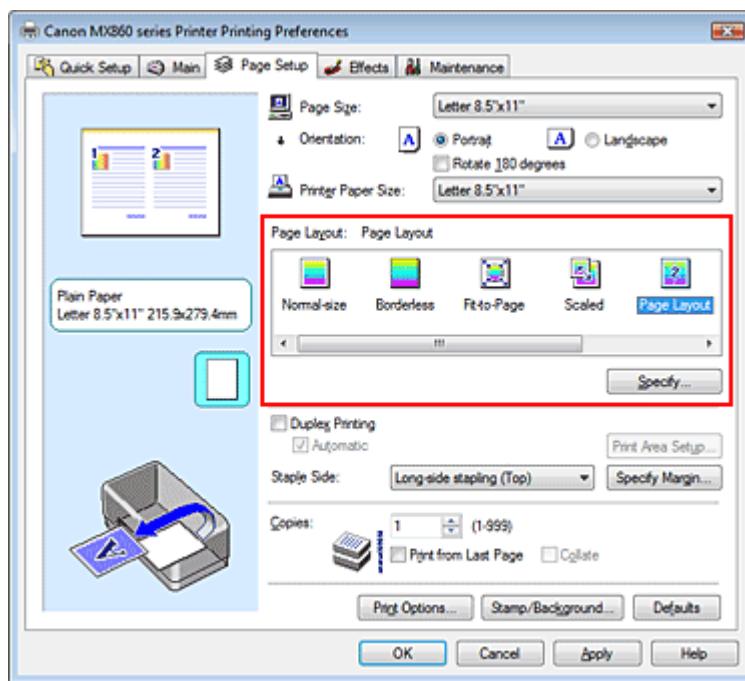


### 3. Select the print paper size

Select the size of the paper loaded in the machine from the Printer Paper Size list.  
Now you have finished setting the layout of the document from left to right.

### 4. Set the number of pages to be printed on one sheet and the page sequence

If necessary, click Specify..., specify the following settings in the Page Layout Printing dialog box, and click OK.

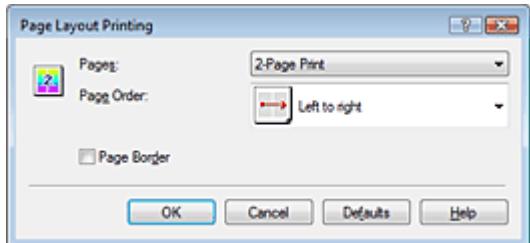**Pages**

To increase the number of pages to be included on a single sheet of paper, select a desired number of pages from the list.

**Page Order**

To change the page arrangement order, select an icon from the list to change the page placement order.

**Page Border**

To print a page border around each document page, check this check box.

## 5. Complete the setup

Click OK on the Page Setup tab.

When you execute print, the specified number of pages will be arranged on each sheet of paper in the specified order.


Page top ↑

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Poster Printing

### Poster Printing

The poster printing function allows you to enlarge image data, divide it into several pages, and print these pages on separate sheets of paper. When the pages are pasted together, they form a large print like a poster.

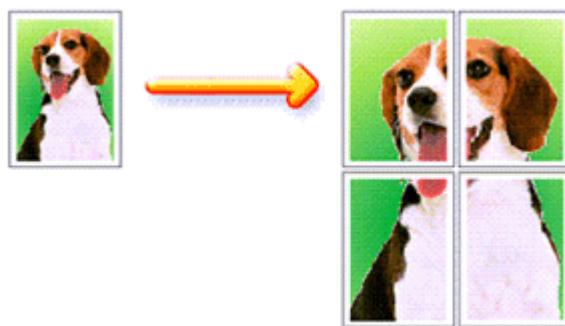

The procedure for performing poster printing is as follows:


#### Setting Poster Printing

##### 1. Open the printer driver setup window

##### 2. Set poster printing

Select Poster from the Page Layout list on the Page Setup tab.

The current settings are displayed in the Settings Preview on the left side of the printer driver.

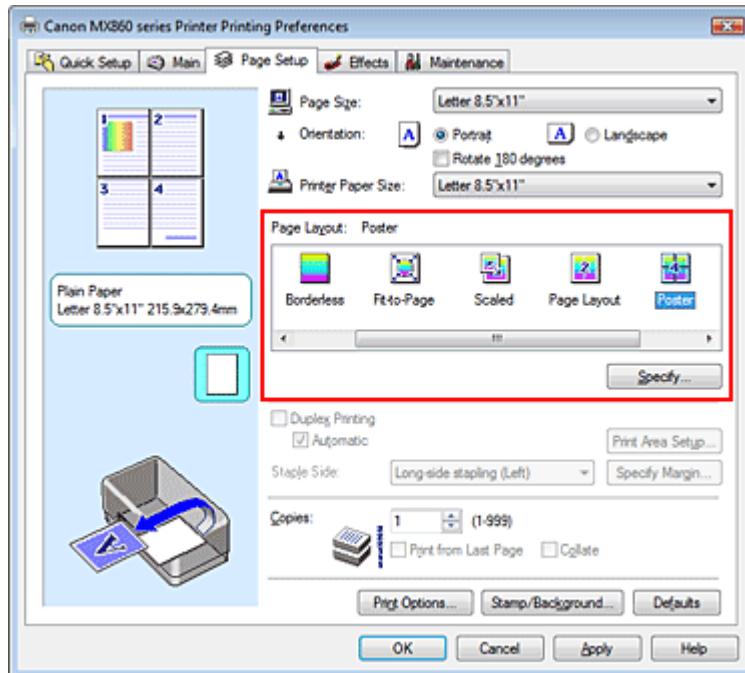


##### 3. Select the print paper size

Select the size of the paper loaded in the machine from the Printer Paper Size list.

Now you have finished setting 2 by 2-page poster printing.

##### 4. Set the number of image divisions and the pages to be printed.

If necessary, click Specify..., specify the following settings in the Poster Printing dialog box, and then click OK.

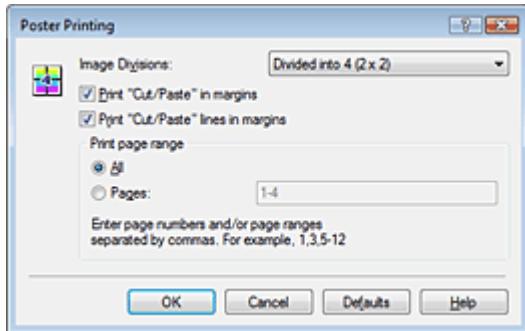

### Image Divisions

Select the number of divisions (vertical x horizontal) from the Image Divisions list. As the number of divisions increases, the number of sheets used for printing increases, allowing you to create a larger poster.

#### Print "Cut/Paste" in margins

To leave out words "Cut" and "Paste", uncheck this check box.

#### Important

- This feature is unavailable when the 64-bit printer driver is used.

#### Print "Cut/Paste" lines in margins

To leave out cut lines, uncheck this check box.

#### Pages

To reprint only specific pages, enter the page number you want to print. To print multiple pages, specify by separating the pages with commas or entering a hyphen between the page numbers.

#### Note

- You can also specify the print range by clicking the pages in the setup preview.

## 5. Complete the setup

Click OK on the Page Setup tab.

When you execute print, the document will be divided into several pages during printing.

After all poster pages have been printed, paste the pages together to create a poster.


### Printing Only Specific Pages

If ink becomes faint or runs out during printing, you can print the pages you still need, by following the procedure below:

#### 1. Set the print range

In the Settings Preview on the left of the Page Setup tab, click the pages that do not need to be printed.

The pages that were clicked are deleted, and only the pages to be printed are displayed.

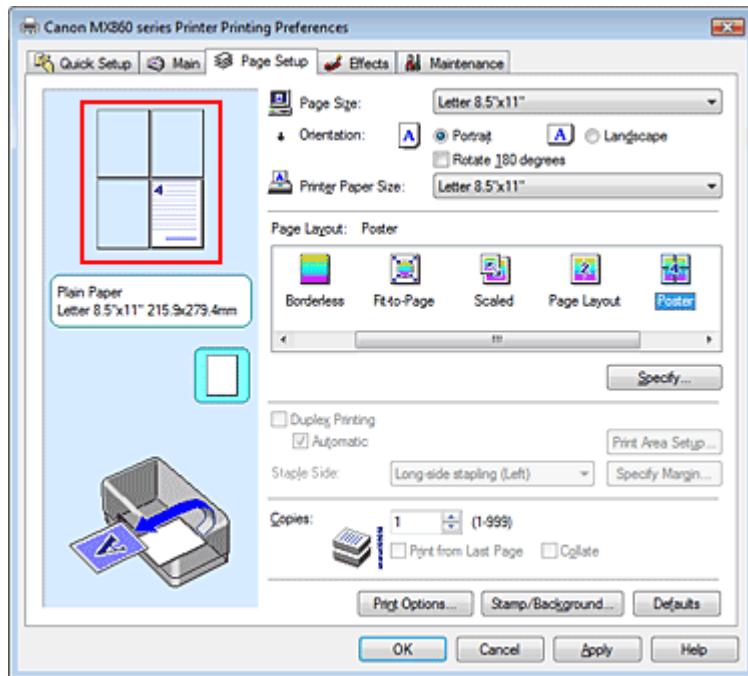

### Note

- Click the deleted pages to display them again.
- Right-click the Settings Preview to select Print all pages or Delete all pages.

## 2. Complete the setup

After completing the page selection, click OK.

When you execute print, only specified pages will be printed.

### Important

- When Poster is selected, the Duplex Printing and Print from Last Page check boxes and the Staple Side list box appear grayed out and are unavailable.
- Since poster printing enlarges the document when printing it, the print results may become coarse.


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Booklet Printing

### Booklet Printing

The booklet printing function allows you to print data for a booklet. Data is printed on both sides of the paper. This type of printing ensures that pages can be collated properly, in page number order, when the printed sheets are folded and stapled at the center.

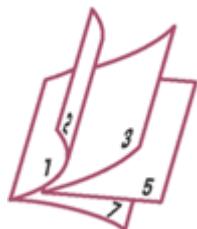


The procedure for performing booklet printing is as follows:

#### 1. Open the printer driver setup window

#### 2. Set booklet printing

Select Booklet from the Page Layout list on the Page Setup tab.

The current settings are displayed in the Settings Preview on the left side of the window.

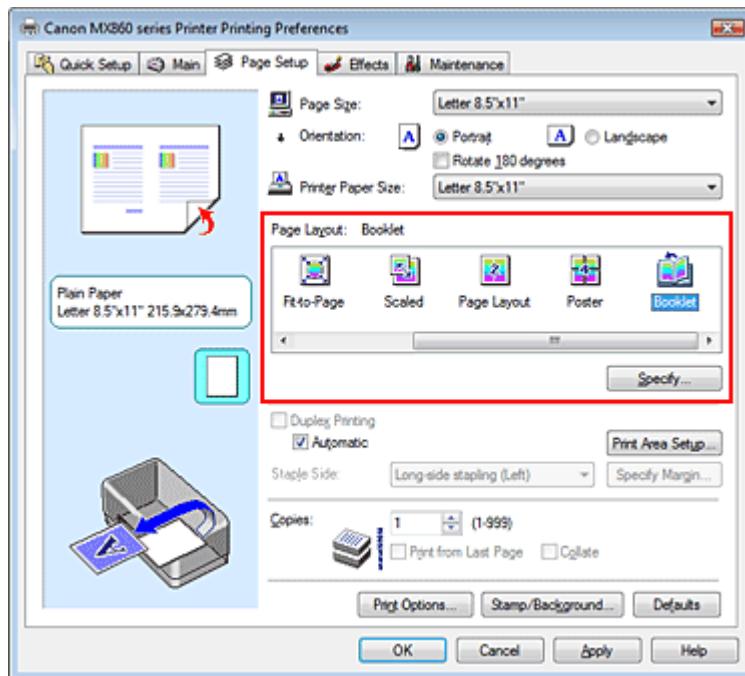


#### 3. Select the print paper size

Select the size of the paper loaded in the machine from the Printer Paper Size list.

#### 4. Set the margin for stapling and the margin width

Click Specify..., specify the following settings in the Booklet Printing dialog box, and then click OK.

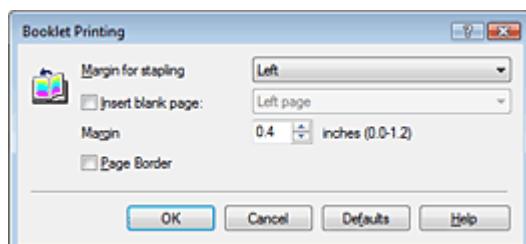

**Margin for stapling**

Select which side the stapling margin should be on when the booklet is completed.

**Insert blank page**

To leave one side of a sheet blank, check Insert blank page check box, and select the page to be left blank.

**Margin**

Enter the margin width. The specified width from the center of the sheet becomes the margin for one page.

**Page Border**

To print a page border around each document page, check the Page Border check box.

## 5. Complete the setup

Click OK on the Page Setup tab.

When you execute print, the document is automatically printed first on one side of a sheet of paper and then on the opposite side.

When the printing is complete, fold the paper at the center of the margin and make a booklet.

 **Important**

- Booklet cannot be selected when a media type other than Plain Paper or Hagaki is selected for Media Type.
- When Booklet is selected, Duplex Printing, Staple Side, Print from Last Page, and Collate appear grayed out and are unavailable.

 **Note**


- The stamp and background are not printed on blank sheets inserted with the Insert blank page function of Booklet Printing.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Duplex Printing

# Duplex Printing

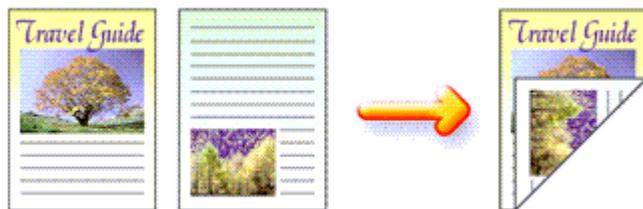

The procedure for printing data on both sides of a sheet of paper is as follows:


### Performing Automatic Duplex Printing

You can perform the duplex printing without having to turn over the paper.

#### 1. Open the printer driver setup window

#### 2. Set automatic duplex printing

Check the Duplex Printing check box and confirm that Automatic is checked on the Page Setup tab.

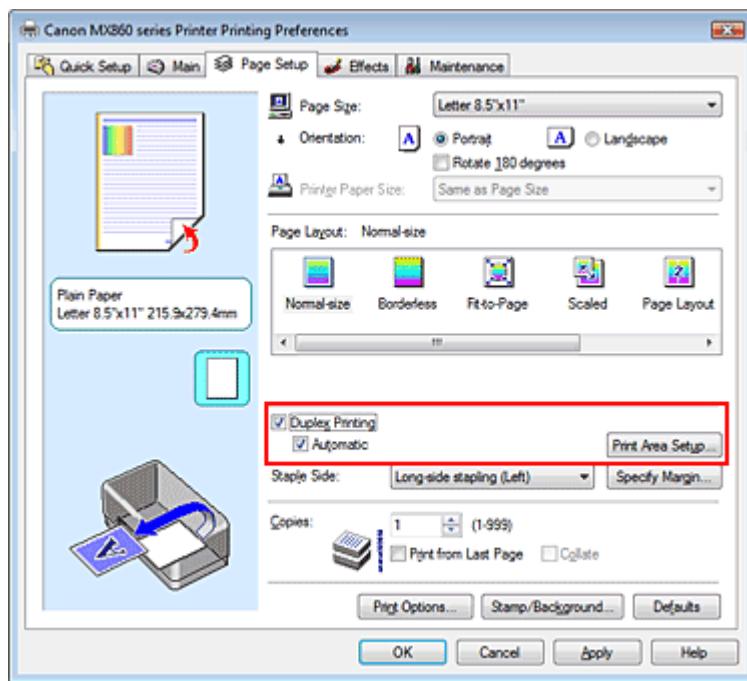


#### 3. Select the layout

Select Normal-size (or Fit-to-Page, Scaled or Page Layout) from the Page Layout list.

#### 4. Set the print area

When you perform duplex printing, the print area of the document becomes slightly narrower than usual and the document may not fit on one page.

Click Print Area Setup..., and select one of the following processing methods.

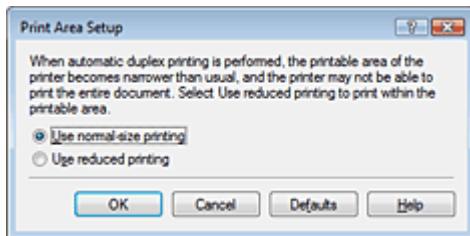

#### Use normal-size printing

Print without reducing the page.

#### Use reduced printing

Reduce the page slightly during printing.

### 5. Specify the side to be stapled

The printer analyzes the Orientation and Page Layout settings, and automatically selects the best Staple Side. If you want to change the setting, select another value from the list.

### 6. Set the margin width

If necessary, click **Specify Margin...** and set the width of the stapling margin, and then click **OK**.

### 7. Complete the setup

Click **OK** on the Page Setup tab.

Duplex printing will be started.


## Performing Duplex Printing Manually

You can perform the duplex printing manually.

### 1. Open the printer driver setup window

### 2. Set duplex printing

Check the Duplex Printing check box and uncheck the Automatic check box on the Page Setup tab.

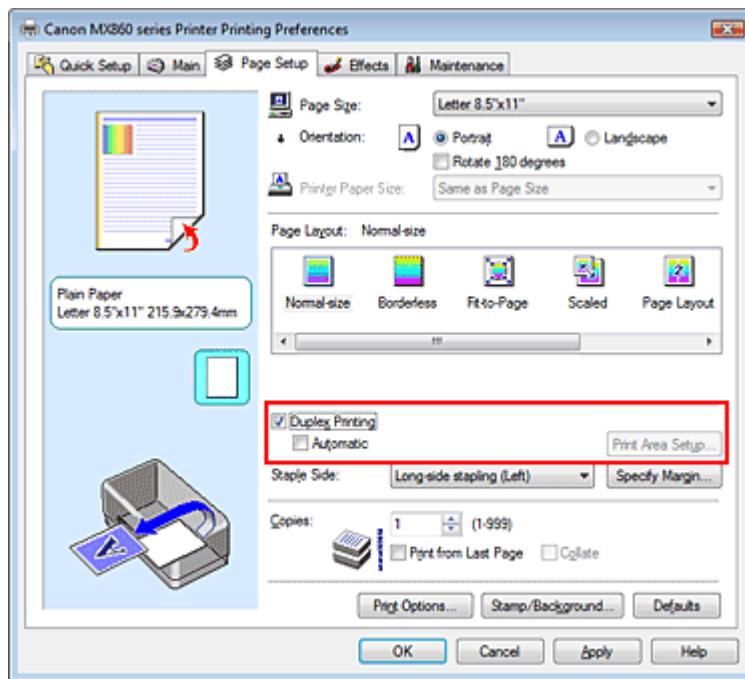

### 3. Select the layout

Select Normal-size (or Fit-to-Page, Scaled or Page Layout) from the Page Layout list.

### 4. Specify the side to be stapled

The printer analyzes the Orientation and Page Layout settings, and automatically selects the best

Staple Side. If you want to change the setting, select another value from the list.

## 5. Set the margin width

If necessary, click Specify Margin... and set the width of the stapling margin, and then click OK.

## 6. Complete the setup

Click OK on the Page Setup tab.

When you execute print, the document will be printed on one side of a sheet of paper. When the printing of one side is complete, set the paper correctly by following the message and click OK. The document will be printed on the opposite side.

### Important

- Duplex Printing is unavailable when:
  - A media type other than Plain Paper or Hagaki is selected from the Media Type list.
  - Poster is selected from the Page Layout list.
- When Booklet is selected from the Page Layout list, Duplex Printing and Staple Side appear grayed out and are unavailable.
- After printing the front page, there is an ink drying wait time before starting to print the back page (Operation stops temporarily). Do not touch the paper during the time. You can change the ink drying wait time at Custom Settings on the Maintenance tab.
- When you perform the automatic duplex printing for Hagaki, print an address first and then print your message.

### Note

- If the Media Type dialog box appears when performing borderless printing during duplex printing, select Plain Paper.
- When performing the automatic duplex printing, do not use any plain paper smaller than A5. Also, do not select any type of paper other than Plain Paper or Hagaki at Media Type.
- If the back side of the paper becomes smudged during duplex printing, perform Bottom Plate Cleaning in the Maintenance tab.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Stamp/Background Printing

# Stamp/Background Printing

This feature is unavailable when the 64-bit printer driver is used.


The Stamp function allows you to print a stamp text or a bitmap over or behind document data. It also allows you to print date, time and user name. The Background function allows you to print a light illustration behind the document data.

The procedure for performing stamp/background printing is as follows:


## Printing a Stamp

"CONFIDENTIAL," "IMPORTANT," and other stamps that are used often in companies are pre-registered.

1. Open the printer driver setup window
2. Click Stamp/Background... on the Page Setup tab

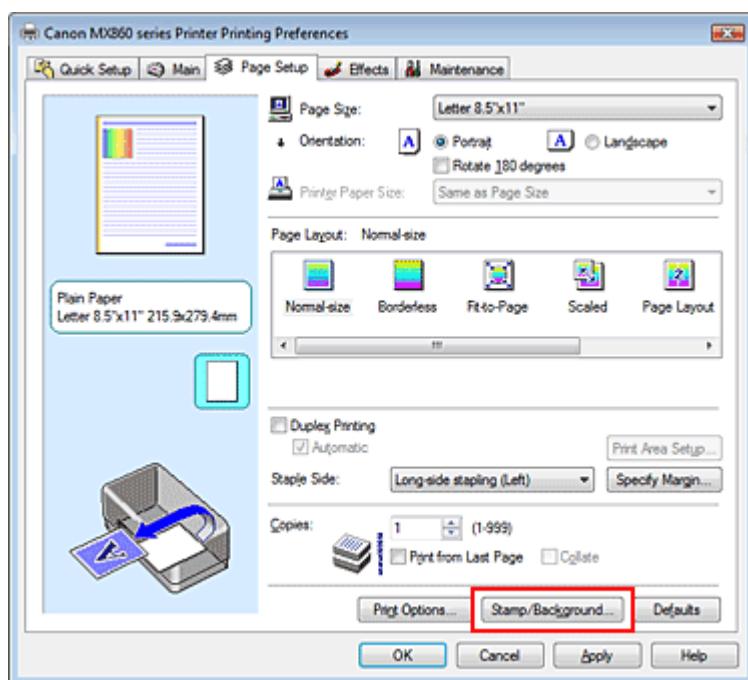

The Stamp/Background dialog box opens.

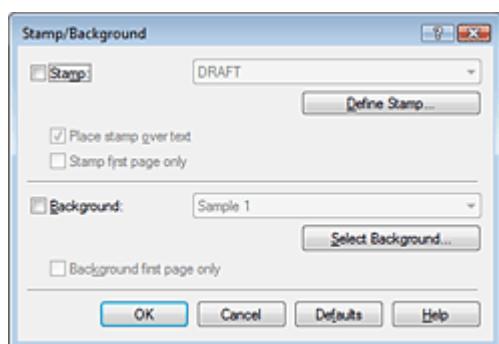

3. Select a stamp

Check the Stamp check box, and select a desired stamp from the list.

The current settings are displayed in the Settings Preview on the left side of the Page Setup tab.

4. Set the stamp details

If necessary, complete the following settings, and then click OK.

**Place stamp over text**

To print the stamp on the front of the document, check this check box.

 **Note**

- The stamp is given priority because the stamp is printed over the document data in the sections where the stamp and the document data overlap. If the Place stamp over text check box is unchecked, the stamp is printed behind the document data and may be hidden in the overlapping sections depending on the application used.

**Stamp first page only**

To print the stamp only on the first page, check this check box.

**Define Stamp... button**

To change the stamp text, bitmap, or position, click this (refer to Saving a Stamp Setting).

## 5. Complete the setup

Click OK on the Page Setup tab.

When you execute print, the data is printed with the specified stamp.

## Printing a Background

### 1. Select the background for which the settings are to be changed

Two bitmap files are pre-registered as samples.

### 2. Click Stamp/Background... on the Page Setup tab

The Stamp/Background dialog box opens.

### 3. Select the background

Check the Background check box, and select a desired background from the list.

The current settings are displayed in the Settings Preview on the left side of the Page Setup tab.

### 4. Set the background details

If necessary, complete the following settings, and then click OK.

**Background first page only**

To print the background only on the first page, check this check box.

**Select Background... button**

To use another bitmap file or change the layout or density of a background, click this (refer to [Saving Image Data to be Used as a Background](#) ).

## 5. Complete the setup

Click OK on the Page Setup tab.

When you execute print, the data is printed with the specified background.

 **Important**

- When Borderless is selected, the Stamp/Background... button appears grayed out and is unavailable.

 **Note**

- The stamp and background are not printed on blank sheets inserted with the Insert blank page function of Booklet Printing.

## Related Topics

▶ [Saving a Stamp Setting](#)

▶ [Saving Image Data to be Used as a Background](#)



[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Stamp/Background Printing > Saving a Stamp Setting

# Saving a Stamp Setting


This feature is unavailable when the 64-bit printer driver is used.

You can create and save a new stamp. You can also change and register some of the settings of an existing stamp. Unnecessary stamps can be deleted at any time.


The procedure for registering a new stamp is as follows:

## Registering a New Stamp

1. Open the printer driver setup window
2. Click Stamp/Background... on the Page Setup tab

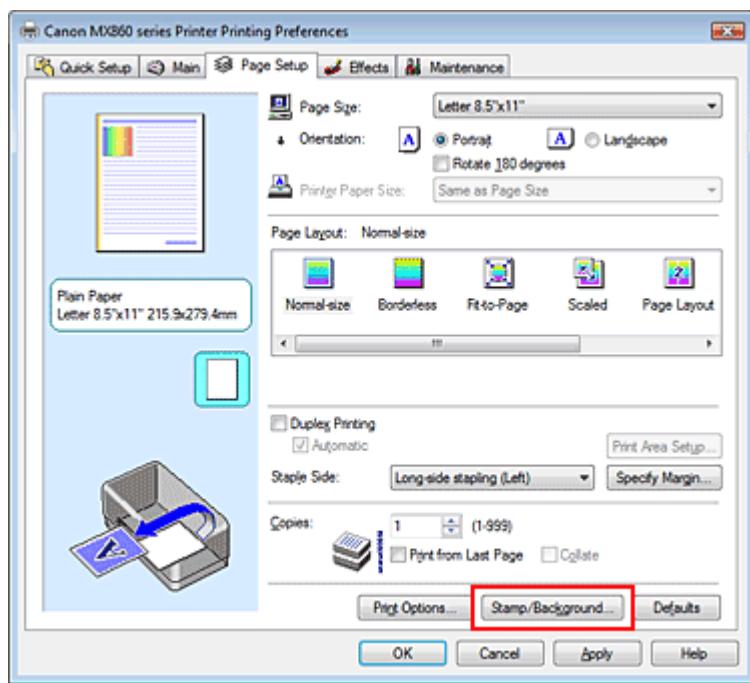


The Stamp/Background dialog box opens.

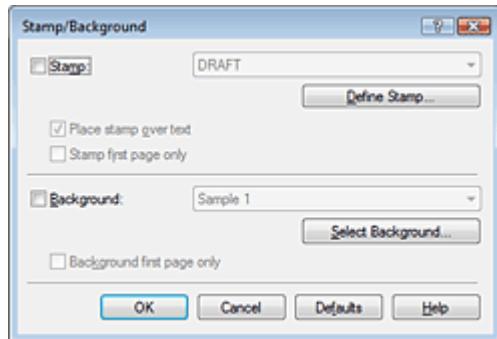

3. Click Define Stamp...

The Stamp Settings dialog box opens.

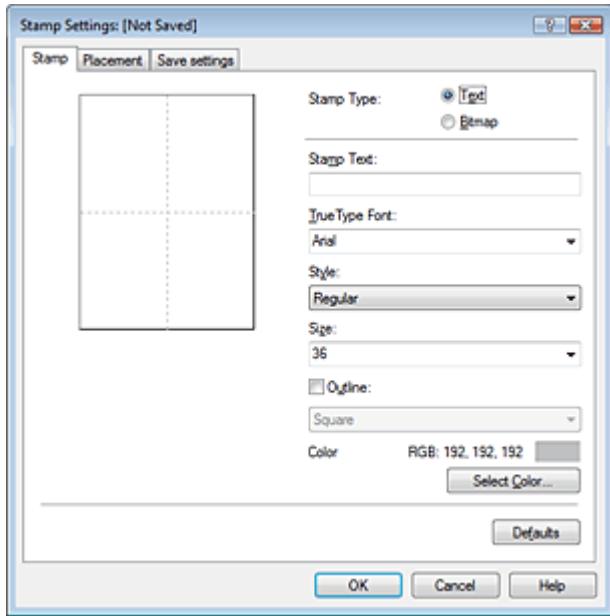

#### 4. Configure the stamp while viewing the preview window

- **Stamp tab**

Select Text, Bitmap, or Date/Time/User Name for Stamp Type.

- For Text registration, the characters must already be entered in Stamp Text. Change the TrueType Font, Style, Size, and Outline settings, as necessary. You can select the color of the stamp by clicking Select Color....
- For Bitmap, click Select File... and select the bitmap file (.bmp) to be used. Change the settings of the Size and Transparent white area if necessary.
- For Date/Time/User Name, the creation date/time and user name of the printed object are displayed in Stamp Text. Change the settings of TrueType Font, Style, Size, and Outline, if necessary. You can select the color of the stamp by clicking Select Color....

 **Important**

- Stamp Text appears grayed out and is unavailable if Date/Time/User Name is selected.

- **Placement tab**

Select the stamp position from the Position list. You can also select Custom from the Position list and specify coordinates for X-Position and Y-Position.

You can also change the stamp position by dragging the stamp in the preview window.

To change the stamp position angle, type a value in the Orientation box directly.

#### 5. Save the stamp

Click the Save settings tab and enter a new stamp title in the Title box, and then click Save. Click OK when the confirmation message appears.

#### 6. Complete the setup

Click OK. The Stamp/Background dialog box opens again. The registered title appears in the Stamp list.

### Changing and Registering Some of Stamp Settings

#### 1. Select the stamp for which the settings are to be changed

Check the Stamp check box in the Stamp/Background dialog box, and then select the title of the stamp to be changed from the Stamp list.

#### 2. Click Define Stamp...

The Stamp Settings dialog box opens.

**3. Configure the stamp while viewing the preview window****4. Save the stamp**

Click Save overwrite on the Save settings tab.

If you want to save the stamp with a different title, type a new title in the Title box and click Save.

Click OK when the confirmation message appears.

**5. Complete the setup**

Click OK. The Stamp/Background dialog box opens again.

The registered title appears in the Stamp list.

**Deleting an Unnecessary Stamp****1. Click Define Stamp... in the Stamp/Background dialog box**

The Stamp Settings dialog box opens.

**2. Select the stamp to be deleted**

Select the title of the stamp you want to delete from the Stamps list on the Save settings tab. Then click Delete.

Click OK when the confirmation message appears.

**3. Complete the setup**

Click OK. The Stamp/Background dialog box opens again.



[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Stamp/Background Printing > Saving Image Data to be Used as a Background

# Saving Image Data to be Used as a Background


This feature is unavailable when the 64-bit printer driver is used.

You can select a bitmap file and save it as a new background. You can also change and register some of the settings of an existing background. An unnecessary background can be deleted at any time.


The procedure for registering image data to be used as a background is as follows:

## Registering Image Data to be Used as a Background

1. Open the printer driver setup window
2. Click Stamp/Background... on the Page Setup tab

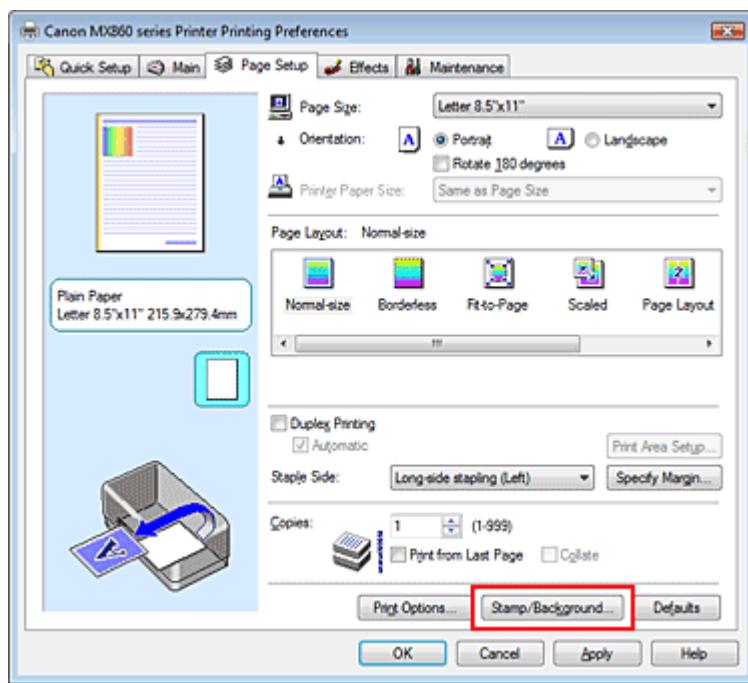


The Stamp/Background dialog box opens.

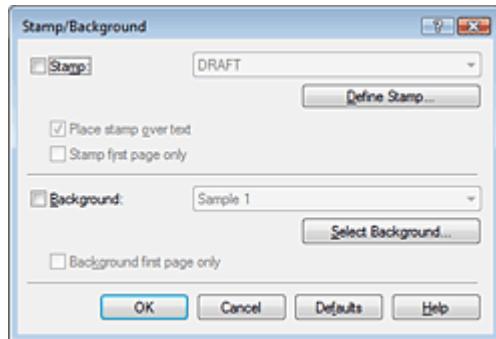

3. Click Select Background...

The Background Settings dialog box opens.

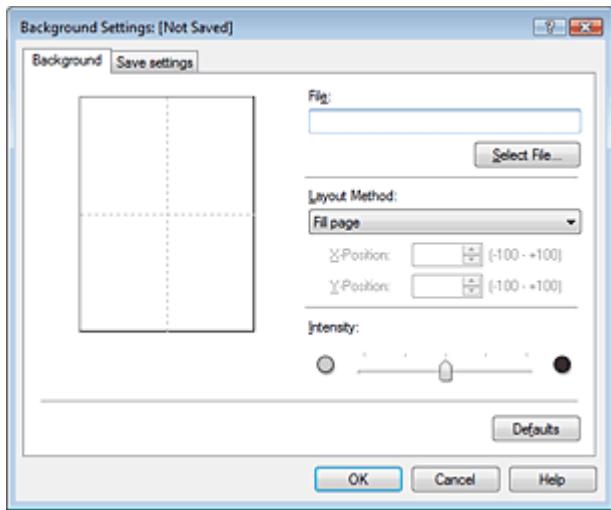

#### 4. Select the image data to be registered to the background

Click Select File.... Select the target image data (bitmap file), and then click Open.

#### 5. Specify the following settings while viewing the preview window

##### Layout Method

Select how the background image data is to be placed.

When Custom is selected, you can set coordinates for X-Position and Y-Position.

You can also change the background position by dragging the image in the preview window.

##### Intensity

Set the intensity of the background image data with the Intensity slider. To lighten the background, move the slider to the left. To darken the background, move the slider to the right. To print the background at the original bitmap intensity, move the slider to the rightmost position.

#### 6. Save the background

Click the Save settings tab and enter a new stamp title in the Title box, and then click Save.

Click OK when the confirmation message appears.

#### 7. Complete the setup

Click OK. The Stamp/Background dialog box opens again.

The registered title appears in the Background list.

### Changing and Saving Some Background Settings

#### 1. Select the background for which the settings are to be changed

Check the Background check box in the Stamp/Background dialog box, and then select the title of the background you want to change from the Background list.

#### 2. Click Select Background...

The Background Settings dialog box opens.

#### 3. While viewing the preview, set the items on the Background tab

#### 4. Save the background

Click Save overwrite on the Save settings tab. If you want to save the background with a different title, type a new title in the Title box and click Save.

Click OK when the confirmation message appears.

#### 5. Complete the setup

Click OK. The Stamp/Background dialog box opens again.

The registered title appears in the Background list.

## Deleting an Unnecessary Background

1. Click Select Background... in the Stamp/Background dialog box

The Background Settings dialog box opens.

2. Select the background to be deleted

Select the title of the background you want to delete from the Backgrounds list on the Save settings tab, and then click Delete.

Click OK when the confirmation message appears.

3. Complete the setup

Click OK. The Stamp/Background dialog box opens again.



[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Printing an Envelope

# Printing an Envelope

For details on how to load an envelope into the machine, refer to "Loading Paper in the Rear Tray" in the manual: Basic Guide.

The procedure for performing envelope printing is as follows:

## 1. Load an envelop into the machine

Fold down the envelope flap.


Orient the envelope so that the flap is on the left and the folded surface is facing down.



## 2. Open the printer driver setup window

## 3. Select the media type

Select Envelope from Commonly Used Settings on the Quick Setup tab.

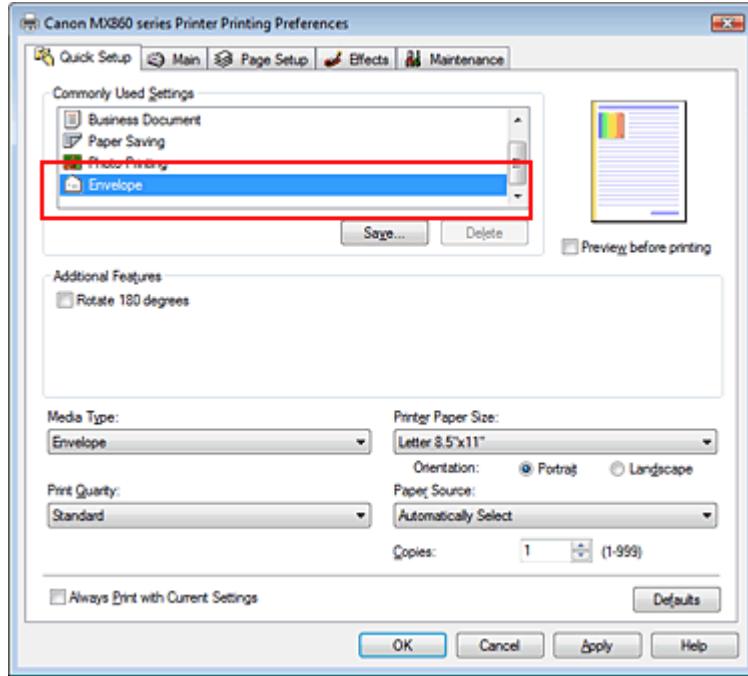

## 4. Select the paper size

Select Youkei 4, Youkei 6, Comm.Env. #10, or DL Env. in the Envelope Size Setting dialog box, and then click OK.

## 5. Select the landscape for orientation

To print the addressee horizontally, select Landscape for Orientation.

## 6. Select the print quality

Select High or Standard for Print Quality.

## 7. Complete the setup

Click OK.

When you execute print, the information is printed on the envelope.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Switching the Paper Source to Match the Purpose

# Switching the Paper Source to Match the Purpose

In this machine, there are two paper sources, a rear tray and a cassette.


You can facilitate printing by selecting a paper source setting that matches your print conditions or purpose.

The procedure for setting paper source is as follows:

## 1. Open the printer driver setup window

## 2. Select the paper source

From the Paper Source list on the Main tab, select the paper source that matches your purpose.

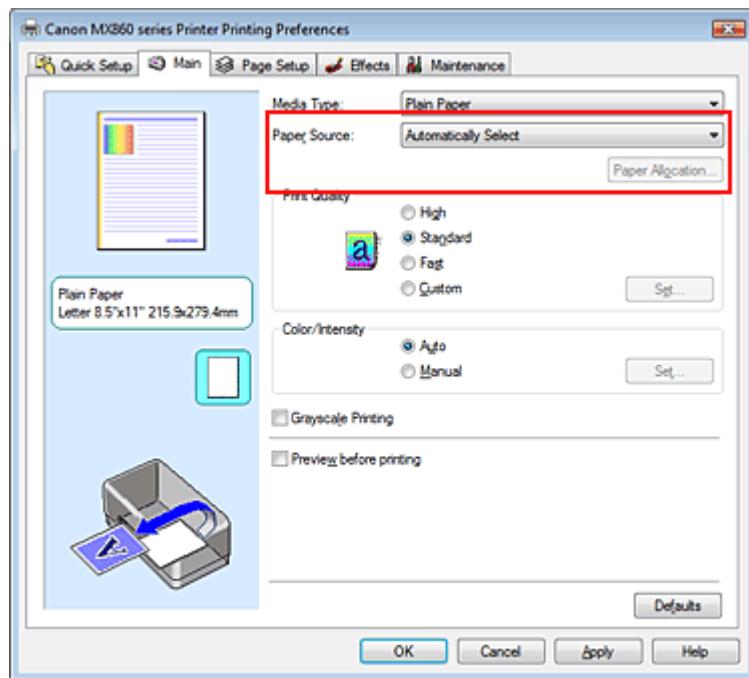

### Automatically Select

Plain paper whose Page Size is Letter 8.5"x11", A5, A4, or B5 is fed from the cassette. Other sizes of plain paper and paper types other than plain paper are fed from the rear tray.

### Rear Tray

Paper is always fed from the rear tray.

### Cassette

Paper is always fed from the cassette.

### Important

- Plain paper that is not Letter 8.5"x11", A5, A4, or B5 and paper types other than plain paper cannot be fed from the cassette.

### Continuous Autofeed

If plain paper runs out in the specified paper source, the printer automatically switches the paper source.

When printing a large volume of data, load plain paper of the same size in both paper sources. You can therefore reduce the trouble of having to load paper because the printer automatically switches the paper source when paper runs out in one paper source.

### Important

- Continuous Autofeed is unavailable when paper other than Plain Paper is selected for Media Type.

- Since the printer feeds paper from the paper source that was being used the last time Continuous Autofeed was selected and printing ended, load the same paper in both the rear tray and the cassette.

#### Paper Allocation

If the media type for the print data is plain paper and the paper size matches the paper allocation setting, the printer automatically feeds paper from the cassette. If not, the printer feeds paper from the rear tray.

To change the paper allocation settings, click Paper Allocation..., specify the Paper Size to be loaded in the cassette, and then click OK.

If you load frequently used plain paper in the cassette, the printer feeds paper from the rear tray when the print data uses a different type of paper. You can therefore reduce the trouble of having to load different paper.

### 3. Complete the setup

Click OK.

When you execute print, the printer uses the specified paper source to print the data.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Displaying the Print Results before Printing

# Displaying the Print Results before Printing

You can display and check the print result before printing.


The procedure for displaying the print result before printing is as follows:

You can also set the print results display on the Quick Setup tab.

### 1. Open the printer driver setup window

### 2. Set the preview

Check the Preview before printing check box on the Main tab.

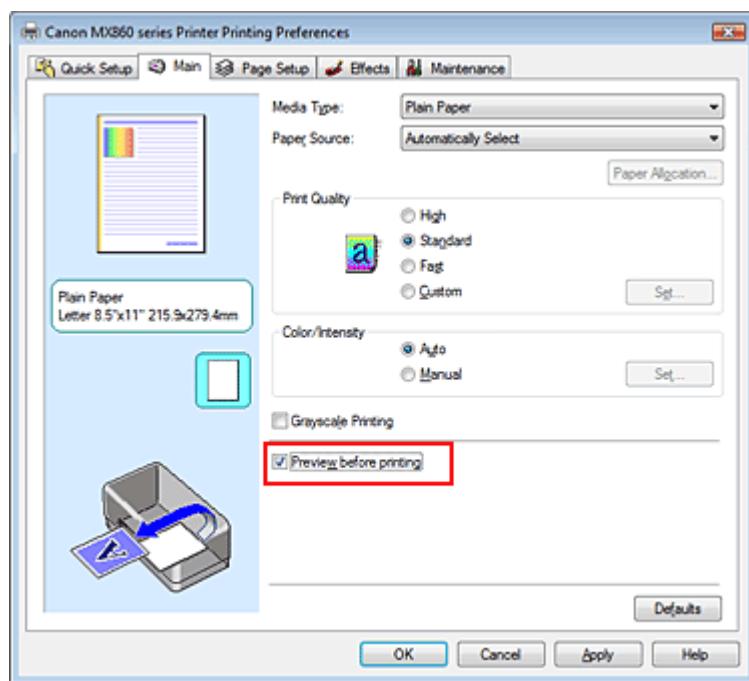

### 3. Complete the setup

Click OK.

The Canon IJ Preview will start and the print result will be displayed before printing.

## Related Topic

▶ [Canon IJ Preview](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Various Printing Methods > Setting Paper Dimensions (Custom Size)

# Setting Paper Dimensions (Custom Size)

You can specify the height and width of paper if its size cannot be selected in Page Size. Such a paper size is called a custom size.

The procedure for specifying a custom size is as follows:

You can also set a custom size in Printer Paper Size on the Quick Setup tab.

## 1. Set the custom size in the application software

On your application's paper size feature, specify your custom size.


### Important

- If the application software that created the document has a function for specifying the height and width values, use the application software to set the values. If the application software does not have such a function or if the document does not print correctly, use the printer driver to set the values.


## 2. Open the printer driver setup window

## 3. Select the paper size

Select Custom... for Page Size on the Page Setup tab.

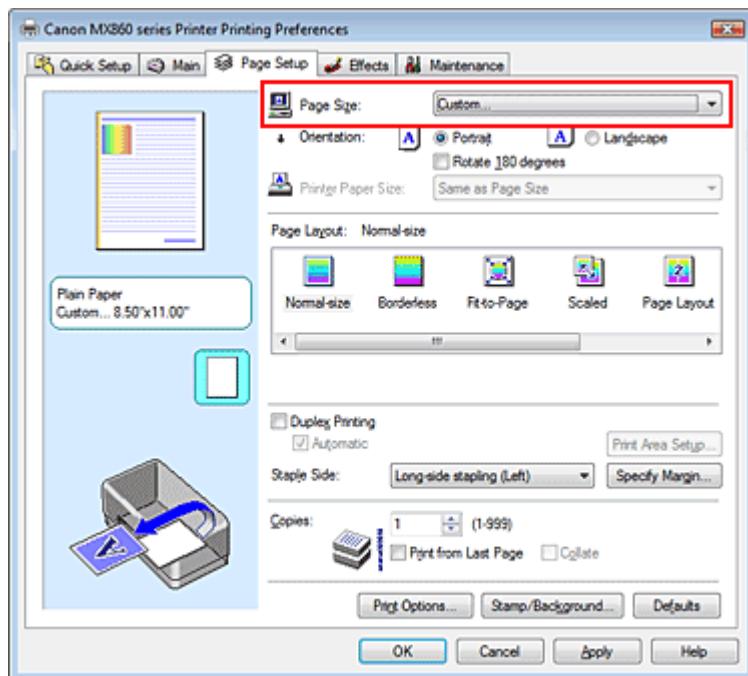

The Custom Paper Size dialog box opens.

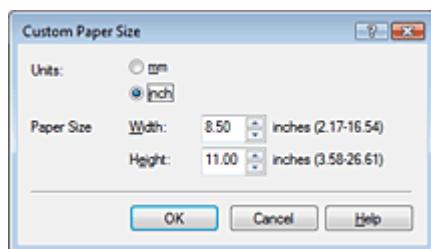

## 4. Set the custom size in the application software

Specify Units, and enter the Width and Height of the paper to be used. Then click OK.

## 5. Complete the setup

Click OK on the Page Setup tab.

When you execute print, the data is printed with the specified paper size.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data

# Changing the Print Quality and Correcting Image Data

- ▶ Selecting a Combination of the Print Quality Level and a Halftoning Method
- ▶ Printing a Color Document in Monochrome
- ▶ Specifying Color Correction
- ▶ Optimal Photo Printing of Image Data
- ▶ Adjusting Colors with the Printer Driver
- ▶ Printing with ICC Profiles
- ▶ Adjusting Color Balance
- ▶ Adjusting Brightness
- ▶ Adjusting Intensity
- ▶ Adjusting Contrast
- ▶ Simulating an Illustration
- ▶ Representing Image Data with a Single Color
- ▶ Presenting Image Data with Vivid Colors
- ▶ Smoothing Jagged Outlines
- ▶ Changing Color Properties to Improve Coloration
- ▶ Reducing Photo Noise

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Selecting a Combination of the Print Quality Level and a Halftoning Method

# Selecting a Combination of the Print Quality Level and a Halftoning Method

You can set the print quality level and the halftoning method.




The procedure for setting the print quality level and the halftoning method is as follows:


### 1. Open the printer driver setup window

### 2. Select the print quality

Select Custom for Print Quality on the Main tab, and click Set....

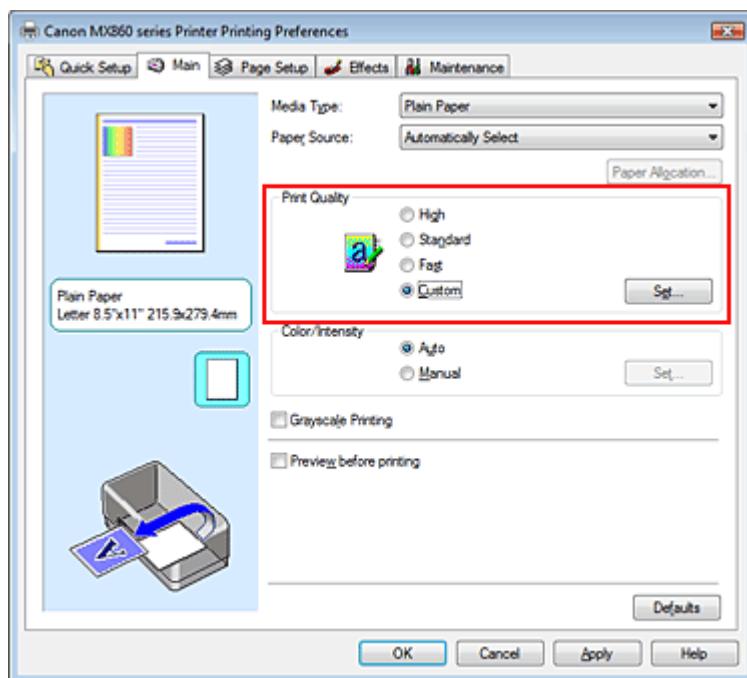

The Custom dialog box opens.

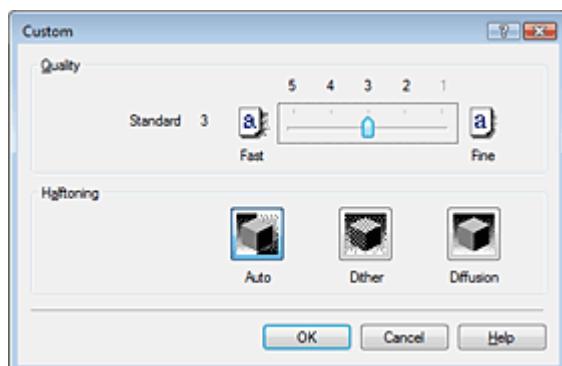

### 3. Setting the print quality and halftone expression method

Move the Quality slider to select the quality level.

Select Halftoning and click OK.

 **Note**

- Halftones refer to color shades between the darkest color and the brightest color.  
The printer replaces the color shades with a collection of small dots to express the halftones.  
Dither arranges the dots according to fixed rules to express the halftones. Diffusion places the dots randomly to express the halftones. When you select Auto, the data is printed with the optimal halftoning method for the selected print quality.

**4. Complete the setup**

Click OK on the Main tab.

When you execute print, the data is printed with the specified quality level and halftoning method.

 **Important**

- Certain print quality levels and halftoning methods cannot be selected depending on the settings of Media Type.

 **Note**

- When the part of the object is not printed, selecting Diffusion for Halftoning may solve the problem.

**Related Topics**


- ▶ Specifying Color Correction
- ▶ Adjusting Color Balance
- ▶ Adjusting Brightness
- ▶ Adjusting Intensity
- ▶ Adjusting Contrast

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Printing a Color Document in Monochrome

### Printing a Color Document in Monochrome

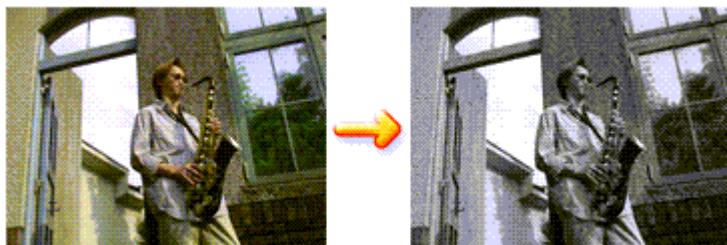


The procedure for printing a color document in monochrome is as follows:

You can also set a grayscale printing in Additional Features on the Quick Setup tab.

#### 1. Open the printer driver setup window

#### 2. Set grayscale printing

Check the Grayscale Printing check box on the Main tab.

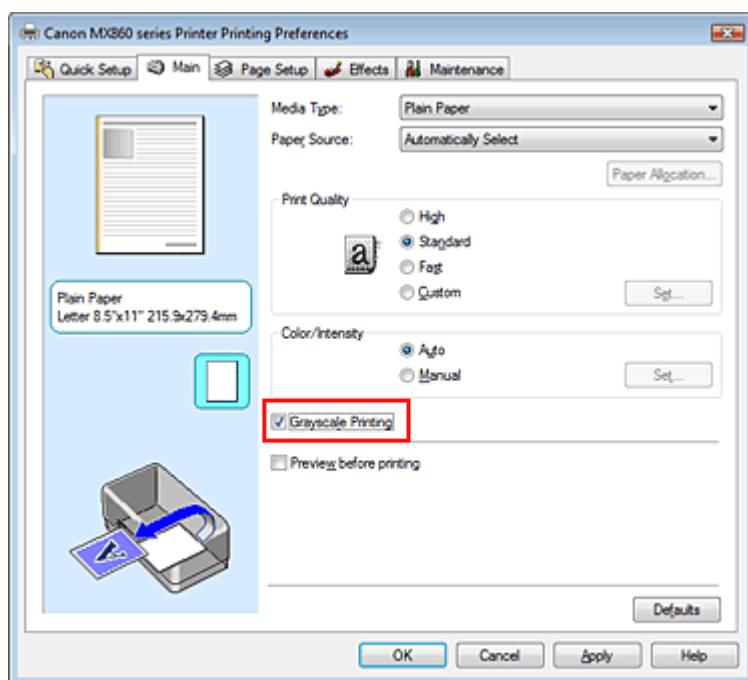

#### 3. Complete the setup

Click OK.

When you execute print, the document is converted to grayscale data. It allows you to print the color document in monochrome.

#### Important

- When the Grayscale Printing check box is checked, the printer driver processes image data as sRGB data. In this case, actual colors printed may differ from those in the original image data. When using the grayscale printing function to print Adobe RGB data, convert the data to sRGB data using an application software.

#### Note

- During Grayscale Printing, color inks may be used as well as black ink.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Specifying Color Correction

# Specifying Color Correction

You can specify the color correction method suited to the type of document to be printed.

Normally, the printer driver adjusts the colors by using Canon Digital Photo Color so that data is printed with color tints that most people prefer. This method is suitable for printing sRGB data.

If you want to print by using the color space of sRGB or Adobe RGB data effectively, select ICM. If you want to use an application software to specify an ICC profile, select None.


The procedure for specifying color correction is as follows:

You can also set color correction on the Quick Setup tab by choosing Photo Printing under Commonly Used Settings, and then choosing Color/Intensity Manual Adjustment under Additional Features.

### 1. Open the printer driver setup window

### 2. Select the manual color adjustment


On the Main tab, select Manual for Color/Intensity, and click Set....

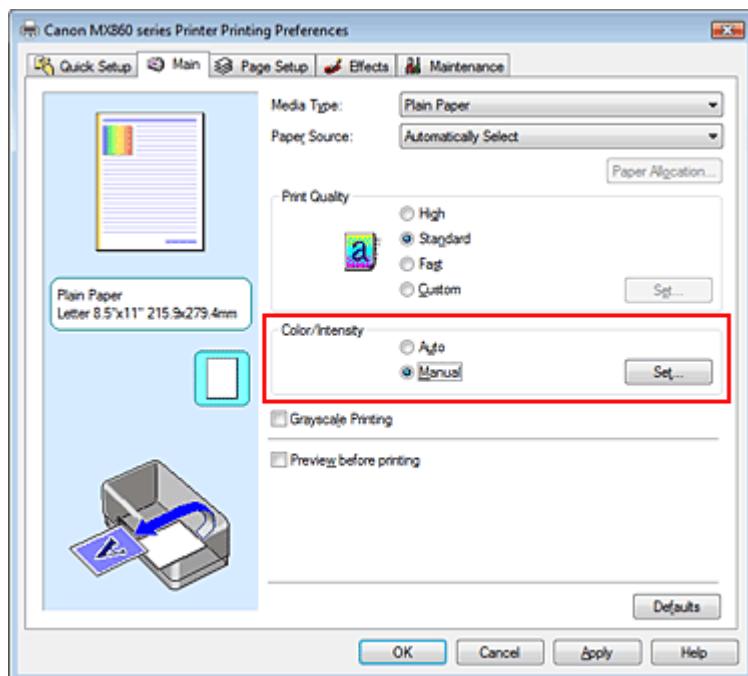

The Manual Color Adjustment dialog box opens.

### 3. Select color correction

Click Matching tab, select Color Correction setting suited to your purpose from the following, and click OK.

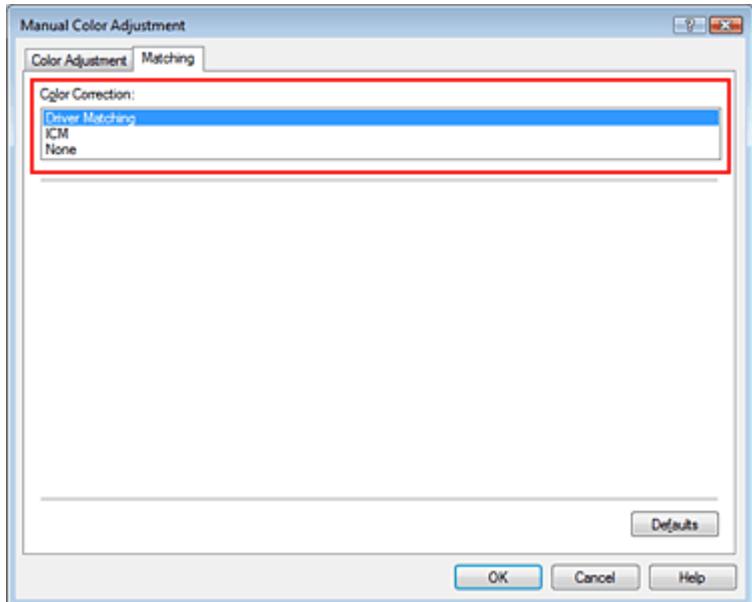

#### Driver Matching

By using Canon Digital Photo Color, you can print sRGB data with color tints that most people prefer. Driver Matching is the default setting for Color Correction.

#### ICM

You can print by using the color space of sRGB or Adobe RGB data effectively.

#### None

The printer driver does not perform color adjustment. Select this value if you are specifying an individually created profile or a profile for special Canon paper in an application software to print data.

## 4. Complete the setup

Click OK on the Main tab.

When you execute print, the data is printed with the specified color adjustment method.

### Important

- If ICM is disabled in the application software, ICM is unavailable for Color Correction and the printer may not be able to print the image data properly.
- When the Grayscale Printing check box on the Main tab is checked, Color Correction appears grayed out and is unavailable.

### Related Topics

- ▶ [Optimal Photo Printing of Image Data](#)
- ▶ [Adjusting Colors with the Printer Driver](#)
- ▶ [Printing with ICC Profiles](#)



[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Specifying Color Correction > Optimal Photo Printing of Image Data

# Optimal Photo Printing of Image Data

When people print images taken with digital cameras, they sometimes feel that the printed color tones differ from those of actual image or those displayed on the monitor.

To get the print results as close as possible to the desired color tones, you must select a printing method that is best suited to the application software used or to your purpose.

## Color Management

Devices such as digital cameras, scanners, monitors, and printers handle color differently. Color management (color matching) is a method that manages device-dependent "colors" as a common color space. For Windows, a color management system called "ICM" is built into the operating system. sRGB and Adobe RGB are popularly used as common color spaces. Adobe RGB has a wider color space than sRGB.

ICC profiles convert device-dependent "colors" into a common color space.

By using an ICC profile and carrying out color management, you can draw out the color space of the image data within the color reproduction area that the printer can express.

## Selecting a Printing Method Suited to the Image Data

The recommended printing method depends on the color space (Adobe RGB or sRGB) of the image data or the application software to be used. There are two typical printing methods. Check the color space (Adobe RGB or sRGB) of the image data and the application software to be used, and then select the printing method suited to your purpose.

- **To print using Canon Digital Photo Color**

Target data: sRGB data

Printing method: [Adjusting Colors with the Printer Driver](#)

- **To print using the color space of the data effectively**

Target data: Adobe RGB data or sRGB data

Application software: An ICC profile can or cannot be specified.

Printing method: [Printing with ICC Profiles](#)



[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Specifying Color Correction > Adjusting Colors with the Printer Driver

# Adjusting Colors with the Printer Driver


You can specify the color correction function of the printer driver to print sRGB data with color tints that most people prefer (through the use of Canon Digital Photo Color).

The procedure for adjusting colors with the printer driver is as follows:

## 1. Open the printer driver setup window

## 2. Select the media type

Select the type of paper loaded in the machine from the Media Type list on the Main tab.

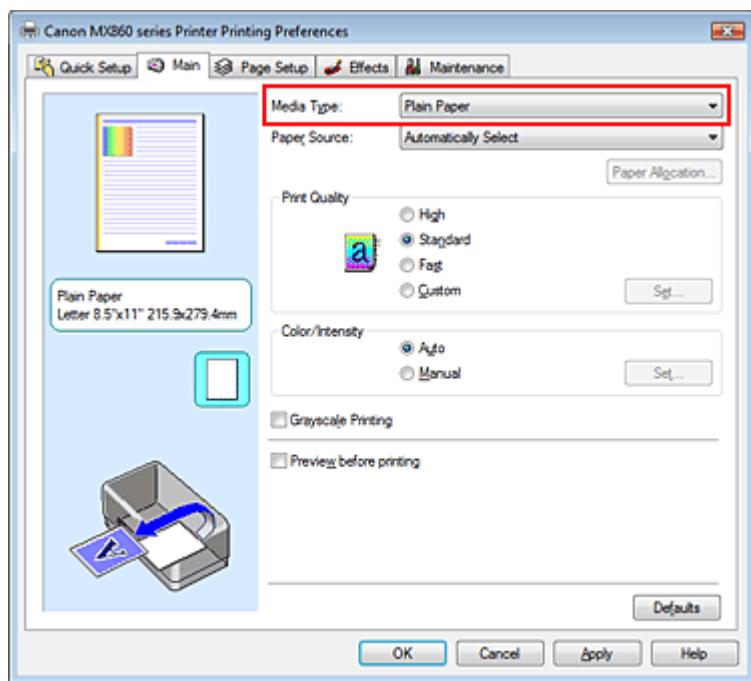

## 3. Select the print quality


Select High, Standard, or Fast for Print Quality.

## 4. Select the manual color adjustment

Select Manual for Color/Intensity, and click Set....  
The Manual Color Adjustment dialog box opens.

## 5. Select color correction

Click Matching tab, and select Driver Matching for Color Correction.

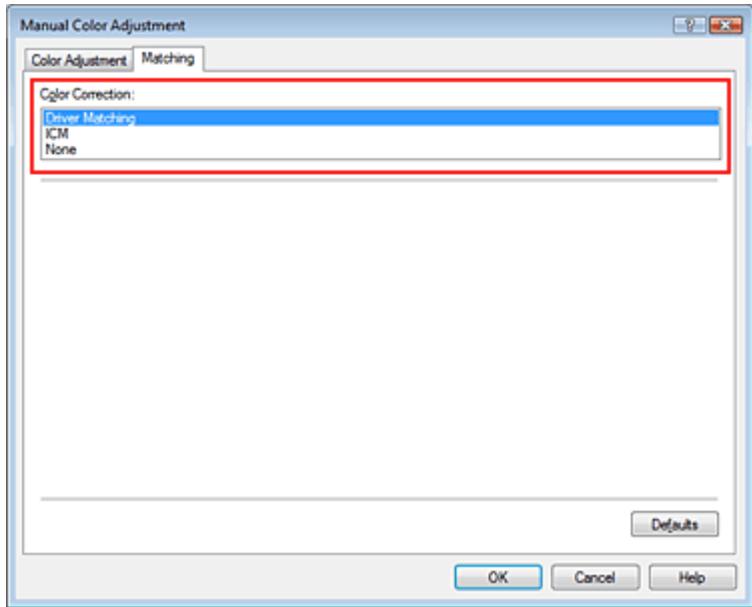

## 6. Set the other items

If necessary, click Color Adjustment tab, and adjust the color balance of Cyan, Magenta, Yellow, and adjust Brightness, Intensity, and Contrast settings, and then click OK.

## 7. Complete the setup

Click OK on the Main tab.

When you execute print, the printer driver adjusts the colors when printing the data.

### Related Topics

- ▶ [Selecting a Combination of the Print Quality Level and a Halftoning Method](#)
- ▶ [Specifying Color Correction](#)
- ▶ [Adjusting Color Balance](#)
- ▶ [Adjusting Brightness](#)
- ▶ [Adjusting Intensity](#)
- ▶ [Adjusting Contrast](#)



[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Specifying Color Correction > Printing with ICC Profiles

# Printing with ICC Profiles

If the image data has a specified ICC profile, you can effectively use the color space (Adobe RGB or sRGB) of the data when printing.

The printer driver setting procedure varies depending on the application software used to print.

## Printing Image Data from the Application Software That Can Specify an ICC Profile


When using Adobe Photoshop, Canon Digital Photo Professional, or any other application software that allows you to specify an ICC profile, you can use the color management system (ICM) found in Windows when printing the data. You can print the editing and touch-up results of an application software by effectively using the color space of the ICC profile specified in the image data.

To use this printing method, you must first use an application software to specify an ICC profile in the image data. For instructions on specifying an ICC profile with an application software program, refer to the manual of the application software you are using.

### 1. Open the printer driver setup window

### 2. Select the media type

Select the type of paper loaded in the machine from the Media Type list on the Main tab.

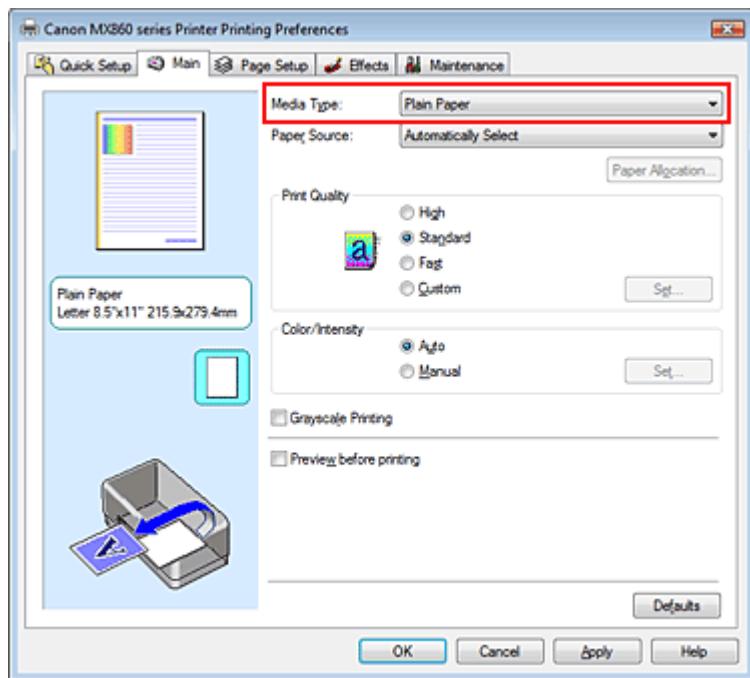

### 3. Select the print quality


Select High, Standard, or Fast for Print Quality.

### 4. Select the manual color adjustment

Select Manual for Color/Intensity, and click Set....  
The Manual Color Adjustment dialog box opens.

### 5. Select color correction

Click Matching tab, and select ICM for Color Correction.

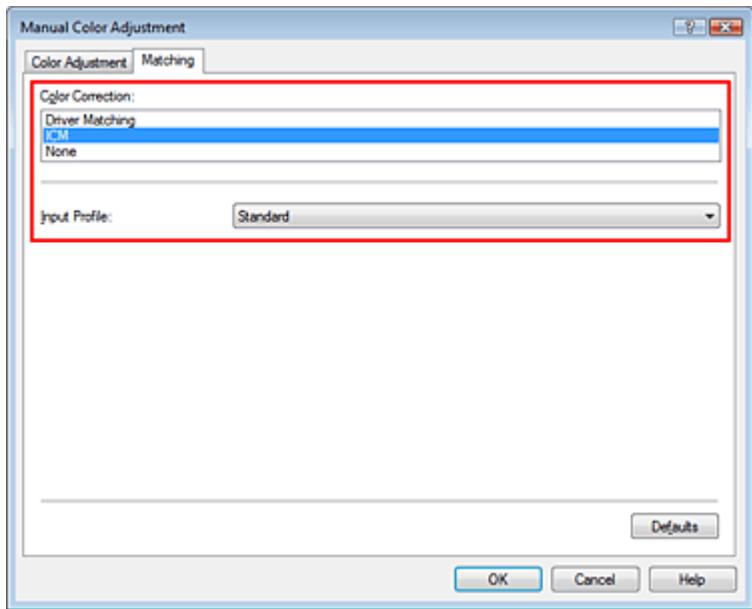

## 6. Set the other items

If necessary, click Color Adjustment tab, and adjust the color balance of Cyan, Magenta, Yellow, and adjust Brightness, Intensity, and Contrast settings, and then click OK.

## 7. Complete the setup

Click OK on the Main tab.

When you execute print, the printer uses the color space of the image data.

### Important

- If you print an image by specifying an individually created profile or a profile for special Canon paper in an application software, select None from the Color Correction menu of the printer driver.


## Printing Image Data from the Application Software That Cannot Specify an ICC Profile

When printing from an application software that does not allow you to specify an ICC profile, specify the ICC profile in the print settings of the printer driver and print the data. When printing Adobe RGB data, you can print the data with the Adobe RGB color space even if the application software does not support Adobe RGB.

### 1. Open the printer driver setup window

### 2. Select the media type

Select the type of paper loaded in the machine from the Media Type list on the Main tab.

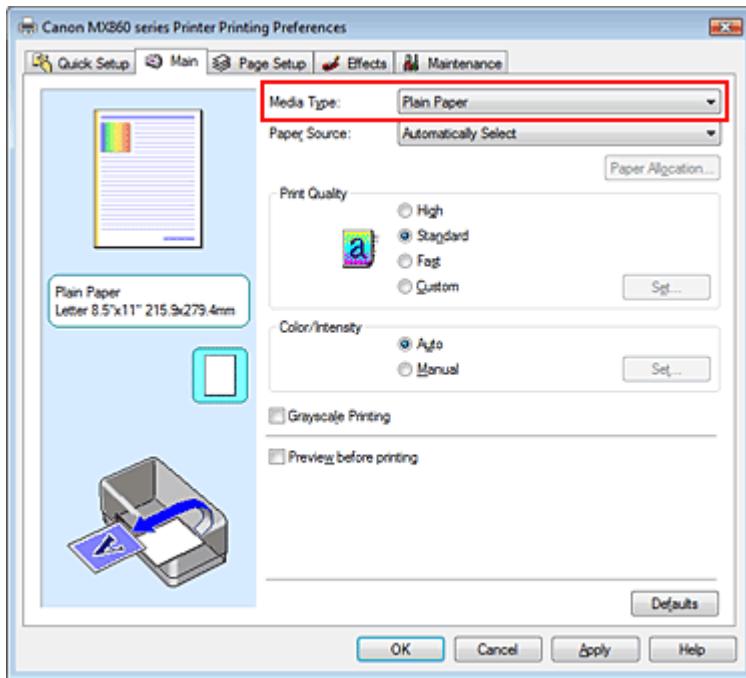

### 3. Select the print quality


Select High, Standard, or Fast for Print Quality.

### 4. Select the manual color adjustment

Select Manual for Color/Intensity, and click Set....  
Manual Color Adjustment dialog box opens.

### 5. Select color correction

Click Matching tab, and select ICM for Color Correction.

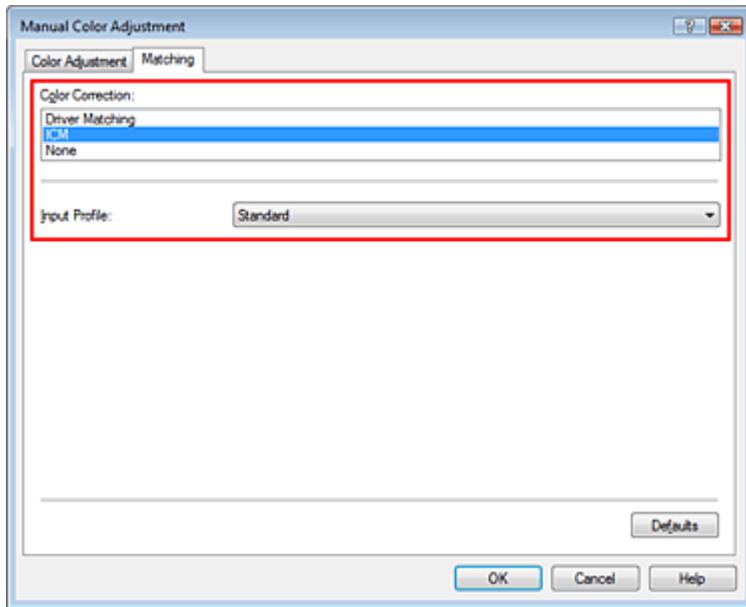

### 6. Select the input profile

Select an Input Profile that matches the color space of the image data.

- **For sRGB data or data without an ICC profile:**

Select Standard.

- **For Adobe RGB data:**

Select Adobe RGB (1998).

#### Important

- If the application software specifies an input profile, the input profile setting of the printer driver

- becomes invalid.
- If no ICC profiles are installed on your computer, Adobe RGB (1998) is not displayed. You can install ICC profiles from the Setup CD-ROM that accompanies the machine.

## 7. Set the other items

If necessary, click Color Adjustment tab, and adjust the color balance of Cyan, Magenta, Yellow, and adjust Brightness, Intensity, and Contrast settings, and then click OK.

## 8. Complete the setup

Click OK on the Main tab.

When you execute print, the data is printed with the color space of the selected image data.

### Related Topics

- ▶ Selecting a Combination of the Print Quality Level and a Halftoning Method
- ▶ Specifying Color Correction
- ▶ Adjusting Color Balance
- ▶ Adjusting Brightness
- ▶ Adjusting Intensity
- ▶ Adjusting Contrast



[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Adjusting Color Balance

# Adjusting Color Balance

You can adjust the color tints during printing.

Since this function adjusts color balance of the output by changing the ink ratios of each color, it changes the total color balance of the document. Use the application software if you want to change the color balance significantly. Use the printer driver only if you want to adjust the color balance slightly.

The following sample shows the case when Color Balance is used to intensify cyan and to diminish yellow so that the overall colors are more uniform.



No adjustment

Adjusted in Color Balance


The procedure for adjusting color balance is as follows:

You can also set color balance on the Quick Setup tab by choosing Photo Printing under Commonly Used Settings, and then choosing Color/Intensity Manual Adjustment under Additional Features.

### 1. Open the printer driver setup window

### 2. Select the manual color adjustment

On the Main tab, select Manual for Color/Intensity, and click Set....

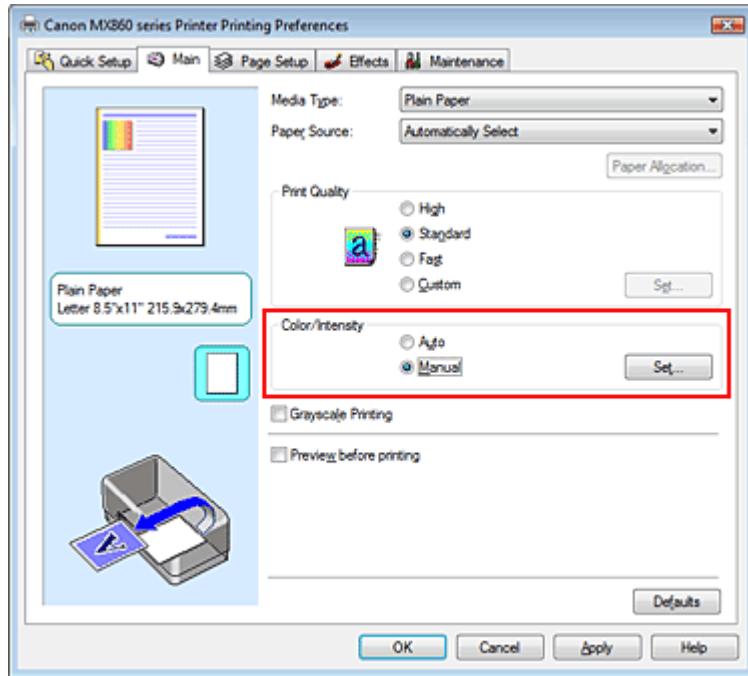


The Manual Color Adjustment dialog box opens.

### 3. Adjust color balance

There are individual sliders for Cyan, Magenta, and Yellow. Each color becomes stronger when the corresponding slider is moved to the right, and becomes weaker when the corresponding slider is moved to the left. For example, if cyan becomes weaker, the color red becomes stronger. You can also directly enter a value linked to the slider. Enter a value in the range from -50 to 50.

After adjusting each color, click OK.

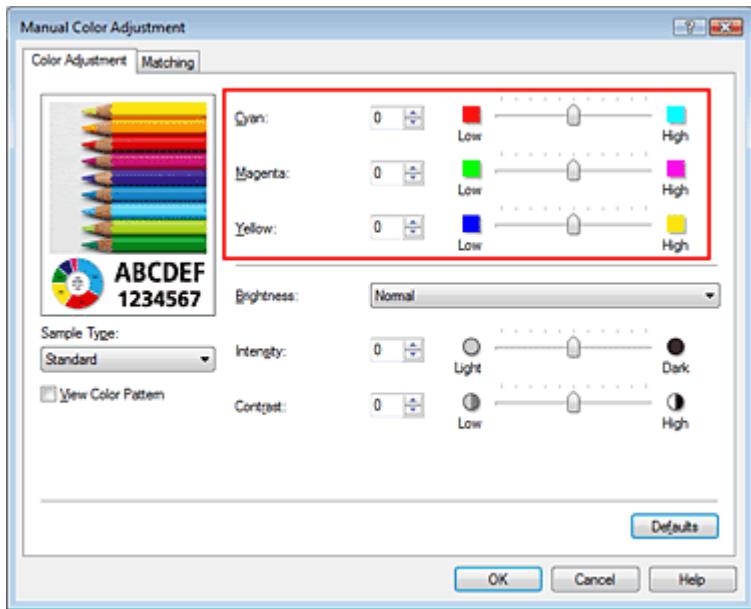

### Important

- Adjust the slider gradually.

## 4. Complete the setup

Click OK on the Main tab.

When you execute print, the document is printed with the adjusted color balance.

### Important

- When the Grayscale Printing check box on the Main tab is checked, Cyan, Magenta, and Yellow appear grayed out and are unavailable.

## Related Topics

- ▶ Selecting a Combination of the Print Quality Level and a Halftoning Method
- ▶ Specifying Color Correction
- ▶ Adjusting Brightness
- ▶ Adjusting Intensity
- ▶ Adjusting Contrast

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Adjusting Brightness

# Adjusting Brightness

You can change the brightness of the overall image data during printing. This function does not change pure white or pure black but it changes the brightness of the intermediate colors.

The following sample shows the print result when the Brightness specification is changed.



Light is selected

Normal is selected

Dark is selected


The procedure for adjusting brightness is as follows:

You can also set brightness on the Quick Setup tab by choosing Photo Printing under Commonly Used Settings, and then choosing Color/Intensity Manual Adjustment under Additional Features.

### 1. Open the printer driver setup window

### 2. Select the manual color adjustment


On the Main tab, select Manual for Color/Intensity, and click Set....

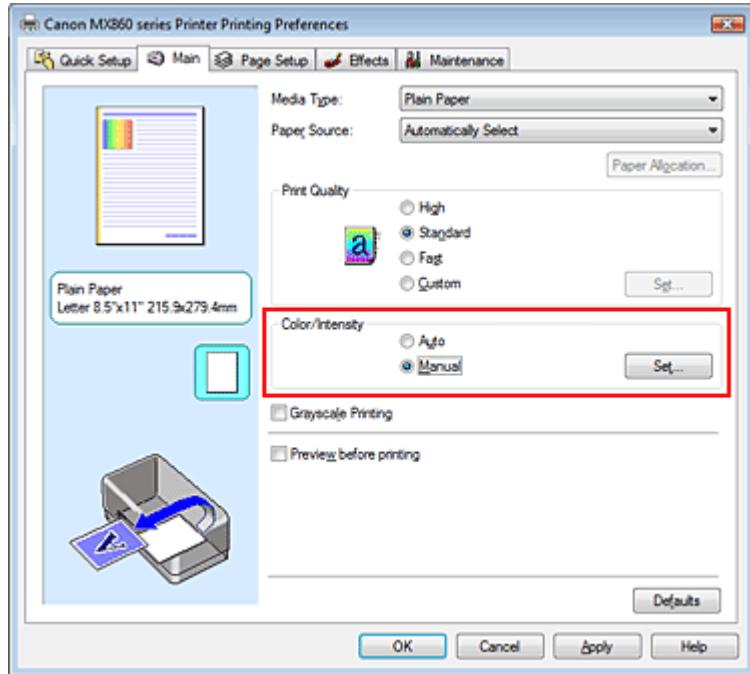

The Manual Color Adjustment dialog box opens.

### 3. Specify the brightness

Select Light, Normal, or Dark for Brightness, and click OK.

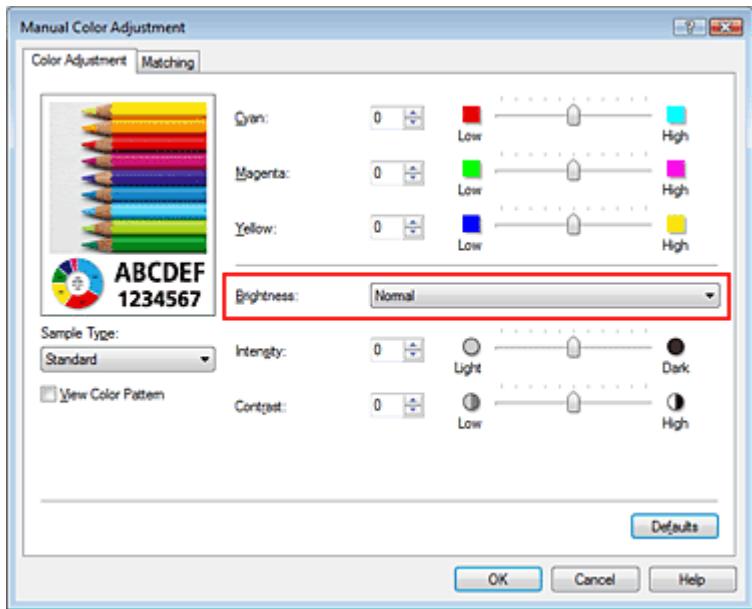

#### 4. Complete the setup

Click OK on the Main tab.

When you execute print, the data is printed at the specified brightness.

#### Related Topics

- ▶ Selecting a Combination of the Print Quality Level and a Halftoning Method
- ▶ Specifying Color Correction
- ▶ Adjusting Color Balance
- ▶ Adjusting Intensity
- ▶ Adjusting Contrast

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Adjusting Intensity

# Adjusting Intensity

You can dilute (brighten) or intensify (darken) the colors of the overall image data during printing.

If you want to sharpen the print results, you should intensify the colors.

The following sample shows the case when the intensity is increased so that all colors become more intense when the image data is printed.



No adjustment



Higher Intensity


The procedure for adjusting intensity is as follows:

You can also set intensity on the Quick Setup tab by choosing Photo Printing under Commonly Used Settings, and then choosing Color/Intensity Manual Adjustment under Additional Features.

### 1. Open the printer driver setup window

### 2. Select the manual color adjustment

Select Manual for Color/Intensity on the Main tab, and click Set....

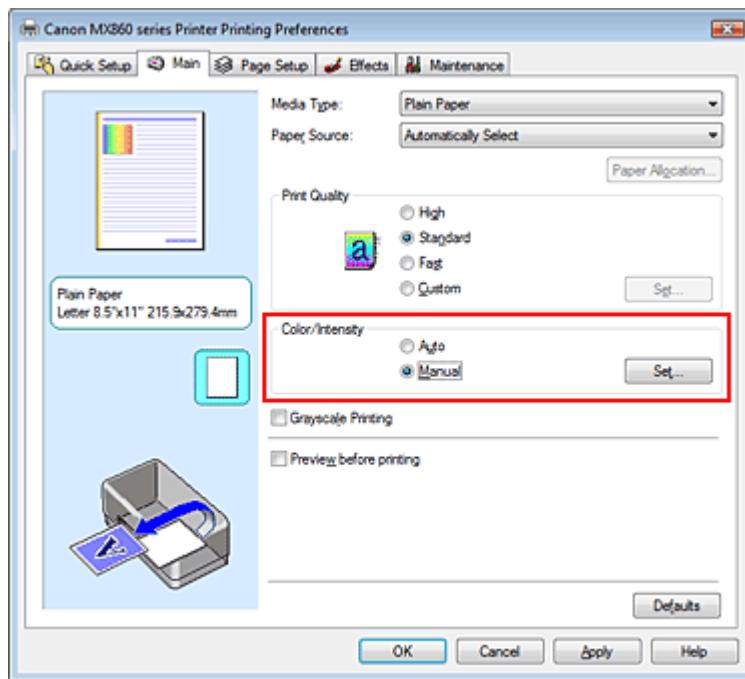


The Manual Color Adjustment dialog box opens.

### 3. Adjust intensity

Moving the Intensity slider to the right intensifies (darkens) the colors. Moving the slider to the left dilutes (brightens) the colors.

You can also directly enter a value linked to the slider. Enter a value in the range from -50 to 50.

After adjusting each color, click OK.

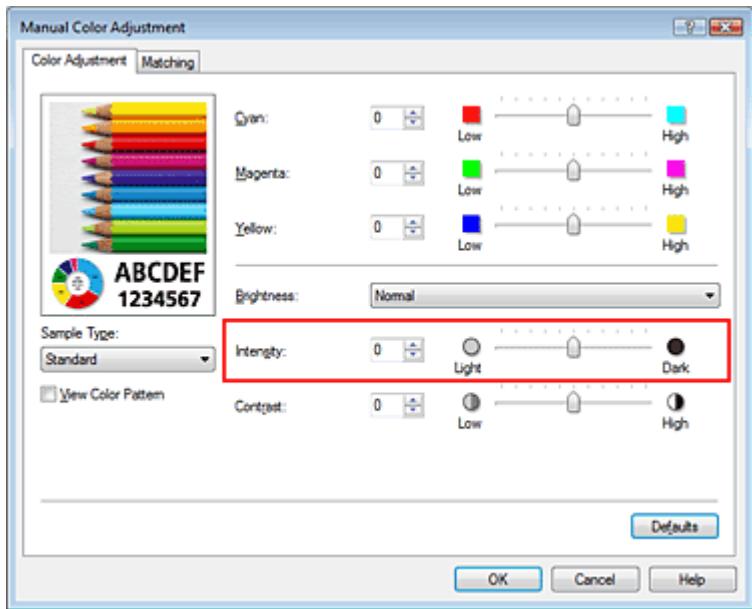

### Important

- Adjust the slider gradually.

## 4. Complete the setup

Click OK on the Main tab.

When you execute print, the image data is printed with the adjusted intensity.

### Related Topics

- Selecting a Combination of the Print Quality Level and a Halftoning Method
- Specifying Color Correction
- Adjusting Color Balance
- Adjusting Brightness
- Adjusting Contrast

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Adjusting Contrast

## Adjusting Contrast

You can adjust the image contrast during printing.

To make the differences between the light and dark portions of images greater and more distinct, increase the contrast. On the other hand, to make the differences between the light and dark portions of images smaller and less distinct, reduce the contrast.



No adjustment

Adjust the contrast


The procedure for adjusting contrast is as follows:

You can also set contrast on the Quick Setup tab by choosing Photo Printing under Commonly Used Settings, and then choosing Color/Intensity Manual Adjustment under Additional Features.

### 1. Open the printer driver setup window

### 2. Select the manual color adjustment

On the Main tab, select Manual for Color/Intensity, and click Set....

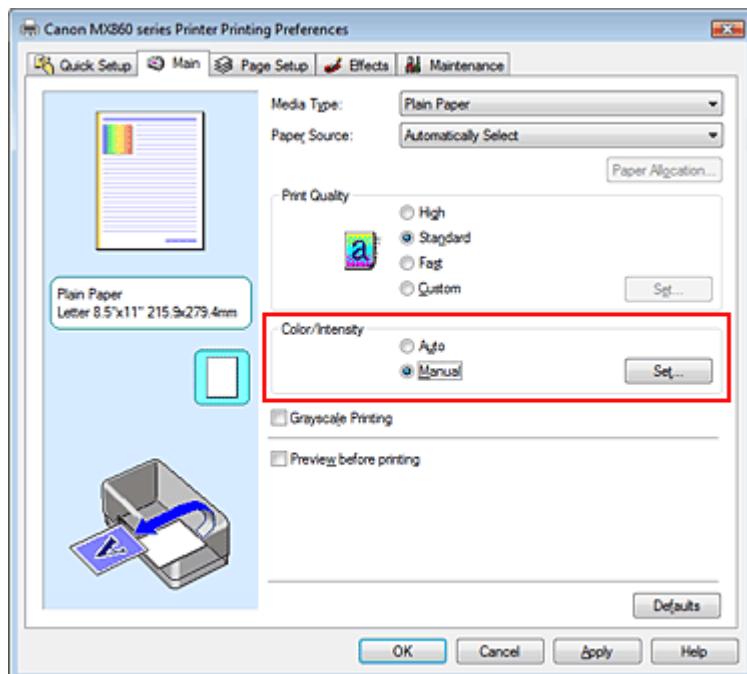

The Manual Color Adjustment dialog box opens.

### 3. Adjust the contrast

Moving the Contrast slider to the right increases the contrast, and moving it to the left decreases the contrast.

You can also directly enter a value linked to the slider. Enter a value in the range from -50 to 50.

After adjusting each color, click OK.



### Important

- Adjust the slider gradually.

## 4. Complete the setup

Click OK on the Main tab.

When you execute print, the image is printed with the adjusted contrast.

### Related Topics

- Selecting a Combination of the Print Quality Level and a Halftoning Method
- Specifying Color Correction
- Adjusting Color Balance
- Adjusting Brightness
- Adjusting Intensity


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Simulating an Illustration

### Simulating an Illustration

With the Simulate Illustration function, you can print full-color or 256-color image data so that it looks like a hand-drawn illustration. You can add different effects to the original profile and colors.

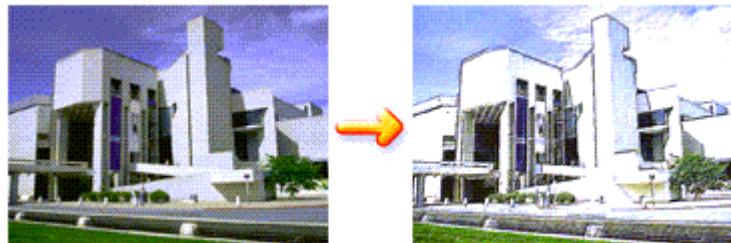


The procedure for performing Simulate Illustration is as follows:

#### 1. Open the printer driver setup window

#### 2. Set the Simulate Illustration

Check the Simulate Illustration check box on the Effects tab, and adjust the Contrast as necessary. Moving the slider to the right lightens the image data and moving the slider to the left darkens the image data.

The current settings are displayed in the Settings Preview on the left side of the printer driver.

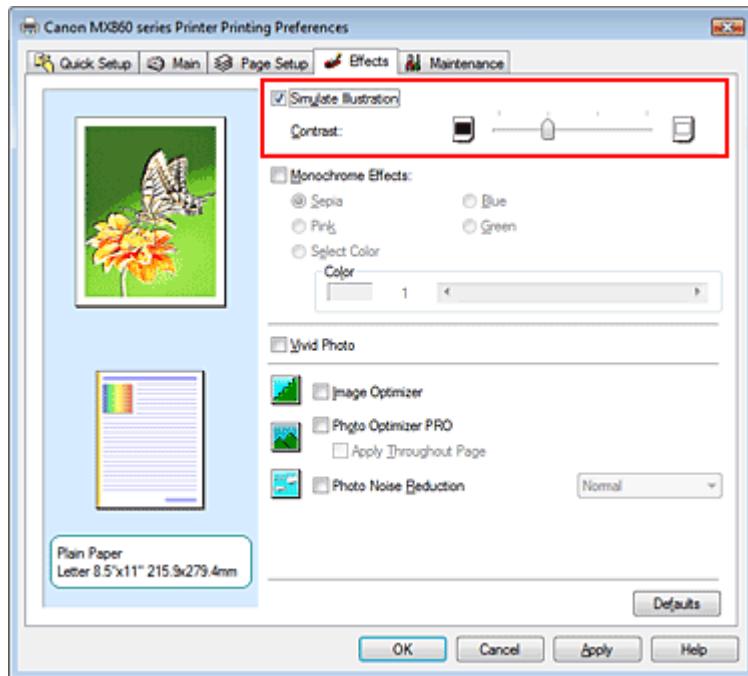

#### 3. Complete the setup

Click OK.


When you execute print, the image will be printed so that it looks hand-drawn.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Representing Image Data with a Single Color

# Representing Image Data with a Single Color

With the Monochrome Effects function, you can benefit from coloring effects such as changing a photograph to a sepia tone image.

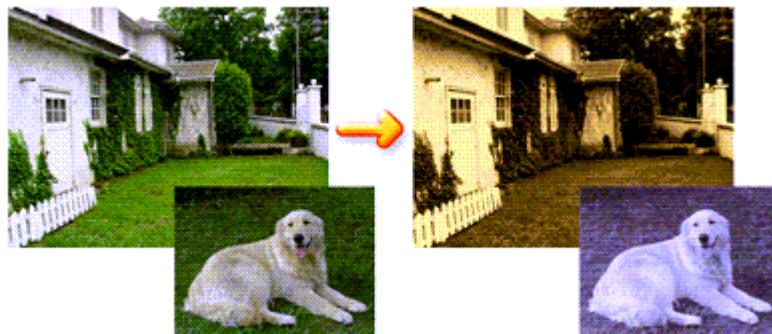

The procedure for performing Monochrome Effects is as follows:


### 1. Open the printer driver setup window

### 2. Set Monochrome Effects

Check the Monochrome Effects check box on the Effects tab and select your desired color.

If you use Select Color, move the Color slider to specify the color you want.

The current settings are displayed in the Settings Preview on the left side of the printer driver.

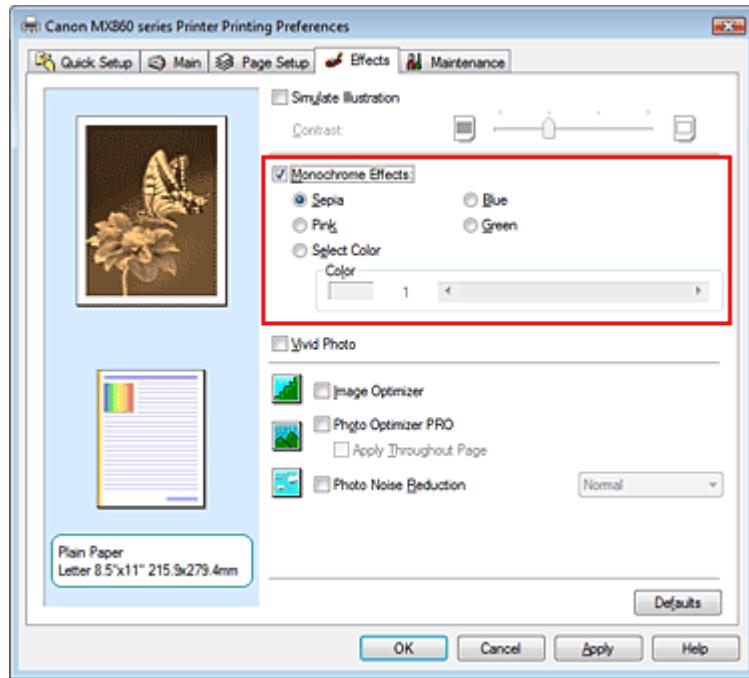

### 3. Complete the setup

Click OK.

When you execute print, the image will be printed with a single color.

### Important

- When the Grayscale Printing check box on the Main tab is checked, Monochrome Effects appears grayed out and is unavailable.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Presenting Image Data with Vivid Colors

# Presenting Image Data with Vivid Colors

The Vivid Photo function allows you to print image data with vivid colors.

The notable feature of Vivid Photo is that it emphasizes the colors in background sceneries while maintaining the human skin color natural. By using this function, you can make vivid hues appear even more vivid.




The procedure for performing Vivid Photo is as follows:

You can also set vivid photos on the Quick Setup tab by choosing Photo Printing under Commonly Used Settings, and then choosing Additional Features.

### 1. Open the printer driver setup window

### 2. Set Vivid Photo

Check the Vivid Photo check box on the Effects tab.

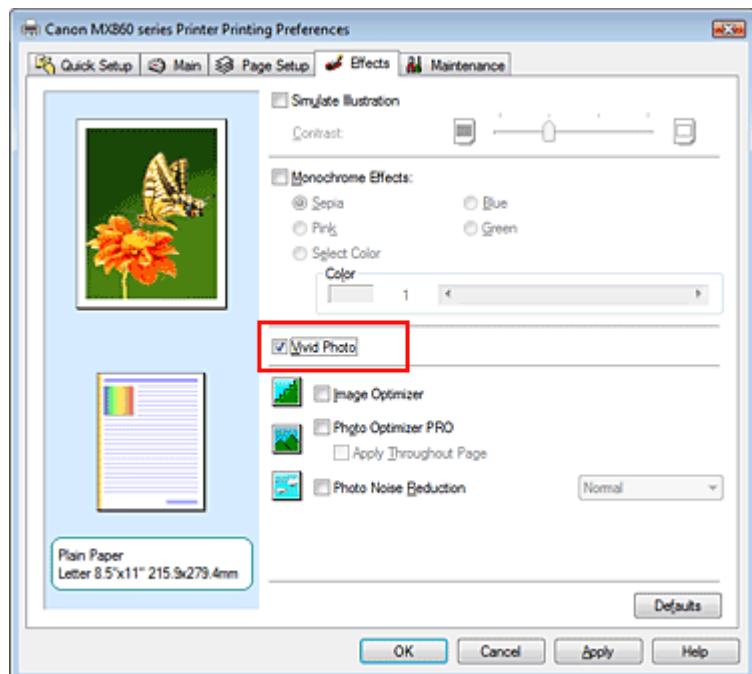

### 3. Complete the setup

Click OK.


When you execute print, the image will be printed with vivid colors.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Smoothing Jagged Outlines

# Smoothing Jagged Outlines

The Image Optimizer function allows you to smooth jagged outlines in photos and graphics that have been enlarged with your application. This feature is especially useful when printing low-resolution images from Web pages.

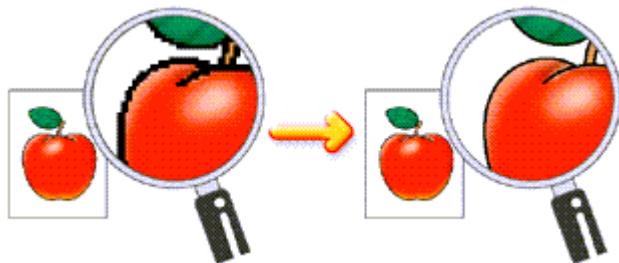


The procedure for performing Image Optimizer is as follows:

### 1. Open the printer driver setup window

### 2. Perform Image Optimizer

Check the Image Optimizer check box on the Effects tab.

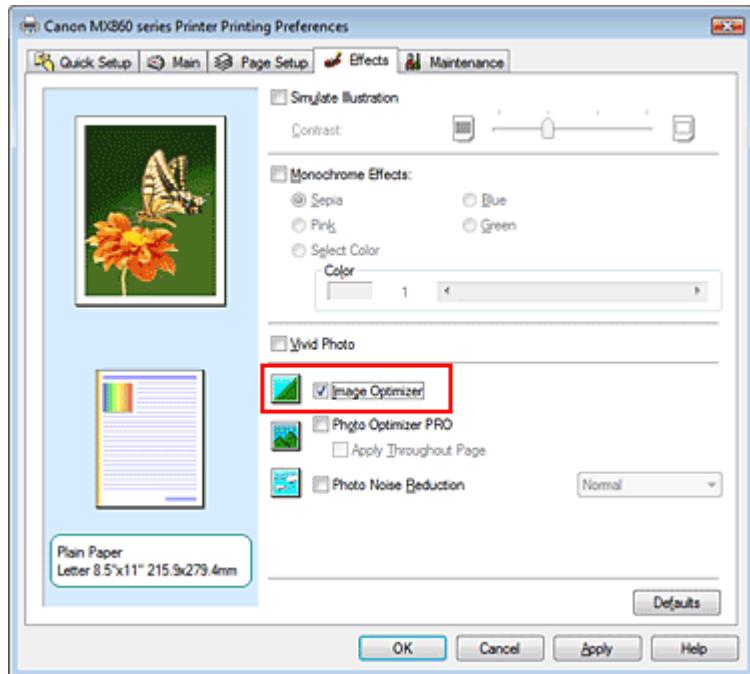

### 3. Complete the setup

Click OK.

The photos and graphics will be printed with jagged outlines smoothed.

### Note


- Depending on application software or resolution of image data, the Image Optimizer may have no discernible effects.
- It may take longer to complete printing if the Image Optimizer is used.

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Changing Color Properties to Improve Coloration

# Changing Color Properties to Improve Coloration

The Photo Optimizer PRO function corrects colors of digital camera images or scanned images. It is specially designed to compensate for color shift, overexposure, and underexposure.

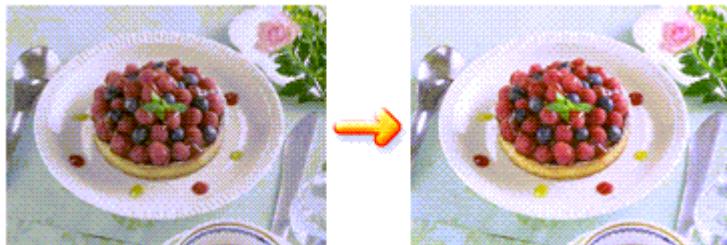


The procedure for performing Photo Optimizer PRO is as follows:

### 1. Open the printer driver setup window

### 2. Set the Auto Photo mode

Check the Photo Optimizer PRO check box on the Effects tab.

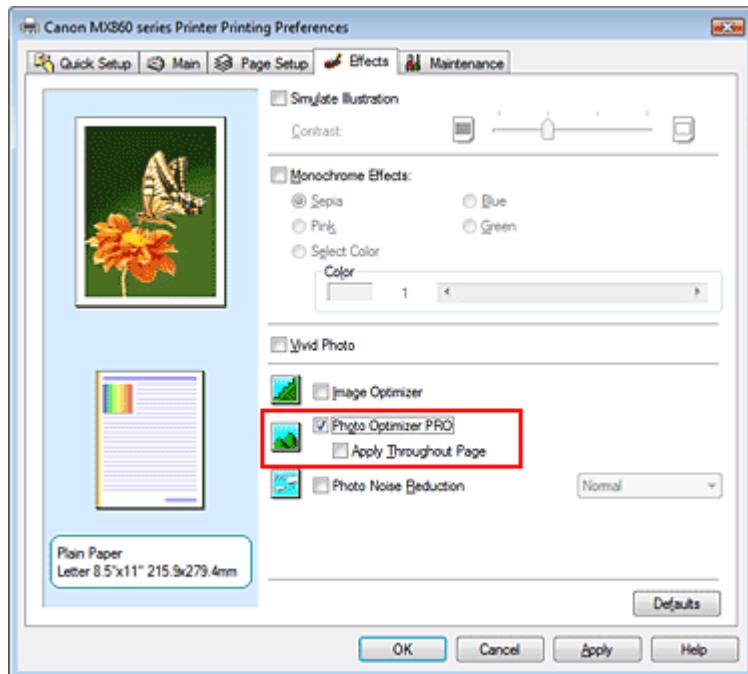

Normally there is no need to check the Apply Throughout Page check box. Images within each page are optimized on an image-by-image basis.

### Note

- Check the Apply Throughout Page check box when printing image data that has been processed, such as being cropped or rotated. In this case the entire page will be treated as a single image to be optimized.

### 3. Complete the setup

Click OK.

When you execute print, the images will be printed with color compensation.

### Important

- Photo Optimizer PRO does not function when:
  - Background is set in the Stamp/Background dialog box on the Page Setup tab.

- Define Stamp... is selected in the Stamp/Background dialog box on the Page Setup tab, and the bitmapped stamp is configured.

 **Note**

- Depending on images, the Photo Optimizer PRO may have no discernible effect.


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Changing the Print Quality and Correcting Image Data > Reducing Photo Noise

## Reducing Photo Noise


With the Photo Noise Reduction function, you can reduce the digital camera noise and improve the image quality of the digital print.

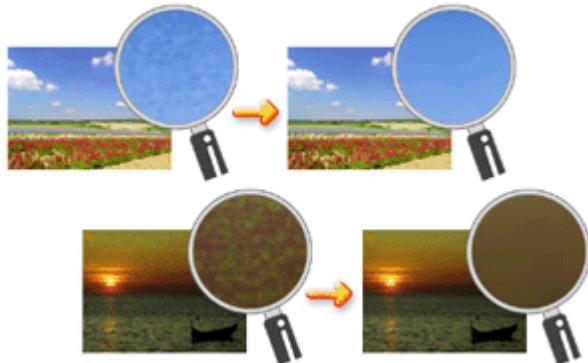

The procedure for performing Photo Noise Reduction is as follows:

1. Open the printer driver setup window
2. Set Photo Noise Reduction

Check the Photo Noise Reduction check box on the Effects tab and select Normal or Strong for the level.

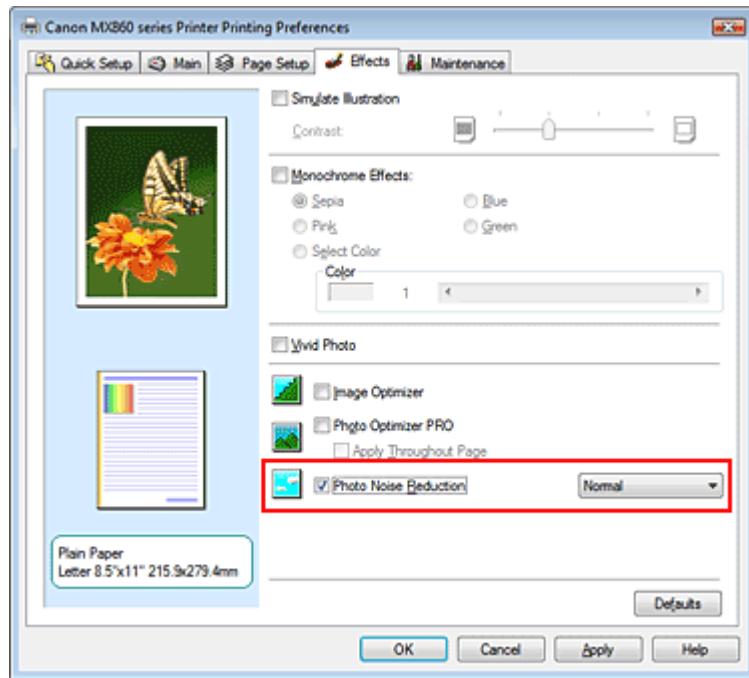

3. Complete the setup

Click OK.

When you execute print, the image will be printed with the digital camera noise being reduced.

### Note

- It is recommended to select Normal for most cases. Select Strong if you have selected Normal and the noise still bothers you.
- Depending on application software or resolution of image data, effects of digital camera noise reduction may not be obvious.
- When this function is used for other than photos taken by digital cameras, image may be distorted.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Overview of the Printer Driver  
> Overview of the Printer Driver

# Overview of the Printer Driver

- ▶ [Canon IJ Printer Driver](#)
- ▶ [How to Open the Printer Driver Setup Window](#)
- ▶ [Maintenance Tab](#)
- ▶ [Canon IJ Status Monitor](#)
- ▶ [The Canon IJ Preview](#)

[Page top ↑](#)



# Printer Driver Operations

MA-5016-V1.00



| Instructions for Use (Printer Driver) | How to Use This Manual | Printing This Manual |

## Various Printing Methods

- Printing with Easy Setup
- Setting a Page Size and Orientation
- Setting the Number of Copies and Printing Order
- Setting the Stapling Margin
- Borderless Printing
- Fit-to-Page Printing
- Scaled Printing
- Page Layout Printing
- Poster Printing
- Booklet Printing
- Duplex Printing
- Stamp/Background Printing
- Printing an Envelope
- Switching the Paper Source to Match the Purpose
- Displaying the Print Results before Printing
- Setting Paper Dimensions (Custom Size)

## Changing Machine Settings from Your Computer

- Changing the Print Options
- Registering a Frequently Used Printing Profile
- Setting the Paper Source for Plain Paper
- Managing the Machine Power
- Reducing the Machine Noise
- Changing the Machine Operation Mode

## Performing Maintenance from a Computer

- Cleaning the Print Heads
- Cleaning the Paper Feed Rollers
- Aligning the Print Head Position
- Checking the Print Head Nozzles
- Cleaning Inside the Machine

## Overview of the Printer Driver

- Canon IJ Printer Driver
- How to Open the Printer Driver Setup Window
- Maintenance Tab
- Canon IJ Status Monitor
- The Canon IJ Preview

## Updating the MP Drivers

- Obtaining the Latest MP Drivers
- Uninstalling the MP Drivers
- Before Installing the MP Drivers
- Installing the MP Drivers

## Appendix

- Deleting the Undesired Print Job

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Overview of the Printer Driver  
> Canon IJ Printer Driver

# Canon IJ Printer Driver

The Canon IJ printer driver is software that is installed on your computer for printing data on this machine.

The Canon IJ printer driver converts the print data created by your Windows application into data that your printer can understand and sends the converted data to the printer.

Because different models support different print data formats, you need a Canon IJ printer driver for the specific model you are using.

## How to Use Help

You can display the Help describing the driver setting items through the Printing Preferences screen of the Canon IJ printer driver.

- **To view all descriptions of a tab...**

Click the Help button on each tab. A dialog box opens, displaying a description of each item on the tab.

You can also click the link found in the description of an item to display a description of the linked dialog box.

- **To see a description for each item...**

Right-click the item you want to learn about and then click Help.

Alternatively, if the  [Help] button is found at the right end of the title bar, click that button, and then click the item you want to learn about.

A description of the item is displayed.

## Related Topic

▶ How to Open the Printer Driver Setup Window



Page top ↑

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Overview of the Printer Driver > Canon IJ Printer Driver > How to Open the Printer Driver Setup Window

# How to Open the Printer Driver Setup Window

The printer driver setup window can be displayed through the application software in use or the Start menu of the Windows.

### Note

- This guide mainly describes operations on the Windows Vista. Operations may differ depending on versions of the Windows.

## Open the Printer Driver Setup Window through the Application Software

Follow the procedure below to configure print settings when printing.

### 1. Select the command you perform printing on the application software in use

In general, select Print on the File menu to open the Print dialog box.

### 2. Select your model name and click Preferences (or Properties)

The printer driver setup window appears.

### Note

- Depending on application software you use, command names or menu names may vary and there may be more steps. For details, refer to the user's manual of your application software.

## Open the Printer Driver Setup Window through the Start Menu

Follow the procedure below to perform maintenance operations such as print head cleaning, or to configure print settings that are common for all application software.

### 1. Select items from the Start menu as shown below:

- In Windows Vista, select the Start menu -> Control Panel -> Hardware and Sound -> Printers.
- In Windows XP, select the Start menu -> Control Panel -> Printers and Other Hardware -> Printers and Faxes.
- In Windows 2000, select the Start menu -> Settings -> Printers.

### 2. Right-click your model name icon, and then select Printing Preferences from the displayed menu.

The printer driver setup window appears.

### Important

- Opening the printer driver setup window through Properties displays such tabs regarding the Windows functions as the Ports (or Advanced) tab. Those tabs do not appear when opening through Printing Preferences or application software. About tabs regarding Windows functions, refer to the user's manual for the Windows.




[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Overview of the Printer Driver  
> Canon IJ Printer Driver > Maintenance Tab

## Maintenance Tab

The Maintenance tab allows you to perform machine maintenance or change the settings of the machine.

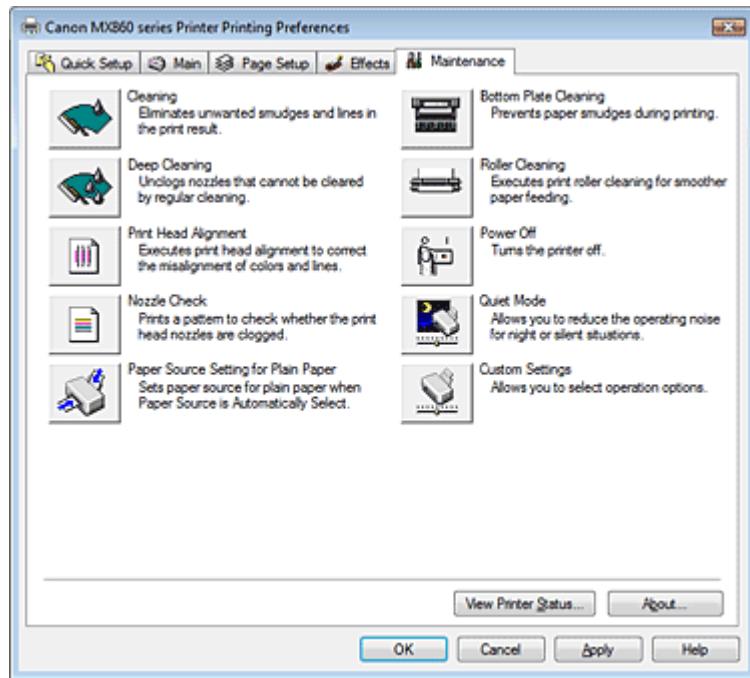

### Features

- ▶ Cleaning the Print Heads
- ▶ Cleaning the Paper Feed Rollers
- ▶ Aligning the Print Head Position
- ▶ Checking the Print Head Nozzles
- ▶ Setting the Paper Source for Plain Paper
- ▶ Cleaning Inside the Machine
- ▶ Managing the Machine Power

### Related Features

- ▶ Reducing the Machine Noise/Quiet Mode
- ▶ Changing the Machine Operation Mode



[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Overview of the Printer Driver  
> Canon IJ Status Monitor

# Canon IJ Status Monitor


The Canon IJ Status Monitor is an application software that shows the status of the printer and the progress of printing on the Windows screen. You will know the status of the printer with graphics, icons, and messages.

## Launching the Canon IJ Status Monitor

The Canon IJ Status Monitor launches automatically when data is sent to the printer. When launched, the Canon IJ Status Monitor appears as a button on the Task Bar.



Click the Status Monitor button displayed on the Task Bar. The Canon IJ Status Monitor appears.

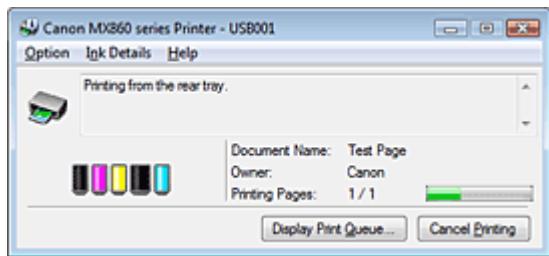

### Note

- To open the Canon IJ Status Monitor when the printer is not printing, open the [printer driver setup window](#) and click View Printer Status... on the Maintenance tab.

## When Errors Occur

The Canon IJ Status Monitor is automatically displayed when an error occurs (e.g., if the printer runs out of paper or if the ink is low).



In such cases, take the appropriate action as described.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing from a Computer > Printing with Other Application Software > Overview of the Printer Driver  
> The Canon IJ Preview

# The Canon IJ Preview

The Canon IJ Preview is an application software that displays what the print result will look like before a document is actually printed.

The preview reflects the information that is set within the printer driver and allows you to check the document layout, print sequence, and number of pages. You can also change the media type and paper source settings.

If you want to display a preview before printing, open the [printer driver setup window](#), click the Main tab, and check the Preview before printing check box.

If you do not want to display a preview before printing, uncheck the check box.

## Related Topic

- ▶ [Displaying the Print Results before Printing](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine

# Printing Using the Operation Panel of the Machine

- ▶ [Printing Lined Paper or Graph Paper](#)
- ▶ [Copying](#)
- ▶ [Printing from a Memory Card](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing Lined Paper or Graph Paper

# Printing Lined Paper or Graph Paper

▶ [Printing Template Forms Such As Lined Paper or Graph Paper](#)


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing Lined Paper or Graph Paper > Printing Template Forms Such As Lined Paper or Graph Paper

# Printing Template Forms Such As Lined Paper or Graph Paper

You can print a template form such as lined paper, graph paper, or check list, etc. on A4, Letter-sized, or B5 plain paper.

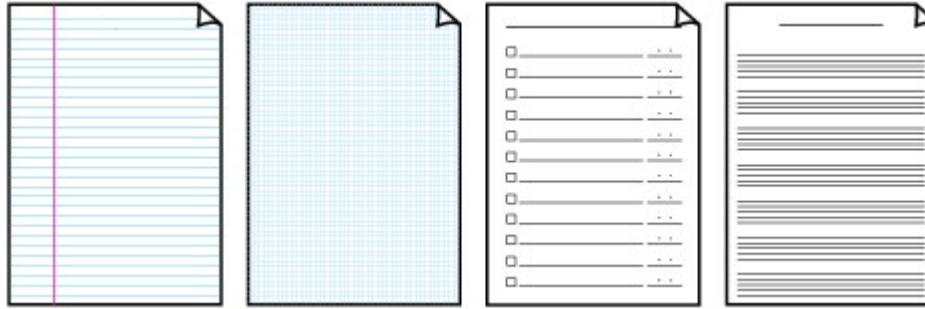

1. Make sure that the machine is turned on.
2. Load A4, Letter-sized, or B5 plain paper.
3. Press the **Menu** button.
4. Use the **◀▶** button to select Settings, then press the **OK** button.
5. Use the **◀▶** button to select Template print, then press the **OK** button.
6. Use the **◀▶** button to select the template you want to print, then press the **OK** button.

The following templates are available:

- **Notebook paper**

You can select three line spacing formats.

- Notebook paper 1: 8 mm spacing
- Notebook paper 2: 7 mm spacing
- Notebook paper 3: 6 mm spacing

- **Graph paper**

You can select two square sizes.

- Graph paper 1: Graph 5 mm
- Graph paper 2: Graph 3 mm

**Note**

- You cannot print Notebook paper or Graph paper on B5 sized paper.

- **Checklist**

You can print a notepad with checkboxes.

- **Staff paper**

You can print staff paper with 10 or 12 staves.

- Staff paper 1: Staff paper 10 staves
- Staff paper 2: Staff paper 12 staves

7. Use the ▲ ▼ ◀ ▶ button to specify the paper size and the number of copies.

#### Note

- You can use the Numeric buttons to specify the number of copies.
- Select Duplex printing for Simp./Duplex to print on both sides.

8. Press the **OK** button to start printing.

The machine starts template printing.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying

---

# Copying

- ▶ Making Copies
- ▶ Using Useful Copy Functions

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Making Copies

---

### Making Copies

For the basic procedure to make copies, refer to [Copying](#).

- ▶ [Setting Items](#)
- ▶ [Reducing or Enlarging a Copy](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Making Copies > Setting Items

# Setting Items


In Copy mode, press the **Settings** button to change the copy settings such as page size, media type, and print quality.

### Note

- Use the **▲ ▼** button to select an item and use the **◀ ▶** button to specify the setting. To change the tab, use the **▲** button to return to the position of tab selection and use the **◀ ▶** button to select another tab.
- The settings of the page size, media type, or intensity are retained even if the machine is turned off.
- Some of setting items are not available depending on the copy method.

## Tab 1

You can specify the settings of the printing paper, print quality, etc.

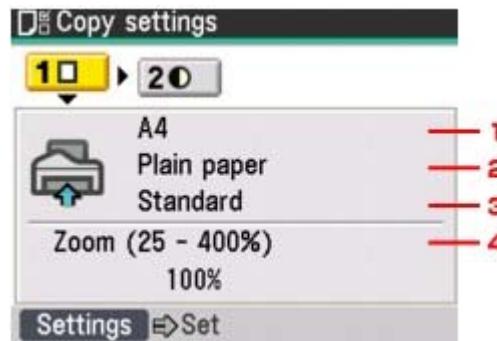

### 1. Page size

Select the page size of the loaded paper.

### 2. Media type

Select the media type of the loaded paper.

### 3. Print quality

Adjust print quality according to the original.

#### Important

- If you use Fast with the media type set to Plain paper and the quality is not as good as expected, select Standard or High and try copying again.
- Select High to copy in grayscale. Grayscale renders tones in a range of grays instead of black or white.


### 4. Magnification

Specify the reduction/enlargement method.

➔ Reducing or Enlarging a Copy

## Tab 2


You can specify whether to enable the automatic intensity adjustment, and whether to print the copying date, page number, or not.

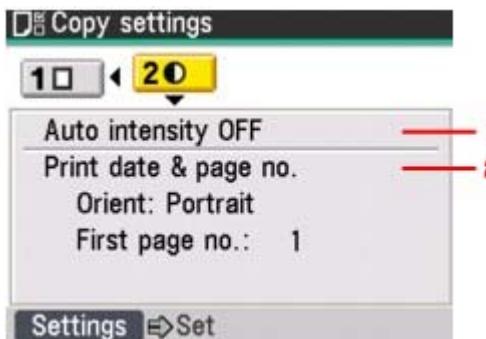

## 1. Auto intensity

Specify whether the intensity is adjusted automatically when copying originals loaded on the Platen Glass.

When Auto intensity ON is selected, Auto will be displayed in the intensity slide bar on the Copy screen.

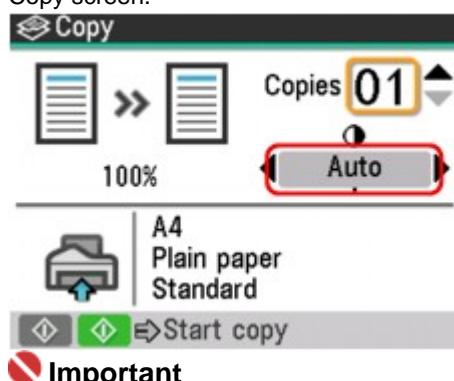

### Important

- You can change the intensity by pressing the button even when Auto intensity ON is selected. To enable the auto intensity adjustment again, move the cursor to the center of the slide bar.

### Note

- When Auto intensity ON is selected, you cannot copy originals from the ADF. Load the original on the Platen Glass.

## 2. Print date & page no.

Select whether to print the copying date, page number, or not.

### Orient

Select the orientation of the original document.

### First page no.

Use the button to specify the page number on the first page.

### Note

- The date registered in the machine is printed. For information on how to register the date, refer to [Setting Up the Machine](#).
- The date is printed in black at the upper right of the sheet. The page number is printed in black at the lower center of the sheet.
- If you copy onto both sides of the paper with the following settings, the date is printed at the upper right on the front of paper and at the upper left on the back of paper.
  - Orient: Portrait/Long-side staple
  - Orient: Landscape/Short-side staple
- The machine can print the page number from 1 to 999.
- If Device memory is full. Cannot continue process. Press OK. appears on the LCD when scanning, select No date & page no..

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Making Copies > Reducing or Enlarging a Copy

# Reducing or Enlarging a Copy

1. Make sure that the machine is turned on.
2. Press the **COPY** button.
3. Load paper.
4. Load the original document on the Platen Glass or in the ADF.

### Note

- Refer to [Loading Paper / Originals](#) for how to load the original on the Platen Glass or in the ADF.

5. Press the **Settings** button.
6. Use the **▲▼** button to select the magnification setting item.




7. Use the **◀▶** button to select the reduction/enlargement method.

### Note

- Some of reduction/enlargement methods are not available depending on the copy method.


#### Fit to page

The machine automatically reduces or enlarges the image to fit the page size.

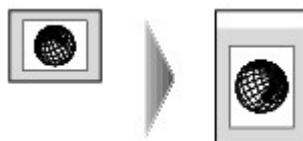

#### Zoom (25 - 400%)

You can specify the copy ratio as a percentage to reduce or enlarge copies.

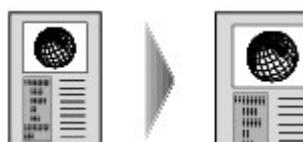


Select Zoom (25 - 400%) and press the **OK** button, then use the **◀▶** button to change the copy ratio.

Press and hold down the **◀▶** button to quickly advance through the ratios. For details, refer to [Key repeat](#).

#### Preset ratio

You can select one of the preset ratios to reduce or enlarge copies.

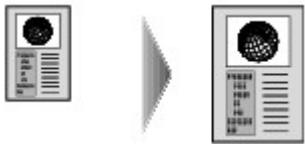

Select Preset ratio and press the **OK** button, then use the **◀ ▶** button to select the preset ratio.

### Note

- When loading the original in the ADF, you cannot select Fit to page.
- When you select Fit to page, the document size may not be detected correctly depending on the original. In this case, select Preset ratio, Zoom (25 - 400%), or Same magnification.
- When you want to copy at the same size as the original, select Same magnification.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Using Useful Copy Functions

# Using Useful Copy Functions

## Special Copy

Choose the copy method according to your purpose.

### Note

- Refer to [Settings for Special Copy](#) for how to select the copy method.

- Two-sided Copy**

You can copy two original pages onto both sides of a single sheet of paper, or the front and back pages of a double-sided original onto either both sides of a single sheet of paper or two sheets of paper.

▶ [Copying onto Both Sides of the Paper \(Two-Sided Copy\)](#)

- 2-on-1 copy**

You can copy two original pages onto a single sheet of paper by reducing each image.

▶ [Copying Two Pages to Fit onto a Single Page \(2-on-1 Copy\)](#)

- 4-on-1 copy**

You can copy four original pages onto a single sheet of paper by reducing each image. For each orientation of the original document, four different layouts are available.

▶ [Copying Four Pages to Fit onto a Single Page \(4-on-1 Copy\)](#)

- Borderless copy**

You can copy images so that they fill the entire page without borders.

▶ [Copying without Borders \(Borderless Copy\)](#)

- Image repeat**

You can copy an image multiple times onto a single page. You can set the machine to automatically select the number of times it repeats the image, or you can specify the number.

▶ [Repeating an Image on a Page \(Image Repeat\)](#)

- Collated copy**

You can obtain sorted printouts when making multiple copies of a multi-paged original.

▶ [Making Multiple Copies of an Entire Document \(Collated Copy\)](#)

- Fade-restored copy**

You can obtain color-corrected printouts when copying documents that have faded over time.

▶ [Copying with Fade Restoration \(Fade-Restored Copy\)](#)

- Frame erase**

When copying a thick original document such a book, you can make a copy without black margins around the image and gutter shadows.

▶ [Copying Thick Originals Such as Books \(Frame Erase\)](#)

- Sticker copy**

You can easily make 16 stickers from 4" x 6" / 101.6 x 152.4 mm photos or graphics using Canon sticker paper.

▶ [Copying on Stickers \(Sticker Copy\)](#)

- Binding margin copy**

You can copy the document with a margin for hole punching or binding.

▶ [Copying with Binding Margin \(Binding Margin Copy\)](#)

- Punch hole removal copy**

When copying documents with punch holes, you can make a copy without punch hole marks.

➡ [Removing Punch Hole Marks \(Punch Hole Removal Copy\)](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Using Useful Copy Functions > Settings for Special Copy

### Settings for Special Copy

1. Make sure that the machine is turned on.
2. Press the **COPY** button.
3. Load paper.
4. Load the original document on the Platen Glass or in the ADF.

#### Note

- For details on the types and conditions of originals which you can copy, refer to [Loading Paper / Originals](#).

5. Press the **Menu** button.

6. Use the  button to select  Special copy, then press the **OK** button.

7. Use the  button to select the copy method, then press the **OK** button.

Select the function that you want to use, then follow the on-screen instructions.

#### Note

- To return to the standard copy screen, press the **Menu** button, then select Standard copy on the Copy menu screen.
- When you use useful copy functions, you cannot select some of the options for the magnification/page size/media type settings.
- To cancel Special copy settings, press the **Stop** button. If the number of copies or the intensity has been set already, press the **Stop** button twice.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Using Useful Copy Functions > Copying onto Both Sides of the Paper (Two-Sided Copy)


# Copying onto Both Sides of the Paper (Two-Sided Copy)

You can copy two original pages onto both sides of a single sheet of paper, or the front and back pages of a double-sided original onto either both sides of a single sheet of paper or two sheets of paper.


- **Two-sided to Two-sided (2 sided - 2 sided print)**



- **Two-sided to Single-sided (2 sided - 1 sided print)**

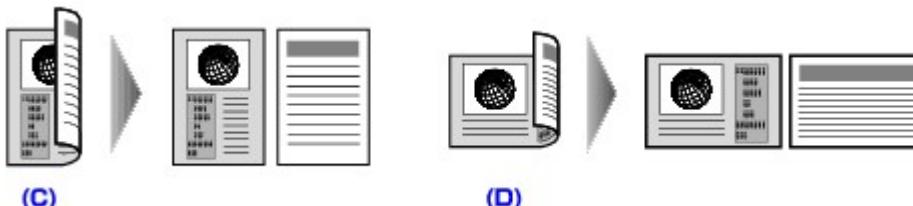

- **Single-sided to Two-sided (1 sided - 2 sided print)**

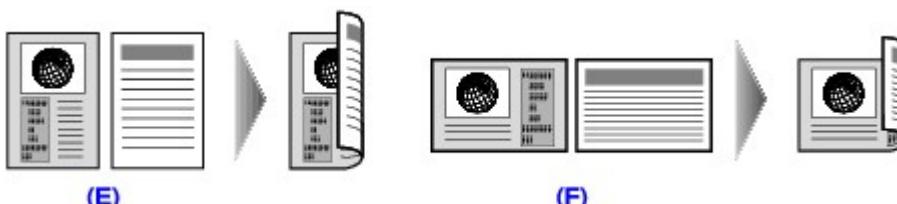

1. Make sure that the machine is turned on.
2. Press the **COPY** button.
3. Load paper.
4. Load the original document on the Platen Glass or in the ADF.

### Note

- Refer to [Loading Paper / Originals](#) for how to load the original on the Platen Glass or in the ADF.

5. Press the **Two-Sided** button.

Follow the on-screen instructions.

 Note

- You can also perform the two-sided copy by selecting Two-sided copy on the Special copy screen.  
▶ [Settings for Special Copy](#)

**6.** Press the **Color** button for color copying, or the **Black** button for black & white copying.

- When the original document is loaded in the ADF:  
The machine starts copying automatically.
- When the original document is loaded on the Platen Glass:  
After scanning of the first sheet of original is complete, load the second sheet of original on the Platen Glass, then press the **Color** button or the **Black** button. If you have only one sheet of original to scan, press the **OK** button.

 Note

- When the original document is loaded on the Platen Glass, be sure to press the same button for copying the first sheet of original and for copying the second sheet of original. If you do not, the machine does not start copying.
- This function cannot be used in conjunction with Fit to page of the reduction/enlargement method or other copy functions.
- If you perform black & white copying for Two-sided copy, print intensity may be different from when performing black & white copying for single-sided copy.
- This function can only be used when the page size is set to A4 or 8.5"x11"(LTR). Two-sided to two-sided copying and two-sided to single-sided copying can only be performed for A4 or Letter-sized originals.
- The media type is fixed to Plain paper. You cannot select other media types.
- When the original document is loaded in the ADF, the document pages are not ejected in the original order by default. If you want the document pages to eject in the original order, set Two-sided output setting to Output by page. For details, refer to [Changing the Machine Settings on the LCD](#).


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Using Useful Copy Functions > Copying without Borders (Borderless Copy)

# Copying without Borders (Borderless Copy)

You can copy images so that they fill the entire page without borders.

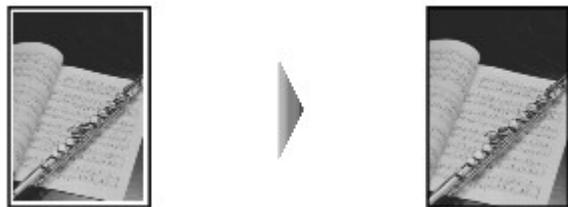

▶ [Settings for Special Copy](#)

1. Select Borderless copy, then press the **OK** button.  
Follow the on-screen instructions.
2. Press the **Color** button for color copying, or the **Black** button for black & white copying.

### Note

- Load the document on the Platen Glass when using this function.
- Slight cropping may occur at the edges since the copied image is enlarged to fill the whole page.
- You can change the width to be cropped from the borders of the original image as needed. For details, refer to [Extended copy amount](#).


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Using Useful Copy Functions > Copying Two Pages to Fit onto a Single Page (2-on-1 Copy)

### Copying Two Pages to Fit onto a Single Page (2-on-1 Copy)

You can copy two original pages (A) (B) onto a single sheet of paper (C) by reducing each image.

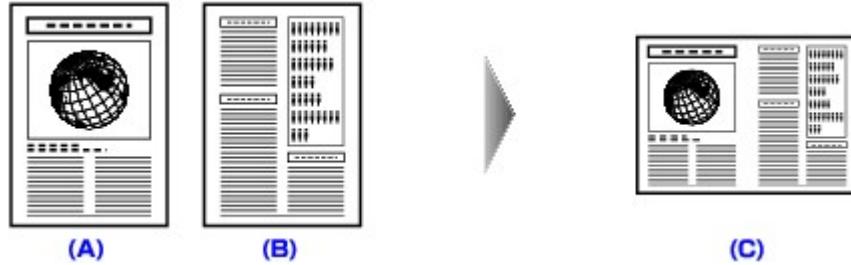

#### ▶ Settings for Special Copy

1. Select 2-on-1 copy, then press the **OK** button.  
Follow the on-screen instructions.
2. Press the **Color** button for color copying, or the **Black** button for black & white copying.

#### Note

- If you loaded only one sheet of originals in the ADF, the machine performs 2-on-1 copy after scanning the first page. When loading originals on the Platen Glass, if you want to copy only the first sheet of originals, press the **OK** button after scanning the first page.
- If Device memory is full. Cannot continue process. appears on the LCD when scanning, set the print quality to Standard or reduce the number of sheets of documents, then try copying again. If the problem is not resolved, set the print quality to Fast and try copying again.


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Using Useful Copy Functions > Copying Four Pages to Fit onto a Single Page (4-on-1 Copy)

# Copying Four Pages to Fit onto a Single Page (4-on-1 Copy)

You can copy four original pages onto a single sheet of paper by reducing each image. For each orientation of the original document, four different layouts are available.

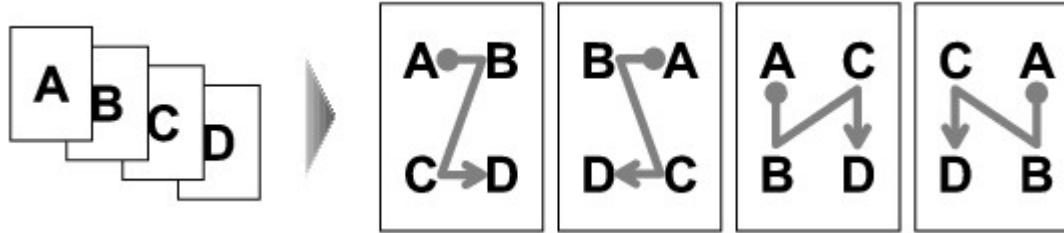

▶ **Settings for Special Copy**

1. Select 4-on-1 copy, then press the **OK** button.  
Follow the on-screen instructions.
2. Press the **Color** button for color copying, or the **Black** button for black & white copying.

## Note

- If you loaded less than four sheets of originals in the ADF, the machine performs 4-on-1 copy after scanning the last page. When loading documents on the Platen Glass, if you want to copy less than four sheets of originals, press the **OK** button after scanning the last page to copy.
- If Device memory is full. Cannot continue process. appears on the LCD when scanning, set the print quality to Standard or reduce the number of sheets of documents, then try copying again. If the problem is not resolved, set the print quality to Fast and try copying again.


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Using Useful Copy Functions > Repeating an Image on a Page (Image Repeat)

### Repeating an Image on a Page (Image Repeat)

You can copy an image multiple times onto a single page. You can set the machine to automatically select the number of times it repeats the image, or you can specify the number.

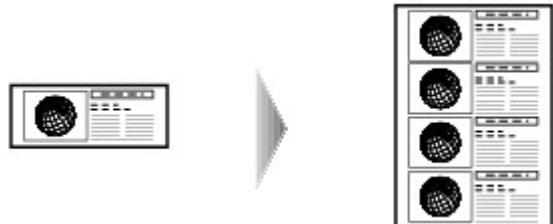

▶ [Settings for Special Copy](#)

1. Select Image repeat, then press the **OK** button.  
Follow the on-screen instructions.
2. Press the **Color** button for color copying, or the **Black** button for black & white copying.

#### Note

- When selecting Auto layout for the number of times to repeat the image, set the document on the Platen Glass. You cannot use the ADF.
- The area scanned from the original depends on the enlargement/reduction setting.

[Page top ↑](#)


## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Using Useful Copy Functions > Making Multiple Copies of an Entire Document (Collated Copy)

# Making Multiple Copies of an Entire Document (Collated Copy)


You can obtain sorted printouts when making multiple copies of a multi-paged original.

- **Collated copy selected.**

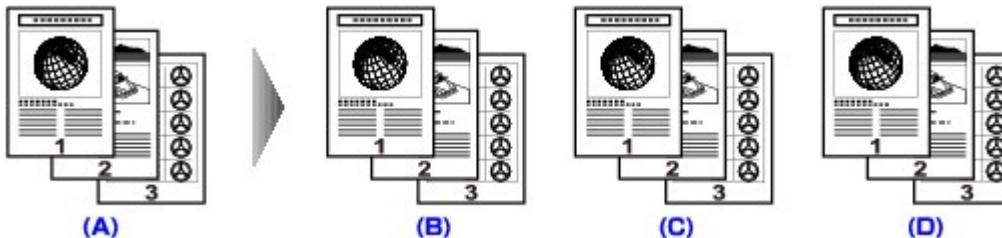

- (A) Originals  
 (B) Copy 1  
 (C) Copy 2  
 (D) Copy 3

- **Collated copy not selected.**

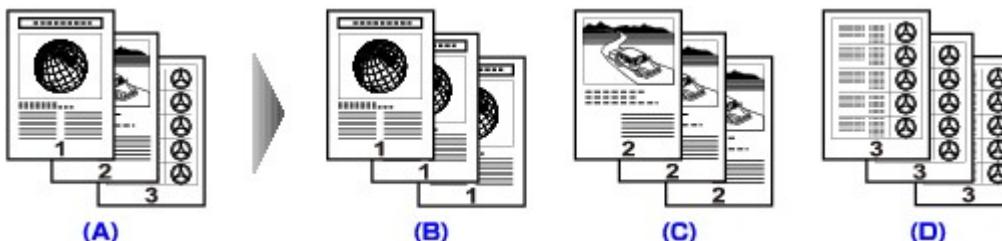

- (A) Originals  
 (B) Copy 1  
 (C) Copy 2  
 (D) Copy 3

▶ **Settings for Special Copy**



1. Select Collated copy, then press the **OK** button.

Follow the on-screen instructions.

2. Press the **Color** button for color copying, or the **Black** button for black & white copying.

**Note**

- Load the document in the ADF when using this function.
- Using this function might cause a reduction in print quality. For better results, print a single copy of the original loaded in the ADF at a time.
- The number of pages the machine can read varies with the document. If Device memory is full. Cannot continue process. appears on the LCD when scanning, reduce the number of document pages to scan and try copying again.

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Using Useful Copy Functions > Copying with Fade Restoration (Fade-Restored Copy)

# Copying with Fade Restoration (Fade-Restored Copy)

You can obtain color-corrected printouts when copying documents that have faded over time.

## ▶ Settings for Special Copy

1. Select   Fade-restored copy, then press the **OK** button.

Follow the on-screen instructions.

2. Press the **Color** button.

## Note

- This function is only available when making color copies.
- Load the document on the Platen Glass when using this function.
- Fade Restoration is not guaranteed to be effective with any photograph.


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Using Useful Copy Functions > Copying Thick Originals Such as Books (Frame Erase)

# Copying Thick Originals Such as Books (Frame Erase)

When copying a thick original document such a book, you can make a copy without black margins around the image and gutter shadows. Using this function, you can reduce unnecessary ink consumption.

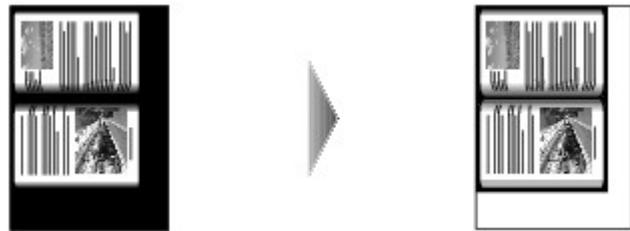

### ▶ Settings for Special Copy

1. Select  Frame erase, then press the **OK** button.

Follow the on-screen instructions.

2. Press the **Color** button for color copying, or the **Black** button for black & white copying.

### Note

- Load the document on the Platen Glass when using this function.
- Close the Document Cover.
- There may be a narrow black margin that appears around the image. This function removes the dark margins only. If a scanned book is too thin or when the machine is used near a window or in a bright environment, a faint black frame may remain. Also, if the color of an original is dark, the machine cannot distinguish the document color from the shadow and this may cause slight cropping or a shadow on the crease.


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Using Useful Copy Functions > Copying on Stickers (Sticker Copy)

### Copying on Stickers (Sticker Copy)

You can easily make 16 stickers from 4" x 6" / 101.6 x 152.4 mm photos or graphics using Canon sticker paper.

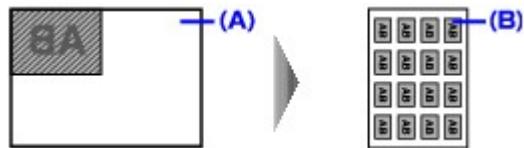

(A) Platen Glass (Place the document facing down)

(B) 16 stickers

▶ [Settings for Special Copy](#)

1. Select  Sticker copy, then press the **OK** button.

2. Make sure that Stickers x16 is selected, then press the **OK** button.

#### Note

- If any layout other than Stickers x16 is selected on the LCD, select Stickers x16 using the  button.

Follow the on-screen instructions.

3. Press the **Color** button for color copying, or the **Black** button for black & white copying.

#### Note

- Load the document on the Platen Glass when using this function.
- You can only load one sheet of stickers at a time in the Rear Tray.
- You cannot specify the settings other than intensity.


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Using Useful Copy Functions > Copying with Binding Margin (Binding Margin Copy)

# Copying with Binding Margin (Binding Margin Copy)

You can copy the document with a margin for hole punching or binding.

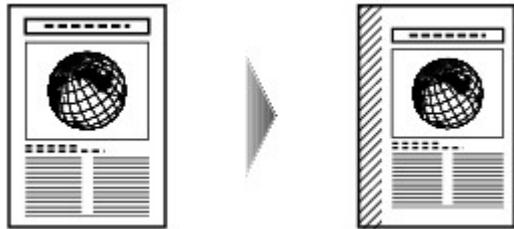

▶ [Settings for Special Copy](#)

1. Select Binding margin copy, then press the **OK** button.  
Follow the on-screen instructions.
2. Press the **Color** button for color copying, or the **Black** button for black & white copying.

### Note

- The media type is fixed to Plain paper. You cannot select other media types.
  - The machine automatically reduces the area scanned from the original when a margin is added. The function for reducing or enlarging the image to fit the page size is not applied.
- ▶ [Reducing or Enlarging a Copy](#)
- If you want to copy at the same magnification as the original, press the **Settings** button to select Same magnification.
- When the document is loaded in the ADF, the document pages are not ejected in the original order by default. If you want the document pages to eject in the original order, set Two-sided output setting to Output by page. For details, refer to [Changing the Machine Settings on the LCD](#).


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Copying > Using Useful Copy Functions > Removing Punch Hole Marks (Punch Hole Removal Copy)

# Removing Punch Hole Marks (Punch Hole Removal Copy)

When copying documents with punch holes, you can make a copy without punch hole marks.

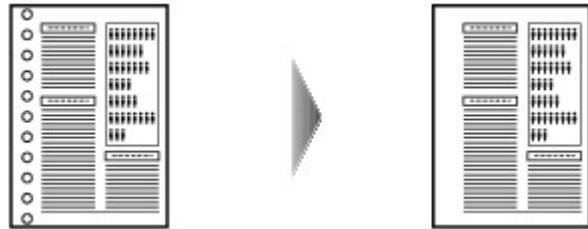

▶ [Settings for Special Copy](#)

1. Select  Punch hole removal copy, then press the **OK** button.  
Follow the on-screen instructions.
2. Press the **Color** button for color copying, or the **Black** button for black & white copying.

### Note

- Load the document on the Platen Glass when using this function.
- The media type is fixed to Plain paper. You cannot select other media types.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card

# Printing from a Memory Card

- ▶ [Printing Photographs Saved on a Memory Card](#)
- ▶ [Using Useful Printing Functions](#)
- ▶ [Using Useful Display Functions](#)
- ▶ [Setting Up the Card Slot as the Memory Card Drive of the Computer](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Printing Photographs Saved on a Memory Card

# Printing Photographs Saved on a Memory Card

For the basic procedure to print from a memory card, refer to [Printing from a Memory Card](#).

- ▶ [Setting Items](#)
- ▶ [Printing by Using the Photo Index Sheet](#)
- ▶ [Using Useful Printing Functions](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Printing Photographs Saved on a Memory Card > Setting Items

## Setting Items


Press the **Settings** button in the memory card mode to change the print settings such as page size, media type, and print quality.

### Note

- Use the **▲ ▼** button to select an item and use the **◀ ▶** button to specify the setting. To change the tab, use the **▲** button to return to the position of tab selection and use the **◀ ▶** button to select another tab.
- Depending on the functions, some setting items cannot be specified in combination.

### Tab 1

You can specify the settings of the printing paper, bordered/borderless print, date/file number. etc.

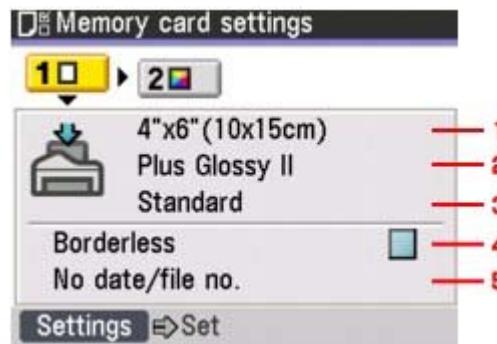

#### 1. Page size

Select the page size of the loaded paper.

#### 2. Media type

Select the media type of the loaded paper.

#### 3. Print quality

Adjust print quality according to the original.

#### 4. Border

Select bordered or borderless print.

### Note

- When you select Plain paper for the media type, the photo will be printed with bordered even if you select Borderless.

#### 5. Date/file no.


Select whether to print the shooting date, file number, or not.

### Note

- You cannot select Print date & file no. when Layout print is selected for Special photo print.

### Tab 2

You can optimize photos with the functions below.

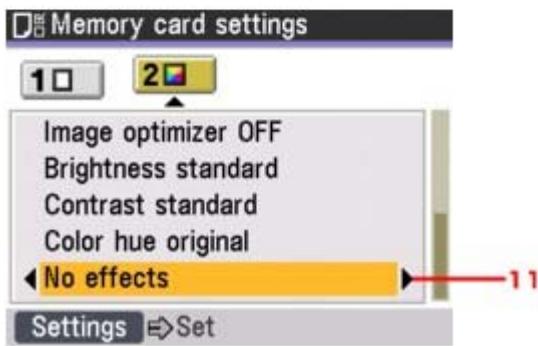

### 1. Auto photo fix

When Auto photo fix ON is selected, the scene or person's face of a shot photo is recognized and the most suitable correction for each photo is made automatically. It makes a darkened face by backlight brighter to print. It also analyzes a scene such as scenery, night scene, person, etc. and corrects each scene with the most suitable color, brightness, or contrasts automatically to print.

#### Note

- If the print result with Auto photo fix ON selected is not satisfactory, select Auto photo fix OFF, then specify each advanced setting item below.

### 2. Red-Eye correction

Corrects red eyes in portraits caused by flash photography.

#### Note

- This setting is available even if Auto photo fix ON is selected.

### 3. Vivid photo

Makes green and blue more lively.

### 4. Photo optimizer pro

Automatically optimizes brightness and tone of a photo.

**5. Noise reduction**

Reduces the noise on blue areas like the sky as well as on black areas.

**6. Face brightener**

Brightens a darkened face on the photo taken against the light.

**7. Image optimizer**

Corrects and smoothes the jagged contours for printing.

**8. Brightness**

Adjust brightness.

**9. Contrast**

Adjust contrast.

**10. Color hue**

Adjust color hue.

For example, you can increase red or yellow to adjust the skin tone.

**11. Effects**

Applies special effects to the photo, such as printing in sepia tones or with a sketch illustration like effect.


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Printing Photographs Saved on a Memory Card > Printing by Using the Photo Index Sheet

### Printing by Using the Photo Index Sheet

Photo Index Sheet is an A4 or Letter-sized plain paper on which thumbnail images of photos saved on a memory card are printed. Print out a Photo Index Sheet, mark the images that you want to print, scan the sheet in, and the machine then prints the selected images. You can also specify other settings, such as the paper size and the media type, by using this sheet; you do not have to perform settings by using the Operation Panel on the machine.

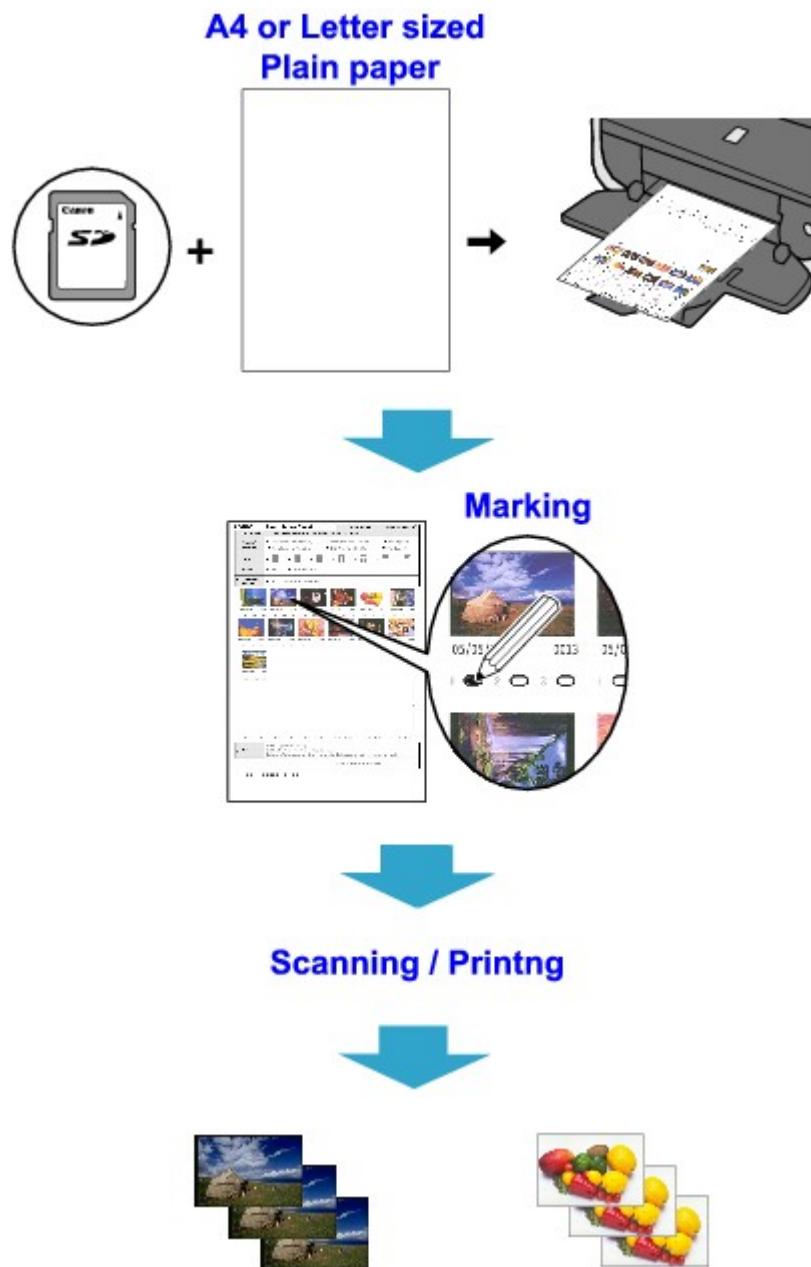

1. Make sure that the machine is turned on.
2. Load A4 or Letter-sized plain paper in the Cassette.
3. Press the **MEMORY CARD** button.
4. Insert a memory card into the Card Slot.

#### Important

- Do not remove the memory card until printing the Photo Index Sheet(s) is completed.

 **Note**

- For information on how to insert a memory card, refer to [Printing from a Memory Card](#).

5. Use the   button to select  Photo Index Sheet, then press the **OK** button.

6. Use the   button to select  Photo Index Sheet print, then press the **OK** button.

7. Select a range of images included in the Photo Index Sheet, then press the **OK** button.

The following ranges can be selected.

**Print all photos:**

Prints all images.

**Set no. of copies:**

Prints the specified number of images from the newest one.

**Search:**

Prints images by specifying the shooting date range.

 **Note**

- It may take a while to display the Search screen depending on the number of photos saved on the memory card.

8. Press the **Color** button.

The Photo Index Sheet(s) will be printed.

 **Note**

- If 31 or more images are selected, two or more Photo Index Sheets will be printed.

9. Fill in the appropriate circles in the Photo Index Sheet.

Fill in the appropriate circles () with a dark pencil or a black ink pen to select the photos to print and their print options.

- Good



- Bad



(a)


(b)

(c)

(a) Check mark

(b) Line only

(c) Too light

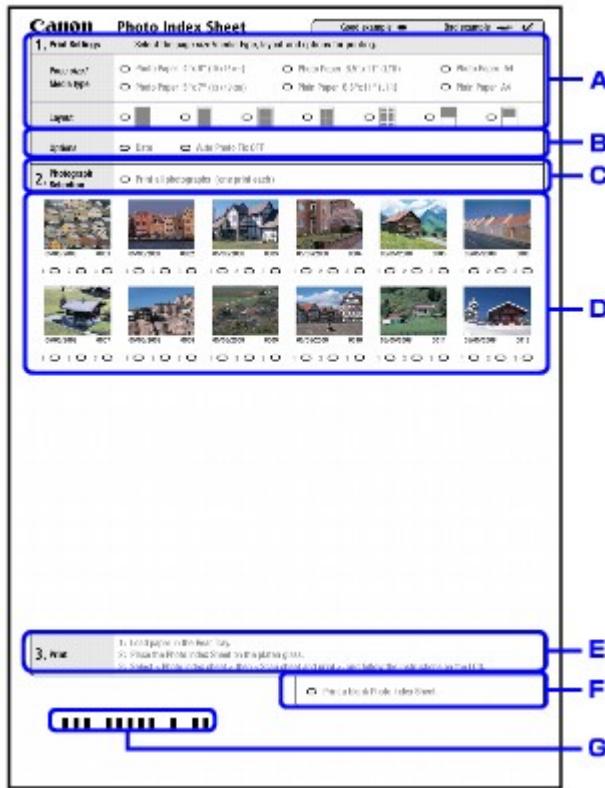

- A. Select the page size and other printing formats.
- B. Select Date print/Auto image fix as necessary.
- C. Fill in this circle to print a copy of all photographs.
  - \* If you fill in this circle, any other circles you filled in for the number of copies to print for each photograph will be disregarded, and one copy each of all photographs will be printed.
- D. Select the number of copies (fill in a circle under each photograph to print).
- E. Confirm and follow the described printing procedure.
- F. Fill in this circle to print the same Photo Index Sheet again.
  - \* If you fill in this circle, all other filled settings will be disregarded.
- G. Be careful not to make the bar code dirty.



### Important

- Be sure to fill in a circle for every setting item except options.
- If there are more than one Photo Index Sheet, fill in marks on each sheet.
- If the filled circles on the Photo Index Sheet are not dark or vast enough, the machine may not scan the Photo Index Sheet properly.

## 10. Load paper to print photos.

Make sure that the page size and media type of the loaded paper match those specified on the Photo Index Sheet.




### Note

- When printing images using the Photo Index Sheet, you can select 4" x 6" (101.6 x 152.4 mm), 5" x 7" (127 x 177.8 mm), 8.5" x 11" (Letter), or A4 for the page size.

## 11. Make sure that Scan sheet and print is selected, then press the **OK** button.

## 12. Place the Photo Index Sheet face-down on the Platen Glass, then press the **OK** button.

When placing the Photo Index Sheet, place the front side down and align the upper left corner of it with the alignment mark as shown in the figure below.

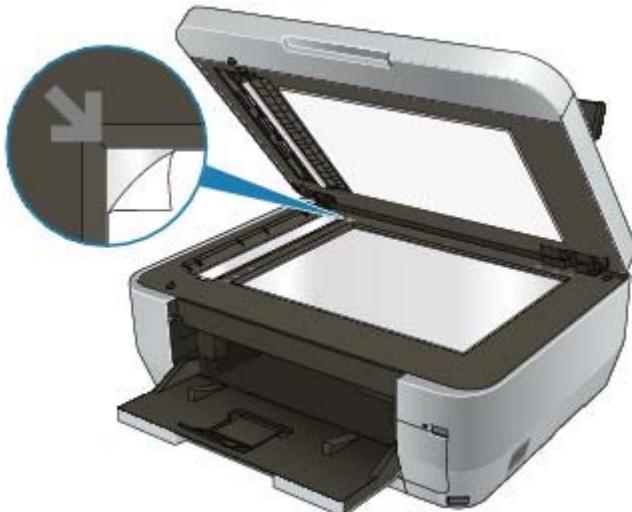

The Photo Index Sheet is scanned and the specified photos will be printed.  
Remove the Photo Index Sheet on the Platen Glass after printing is completed.

### Important

- You cannot use the ADF to scan the Photo Index Sheet.
- If Failed to scan Photo Index Sheet. is displayed on the LCD, press the **OK** button and confirm the following:
  - The Platen Glass and the Photo Index Sheet are not dirty
  - The Photo Index Sheet is placed in the correct position with its front side facing down
  - You have filled in all the necessary circles on the sheet
  - Only one option is selected for items that do not accept two or more selections
- Do not remove the memory card while printing is in progress.

### Note

- To cancel printing, press the **Stop** button.
- To continue to print photographs using subsequent Photo Index Sheets, repeat the procedure from step 11.
- If the memory card has been removed and then reinserted before printing with the Photo Index Sheet, it may take some time before printing starts.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Using Useful Printing Functions

# Using Useful Printing Functions

## Printing Memory Card Photos in Various Layouts

You can select from the following printing methods according to your purpose.

### Note

- For the procedure to select the printing method, see [Settings for Printing a Photo on a Memory Card](#).

- **Layout Print**

You can paste photos of your choice in the specified layout.

➔ [Printing Several Photos on a Single Sheet of Paper \(Layout Print\)](#)

- **Sticker Print**

You can print your favorite photo with a frame on Canon Photo Stickers.

➔ [Printing on Stickers \(Sticker Print\)](#)

- **Print all photos**

You can print all photos saved on the memory card.

➔ [Print all photos](#)

- **Photo index print**

You can print an index of all the photos saved on a memory card.

➔ [Photo index print](#)

- **DPOF print**

If you have specified Digital Print Order Format (DPOF) settings on your digital camera, you can print photos according to these settings.

➔ [DPOF print](#)

- **Captured info print**

You can print shooting information (Exif info) on the margin of the index of photos or selected individual photos.

➔ [Captured info print](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Using Useful Printing Functions > Settings for Printing a Photo on a Memory Card

### Settings for Printing a Photo on a Memory Card

1. Make sure that the machine is turned on.
2. Load paper.
3. Press the **MEMORY CARD** button.
4. Insert the memory card into the Card Slot.

#### Note

- For information on how to insert a memory card, refer to [Printing from a Memory Card](#).

5. Use the   button to select  Special photo print, then press the **OK** button.
6. Use the   button to select the printing method, then press the **OK** button.  
Select the printing method you want and follow the on-screen instructions.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Using Useful Printing Functions > Printing Several Photos on a Single Sheet of Paper (Layout Print)

# Printing Several Photos on a Single Sheet of Paper (Layout Print)

You can paste photos of your choice in the specified layout.

▶ [Settings for Printing a Photo on a Memory Card](#)

1. Select  Layout print, then press the **OK** button.

Follow the on-screen instructions.

### Note

- When Paste one by one is selected, use the **▲ ▼** button to specify where to paste photos.
- When Borderless is selected, the media type cannot be set to Plain paper.
- When Mixed 1, Mixed 2, or Mixed 3 is selected, you can select A4 or 8.5"x11"(LTR) for the page size.
- You cannot paste photos over multiple pages at one time. If you have photos for two or more pages, print each page as you finish pasting photos for the page.
- You cannot select Print date & file no. for Date file no..
- Other Options
  - ▶ [Printing a Specified Area \(Trimming\)](#) (This function is available only when Paste one by one is selected.)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Using Useful Printing Functions > Printing on Stickers (Sticker Print)

### Printing on Stickers (Sticker Print)

You can print your favorite photo with a frame on Canon Photo Stickers.

▶ [Settings for Printing a Photo on a Memory Card](#)

1. Select  Sticker print, then press the **OK** button.

Follow the on-screen instructions.

#### Note

- You cannot use the Cassette to print on stickers. Load stickers on the Rear Tray.
- You can load only one sheet of stickers at a time on the Rear Tray.
- Select the frame to print using the  button.
- To print with no frame, make sure that No frame is selected, then press the **OK** button.
- When the photo is upside down, use the  button to rotate the photo by 180 degrees to orient it properly against the photo.
- To rotate the photo by 90 degrees to fit it within the frame, use the cropping edit screen to rotate the cropping area.
  - ▶ [Printing a Specified Area \(Trimming\)](#)
- Other Options
  - ▶ [Printing a Specified Area \(Trimming\)](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Using Useful Printing Functions > DPOF print

### DPOF print

#### ▶ Settings for Printing a Photo on a Memory Card

##### 1. Select DPOF print, then press the **OK** button.

If you have specified Digital Print Order Format (DPOF) settings on your digital camera, you can print photos according to these settings.

#### Note

- The machine supports the following DPOF functions:

##### **Version:**

Based on ver. 1.00

##### **Supported image types:**

CIFF, Exif (TIFF), and JFIF

##### **Print Style - Standard Print:**

Prints photos that were specified as "Standard Print" with DPOF

##### **Print Style - Index Print:**

Prints an index of photos that were specified as "Index Print" with DPOF using the machine's index printing layout

##### **Print Style - Multi-Image Print:**

Prints a photo that was specified as "Multi-Image Print" with DPOF (with the specified number of copies and layout)

##### **Print Photo Select:**

Prints only photos specified with DPOF

##### **Number of copies:**

Prints the number of copies specified with DPOF

- Prints are automatically enlarged or reduced to match the page size. Edges of the photo may be clipped off depending on the page size.
- The shot date order setting by which photos are sorted follows that of DPOF.
- DPOF is a standard format to record the specified information regarding images, such as which image or number of copies to print.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Using Useful Printing Functions > Captured info print

### Captured info print

You can print shooting information (Exif info) on the margin of the index of photos or selected individual photos.

▶ [Settings for Printing a Photo on a Memory Card](#)

1. Select  Captured info, then press the **OK** button.

Follow the on-screen instructions.

#### Note

- The following print methods are available:

**List:**

Prints the information in the margin of the Photo index print of all photos.

**Single photo:**

Prints the information in the margin of selected individual photos.

- Other Options

▶ [Printing a Specified Area \(Trimming\)](#) (This function is available only when Single photo is selected.)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Using Useful Printing Functions > Photo index print

### Photo index print

You can print an index of all the photos saved on a memory card.

▶ [Settings for Printing a Photo on a Memory Card](#)



1. Select Photo Index print, then press the **OK** button.

Follow the on-screen instructions.

#### Note

- The following print methods are available:

Contact print: 35 mm film images are printed in its negative size as in contact print.

Standard: The number of photos printed on a single sheet of paper depends on the size of the paper.

- A4/Letter: 80 photos, 8" x 10"/203.2 x 254.0 mm: 72 photos, 5" x 7"/127.0 x 177.8 mm: 35 photos
- 4" x 6"/101.6 x 152.4 mm: 24 photos, Wide/101.6 x 180.6 mm: 28 photos

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Using Useful Printing Functions > Print all photos

### Print all photos

You can print all photos saved on the memory card.

▶ [Settings for Printing a Photo on a Memory Card](#)



1. Select Print all photos, then press the **OK** button.

Follow the on-screen instructions.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Using Useful Display Functions

# Using Useful Display Functions

## Changing the Display

When Multiselect print is selected, you can change the display by pressing the **Change Display** button repeatedly.

- **Normal screen display:**

Shows one photo.

- **Full-screen display:**

Shows one photo at full-screen.

- **Thumbnail display:**

Shows four photos at a time. Use the button to select the photo to print, then use the button to specify the number of copies for each photo.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Using Useful Display Functions > Printing a Specified Area (Trimming)

# Printing a Specified Area (Trimming)

You can edit images displayed on the LCD by cropping them.

### Note

- Crop images after specifying the page size, media type, and bordered or borderless printing in the print settings screen. If you change the paper settings after cropping, the cropped area may be adjusted to match the paper, or be disabled completely.


### 1. Select the photo to crop.

### 2. Display the cropping edit screen.


Press the **Tone** button in the photo selection screen.

The cropping edit screen is displayed.


### 3. Choose the area to print.

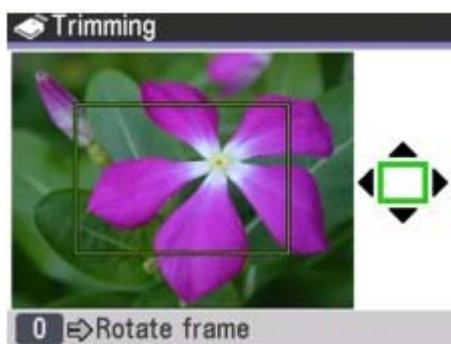

Use the **▲ ▼ ← →** button to select the position of the cropping frame, then press the **OK** button. If you do not change the settings (rotating the frame or changing the frame size) for the cropping frame, go to step 4.

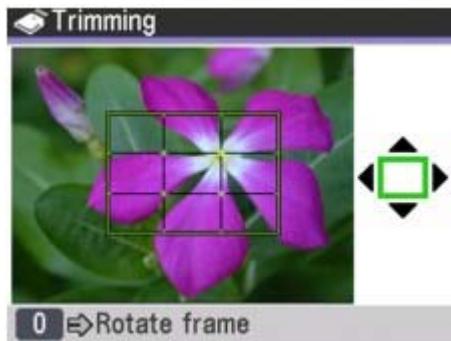

Use the **Tone** button or the **#** button to specify the size of the cropping frame. Pressing the **Tone** button reduces the size, and the **#** button enlarges the size.

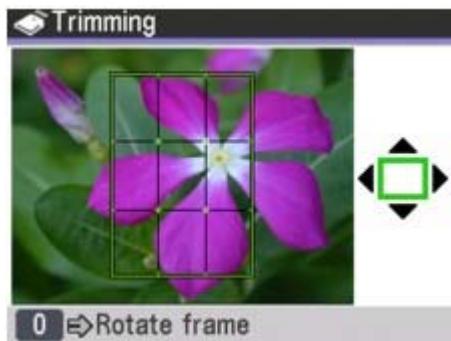

Press the **(0)** button to rotate the cropping frame.

#### 4. Press the **OK** button to finalize your selection of cropping area.

The area to be cropped is specified, and the original photo is displayed.

##### Note

- The cropped image cannot be newly saved on the memory card.
- The cropping area is displayed only for photos which have been cropped.
- To change the cropped area once it has been set, press the **Tone** button in the photo selection screen.
- To cancel cropping before it is completed, press the **Stop** button. You can also cancel cropping by exiting from the memory card mode.
- To cancel cropping after cropping has been completed, press the **Tone** button in the photo selection screen, then press the **Stop** button.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Using the Operation Panel of the Machine > Printing from a Memory Card > Setting Up the Card Slot as the Memory Card Drive of the Computer

# Setting Up the Card Slot as the Memory Card Drive of the Computer

The Card Slot of the machine can also be used as the memory card drive of the computer.

### Note

- For details on using the Card Slot over a network, see [Using the Card Slot over a Network](#).
- In Macintosh, you cannot write data to a memory card in the Card Slot over a network.

### Important

- When Read/write attribute in Advanced settings under Device settings is set to Writable from USB PC or Writable from LAN PC using the Operation Panel of the machine, card direct printing cannot be done. After using the Card Slot as the memory card drive of the computer, remove the memory card, then be sure to set Read/write attribute to Not writable from PC. When you turned off the machine, Writable from USB PC or Writable from LAN PC will be canceled and the setting is returned to Not writable from PC when you turn on the machine next time.

## 1. Make sure that the memory card is not set.

If the memory card is set, remove it from the Card Slot. For details, refer to [Printing from a Memory Card](#).

## 2. Press the **Menu** button.



## 3. Use the **◀▶** button to select Settings, then press the **OK** button.



## 4. Use the **◀▶** button to select Device settings, then press the **OK** button.

## 5. Use the **▲▼** button to select Advanced settings, then press the **OK** button.

## 6. Use the **▲▼** button to select Read/write attribute, then press the **OK** button.

## 7. Specify the read/write attribute.

### Not writable from PC

The Card Slot is used only for reading. Be sure to select this mode when printing photos from a memory card.

### Writable from USB PC

The Card Slot is used as the memory card drive of a computer connected to the machine via USB. Data can be written on the memory card from the computer.

### Writable from LAN PC

The Card Slot is used as the memory card drive of a computer connected to the machine via a network. Data can be written on the memory card from the computer.

## 8. Press the **OK** button.

### Important

- If you used the Card Slot as the memory card drive of the computer, you need to perform a "safe removal" operation on your computer before physically removing the memory card from your machine.
  - In Windows, right-click the Removable Disk icon and click Eject. If Eject is not displayed on the screen, confirm that the **Access** lamp is not flashing and remove the memory card.
  - Over a network, the removal operation is not needed.

- On a Macintosh, drag the  Mount drive icon into the Trash.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Scanning

---

# Scanning

- ▶ Scanning Images
- ▶ Saving Scanned Data on the USB Flash Drive/Memory Card Using the Operation Panel of the Machine
- ▶ Saving Scanned Data to PC Using the Operation Panel of the Machine
- ▶ Scanning with the Bundled Application Software
- ▶ Scanning with Other Application Software
- ▶ Canon IJ Network Scan Utility Screens
- ▶ Other Scanning Methods

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning Images

---

# Scanning Images

- ▶ Scanning Images
- ▶ Before Scanning
- ▶ Placing Documents

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning Images > Scanning Images

### Scanning Images

You can scan images from the machine to a computer without printing them and save them in popular image data, such as JPEG, TIFF, bitmaps, or PDF. You can also save scanned images in a PDF or JPEG data format in the memory card or USB flash drive.

Select the scanning method according to your purpose.

- ▶ Saving Scanned Data on the USB Flash Drive/Memory Card Using the Operation Panel of the Machine
- ▶ Saving Scanned Data to PC Using the Operation Panel of the Machine
- ▶ Scanning with the Bundled Application Software
- ▶ Scanning with Other Application Software

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning Images > Before Scanning

### Before Scanning

Before scanning images, confirm the following:

- **Does the original to be scanned meet the requirements for an original to be set on the Platen Glass or in the ADF?**

If you save the data to PC, refer to [Placing Documents](#) for details.

If you save the data to the USB flash drive/memory card, refer to [Loading Paper / Originals](#) for details.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning Images > Placing Documents

# Placing Documents

Learn how to place documents on the machine's Platen or ADF (Auto Document Feeder). Place documents correctly according to the type of document to be scanned. Otherwise, documents may not be scanned correctly.

### Important

- Do not place objects on the Document Cover. The objects may fall into the machine when the Document Cover is opened. This may damage the machine.



▶ [Placing Documents \(Platen\)](#)

▶ [Placing Documents \(ADF \(Auto Document Feeder\)\)](#)

## Placing Documents (Platen)

### Important

- Close the Document Cover when scanning.
- Place documents as described below to allow the machine to detect the document automatically. When scanning by specifying the document size, always align an upper corner of the document with the corner at the arrow of the Platen, regardless of the document type.

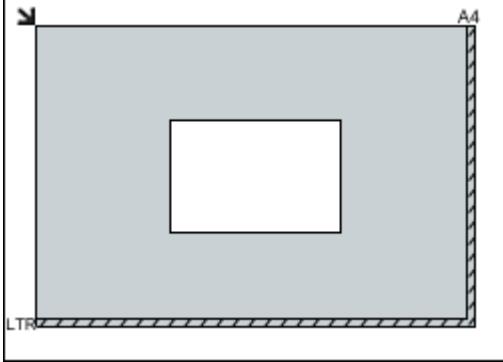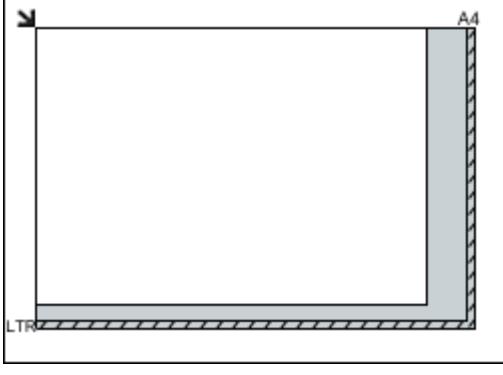
When Scanning Photos, Hagaki, Business Cards or CD/DVD	When Scanning Magazines, Newspapers or Text Documents
  <b>Placing a Single Document</b> Place the document face-down on the Platen, with 3/8 inches (1 cm) or more space between the edges of the Platen and the document. 	  Place the document face-down on the Platen and align an upper corner of the document with the corner at the arrow of the Platen. 

### Important

- Large documents (such as A4 photos) that cannot be placed away from the edges/arrow of the Platen may be saved as PDF files. To save in a format other than PDF, scan by specifying the file format.
- Reflective CD/DVD labels may not be scanned properly.

**Placing Multiple Documents**

Allow 3/8 inches (1 cm) or more space between the edges of the Platen and documents, and between documents.

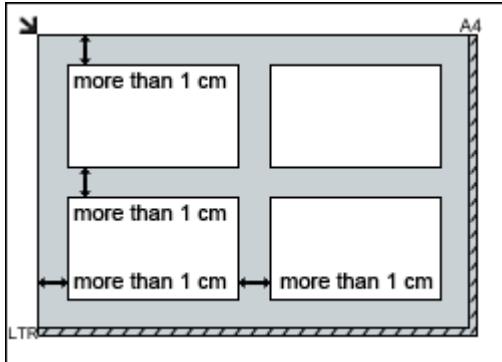

### Note


- You can place up to 10 documents.
- You can place up to 4 documents when the Compress scanned images when transferring checkbox is selected on the General tab of the Preferences dialog box.
- Positions of slanted documents (10 degrees or less) are corrected automatically.

## Placing Documents (ADF (Auto Document Feeder))

### Important

- Place documents of the same size when scanning two or more documents.
- Supported document sizes when scanning from the ADF (Auto Document Feeder):  
When scanning one side of each document: A5 Portrait, B5, A4, Letter, Legal  
When scanning both sides of each document: A4, Letter


### 1. Open the Document Tray.

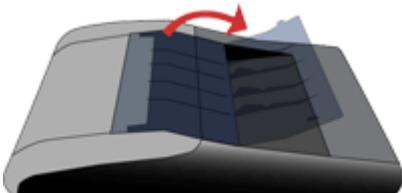

### 2. Place the documents on the ADF (Auto Document Feeder), then adjust the Paper Guides to the width of the documents.

Insert the documents face-up until a beep sounds.

Place the documents face-up to scan both sides of the documents.

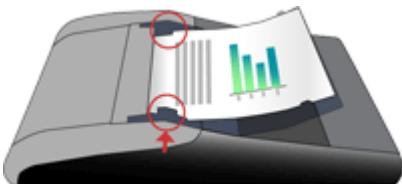

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Saving Scanned Data on the USB Flash Drive/Memory Card Using the Operation Panel of the Machine

# Saving Scanned Data on the USB Flash Drive/Memory Card Using the Operation Panel of the Machine

▶ Saving Scanned Data on the USB Flash Drive/Memory Card Using the Operation Panel of the Machine

Page top ↑

## Advanced Guide

Advanced Guide > Scanning > Saving Scanned Data on the USB Flash Drive/Memory Card Using the Operation Panel of the Machine > Saving Scanned Data on the USB Flash Drive/Memory Card Using the Operation Panel of the Machine

# Saving Scanned Data on the USB Flash Drive/Memory Card Using the Operation Panel of the Machine

You can save scanned data on the USB flash drive or memory card using the Operation Panel.


## Important

- Do not remove the USB flash drive or memory card from the machine under the following conditions:
  - while scanning is in progress
  - before saving the scanned data
- You cannot use the USB flash drive and memory card at the same time. Be sure to use either of them as a media for saving scanned data.
- Scanned data saved on the memory card cannot be printed with the card direct printing.
- For safety reasons, we recommend storing the scanned data saved on a memory card or a USB flash drive to another media periodically to avoid unexpected accidents.
- We assume no responsibility for damage or loss of data for whatever reasons even within the warranty period.

**1.** Make sure that the machine is turned on.

**2.** Press the **SCAN** button.

The screen for selecting to which you save the data is displayed.

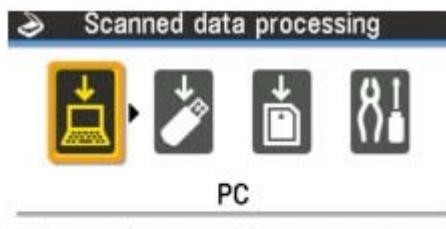

Forward scanned data to a PC.

**3.** Insert the USB flash drive in the Direct Print Port or the memory card in the Card Slot.

Refer to [Inserting the USB Flash Drive](#) for how to insert the USB flash drive in the Direct Print Port. For how to insert the memory card in the Card Slot or information on the types of the memory card compatible with the machine, refer to [Printing from a Memory Card](#).

**4.** Use the **◀▶** button to select USB flash drive or Memory card, then press the **OK** button.

**5.** Load the original document on the Platen Glass or in the ADF.

## Note

- Refer to [Loading paper / Originals](#) for how to load the original on the Platen Glass or in the ADF.

**6.** Use the **▲▼** button to select the document type, then press the **OK** button.

### Document (platen)

Scan documents on the Platen Glass.

### Photo (platen)


Scan photos on the Platen Glass.

**Document (ADF simplex)**

Scan single-sided documents in the ADF.

**Document (ADF duplex)**

Scan double-sided documents in the ADF.

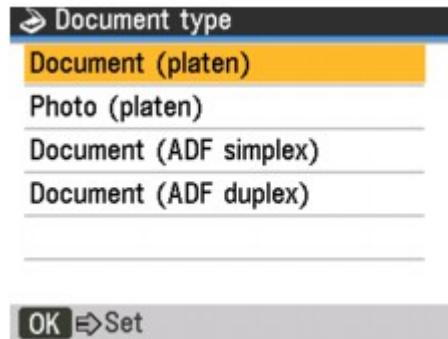

**OK** **⇒ Set**

**Important**

- Make sure that the document has been loaded correctly according to the document type that you have selected. Refer to [Loading paper / Originals](#) for how to load the original on the Platen Glass or in the ADF.

**Note**

- When double-sided documents are loaded in the ADF, the document pages are not ejected in the original order by default. If you want the document pages to eject in the original order, set Two-sided output setting to Output by page. For details, refer to [Changing the Machine Settings on the LCD](#).

**7.** Confirm the settings, then press the **OK** button.

Press the **Settings** button to adjust the settings as necessary.

▶ [Setting Items](#)

**8.** Confirm the message, then press the **OK** button.

**9.** Press the **Color** button for color scanning, or the **Black** button for black & white scanning.

The machine starts scanning and scanned data is saved either on the USB flash drive or the memory card, which you select as the media for saving scanned data.

Remove the original on the Platen Glass or the Document Output Slot after scanning is complete.

To remove the USB flash drive after scanning is completed, see [Removing the USB Flash Drive](#).

To remove the memory card after scanning is completed, refer to [Printing from a Memory Card](#).

**Note**

- When you select PDF as the data format, you can scan documents from the Platen Glass continuously. After scanning is complete, select Continue on the confirmation screen. Load the next document on the Platen Glass, then press the **Color** button for color scanning, or the **Black** button for black & white scanning. You can save up to 100 pages of images in one PDF file.
- If the USB flash drive or the memory card becomes full while scanning images is in progress, only the images already scanned can be saved.
- You can save up to 2000 files of scanned data in both JPEG and PDF data format.
- The folder and file name of scanned data saved on the USB flash drive or the memory card is as follows:
  - Folder name: (file extension: PDF): CANON\_SC\DOCUMENT\0001
  - Folder name: (file extension: JPG): CANON\_SC\IMAGE\0001
  - File name: Running numbers, starting from SCN\_0001
  - File date: Saving on the date and time registered in the machine. For information on how to register the date and time, refer to [Setting Up the Machine](#).

● Importing the Scanned Data Saved on the Memory Card to the Computer

When you import the scanned data saved on the memory card to the computer, import the data after performing either of the operations below:

-Turning the machine off, then turn it back on.

-Removing the memory card, then reinsert it into the Card Slot.

You can optimize or print the scanned data saved on the memory card using MP Navigator EX. For

details, refer to [Importing Images Saved on a Memory Card](#).

- Importing the Scanned Data Saved on the USB Flash Drive to the Computer

### Windows

You can import the scanned data saved on the USB flash drive to the computer.

After scanning the data, connect the USB flash drive to the computer, then import the data using Windows Explorer.

### Macintosh

You can import the scanned data saved on the USB flash drive to the computer.

After scanning the data, connect the USB flash drive to the computer, then import the data.

## Inserting the USB Flash Drive

### Important

- Before inserting the USB flash drive:
  - You may need an extension cable if the USB flash drive cannot be inserted into the Direct Print Port of the machine. For details, ask an electronics store.
  - Depending on the type of USB flash drive, the operation may not be guaranteed.
  - Some USB flash drives with security settings may not be used.

### 1. Insert the USB flash drive in the Direct Print Port.

Make sure that the USB flash drive is correctly oriented before inserting it straightforward into the Direct Print Port.



## Removing the USB Flash Drive

### 1. Make sure that the machine is not writing data to the USB flash drive.

Check if the writing operation is completed on the LCD.

### Important

- Do not remove the USB flash drive or turn off the power while the machine is operating.

### Note

- If you use the USB flash drive with the access lamp, refer to the instruction manual supplied with the USB flash drive to check if the writing operation is completed on the USB flash drive.

### 2. Remove the USB flash drive.

Hold the USB flash drive and remove it from the machine straightforward.

## Advanced Guide

Advanced Guide > Scanning > Saving Scanned Data on the USB Flash Drive/Memory Card Using the Operation Panel of the Machine > Saving Scanned Data on the USB Flash Drive/Memory Card Using the Operation Panel of the Machine > Setting Items

# Setting Items

Perform settings in saving scanned data on the USB flash drive or memory card.

On Scan document screen, press the **Settings** button to change the scan settings such as the scan size, resolution, or data format.

### Note

- Use the **▲ ▼** button to select an item and use the **◀ ▶** button to specify the setting. To change the tab, use the **▲** button to return to the position of tab selection and use the **◀ ▶** button to select another tab.
- The settings of the scan size, resolution, and data format are retained even if the machine is turned off.

## Tab 1

You can specify the settings of the scan size, resolution, or data format.



### 1. Scan size

Select the size of the original on the Platen Glass or in the ADF.

### Note

- When Document (ADF simplex) has been selected on the document type, only A4, 8.5"x11"(LTR), or 8.5"x14"(Legal) can be selected. When Document (ADF duplex) has been selected on the document type, only A4 or 8.5"x11"(LTR) can be selected.

### 2. Scan res.

Select the resolution for scanning.

### 3. Data format

Select the data format of the scanned data.

### 4. Orientation

Select the orientation of the original document when Document (ADF simplex) or Document (ADF duplex) have been selected on the document type and PDF have been selected for the data format.

### 5. Stapling side

Select the stapling side only when Document (ADF duplex) has been selected on the document type and PDF have been selected for the data format.

## Tab 2

You can change the scan settings.



### 1. Unsharp mask

The outline of small characters or thin objects can be accentuated. Select Unsharp mask ON if you want to accentuate the outline of the scanned data.

### 2. Descreen\*

A printout consists of minute dots to make characters or graphs. Interfering with each dot may result in uneven shades or a striped pattern. Select Descreen ON if you notice any uneven shades or a striped pattern on the scanned image.

#### Note

- Even if Descreen ON is selected, some moire effects may remain if Unsharp mask ON is selected. In that case, change into Unsharp mask OFF.

### 3. Show-through\*

Characters on the back may show through when scanning a thin document such as a newspaper. Select Show-through ON if characters seem to show through on the scanned document.

\* Not available when scanning a photo.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Scanning > Saving Scanned Data to PC Using the Operation Panel of the Machine

# Saving Scanned Data to PC Using the Operation Panel of the Machine

▶ Saving Scanned Data to PC Using the Operation Panel of the Machine

▶ Appendix: Various Scan Settings

Page top ↑

## Advanced Guide

Advanced Guide > Scanning > Saving Scanned Data to PC Using the Operation Panel of the Machine > Saving Scanned Data to PC Using the Operation Panel of the Machine

# Saving Scanned Data to PC Using the Operation Panel of the Machine

You can save scanned data to PC using the Operation Panel of the Machine.

Before saving scanned data to PC, confirm the following:

- **The necessary software (MP Drivers and MP Navigator EX) are installed.**

If the software (MP Drivers and MP Navigator EX) are not yet installed, refer to your setup manual.

- **The machine is connected to a computer correctly.**

Do not insert or remove USB or LAN cables when scanning images with the machine, or when the computer is in sleep or standby mode.

If you perform scanning via the LAN connection, make sure that all the required settings have been made. For details, refer to [Network Scan Settings](#).

- **The operation after scanning the original is specified in MP Navigator EX.**

MP Navigator EX enables you to specify the response resulting from pressing the **Color** or **Black** button on the machine. You can specify the response individually for each event. For details, refer to [Selecting a Response to Commands from the Operation Panel Using MP Navigator EX](#).

## 1. Macintosh Set the Starting application.

**If you are using Mac OS X v.10.5.x or Mac OS X v.10.4.x:**

This operation is not necessary.

**If you are using Mac OS X v.10.3.9:**

You need to set MP Navigator EX as the starting application software in Image Capture under Applications of Mac OS X.

Select Applications on the Go menu, then double-click the Image Capture icon. Click Options at the lower left of the scanner window, select MP Navigator EX 2 in Application to launch when the scanner button is pressed:, then click OK. To quit Image Capture, select Quit Image Capture on the Image Capture menu.

### Important

- If Options is not displayed, select Preferences on the Image Capture menu, click Scanner, and click Use TWAIN software whenever possible to clear the option. Then quit Image Capture and restart it.

## 2. Make sure that the machine is turned on.

## 3. Load the original document on the Platen Glass or in the ADF.

### Note

- Refer to [Placing Documents](#) for how to load the original on the Platen Glass or in the ADF.

## 4. Press the **SCAN** button.



## 5. Use the **◀▶** button to select PC, then press the **OK** button.

## 6. Use the **▲▼** button to select the PC to save the scanned data, then press the **OK** button.

Select Local (USB) for a USB-connected, or select the PC to save the scanned data for a LAN connected computer.

 **Note**

- The LAN-connected PCs are displayed as "User's name PCs name".

**7.** Use the **▲▼** button to select the document type, then press the **OK** button.**Auto detect**

This item is available only when the machine is connected to the computer using a USB cable. The machine detects the type of the original automatically and the image is saved in the optimized data.

Proceed to step 9.

**Document (platen)**

Scans the original on the Platen Glass applying the optimized settings for scanning a document.

**Photo (platen)**


Scans the original on the Platen Glass applying the optimized settings for scanning a photo.

**Document (ADF simplex)**

Scan single-sided original in the ADF applying the optimized settings for scanning a document.

**Document (ADF duplex)**

Scan double-sided original in the ADF applying the optimized settings for scanning a document.

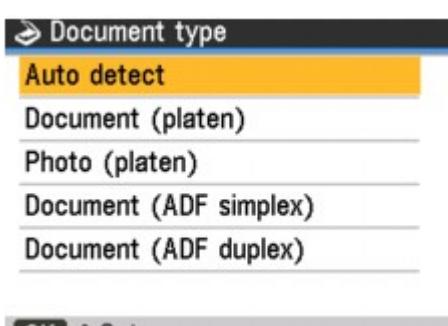 **Important**

- Make sure that the document has been loaded correctly according to the document type that you have selected. Refer to [Placing Documents](#) for how to load the original on the Platen Glass or in the ADF.

 **Note**

- When double-sided documents are loaded in the ADF, the document pages are not ejected in the original order by default. If you want the document pages to eject in the original order, set Two-sided output setting to Output by page. For details, refer to [Changing the Machine Settings on the LCD](#).

**8.** If you have selected a document type other than Auto detect in step 7, use the **▲▼** button to select the file format, then press the **OK** button.**Save to PC.**

The original is scanned and saved.

**Save as PDF file.**


The original is scanned and saved as a PDF file. This item can be selected when Document (platen), Document (ADF simplex), or Document (ADF duplex) has been selected on the Document type screen.

**Attach to E-mail.**

The original is scanned, and the image is attached to an e-mail using the e-mail application software.

**Open with application.**

The original is scanned and displayed on the registered application software.

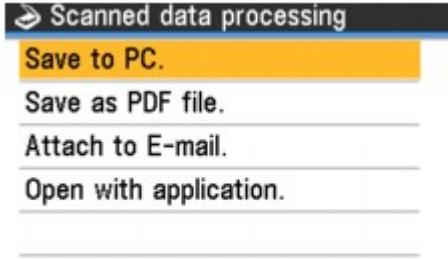


### Note

- Options for scan operations can be specified in MP Navigator EX. For details, refer to [Selecting a Response to Commands from the Operation Panel Using MP Navigator EX](#).

## 9. Press the **Color** button for color scanning, or the **Black** button for black & white scanning.

The settings configured from MP Navigator EX apply when scanning.

Remove the original on the Platen Glass or the Document Output Slot after scanning is complete.

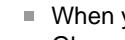

### Note

- When you select Save as PDF file. as the data format, you can scan documents from the Platen Glass continuously. After scanning is complete, select Continue on the confirmation screen. Load the next document on the Platen Glass, then press the **Color** button for color scanning, or the **Black** button for black & white scanning. You can save up to 100 pages of images in one PDF file.

## 10. To specify MP Navigator EX 2.1


### If you are using Windows Vista:

The program selection screen may be displayed after pressing the **Color** or **Black** button. In this case, select MP Navigator EX Ver2.1 and click OK.

You can set MP Navigator EX to launch whenever pressing the **Color** or **Black** button. For details, refer to [Selecting a Response to Commands from the Operation Panel Using MP Navigator EX](#).


### If you are using Windows XP:

The program selection screen may be displayed after pressing the **Color** or **Black** button for the first time. In this case, specify MP Navigator EX Ver2.1 as the application software to use, select Always use this program for this action, then click OK. From the next time, MP Navigator EX is automatically started.

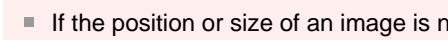

### Important

- If the position or size of an image is not scanned in correctly depending on the type of the original, refer to [Scanning Photos and Documents](#) and change the MP Navigator EX Document Type and Document Size settings to match the original being scanned.

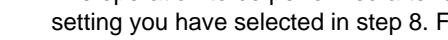

### Note

- The operation to be performed after scanning the original depends on the scan operation setting you have selected in step 8. For details on how to modify the operation settings, refer to [Selecting a Response to Commands from the Operation Panel Using MP Navigator EX](#).

### • If You Want to Edit or Print the Scanned Images

MP Navigator EX enables you to edit the scanned images, such as optimizing or trimming.

You can also start application software from MP Navigator EX to edit or print the scanned images.

▶ [Let's Try Scanning](#)

### • If You Want to Scan Originals with Advanced Settings

ScanGear enables you to scan originals with advanced settings such as the resolution.

▶ [Scanning with Advanced Settings Using ScanGear \(Scanner Driver\)](#)



### Note

- You can use a TWAIN- or WIA- (Windows Vista and Windows XP only) compliant application

software and the Control Panel (Windows Vista and Windows XP only) to scan originals with this machine.

For details, refer to [Other Scanning Methods](#).

---

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Scanning > Saving Scanned Data to PC Using the Operation Panel of the Machine > Appendix: Various Scan Settings

---

# Appendix: Various Scan Settings

- **Enabling network scanning**
  - ▶ Network Scan Settings
- **Specifying how to respond when scanning using the Operation Panel of the machine**
  - ▶ Selecting a Response to Commands from the Operation Panel Using MP Navigator EX

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Saving Scanned Data to PC Using the Operation Panel of the Machine > Appendix:  
Various Scan Settings > Network Scan Settings

### MP Navigator EX

## Network Scan Settings

You can connect the machine to a network to share it among multiple computers or scan images into a specified computer.

### Important

- Multiple users cannot scan at the same time.

### Note

- Complete the network settings of the machine beforehand. (Refer to the printed manual: *Getting Started*.)

Complete the following settings to enable scanning over a network.

### Setting for Scanning with MP Navigator EX

To scan over a network using MP Navigator EX, follow the steps below and change the connection status between the computer and the machine.


#### 1. Start MP Navigator EX

▶ Starting MP Navigator EX

#### 2. Click Preferences.

#### 3. For network connection, select (model name) series (Network: XXXXXXXXXXXX) for Product Name.

(Where XXXXXXXXXXXX is the MAC address.)

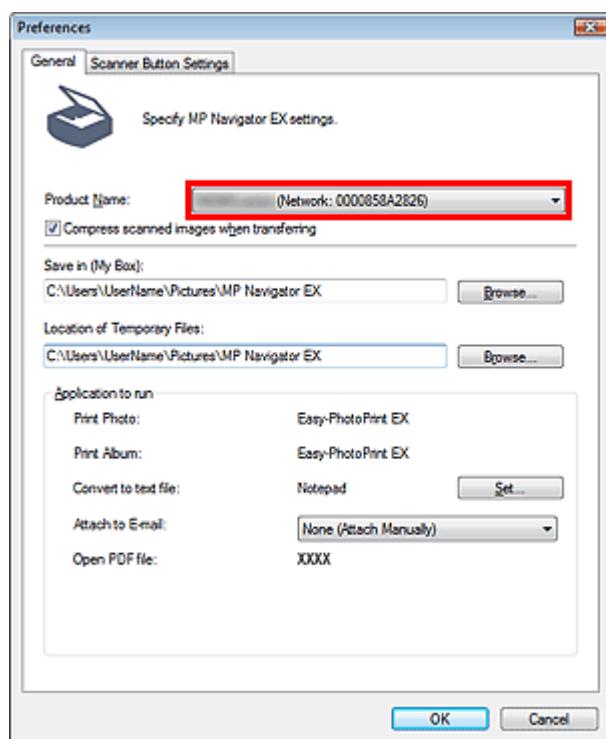


### Note

- For USB connection, select (model name) series for Product Name.

#### 4. Click OK.

The Preferences dialog box closes. You can now scan via a network connection.

Go to the Main Menu to check whether network scanning is enabled.

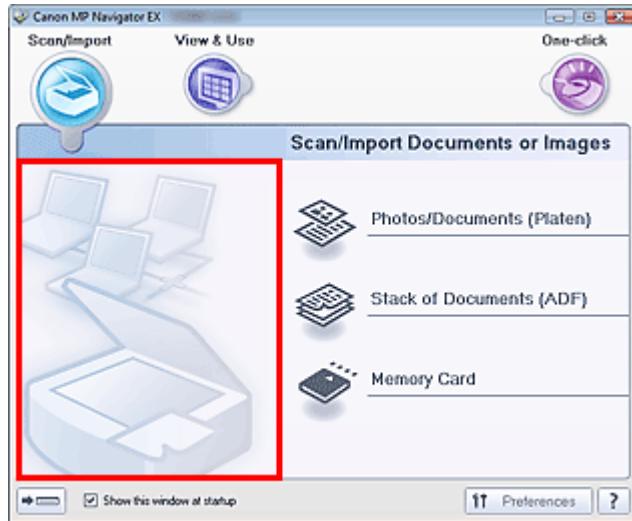


### Setting for Scanning Using the Operation Panel

#### 1. Check that Canon IJ Network Scan Utility is running.

If Canon IJ Network Scan Utility is running, its icon appears in the notification area of the taskbar.


If Canon IJ Network Scan Utility is not running, from the Start menu, select (All) Programs > Canon IJ Network Utilities > Canon IJ Network Scan Utility > Canon IJ Network Scan Utility to start it.

#### 2. In the notification area of the taskbar, right-click the Canon IJ Network Scan Utility icon and select Settings....

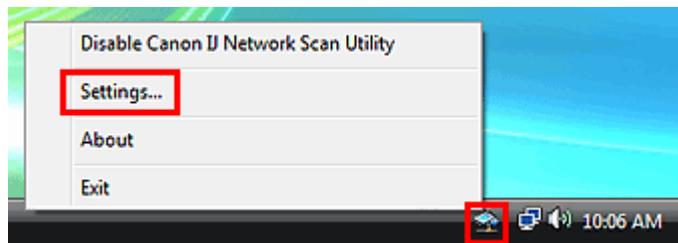

The Canon IJ Network Scan Utility dialog box opens.

#### 3. Select Canon (model name) ser\_XXXXXXXXXXXX and click OK.

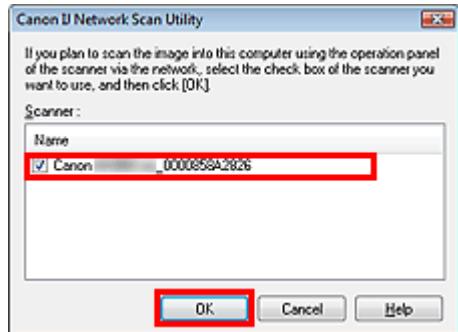

#### Note

- When multiple scanners are connected via a network, you can select up to three scanners.

## Advanced Guide

Advanced Guide > Scanning > Saving Scanned Data to PC Using the Operation Panel of the Machine > Appendix:  
Various Scan Settings > Selecting a Response to Commands from the Operation Panel Using MP Navigator EX

### MP Navigator EX


## Selecting a Response to Commands from the Operation Panel Using MP Navigator EX

MP Navigator EX enables you to specify the response resulting from pressing the Color Start or Black Start button on the machine. You can specify the response individually for each event.

### 1. Start MP Navigator EX.

▶ Starting MP Navigator EX

### 2. Click Preferences.

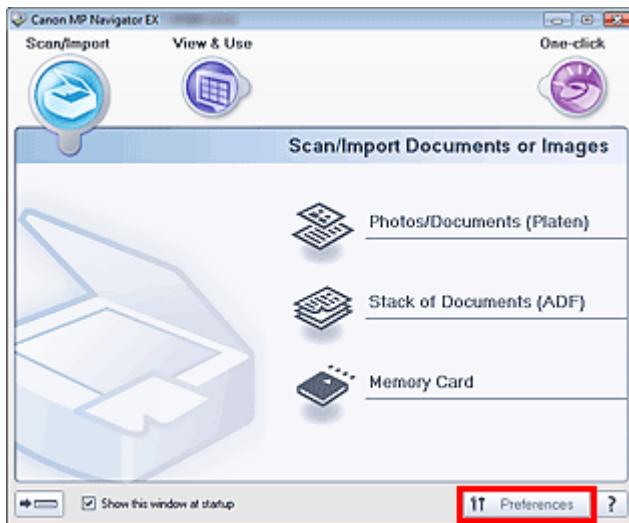


The Preferences dialog box opens.

### Note

- The Preferences dialog box can also be opened by clicking Preferences in the One-click Mode screen.

### 3. On the Scanner Button Settings tab, specify Event and Actions.

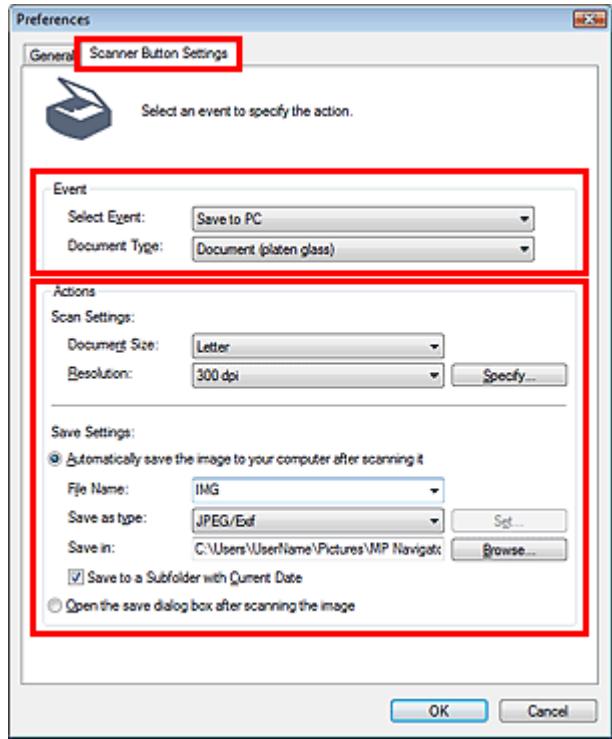

### Note

- See the section below for details.
  - ▶ [Scanner Button Settings Tab \(Save\)](#)
  - ▶ [Scanner Button Settings Tab \(Attach to E-mail\)](#)
  - ▶ [Scanner Button Settings Tab \(Open with Application\)](#)

#### 4. Click OK.

The operation will be performed according to the settings when you press the Color Start or Black Start button on the machine.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software

# Scanning with the Bundled Application Software

- ▶ What Is MP Navigator EX (Supplied Scanner Software)?
- ▶ Let's Try Scanning
- ▶ Useful MP Navigator EX Functions
- ▶ Utilizing Images in MP Navigator EX
- ▶ MP Navigator EX Screens
- ▶ Appendix: Opening Files Other than Scanned Images

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > What Is MP Navigator EX (Supplied Scanner Software)?

### MP Navigator EX

## What Is MP Navigator EX (Supplied Scanner Software)?

MP Navigator EX is an application that enables you to easily scan photos and documents. It is suitable even for beginners.

### Important

- MP Navigator EX may not start from a button on the machine. In that case, restart the computer.
- Use the default display font size of the OS. Otherwise, software screens may not appear correctly.

### What You Can Do with This Software

This software allows you to scan multiple documents at one time, or scan images larger than the Platen. You can also save scanned images, attach them to e-mail or print them using the supplied applications.


### Screens

#### Main Menus

There are two types of MP Navigator EX Main Menu: Navigation Mode screen and One-click Mode screen.

#### Navigation Mode Screen

You can start various tasks from the Navigation Mode screen, including simple scanning, scanning using ScanGear (scanner driver), and enhancing/correcting images.

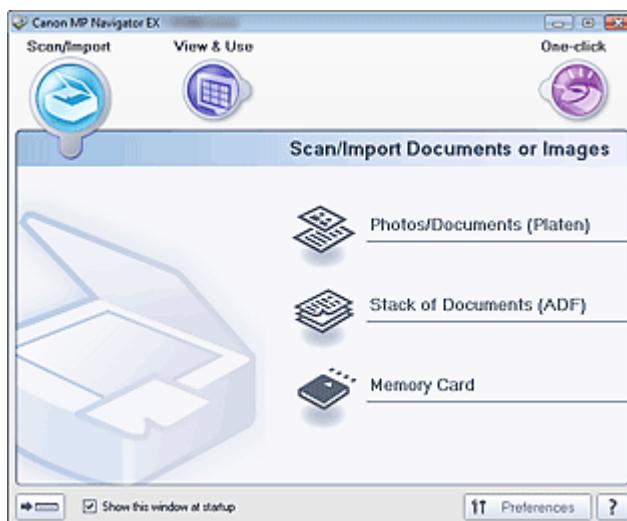


#### One-click Mode Screen

You can complete from scanning to saving, etc. at one time by simply clicking the corresponding icon in the One-click Mode screen.




### Scan/Import Window

Use the Scan/Import window to scan photos and documents, or import images saved on memory cards.

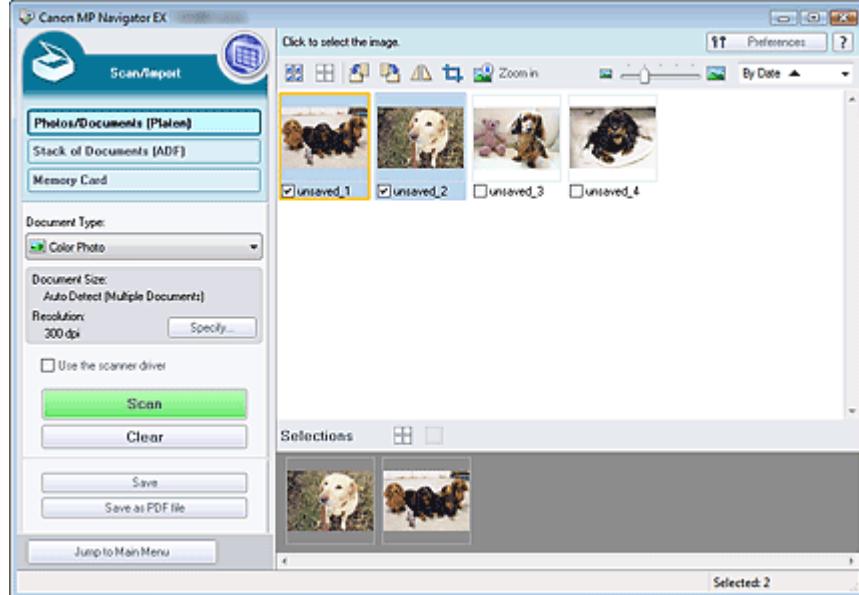

## View & Use Window

Use the View & Use window to select what you want to do with the scanned images.

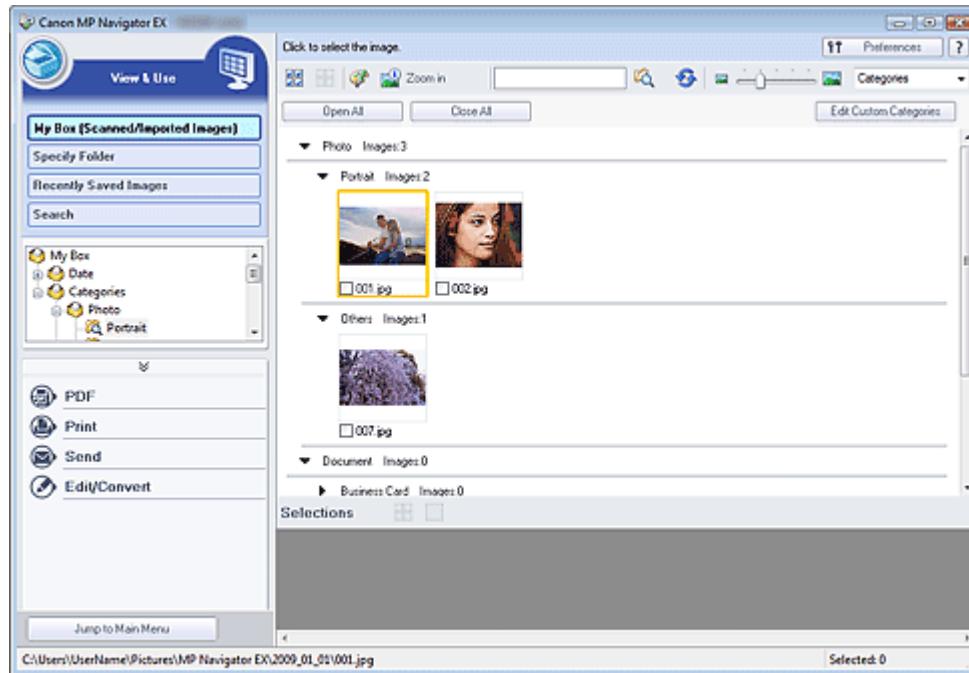

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Let's Try Scanning

**MP Navigator EX**

### Let's Try Scanning

Try scanning using MP Navigator EX.

- **Starting MP Navigator EX**  
▶ Starting MP Navigator EX
- **Scanning documents, photos, magazines, etc. from the Platen**  
▶ Scanning Photos and Documents
- **Scanning two or more photos (small documents) at one time**  
▶ Scanning Multiple Documents at One Time
- **Scanning multiple documents at one time from the ADF (Auto Document Feeder)**  
▶ Scanning Multiple Documents at One Time from the ADF (Auto Document Feeder)  
▶ Scanning Both Sides of Documents at One Time
- **Scanning images larger than the Platen**  
▶ Scanning Images Larger than the Platen (Stitch Assist)
- **Scanning easily according to purpose (scan and save, attach to e-mail, etc.)**  
▶ Easy Scanning with One-click

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Let's Try Scanning > Starting MP Navigator EX

### MP Navigator EX

## Starting MP Navigator EX


### Note

- To scan via a network connection, start MP Navigator EX and set up the network environment before scanning.  
▶ [Network Scan Settings](#)

## Starting MP Navigator EX

- Double-click  Canon MP Navigator EX 2.1 icon on the desktop.

MP Navigator EX starts.

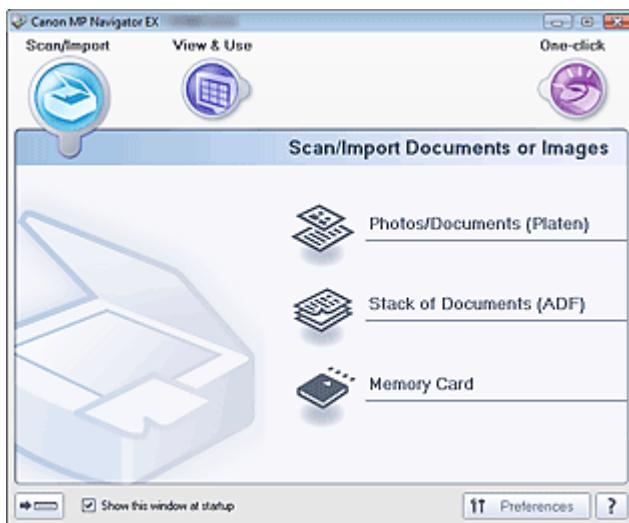

### Note

- Alternatively, from the Start menu, select (All) Programs > Canon Utilities > MP Navigator EX 2.1 > MP Navigator EX 2.1.

## Starting One-click Mode

- Click  at the bottom left of the screen.



The One-click Mode screen appears.



### Note

- Select the Show this window at startup checkbox in the Navigation Mode screen to always open the Navigation Mode screen at startup. If this checkbox is not selected, the last used screen appears at startup.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Let's Try Scanning > Scanning Photos and Documents

### MP Navigator EX


## Scanning Photos and Documents

Scan photos and documents placed on the Platen.

**1. Start MP Navigator EX and open the Navigation Mode screen.**


▶ Starting MP Navigator EX

**2. Point to Scan/Import and click Photos/Documents (Platen).**

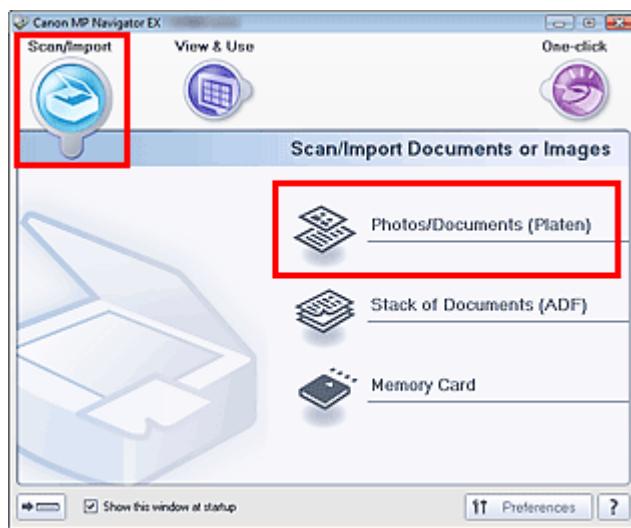

**3. Place the document on the Platen, then select Document Type.**

▶ Placing Documents

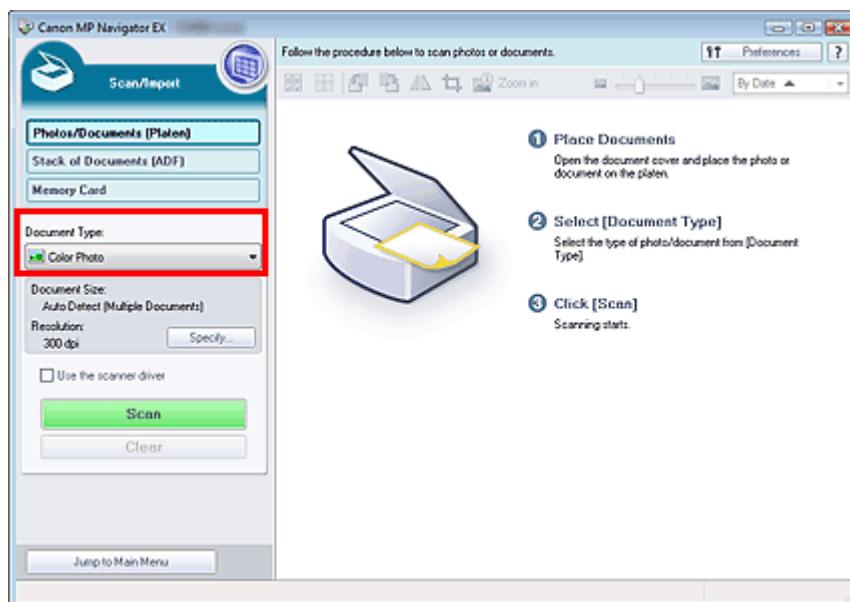

### Note

- When you select Magazine(Color), the Descreen function will be enabled and scanning takes longer than usual. To disable the Descreen function, deselect the Descreen checkbox in the Scan Settings dialog box.
- Select Text(OCR) to extract the text in the image and convert to editable text data using MP Navigator EX.

#### 4. Click Specify... to set the document size and scanning resolution as required.


When setting is completed, click OK.

▶ Scan Settings Dialog Box (Photos/Documents)

#### Important

- When scanning a large document (such as an A4 photo), align its corner with the corner at the arrow of the platen and specify the document size in the Scan Settings dialog box.


#### 5. Click Scan.

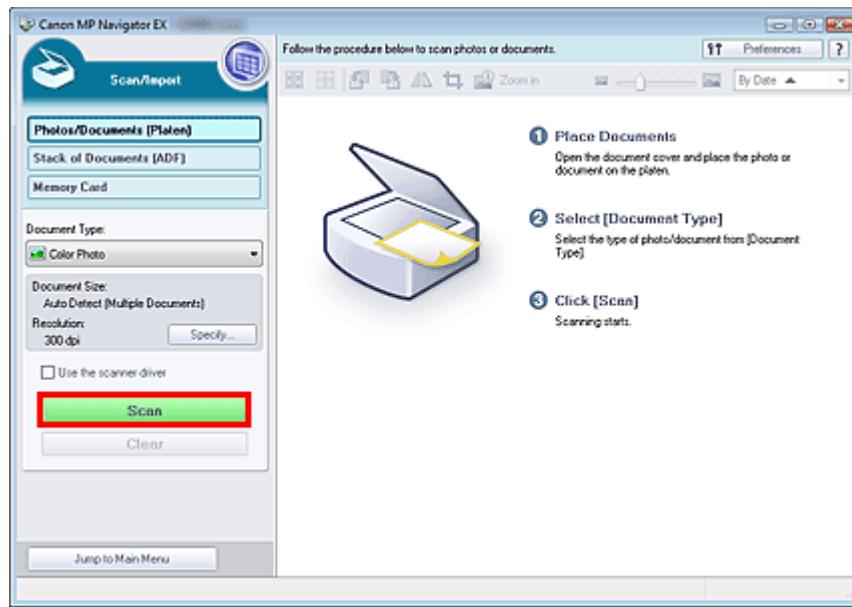

Scanning starts.

When scanning is completed, the Scan Complete dialog box opens. Select Scan or Exit. Select Scan to scan the next document, or select Exit to end.

The scanned images appear in the Thumbnail window.

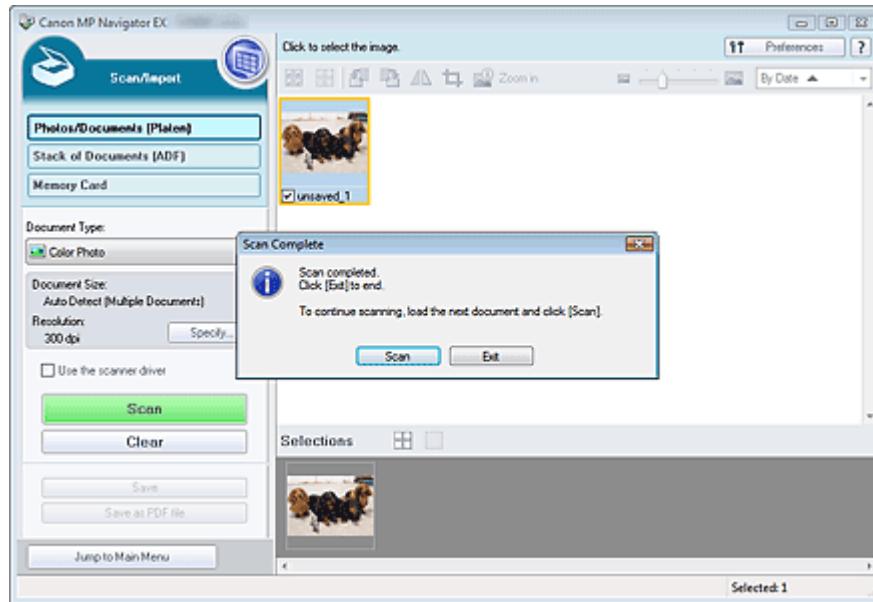

#### 6. Edit the scanned images as required.

Use Edit Tools to rotate images, select a part of an image, etc.

See the Edit Tools in "Photos/Documents (Platen) Screen (Scan/Import Window)" for details.

#### Note

- First select images to edit. (Selected images are outlined in orange.) Drag the mouse or use Shift + arrow keys to select multiple images.

**7.** Save the scanned images.

- ▶ Saving
- ▶ Saving as PDF Files

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Let's Try Scanning > Scanning Multiple Documents at One Time

### MP Navigator EX

## Scanning Multiple Documents at One Time

You can scan two or more photos (small documents) at one time by setting Document Size to Auto Detect (Multiple Documents) in the Scan Settings dialog box of MP Navigator EX.

### Important

- The following types of documents cannot be cropped correctly.
  - Documents smaller than 1.18 inches (3 cm) square
  - Photos that have been cut to various shapes
- The following types of documents may not be cropped correctly. In that case, start ScanGear (scanner driver), then adjust the cropping frame on the Advanced Mode tab and scan again.
  - Photos that have a whitish border
  - Documents printed on white paper, hand-written text, business cards, etc.
  - Thin documents
  - Thick documents

▶ Scanning in Advanced Mode


### 1. Place the document on the Platen.

▶ Placing Documents


### 2. Start MP Navigator EX and open the Navigation Mode screen.

▶ Starting MP Navigator EX

### 3. Point to Scan/Import and click Photos/Documents (Platen).

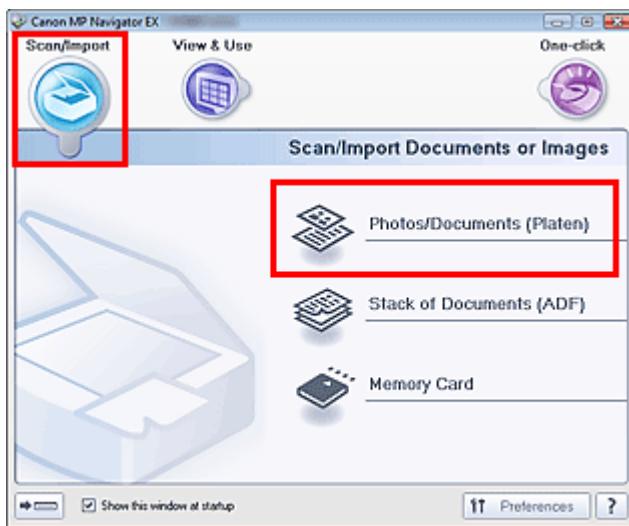

### 4. Select Document Type according to the document to be scanned.

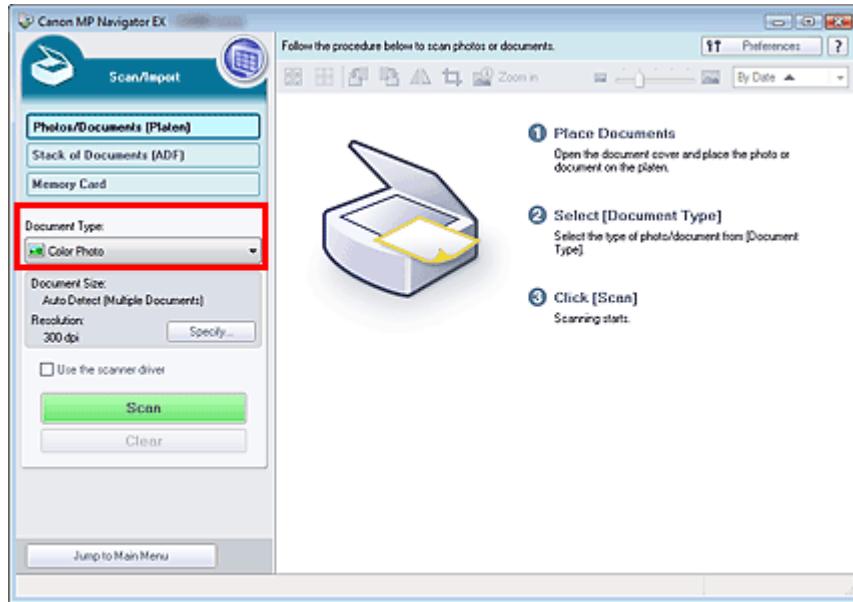


## 5. Click Specify....


Select Auto Detect (Multiple Documents) for Document Size.

When setting is completed, click OK.

▶ Scan Settings Dialog Box (Photos/Documents)

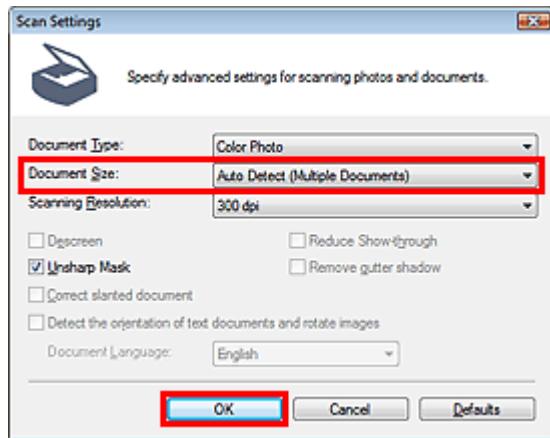


## 6. Return to the Scan/Import window and click Scan.

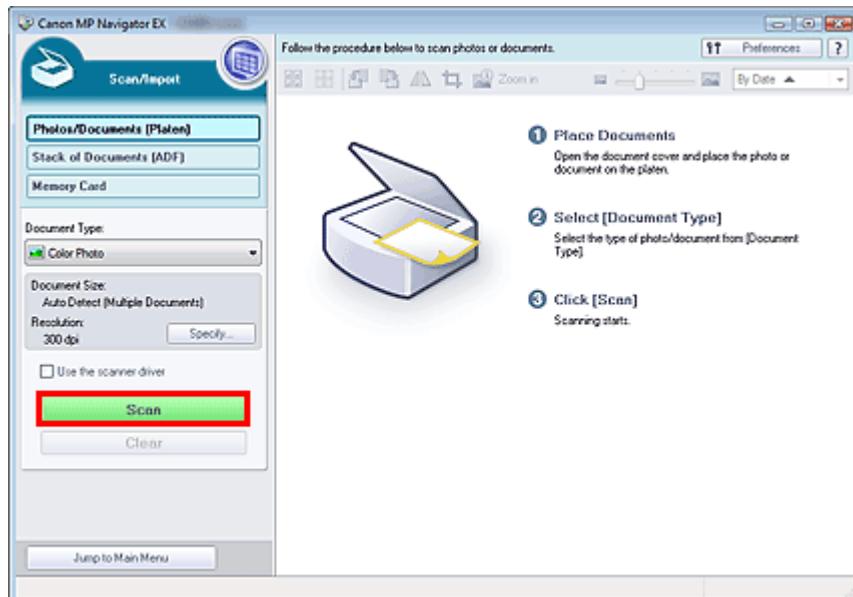

Multiple documents are scanned at one time.

When scanning is completed, the Scan Complete dialog box opens. Select Scan or Exit. Select Scan to scan the next document, or select Exit to end.

The scanned images appear in the Thumbnail window.

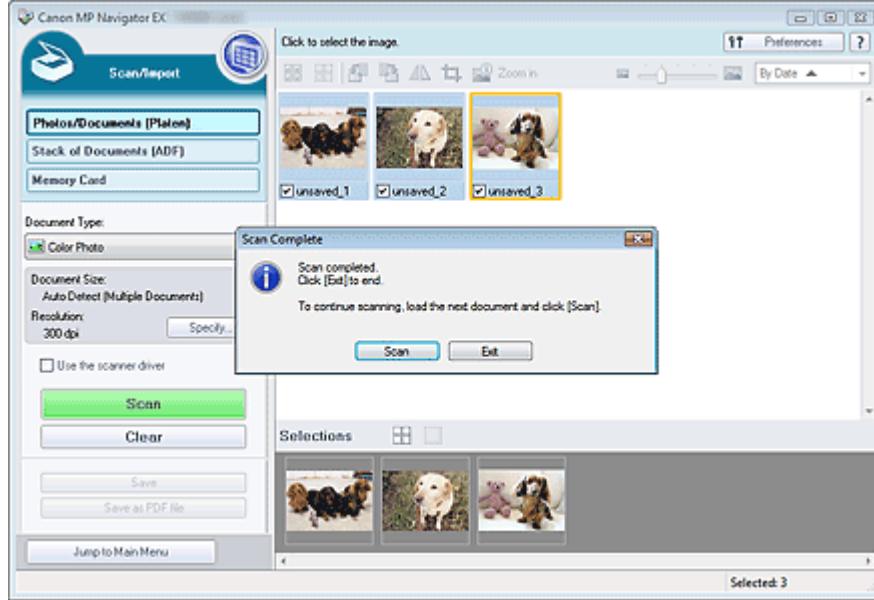

## 7. Edit the scanned images as required.

Use Edit Tools to rotate images, select a part of an image, etc.

See the Edit Tools in "Photos/Documents (Platen) Screen (Scan/Import Window)" for details.

### Note

- First select images to edit. (Selected images are outlined in orange.) Drag the mouse or use Shift + arrow keys to select multiple images.

## 8. Save the scanned images.

- ➔ Saving
- ➔ Saving as PDF Files

### Note

- If you want to preview the images before scanning, start ScanGear (scanner driver) and use the Advanced Mode tab.  
➔ Scanning Multiple Documents at One Time in Advanced Mode

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Let's Try Scanning > Scanning Multiple Documents at One Time from the ADF (Auto Document Feeder)

### MP Navigator EX

## Scanning Multiple Documents at One Time from the ADF (Auto Document Feeder)


Place multiple documents on the ADF (Auto Document Feeder) and scan at one time.

This section explains how to scan one side of the documents at a time. See " [Scanning Both Sides of Documents at One Time](#)" to scan both sides of the documents automatically.

### 1. Start MP Navigator EX and open the Navigation Mode screen.

▶ [Starting MP Navigator EX](#)

### 2. Point to Scan/Import and click Stack of Documents (ADF).

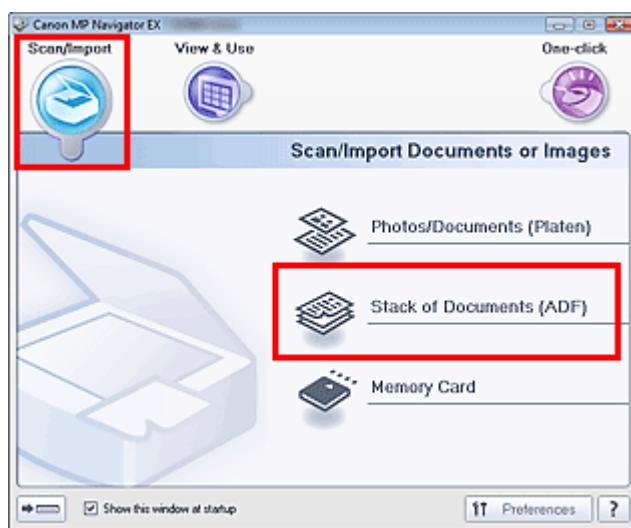


### 3. Place the documents on the ADF (Auto Document Feeder), then select Document Type.

▶ [Placing Documents \(ADF \(Auto Document Feeder\)\)](#)

To scan only the front side of each document, select a simplex type such as Color Document(Simplex).

To scan the front side then the back side of each document, select a duplex type such as Color Document(Duplex).

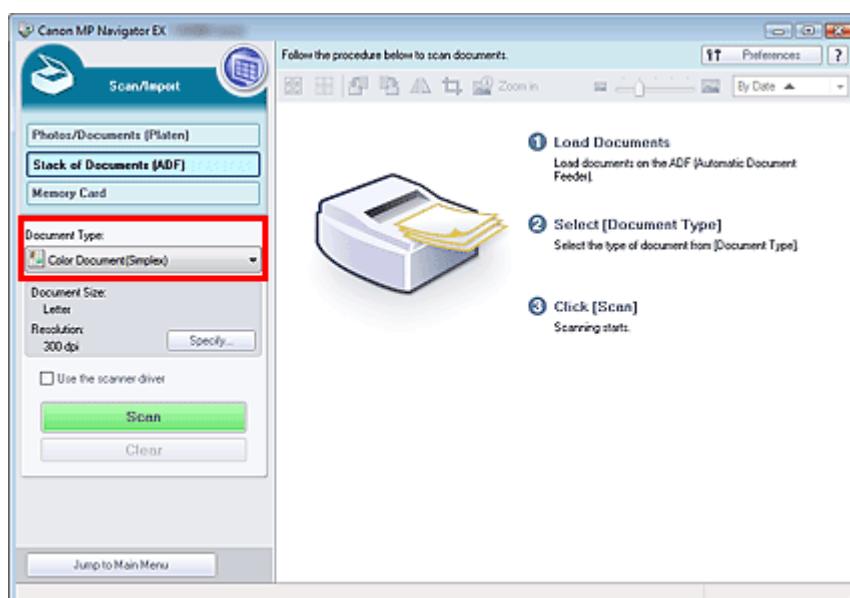


#### 4. Click Specify... to set the document size and scanning resolution as required.


Click Orientation... to specify the orientation of the documents to be scanned. In the displayed dialog box, you can specify the Original Orientation and Binding Location. How to place the documents when scanning the back sides depends on the Binding Location.

When setting is completed, click OK.

#### Scan Settings Dialog Box (Stack of Documents (ADF))

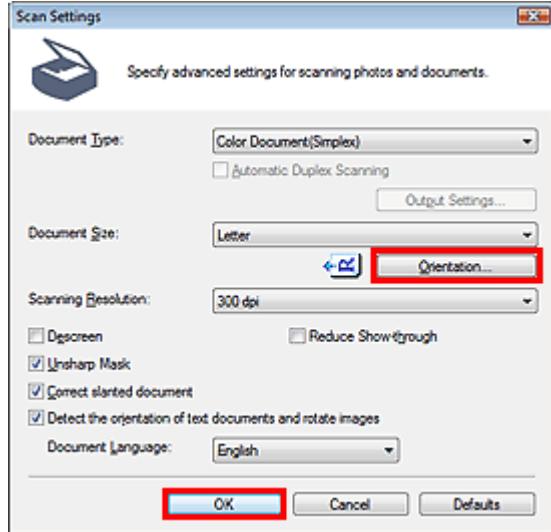

#### 5. Return to the Scan/Import window and click Scan.

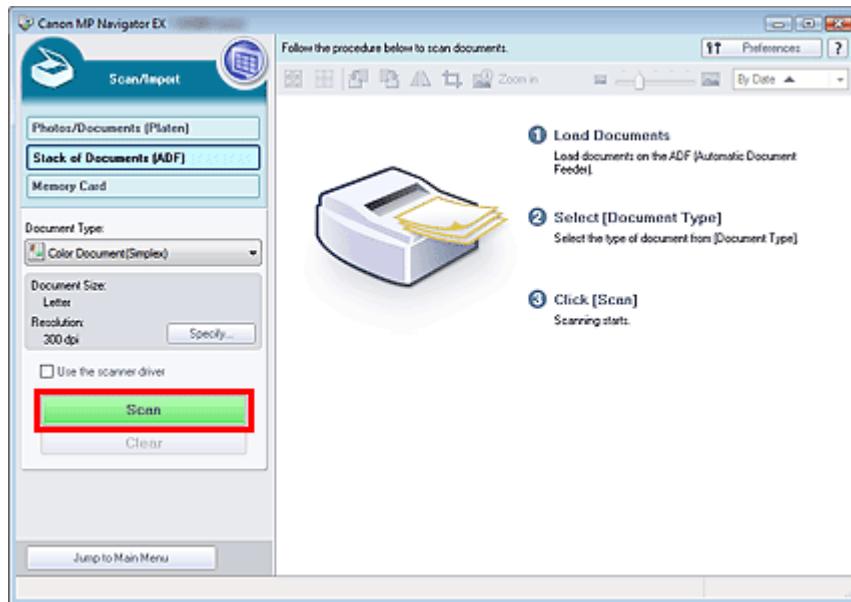

Scanning starts.

When a duplex type is selected for Document Type, the Manual Duplex Scanning dialog box opens after scanning. Continue to scan the back sides of the documents.

When a simplex type is selected for Document Type, the Scan Complete dialog box opens after scanning. Skip ahead to Step 8.


#### Note

- When the Automatic Duplex Scanning checkbox is selected in the Scan Settings dialog box, the Manual Duplex Scanning dialog box does not open. Both sides of the documents are scanned automatically. See "Scanning Both Sides of Documents at One Time" for details.

#### 6. Follow the on-screen instructions to place the documents.


#### When Short Edge is Selected for the Stapling Side in Orientation...

Place the documents without changing the orientation of the output documents.

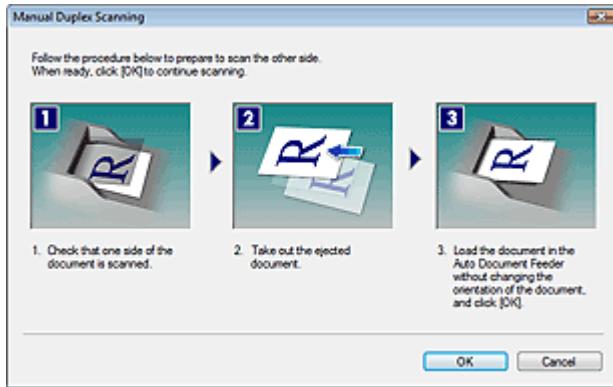

### When Long Edge is Selected for the Stapling Side in Orientation...

Place the documents after rotating the output documents 180 degrees.

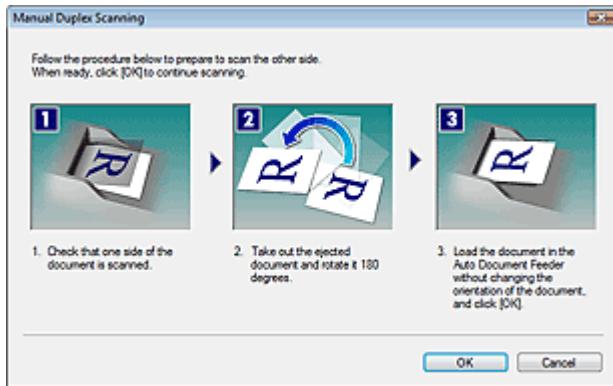


### 7. Click OK.

Scanning starts.

### 8. When scanning is completed, the Scan Complete dialog box opens. Select Scan or Exit.

Select Scan to scan the next document, or select Exit to end.

The scanned images appear in the Thumbnail window.

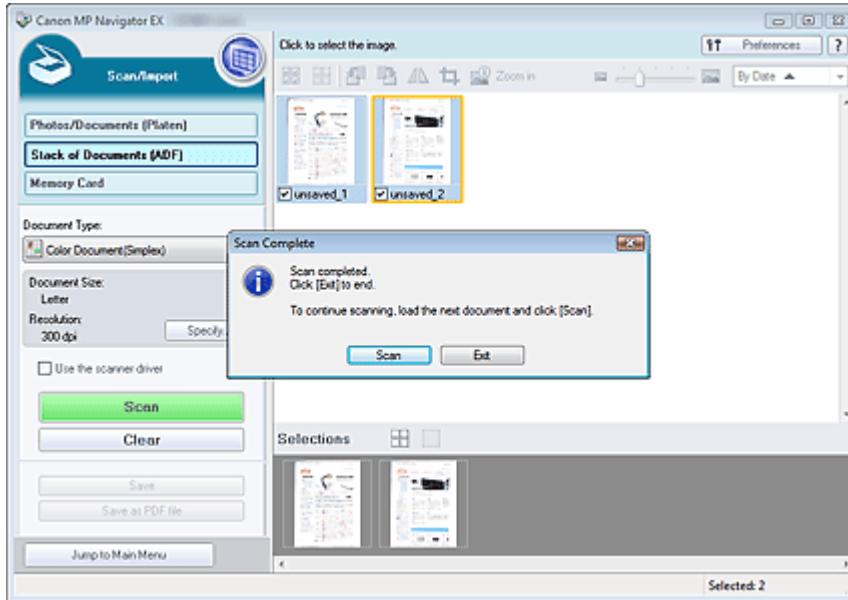

### 9. Edit the scanned images as required.

Use Edit Tools to rotate images, select a part of an image, etc.

See the Edit Tools in "Stack of Documents (ADF) Screen (Scan/Import Window)" for details.



**Note**

- First select images to edit. (Selected images are outlined in orange.) Drag the mouse or use Shift + arrow keys to select multiple images.
- 

**10. Save the scanned images.**

- ▶ Saving
- ▶ Saving as PDF Files

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Let's Try Scanning > Scanning Both Sides of Documents at One Time

### MP Navigator EX


## Scanning Both Sides of Documents at One Time

Scan both sides of documents at one time using the ADF (Auto Document Feeder).

1. Start MP Navigator EX and open the Navigation Mode screen.

▶ Starting MP Navigator EX


2. Point to Scan/Import and click Stack of Documents (ADF).

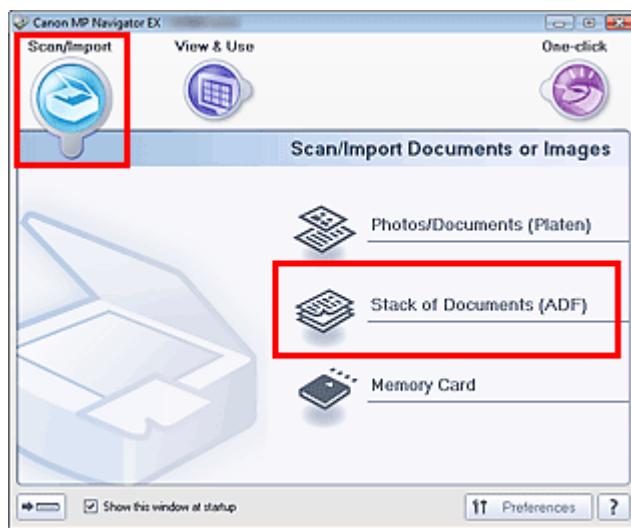

3. Place the documents on the ADF (Auto Document Feeder), then select Document Type.

▶ Placing Documents (ADF (Auto Document Feeder))

Select a duplex type such as Color Document(Duplex).

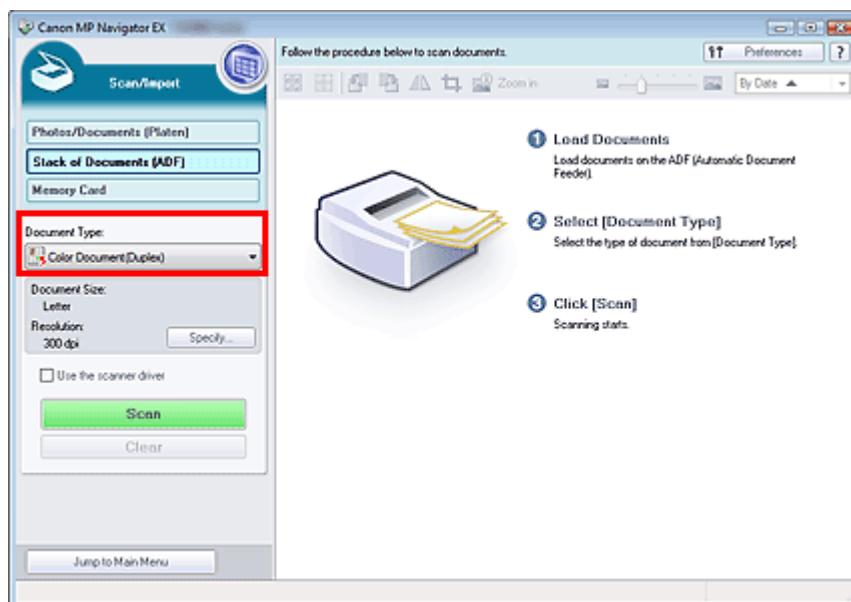


4. Click Specify....


Check that the Automatic Duplex Scanning checkbox is selected, then specify how to output the paper, the orientation of the documents, etc.

When setting is completed, click OK.

► Scan Settings Dialog Box (Stack of Documents (ADF))

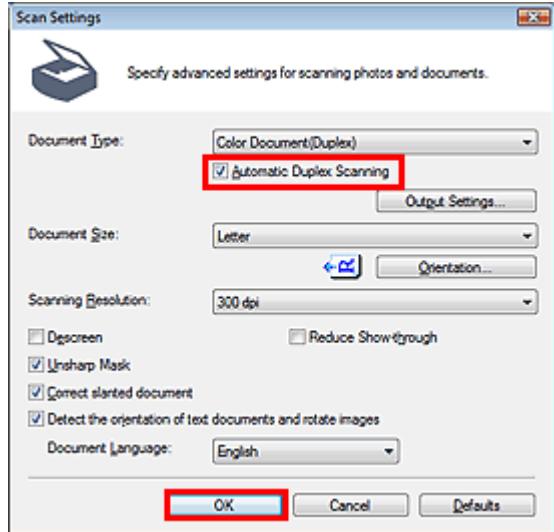


5. Return to the Scan/Import window and click Scan.

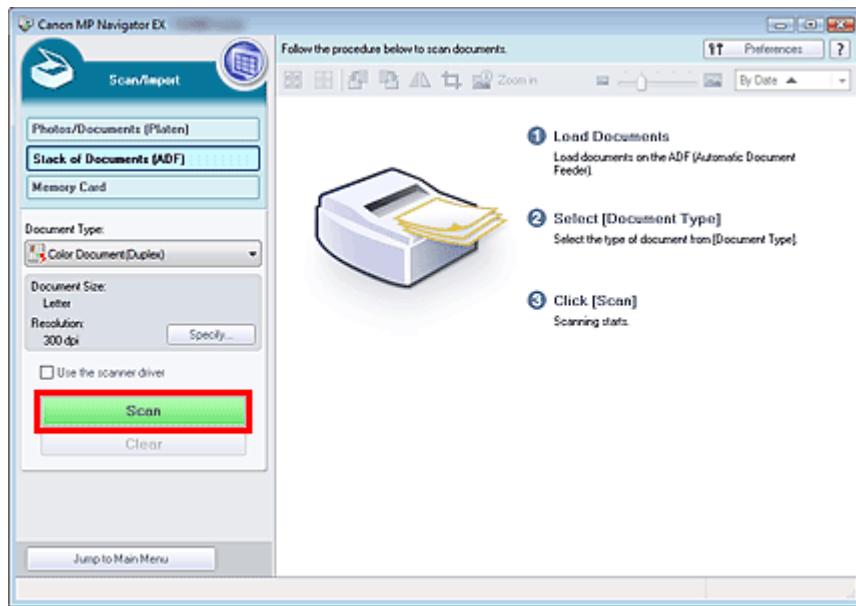

The back side of each document is scanned automatically after scanning the front side.

When scanning is completed, the Scan Complete dialog box opens. Select Scan or Exit. Select Scan to scan the next document, or select Exit to end.

The scanned images appear in the Thumbnail window.

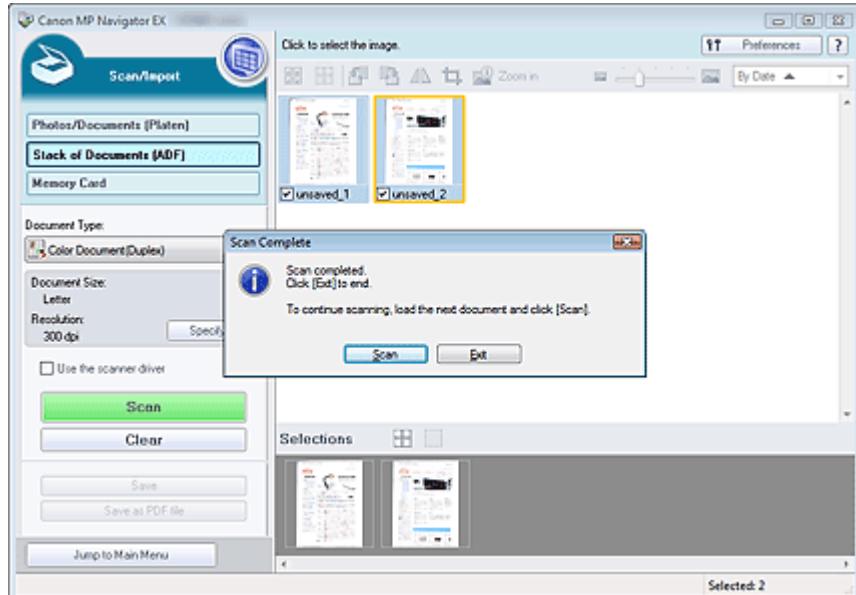

## 6. Edit the scanned images as required.

Use Edit Tools to rotate images, select a part of an image, etc.

See the Edit Tools in "Stack of Documents (ADF) Screen (Scan/Import Window)" for details.

### Note

- First select images to edit. (Selected images are outlined in orange.) Drag the mouse or use Shift + arrow keys to select multiple images.

## 7. Save the scanned images.

▶ [Saving](#)

▶ [Saving as PDF Files](#)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Let's Try Scanning > Scanning Images Larger than the Platen (Stitch Assist)

### MP Navigator EX

## Scanning Images Larger than the Platen (Stitch Assist)

Stitch Assist allows you to scan the left and right halves of a large document separately and combine the scanned images back into one image. You can scan documents that are up to twice as large as the Platen.


### 1. Start MP Navigator EX and open the Navigation Mode screen.

▶ Starting MP Navigator EX


#### Note

- You can complete from scanning to saving, etc. at one time by simply clicking the corresponding icon in the One-click Mode screen. Stitch Assist is available from the One-click Mode screen as well, by changing the document size. Click the corresponding icon and select Stitch Assist for Document Size. Then skip ahead to Step 5.

### 2. Point to Scan/Import and click Photos/Documents (Platen).

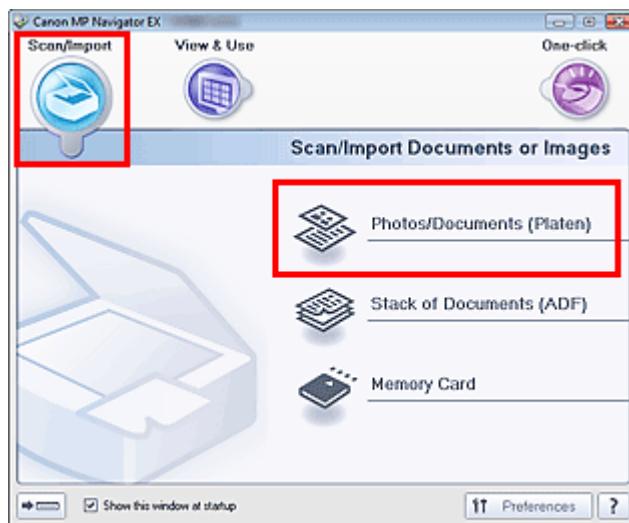

### 3. Select Document Type according to the document to be scanned.

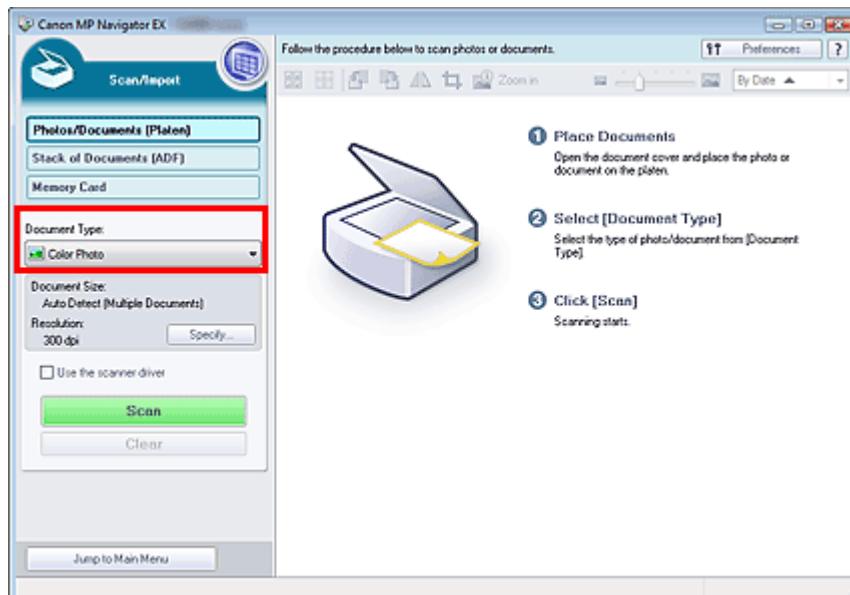


#### 4. Click Specify....


Select Stitch Assist for Document Size, then specify the scanning resolution as required.

When setting is completed, click OK.


► Scan Settings Dialog Box (Photos/Documents)

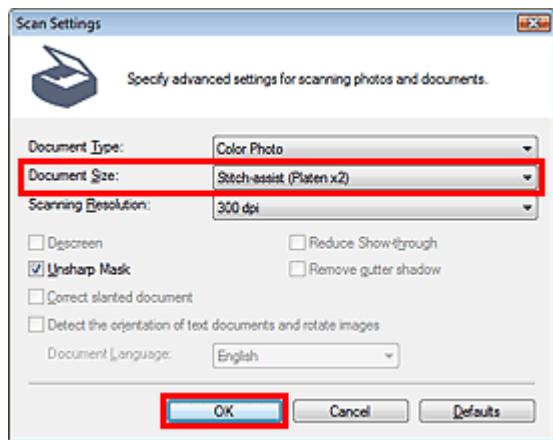

#### 5. Return to the Scan/Import window and click Scan.

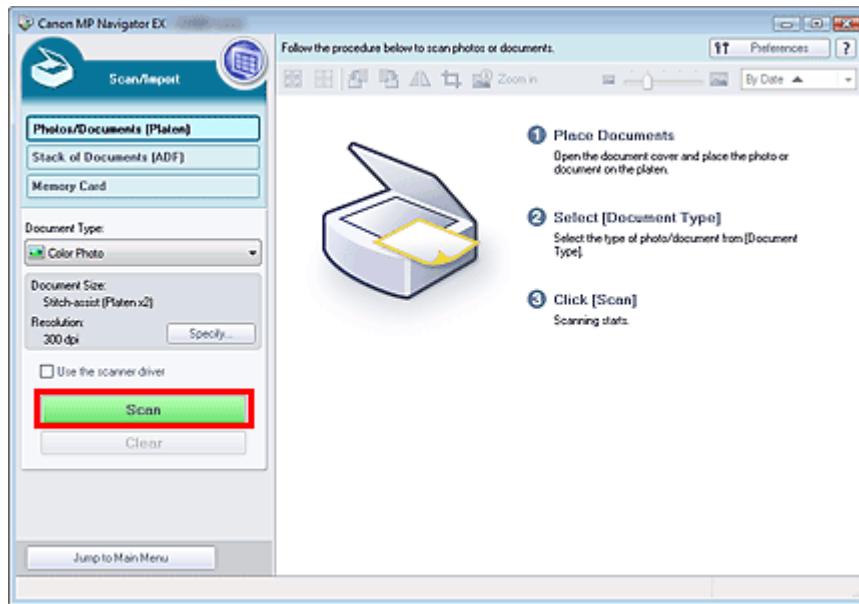


The Stitch-assist window opens.

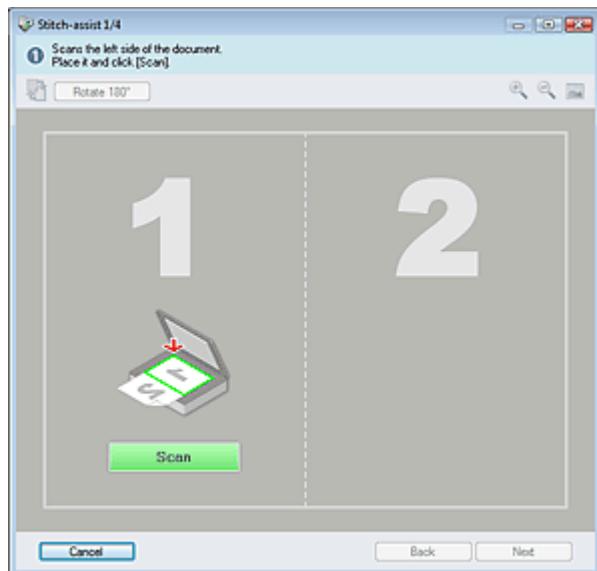

#### 6. Place the left half of the document face-down on the Platen.

**7. Click Scan.**


The left half of the document is scanned and appears in the Stitch-assist window.

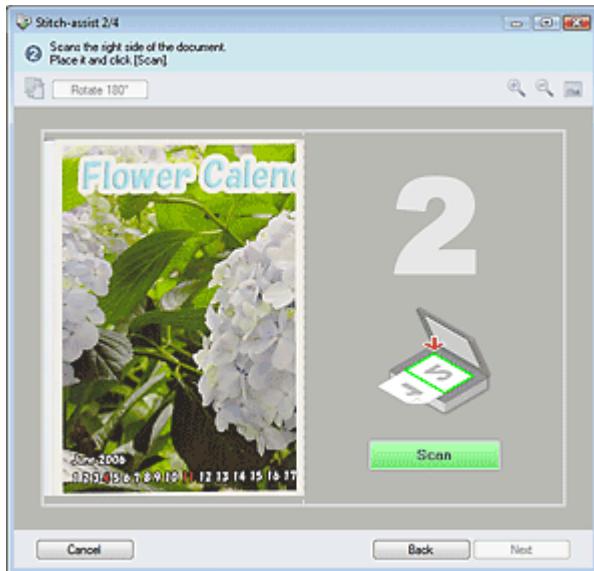**8. Place the right half of the document face-down on the Platen.****9. Click Scan.**

The right half of the document is scanned.

**10. Adjust the scanned image as required.**

Use the icons to swap the left and right halves, rotate the image 180 degrees or enlarge/reduce the image.

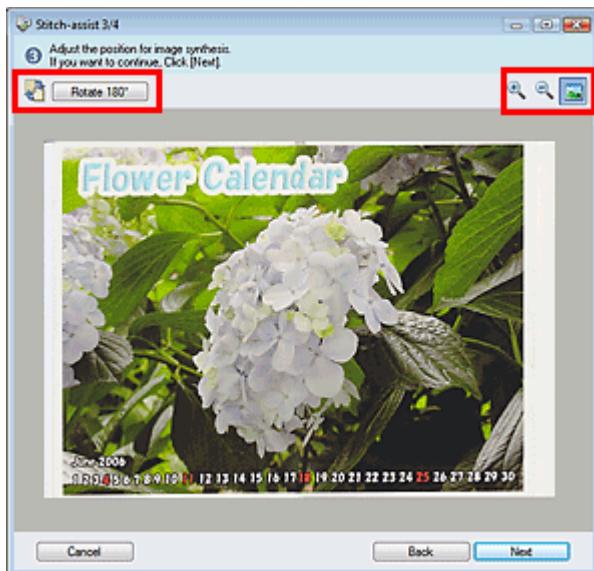

- **(Swap Left & Right)**

Swaps the left and right halves.

**Important**

- This function is not available while the image is enlarged/reduced.

- **Rotate 180°**

Rotates right half of the image 180 degrees.

**Important**

- This function is not available while the image is enlarged/reduced.

**(Enlarge)**

Enlarges the displayed image.

**(Reduce)**

Reduces the displayed image.

**(Full-screen)**


Enlarges/reduces the image to display it full-screen.

**Note**

- Enlarge/Reduce does not affect the actual size of the scanned image.
- When the document is scanned upside down, the image displayed in the Stitch-assist window will also be upside down. Click Rotate 180° to rotate the image to the correct orientation.
- You can drag the right half of the image from right to left or up and down to adjust the position.
- If the left and right halves do not match due to a slanted document, place the document correctly and click Back, then scan again.


**11.** Click Next.

**12.** Drag the mouse to specify the area to be saved, then click OK.

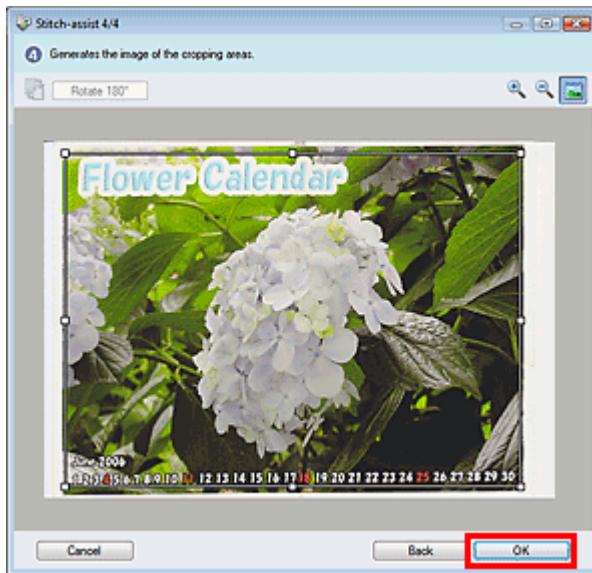

The combined image appears in the Thumbnail window.

When scanning is completed, the Scan Complete dialog box opens. Select Scan or Exit. Select Scan to scan the next document, or select Exit to end.

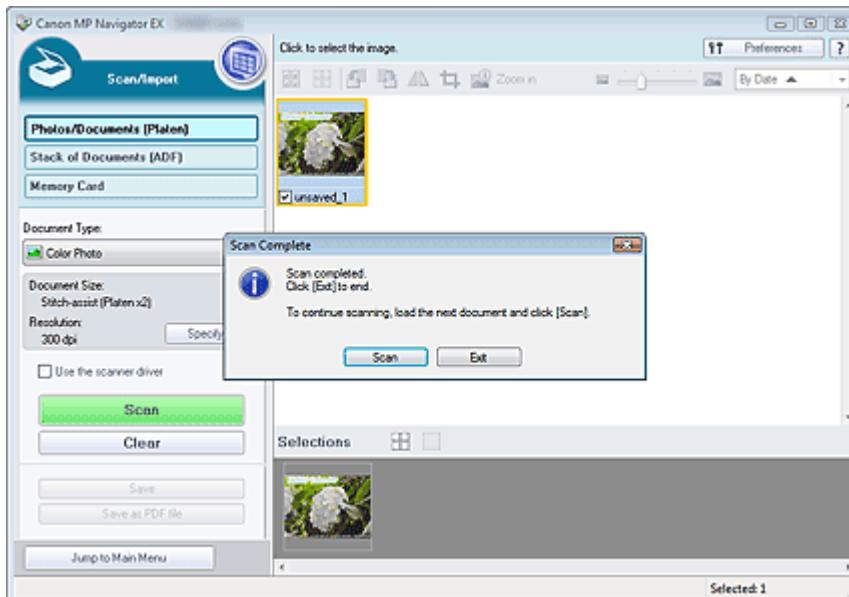

**13.** Save the scanned images.

- ▶ Saving
- ▶ Saving as PDF Files

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Let's Try Scanning > Easy Scanning with One-click

### MP Navigator EX

## Easy Scanning with One-click

You can complete from scanning to saving, etc. at one time by simply clicking the corresponding icon.

### 1. Place the document on the Platen.

▶ [Placing Documents](#)

### 2. Start MP Navigator EX.


▶ [Starting MP Navigator EX](#)

The MP Navigator EX Navigation Mode screen or One-click Mode screen appears.

Navigation Mode Screen




One-click Mode Screen

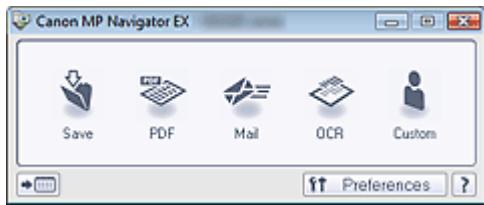

#### Note

- Skip ahead to Step 4 if One-click Mode screen is open.

### 3. Point to One-click.

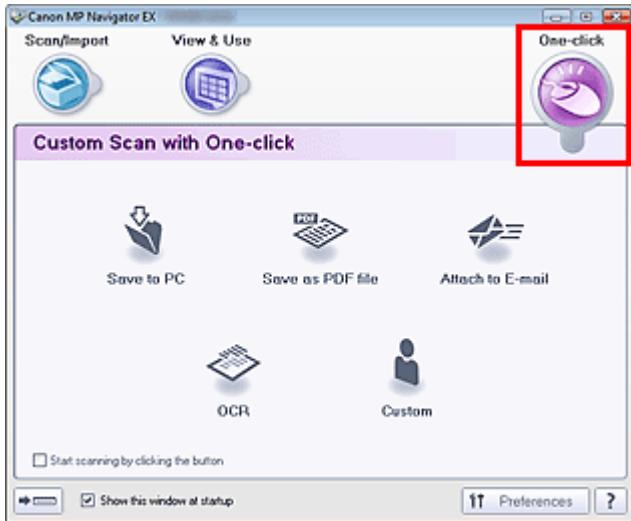

**4.** Click the corresponding icon.

- ▶ Custom Scan with One-click Tab
- ▶ One-click Mode Screen

**5.** Select Document Type according to the document to be scanned.

**6.** Set the document size and scanning resolution as required.

**7.** Start scanning.

Scanning starts.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Useful MP Navigator EX Functions

### MP Navigator EX

## Useful MP Navigator EX Functions

With MP Navigator EX, you can correct/enhance scanned images beautifully, and search saved images quickly.

- **Correcting/enhancing images automatically**  
▶ Correcting/Enhancing Images Automatically
- **Correcting/enhancing images manually**  
▶ Correcting/Enhancing Images Manually
- **Adjusting color characteristics such as brightness and contrast**  
▶ Adjusting Images
- **Searching for lost images**  
▶ Searching Images
- **Classifying and sorting images**  
▶ Classifying Images into Categories

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Useful MP Navigator EX Functions > Correcting/Enhancing Images Automatically

### MP Navigator EX

## Correcting/Enhancing Images Automatically


MP Navigator EX will analyze and correct/enhance scanned images automatically.

1. Scan documents into MP Navigator EX and save them, then open the View & Use window from the Navigation Mode screen and select the photos you want to correct/enhance.

#### Note

- See "Let's Try Scanning" to scan images into MP Navigator EX.
- You can also select images saved on a memory card or computer.
  - ▶ Importing Images Saved on a Memory Card
  - ▶ Opening Images Saved on a Computer

2. Click Edit/Convert, then click Fix photo images on the list.

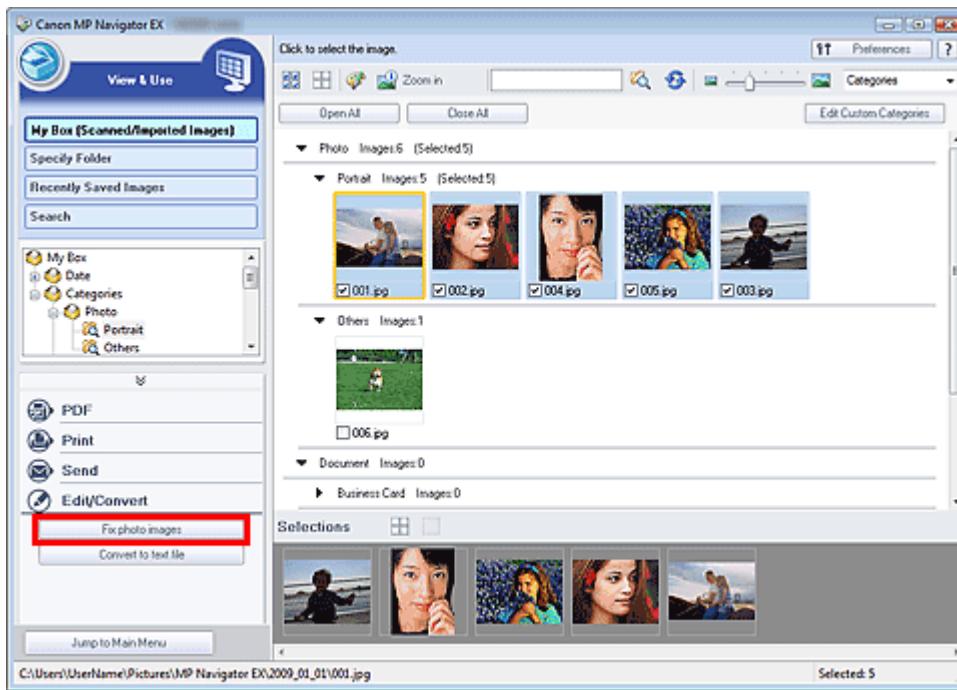

The Correct/Enhance Images window opens.

#### Note

- The Correct/Enhance Images window can also be opened by clicking  (Image Correction/Enhancement) on the Toolbar or in the Zoom in dialog box. In that case, only the target image (outlined in orange) can be corrected/enhanced.

3. Select the image you want to correct/enhance from the thumbnail list.


The selected image appears in Preview.



### Note

- If you selected only one image in the View & Use window, the thumbnail list does not appear and only the preview image appears.

- Make sure that Auto is selected.
- Click Auto Photo Fix, Face Sharpener or Digital Face Smoothing.

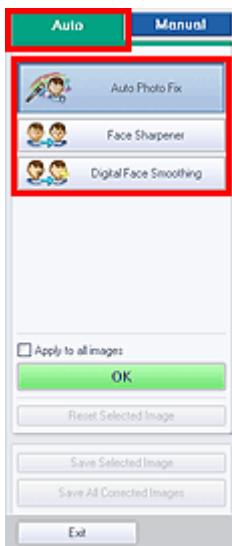

#### • Auto Photo Fix

Analyzes the image and makes suitable corrections automatically.

#### • Face Sharpener

Sharpens out-of-focus faces.

#### • Digital Face Smoothing

Enhances skin beautifully by removing blemishes and wrinkles.

### Important

- Once image is corrected with Auto Photo Fix and saved, it cannot be corrected again with Auto Photo Fix. Auto Photo Fix may not be available for images edited using an application, digital camera, etc. manufactured by other companies.

### Note

- The Face Sharpener and Digital Face Smoothing effect levels can be changed using the slider that appears by clicking the corresponding buttons.

- Click OK.

The entire image is corrected/enhanced automatically and  (Correct/Enhance) appears on the upper left of the thumbnail and preview image.

### Note

- Click Reset Selected Image to undo the correction/enhancement.
- Select the Apply to all images checkbox to correct/enhance all selected images.

## 7. Click Save Selected Image or Save All Corrected Images.

You can save corrected/enhanced images as new files.

### Note

- To save only the images you like, select them and click Save Selected Image. To save all images, click Save All Corrected Images.
- The file format of corrected/enhanced images is JPEG/Exif.
- Adobe RGB images are saved as sRGB images.

## 8. Click Exit.

### Note

- The corrections/enhancements will be lost if you exit before saving corrected/enhanced images.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Useful MP Navigator EX Functions > Correcting/Enhancing Images Manually

### MP Navigator EX

## Correcting/Enhancing Images Manually


You can correct/enhance scanned images manually.

1. Scan documents into MP Navigator EX and save them, then open the View & Use window from the Navigation Mode screen and select the photos you want to correct/enhance.

### Note

- See "Let's Try Scanning" to scan images into MP Navigator EX.
- You can also select images saved on a memory card or computer.
  - ▶ Importing Images Saved on a Memory Card
  - ▶ Opening Images Saved on a Computer

2. Click Edit/Convert, then click Fix photo images on the list.

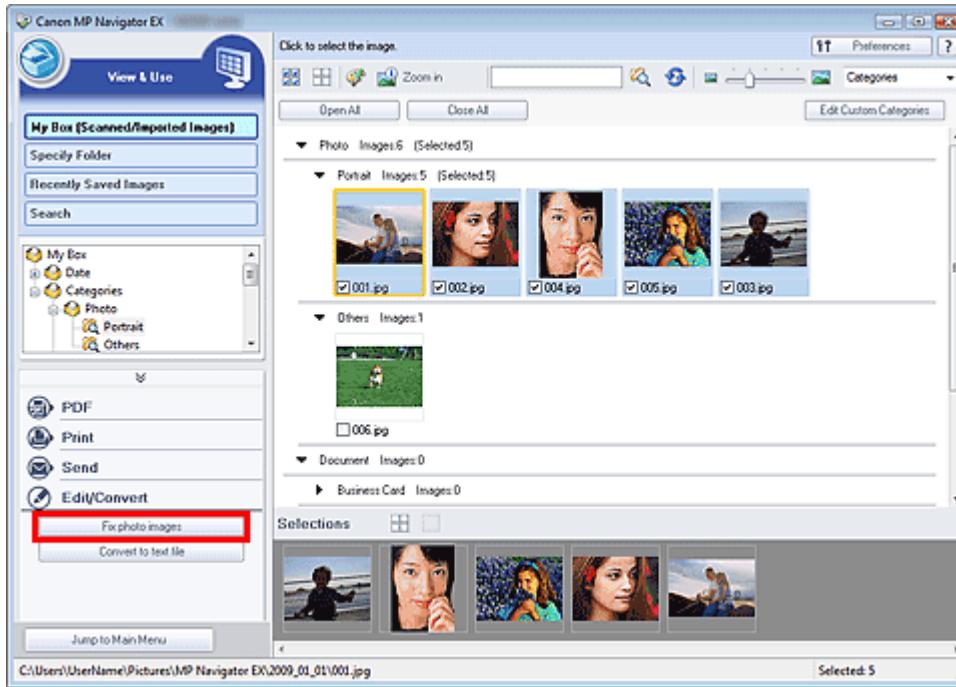

The Correct/Enhance Images window opens.

### Note

- The Correct/Enhance Images window can also be opened by clicking  (Image Correction/Enhancement) on the Toolbar or in the Zoom in dialog box. In that case, only the target image (outlined in orange) can be corrected/enhanced.

3. Select the image you want to correct/enhance from the thumbnail list.


The selected image appears in Preview.



### Note

- If you selected only one image in the View & Use window, the thumbnail list does not appear and only the preview image appears.

- Click Manual, then click Correct/Enhance.
- Click Face Brightener, Face Sharpener, Digital Face Smoothing or Blemish Remover.

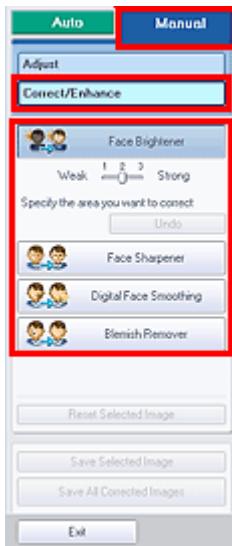

- Face Brightener**

Brightens dark faces in backlit photos.

- Face Sharpener**

Sharpens out-of-focus faces.

- Digital Face Smoothing**

Enhances skin beautifully by removing blemishes and wrinkles.


- Blemish Remover**

Removes moles.

### Note

- Move the cursor over the image. The shape of the cursor changes to + (Cross).

- Drag to select the area you want to correct/enhance, then click OK that appears over the image.

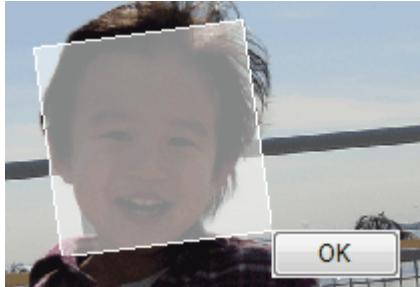

The portion in and around the selected area is corrected/enhanced and  (Correct/Enhance) appears on the upper left of the thumbnail.

#### Note

- For Face Brightener, Face Sharpener and Digital Face Smoothing, you can drag to rotate the rectangle.
- Click Undo to undo the latest correction/enhancement.
- The Face Brightener, Face Sharpener and Digital Face Smoothing effect levels can be changed using the slider that appears by clicking the corresponding buttons.
- Click Reset Selected Image to undo the correction/enhancement.

### 7. Click Save Selected Image or Save All Corrected Images.

You can save corrected/enhanced images as new files.

#### Note

- To save only the images you like, select them and click Save Selected Image. To save all images, click Save All Corrected Images.
- The file format of corrected/enhanced images is JPEG/Exif.

### 8. Click Exit.

#### Note

- The corrections/enhancements will be lost if you exit before saving corrected/enhanced images.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Useful MP Navigator EX Functions > Adjusting Images

### MP Navigator EX

## Adjusting Images


You can make fine adjustments to the overall brightness, contrast, etc. of images.

1. Scan documents into MP Navigator EX and save them, then open the View & Use window from the Navigation Mode screen and select the photos you want to adjust.

#### Note

- See "Let's Try Scanning" to scan images into MP Navigator EX.
- You can also select images saved on a memory card or computer.
  - ▶ Importing Images Saved on a Memory Card
  - ▶ Opening Images Saved on a Computer

2. Click Edit/Convert, then click Fix photo images on the list.

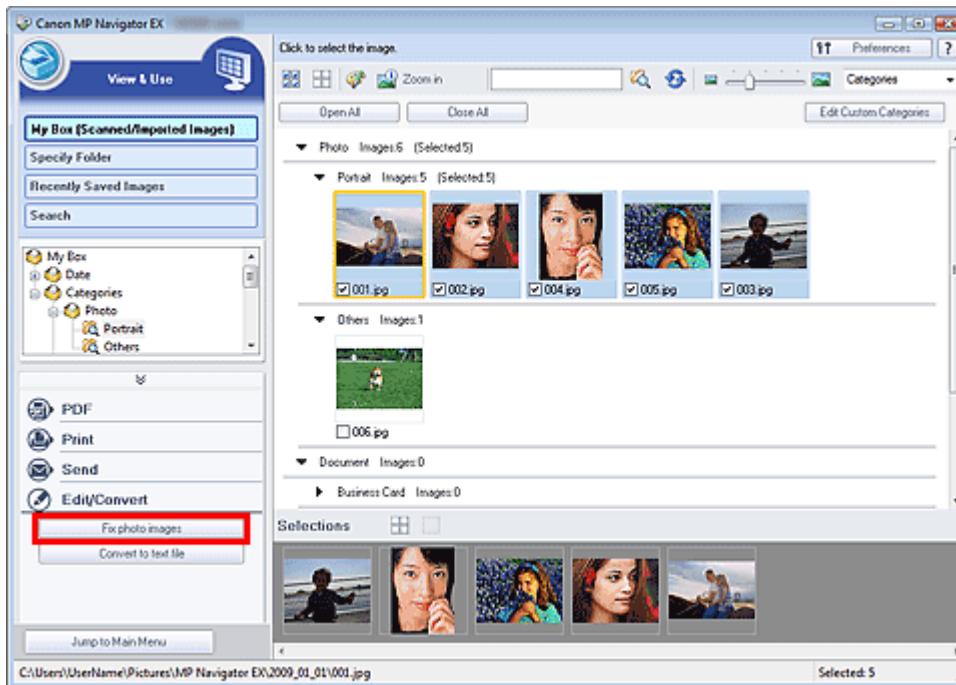

The Correct/Enhance Images window opens.

#### Note

- The Correct/Enhance Images window can also be opened by clicking  (Image Correction/Enhancement) on the Toolbar or in the Zoom in dialog box. In that case, only the target image (outlined in orange) can be corrected/enhanced.

3. Select the image you want to adjust from the thumbnail list.


The selected image appears in Preview.




### Note

- If you selected only one image in the View & Use window, the thumbnail list does not appear and only the preview image appears.

#### 4. Click Manual, then click Adjust.

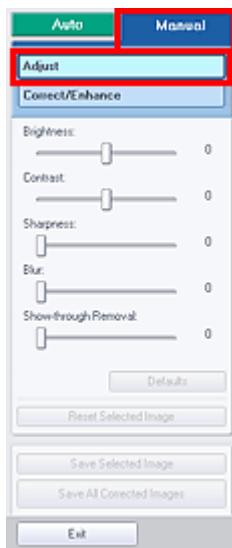

#### 5. Move the slider of the item you want to adjust and set the effect level.

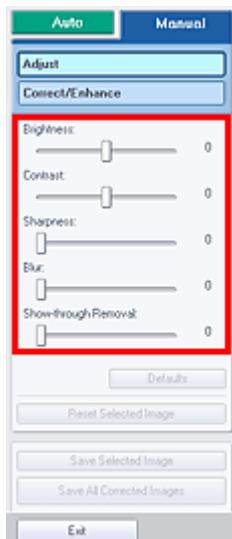

- Brightness**

Adjusts the overall image brightness. Adjust the brightness when the image is too dark or too bright.

Move the slider to the left to darken and right to brighten the image.

- **Contrast**

Adjusts the contrast of the image. Adjust the contrast when the image is flat due to lack of contrast.

Move the slider to the left to decrease and right to increase the contrast of the image.

- **Sharpness**

Emphasizes the outline of the subjects to sharpen the image. Adjust the sharpness when the photo is out of focus or text is blurred.

Move the slider to the right to sharpen the image.

- **Blur**

Blurs the outline of the subjects to soften the image.

Move the slider to the right to soften the image.

- **Show-through Removal**

Removes show-through of text from the reverse side or removes the base color. Adjust the show-through level to prevent text on the reverse side of thin document or the base color of the document from appearing on the image.

Move the slider to the right to increase the show-through removal effect.

---

 **Note**

- Click Defaults to reset all adjustments.
- 

**6. Click Save Selected Image or Save All Corrected Images.**

You can save adjusted images as new files.

---

 **Note**

- To save only the images you like, select them and click Save Selected Image. To save all images, click Save All Corrected Images.
  - The file format of adjusted images is JPEG/Exif.
- 

**7. Click Exit.**

---

 **Note**

- The adjustments will be lost if you exit before saving adjusted images.
-

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Useful MP Navigator EX Functions > Searching Images


### MP Navigator EX

## Searching Images

In the View & Use window of the Navigation Mode screen, you can search images saved on your computer and open them in MP Navigator EX. Opened images can be printed, edited, etc.

### Note

- Search images in My Box (Scanned/Imported Images), Recently Saved Images or a selected folder and its subfolders. You can also specify folder and search in Specify Folder.
- See "Starting MP Navigator EX" to start MP Navigator EX.

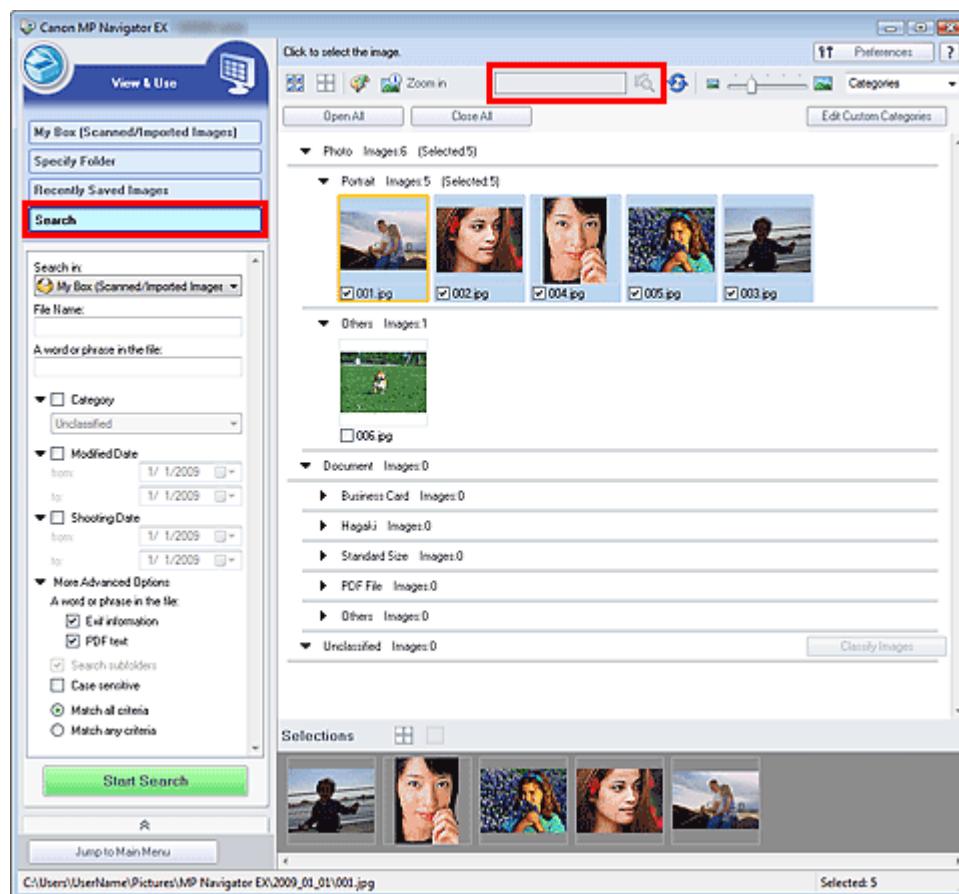


### Quick Search

In  (Text box) on the Toolbar, enter a word or phrase included in the file name, Exif information or PDF text of the image you want to search for, then click  (Search button). For Exif information, text in Maker, Model, Description and User Comment is searched.

### Advanced Search

Click Search on the left of the screen to open search options. Enter information of the image you want to search for, then click Start Search.

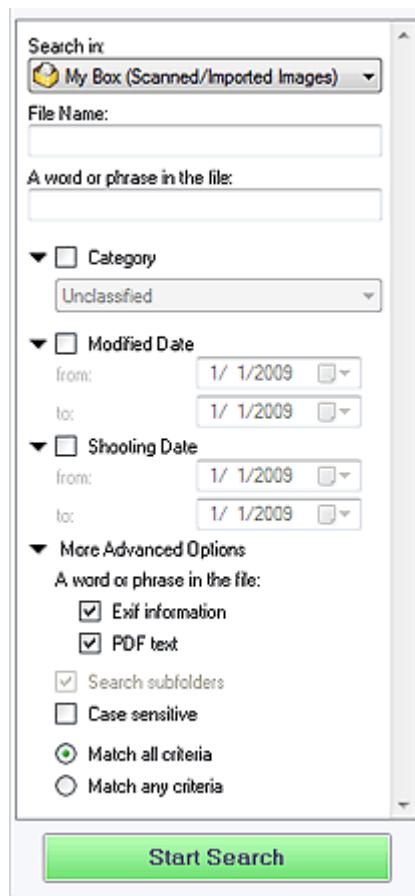

- **Search in**

If you know where to look for, select the drive, folder or network from Specify Folder.

- **File Name**

If you know the file name, enter it.

- **A word or phrase in the file**

Enter a word or phrase included in the items selected in More Advanced Options.

### **Important**

- For PDF files, you can only search for those created with MP Navigator EX. You cannot search PDF files created or edited in other applications. Also, searching PDF files is available only when keyword search is set.  
For details of creating PDF files that enables keyword search, see "[PDF Settings Dialog Box](#)."
- Password-protected PDF files cannot be searched.

- **Category**

You can search for images by category.

- **Modified Date**

To search for images that have been updated in a specific time period, enter the first and last dates of the period.

- **Shooting Date**

To search for images captured in a specific time period, enter the first and last dates of the period.

### **Note**

- Captured date is the date and time of data creation, which are included in the document's Exif information.

- **More Advanced Options**

- **A word or phrase in the file**

In A word or phrase in the file, select the items to search. If you select the Exif information checkbox, text in Maker, Model, Description and User Comment is searched. If you select the PDF text checkbox, text in PDF files is searched.

### **Important**

■ Text in password-protected PDF files cannot be searched.

- **Search subfolders**

Select this checkbox to search subfolders.

- **Case sensitive**

Select this checkbox to match case.

- **Match all criteria**

Searches for files that meet all the specified criteria.

- **Match any criteria**

Searches for files that meet any of the specified criteria.

- **Start Search**

Starts search.

### Related Topic

▶ [View & Use Window](#)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Useful MP Navigator EX Functions > Classifying Images into Categories

### MP Navigator EX

## Classifying Images into Categories

Display images scanned with MP Navigator EX by category. You can classify unclassified images automatically, and also create custom categories. You can drag and drop an image to move it from one category to another.

### Note

- Classification information on MP Navigator EX 2.0 is transferred to MP Navigator EX 2.1 upon initial startup. After the initial startup, the classification information on MP Navigator EX 2.0 cannot be transferred.


- Scan documents into MP Navigator EX and save them, then open the View & Use window from the Navigation Mode screen.

### Note

- See "Let's Try Scanning" to scan images into MP Navigator EX.
- You can also select images saved on a memory card or computer.
  - Importing Images Saved on a Memory Card
  - Opening Images Saved on a Computer

- In **Categories** ▾ (Sort by), select Categories.

Images are automatically sorted by category and appear in the Thumbnail window.

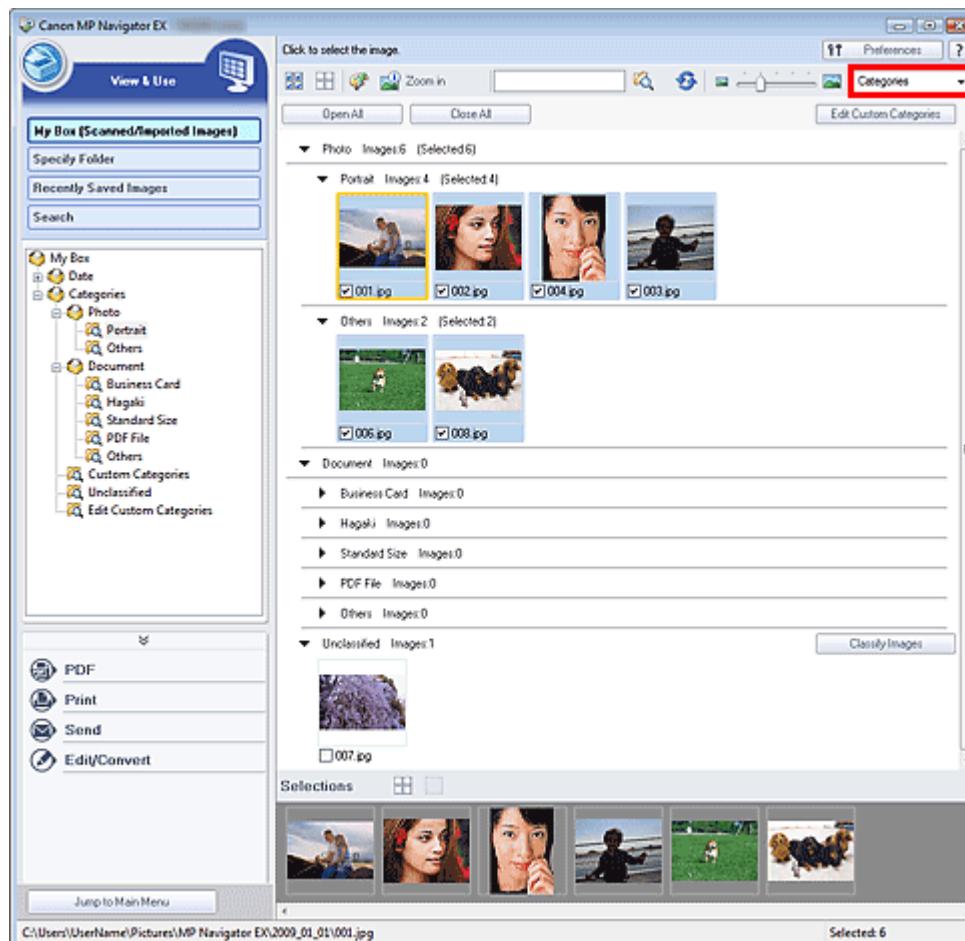

Images are sorted into the following categories.

Photos: Portrait, Others

Documents: Business Card, Hagaki, Standard Size, PDF File, Others

Custom categories: Displays your custom categories.

To create custom categories, see "[Creating Custom Categories](#)."

Unclassified: Displays images that have not yet been classified.

### Note

- Click Classify Images to classify images displayed in Unclassified automatically. Click Cancel to stop.
- Classification may take time if there are many images to classify.

### Important

- Even if you classify images saved in removable media such as USB flash drive and external hard disk, the classification information will be deleted once you remove the media. From the next time, the images are classified to Unclassified.
- Images cannot be classified when Recently Saved Images is selected in the View & Use window.


### Note

- Some images may not be detected correctly and thus may be classified into wrong categories. In that case, drag and drop the image to the correct category.
- Images saved in network folders may not be classified.
- You can search for images by category. See "[Searching Images](#)" for details.

## Creating Custom Categories


1. In the View & Use window, sort images by category and click Edit Custom Categories.

The Edit Custom Categories dialog box opens.

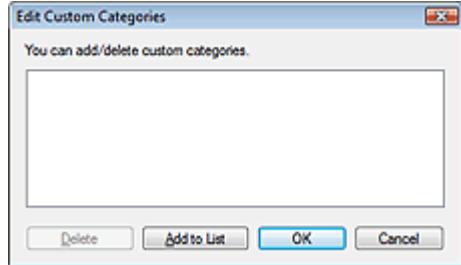

2. Click Add to List.

The Add Category dialog box opens.

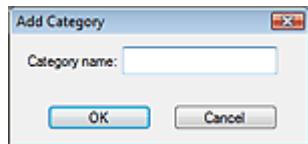

3. Enter Category name and click OK.

### Note

- You can create up to 20 custom categories.
- Up to 50 single-byte characters can be used for a category name.
- Double-click a created category to open the Change Category Name dialog box in which you can change the category name.
- Select a custom category and click Delete to delete it.

## Related Topic

- ▶ [View & Use Window](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Utilizing Images in MP Navigator EX

### MP Navigator EX

## Utilizing Images in MP Navigator EX

You can scan images using MP Navigator EX and edit or print the saved images.

**See the corresponding sections below for details on saving scanned images.**

- **Saving scanned images to computer**  
▶ Saving
- **Saving scanned image as PDF Files**  
▶ Saving as PDF Files

**See the corresponding sections below for details on using images/files.**

- **Creating/editing PDF files from scanned images**  
▶ Creating/Editing PDF Files
- **Printing multiple scanned images at one time or printing at specific size, quality, etc.**  
▶ Printing Documents
- **Printing scanned photos**  
▶ Printing Photos
- **Sending scanned images via e-mail**  
▶ Sending via E-mail
- **Correcting/enhancing scanned images or converting them to text**  
▶ Editing Files
- **Setting passwords for created PDF files**  
▶ Setting Passwords for PDF Files  
▶ Opening/Editing Password-protected PDF Files

[Page top↑](#)

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > Utilizing Images in MP Navigator EX > Saving

### MP Navigator EX

## Saving

Save images scanned with MP Navigator EX to a computer.


1. Select the checkboxes of the images you want to save, then click Save.

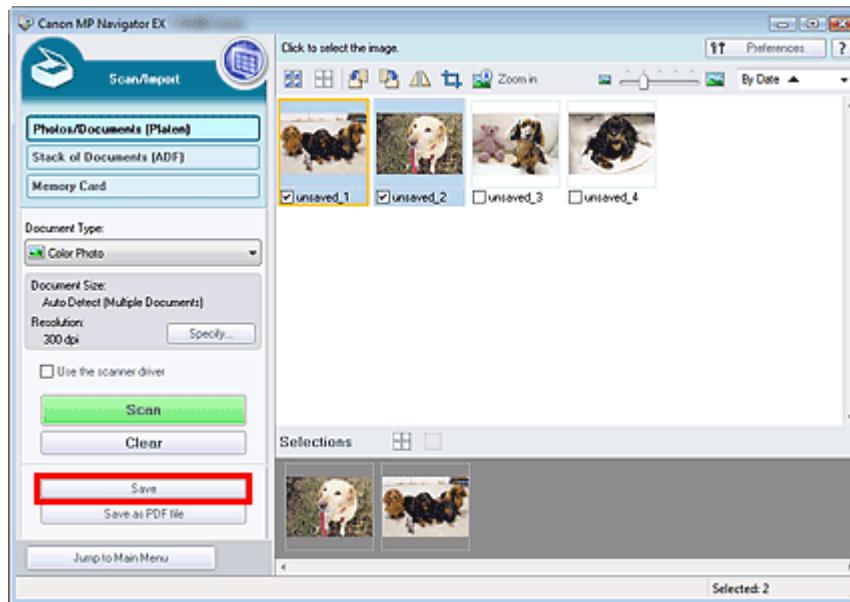

2. In the Save dialog box, specify the save settings.

Specify the destination folder, file name and file type.

#### Save Dialog Box

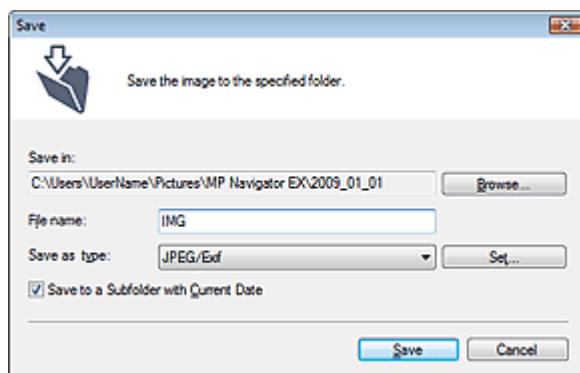

#### Important

- You cannot select JPEG/Exif when Document Type is Text(OCR), Text(Simplex) or Text(Duplex).

#### Note

- By default, the following folders are specified as the destination folders.
  - Windows Vista: MP Navigator EX folder in Picture folder
  - Windows XP: MP Navigator EX folder in My Pictures folder
  - Windows 2000: MP Navigator EX folder in My Pictures folder

3. Click Save.

Scanned images are saved according to the settings.

To further use/edit the scanned images on MP Navigator EX, click Open saved location in the Save Complete dialog box.

- ▶ Creating/Editing PDF Files
- ▶ Printing Documents
- ▶ Printing Photos
- ▶ Sending via E-mail
- ▶ Editing Files

[Page top↑](#)

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > Utilizing Images in MP Navigator EX > Saving as PDF Files

### MP Navigator EX

## Saving as PDF Files

Save images scanned with MP Navigator EX as PDF files.


1. Select the checkboxes of the images you want to save, then click Save as PDF file.

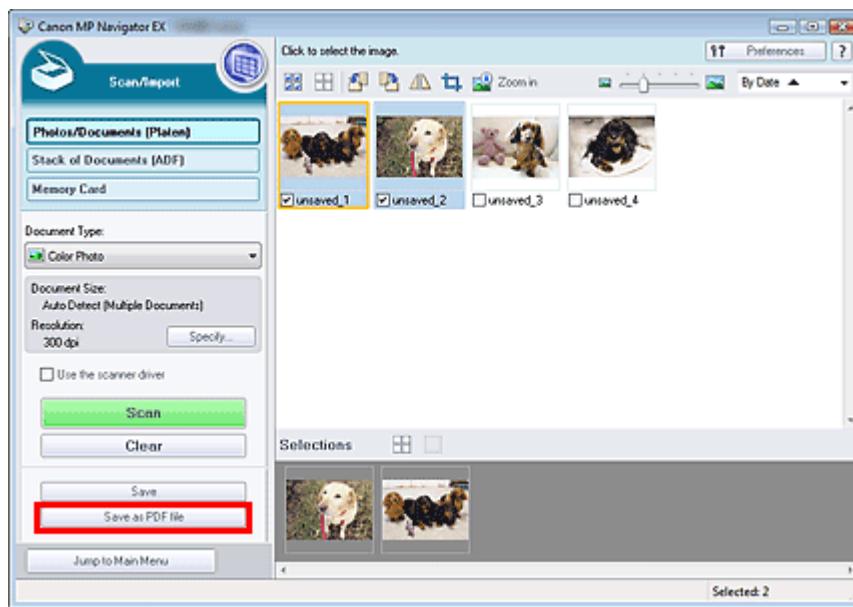

2. In the Save as PDF file dialog box, specify the save settings.

Specify the file type, file name and destination folder.

#### Save as PDF file Dialog Box

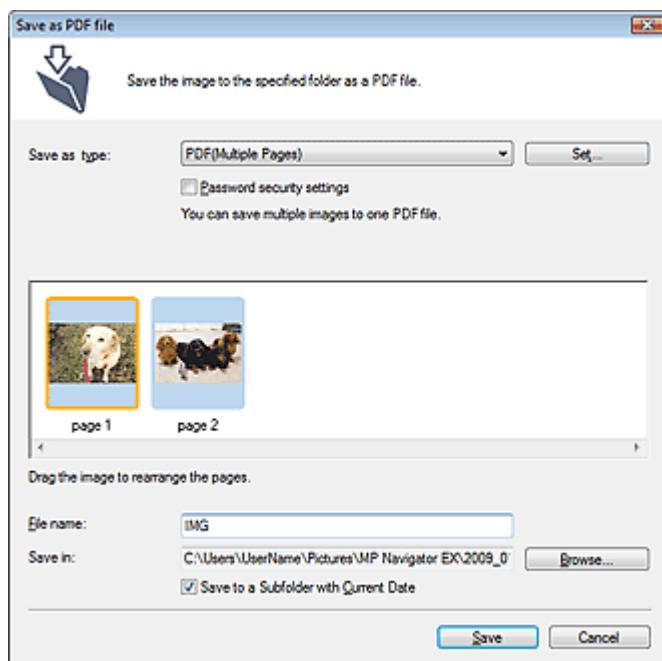

Select from the following PDF file types:

- **PDF**  
Save each of the selected images as a separate PDF file.
- **PDF(Multiple Pages)**  
Save multiple images in one PDF file.

 **Note**

- PDF(Multiple Pages) is displayed when multiple images are selected.

- **PDF(Add Page)**

Add the scanned images to a PDF file. The images are added to the end of the PDF file. You cannot rearrange the pages of the PDF file to which the images are added.

 **Important**

- Images can only be added to PDF files created with MP Navigator EX. You cannot specify PDF files created with other applications. PDF files edited in other applications cannot be specified as well.
- If a password-protected PDF file is edited, the passwords will be deleted. Reset the passwords.

 **Note**

- By default, the following folders are specified as the destination folders.  
Windows Vista: MP Navigator EX folder in Picture folder  
Windows XP: MP Navigator EX folder in My Pictures folder  
Windows 2000: MP Navigator EX folder in My Pictures folder
- You can set passwords for PDF files.  
 [Setting Passwords for PDF Files](#)

### 3. Click Save.

Scanned images are saved according to the settings.

To further use/edit the scanned images on MP Navigator EX, click Open saved location in the Save Complete dialog box.

-  [Creating/Editing PDF Files](#)
-  [Printing Documents](#)
-  [Printing Photos](#)
-  [Sending via E-mail](#)
-  [Editing Files](#)

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Utilizing Images in MP Navigator EX > Creating/Editing PDF Files

### MP Navigator EX

## Creating/Editing PDF Files

Create/edit PDF files using MP Navigator EX. After scanning documents and saving them, open the View & Use window to create PDF files and add/delete pages, rearrange the page order, etc.

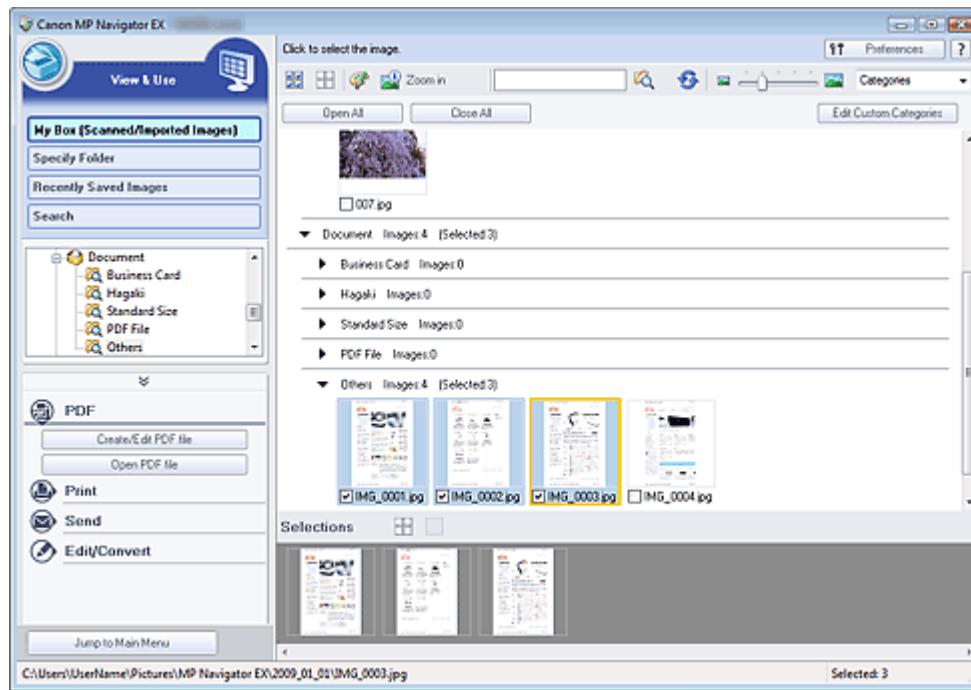

### Note

- See "Let's Try Scanning" to scan images into MP Navigator EX.
- You can also select images saved on a memory card or computer.
  - ▶ Importing Images Saved on a Memory Card
  - ▶ Opening Images Saved on a Computer

## Creating/Editing PDF Files with MP Navigator EX

1. Select images and click PDF.

### Note

- You can select PDF, JPEG, TIFF and BMP files.

2. Click Create/Edit PDF file on the list.

### Important


- For PDF files, you can only edit those created with MP Navigator EX. You cannot edit PDF files created with other applications. PDF files edited in other applications cannot be edited as well.

### Note

- If a password-protected PDF file is selected, you will be prompted to enter the password.
  - ▶ Opening/Editing Password-protected PDF Files

3. Add/delete pages as required.

To add an existing file, click Add Page and select the file. To delete a page, select it and click Delete Selected Pages.

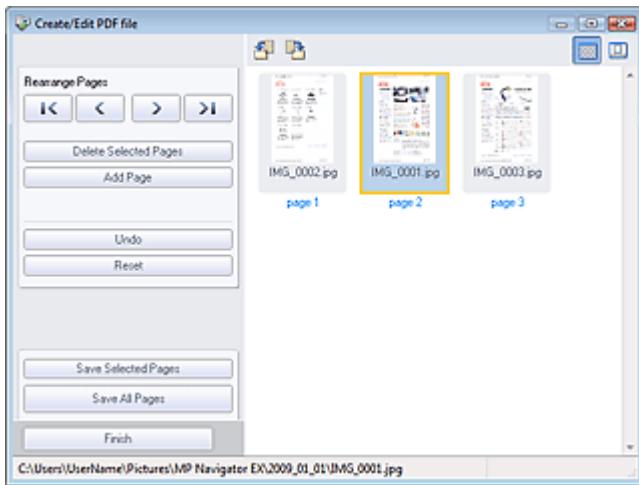

### Note

- You can add PDF, JPEG, TIFF and BMP files.
- When adding a password-protected PDF file, you will be prompted to enter the password.

#### 4. Rearrange the page order as required.

Use the icons to rearrange the order. Alternatively, drag and drop the thumbnail to the target location.

### Note

- See "Create/Edit PDF file Window" for details on the Create/Edit PDF file window.

#### 5. Click Save Selected Pages or Save All Pages.

The Save as PDF file dialog box opens.

→ [Save as PDF file Dialog Box](#)

### Important

- You cannot save images scanned at 10501 pixels or more in the vertical and horizontal directions.
- If a password-protected PDF file is edited, the passwords will be deleted. Reset the passwords in the Save as PDF file dialog box.

→ [Setting Passwords for PDF Files](#)

#### 6. Specify the save settings in the Save as PDF file dialog box, then click Save.

Images are saved according to the settings.

### Opening PDF Files in an Application

You can open PDF files created with MP Navigator EX in an associated application and edit or print them. This is available only when an application that can open PDF files is installed.

#### 1. Select PDF files and click PDF.

### Important

- For PDF files, you can only select those created with MP Navigator EX. You cannot select PDF files created with other applications. PDF files edited in other applications cannot be selected as well.

#### 2. Click Open PDF file on the list.

The application associated with the .pdf file extension by the operating system starts.

### Important

- Password-protected PDF files cannot be opened in applications not supporting PDF security.

#### 3. Use the application to edit/print the file.

For details, refer to the application's manual.

 **Important**

- In some applications, the commands (print, edit, etc.) restricted by Permissions Password may differ from those in MP Navigator EX.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Utilizing Images in MP Navigator EX > Printing Documents

### MP Navigator EX

## Printing Documents


You can print multiple scanned images at one time, print at specific quality, etc. using MP Navigator EX.

1. Scan documents into MP Navigator EX and save them, then open the View & Use window from the Navigation Mode screen and select images.

#### Note

- See "Let's Try Scanning" to scan images into MP Navigator EX.
- You can also select images saved on a memory card or computer.
  - ▶ Importing Images Saved on a Memory Card
  - ▶ Opening Images Saved on a Computer

2. Click Print, then click Print Document on the list.

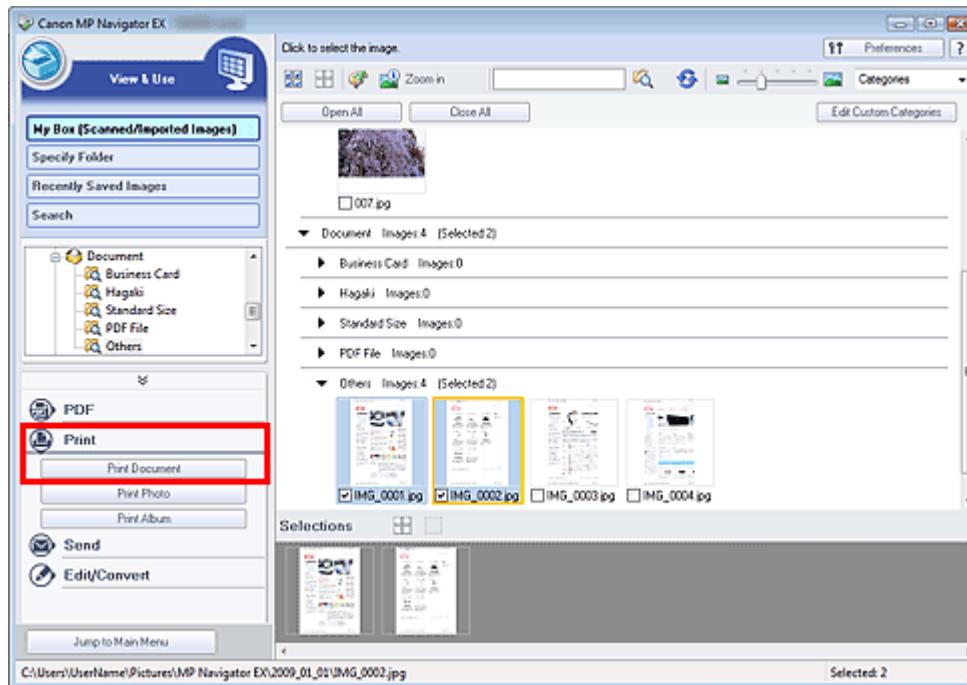


#### Important

- If a password-protected PDF file is selected, you will be prompted to enter the password.
  - ▶ Opening/Editing Password-protected PDF Files

3. Specify print settings as required.

In the displayed dialog box, specify print count, quality, scale, etc.

▶ Print Document Dialog Box

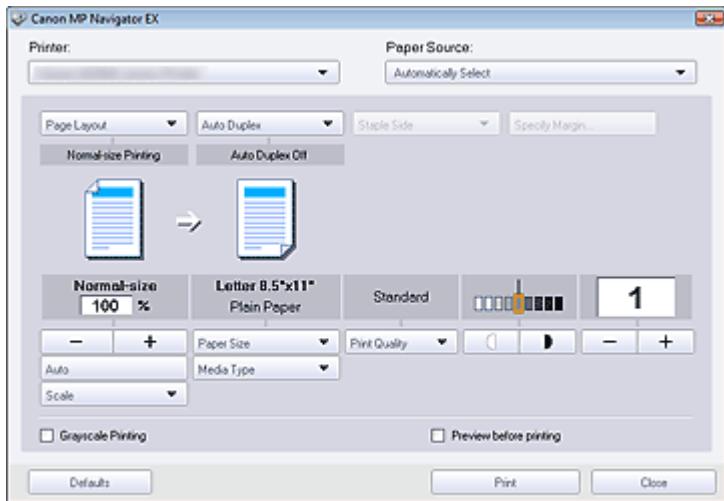

### Important

- At normal-size (100%), some images may be printed small or with some portions cropped. In that case, select Auto to resize the print in proportion to the paper size.

#### 4. Click Print.

Printing starts.

### Note

- When printing a multiple-page PDF file via Print Document, printing may take time depending on your computer. In that case, follow these steps and change settings.
  - From the Start menu, select Control Panel.
  - Click Printers.
  - Right-click the icon of your printer and click Properties.
  - The printer properties dialog box opens.
  - Click the Advanced tab.
  - Select Spool print documents so program finishes printing faster.
  - Select Start printing after last page is spooled.
  - After printing, return the setting on the Advanced tab to Start printing immediately.
- To cancel while spooling, click Cancel. To cancel while printing, select the printer icon on the taskbar and click Cancel Printing.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Utilizing Images in MP Navigator EX > Printing Photos

### MP Navigator EX

## Printing Photos

You can print photos using MP Navigator EX or an application that accompanies the machine. After scanning documents and saving them, open the View & Use window to select how you want to print the photos.

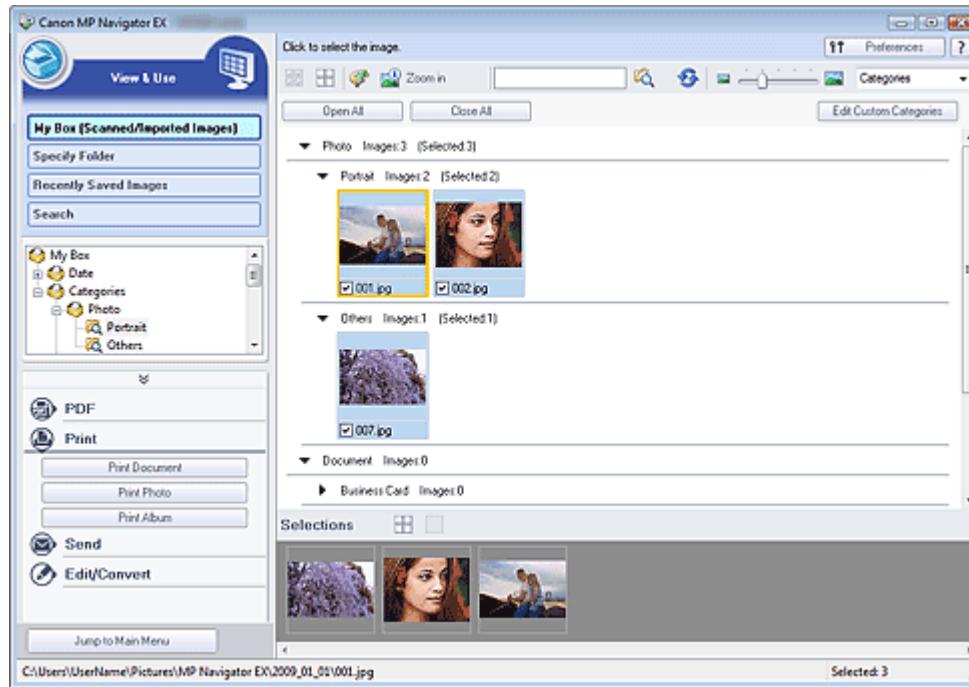

### Note

- See "Let's Try Scanning" to scan images into MP Navigator EX.
- You can also select images saved on a memory card or computer.
  - ▶ Importing Images Saved on a Memory Card
  - ▶ Opening Images Saved on a Computer

## When printing photos using Easy-PhotoPrint EX

You can use Easy-PhotoPrint EX to print scanned photos at high quality or to layout and print images.

**1.** Select images and click Print.

**2.** Click Print Photo or Print Album on the list.

Easy-PhotoPrint EX starts. See "Printing Photos" for details.

### Note

- If Easy-PhotoPrint EX is not installed, print with MP Navigator EX.

## When printing photos using MP Navigator EX


**1.** Select images and click Print.

**2.** Click Print Photo on the list.

**3.** Specify print settings as required.

In the displayed dialog box, specify paper size, print count, etc.

▶ Print Photo Dialog Box

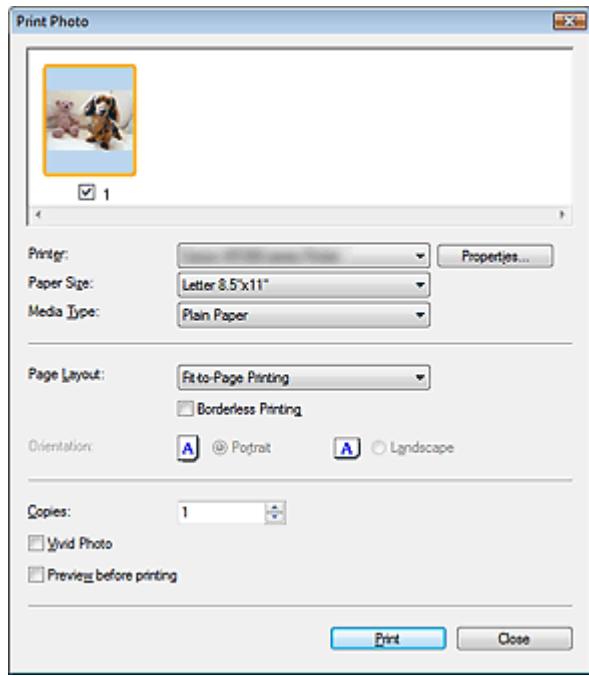

**4. Click Print.**

Printing starts.

 **Note**

- To cancel while spooling, click Cancel. To cancel while printing, select the printer icon on the taskbar and click Cancel Printing.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Utilizing Images in MP Navigator EX > Sending via E-mail

### MP Navigator EX

## Sending via E-mail

Send scanned images via e-mail.

### Important


- MP Navigator EX is compatible with the following e-mail software programs:
  - Windows Mail (Windows Vista)
  - Outlook Express (Windows XP/Windows 2000)
  - Microsoft Outlook(If an e-mail software program does not operate properly, check that the program's MAPI is enabled. To enable MAPI, refer to the manual of the e-mail software program.)

1. Scan documents into MP Navigator EX and save them, then open the View & Use window from the Navigation Mode screen and select images.

### Note

- See "Let's Try Scanning" to scan images into MP Navigator EX.
- You can also select images saved on a memory card or computer.
  - ▶ Importing Images Saved on a Memory Card
  - ▶ Opening Images Saved on a Computer


2. Click Send, then click Attach to E-mail on the list.

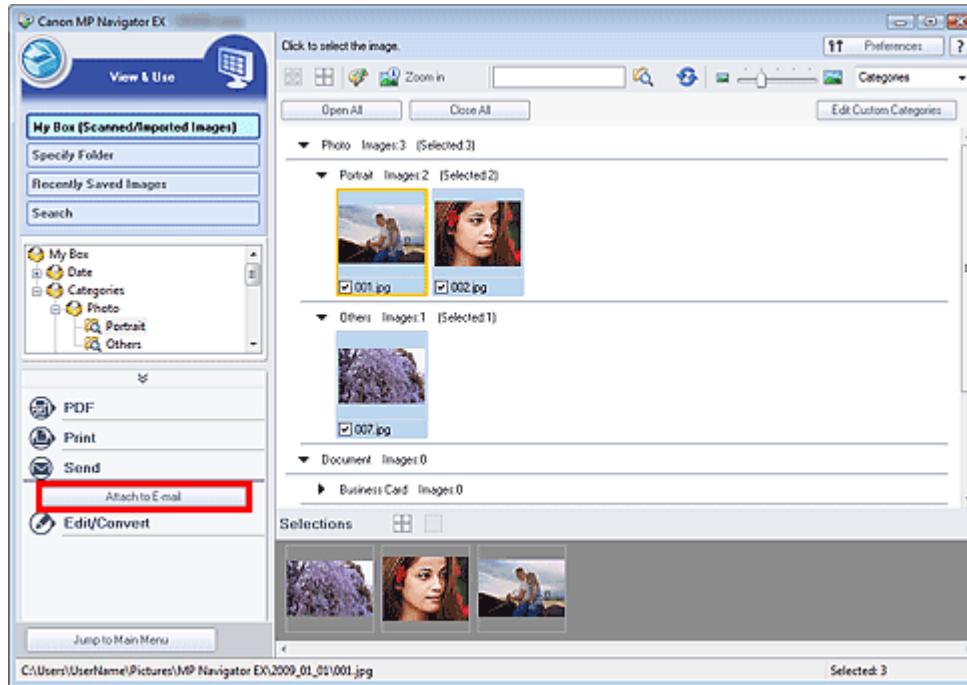

3. Set save options as required.

Specify the destination folder and file name.

▶ Send via E-mail Dialog Box

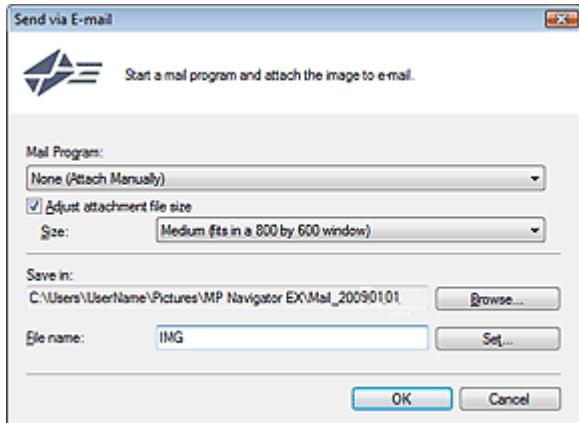

### Note

- You can select a compression type when sending JPEG images via e-mail. Click Set... to open a dialog box and select a compression type from High(Low Compression), Standard or Low(High Compression).

#### 4. Click OK.

Files are saved according to the settings, and the e-mail software program starts.

#### 5. Specify the recipient, enter the subject and message, then send e-mail.

For details, refer to the manual of the e-mail software program.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Utilizing Images in MP Navigator EX > Editing Files

### MP Navigator EX

## Editing Files

You can edit images or convert them to text using MP Navigator EX or an application that accompanies the machine. After scanning documents and saving them, open the View & Use window to select what you want to do with the images.

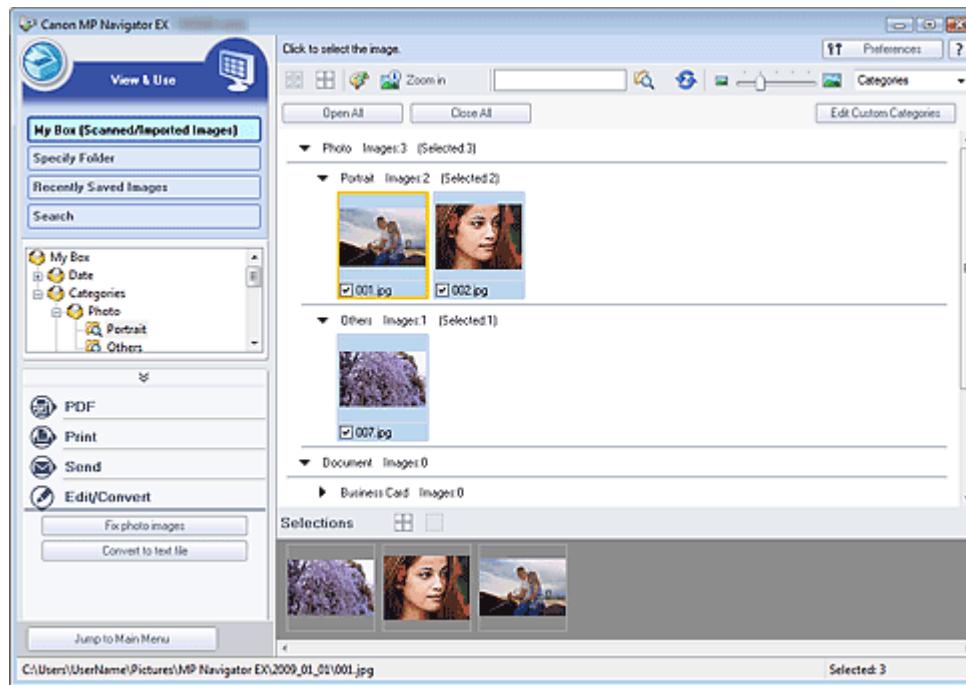

### Note

- See "Let's Try Scanning" to scan images into MP Navigator EX.
- You can also select images saved on a memory card or computer.
  - ▶ Importing Images Saved on a Memory Card
  - ▶ Opening Images Saved on a Computer

## Correcting Photo Images

You can correct/enhance images in the Correct/Enhance Images window.

1. Select images and click Edit/Convert.
2. Click Fix photo images on the list.  
The Correct/Enhance Images window opens.
3. Correct/enhance images in the Correct/Enhance Images window.

### Note

- See "Correct/Enhance Images Window" for details on the Correct/Enhance Images window.
- See the corresponding sections below for correcting/enhancing images.
  - ▶ Correcting/Enhancing Images Automatically
  - ▶ Correcting/Enhancing Images Manually

## Converting Documents to Text

Scan text in scanned magazines and newspapers and display it in Notepad (included with Windows).

 **Important**

- PDF files cannot be converted to text.

**1.** Select images and click Edit/Convert.

**2.** Click Convert to text file on the list.

Notepad (included with Windows) starts and editable text appears.

 **Note**

- Only text written in languages that can be selected on the General tab can be extracted to Notepad (included with Windows). Click Set... on the General tab and specify the language according to the language of the document to be scanned.  
When scanning multiple documents, you can collect the extracted text into one file.  
 **General Tab**
- Text displayed in Notepad (included with Windows) is for guidance only. Text in the image of the following types of documents may not be detected correctly.
  - Documents containing text with font size outside the range of 8 points to 40 points (at 300 dpi)
  - Slanted documents
  - Documents placed upside down or documents with text in the wrong orientation (rotated characters)
  - Documents containing special fonts, effects, italics, or hand-written text
  - Documents with narrow line spacing
  - Documents with colors in the background of text
  - Documents containing multiple languages

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Utilizing Images in MP Navigator EX > Setting Passwords for PDF Files

### MP Navigator EX

## Setting Passwords for PDF Files

Set passwords for opening, editing and printing PDF files.

You can set two passwords: one for opening the file and one for editing/printing it.

### Important

- In Windows 2000, Internet Explorer 5.5 Service Pack 2 or later is required to use this function.
- You will not be able to open/edit the file if you forget the password. Record your passwords in a safe place for future reference.
- Password-protected PDF files cannot be opened in applications not supporting PDF security.
- In some applications, the commands (print, edit, etc.) restricted by Permissions Password may differ from those in MP Navigator EX.
- Password-protected PDF files cannot be searched by text from the [View & Use Window](#).

### 1. Scan documents into MP Navigator EX, then click Save as PDF file.

Alternatively, edit existing files in the Create/Edit PDF file window, then click Save Selected Pages or Save All Pages.

The Save as PDF file dialog box opens.


### Important


- Passwords cannot be set when images are automatically saved after scanning, such as when scanning from the One-click Mode screen or scanning using the Operation Panel of the machine.

### Note

- See "Let's Try Scanning" to scan images.
- See "Creating/Editing PDF Files" to create PDF files from existing images or to edit files.

### 2. Select the Password security settings checkbox.

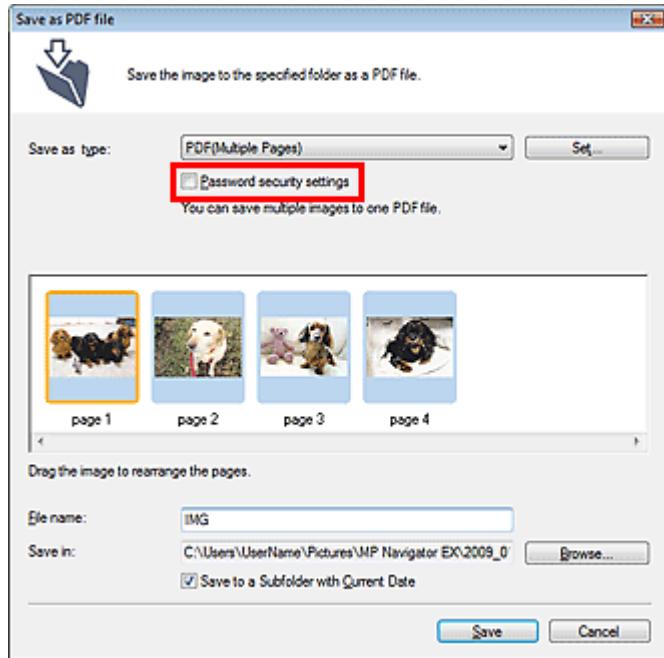


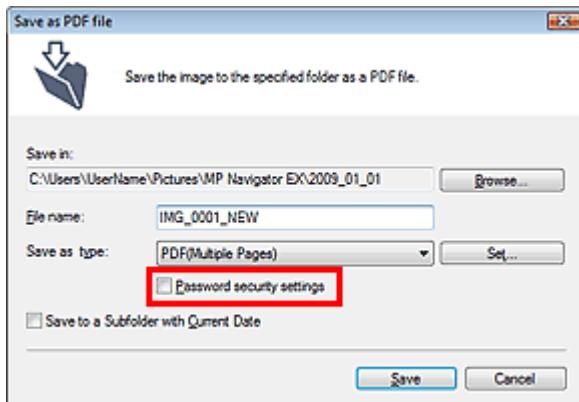


The Password Security -Settings dialog box opens.

### Note

- You can also open the Password Security -Settings dialog box by clicking Set..., then selecting Password Security for Security in the PDF Settings dialog box.

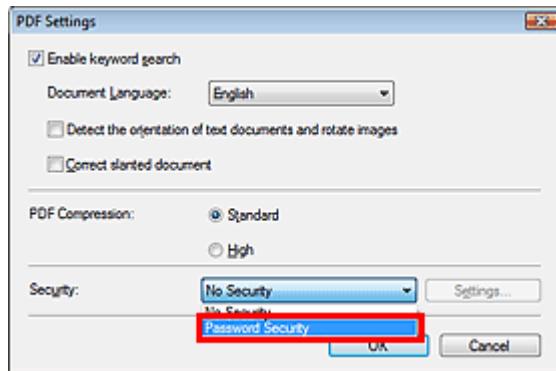

- Select the Require a password to open the document or Use a password to restrict printing and editing of the document and its security settings checkbox, then enter a password.

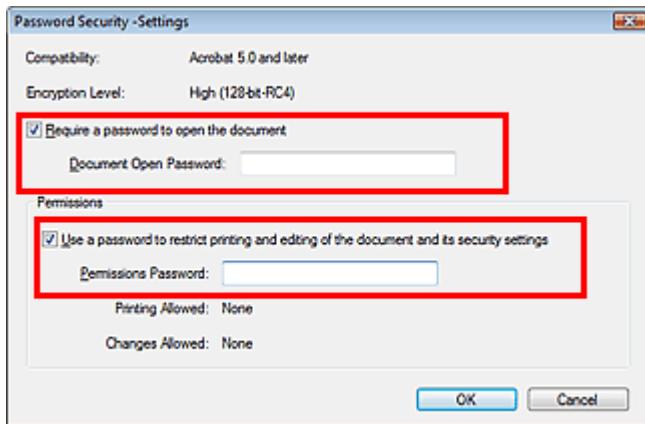

### Important

- Up to 32 single-byte alphanumeric characters can be used for the password. Passwords are case sensitive.
- Select both checkboxes to set both Document Open Password and Permissions Password. You cannot use the same password for both.


- Click OK.

The Confirm Document Open Password or Confirm Permissions Password dialog box opens.

### Document Open Password



## Permissions Password

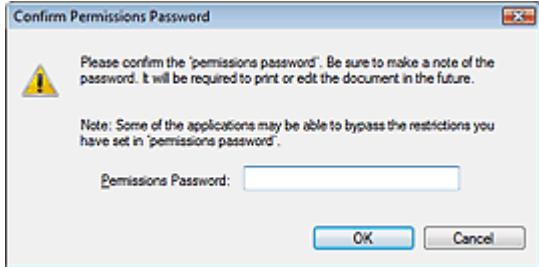

### 5. Re-enter the password and click OK.

The Save as PDF file dialog box returns.

#### Important

- If you close the Save as PDF file dialog box without clicking Save, the settings in the Password Security -Settings dialog box will be deleted.
- Passwords are deleted once the file is edited. Reset the passwords when saving edited files.

#### Note

- If you set the passwords via the PDF Settings dialog box, the PDF Settings dialog box returns. Click OK. The Save as PDF file dialog box returns.

### 6. Click Save.

Files are saved according to the settings.

#### Related Topic

► [Opening/Editing Password-protected PDF Files](#)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Utilizing Images in MP Navigator EX > Opening/Editing Password-protected PDF Files

### MP Navigator EX

## Opening/Editing Password-protected PDF Files

Enter a password to open or edit/print password-protected PDF files.


Password entry method varies by operation. The following procedures are examples only.

### Important

- You can open, edit or print only PDF files whose passwords were set with MP Navigator EX. You cannot edit PDF files edited in other applications or whose passwords were set with other applications. Only MP Navigator EX version 1.1 and 2.0 or later supports opening, editing and printing password-protected PDF files.
- In Windows 2000, Internet Explorer 5.5 Service Pack 2 or later is required to open, edit or print password-protected PDF files.
- Passwords are case sensitive.


### Entering a Password to Open a File

1. In the View & Use window, select the PDF file you want to open and click Zoom in. Alternatively, double-click the PDF file.

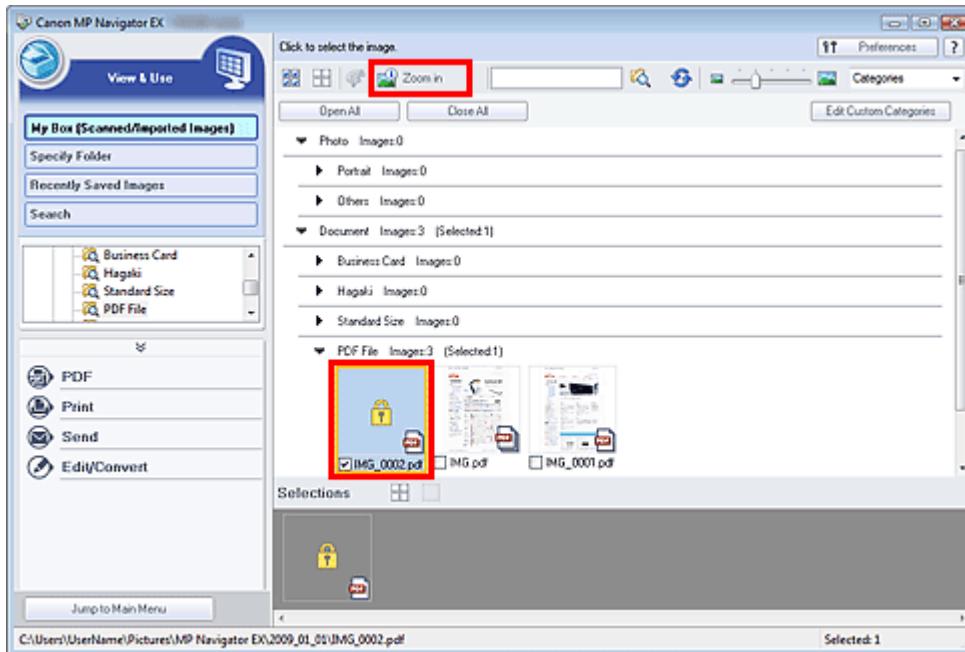


### Note

- Only the Document Open Password will be required. The Permissions Password will not be required.
- If the Zoom in dialog box with a lock icon opens, click Enter Password.

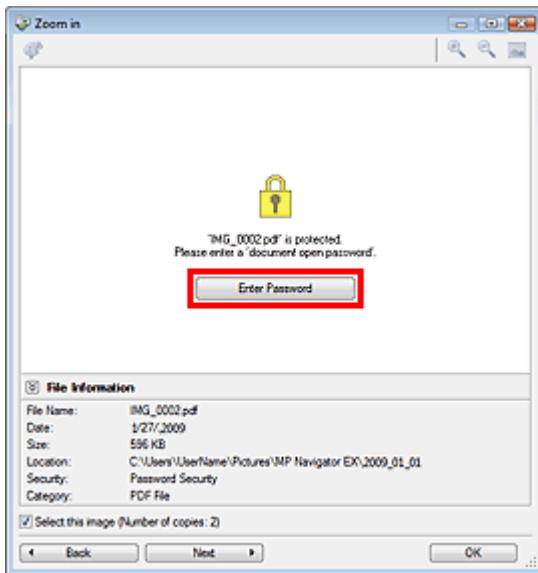

2. The Password dialog box opens. Enter the password and click OK.

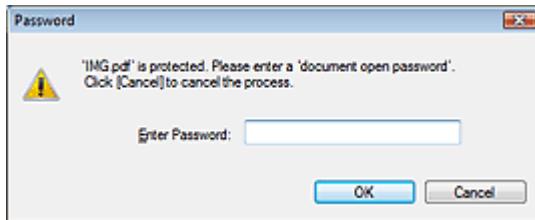


The PDF file opens in the Zoom in dialog box.

### Note

- To reopen the file after closing the Zoom in dialog box, re-enter the password.


## Entering a Password (Permissions Password) to Edit or Print a File

1. In the View & Use window, select PDF files and click PDF or Print.

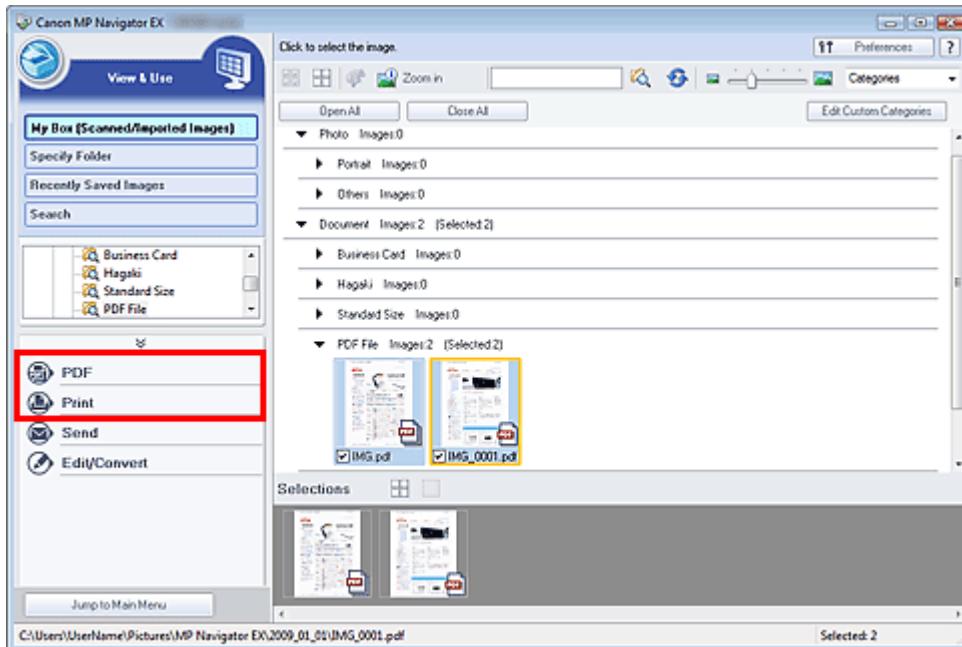

2. To create a PDF file or edit the file, select Create/Edit PDF file on the list. To print the file, click Print Document.

In the Password dialog box, you will be prompted to enter a password.

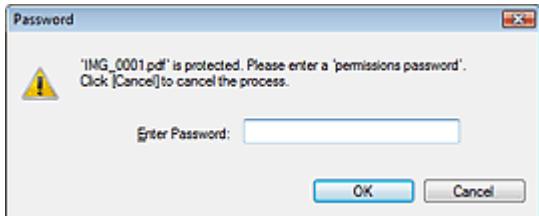

### Note

- If the Document Open Password is set as well, the Document Open Password will be required, then the Permissions Password will be required.

### 3. Enter the password and click OK.

The corresponding dialog box opens.

### Important

- If a password-protected PDF file is edited, the passwords will be deleted. Reset the passwords.  
 [Setting Passwords for PDF Files](#)

### Related Topic

- ▶ [Setting Passwords for PDF Files](#)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens

### MP Navigator EX

## MP Navigator EX Screens

Learn about the screens and functions of MP Navigator EX.

### Scan/Import Documents or Images Tab

- ▶ Photos/Documents (Platen) Screen (Scan/Import Window)
  - Scan Settings Dialog Box (Photos/Documents)
  - Save Dialog Box
  - Save as PDF file Dialog Box
- ▶ Stack of Documents (ADF) Screen (Scan/Import Window)
  - Scan Settings Dialog Box (Stack of Documents (ADF))
- ▶ Memory Card Screen (Scan/Import Window)

### View & Use Images on your Computer Tab

- ▶ View & Use Window
  - Create/Edit PDF file Window
  - Print Document Dialog Box
  - Print Photo Dialog Box
  - Send via E-mail Dialog Box
  - Correct/Enhance Images Window

### Custom Scan with One-click Tab / One-click Mode Screen

- ▶ Save Dialog Box (One-click Mode Screen)
- ▶ PDF Dialog Box
- ▶ Mail Dialog Box
- ▶ OCR Dialog Box
- ▶ Custom Dialog Box

### Preferences Dialog Box

- ▶ General Tab
- ▶ Scanner Button Settings Tab (Save)
- ▶ Scanner Button Settings Tab (Attach to E-mail)
- ▶ Scanner Button Settings Tab (Open with Application)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Navigation Mode Screen

### MP Navigator EX

## Navigation Mode Screen

This is one of the startup screens of MP Navigator EX.

Point to the icon at the top of the screen to display each tab. Use each tab depending on what you want to do.



- **Scan/Import**

You can scan photos and documents, or import images saved on memory cards.

▶ [Scan/Import Documents or Images Tab](#)

- **View & Use**

You can open images saved on a computer and print them or attach them to e-mail. You can also edit them using an application that accompanies the machine.

▶ [View & Use Images on your Computer Tab](#)

- **One-click**

You can complete from scanning to saving, etc. at one time by simply clicking the corresponding icon.

▶ [Custom Scan with One-click Tab](#)

-  **(Switch Mode)**

Switches to One-click Mode screen. In the One-click Mode screen, you can complete from scanning to saving, etc. at one time by simply clicking the corresponding icon.

▶ [One-click Mode Screen](#)

- **Show this window at startup**

Select this checkbox to open the Main Menu at startup. If this checkbox is not selected, the last used screen appears.

-  **Preferences**

The Preferences dialog box opens. In the Preferences dialog box, you can make advanced settings to MP Navigator EX functions.

▶ [Preferences Dialog Box](#)

-  **(Guide)**

Opens this guide.

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Scan/Import Documents or Images Tab

### MP Navigator EX

## Scan/Import Documents or Images Tab

Point to Scan/Import in the Navigation Mode screen to display the Scan/Import Documents or Images tab.

You can scan photos and documents, or import images saved on memory cards.

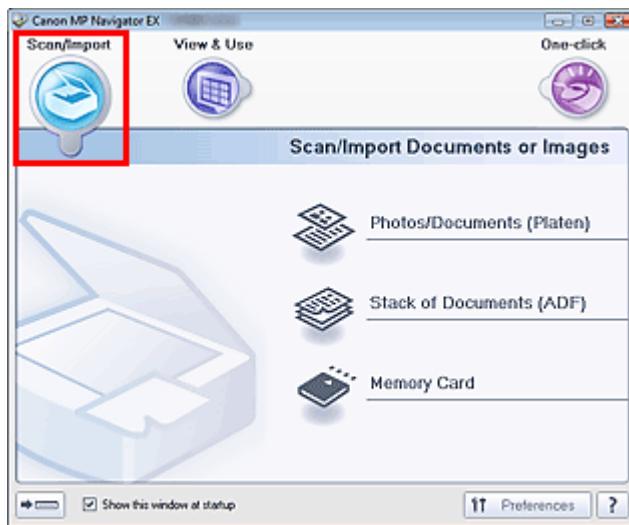

- **Photos/Documents (Platen)**

Opens the Scan/Import window. Scan photos and documents placed on the Platen.

▶ [Photos/Documents \(Platen\) Screen \(Scan/Import Window\)](#)

- **Stack of Documents (ADF)**

Opens the Scan/Import window. Place multiple documents on the ADF (Auto Document Feeder) and scan at one time.

▶ [Stack of Documents \(ADF\) Screen \(Scan/Import Window\)](#)

- **Memory Card**

Opens the Scan/Import window with Memory Card selected. Import images saved on memory cards.

▶ [Memory Card Screen \(Scan/Import Window\)](#)

-  **(Switch Mode)**

Switches to One-click Mode screen. In the One-click Mode screen, you can complete from scanning to saving, etc. at one time by simply clicking the corresponding icon.

▶ [One-click Mode Screen](#)

- **Show this window at startup**

Select this checkbox to open the Main Menu at startup. If this checkbox is not selected, the last used screen appears.

-  **Preferences**

The Preferences dialog box opens. In the Preferences dialog box, you can make advanced settings to MP Navigator EX functions.

▶ [Preferences Dialog Box](#)

-  **(Guide)**

Opens this guide.

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > View & Use Images on your Computer Tab

### MP Navigator EX

## View & Use Images on your Computer Tab

Point to View & Use in the Navigation Mode screen to display the View & Use Images on your Computer tab.

You can open images saved on a computer and print them or attach them to e-mail. You can also edit them using an application that accompanies the machine.

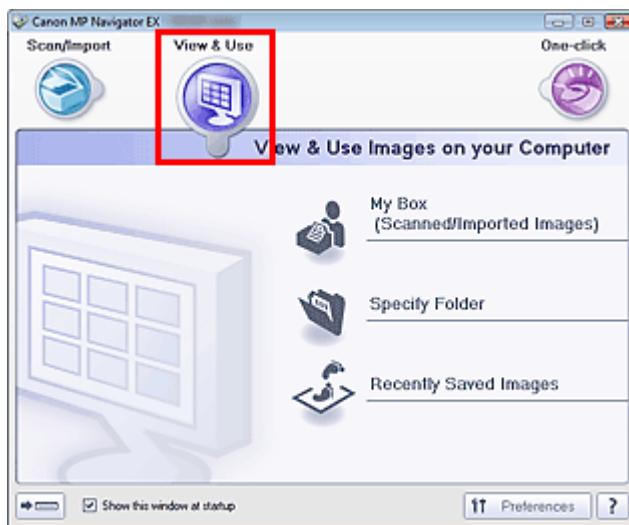

- **My Box (Scanned/Imported Images)**

Opens the View & Use window with My Box (Scanned/Imported Images) selected.

You can open and use images saved in My Box.

My Box is a specific folder for saving images scanned with MP Navigator EX.

#### Note

- The following folders are specified by default.  
Windows Vista: MP Navigator EX folder in Picture folder  
Windows XP: MP Navigator EX folder in My Pictures folder  
Windows 2000: MP Navigator EX folder in My Pictures folder

- **Specify Folder**

Opens the View & Use window with Specify Folder selected.

You can open and use images saved in specific folders.

- **Recently Saved Images**

Opens the View & Use window with Recently Saved Images selected.

You can open and use "Scanned/Imported Images" and images that have been "Attached to E-mail" or "Sent to Application" recently.

▶ [View & Use Window](#)

- **(Switch Mode)**

Switches to One-click Mode screen. In the One-click Mode screen, you can complete from scanning to saving, etc. at one time by simply clicking the corresponding icon.

▶ [One-click Mode Screen](#)

- **Show this window at startup**

Select this checkbox to open the Main Menu at startup. If this checkbox is not selected, the last used screen appears.

- **Preferences**

The Preferences dialog box opens. In the Preferences dialog box, you can make advanced settings to MP Navigator EX functions.

▶ [Preferences Dialog Box](#)



Opens this guide.

#### Related Topic

- ▶ Opening Images Saved on a Computer

[Page top↑](#)

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Custom Scan with One-click Tab

### MP Navigator EX

## Custom Scan with One-click Tab

Point to One-click in the Navigation Mode screen to display the Custom Scan with One-click tab.

You can complete from scanning to saving, etc. at one time by simply clicking the corresponding icon.

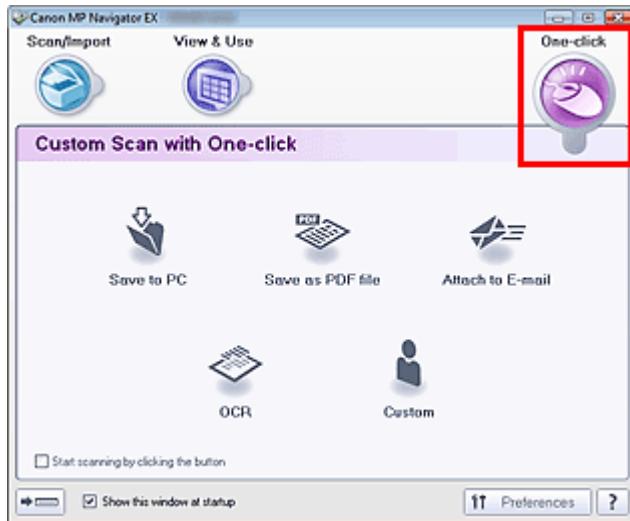

- **Save to PC**

Scan and save documents. Document type is automatically detected. File format is automatically set.

Files are saved to a computer.

When you click this icon, the Save dialog box opens and you can specify the scan/save settings.

▶ [Save Dialog Box \(One-click Mode Screen\)](#)

- **Save as PDF file**

Scan documents and save them as PDF files.

When you click this icon, the PDF dialog box opens and you can specify the scan/save and application settings.

▶ [PDF Dialog Box](#)

- **Attach to E-mail**

Scan documents or photos and attach them to e-mail.

When you click this icon, the Mail dialog box opens and you can specify the scan/save and e-mail software program settings.

▶ [Mail Dialog Box](#)

- **OCR**

Scan text documents then extract text in the image and display it in Notepad (included with Windows).

When you click this icon, the OCR dialog box opens and you can specify the scan/save settings.

▶ [OCR Dialog Box](#)

### Note

- For further procedures, refer to the application's manual.

- **Custom**

Scan documents and open them in a specified application. Document type is automatically detected.

When you click this icon, the Custom dialog box opens and you can specify the scan/save and application settings.

▶ [Custom Dialog Box](#)

### Note

- For further procedures, refer to the application's manual.

- **Start scanning by clicking the button**

Select this checkbox and click an icon to start scanning immediately.

**(Switch Mode)**

Switches to One-click Mode. The One-click Mode screen appears.

▶ [One-click Mode Screen](#)

**• Show this window at startup**

Select this checkbox to open the Main Menu at startup. If this checkbox is not selected, the last used screen appears.

**Preferences**

The Preferences dialog box opens. In the Preferences dialog box, you can make advanced settings to MP Navigator EX functions.

▶ [Preferences Dialog Box](#)

**(Guide)**

Opens this guide.

**Important**

■ The following restrictions apply when you scan with Document Type set to Auto Mode in the Save or Custom dialog box.

When you want to convert text in the scanned image to text data, specify Document Type (do not select Auto Mode).

**Related Topic**

▶ [Easy Scanning with One-click](#)

[Page top↑](#)

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Photos/Documents (Platen) Screen (Scan/Import Window)

### MP Navigator EX

## Photos/Documents (Platen) Screen (Scan/Import Window)

Point to Scan/Import in the Navigation Mode screen and click Photos/Documents (Platen).

Open this window to scan documents from the Platen.

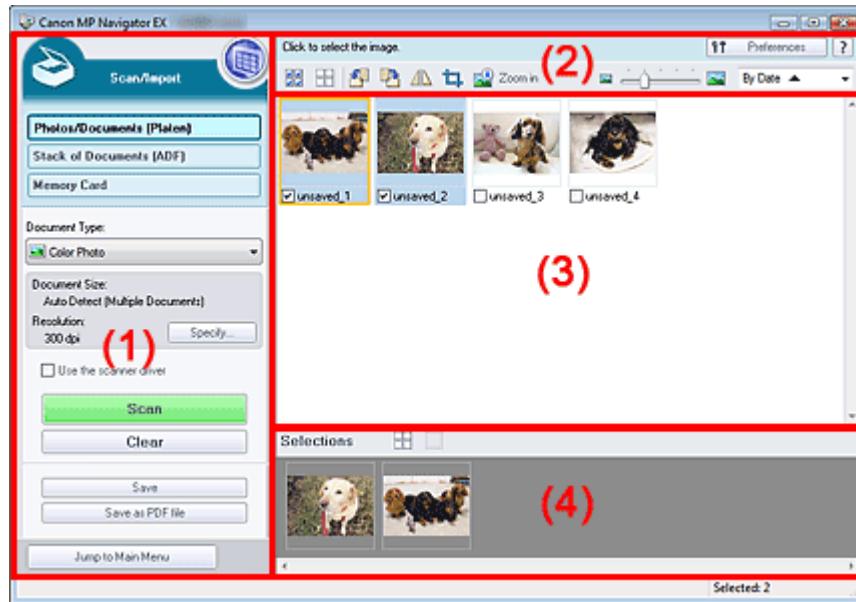

(1) Settings and Operation Buttons

(2) Toolbar

(3) Thumbnail Window

(4) Selected Images Area

### Settings and Operation Buttons

-  **(View & Use)**

Click this when you want to open images and PDF files saved on your computer. The View & Use window opens.

▶ [View & Use Window](#)

- Photos/Documents (Platen)**

Displays the screen for scanning photos, documents, magazines and other printed materials.

- Stack of Documents (ADF)**

Click this when you want to scan multiple documents at one time from the ADF (Auto Document Feeder). The screen for scanning from the ADF appears.

▶ [Stack of Documents \(ADF\) Screen \(Scan/Import Window\)](#)

- Memory Card**

Click this when you want to import images saved on a memory card. The screen for importing images from a memory card appears.

▶ [Memory Card Screen \(Scan/Import Window\)](#)

- Document Type**

Select the type of document to be scanned.

Scanning photos: Color Photo or Black and White Photo

Scanning text documents: Color Document, Black and White Document or Text(OCR)

Scanning magazines: Magazine(Color)

 **Important**

- You cannot select Document Type if the Use the scanner driver checkbox is selected.

- **Specify...**

Specify the document size, resolution, and other advanced scan settings.

► [Scan Settings Dialog Box \(Photos/Documents\)](#)

 **Important**

- Specify... is not available if the Use the scanner driver checkbox is selected.

- **Use the scanner driver**

Select this checkbox when you want to scan with ScanGear (scanner driver). Use ScanGear (scanner driver) to correct images and adjust colors when scanning.

- **Scan**

Scanning starts.

 **Note**

- This button changes to Open Scanner Driver when you select the Use the scanner driver checkbox.

- **Open Scanner Driver**

ScanGear (scanner driver) starts.

See "[ScanGear \(Scanner Driver\) Screens](#)" for details on ScanGear (scanner driver) screens.

 **Note**

- This button changes to Scan when you deselect the Use the scanner driver checkbox.

- **Clear**

Delete all images in the Thumbnail window.

 **Note**

- Images not saved on a computer will be deleted. To keep important images, use Save or other methods to save them to a computer before clicking Clear.

- **Save**

Save the selected images. Click to open the Save dialog box and specify the save settings.

► [Save Dialog Box](#)

- **Save as PDF file**

Save the selected images as PDF files. Click to open the Save as PDF file dialog box and specify the save settings.

► [Save as PDF file Dialog Box](#)

- Jump to Main Menu **Jump to Main Menu**

Jumps to the Main Menu.

## Toolbar

-  Preferences **Preferences**

The Preferences dialog box opens. In the Preferences dialog box, you can make advanced settings to MP Navigator EX functions.

► [Preferences Dialog Box](#)

-  (Guide)

Opens this guide.

- **Edit Tools**

-  (Select All)

Selects all images in the Thumbnail window.

-  (Cancel All)

Cancels all image selections in the Thumbnail window.

-  **(Rotate Left)**  
Rotates the target image (outlined in orange) 90 degrees counter-clockwise.
-  **(Rotate Right)**  
Rotates the target image (outlined in orange) 90 degrees clockwise.
-  **(Invert)**  
Inverts the target image (outlined in orange) horizontally.
-  **(Trimming)**  
Trims the target image (outlined in orange) in the Thumbnail window. Trimming is the act of selecting the area you want to keep in a photo and discarding the rest. Click this button to open the Crop window and specify the trimming frame.
-  **Zoom in**  
Enlarges the target image (outlined in orange). You can also enlarge the image by double-clicking it.
-  **(Display Size)**  
Changes the size of images in the Thumbnail window.
-  **(Sort by)**  
Sorts the images in the Thumbnail window by category or by date (ascending or descending).

## Thumbnail Window

### ● **Thumbnail Window**


Images scanned from the Platen are displayed.

When you select the checkbox of an image, the image appears in the Selected Images area.

### **Note**

- Thumbnails may appear as "?" when there is not enough memory to display the images.

## When Images are Sorted by Categories

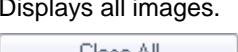-  **Open All**  
Displays all images.
-  **Close All**  
Hides all images.

## Selected Images Area

### ● **(Cancel All)**

Cancels the selection of all images in the Selected Images area.

### ● **(Cancel Selection)**

Cancels the selection of the target image (outlined in orange) in the Selected Images area.

### ● **Selected Images Area**

Images selected in the Thumbnail window are displayed.

## Related Topic

▶ Scanning Photos and Documents

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Scan Settings Dialog Box (Photos/Documents)

### MP Navigator EX

## Scan Settings Dialog Box (Photos/Documents)

The Scan Settings dialog box opens when you click Specify... in the Scan/Import window.

In the Scan Settings dialog box, you can make advanced scan settings.

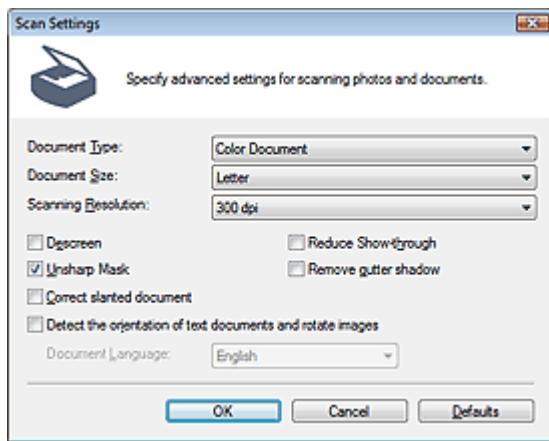

### • Document Type

Select the type of document to be scanned.

Scanning photos: Color Photo or Black and White Photo

Scanning text documents: Color Document, Black and White Document or Text(OCR)

Scanning magazines: Magazine(Color)


### Important

- To scan correctly, select a document type that matches the document to be scanned.

### • Document Size

Select the size of the document to be scanned.

When you select Custom, a screen in which you can specify the document size appears. Select a Units, then enter the Width and Height and click OK.

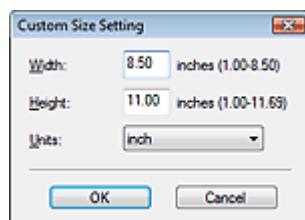

### Important

- When you select Auto Detect, the image may not be scanned at the correct position and size. In that case, change the size to the actual document size (A4, Letter, etc.) and align a corner of the document with the arrow of the Platen.
- You cannot select Auto Detect (Multiple Documents) or Auto Detect when Document Type is Text(OCR).

### • Scanning Resolution

Select the resolution at which to scan documents.

#### Resolution

### Note

- The following scanning resolutions can be specified when Document Type is Text(OCR).  
300 dpi / 400 dpi

### • Descreen

Select this checkbox to reduce moire patterns.

Printed photos and pictures are displayed as a collection of fine dots. "Moiré" is a phenomenon where uneven gradation or a stripe pattern appears when such photos or pictures printed with fine dots are scanned. Descreen is the function for reducing this moiré effect.

### **Important**

- You cannot select this checkbox when Document Type is Color Photo, Black and White Photo or Text(OCR).

### **Note**

- Scanning takes longer than usual when you enable Descreen.

#### • **Unsharp Mask**

Select this checkbox to emphasize the outline of the subjects and sharpen the image.

### **Important**

- You cannot select this checkbox when Document Type is Text(OCR).

#### • **Reduce Show-through**

Select this checkbox to sharpen text in a document or reduce show-through in newspapers.

### **Important**

- You cannot select this checkbox when Document Type is Color Photo, Black and White Photo or Text(OCR).

### **Note**

- Select this checkbox when Document Type is text document and show-through is apparent in the scanned image.

#### • **Remove gutter shadow**

Select this checkbox to correct shadows that appear between pages when scanning open booklets.

### **Important**

- You cannot select this checkbox when Document Size is Auto Detect, Auto Detect (Multiple Documents) or Stitch Assist.
- Align the document correctly with the marks on the Platen.

### **Note**

- Use ScanGear's Advanced Mode tab to correct gutter shadows when scanning non-standard size documents or when custom cropping frames are set.

For details, see Gutter Shadow Correction in "[Image Settings](#)" (ScanGear's Advanced Mode tab).

#### • **Correct slanted document**

Select this checkbox to detect the scanned text and correct the angle (within -0.1 to -10 degrees or +0.1 to +10 degrees) of the document.

### **Important**

- You cannot select this checkbox when Document Type is Color Photo or Black and White Photo.
- You cannot select this checkbox when Document Size is Stitch Assist.
- The inclination of the following types of documents may not be corrected, as the text cannot be detected correctly.
  - Documents in which the text lines are inclined more than 10 degrees or the angles vary by line
  - Documents containing both vertical and horizontal text
  - Documents with extremely large or small fonts
  - Documents with small amount of text
  - Documents containing figures/images or hand-written text
  - Documents containing both vertical and horizontal lines (tables)

### **Note**

- Scanning takes longer than usual when you enable Correct slanted document.

#### • **Detect the orientation of text documents and rotate images**

Select this checkbox to detect the orientation of the document from the scanned text and rotate the

scanned image to the correct orientation. Select the language of the document to be scanned in Document Language.

### Important

- You cannot select this checkbox when Document Type is Color Photo or Black and White Photo.
- You cannot select this checkbox when Document Size is Stitch Assist.
- This function may not work properly depending on the document language. Only text documents written in languages that can be selected from Document Language are supported.
- The orientation of the following types of documents may not be corrected, as the text cannot be detected correctly. In that case, select the scanned image in the Thumbnail window of the "Photos/Documents (Platen) Screen (Scan/Import Window)" and rotate it with Edit Tools.
  - Resolution is outside the range of 300 dpi to 600 dpi
  - Font size is outside the range of 8 points to 48 points
  - Documents containing special fonts, effects, italics, or hand-written text
  - Documents with patterned backgrounds

### Note

- Scanning takes longer than usual when you enable Detect the orientation of text documents and rotate images.

#### • Document Language

Select the language of the document to be scanned.

### Important

- You cannot select this checkbox when Document Type is Color Photo or Black and White Photo.
- You cannot select this checkbox when Document Size is Stitch Assist.

#### • Defaults

Restores the default settings.

[Page top↑](#)

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Stack of Documents (ADF) Screen (Scan/Import Window)

### MP Navigator EX

## Stack of Documents (ADF) Screen (Scan/Import Window)

Point to Scan/Import in the Navigation Mode screen and click Stack of Documents (ADF).

Open this window to scan documents from the ADF (Auto Document Feeder).

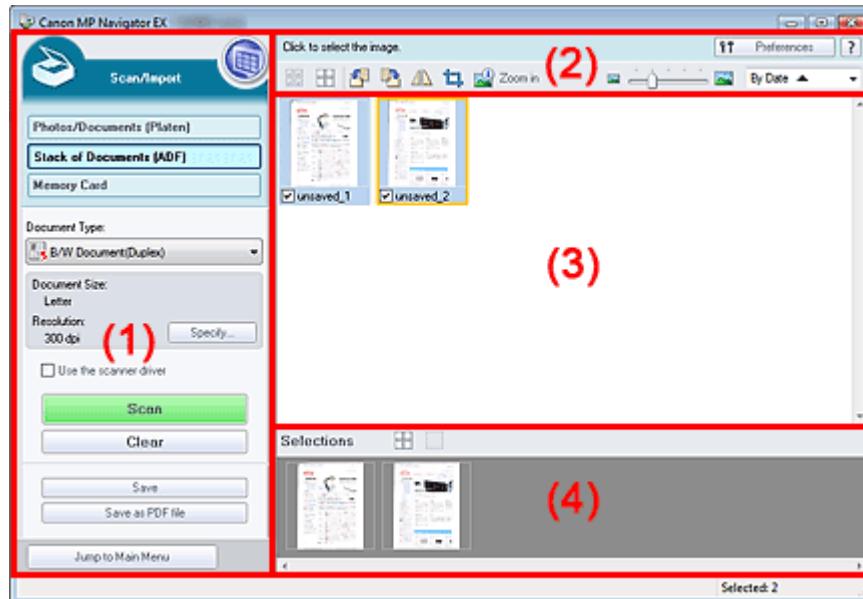

(1) Settings and Operation Buttons

(2) Toolbar

(3) Thumbnail Window

(4) Selected Images Area

### Settings and Operation Buttons

-  **(View & Use)**

Click this when you want to open images and PDF files saved on your computer. The View & Use window opens.

▶ [View & Use Window](#)

- Photos/Documents (Platen)**

Click this when you want to scan photos, documents, magazines and other printed materials. The screen for scanning photos and documents appears.

▶ [Photos/Documents \(Platen\) Screen \(Scan/Import Window\)](#)

- Stack of Documents (ADF)**

Displays the screen for scanning multiple documents at one time from the ADF (Auto Document Feeder).

- Memory Card**

Click this when you want to import images saved on a memory card. The screen for importing images from a memory card appears.

▶ [Memory Card Screen \(Scan/Import Window\)](#)

- Document Type**

Select the type of document to be scanned.

When scanning one side of each document: Color Document(Simplex), B/W Document(Simplex) or Text(Simplex)

When scanning both sides of each document: Color Document(Duplex), B/W Document(Duplex) or Text(Duplex)

**Important**

- You cannot select Document Type if the Use the scanner driver checkbox is selected.

**Specify...**

Specify the document size, resolution, and other advanced scan settings.

→ [Scan Settings Dialog Box \(Stack of Documents \(ADF\)\)](#)

**Important**

- Specify... is not available if the Use the scanner driver checkbox is selected.

**Use the scanner driver**

Select this checkbox when you want to scan with ScanGear (scanner driver). Use ScanGear (scanner driver) to correct images and adjust colors when scanning.

**Scan**

Scanning starts.

**Note**

- This button changes to Open Scanner Driver when you select the Use the scanner driver checkbox.

**Open Scanner Driver**

ScanGear (scanner driver) starts.

See "[ScanGear \(Scanner Driver\) Screens](#)" for details on ScanGear (scanner driver) screens.

**Note**

- This button changes to Scan when you deselect the Use the scanner driver checkbox.

**Clear**

Delete all images in the Thumbnail window.

**Note**

- Images not saved on a computer will be deleted. To keep important images, use Save or other methods to save them to a computer before clicking Clear.

**Save**

Save the selected images. Click to open the Save dialog box and specify the save settings.

→ [Save Dialog Box](#)

**Save as PDF file**

Save the selected images as PDF files. Click to open the Save as PDF file dialog box and specify the save settings.

→ [Save as PDF file Dialog Box](#)

**Jump to Main Menu**

Jump to Main Menu

Jump to Main Menu

Jumps to the Main Menu.

**Toolbar****Preferences**

The Preferences dialog box opens. In the Preferences dialog box, you can make advanced settings to MP Navigator EX functions.

→ [Preferences Dialog Box](#)

**(Guide)**

Opens this guide.

**Edit Tools****(Select All)**

Selects all images in the Thumbnail window.

-  **(Cancel All)**  
Cancels all image selections in the Thumbnail window.
-  **(Rotate Left)**  
Rotates the target image (outlined in orange) 90 degrees counter-clockwise.
-  **(Rotate Right)**  
Rotates the target image (outlined in orange) 90 degrees clockwise.
-  **(Invert)**  
Inverts the target image (outlined in orange) horizontally.
-  **(Trimming)**  
Trims the target image (outlined in orange) in the Thumbnail window. Trimming is the act of selecting the area you want to keep in a photo and discarding the rest. Click this button to open the Crop window and specify the trimming frame.
-  **Zoom in**  
Enlarges the target image (outlined in orange). You can also enlarge the image by double-clicking it.
-  **(Display Size)**  
Changes the size of images in the Thumbnail window.
-  **(Sort by)**  
Sorts the images in the Thumbnail window by category or by date (ascending or descending).

## Thumbnail Window


- **Thumbnail Window**

Images scanned from the ADF (Auto Document Feeder) are displayed.  
When you select the checkbox of an image, the image appears in the Selected Images area.

### Note

- Thumbnails may appear as "?" when there is not enough memory to display the images.

## When Images are Sorted by Categories

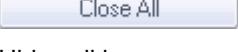-  **Open All**  
Displays all images.
-  **Close All**  
Hides all images.

## Selected Images Area

-  **(Cancel All)**  
Cancels the selection of all images in the Selected Images area.
-  **(Cancel Selection)**  
Cancels the selection of the target image (outlined in orange) in the Selected Images area.
- **Selected Images Area**  
Images selected in the Thumbnail window are displayed.

## Related Topic

- ▶ Scanning Multiple Documents at One Time from the ADF (Auto Document Feeder)

[Page top↑](#)

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Scan Settings Dialog Box (Stack of Documents (ADF))

### MP Navigator EX

## Scan Settings Dialog Box (Stack of Documents (ADF))

The Scan Settings dialog box opens when you click Specify... in the Scan/Import window.

In the Scan Settings dialog box, you can make advanced scan settings.

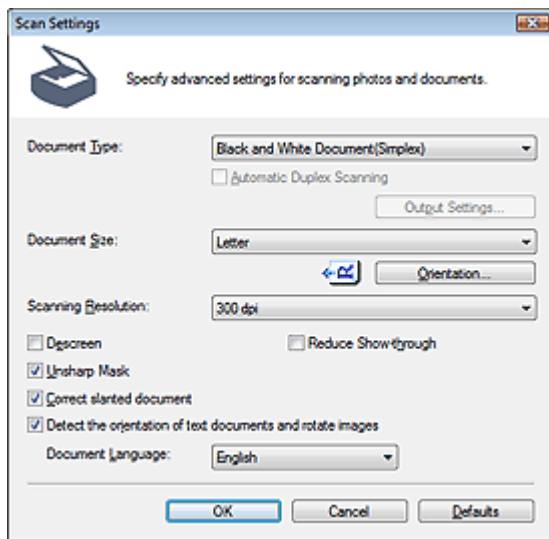

### • Document Type

Select the type of document to be scanned.

When scanning one side of each document: Color Document(Simplex), Black and White Document(Simplex) or Text(Simplex)

When scanning both sides of each document: Color Document(Duplex), Black and White Document(Duplex) or Text(Duplex)


### • Automatic Duplex Scanning

Select this checkbox, then scan from the ADF (Auto Document Feeder) to scan both sides of the documents automatically. This function is available when a duplex type is selected for Document Type.

### • Output Settings...

Specify how to output the paper when scanning both sides from the ADF (Auto Document Feeder) with the Automatic Duplex Scanning checkbox selected.

Click Output Settings... to open the Output Settings dialog box in which you can select Output by back/front (Fast) or Output by page. Output by back/front (Fast) is selected by default.

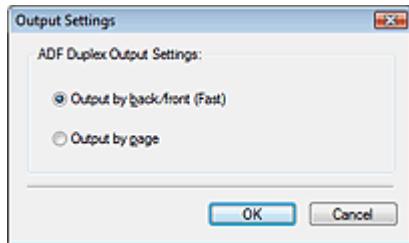

### • Output by back/front(Fast)

This is preferred when speed is required, as the documents are output in the back-to-front order.

To output the documents in the correct page order, select Output by page.

### • Output by page

Outputs the scanned documents in the correct page order.

### • Document Size


Select the size of the document to be scanned.

When scanning both sides of the documents automatically, select A4 or Letter.

### • Orientation...

Specify the orientation and stapling side of the documents to be scanned.

Click to open the Orientation when scanning from ADF dialog box.

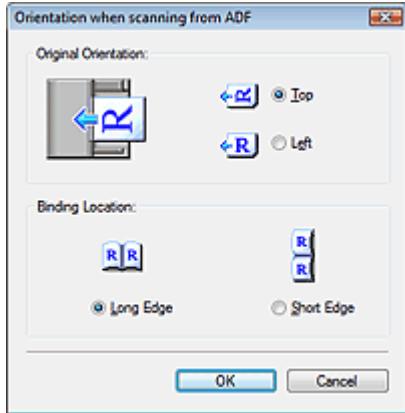

### Important

- Binding Location cannot be specified when a simplex type such as Color Document(Simplex) is selected for Document Type.

### • Scanning Resolution

Select the resolution at which to scan documents.

▶ Resolution

### Note

- The following scanning resolutions can be specified when Document Type is Text(Simplex) or Text(Duplex).  
300 dpi / 400 dpi

### • Descreen

Select this checkbox to reduce moire patterns.

Printed photos and pictures are displayed as a collection of fine dots. "Moire" is a phenomenon where uneven gradation or a stripe pattern appears when such photos or pictures printed with fine dots are scanned. Descreen is the function for reducing this moire effect.

### Important

- You cannot select this checkbox when Document Type is Text(Simplex) or Text(Duplex).

### Note

- Scanning takes longer than usual when you enable Descreen.

### • Unsharp Mask

Select this checkbox to emphasize the outline of the subjects and sharpen the image.

### Important

- You cannot select this checkbox when Document Type is Text(Simplex) or Text(Duplex).

### • Reduce Show-through

Select this checkbox to sharpen text in a document or reduce show-through in newspapers.

### Important

- You cannot select this checkbox when Document Type is Text(Simplex) or Text(Duplex).

### Note

- Select this checkbox when Document Type is text document and show-through is apparent in the scanned image.

### • Correct slanted document

Select this checkbox to detect the scanned text and correct the angle (within -0.1 to -10 degrees or +0.1 to +10 degrees) of the document.

### Important

- The inclination of the following types of documents may not be corrected, as the text cannot be detected correctly.

- Documents in which the text lines are inclined more than 10 degrees or the angles vary by line
- Documents containing both vertical and horizontal text
- Documents with extremely large or small fonts
- Documents with small amount of text
- Documents containing figures/images or hand-written text
- Documents containing both vertical and horizontal lines (tables)

## Note

- Scanning takes longer than usual when you enable Correct slanted document.

### • Detect the orientation of text documents and rotate images

Select this checkbox to detect the orientation of the document from the scanned text and rotate the scanned image to the correct orientation. Select the language of the document to be scanned in Document Language.

## Important

- This function may not work properly depending on the document language. Only text documents written in languages that can be selected from Document Language are supported.
- The orientation of the following types of documents may not be corrected, as the text cannot be detected correctly. In that case, select the scanned image in the Thumbnail window of the " [Stack of Documents \(ADF\) Screen \(Scan/Import Window\)](#) " and rotate it with Edit Tools.
  - Resolution is outside the range of 300 dpi to 600 dpi
  - Font size is outside the range of 8 points to 48 points
  - Documents containing special fonts, effects, italics, or hand-written text
  - Documents with patterned backgrounds

## Note

- Scanning takes longer than usual when you enable Detect the orientation of text documents and rotate images.

### • Document Language

Select the language of the document to be scanned.

### • Defaults

Restores the default settings.

[Page top↑](#)

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Save Dialog Box

### MP Navigator EX

## Save Dialog Box

The Save dialog box opens when you click Save in the Scan/Import window.

In the Save dialog box, you can make settings for saving images to a computer.

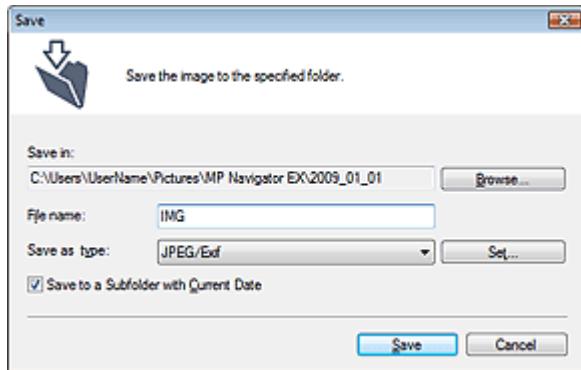

### • Save in

Displays the folder in which to save the scanned images. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

### Important

- When saving to a memory card, enable writing on the Card Slot of the machine. For details on how to enable writing, refer to "Setting Up the Card Slot as the Memory Card Drive of the Computer." With network connection, map the Card Slot as a network drive. See "Using the Card Slot over a Network" for details.

### • File name

Enter the file name of the image to be saved (up to 32 characters). When saving multiple files, 4 digits are appended to each file name.

### • Save as type

Select a file type to save the scanned images.

Select JPEG/Exif, TIFF or BMP.

### Important

- You cannot select JPEG/Exif when Document Type is Text(OCR), Text(Simplex) or Text(Duplex).

### • Set...

#### When Save as type is JPEG/Exif

You can specify a compression type for JPEG files. Select High(Low Compression), Standard or Low(High Compression).

### Important

- This setting is not available when the Compress scanned images when transferring checkbox is selected on the General tab of the Preferences dialog box.

### • Save to a Subfolder with Current Date

Select this checkbox to create a subfolder in the folder specified in Save in with the current date and save scanned files in it. A subfolder with a name such as "2009\_01\_01" (Year\_Month\_Date) will be created.

If this checkbox is not selected, files are saved directly in the folder specified in Save in.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Save as PDF file Dialog Box

### MP Navigator EX


## Save as PDF file Dialog Box

In the Save as PDF file dialog box, you can make advanced settings for saving scanned images as PDF files. You can save multiple documents as one PDF file or add pages to a PDF file created with MP Navigator EX.


### Important

- You cannot save images scanned at 10501 pixels or more in the vertical and horizontal directions.

### Dialog box that opens when Save as PDF file in the Scan/Import window is clicked

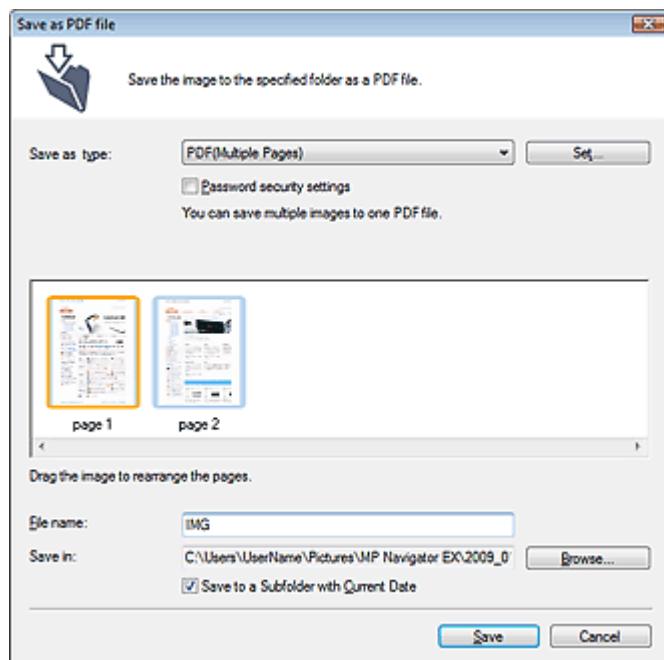

### Dialog box that opens when Save Selected Pages or Save All Pages is clicked in the Create/Edit PDF file window

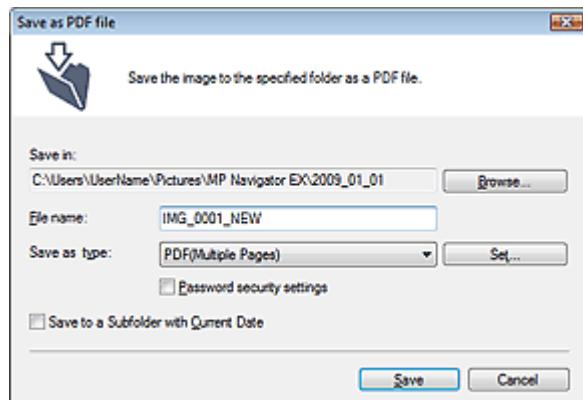

#### • Save as type

Select a PDF file type to save the scanned images.

- PDF

Save each of the selected images as a separate PDF file.

- PDF(Multiple Pages)

Save multiple images in one PDF file.

 Note

- PDF(Multiple Pages) is displayed when multiple images are selected.

- **PDF(Add Page)**

Add the scanned images to a PDF file. The images are added to the end of the PDF file. You cannot rearrange the pages of the PDF file to which the images are added.

 Important

- Images can only be added to PDF files created with MP Navigator EX. You cannot specify PDF files created with other applications. PDF files edited in other applications cannot be specified as well.
- If a password-protected PDF file is edited, the passwords will be deleted. Reset the passwords.

➡ [Setting Passwords for PDF Files](#)

- **Set...**

Make advanced settings for creating PDF files. See " [PDF Settings Dialog Box](#)" for details.

- **Password security settings**

Select this checkbox to open the Password Security -Settings dialog box in which you can set passwords for opening, editing and printing created PDF files.

➡ [Setting Passwords for PDF Files](#)

- **Add to**

This is displayed when you select PDF(Add Page) for Save as type and specify the PDF file to which images are added. To change the file, click Browse... to specify another one.

 Important

- Images can only be added to PDF files created with MP Navigator EX. You cannot specify PDF files created with other applications. PDF files edited in other applications cannot be specified as well.

- **File name**

Enter the file name of the image to be saved (up to 32 characters). When saving multiple files, 4 digits are appended to each file name.

- **Save in**

Displays the folder in which to save the PDF files. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

- **Save to a Subfolder with Current Date**

Select this checkbox to create a subfolder in the folder specified in Save in with the current date and save scanned files in it. A subfolder with a name such as "2009\_01\_01" (Year\_Month\_Date) will be created.

If this checkbox is not selected, files are saved directly in the folder specified in Save in.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > PDF Settings Dialog Box

### MP Navigator EX

## PDF Settings Dialog Box

In the PDF Settings dialog box, you can specify the PDF compression type and other advanced settings for creating PDF files.

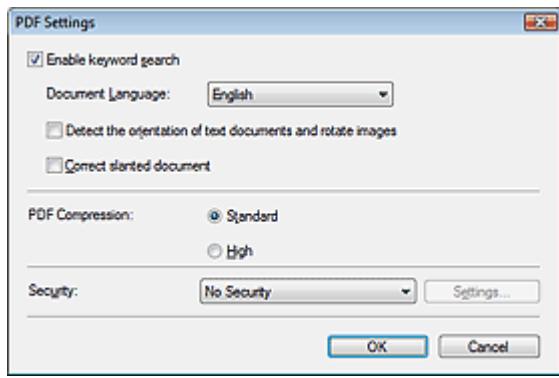

- **Enable keyword search**

Select this checkbox to convert characters in a document to text data. This will enable an easy search by keyword.

- **Document Language**

Select the language of the document to be scanned.

- **Detect the orientation of text documents and rotate images**

Select this checkbox to detect the orientation of the document from the scanned text and rotate the scanned image to the correct orientation.

#### Important

- This function may not work properly depending on the document language. Only text documents written in languages that can be selected from Document Language are supported.
- The orientation of the following types of documents may not be corrected, as the text cannot be detected correctly.
  - Resolution is outside the range of 300 dpi to 600 dpi
  - Font size is outside the range of 8 points to 48 points
  - Documents containing special fonts, effects, italics, or hand-written text
  - Documents with patterned backgrounds

- **Correct slanted document**

Select this checkbox to detect the scanned text and correct the angle (within -0.1 to -10 degrees or +0.1 to +10 degrees) of the document.

#### Important

- The inclination of the following types of documents may not be corrected, as the text cannot be detected correctly.
  - Documents in which the text lines are inclined more than 10 degrees or the angles vary by line
  - Documents containing both vertical and horizontal text
  - Documents with extremely large or small fonts
  - Documents with small amount of text
  - Documents containing figures/images or hand-written text
  - Documents containing both vertical and horizontal lines (tables)

- **PDF Compression**

Select a compression type for saving.

- **Standard**

It is recommended that you normally select this setting.

- **High**

Compresses the file size when saving, allowing you to reduce the load on your network/server.

### **Important**

- Highly compressed PDF images may degrade if you repeatedly save them with high compression.

### **Note**

- The following images can be compressed with high efficiency.
  - Images with resolutions within the range of 75 dpi to 600 dpi

### • **Security**

Set passwords for opening, editing and printing the created PDF files.

### **Important**

- In Windows 2000, Internet Explorer 5.5 Service Pack 2 or later is required to use this function.
- This function is not available when images are automatically saved after scanning, such as when scanning from the One-click Mode screen or scanning using the Operation Panel of the machine.

### **Note**

- Select Password Security and set passwords in the Password Security -Settings dialog box.  
 [Setting Passwords for PDF Files](#)

[Page top↑](#)

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Memory Card Screen (Scan/Import Window)

### MP Navigator EX

## Memory Card Screen (Scan/Import Window)

Point to Scan/Import in the Navigation Mode screen and click Memory Card, or click Memory Card in the Scan/Import window.

Open this window to import images (including PDF files created via scanning using the Operation Panel) saved on a memory card.

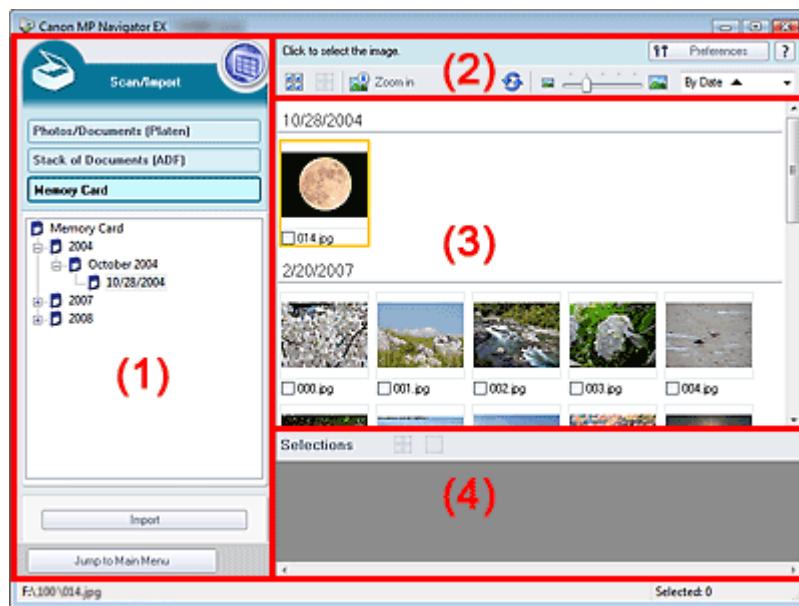

(1) Settings and Operation Buttons

(2) Toolbar

(3) Thumbnail Window

(4) Selected Images Area

### Settings and Operation Buttons

-  **(View & Use)**

Click this when you want to open images and PDF files saved on your computer. The View & Use window opens.

▶ [View & Use Window](#)

- **Photos/Documents (Platen)**

Click this when you want to scan photos, documents, magazines and other printed materials. The screen for scanning photos and documents appears.

▶ [Photos/Documents \(Platen\) Screen \(Scan/Import Window\)](#)

- **Stack of Documents (ADF)**

Click this when you want to scan multiple documents at one time from the ADF (Auto Document Feeder). The screen for scanning from the ADF appears.

▶ [Stack of Documents \(ADF\) Screen \(Scan/Import Window\)](#)


- **Memory Card**

Displays folders of images and PDF files (grouped by year, year/month and year/month/date) on a memory card in tree view. Select a folder to display its contents in the Thumbnail window to the right. File date is the captured or updated date.

- **Import**

Imports the selected images and open them in the View & Use window.

▶ [View & Use Window](#)

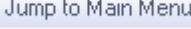-  **Jump to Main Menu**

Jumps to the Main Menu.

## Toolbar

-  **Preferences**

The Preferences dialog box opens. In the Preferences dialog box, you can make advanced settings to MP Navigator EX functions.

▶ [Preferences Dialog Box](#)

-  **(Guide)**

Opens this guide.

- **Edit Tools**

-  **(Select All)**

Selects all images in the Thumbnail window.

-  **(Cancel All)**

Cancels all image selections in the Thumbnail window.

-  **Zoom in**

Enlarges the target image (outlined in orange). You can also enlarge the image by double-clicking it. You can check all pages when you select a PDF file.

-  **(Refresh)**

Refreshes the Thumbnail window contents.

-  **(Display Size)**

Changes the size of images in the Thumbnail window.

-  **(Sort by)**

Sorts the images in the Thumbnail window by date (ascending or descending).

## Thumbnail Window

- **Thumbnail Window**

Images saved on the memory card are displayed by year or year/month.

When you select the checkbox of an image, the image appears in the Selected Images area.

## Selected Images Area

-  **(Cancel All)**

Cancels the selection of all images in the Selected Images area.

-  **(Cancel Selection)**

Cancels the selection of the target image (outlined in orange) in the Selected Images area.

- **Selected Images Area**

Images selected in the Thumbnail window are displayed.

## Related Topic

- ▶ [Importing Images Saved on a Memory Card](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > View & Use Window

### MP Navigator EX


## View & Use Window

In the Navigation Mode screen, point to View & Use and click My Box (Scanned/Imported Images), Specify Folder or Recently Saved Images.

Open this window to display or use scanned images or images saved on a computer.

### Important

- For PDF files, only those created with MP Navigator EX are displayed. You cannot display PDF files created with other applications. PDF files edited in other applications cannot be displayed as well.

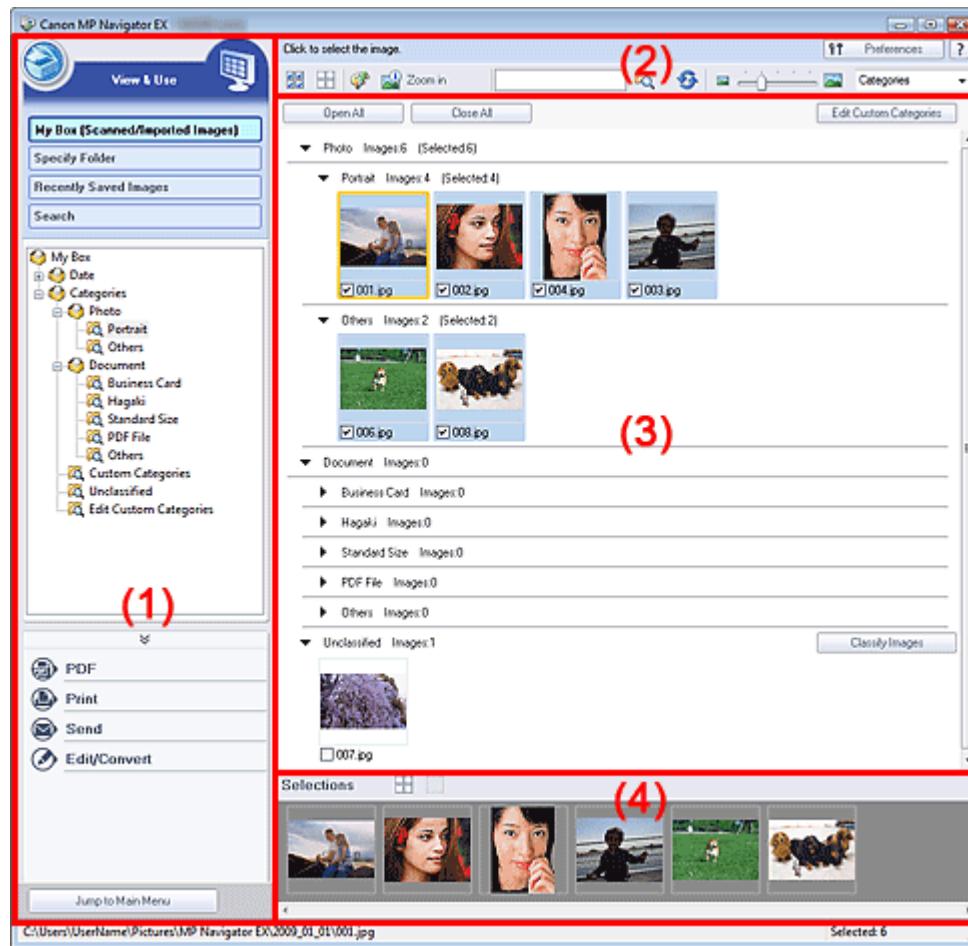

(1) Settings and Operation Buttons

(2) Toolbar

(3) Thumbnail Window

(4) Selected Images Area

### Settings and Operation Buttons

-  (Scan/Import)

Click this when you want to scan photos, documents, magazines and other printed materials. The Scan/Import window opens.

▶ [Photos/Documents \(Platen\) Screen \(Scan/Import Window\)](#)

- My Box (Scanned/Imported Images)

Displays folders of images (grouped by year, year/month, year/month/date and category) in My Box in tree view. Select a folder to display its contents in the Thumbnail window to the right.

Image date is the scanned, captured or updated date.

- **Specify Folder**

Displays all hard disks and folders in tree view. Select a folder to display images in the Thumbnail window to the right.

- **Recently Saved Images**

"Scanned/Imported Images" and images that have been "Attached to E-mail" or "Sent to Application" recently are displayed in tree view by date. For "Scanned/Imported Images", "From Scanner" and "From Memory Card" are displayed separately. Select a Year/Month/Day folder to display images by date in the Thumbnail window to the right.

Image date is the scanned or sent date.

- **Search**

The advanced search options opens.

➔ [Searching Images](#)

- **Task Button Area**

Specify what to do with the selected images. See the corresponding sections below for details on each button.

➔ [Creating/Editing PDF Files](#)

➔ [Printing Documents](#)

➔ [Printing Photos](#)

➔ [Sending via E-mail](#)

➔ [Editing Files](#)

### Note

- The buttons in the Task Button area are displayed when the corresponding applications are installed.

●  [Jump to Main Menu](#)

**Jump to Main Menu**

Jumps to the Main Menu.

## Toolbar

-  [Preferences](#)

**Preferences**

The Preferences dialog box opens. In the Preferences dialog box, you can make advanced settings to MP Navigator EX functions.

➔ [Preferences Dialog Box](#)

-  [\(Guide\)](#)

Opens this guide.

- **Edit Tools**

-  [\(Select All\)](#)

Selects all images in the Thumbnail window.

-  [\(Cancel All\)](#)

Cancels all image selections in the Thumbnail window.

-  [\(Image Correction/Enhancement\)](#)

Allows you to correct the target image (outlined in orange). Click this button to open the Correct/Enhance Images window in which you can correct/enhance images and also adjust the brightness, contrast, etc.

➔ [Correct/Enhance Images Window](#)

### Important

- Image correction/enhancement cannot be applied to PDF files or black and white binary files.

-  [Zoom in](#)

Enlarges the target image (outlined in orange). You can also enlarge the image by double-

clicking it. You can check all pages when you select a PDF file.

You can also check file information such as file name, date, size and security setting. A lock icon appears for PDF files with Document Open Password set.

#### ▶ Opening/Editing Password-protected PDF Files

-  (Search)  
Enter a word or phrase included in the file name, Exif information or PDF text of the image you want to search for, then click  (Search button). For Exif information, text in Maker, Model, Description and User Comment is searched.

#### Note

- Search images in My Box (Scanned/Imported Images), Recently Saved Images or a selected folder and its subfolders.

-  (Refresh)  
Refreshes the Thumbnail window contents.
-  (Display Size)  
Changes the size of images in the Thumbnail window.
-  (Sort by)  
Sorts the images in the Thumbnail window by category, date (ascending or descending) or name (ascending or descending).  
Images can be sorted by category only when My Box (Scanned/Imported Images) or Specify Folder is displayed.

## Thumbnail Window

### ● Thumbnail Window

Images scanned from the Platen are displayed.

When you select the checkbox of an image, the image appears in the Selected Images area.

#### Important

- In Windows 2000, Internet Explorer 5.5 Service Pack 2 or later is required to open password-protected PDF files.

#### Note

- A lock icon appears for PDF files with Document Open Password set.
- Images may appear as "?" in the following cases.
  - Opening unsupported images
  - File size is too large and there is not enough memory to display the image
  - The file is corrupted

## When Images are Sorted by Categories

Images scanned from the Platen are displayed by category.

#### Note

- Some images may not be detected correctly and thus may be classified into wrong categories. In that case, drag and drop an image and move it from one category to another.

### ● Category name Images: N (Selected: n)



- Category name

The following categories are provided.

Photos: Portrait, Others

Documents: Business Card, Hagaki, Standard Size, PDF File, Others

Custom categories: Displays your custom categories.

Unclassified: Displays images that have not yet been classified.

- **Images: N**

The number of images classified into the category is displayed.

- **(Selected: n)**

The number of images with the checkbox selected is displayed.

### Note

- This portion is displayed only when one or more images are selected.

-  **Open All**

Displays all images.

-  **Close All**

Hides all images.

-  **Edit Custom Categories**

### **Edit Custom Categories**

When My Box (Scanned/Imported Images) or Specify Folder is displayed, the Edit Custom Categories dialog box opens.

In the Edit Custom Categories dialog box, you can add/delete categories displayed in Custom Categories.

See "["Classifying Images into Categories"](#) for details.

-  **Classify Images**

### **Classify Images**

Images imported from hard disks or memory cards appear in Unclassified. Click Classify Images to classify them automatically.

This button is displayed only when My Box (Scanned/Imported Images) or Specify Folder is displayed.

### Note

- Classification may take time if there are many images to classify.

## Selected Images Area



### **(Cancel All)**

Cancels the selection of all images in the Selected Images area.



### **(Cancel Selection)**

Cancels the selection of the target image (outlined in orange) in the Selected Images area.

- **Selected Images Area**

Images selected in the Thumbnail window are displayed.

## Related Topic

▶ [Opening Images Saved on a Computer](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Create/Edit PDF file Window

### MP Navigator EX

## Create/Edit PDF file Window


Click PDF in the View & Use window, then click Create/Edit PDF file on the list to open the Create/Edit PDF file window.

In the Create/Edit PDF file window, you can add/delete pages and rearrange the page order of PDF files created with MP Navigator EX.

### Important

- You cannot save images scanned at 10501 pixels or more in the vertical and horizontal directions.
- If a password-protected PDF file is edited, the passwords will be deleted. Reset the passwords.

▶ [Setting Passwords for PDF Files](#)

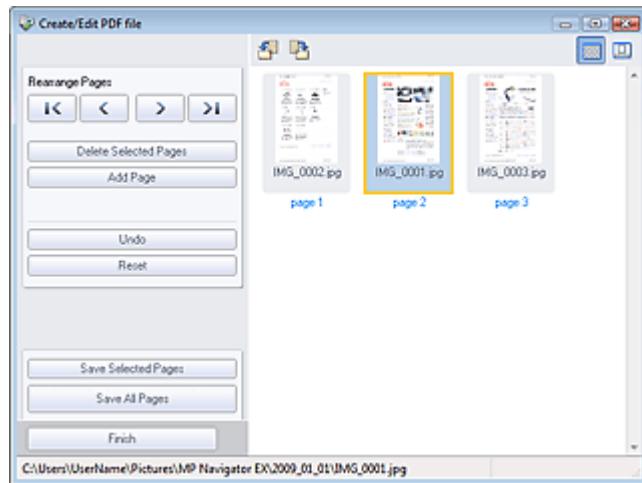

### • Rearrange Pages

You can move the selected image (outlined in orange).



- Moves the selected image to the top.



- Moves the selected image up one page.



- Moves the selected image down one page.



- Moves the selected image to the end.

### Note

- You can also drag and drop the image to rearrange the order.

### • Delete Selected Pages

Deletes the selected image.

### • Add Page

Allows you to select and add an existing PDF file.

### Note

- A password will be required to add a password-protected PDF file.

- **Undo**

Cancels the latest change made.

- **Reset**

Cancels all the changes made.

- **Save Selected Pages**

Opens the Save as PDF file dialog box. Specify the save settings. Only the selected page is saved.

### Note

- When multiple pages are selected, a multiple-page PDF file is created.
- See "[Save as PDF file Dialog Box](#)" for details on the Save as PDF file dialog box.

- **Save All Pages**

Opens the Save as PDF file dialog box. Specify the save settings. All PDF files in the list will be saved as one PDF file.

- **Finish**

Closes the Create/Edit PDF file window.

- **Toolbar**

-  **(Rotate Left)**

Rotates the file 90 degrees counter-clockwise.


-  **(Rotate Right)**

Rotates the file 90 degrees clockwise.

-  **(Preview Mode)**

Switches to Preview Mode.

The selected file appears in Preview.

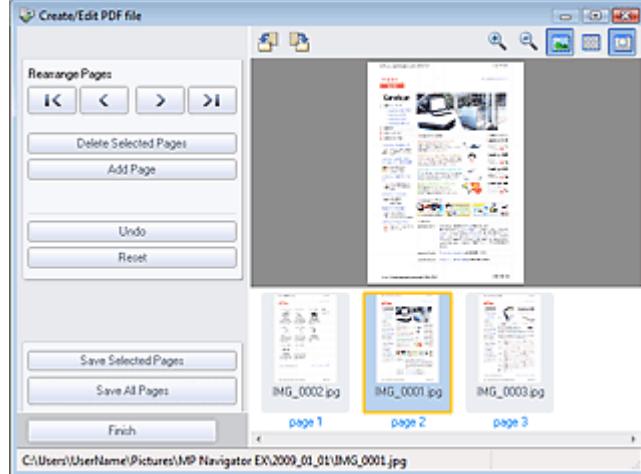

-  **(Enlarge)**

Enlarges the image displayed in Preview.

-  **(Reduce)**

Reduces the image displayed in Preview.

-  **(Full-screen)**

Enlarges/reduces the image to display it fully in Preview.

-  **(Thumbnail Mode)**

Switches to Thumbnail Mode. Thumbnails of files are displayed.

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Print Document Dialog Box

### MP Navigator EX


## Print Document Dialog Box

Click Print in the View & Use window, then click Print Document on the list to open the Print Document dialog box.

In the Print Document dialog box, you can make advanced settings for printing multiple scanned images at one time.

### Note

- The setting items in the Print Document dialog box vary by printer.

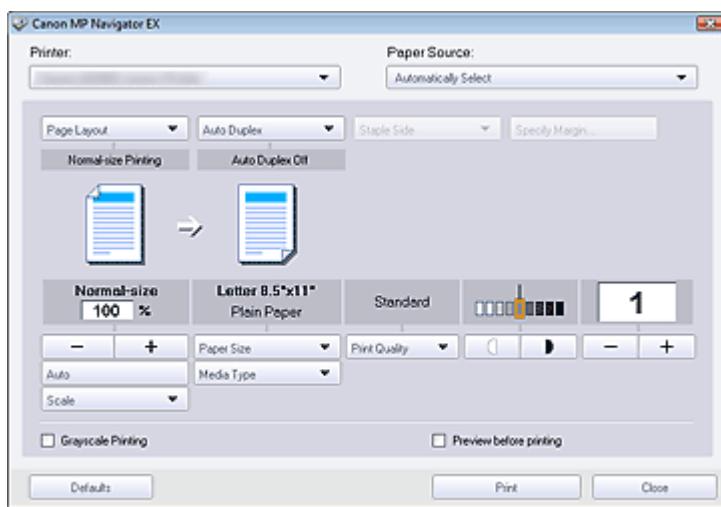

#### • Printer

Select the printer to use.

#### • Paper Source

Select paper source.

#### • Page Layout

Select a print type.

- **Normal-size Printing**

Print one image per sheet.

- **Scaled Printing**

Print images at the selected scale (enlarged or reduced).

- **Fit-to-Page Printing**

Print an image at the paper size (enlarged or reduced).

- **Borderless Printing**

Print the image on an entire sheet of paper without margins.

- **Page Layout Printing (2 on 1)**

Layout and print two images on a sheet of paper.

- **Page Layout Printing (4 on 1)**

Layout and print four images on a sheet of paper.

- **Auto Duplex**

Print on both sides of a sheet of paper automatically.

### Note

- Auto Duplex is displayed when Page Layout is Normal-size Printing or Scaled Printing, and available when Media Type is Plain Paper.

- **Staple Side**

Select a stapling side from the list.

 **Note**

- Staple Side is available when Auto Duplex On is set.

- **Specify Margin...**

Specify the width of the margin (0 mm to 30 mm).

 **Note**

- Specify Margin... is available when Auto Duplex On is set.
- If a page does not fit in one page due to the Specify Margin... setting, the document will be reduced for printing.

- **Enlarge/Reduce**

Enlarge or reduce images to print.



- Print a reduced or enlarged image by specifying a scale in increments of 1%.

- **Auto**

Scale is adjusted automatically according to the detected paper width and the selected paper size.  
Image may be printed rotated 90 degrees depending on its size.

- **Scale**

Select a scale from the list.

 **Important**

- At normal-size (100%), some images may be printed small or with some portions cropped. In that case, select Auto to resize the print in proportion to the paper size.

- **Paper Size**

Select the size of paper for printing. Match the size to the size of the paper set in the machine.

 **Note**

- Selectable paper sizes depend on the selected printer.

- **Media Type**

Select the type of paper for printing. Print quality may be fixed depending on the paper type.

 **Note**

- Selectable paper types depend on the selected printer.

- **Print Quality**

Select the print quality.

- **Density**

Click  to select the print density.

- **Copies**

Click  to select the number of copies to be printed.

- **Grayscale Printing**

Select this checkbox to print the document in black and white.

- **Preview before printing**

Select this checkbox to display the print result before printing.

- **Defaults**

Restores the default settings.

- **Print**

Start printing with the specified settings.

 **Note**

- To cancel while spooling, click Cancel. To cancel while printing, select the printer icon on the taskbar and click Cancel Printing.
- 

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Print Photo Dialog Box


### MP Navigator EX

## Print Photo Dialog Box

Click Print in the View & Use window, then click Print Photo on the list to open the Print Photo dialog box.

### Important

- The Print Photo dialog box will not open if Easy-PhotoPrint EX is installed. Easy-PhotoPrint EX starts instead.
- PDF files cannot be printed.

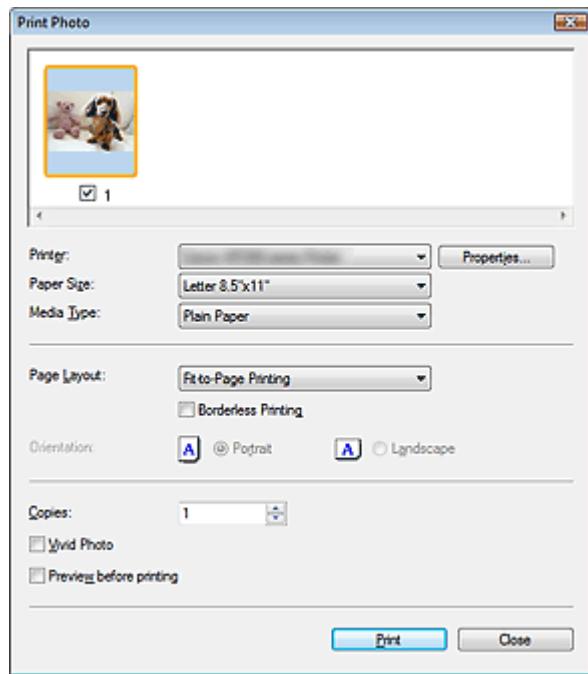

### Note

- Double-click an image to display it in a different window.

- **Printer**

Select the printer to use.

- **Properties...**

Displays the selected printer's advanced setting screen.

- **Paper Size**

Select the size of paper for printing. Match the size to the size of the paper set in the machine.

- **Media Type**

Select the type of paper for printing. Print quality may be fixed depending on the paper type.

- **Page Layout**

Select a print type.

- **Normal-size Printing**

Print one image per sheet.

- **Fit-to-Page Printing**

Print an image at the paper size (enlarged or reduced).

- **Borderless Printing**

Select this checkbox to print the image on an entire sheet of paper without margins.

### Important

- Page Layout setting will be disabled when you select Borderless Printing.

- This setting is only available with printers that support borderless printing.

- **Orientation**

Specify the print orientation.

 **Important**

- This setting is available only when Page Layout is Normal-size Printing. For others, the image is automatically rotated according to the aspect ratio of the paper.

- **Copies**

Specify the number of copies to print.

- **Vivid Photo**

Select this checkbox to print the image in vivid colors.

- **Preview before printing**

Select this checkbox to display the print result before printing.

- **Print**

Starts printing.

 **Note**

- Only the images in the Thumbnail window with the checkbox selected are printed.

- **Close**

Closes the dialog box without printing the photo.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Send via E-mail Dialog Box

### MP Navigator EX


## Send via E-mail Dialog Box

Click Send in the View & Use window, then click Attach to E-mail on the list to open the Send via E-mail dialog box.

In the Send via E-mail dialog box, you can make advanced settings for attaching images to e-mail.

### Important

- MP Navigator EX is compatible with the following e-mail software programs:
    - Windows Mail (Windows Vista)
    - Outlook Express (Windows XP/Windows 2000)
    - Microsoft Outlook
- (If an e-mail software program does not operate properly, check that the program's MAPI is enabled.  
To enable MAPI, refer to the manual of the e-mail software program.)

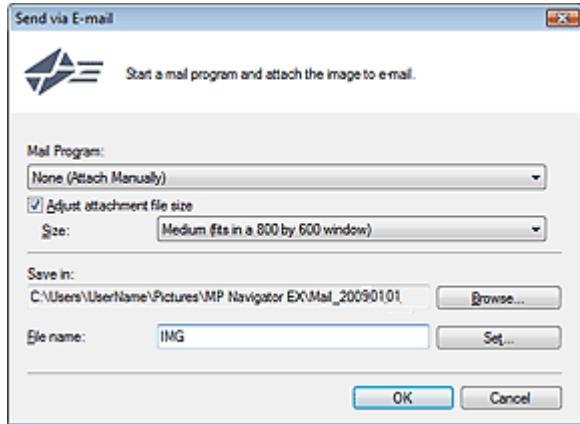

#### • Mail Program

The e-mail software program set up via Preferences in the Navigation Mode screen is displayed.  
Select the e-mail software program you want to use.

#### • Adjust attachment file size

When Save as type is JPEG, selecting this checkbox allows you to resize the images. Select a size from Size.

#### • Save in

Displays the folder in which to save the images. To change the folder, click Browse... to specify another one. If resized, the resized images are saved.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

#### • File name

Enter the file name of the image to be attached (up to 32 characters). When saving multiple files, 4 digits are appended to each file name.

#### • Set...

You can specify a compression type for JPEG files.

Select High(Low Compression), Standard or Low(High Compression).

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Correct/Enhance Images Window

### MP Navigator EX

## Correct/Enhance Images Window

Click  (Image Correction/Enhancement) in the View & Use window or click Fix photo images in the Task Button area to open the Correct/Enhance Images window.

In the Correct/Enhance Images window, you can make advanced settings including image correction/enhancement and brightness/contrast adjustment.

You can also display the source image and corrected image side by side for comparison.

### Important

- Image correction/enhancement cannot be applied to PDF files or black and white binary files.

### Note

- The Correct/Enhance Images window can also be opened by clicking  (Image Correction/Enhancement) in the Zoom in dialog box.
- It may take a while to correct large images.



(1) Task Area

(2) Toolbar

### Task Area


Available tasks and settings vary between the Auto and Manual tabs.

Click Auto or Manual to open the corresponding tab.

### Auto Tab

Use the functions in the Auto tab to apply corrections and enhancements to the entire image.

See "Correcting/Enhancing Images Automatically" for details.

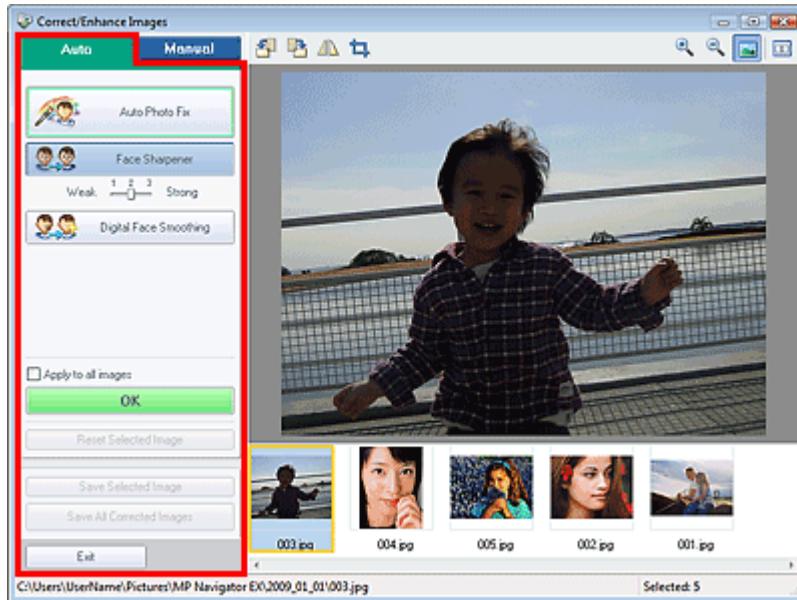

- **Auto Photo Fix**

Applies automatic corrections suitable for photos.

- **Face Sharpener**

Sharpens out-of-focus faces. You can adjust the effect level using the slider.

- **Digital Face Smoothing**

Enhances skin beautifully by removing blemishes and wrinkles. You can adjust the effect level using the slider.

- **Apply to all images**

Applies the correction to all images.

- **OK**

Applies the selected effect to the selected image or all images.

- **Reset Selected Image**

Cancels all corrections and enhancements applied to the selected image.

- **Save Selected Image**

Saves the selected image.

- **Save All Corrected Images**

Saves all the corrected images displayed in the thumbnail list.

- **Exit**

Closes the Correct/Enhance Images window.


## Manual Tab

Use Adjust to adjust brightness and contrast, or to sharpen the entire image.

Use Correct/Enhance to correct/enhance specific areas.

See "[Correcting/Enhancing Images Manually](#)" for details.

## Adjustment

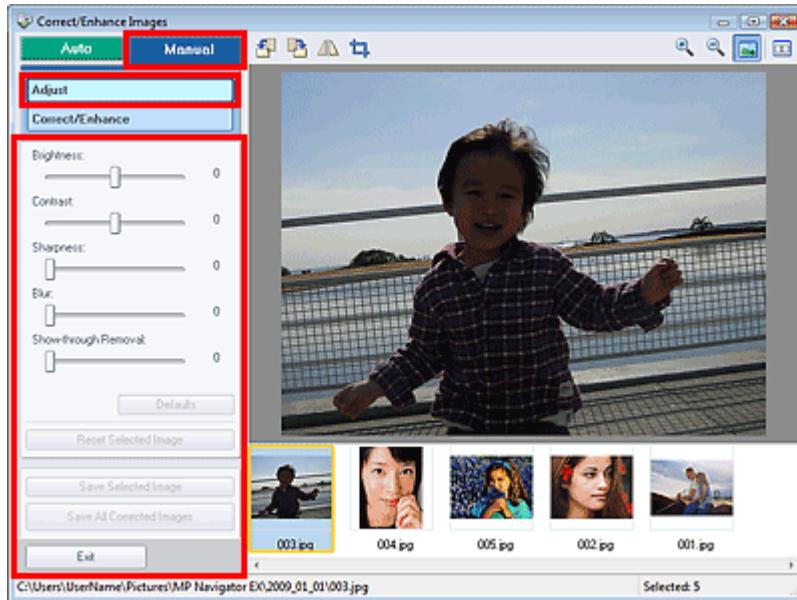

- **Brightness**

Adjusts the overall image brightness.

Move the slider to the left to darken and right to brighten the image.

- **Contrast**

Adjusts the contrast of the image. Adjust the contrast when the image is flat due to lack of contrast.

Move the slider to the left to decrease and right to increase the contrast of the image.

- **Sharpness**

Emphasizes the outline of the subjects to sharpen the image. Adjust the sharpness when the photo is out of focus or text is blurred.

Move the slider to the right to sharpen the image.

- **Blur**

Blurs the outline of the subjects to soften the image.

Move the slider to the right to soften the image.

- **Show-through Removal**

Removes show-through of text from the reverse side or removes the base color. Adjust the show-through level to prevent text on the reverse side of thin document or the base color of the document from appearing on the image.

Move the slider to the right to increase the show-through removal effect.

- **Defaults**

Resets all adjustments (brightness, contrast, sharpness, blur, and show-through removal).

- **Reset Selected Image**

Cancels all corrections, enhancements and adjustments applied to the selected image.

- **Save Selected Image**

Saves the selected image.


- **Save All Corrected Images**

Saves all the corrected images displayed in the thumbnail list.

- **Exit**

Closes the Correct/Enhance Images window.

## Correction/Enhancement

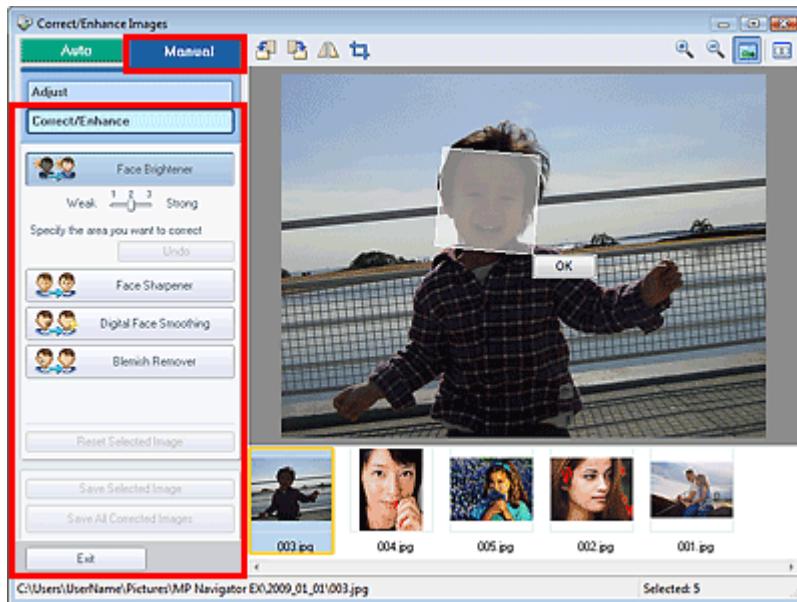

- **Face Brightener**

Corrects the entire image so that the selected facial area is brightened. You can adjust the effect level using the slider.

- **Undo**

Cancels the latest correction.

- **Face Sharpener**

Corrects the entire image to sharpen the face. You can specify the area you want to apply the effect to. You can adjust the effect level using the slider.

- **Digital Face Smoothing**

Enhances skin beautifully by removing blemishes and wrinkles. You can specify the area you want to apply the effect to. You can adjust the effect level using the slider.

- **Blemish Remover**

Removes moles. You can specify the area you want to apply the effect to.

- **Reset Selected Image**

Cancels all corrections, enhancements and adjustments applied to the selected image.

- **Save Selected Image**

Saves the selected image.

- **Save All Corrected Images**

Saves all the corrected images displayed in the thumbnail list.

- **Exit**

Closes the Correct/Enhance Images window.

- **OK**

Applies the selected effect to the specified area.

## Toolbar

- **Toolbar**

-  **(Rotate Left)**

Rotates the image 90 degrees counter-clockwise.

-  **(Rotate Right)**

Rotates the image 90 degrees clockwise.


-  **(Invert)**

Inverts the image horizontally.

-  **(Trimming)**

Trimming is the act of selecting the area you want to keep in a photo and discarding the rest. In

the displayed window, drag the white frame to specify the trimming area. Move the cursor inside the white frame and drag to move the trimming area.

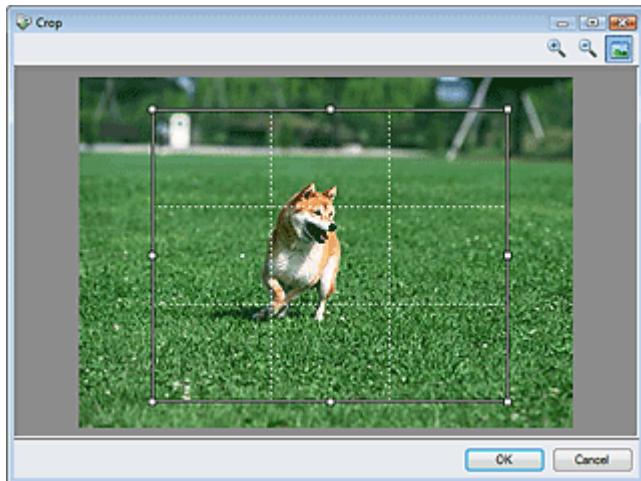

### Note

- Place the main subjects along the broken white lines or at the intersections to create a balanced image.

-  **(Enlarge)**

Enlarges the displayed image.

-  **(Reduce)**

Reduces the displayed image.


-  **(Full-screen)**

Enlarges/reduces the image to display it full-screen.

-  **(Compare)**

Opens the source image for comparison.

The source image appears on the left and the corrected image appears on the right.

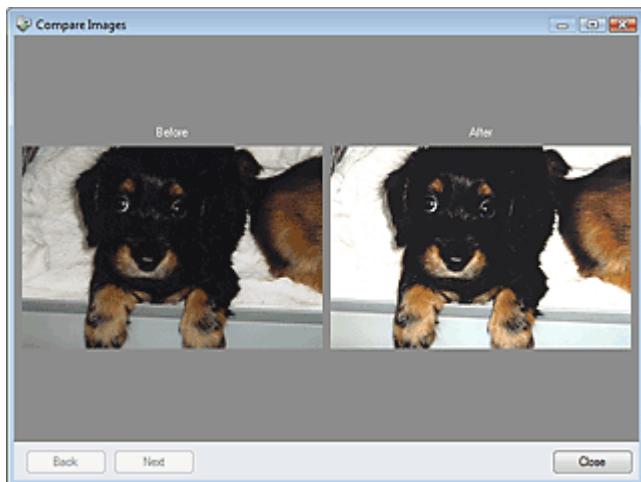

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > One-click Mode Screen

### MP Navigator EX

## One-click Mode Screen

Click  (Switch Mode) at the bottom left of the Navigation Mode screen to display the One-click Mode screen.

You can complete from scanning to saving, etc. at one time by simply clicking the corresponding icon.



- **Save**

Scan and save documents. Document type is automatically detected. File format is automatically set.  
Files are saved to a computer.

When you click this icon, the Save dialog box opens and you can specify the scan/save settings.

▶ [Save Dialog Box \(One-click Mode Screen\)](#)

- **PDF**

Scan documents and save them as PDF files.

When you click this icon, the PDF dialog box opens and you can specify the scan/save and application settings.

▶ [PDF Dialog Box](#)

- **Mail**

Scan documents or photos and attach them to e-mail.

When you click this icon, the Mail dialog box opens and you can specify the scan/save and e-mail software program settings.

▶ [Mail Dialog Box](#)

- **OCR**

Scan text documents then extract text in the image and display it in Notepad (included with Windows).

When you click this icon, the OCR dialog box opens and you can specify the scan/save settings.

▶ [OCR Dialog Box](#)

### Note

- For further procedures, refer to the application's manual.

- **Custom**

Scan documents and open them in a specified application. Document type is automatically detected.

When you click this icon, the Custom dialog box opens and you can specify the scan/save and application settings.

▶ [Custom Dialog Box](#)

### Note

- For further procedures, refer to the application's manual.

-  **(Switch Mode)**

Switches to Navigation Mode. The Navigation Mode screen appears.

▶ [Custom Scan with One-click Tab](#)

-  **Preferences**

### Preferences

The Preferences dialog box opens. In the Preferences dialog box, you can make advanced settings to MP Navigator EX functions.

▶ [Preferences Dialog Box](#)

-  **(Guide)**

Opens this guide.

## Important

- The following restrictions apply when you scan with Document Type set to Auto Mode in the Save or Custom dialog box.  
When you want to convert text in the scanned image to text data, specify Document Type (do not select Auto Mode).

## Related Topic

- ▶ Easy Scanning with One-click

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Save Dialog Box (One-click Mode Screen)

### MP Navigator EX

## Save Dialog Box (One-click Mode Screen)

Click Save to PC on the Custom Scan with One-click tab or click Save in the One-click Mode screen to open the Save dialog box.

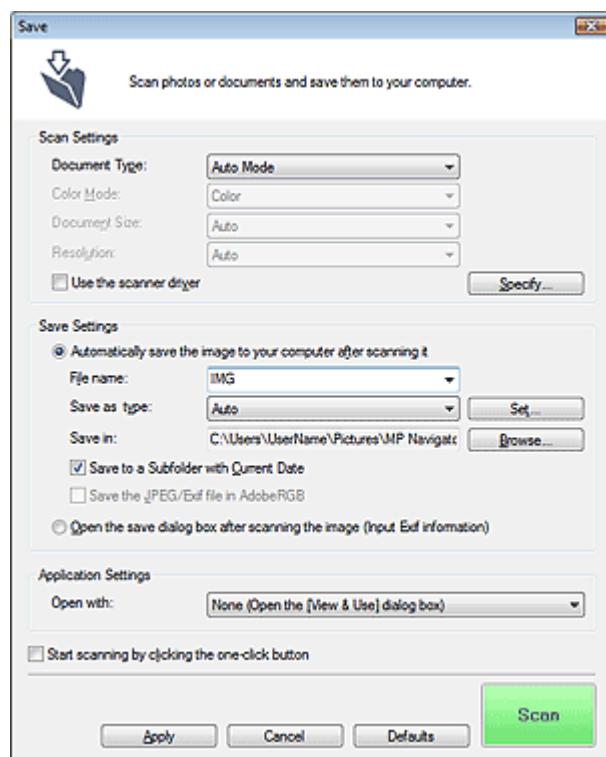

### Scan Settings

#### • Document Type

Select the type of document to be scanned. When Auto Mode is selected, the document type is automatically detected. In that case, Color Mode, Document Size and Resolution are automatically set as well.

#### Important

- The following types of documents cannot be scanned correctly with Auto Mode. In that case, specify Document Type.
  - Documents other than photos, Hagaki, business cards, magazines, newspapers, text documents and CD/DVD
  - A4 photos
  - Text documents smaller than 2L (5 inches x 7 inches) (127 mm x 178 mm), such as paperback pages with the spine cut off
  - Documents printed on thin white paper
  - Wide documents such as panoramic photos
- Reflective CD/DVD labels may not be scanned properly.
- Place documents correctly according to the type of document to be scanned. Otherwise, documents may not be scanned correctly.  
See "Placing Documents" for details on how to place documents.
- Scanning takes longer than usual when scanning from the ADF (Auto Document Feeder) for the first time with Auto Mode.
- When scanning both sides of the documents from the ADF (Auto Document Feeder) with Auto Mode, you can scan A4 or Letter-size documents.
- When scanning two or more documents from the ADF (Auto Document Feeder), you cannot scan documents of different sizes at one time even if Auto Mode is set.

## Note

- To reduce moire, set Document Type to Magazine.

### ● Color Mode


Select how to scan the document.

### ● Document Size

Select the size of the document to be scanned.

When scanning both sides of the documents automatically from the ADF (Auto Document Feeder), select A4 or Letter.

When you select Custom, a screen in which you can specify the document size appears. Select a Units, then enter the Width and Height and click OK.

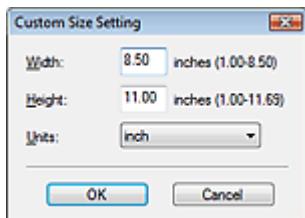

## Important

- When you select Auto Detect, the image may not be scanned at the correct position and size. In that case, change the size to the actual document size (A4, Letter, etc.) and align a corner of the document with the corner at the arrow of the Platen.

### ● Resolution

Select the resolution at which to scan documents.

▶ [Resolution](#)

### ● Use the scanner driver

Select this checkbox to display the ScanGear (scanner driver) screen and make advanced scan settings.

Color Mode, Document Size, Resolution and other settings in the Save dialog box will be disabled. Specify these settings in the ScanGear (scanner driver) screen.

### ● Specify...

Click to open the Scan Settings dialog box in which you can make advanced scan settings. You can also specify the settings for scanning both sides of the documents at one time from the ADF (Auto Document Feeder).

▶ [Scan Settings Dialog Box](#)

## Save Settings

### ● Automatically save the image to your computer after scanning it

Select this to save the images to your computer as specified after scanning them.

The File name, Save as type and Save in settings will be displayed.

## Important

- If you select this function, you will not be able to set passwords for PDF files.

### ● File name

Enter the file name of the image to be saved (up to 32 characters). When saving multiple files, 4 digits are appended to each file name.

### ● Save as type

Select a file type to save the scanned images.

Select Auto, JPEG/Exif, TIFF or BMP. Auto is displayed when Document Type is Auto Mode. When saving as PDF files, select PDF, PDF(Multiple Pages) or PDF(Add Page).

## Important

- When Document Type is Auto Mode and Save as type is Auto, the file format may differ depending on how you place the document.  
See "[Placing Documents](#)" for details on how to place documents.
- Large documents (such as A4 photos) that cannot be placed away from the edges/arrow of the Platen may not be saved in the correct file format when Save as type is Auto. In that case, select

a file format suitable for the document to be scanned.

## Note

- When Auto is selected, files are saved in the following formats according to the document type.  
Photos, Hagaki, business cards and CD/DVD: JPEG  
Magazines, newspapers and text documents: PDF  
You can change the file format from Set....  
Images saved as PDF files may not open depending on the application. In that case, select an option other than PDF in Save as type.  
■ If you select JPEG/Exif, the Save the JPEG/Exif file in AdobeRGB checkbox will be selectable.

### ● Set...

#### When Save as type is Auto

You can specify the file format in which to save images. Select a file format for Document and Photo each.

#### Important

- You cannot select a compression type for JPEG files when the Compress scanned images when transferring checkbox is selected on the General tab of the Preferences dialog box.

#### When Save as type is JPEG/Exif

You can specify a compression type for JPEG files. Select High(Low Compression), Standard or Low(High Compression).

#### Important

- This setting is not available when the Compress scanned images when transferring checkbox is selected on the General tab of the Preferences dialog box.

#### When Save as type is PDF, PDF(Multiple Pages) or PDF(Add Page)

Make advanced settings for creating PDF files. See " [PDF Settings Dialog Box](#)" for details.

### ● Save in

Displays the folder in which to save the scanned images. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

### ● Save to a Subfolder with Current Date

Select this checkbox to create a subfolder in the folder specified in Save in with the current date and save scanned files in it. A subfolder with a name such as "2009\_01\_01" (Year\_Month\_Date) will be created.

If this checkbox is not selected, files are saved directly in the folder specified in Save in.

### ● Save the JPEG/Exif file in AdobeRGB

Select this checkbox to save the images in colors that correspond to Adobe RGB.

#### Important

- This function is available only when Save as type is JPEG/Exif.
- This function is not available if the Adobe RGB profile is not installed.

## Note

- You cannot select this setting if the Use the scanner driver checkbox is selected.
- When you save an image with the Save the JPEG/Exif file in AdobeRGB checkbox selected, an underscore is added to the beginning of the file name. (Example: \_Image0001.jpg)

### ● Open the save dialog box after scanning the image (Input Exif information)

Select this to open the Save dialog box after scanning the images and specify the save settings such as destination folder, file name and Exif information.

▶ Save Dialog Box

## Note

- To set passwords for PDF files, select Open the save dialog box after scanning the image (Input Exif information). After scanning, you can set the passwords in the Save dialog box.  
▶ Setting Passwords for PDF Files

## Application Settings

- **Open with**

You can select whether to open the View & Use window or Explorer after saving the images.

- **Start scanning by clicking the one-click button**

Select this checkbox to start scanning when you click an icon.

- **Apply**

Saves and applies the specified settings.

Click Cancel instead of Apply to cancel the specified settings.

- **Cancel**

Cancels the specified settings. The current screen closes.

- **Defaults**

Returns all settings in the screen to their defaults.

- **Scan**

Scans and saves documents with the specified settings.

When Save as type is Auto, a confirmation appears. Click Open Manual to open this guide (if it is installed).

[Page top↑](#)

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Scan Settings Dialog Box

### MP Navigator EX

## Scan Settings Dialog Box

Make advanced settings for scanning with one-click or scanning using the Operation Panel of the machine.

The Scan Settings dialog box opens when you click Specify... in a dialog box for making scan settings.

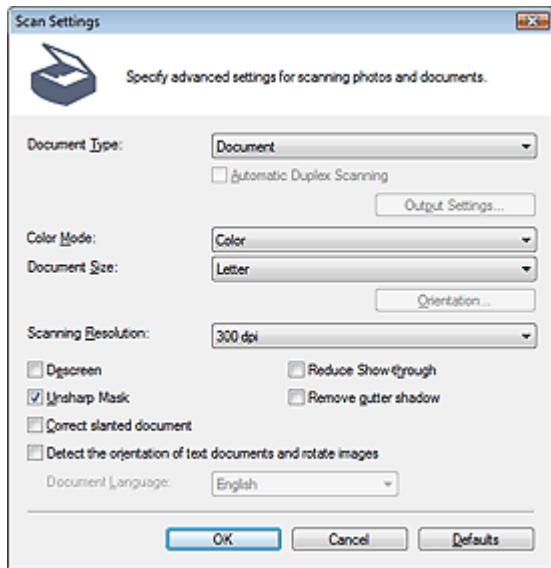

### Note

- The displayed items vary by document type and how the screen was opened.

#### • Document Type

Select the type of document to be scanned. When Auto Mode is selected, the document type is automatically detected.

In that case, Color Mode, Document Size, etc. are automatically set as well.

### Important

- To scan correctly, select a document type that matches the document to be scanned.
- When opened from the Scanner Button Settings tab in the Preferences dialog box, the Document Type specified in the Scanner Button Settings tab is displayed and cannot be changed in this dialog box.

#### • Automatic Duplex Scanning/Duplex scan when scanning from ADF

Select this checkbox, then scan from the ADF (Auto Document Feeder) to scan both sides of the documents automatically.


When Document Type is Auto Mode, the checkbox changes to Duplex scan when scanning from ADF. You can select whether to scan both sides or one side of the documents from the ADF (Auto Document Feeder) when scanning by automatically detecting the document type. Select this checkbox to scan both sides. Deselect it to scan one side. This checkbox is not selected by default.

### Important

- Automatic Duplex Scanning is available only when Document Type is Document (ADF Duplex).
- The Automatic Duplex Scanning checkbox cannot be deselected when Document (ADF duplex) is set for Document Type on the Scanner Button Settings tab of the Preferences dialog box.

#### • Output Settings...

Specify how to output the paper when scanning both sides from the ADF (Auto Document Feeder). Click Output Settings... to open the Output Settings dialog box in which you can select Output by back/front (Fast) or Output by page. Output by back/front (Fast) is selected by default.

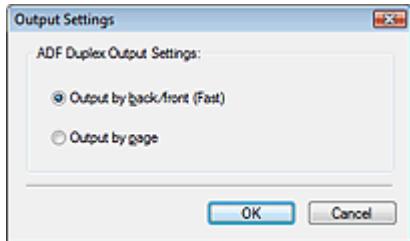

- **Output by back/front (Fast)**

This is preferred when speed is required, as the documents are output in the back-to-front order.  
To output the documents in the correct page order, select Output by page.

- **Output by page**

Outputs the scanned documents in the correct page order.

### Important

- This setting is available only when Document Type is Document (ADF Duplex) and the Automatic Duplex Scanning checkbox is selected.

- **Color Mode**

Select how to scan the document.

- **Color**

This mode renders the image in 256 levels (8 bit) of R(ed), G(reen), and B(lue).

- **Grayscale**

This mode renders the image in 256 levels (8 bit) of black and white.

- **Black and White**

This mode renders the image in black and white. The contrast in the image is divided at certain levels (threshold level) into black and white and is rendered in two colors.

### Note


- Color Mode is not displayed in the Scan Settings dialog box opened from the Scanner Button Settings tab of the Preferences dialog box.

- **Document Size**

Select the size of the document to be scanned.

When scanning both sides of the documents automatically from the ADF (Auto Document Feeder), select A4 or Letter.

When you select Custom, a screen in which you can specify the document size appears. Select a Units, then enter the Width and Height and click OK.

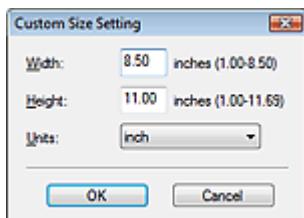


### Important

- When you select Auto Detect, the image may not be scanned at the correct position and size. In that case, change the size to the actual document size (A4, Letter, etc.) and align a corner of the document with the corner at the arrow of the Platen.

- **Orientation...**

Specify the orientation and stapling side of the documents to scan from the ADF (Auto Document Feeder).

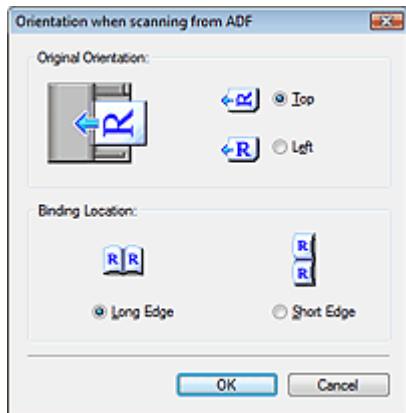

### Important

- Binding Location cannot be specified when scanning only the front side of each document.

#### • Scanning Resolution

Select the resolution at which to scan documents.

▶ [Resolution](#)

#### • Descreen

Select this checkbox to reduce moire patterns.

Printed photos and pictures are displayed as a collection of fine dots. "Moire" is a phenomenon where uneven gradation or a stripe pattern appears when such photos or pictures printed with fine dots are scanned. Descreen is the function for reducing this moire effect.

### Note

- Scanning takes longer than usual when you enable Descreen.

#### • Unsharp Mask

Select this checkbox to emphasize the outline of the subjects and sharpen the image.

#### • Reduce Show-through

Select this checkbox to sharpen text in a document or reduce show-through in newspapers.

### Note

- Select this checkbox when Document Type is text document and show-through is apparent in the scanned image.

#### • Remove gutter shadow

Select this checkbox to correct shadows that appear between pages when scanning open booklets.

### Important

- You cannot select this checkbox when Document Size is Auto Detect, Auto Detect (Multiple Documents) or Stitch Assist.
- You cannot select this checkbox when Document Type is Document (ADF Simplex) or Document (ADF Duplex).
- Align the document correctly with the marks on the Platen.

### Note

- Use ScanGear's Advanced Mode tab to correct gutter shadows when scanning non-standard size documents or when custom cropping frames are set.  
For details, see Gutter Shadow Correction in "[Image Settings](#)" (ScanGear's Advanced Mode tab).

#### • Correct slanted document

Select this checkbox to detect the scanned text and correct the angle (within -0.1 to -10 degrees or +0.1 to +10 degrees) of the document.

### Important

- You cannot select this checkbox when Document Size is Stitch Assist.
- The inclination of the following types of documents may not be corrected, as the text cannot be detected correctly.
  - Documents in which the text lines are inclined more than 10 degrees or the angles vary by line
  - Documents containing both vertical and horizontal text
  - Documents with extremely large or small fonts

- Documents with small amount of text
- Documents containing figures/images or hand-written text
- Documents containing both vertical and horizontal lines (tables)

### Note

- Scanning takes longer than usual when you enable Correct slanted document.

#### ● Detect the orientation of text documents and rotate images

Select this checkbox to detect the orientation of the document from the scanned text and rotate the scanned image to the correct orientation. Select the language of the document to be scanned in Document Language.

### Important

- You cannot select this checkbox when Document Size is Stitch Assist.
- This function may not work properly depending on the document language. Only text documents written in languages that can be selected from Document Language are supported.
- The orientation of the following types of documents may not be corrected, as the text cannot be detected correctly.
  - Resolution is outside the range of 300 dpi to 600 dpi
  - Font size is outside the range of 8 points to 48 points
  - Documents containing special fonts, effects, italics, or hand-written text
  - Documents with patterned backgrounds

### Note

- Scanning takes longer than usual when you enable Detect the orientation of text documents and rotate images.

#### ● Document Language

Select the language of the document to be scanned.

### Important

- You cannot select this checkbox when Document Size is Stitch Assist.

#### ● Defaults

Restores the default settings.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Save Dialog Box

### MP Navigator EX

## Save Dialog Box

The Save dialog box for specifying the image's file name and destination opens after you scan with Open the save dialog box after scanning the image (Input Exif information) selected in the Save dialog box that opens when you click Save to PC on the Custom Scan with One-click tab or Save in the One-click Mode screen. You can specify the file type and destination while viewing the thumbnails.

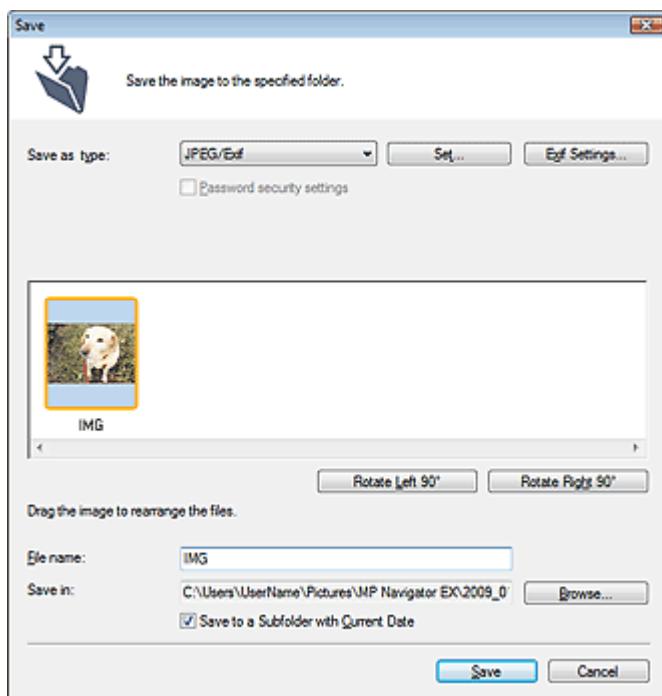

### • Save as type

Select a file type to save the scanned images.

Select JPEG/Exif, TIFF, BMP, PDF, PDF(Multiple Pages) or PDF(Add Page).

#### • PDF

Save each of the selected images as a separate PDF file.

#### • PDF(Multiple Pages)

Save multiple images in one PDF file.

### Note

- PDF(Multiple Pages) is displayed when multiple images are scanned.

#### • PDF(Add Page)

Add the scanned images to a PDF file. The images are added to the end of the PDF file. You cannot rearrange the pages of the PDF file to which the images are added.

### Important

- Images can only be added to PDF files created with MP Navigator EX. You cannot specify PDF files created with other applications. PDF files edited in other applications cannot be specified as well.
- If a password-protected PDF file is edited, the passwords will be deleted. Reset the passwords.  
▶ [Setting Passwords for PDF Files](#)

### Important

- PDF, PDF(Multiple Pages) and PDF(Add Page) cannot be selected for images scanned using the Operation Panel of the machine.

- Set...

### When Save as type is JPEG/Exif

You can specify a compression type for JPEG files. Select High(Low Compression), Standard or Low(High Compression).

#### Important

- This setting is not available when the Compress scanned images when transferring checkbox is selected on the General tab of the Preferences dialog box.

### When Save as type is PDF, PDF(Multiple Pages) or PDF(Add Page)

Make advanced settings for creating PDF files. See " [PDF Settings Dialog Box](#)" for details.

- Add to

This is displayed when you select PDF(Add Page) for Save as type and specify the PDF file to which images are added. To change the file, click Browse... to specify another one.

#### Important

- Images can only be added to PDF files created with MP Navigator EX. You cannot specify PDF files created with other applications. PDF files edited in other applications cannot be specified as well.

- Exif Settings...

When Save as type is JPEG/Exif, you can input Exif information into the file to be saved.

[Exif Settings Dialog Box](#)

- Password security settings

Select this checkbox to open the Password Security -Settings dialog box in which you can set passwords for opening, editing and printing created PDF files.

[Setting Passwords for PDF Files](#)

#### Note

- This function is available only when Save as type is PDF, PDF(Multiple Pages) or PDF(Add Page).

- Rotate Left 90°/Rotate Right 90°

Rotates scanned images 90 degrees counter-clockwise or clockwise.

Select the image you want to rotate and click Rotate Left 90° or Rotate Right 90°.

- File name

Enter the file name of the image to be saved (up to 32 characters). When saving multiple files, 4 digits are appended to each file name.

- Save in

Displays the folder in which to save the scanned images. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

- Save to a Subfolder with Current Date

Select this checkbox to create a subfolder in the folder specified in Save in with the current date and save scanned files in it. A subfolder with a name such as "2009\_01\_01" (Year\_Month\_Date) will be created.

If this checkbox is not selected, files are saved directly in the folder specified in Save in.

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Exif Settings Dialog Box

### MP Navigator EX

## Exif Settings Dialog Box

You can input Exif information into a file to be saved. Exif is a standard format for embedding various shooting data in digital camera images (JPEG). Embedding Exif information into scanned images allows you to organize and print them along with digital camera images.

The Exif Settings dialog box can be opened when Save as type is JPEG/Exif.

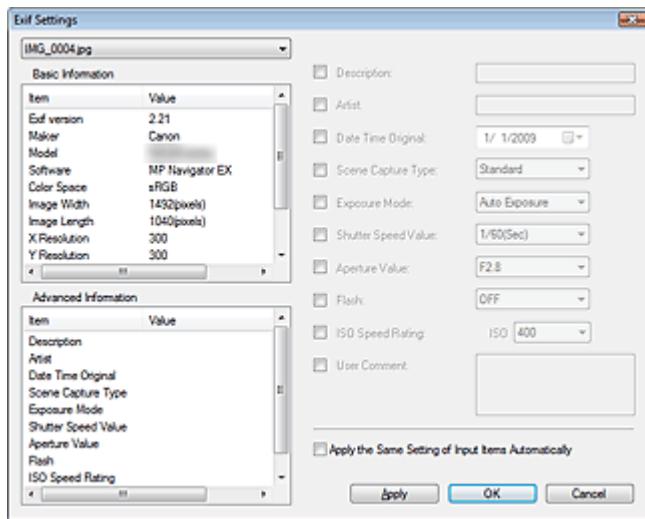

- **Basic Information**

Displays the information obtained automatically from the machine or software.

- **Advanced Information**

Displays the information specified on the right side of the screen.

- **Advanced Information Settings Area**

You can input Exif information such as the title and shooting data. Select the checkbox of the items you want to specify, and select or enter information.

- **Apply the Same Setting of Input Items Automatically**

Select this checkbox to automatically display the information you specified for the previous image.

- **Apply**

After specifying all the information you need, click Apply to embed it into the image. The information appears in Advanced Information.

- **OK**

Embeds the specified information into the image and closes the screen. The specified information is saved.

- **Cancel**

Cancels the settings and closes the screen.

Information is embedded when Cancel is clicked after clicking Apply.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > PDF Dialog Box

### MP Navigator EX

## PDF Dialog Box

Click Save as PDF file on the Custom Scan with One-click tab or click PDF in the One-click Mode screen to open the PDF dialog box.

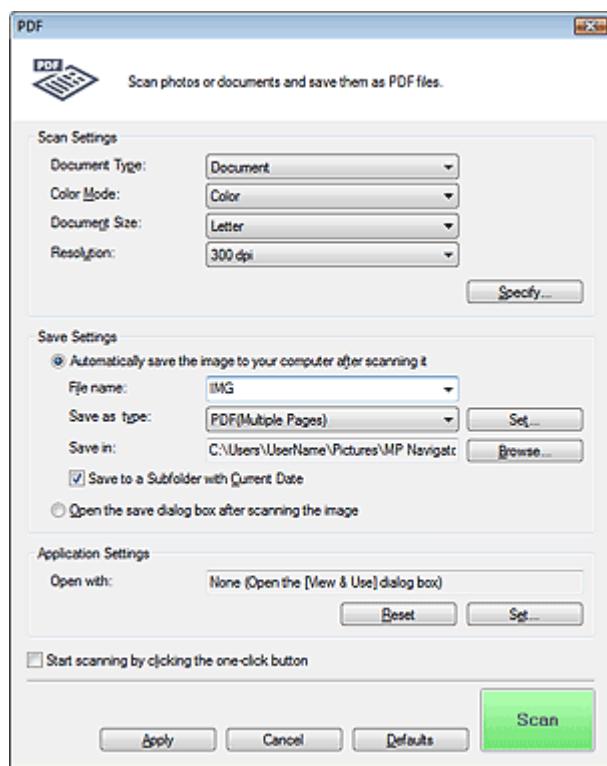

### Scan Settings

- **Document Type**

Select the type of document to be scanned.

- **Color Mode**


Select how to scan the document.

- **Document Size**

Select the size of the document to be scanned.

When scanning both sides of the documents automatically from the ADF (Auto Document Feeder), select A4 or Letter.

When you select Custom, a screen in which you can specify the document size appears. Select a Units, then enter the Width and Height and click OK.

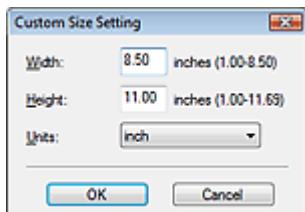

### Important

- When you select Auto Detect, the image may not be scanned at the correct position and size. In that case, change the size to the actual document size (A4, Letter, etc.) and align a corner of the document with the corner at the arrow of the Platen.

- **Resolution**

Select the resolution at which to scan documents.

▶ Resolution

- **Specify...**

Click to open the Scan Settings dialog box in which you can make advanced scan settings. You can also specify the settings for scanning both sides of the documents at one time from the ADF (Auto Document Feeder).

▶ Scan Settings Dialog Box

## Save Settings

- **Automatically save the image to your computer after scanning it**

Select this to save the images to your computer as specified after scanning them.

 **Important**

- If you select this function, you will not be able to set passwords for PDF files.

- **File name**

Enter the file name of the image to be saved (up to 32 characters). When saving multiple files, 4 digits are appended to each file name.

- **Save as type**

Select a file type to save the scanned images.

Select PDF, PDF(Multiple Pages) or PDF(Add Page).

- **PDF**

Save each of the selected images as a separate PDF file.

- **PDF(Multiple Pages)**

Save multiple images in one PDF file.

- **PDF(Add Page)**

Add the scanned images to a PDF file. The images are added to the end of the PDF file. You cannot rearrange the pages of the PDF file to which the images are added.

 **Important**

- Images cannot be added to password-protected PDF files.

 **Note**

- Click Set... to open the PDF Settings dialog box in which you can specify the PDF compression type and other advanced settings for creating PDF files.

▶ PDF Settings Dialog Box

- See "Creating/Editing PDF Files" to delete or rearrange the pages of saved PDF files.

- **Save in**

Displays the folder in which to save the scanned images. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

- **Save to a Subfolder with Current Date**

Select this checkbox to create a subfolder in the folder specified in Save in with the current date and save scanned files in it. A subfolder with a name such as "2009\_01\_01" (Year\_Month\_Date) will be created.

If this checkbox is not selected, files are saved directly in the folder specified in Save in.

- **Open the save dialog box after scanning the image**

Select this to open the Save as PDF file dialog box after scanning the images and specify the save settings such as destination folder and file name.

▶ Save as PDF file Dialog Box

 **Note**

- To set passwords for PDF files, select Open the save dialog box after scanning the image. After scanning, you can set the passwords in the Save as PDF file dialog box.

▶ Setting Passwords for PDF Files

## Application Settings

- **Open with**

Specify an application with which to open scanned images. Drag and drop the icon of an application that supports the file format displayed in Save as type. The specified application starts after images are scanned.

 **Important**

- Depending on the specified application, the images may not appear correctly or the application may not start.

- **Reset**

Cancels the application setting.

- **Set...**

Allows you to select an application to start.

- **Start scanning by clicking the one-click button**

Select this checkbox to start scanning when you click an icon.

- **Apply**

Saves and applies the specified settings.

Click Cancel instead of Apply to cancel the specified settings.

- **Cancel**

Cancels the specified settings. The current screen closes.

- **Defaults**

Returns all settings in the screen to their defaults.

- **Scan**

Scans and saves documents as PDF files with the specified settings.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Save as PDF file Dialog Box

### MP Navigator EX


## Save as PDF file Dialog Box

The Save as PDF file dialog box opens when you scan from Save as PDF file on the Custom Scan with One-click tab or from PDF in the One-click Mode screen after selecting Open the save dialog box after scanning the image.

In the Save as PDF file dialog box, you can make settings for saving images to a computer.

### Important

- You cannot save images scanned at 10501 pixels or more in the vertical and horizontal directions.

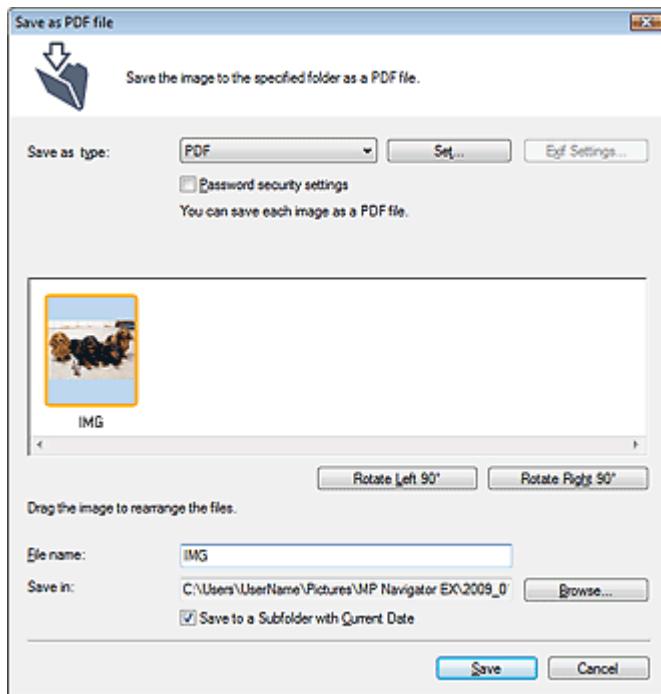

### • Save as type

Select a PDF file type to save the scanned images.

- **PDF**

Save each of the selected images as a separate PDF file.

- **PDF(Multiple Pages)**

Save multiple images in one PDF file.

### Note

- PDF(Multiple Pages) is displayed when multiple images are scanned.

- **PDF(Add Page)**

Add the scanned images to a PDF file. The images are added to the end of the PDF file. You cannot rearrange the pages of the PDF file to which the images are added.

### Important

- Images can only be added to PDF files created with MP Navigator EX. You cannot specify PDF files created with other applications. PDF files edited in other applications cannot be specified as well.
- PDF(Add Page) cannot be selected for images scanned using the Operation Panel of the machine.
- If a password-protected PDF file is edited, the passwords will be deleted. Reset the passwords.

 **Note**

- You can set passwords for PDF files.  
▶ [Setting Passwords for PDF Files](#)

**• Set...**

Make advanced settings for creating PDF files.

See "[PDF Settings Dialog Box](#)" for details.

**• Password security settings**

Select this checkbox to open the Password Security -Settings dialog box in which you can set passwords for opening, editing and printing created PDF files.

▶ [Setting Passwords for PDF Files](#)

**• Rotate Left 90°/Rotate Right 90°**

Rotates scanned images 90 degrees counter-clockwise or clockwise.

Select the image you want to rotate and click Rotate Left 90° or Rotate Right 90°.

**• File name**

Enter the file name of the image to be saved (up to 32 characters). When saving multiple files, 4 digits are appended to each file name.

**• Save in**

Displays the folder in which to save the PDF files. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

**• Save to a Subfolder with Current Date**

Select this checkbox to create a subfolder in the folder specified in Save in with the current date and save scanned files in it. A subfolder with a name such as "2009\_01\_01" (Year\_Month\_Date) will be created.

If this checkbox is not selected, files are saved directly in the folder specified in Save in.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Mail Dialog Box

### MP Navigator EX

## Mail Dialog Box

Click Attach to E-mail on the Custom Scan with One-click tab or click Mail in the One-click Mode screen to open the Mail dialog box.

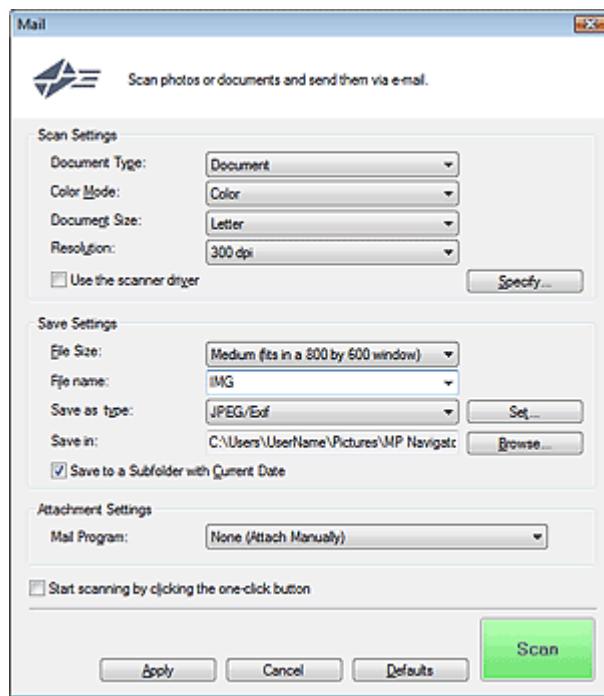

### Scan Settings

- **Document Type**

Select the type of document to be scanned.

- **Color Mode**


Select how to scan the document.

- **Document Size**

Select the size of the document to be scanned.

When scanning both sides of the documents automatically from the ADF (Auto Document Feeder), select A4 or Letter.

When you select Custom, a screen in which you can specify the document size appears. Select a Units, then enter the Width and Height and click OK.

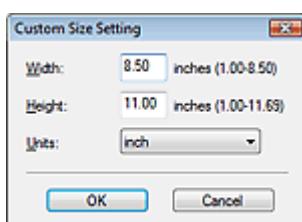

### Important

- When you select Auto Detect, the image may not be scanned at the correct position and size. In that case, change the size to the actual document size (A4, Letter, etc.) and align a corner of the document with the corner at the arrow of the Platen.

- **Resolution**

Select the resolution at which to scan documents.

▶ Resolution

- **Use the scanner driver**

Select this checkbox to display the ScanGear (scanner driver) screen and make advanced scan settings.

- **Specify...**

Click to open the Scan Settings dialog box in which you can make advanced scan settings. You can also specify the settings for scanning both sides of the documents at one time from the ADF (Auto Document Feeder).

➡ [Scan Settings Dialog Box](#)

## Save Settings

- **File Size**

Select a size from Small (fits in a 640 by 480 window), Medium (fits in a 800 by 600 window), Large (fits in a 1024 by 768 window) and Original.

- **File name**

Enter the file name of the image to be saved (up to 32 characters). When saving multiple files, 4 digits are appended to each file name.

- **Save as type**

Select a file type to save the scanned images.  
Select JPEG/Exif, PDF or PDF(Multiple Pages).

 **Important**

- You cannot set passwords for PDF files.

- **Set...**

### When Save as type is JPEG/Exif

You can specify a compression type for JPEG files. Select High(Low Compression), Standard or Low(High Compression).

 **Important**

- This setting is not available when the Compress scanned images when transferring checkbox is selected on the General tab of the Preferences dialog box.

- **Save in**

Displays the folder in which to save the scanned images. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

- **Save to a Subfolder with Current Date**

Select this checkbox to create a subfolder in the folder specified in Save in with the current date and save scanned files in it. A subfolder with a name such as "2009\_01\_01" (Year\_Month\_Date) will be created.

If this checkbox is not selected, files are saved directly in the folder specified in Save in.


## Attachment Settings

- **Mail Program**

Specify an e-mail software program.

 **Note**

- Select Add... to open the Select Mail Program dialog box in which you can select an e-mail software program. If the e-mail software program you want to use is not listed, click Add to List and select it.

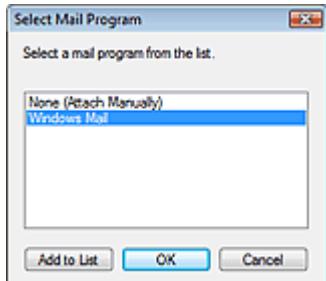

- **Start scanning by clicking the one-click button**

Select this checkbox to start scanning when you click an icon.

- **Apply**

Saves and applies the specified settings.

Click Cancel instead of Apply to cancel the specified settings.

- **Cancel**

Cancels the specified settings. The current screen closes.

- **Defaults**

Returns all settings in the screen to their defaults.

- **Scan**

Scans documents with the specified settings.

When scanning is completed, the e-mail software program starts automatically and a new message screen appears with the image attached.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > OCR Dialog Box

### MP Navigator EX

## OCR Dialog Box

Click OCR on the Custom Scan with One-click tab or in the One-click Mode screen to open the OCR dialog box.

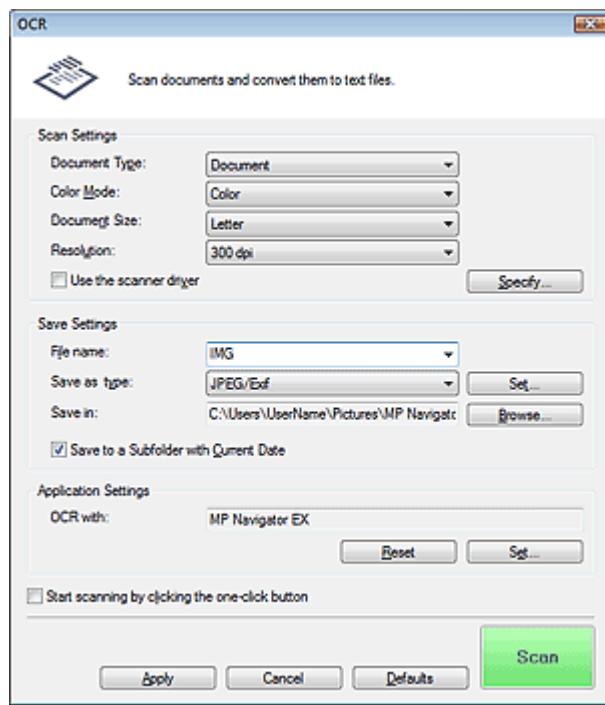

### Scan Settings

- Document Type**

Select the type of document to be scanned.

- Color Mode**


Select how to scan the document.

- Document Size**

Select the size of the document to be scanned.

When scanning both sides of the documents automatically from the ADF (Auto Document Feeder), select A4 or Letter.

When you select Custom, a screen in which you can specify the document size appears. Select a Units, then enter the Width and Height and click OK.

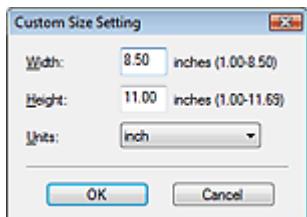

- Resolution**

Select the resolution at which to scan documents.

→ Resolution

- Use the scanner driver**

Select this checkbox to display the ScanGear (scanner driver) screen and make advanced scan settings.

- **Specify...**

Click to open the Scan Settings dialog box in which you can make advanced scan settings. You can also specify the settings for scanning both sides of the documents at one time from the ADF (Auto Document Feeder).

▶ [Scan Settings Dialog Box](#)

 **Note**

- When scanning slanted documents, select the Correct slanted document checkbox to improve the text recognition accuracy.

## Save Settings

- **File name**

Enter the file name of the image to be saved (up to 32 characters). When saving multiple files, 4 digits are appended to each file name.

- **Save as type**

Select a file type to save the scanned images.  
Select JPEG/Exif, TIFF or BMP.

- **Set...**

### When Save as type is JPEG/Exif

You can specify a compression type for JPEG files. Select High(Low Compression), Standard or Low(High Compression).

 **Important**

- This setting is not available when the Compress scanned images when transferring checkbox is selected on the General tab of the Preferences dialog box.

- **Save in**

Displays the folder in which to save the scanned images. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

- **Save to a Subfolder with Current Date**

Select this checkbox to create a subfolder in the folder specified in Save in with the current date and save scanned files in it. A subfolder with a name such as "2009\_01\_01" (Year\_Month\_Date) will be created.

If this checkbox is not selected, files are saved directly in the folder specified in Save in.

## Application Settings

- **OCR with**

Specify an OCR application.

When MP Navigator EX is specified, after the image is scanned, the text in the image is extracted and appears in Notepad (included with Windows).

 **Note**

- Only text written in languages that can be selected on the General tab can be extracted to Notepad (included with Windows). Click Set... on the General tab and specify the language according to the language of the document to be scanned.  
When scanning multiple documents, you can collect the extracted text into one file.  
▶ [General Tab](#)
- Text displayed in Notepad (included with Windows) is for guidance only. Text in the image of the following types of documents may not be detected correctly.
  - Documents containing text with font size outside the range of 8 points to 40 points (at 300 dpi)
  - Slanted documents
  - Documents placed upside down or documents with text in the wrong orientation (rotated characters)
  - Documents containing special fonts, effects, italics, or hand-written text

- Documents with narrow line spacing
- Documents with colors in the background of text
- Documents containing multiple languages

- **Reset**

Cancels the application setting.

- **Set...**

Allows you to select an application.

### **Important**

- Depending on the specified application, the text may not be extracted correctly or the application may not start.

- **Start scanning by clicking the one-click button**

Select this checkbox to start scanning when you click an icon.

- **Apply**

Saves and applies the specified settings.

Click Cancel instead of Apply to cancel the specified settings.

- **Cancel**

Cancels the specified settings. The current screen closes.

- **Defaults**

Returns all settings in the screen to their defaults.

- **Scan**

Scans documents with the specified settings.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Custom Dialog Box

### MP Navigator EX

## Custom Dialog Box

Click Custom on the Custom Scan with One-click tab or in the One-click Mode screen to open the Custom dialog box.

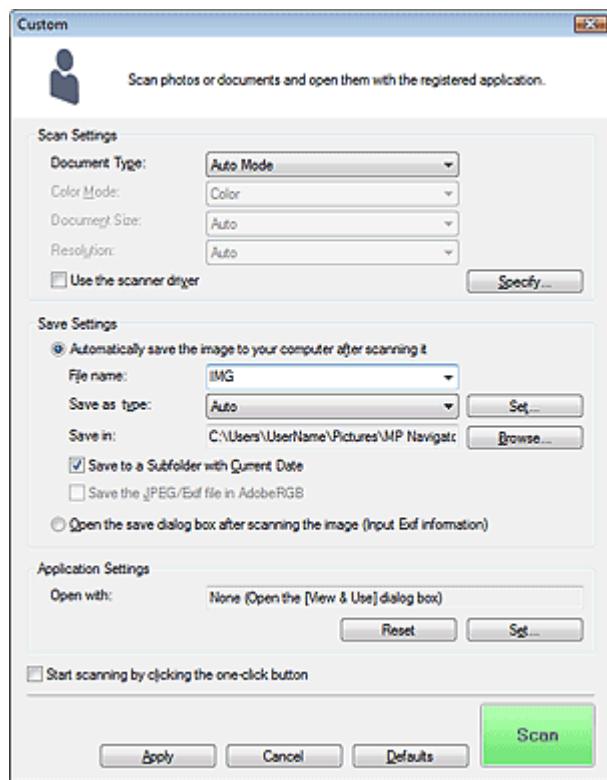

### Scan Settings

#### • Document Type

Select the type of document to be scanned. When Auto Mode is selected, the document type is automatically detected. In that case, Color Mode, Document Size and Resolution are automatically set as well.

#### Important

- The following types of documents cannot be scanned correctly with Auto Mode. In that case, specify Document Type.
  - Documents other than photos, Hagaki, business cards, magazines, newspapers, text documents and CD/DVD
  - A4 photos
  - Text documents smaller than 2L (5 inches x 7 inches) (127 mm x 178 mm), such as paperback pages with the spine cut off
  - Documents printed on thin white paper
  - Wide documents such as panoramic photos
- Reflective CD/DVD labels may not be scanned properly.
- Place documents correctly according to the type of document to be scanned. Otherwise, documents may not be scanned correctly.  
See "[Placing Documents](#)" for details on how to place documents.
- Scanning takes longer than usual when scanning from the ADF (Auto Document Feeder) for the first time with Auto Mode.
- When scanning both sides of the documents from the ADF (Auto Document Feeder) with Auto Mode, you can scan A4 or Letter-size documents.
- When scanning two or more documents from the ADF (Auto Document Feeder), you cannot scan documents of different sizes at one time even if Auto Mode is set.

## Note

- To reduce moire, set Document Type to Magazine.

### ● Color Mode


Select how to scan the document.

### ● Document Size

Select the size of the document to be scanned.

When scanning both sides of the documents automatically from the ADF (Auto Document Feeder), select A4 or Letter.

When you select Custom, a screen in which you can specify the document size appears. Select a Units, then enter the Width and Height and click OK.

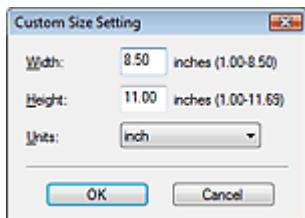

## Important

- When you select Auto Detect, the image may not be scanned at the correct position and size. In that case, change the size to the actual document size (A4, Letter, etc.) and align a corner of the document with the corner at the arrow of the Platen.

### ● Resolution

Select the resolution at which to scan documents.

▶ Resolution

### ● Use the scanner driver

Select this checkbox to display the ScanGear (scanner driver) screen and make advanced scan settings.

### ● Specify...

Click to open the Scan Settings dialog box in which you can make advanced scan settings. You can also specify the settings for scanning both sides of the documents at one time from the ADF (Auto Document Feeder).

▶ Scan Settings Dialog Box

## Save Settings

### ● Automatically save the image to your computer after scanning it

Select this to save the images to your computer as specified after scanning them.

## Note

- If an application to start is specified in Application Settings, the scanned image opens in the specified application.

### ● File name

Enter the file name of the image to be saved (up to 32 characters). When saving multiple files, 4 digits are appended to each file name.

### ● Save as type

Select a file type to save the scanned images.

Select Auto, JPEG/Exif, TIFF or BMP. Auto is displayed and selected by default when Document Type is Auto Mode.

## Important

- When Document Type is Auto Mode and Save as type is Auto, the file format may differ depending on how you place the document.  
See "Placing Documents" for details on how to place documents.
- Large documents (such as A4 photos) that cannot be placed away from the edges/arrow of the Platen may not be saved in the correct file format when Save as type is Auto. In that case, select a file format suitable for the document to be scanned.

 **Note**

- When Auto is selected, files are saved in the following formats according to the document type.  
Photos, Hagaki, business cards and CD/DVD: JPEG  
Magazines, newspapers and text documents: PDF  
You can change the file format from Set....  
Images saved as PDF files may not open depending on the application. In that case, select an option other than PDF in Save as type.
- If you select JPEG/Exif, the Save the JPEG/Exif file in AdobeRGB checkbox will be selectable.

- **Set...**

**When Save as type is Auto**

You can specify the file format in which to save images. Select a file format for Document and Photo each.

 **Important**

- You cannot select a compression type for JPEG files when the Compress scanned images when transferring checkbox is selected on the General tab of the Preferences dialog box.

**When Save as type is JPEG/Exif**

You can specify a compression type for JPEG files. Select High(Low Compression), Standard or Low(High Compression).

 **Important**

- This setting is not available when the Compress scanned images when transferring checkbox is selected on the General tab of the Preferences dialog box.

- **Save in**

Displays the folder in which to save the scanned images. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

- **Save to a Subfolder with Current Date**

Select this checkbox to create a subfolder in the folder specified in Save in with the current date and save scanned files in it. A subfolder with a name such as "2009\_01\_01" (Year\_Month\_Date) will be created.

If this checkbox is not selected, files are saved directly in the folder specified in Save in.

- **Save the JPEG/Exif file in AdobeRGB**

Select this checkbox to save the images in colors that correspond to Adobe RGB.

 **Important**

- This function is available only when Save as type is JPEG/Exif.
- This function is not available if the Adobe RGB profile is not installed.

 **Note**

- You cannot select this setting if the Use the scanner driver checkbox is selected.
- When you save an image with the Save the JPEG/Exif file in AdobeRGB checkbox selected, an underscore is added to the beginning of the file name. (Example: \_Image0001.jpg)

- **Open the save dialog box after scanning the image (Input Exif information)**

Select this to open the Save dialog box after scanning the images and specify the save settings such as destination folder, file name and Exif information.

➔ [Save Dialog Box](#)

**Application Settings**

- **Open with**

Specify an application with which to open scanned images. Drag and drop the icon of an application

that supports the file format displayed in Save as type. The specified application starts after images are scanned.

### Important

- Depending on the specified application, the images may not appear correctly or the application may not start.

- **Reset**

Cancels the application setting.

- **Set...**

Allows you to select an application to start.

- **Start scanning by clicking the one-click button**

Select this checkbox to start scanning when you click an icon.

- **Apply**

Saves and applies the specified settings.

Click Cancel instead of Apply to cancel the specified settings.

- **Cancel**

Cancels the specified settings. The current screen closes.

- **Defaults**

Returns all settings in the screen to their defaults.

- **Scan**

Scans and saves documents with the specified settings.

When Save as type is Auto, a confirmation appears. Click Open Manual to open this guide (if it is installed).

[Page top↑](#)

## Advanced Guide


Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Preferences Dialog Box

### MP Navigator EX

## Preferences Dialog Box

Click Preferences to open the Preferences dialog box.

In the Preferences dialog box, you can make advanced settings to MP Navigator EX functions via the General and Scanner Button Settings tabs.

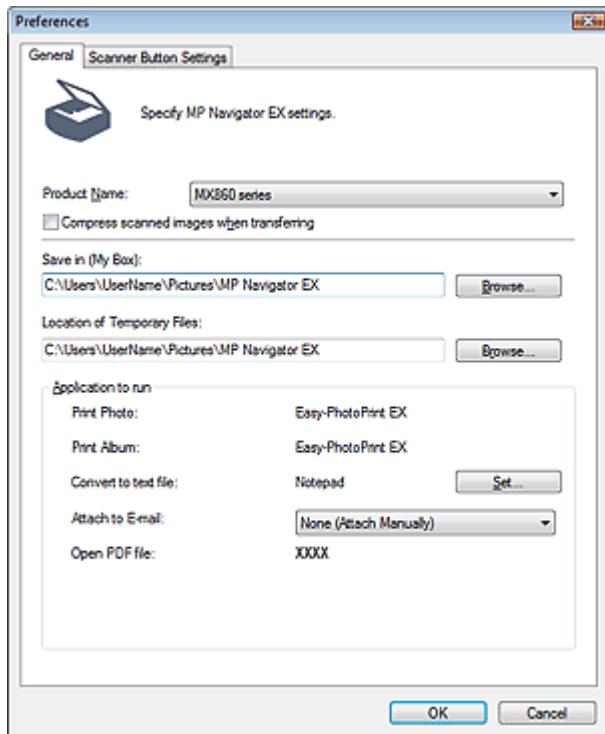

### Note

- See the corresponding sections below for details on each tab.
  - ▶ General Tab
  - ▶ Scanner Button Settings Tab (Save)
  - ▶ Scanner Button Settings Tab (Attach to E-mail)
  - ▶ Scanner Button Settings Tab (Open with Application)

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > General Tab

### MP Navigator EX

## General Tab

On the General tab, you can specify general MP Navigator EX settings.

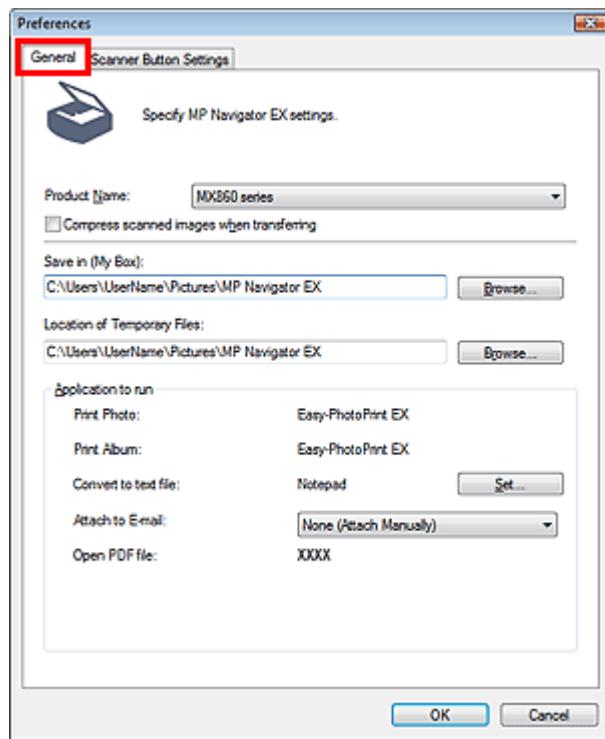

- **Product Name**

Displays the product name of the machine that MP Navigator EX is currently configured to use. If the displayed product is not the one you want to use, select the desired product from the list. For network connection, select one with (Network: XXXXXXXXXXXX) after the product name. (Where XXXXXXXXXXXX is the MAC address.) Use network connection to share the machine among multiple computers.

#### Note

- To set up a network environment, see "Network Scan Settings."

- **Compress scanned images when transferring**

Compress and transfer images scanned using MP Navigator EX or the Operation Panel of the machine. This is useful when the machine is connected via a slow interface such as USB 1.1 or a network. By default, this checkbox is selected when using a network connection. It is not selected when using a USB connection.

#### Important

- When Photo(platen glass) is selected for Document Type on the Scanner Button Settings tab, allow 3/8 inches (1 cm) or more space between the edges of the Platen and the document. If not, some images may not be scanned at the correct positions and sizes.
- Business cards, panorama photos and bordered photos may not be cropped accurately when scanned. In that case, deselect the Compress scanned images when transferring checkbox and scan again.
- The following restrictions apply when the Compress scanned images when transferring checkbox is selected.
  - The following black and white binary scanning functions are not available:
    - Text(OCR), Text(Simplex) or Text(Duplex) cannot be selected for Document Type in the Scan/Import Documents or Images window.
    - Black and White cannot be selected in the color mode settings for One-click Mode.
    - Remove gutter shadow is not available
    - Save the JPEG/Exif file in AdobeRGB for One-click Mode is not available

- Available resolutions: 75 dpi / 150 dpi / 300 dpi / 600 dpi
- Maximum number of documents that can be scanned at one time: 4
- The following images are not compressed even when scanned with the Compress scanned images when transferring checkbox selected.
  - Images scanned using the Operation Panel of the machine by automatically detecting the document type
  - Images scanned in One-click Mode by automatically detecting the document type
  - Images scanned using ScanGear (scanner driver)

## Note

- It is recommended that you scan at 300 dpi or higher resolution when scanning multiple photos using this function.
- When the Compress scanned images when transferring checkbox is selected, Unsharp Mask is always applied.

### • Save in (My Box)

Displays the folder in which to save scanned documents. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

### • Location of Temporary Files

Displays the folder in which to save images temporarily. To change the folder, click Browse... to specify another one.

## Important

- An error may occur if you set the destination to the root directory of the drive on which the operating system is installed. Be sure to specify a folder.
- An error may occur if you set the destination to a network folder. Be sure to specify a local folder.

### • Application to run

Displays the applications that can be started via MP Navigator EX. Install the applications from the *Setup CD-ROM* that accompanies the machine.

For Attach to E-mail, you can select an e-mail software program to start.


For Open PDF file, the application associated with the .pdf file extension by the operating system is displayed.

## Important

- You can change which items are installed during installation from the *Setup CD-ROM* by selecting Custom Install. If you choose not to install some applications with Custom Install, the corresponding MP Navigator EX functions will be unavailable. To use those functions, install the corresponding applications.

## Note

- For Convert to text file, Notepad (included with Windows) is displayed. Click Set... to open a dialog box, then specify Document Language and how to scan multiple documents.

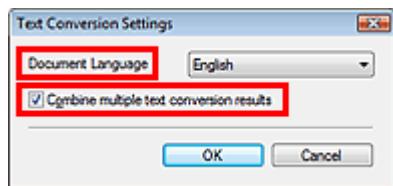

### • Document Language

Specify the language according to the language of the document to be scanned. Only text written in languages that can be selected in the Document Language can be extracted to Notepad.

### • Combine multiple text conversion results

When scanning multiple documents, select the checkbox to collect the conversion results (text) into one file. This checkbox is selected by default.

When the checkbox is selected, you can scan up to 99 pages at one time.

Deselect the checkbox to display each conversion result (text) in a separate file.

When the checkbox is not selected, you can scan up to 10 pages at one time.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Scanner Button Settings Tab (Save)

### MP Navigator EX

## Scanner Button Settings Tab (Save)

On the Scanner Button Settings tab, you can specify the following settings.

This section describes the settings available when Select Event is Save to PC or Save as PDF file.

You can specify how to respond when scanning using the Operation Panel of the machine with the scan mode set to Save to PC or Save as PDF file.

**Event**

Select Event:	Save to PC
Document Type:	Auto Mode

**Actions**

Scan Settings:

Document Size:	Auto
Resolution:	Auto

Specify...

Save Settings:

Automatically save the image to your computer after scanning it

File Name:	IMG
Save as type:	Auto
Save in:	C:\Users\UserName\Pictures\MP Navigator

Save to a Subfolder with Current Date

Open the save dialog box after scanning the image

**Event**

Select Event:	Save as PDF file
Document Type:	Document (platen glass)

**Actions**

Scan Settings:

Document Size:	Letter
Resolution:	300 dpi

Specify...

Save Settings:

Automatically save the image to your computer after scanning it

File Name:	IMG
Save as type:	PDF(Multiple Pages)
Save in:	C:\Users\UserName\Pictures\MP Navigator

Save to a Subfolder with Current Date

Open the save dialog box after scanning the image

### Event

- **Select Event**

Displays the scan modes that can be selected on the Operation Panel of the machine.

- **Save to PC**

Select this to specify the details for the scan mode Save to PC.

- **Save as PDF file**

Select this to specify the details for the scan mode Save as PDF file.

- **Document Type**

Select the type of document to be scanned.

### Note

- Auto Mode can be selected only when Save to PC is selected for Select Event. When Auto Mode is selected, the document type is automatically detected. In that case, Document Size and Resolution are automatically set as well.
- When Document (ADF duplex) is selected, both sides of the documents are always scanned automatically.

## Important

- To scan correctly, select a document type that matches the document to be scanned.
- The following types of documents cannot be scanned correctly with Auto Mode. In that case, specify Document Type.
  - Documents other than photos, Hagaki, business cards, magazines, newspapers, text documents and CD/DVD
  - A4 photos
  - Text documents smaller than 2L (5 inches x 7 inches) (127 mm x 178 mm), such as paperback pages with the spine cut off
  - Documents printed on thin white paper
  - Wide documents such as panoramic photos
- Reflective CD/DVD labels may not be scanned properly.
- Place documents correctly according to the type of document to be scanned. Otherwise, documents may not be scanned correctly.  
See "Placing Documents" for details on how to place documents.
- Scanning takes longer than usual when scanning from the ADF (Auto Document Feeder) for the first time with Auto Mode.
- When scanning both sides of the documents from the ADF (Auto Document Feeder) with Auto Mode, you can scan A4 or Letter-size documents.
- When scanning two or more documents from the ADF (Auto Document Feeder), you cannot scan documents of different sizes at one time even if Auto Mode is set.

## Actions


### Scan Settings

#### • Document Size

Select the size of the document to be scanned.

When scanning both sides of the documents from the ADF (Auto Document Feeder), select A4 or Letter.

When you select Custom, a screen in which you can specify the document size appears. Select a Units, then enter the Width and Height and click OK.

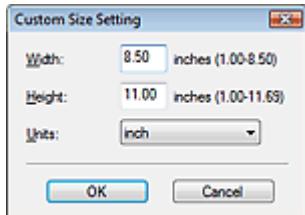

## Important

- When you select Auto Detect, the image may not be scanned at the correct position and size. In that case, change the size to the actual document size (A4, Letter, etc.) and align a corner of the document with the corner at the arrow of the Platen.
- This setting is not available when Select Event is Save to PC with Document Type set to Auto Mode.

#### • Resolution

Select the resolution at which to scan documents.

▶ Resolution

## Important

- This setting is not available when Select Event is Save to PC with Document Type set to Auto Mode.

#### • Specify...

Click to open the Scan Settings dialog box in which you can make advanced scan settings.

▶ Scan Settings Dialog Box

## Save Settings

#### • Automatically save the image to your computer after scanning it

Select this to save the images to your computer as specified after scanning them.

The File Name, Save as type and Save in settings will be displayed.

### Important

- If you select this function, you will not be able to set passwords for PDF files.

- **File Name**

Enter the file name of the image to be saved (up to 32 characters).

- **Save as type**

Select a file type to save the scanned images.

When saving to a computer, select Auto, JPEG/Exif, TIFF or BMP. Auto is displayed and selected by default when Document Type is Auto Mode. When saving as PDF files, PDF(Multiple Pages) is set.

### Important

- When Document Type is Auto Mode and Save as type is Auto, the file format may differ depending on how you place the document.  
See "[Placing Documents](#)" for details on how to place documents.
- Large documents (such as A4 photos) that cannot be placed away from the edges/arrow of the Platen may not be saved in the correct file format when Save as type is Auto. In that case, select a file format suitable for the document to be scanned.

### Note

- When Auto is selected, files are saved in the following formats according to the document type.  
Photos, Hagaki, business cards and CD/DVD: JPEG  
Magazines, newspapers and text documents: PDF  
You can change the file format from Set....  
Images saved as PDF files may not open depending on the application. In that case, select an option other than PDF in Save as type.

- **Set...**

#### **When Save as type is Auto**

You can specify the file format in which to save images. Select a file format for saving Document and Photo each.

### Important

- You cannot select a compression type for JPEG files when the Compress scanned images when transferring checkbox is selected on the General tab of the Preferences dialog box.

#### **When Save as type is JPEG/Exif**

You can specify a compression type for JPEG files. Select High(Low Compression), Standard or Low(High Compression).

### Important

- This setting is not available when the Compress scanned images when transferring checkbox is selected on the General tab of the Preferences dialog box.

#### **When Save as type is PDF(Multiple Pages)**

Make advanced settings for creating PDF files. See "[PDF Settings Dialog Box](#)" for details.

- **Save in**

Displays the folder in which to save the scanned images. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

- **Save to a Subfolder with Current Date**

Select this checkbox to create a subfolder in the folder specified in Save in with the current date

and save scanned files in it. A subfolder with a name such as "2009\_01\_01" (Year\_Month\_Date) will be created.

If this checkbox is not selected, files are saved directly in the folder specified in Save in.

- **Open the save dialog box after scanning the image**

Select this to open the save dialog box after scanning the images and specify the save settings such as destination folder, file name and Exif information.

### Note

- See "Save Dialog Box" (when Select Event is Save to PC) or "Save as PDF file Dialog Box" (when Select Event is Save as PDF file) for details on each dialog box.
- To set passwords for PDF files, select Open the save dialog box after scanning the image. After scanning, you can set the passwords in the Save as PDF file dialog box.  
▶ [Setting Passwords for PDF Files](#)

### Related Topic

- ▶ [Scanner Button Settings Tab \(Attach to E-mail\)](#)
- ▶ [Scanner Button Settings Tab \(Open with Application\)](#)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Scanner Button Settings Tab (Attach to E-mail)


### MP Navigator EX

## Scanner Button Settings Tab (Attach to E-mail)

On the Scanner Button Settings tab, you can specify the following settings.

This section describes the settings available when Select Event is Attach to E-mail.

You can specify how to respond when scanning using the Operation Panel of the machine with the scan mode set to Attach to E-mail.

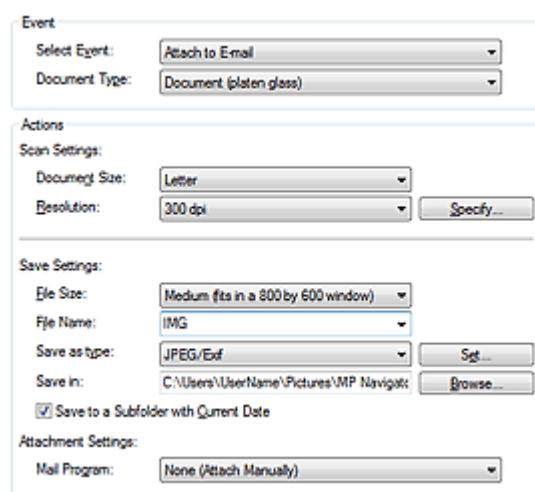

### Event

- **Select Event**

Displays the scan modes that can be selected on the Operation Panel of the machine. Select Attach to E-mail.

- **Document Type**

Select the type of document to be scanned.

When Document (ADF duplex) is selected, both sides of the documents are always scanned automatically from the ADF (Auto Document Feeder).

**Important**

- To scan correctly, select a document type that matches the document to be scanned.

### Actions


#### Scan Settings

- **Document Size**

Select the size of the document to be scanned.

When scanning both sides of the documents from the ADF (Auto Document Feeder), select A4 or Letter.

When you select Custom, a screen in which you can specify the document size appears. Select a Units, then enter the Width and Height and click OK.

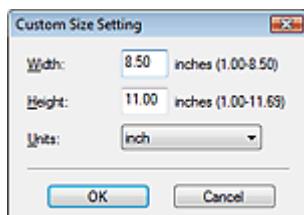

## **Important**

- When you select Auto Detect, the image may not be scanned at the correct position and size. In that case, change the size to the actual document size (A4, Letter, etc.) and align a corner of the document with the arrow of the Platen.

### ● **Resolution**

Select the resolution at which to scan documents.

▶ [Resolution](#)

### ● **Specify...**

Click to open the Scan Settings dialog box in which you can make advanced scan settings.

▶ [Scan Settings Dialog Box](#)

## **Save Settings**

### ● **File Size**

Select a size from Small (fits in a 640 by 480 window), Medium (fits in a 800 by 600 window), Large (fits in a 1024 by 768 window) and Original.

### ● **File Name**

Enter the file name of the image to be saved (up to 32 characters).

### ● **Save as type**

Select a file type to save the scanned images.

Select JPEG/Exif, PDF or PDF(Multiple Pages).

### ● **Set...**

#### **When Save as type is JPEG/Exif**

You can specify a compression type for JPEG files. Select High(Low Compression), Standard or Low(High Compression).

## **Important**

- This setting is not available when the Compress scanned images when transferring checkbox is selected on the General tab of the Preferences dialog box.

#### **When Save as type is PDF or PDF(Multiple Pages)**

Make advanced settings for creating PDF files. See " [PDF Settings Dialog Box](#)" for details.

### ● **Save in**

Displays the folder in which to save the scanned images. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

### ● **Save to a Subfolder with Current Date**

Select this checkbox to create a subfolder in the folder specified in Save in with the current date and save scanned files in it. A subfolder with a name such as "2009\_01\_01" (Year\_Month\_Date) will be created.

If this checkbox is not selected, files are saved directly in the folder specified in Save in.

## **Attachment Settings**

### ● **Mail Program**

Specify an e-mail software program.

## **Related Topic**

▶ [Scanner Button Settings Tab \(Save\)](#)

▶ [Scanner Button Settings Tab \(Open with Application\)](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > MP Navigator EX Screens > Scanner Button Settings Tab (Open with Application)


### MP Navigator EX

## Scanner Button Settings Tab (Open with Application)

On the Scanner Button Settings tab, you can specify the following settings.

This section describes the settings available when Select Event is Open with application.

You can specify how to respond when scanning using the Operation Panel of the machine with the scan mode set to Open with application.

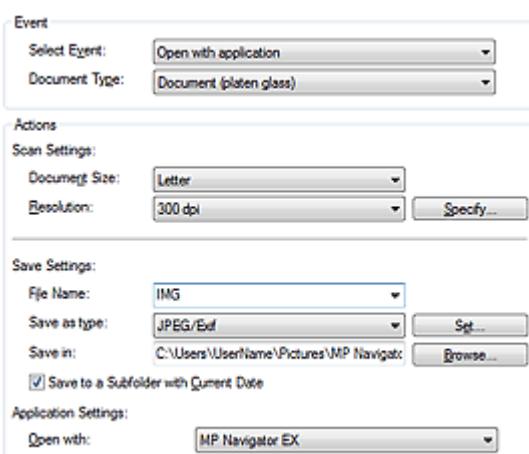

### Event

- Select Event**

Displays the scan modes that can be selected on the Operation Panel of the machine. Select Open with application.

- Document Type**

Select the type of document to be scanned.

When Document (ADF duplex) is selected, both sides of the documents are always scanned automatically from the ADF (Auto Document Feeder).

### Important

- To scan correctly, select a document type that matches the document to be scanned.

### Actions


#### Scan Settings

- Document Size**

Select the size of the document to be scanned.

When scanning both sides of the documents from the ADF (Auto Document Feeder), select A4 or Letter.

When you select Custom, a screen in which you can specify the document size appears. Select a Units, then enter the Width and Height and click OK.

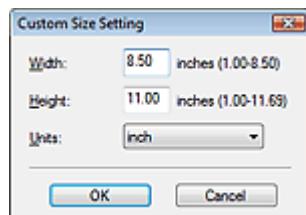

## Important

- When you select Auto Detect, the image may not be scanned at the correct position and size. In that case, change the size to the actual document size (A4, Letter, etc.) and align a corner of the document with the arrow of the Platen.

### • Resolution

Select the resolution at which to scan documents.

▶ [Resolution](#)

### • Specify...

Click to open the Scan Settings dialog box in which you can make advanced scan settings.

▶ [Scan Settings Dialog Box](#)

## Save Settings

### • File Name

Enter the file name of the image to be saved (up to 32 characters).

### • Save as type

Select a file type to save the scanned images.

Select JPEG/Exif, TIFF or BMP.

### • Set...

#### When Save as type is JPEG/Exif

You can specify a compression type for JPEG files. Select High(Low Compression), Standard or Low(High Compression).

## Important

- This setting is not available when the Compress scanned images when transferring checkbox is selected on the General tab of the Preferences dialog box.

### • Save in

Displays the folder in which to save the scanned images. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

### • Save to a Subfolder with Current Date

Select this checkbox to create a subfolder in the folder specified in Save in with the current date and save scanned files in it. A subfolder with a name such as "2009\_01\_01" (Year\_Month\_Date) will be created.

If this checkbox is not selected, files are saved directly in the folder specified in Save in.

## Application Settings

### • Open with

Specify an application with which to open scanned images. The specified application starts after images are scanned.

## Related Topic

- ▶ [Scanner Button Settings Tab \(Save\)](#)
- ▶ [Scanner Button Settings Tab \(Attach to E-mail\)](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Appendix: Opening Files Other than Scanned Images

**MP Navigator EX**

## Appendix: Opening Files Other than Scanned Images

You can save or print data other than scanned images using MP Navigator EX.

- **Using images saved on a memory card**  
▶ Importing Images Saved on a Memory Card
- **Using images saved on a computer**  
▶ Opening Images Saved on a Computer

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Appendix: Opening Files Other than Scanned Images > Importing Images Saved on a Memory Card

### MP Navigator EX

## Importing Images Saved on a Memory Card

You can import images (including PDF files created via scanning using the Operation Panel) saved on a memory card, and save them to a computer or print them using MP Navigator EX. You can also attach them to e-mail, or edit them using an application that accompanies the machine.

When saving PDF files, you can select whether to enable keyword search, and also specify the compression type and other advanced settings.

### Important

- Do not remove or insert memory cards while they are being accessed or the Access Lamp of the machine is flashing.
- The machine can only detect one memory card at a time. Do not simultaneously insert multiple memory cards.
- When switching to another memory card of the same type or inserting another memory card in a different Card Slot, make sure that the Access Lamp of the machine is not flashing, then remove the memory card. Then, insert another memory card.
- The machine's Card Slot (memory card) may become inaccessible. In that case, restart the machine or turn it off and reconnect the USB cable.
- With network connection, check that the Card Slot is mapped as a network drive. See " [Using the Card Slot over a Network](#)" for details.

### 1. Insert a memory card containing image/PDF files into the machine's Card Slot.

For details on how to insert a memory card into the machine, refer to the on-screen manual: *Basic Guide*.


### 2. Start MP Navigator EX as follows.

▶ [Windows Vista/Windows XP](#)

▶ [Windows 2000](#)

- **Windows Vista/Windows XP**


The program selection screen appears. Click MP Navigator EX Ver2.1.

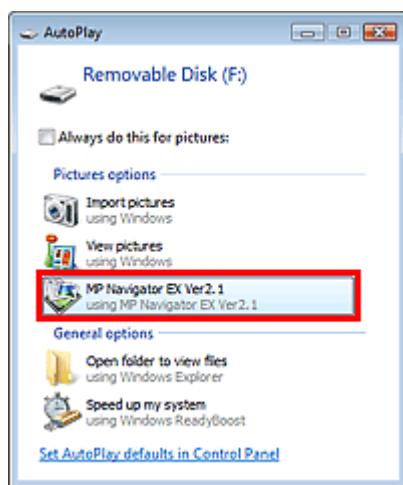

### Note

- If you want to start MP Navigator EX every time a memory card is inserted into the machine, follow these steps.  
Windows Vista:  
Select the Always do this for pictures checkbox and click MP Navigator EX Ver2.1.  
Windows XP:  
Select MP Navigator EX Ver2.1, then select the Always do the selected action. checkbox and click OK.

The Memory Card screen of the Scan/Import window appears, and the images and PDF files saved on the memory card appear in the Thumbnail window.

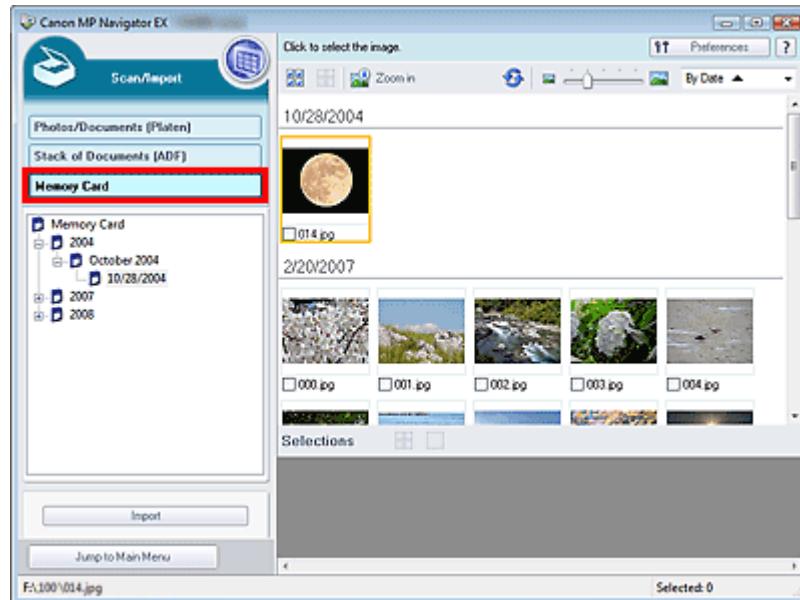


### Note

- See "[Memory Card Screen \(Scan/Import Window\)](#)" for details on the Memory Card screen (Scan/Import window).

#### • Windows 2000

Start MP Navigator EX and open the Navigation Mode screen.

➔ [Starting MP Navigator EX](#)

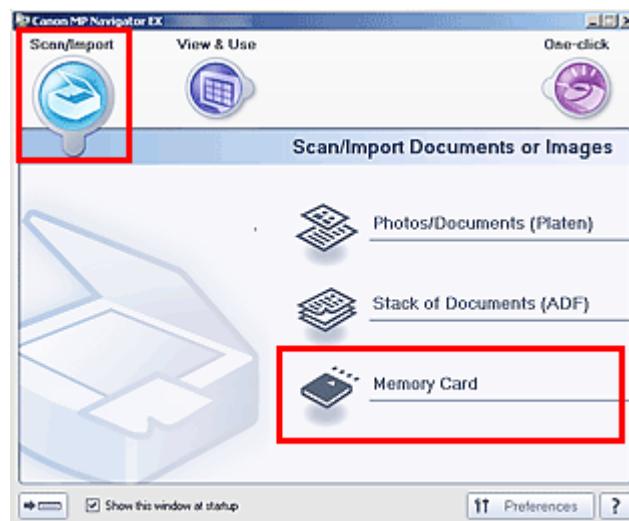


Point to Scan/Import and click Memory Card. The Memory Card screen of the Scan/Import window appears, and the images and PDF files saved on the memory card appear in the Thumbnail window.

### Important

- If you cannot import images from memory cards via a network connection, see "[Using the Card Slot over a Network](#)".


### Note

- With network connection, the Map Network Drive dialog box may open when a memory card is inserted into the machine for the first time. Specify a drive letter to map.

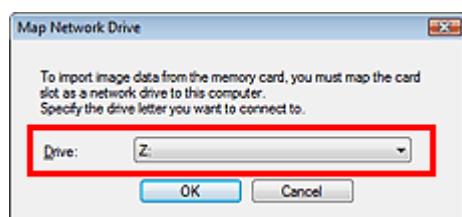

### 3. Select the checkboxes of the images and PDF files you want to import, then click Import.

The Import dialog box opens. Specify the folder in which to save the imported files.

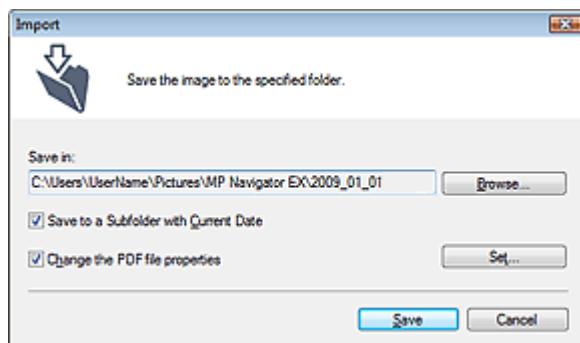

#### ● Save in

Displays the folder in which to save the imported images and PDF files. To change the folder, click Browse... to specify another one.

The following folders are specified by default.

Windows Vista: MP Navigator EX folder in Picture folder

Windows XP: MP Navigator EX folder in My Pictures folder

Windows 2000: MP Navigator EX folder in My Pictures folder

#### ● Save to a Subfolder with Current Date

Select this checkbox to create a subfolder in the folder specified in Save in with the current date and save imported files in it. A subfolder with a name such as "2009\_01\_01" (Year\_Month\_Date) will be created.

If this checkbox is not selected, files are saved directly in the folder specified in Save in.


#### ● Change the PDF file properties

This option is displayed when the memory card contains a PDF file.

Select this checkbox to change the PDF file settings. You can also change the settings of PDF files created via scanning using the Operation Panel. Click Set... to open a dialog box in which you can specify advanced settings. See "[PDF Settings Dialog Box](#)" for details.

### 4. Click Save.

The imported images and PDF files appear in the View & Use window.

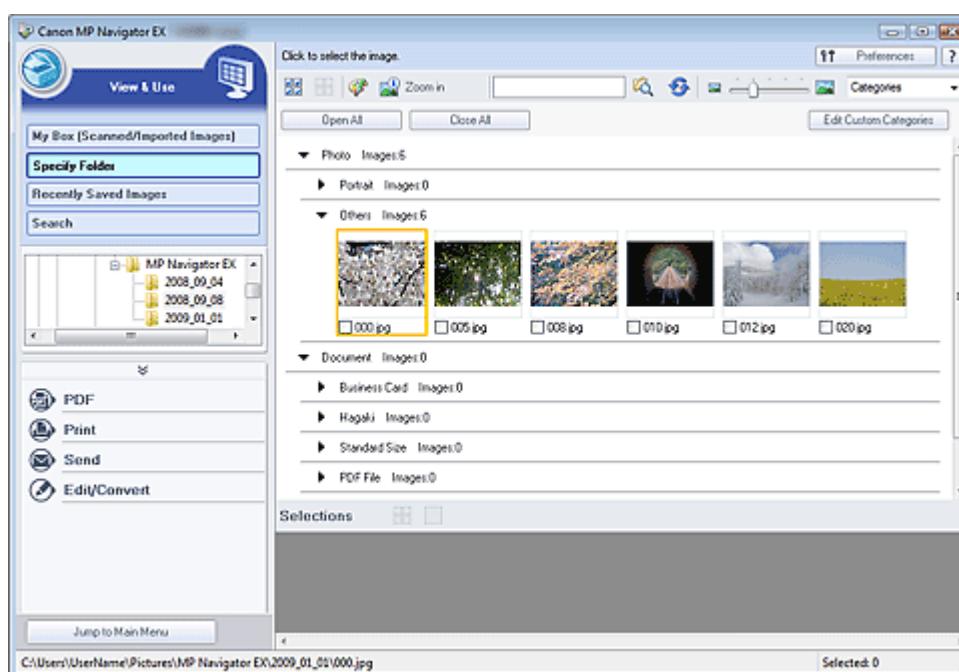

See the corresponding sections below for details on using the imported images and PDF files.

▶ [Creating/Editing PDF Files](#)

▶ [Printing Documents](#)

▶ [Printing Photos](#)

- ▶ [Sending via E-mail](#)
- ▶ [Editing Files](#)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with the Bundled Application Software > Appendix: Opening Files Other than Scanned Images > Opening Images Saved on a Computer

### MP Navigator EX

## Opening Images Saved on a Computer


You can open images saved on a computer and print them or attach them to e-mail using MP Navigator EX. You can also edit them using an application that accompanies the machine.

### 1. Start MP Navigator EX and open the Navigation Mode screen.

▶ Starting MP Navigator EX

### 2. In the Navigation Mode screen, point to View & Use and click My Box (Scanned/Imported Images), Specify Folder or Recently Saved Images.

Click My Box (Scanned/Imported Images) to open images saved in My Box (Scanned/Imported Images), click Specify Folder to open images saved in a specific folder, or click Recently Saved Images to open recently saved images.

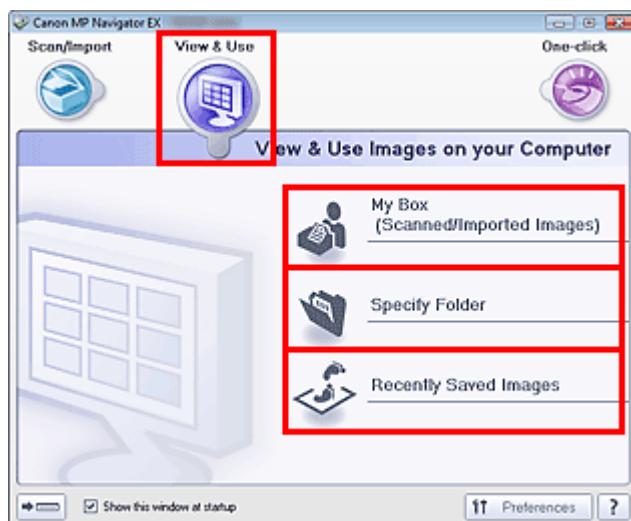


### Note

- If the Show this window at startup checkbox is not selected, the last used screen appears. If the Scan/Import window is displayed, click  (View & Use) on the upper left of the screen. The View & Use window opens.
- See "View & Use Images on your Computer Tab" for details on the View & Use Images on your Computer tab.

### 3. Click the folder containing the images you want to open.

Images saved in the folder appear in the Thumbnail window.

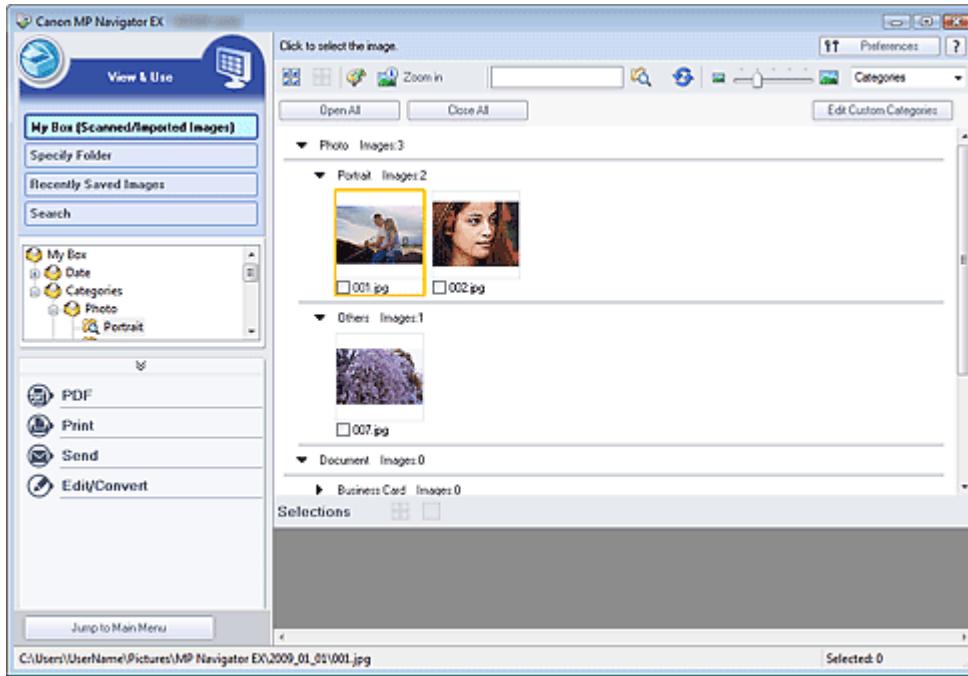

#### 4. Select the images you want to use, then select what you want to do with them.

See the corresponding sections below for details on using images.

- ▶ [Creating/Editing PDF Files](#)
- ▶ [Printing Documents](#)
- ▶ [Printing Photos](#)
- ▶ [Sending via E-mail](#)
- ▶ [Editing Files](#)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software

# Scanning with Other Application Software

- ▶ What Is ScanGear (Scanner Driver)?
- ▶ Scanning with Advanced Settings Using ScanGear (Scanner Driver)
- ▶ Correcting Images and Adjusting Colors with ScanGear (Scanner Driver)
- ▶ ScanGear (Scanner Driver) Screens
- ▶ Appendix: Useful Information on Scanning

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > What Is ScanGear (Scanner Driver)?

ScanGear

# What Is ScanGear (Scanner Driver)?

ScanGear (scanner driver) is software required for scanning documents. It enables you to specify the output size and make image corrections when scanning.

ScanGear (scanner driver) can be started from MP Navigator EX or from other applications that are compatible with a standard interface called TWAIN. (ScanGear (scanner driver) is a TWAIN-compatible driver.)

## What You Can Do with This Software

This software enables you to preview scan results or set document type and output size, etc. when scanning documents. It is useful when you want to scan in a specific color tone, as it allows you to make various corrections and adjust brightness, contrast, etc.

## Screens

There are three modes: Basic Mode, Advanced Mode and Auto Scan Mode.

Switch modes by clicking a tab on the upper right of the screen.


Basic Mode   Advanced Mode   Auto Scan Mode

### Note

- ScanGear (scanner driver) starts in the last used mode.
- Settings are not retained when you switch between modes.


## Basic Mode

Use Basic Mode to scan easily by following three simple on-screen steps ( 1 , 2 and 3 ).

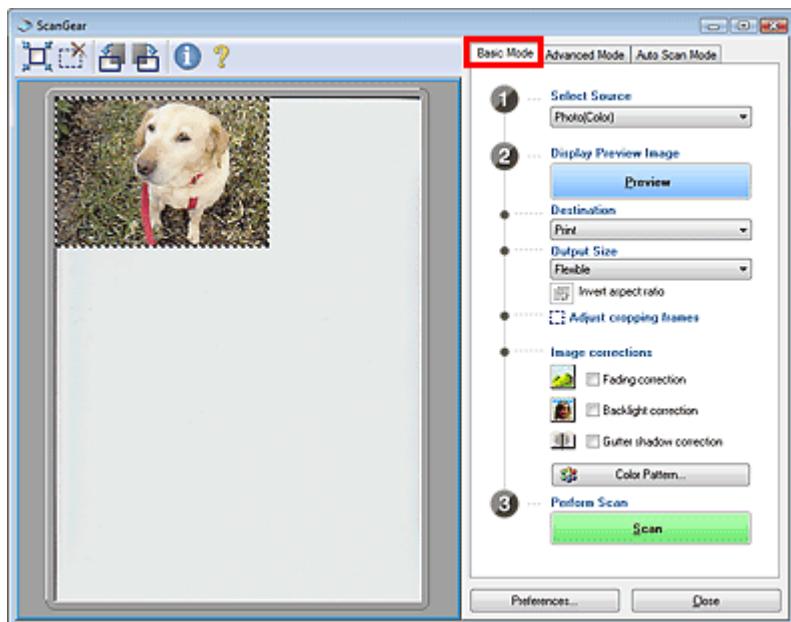


## Advanced Mode

Use Advanced Mode to select color mode, specify resolution, correct images, adjust colors, etc. when scanning.

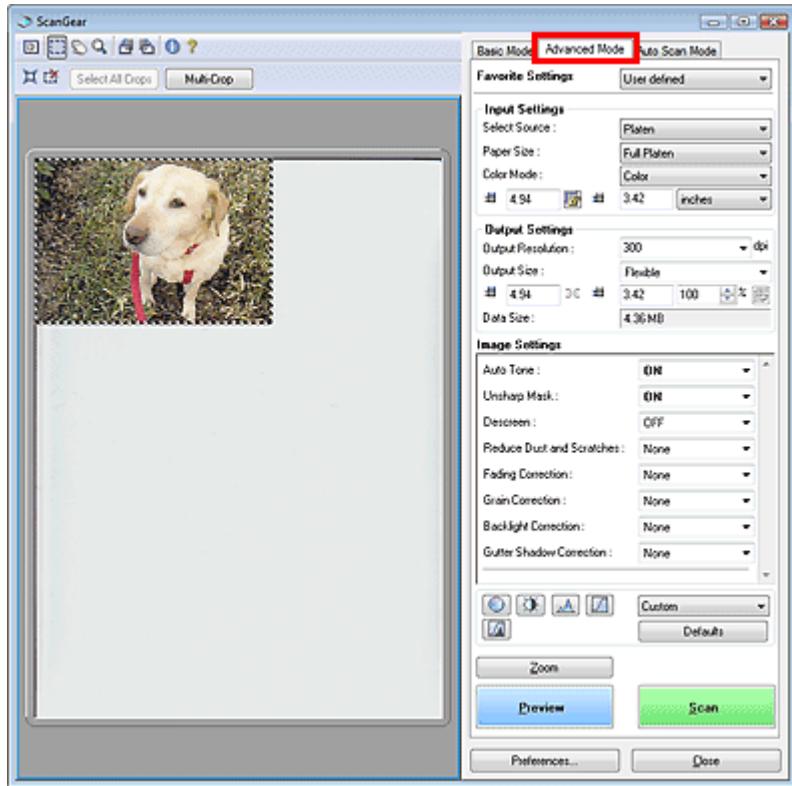

## Auto Scan Mode

Use Auto Scan Mode to scan easily by simply placing documents on the Platen or ADF (Auto Document Feeder) and clicking Scan.

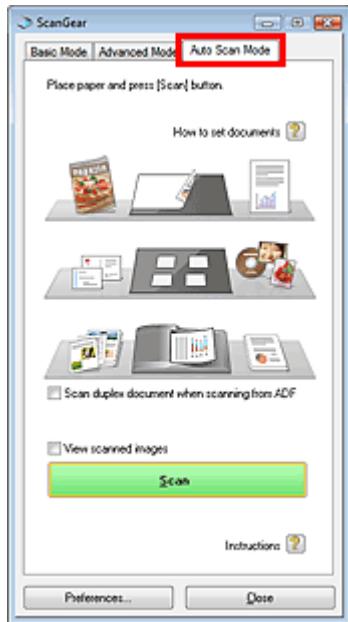

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Scanning with Advanced Settings Using ScanGear (Scanner Driver)

ScanGear

# Scanning with Advanced Settings Using ScanGear (Scanner Driver)

- Starting ScanGear (scanner driver)  
▶ Starting ScanGear (Scanner Driver)
- Scanning documents after making simple image corrections  
▶ Scanning in Basic Mode
- Scanning documents after making advanced image corrections and brightness/color adjustments  
▶ Scanning in Advanced Mode
- Scanning with a simple operation  
▶ Scanning in Auto Scan Mode
- Scanning multiple documents placed on the ADF (Auto Document Feeder) after making advanced image corrections and brightness/color adjustments  
▶ Scanning Multiple Documents from the ADF (Auto Document Feeder) in Advanced Mode
- Scanning multiple documents at one time after making image corrections and color adjustments  
▶ Scanning Multiple Documents at One Time in Advanced Mode

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Scanning with Advanced Settings Using ScanGear (Scanner Driver) > Starting ScanGear (Scanner Driver)

### ScanGear

## Starting ScanGear (Scanner Driver)

Use ScanGear (scanner driver) to make image corrections and color adjustments when scanning. ScanGear (scanner driver) can be started from MP Navigator EX or an application.

Follow these steps to start ScanGear (scanner driver).

### Note


- To scan via a network connection, start ScanGear and set up the network environment before scanning.  
▶ [Network Scan Settings](#)

### Starting from MP Navigator EX

#### Navigation Mode Screen

Follow these steps to start ScanGear (scanner driver) from the Navigation Mode screen of MP Navigator EX.

1. Start MP Navigator EX and open the Navigation Mode screen.  
▶ [Starting MP Navigator EX](#)
2. Point to Scan/Import and click Photos/Documents (Platen).  
The Scan/Import window opens.
3. Select the Use the scanner driver checkbox, then click Open Scanner Driver.

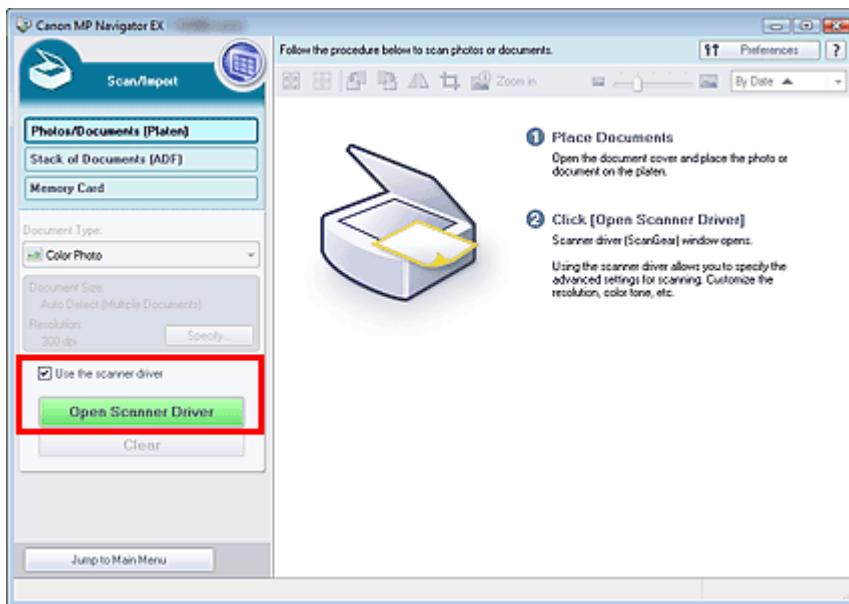

The ScanGear (scanner driver) screen appears.

#### One-click Mode Screen

Follow these steps to start ScanGear (scanner driver) from the One-click Mode screen of MP Navigator EX.


1. Start MP Navigator EX and open the One-click Mode screen.

 Starting MP Navigator EX

2. Click the corresponding icon.

The corresponding dialog box opens.

3. Select the Use the scanner driver checkbox in Scan Settings, then click Scan.

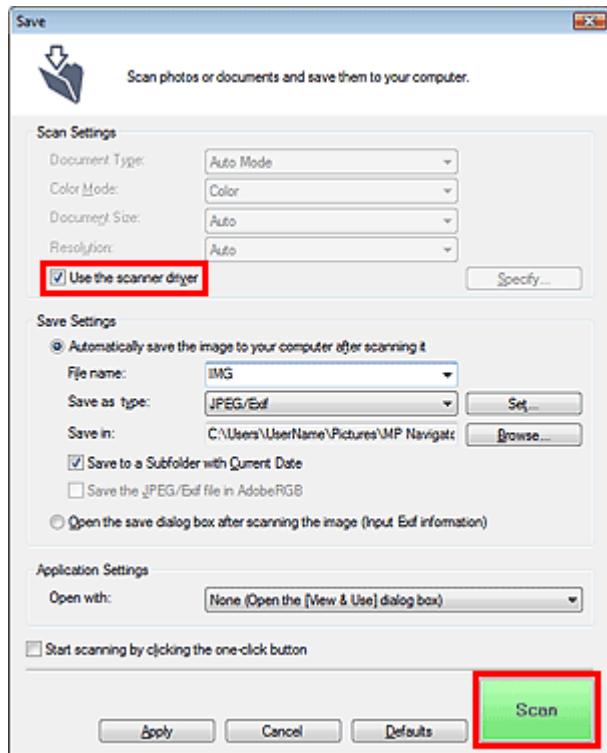

The ScanGear (scanner driver) screen appears.

 **Important**

- Use the scanner driver is not displayed in the PDF dialog box.

### Starting from an Application

Follow these steps (example) to start ScanGear (scanner driver) from an application.

The procedure varies depending on the application. For details, refer to the application's manual.

1. Start the application.
2. On the File menu of the application, select Select Source and select the machine.

 **Important**

- The scanner name to be selected in the application depends on whether you are scanning via a network connection or USB connection.

3. Select the command to scan a document (Scan/Import, Acquire image, etc.).

The ScanGear (scanner driver) screen appears.

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Scanning with Advanced Settings Using ScanGear (Scanner Driver) > Scanning in Basic Mode

ScanGear

### Scanning in Basic Mode

In Basic Mode, you can scan easily by following the on-screen steps.

When scanning from the ADF (Auto Document Feeder), documents are scanned without preview. Also, the paper size is set to A4.


1. Place the documents on the Platen or ADF (Auto Document Feeder), then start ScanGear (scanner driver).

▶ Starting ScanGear (Scanner Driver)

#### Important

- When scanning from the Platen, place the document face-down on the Platen and align an upper corner of the document with the corner at the arrow of the Platen. See " [Placing Documents \(ADF \(Auto Document Feeder\)\)](#) " for details on how to place documents when scanning from the ADF (Auto Document Feeder).

2. Set Select Source according to the documents.

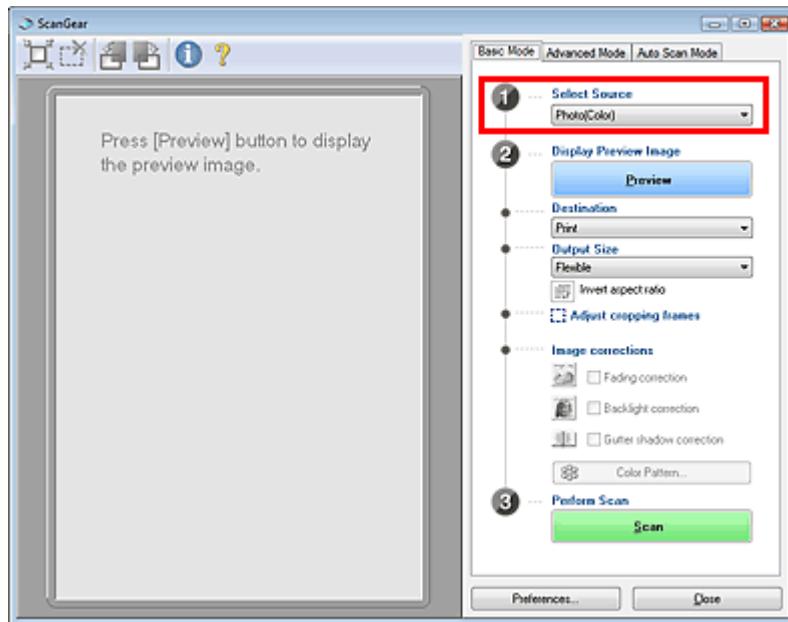

#### Important


- Some applications do not support continuous scanning from the ADF (Auto Document Feeder). For details, refer to the application's manual.

#### Note

- To scan magazines containing many color photos, scan in Advanced Mode tab with Color Mode set to Color and Descreen set to ON.  
▶ [Scanning in Advanced Mode](#)

3. Click Preview.

Preview image appears in the Preview area.

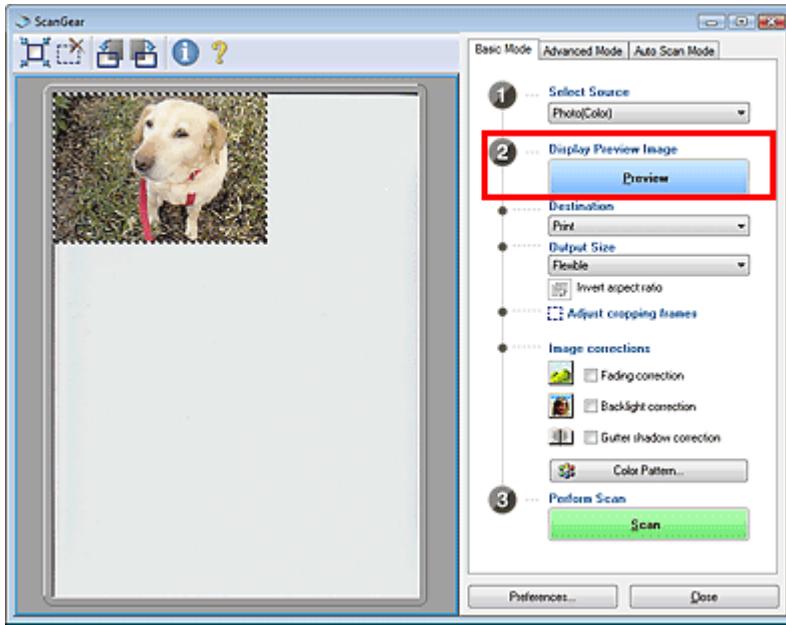

### Note

- If you scan without preview, colors are adjusted based on the document type selected in Select Source.

#### 4. Set Destination.

#### 5. Set Output Size.

Output size options vary by the items selected in Select Source and Destination.

#### 6. Adjust the scan area (cropping frame) as required.

Adjust the size and position of the scan area (cropping frame) on the preview image. You can also create two or more cropping frames.

If an area is not specified, the document will be scanned at the document size (Auto Crop). If an area is specified, only the portion in the specified area will be scanned.

▶ [Adjusting Cropping Frames](#)

#### 7. Set Image corrections as required.

#### 8. Click Scan.

Scanning starts.

### Note

- Click (Information) to open a dialog box in which you can check the current scan settings (document type, etc.).
- ScanGear's response after scanning can be specified in Status of ScanGear dialog after scanning on the Scan tab of the Preferences dialog box.  
▶ [Scan Tab](#)

### Related Topic

▶ [Basic Mode Tab](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Scanning with Advanced Settings Using ScanGear (Scanner Driver) > Scanning in Advanced Mode

ScanGear

## Scanning in Advanced Mode

In Advanced Mode, you can specify the color mode, output resolution, image brightness, color tone, etc. when scanning.

This section explains how to scan paper/photos from the Platen. See " [Scanning Multiple Documents from the ADF \(Auto Document Feeder\) in Advanced Mode](#)" to scan multiple documents placed on the ADF (Auto Document Feeder).

1. Place the document on the Platen, then start ScanGear (scanner driver).


▶ [Starting ScanGear \(Scanner Driver\)](#)

### Important

- Place the document face-down on the Platen and align an upper corner of the document with the corner at the arrow of the Platen.

2. Click Advanced Mode.

The Advanced Mode tab appears.

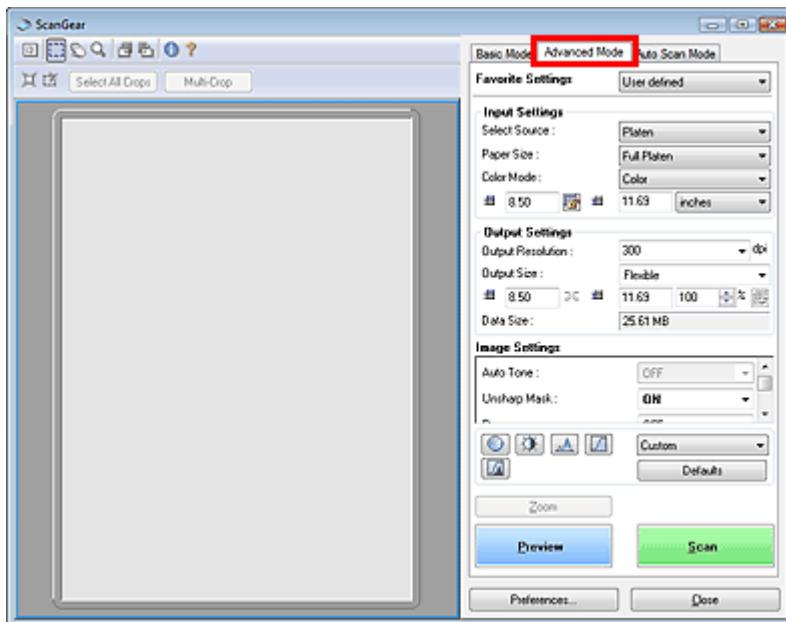

### Note


- Settings are not retained when you switch between modes.

3. Set Paper Size and Color Mode.

▶ [Input Settings](#)

4. Click Preview.

Preview image appears in the Preview area.

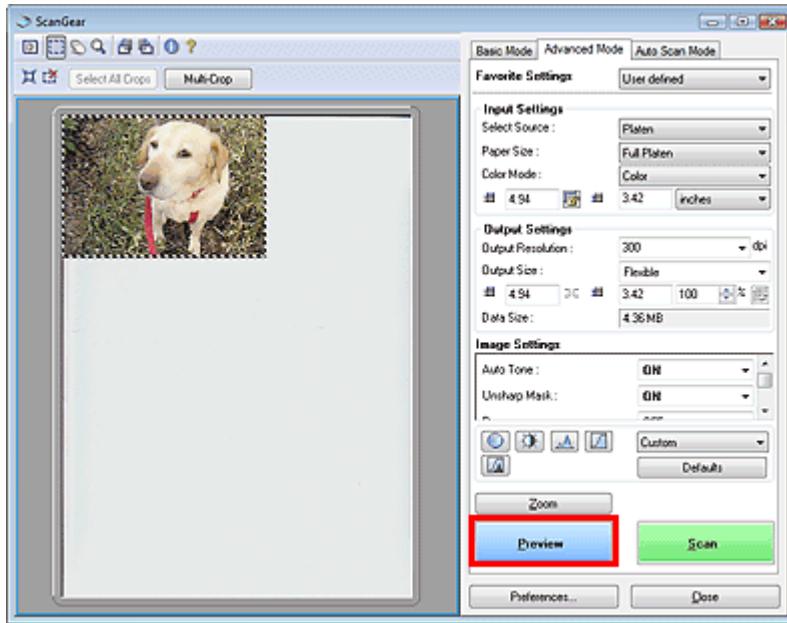

### Note

- If you scan without preview, the show-through reduction function will be active. This function is useful when scanning magazines. However, when scanning photos, the color tone of the scanned image may differ from the source due to the show-through reduction function. In that case, use preview first.

## 5. Set Output Settings.

▶ [Output Settings](#)

## 6. Adjust the cropping frame, correct image and adjust colors as required.

▶ [Adjusting Cropping Frames](#)

▶ [Image Settings](#)

▶ [Color Adjustment Buttons](#)

## 7. Click Scan.

Scanning starts.

### Note

- ScanGear's response after scanning can be specified in Status of ScanGear dialog after scanning on the Scan tab of the Preferences dialog box.  
▶ [Scan Tab](#)

## Related Topic

▶ [Advanced Mode Tab](#)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Scanning with Advanced Settings Using ScanGear (Scanner Driver) > Scanning in Auto Scan Mode

ScanGear

### Scanning in Auto Scan Mode

You can scan easily in Auto Scan Mode of ScanGear (scanner driver) by letting it automatically determine the type of documents placed on the Platen or ADF (Auto Document Feeder).

#### Note

- Supported document types are photos, Hagaki, business cards, magazines, newspapers, text documents and CD/DVD. To scan other documents, specify the document type on the Basic Mode tab or the Advanced Mode tab.
  - ▶ [Scanning in Basic Mode](#)
  - ▶ [Scanning in Advanced Mode](#)
- Place documents of the same size when scanning two or more documents from the ADF (Auto Document Feeder).


1. Place the documents on the Platen or ADF (Auto Document Feeder), then start ScanGear (scanner driver).

- ▶ [Placing Documents](#)
- ▶ [Starting ScanGear \(Scanner Driver\)](#)

2. Click Auto Scan Mode.

The Auto Scan Mode tab appears.

When scanning both sides of the documents, select the Scan duplex document when scanning from ADF checkbox.

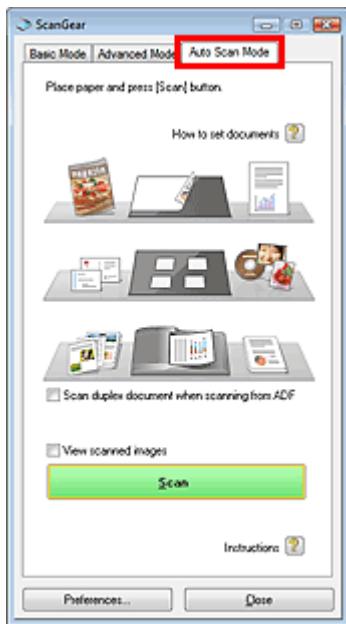

3. Click Scan.

Scanning starts.

#### Note

- ScanGear's response after scanning can be specified in Status of ScanGear dialog after scanning on the Scan tab of the Preferences dialog box.
  - ▶ [Scan Tab](#)

### Related Topic

► Auto Scan Mode Tab

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Scanning with Advanced Settings Using ScanGear (Scanner Driver) > Scanning Multiple Documents from the ADF (Auto Document Feeder) in Advanced Mode


ScanGear

## Scanning Multiple Documents from the ADF (Auto Document Feeder) in Advanced Mode

In Advanced Mode, you can specify the image brightness, color tone, etc. and scan multiple documents placed on the ADF (Auto Document Feeder) at one time.

When scanning from the ADF (Auto Document Feeder), documents are scanned without preview.

1. Place the documents on the ADF (Auto Document Feeder), then start ScanGear (scanner driver).
  - ▶ Placing Documents (ADF (Auto Document Feeder))
  - ▶ Starting ScanGear (Scanner Driver)
2. Click Advanced Mode and select Document (ADF Simplex) or Document (ADF Duplex) for Select Source.

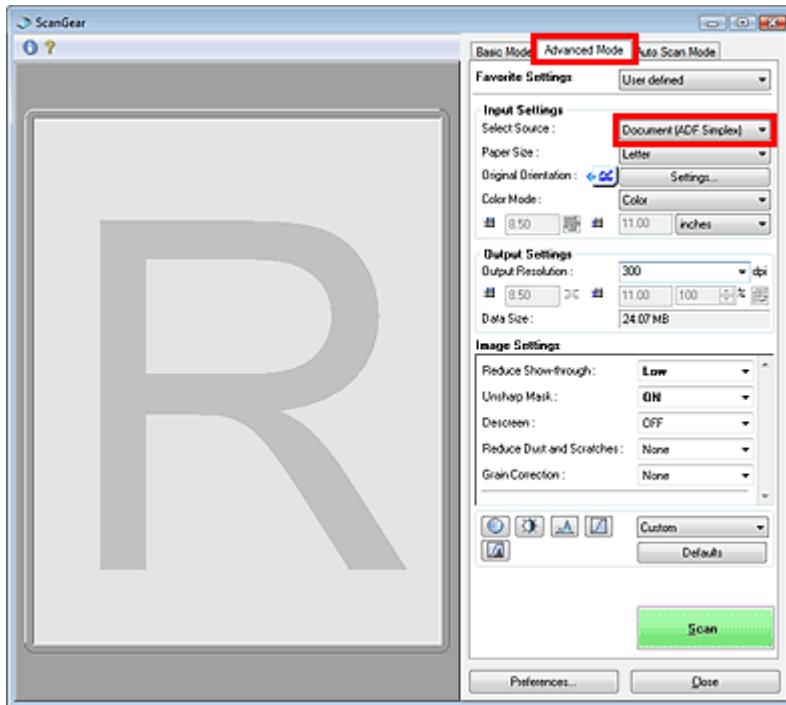

### Note

- Settings are not retained when you switch between modes.

3. Set Paper Size, Original Orientation and Color Mode.

▶ Input Settings

### Note

- You can specify how to output the paper when scanning both sides from the ADF (Auto Document Feeder) in ADF Duplex Paper Output Settings on the Scan tab of the Preferences dialog box.

▶ Scan Tab

4. Set Output Settings.

▶ Output Settings

**5. Make image corrections and color adjustments as required.**

 **Note**

- See the corresponding sections below for details on Image Settings and the Color Adjustment Buttons.
  - ▶ [Image Settings](#)
  - ▶ [Color Adjustment Buttons](#)

**6. Click Scan.**

Scanning starts.

 **Note**

- ScanGear's response after scanning can be specified in Status of ScanGear dialog after scanning on the Scan tab of the Preferences dialog box.
  - ▶ [Scan Tab](#)

**Related Topic**

- ▶ [Advanced Mode Tab](#)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Scanning with Advanced Settings Using ScanGear (Scanner Driver) > Scanning Multiple Documents at One Time in Advanced Mode

ScanGear

## Scanning Multiple Documents at One Time in Advanced Mode

You can scan two or more photos (small documents) on the Platen at one time by using Multi-Crop in Advanced Mode tab of ScanGear (scanner driver).

### Important

- The following types of documents cannot be cropped correctly.
  - Documents smaller than 1.18 inches (3 cm) square
  - Photos that have been cut to various shapes
- The following types of documents may not be cropped correctly. In that case, start ScanGear (scanner driver), then adjust the cropping frame on the Advanced Mode tab and scan again.
  - Photos that have a whitish border
  - Documents printed on white paper, hand-written text, business cards, etc.
  - Thin documents
  - Thick documents

▶ Scanning in Advanced Mode


1. Place the document on the Platen, then start ScanGear (scanner driver).

- ▶ Placing Documents
- ▶ Starting ScanGear (Scanner Driver)

2. Click Advanced Mode.


The Advanced Mode tab appears.

3. Click Preview.

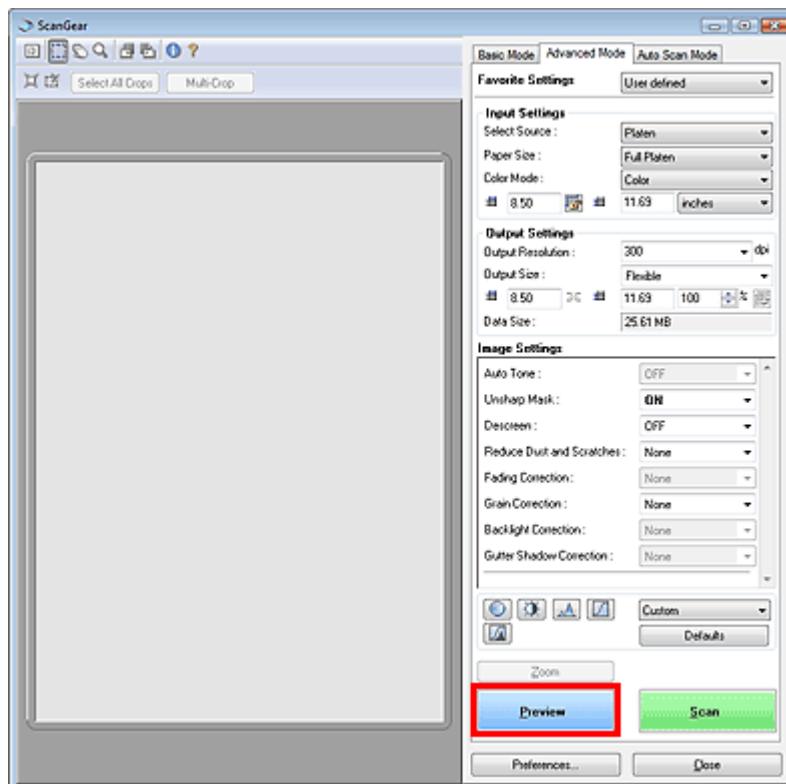


Preview image appears in the Preview area.

4. Click Multi-Crop above the Preview area.

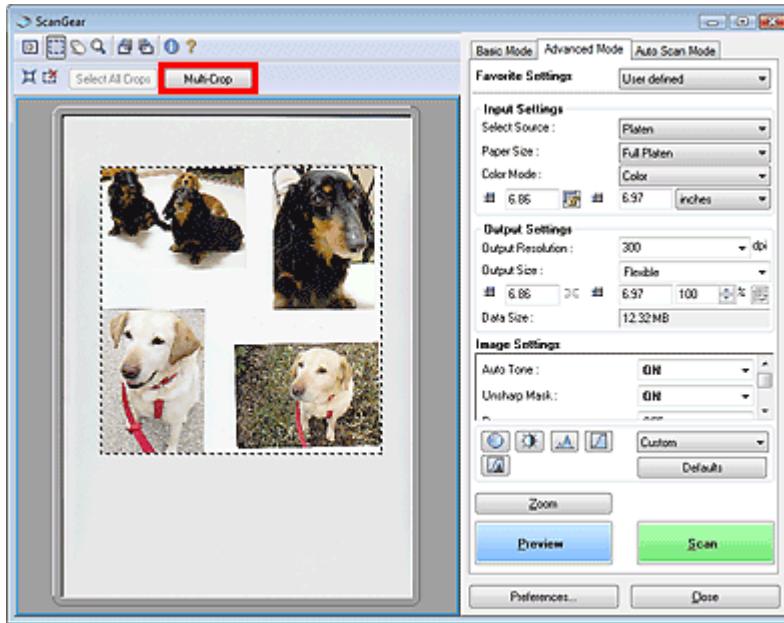

Each image is cropped (scan area is specified) automatically according to the document size.

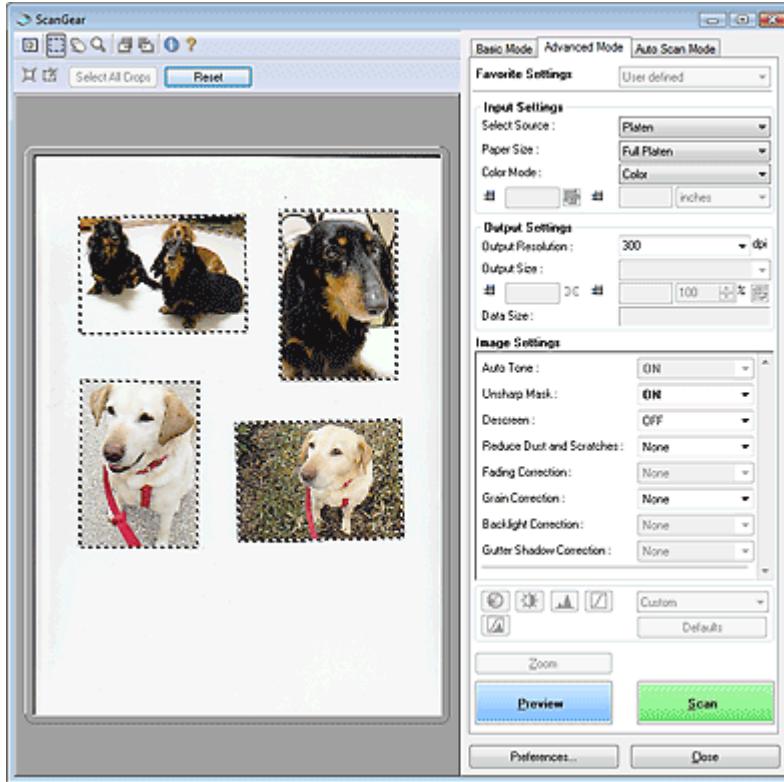

If you do not want to scan one, select the image and press the Delete key. Alternatively, select the image and click (Remove Cropping Frame) on the Toolbar.

### Note

- When you click Multi-Crop, Multi-Crop changes to Reset.  
Click Reset to cancel Multi Crop.
- Cancel Multi Crop to create custom cropping frames.

[Adjusting Cropping Frames](#)

## 5. Set Color Mode, Output Resolution, etc. as required.

[Input Settings](#)

[Output Settings](#)

### Note

- The settings are applied to all cropping frames.

**6.** Make image corrections as required.

▶ [Image Settings](#)

 **Note**

- The settings are applied to all cropping frames.

**7.** Click Scan.

Each cropping frame is scanned as an individual image.

 **Note**

- ScanGear's response after scanning can be specified in Status of ScanGear dialog after scanning on the Scan tab of the Preferences dialog box.

▶ [Scan Tab](#)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Correcting Images and Adjusting Colors with ScanGear (Scanner Driver)

ScanGear

# Correcting Images and Adjusting Colors with ScanGear (Scanner Driver)

The following sections provide you with tips and know-how on advanced scanning techniques involving color/brightness adjustment, etc.

- **Sharpening out-of-focus photos, reducing dust and scratches, and correcting faded colors**
  - ▶ Correcting Images (Unsharp Mask, Reduce Dust and Scratches, Fading Correction, etc.)
- **Previewing and changing the color tone of the entire image to scan**
  - ▶ Adjusting Colors Using a Color Pattern
- **Brightening colors that have faded with time or due to colorcast**
  - ▶ Adjusting Saturation and Color Balance
- **Adjusting images that are too dark or bright, or too flat due to lack of contrast**
  - ▶ Adjusting Brightness and Contrast
- **Adjusting the color tone using histogram (a graph showing brightness distribution)**
  - ▶ Adjusting Histogram
- **Adjusting the image brightness using tone curve (a graph of brightness balance)**
  - ▶ Adjusting Tone Curve
- **Sharpening characters in text documents or reducing show-through effects**
  - ▶ Setting Threshold

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Correcting Images and Adjusting Colors with ScanGear (Scanner Driver) > Correcting Images (Unsharp Mask, Reduce Dust and Scratches, Fading Correction, etc.)

ScanGear

## Correcting Images (Unsharp Mask, Reduce Dust and Scratches, Fading Correction, etc.)

The Image Settings functions in Advanced Mode tab of ScanGear (scanner driver) allow you to enhance the outline of the subjects, reduce dust/scratches and correct faded colors when scanning images.

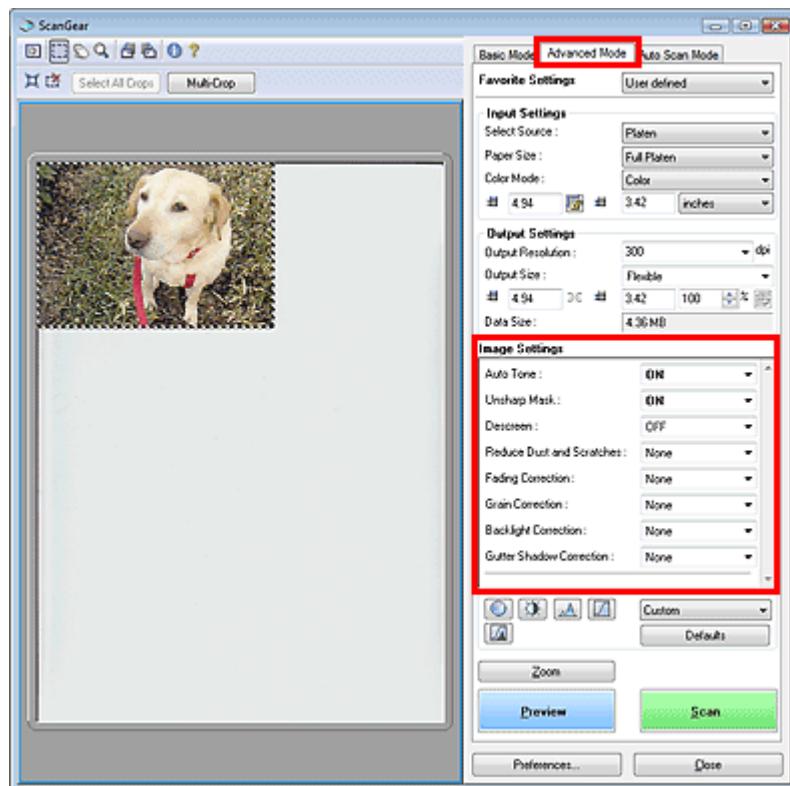

### Setting Items

Click ▾ of a function and select an item from the pull-down menu.



### Important

- Do not apply these functions to images without moire, dust/scratches or faded colors. The color tone may be adversely affected.
- See the section below for details and precautions on each function.  
▶ [Image Settings](#)

### Note

- See the section below to start ScanGear (scanner driver) in Advanced Mode tab and scan.  
▶ [Scanning in Advanced Mode](#)

### Adjusting the image brightness and color tone

Set Auto Tone to ON.

OFF	ON



### Reducing show-through in text documents or lightening the base color in recycled paper, newspapers, etc. when scanning from the ADF (Auto Document Feeder)

Set Reduce Show-through to Low or High according to the degree of show-through or darkness of the base color.

None	Low

### Sharpening slightly out-of-focus images

Set Unsharp Mask to ON.

OFF	ON

### Reducing gradations and stripe patterns

Set Descreen to ON.

OFF	ON

### Note

- "Moiré" is a phenomenon where uneven gradation or a stripe pattern appears when such photos or pictures printed with fine dots are scanned. Descreen is the function for reducing this moiré effect.

### Reducing dust and scratches


Set Reduce Dust and Scratches to Low, Medium or High according to the degree of dust and scratches.

None	Medium



### Correcting photos that have faded with time or due to colorcast

Set Fading Correction to Low, Medium or High according to the degree of fading or colorcast.

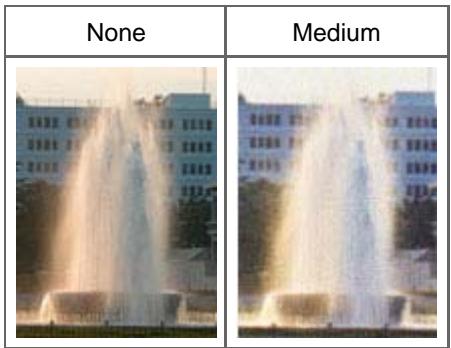


### Reducing graininess

Set Grain Correction to Low, Medium or High according to the degree of graininess.




### Correcting backlit images

Set Backlight Correction to Low, Medium or High according to the degree of backlight.

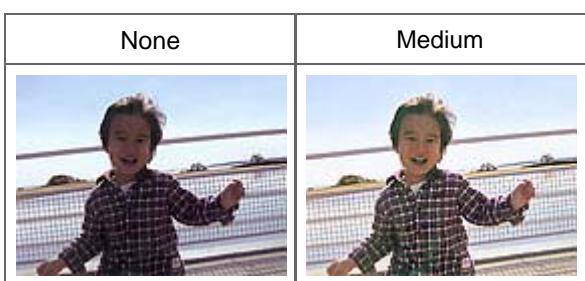

### Correcting shadows that appear between pages when scanning open booklets

Set Gutter Shadow Correction to Low, Medium or High according to the degree of shadows.

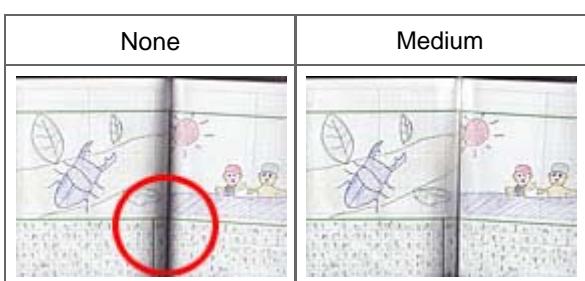



## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Correcting Images and Adjusting Colors with ScanGear (Scanner Driver) > Adjusting Colors Using a Color Pattern

ScanGear

### Adjusting Colors Using a Color Pattern

You can preview color changes and reproduce natural colors by using the Color Pattern function in ScanGear's Basic Mode tab.

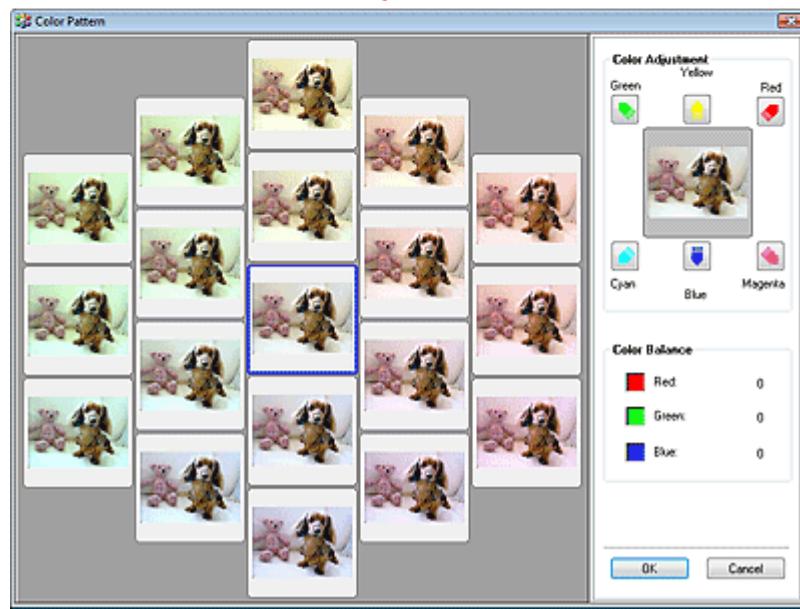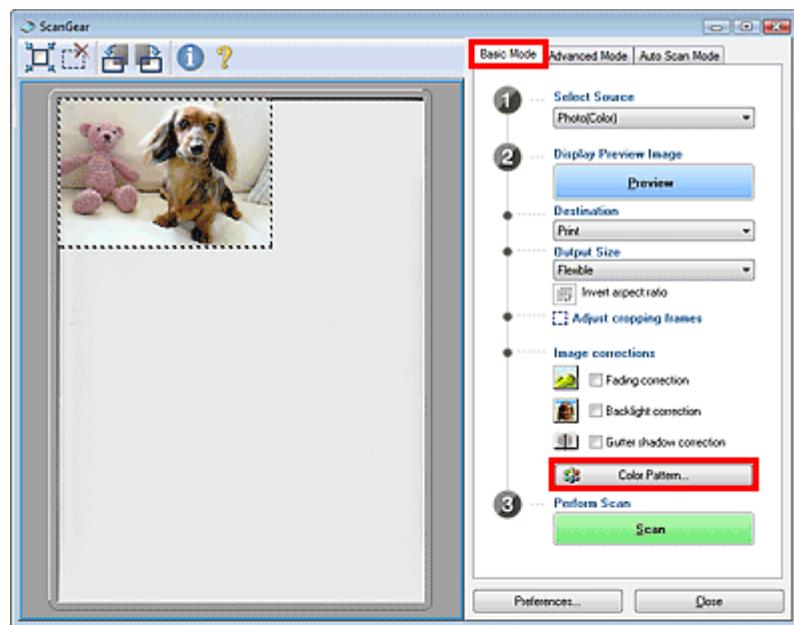

#### Color Adjustment


Correct colors that have faded with time or due to colorcast. Colorcast is a phenomenon where a specific color affects the entire picture due to the weather or ambient strong colors.

Click an arrow in Color Adjustment to emphasize the corresponding color.

Cyan & red, magenta & green and yellow & blue are complementary color pairs (each pair produces a shade of gray when mixed). You can reproduce the natural colors of the scene by reducing the cast color and increasing the complementary color.


It is recommended that you find a portion in the image where it should be white, and adjust the colors so that the portion turns white.

Preview image appears in the center. Preview image colors change as you adjust them.

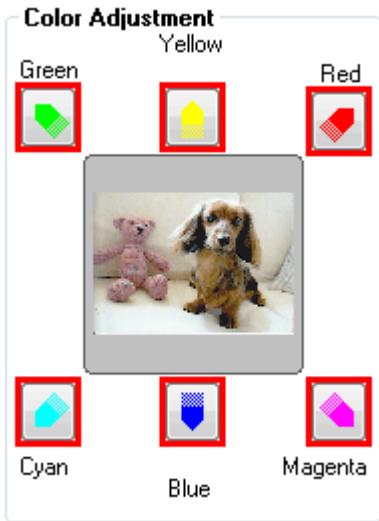

Below is an example of correcting a bluish image.

Since Blue and Green are too strong, click the Yellow and Magenta arrows to correct.

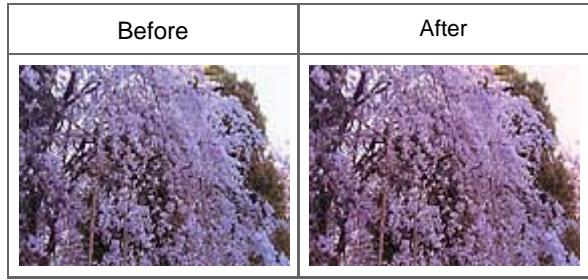

### Note

- Color adjustments are applied only to the scan area (cropping frame).
- You can also select a color tone from the color pattern displayed on the left of the Color Pattern screen.
- You can also use this function to add a specific tint to an image. Increase the magenta to add a warm tint, and increase the blue to add a cool tint.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Correcting Images and Adjusting Colors with ScanGear (Scanner Driver) > Adjusting Saturation and Color Balance

ScanGear

## Adjusting Saturation and Color Balance

In ScanGear's Advanced Mode tab, click  (Saturation/Color Balance).

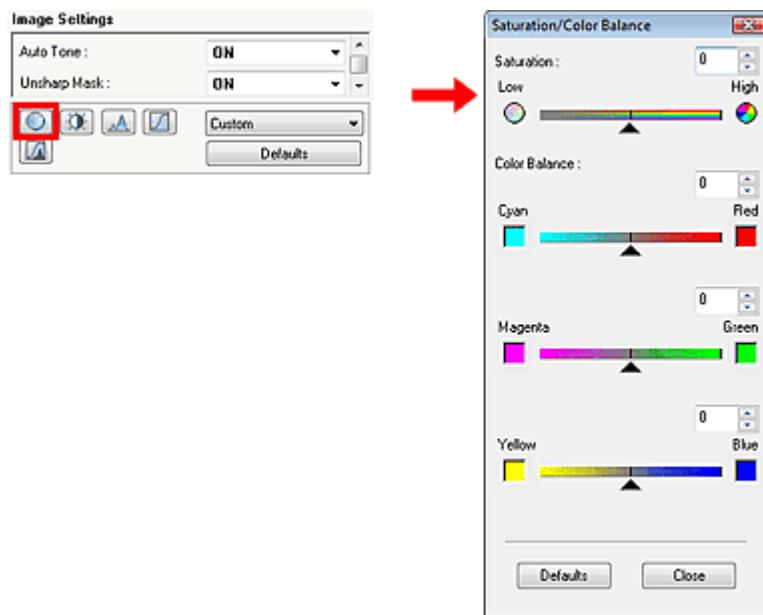


### Note

- Click Defaults to reset all adjustments in the current window.

## Saturation

Adjust the image's saturation (vividness). You can brighten colors that have faded with time, etc.

Move  (slider) under Saturation to the left to reduce the saturation (darker the image), and to the right to increase the saturation (brighten the image). You can also enter a value (-127 to 127).

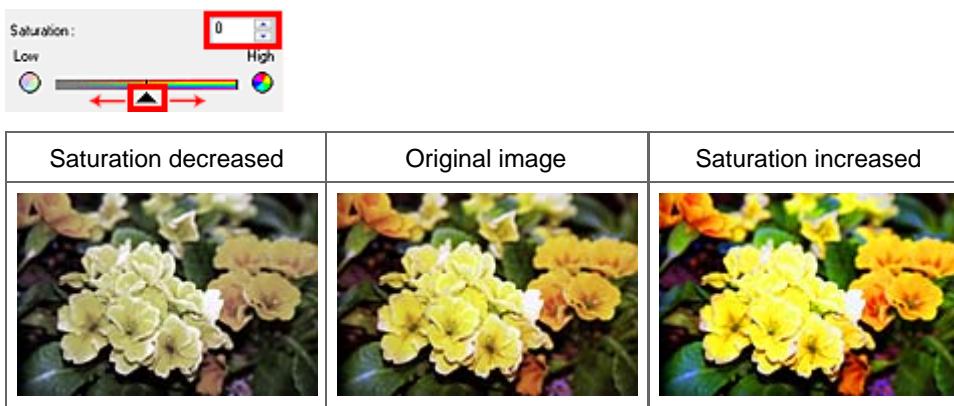

### Note

- The natural color tone of the original image may be lost if you increase saturation too much.

## Color Balance

Adjust images that have a colorcast. Colorcast is a phenomenon where a specific color affects the entire picture due to the weather or ambient strong colors.

Move  (slider) under each color pair to the left or right to emphasize the corresponding color.

Cyan & Red

**Magenta & Green****Yellow & Blue**

These are complementary color pairs (each pair produces a shade of gray when mixed). You can reproduce the natural colors of the scene by reducing the cast color and increasing the complementary color.

It is usually difficult to correct the image completely by adjusting only one color pair. It is recommended that you find a portion in the image where it should be white, and adjust all three color pairs so that the portion turns white.

You can also enter a value (-127 to 127).

Below is an example of an image in which the "Cyan & Red" pair has been adjusted.



Cyan is increased	Red is increased
A photograph of yellow flowers with green leaves. The cyan component has been increased, making the flowers appear more yellow and less blue.	The same photograph of yellow flowers, but with the red component increased. The flowers appear more orange and less yellow.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Correcting Images and Adjusting Colors with ScanGear (Scanner Driver) > Adjusting Brightness and Contrast

ScanGear

## Adjusting Brightness and Contrast

In ScanGear's Advanced Mode tab, click  (Brightness/Contrast).

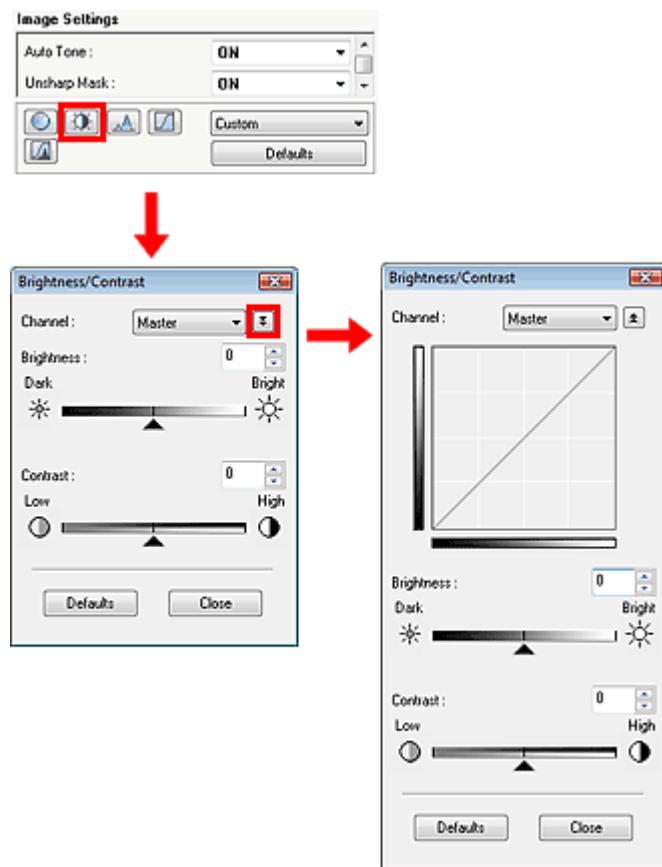

### Note

- Click  to switch to detailed view. Click  to return to the previous view.
- Click Defaults to reset all adjustments in the current window.

### Channel

Each dot of an image is a mixture of Red, Green and Blue in various proportions (gradation). These colors can be adjusted individually as a "channel."

- **Master**

Adjust the Red, Green and Blue combined.

- **Red**

Adjust the Red channel.

- **Green**

Adjust the Green channel.

- **Blue**

Adjust the Blue channel.

### Note

- Only Grayscale will be displayed in Channel when Color Mode is Grayscale.

## Brightness

Adjust the image brightness. Move ▲ (slider) under Brightness to the left to darken and right to brighten the image. You can also enter a value (-127 to 127).



Darkened	Original image	Brightened

### Note

- Highlights may be lost if you brighten the image too much, and shadows may be lost if you darken the image too much.

## Contrast

Contrast is the degree of difference between the brighter and darker parts of an image. Increasing contrast will increase the difference, thus sharpening the image. Decreasing contrast will decrease the difference, thus softening the image.

Move ▲ (slider) under Contrast to the left to decrease and right to increase the contrast of the image. You can also enter a value (-127 to 127).



Decreased contrast	Original image	Increased contrast

### Note

- Increasing the contrast is effective in adding a three-dimensional feel to soft images. However, shadows and highlights may be lost if you increase the contrast too much.


## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Correcting Images and Adjusting Colors with ScanGear (Scanner Driver) > Adjusting Histogram

ScanGear

### Adjusting Histogram

In ScanGear's Advanced Mode tab, click  (Histogram).

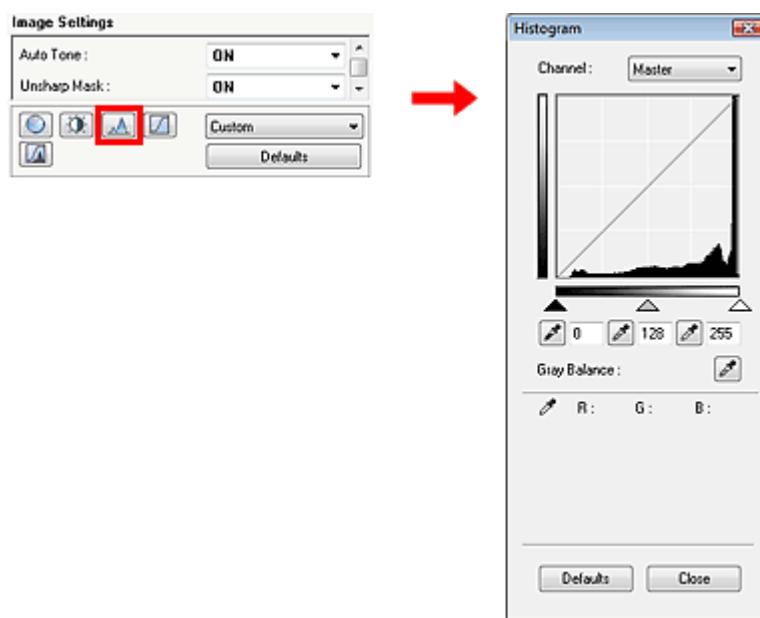

#### Note

- Click Defaults to reset all adjustments in the current window.

### Channel

Each dot of an image is a mixture of Red, Green and Blue in various proportions (gradation). These colors can be adjusted individually as a "channel."

- **Master**

Adjust the Red, Green and Blue combined.

- **Red**

Adjust the Red channel.

- **Green**

Adjust the Green channel.

- **Blue**

Adjust the Blue channel.

#### Note

- Only Grayscale will be displayed in Channel when Color Mode is Grayscale.

### Reading Histograms

You can open Histogram of a specified area for each Channel. The higher the Histogram peak, the more data is distributed to that level.




(1) Bright area	(2) Dark area	(3) Whole image

More data is distributed to the highlight side.  
More data is distributed to the shadow side.  
Data is widely distributed between the highlight and shadow.

### Adjusting Histograms (Using the Slider)

Select a Channel, then move (Black-point Slider) or (White-point Slider) to specify the level to be set as the shadow or highlight.

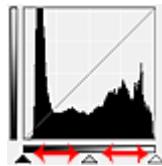

- All parts to the left of (Black-point Slider) will be black (level 0).
- The parts at (Mid-point Slider) will turn to the color exactly between the black-point and white-point.
- All parts to the right of (White-point Slider) will turn white (level 255).


Auto Tone is set to ON by default. Adjustments shown below are automatically performed.

### Moving the Black-point and White-point Sliders

Move the Black-point Slider or White-point Slider to adjust brightness.


#### Images with more data distributed to the highlight side

Move the Black-point Slider toward the highlight side.

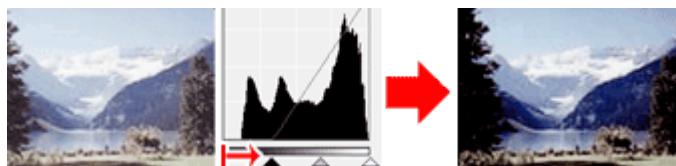


#### Images with more data distributed to the shadow side

Move the White-point Slider toward the shadow side.

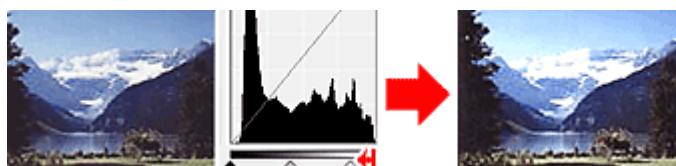

#### Images with widely distributed data

Move the Black-point Slider toward the highlight side, and White-point Slider toward the shadow side.

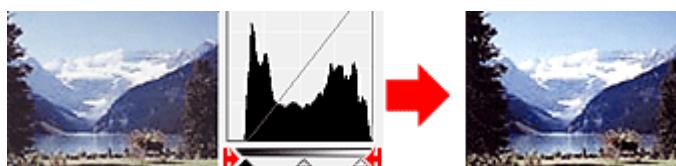


### Moving the Mid-point Slider


Move the Mid-point Slider to specify the level to be set as the middle of the tonal range.

**Images with more data distributed to the highlight side**

Move the Mid-point Slider toward the highlight side.

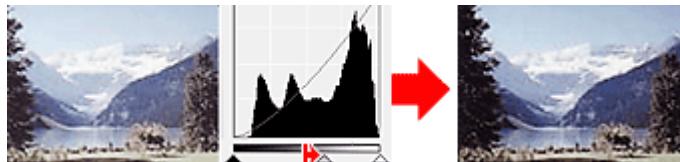**Images with more data distributed to the shadow side**

Move the Mid-point Slider toward the shadow side.

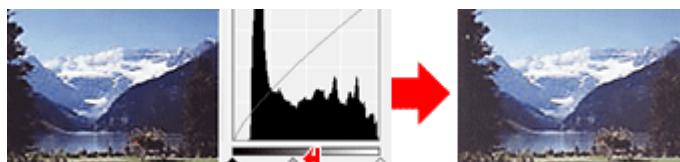**Adjusting Histograms (Using the Droppers)**

When you select a Channel and click the Black-point, Mid-point or White-point Dropper, the mouse pointer on the preview image changes to a dropper. Click a Dropper displayed below the histogram to change the setting.



- The point clicked with  (Black-point Dropper) will be the darkest point. You can also enter a value (0 to 245).
- The point clicked with  (Mid-point Dropper) will be the middle of the tonal range. You can also enter a value (5 to 250).
- The point clicked with  (White-point Dropper) will be the brightest point. You can also enter a value (10 to 255).
- Click  for Gray Balance and click the area you want to adjust the color in the preview image.

The clicked point will be set as the achromatic color reference, and the rest of the image is adjusted accordingly. For instance, if snow in a photo appears bluish, click the bluish part to adjust the whole image and reproduce natural colors.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Correcting Images and Adjusting Colors with ScanGear (Scanner Driver) > Adjusting Tone Curve

ScanGear

### Adjusting Tone Curve

In ScanGear's Advanced Mode tab, click  (Tone Curve Settings).

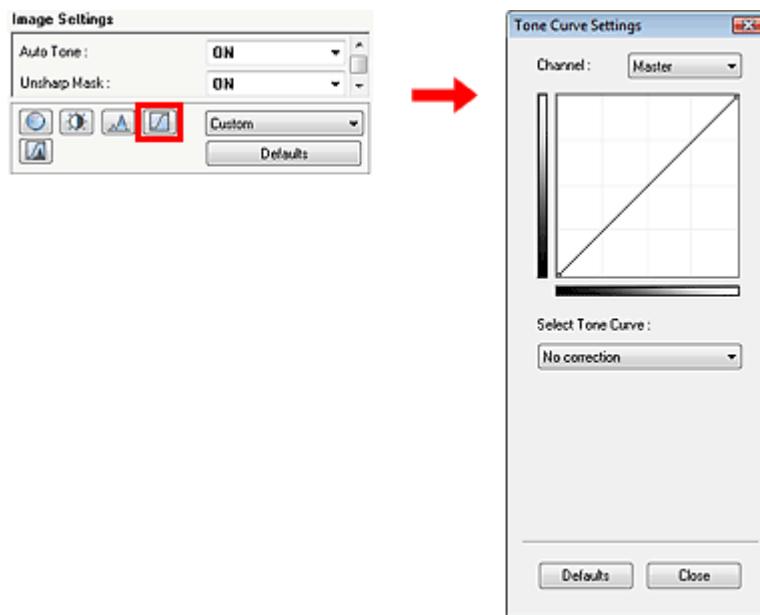

#### Note

- Click Defaults to reset all adjustments in the current window.

### Channel

Each dot of an image is a mixture of Red, Green and Blue in various proportions (gradation). These colors can be adjusted individually as a "channel."

- **Master**

Adjust the Red, Green and Blue combined.

- **Red**

Adjust the Red channel.

- **Green**

Adjust the Green channel.

- **Blue**


Adjust the Blue channel.

#### Note

- Only Grayscale will be displayed in Channel when Color Mode is Grayscale.

### Reading Tone Curves


With ScanGear (scanner driver), scanning images via a scanner is the input, and displaying to a monitor is the output. Tone Curve shows the balance of tone input and output for each Channel.

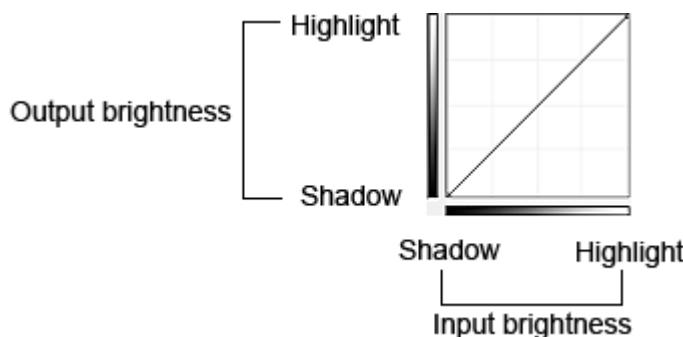

## Adjusting Tone Curve

In Select Tone Curve, select a tone curve from No correction, Overexposure, Underexposure, High contrast, Reverse the negative/positive image and Edit custom curve.

### No correction (No adjustment)

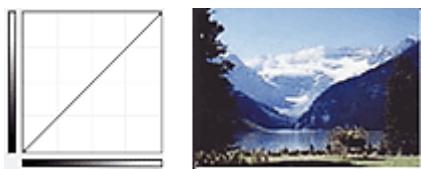

### Overexposure (Convex curve)

The midtone data of the input side is stretched toward the highlight of the output side, resulting in a bright-toned image when viewed on a monitor.




### Underexposure (Concave curve)

The midtone data of the input side is stretched toward the shadow of the output side, resulting in a dark-toned image when viewed on a monitor.




### High contrast (S curve)

The highlight and shadow of the input side are enhanced, resulting in a high-contrast image.

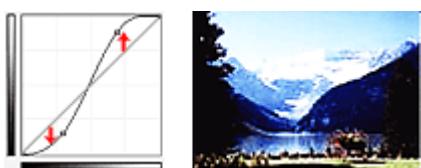

### Reverse the negative/positive image (Downward-sloping line)

The input and output sides are reversed, resulting in a negative-positive inverted image.

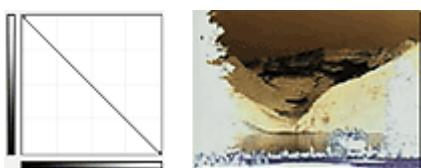

**Edit custom curve**

You can drag specific points on the Tone Curve to freely adjust the brightness of the corresponding areas.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Correcting Images and Adjusting Colors with ScanGear (Scanner Driver) > Setting Threshold


ScanGear

### Setting Threshold

The brightness of color and grayscale images is expressed in a value between 0 and 255. However, in creating black and white images, all colors are mapped to either black (0) or white (255). Threshold is the borderline value that determines a color as black or white. By adjusting the threshold level, you can sharpen text in a document or reduce show-through in newspapers.

This function is available when Color Mode is Black and White.

In ScanGear's Advanced Mode tab, click  (Threshold).

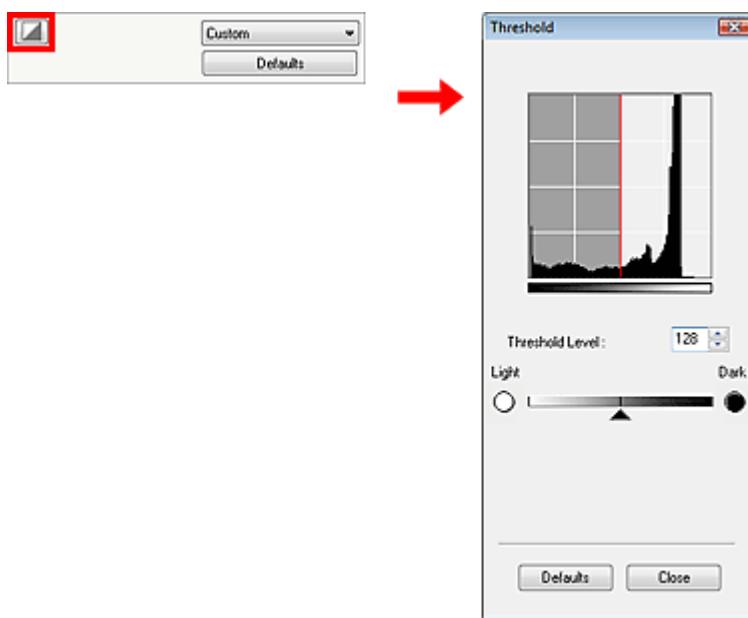

#### Note

- Click Defaults to reset all adjustments in the current window.

### Adjusting Threshold

Move  (slider) to the right to increase the threshold value and thus increase the black areas. Move the slider to the left to decrease the value and thus increase the white areas. You can also enter a value (0 to 255).



[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > ScanGear (Scanner Driver) Screens

ScanGear

# ScanGear (Scanner Driver) Screens

The following sections describe ScanGear's screens and functions, and how to use ScanGear (scanner driver).

▶ Basic Mode Tab

▶ Advanced Mode Tab

- Input Settings
- Output Settings
- Image Settings
- Color Adjustment Buttons

▶ Auto Scan Mode Tab

▶ Preferences Dialog Box

- Scanner Tab
- Preview Tab
- Scan Tab
- Color Settings Tab

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > ScanGear (Scanner Driver) Screens > Basic Mode Tab


ScanGear

### Basic Mode Tab

This mode allows you to scan easily by following the on-screen steps.

This section describes the settings and functions available in Basic Mode.

When scanning from the ADF (Auto Document Feeder), documents are scanned without preview. Also, the paper size is set to A4.

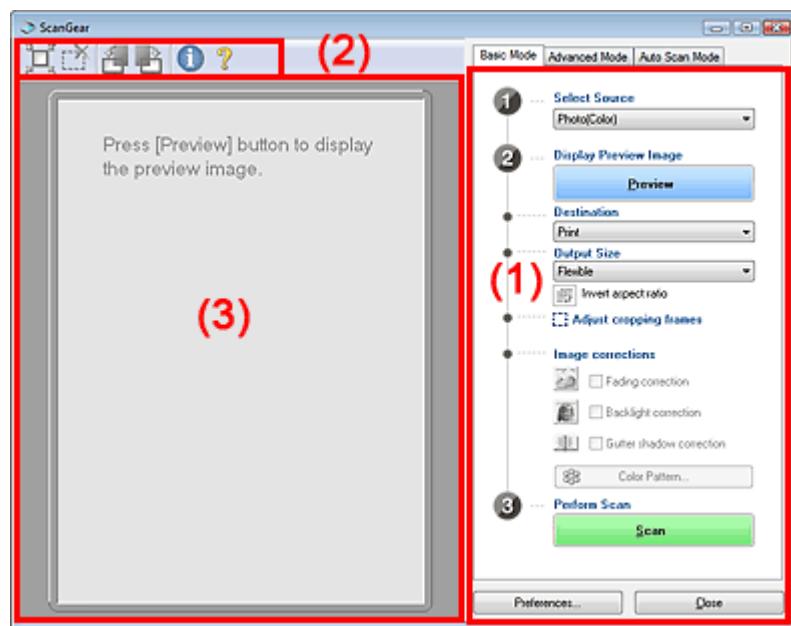

(1) Settings and Operation Buttons

(2) Toolbar

(3) Preview Area

#### Note

- The displayed items vary by document type and how the screen was opened.

#### Settings and Operation Buttons

- Select Source**
  - Photo(Color)**  
Scan color photos.
  - Magazine(Color)**  
Scan color magazines.
  - Newspaper(Grayscale)**  
Scan text and line drawings in black and white.
  - Document(Grayscale)**  
Scan photos and documents in black and white.  
Select this mode to create high-resolution black and white images.
  - Document(Color) ADF Simplex**  
Scan documents from the ADF (Auto Document Feeder) in color.
  - Document(Grayscale) ADF Simplex**  
Scan documents from the ADF (Auto Document Feeder) in black and white.
  - Document(Color) ADF Duplex**  
Scan both sides of documents from the ADF (Auto Document Feeder) in color.

- **Document(Grayscale) ADF Duplex**

Scan both sides of documents from the ADF (Auto Document Feeder) in black and white.

### Important


- Some applications do not support continuous scanning from the ADF (Auto Document Feeder). For details, refer to the application's manual.

### Note

- If you select an option other than Newspaper(Grayscale), the Unsharp Mask function will be active.
- If you select Photo(Color), Magazine(Color) or Document(Grayscale), the Auto Tone function will be active by default. However, if you disable Always Execute the Auto Tone on the Color Settings tab of the Preferences dialog box, the Auto Tone function will be disabled.
- If you select Magazine(Color), the Descreen function will be active.

#### • Display Preview Image

Click Preview to perform a trial scan. The scanned document appears in the Preview area. A cropping frame (scan area) is displayed according to the document size.

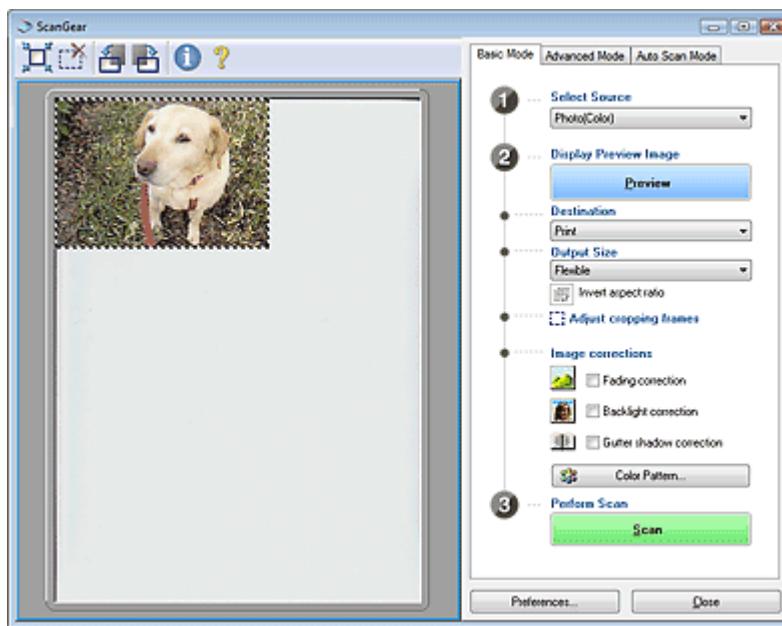

### Note

- If you scan without preview, colors are adjusted based on the document type selected in Select Source.
- When using the machine for the first time, scanner calibration starts automatically. Wait a while until the preview image appears.

#### • Destination

Select what you want to do with the scanned image.

- **Print**

Select this to print the scanned image on a printer.

- **Image display**

Select this to view the scanned image on a monitor.

- **OCR**

Select this to use the scanned image with OCR software.

OCR software is software that converts text scanned as an image into text data that can be edited in word processors and other programs.

#### • Output Size

Select an output size.

Output size options vary by the item selected in Destination.

- **Flexible**

When a cropping frame is displayed, the portion within the cropping frame will be scanned at 100%. When no cropping frame is displayed, the entire Preview area will be scanned.

- **Paper Size (L, A4, etc.)**

Select an output paper size. The portion within the cropping frame will be scanned at the size of the selected paper size. You can drag the cropping frame to enlarge/reduce it while maintaining the aspect ratio.


- **Monitor Size (1024 x 768 pixels, etc.)**

Select an output size in pixels.

A cropping frame of the selected monitor size will be displayed and the portion within the cropping frame will be scanned. You can drag the cropping frame to enlarge/reduce it while maintaining the aspect ratio.

- **Add/Delete...**

Opens the Add/Delete the Output Size dialog box, in which you can save custom output sizes. You can select this option when Destination is Print or Image display.

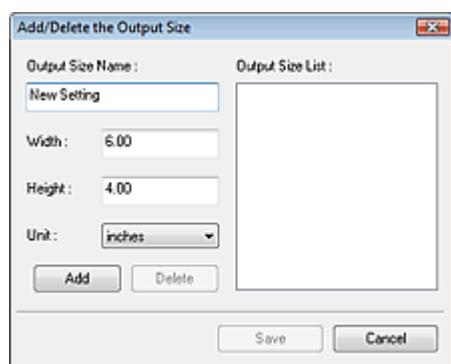

In the Add/Delete the Output Size dialog box, you can specify multiple output sizes and save them at one time. Saved items appear in the Output Size list along with the predefined items.

#### Add

To add a size, enter Output Size Name, Width and Height, then click Add. For Unit, you can select mm or inches when Destination is Print but you can only select pixels when Destination is Image display. The name of the added size appears in Output Size List. Click Save to save the items listed in Output Size List.

#### Delete

To delete an item, select it in Output Size List and click Delete. Click Save to save the items listed in Output Size List.

#### Important

- You cannot delete predefined output sizes such as A4 and 1024 x 768 pixels.

#### Note

- Save up to 10 output sizes to Output Size List.
- An error message appears when you enter a value outside the setting range. Enter a value within the setting range.

#### Important

- This function is not available when an ADF type is selected for Select Source.

#### Note

- Whether or how the cropping frame is initially displayed on a preview image can be specified on the Preview tab of the Preferences dialog box. See Cropping Frame on Previewed Images in "Preview Tab."

- **Invert aspect ratio**

This button is available when Output Size is set to anything but Flexible.


Click this button to rotate the cropping frame. Click again to return it to the original orientation.

- **Adjust cropping frames**

You can adjust the scan area within the Preview area.

If an area is not specified, the document will be scanned at the document size (Auto Crop). If an area is specified, only the portion in the cropping frame will be scanned.

▶ [Adjusting Cropping Frames](#)

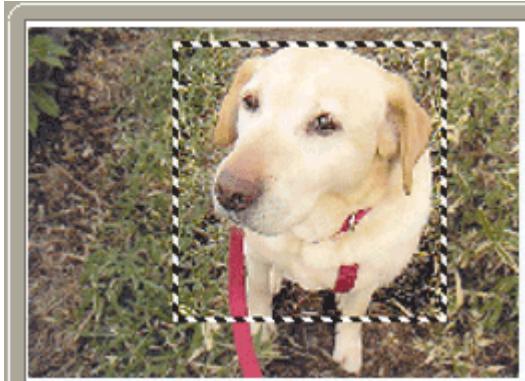

- **Image corrections**

- **Fading correction**

Corrects and scans photos that have faded with time or have a colorcast.

- **Backlight correction**

Corrects photos that have been shot against light.

- **Gutter shadow correction**

Corrects shadows that appear between pages when scanning open booklets.

### Important

- For precautions on using this function, see Gutter Shadow Correction in " [Image Settings](#) " (Advanced Mode tab).

- **Color Pattern...**

Allows you to adjust the image's overall color. You can correct colors that have faded due to colorcast, etc. and reproduce natural colors while previewing color changes.

▶ [Adjusting Colors Using a Color Pattern](#)

- **Perform Scan**

Click Scan to start scanning.

### Note

- When scanning starts, the progress will be displayed. Click Cancel to cancel the scan.

- **Preferences...**

The Preferences dialog box opens and you can make scan/preview settings.

▶ [Preferences Dialog Box](#)

- **Close**

Closes ScanGear (scanner driver).

## Toolbar

- **Toolbar**

You can rotate preview images using the Toolbar.



-  **(Auto Crop)**

Displays and adjusts the cropping frame automatically to the size of the document displayed in the Preview area. The scan area is reduced every time you click this button if there are cropping area within the cropping frame.

-  **(Remove Cropping Frame)**

Removes the selected cropping frame.

-  **(Rotate Left)**

Rotates the preview image 90 degrees counter-clockwise.

- The result will be reflected in the scanned image.
- The image returns to its original state when you preview again.

-  **(Rotate Right)**

Rotates the preview image 90 degrees clockwise.

- The result will be reflected in the scanned image.

- The image returns to its original state when you preview again.

-  **(Information)**

Displays the version of ScanGear (scanner driver) and the current scan settings (document type, etc.).

-  **(Open Guide)**

This page appears.

## Preview Area

- **Preview Area**

This is where a trial image is displayed after you click Preview.

You can specify the scan area (cropping frame) on the displayed image.

You can also create two or more cropping frames.

▶ [Adjusting Cropping Frames](#)

## Related Topic

▶ [Scanning in Basic Mode](#)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > ScanGear (Scanner Driver) Screens > Advanced Mode Tab


ScanGear

### Advanced Mode Tab

This mode allows you to make advanced scan settings such as the color mode, resolution, image brightness and color tone.

This section describes the settings and functions available in Advanced Mode.

When scanning from the ADF (Auto Document Feeder), documents are scanned without preview.

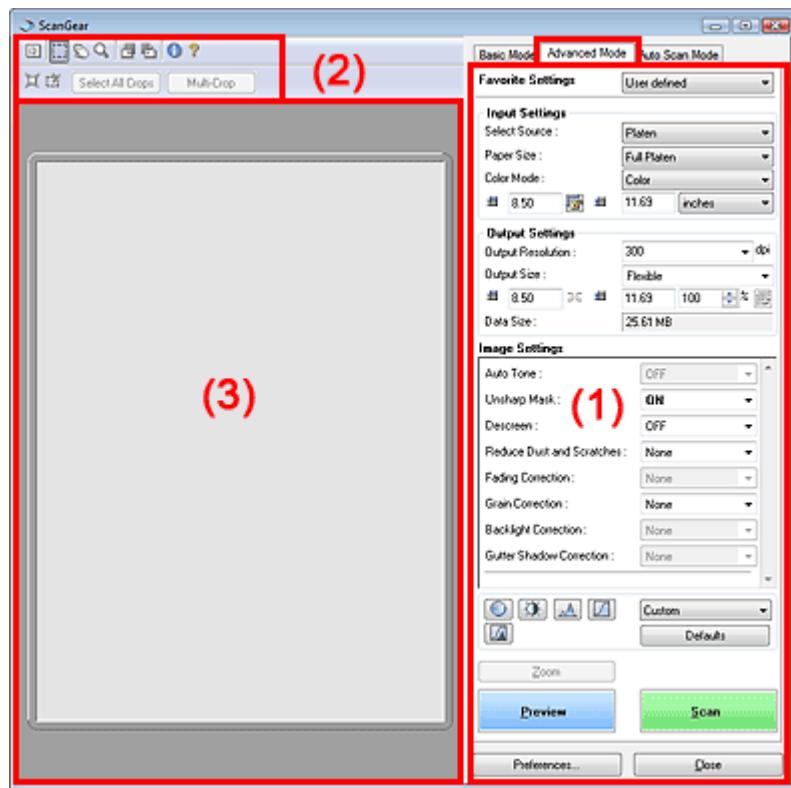

(1) Settings and Operation Buttons

(2) Toolbar

(3) Preview Area

#### Note


- The displayed items vary by document type and how the screen was opened.

### Settings and Operation Buttons

#### • Favorite Settings

You can name and save a group of settings (Input Settings, Output Settings, Image Settings and Color Adjustment Buttons), and load it as required. It is convenient to save a group of settings if you will be using it repeatedly. You can also use this to reload the default settings.

Select Add/Delete... from the pull-down menu and the Add/Delete Favorite Settings dialog box opens.

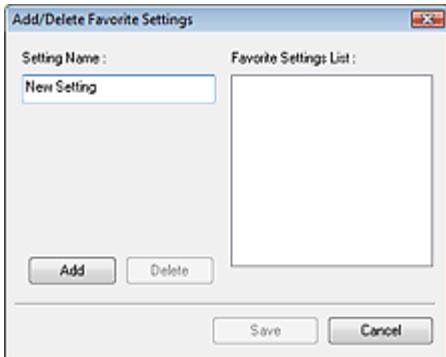

Enter Setting Name and click Add. The name appears in Favorite Settings List.  
When you click Save, the item appears in the Favorite Settings list along with the predefined items.

### Note

- You can set Add/Delete... in Favorite Settings after preview.
- Save up to 10 items to Favorite Settings List. To delete an item, select it in Favorite Settings List and click Delete. Click Save to save settings displayed in Favorite Settings List.

#### • Input Settings

Specify the input settings such as the document type and size.

 [Input Settings](#)

#### • Output Settings

Specify the output settings such as the output resolution and size.

 [Output Settings](#)

#### • Image Settings

Enable/disable various image correction functions.

 [Image Settings](#)

#### • Color Adjustment Buttons

These buttons can be used to make fine corrections to the image brightness and color tones. You can adjust the image's overall brightness or contrast, and adjust its highlight and shadow values (histogram) or balance (tone curve).

 [Color Adjustment Buttons](#)

#### • Zoom


Rescans the portion within the cropping frame at higher magnification. When the image is zoomed in, Zoom changes to Undo. Click Undo to return the display to its non-magnified state.

### Note

- Zoom rescans the image and displays high-resolution image in Preview.
-  (Enlarge/Reduce) on the Toolbar zooms in on the preview image quickly. However, the resolution of the displayed image will be low.

#### • Preview

Performs a trial scan.

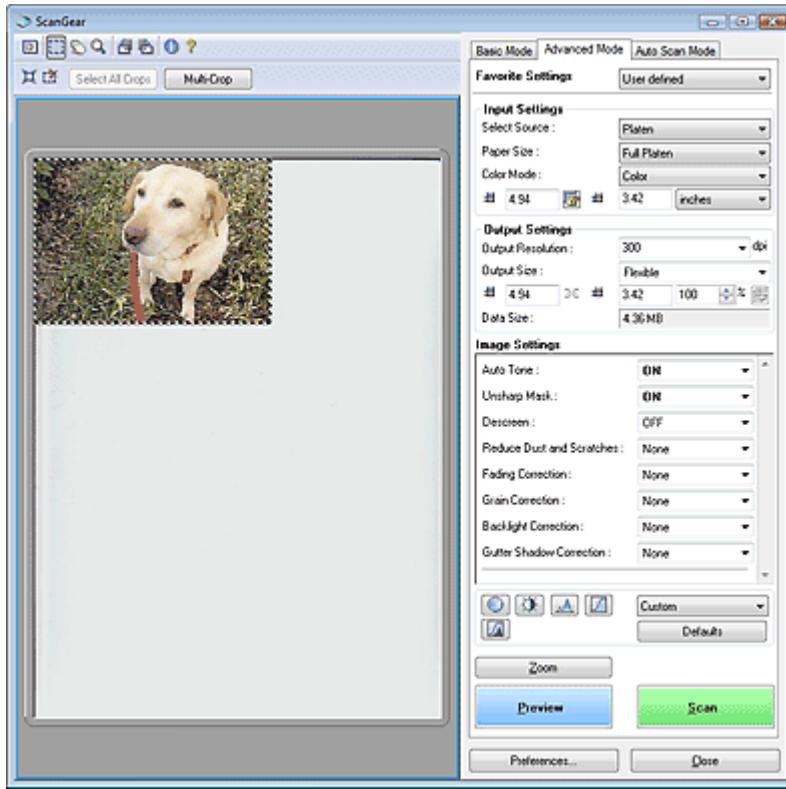

- **Scan**

Starts scanning.

### Note

- When scanning starts, the progress will be displayed. Click Cancel to cancel the scan.
- When scanning is completed, a dialog box prompting you to select the next action may open. Follow the prompt to complete. For details, see Status of ScanGear dialog after scanning in "Scan Tab" (Preferences dialog box).
- If the total size of the images to be scanned exceeds 100 MB, a message appears warning you that scanning may take time. Click OK to continue, or Cancel to cancel the scan.

- **Preferences...**

The Preferences dialog box opens and you can make scan/preview settings.

▶ [Preferences Dialog Box](#)

- **Close**

Closes ScanGear (scanner driver).

## Toolbar

- **Toolbar**

With the Advanced Mode tab Toolbar, you can make adjustments to the preview image and also select a part of the displayed image.



-  **(Clear)**

Click this button to delete the preview image.  
It also resets the Toolbar and color adjustment settings.

-  **(Crop)**

Allows you to specify the scan area by dragging the mouse.

-  **(Move Image)**

If an enlarged image is too large to fit in the Preview area, you can click this button and drag the image across the screen until the part you want to see is displayed. You can also move the image using the scroll bars.

-  **(Enlarge/Reduce)**

Click this button then click on the image to enlarge it (zoom in). Right-click on the image to reduce it (zoom out).

-  **(Rotate Left)**

Rotates the preview image 90 degrees counter-clockwise.

- The result will be reflected in the scanned image.
- The image returns to its original state when you preview again.

-  **(Rotate Right)**

Rotates the preview image 90 degrees clockwise.

- The result will be reflected in the scanned image.
- The image returns to its original state when you preview again.

-  **(Information)**

Displays the version of ScanGear (scanner driver) and the current scan settings (document type, etc.).

-  **(Open Guide)**

This page appears.

-  **(Auto Crop)**

Displays and adjusts the cropping frame automatically to the size of the document displayed in the Preview area. The scan area is reduced every time you click this button if there are cropping area within the cropping frame.

-  **(Remove Cropping Frame)**

Removes the selected cropping frame.

- **Select All Crops**

This button is available when there are two or more cropping frames.

All cropping frames will be displayed in thick broken lines. The settings will be applied to all the cropping frames.

- **Multi-Crop**

Automatically detects and crops multiple documents placed on the Platen.

You can remove the cropping frames of the images you do not want to scan.

### **Note**

- See "[Scanning Multiple Documents at One Time in Advanced Mode](#)" to scan multiple documents at one time.

## Preview Area

- **Preview Area**

This is where a trial image is displayed after you click Preview.

You can specify the scan area (cropping frame) on the displayed image.

You can also create two or more cropping frames.

▶ [Adjusting Cropping Frames](#)

## Related Topic


▶ [Scanning in Advanced Mode](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > ScanGear (Scanner Driver) Screens > Input Settings

**ScanGear**

### Input Settings

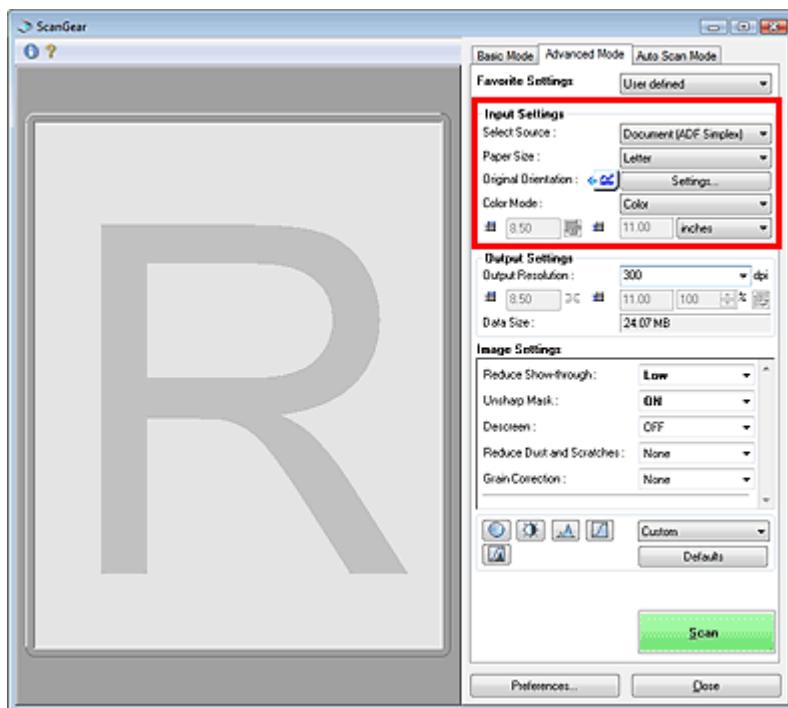

Input Settings allows you to set the following items:

- **Select Source**

The type of document to be scanned is displayed. To scan from the Platen, select Platen. To scan from the ADF (Auto Document Feeder), select Document (ADF Simplex) or Document (ADF Duplex).

**Important**

- Even if you select to scan from the ADF (Auto Document Feeder), some applications do not support continuous scanning. For details, refer to the application's manual.

- **Paper Size**

Select the size of the document to be scanned.

When scanning both sides of the documents from the ADF (Auto Document Feeder), select A4 or Letter.

When you select a size, the Preview area size changes accordingly.

**Important**

- Some applications have a limit to the amount of scan data they can receive. ScanGear (scanner driver) can scan data that is of:
  - 21000 pixels x 30000 pixels or less
- If you change Paper Size after previewing, the preview image will be deleted.


**Note**

- If you are not sure which size you should select for Paper Size, set Paper Size to Full Platen, then measure the size of the document and enter the values into (Width) and (Height).

- **Original Orientation**

Specify the orientation of the documents to scan from the ADF (Auto Document Feeder).

Click Settings... to open the Orientation dialog box.

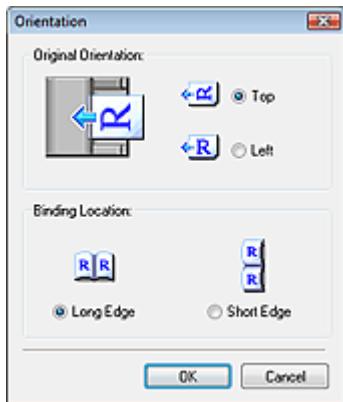

## Important

- The Orientation dialog box can only be opened when Select Source is Document (ADF Simplex) or Document (ADF Duplex).
- Binding Location cannot be specified when Select Source is Document (ADF Simplex).

### Color Mode

Select how to scan the document.

- Color

Select this mode to scan color documents or to create color images. This mode renders the image in 256 levels (8 bit) of R(ed), G(reen), and B(lue).

- Grayscale

Select this mode to scan black and white photos, or to create black and white images. This mode renders the image in 256 levels (8 bit) of black and white.

- Black and White

Select this mode to scan photos and other documents in black and white. This mode renders the image in black and white. The contrast in the image is divided at certain levels (threshold level)

into black and white and is rendered in two colors. The threshold level can be set with  (Threshold).

### Input Size

The Paper Size is displayed before preview. After preview, the cropping frame size is displayed.

You can adjust the cropping frame (scan area) size by entering the values into  (Width) and  (Height).

Click  (Keep Aspect Ratio) and change it to  (Locked) to maintain the aspect ratio when you specify the cropping frame size.

## Important

- Input size settings are available only when Output Size in Output Settings is Flexible. If you select a size other than Flexible, a cropping frame calculated from Output Size and Output Resolution is displayed, and its aspect ratio is fixed.

## Note


- The values you can enter will be within the range of the selected document size. The minimum size is 96 pixels x 96 pixels when Output Resolution is 600 dpi and enlarge/reduce is 100%.
- When Auto Crop is performed, the aspect ratio will not be maintained since the size will be prioritized.
- See "Adjusting Cropping Frames" for details on cropping frames.

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > ScanGear (Scanner Driver) Screens > Output Settings

**ScanGear**

## Output Settings

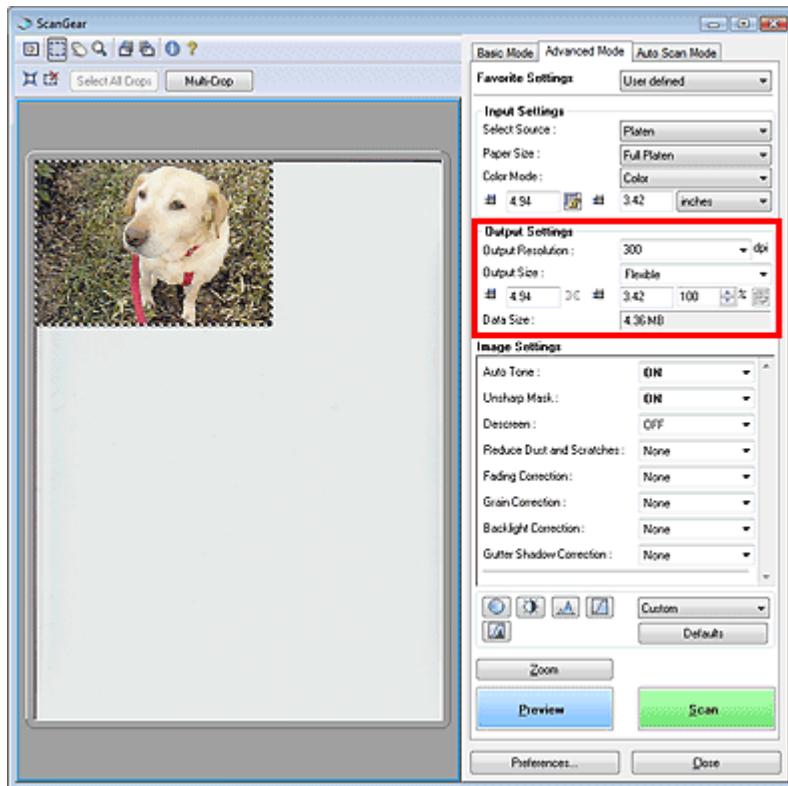

Output Settings allows you to set the following items:

- **Output Resolution**

Select the resolution to scan at.

The higher the resolution (value), the more detail in your image.

Select a resolution from the options displayed by clicking the button, or enter a value in 1 dpi increments.

▶ Resolution

### When Select Source is Platen

You can enter a value within the range of 25 dpi to 19200 dpi.

### When Select Source is Document (ADF Simplex) or Document (ADF Duplex)

You can enter a value within the range of 25 dpi to 600 dpi.

- **Output Size**

Select an output size.

Select Flexible to set custom sizes or select a size for printing or displaying. Select Add/Delete... to set custom size and save it as a new output size option.

- **Flexible**

You can specify the output resolution and scale, and adjust the cropping frame. When no cropping frame is displayed, the entire Preview area will be scanned. When a cropping frame is displayed, the portion within the cropping frame will be scanned.


To enlarge/reduce the scanned image, enter values into (Width) and (Height) in Output Settings or specify a value (by 1%) for %. The maximum value available for % depends on the Output Resolution. % can be specified for up to 19200 dpi (the maximum available output resolution).

- **Paper Size (L, etc.) & Monitor Size (1024 x 768 pixels, etc.)**

Width, height and scale cannot be specified. The preview image will be cropped according to the selected output size and resolution. The portion within the cropping frame will be scanned at the size of the selected paper/monitor size. You can drag the cropping frame to enlarge, reduce or move it while maintaining the aspect ratio.

- **Add/Delete...**

Opens the Add/Delete the Output Size dialog box, in which you can save/delete custom output sizes.

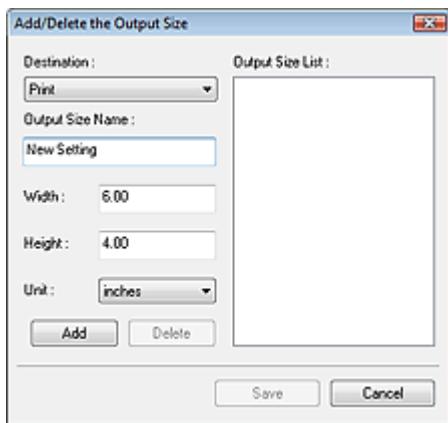

In the Add/Delete the Output Size dialog box, you can specify multiple output sizes and save them at one time. Saved items appear in the Output Size list along with the predefined items.

#### Add

To add a size, select Print or Image display for Destination, then enter Output Size Name, Width, and Height then click Add. The name of the added size appears in Output Size List.

Click Save to save all the added items. Click Cancel to cancel all items that were added after you opened the Add/Delete the Output Size dialog box.

#### Delete

To delete an item, select it in Output Size List and click Delete. The deleted items will disappear from Output Size List.

When you click Save, the items that disappeared from Output Size List will be deleted. When you click Cancel, they will not be deleted.



#### Important

- You cannot delete predefined output sizes such as A4 and 1024 x 768 pixels.



#### Note

- Save up to 10 output sizes to Output Size List for each destination.
- An error message appears when you enter a value outside the setting range. Enter a value within the range displayed in the message.
- Unit varies by Destination. For Print, select mm or inches. For Image display, the unit is pixels.



#### Note

- See "Adjusting Cropping Frames" for details on cropping frames.
- Whether or how the cropping frame is initially displayed on a preview image can be specified on the Preview tab of the Preferences dialog box. See Cropping Frame on Previewed Images in "Preview Tab".



- **(Switch Aspect Ratio)**

Rotate the cropping frame 90 degrees. Click again to return it to the original orientation.

- **Data Size**

An image file is created when the preview image is scanned. Its size when saved in BMP format is displayed.



#### Note


- When the file size is 100 MB or more, the value appears in red. In that case, a warning message appears when you click Scan. It is recommended that you change each settings to set Data Size to 99 MB or less, and then scan.

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > ScanGear (Scanner Driver) Screens > Image Settings

### ScanGear

## Image Settings

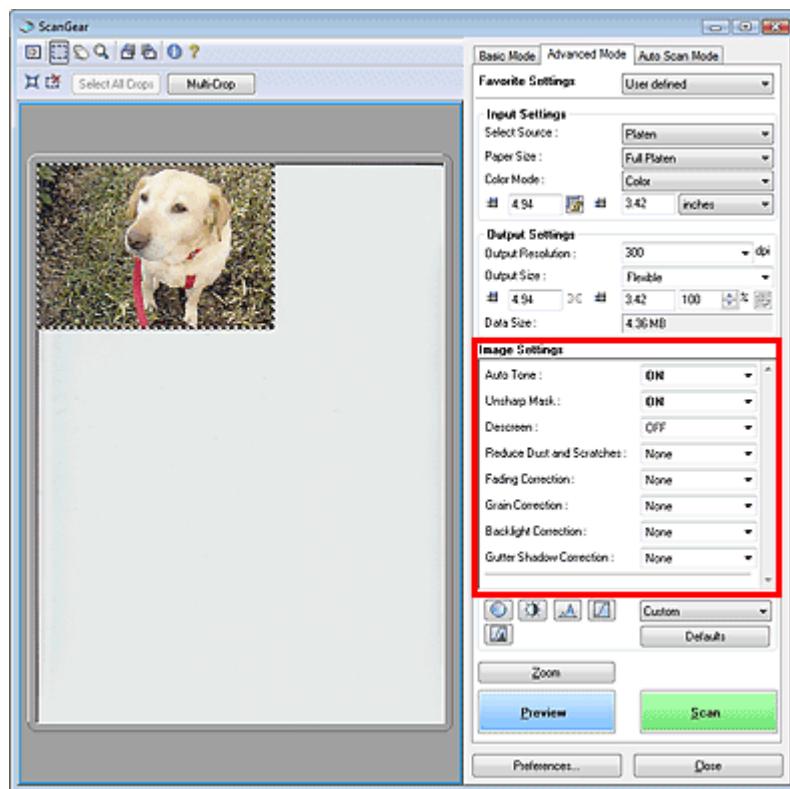

### Important

- Do not apply these functions to images without moire, dust/scratches or faded colors. The color tone may be adversely affected.
- Image correction results may not be reflected in the preview image.

### Note

- Selectable settings depend on color mode settings.
- Scanning may take longer when you use Image Settings.

Image Settings allows you to set the following items:

#### • Auto Tone

When this is set to ON, the brightness of the specified portion of the image is automatically optimized. The result of the color adjustment will be reflected in the entire image. This setting is ON by default.

### Important

- You can set Auto Tone after preview.
- You can set this setting when Recommended is selected on the Color Settings tab of the Preferences dialog box.
- When you click Multi-Crop, this setting turns to ON and you cannot change it.

### Note

- The color tone may change from the source image due to the Auto Tone function. In that case, set Auto Tone to OFF.

#### • Reduce Show-through (when scanning from the ADF (Auto Document Feeder))

Use this function to reduce show-through in duplex documents or lighten the base color in recycled paper and other colored paper when scanning from the ADF (Auto Document Feeder). This setting is Low by default.

- **None**

Show-through will not be reduced.

- **Low**

Select this to reduce show-through in duplex documents or lighten the base color. It is recommended that you normally select this setting.

- **High**

Select this when show-through is apparent. This can affect the tone of the image.

- **Unsharp Mask**

When this is set to ON, the outline of the subjects is emphasized to sharpen the image. This setting is ON by default.

- **Descreen**

Printed photos and pictures are displayed as a collection of fine dots. "Moire" is a phenomenon where uneven gradation or a stripe pattern appears when such photos or pictures printed with fine dots are scanned. Descreen is the function for reducing this moire effect. This setting is OFF by default.

### Note

- Even if Descreen is set to ON, some moire effects may remain if Unsharp Mask is set to ON. In that case, set Unsharp Mask to OFF.
- Selecting Magazine(Color) in Select Source in Basic Mode tab has the same effect as setting Descreen to ON in Advanced Mode tab.

- **Reduce Dust and Scratches**

Scanned photos may contain white dots caused by dust or scratches. Use this function to reduce such noise. This setting is None by default.

- **None**

Dust and scratches will not be reduced.

- **Low**

Select this to reduce small dust particles and scratches. Large ones may remain.

- **Medium**

It is recommended that you normally select this setting.

- **High**

Select this to reduce small/large dust particles and scratches. Evidence of the reduction process may remain and may also remove delicate parts of the image.

### Important

- This function may not be effective for some types of photos.

### Note

- It is recommended that you select None when scanning printed materials.

- **Fading Correction**

Use this function to correct photos that have faded with time or have a colorcast. Colorcast is a phenomenon where a specific color affects the entire picture due to the weather or ambient strong colors. This setting is None by default.

- **None**

Fading correction will not be applied.

- **Low**

Select this to correct a small amount of fading and colorcast.

- **Medium**

It is recommended that you normally select this setting.

- **High**

Select this to correct a large amount of fading and colorcast. This can affect the tone of the image.

### Important

- You can set Fading Correction after preview.

- Fading Correction may not be effective if the scan area is too small.
- You can set this setting when Recommended is selected on the Color Settings tab of the Preferences dialog box.
- When you click Multi-Crop, this setting turns to None and you cannot change it.

#### ● Grain Correction

Use this function to reduce graininess (roughness) in photos taken with high-speed or sensitized film. This setting is None by default.

- **None**

Graininess will not be reduced.

- **Low**

Select this when the photo is slightly grainy.

- **Medium**

It is recommended that you normally select this setting.

- **High**

Select this when the photo is very grainy. This can affect the gradation and sharpness of the image.

#### Important

- Grain Correction may not be effective if the scan area is too small.

#### ● Backlight Correction

Use this function to correct photos that have been shot against light.

When you change the Backlight Correction setting, the result will be reflected in the preview image.

- **None**

Backlight correction will not be applied.

- **Low**

Select this to correct slightly backlit photos. This will not affect the image contrast.

- **Medium**

It is recommended that you normally select this setting.

- **High**

Select this to correct strongly backlit photos. This can affect the image contrast.

#### Important

- You can set Backlight Correction after preview.
- You can set this setting when Recommended is selected on the Color Settings tab of the Preferences dialog box.
- Backlight Correction may not be effective if the scan area is too small.
- When you click Multi-Crop, you cannot change this setting.

#### Note

- Noise patterns may appear when Backlight Correction is applied. Applying Grain Correction and setting Unsharp Mask to OFF may reduce the noise patterns.

#### ● Gutter Shadow Correction

Use this function to correct shadows that appear between pages when scanning open booklets.

When you set the Gutter Shadow Correction setting in the preveiw image, the result will be reflected.

Preview the effects before scanning, as results vary depending on the type of document and how it is pressed.

Unclear or blurred text/lines caused by curved pages are not corrected.

- **None**

Gutter shadow will not be corrected.

- **Low**

Select this when the effect level is too strong with the medium setting.

- **Medium**

It is recommended that you normally select this setting.

- **High**

Select this when the effect level is too weak with the medium setting.

### Important

- Do not place items that weigh 4.4 lbs (2.0 kg) or more on the Platen. Also, do not press on the document with a force exceeding 4.4 lbs (2.0 kg). If you press heavily, the scanner may not work correctly or you might break the glass.
- When you click Multi-Crop, this setting is not available. Click Reset then change the setting.
- Align the document with the edge of the Platen. If not, the shadow will not be corrected properly.



- Shadows may not be corrected properly depending on the document. If the page background is not white, shadows may not be detected correctly or may not be detected at all.
- While scanning, press down on the spine with the same amount of pressure you used to preview the scan. If the binding part is not even, the shadow will not be corrected properly.



- How to place the document depends on your model and the document to be scanned.

### Note

- Cover the document with black cloth if white spots, streaks, or colored patterns appear in scan results due to ambient light entering between the document and the Platen.
- If the shadow is not corrected properly, adjust the cropping frame on the preview image.  
➡ [Adjusting Cropping Frames](#)


[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > ScanGear (Scanner Driver) Screens > Color Adjustment Buttons

ScanGear

### Color Adjustment Buttons

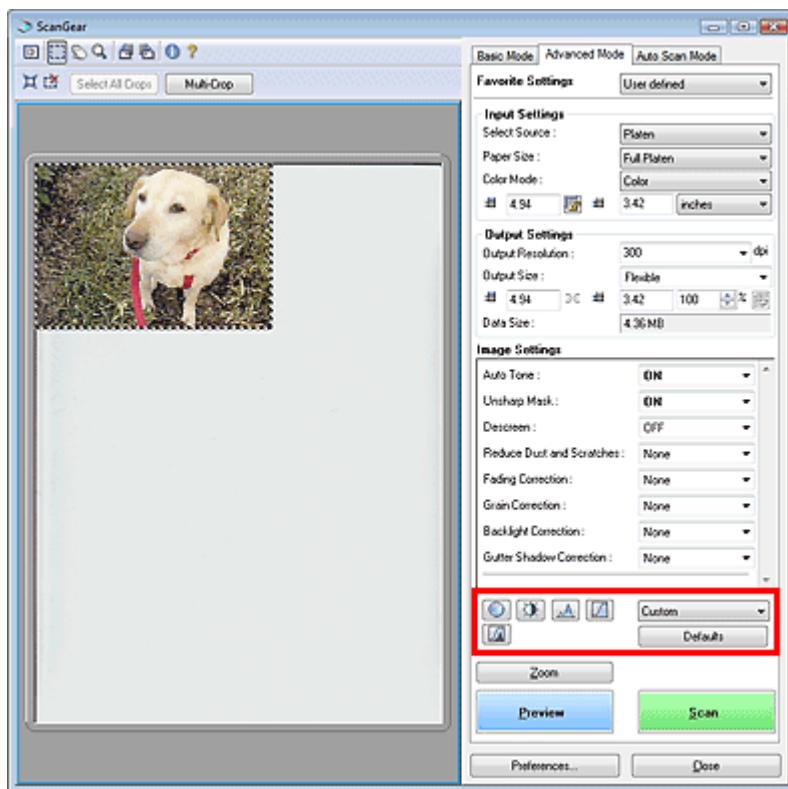

The Color Adjustment Buttons allow you to make fine corrections to the image brightness and color tones. You can adjust the image's overall brightness or contrast, and adjust its highlight and shadow values (histogram) or balance (tone curve).

#### Important

- The Color Adjustment Buttons are not available when you apply Multi-Crop or when you select Color Matching on the Color Settings tab of the Preferences dialog box.

#### Note

- Selectable settings depend on color mode settings.
- When you adjust the image via the Color Adjustment Buttons, the results will be reflected in the preview image.

Click a Color Adjustment Button to set the following items:

- **(Saturation/Color Balance)**

Adjust the vividness and color tone of the image. Use this function to brighten colors that have faded with time or due to colortcast. Colortcast is a phenomenon where a specific color affects the entire picture due to the weather or ambient strong colors.

▶ [Adjusting Saturation and Color Balance](#)

- **(Brightness/Contrast)**

Adjust the brightness and contrast of the image. If the image is too dark or too bright, or if the image quality is flat due to lack of contrast, you can adjust the levels of brightness and contrast.

▶ [Adjusting Brightness and Contrast](#)

- **(Histogram)**

A histogram allows you to see the data concentration at each brightness level of an image. You can specify the darkest level (shadow) and brightest level (highlight) within an image, cut the levels and expand the middle of the tonal range of the image.

▶ [Adjusting Histogram](#)


-  **(Tone Curve Settings)**

Adjust the brightness of an image by selecting the type of graph (tone curve) showing the balance of tone input and output. You can make fine adjustments to the brightness of a specific area.

▶ [Adjusting Tone Curve](#)

-  **(Final Review)**

Make a final check of color adjustments. The final synthesized tone curve and the histogram derived from the subsequent image processing will be displayed. There are no settings to make in this screen.

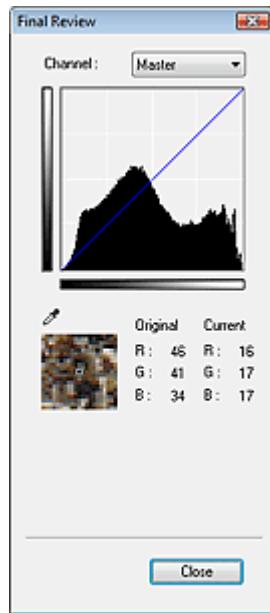

- For a color image, select a color in Channel to check either Red, Green or Blue, or select Master to check three colors together.
- If you place the cursor on the preview image, the portion will be enlarged and its RGB values (only K when Color Mode is Grayscale) before and after the adjustments will be displayed.

-  **(Threshold)**


Set the boundary (threshold) at which black and white are divided. By adjusting the threshold level, you can sharpen text in a document or reduce show-through in newspapers.

▶ [Setting Threshold](#)

- **Custom**

You can name and save a set of tone curve and threshold settings created with the Color Adjustment Buttons.

Select Add/Delete... from the pull-down menu. When Color Mode is set to anything but Black and White, the Add/Delete Tone Curve Settings dialog box opens. When Color Mode is Black and White, the Add/Delete Threshold Settings dialog box opens.

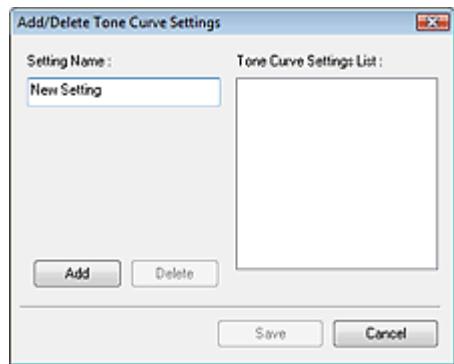

Enter Setting Name and click Add. The name appears in Tone Curve Settings List or Threshold Settings List.

Click Save to save.

You can load and apply the saved tone curve/threshold settings to a preview image. To load the settings, select the saved item from the pull-down menu.

To delete an item, select it in Tone Curve Settings List or Threshold Settings List and click Delete.

 **Note**

- 
- Save up to 20 items.
- 

- **Defaults**

Reset all adjustments (saturation/color balance, brightness/contrast, histogram and tone curve).

[Page top↑](#)

## Advanced Guide


Advanced Guide > Scanning > Scanning with Other Application Software > ScanGear (Scanner Driver) Screens > Auto Scan Mode Tab

ScanGear

### Auto Scan Mode Tab

This mode allows you to scan easily by simply placing documents on the Platen or ADF (Auto Document Feeder) and clicking a button.

In Auto Scan Mode, documents are automatically detected. You do not need to specify cropping frames or make image corrections.

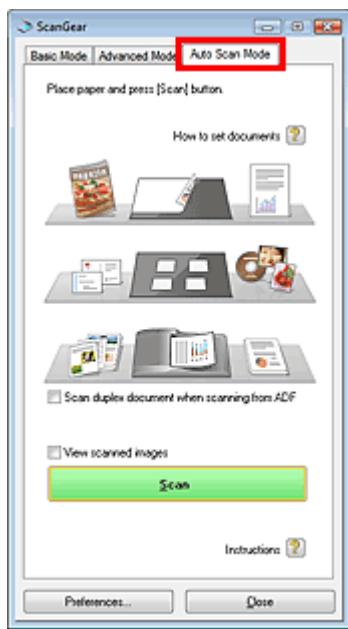

#### • Supported Documents

Photos, Hagaki, business cards, magazines, newspapers, text documents and CD/DVD.

#### Important

- The following types of documents cannot be scanned correctly.  
In that case, specify the document type on the Basic Mode tab or the Advanced Mode tab and scan again.
  - Documents other than photos, Hagaki, business cards, magazines, newspapers, text documents and CD/DVD
  - Text documents smaller than 2L (5 inches x 7 inches) (127 mm x 178 mm), such as paperback pages with the spine cut off
  - Documents printed on thin white paper
  - Wide documents such as panoramic photos
- Reflective CD/DVD labels may not be scanned properly.
- Place documents correctly according to the type of document to be scanned. Otherwise, documents may not be scanned correctly.  
See "Placing Documents" for details on how to place documents.
- Scanning takes longer than usual when scanning from the ADF (Auto Document Feeder) for the first time.
- Place documents of the same size when scanning two or more documents from the ADF (Auto Document Feeder).

#### Note

- Scan from the Basic Mode Tab or Advanced Mode Tab to reduce moire.

#### • How to set documents

Placing Documents appears.

#### • Scan duplex document when scanning from ADF

Select this checkbox to scan both sides of the documents placed on the ADF (Auto Document Feeder).


Supported document sizes:

When this checkbox is not selected: A5 Portrait, B5, A4, Letter, Legal

When this checkbox is selected: A4, Letter

- **View scanned images**

Select this checkbox to display the thumbnails of scanned images in a different window.

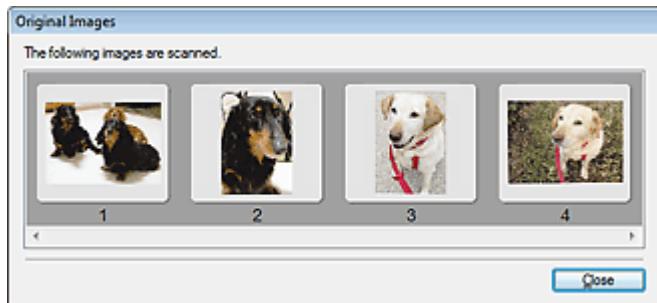

- **Scan**

Scanning starts.

### Note

- When scanning starts, the progress will be displayed. Click Cancel to cancel the scan.
- When scanning is completed, a dialog box prompting you to select the next action may open. Follow the prompt to complete. For details, see Status of ScanGear dialog after scanning in "Scan Tab" (Preferences dialog box).

- **Instructions** 

This page appears.

- **Preferences...**

The Preferences dialog box opens and you can make scan/preview settings.

▶ [Preferences Dialog Box](#)

- **Close**

Closes ScanGear (scanner driver).

### Related Topic

▶ [Scanning in Auto Scan Mode](#)

[Page top↑](#)

## Advanced Guide


Advanced Guide > Scanning > Scanning with Other Application Software > ScanGear (Scanner Driver) Screens > Preferences Dialog Box

ScanGear

## Preferences Dialog Box

Click Preferences... in the ScanGear (scanner driver) screen to open Preferences dialog box.

In the Preferences dialog box, you can make advanced settings to ScanGear (scanner driver) functions via the Scanner, Preview, Scan and Color Settings tabs.

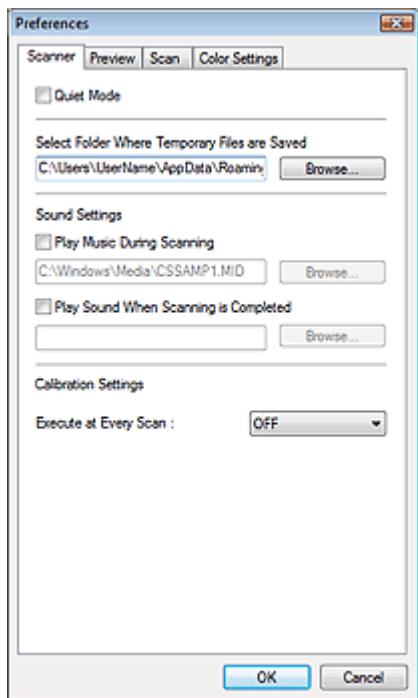

### Scanner Tab

Allows you to specify a folder to save images temporarily and a music file to play during or at the end of a scan.

▶ [Scanner Tab](#)

### Preview Tab

Allows you to select what to do with Preview when ScanGear (scanner driver) is started and how to display cropping frames after previewing images.

▶ [Preview Tab](#)

### Scan Tab

Allows you to select what to do with ScanGear (scanner driver) after scanning images.

▶ [Scan Tab](#)

### Color Settings Tab

Allows you to select how to adjust color, enable/disable Auto Tone, and specify the monitor gamma value.

▶ [Color Settings Tab](#)

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > ScanGear (Scanner Driver) Screens > Scanner Tab

ScanGear

## Scanner Tab

On the Scanner tab, you can specify the following settings.

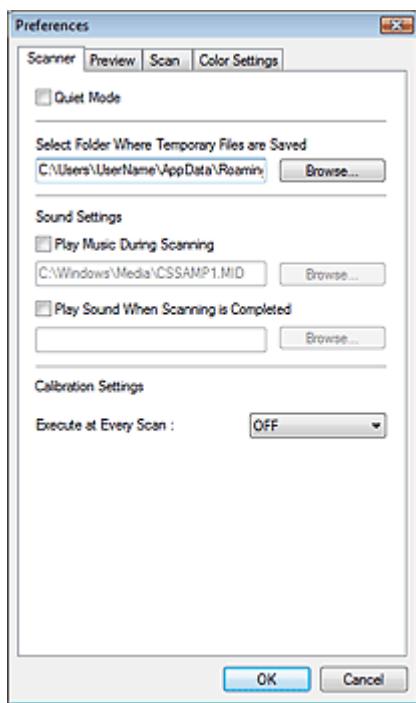

### • Quiet Mode

Select this checkbox to reduce scanner sound by slowing down the scanner head when previewing or scanning documents. This checkbox is not selected by default.

#### Note

- Scanning takes longer than usual when you enable this function.

### • Select Folder Where Temporary Files are Saved

Specify a folder in which to save images temporarily. To change the folder, click Browse... to specify another one.

### • Sound Settings

You can set the machine to play music during/at the end of a scan.

Select the Play Music During Scanning or Play Sound When Scanning is Completed checkbox, then click Browse... and specify a sound file.

You can specify the following files.

MIDI file (\*.mid, \*.rmi, \*.midi)

Audio file (\*.wav, \*.aif, \*.aiff)

MP3 file (\*.mp3)

### • Calibration Settings

When you set Execute at Every Scan to ON, the scanner will be calibrated every time before previewing and scanning, to reproduce correct color tones in scanned images.

#### Note

- Even when Execute at Every Scan is set to OFF, the scanner may be calibrated automatically in some cases (such as immediately after you turn the machine on).
- Calibration may take time depending on your computer.

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > ScanGear (Scanner Driver) Screens > Preview Tab


### ScanGear

## Preview Tab

On the Preview tab, you can specify the following settings.

### Note

- These settings are not available when scanning from the ADF (Auto Document Feeder).

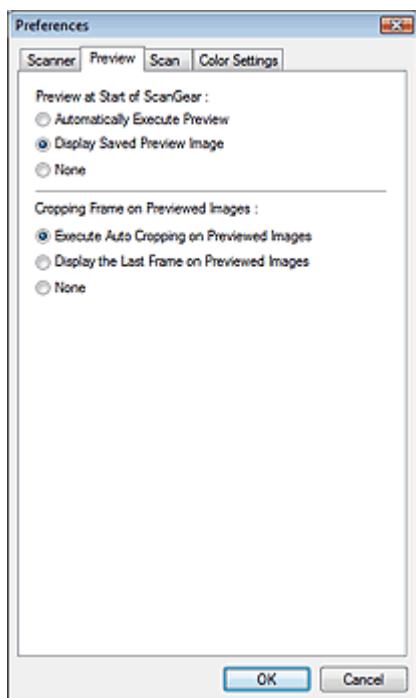

#### • Preview at Start of ScanGear

Select what to do with Preview when ScanGear (scanner driver) is started. Display Saved Preview Image is selected by default.

- Automatically Execute Preview

ScanGear (scanner driver) will automatically start previewing at startup.

- Display Saved Preview Image

The previously previewed image will be displayed.

The Color Adjustment Button settings, the Toolbar settings, and the Advanced Mode tab settings are also saved.

- None

No preview image will be displayed at startup.

### Note

- Select None if you do not want to save the preview image.

#### • Cropping Frame on Previewed Images

Select how to display cropping frames after previewing images. Execute Auto Cropping on Previewed Images is selected by default.

- Execute Auto Cropping on Previewed Images

The cropping frame will automatically be displayed in the document size after previewing.

- Display the Last Frame on Previewed Images

A cropping frame of the same size as the last used cropping frame will be displayed after previewing.

- **None**

No cropping frame will be displayed after previewing.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > ScanGear (Scanner Driver) Screens > Scan Tab

### ScanGear

## Scan Tab

On the Scan tab, you can specify the following settings.

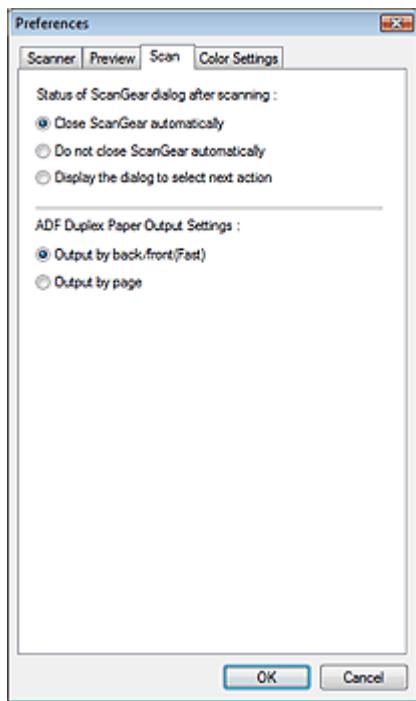

### • Status of ScanGear dialog after scanning

Select what to do with ScanGear (scanner driver) after scanning images. Close ScanGear automatically is selected by default.

#### • Close ScanGear automatically


Select this to return to the original application when scanning is completed.

#### • Do not close ScanGear automatically

Select this to return to the ScanGear (scanner driver) screen for another scan when scanning is completed.

#### • Display the dialog to select next action

Select this to open a screen and select what to do when scanning is completed.

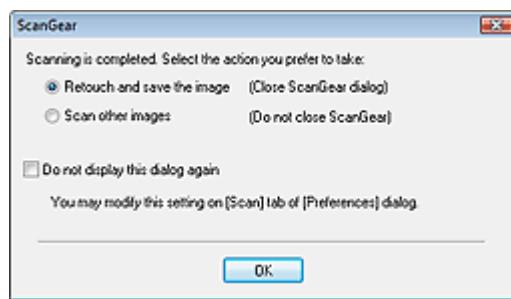

### Note

- Even if Do not close ScanGear automatically or Display the dialog to select next action is set, some applications may not support it.

### • ADF Duplex Paper Output Settings

Specify how to output the paper when scanning both sides of multiple documents at one time from the ADF (Auto Document Feeder). Output by back/front(Fast) is selected by default.

Output by back/front(Fast) is set when scanning into applications such as OCR software that do not

open the ScanGear (scanner driver) screen.

- **Output by back/front(Fast)**

This is preferred when speed is required, as the scanned documents are output fast. However, the documents are not output in the correct page order.

- **Output by page**

Outputs the scanned documents in the correct page order.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > ScanGear (Scanner Driver) Screens > Color Settings Tab

ScanGear

## Color Settings Tab

On the Color Settings tab, you can specify the following settings.

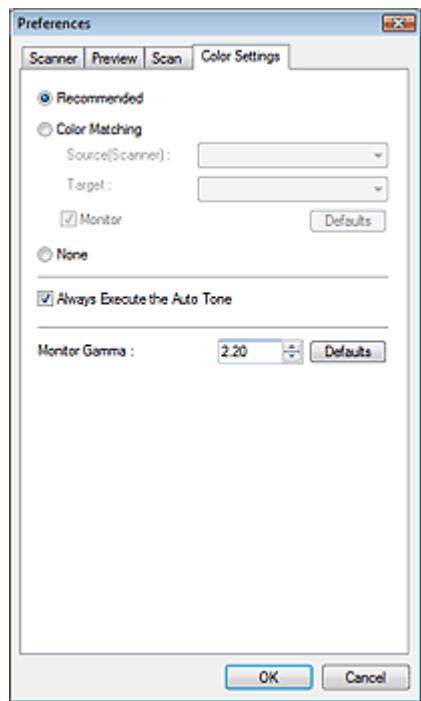

### • Color Adjustment

Select either of the following. Recommended is selected by default.  
This function is available when Color Mode is Color or Grayscale.

#### • Recommended

Select this to vividly reproduce the tone of a document on the screen. It is recommended that you normally select this setting.

#### • Color Matching

Select this to automatically match the scanner, monitor and color printer colors, thus reducing time and trouble to manually match the monitor and printer colors.

Color Adjustment Buttons will be disabled.

This function is available when Color Mode is Color.

- Source(Scanner): Select scanner profile.
- Target: Select target profile.
- Monitor: Select this to display preview image with optimum correction for monitor.
- Defaults: Returns to the default Color Matching settings.

#### • None

Select this to disable color correction provided by ScanGear (scanner driver).

### Note

- Color Matching is available when ScanGear (scanner driver), monitor, color management-compliant application (such as Photoshop) and printer are set up correctly.  
Refer to the corresponding manual for the monitor, printer and application settings.

### • Always Execute the Auto Tone

Select this checkbox to always apply Auto Tone to scanned images. This checkbox is selected by default.

This function is available when Color Mode is Color or Grayscale.

### Note

- You cannot select this setting when None or Color Matching is selected on the Color Settings tab.
- The color tone may change from the source image due to the Auto Tone function. In that case, deselect the Always Execute the Auto Tone checkbox.

#### ● Monitor Gamma

By setting the gamma value of a monitor, you can adjust the input data to the brightness characteristics of the monitor. Adjust the value if your monitor's gamma value does not match the default value set in ScanGear (scanner driver), and the colors of the original image are not accurately reflected in the monitor.

Click Defaults to return to the default Monitor Gamma value (2.20).

#### Note

- Refer to the manual of your monitor to check its gamma value. If it is not written in the manual, contact the manufacturer.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Appendix: Useful Information on Scanning

# Appendix: Useful Information on Scanning

- **Adjusting the cropping frame (scan area)**  
▶ Adjusting Cropping Frames
- **Selecting the best resolution**  
▶ Resolution
- **Learning about file formats**  
▶ File Formats
- **Learning about Color Matching**  
▶ Color Matching
- **Matching the colors between the document and monitor**  
See Monitor Gamma in the following section.  
▶ Color Settings Tab

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Appendix: Useful Information on Scanning > Adjusting Cropping Frames

# Adjusting Cropping Frames

You can specify the scan area by creating a cropping frame on the image displayed in the Preview area of the ScanGear (scanner driver) screen. When you click Scan, only the portion within the cropping frame will be scanned and passed to the application.

You can create multiple cropping frames. When you click Scan, all cropping frames will be scanned. (Scan is repeated for each cropping frame.)

### Important

- You cannot create additional cropping frames when you used Multi-Crop in ScanGear's Advanced Mode tab.

## Cropping frame types



(1) Focus Cropping Frame (rotating thick broken lines)

The settings in Basic Mode or Advanced Mode will be applied.

(2) Selected Cropping Frame (stationary thick broken lines)

The settings will be applied to the Focus Cropping Frame and Selected Cropping Frames simultaneously. You can select multiple cropping frames by clicking them while pressing the Ctrl key.

(3) Unselected Cropping Frame (stationary thin broken lines)

The settings will not be applied.

## Initial cropping frame

A cropping frame (Focus Cropping Frame) is displayed automatically around the preview image according to the document size. You can also create a cropping frame by dragging the mouse in the Preview area.

## Adjusting a cropping frame

The cursor will change into when it is positioned over a cropping frame. If you click and drag the mouse in the direction of the arrow, the cropping frame will expand or contract accordingly.

The cursor will change into when it is positioned within a cropping frame. Click and drag the mouse to move the entire cropping frame.

You can rotate a cropping frame 90 degrees by clicking (Switch Aspect Ratio). However, (Switch Aspect Ratio) is not available when Output Size is Flexible.

In Advanced Mode, you can specify the cropping frame size by entering the values into  (Width) and  (Height) in Input Settings.

### Note

- Cropping frames are set according to the document size (Auto Crop) by default. For details, see Cropping Frame on Previewed Images in "Preview Tab" (Preferences dialog box).

### Creating multiple cropping frames

Click and drag the mouse in a space outside the existing cropping frame to create a new cropping frame in the Preview area. The new cropping frame will be the Focus Cropping Frame, and the old cropping frame will be the Unselected Cropping Frame.

You can create multiple cropping frames and apply different scan settings to each cropping frame.

You can also select multiple cropping frames by clicking them while pressing the Ctrl key.

If you select multiple cropping frames and change the settings on a tab at the right of ScanGear (scanner driver), the settings will be applied to all the selected cropping frames.

When you create a new cropping frame, it retains the settings of the latest cropping frame.

### Note

- Create up to 10 cropping frames.
- Scanning takes longer than usual when multiple cropping frames are selected.

### Deleting cropping frames

To delete a cropping frame, select it and click  (Remove Cropping Frame) on the Toolbar. Alternatively, press the Delete key.

When there are multiple cropping frames, all the selected cropping frames (Focus Cropping Frame and Selected Cropping Frames) are deleted simultaneously.

[Page top↑](#)

## Advanced Guide


Advanced Guide > Scanning > Scanning with Other Application Software > Appendix: Useful Information on Scanning > Resolution

# Resolution

## What is Resolution?

The data in the image you have scanned is a collection of dots carrying information about brightness and color. The density of these dots is called "resolution", and resolution will determine the amount of detail your image contains. The unit of resolution is dots per inch (dpi). Dpi is the number of dots per square inch (2.54 cm square).

The higher the resolution (value), the more detail in your image; the lower the resolution (value), the less detail.

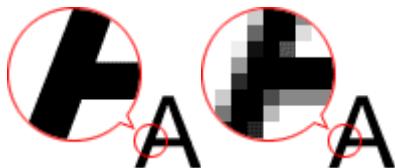

## Setting the Resolution in MP Navigator EX

In MP Navigator EX, you can specify the resolution with Scanning Resolution in the Scan Settings dialog box.

## Images for Printing

Images to be printed should be scanned at a resolution that corresponds to the resolution of the printer.

For example, if you want to print using a 600 dpi black and white printer, you should set the resolution to 600 dpi.

With a color printer, specifying the resolution at half the resolution of the printer should be fine. For example, if you want to print scanned paper/photos using a 600 dpi color printer, you should set the resolution to 300 dpi. However, with a high-resolution printer, printing takes longer than usual if you set the resolution to half the resolution of the printer.

## Example of Appropriate Resolution when Printing to Scale

If you print a document at twice the size both vertically and horizontally, the resolution of the document will be reduced by half. If the resolution of the original document is 300 dpi, the resolution of the enlarged document will be 150 dpi. If you print the document with a 600 dpi color printer, the lack of detail in the image may be obvious. In that case, if you scan at the Scanning Resolution of 600 dpi, the resolution will be 300 dpi even if you double the size of document and you can print the document with sufficient quality. Conversely, if you print a document at half scale, it should be sufficient to scan at half the resolution.

When Printing Color Photos at Twice the Size

Document resolution: 300 dpi Scanning resolution: 600 dpi Scale: 200%	Print at twice the size Scanning resolution/actual scanning resolution: 600 dpi	Printing resolution: 300 dpi
---	--	------------------------------

## Setting the Resolution in ScanGear (Scanner Driver)

In ScanGear (scanner driver), you can specify the resolution with Output Resolution in Output Settings on the Advanced Mode tab.

### Example of Appropriate Resolution when Printing to Scale

The scanning resolution is automatically set so that the value set in Output Resolution will be the resolution of the scanned image. If you set Output Resolution to 300 dpi and scan at twice the size, the document will be automatically scanned at 600 dpi, and the resolution of the scanned image will be 300 dpi. You can print the document with sufficient quality using a 600 dpi color printer.

When Printing L Size (8.9 cm x 12.7 cm) Photos at Twice the Size

Document resolution: 300 dpi Output resolution: 300 dpi Scale: 200%	Scan at twice the size Actual scanning resolution: 600 dpi	Image resolution/printing resolution: 300 dpi

### Appropriate Resolution Settings

Set the resolution according to the use of the scanned image.

For displaying on a monitor: 150 dpi

For printing: 300 dpi

When Output Size is set to Flexible in ScanGear's Advanced Mode tab (Select Source is Platen and the scale is 100%):

Document	Use	Color Mode	Output Resolution
Color photo	Copying (Printing)	Color	300 dpi
	Creating a postcard	Color	300 dpi
	Saving to a computer	Color	75 dpi - 300 dpi
	Using on a website or attaching to e-mail	Color	75 dpi - 150 dpi
Black and white photo	Saving to a computer	Grayscale	75 dpi - 300 dpi
	Using on a website or attaching to e-mail	Grayscale	75 dpi - 300 dpi
Text document	Copying	Color, Grayscale or Black and White	300 dpi
	Attaching to e-mail	Color, Grayscale or Black and White	300 dpi

### Important

- If you double the resolution, the file size quadruples. If the file is too large, the processing speed will slow down significantly, and you will experience inconvenience such as lack of memory. Set the minimum required resolution according to the use of the image.

### Note

- Although you can change Output Resolution in ScanGear (scanner driver), it is recommended that you scan at the default value.

## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Appendix: Useful Information on Scanning > File Formats

# File Formats

You can select a file format when saving scanned images. You should specify the most suitable format according to how you want to use the image on which application.

Available file formats vary by application and computer (Windows or Macintosh).

See below for the characteristics of each image file format.

### BMP (Standard File Extension: .bmp)

A standard file format for Windows.

BMP is often selected for images that are used only on Windows.

### JPEG (Standard File Extension: .jpg)

A file format often used on websites and for digital camera images.

JPEG features high compression rates. JPEG images slightly degrade every time they are saved, and cannot be returned to their original state.

JPEG is not available for black and white images.

### Exif (Standard File Extension: .jpeg)

A file format supported by many digital cameras.

It adds information such as the date of image capture, camera model, shutter speed, shooting mode and comments to JPEG files.

The file format version must be Exif 2.2 or later in order to print on a Direct Print compatible printer.

### TIFF (Standard File Extension: .tif)

A file format featuring a relatively high compatibility between various computers and applications. (Some TIFF files are incompatible.) TIFF is suitable for editing saved images.

#### Note

- MP Navigator EX supports the following TIFF file formats.
  - Uncompressed, black and white binary
  - Uncompressed, RGB (8 bits per channel)
  - Uncompressed, YCC (8 bits per component)
  - Grayscale

### PDF (Standard File Extension: .pdf)

A file format developed by Adobe Systems. It can be used on various computers and operating systems. Therefore, PDF files can be exchanged between people who use different operating systems, fonts, etc. regardless of the differences.

#### Important

- Only PDF files created with MP Navigator EX are supported. PDF files created or edited in other applications are not supported.


## Advanced Guide

Advanced Guide > Scanning > Scanning with Other Application Software > Appendix: Useful Information on Scanning > Color Matching

# Color Matching

Color Matching adjusts devices as shown below to match the colors of an image displayed on a monitor or a printed image with the colors of the original document.

### Example: When sRGB is selected as the output profile (target)

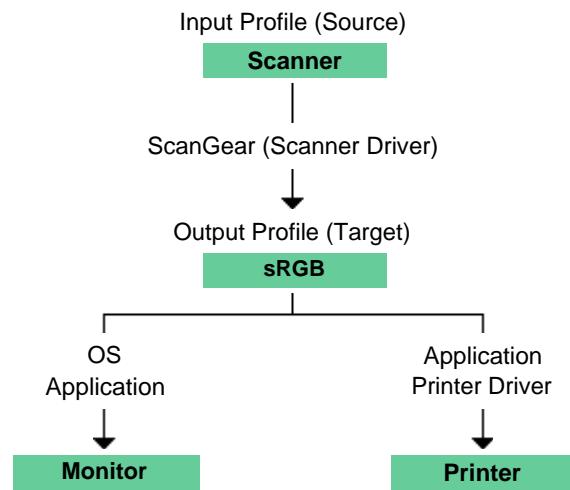

ScanGear (scanner driver) converts the image's color space from the scanner's color space to sRGB.

When displaying on a monitor, the image's color space is converted from sRGB to the monitor's color space based on the operating system's monitor settings and the application's working space settings.

When printing, the image's color space is converted from sRGB to the printer's color space based on the application's print settings and the printer driver's settings.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Canon IJ Network Scan Utility Screens

# Canon IJ Network Scan Utility Screens

▶ [Canon IJ Network Scan Utility Menu and Setting Screen](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Scanning > Canon IJ Network Scan Utility Screens > Canon IJ Network Scan Utility Menu and Setting Screen

# Canon IJ Network Scan Utility Menu and Setting Screen


Set up Canon IJ Network Scan Utility to scan images into a computer over a network using the Operation Panel of the machine.

After installation, Canon IJ Network Scan Utility appears in the notification area of the taskbar.

### Note

- If  is not displayed in the notification area of the taskbar, from the Start menu, select (All) Programs > Canon IJ Network Utilities > Canon IJ Network Scan Utility > Canon IJ Network Scan Utility to start it.

## Menu

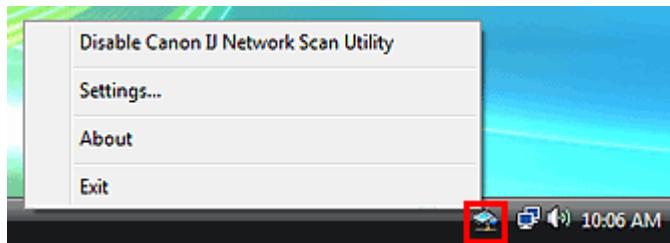

- Disable Canon IJ Network Scan Utility or Enable Canon IJ Network Scan Utility**

Enables or disables Canon IJ Network Scan Utility.

When you select Disable Canon IJ Network Scan Utility, you will not be able to scan over a network using the Operation Panel.

Enabled: , Disabled: 

- Settings...**

The Canon IJ Network Scan Utility dialog box opens. You can select the product you want to use.

- About**

Displays the version information.

- Exit**


Exits Canon IJ Network Scan Utility.  disappears from the notification area of the taskbar.

## Canon IJ Network Scan Utility Dialog Box

The machine must be selected with Canon IJ Network Scan Utility before scanning over a network.

In the notification area of the taskbar, right-click the icon and select Settings... to open the Canon IJ Network Scan Utility dialog box.

Normally, the machine is already selected. In that case, you do not need to select it again.

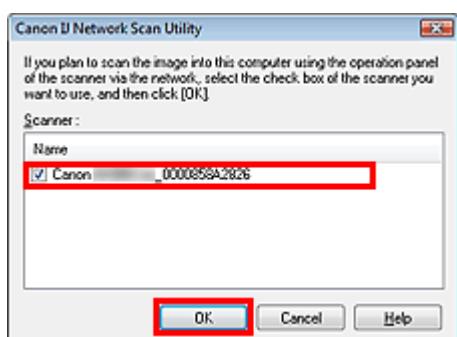

Select the product you want to use.

Scanners that are registered to the system are displayed. Select the checkbox of the product you want to

use.

You can select up to three scanners.

### Note

- If the scanner you want to use is not displayed, check the following conditions and click OK to close the dialog box, then reopen it and select the scanner.
  - The MP Drivers are installed
  - Network setup is completed after installing the MP Drivers
  - Network communication between the product and computer is enabledIf the scanner is still not displayed, see Help.
- You do not need to use this software when scanning via USB or from a computer. See " [Uninstalling the Canon IJ Network Tool/Canon IJ Network Scan Utility](#)" to delete it. You can scan via USB or from a computer even if it is not deleted.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Scanning > Other Scanning Methods

---

# Other Scanning Methods

- ▶ Scanning with WIA Driver
- ▶ Scanning Using the Control Panel (Windows XP Only)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Scanning > Other Scanning Methods > Scanning with WIA Driver

# Scanning with WIA Driver

You can scan an image from a WIA-compliant application and use the image in that application.

The procedure varies depending on the application. The following procedures are examples only.

For details, refer to the application's manual.

To scan via a network connection, see " [Network Scan Settings](#)."

### Important

- In Windows 2000, you cannot scan using the WIA driver.
- Some applications do not support continuous scanning from the ADF (Auto Document Feeder). For details, refer to the application's manual.

## Scanning with WIA Driver 2.0

The following is an example of scanning using Windows Photo Gallery.

### 1. Place the documents on the Platen or ADF (Auto Document Feeder).

► [Placing Documents](#)

### 2. In File, click Import from Camera or Scanner..., then double-click WIA Canon (model name).


For network connection, select one with the MAC address after the product name.

The scan setting screen appears.

### Important

- To set up a network environment, see " [About Network Communication](#)."

### 3. Specify the settings.

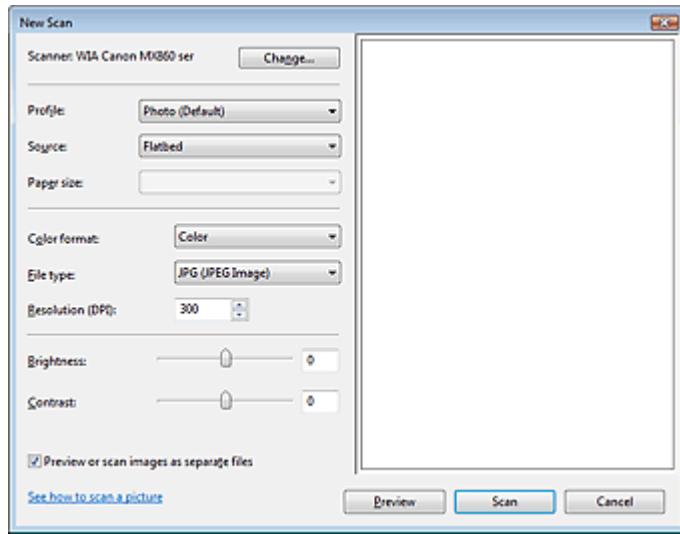

#### • Scanner

The currently set product name is displayed. To change the scanner, click Change... and select the product you want to use.

#### • Profile

Select Photo (Default) or Documents according to the document to be scanned. To save a new Profile, select Add profile.... You can specify the details in the Add New Profile dialog box.

#### • Source

Select a scanner type. To scan from the Platen, select Flatbed. To scan from the ADF (Auto Document Feeder), select Feeder (Scan one side) or Feeder (Scan both sides).

- **Paper size**

Select the paper size. Paper size can be specified only when Source is Feeder (Scan one side) or Feeder (Scan both sides). When scanning both size of the documents automatically, the supported document sizes are A4 or Letter.

- **Color format**

Select how to scan the document.

- **File type**

Select a file format from JPEG, BMP, PNG and TIFF.

- **Resolution (DPI)**

Enter the resolution. Specify a value between 50 dpi and 600 dpi. 300 dpi is set by default.

▶ Resolution

- **Brightness**

Move the slider to adjust the brightness. Move it to the left to darken and right to brighten the image. You can also enter a value (-100 to 100).

- **Contrast**

Move the slider to adjust the contrast. Moving it to the left will decrease the contrast of the image, thus softening the image. Moving it to the right will increase the contrast of the image, thus sharpening the image. You can also enter a value (-100 to 100).

- **Preview or scan images as separate files**

Select this checkbox to preview or scan multiple images as separate files.

- **See how to scan a picture**

Click to open Windows Help and Support.

#### 4. Click Preview to preview the image.

The preview image appears on the right.

#### 5. Click Scan.

When scanning is completed, the scanned image appears in the application.

### Scanning with WIA Driver 1.0

The following is an example of scanning using Paint.

#### 1. Place the documents on the Platen or ADF (Auto Document Feeder).

▶ Placing Documents

#### 2. In File, click From Scanner or Camera.... (Select the command to scan a document in the application.)

#### 3. In the Select Device dialog box, select the scanner you want to use.


For network connection, select one with the MAC address after the product name.

 **Important**

■ To set up a network environment, see "About Network Communication."

#### 4. Select an image type according to the document to be scanned.


To scan from the Platen, select Flatbed for Paper source. To scan from the ADF (Auto Document Feeder), select Document Feeder.

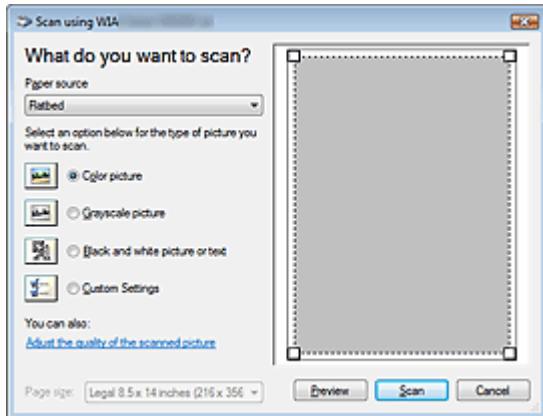

### Note

- To scan with the values previously set in Adjust the quality of the scanned picture, select Custom Settings.
- Selecting Document Feeder for Paper source enables you to select Page size.

## 5. Click Adjust the quality of the scanned picture and set the preferences as required.

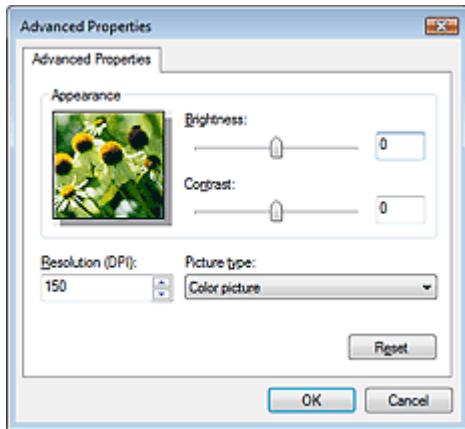

- Brightness**

Move the slider to adjust the brightness. Move it to the left to darken and right to brighten the image. You can also enter a value (-127 to 127).

- Contrast**

Move the slider to adjust the contrast. Moving it to the left will decrease the contrast of the image, thus softening the image. Moving it to the right will increase the contrast of the image, thus sharpening the image. You can also enter a value (-127 to 127).

- Resolution (DPI)**

Enter the resolution. Specify a value between 50 dpi and 600 dpi.

→ [Resolution](#)

- Picture type**

Select the type of scan you want for your document.

- Reset**

Click to restore the original settings.

## 6. Click Scan.

When scanning is completed, the scanned image appears in the application.

## Advanced Guide

Advanced Guide > Scanning > Other Scanning Methods > Scanning Using the Control Panel (Windows XP Only)

# Scanning Using the Control Panel (Windows XP Only)

You can scan images via the Control Panel of Windows XP using the WIA driver.

Windows Image Acquisition (WIA) is a driver model implemented in Windows XP. It allows you to scan documents without using an application. Scan documents from a TWAIN-compliant application to specify advanced settings for scanning.

To set up a network environment, see "Network Scan Settings."

**1.** From the Start menu, select Control Panel.

**2.** Click Printers and Other Hardware > Scanners and Cameras, then double-click WIA Canon (model name).


For network connection, select one with the MAC address after the product name.

The Scanner and Camera Wizard dialog box opens.

**3.** Click Next.

**4.** Select Picture type according to the document to be scanned.

To scan from the Platen, select Flatbed for Paper source. To scan from the ADF (Auto Document Feeder), select Document Feeder.

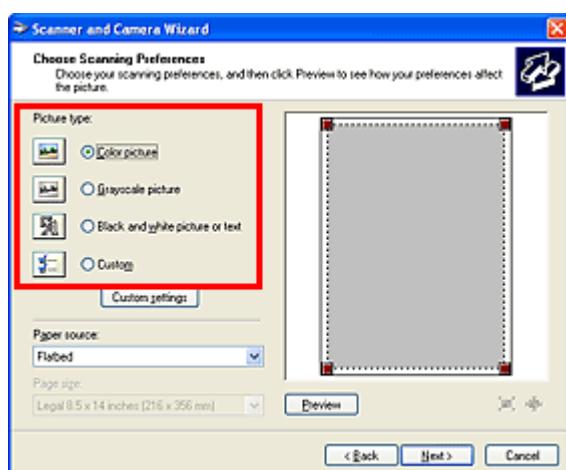

### Note

- To scan with the values previously set in Custom Settings, select Custom.
- Selecting Document Feeder for Paper source enables you to select Page size.

**5.** Click Custom Settings to set the preferences as required.



- Brightness

Move the slider to adjust the brightness. Move it to the left to darken and right to brighten the image. You can also enter a value (-127 to 127).

- **Contrast**

Move the slider to adjust the contrast. Moving it to the left will decrease the contrast of the image, thus softening the image. Moving it to the right will increase the contrast of the image, thus sharpening the image. You can also enter a value (-127 to 127).

- **Resolution (DPI)**

Enter the resolution. Specify a value between 50 dpi and 600 dpi.

➡ [Resolution](#)

- **Picture type**

Select the type of scan you want for your document.

- **Reset**

Click to restore the original settings.

## 6. Click Preview to preview the image.

The preview image appears on the right. Drag  to specify the scan area.

## 7. Click Next and follow the instructions.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Faxing

---

# Faxing

- ▶ [Sending/Receiving Faxes Using the Operation Panel of the Machine](#)
- ▶ [Sending Faxes from a Computer](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine

# Sending/Receiving Faxes Using the Operation Panel of the Machine

- ▶ [Sending Faxes](#)
- ▶ [Sending a Fax after Speaking on Telephone](#)
- ▶ [Registering Recipients for Speed Dialing](#)
- ▶ [Sending a Fax Using the Speed Dialing Feature](#)
- ▶ [Searching a Registered Dial Code Number by Name \(Directory Dialing\)](#)
- ▶ [Sending the Same Document to Several Recipients \(Sequential Broadcasting\)](#)
- ▶ [Resending Faxes \(Redialing a Busy Number\)](#)
- ▶ [Using the Useful Transmission Functions](#)
- ▶ [Using the Information Services](#)
- ▶ [Transmission/Reception of Faxes Using ECM](#)
- ▶ [Preventing Mistransmission of Faxes](#)
- ▶ [Receiving Faxes](#)
- ▶ [Changing the Print Settings](#)
- ▶ [Setting the Number of Rings for Fax Calls](#)
- ▶ [Using the Useful Reception Functions](#)
- ▶ [Memory Reception](#)
- ▶ [Remote Reception](#)
- ▶ [Rejecting Fax Reception](#)
- ▶ [Using the Caller ID Service to Reject Calls](#)
- ▶ [Document Stored in Memory](#)
- ▶ [Summary of Reports and Lists](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Sending Faxes

### Sending Faxes

For the preparations required to send faxes, or the basic procedure for sending faxes using the Numeric buttons, refer to [Sending Faxes](#).

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Sending a Fax after Speaking on Telephone

# Sending a Fax after Speaking on Telephone

If you want to speak to the recipient before sending a fax, or if the recipient does not have a fax machine that can receive faxes automatically, send a fax manually after speaking to the recipient on the telephone.

- ▶ [Dialing by Using the Hook Button \(MX860 series\)](#)
- ▶ [Dialing by Using the Telephone Connected to the Machine](#)

### Important

- With manual transmission, you cannot use the Platen Glass to load documents.
- To speak to the recipient before sending a fax, you need to connect a telephone to the machine. Refer to your setup manual for instructions on how to connect the telephone to the machine.

## Dialing by Using the Hook Button (MX860 series)

Before dialing, make sure that Hook key setting is set to Enable. For details, see [Hook key setting \(MX860 series\)](#).

1. Press the Hook button.
2. Use the Numeric buttons to dial the recipient's fax/telephone number.

### Note

- You can also dial using one-touch speed dialing (MX860 series) or coded speed dialing. For details, see [Sending a Fax Using the Speed Dialing Feature](#).

3. Lift the handset of the telephone connected to the machine, then speak to the recipient.  
If you hear a high-pitched signal instead of the recipient's voice, go to step 5.
4. Ask the recipient to set the recipient's fax machine to receive faxes.
5. When you hear a high-pitched signal, press the Color button for color transmission, or the Black button for black & white transmission.

### Important

- Color transmission is available only when the recipient's fax machine supports color faxing.

6. Hang up the handset.

### Note

- To cancel a fax transmission, press the **Stop** button. To cancel a fax transmission while it is in progress, press the **Stop** button, then follow the instructions on the LCD.
- If documents remain in the ADF after the **Stop** button is pressed while scanning is in progress, Document in ADF. Press OK to discharge document. (MX860 series) or Document in ADF. Close the feeder cover and press OK to eject document. (MX330 series) is displayed on the LCD. Press the **OK** button and follow the instructions on the LCD to automatically feed out the remaining documents.

## Dialing by Using the Telephone Connected to the Machine

1. Lift the handset of the telephone connected to the machine.
2. Use the telephone to dial the recipient's fax/telephone number.

**3. Speak to the recipient.**

If you hear a high-pitched signal instead of the recipient's voice, go to step 5.

**4. Ask the recipient to set the recipient's fax machine to receive faxes.****5. When you hear a high-pitched signal, press the Color button for color transmission, or the Black button for black & white transmission.****Important**

- Color transmission is available only when the recipient's fax machine supports color faxing.

**6. Hang up the handset.****Note**

- To cancel a fax transmission, press the **Stop** button. To cancel a fax transmission while it is in progress, press the **Stop** button, then follow the instructions on the LCD.
- If documents remain in the ADF after the **Stop** button is pressed while scanning is in progress, Document in ADF. Press **OK** to discharge document. (MX860 series) or Document in ADF. Close the feeder cover and press **OK** to eject document. (MX330 series) is displayed on the LCD. Press the **OK** button and follow the instructions on the LCD to automatically feed out the remaining documents.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Registering Recipients for Speed Dialing

# Registering Recipients for Speed Dialing

Speed dialing allows you to dial fax/telephone numbers by simply pressing a few buttons.

The following speed dialing methods are available:

- **One-touch Speed Dialing (MX860 series)**

For details on registering recipients to the one-touch speed dial, refer to [Sending Faxes](#).

- **Coded Speed Dialing**

Register a fax/telephone number for coded speed dialing. To dial the number, press the **Coded Dial** button, then enter the two-digit code assigned to that number, or use the **▲ ▼ ← →** button to select it. You can register up to 100 (00 to 99) destinations for MX860 series, and up to 20 (00 to 19) for MX330 series.

▶ [Registering Coded Speed Dial Numbers](#)

- **Group Dialing**

Register two or more registered one-touch (MX860 series) or coded speed dial numbers for group dialing. You can send the same document to all members in the group.

▶ [Registering Group Dial Numbers](#)

## Note

- To change information registered for one-touch speed dialing (MX860 series), coded speed dialing, or group dialing, see [Changing Registered Information](#).
- To delete information registered for one-touch speed dialing (MX860 series), coded speed dialing, or group dialing, see [Deleting Registered Information](#).
- To print a list of the fax/telephone numbers registered, see [Printing a List of the Registered Destinations](#).

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Registering Recipients for Speed Dialing > Registering Coded Speed Dial Numbers

# Registering Coded Speed Dial Numbers

Before you can use the coded speed dialing feature, you need to register the recipients' numbers.

1. Press the **FAX** button, then press the **Menu** button.


The FAX menu screen is displayed.

2. Use the **◀ ▶** button to select  TEL number registration, then press the **OK** button.


The LCD may differ depending on the machine you are using.



3. Use the **▲ ▼** button to select Coded speed dial, then press the **OK** button.

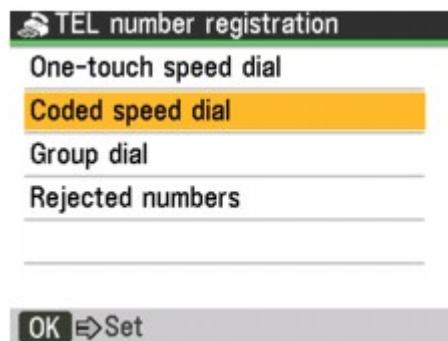


4. Use the Numeric buttons or the **▲ ▼ ◀ ▶** button to select an unoccupied speed dial code (00 to 99 for MX860 series, 00 to 19 for MX330 series), then press the **OK** button.

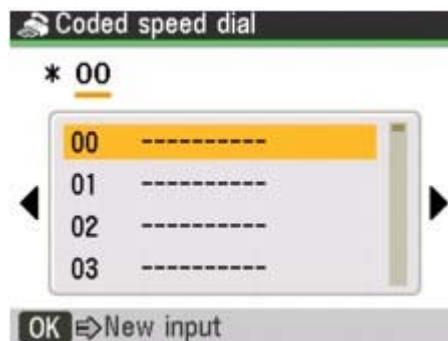

5. Use the **▲ ▼** button to select Name, then press the **OK** button.


6. Use the Numeric buttons to enter a name for the coded speed dial code (max. 16 characters, including spaces), then press the **OK** or the **▼** button.

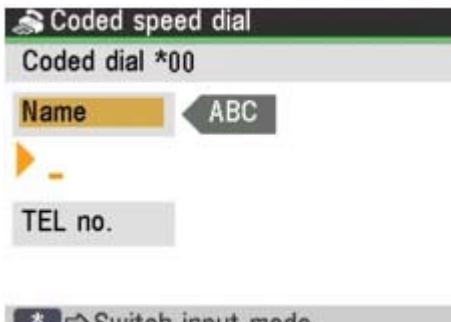

### Note

- For details on how to enter or delete characters or numbers, refer to [Specifying the Basic Settings for the Machine](#).

7. Use the Numeric buttons to enter the fax/telephone number (max. 60 digits (40 digits for the US, Canada, and Korea), including spaces) you want to register.

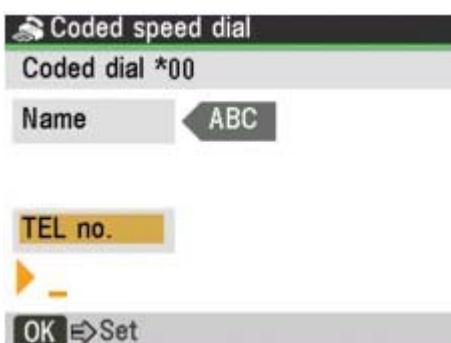

### Note

- Press the **Redial/Pause** button to enter a pause.
- Press the **Tone** button to enter a tone.

8. Press the **OK** button to finalize registration.

### Note

- To register another recipient's name and number to a coded speed dial code, repeat steps 4 to 8.
- For a list of the recipients you have registered, print the coded speed dial code list. For details, see [Printing a List of the Registered Destinations](#).

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Registering Recipients for Speed Dialing > Registering Group Dial Numbers


# Registering Group Dial Numbers

To send the same document to several recipients in one operation, select the numbers you registered to the one-touch speed dial codes (MX860 series) or coded speed dial codes and register them to a group dial.

1. Press the **FAX** button, then press the **Menu** button.

The FAX menu screen is displayed.


2. Use the **◀ ▶** button to select  TEL number registration, then press the **OK** button.
3. Use the **▲ ▼** button to select Group dial, then press the **OK** button.

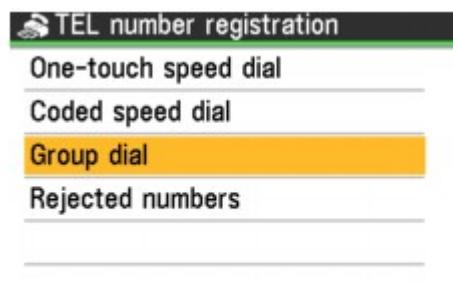

**OK**  Set

MX860 series users: Go to step 4.  
MX330 series users: Go to step 5.

4. Use the **▲ ▼** button to select One-touch or Coded speed dial, then press the **OK** button.

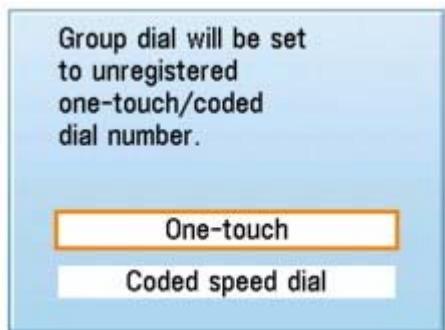

5. Select the speed dial code to register the group dial.



- To register a group under a one-touch speed dial code (MX860)

**series):**

Use the **▲ ▼** button to select an unoccupied one-touch speed dial code (01 to 05), then press the **OK** button.

**• To register a group under a coded speed dial code:**

Use the Numeric buttons or the **▲ ▼ ← →** button to select an unoccupied speed dial code (00 to 99 for MX860 series, 00 to 19 for MX330 series), then press the **OK** button.

 **Note**

- You can register a group either under an unoccupied one-touch speed dial code (MX860 series) or coded speed dial code.

**6.** Use the Numeric buttons to enter a name for the group (max. 16 characters, including spaces), then press the **OK** or the **▼** button. **Note**

- For details on how to enter or delete characters or numbers, refer to [Specifying the Basic Settings for the Machine](#).
- Groups will appear on the Group dial code list by the names you have entered in this step.

**7.** Enter the one-touch speed dial code (MX860 series) or coded speed dial code you want to register in the group.**• To enter a one-touch speed dial (MX860 series) entry:**

Press the One-Touch Speed Dial (MX860 series) button (01 to 05).

**• To enter a coded speed dial entry:**

After pressing the **Coded Dial** button, use the Numeric buttons or the **▲ ▼ ← →** button to select a coded speed dial code to register to the group dial, then press the **OK** button.

If **Enter first letter.** is displayed on the LCD, enter the first letter for the registered name of the speed dial code.

⇒ [Searching a Registered Dial Code Number by Name \(Directory Dialing\)](#)

 **Note**

- To continue registering one-touch speed dial codes (MX860 series) or coded speed dial codes to the group, repeat step 7.
- You can only enter numbers that have already been registered to one-touch (MX860 series) or coded speed dial codes (i.e. you cannot enter the fax/telephone numbers with the Numeric buttons).
- To review the codes you have registered, use the **▲ ▼** button.
- To delete the code you have registered, use the **▲ ▼** button to select the one-touch (MX860 series) or coded speed dial code, then press the **←** button.

**8.** Press the **OK** button to finalize registration. **Note**

- To register another group, repeat steps 5 to 8.
- For a list of the entries you have made, print the Group dial code list. For details, see [Printing a List of the Registered Destinations](#).

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Registering Recipients for Speed Dialing > Changing Registered Information

# Changing Registered Information

To change information registered for speed dialing, follow the procedure below.

**1. Press the **FAX** button, then press the **Menu** button.**

The FAX menu screen is displayed.

**2. Use the button to select TEL number registration, then press the **OK** button.**

**3. Use the button to select One-touch speed dial (MX860 series), Coded speed dial, or Group dial to change, then press the **OK** button.**

### Note

- MX860 series

If Group dial is selected, the screen to select One-touch or Coded speed dial is displayed.  
Select either of the item, then press the **OK** button.

**4. Select a speed dial code to change.**

- **To change a one-touch speed dial code (MX860 series):**

Use the button to select a one-touch speed dial code (01 to 05) to change, then press the **OK** button.

- **To change a coded speed dial code:**

Press the Numeric buttons, or use the button to select a coded speed dial code to change, then press the **OK** button.

- **To change a one-touch speed dial code (MX860 series) registered to a group dial code:**

Use the button to select the one-touch speed dial code (01 to 05) to which the group dial to change is registered, then press the **OK** button.

- **To change a coded speed dial code registered to a group dial code:**

Press the Numeric buttons, or use the button to select a coded speed dial code to which the group dial to change is registered, then press the **OK** button.

**5. Use the button to select Edit, then press the **OK** button.**

**6. Edit the information registered.**

1. Use the Numeric buttons to edit the name (max. 16 characters, including spaces), then press the **OK** button.

2. Use the button to delete the fax/telephone number, then enter the new number (max. 60 digits (40 digits for the US, Canada, and Korea), including spaces) using the Numeric buttons.

To change information registered to a group dial code, follow the procedure below.

1. Use the Numeric buttons to edit the name, then press the **OK** button.

2. To add a member, press the button repeatedly until an unoccupied one-touch speed dial (MX860 series) code (01 to 05) or coded speed dial code appears, then select the dial code.

To delete a member, press the ▼ button repeatedly until the dial code to delete appears, then press the ◀ button.

### Note

- When you add a member with an occupied speed dial code selected, information on the code is overwritten.

## 7. Press the **OK** button to finalize registration.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Registering Recipients for Speed Dialing > Deleting Registered Information

### Deleting Registered Information

To delete information registered for speed dialing, follow the procedure below.

**1. Press the **FAX** button, then press the **Menu** button.**

The FAX menu screen is displayed.

**2. Use the button to select TEL number registration, then press the **OK** button.**

**3. Use the button to select One-touch speed dial (MX860 series), Coded speed dial, or Group dial to delete, then press the **OK** button.**

#### Note

- MX860 series

If Group dial is selected, the screen to select One-touch or Coded speed dial is displayed.  
Select either one the group dial to delete is registered to, then press the **OK** button.

**4. Select a speed dial code to delete.**

- **To delete a one-touch speed dial code (MX860 series):**

Use the button to select a one-touch speed dial code (01 to 05) to delete, then press the **OK** button.

- **To delete a coded speed dial code:**

Use the Numeric buttons or the button to select a coded speed dial code to delete, then press the **OK** button.

- **To delete a one-touch speed dial code (MX860 series) registered to a group dial code:**

Use the button to select a one-touch speed dial code (01 to 05) to which the group dial to delete is registered, then press the **OK** button.

- **To delete a coded speed dial code registered to a group dial code:**

Use the Numeric buttons or the button to select a coded speed dial code to which the group dial to delete is registered, then press the **OK** button.

**5. Use the button to select Delete, then press the **OK** button.**

**6. Use the button to select Yes, then press the **OK** button.**

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Registering Recipients for Speed Dialing > Printing a List of the Registered Destinations

# Printing a List of the Registered Destinations

You can print a list of the recipients registered for speed dialing and can keep it near the machine to refer to when dialing.

## 1. Load paper.

Refer to [Loading Paper / Originals](#).

## 2. Press the **FAX** button, then press the **Menu** button.

The FAX menu screen is displayed.



## 3. Use the **◀▶** button to select Print reports/lists, then press the **OK** button.

## 4. Use the **▲▼** button to select Telephone number list, then press the **OK** button.

## 5. Use the **▲▼** button to select One-touch speed dial (MX860 series), Coded speed dial, or Group dial, then press the **OK** button.

- **If you selected One-touch speed dial (MX860 series) or Coded speed dial:**

Use the **▲▼** button to select whether to print the list in alphabetical order of the registered names, or in numerical order of the one-touch speed dial codes (MX860 series) or coded speed dial codes.

Yes: Prints the list with the destination names in alphabetical order.

No: Prints the list with the registered entries in numerical order.

- **If you selected Group dial:**

The confirmation screen is displayed. Select Yes using the **▲▼** button and press the **OK** button to print the list.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Sending a Fax Using the Speed Dialing Feature

# Sending a Fax Using the Speed Dialing Feature

Registering fax or telephone numbers for speed dialing enables you to send faxes easily.

### Note

- For the preparations required to send faxes, or the basic procedure for sending faxes using the Numeric buttons, refer to [Sending Faxes](#).

## 1. Dial the recipient's number.

- To send a fax using one-touch speed dialing (MX860 series):**

Press the One-Touch Speed Dial button (01 to 05) assigned to the number you want to dial.

- To send a fax using coded speed dialing:**

After pressing the **Coded Dial** button, use the Numeric buttons or the **▲ ▼ ← →** button to enter the two-digit code assigned to the number you want to dial, then press the **OK** button.

- To send a fax using group dialing:**

For one-touch speed dialing (MX860 series):

Press the One-Touch Speed Dial button.

For coded speed dialing:

After pressing the **Coded Dial** button, use the Numeric buttons or the **▲ ▼ ← →** button to enter the two-digit code assigned to the group you want to dial, then press the **OK** button.

### Note

- If you used directory dialing to send a fax on the previous occasion, the directory dialing screen is displayed when you press the **Coded Dial** button. For details, see [Searching a Registered Dial Code Number by Name \(Directory Dialing\)](#).

## 2. Press the **Color** button for color transmission, or the **Black** button for black & white transmission.

### Important

- Color transmission is available only when the recipient's fax machine supports color faxing.

### Note

- To cancel a fax transmission, press the **Stop** button. To cancel a fax transmission while it is in progress, press the **Stop** button, then follow the instructions on the LCD.
- If documents remain in the ADF after the **Stop** button is pressed while scanning is in progress, Document in ADF. Press OK to discharge document. (MX860 series) or Document in ADF. Close the feeder cover and press OK to eject document. (MX330 series) is displayed on the LCD. Press the **OK** button and follow the instructions on the LCD to automatically feed out the remaining documents.
- In case the machine was not able to send a fax, such as when the recipient's line was busy, it has the function to automatically redial the number after a specified interval. Automatic redialing is enabled by default. For details, see [Automatic Redialing](#).  
To cancel automatic redialing, wait until the machine starts redialing, then press the **Stop** button.

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Searching a Registered Dial Code Number by Name (Directory Dialing)

# Searching a Registered Dial Code Number by Name (Directory Dialing)

You can search the fax/telephone numbers registered to the one-touch speed dial codes (MX860 series) or the coded speed dial codes in alphabetical order.


### Note

- For the preparations required to send faxes, or the basic procedure for sending faxes using the Numeric buttons, refer to [Sending Faxes](#).

## 1. Press the **Coded Dial** button.

The coded speed dial code list is displayed.

## 2. Press the **#** button to display the directory dialing screen.

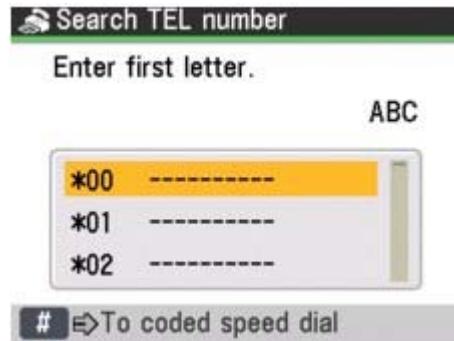

The directory dialing screen alternates with the coded speed dial code list each time you press the **#** button.

## 3. Use the Numeric buttons to enter the first letter of the recipient's name you want to search.

### Note

- For details on how to enter or delete characters or numbers, refer to [Specifying the Basic Settings for the Machine](#).

The recipients' names are sorted in alphabetical order.

### Note

- You can enter the following characters using the Numeric buttons.  
A, D, G, J, M, P, T, W
- If the entered character does not match the first character of any of the recipients' name registered to the speed dial codes, names beginning with the character closest to that entered are displayed.

## 4. Use the **▲▼** button to select the recipient's name, then press the **OK** button.

## 5. Press the **Color** button for color transmission, or the **Black** button for black & white transmission.

### Important

- Color transmission is available only when the recipient's fax machine supports color faxing.

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Sending the Same Document to Several Recipients (Sequential Broadcasting)

# Sending the Same Document to Several Recipients (Sequential Broadcasting)

This machine allows you to send the same document to multiple recipients (max. 106 recipients for MX860 series, 21 for MX330 series) in one operation. You can dial the recipients' numbers using either of the following dialing methods.

- **One-touch speed dialing (MX860 series):**

Up to 5 destinations

- **Coded speed dialing:**

Up to 100 destinations for MX860 series, 20 destinations for MX330 series

- **Regular dialing (using the Numeric buttons) or redialing:**

One destination

You can enter the destinations in any order, but be sure to press the **OK** button after your entry with the Numeric buttons.

### Note

- If you frequently send documents to the same group of recipients, you can group these numbers for group dialing. This will allow you to send documents to all the recipients in the group by simply pressing one or a few buttons. For details, see [Registering Group Dial Numbers](#).
- For the preparations required to send faxes, or the basic procedure for sending faxes using the Numeric buttons, refer to [Sending Faxes](#).

1. Enter the recipients' numbers one by one.

- **When using one-touch speed dialing (MX860 series):**

Press the One-Touch Speed Dial button (01 to 05) assigned to the number you want to dial.

- **When using coded speed dialing:**

After pressing the **Coded Dial** button, use the Numeric buttons or the **▲ ▼ ← →** button to enter the two-digit code assigned to the number you want to dial, then press the **OK** button.

### Note

- If the directory dialing screen is displayed, see [Searching a Registered Dial Code Number by Name \(Directory Dialing\)](#).

- **When using regular dialing:**

Use the Numeric buttons to enter the recipient's number, then press the **OK** button.

If Fax number re-entry is set to ON, see [Sending Faxes after Dialing Twice \(Fax Number Re-entry\)](#).

- **When using redialing:**

Press the **Redial/Pause** button, use the **▲ ▼** button to select the number you want to dial, then press the **OK** button.

▶ [Manual Redialing](#)

### Note

- To review the numbers you have entered, use the **▲ ▼** button.
- Pressing the **Back** button allows you to delete the last recipient's number.

2. Press the **Color** button for color transmission, or the **Black** button for black & white transmission.

 **Important**

- Color transmission is available only when the recipient's fax machine supports color faxing.

 **Note**

- To cancel sequential broadcasting, press the **Stop** button. To cancel a fax transmission while it is in progress, press the **Stop** button, then follow the instructions on the LCD.
- If documents remain in the ADF after the **Stop** button is pressed while scanning is in progress, Document in ADF. Press OK to discharge document. (MX860 series) or Document in ADF. Close the feeder cover and press OK to eject document. (MX330 series) is displayed on the LCD. Press the **OK** button and follow the instructions on the LCD to automatically feed out the remaining documents.
- When you press the **Stop** button, fax transmission to all the recipients will be canceled. You cannot cancel a fax transmission to only one recipient.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Resending Faxes (Redialing a Busy Number)

# Resending Faxes (Redialing a Busy Number)

There are two methods of redialing: Automatic redialing and Manual redialing.

- ▶ [Automatic Redialing](#)
- ▶ [Manual Redialing](#)

## Automatic Redialing

If you send a document and the recipient's line is busy, the machine will redial the number after a specified interval. Automatic redialing is enabled by default.

You can customize the following automatic redialing settings:

- **Whether or not your machine redials automatically**
- **The number of times the machine redials (1 to 10 times)**
- **The time interval between redials (1 to 99 minutes)**

For details on the automatic redialing settings, see [Auto redial](#).

### Note

- The range of values you can set for the automatic redialing settings varies depending on the country or region of purchase.
- To cancel automatic redialing, wait until the machine starts redialing, then press the **Stop** button.
- To cancel automatic redialing, delete the unsent document from the machine's memory while the machine is on-standby for a redial operation. For details, see [Deleting a Document in Memory](#).

## Manual Redialing

Follow the procedure below for manual redialing.

1. Press the **Redial/Pause** button.
2. Use the **▲ ▼** button to select the recipient's number to redial, then press the **OK** button.
3. Press the **Color** button for color transmission, or the **Black** button for black & white transmission.

### Important

- Color transmission is available only when the recipient's fax machine supports color faxing.

### Note

- For manual redialing, the machine memorizes up to 10 recent recipients dialed using the Numeric buttons. Note that the machine does not memorize any recipients dialed by one-touch speed dialing (MX860 series) or coded speed dialing.
- To cancel manual redialing, press the **Stop** button.

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Using the Useful Transmission Functions

# Using the Useful Transmission Functions

- ▶ [Using the Information Services](#)
- ▶ [Transmission/Reception of Faxes Using ECM](#)
- ▶ [Preventing Mistransmission of Faxes](#)

For sending faxes from your computer, refer to [Sending Faxes from a Computer](#).

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Using the Information Services

# Using the Information Services

You can use various information services such as provided by banks, and make airline reservations or hotel reservations. Since these services require tone dialing to use their services, you need to temporarily switch to tone dialing if your machine is connected to a rotary pulse line.

### ▶ Using the Touch Tone Line

### ▶ Using the Rotary Pulse Line

#### Important

- You may need to contract with the service providers for some information services. For details, contact the service providers.

#### Note

- MX330 series  
To use the information services, you need to dial with the telephone connected to the machine.

## Using the Touch Tone Line

### • Dialing by Using the Hook Button (MX860 series)

Before dialing, make sure that Hook key setting is set to Enable. For details, see [Hook key setting \(MX860 series\)](#).

1. Press the FAX button.
2. Press the Hook button.
3. Use the Numeric buttons to dial the number of the information service.
4. When the recorded message for the information service answers, use the Numeric buttons to press the numbers in accordance with the message.  
When you talk to him/her, lift the handset of the telephone connected to the machine.
5. Press the Hook button to finish using the service.

### • Dialing by Using the Telephone Connected to the Machine

1. Press the FAX button.
2. Lift the handset of the telephone.
3. Use the telephone to dial the number of the information service.
4. When the recorded message for the information service answers, use the telephone to press the numbers in accordance with the message.
5. Hang up the handset to finish using the service.

## Using the Rotary Pulse Line

### • Dialing by Using the Hook Button (MX860 series)

Before dialing, make sure that Hook key setting is set to Enable. For details, see [Hook key setting \(MX860 series\)](#).

- 1. Press the FAX button.**
- 2. Press the Hook button.**
- 3. Use the Numeric buttons to dial the number of the information service.**
- 4. When the recorded message for the information service answers, press the Tone button to switch to tone dialing.**

When you talk to him/her, lift the handset of the telephone connected to the machine.

- 5. Use the Numeric buttons to press the numbers in accordance with the message.**
- 6. Press the Hook button to finish using the service.**

- **Dialing by Using the Telephone Connected to the Machine**

- 1. Press the FAX button.**
- 2. Lift the handset of the telephone.**
- 3. Use the telephone to dial the number of the information service.**
- 4. When the recorded message for the information service answers, use the telephone to switch to tone dialing.**

When you dial the number of the information service using the telephone connected to the machine, you cannot use the machine to switch to tone dialing. For instructions on how to switch to tone dialing, refer to your telephone's instruction manual.

- 5. Use the telephone to press the numbers in accordance with the message.**
- 6. Hang up the handset to finish using the service.**

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Transmission/ Reception of Faxes Using ECM

# Transmission/Reception of Faxes Using ECM

This machine is set to send/receive faxes in Error Correction Mode (ECM). If the recipient's fax machine is compatible with ECM, ECM automatically corrects errors and resends the fax.

### Note

- If the sender's or recipient's fax machine is not compatible with ECM, the fax will be sent/received in the standard mode.
- You can disable ECM transmission/reception. For details, see [ECM TX](#) or [ECM RX](#).
- Transmission may take longer when ECM is enabled.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Preventing Mistransmission of Faxes

# Preventing Mistransmission of Faxes

This machine has two functions for preventing the mistransmission of faxes.

- **Sending faxes after dialing the fax/telephone number twice**  
→ [Sending Faxes after Dialing Twice \(Fax Number Re-entry\)](#)
- **Sending faxes after the machine checks the recipient's fax machine information**  
→ [Sending Faxes after Checking Information \(Checking the Recipient's Information\)](#)

## Sending Faxes after Dialing Twice (Fax Number Re-entry)

This function requires you to re-enter the fax/telephone number after entering the number using the Numeric buttons, so that the machine prevents you from misdialing.

### 1. Press the FAX button, then press the Menu button.

The FAX menu screen is displayed.




### 2. Use the ▲ ▼ button to select Settings, then press the OK button.




### 3. Use the ▲ ▼ button to select Device settings, then press the OK button.

### 4. Use the ▲ ▼ button to select FAX settings, then press the OK button.

### 5. Use the ▲ ▼ button to select Transmission settings, then press the OK button.

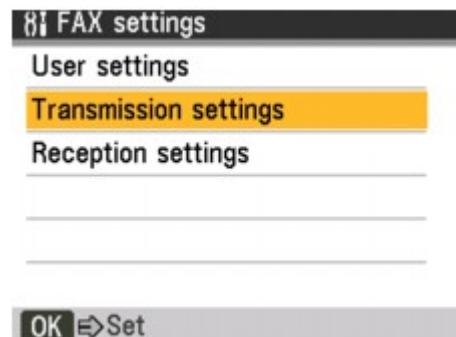

### 6. Use the ▲ ▼ button to select Fax number re-entry, then press the OK button.

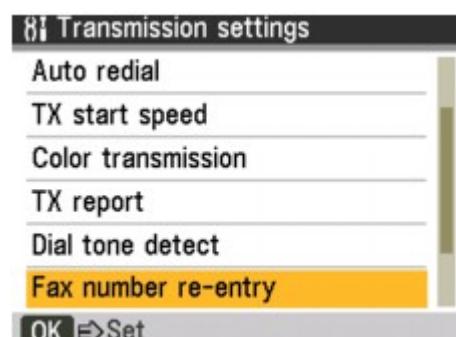

### 7. Use the ▲ ▼ button to select ON, then press the OK button.

Follow the procedure below to send a fax with this function.

**1. Enter the fax/telephone number using the Numeric buttons, then press the OK button.**

Re-enter the number for confirmation. is displayed on the LCD.

**2. Enter the number, then press the OK button.**

If the number is not identical with the number entered first, go back to step 1.

**3. Press the Color button for color transmission, or the Black button for black & white transmission.**

**Important**

- Color transmission is available only when the recipient's fax machine supports color faxing.

**Sending Faxes after Checking Information (Checking the Recipient's Information)**

Before sending a fax, the machine checks whether the recipient's fax machine information matches the dialed number.

**1. Press the FAX button, then press the Menu button.**

The FAX menu screen is displayed.




**2. Use the ▲ ▼ button to select Settings, then press the OK button.**




**3. Use the ▲ ▼ button to select Device settings, then press the OK button.**

**4. Use the ▲ ▼ button to select FAX settings, then press the OK button.**

**5. Use the ▲ ▼ button to select Transmission settings, then press the OK button.**

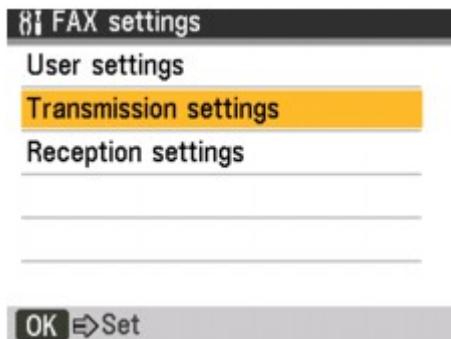

**6. Use the ▲ ▼ button to select Check RX fax info, then press the OK button.**

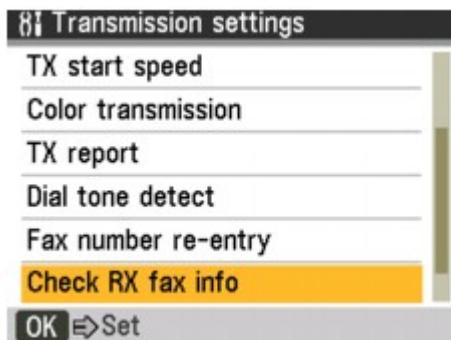

**7. Use the ▲ ▼ button to select ON, then press the OK button.**

**Important**

- Transmission may take longer when this function is enabled.
- Transmission will be canceled if the machine fails to receive the recipient's fax information or if the received information does not match the fax number.
- This function is not available when you send a fax manually. For details, see [Sending a Fax after Speaking on Telephone](#).

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Receiving Faxes

### Receiving Faxes

Refer to [Receiving Faxes](#) for information on receiving faxes or the receive mode settings.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Changing the Print Settings

# Changing the Print Settings

This machine prints received faxes to paper loaded in the machine beforehand. You can use the Operation Panel to change the paper settings for printing faxes. Make sure that the settings are appropriate for the loaded paper.

### Important


- MX860 series
  - Load Legal-sized paper on the Rear Tray. Only A4 or Letter-sized paper can be fed from the Cassette.
  - If paper other than A4, Letter-, or Legal-sized paper is loaded, the received faxes are stored in memory and Check the page size and press OK. is displayed on the LCD. In this case, replace the loaded paper with A4, Letter-, or Legal-sized\* paper, then press the **OK** button.  
You can also press the **Stop** button to close the message and print the stored documents in memory later. For details, see [Printing a Document in Memory](#).
  - \* Legal may not be available depending on the country or region of purchase.
  - If no paper is loaded in the specified paper source, or paper has run out while printing is in progress, the received faxes are stored in memory and There is no paper. Load paper and press OK. is displayed on the LCD. In this case, load paper in the Cassette (MX860 series) or on the Rear Tray and press the **OK** button.  
You can also press the **Stop** button to close the message and print the stored documents in memory later. For details, see [Printing a Document in Memory](#).

### Note

- If the sender sends a document that is larger than Letter-size or Legal-size, such as 11" x17", the sender's machine may send the fax automatically reduced in size or divided, or send only a part of the original.

## Setting Items

Press the **Settings** button in the fax mode. Use the **▲ ▼** button to select the setting item. Use the **◀ ▶** button to change the setting.

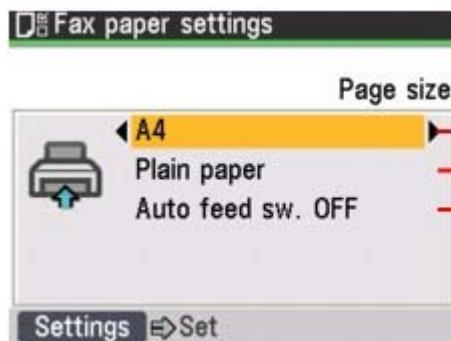

### 1. Page size

Select the page size from A4, 8.5"x11"(LTR), or 8.5"x14"(Legal).

### 2. Media type

The paper type is set to Plain paper.

### 3. Auto feed sw. (MX860 series)

Select whether to switch the paper source automatically.

### Note

- MX860 series
  - When 8.5"x14"(Legal) is selected as the page size, you cannot select a paper source other than the Rear Tray.
- MX860 series

When Auto feed sw. ON is selected, paper feeds from the paper source specified by Plain paper feed settings. If there is no paper in the specified paper source, the machine automatically switches to the other paper source.

---

If you press the **Settings** button, the LCD returns to the FAX standby screen.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Setting the Number of Rings for Fax Calls

# Setting the Number of Rings for Fax Calls

When Fax priority mode or Fax only mode is selected as the receive mode, you can specify how many times the external device rings for fax calls by selecting ON for Incoming ring.

## ▶ Incoming ring

DRPD\*1 or Network switch\*2 is also available. For details, refer to [Setting the Receive Mode](#).

\*1 This setting is available only in the US and Canada.

\*2 This setting may not be available depending on the country or region of purchase.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Using the Useful Reception Functions

---

# Using the Useful Reception Functions

- ▶ Memory Reception
- ▶ Remote Reception
- ▶ Rejecting Fax Reception
- ▶ Using the Caller ID Service to Reject Calls

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Memory Reception

# Memory Reception

If the machine receives a fax under one of the following conditions, it will not be able to print the received fax and will store it in its memory. The **In Use/Memory** lamp is lit and Received in memory is displayed on the LCD. When the problem is resolved as described, the fax stored in memory is printed automatically.

- **Ink has run out:**

Check the ink level and take the appropriate action.

▶ [Routine Maintenance](#)

### Note

- You can set the machine to forcibly print a received fax even if the ink has run out. However, part or all of the fax may not be printed since the ink has run out. Also, the contents of the fax will not be stored in memory. If the ink has already run out, we recommend that OFF be selected for Auto print in User settings to store the received fax in memory. When you print the fax stored in memory manually, check the ink level and take the appropriate action. For details, see [Document Stored in Memory](#).

- **Paper has run out:**

Load the paper and press the **OK** button.

- **A different size of paper from that specified by Page size is loaded:**

Load the same size of paper as that specified by Page size, then press the **OK** button.

- **Page size is set to other than A4, 8.5"x11"(LTR), or 8.5"x14"(Legal)**

**(MX330 series):**

Set Page size to A4, 8.5"x11"(LTR), or 8.5"x14"(Legal).

- **Media type is set to other than Plain paper (MX330 series):**

Set Media type to Plain paper.

- **You pressed the Stop button to cancel printing of a fax:**

Press the **FAX** button.

### Note

- To print the received faxes automatically, select ON for Auto print in User settings. For details, see [Auto print](#).
  - When OFF is selected for Auto print in User settings, print the faxes stored in memory from the Memory reference screen. For details, see [Printing a Document in Memory](#).
  - MX860 series can store up to approximately 250 pages (approximately 30 documents)\* of faxes in memory. MX330 series can store up to approximately 50 pages (approximately 20 documents)\* of faxes in memory.
- \* When using ITU-T No.1 chart (Standard mode)
- If the memory becomes full, the machine cannot receive any more faxes. Print or delete the originals stored in memory, and have the sender resend the faxes. For details, see [Document Stored in Memory](#).

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Remote Reception

### Remote Reception

If the machine is located away from the telephone, pick up the handset of the telephone connected to the machine and dial 25 (the remote reception ID) to receive faxes (remote reception).

- **If you use a rotary pulse line, temporarily switch your telephone to tone dialing. For details on how to switch to tone dialing, refer to your telephone's instruction manual.**
- **If you have an answering machine connected to the machine that can carry out remote control operations, the security code for this function may be the same as the remote reception ID. In this case, change the remote reception ID in Remote RX ID in Remote RX.**

Remote reception can be disabled.

➡ [Remote RX](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Rejecting Fax Reception

# Rejecting Fax Reception

You can set the machine to reject faxes with no sender information or those from specific senders. Select one of the following conditions to reject faxes.

- **Faxes with no caller identification.**
- **Faxes from senders not registered to the one-touch speed dial codes (MX860 series) or the coded speed dial codes.**
- **Faxes from senders registered in the machine as rejected numbers.**

### 1. Press the **FAX** button, then press the **Menu** button.


The FAX menu screen is displayed.

### 2. Use the button to select Settings, then press the **OK** button.


### 3. Use the button to select Device settings, then press the **OK** button.

### 4. Use the button to select FAX settings, then press the **OK** button.

### 5. Use the button to select Reception settings, then press the **OK** button.

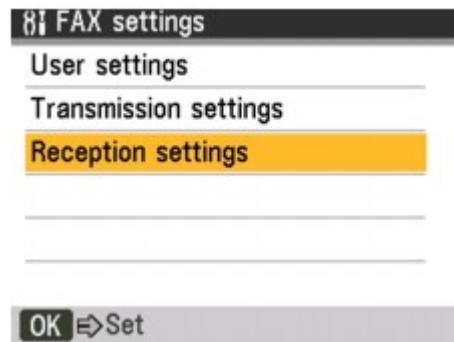

### 6. Use the button to select Fax reception reject, then press the **OK** button.

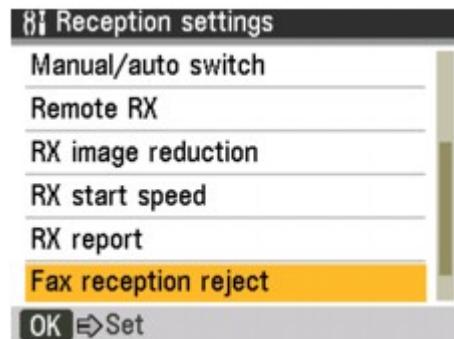

### 7. Use the button to select ON, then press the **OK** button.

### 8. Use the button to select the fax rejection condition, then press the **OK** button.

You can select one of the three conditions below.

**No sender info.\***

Rejects faxes with no caller identification.

**1-touch/code unset (MX860 series)\*, Coded dial unset (MX330 series)\***

Rejects faxes from the senders not registered to the speed dial codes.

\* This setting may not be available depending on the country or region of purchase.


**Rejected numbers**

Rejects faxes from the senders registered in the machine as rejected numbers.

If you select Rejected numbers, follow the procedure below to register a fax/telephone number to reject.

**1. Select Yes when the confirmation screen is displayed.**

The list of rejected numbers is displayed.

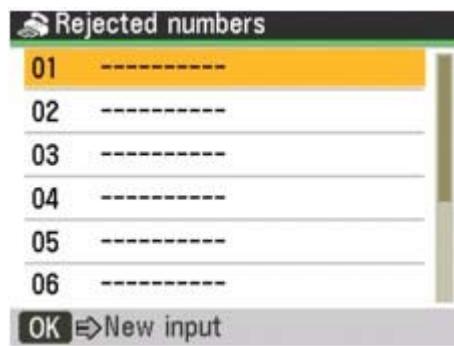**2. Use the ▲▼ button to select the dial code to register, then press the OK button.****3. Use the Numeric buttons to enter the fax/telephone number to reject, then press the OK button.**

Data entry OK. is displayed on the LCD, then the LCD returns to the screen for registering a rejected number.

**4. Repeat steps 2 and 3 to continue registering numbers to reject.**

You can register up to 10 rejected numbers.

**Note**

- When the machine rejects reception, Reception rejected. is displayed on the LCD.
- You can print the list of rejected numbers. For details, see [Summary of Reports and Lists](#).
- Faxes with no caller identification are also rejected when 1-touch/code unset (MX860 series), Coded dial unset (MX330 series), or Rejected numbers is selected.


**Registering/Editing/Deleting the Rejected Number on the TEL Number Registration Screen**

You can register/edit/delete a rejected number from TEL number registration.

**1. Press the FAX button, then press the Menu button.**

The FAX menu screen is displayed.

**2. Use the ▲▼ button to select TEL number registration, then press the OK button.****3. Use the ▲▼ button to select Rejected numbers, then press the OK button.**

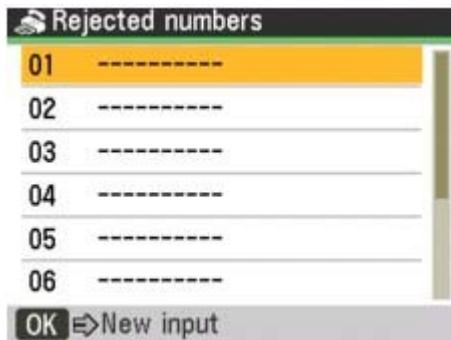

- **To register the number:**

1. Use the **▲▼** button to select the dial code, then press the **OK** button.
2. Use the Numeric buttons to enter the fax/telephone number to reject, then press the **OK** button.

Data entry OK. is displayed on the LCD, then the LCD returns to the screen for registering a rejected number.

Repeat steps 1 and 2 to continue to register the number to reject.

- **To edit the number:**

1. Use the **▲▼** button to select the occupied dial code, then press the **OK** button.
2. Select Edit, then press the **OK** button.
3. Use the **◀** button to delete the number, enter the new number using the Numeric buttons, then press the **OK** button.

#### Note

- 
- Holding down the **◀** button clears the number.
  - Data entry OK. is displayed on the LCD, then the LCD returns to the screen for registering a rejected number.
- 

Repeat steps 1 to 3 to continue to register the number to reject.

- **To delete the number:**

1. Use the **▲▼** button to select the occupied dial code, then press the **OK** button.
2. Select Delete, then press the **OK** button.
3. Select Yes when Delete the registered number? is displayed on the LCD, then press the **OK** button.

Data deleted. is displayed on the LCD, then the LCD returns to the screen for registering a rejected number.

Repeat steps 1 to 3 to continue to delete the rejected number registered.

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Using the Caller ID Service to Reject Calls

# Using the Caller ID Service to Reject Calls

If you subscribe to the Caller ID service, the machine detects the sender's Caller ID. If the sender's ID does not match the conditions specified in this setting, the machine rejects the phone call or fax reception from the sender.

1. Press the **FAX** button, then press the **Menu** button.


The FAX menu screen is displayed.

2. Use the **◀▶** button to select  Settings, then press the **OK** button.


3. Use the **◀▶** button to select  Device settings, then press the **OK** button.

4. Use the **▲▼** button to select FAX settings, then press the **OK** button.

5. Use the **▲▼** button to select Reception settings, then press the **OK** button.

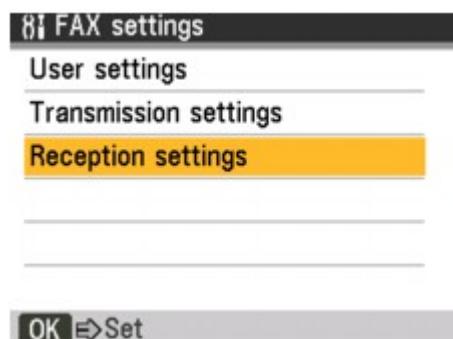

6. Use the **▲▼** button to select Caller rejection, then press the **OK** button.

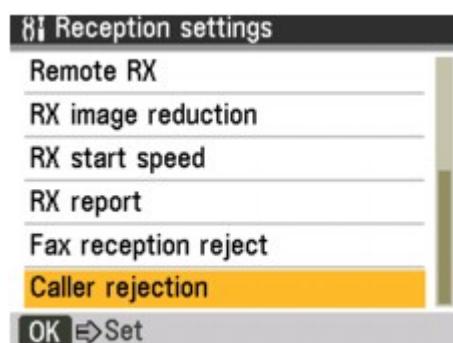

7. Use the **▲▼** button to select Yes, then press the **OK** button.

You can now perform settings for Caller rejection.

8. Use the **▲▼** button to select the phone call or fax rejection condition, use the **◀▶** button to select the setting, then press the **OK** button.

Set the conditions below.

### Anonymous no.

Selects whether to reject a phone call or fax reception from a sender with no caller identification.

### Out of area

Selects whether to reject a phone call or fax reception out of the subscribed service area.

### Rejected numbers

Selects whether to reject a phone call or fax reception from the numbers registered to Rejected numbers in Fax reception reject. For details, see [Rejecting Fax Reception](#).

Reject: Rejects the phone call or fax reception matching the condition specified by this setting.

If you select Reject for Rejected numbers, Register rejected numbers? is displayed on the LCD.

Select Yes to register a fax/telephone number to reject. For details, see [Rejecting Fax Reception](#).

Accept: Allows the phone call or fax reception matching the condition specified by this setting.

## Note

- This setting may not be supported depending on the country or region of purchase. Contact your telephone company to confirm whether it provides this service.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Document Stored in Memory

# Document Stored in Memory

In the following cases, the machine is not able to print the received fax and will automatically store the fax in its memory.

- **Ink has run out.**
- **Paper has run out.**
- **A different size of paper from that specified by Page size is loaded.**
- **Page size is set to other than A4, 8.5"x11"(LTR), or 8.5"x14"(Legal) (MX330 series).**
- **Media type is set to other than Plain paper (MX330 series).**
- **OFF is selected for Auto print in User settings.**
- **You pressed the Stop button to cancel printing of a received fax.**

### Important

- If you disconnect the power cord, all the documents stored in memory are deleted. Send or print necessary documents before disconnecting the power cord.

### Note

- When confirming, printing, or deleting a document stored in memory, you specify it by its transaction number. If you do not know the transaction number for your target document, print the list of documents first.

To print a document in memory:

▶ [Printing a Document in Memory](#)

To delete a document in memory:

▶ [Deleting a Document in Memory](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Document Stored in Memory > Printing a Document in Memory

# Printing a Document in Memory

If the machine was not able to send a fax or print a received fax, it stores the unsent or unprinted fax in its memory. If an error occurred during a fax transmission, the document is not stored in memory. You can print a list of stored documents (the memory list) or print a specified document.

▶ [Printing a Memory List or Specified Document in Memory](#)

▶ [Printing All the Documents in Memory](#)

### Note

- The memory list shows the transaction number of the unsent or unprinted fax (TX/RX NO.), transaction mode, recipient's number, and the date and time of the transaction.

## Printing a Memory List or Specified Document in Memory

### 1. Load paper.

Refer to [Loading Paper / Originals](#).


### 2. Press the FAX button, then press the Menu button.

The FAX menu screen is displayed.



### 3. Use the button to select Memory reference, then press the OK button.

### 4. Print a specified document or memory list.

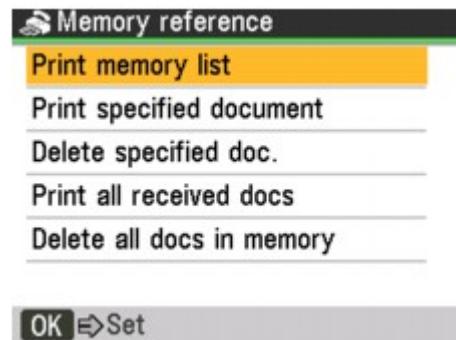

- **To print a memory list:**

1. Use the button to select Print memory list, then press the OK button.
2. Use the button to select Yes, then press the OK button.

The memory list stored in memory is printed.

- **To print a specified document:**

1. Use the button to select Print specified document, then press the OK button.
2. Use the button to select the transaction number of the document you want to print, then press the OK button.

The date and time of transaction and fax/telephone number, and the transaction number are displayed on a list screen of documents stored in memory.



- A. Date and time of transaction and fax/telephone number
  - B. Transaction number (TX/RX NO.)
- A transaction number from 0001 to 4999 indicates a document being sent.  
 A transaction number from 5001 to 9999 indicates a document being received.
3. Use the **▲ ▼** button to select Yes or No, then press the **OK** button.  
 If you select Yes, only the first page of the document will be printed. If you select No, all pages of the document will be printed.  
 To print other documents, repeat the procedure from steps 2 and 3.

#### Note

- If you select No to print all the pages of the document, and all the pages in memory have been printed, Delete the printed documents from memory? is displayed on the LCD. If you select Yes, printed pages in memory are deleted.
- If there are no documents stored in memory, There is no document in memory. is displayed, and the machine returns to the previous screen.

## Printing All the Documents in Memory

### 1. Load paper.

Refer to [Loading Paper / Originals](#).

### 2. Press the FAX button, then press the Menu button.

The FAX menu screen is displayed.



### 3. Use the **◀ ▶** button to select Memory reference, then press the **OK** button.

### 4. Use the **▲ ▼** button to select Print all received docs, then press the **OK** button.

### 5. Use the **▲ ▼** button to select Yes, then press the **OK** button.

#### Note

- Delete the printed documents from memory? is displayed on the LCD each time a document is printed. If you select Yes, the document is deleted from memory.
- If there are no documents stored in memory, There is no received document that can be printed. is displayed, and the machine returns to the previous screen.

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Document Stored in Memory > Deleting a Document in Memory

# Deleting a Document in Memory


- ▶ Deleting a Specified Document in Memory
- ▶ Deleting All the Documents in Memory

## Deleting a Specified Document in Memory


1. Press the FAX button, then press the Menu button.

The FAX menu screen is displayed.

2. Use the button to select Memory reference, then press the OK button.
3. Use the button to select Delete specified doc., then press the OK button.

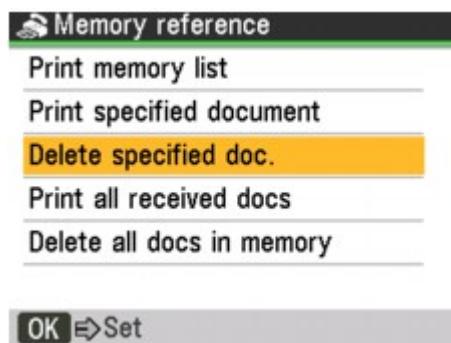

4. Use the button to select the transaction number (TX/RX no.) of the document you want to delete, then press the OK button.

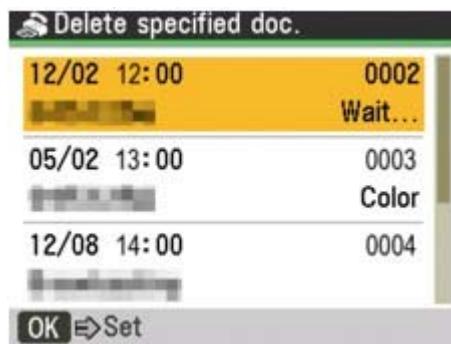

5. Use the button to select Yes, then press the OK button.

To delete other documents, repeat the procedure from steps 4 to 5.

## Deleting All the Documents in Memory

1. Press the FAX button, then press the Menu button.

The FAX menu screen is displayed.

2. Use the button to select Memory reference, then press the OK button.
3. Use the button to select Delete all docs in memory, then press the OK button.

4. Use the ▲ ▼ button to select Yes, then press the OK button.

#### Note

- 
- This function is not available while the machine is receiving a fax.
- 

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending/Receiving Faxes Using the Operation Panel of the Machine > Summary of Reports and Lists

# Summary of Reports and Lists

The table below shows the reports and lists that can be printed from the machine. Refer to the pages indicated for more details.

Report or List	Description
Activity report	Shows recent fax transactions performed by the machine. You can set the machine to automatically print the report after every 20 transactions. You can also print the report manually. ▶ <a href="#">Activity report</a>
Fax/telephone number list	Lists the numbers and names registered for one-touch speed dials (MX860 series), coded speed dials, and group dials. ▶ <a href="#">Registering Recipients for Speed Dialing</a>
User's data list	Lists the current settings of the machine and the registered sender information. ▶ <a href="#">User's Data List</a>
Memory list	Lists the documents currently stored in the machine's memory. ▶ <a href="#">Document Stored in Memory</a>
Rejected number list	Lists the rejected numbers. ▶ <a href="#">Rejected Number List</a>
Caller history list	Lists the caller history (Available when Caller ID service is subscribed). ▶ <a href="#">Caller History List</a>
TX (Transmission) report	Confirms whether a transmission has been completed successfully. If this setting is enabled, this report is printed after each fax transmission. ▶ <a href="#">TX report</a>
RX (Reception) report	Confirms whether a reception has been completed successfully. If this setting is enabled, this report is printed after each fax reception. ▶ <a href="#">RX report</a>
MULTI TX (Transmission) report	Printed after sequential broadcasting of a document. ▶ <a href="#">MULTI TX Report</a>

### Note

- When Auto print in User settings is set to OFF, the following reports are not printed automatically.
  - Activity report
  - TX (Transmission) report
  - RX (Reception) report
  - MULTI TX (Transmission) report

## Activity Report

Prints the history of sent and received faxes. The machine is factory-set to print an Activity report after every 20 transactions. You can also disable automatic printing of this report, or print it manually.

### Note

- For details on the Activity report settings, see [Activity report](#).

- **Printing the Activity report manually**

1. Load paper.

Refer to [Loading Paper / Originals](#).

2. Press the FAX button, then press the Menu button.


The FAX menu screen is displayed.



3. Use the ▶ button to select Print reports/lists, then press the OK button.



4. Use the **▲ ▼** button to select Activity report, then press the OK button.

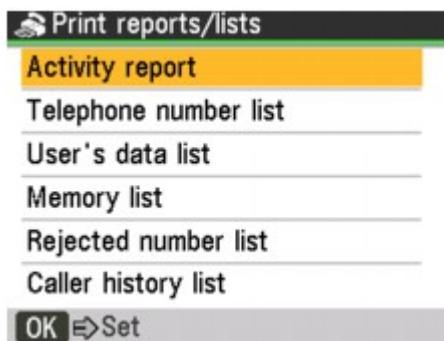

5. Use the **▲ ▼** button to select Yes, then press the OK button.

The Activity report is printed.

### User's Data List

The User's data list enables you to confirm the current settings of your machine as well as the registered sender information.

▶ Specifying the Basic Settings for the Machine

- Printing the User's data list

1. Load paper.

Refer to [Loading Paper / Originals](#).


2. Press the FAX button, then press the Menu button.

The FAX menu screen is displayed.

3. Use the **◀ ▶** button to select Print reports/lists, then press the OK button.



4. Use the **▲ ▼** button to select User's data list, then press the OK button.

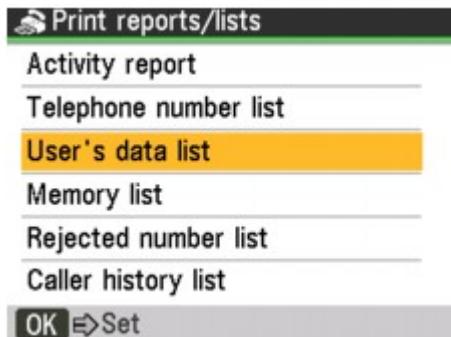

**5. Use the ▲ ▼ button to select Yes, then press the OK button.**

The User's data list is printed.

### Rejected Number List

- **Printing the Rejected number list**

**1. Load paper.**

Refer to Loading Paper / Originals.


**2. Press the FAX button, then press the Menu button.**

The FAX menu screen is displayed.

**3. Use the <> button to select Print reports/lists, then press the OK button.**



**4. Use the ▲ ▼ button to select Rejected number list, then press the OK button.**

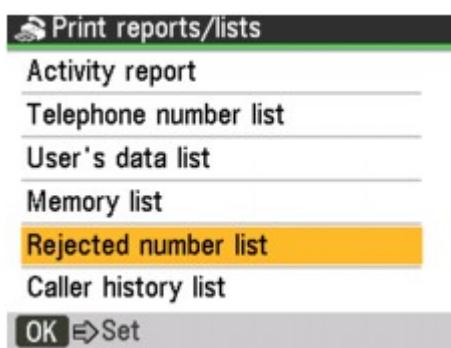

**5. Use the ▲ ▼ button to select Yes, then press the OK button.**

The Rejected number list is printed.

### Caller History List

This function may not be available depending on the country or region of purchase.


- **Printing the Caller history list**

**1. Load paper.**

Refer to [Loading Paper / Originals](#).

**2. Press the FAX button, then press the Menu button.**

The FAX menu screen is displayed.

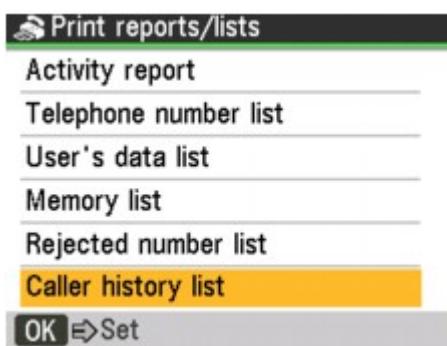**3. Use the button to select Print reports/lists, then press the OK button.****4. Use the button to select Caller history list, then press the OK button.****5. Use the button to select Yes, then press the OK button.**

The Caller history list is printed.

**TX Report**

This machine can print a TX (transmission) report after sending a document, confirming whether the transmission has been completed successfully. At the time of purchase, TX reports are set to be printed only when a transmission error occurred. You can set the machine to print a report each time it sends a document, or disable printing of the report.

**Note**

- For details on the TX report settings, see [TX report](#).
- For the errors that occur when you send a fax, see [Errors when you send a fax](#).

**Errors when you send a fax**

If an error occurs when you send a fax, the error number is printed in the TX report (there are some errors for which the cause is also printed).

The causes corresponding to the error numbers are as follows.

No.	Cause	Action
#001	Document is jammed in the ADF.	The document is jammed in the ADF. Remove the document page jammed in the ADF. When the error is cleared, redo the operation. See <a href="#">Document Jams in the ADF</a> .
#003	Document is too long.	You attempted to send a document longer than 15.75 inches / 400 mm. You cannot send a document longer than 15.75 inches / 400 mm from the ADF. #003 is also printed if it takes time to send a

		page. Divide the document or set the image quality (Fax resolution) to a lower setting, then resend it.
#005	No answer.	The recipient's fax machine does not respond. Contact the recipient and have the recipient check that the telephone line is connected correctly.
#012	Try again.	There is no paper in the recipient's fax machine. Contact the recipient and have the recipient load paper.
#017	No tone is detected.	The machine could not detect the dial tone. Dial tone detect in Transmission settings is set to ON. Set it to OFF, then send the fax.
#018	Line was busy.	The fax/telephone number you dialed is busy. Try dialing again after waiting for a moment.
#022	Try again.	The fax/telephone number registered to the speed dial is incorrect. Check the recipient's fax/telephone number, correct the fax/telephone number registered to the speed dial code, then send the document again.
#037	Memory is full.	The machine could not send a document because its memory is full. Resend the document after deleting contents in memory. See <a href="#">Deleting a Document in Memory</a> .
#059	Transmission has been canceled due to a fax information mismatch.	Transmission has been canceled because the machine could not detect the recipient's fax machine information or the information did not match the dialed number. This error number is displayed when Check RX fax info is set to ON. For details, see <a href="#">Sending Faxes after Checking Information (Checking the Recipient's Information)</a> .
#085	Try again in black & white transmission.	The recipient's fax machine is not color-compatible. Resend the document in black & white.
STOP	The <b>Stop</b> button was pressed during transmission.	The <b>Stop</b> button was pressed to cancel transmission of the document. Resend it if necessary.

## RX Report

This machine can print a RX (reception) report after receiving a document, confirming whether the reception has been completed successfully. At the time of purchase, the machine is set so that RX reports are not printed at all. You can set the machine to print a report each time it receives a document, or only when an error occurs.

### Note

- For details on the RX report settings, see [RX report](#).
- For the errors when you receive a fax, see [Errors when you receive a fax](#).

### Errors when you receive a fax

If an error occurs when you receive a fax, the error number is printed in the RX report (there are some errors for which the cause is also printed).

The causes corresponding to the error numbers are as follows.

No.	Cause	Action
#003	It takes too long to receive a	Contact the sender and have the sender divide

	page.	the fax or set the image quality (Fax resolution) to a lower setting and resend it.
#005	No answer.	When receiving a fax manually, the machine could not detect the signals from the sender's fax machine. Contact the sender and have the sender resend it, or set the machine to receive the fax automatically.
#037	Memory is full.	The machine could not receive a fax because its memory is full. Delete contents in memory, then ask the sender to resend the fax. See <a href="#">Deleting a Document in Memory</a> .
#046	Reception has been rejected due to the specified fax rejection condition.	Reception has been rejected because the fax matches the fax rejection condition specified by Fax reception reject. For details, see <a href="#">Rejecting Fax Reception</a> .
STOP	The <b>Stop</b> button was pressed during reception.	The <b>Stop</b> button was pressed to cancel reception of the fax. Contact the sender and have the sender resend it if necessary.

### MULTI TX Report

This machine prints out a MULTI TX (transmission) report after sending the same document to several destinations, confirming whether the transmission to all the recipients has been completed successfully.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending Faxes from a Computer

---

# Sending Faxes from a Computer

- ▶ [Sending a FAX](#)
- ▶ [Creating an Address Book](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending Faxes from a Computer > Sending a FAX


### Sending a FAX

You can send faxes using the fax driver from applications that support document printing.

#### Note

- You can only specify one fax recipient. You cannot send a fax to two or more recipients in one operation.
- Only black and white transmission is supported.

1. Open the document you want to fax with an application (such as Word), and then click the Print command. (The command is Print... on the File menu.)
2. In Select Printer or Name in the Print dialog box, select Canon MX860 series FAX.
3. Click Print or OK.

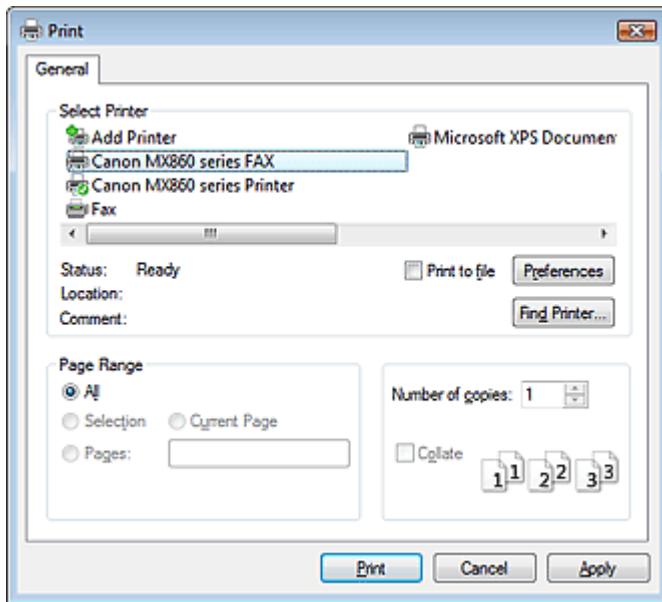


\* Print dialog box in NotePad

#### Note

- You can specify the paper size and print orientation by clicking Preferences or Properties (for Windows 2000: Fax Options tab or Properties) in the Print dialog box.  
For details, see the help for the fax driver.

4. Enter the Name and Fax of the recipient in Send Fax To in the Send Fax dialog box, then click Add to Recipient List.

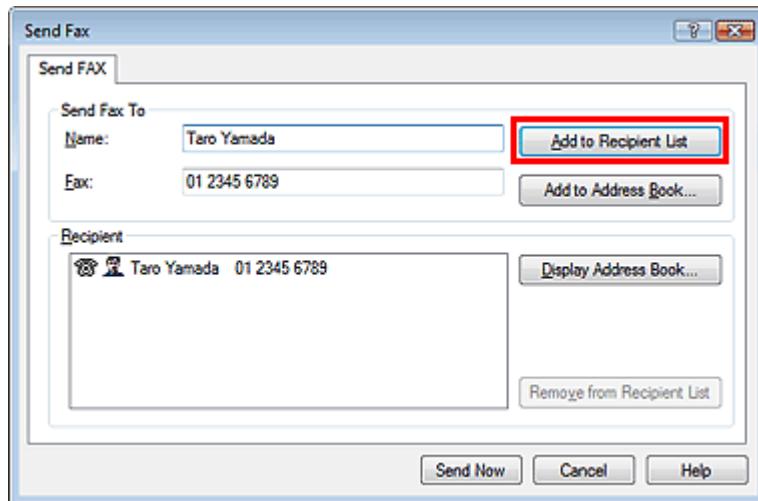


### Note

- You can also register a recipient in the recipient list by following the instructions below:
  1. Click Display Address Book..., select a recipient from the recipient list
  2. Click Add to Recipient List
  3. Click OK
- For details on valid characters, see the help for the fax driver.
- You can register the recipient you entered to the address book by clicking Add to Address Book....

For details on the address book, see "[Creating an Address Book](#)."

## 5. Click Send Now.

A confirmation message is displayed when transmission finishes.

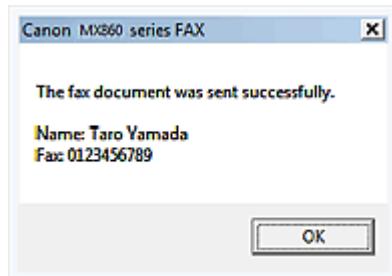


### Important

- If you cannot send a fax because of line failure etc., see "[Problems Sending Faxes](#)."

## Canceling Transmission

If you click Send Now in the Send Fax dialog box, the printer icon is displayed in the taskbar. Double-click this icon to display the list of fax jobs awaiting transmission or being sent.

Right-clicking a job and selecting Cancel stops transmission.

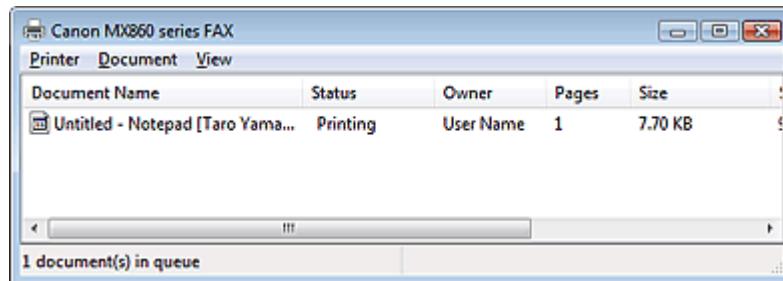

## Advanced Guide

Advanced Guide > Faxing > Sending Faxes from a Computer > Creating an Address Book


# Creating an Address Book

By using the address book, you can send a fax by simply specifying a recipient from it. You can register the recipient's name, fax number and other information in the address book.

## Registering a recipient (WAB contact) in the address book


You can register an individual recipient (Contact) in the address book.

1. On the Windows taskbar, click the Start button, then click Control Panel > Hardware and Sound > Printers. (For Windows XP: Click the Start button, then click Control Panel > Printers and Other Hardware > Printers and Faxes. For Windows 2000: Click the Start button, then click Settings > Printers.)
2. Right-click the printer icon for Canon MX860 series FAX, then click Printing Preferences....
3. In the Canon MX860 series FAX Printing Preferences dialog box, click Address Book....

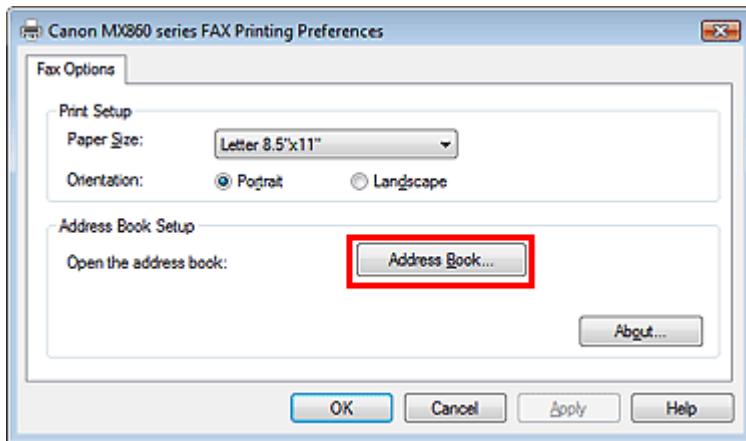

## Opening the address book for the First Time (Windows XP/Windows 2000)

In Windows XP/Windows 2000, when you open the address book for the first time, the Setup Windows Address Book dialog box will be displayed.

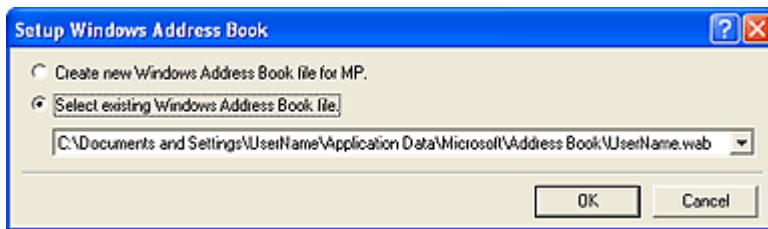

## Creating a New Windows Address Book (WAB File) Exclusively for Faxing

Select Create new Windows Address Book file for MP., then click OK.

You can also change the setting later so as to be able to use another address book. For details, see the help for the fax driver.

## Using an Existing Windows Address Book

Select this option if you do not create a new address book file exclusively for faxing.

Click Select existing Windows Address Book file., select an address book file from the list, then click OK.


Using an existing Windows Address Book enables you to share it with other applications that use Windows Address Books.

This option cannot be selected if there is no Windows Address Book file created.


### Note

- In Windows Vista, you can register an individual recipient (Contact) in the address book folder (Windows Address Book) as an address book file (.contact file) which can be used in multiple applications. However, you cannot change the address book you use, as only one address book can be created per user.  
To open the Windows Address Book, click the Start button, then click All Programs > Windows Contacts.
- In Windows XP/Windows 2000, you can change the address book you use to another existing address book by clicking the Address Book Profile... in the Canon MX860 series FAX Printing Preferences dialog box. For details, see the help for the fax driver.
- For details on how to open the Windows Address Book (the default address book of the operating system), see the help or manual for the applications that use Windows Address Book.

**4.** In the Address Book dialog box, click New.

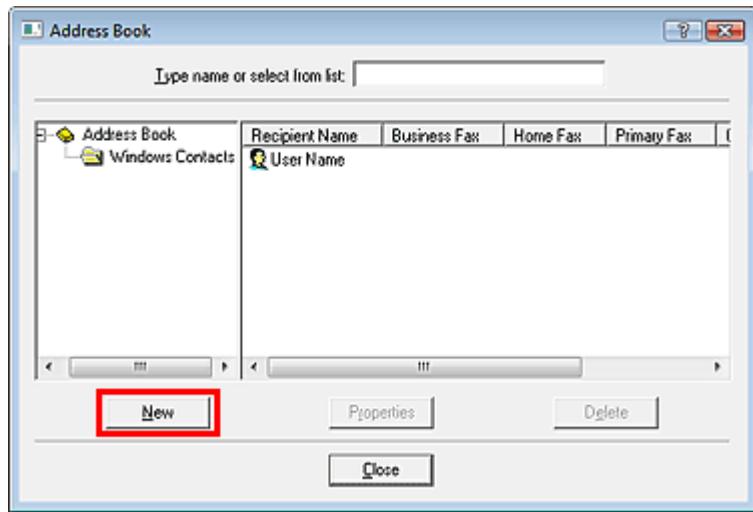

**5.** Click Contact in the New Entry dialog box, then click OK.

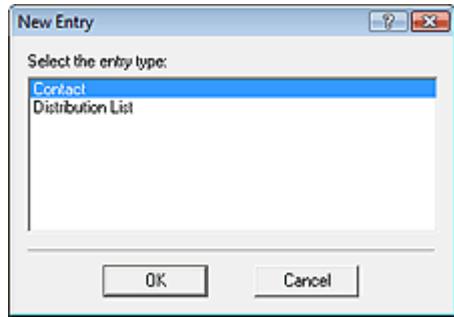


### Note

- To send a fax, you can only specify one recipient. You cannot specify a Distribution List.

**6.** Enter the First, Middle, and Last of the contact in the Name and E-mail tab (Name tab when using other than Windows Vista) on the Properties screen.


The recipient's name will be printed at the top of the fax received by the recipient.

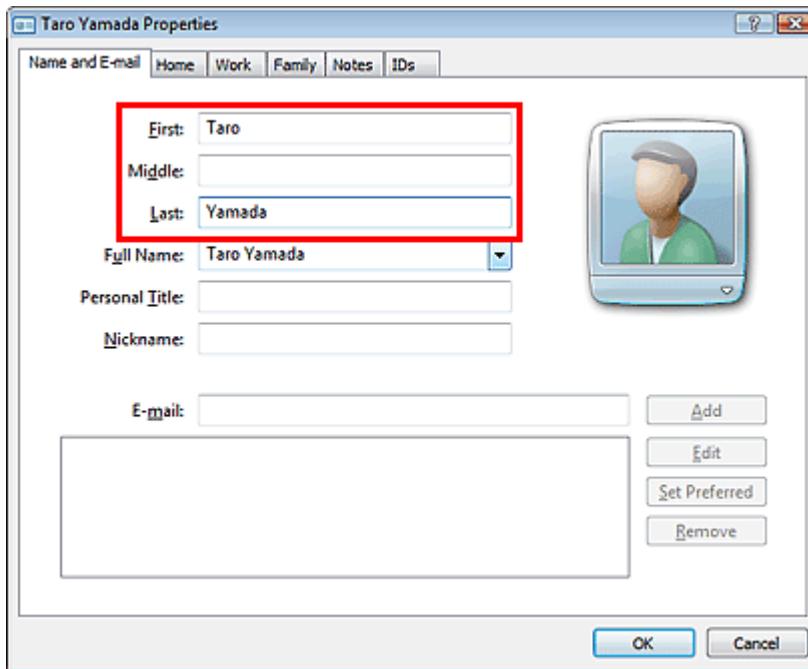

7. Enter the fax number on the Home or Work tab, then click OK.

#### Note

- You can also register a recipient by clicking the Add to Address Book... button on the Send Fax dialog box after entering the recipient.

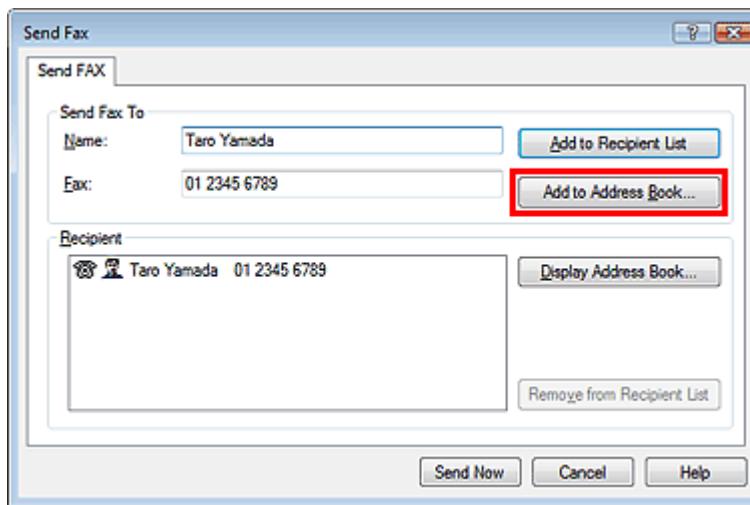

- If you upgrade from Windows XP to Windows Vista, the address book you created in Windows XP may not be reflected in Windows Vista. In this case, open the address book in the following procedure and reflect the information to a new address book.
  - On the Windows taskbar, click the Start button, then click Control Panel > Appearance and Personalization > Folder Options.
  - Click the View tab of the Folder Options dialog box, select Show hidden files and folders in Advanced settings, then click OK.
  - On the Windows taskbar, click the Start button, click XXXX (user name), then double-click AppData > Roaming > Canon > MP5 to open the folder.
  - Double-click the ".wab" file.The address book will be reflected in Windows Vista automatically.

#### Note

- In Windows XP/Windows 2000, you can use or import another Windows Address Book. For details, see the help for the fax driver.

#### Related Topic

- ▶ [Edit or Remove a Recipient from an Address Book](#)
- ▶ [Search for a Recipient in an Address Book](#)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Faxing > Sending Faxes from a Computer > Edit or Remove a Recipient from an Address Book


# Edit or Remove a Recipient from an Address Book

You can change the recipients' names, fax numbers and other information, or delete recipients registered in the address book.


## Editing Recipients in an address book

You can edit the contact information registered in the address book.


1. On the Windows taskbar, click the Start button, then click Control Panel > Hardware and Sound > Printers. (For Windows XP: Click the Start button, then click Control Panel > Printers and Other Hardware > Printers and Faxes. For Windows 2000: Click the Start button, then click Settings > Printers.)
2. Right-click the printer icon for Canon MX860 series FAX, then click Printing Preferences....
3. In the Canon MX860 series FAX Printing Preferences dialog box, click Address Book....

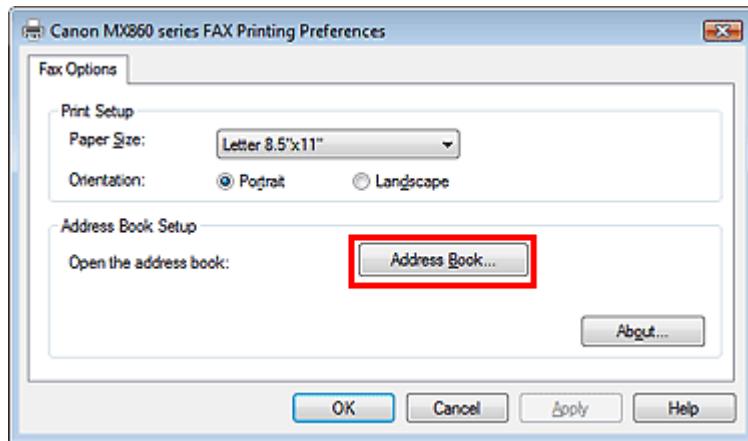

4. Select the recipient you want to edit from Contact Information in the Address Book dialog box, then click Properties.

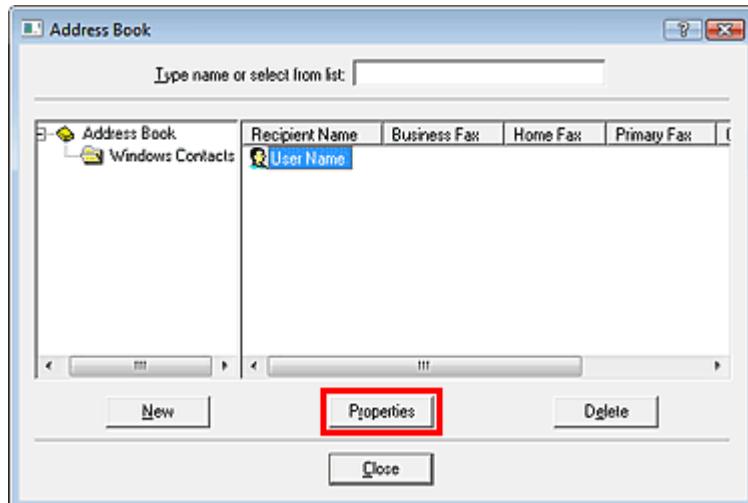


5. Change information as needed on the Properties dialog box, then click OK.

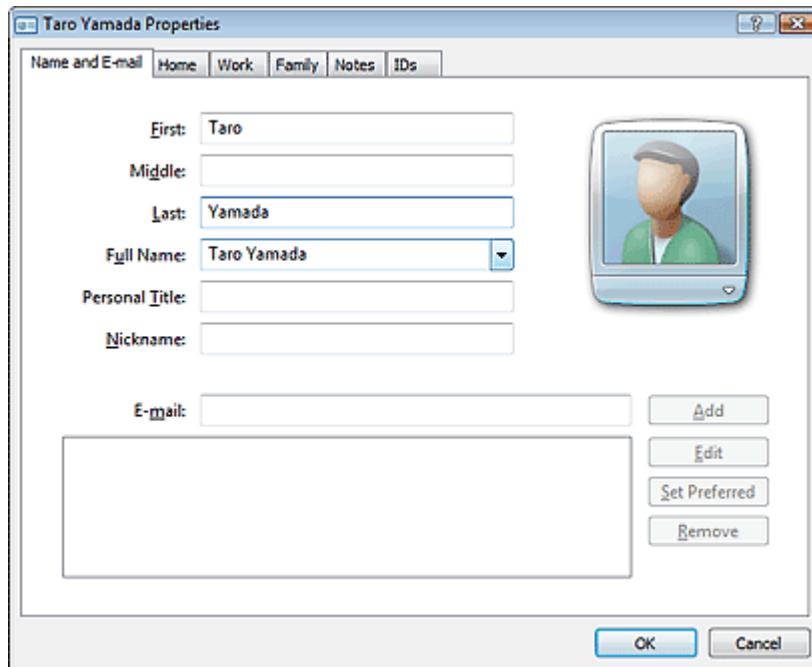


### Removing Recipients from an address book

You can delete the contacts registered in the address book.

1. On the Windows taskbar, click the Start button, then click Control Panel > Hardware and Sound > Printers. (For Windows XP: Click the Start button, then click Control Panel > Printers and Other Hardware > Printers and Faxes. For Windows 2000: Click the Start button, then click Settings > Printers.)
2. Right-click the printer icon for Canon MX860 series FAX, then click Printing Preferences....
3. In the Canon MX860 series FAX Printing Preferences dialog box, click Address Book....

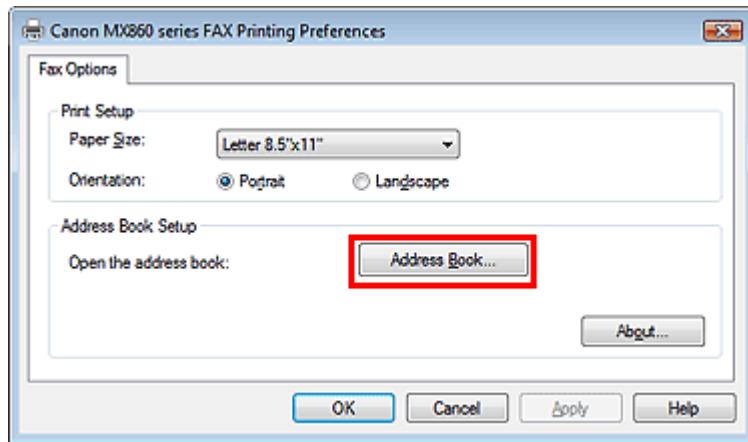

4. Select the recipient you want to delete from Contact Information in the Address Book dialog box, then click Delete.

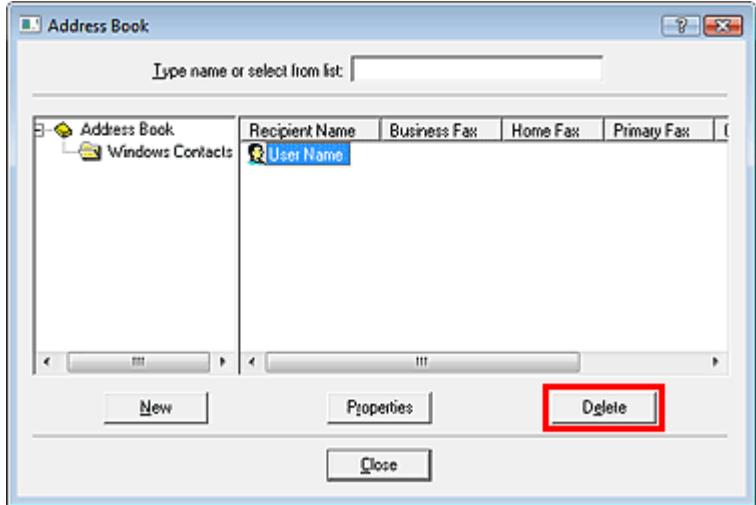

5. When a confirmation message is displayed, click Yes.

[Page top↑](#)


## Advanced Guide

Advanced Guide > Faxing > Sending Faxes from a Computer > Search for a Recipient in an Address Book

### Search for a Recipient in an Address Book


You can search for recipients registered in the address book by name.

1. Open the document you want to fax with an application (such as Word), and then click the Print command. (The command is Print... on the File menu.)
2. In Select Printer or Name in the Print dialog box, select Canon MX860 series FAX.
3. Click Print or OK.

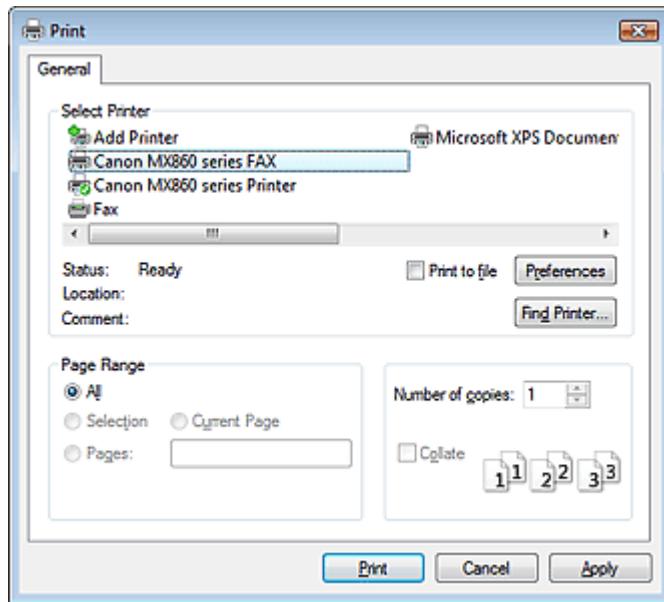


\* Print dialog box in NotePad

4. Click Display Address Book... in Recipient in the Send Fax dialog box.

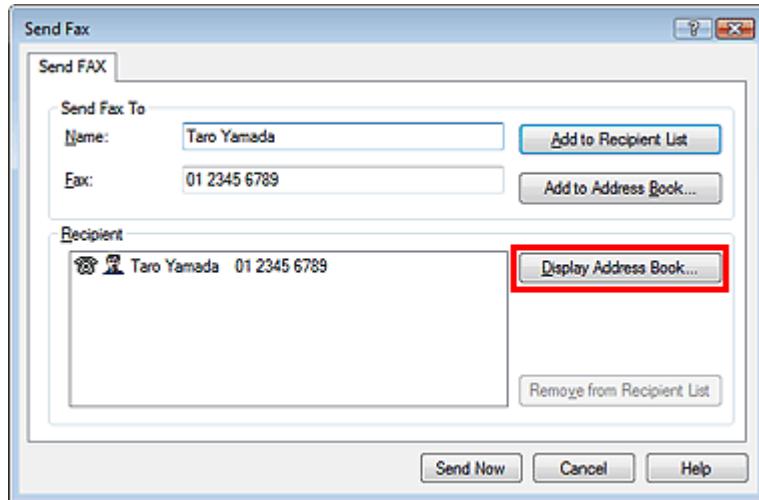

5. Enter the name of the recipient you want to search for in Search by Recipient in the Select Recipient from Address Book dialog box.

If the entered name is found, the recipient will be displayed in the contact list with its name selected.

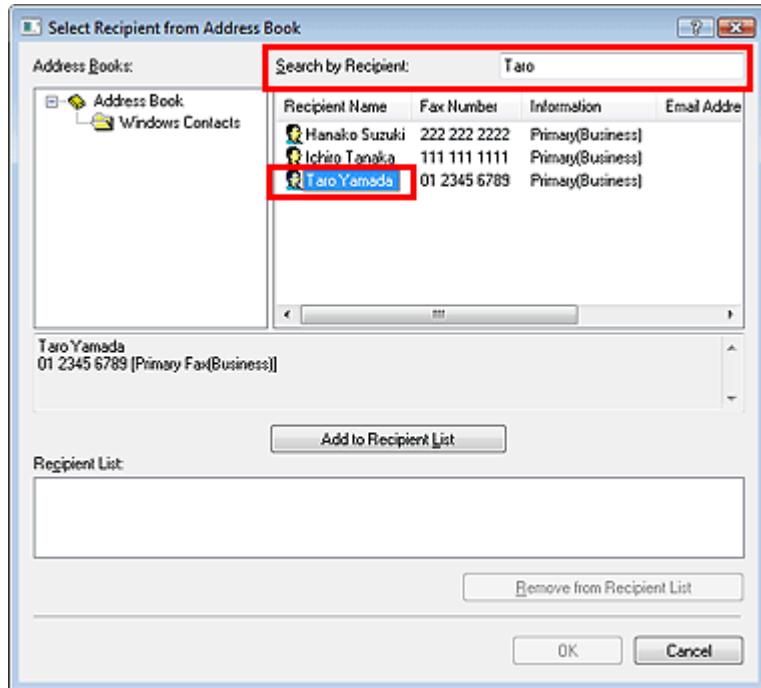

### Note

- You cannot search by criteria other than name.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Printing Photographs Directly from a Compliant Device or a Wireless Communication Device

---

# Printing Photographs Directly from a Compliant Device or a Wireless Communication Device

- ▶ [Printing Photographs Directly from a Compliant Device](#)
- ▶ [Printing Photographs from a Wireless Communication Device](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Photographs Directly from a Compliant Device or a Wireless Communication Device > Printing Photographs Directly from a Compliant Device

# Printing Photographs Directly from a Compliant Device

- ▶ [Printing Photographs Directly from a Compliant Device](#)
- ▶ [About PictBridge Print Settings](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Photographs Directly from a Compliant Device or a Wireless Communication Device > Printing Photographs Directly from a Compliant Device > Printing Photographs Directly from a Compliant Device

# Printing Photographs Directly from a Compliant Device

You can connect a PictBridge compliant device such as a digital camera, camcorder, or mobile phone using a USB cable recommended by the device's manufacturer, and print recorded images directly without using a computer.


### Note

- When printing photos with the PictBridge compliant device connected to the machine, we recommend the use of the AC adapter supplied with the device. If you are using the device battery, be sure to charge it fully.
- Depending on the model or brand of your device, you may have to select a print mode compliant with PictBridge before connecting the device. You may also have to turn on the device or select Play mode manually after connecting the device to the machine.  
Perform necessary operations on the PictBridge compliant device before connecting it to this machine according to instructions given in the device's instruction manual.

1. Make sure that the machine is turned on.
2. Load paper.
3. Make sure that the proper paper source is selected.
4. Make sure that the PictBridge compliant device is turned off.
5. Connect the PictBridge compliant device to the machine using a USB cable (A) recommended by the device's manufacturer.

The PictBridge compliant device turns on automatically.  
If your device does not turn on automatically, turn it on manually.

 will appear on the LCD of the device when the machine is correctly connected.

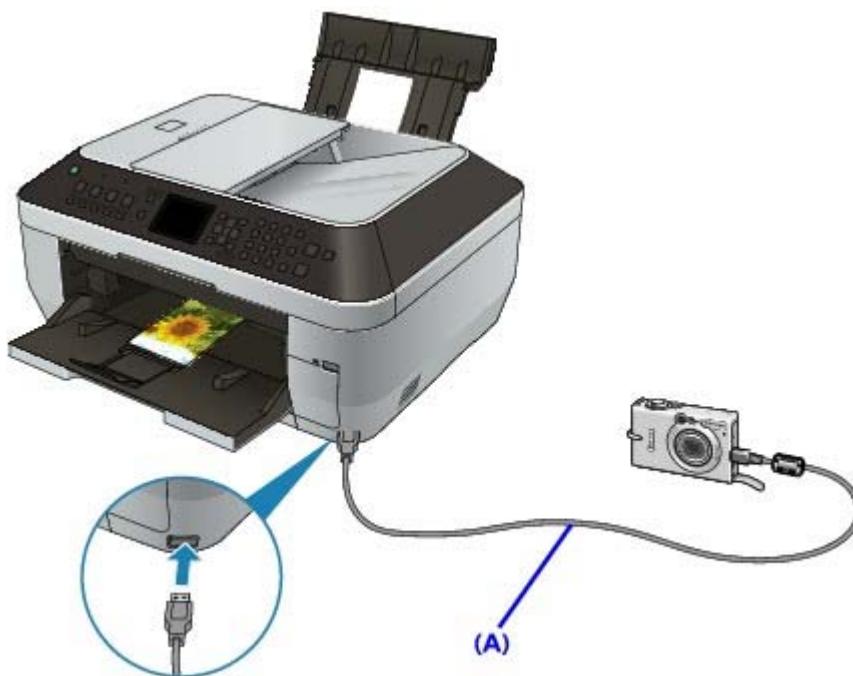

6. Specify the print settings such as the paper type and layout.

You can perform settings using the menu on the LCD of your PictBridge compliant device. Select the size and type of paper that you loaded in the machine.

 [Settings on a PictBridge Compliant Device](#)

If your PictBridge compliant device does not have a setting menu, change the setting from the

machine.

▶ [Settings on the Machine](#)

## 7. Start printing from your PictBridge compliant device.

### **Important**

- Never disconnect the USB cable during printing unless explicitly allowed to by the PictBridge compliant device. When disconnecting the USB cable between the PictBridge compliant device and machine, follow the instructions given in the device's instruction manual.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Photographs Directly from a Compliant Device or a Wireless Communication Device > Printing Photographs Directly from a Compliant Device > About PictBridge Print Settings

# About PictBridge Print Settings

- ▶ [Settings on a PictBridge Compliant Device](#)
- ▶ [Settings on the Machine](#)

## Settings on a PictBridge Compliant Device

This section describes the PictBridge function of the machine. For the print settings on a PictBridge compliant device, refer to the instructions given in the device's instruction manual.

### Note

- In the following description, names of setting items are given according to those used in Canon-brand PictBridge compliant devices. Setting item names may be different depending on the brand or model of your device.
- Some setting items explained below may not be available on some devices. In this case, the settings made on the machine are applied. Also, when some items are set to Default on a PictBridge compliant device, the machine settings for these items are applied.

- ▶ [Settings on the Machine](#)

The following settings can be used when printing from a PictBridge compliant device.

Paper size	4" x 6"/10 x 15 cm, 5" x 7" <sup>*1</sup> , 8" x 10"/ 20 x 25 cm, A4, 8.5" x 11"(Letter), 4" x 7.1"/ 10.1 x 18 cm <sup>*2</sup> <small>*1 10x15 may appear on some PictBridge compliant device.            *2 Hi Vision may appear on a non-Canon brand PictBridge compliant device.</small>
Paper type	<ul style="list-style-type: none"> <li>● Default (Selections based on the machine setting)</li> <li>● Photo: Photo Paper Plus Glossy II PP-201/Glossy Photo Paper "Everyday Use" GP-501 /Photo Paper Glossy GP-502/Photo Paper Plus Semi-gloss SG-201/Photo Stickers* * When printing on sticker paper, select 10 x 15 cm/4" x 6" in Paper size. Do not set Layout to Borderless.</li> <li>● Fast Photo: Photo Paper Pro II PR-201</li> <li>● Plain: A4/Letter When Paper type is set to Plain, borderless printing will be disabled even when Layout is set to Borderless.</li> </ul>
Layout	Default (Selections based on the machine setting), Index, Bordered, Borderless, N-up (2, 4, 9, 16) <sup>*1</sup> , 20-up <sup>*2</sup> , 35-up <sup>*3</sup> <small>*1 Layout compatible with A4- or Letter-sized paper and Canon-brand sticker above.            A4/Letter: 4-up            Photo Stickers: 2-up, 4-up, 9-up, 16-up.            *2 With a Canon brand PictBridge compliant device, selecting items with "i" mark allows you to print shooting info (Exif Data) in list format (20-up) or on the margins of the specified data (1-up). (May not be available with some Canon-brand PictBridge compliant devices.)            *3 Printed in 35 mm Film Style Layout (Contact Printing Layout). Available only with a Canon-brand PictBridge compliant device. (May not be available with some Canon-brand PictBridge compliant devices.)</small>
Print date & file no.	Default (Off: No printing), Date, File No., Both, Off
Image optimize	Default <sup>*1</sup> , On (Exif Print), Off, NR (Noise Reduction) <sup>*2</sup> , VIVID <sup>*2</sup> , Face <sup>*2</sup> , Red-Eye <sup>*2</sup> <small>*1 Photos are optimized for printing using the Photo optimizer pro function.            *2 Can be selected only on certain Canon-brand PictBridge compliant devices. (May not be selected depending on the device.)</small>
Trimming	Default (Off: No trimming), On (follow the camera's setting), Off

## Settings on the Machine

You can change the PictBridge print settings from the PictBridge settings screen. Set the print settings to Default on the PictBridge compliant device when you want to print according to the settings on the machine.

This section describes the procedure to display the PictBridge settings screen. For setting items, see [PictBridge settings](#).

**1. Make sure that the machine is turned on.**

**2. Press the Menu button.**



**3. Use the < > button to select  Device settings, then press the OK button.**

**5. Use the ▲ ▼ button to select PictBridge settings, then press the OK button.**

The PictBridge settings screen is displayed.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Photographs Directly from a Compliant Device or a Wireless Communication Device > Printing Photographs from a Wireless Communication Device

# Printing Photographs from a Wireless Communication Device

- ▶ Setting the Page Size, Media Type, and Layout When Printing from a Mobile Phone
- ▶ Printing via Bluetooth Communication

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Photographs Directly from a Compliant Device or a Wireless Communication Device > Printing Photographs from a Wireless Communication Device > Setting the Page Size, Media Type, and Layout When Printing from a Mobile Phone

# Setting the Page Size, Media Type, and Layout When Printing from a Mobile Phone

When printing from a mobile phone through Bluetooth communication, select the page size, media type, layout, and etc. on the Mobilephone print setting screen. For details on how to print from a computer through Bluetooth communication, refer to [About Bluetooth Communication](#).

\* The default is borderless printing on 4" x 6" Photo Paper Plus Glossy II.


## Displaying the Mobilephone print setting screen

This section describes how to display the Mobilephone print setting screen. For setting items, see [Mobilephone print setting](#).

### 1. Make sure that the machine is turned on.

### 2. Attach the optional Bluetooth Unit BU-30.

Insert the Bluetooth Unit BU-30 to the Direct Print Port.

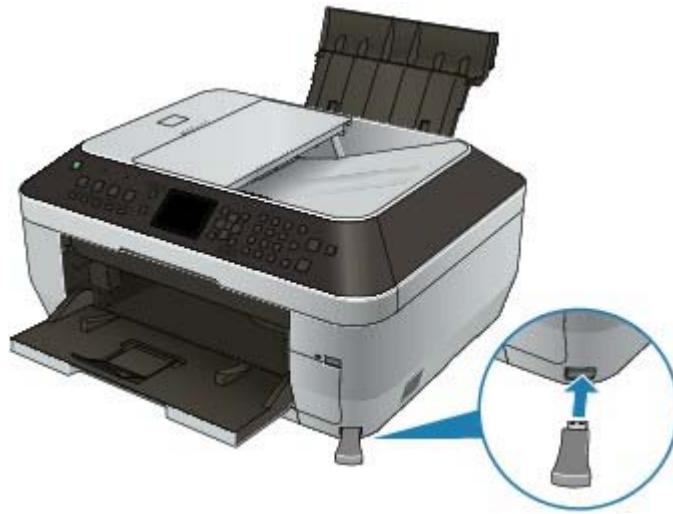

### 3. Press the Menu button.



### 4. Use the ▶▶ button to select Settings, then press the OK button.



### 5. Use the ▶▶ button to select Device settings, then press the OK button.

### 6. Use the ▲▼ button to select Mobilephone print setting, then press the OK button.

The Mobilephone print setting screen is displayed. For the setting items, see [Mobilephone print setting](#).

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Photographs Directly from a Compliant Device or a Wireless Communication Device > Printing Photographs from a Wireless Communication Device > Printing via Bluetooth Communication

# Printing via Bluetooth Communication

This section describes the procedure to print photos through Bluetooth communication from a mobile phone with the optional Bluetooth Unit BU-30.

When printing from a mobile phone through Bluetooth communication, refer also to your product's instruction manual.

For the procedure to print through Bluetooth communication from the computer, refer to [About Bluetooth Communication](#).

### Note

- Mobile phones supporting OPP (Object Push Profile) or BIP (Basic Imaging Profile) can be used to print photos.  
Depending on your mobile phone, you may not perform printing even if your mobile phone supports the profiles above. For information on the profiles your mobile phone supports, refer to your product's instruction manual.

## Printing through Bluetooth Communication

**1. Make sure that the machine is turned on.**

**2. Load paper.**

**3. Attach the optional Bluetooth Unit BU-30.**

Insert the Bluetooth Unit BU-30 to the Direct Print Port.



**4. Set the page size and layout.**

➔ [Setting the Page Size, Media Type, and Layout When Printing from a Mobile Phone](#)

**5. Start printing from a mobile phone.**

- **For the device name, select the default value Canon XXX-1 (where "XXX" is your machine's name).**
- **If you are required to input a passkey, input the default value "0000".**

You can change the device name of the machine, passkey, and so on from the Bluetooth settings screen.

➔ [Changing the Bluetooth Settings](#)

### Note

- Communication is possible in a range of up to about 33 ft. / 10 m depending on the conditions below. Printing speed may vary depending on the following conditions:
  - Presence of obstacles between the communication equipment, and radio conditions.
  - Presence of magnetic fields, static electricity, or electromagnetic interference.
  - Receiver sensitivity and antenna performance of the communication equipment.
- Video files cannot be printed.
- Depending on your device, data saved on a memory card may not be printed.
- **About transmittable data**
  - Due to security settings on the mobile phone, downloaded content or photos downloaded from a URL attached to an E-mail cannot be printed.
  - Depending on the size of a photo, it may take a while for this machine to start printing after starting wireless communication.
  - Printed quality and orientation (portrait or landscape) is determined automatically according to the shot photo size.
  - Depending on the photo size shot on the mobile phone, the edges of the image may be cut off when performing borderless printing; the margin size may change when printing with borders.
  - If the photo file is over 1.8 MB in size, it may not be possible to send the file.

---

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Printing Photographs Directly from a Compliant Device or a Wireless Communication Device > Printing Photographs from a Wireless Communication Device > Printing via Bluetooth Communication > Changing the Bluetooth Settings

# Changing the Bluetooth Settings

As preparation for printing through Bluetooth communication, you can change the settings such as the device name and passkey from the Bluetooth settings screen.

This section describes how to display the Bluetooth settings screen. For each setting item, see [Bluetooth settings](#).

1. Make sure that the machine is turned on.

2. Attach the optional Bluetooth Unit BU-30.

Insert the Bluetooth Unit BU-30 to the Direct Print Port.



3. Press the **Menu** button.

4. Use the **◀▶** button to select Settings, then press the **OK** button.

5. Use the **◀▶** button to select Device settings, then press the **OK** button.

6. Use the **▲▼** button to select Bluetooth settings, then press the **OK** button.

The Bluetooth settings screen is displayed.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Maintenance

---

# Maintenance

- ▶ [Cleaning Your Machine](#)
- ▶ [Performing Maintenance from a Computer](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Maintenance > Cleaning Your Machine

---

# Cleaning Your Machine

- ▶ Cleaning
- ▶ Cleaning the Exterior of the Machine
- ▶ Cleaning the Platen Glass and Document Cover
- ▶ Cleaning the ADF
- ▶ Cleaning the Inside of the Machine (Bottom Plate Cleaning)
- ▶ Cleaning the Protrusions Inside the Machine

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Maintenance > Cleaning Your Machine > Cleaning

# Cleaning

This section describes the cleaning procedure that is needed to maintain your machine.

## Important

- Do not use tissue paper, paper towels, rough-textured cloth, or similar materials for cleaning so as not to scratch the surface. Paper tissue powder or fine threads may remain inside the machine and cause problems such as print head blockage and poor printing results. Be sure to use a soft cloth.
- Never use volatile liquids such as thinners, benzene, acetone, or any other chemical cleaner to clean the machine, as this may cause a malfunction or damage the machine's surface.

- ▶ [Cleaning the Exterior of the Machine](#)
- ▶ [Cleaning the Platen Glass and Document Cover](#)
- ▶ [Cleaning the ADF](#)
- ▶ [Cleaning the Inside of the Machine \(Bottom Plate Cleaning\)](#)
- ▶ [Cleaning the Protrusions Inside the Machine](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Maintenance > Cleaning Your Machine > Cleaning the Exterior of the Machine

### Cleaning the Exterior of the Machine

Be sure to use a soft cloth such as eyeglasses cleaning cloth and wipe off dirt on the surface gently.  
Smooth out wrinkles on the cloth if necessary before cleaning.

#### Important

- Be sure to turn off the power and disconnect the power plug before cleaning the machine.
- The power cannot be turned off while the machine is sending or receiving a fax, or when there are unsent faxes stored in the machine's memory.
- The machine cannot receive faxes when the power is turned off.
- If you disconnect the power cord, all the documents stored in memory are deleted. Send or print necessary documents before disconnecting the power cord.
- Do not use tissue paper, paper towels, rough-textured cloth, or similar materials, as this may scratch the surface.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Maintenance > Cleaning Your Machine > Cleaning the Platen Glass and Document Cover

# Cleaning the Platen Glass and Document Cover

### Important

- Be sure to turn off the power and disconnect the power plug before cleaning the machine.
- The power cannot be turned off while the machine is sending or receiving a fax, or when there are unsent faxes stored in the machine's memory.
- The machine cannot receive faxes when the power is turned off.
- If you disconnect the power cord, all the documents stored in memory are deleted. Send or print necessary documents before disconnecting the power cord.

With a clean, soft, lint-free cloth, wipe the Platen Glass (A), the inner side of the Document Cover (white sheet) (B), the glass of the ADF (C), and the inner side of the ADF (white area) (D) gently. Be sure not to leave any residue, especially on the Platen Glass.



### Important

- The inner side of the Document Cover (white sheet) (B) is easily damaged, so wipe it gently.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Maintenance > Cleaning Your Machine > Cleaning the ADF

### Cleaning the ADF

#### Important

- Be sure to turn off the power and disconnect the power plug before cleaning the machine.
- The power cannot be turned off while the machine is sending or receiving a fax, or when there are unsent faxes stored in the machine's memory.
- The machine cannot receive faxes when the power is turned off.
- If you disconnect the power cord, all the documents stored in memory are deleted. Send or print necessary documents before disconnecting the power cord.


#### 1. Open the Document Tray.



#### 2. Open the Document Feeder Cover.



#### 3. With a soft, clean, lint-free and dry cloth, wipe off any paper dust from the inside of the Document Feeder Cover (A).

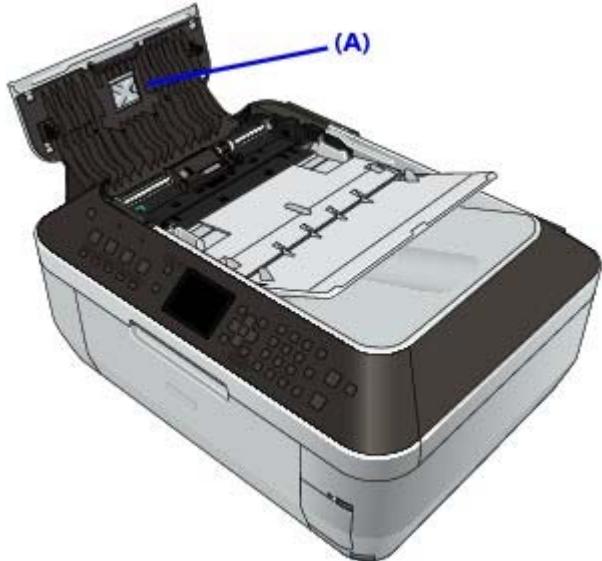

4. After wiping, close the Document Feeder Cover by pushing it until it clicks into place.
5. Close the Document Tray.

[Page top ↑](#)


## Advanced Guide

Advanced Guide > Maintenance > Cleaning Your Machine > Cleaning the Inside of the Machine (Bottom Plate Cleaning)

# Cleaning the Inside of the Machine (Bottom Plate Cleaning)

This section explains how to clean the inside of the machine. If the inside of the machine becomes dirty, printed paper may get dirty, so we recommend performing cleaning regularly.

1. Make sure that the machine is turned on.
2. Remove any paper from the Rear Tray.
3. Fold a single sheet of A4 or Letter-sized plain paper in half widthwise, then unfold the paper.
4. Load this and only this sheet of paper on the Rear Tray with the open side facing to the front.

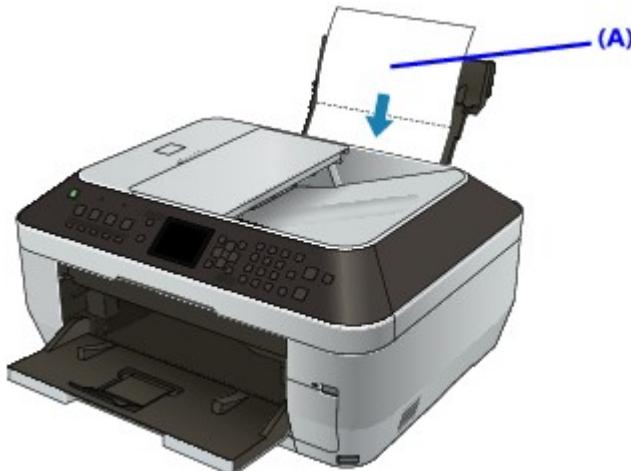

(A) Load the paper after unfolding it.

5. Press the **Menu** button.



6. Use the **◀▶** button to select  **Settings**, then press the **OK** button.

The Settings screen is displayed.



7. Use the **◀▶** button to select  **Maintenance**, then press the **OK** button.

The Maintenance screen is displayed.

8. Use the **▲▼** button to select **Bottom plate cleaning**, then press the **OK** button.

The confirmation screen is displayed.

9. Use the **▲▼** button to select **Yes**, then press the **OK** button.

The paper cleans the inside of the machine as it feeds through the machine.

Check the folded part of the ejected paper. If it is smudged with ink, perform Bottom Plate Cleaning again.

If the problem is not resolved after performing cleaning again, the protrusions inside the machine may be stained. Clean them according to instructions.

▶ [Cleaning the Protrusions Inside the Machine](#)

## Note

- When performing Bottom Plate Cleaning again, be sure to use a new sheet of paper.

[Page top ↑](#)

## Advanced Guide


Advanced Guide > Maintenance > Cleaning Your Machine > Cleaning the Protrusions Inside the Machine

### Cleaning the Protrusions Inside the Machine

If protrusions inside the machine are stained, wipe off any ink from the protrusions using a cotton swab or the like.

#### Important

- Be sure to turn off the power and disconnect the power plug before cleaning the machine.
- The power cannot be turned off while the machine is sending or receiving a fax, or when there are unsent faxes stored in the machine's memory.
- The machine cannot receive faxes when the power is turned off.
- If you disconnect the power cord, all the documents stored in memory are deleted. Send or print necessary documents before disconnecting the power cord.

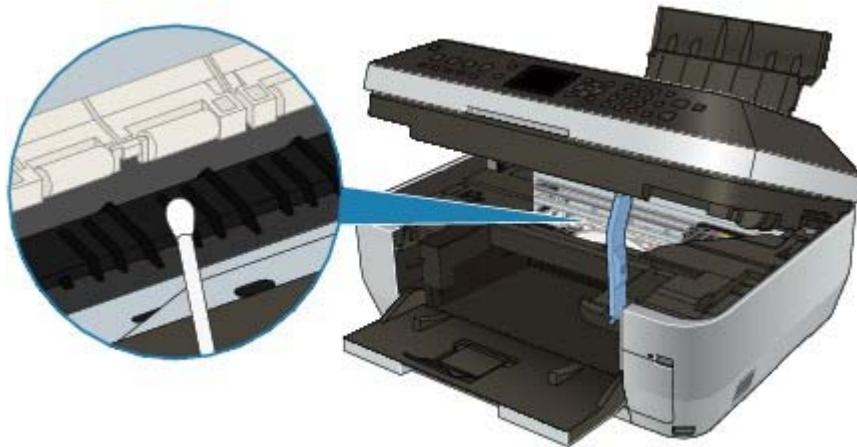

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Maintenance > Performing Maintenance from a Computer

---

# Performing Maintenance from a Computer

- ▶ Cleaning the Print Heads
- ▶ Cleaning the Paper Feed Rollers
- ▶ Aligning the Print Head Position
- ▶ Checking the Print Head Nozzles
- ▶ Cleaning Inside the Machine

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Maintenance > Performing Maintenance from a Computer > Cleaning the Print Heads

# Cleaning the Print Heads

The print head cleaning function allows you to remove any blockages in the print head nozzles. Perform print head cleaning if printing is faint or a specific color fails to print, even though there is enough ink.

The procedure for cleaning the print heads is as follows:



## Cleaning

### 1. Open the printer driver setup window

### 2. Click Cleaning on the Maintenance tab

The Print Head Cleaning dialog box opens. Follow the instruction shown in the dialog box. Click Initial Check Items to display the items you need to check before performing Cleaning.

### 3. Execute cleaning

Make sure that the machine is on and then click Execute.

Print head cleaning starts.

### 4. Complete cleaning

The Nozzle Check dialog box opens after the confirmation message.

### 5. Check the results

To check whether the print quality has improved, click Print Check Pattern. To cancel the check process, click Cancel.

If cleaning the head once does not resolve the print head problem, clean it once more.



## Deep Cleaning

Deep Cleaning is more thorough than Cleaning. Perform deep cleaning when two cleaning attempts do not resolve the print head problem.

### 1. Open the printer driver setup window

### 2. Click Deep Cleaning on the Maintenance tab

The Deep Cleaning dialog box opens. Follow the instruction shown in the dialog box.

Click Initial Check Items to display the items you need to check before performing Deep Cleaning.

### 3. Execute deep cleaning

Make sure that the machine is on and then click Execute.

Click OK when the confirmation message appears.

Print head deep cleaning starts.

### 4. Complete deep cleaning

The Nozzle Check dialog box opens after the confirmation message.

### 5. Check the results

To check whether the print quality has improved, click Print Check Pattern. To cancel the check

process, click Cancel.

### **Important**

- Cleaning consumes a small amount of ink. Deep Cleaning consumes a larger amount of ink than Cleaning.  
Cleaning the print heads frequently will rapidly deplete your printer's ink supply. Consequently, perform cleaning only when necessary.

### **Note**

- If there is no sign of improvement after Deep Cleaning, switch off the machine, wait 24 hours, and then perform Deep Cleaning again. If there is still no sign of improvement, the ink may have run out or the print head may be worn. For details on the remedial action to be taken, see " [Machine Moves But Ink Is Not Ejected](#)."

### **Related Topic**

- ▶ [Checking the Print Head Nozzles](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Maintenance > Performing Maintenance from a Computer > Cleaning the Paper Feed Rollers

# Cleaning the Paper Feed Rollers

The feed roller cleaning function allows you to clean the paper feed roller. Perform feed roller cleaning when there are paper particles sticking to the paper feed roller and paper is not fed properly.

The procedure for cleaning the feed rollers is as follows:



### Roller Cleaning

#### 1. Prepare the machine

Remove all sheets of paper from the paper source from which paper could not be properly fed.

#### 2. Open the printer driver setup window

#### 3. Click Roller Cleaning on the Maintenance tab

The Roller Cleaning dialog box opens.

#### 4. Select Rear Tray or Cassette, and click OK

The confirmation message appears.

#### 5. Execute paper feed roller cleaning

Make sure that the machine is on and click OK.

Paper feed roller cleaning starts.

#### 6. Complete paper feed roller cleaning

After the rollers have stopped, follow the instruction in the message, load three sheets of plain paper into the selected paper source of the machine, and click OK.

Paper will be ejected and feed roller cleaning will be completed.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Maintenance > Performing Maintenance from a Computer > Aligning the Print Head Position

# Aligning the Print Head Position

Print head alignment corrects the installation positions of the print head and improves deviated colors and lines.

The procedure for performing print head alignment is as follows:



## Print Head Alignment

1. Open the printer driver setup window
2. Click Print Head Alignment on the Maintenance tab

The Start Print Head Alignment dialog box opens.

3. Load paper in the machine

Load three sheets of A4 size or Letter size plain paper into the cassette.

4. Execute head alignment

Make sure that the machine is on and click Align Print Head.

Follow the instruction in the message.



### Note

- To check the current setting before you adjust the print head position, click Print Alignment Value.

5. Check the printed pattern

Enter the numbers of the patterns with the least amount of streaks in the associated boxes.

Clicking the patterns with the least amount of streaks in the preview window, will automatically set their numbers in the associated boxes.

When you have entered all the necessary values, click OK.



### Note

- If you look at the print results and still cannot determine which pattern is the one with the least amount of streaks, see your machine manual.

6. Check the adjustment pattern that is printed next

Follow the instruction in the message.

[Page top ↑](#)


## Advanced Guide

Advanced Guide > Maintenance > Performing Maintenance from a Computer > Checking the Print Head Nozzles

# Checking the Print Head Nozzles

The nozzle check function allows you to check whether the print heads are working properly by printing a nozzle check pattern. Print the pattern if printing becomes faint, or if a specific color fails to print.

The procedure for printing a nozzle check pattern is as follows:

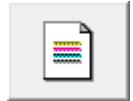

### Nozzle Check

1. Open the printer driver setup window
2. Click Nozzle Check on the Maintenance tab

The Nozzle Check dialog box opens.

To display a list of items that you should check before printing the check pattern, click Initial Check Items.

3. Load paper in the machine

Load a sheet of A4 size or Letter size plain paper into the cassette.

4. Print a nozzle check pattern

Make sure that the machine is on and click Print Check Pattern.

The nozzle check pattern is printed.

Click OK when the confirmation message appears.

The Pattern Check dialog box opens.

5. Check the print result

Check the print result. If the print result is normal, click Exit.

If the print result is smudged or if there are any unprinted sections, click Cleaning to clean the print head.

## Related Topic

▶ [Cleaning the Print Heads](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Maintenance > Performing Maintenance from a Computer > Cleaning Inside the Machine

# Cleaning Inside the Machine

The bottom plate cleaning function allows you to prevent smudges on the back side of the paper.

Perform bottom plate cleaning before you execute duplex printing.

Also perform bottom plate cleaning if ink smudges caused by something other than print data appear on the printed page.

For details on how to load paper into the machine, see " [Cleaning the Inside of the Machine \(Bottom Plate Cleaning\)](#)."

The procedure for performing bottom plate cleaning is as follows:



### Bottom Plate Cleaning

1. Open the [printer driver setup window](#)
2. Click Bottom Plate Cleaning on the Maintenance tab

The Bottom Plate Cleaning dialog box opens.

3. Load paper in the machine

As instructed in the dialog box, fold the A4 size or Letter size plain paper in half horizontally, and then unfold the sheet.

Load the paper into the rear tray in the portrait orientation with the crest of the crease facing down.

4. Perform the bottom plate cleaning

Make sure that the machine is on and click Execute.

Bottom plate cleaning starts.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication

---

# About Bluetooth Communication

- ▶ Handling Precautions
- ▶ Preparation to Use the Bluetooth Unit
- ▶ Printing Data via Bluetooth Communication
- ▶ Basic Procedure for Printing via Bluetooth Communication
- ▶ Bluetooth Settings
- ▶ Troubleshooting
- ▶ Specifications

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Handling Precautions

---

# Handling Precautions

▶ Shipping the Product

Page top ↑

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Handling Precautions > Shipping the Product

---

### Shipping the Product

This product may not be used in countries or regions other than the country or region where it was purchased due to local laws and regulations. Please note that the use of this product in such countries or regions may lead to penalties and that Canon should not be liable for such punishment.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Preparation to Use the Bluetooth Unit

---

# Preparation to Use the Bluetooth Unit

- ▶ Bluetooth Unit
- ▶ Attaching to and Removing from the Printer

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Preparation to Use the Bluetooth Unit > Bluetooth Unit

### Bluetooth Unit

The Bluetooth Unit BU-30 (hereafter referred to as the Bluetooth unit) is an adaptor which can be used with a Canon IJ printer with Bluetooth interface.

By attaching the Bluetooth unit to a Canon IJ printer with Bluetooth interface, wireless printing from a Bluetooth enabled device, such as a computer or mobile phone, is possible.

#### Note

- Communication is possible in a range of up to about 33 ft. / 10 m depending on the conditions below. Printing speed may vary depending on the following conditions:
  - Presence of obstacles between the communication equipment and radio wave conditions.
  - Presence of magnetic fields, static electricity or electromagnetic interference.
  - Software and operating system to be used.
  - Receiver sensitivity and antenna performance of the communication equipment.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Preparation to Use the Bluetooth Unit > Attaching to and Removing from the Printer


# Attaching to and Removing from the Printer

- ▶ Attaching the Bluetooth Unit to the Printer
- ▶ Removing the Bluetooth Unit from the Printer

## Attaching the Bluetooth Unit to the Printer

Attach the Bluetooth unit to the Direct Print Port (A) of the printer in accordance with the following procedure.

The external appearance may differ depending on the printer you are using.

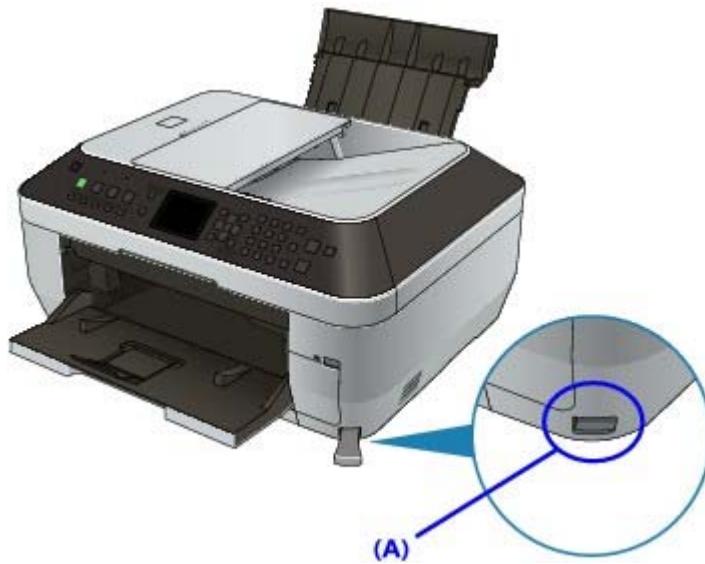


### 1. Make sure that the printer is turned on.

Make sure that any lamp on the Operation Panel is lit.

### 2. Insert the Bluetooth unit to the Direct Print Port of the printer.

Detach the cap from the Bluetooth unit. Store the cap in a safe location.

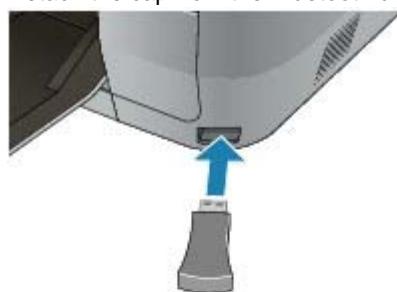

### Note

- When the Bluetooth unit is properly attached to the printer with the **Power** lamp, the

**Power** lamp on the printer flashes twice. When the Bluetooth unit is properly attached to the printer without the **Power** lamp, the **COPY** button on the printer flashes twice.


## Removing the Bluetooth Unit from the Printer

Remove the Bluetooth unit from the Direct Print Port of the printer in accordance with the following procedure.

### 1. Remove the Bluetooth unit from the Direct Print Port of the printer.

#### Important

- Make sure that the lamp on the Bluetooth unit is neither lit nor flashing before you remove the Bluetooth unit.

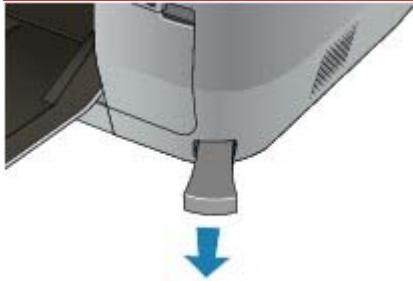

#### Important

- Store the Bluetooth unit with the cap attached.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Printing Data via Bluetooth Communication

---

# Printing Data via Bluetooth Communication

- ▶ Preparation
- ▶ Installing the MP Drivers
- ▶ Setting the Printer
- ▶ Registering the Printer
- ▶ Deleting the Printer

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Printing Data via Bluetooth Communication > Preparation

# Preparation

In order to print via Bluetooth communication with Windows, the following system requirements must be satisfied.

## • Computer

A computer in which an internal Bluetooth module is installed or a computer to which an optional Bluetooth adapter (available from various manufacturers) is attached.

## • OS

Microsoft Windows Vista (Satisfying any one of the following conditions is needed)

- **Bluetooth Devices is displayed in Hardware and Sound under Control Panel**

- **Bluetooth Stack for Windows by Toshiba Version 5.10.04 or later is installed**

Microsoft Windows XP (Satisfying any one of the following conditions is needed)

- **Windows XP SP2 or later is installed, and Bluetooth Devices is displayed in Printers and Other Hardware under Control Panel**

- **Bluetooth Stack for Windows by Toshiba Version 3.00.10 or later is installed**

For more information about how to confirm the version of Bluetooth Stack for Windows by Toshiba, see [Check 2: Is unsupported Bluetooth driver used?](#).

In order to connect the Bluetooth unit and print via Bluetooth communication, the following steps are required.

1. Check that the Bluetooth unit is properly attached to the printer.

See [Attaching to and Removing from the Printer](#).

2. Install the MP Drivers.

See [Installing the MP Drivers](#).

3. Check the device name of the printer using the LCD.

See [Setting the Printer](#).

4. Register the printer as a Bluetooth device using Bluetooth Devices.

- When using Windows Vista, and when Bluetooth Devices is displayed in Hardware and Sound under Control Panel

Authenticate the printer as a Bluetooth device on Bluetooth Devices in Hardware and Sound under Control Panel.

See [Registering the Printer](#).

- When using Windows XP SP2 or later, and when Bluetooth Devices is displayed in Printers and Other Hardware under Control Panel

Authenticate the printer as a Bluetooth device on Bluetooth Devices in Printers and Other Hardware under Control Panel.

See [Registering the Printer](#).

- When using a Toshiba Windows Vista or Windows XP computer

Authenticate the printer as a Bluetooth device using [Bluetooth Settings\\*](#).

\* When the computer which has Bluetooth Stack for Windows by Toshiba or the program attached to the Bluetooth adapter of the option manufactured by Toshiba is used, the computer can register a printer easily.

Bluetooth Settings can be started by clicking Start and selecting All Programs, TOSHIBA, Bluetooth, and Bluetooth Settings.

For details on Bluetooth Settings, refer to the software application's instruction manual.

The operations may vary depending on your operating program. In this case, refer to your computer's operation manual.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Printing Data via Bluetooth Communication > Installing the MP Drivers

# Installing the MP Drivers

### Note

- If you use the printer connecting with a computer, the MP Drivers have already been installed. In this case, move to the next step.

▶ [Setting the Printer](#)

Before connecting the Bluetooth unit to the printer for wireless printing, first the USB cable must be connected between the printer and computer, and the MP Drivers must be installed using the *Setup CD-ROM*.

Install the MP Drivers according to your setup manual.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Printing Data via Bluetooth Communication > Setting the Printer

### Setting the Printer

This section describes the procedures for checking the settings of the Bluetooth unit on the LCD of the printer in preparation for Bluetooth printing.

Canon IJ printers with the Bluetooth interface are divided into two types. One is equipped with a graphic LCD, and the other with a text LCD.

If you need more information about the Bluetooth settings, see [Setting Bluetooth Printing](#).


#### 1. Make sure that the Bluetooth unit is attached and the printer is turned on.

For information about how to attach the Bluetooth unit, see [Attaching to and Removing from the Printer](#).


#### 2. Display the Bluetooth settings screen on the LCD.

For information about how to display the Bluetooth settings screen, refer to [Changing the Machine Settings on the LCD](#).

##### Graphic LCD

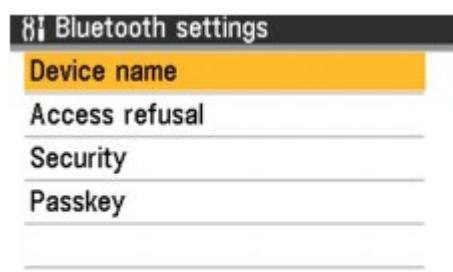

##### Text LCD

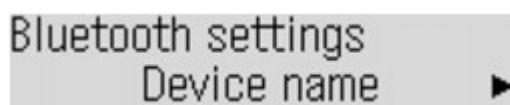


##### Note

- If the Bluetooth settings screen is not displayed on the LCD, the Bluetooth unit may not be attached correctly. Remove the Bluetooth unit from the printer and attach it once again.
- For details, see [Attaching to and Removing from the Printer](#).
- If the Bluetooth settings screen still is not displayed, the Bluetooth unit may be faulty. In this case, contact the service center.


#### 3. Select Device name.

The Device name screen is displayed.

##### Graphic LCD

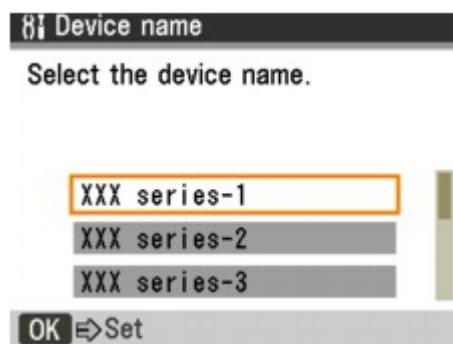

##### Text LCD

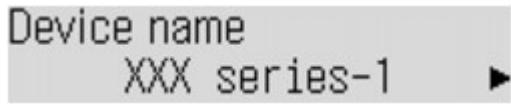

#### 4. Check the device name.

The device name is necessary to register the printer as a Bluetooth device. Be sure to note the device name.

##### Note

- If multiple printer units with the same model name are connected to the system, assigning a different device name to each printer is recommended for easy identification of the printer you will use. See [Bluetooth Settings Screen](#).

After checking the device name, press the **OK** button on the printer.

After checking the Bluetooth settings using the LCD, register the printer on your computer.

▶ [Registering the Printer](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Printing Data via Bluetooth Communication > Registering the Printer

# Registering the Printer

Register the printer as a Bluetooth device using Bluetooth Devices under Control Panel.

### Note


- The following procedure is described assuming that Windows Vista has been installed in your computer.
- Before registering the printer on Bluetooth Devices under Control Panel, enable the Bluetooth function of your computer.  
For more information, refer to your computer's operation manual.
- If you want to re-register the printer as a Bluetooth device, first delete the registered printer, and then re-register it.  
See [Deleting the Printer](#).

**1.** Log into a user account with the administrator privilege.

**2.** Click Control Panel, then Bluetooth Devices under Hardware and Sound.

In non-Vista Windows, click Control Panel, Printers and Other Hardware, then Bluetooth Devices.

**3.** Click Add on the Devices sheet.

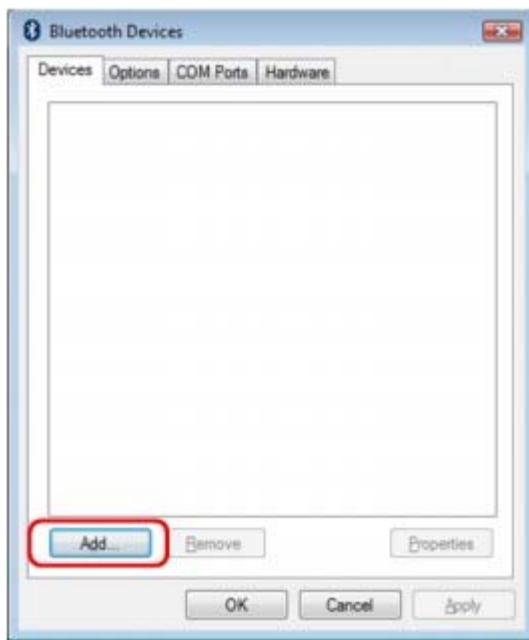


Add Bluetooth Device Wizard will start.

**4.** Make sure that the printer is turned on, check the My device is set up and ready to be found check box and then click Next.



**5.** Select the device name of the printer and click Next.

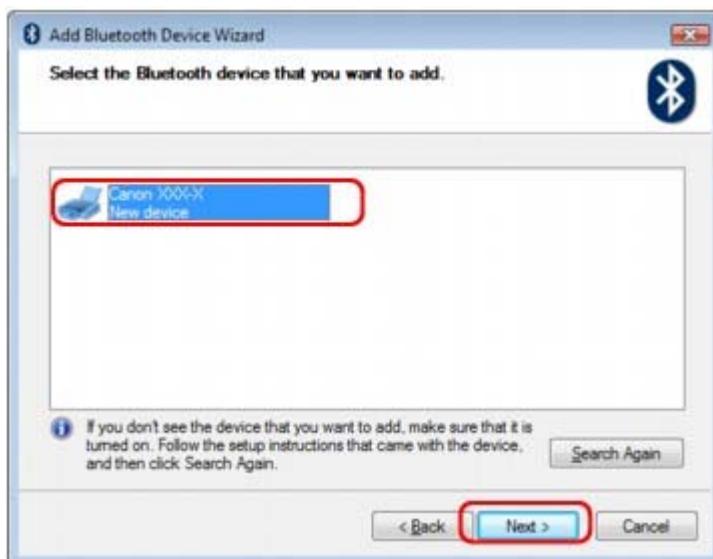


Select the same device name as that checked under [Setting the Printer](#).

#### Note


- If the device name is not displayed, see [Check 3: Is the printer name which you want to register displayed in Printer List?](#).

**6.** Select Don't use a passkey, and then Next.

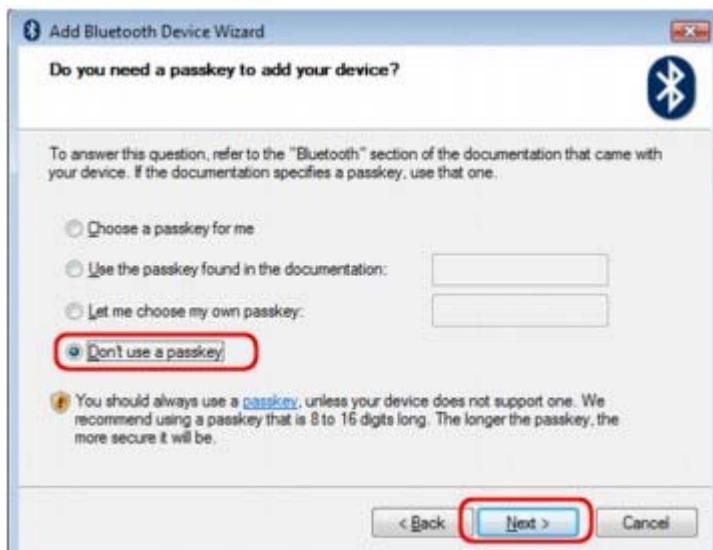

 **Note**

- If you set a passkey on the printer, select Use the passkey found in the documentation and input the passkey then click Next.  
For more information about a passkey, see [Bluetooth Settings Screen](#).

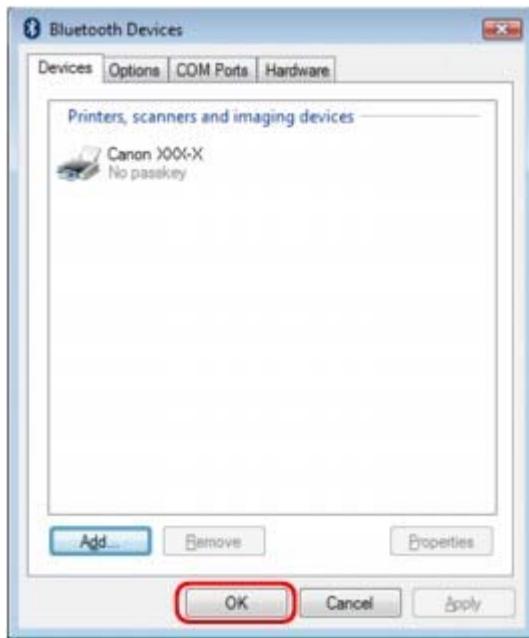**7. Click Finish.****8. Check that the device name selected at step 5 is registered on the Devices sheet, and click OK.**

Now, the settings for printing via Bluetooth communication are ready.

 **Note**

- In Windows Vista, the Windows needs to install driver software for your Bluetooth Peripheral Device screen may be displayed automatically. In this case, click Don't show this message again for this device.

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Printing Data via Bluetooth Communication > Deleting the Printer

### Deleting the Printer

This section describes the procedure to delete the registered printer.

If you want to re-register the printer as a Bluetooth device, first follow the procedure below to delete the printer, and then re-register it.

For the procedure to re-register the printer, see [Registering the Printer](#).

1. Log into a user account with the administrator privilege.

2. Click Control Panel, then Printers under Hardware and Sound.

When using non-Vista Windows, click Control Panel, then Printers and Faxes under Printers and Other Hardware.

3. Click the icon of the printer used for printing via Bluetooth communication.

4. Select Delete from the Organize menu.

When using non-Vista Windows, select Delete from the File menu.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Basic Procedure for Printing via Bluetooth Communication

# Basic Procedure for Printing via Bluetooth Communication

- ▶ [Printing with Computers](#)
- ▶ [Printing with Bluetooth Compliant Devices other than a Computer](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Basic Procedure for Printing via Bluetooth Communication > Printing with Computers

# Printing with Computers


When using Bluetooth communication, also refer to the computer's instruction manual.

When printing from a Bluetooth compliant device other than a computer, see [Printing with Bluetooth Compliant Devices other than a Computer](#).

### Note

- Depending on your application program, operations may differ. For details, refer to the instruction manual of your software application.  
The steps described in this section are for printing in Windows Vista.
- Bluetooth communication distance: Approx. 33 ft./10 m in normal environment.  
The distance may vary depending on the radio conditions or the communication equipment.


1. Turn on the printer and load paper.
2. Create a document or open a file to print using an appropriate application software.
3. Open the printer properties dialog box.
  1. Select Print on the application software's File menu.  
The Print dialog box opens.
  2. Select the printer to which you attached the Bluetooth unit such as Canon XXX Printer (Copy X) from Select Printer.
  3. Click Preferences (or Properties).  
The Quick Setup sheet of the Printing Preferences dialog box is displayed.

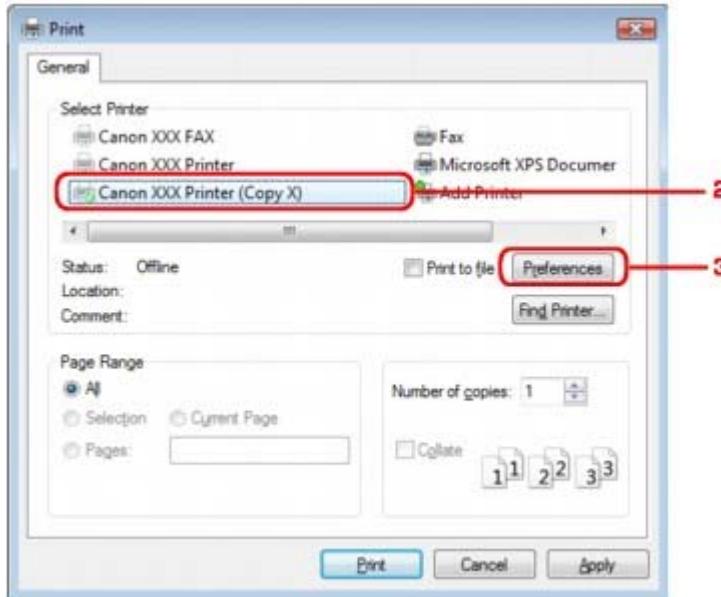

### Note

- The printer registered on Bluetooth Devices is displayed as Canon XXX Printer (Copy X).
- "X" is a device name or a digit. The number of digits may differ depending on the printer.

4. Specify the required settings.

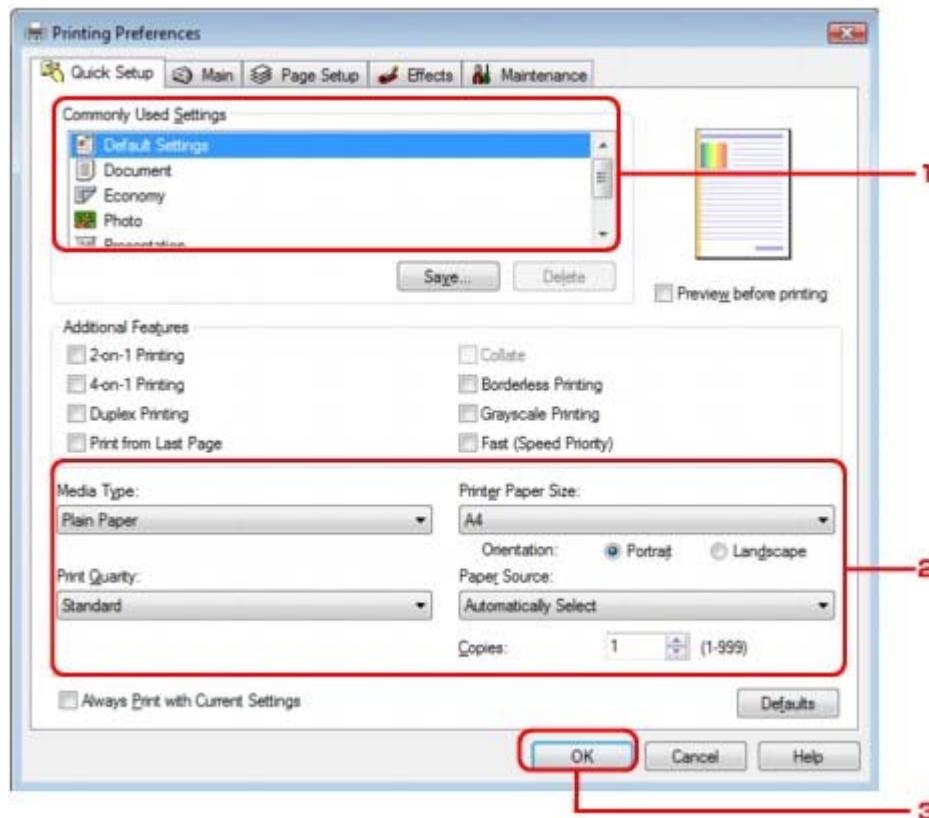

1. Select the print setting in Commonly Used Settings.
2. Confirm the required print settings in Media Type, Printer Paper Size, and so on.


#### Note

- You can specify the advanced print settings on Main sheet and Page Setup sheet. For details on the print settings, refer to [Various Printing Methods](#).

3. Click OK.

The Print dialog box is displayed.

#### 5. Click Print (or OK) to print the document.

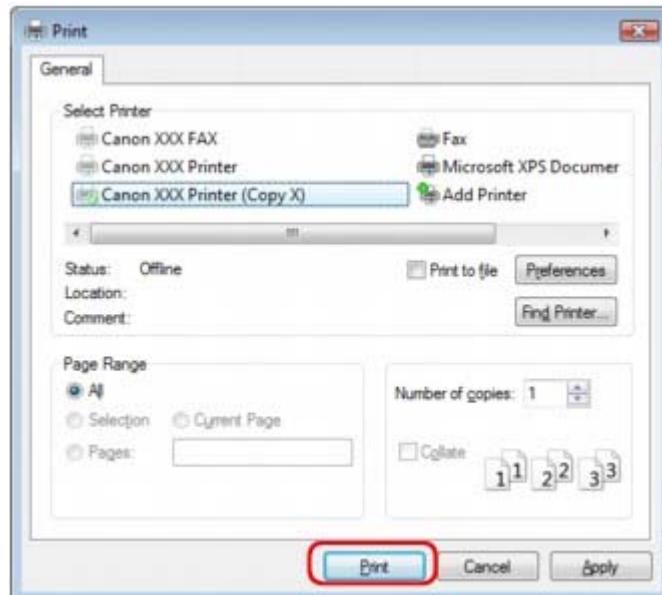

Printing begins.

#### Note

- When you use a USB cable for printing, select Canon XXX Printer from Select Printer.
- To cancel a print job in progress, press the **Stop** button on the printer or click Cancel Printing on the printer status monitor. After printing is canceled, a sheet of paper may be ejected with no printing results.

- To display the printer status monitor, click Canon XXX Printer (Copy X) on the taskbar.  
■ "X" is a device name or a digit. The number of digits may differ depending on the printer.

---

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Basic Procedure for Printing via Bluetooth Communication > Printing with Bluetooth Compliant Devices other than a Computer

# Printing with Bluetooth Compliant Devices other than a Computer

The LCD of the printer allows you to perform settings for printing using Bluetooth compliant devices other than a computer.

When you print with one of these devices, also refer to your product's instruction manual.

When printing from a computer, see [Printing with Computers](#).

### Note

- Mobile phones, PDAs and digital cameras supporting OPP (Object Push Profile) or BIP (Basic Imaging Profile) can print photos.  
Depending on your product, you may not perform printing even if your product supports the profiles above. For details of profiles, refer to your product's instruction manual.

1. Turn on the printer and load paper.
2. Display the Mobilephone print setting or Mobile phone settings screen on the LCD and set the media type and the paper size.  
For information about how to display the Mobilephone print setting or Mobile phone settings screen, refer to [Changing the Machine Settings on the LCD](#).
3. Start printing from the Bluetooth compliant device.

When you select the device name, select the initial value of the printer "Canon XXX-1" (where "XXX" is your printer's name).

If you are required to input the passkey, input the initial value "0000".

You can change the device name of the printer or passkey on the Bluetooth settings screen on the LCD.

▶ [Setting Bluetooth Printing](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Bluetooth Settings

---

# Bluetooth Settings

- ▶ [Setting Bluetooth Printing](#)
- ▶ [Bluetooth Settings Screen](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Bluetooth Settings > Setting Bluetooth Printing

### Setting Bluetooth Printing

1. Make sure that the printer is turned on, and attach the Bluetooth unit.

#### Note

- When the Bluetooth unit is properly attached to the printer with the **Power** lamp, the **Power** lamp on the printer flashes twice. When the Bluetooth unit is properly attached to the printer without the **Power** lamp, the **COPY** button on the printer flashes twice.

2. Display the Bluetooth settings screen on the LCD.

For information about how to display the Bluetooth settings screen, refer to [Changing the Machine Settings on the LCD](#).

3. Select the contents which you want to set on the LCD.

▶ [Bluetooth Settings Screen](#)

#### Note

- For information about how to set a media type and a paper size when printing from a mobile phone, refer to [Changing the Machine Settings on the LCD](#).

[Page top ↑](#)


## Advanced Guide

Advanced Guide > About Bluetooth Communication > Bluetooth Settings > Bluetooth Settings Screen


# Bluetooth Settings Screen

Canon IJ printers with the Bluetooth interface are divided into two types. One is equipped with a graphic LCD, and the other with a text LCD.

## • Graphic LCD

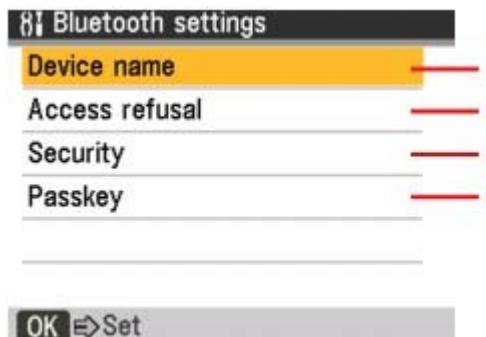

## • Text LCD

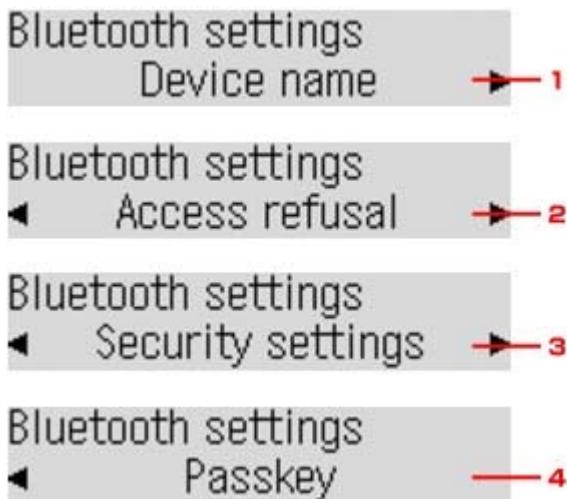

### 1. Device name

Displays the device name of the printer to which the Bluetooth unit is attached.

▶ [Device name Screen](#)

### 2. Access refusal

Selecting ON will disable searching of this printer by a Bluetooth-compatible device.

▶ [Access refusal Screen](#)

### 3. Security/Security settings

Select Enable and then specify the security mode to activate the passkey set on the Passkey screen.

▶ [Security/Security settings Screen](#)

### 4. Passkey

You can change the passkey. The passkey refers to an identification number to be determined. It is used to prevent unwanted access from other Bluetooth devices. The initial value is set to 0000.

▶ [Passkey Screen](#)

#### Device name Screen


Allows you to set the device name of the printer on a Bluetooth device.

Ex:


When you select MX860 series-2, the printer name displayed on the Bluetooth device is Canon MX860 series-2.

The initial value is set to MX860 series-1.

- **Graphic LCD**

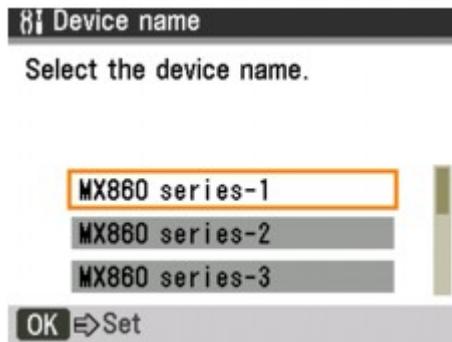

- **Text LCD**

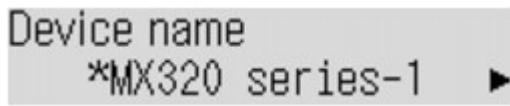

### Access refusal Screen

When you search from a Bluetooth device, you can enable or disable the display of the printer name.

- **ON**

Disables searching from a Bluetooth device.

- **OFF (Default setting)**

Enables searching and printing from a Bluetooth device.

### Security/Security settings Screen

- **Enable**

Selecting Enable allows you to choose either of the security modes below.

- **Mode 3(recommended)**

This mode is activated on link level enforced security.

The passkey will be required when a Bluetooth device communicates with the printer.

Normally select this mode.

- **Mode 2**

This mode is activated on service level enforced security.

The passkey will be required when printing through the Bluetooth communication.

After setting the security mode, we recommend making a trial print through Bluetooth communication. If printing does not start, change the security mode and try again.

Setting a passkey will prevent unwanted access from other Bluetooth devices. You can change the passkey on the Passkey screen.

- **Disable (Default setting)**

When you register the printer, you are not required to input a passkey.

### Passkey Screen


When you select Enable on the Security or Security settings screen, you are required to set a passkey to register the printer on other Bluetooth devices.

After you change the passkey, you may be asked to input the passkey on the Bluetooth devices you were able to print from before the passkey was changed. In this case, input the new passkey.

- **Graphic LCD**



- Text LCD

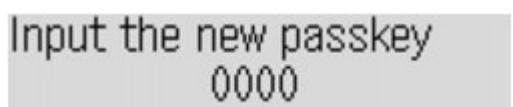

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Troubleshooting

---

# Troubleshooting

- ▶ Troubleshooting
- ▶ Printer Cannot be Registered
- ▶ Printing Does Not Start

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Troubleshooting > Troubleshooting

---

### Troubleshooting

This section describes how to solve the problems occurred during the use of the Bluetooth unit.

Problems related to the printer's hardware, MP Drivers installation, and so on, are also described in [Troubleshooting](#).

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Troubleshooting > Printer Cannot be Registered

# Printer Cannot be Registered

## • Check 1: Have MP Drivers been installed?

Install the MP Drivers referring to your setup manual.

## • Check 2: Is unsupported Bluetooth driver used?

Confirm that the Bluetooth driver installed on your computer is supported.

- Toshiba Windows Vista or Windows XP computer

In Windows Vista, click Start, and select All Programs, TOSHIBA, Bluetooth, then Bluetooth Settings.

On the Bluetooth Settings dialog, click the help button, the version number, then make sure that the version number is 5.10.04 or later.

In Windows XP, click Start, and select All Programs, TOSHIBA, Bluetooth, then Bluetooth Settings.

On the Bluetooth Settings dialog, click the help button, the version number, then make sure that the version number is 3.00.10 or later.

- Windows Vista (except for Toshiba Windows Vista computers)

Log into a user account with the administrator privilege, and click Control Panel, then Hardware and Sound.

Make sure that the  Bluetooth Devices icon is displayed in the dialog.

- Windows XP SP2 or later (except for Toshiba Windows XP computers)

Log into a user account with the administrator privilege, click Control Panel, then Printers and Other Hardware.

Make sure that the  Bluetooth Devices icon is displayed in the dialog.

The operations may vary depending on your operating program. In this case, refer to your computer's operation manual.

## • Check 3: Is the printer name which you want to register displayed in

### Printer List?

- Make sure that the printer is turned on.

Make sure that any lamp on the Operation Panel is lit.

- Make sure that the printer is not operating.

- Check whether the Bluetooth unit is usable.

Make sure that the Bluetooth settings screen can be displayed on the LCD of the printer. If the screen cannot be displayed, Bluetooth communication is disabled. Remove the Bluetooth unit from the printer and attach it again.

 [Attaching to and Removing from the Printer](#)

Make sure that the Bluetooth settings screen can be displayed on the LCD of the printer, and try to register again.

- Check whether access from a Bluetooth-compatible device is refused.

Check the printer access setting displaying the Bluetooth settings screen on the LCD of the printer.

#### 1. Display the Bluetooth settings screen on the LCD of the printer.

For information about how to display the Bluetooth settings screen, refer to [Changing the Machine Settings on the LCD](#).

#### 2. Select Access refusal.

#### 3. Select OFF and press the **OK** button on the printer.

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Troubleshooting > Printing Does Not Start

### Printing Does Not Start

#### • Check 1: Is Bluetooth unit ready for use?

Make sure that the Bluetooth settings screen can be displayed on the LCD of the printer. If the screen cannot be displayed, Bluetooth communication is disabled. Remove the Bluetooth unit from the printer and attach it once again.

##### ▶ Attaching to and Removing from the Printer

Make sure that the Bluetooth settings screen can be displayed on the LCD of the printer, and try to print again.

If the Bluetooth settings screen still is not displayed after you remove the Bluetooth unit from the printer and attach it again, the Bluetooth unit may be faulty. In this case, contact the service center.

#### • Check 2: Is there a problem with the location of the printer or is the distance between the printer and computer too great?

The maximum communication distance between the printer and a computer is about 33 ft./10 m, but it varies depending on the following conditions:

- Presence of obstacles between the communication equipment and radio wave conditions
  - Location where magnetic fields, static electricity, or radio interference occurs
  - Type of software and operating system used
  - Receiver sensitivity and antenna performance of the communication equipment
- Change the printer installation place or move the printer closer to the computer.

#### • Check 3: Is the printer to be used selected correctly?

Follow the procedure described below to select the printer to which the Bluetooth unit is attached.

1. Log into a user account with the administrator privilege.

2. Click Control Panel, then Printers under Hardware and Sound.

When using non-Vista Windows, click Control Panel, then Printers and Faxes under Printers and Other Hardware.

3. Click the  icon of the printer to be used for printing via Bluetooth communication.

By default, the icon name is Canon XXX Printer (Copy X).

#### Note

- "X" is a device name or a digit. The number of digits may differ depending on the printer.

4. Select Properties from the Organize (File in non-Vista Windows) menu.

5. Click the Ports tab and select an applicable printer from Port.

It may vary depending on how you authenticate the printer.

When authenticating the printer as a Bluetooth device in Control Panel

BTHnnn (Canon XXX Printer (Copy X)) ("n" is a digit).

When authenticating the printer as a Bluetooth device using Bluetooth Settings built in the computer

TBPnnn (Canon XXX Printer (Copy X)) ("n" is a digit)

For more information about how to register the printer, see [Register the printer as a Bluetooth device using Bluetooth Devices](#). in [Preparation](#).

6. Click OK.

#### • Check 4: Is the message This document failed to print displayed?

- Do not retry printing. Check the error message on the LCD.  
Clear the error according to [An Error Message Is Displayed on the LCD](#).
- When you use a Microsoft Bluetooth driver, make sure that the Printing (HCRP) service is effective on your computer.  
Click Control Panel, Bluetooth Devices under Hardware and Sound (Printers and Other Hardware in non-Vista Windows), then select the printer to be used for Bluetooth communication and click Properties.  
Make sure that Printing (HCRP) on the Services sheet is checked.  
If Printing (HCRP) is not checked or the Printing (HCRP) service is not detected, follow the procedure below and register the printer again.

## 1. Click Control Panel, then Printers under Hardware and Sound.

When using non-Vista Windows, click Control Panel, then Printers and Faxes under Printers and Other Hardware.

## 2. Click the icon of the printer for printing via Bluetooth communication.

## 3. Select Delete from the Organize (File in non-Vista Windows) menu.

## 4. Authenticate the printer as a Bluetooth device on Bluetooth Devices in Control Panel.

For more information about the procedure, see [Registering the Printer](#).

- This message is displayed when the print job is sent from the Bluetooth device while another print job through the USB port is being printed out.  
Printing will begin automatically when the print queue is finished.
- Printing cannot be carried out with Bluetooth communication from more than one computer at the same time. In this case, this message is displayed on the computer during standing by.  
Printing will begin automatically when the print queue is finished.

## • Check 5: Were the MP Drivers installed after printer registration on

### Bluetooth Devices?

If you have installed the MP Drivers after registering the printer as a Bluetooth device on Bluetooth Devices, delete the printer and then register it again.

For more information about the procedure, see [Preparation](#).

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Bluetooth Communication > Specifications

### Specifications

Communication method	Bluetooth v2.0
Maximum Speed	1.44 Mbps
Output	Bluetooth Power Class 2
Communication distance	Line-of-sight distance: approx. 33 ft./10 m * * It may vary depending on factors including the presence of obstacles between communication equipment, radio wave conditions, the presence of magnetic fields around microwave ovens and locations where electrostatic and radio interference occur, the types of software and operating systems used, and receiver sensitivity and antenna performance of communication equipment.
Profile	SPP (Serial Port Profile) OPP (Object Push Profile) BIP (Basic Imaging Profile) HCRP (Hardcopy Cable Replacement Profile)
Compatible PCs	A computer in which an internal Bluetooth module is installed or a computer to which an optional Bluetooth adapter (available from various manufacturers) is attached. OS/Software: Microsoft Windows Vista (Satisfying any one of the following conditions is needed) <ul style="list-style-type: none"><li>• Bluetooth Devices is displayed in Hardware and Sound under Control Panel</li><li>• Bluetooth Stack for Windows by Toshiba Version 5.10.04 or later is installed</li></ul> Microsoft Windows XP (Satisfying any one of the following conditions is needed) <ul style="list-style-type: none"><li>• Windows XP SP2 or later is installed, and Bluetooth Devices is displayed in Printers and Other Hardware under Control Panel</li><li>• Bluetooth Stack for Windows by Toshiba Version 3.00.10 or later is installed</li></ul>
Frequency band	2.4 GHz band (2.400 GHz to 2.4835 GHz)
Power supply	Supplied from the Direct Print Port on the printer, DC 4.4 V to 5.25 V
Maximum power consumption	500 mW (MAX)
Operating temperature	5 to 35°C (41 to 95°F)
Operating humidity	10 to 90% RH (no condensation)
Dimensions (Width x Depth x Height)	18.5 (W) x 47.5 (D) x 8.7 (H) mm (with cap attached) 0.73 (W) x 1.87 (D) x 0.35 (H) inches
Weight	Approx. 7 g (0.25 oz)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings

---

# Changing the Machine Settings

- ▶ [Changing the Machine Settings on the LCD](#)
- ▶ [Changing Machine Settings from Your Computer](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing the Machine Settings on the LCD

# Changing the Machine Settings on the LCD

- ▶ [Changing the Machine Settings on the LCD](#)
- ▶ [Plain paper feed settings](#)
- ▶ [FAX settings](#)
- ▶ [Print settings](#)
- ▶ [LAN settings](#)
- ▶ [Advanced settings](#)
- ▶ [Mobilephone print setting](#)
- ▶ [Bluetooth settings](#)
- ▶ [PictBridge settings](#)
- ▶ [Language selection](#)
- ▶ [Reset setting](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing the Machine Settings on the LCD > Changing the Machine Settings on the LCD

# Changing the Machine Settings on the LCD


This section describes the procedure to change the settings in the Device settings screen, taking the steps to specify Extended copy amount as an example.

1. Make sure that the machine is turned on, then press the **Menu** button.


2. Use the button to select Settings, then press the **OK** button.

3. Use the button to select Device settings, then press the **OK** button.  
The Device settings screen is displayed.

4. Use the button to select a menu, then press the **OK** button.

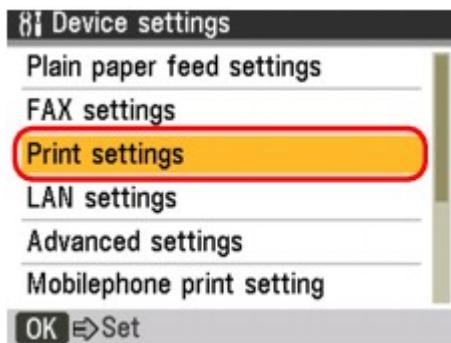


5. Use the button to select a menu, then press the **OK** button.

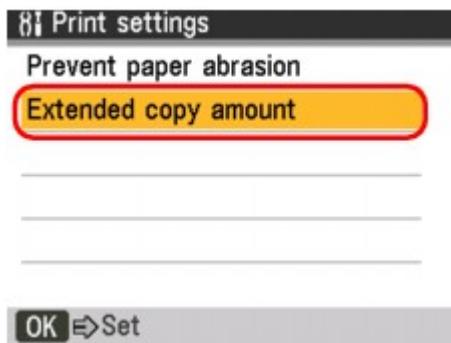

The setting screen for the selected item is displayed.

6. Use the button to select a setting item, then press the **OK** button.

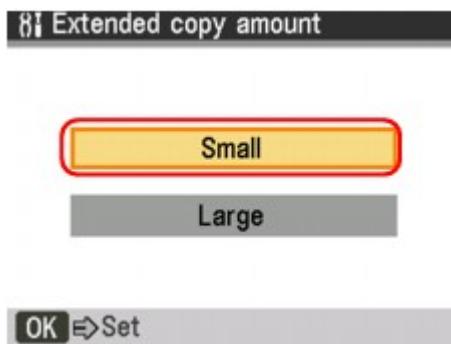

Plain paper feed settings

- ▶ FAX settings
- ▶ Print settings
- ▶ LAN settings
- ▶ Advanced settings
- ▶ Mobilephone print setting
- ▶ Bluetooth settings
- ▶ PictBridge settings
- ▶ Language selection
- ▶ Reset setting

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing the Machine Settings on the LCD > Plain paper feed settings

### Plain paper feed settings

Specifies the paper source for A4, Letter, A5, and B5 plain paper.

#### Note

- A4, Letter, A5, and B5 paper can be loaded in the Cassette. Load on the Rear Tray for the other sizes of paper.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing the Machine Settings on the LCD > FAX settings

# FAX settings


This section describes the setting items in User settings, Transmission settings, and Reception settings in the FAX settings menu.

- ▶ [User settings](#)
- ▶ [Transmission settings](#)
- ▶ [Reception settings](#)

### Note

- Before changing the settings, you can confirm the current settings by printing the User's Data List.  
For details, see [User's Data List](#).

## User settings

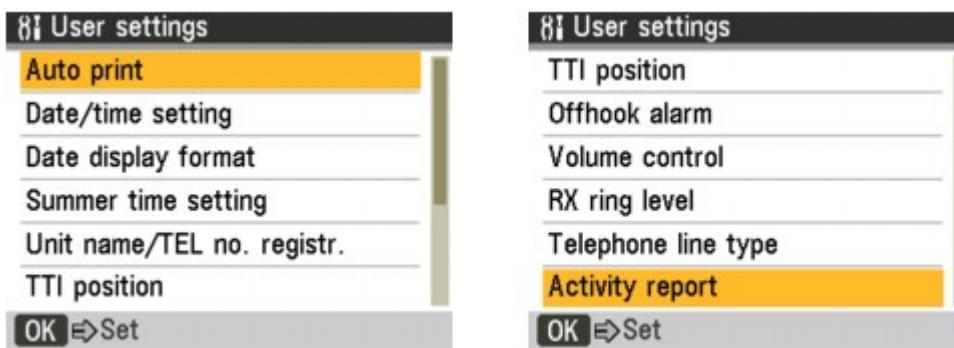

### • Auto print

Sets whether the machine automatically prints the received fax. When this setting is set to OFF, received faxes are stored in memory.

▶ [Document Stored in Memory](#)

### Note

- When this setting is set to OFF, the following reports are also not printed automatically.  
Activity report  
TX (Transmission) report  
RX (Reception) report  
MULTI TX (Transmission) report

### • Print when out of ink:

Sets whether to continue printing the received fax without storing it in memory when the ink has run out. When this setting is set to ON, the machine prints the received fax forcibly even if the ink has run out.

However, part or all of the fax may not be printed since the ink has run out.

### • Date/time setting

Sets the current date and time.

▶ [Specifying the Basic Settings for the Machine](#)

### • Date display format

Sets the format of dates displayed on the LCD and printed on sent faxes.

▶ [Specifying the Basic Settings for the Machine](#)

Three date formats are available; YYYY/MM/DD, MM/DD/YYYY, and DD/MM/YYYY.

### • Summer time setting

Enables/disables the summer time setting. If you select ON, you can select additional sub-settings. This setting may not be available depending on the country or region of purchase.

#### • Start date/time

Sets the date and time that summer time starts.

Set month: Specify the month.  
 Set week: Specify the week.  
 Set day of week: Specify the day of the week.  
 Set shift time: Specify the hour (24-hour clock).  

- End date/time  
 Sets the date and time that summer time ends.  
 Set month: Specify the month.  
 Set week: Specify the week.  
 Set day of week: Specify the day of the week.  
 Set shift time: Specify the hour (24-hour clock).

- **Unit name/TEL no. registr.**

Registers your name and fax/telephone number printed on sent faxes.

➡ [Specifying the Basic Settings for the Machine](#)

- **TTI position**

Selects the position of the sender information (outside or inside the image area). After selecting the position, select FAX or TEL to specify the mark to appear before the fax/telephone number printed on sent faxes.

➡ [Specifying the Basic Settings for the Machine](#)

- **Offhook alarm**

Enables/disables the alarm that alerts you if the handset of the telephone connected to the machine is not hung up properly.

- **Volume control**

RX ring volume: Selects the ring volume when the machine receives a fax.

Line monitor volume: Selects the line monitor volume.

- **RX ring level**

Adjusts the level of the ringing sound the machine makes when it receives a fax. You can select either Standard or High.

- **Telephone line type**

Specifies the type of telephone line connected to the machine (Rotary pulse or Touch tone).

➡ [Confirming the Telephone Line Connection](#)

 **Note**



- This setting may not be available depending on the country or region of purchase.

- **Activity report**

Sets whether to print the Activity report automatically after every 20 transactions.

➡ [Activity Report](#)

## Transmission settings

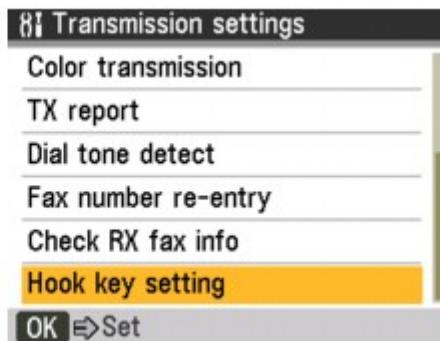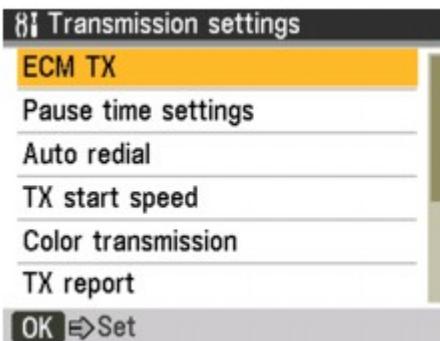

- **ECM TX**

This machine is set to send/receive faxes in Error Correction Mode (ECM) by default.

➡ [Transmission/Reception of Faxes Using ECM](#)

When the recipient's fax machine is compatible with ECM, the machine resends the fax after

correcting errors automatically. When the recipient's fax machine is not compatible with ECM, the fax will be sent/received in the standard mode.

ECM transmission can be disabled.

- **Pause time settings**

Sets the length of time paused for each press of the **Redial/Pause** button.

- **Auto redial**

Enables/disables automatic redialing.

➡ **Resending Faxes (Redialing a Busy Number)**

If you select ON, you can specify the maximum number of redial attempts and the length of time the machine waits between redial attempts.

- **TX start speed**

Selects the fax transmission speed.

- **Color transmission**

When faxing color documents using the ADF, selects whether to scan it in black & white if the recipient's fax machine does not support color faxing.

- **TX report**

Enables/disables automatic printing of a transmission report after a fax transmission.

➡ **TX Report**

If you select Print error only or Print for each TX, you can enable/disable printing of the first page of the fax under the report.

- **Dial tone detect**

Avoids mistransmission when reception and transmission occur at the same time.

If you select ON, the machine transmits the fax after confirming the dial tone.

This setting may not be supported depending on the country or region of purchase.

- **Fax number re-entry**

If you select ON, you can set the machine to send faxes after using the Numeric buttons to dial the number twice. By using this setting, you can avoid the mistransmission of faxes.



- **Check RX fax info**

If you select ON, the machine checks whether the recipient's fax machine information matches the dialed number. If it matches the number, the machine starts to send faxes.

- **Hook key setting (MX860 series)**

If you select Disable, any operations using the **Hook** button is invalid.

## Reception settings

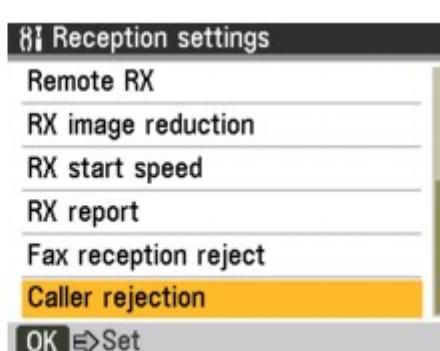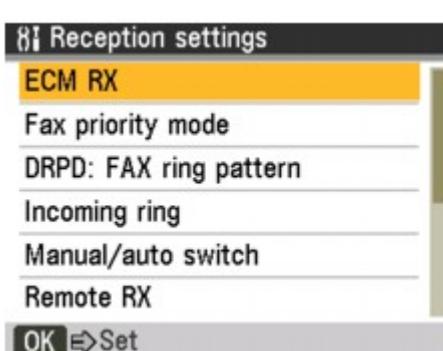

- **ECM RX**

This machine is set to send/receive faxes in Error Correction Mode (ECM) by default.

➡ **Transmission/Reception of Faxes Using ECM**

When the sender's fax machine is compatible with ECM, it resends the fax after correcting errors automatically. When the sender's fax machine is not compatible with ECM, the fax will

be sent/received in the standard mode.

ECM reception can be disabled.

- **Fax priority mode**

Specifies the detailed settings when Receive mode settings is set to Fax priority mode.

- ▶ Receiving Faxes

- Ring start time  
Specifies the length of time, in seconds, to allow the machine to judge whether an incoming call is a fax or a voice call.
- Telephone ring time  
Specifies the length of time, in seconds, that the machine rings for a voice call.
- Default action  
Sets whether to receive the fax after the specified ring time has elapsed.

- **DRPD: Fax ring pattern**

Sets the distinctive ring pattern of a call that the machine assumes is a fax call. If you subscribe to a DRPD service, set the ring pattern to match the pattern assigned by your telephone company.

You can select the ring pattern from Normal ring, Double ring, Short-short-long, Short-long-short, and Other ring type.

- ▶ Setting the Receive Mode

This setting is available only in the US and Canada.

- **Incoming ring**

MX860 series

Selects whether to allow the external device to ring when the receive mode is set to Fax only mode or Fax priority mode.

- ▶ Using Various Receiving Functions

If you select ON, you can specify the number of times the external device rings.

MX330 series

Specifies the number of times the external device rings when the receive mode is set to Fax only mode or Fax priority mode.

- ▶ Using Various Receiving Functions

- **Manual/auto switch**

Sets whether to automatically receive faxes after the external device rang a specified length of time when Receive mode settings is set to TEL priority mode.

- ▶ Receiving Faxes

If you select ON, you can specify the length of time until automatic reception is started.

- **Remote RX**

Enables/disables remote reception.

- ▶ Remote Reception

If you select ON, you can specify the remote reception ID.

- **RX image reduction**

Enables/disables automatic reduction of incoming faxes so that they fit in the selected paper.

If you select ON, you can select the image reduction direction.

- **RX start speed**

Selects the fax reception speed.

- **RX report**

Sets whether to print a reception report after each reception.

- ▶ RX Report

- **Fax reception reject**

If you select ON, the machine rejects the reception of faxes with no sender information or faxes from specific senders.

- ▶ Rejecting Fax Reception

- No sender info.\*

- Rejects faxes with no caller identification.
- 1-touch/code unset (MX860 series)\*, Coded dial unset (MX330 series)\*  
Rejects faxes from senders not registered to speed dial codes.  
\* This setting may not be supported depending on the country or region of purchase.
- Rejected numbers  
Rejects faxes from senders registered in the machine as rejected numbers.

#### • Caller rejection

If you subscribe to the Caller ID service, the machine detects the sender's Caller ID. If the sender's ID does not match the conditions specified in this setting, the machine rejects the phone call or fax reception from the sender.

If you select Yes, you can specify the following settings:

- Anonymous no.  
Selects whether to reject a phone call or fax reception from a sender with no caller identification.
- Out of area  
Selects whether to reject a phone call or fax reception out of the subscribed service area.
- Rejected numbers  
Selects whether to reject a phone call or fax reception from the numbers registered to Rejected numbers in Fax reception reject. If you select Reject for this setting, Register rejected numbers? is displayed on the LCD. Select Yes to register a fax/telephone number to reject. For details, see [Rejecting Fax Reception](#).



#### Note

- This setting may not be supported depending on the country or region of purchase.  
Contact your telephone company to confirm whether it provides this service.

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing the Machine Settings on the LCD > Print settings

# Print settings

## • Prevent paper abrasion

Use this setting only if the print surface becomes smudged.

### Important

- Be sure to set this back to OFF after printing since it may result in lower printing speed or lower print quality.

## • Extended copy amount

Selects the amount of image that extends off the paper when printing in Borderless (full).

### Note

- If printouts contain margins even though you are printing in Borderless, specifying Large for this setting may help solve the problem.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing the Machine Settings on the LCD > LAN settings

# LAN settings

## • Change WLAN/LAN

Activates wired or wireless LAN.

### Note

- When you change the connection method (wired or wireless), set up the machine according to the method you will use. For details, refer to your setup manual.

## • WLAN settings

Selects the setting method for wireless LAN connection.

- WPS setting

Select when you perform settings for wireless LAN using Wi-Fi Protected Setup (WPS). Select Push button method or PIN code method according to the method your access point supports, then follow the on-screen instructions.

- WCN setting

Select when you perform settings for wireless LAN using Windows Connect Now (WCN) feature. You need a USB flash drive on which settings for wireless LAN are saved.

## • WLAN setting list

The list of wireless LAN settings of this machine is displayed on the LCD.

The following setting items are displayed.

Items	Setting (IPv4)	Setting (IPv6)
Connection	Active/Inactive	Active/Inactive
SSID	XXXXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXXXX	XXXXXXXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXXXX
Communication mode	Infrastructure	Infrastructure
Channel	XX	XX
Data encryption	Disable/WEP/TKIP/AES	Disable/WEP/TKIP/AES
Network authentication	Auto/Open system/Shared key/WPA-PSK/WPA2-PSK	Auto/Open system/Shared key/WPA-PSK/WPA2-PSK
WEP bit	Disable/128/64	Disable/128/64
IP address	XXX. XXX. XXX. XXX	XXX. XXX. XXX. XXX. XXX. XXX. XXX. XXX
Subnet mask	XXX. XXX. XXX. XXX	-
Subnet prefix length	-	XXX
Default gateway	XXX. XXX. XXX. XXX	XXX. XXX. XXX. XXX
MAC address	XX:XX:XX:XX:XX:XX	XX:XX:XX:XX:XX:XX
IPsec Settings	-	Active/Inactive
Security protocol	-	ESP/ESP & AH/AH
Pre-shared key	-	XXXXXXXXXXXX

("X" represents an alphanumeric character ranging from 0 to 9 and A to F.)

## • LAN setting list

The list of wired LAN settings of this machine is displayed on the LCD.

The following setting items are displayed.

Items	Setting (IPv4)	Setting (IPv6)
Connection	Active/Inactive	Active/Inactive
IP address	XXX. XXX. XXX. XXX	XXX. XXX. XXX. XXX.

		XXX. XXX. XXX. XXX
Subnet mask	XXX. XXX. XXX. XXX	-
Subnet prefix length	-	XXX
Default gateway	XXX. XXX. XXX. XXX	XXX. XXX. XXX. XXX
MAC address	XX:XX:XX:XX:XX:XX	XX:XX:XX:XX:XX:XX
IPsec Settings	-	Active/Inactive
Security protocol	-	ESP/ESP & AH/AH
Pre-shared key	-	XXXXXXXXXXXX

("X" represents an alphanumeric character ranging from 0 to 9 and A to F.)

#### • IPv4/IPv6 setting

Selects the IP version (IPv4 or IPv6). It is recommended to use the machine with IPv4.

#### • WSD setting

Activates/inactivates the WSD (one of the network protocols supported in Windows Vista) setting.



#### Note

- When you set WSD setting to Enable, the printer icon is displayed on the Network Explorer in Windows Vista.

#### • Print LAN details

You can print out the network settings of the machine such as its IP address and SSID.

For more information on the machine's network setting is printed out, refer to [Printing Out Network Setting Information](#).



- This print out contains valuable information about your computer. Handle it with care.

#### • Reset LAN settings

Initializes the network settings on the machine.



- Note that initialization erases all connection settings with computers, and printing or scanning operation may become impossible. To use the machine over network, refer to your setup manual. Be careful when you initialize the network settings on the machine.



#### Note

- When you initialize the network settings using the Canon IJ Network Tool, refer to [Initializing the Network Settings of the Machine](#).

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing the Machine Settings on the LCD > Advanced settings

# Advanced settings

## • Read/write attribute

Selects whether to allow data to be written onto memory cards from a computer.

### Important

- Remove the memory card before changing this setting. For details, see [Setting Up the Card Slot as the Memory Card Drive of the Computer](#).
- If you set this setting to Writable from USB PC or Writable from LAN PC, card direct printing cannot be done. After you finish operation of the memory card dedicated drive, be sure to set it back to Not writable from PC. When you turn off the machine, Writable from USB PC or Writable from LAN PC will be canceled and the setting is returned to Not writable from PC when you turn on the machine next time.

## • Volume control

Selects the volume.

- Keypad volume  
Selects the beep volume when pressing the buttons on the Operation Panel.
- Alarm volume  
Selects the alarm volume.

## • Country select

Selects the country where you are using the machine.

### Note

- This setting may not be available depending on the country or region of purchase.

## • Quiet mode

Enables this function on the machine if you want to reduce the operating noise, such as when printing at night.

Enabling this function reduces the noises generated in the following cases:

- Copying
- Printing from a memory card
- Printing from a PictBridge compliant device
- Printing from a wireless communication device
- Receiving the fax
- Sending the fax
- Printing a template form

### Important

- Operating speed may be reduced compared to when this setting is set to OFF.
- This function may not be so effective depending on the machine's setting.  
Furthermore, certain noise, such as when the machine is preparing for printing, is not reduced.

### Note

- The noises generated while scanning or printing from the computer can also be reduced. To reduce these noises, you need to configure the settings on the computer.  
For the noises while scanning, refer to [Scanner Tab](#).  
For the noises while printing from the computer, refer to [Reducing the Machine Noise](#).

## • Key repeat

Enables/Disables continuous input by pressing and holding down the ▲, ▼, ◀, or ▶ button when setting the number of copies, the zoom ratio, etc.

## • Two-sided output setting

Selects the paper output setting for double-sided documents.

- Output by page  
Documents are ejected from the ADF in the original page order.
- Fast - by back/front

Documents are ejected from the ADF with the front and back pages of each sheet in the reverse order, to make the processing time shorter.

[Page top ↑](#)

## Advanced Guide


Advanced Guide > Changing the Machine Settings > Changing the Machine Settings on the LCD > Mobilephone print setting

### Mobilephone print setting

When printing from a mobile phone through Bluetooth communication, select the print settings such as page size, media type, layout, and so on. For details on how to print from a mobile phone through Bluetooth communication, see [Printing Photographs from a Wireless Communication Device](#).

#### Note

- This menu is displayed only when the optional Bluetooth Unit is attached.

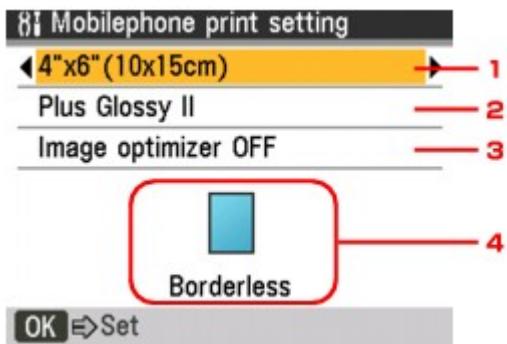

- Select the page size for printing photos saved on a mobile phone.
- Select the media type for printing photos saved on a mobile phone.
- Select Image optimizer ON to correct and smooth out the jagged contours when printing.
- Select the layout of the photos according to the paper for printing.

#### Sticker print:

Stickers x16

#### Printing on paper other than sticker:

Bordered x 1, x 2, x 4, x 8

Borderless x 1, x 2, x 4, x 8

Mixed 1, 2, 3

#### Note

- Mixed 1, Mixed 2, or Mixed 3 can be selected only when the page size is set to A4 or 8.5"x11"(LTR).

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing the Machine Settings on the LCD > Bluetooth settings

# Bluetooth settings

You can change the device name of the machine, passkey, and so on in the Bluetooth settings. For details on how to print from a mobile phone through Bluetooth communication, see [Printing Photographs from a Wireless Communication Device](#). For details on how to print from a computer through Bluetooth communication, refer to [About Bluetooth Communication](#).

### Note

- Bluetooth settings is displayed only when the optional Bluetooth Unit is attached.

#### • Device name

Specifies the name of this machine that is displayed on a Bluetooth-compatible device.

For example, if you set it to XXX-2, the machine will be displayed as "Canon XXX-2" on the Bluetooth device. The default value is XXX-1 (where "XXX" is your machine's name).

#### • Access refusal

Selecting ON will disable searching of this machine by a Bluetooth-compatible device.

#### • Security

When you select Enable, the passkey set on the Passkey screen becomes effective. Setting the passkey prevents unwanted access from other Bluetooth devices. You can choose either of the security modes below.

- Mode 3 (recommended)

This mode is activated on link level enforced security.

The passkey will be required when a Bluetooth device communicates with the machine.

Normally select this mode.

- Mode 2

This mode is activated on service level enforced security.

The passkey will be required when printing through Bluetooth communication.

After setting the security mode, we recommend making a trial print through Bluetooth communication.

If printing does not start, change the security mode and try again.

#### • Passkey

Changes the passkey. The passkey is a four-digit number used to prevent unwanted access from other Bluetooth devices.

The initial value is "0000".

After you change the passkey, you may be required to input the new passkey on a Bluetooth device, even though it had previous access to the machine. In this case, input the new passkey on the device.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing the Machine Settings on the LCD > PictBridge settings

### PictBridge settings

You can change the print settings when printing from a PictBridge compliant device.

Set the print settings to Default on the PictBridge compliant device when you want to print according to the settings on the machine.

See [Settings on a PictBridge Compliant Device](#) to change print settings from the PictBridge compliant device.

#### Note

- Use the **▲ ▼** button to select an item and use the **◀ ▶** button to specify the setting. To change the tab, use the **▲** button to return to the position of tab selection and use the **◀ ▶** button to select another tab.

#### Tab 1



#### 1. Select the paper size when printing directly from a PictBridge compliant device.

When you perform PictBridge settings from the machine, set Paper size to Default on the PictBridge compliant device.

#### 2. Select the media type when printing directly from a PictBridge compliant device.




When you perform PictBridge settings from the machine, set Paper type to Default on the PictBridge compliant device.

#### 3. Select the print quality when printing directly from a PictBridge compliant device.

#### 4. Select bordered or borderless print.

When you perform PictBridge settings from the machine, set Layout to Default on the PictBridge compliant device.

#### Tab 2

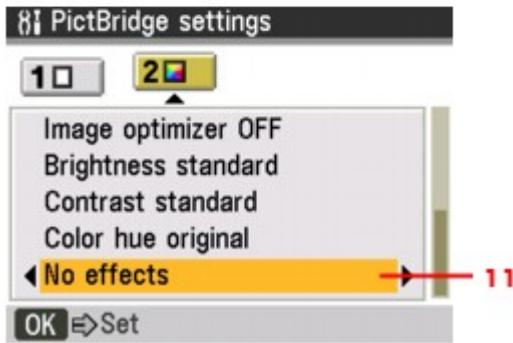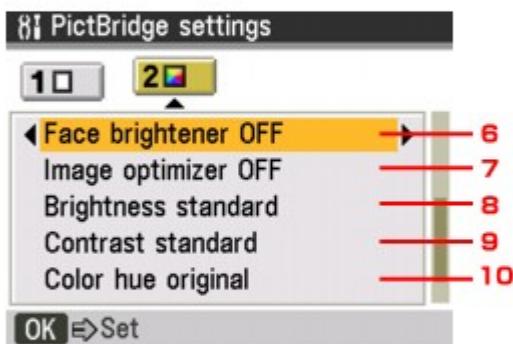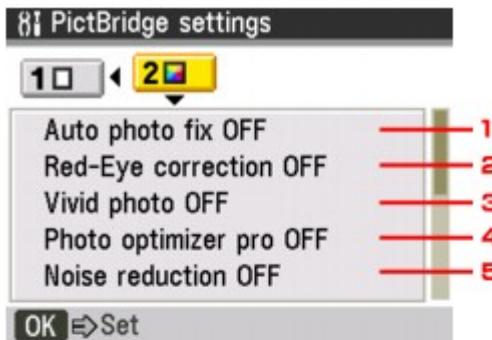

## 1. Auto photo fix

When Auto photo fix ON is selected, the scene or person's face of a shot photo is recognized and the most suitable correction for each photo is made automatically. It makes a darkened face by backlight brighter to print. It also analyzes a scene such as scenery, night scene, person, etc. and corrects each scene with the most suitable color, brightness, or contrasts automatically to print.

### Note

- If the print result with Auto photo fix ON selected is not satisfactory, select Auto photo fix OFF, then specify each advanced setting item below.

## 2. Red-Eye correction

Corrects red eyes in portraits caused by flash photography.

### Note

- Even when Auto photo fix ON is selected, you can specify this setting.

## 3. Vivid photo

Makes green and blue more lively.

## 4. Photo optimizer pro

Automatically optimizes brightness and tone of a photo.

## 5. Noise reduction

Reduces the noise on blue areas like the sky as well as on black areas.

**6. Face brightener**

Brightens a darkened face on a photo taken against the light.

**7. Image optimizer**

Corrects and smoothes the jagged contours for printing.

**8. Brightness**

Adjust brightness.

**9. Contrast**

Adjust contrast.

**10. Color hue**

Adjust color hue. For example, you can increase red or yellow to adjust the skin tone.

**11. Effects**

Applies special effects to the photo, such as printing in sepia tones or with a sketch illustration like effect.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing the Machine Settings on the LCD > Language selection

---

### Language selection

Changes the language for LCD messages and menus.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing the Machine Settings on the LCD > Reset setting

### Reset setting

Reverts all settings you made to the machine back to default. However, some data may not be changed, depending on the current usage state of your machine.

- **Telephone no. only**

Reverts the telephone number settings to default.

- **Setting only**

Reverts the machine settings other than the telephone number settings to default.

- **Reset both**

Reverts both the telephone number and machine settings to default.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing Machine Settings from Your Computer

# Changing Machine Settings from Your Computer

- ▶ [Changing the Print Options](#)
- ▶ [Registering a Frequently Used Printing Profile](#)
- ▶ [Setting the Paper Source for Plain Paper](#)
- ▶ [Managing the Machine Power](#)
- ▶ [Reducing the Machine Noise](#)
- ▶ [Changing the Machine Operation Mode](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing Machine Settings from Your Computer > Changing the Print Options


# Changing the Print Options

You change detailed print driver settings for print data that is sent from an application software.


With some applications, part of the image data may be cut off, the paper source during printing may differ from the driver settings, or printing may fail. These are the only instances in which you would need to check this check box.

The procedure for changing the print options is as follows:

1. Open the printer driver setup window
2. Click Print Options... on the Page Setup tab

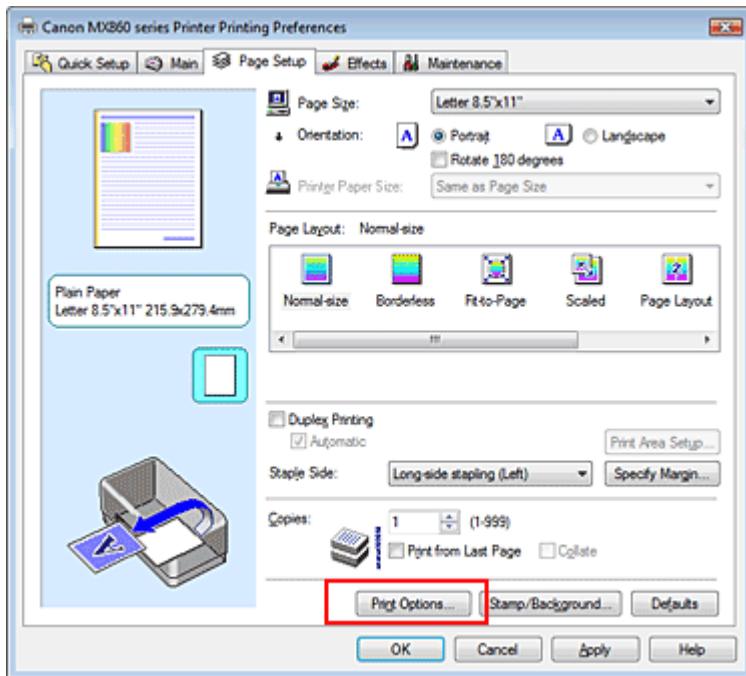

The Print Options dialog box opens.

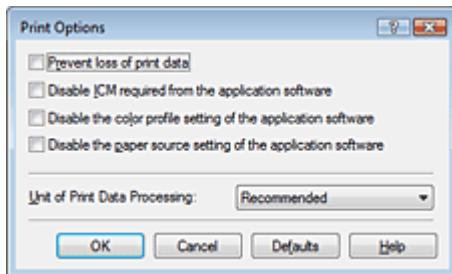

3. Change the individual settings

If necessary, change the setting of each item, and then click OK.

The Page Setup tab is displayed again.

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing Machine Settings from Your Computer > Registering a Frequently Used Printing Profile

# Registering a Frequently Used Printing Profile

You can register the frequently used printing profile to Commonly Used Settings on the Quick Setup tab. Unnecessary printing profiles can be deleted at any time.

The procedure for registering a printing profile is as follows:

## Registering a Printing Profile


### 1. Open the printer driver setup window

### 2. Set the necessary items


From Commonly Used Settings on the Quick Setup tab, select the printing profile to be used and change the settings after Additional Features, as necessary.

You can also set necessary items on the Main, Page Setup, and Effects tab.

### 3. Click Save...

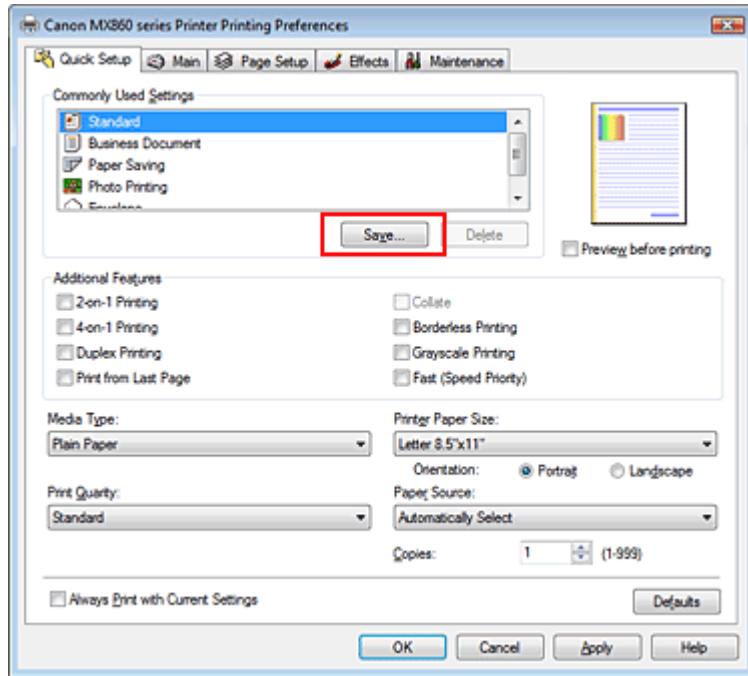

The Save Commonly Used Settings dialog box opens.

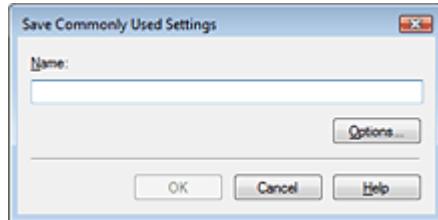

### 4. Save the settings

Set Name, then click OK. Set the items in Options..., as necessary. The printing profile is saved, and the Quick Setup tab is displayed again.

The name and icon are added to the Commonly Used Settings list.

## Note

- If you install the printer driver again or upgrade the version of the printer driver, the print settings you registered will be deleted from Commonly Used Settings.

Registered print settings cannot be saved and preserved. In this case, register the print settings again.

## Deleting Unnecessary Printing Profile

### 1. Select the printing profile to be deleted

Select the printing profile you want to delete from the Commonly Used Settings list on the Quick Setup tab.

### 2. Delete the printing profile

Click Delete. When the confirmation message appears, click OK.

The selected printing profile is deleted from the Commonly Used Settings list.

#### Note

- Printing profiles that are registered in the initial settings cannot be deleted.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing Machine Settings from Your Computer > Setting the Paper Source for Plain Paper

# Setting the Paper Source for Plain Paper

When you select Automatically Select from Paper Source, you can use the printer driver to select the paper source for plain paper.

The procedure for setting the paper source is as follows:



### Paper Source Setting for Plain Paper

1. Open the printer driver setup window
2. Click Paper Source Setting for Plain Paper on the Maintenance tab

The Paper Source Setting for Plain Paper dialog box opens.

3. Transmit the settings

Select the paper source for plain paper, and then click the Send button.

The selected settings are enabled hereafter.

#### Important

- The descriptions in the machine manual assume that the plain paper is supplied from the cassette. If you change the paper source setting, replace all instances of "cassette" with the new paper source.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing Machine Settings from Your Computer > Managing the Machine Power

# Managing the Machine Power

This function allows you to manage the machine power from the printer driver.

The procedure for managing the printer power is as follows:



### Power Off

The Power Off function turns off the machine. If you use this function, you will not be able to turn the machine on from the printer driver.

#### 1. Open the printer driver setup window

#### 2. Execute power off

Click Power Off on the Maintenance tab. When the confirmation message appears, click OK.

The machine power switches off, and the Maintenance tab is displayed again.

#### Important

- You cannot receive faxes if the printer/machine is switched off.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing Machine Settings from Your Computer > Reducing the Machine Noise

# Reducing the Machine Noise

This function allows you to reduce the operating noise of the machine. Select if you wish to reduce the operating noise of the printer at night, etc.  
Using this function may lower the print speed.

The procedure for changing the quiet mode settings is as follows:



### Quiet Mode

1. Open the [printer driver setup window](#)
2. Click Quiet Mode on the Maintenance tab

The Quiet Mode dialog box opens.

3. Set the silent function

If necessary, specify one of the following items:

**Do not use quiet mode**

The operating noise of the machine is at normal volume.

**Always use quiet mode**

Select this option when you wish to reduce the operating noise of the machine.

**Use quiet mode within specified time**

The operating noise of the machine can be reduced during a specified period of time.  
Set the Start time and End time when you wish the quiet mode to be activated.

 **Important**

- The time specified in Start time and in End time must be different.

4. Transmit the settings

Make sure that the machine is on and click Send.  
Click OK when the confirmation message appears.

The selected settings are enabled hereafter.



**Note**

- The effects of the quiet mode may be less depending on the paper source and the print quality settings.

## Advanced Guide

Advanced Guide > Changing the Machine Settings > Changing Machine Settings from Your Computer > Changing the Machine Operation Mode

# Changing the Machine Operation Mode

This function allows you to change the machine settings, as necessary.

The procedure for configuring Custom Settings is as follows:



**Custom Settings**

- 1.** Open the [printer driver setup window](#)
- 2.** Make sure that the machine is on, and then click **Custom Settings** on the **Maintenance tab**

The Custom Settings dialog box opens.

### Note

- If the machine is off or bi-directional communication is disabled, a message may appear because the computer cannot collect the machine status.  
If this happens, click **OK** to display the most recent settings specified on your computer.

- 3.** If necessary, complete the following settings:

#### **Prevent paper abrasion**

The printer can increase the gap between the print head and the paper during high-density printing to prevent paper abrasion.

Check this check box to use this function.

#### **Ink Drying Wait Time**

You can set the length of the machine rest time until printing of the next page begins. Moving the slider to the right increases the pause time and moving the slider to the left decreases the time.

If the paper gets stained because the next page is ejected before the ink on the printed page dries, increase the ink drying wait time.

Reducing the ink drying wait time speeds up printing.

- 4.** Transmit the settings

Click **Send**, and click **OK** when the confirmation message appears.

After that, the machine operates with the modified settings.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting

# Troubleshooting

- ▶ Troubleshooting
- ▶ If an Error Occurs
- ▶ The Machine Cannot Be Powered On
- ▶ An Error Message Is Displayed on the LCD
- ▶ A Message for Faxing Is Displayed on the LCD
- ▶ LCD Cannot Be Seen At All
- ▶ An Unintended Language Is Displayed on the LCD
- ▶ Cannot Install the MP Drivers
- ▶ Cannot Connect to Computer with a USB Cable Properly
- ▶ Print Results Not Satisfactory
- ▶ Printing Does Not Start
- ▶ Copying/Printing Stops Before It Is Completed
- ▶ Machine Moves But Ink Is Not Ejected
- ▶ Printing Speed Is Not as Fast as Expected
- ▶ Print Head Holder Does Not Move to the Position for Replacing
- ▶ Paper Does Not Feed Properly
- ▶ Paper Does Not Feed from the Paper Source Specified in the Printer Driver
- ▶ Paper Jams
- ▶ Document Jams in the ADF
- ▶ Message Appears on the Computer Screen
- ▶ Cannot Print Properly with Automatic Duplex Printing
- ▶ For Windows Users
- ▶ Error Message Appears on a PictBridge Compliant Device
- ▶ Cannot Print Properly from a Wireless Communication Device
- ▶ Cannot Print Properly from a Photo Index Sheet
- ▶ Cannot Remove a Memory Card
- ▶ Problems with Scanning
- ▶ Software Problems
- ▶ MP Navigator EX Problems
- ▶ Problems with Faxing
- ▶ Problems Receiving Faxes
- ▶ Problems Sending Faxes
- ▶ Telephone Problems
- ▶ FAQs
- ▶ If You Cannot Resolve the Problem
- ▶ Instructions for Use (Printer Driver)
- ▶ General Notes (Scanner Driver)
- ▶ General Notes (Fax Driver)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Troubleshooting

---

### Troubleshooting

This section describes troubleshooting tips for problems you may encounter when using the machine.  
For troubleshooting tips related to the setup, refer to the *Network Setup Troubleshooting*.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > If an Error Occurs

### If an Error Occurs

When an error occurs in printing such as the machine is out of paper or paper is jammed, a troubleshooting message is displayed automatically. Take the appropriate action described in the message. The message may vary depending on the version of your operating system.

#### Windows




#### Macintosh

- In Mac OS X v.10.5.x:



- In Mac OS X v.10.4.x or Mac OS X v.10.3.9:

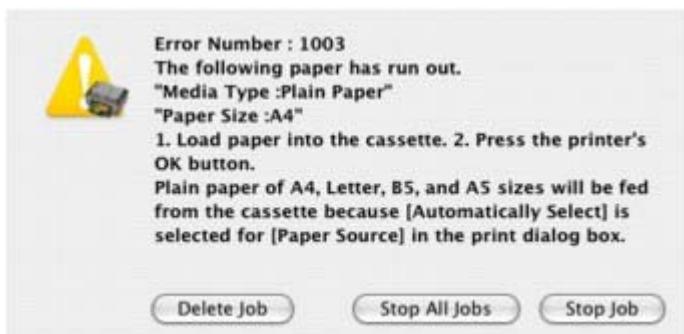

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > The Machine Cannot Be Powered On

### The Machine Cannot Be Powered On

- **Check 1: Press the ON button.**
- **Check 2: Make sure that the power plug is securely plugged into the Power Cord Connector of the machine, then turn it back on.**
- **Check 3: Unplug the machine from the power supply, then plug the machine back in and turn the machine back on after leaving it for at least 5 minutes.**

If the problem is not resolved, contact the service center.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > An Error Message Is Displayed on the LCD

# An Error Message Is Displayed on the LCD

If an error message is displayed on the LCD, take the corresponding action described below.

Message	Action
The ink may have run out. Replacing the ink tank is recommended. U041	If the lamp on the ink tank is flashing, ink may have run out. Replacing the ink tank is recommended. If printing is in progress and you want to continue printing, press the <b>OK</b> button with the ink tank installed. Then printing can continue. Replacing the ink tank is recommended after the printing. The machine may be damaged if printing is continued under the ink out condition. ➡ <a href="#">Routine Maintenance</a>
 <b>Note</b>	<ul style="list-style-type: none"><li>■ If multiple ink lamps are flashing red, see <a href="#">Routine Maintenance</a> and check the status of each ink tank.</li><li>■ Since printing in this condition may cause the contents of the fax to be lost, the machine stores received faxes in memory without printing until the ink tank is replaced. Print the fax stored in memory manually after replacing the ink tank. You can set the machine to print received faxes forcibly without storing them in memory, but a part of contents or all contents of the fax may not be printed.</li></ul>
Print head is not installed. Install the print head. U051 The type of print head is incorrect. Install the correct print head. U052	Follow the directions given in your setup sheet to install the Print Head. If the Print Head is already installed, remove the Print Head once and then reinstall it. If the error is not resolved, the Print Head may be damaged. Contact the service center.
Some ink tanks are not installed in place. U072 More than one ink tank of the following color is installed. U071	<ul style="list-style-type: none"><li>● Some ink tanks are not installed in the correct position. (The lamp on the ink tank flashes.)</li><li>● More than one ink tanks of the same color are installed. (The lamp on the ink tank flashes.)</li></ul> <p>Confirm that the ink tanks are installed in the appropriate positions. ➡ <a href="#">Routine Maintenance</a></p>
The remaining level of the ink cannot be correctly detected. U130	The remaining ink level cannot be correctly detected. (The lamp on the ink tank flashes.) Replace the ink tank and close the Scanning Unit (Cover). Printing with an ink tank that was once empty may damage the machine. If you want to continue printing in this condition, you need to release the function for detecting the remaining ink level. Press and hold the <b>Stop</b> button for at least 5 seconds, and then release it. With this operation, releasing the function for detecting the remaining ink level is memorized. Please be advised that Canon shall not be liable for any machine malfunction or damage caused by refilled ink tanks. ➡ <a href="#">Routine Maintenance</a>
 <b>Note</b>	<ul style="list-style-type: none"><li>■ If the function for detecting the remaining ink level is disabled, the ink tank in gray is displayed on the LCD when checking the current ink level. ➡ <a href="#">Routine Maintenance</a></li><li>■ Since printing in this condition may cause the contents of the fax to be lost, the machine stores received faxes in memory without printing until the ink tank is replaced.</li></ul>

	<p>Print the fax stored in memory manually after replacing the ink tank. You can set the machine to print received faxes forcibly without storing them in memory, but a part of contents or all contents of the fax may not be printed.</p>
<p>The following ink tank cannot be recognized. U043 U140 U150</p>	<ul style="list-style-type: none"><li>● The ink tank is not installed. Install the ink tank. ➡ <a href="#">Routine Maintenance</a></li><li>● The ink tank is not compatible with this machine. (The lamp on the ink tank is off.) Install an appropriate ink tank. ➡ <a href="#">Routine Maintenance</a></li><li>● An ink tank error has occurred. (The lamp on the ink tank is off.) Replace the ink tank. ➡ <a href="#">Routine Maintenance</a></li></ul>
<p>The ink has run out. Replace the ink tank. U163</p>	<p>Ink has run out. (The lamp on the ink tank flashes.) Replace the ink tank and close the Scanning Unit (Cover). Printing under the current condition may damage the machine. If you want to continue printing in this condition, you need to release the function for detecting the remaining ink level. Press and hold the <b>Stop</b> button for at least 5 seconds, and then release it. With this operation, releasing the function for detecting the remaining ink level is memorized. Please be advised that Canon shall not be liable for any malfunction or trouble which may be caused by continuation of printing under the ink out condition. ➡ <a href="#">Routine Maintenance</a></p>
	<p> <b>Note</b></p> <ul style="list-style-type: none"><li>■ If the function for detecting the remaining ink level is disabled, the ink tank in gray is displayed on the LCD when checking the current ink level. ➡ <a href="#">Routine Maintenance</a></li><li>■ Since printing in this condition may cause the contents of the fax to be lost, the machine stores received faxes in memory without printing until the ink tank is replaced. Print the fax stored in memory manually after replacing the ink tank. You can set the machine to print received faxes forcibly without storing them in memory, but a part of contents or all contents of the fax may not be printed.</li></ul>
<p>There is no photo data.</p>	<ul style="list-style-type: none"><li>● There is no image data saved on the memory card that can be read by this machine.</li><li>● The machine may not recognize the file if the file name or the folder path contains certain characters. Use only alphanumeric characters.</li><li>● Photo data edited or processed on a computer must be printed from the computer.</li></ul>
<p>The ink absorber is almost full. Press <b>OK</b> to continue printing. Contact the service center.</p>	<p>The ink absorber is almost full. Press the machine's <b>OK</b> button to continue printing. Contact the service center.</p>
<p>Printer error has occurred. Contact the service center.</p>	<p>The machine error has occurred. Contact the service center.</p>
<p>Timeout error has occurred. Press OK.</p>	<p>Some errors occurred while copying and a certain time passed. Press the <b>OK</b> button to dismiss the error, and try to copy again.</p>
<p>Incompatible device detected. Remove the device.</p>	<ul style="list-style-type: none"><li>● Check the device connected to the Direct Print Port. Printing photos directly is possible with a PictBridge compliant device or the optional Bluetooth Unit BU-30.</li><li>● A communication time out occurs if an operation takes too long or if it takes too much time to send data. This</li></ul>

	<p>may cancel printing. In such cases, disconnect and reconnect the USB cable.</p> <p>When printing from a PictBridge compliant device, depending on the model or brand of your device, you may have to select a PictBridge compliant print mode on the device before connecting it to the machine. You may also have to turn on your device or select Play mode manually after connecting the device to the machine. Perform necessary operations before connecting your device referring to its instruction manual.</p> <p>If the error is still not resolved, check if you can print another photograph.</p>
An unsupported USB hub is connected. Remove the hub.	If a PictBridge compliant device is connected via a USB hub, remove the hub and connect it directly to the machine.
B200 Printer error has occurred. Unplug the power cord and contact the service center.	Turn off the machine, and unplug the power cord of the machine from the power supply. Contact the service center.
 <b>Important</b>	<ul style="list-style-type: none"><li>■ If you disconnect the power plug, all the documents stored in memory are deleted.</li></ul>
*****  Printer error has occurred. Turn off power then back on again. If problem persists, see the manual.	"*****" is displayed in the alphanumeric character and depends on the error occurred. <ul style="list-style-type: none"><li>● 5100/5110 is displayed: Cancel printing, and turn off the machine. Then clear the paper jam or foreign object that is preventing the Print Head Holder from moving, and turn on the machine again.</li></ul>  <b>Important</b> <ul style="list-style-type: none"><li>■ Be careful not to touch the components inside the machine. The machine may not print out properly if you touch it.</li><li>■ If the problem is not resolved, contact the service center.</li></ul> <ul style="list-style-type: none"><li>● In other cases: Turn off the machine, and unplug the power cord of the machine from the power supply. Plug the machine back in and turn the machine back on. If the problem is not resolved, contact the service center.</li></ul>
Document in ADF. Redo operation after checking document in ADF and pressing OK.	The document is jammed in the ADF. Remove the document page jammed in the ADF, then press the <b>OK</b> button. Operate again after resolving the error. ⇒ <a href="#">Document Jams in the ADF</a>
Document size is too long. Redo operation after checking document on ADF and pressing OK.	The document is too long or is jammed in the ADF. Remove the document page jammed in the ADF, then press the <b>OK</b> button. After resolving the error, make sure that the document you are loading meets the machine's requirements before redoing the operation. ⇒ <a href="#">Document Jams in the ADF</a>
The card is currently writable from PC. Set to [Not writable from PC].	The Card Slot is set to Writable from USB PC or Writable from LAN PC. You cannot print from the memory card or save the scanned data to the memory card when the Card Slot is set to Writable from USB PC or Writable from LAN PC. After writing on the memory card, set to Not writable from PC again.

## Advanced Guide

Advanced Guide > Troubleshooting > A Message for Faxing Is Displayed on the LCD

### A Message for Faxing Is Displayed on the LCD

Message	Action
Auto redial	<p>The machine is waiting to redial the recipient's number because the line was busy or the recipient did not answer when you tried to send a document. Wait for the machine to automatically redial the number. If you want to cancel automatic redialing, wait until the machine starts dialing the number, then press the <b>Stop</b> button. You can also delete the document from memory to cancel automatic redialing.</p> <p>➡ <a href="#">Resending Faxes (Redialing a Busy Number)</a></p>
This group dial cannot be used. Coded dial ##	<p>* "##" represents a two-digit number.</p> <p>You selected a coded speed dial code to which a group is registered with the <b>Hook</b> button pressed.</p> <p>A coded speed dial code to which a group is registered cannot be used in this way.</p>
This group dial cannot be used. One-touch ##	<p>* "##" represents a two-digit number.</p> <p>You pressed a One-touch Speed Dial button to which a group is registered with the <b>Hook</b> button pressed.</p> <p>A One-touch Speed Dial button to which a group is registered cannot be used in this way.</p>
Hang up the phone.	<p>The handset is not placed in the handset cradle correctly.</p> <p>Replace the handset correctly.</p>
Try again in black & white.	<p>The recipient's fax machine is not color-compatible.</p> <p>Press the <b>Black</b> button to resend the fax. Alternatively, you can set Color transmission to Send in black &amp; white.</p> <p>➡ <a href="#">Color transmission</a></p>
Failed to connect.	<p>The telephone line cable with a modular plug may not be plugged in properly.</p> <p>Make sure that the cable is plugged in properly, and resend the fax after a while. If you still cannot send the fax, set Dial tone detect to OFF.</p> <p>➡ <a href="#">Dial tone detect</a></p>
Received in memory.	<p>If the machine receives a fax under one of the following conditions, the machine will not be able to print the received fax and will store it in its memory. When the problem is resolved as described, the fax stored in memory is printed automatically.</p> <ul style="list-style-type: none"><li>• Ink has run out: Check the ink level and take the appropriate action.</li></ul> <p>➡ <a href="#">Routine Maintenance</a></p> <p> <b>Note</b></p> <ul style="list-style-type: none"><li>■ You can set the machine to forcibly print a received fax even if the ink has run out. However, part or all of the fax may not be printed since ink has run out. Also, the contents of the fax will not be stored in memory. In addition, if the ink has already run out, we recommend that OFF be selected for Auto print in User settings to store the received fax in memory. When you print the fax stored in memory manually, check the ink level and take the appropriate action.</li></ul> <p>➡ <a href="#">Document Stored in Memory</a></p> <ul style="list-style-type: none"><li>• Paper has run out: Load the paper and press the <b>OK</b> button.</li></ul>

- A different size of paper from that specified by Page size is loaded:  
Load the same size of paper as that specified by Page size, then press the **OK** button.
- Page size is set to other than A4, 8.5"x11"(LTR), or 8.5"x14"(Legal) (MX330 series):  
Set Page size to A4, 8.5"x11"(LTR), or 8.5"x14"(Legal).
- Media type is set to other than Plain paper (MX330 series):  
Set Media type to Plain paper.
- You pressed the **Stop** button to cancel printing of a fax:  
Press the **FAX** button.

### Note

- To print the received faxes automatically, select ON for Auto print in User settings. For details, see [Auto print](#).
- When OFF is selected for Auto print in User settings, print the faxes stored in memory from the Memory reference screen. For details, see [Printing a Document in Memory](#).
- If you did not print the fax stored in memory (e.g., if you did not resolve the problem by pressing the **Stop** button), you can delete or print the fax stored in memory later. For details, see [Document Stored in Memory](#).

Busy/no signal

- The telephone number you dialed is busy.  
Try dialing again after waiting for a moment.  
 [Resending Faxes \(Redialing a Busy Number\)](#)
- The fax number dialed is incorrect.  
Check the fax number and dial again.
- The recipient's fax machine did not respond (after all automatic redialing attempts).  
Contact the recipient and have the recipient check the fax machine. For an overseas call, add pauses to the registered number.
- The recipient is not using a G3 machine.  
The machine cannot send or receive documents to/from a fax machine that is incompatible with the G3 standard. Contact the recipient and ask the recipient to check whether the fax machine is G3 compatible.
- The touch tone/rotary pulse setting on the machine is incorrect.  
Set the machine to match the telephone line you are using.  
 [Confirming the Telephone Line Connection](#)

Memory is full.

- The machine's memory is full because it has sent/received too many documents, or a detailed document.
- When sending a fax, divide it to resend.
  - When receiving a fax, print or delete documents in the machine's memory, then ask the sender to resend the fax.  
 [Document Stored in Memory](#)

Check the page size and press OK.

- Paper other than A4, Letter-, or Legal-sized\* paper is loaded.
- When feeding from the Rear Tray, load A4, Letter, or Legal-sized paper.
  - MX860 series  
When feeding from the Cassette, load A4 or Letter-sized paper.

\* Legal may not be available depending on the country or region of purchase.

Change the paper.

- The page size setting is set to a size other than A4, Letter-, or Legal-size. Set Page size to A4, 8.5"x11"(LTR), or 8.5"x14"(Legal) and Media type to Plain paper to print received faxes.

\* Legal may not be available depending on the country or region of purchase.

Fax info does not match.

Transmission has been canceled because the machine could not detect the recipient's fax machine information or the information did not match the dialed number. This message is displayed when Check RX fax info is set to ON. For details, see [Sending Faxes after Checking Information \(Checking the Recipient's Information\)](#).

Reception rejected.

Reception has been rejected because the fax matches the fax rejection condition specified by Fax reception reject. For details, see [Rejecting Fax Reception](#).

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > LCD Cannot Be Seen At All

### LCD Cannot Be Seen At All

- **If all the lamps on the Operation Panel are off**

The machine is not powered on. Connect the power cord and press the **ON** button.

- **If one of the mode buttons (e.g., the COPY button) is lit**

The LCD may be in the screen-saver mode. On the Operation Panel, press a button other than the **ON** button.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > An Unintended Language Is Displayed on the LCD

# An Unintended Language Is Displayed on the LCD

Select the language you want to be displayed according to the following procedure.

1. Press the **COPY** button and wait for about 5 seconds, then press **Menu** button.



2. Use the **◀▶** button to select Settings, then press the **OK** button.



3. Use the **◀▶** button to select Device settings, then press the **OK** button.

4. Press the **▼** button 6 times, then press the **OK** button.

If the Bluetooth unit is connected to the machine, press the **▼** button 8 times, and then press the **OK** button.

5. Use the **▲▼** button to select the language you want to be displayed, then press the **OK** button.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Cannot Install the MP Drivers

### Cannot Install the MP Drivers

#### Important

- If you cannot install the MP Drivers when you use the machine over LAN, refer to the setup manual.

- If the installation does not start even after the **Setup CD-ROM** is inserted into your computer's disc drive:



Start the installation following the procedure below.

#### 1. Click Start then Computer.

In Windows XP, click Start then My Computer.



In Windows 2000, double-click the My Computer icon on the desktop.

#### 2. Double-click the CD-ROM icon on the displayed window.

If the contents of the CD-ROM are displayed, double-click MSETUP4.EXE.




Double-click the CD-ROM icon on your desktop to start installation.

#### Note

- If the CD-ROM icon is not displayed, try the following:
  - Remove the CD-ROM from your computer, then insert it again.
  - Restart your computer.
- If the icon is still not displayed, try different discs and see if they are displayed. If other discs are displayed, there is a problem with the Setup CD-ROM. In this case, contact the service center.

- If you are unable to proceed beyond the Printer Connection screen:

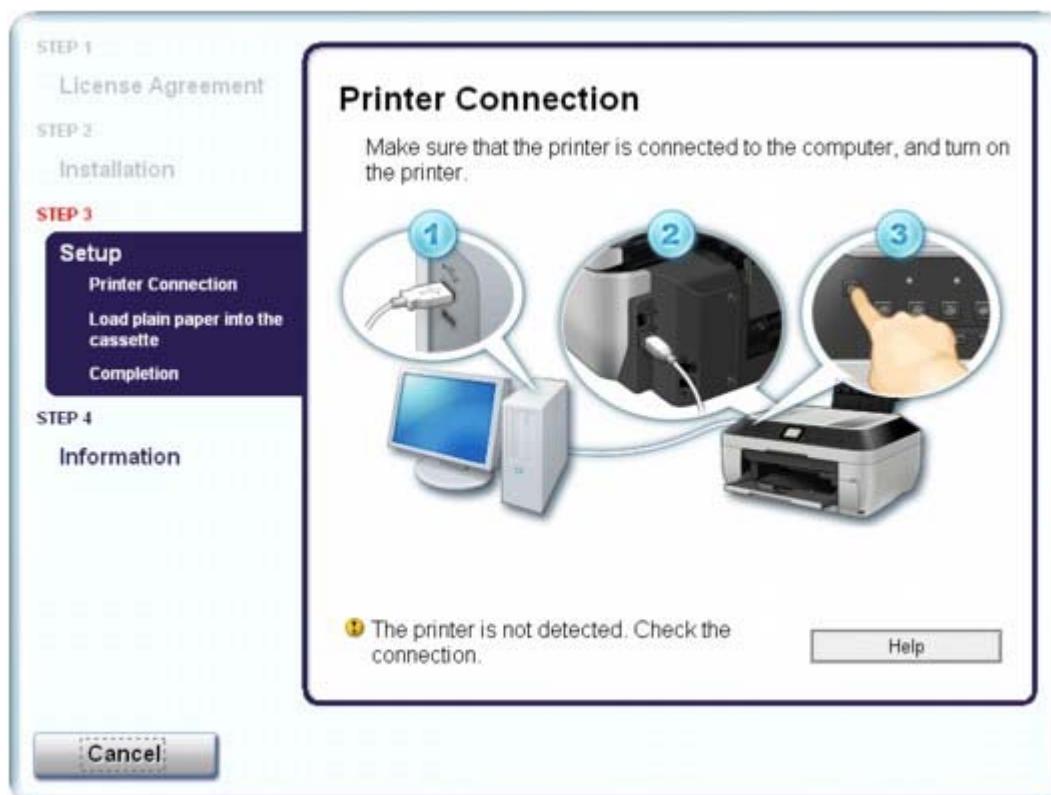

If you are unable to proceed beyond the Printer Connection screen, make sure that the USB cable is securely plugged into the USB port of the machine and is connected to the computer, and then follow the procedure below to reinstall the MP Drivers.

### Note

- In Windows Vista, The printer is not detected. Check the connection. may be displayed depending on the computer you use. In this case, wait for a while. If you still cannot proceed to the next step, follow the procedure below to reinstall the MP Drivers.

1. Click Cancel on the Printer Connection screen.
2. Click Start Over on the Installation Failure screen.
3. Click Back on the screen that appears next.
4. Click Exit on the PIXMA XXX screen, then remove the CD-ROM.
5. Turn the machine off.
6. Restart the computer.
7. Make sure that you have no application software running.
8. Follow the procedure described in your setup manual to reinstall the MP Drivers.

- **In other cases:**

Follow the procedure described in your setup manual to reinstall the MP Drivers.

If the MP Drivers were not installed correctly, uninstall the MP Drivers, restart your computer, and then reinstall the MP Drivers.

 **Uninstalling the MP Drivers**

If you reinstall the MP Drivers, select Custom Install on the *Setup CD-ROM*.



### Note

- If the installer was forced to be terminated due to a Windows error, the system may be in an unstable condition and you may not be able to install the drivers. Restart your computer before reinstalling.

## Advanced Guide

Advanced Guide > Troubleshooting > Cannot Connect to Computer with a USB Cable Properly

# Cannot Connect to Computer with a USB Cable Properly

## Printing or Scanning Speed Is Slow/Hi-Speed USB Connection Does Not Work/

### "This device can perform faster" Message Is Displayed

If your system environment is not fully compatible with Hi-Speed USB, the machine will operate at a lower speed provided under USB 1.1. In this case, the machine operates properly but printing speed may slow down due to communication speed.

- **Check: Check the following to make sure that your system environment supports Hi-Speed USB connection.**

- Does the USB port on your computer support Hi-Speed USB connection?
- Do the USB cable, and the USB hub if you are using one, support Hi-Speed USB connection?  
Be sure to use a certified Hi-Speed USB cable. We recommend that the cable is no longer than around 10 feet / 3 meters.
- Does the operating system of your computer support Hi-Speed USB connection?  
Obtain and install the latest update for your computer.
- Does the Hi-Speed USB driver operate properly?  
Obtain the latest version of the Hi-Speed USB driver compatible with your hardware and reinstall it on your computer.



### Important

- For details on Hi-Speed USB of your system environment, contact the manufacturer of your computer, USB cable, or USB hub.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Print Results Not Satisfactory

### Print Results Not Satisfactory

If the print result is not satisfactory due to white streaks, misaligned lines, or uneven colors, confirm the paper and print quality settings first.

- Check 1: Do the page size and media type settings match the size and type of the loaded paper?**

When these settings are incorrect, you cannot obtain a proper print result.

If you are printing a photograph or an illustration, incorrect paper type settings may reduce the quality of the printout color.

Also, if you print with an incorrect paper type setting, the printed surface may be scratched.

In borderless printing, uneven coloring may occur depending on the combination of the paper type setting and the loaded paper.

The method of confirming the paper and print quality settings differs depending on what you do with your machine.

To copy by operating the machine	Confirm by using the Operation Panel on the machine. ➡ <a href="#">Setting Items</a>
To print from your memory card by operating the machine	Confirm by using the Operation Panel on the machine. ➡ <a href="#">Setting Items</a>
To print from a PictBridge compliant device	Confirm by using your PictBridge compliant device. ➡ <a href="#">Printing Photographs Directly from a Compliant Device</a> Confirm by using the Operation Panel on the machine. ➡ <a href="#">Changing the Machine Settings on the LCD</a>
To print from a wireless communication device	Confirm by using the Operation Panel on the machine. ➡ <a href="#">Changing the Machine Settings on the LCD</a>
To print from a computer	Confirm by using the printer driver. ➡ <a href="#">Printing with Easy Setup</a>

- Check 2: Make sure that the appropriate print quality is selected according to the media type and printing data referring to the table in Check 1.**

Select a print quality option suitable for the paper and image for printing. If you notice blurs or uneven colors, increase the print quality setting and try printing again.

#### Note

- When printing from a PictBridge compliant device, set the print quality setting by using the Operation Panel on the machine.  
You cannot make this setting from a PictBridge compliant device.
- You cannot change the print quality setting when printing from a wireless communication device.

- Check 3: If the problem is not resolved, there may be other causes.**

See also the sections below:

- ➡ [Cannot Print to End of Job](#)
- ➡ [Part of the Page Is Not Printed](#)
- ➡ [No Printing Results/Printing Is Blurred/Colors Are Wrong/White Streaks](#)
- ➡ [Lines Are Misaligned](#)

- ▶ Printed Paper Curls or Has Ink Blots
- ▶ Paper Is Smudged/Printed Surface Is Scratched
- ▶ Back of the Paper Is Smudged
- ▶ Vertical Lines Are Printed on the Sides of the Printout
- ▶ Colors Are Uneven or Streaked

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Print Results Not Satisfactory > Cannot Print to End of Job

### Cannot Print to End of Job

- **Check 1: Is the size of the print data extremely large?**



Click Print Options on the Page Setup sheet. Then, select the Prevent loss of print data check box in the displayed dialog.

- **Check 2: Is the space of your computer's hard disk sufficient?**

Delete unnecessary files to free disk space.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Print Results Not Satisfactory > Part of the Page Is Not Printed

### Part of the Page Is Not Printed

- **Check: When performing automatic duplex printing, the reason below is possible.**

When performing automatic duplex printing, the printable area at the top of the page will be 0.08 inches / 2 mm narrower than the usual.

For this reason, the bottom of the page may not be printed. To prevent this, select Use reduced printing from the printer driver.

#### Important

- Reduced printing may affect the layout depending on your document.

#### Windows

1. Open the printer properties dialog box.

➡ [Opening the Printer Properties Dialog Box \(Windows\)](#)

 Click Here: Printer Driver

\* Before clicking here to open the printer properties dialog box, quit the running application software.

2. Click Print Area Setup in the Page Setup sheet and select Use reduced printing.

#### Macintosh

1. Open the Print dialog box.

➡ [Opening the Page Setup and Print Dialog Box \(Macintosh\)](#)

2. Select Duplex Printing & Margin in the pop-up menu.

3. Select Automatic Duplex Printing.

4. Click Use reduced printing in Print Area.

[Page top ↑](#)

## Advanced Guide


Advanced Guide > Troubleshooting > Print Results Not Satisfactory > No Printing Results/Printing Is Blurred/Colors Are Wrong/White Streaks

# No Printing Results/Printing Is Blurred/Colors Are Wrong/White Streaks



## ► No Printing Results




## ► Printing Is Blurred

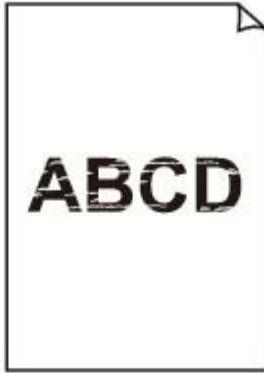

## ► Colors Are Wrong

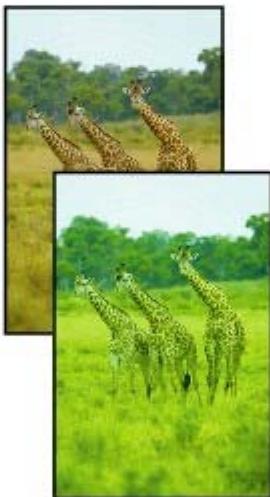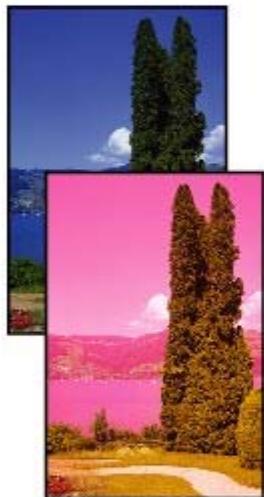

## ► White Streaks

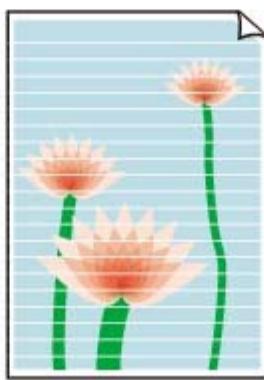

- Check 1: Did you confirm the paper and print quality settings?

► Print Results Not Satisfactory

- Check 2: Check the status of ink tanks. Replace the ink tank if the ink


has run out.

▶ [Routine Maintenance](#)

- **Check 3: Is the orange tape or protective film remaining?**

Make sure that all of the protective film is peeled off and the air hole is exposed, as illustrated in (A).

If the orange tape is left as in (B), pull the orange tape and remove it.

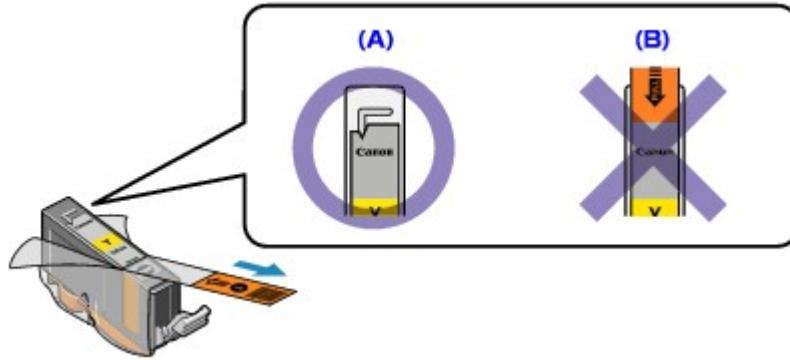

- **Check 4: Print the Nozzle Check Pattern and perform any necessary maintenance operations such as Print Head Cleaning.**

Print the Nozzle Check Pattern to determine whether the ink ejects properly from the print head nozzles.

Refer to [Routine Maintenance](#) for the Nozzle Check Pattern printing, Print Head Cleaning, and Print Head Deep Cleaning.

- If the Nozzle Check Pattern is not printed correctly:  
Check to see if a particular color's ink tank is not empty.  
If the Nozzle Check Pattern is not printed correctly though ink is sufficient, perform the Print Head Cleaning and try printing the Nozzle Check Pattern again.
- If the problem is not resolved after performing the Print Head Cleaning twice:  
Perform the Print Head Deep Cleaning.  
If the problem is not resolved after performing the Print Head Deep Cleaning, turn off the machine and perform another Print Head Deep Cleaning after 24 hours. When you turn the machine off, do not unplug it from the power supply.
- If the problem is not resolved after performing the Print Head Deep Cleaning twice:  
If Print Head Deep Cleaning does not resolve the problem, the Print Head may be damaged.  
Contact the service center.

- **Check 5: When using paper with one printable surface, make sure that the paper is loaded with the printable side facing up.**

Printing on the wrong side of such paper may cause unclear prints or prints with reduced quality.

Refer to the instruction manual supplied with the paper for detailed information on the printable side.

- **Check 6: Is the Platen Glass dirty?**

Clean the Platen Glass.

▶ [Cleaning the Platen Glass and Document Cover](#)

- **When copying, see also the sections below:**

- **Check 7: Check that the original is loaded correctly on the Platen Glass or in the ADF.**

▶ [Loading Paper / Originals](#)

- **Check 8: Is the original document is loaded with the proper side facing up?**

When loading the original on the Platen Glass, the side to be copied should be face down. When loading the original in the ADF, the side to be copied should be face up.

- **Check 9: Did you copy a printout done by this machine?**

Print from the memory card or from the digital camera directly, or reprint from the computer.

If you copy a printout done by this machine, print quality may be reduced.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Print Results Not Satisfactory > Lines Are Misaligned

### Lines Are Misaligned



- **Check 1: Did you confirm the paper and print quality settings?**

▶ [Print Results Not Satisfactory](#)

- **Check 2: Perform Print Head Alignment.**

If printed lines are misaligned or print results are otherwise unsatisfactory, adjust the print head position.

▶ [Routine Maintenance](#)



- **Check 3: Is the size of the print data extremely large?**

Click Print Options on the Page Setup sheet. Then, select the Prevent loss of print data check box in the displayed dialog.

- **Check 4: Is the Page Layout Printing performed or the Binding margin function used?**

When the Page Layout Printing or Binding margin function is being used, thin lines may not be printed. Try thickening the lines in the document.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Print Results Not Satisfactory > Printed Paper Curls or Has Ink Blots

### Printed Paper Curls or Has Ink Blots

#### ▶ Printed Paper Curls



#### ▶ Printed Paper Has Ink Blots



- **Check 1: Did you confirm the paper and print quality settings?**

▶ [Print Results Not Satisfactory](#)

- **Check 2: If the intensity is set high, reduce the Intensity setting in the printer driver and try printing again.**

If you are using plain paper to print images with high intensity, the paper may absorb too much ink and become wavy, causing paper abrasion.

- When printing from your computer

Confirm the intensity using the printer driver.

▶ [Adjusting Intensity](#)

- When copying

▶ [Setting Items](#)

- **Check 3: Is Photo Paper used for printing photographs?**

When printing data with high color saturation such as photographs or images in deep color, we recommend using Photo Paper Plus Glossy II or other Canon speciality paper.

▶ [Loading Paper / Originals](#)


[Page top ↑](#)

## Advanced Guide


Advanced Guide > Troubleshooting > Print Results Not Satisfactory > Paper Is Smudged/Printed Surface Is Scratched

# Paper Is Smudged/Printed Surface Is Scratched

## ■ Paper Is Smudged

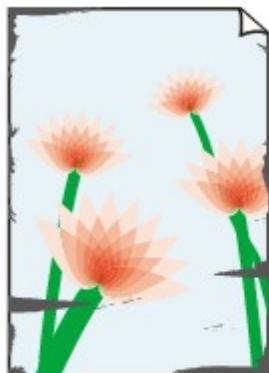

**The Edges of Paper Are Smudged**

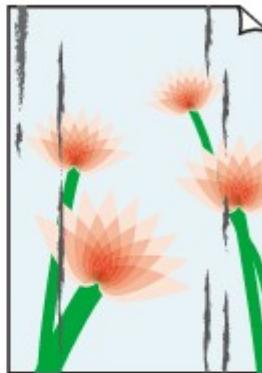

**Printed Surface Is Smudged**

## ■ Printed Surface Is Scratched

### • Check 1: Did you confirm the paper and print quality settings?

➡ [Print Results Not Satisfactory](#)

### • Check 2: Is the appropriate type of paper used? Check the followings:

- Check to see if the paper you are printing on is suitable for your printing purpose.  
➡ [Loading Paper / Originals](#)
- When performing Borderless Printing, make sure that the paper you are using is suitable for Borderless Printing.  
If the paper you are using is not suitable for Borderless Printing, the print quality may be reduced at the top and bottom edges of the paper.  
➡ [Printing Area](#)

### • Check 3: Load the paper after correcting its curl.

#### • For Plain Paper


Turn the paper over and reload it to print on the other side.

Leaving the paper loaded on the Rear Tray for a long time may cause the paper to curl. In this case, load the paper with the other side facing up. It may resolve the problem.


We recommend putting unused paper back into the package and keeping it on a level surface.

#### • For Other Paper

- With the printing side (A) facing up, cover the paper with a fresh sheet of plain paper to avoid staining or scratching the surface.
- Roll up the paper in the opposite direction to the paper curl as shown below.

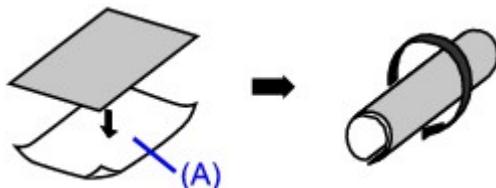

- Check to see that the paper curl is within approximately 0.08 to 0.2 inches / 2 to 5 mm (B) in height.

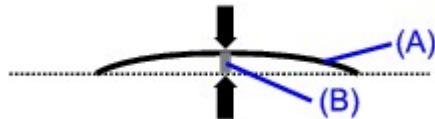


We recommend printing curl-corrected paper one sheet at a time.

### Note


- **For Paper That Curls Inward When It Is Printed**

Depending on the media type, the paper may be smudged or may not be fed properly even if it is not curled inward. In such cases, follow the procedure described below to curl the paper outward before printing. This may improve the print result.

1. With the printing side (A) facing up, cover the paper with a fresh sheet of plain paper to avoid staining or scratching the surface.
2. Roll up the paper as shown below.

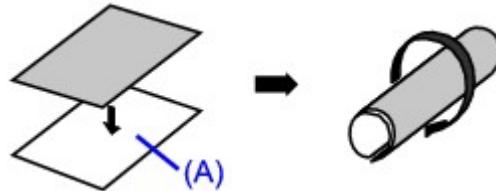

3. Check to see that the paper curl is within approximately 0.08 to 0.2 inches / 2 to 5 mm (B) in height.

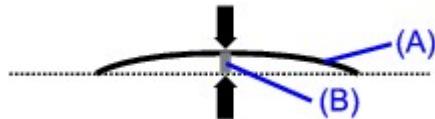

We recommend printing paper that has been curled outward one sheet at a time.

- **Check 4: If you are printing on thick paper, select the Prevent paper abrasion setting.**

#### **abrasion setting.**

Selecting the Prevent paper abrasion setting will widen the clearance between the Print Head and the loaded paper. If you notice abrasion even with the media type set correctly to match the loaded paper, set the machine to prevent paper abrasion by using the Operation Panel or the printer driver.

Print speed is reduced if you are selecting the Prevent paper abrasion setting.

\* Deactivate the Prevent paper abrasion setting once printing is complete. If not, this setting remains enabled for all subsequent print jobs.

- **To set by using the Operation Panel**

Press the **Menu** button, select Settings, Device settings, and Print settings in this order, and then set Prevent paper abrasion to ON.

➡ [Changing the Machine Settings on the LCD](#)

- **To set by using the printer driver**

#### Windows

Open the printer properties dialog box, and in Custom Settings in the Maintenance sheet, select the Prevent paper abrasion check box, and then click Send.

To open the printer properties dialog box, see [Opening the Printer Properties Dialog Box \(Windows\)](#).

#### Macintosh

In the Canon IJ Printer Utility, select Custom Settings in the pop-up menu, select the Prevent paper abrasion check box, and then click Send.

To open the Canon IJ Printer Utility, see [Opening the Canon IJ Printer Utility \(Macintosh\)](#).

- **Check 5: If the intensity is set high, reduce the Intensity setting in the printer driver and try printing again.**

If you are using plain paper to print images with high intensity, the paper may absorb too much ink and become wavy, causing paper abrasion.

- When printing from your computer

Reduce the Intensity setting in the printer driver and try printing again.



**1. Open the printer properties dialog box.**

➔ [Opening the Printer Properties Dialog Box \(Windows\)](#)



Click Here: [Printer Driver](#)

\* Before clicking here to open the printer properties dialog box, quit the running application software.

**2. On the Main sheet, select Manual for Color/Intensity, and then click Set.**

**3. Drag the Intensity slide bar on the Color Adjustment sheet to adjust the intensity.**



**1. Open the Print dialog box.**

➔ [Opening the Page Setup and Print Dialog Box \(Macintosh\)](#)

**2. Select Color Options in the pop-up menu.**

**3. Drag the Intensity slide bar to set the intensity.**

- When copying

➔ [Setting Items](#)

**• Check 6: Is printing performed beyond the recommended printing area?**

If you are printing beyond the recommended printing area of your printing paper, the lower edge of the paper may become stained with ink.

Resize your original document in your application software.

➔ [Printing Area](#)

**• Check 7: Is the Platen Glass dirty?**

Clean the Platen Glass.

➔ [Cleaning the Platen Glass and Document Cover](#)

**• Check 8: Is the Paper Feed Roller dirty?**

Clean the Paper Feed Roller.

➔ [Routine Maintenance](#)



**Note**

- Cleaning the Paper Feed Roller will wear the roller, so perform this procedure only when necessary.

**• Check 9: Is inside of the machine dirty?**

When performing duplex printing, the inside of the machine may become stained with ink, causing the printout to become smudged.

Perform the Bottom Plate Cleaning to clean the inside of the machine.

➔ [Cleaning the Inside of the Machine \(Bottom Plate Cleaning\)](#)



**Note**

- To prevent the inside of the machine from stains, set the paper size correctly.

**• Check 10: Set Ink Drying Wait Time longer.**

Doing so gives the printed surface enough time to dry so that paper smudged and scratched are

prevented.



1. Make sure that the machine is turned on.
2. Open the printer properties dialog box.  
→ [Opening the Printer Properties Dialog Box \(Windows\)](#)
3. Click the Maintenance tab and then Custom Settings.
4. Drag the Ink Drying Wait Time slide bar to set the wait time, and then click Send.
5. Confirm the message and click OK.



1. Make sure that the machine is turned on.
2. Open the Canon IJ Printer Utility.  
→ [Opening the Canon IJ Printer Utility \(Macintosh\)](#)
3. Select Custom Settings in the pop-up menu.
4. Drag the Ink Drying Wait Time slide bar to set the wait time, and then click Send.
5. Confirm the message and click OK.

- **Check 11: Is the paper scratched by other loaded paper?**


Depending on the media type, the paper may be scratched by other loaded paper when feeding from the Rear Tray. In this case, load one sheet at a time.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Print Results Not Satisfactory > Back of the Paper Is Smudged

### Back of the Paper Is Smudged

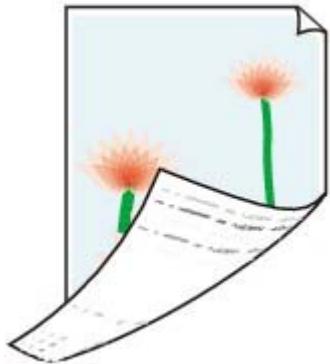

- **Check 1: Did you confirm the paper and print quality settings?**  
➡ [Print Results Not Satisfactory](#)
- **Check 2: Perform the Bottom Plate Cleaning to clean the inside of the machine.**  
➡ [Cleaning the Inside of the Machine \(Bottom Plate Cleaning\)](#)

#### Note


- When performing duplex printing or too much printing, the inside may become stained with ink.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Print Results Not Satisfactory > Vertical Lines Are Printed on the Sides of the Printout

### Vertical Lines Are Printed on the Sides of the Printout

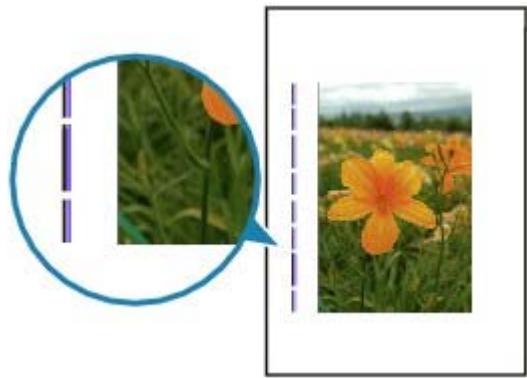

- **Check 1: Did you confirm the paper type and print quality settings?**

▶ [Print Results Not Satisfactory](#)

- **Check 2: Is the size of the loaded paper correct?**

The margin may be smudged if the size of the loaded paper is larger than that specified in the printer driver.

Set the paper size correctly according to the paper you loaded.

▶ [Print Results Not Satisfactory](#)

#### Note

- The direction of the vertical line pattern may vary depending on the image data or the print setting.
- This machine performs automatic cleaning when necessary to keep printouts clean. A small amount of ink is ejected for cleaning.  
Although ink is usually ejected on the ink absorber, it may be ejected on the paper if you load paper larger than that specified with the printer driver.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Print Results Not Satisfactory > Colors Are Uneven or Streaked

### Colors Are Uneven or Streaked

#### Colors Are Uneven



#### Colors Are Streaked



- **Check 1: Did you confirm the paper and print quality settings?**

▶ [Print Results Not Satisfactory](#)

- **Check 2: Print the Nozzle Check Pattern and perform any necessary maintenance operations such as Print Head Cleaning.**

Print the Nozzle Check Pattern to determine whether the ink ejects properly from the print head nozzles.

Refer to [Routine Maintenance](#) for the Nozzle Check Pattern printing, Print Head Cleaning, and Print Head Deep Cleaning.

- If the Nozzle Check Pattern is not printed correctly:  
Check to see if a particular color's ink tank is not empty.  
If the Nozzle Check Pattern is not printed correctly though ink is sufficient, perform the Print Head Cleaning and try printing the Nozzle Check Pattern again.
- If the problem is not resolved after performing the Print Head Cleaning twice:  
Perform the Print Head Deep Cleaning.  
If the problem is not resolved after performing the Print Head Deep Cleaning, turn off the machine and perform another Print Head Deep Cleaning after 24 hours. When you turn the machine off, do not unplug it from the power supply.
- If the problem is not resolved after performing the Print Head Deep Cleaning twice:  
If Print Head Deep Cleaning does not resolve the problem, the Print Head may be damaged.  
Contact the service center.

- **Check 3: Perform Print Head Alignment.**

▶ [Routine Maintenance](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Printing Does Not Start

### Printing Does Not Start

- **Check 1: Make sure that the power plug is securely plugged in, then turn the machine on.**

While the **COPY** lamp is flashing green, the machine is initializing. Wait until the **COPY** lamp stops flashing and remains lit green.

#### Note

- When printing large data such as a photo or graphics, it may take longer to start printing. While the **COPY** button is flashing green, the computer is processing data and sending it to the machine. Wait until printing starts.

- **Check 2: Check the status of ink tanks. Replace the ink tank if ink has run out.**

- **Check 3: Open the Scanning Unit (Cover) and check to see if the ink lamps are flashing red.**

If there is still sufficient ink but its ink lamp is flashing red, an ink tank may not be installed in a right position.

➔ Routine Maintenance

- **Check 4: Open the Scanning Unit (Cover) and make sure that the ink lamps light up red.**

If the ink lamp is not lit, press the  mark on the ink tank until it clicks into place.

- **Check 5: Make sure that the machine is connected to your computer properly.**

When the machine is connected to your computer with a USB cable, make sure that the USB cable is securely plugged in to the machine and the computer, then check the followings:

- If you are using a relay device such as a USB hub, disconnect it, connect the machine directly to the computer, and try printing again. If printing starts normally, there is a problem with the relay device. Consult the reseller of the relay device for details.
- There could also be a problem with the USB cable. Replace the USB cable and try printing again.

When you use the machine over LAN, make sure that the machine is connected to the network with a LAN cable or is set up correctly. For details, refer to your setup manual.

- **Check 6: Restart your computer if you are printing from the computer.**

If there are any unnecessary print jobs, delete them.

➔ Deleting the Undesired Print Job

- **Check 7: Make sure that your machine's name is selected in the Print dialog box.**

The machine will not print properly if you are using a driver for a different printer.

In Windows, make sure that your machine's name is selected in the Print dialog box.

In Macintosh, make sure that your machine's name is selected in Printer in the Print dialog box.

#### Note

- To make the machine the one selected by default, select Set as Default Printer (Windows), Default Printer or Make Default (Macintosh).



## • Check 8: Configure the printer port appropriately.

Make sure that the printer port is configured appropriately in the printer driver.

1. Log on as a user account with administrator privilege.

2. Click Control Panel, then Printer under Hardware and Sound.

In Windows XP, click Control Panel, Printers and Other Hardware, then Printers and Faxes.

In Windows 2000, click Control Panel then Printers.

3. Right-click the Canon XXX Printer icon, then select Properties.

4. Click the Ports tab to confirm the port settings.

Make sure that a port named USBnnn (where "n" is a number) with Canon XXX Printer appearing in the Printer column is selected for Print to the following port(s).  
If the setting is incorrect, reinstall the MP Drivers or change the printer port to the correct one.

### Note

- When the machine is used over LAN, the port name of the machine is displayed as "CNBJNP\_xxxxxxxxxx".  
\* "xxxxxxxx" is the character string generated from the MAC address or a character string specified by the user when setting up the machine.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Copying/Printing Stops Before It Is Completed

# Copying/Printing Stops Before It Is Completed

## • Check 1: Has the machine been printing continuously for a long period?

If the machine has been printing continuously for a long time, the Print Head may overheat. To protect the Print Head, the machine may stop printing at a line break for a period of time and then resume printing.

In this case, interrupt your print session at a convenient time and turn the machine off for at least 15 minutes.

Additionally, if the machine has been printing graphics or photos with intense colors continuously over a period of time, the machine may stop printing to protect the Print Head. In this case, printing will not resume automatically. Turn the machine off for at least 15 minutes.

### Caution

- The Print Head and the surrounding area can become extremely hot inside the machine. Never touch the Print Head or nearby components.

## • Check 2: Is the paper loaded?

Make sure that paper is loaded in the Rear Tray or Cassette.

Confirm the paper source, then reload paper.

## • Check 3: Do the printing documents have lots of photographs or illustrations?

Printing large data such as photos or graphics takes time for the machine and the computer to process, during which the machine may appear to have stopped operating.

In addition, when printing data that uses a large amount of ink continuously on plain paper, the machine may pause temporarily. In either case, wait until the process is complete.

### Note

- If you are printing a document with a large printing area or printing multiple copies of a document, printing may pause to allow the ink to dry.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Machine Moves But Ink Is Not Ejected

# Machine Moves But Ink Is Not Ejected

## • Check 1: Are the Print Head nozzles clogged?

Print the Nozzle Check Pattern to determine whether the ink ejects properly from the print head nozzles.

Refer to [Routine Maintenance](#) for the Nozzle Check Pattern printing, Print Head Cleaning, and Print Head Deep Cleaning.

- If the Nozzle Check Pattern is not printed correctly:  
Check to see if a particular color's ink tank is not empty.  
If the Nozzle Check Pattern is not printed correctly though ink is sufficient, perform the Print Head Cleaning and try printing the Nozzle Check Pattern again.
- If the problem is not resolved after performing the Print Head Cleaning twice:  
Perform the Print Head Deep Cleaning.  
If the problem is not resolved after performing the Print Head Deep Cleaning, turn off the machine and perform another Print Head Deep Cleaning after 24 hours. When you turn the machine off, do not unplug it from the power supply.
- If the problem is not resolved after performing the Print Head Deep Cleaning twice:  
If Print Head Deep Cleaning does not resolve the problem, the Print Head may be damaged.  
Contact the service center.


## • Check 2: Has the ink run out?

See [An Error Message Is Displayed on the LCD](#) to identify the ink error, and then take the appropriate action depending on the error condition.

## • Check 3: Is the orange tape or protective film remaining?

Make sure that all of the protective film is peeled off and the air hole is exposed, as illustrated in (A).

If the orange tape is left as in (B), pull the orange tape and remove it.

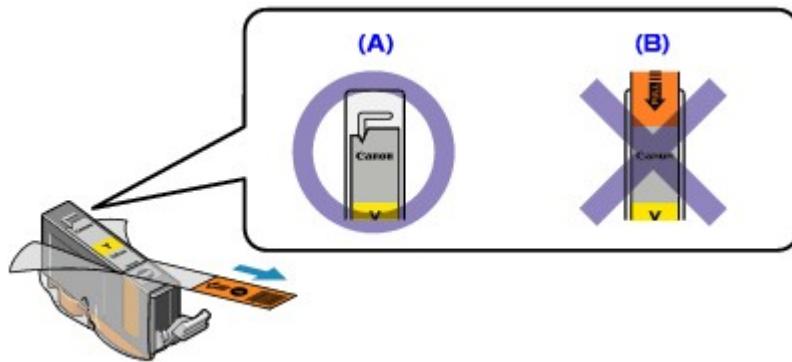

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Printing Speed Is Not as Fast as Expected

# Printing Speed Is Not as Fast as Expected

## • Check 1: Is printing performed in Quiet Mode?

Print speed is reduced if you specified to print in Quiet Mode in the printer driver or Operation Panel.  
For faster printing, do not print in Quiet Mode.

For information on the printer driver settings, refer to [Reducing the Machine Noise](#).

For information to make setting on the Operation Panel, see [Changing the Machine Settings on the LCD](#).

## • Check 2: Is the print quality set too high?

Increase the printing speed setting in the printer driver. Setting to prioritize speed makes printing faster.



### 1. Open the printer properties dialog box.

▶ [Opening the Printer Properties Dialog Box \(Windows\)](#)




Click Here: [Printer Driver](#)

\* Before clicking here to open the printer properties dialog box, quit the running application software.

### 2. On the Main sheet, select Fast for the Print Quality setting.

Depending on the media type, the Fast option may not be available.

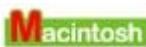

### 1. Open the Print dialog box.

▶ [Opening the Page Setup and Print Dialog Box \(Macintosh\)](#)

### 2. Select Quality & Media in the pop-up menu and then select Fast for the Print Quality setting.

Depending on the media type, the Fast option may not be available.

## Note

- Printing speed may not improve noticeably by following the instructions above, depending on your system environment.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Print Head Holder Does Not Move to the Position for Replacing

# Print Head Holder Does Not Move to the Position for Replacing

## • Check 1: Is the lamp of the Operation Panel off?

Check if the lamp on the Operation Panel is lit.

The Print Head Holder will not move unless the power is on. If all the lamps on the Operation Panel are off, close the Scanning Unit (Cover) and turn the machine on.

While the **COPY** button is flashing green, the machine is initializing. Wait until the **COPY** button stops flashing and remains lit green, and then open the Scanning Unit (Cover) again.

## • Check 2: Is an error message displayed on the LCD?

Close the Scanning Unit (Cover), follow the directions displayed in the error message to resolve the error, and then reopen it. For details on how to resolve the error, see [An Error Message Is Displayed on the LCD](#).

## • Check 3: Has the Scanning Unit (Cover) been left open for 10 minutes or longer?

If the Scanning Unit (Cover) is left open for more than 10 minutes, the Print Head Holder moves to the right to prevent the Print Head from drying out. Close and reopen the Scanning Unit (Cover) to return the Print Head Holder to the center.

## • Check 4: Has the machine been printing continuously for a long period?

Close the Scanning Unit (Cover), wait a while, then reopen it.

If the machine has been printing continuously for a long time, the Print Head Holder may not move to the center since the Print Head may overheat.

### Note

- Opening the Scanning Unit (Cover) while printing moves the Print Head Holder to the right. Close the Scanning Unit (Cover), and reopen it after printing finishes.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Paper Does Not Feed Properly

# Paper Does Not Feed Properly

- **Check 1: Make sure of the following when you load paper.**

- When loading two or more sheets of paper, align the edges of the sheets before loading.
- When loading two or more sheets of paper, make sure that the paper stack does not exceed the paper load limit.  
However, proper feeding of paper may not be possible at this maximum capacity depending on the type of paper or environmental conditions (either very high or low temperature and humidity). In such cases, reduce the sheets of paper you load at a time to less than half of the paper load limit.
- Always load the paper in portrait orientation, either in the Rear Tray or the Cassette, regardless of the printing orientation.
- When you load the paper on the Rear Tray, load the paper with the print side facing UP and slide the Paper Guides to align with the both sides of the paper.
- When loading paper in the Cassette, load the paper with the print side facing DOWN. Align the right edge of the paper stack against the right edge of the Cassette and slide the Paper Guides against the left and bottom edges of the stack.

▶ [Loading Paper / Originals](#)

- **Check 2: Check to see if the paper you are printing on is not too thick or curled.**

▶ [Loading Paper / Originals](#)

- **Check 3: Make sure of the following when you load envelopes.**

When printing on envelopes, refer to [Loading Paper / Originals](#), and prepare the envelopes before printing.

Once you have prepared the envelopes, load them in portrait orientation. If the envelopes are placed in landscape orientation, they will not feed properly.


- **Check 4: Confirm the paper source setting.**

\* If the paper source setting is not changed since you purchased this machine, the paper source for plain paper is the Cassette.

- Setting with the Operation Panel on the machine:  
▶ [Changing the Machine Settings on the LCD](#)
- Setting with the printer driver:  
▶ [Switching the Paper Source to Match the Purpose](#)
- For information on the paper source for plain paper when the Paper Source on the printer driver is set to Automatically Select:  
▶ [Setting the Paper Source for Plain Paper](#)

- **Check 5: Remove the foreign object in the Cassette.**

- **Check 6: Make sure that there are not any foreign objects in the Rear Tray.**

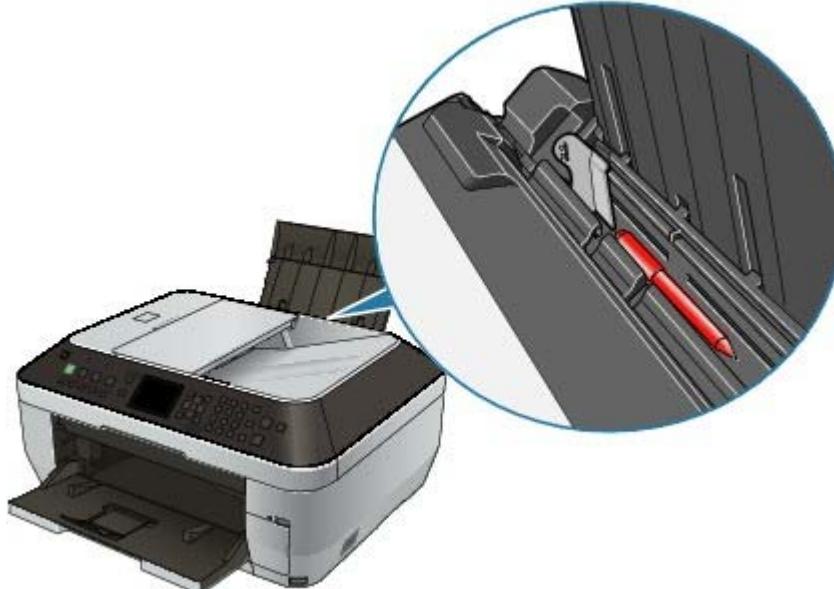

If the paper tears in the Rear Tray, see [Paper Jams](#) to remove it.

If there are any foreign objects in the Rear Tray, be sure to turn off the machine, unplug it from the power supply, then remove the foreign object.



- **Check 7: Clean the Paper Feed Roller.**

➡ [Routine Maintenance](#)



**Note**

- Cleaning the Paper Feed Roller will wear the roller, so perform this procedure only when necessary.

- **Check 8: If two or more sheets of paper feed from the Cassette at once, clean the inside of the Cassette.**

For information on cleaning the inside of the Cassette, refer to [Routine Maintenance](#).

- **Check 9: Is the Rear Cover closed completely?**

Paper may be jammed if the Rear Cover is not closed completely. Push the Rear Cover until it is closed completely.

Refer to [Overview of the Machine](#) for the position of the Rear Cover.

## Advanced Guide

Advanced Guide > Troubleshooting > Paper Does Not Feed from the Paper Source Specified in the Printer Driver

# Paper Does Not Feed from the Paper Source Specified in the Printer Driver



- **Check: Is the paper source setting inconsistent between the application program and the printer driver?**

Change the application software setting corresponding to the printer driver setting, or click the Print Options on the Page Setup sheet in the printer driver and select Disable the paper source setting of the application software on the Print Options screen.

When the paper source setting is inconsistent between an application program and the printer driver, the application software setting takes precedence.

▶ [Setting the Paper Source for Plain Paper](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Paper Jams

### Paper Jams

#### Important

- While the machine is receiving a fax (in memory), you cannot turn off the machine. Turn it off after receiving the fax. Do not disconnect the power plug while the machine is receiving a fax. If you disconnect the power plug, all the documents stored in memory are deleted.

#### Note

- If you need to turn off the machine to remove jammed paper during printing, press the **Stop** button to cancel print jobs before turning off the machine.

#### If the paper is jammed in the Paper Output Slot or the Rear Tray:

Remove the paper following the procedure below.

- Slowly pull the paper out, either from the Rear Tray or from the Paper Output Slot, whichever is easier.**



#### Note

- If the paper tears and a piece remains inside the machine, turn the machine off, open the Scanning Unit (Cover), and remove the paper. Be careful not to touch the components inside the machine. After removing all paper, close the Scanning Unit (Cover), and turn the machine back on.
- If you cannot pull the paper out, turn the machine off and turn it back on. The paper may be ejected automatically.

- Reload the paper, and press the OK button on the machine.**

If you turned off the machine in step 1, all print jobs in the queue are canceled. Reprint if necessary.

#### Note


- When reloading the paper, confirm that you are using the correct paper and are loading it correctly.  
▶ [Loading Paper / Originals](#)
- A5 sized paper is suited to printing documents consisting mainly of text. We do not recommend using such paper to print documents with photos or graphics, since the printout may curl and cause paper exit jams.

If you cannot remove the paper or the paper tears inside the machine, or if the paper jam error continues after removing the paper, contact the service center.

#### If paper is jammed inside the machine at the transport unit:

Remove the paper following the procedure below.

- Detach the Rear Cover.**

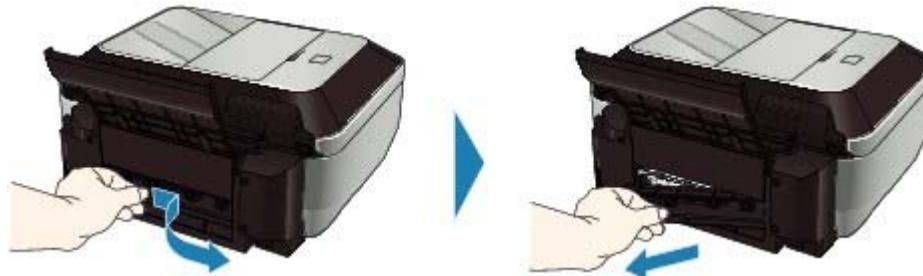

**2.** Pull the paper out slowly.




 **Note**

- Be careful not to touch the components inside the machine.
- If you cannot pull the paper out, turn the machine off and turn it back on. The paper may be ejected automatically.

**3.** Attach the Rear Cover.

Push the left side of the Rear Cover until it is closed completely.

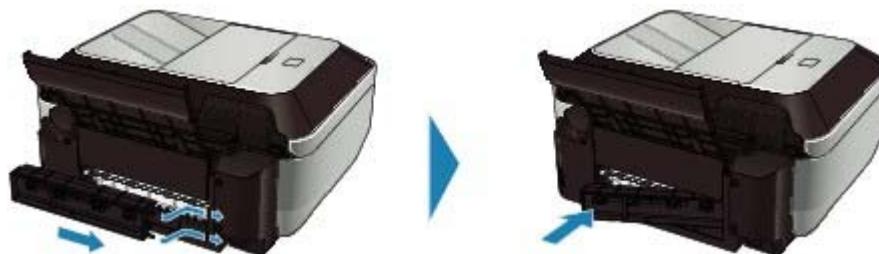

If you were not able to remove the paper out in step 2:

**4.** Remove the Cassette.

**5.** Pull the paper out slowly.



**6.** If any paper is sticking out of the Cassette, remove the paper, align and reload the paper in the Cassette.

If you did not remove the jammed paper out in step 1 to 5 when automatic duplex printing, check the duplex transport section.

► If the jammed paper is not removed out when automatic duplex printing:

 **Note**

- When reloading the paper into the machine, confirm that you are using the correct paper and are loading it into the machine correctly.
- ▶ [Loading Paper / Originals](#)
- 

## 7. Insert the Cassette into the machine again, and press the **OK** button on the machine.

If you turned off the machine in step 2, all print jobs in queue are canceled. Reprint if necessary.

If you cannot remove the paper or if the paper tears inside the machine, or if the paper jam error continues after removing the paper, contact the service center.

### If the jammed paper is not removed out when automatic duplex printing:

Remove the paper following the procedure below.

#### 1. Turn off the machine, and unplug the power cord of the machine from the power supply.

#### 2. Remove the Cassette.

If the paper is loaded on the Rear Tray, remove the paper from the Rear Tray and retract the Paper Support.

#### 3. Set the machine upright with the left side down.

##### Important

- When standing the machine, make sure that the Scanning Unit (Cover) is closed securely.

#### 4. Slowly pull the jammed paper out so that the paper does not tear.



##### Note

- Set the machine back to its original position immediately after removing the jammed paper.

#### 5. Align the paper, then reload it in the Cassette.

Reload paper in the Rear Tray, if necessary.

##### Note

- When reloading the paper into the machine, confirm that you are using the correct paper and are loading it into the machine correctly.
- ▶ [Loading Paper / Originals](#)
- 

#### 6. Insert the Cassette into the machine again.

#### 7. Plug the machine back in and turn the machine back on.


All print jobs in queue are canceled. Reprint if necessary.

If you cannot remove the paper or if the paper tears inside the machine, or if the paper jam error continues after removing the paper, contact the service center.


#### In other cases:

Make sure of the following:

- **Check 1: Are there any foreign objects around the Paper Output Slot?**
- **Check 2: Are there any foreign objects in the Rear Tray?**

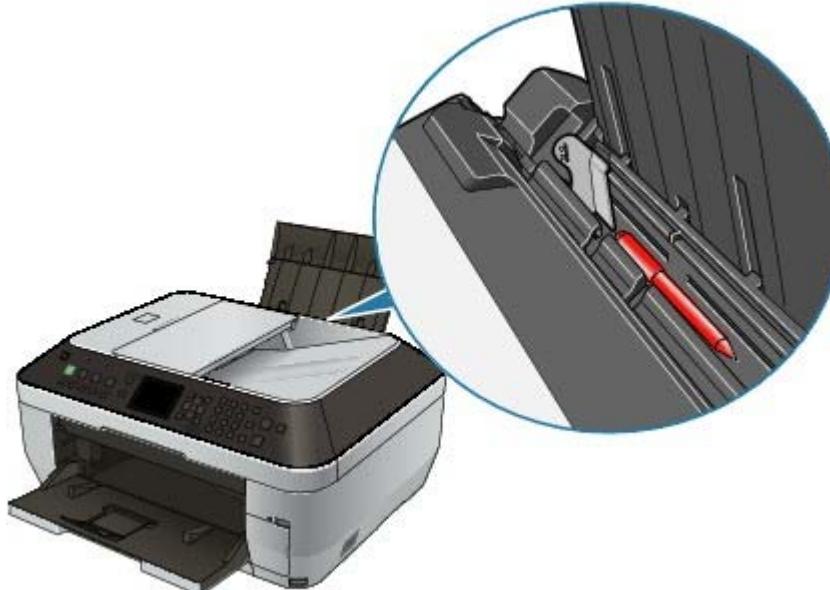

If there are any foreign objects in the Rear Tray, be sure to turn off the machine, unplug it from the power supply, then remove the foreign object.

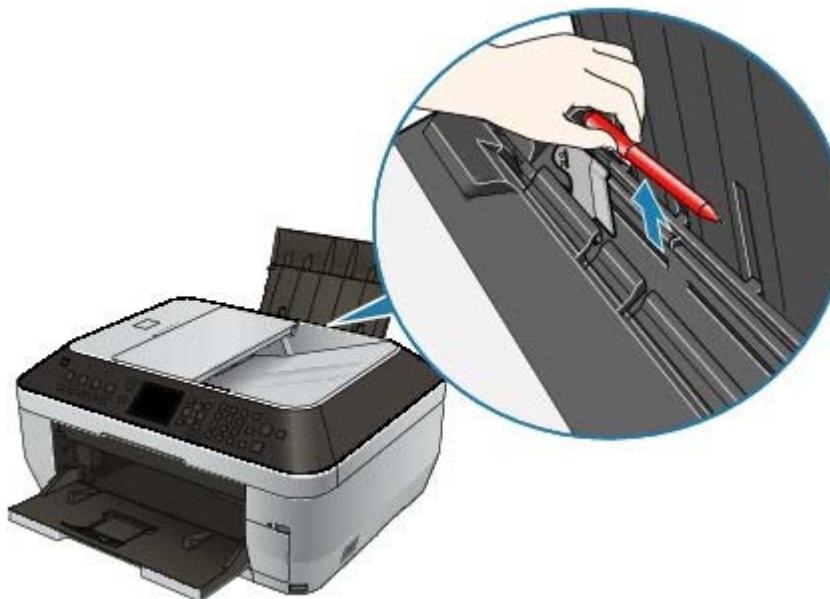

- **Check 3: Is the Rear Cover closed completely?**
- **Check 4: Is the paper curled?**

▶ Check 3: Load the paper after correcting its curl.

## Advanced Guide

Advanced Guide > Troubleshooting > Document Jams in the ADF

# Document Jams in the ADF

### Important

When you turn off the machine to remove the jammed document, make sure of the following.

- While the machine is receiving a fax (in memory), you cannot turn off the machine. Turn it off after receiving the fax. Do not disconnect the power plug while the machine is receiving a fax. If you disconnect the power plug, all the documents stored in memory are deleted.

### If the Stop button is pressed while the machine is scanning the document:

If you press the **Stop** button during scanning, Document in ADF. Redo operation after checking document in ADF and pressing OK. appears on the LCD. Press the **OK** button so that the remaining document is automatically fed out.

### Removing the jammed document from the Document Tray:

Remove the document following the procedure below.

- 1. If printing is in progress, press the Stop button.**
- 2. Turn off the machine.**
- 3. If a multi-page document is loaded, remove any pages other than the jammed page from the ADF, then open the Document Feeder Cover.**



- 4. Raise the Paper Release Lever (A), then remove the jammed page from under the roller to the Document Feeder Cover side.**



- 5. Pull out the jammed document from the ADF.**

If the document cannot be pulled out with ease, follow the procedure in [Removing the jammed document from the inner side of the Document Cover](#):



**6. Press down the Paper Release Lever (A), close the Document Feeder Cover, then turn on the machine.**

When rescanning the document after clearing the error, rescan it from the first page.

If you cannot remove the document or the document tears inside the machine, or if the document jam error continues after removing the document, contact the service center.

 **Note**

- The document may not feed properly depending on the media type, or your environment, such as when the temperature and humidity are either too high or too low.  
In this case, reduce the number of document pages to approximately half of the loading capacity.  
If the document still jams, use the Platen Glass instead.

**Removing the jammed document from the inner side of the Document Cover:**

Remove the document following the procedure below.

- 1. If printing is in progress, press the Stop button.**
- 2. Turn off the machine.**
- 3. If a multi-page document is loaded, remove any pages other than the jammed page from the ADF.**



- 4. Open the Document Output Slot.**



5. Open the Document Cover.



6. Insert your hand into the Document Output Slot, then while pushing up the paper output rollers inside the Document Output Slot with your fingers, pull out the document from the inner side of the Document Cover.



**7. Close the Document Cover.**


**8. Close the Document Output Slot, then turn on the machine.**

When rescanning the document after clearing the error, rescan it from the first page.

If you cannot remove the document or the document tears inside the machine, or if the document jam error continues after removing the document, contact the service center.

**Removing the jammed document from the Document Output Slot:**

If the document is jammed in the Document Output Slot, open the Document Output Slot as shown in the figure below and pull out the document.

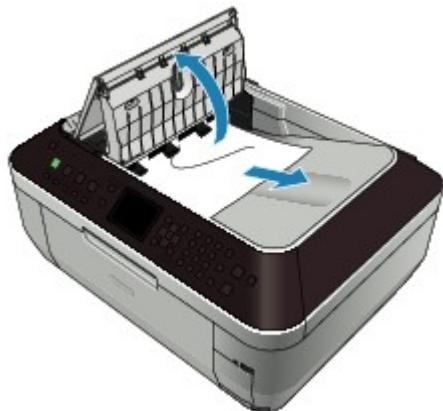

When rescanning the document after clearing the error, rescan it from the first page.

If you cannot remove the document or the document tears inside the machine, or if the document jam error continues after removing the document, contact the service center.

## Advanced Guide

Advanced Guide > Troubleshooting > Message Appears on the Computer Screen

# Message Appears on the Computer Screen

- ▶ Error Number: B200 A printer error has occurred. Turn the printer off and unplug the power cord of the printer from the power supply. Then contact the service center. Is Displayed
- ▶ Error Number: \*\*\*\* A printer error has occurred. Turn the printer off and then on again. If this doesn't clear the error, see the user's guide for more detail. Is Displayed
- ▶ Error Regarding Automatic Duplex Printing Is Displayed
- ▶  Writing Error/Output Error/Communication Error
- ▶  Error Number: 300 Is Displayed
- ▶  Error Number: 1700 Is Displayed
- ▶  Ink Info Number: 1600 Is Displayed
- ▶  Ink Info Number: 1683 Is Displayed
- ▶  Ink Info Number: 1688 Is Displayed
- ▶  Error Number: 2001 Is Displayed
- ▶  Error Number: 2002 Is Displayed
- ▶  Other Error Messages
- ▶  The Inkjet Printer/Scanner/Fax Extended Survey Program Screen Is Displayed
- ▶  The Inkjet Printer/Scanner/Fax Extended Survey Program Icon Appears

## Error Number: B200 A printer error has occurred. Turn the printer off and unplug the power cord of the printer from the power supply. Then contact the service center. Is Displayed

Turn off the machine, and unplug the power cord of the machine from the power supply.

Contact the service center.

### Important

- If you disconnect the power plug, all the documents stored in memory are deleted.

## Error Number: \*\*\*\* A printer error has occurred. Turn the printer off and then on again. If this doesn't clear the error, see the user's guide for more detail. Is Displayed

"\*\*\*\*" is displayed in the alphanumeric character and depends on the error occurred.

### • 5100 or 5110 Is Displayed

Confirm the movement of the Print Head Holder blocked.

Cancel printing from your computer and turn off the machine. Then clear the paper jam or foreign object that is preventing the Print Head Holder from moving, and turn on the machine again.

### Important

- Be careful not to touch the components inside the machine. The machine may not print out properly if you touch it.
- If the problem is not resolved, contact the service center.

### • Four-digit alphanumeric and "Printer error has occurred." Is displayed.

Turn off the machine, and unplug the power cord of the machine from the power supply.

Turn the machine back on.

If the problem is not resolved, contact the service center.

## Error Regarding Automatic Duplex Printing Is Displayed

- **Check:** See [Cannot Print Properly with Automatic Duplex Printing](#) and take the appropriate action.

## Writing Error/Output Error/Communication Error

- **Check 1:** If all the lamps on the Operation Panel are off, make sure that the power plug is plugged in, then turn the machine on.

While the **Power** lamp is flashing green, the machine is initializing. Wait until the **Power** lamp stops flashing and remains lit green.

- **Check 2:** Make sure that the printer port is configured appropriately in the MP Drivers.

\* In the following instructions, "XXX" signifies your machine's name.

1. Log on as a user account with administrator privilege.

2. Click Control Panel, then Printer under Hardware and Sound.

In Windows XP, click Control Panel, Printers and Other Hardware, then Printers and Faxes.

In Windows 2000, click Control Panel then Printers.

3. Right-click the Canon XXX Printer icon, then select Properties.

4. Click the Ports tab to confirm the port settings.

Make sure that a port named USBnnn (where "n" is a number) with Canon XXX Printer appearing in the Printer column is selected for Print to the following port(s).

If the port setting is not correct, reinstall the MP Drivers or change the port setting according to the interface you are using.

### Note

■ When the machine is used over LAN, the port name of the machine is displayed as "CNBJNP\_xxxxxxxxxx".

\* "xxxxxxxxxx" is the character string generated from the MAC address or a character string specified by the user when setting up the machine.

- **Check 3:** Make sure that the machine is connected to your computer properly.

When the machine is connected to your computer with a USB cable, make sure that the USB cable is securely plugged in to the machine and the computer, then check the followings:

- If you are using a relay device such as a USB hub, disconnect it, connect the machine directly to the computer, and try printing again. If printing starts normally, there is a problem with the relay device. Consult the reseller of the relay device for details.
- There could also be a problem with the USB cable. Replace the USB cable and try printing again.

When you use the machine over LAN, make sure that the machine is connected to the network with a LAN cable or is set up correctly. For details, refer to your setup manual.

- **Check 4:** Make sure that the MP Drivers are installed correctly.

Uninstall the MP Drivers following the procedure described in [Uninstalling the MP Drivers](#) and reinstall them following the procedure described in your setup manual.

- **Check 5:** When the machine is connected to your computer with a USB cable, check the status of the device on your computer.

Follow the procedure below to check the status of the device.

1. Click Control Panel, Hardware and Sound, then Device Manager.

If the User Account Control screen is displayed, follow the on-screen instructions.

In Windows XP, click Control Panel, Performance and Maintenance, System, then click Device Manager on the Hardware sheet.

In Windows 2000, click Control Panel, System, then Device Manager on the Hardware sheet.

**2. Double-click Universal Serial Bus controllers then USB Printing Support.**

If USB Printing Support is not displayed, make sure that the machine is correctly connected to the computer.

➡ Check 3: Make sure that the machine is connected to your computer properly.

**3. Click the General tab and make sure that there is no indication of a problem with the device.**

If a device error is displayed, refer to Windows help to resolve the error.

**Macintosh Error Number: 300 Is Displayed**

- **Check 1: If all the lamps on the Operation Panel are off, make sure that the power plug is plugged in, then turn the machine on.**

While the **COPY** lamp is flashing green, the machine is initializing. Wait until the **COPY** lamp stops flashing and remains lit green.

- **Check 2: Make sure that the machine is connected to your computer properly.**

When the machine is connected to your computer with a USB cable, make sure that the USB cable is securely plugged in to the machine and the computer, then check the followings:

- If you are using a relay device such as a USB hub, disconnect it, connect the machine directly to the computer, and try printing again. If printing starts normally, there is a problem with the relay device. Consult the reseller of the relay device for details.
- There could also be a problem with the USB cable. Replace the USB cable and try printing again.

When you use the machine over LAN, make sure that the machine is connected to the network with a LAN cable or is set up correctly. For details, refer to your setup manual.

- **Check 3: Make sure that your machine's name is selected in the Print dialog box.**

➡ Opening the Page Setup and Print Dialog Box (Macintosh)

**Macintosh Error Number: 1700 Is Displayed**

- **Check: See The ink absorber is almost full. in An Error Message Is Displayed on the LCD and take the appropriate action.**

**Macintosh Ink Info Number: 1600 Is Displayed**

- **Check: See The ink may have run out. in An Error Message Is Displayed on the LCD and take the appropriate action.**

**Macintosh Ink Info Number: 1683 Is Displayed**

- **Check: See The remaining level of the ink cannot be correctly detected. in An Error Message Is Displayed on the LCD and take the appropriate action.**

**Macintosh Ink Info Number: 1688 Is Displayed**

- **Check: See The ink has run out. in An Error Message Is Displayed on the LCD and take the appropriate action.**

**Macintosh Error Number: 2001 Is Displayed**

- **Check: See Incompatible device detected. in An Error Message Is Displayed on**

- the LCD and take the appropriate action.**

## Macintosh Error Number: 2002 Is Displayed

- Check: See An unsupported USB hub is connected. in An Error Message Is Displayed on the LCD and take the appropriate action.**

## Windows Other Error Messages


- Check: If an error message is displayed outside the printer status monitor, check the following:**

- "Could not spool successfully due to insufficient disk space"  
Delete any unnecessary files to increase the amount of free space on the disk.
- "Could not spool successfully due to insufficient memory"  
Quit other running applications to increase available memory.  
If you still cannot print, restart your computer and retry printing.
- "Printer driver could not be found"  
Uninstall the printer driver according to the procedure described in [Uninstalling the MP Drivers](#), and then reinstall it.
- "Could not print Application name - File name"  
Try printing again once the current job is complete.

## Windows The Inkjet Printer/Scanner/Fax Extended Survey Program Screen Is Displayed

If the Inkjet Printer/Scanner/Fax Extended Survey Program is installed, a confirmation screen asking for permission to send the printer usage information will be displayed three months and then six months after the installation. After that, it will be displayed every six months for about four years.

Read the instructions on the screen and follow the procedure below.

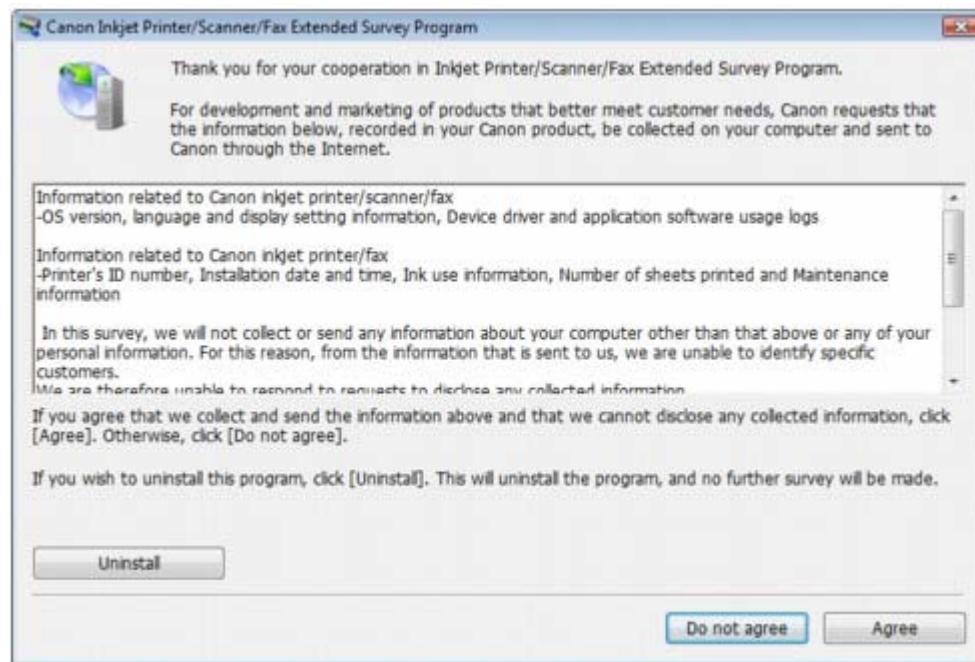

- If you agree to participate in the survey program:**

Click Agree, then follow the on-screen instructions. The printer usage information will be sent to Canon via the Internet. If you have followed the on-screen instructions, the information will be sent automatically from the second time onward and the confirmation screen will not be displayed again.

### Note

- When the information is being sent, a caution screen such as an Internet security screen may be displayed. In this case, confirm that the program name is "IJPLMUI.exe", then allow it.

- If you deselect the Send automatically from the next time check box, the information will not be sent automatically from the second time onward and a confirmation screen will be displayed at the time of the next survey. To send the information automatically, see [Changing the confirmation screen setting](#):

- **If you do not agree to participate in the survey program:**

Click Do not agree. The confirmation screen will be closed, and the survey at that time is skipped. The confirmation screen will be displayed again three months later.

- **To uninstall the Inkjet Printer/Scanner/Fax Extended Survey Program:**

To uninstall the Inkjet Printer/Scanner/Fax Extended Survey Program, click Uninstall, then follow the on-screen instructions.

- **Changing the confirmation screen setting:**

1. Select items from the Start menu as shown below.

- In Windows Vista, select the Start menu > Control Panel > Programs and Features > Uninstall a program.
- In Windows XP, select the Start menu > Control Panel > Add or Remove Programs.
- In Windows 2000, select the Start menu > Settings > Control Panel > Add/Remove Programs.

#### Note

- In Windows Vista, a confirmation/warning dialog box may appear when installing, uninstalling or starting up software.  
This dialog box appears when administrative rights are required to perform a task.  
If you are logged on to an administrator account, click Continue or Allow to continue.

2. Select Canon Inkjet Printer/Scanner/Fax Extended Survey Program.

3. Select Change.

If you select Yes after you have followed the on-screen instructions, the confirmation screen will be displayed at the time of the next survey.

If you select No, the information will be sent automatically.

#### Note

- If you select Uninstall (or Remove), the Inkjet Printer/Scanner/Fax Extended Survey Program is uninstalled. Follow the on-screen instructions.




#### The Inkjet Printer/Scanner/Fax Extended Survey Program Icon Appears

If the Inkjet Printer/Scanner/Fax Extended Survey Program is installed, the printer usage information is scheduled to be sent three months and then six months after the installation. After that, it is scheduled to be sent every six months for about four years. The Inkjet Printer/Scanner/Fax Extended Survey Program icon appears in the Dock when it is time to send the printer usage information.

In Mac OS X v.10.3.9, the Inkjet Printer/Scanner/Fax Extended Survey Program is not installed.

Read the instructions on the screen after clicking the icon, then follow the procedure below.

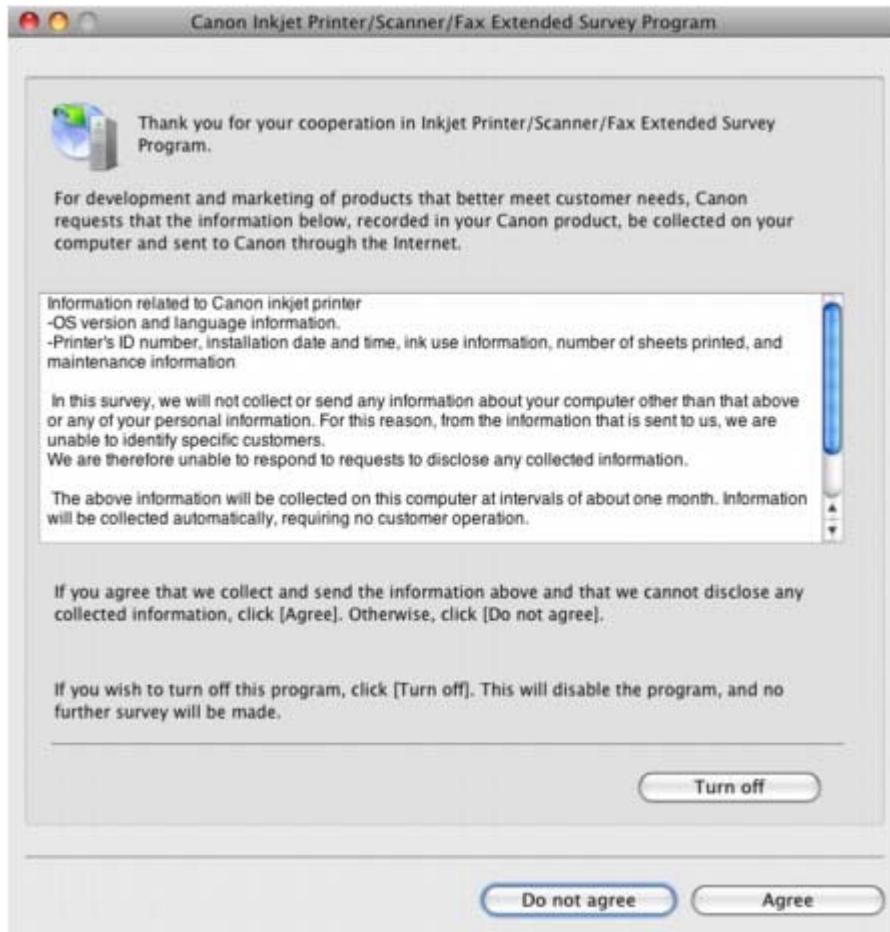

- **If you agree to participate in the survey program:**

Click Agree, then follow the on-screen instructions. The printer usage information will be sent to Canon via the Internet. If you have followed the on-screen instructions, the information will be sent automatically from the second time onward and the confirmation screen will not be displayed again.

#### Note

- If you deselect the Send automatically from the next time check box, the information will not be sent automatically from the second time onward and the Inkjet Printer/Scanner/Fax Extended Survey Program icon will appear in the Dock at the time of the next survey.

- **If you do not agree to participate in the survey program:**

Click Do not agree. The confirmation screen will be closed, and the survey at that time is skipped. The confirmation screen will be displayed again three months later.

- **To stop sending the information:**

Click Turn off. The Inkjet Printer/Scanner/Fax Extended Survey Program is stopped, and the information will not be sent. To resume the survey, see [Changing the setting](#):

- **To uninstall the Inkjet Printer/Scanner/Fax Extended Survey Program:**

1. Stop the Inkjet Printer/Scanner/Fax Extended Survey Program.

► [Changing the setting](#):


2. Select Applications from the Go menu, and double-click the Canon Utilities folder, then the Canon Inkjet Printer/Scanner/Fax Extended Survey Program folder.
3. Place the Canon Inkjet Printer/Scanner/Fax Extended Survey Program.app file into the Trash.
4. Restart the computer.

Empty the Trash and restart your computer.

- **Changing the setting:**

To display the confirmation screen every time the printer usage information is sent or to resume surveying, follow the procedure below.

1. Select Applications from the Go menu, and double-click the Canon Utilities folder, then the Canon Inkjet Printer/Scanner/Fax Extended Survey Program folder.
2. Double-click the Canon Inkjet Printer/Scanner/Fax Extended Survey Program icon.

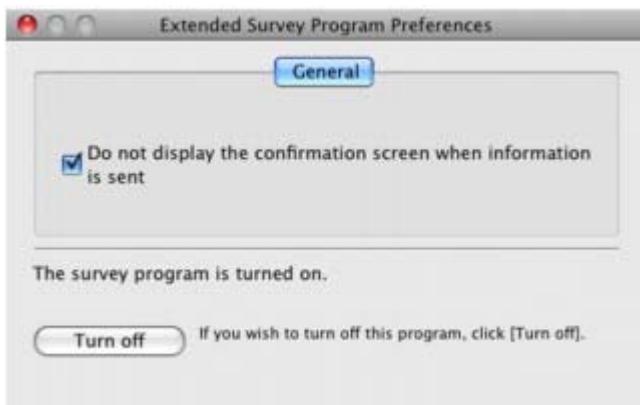

- Do not display the confirmation screen when information is sent:  
If the check box is selected, the information will be sent automatically.  
If the check box is not selected, the Inkjet Printer/Scanner/Fax Extended Survey Program icon will appear in the Dock at the time of the next survey. Click the icon, then follow the on-screen instructions.
- Turn off/Turn on button:  
Click the Turn off button to stop the Inkjet Printer/Scanner/Fax Extended Survey Program.  
Click the Turn on button to restart the Inkjet Printer/Scanner/Fax Extended Survey Program.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Cannot Print Properly with Automatic Duplex Printing

# Cannot Print Properly with Automatic Duplex Printing

## • Check: Is the paper size or media type appropriate?

- Make sure that the actual size of the paper is suitable for automatic duplex printing.  
The sizes of media suitable for automatic duplex printing are A4, Letter, A5, and 5" x 7".  
Load paper of suitable size, then press the **OK** button on the machine.
- Make sure that the Page Size or Paper Size setting matches the actual size of the paper with a size suitable for automatic duplex printing.  
First, check the Page Size setting in the application software you are printing from.  
Then, check the Page Size setting on the Page Setup sheet in the printer properties dialog box (Windows) or the Paper Size on the Page Setup dialog box (Macintosh).

### Note

- Duplex printing may not be available depending on the version of the application software.
- Make sure that the type of loaded paper is suitable for automatic duplex printing on the Main sheet (Windows) or the Quality & Media sheet on the Print dialog box (Macintosh).

To switch to manual duplex printing, follow the procedure below.

### Windows

Open the printer properties dialog box, clear the Automatic check box on the Page Setup sheet, and reprint.

When performing manual duplex printing, note the following.

- If you are printing three or more pages of a document with manual duplex printing, one side of all sheets of paper will be printed first. Turn over the paper and reload the paper in the machine, and then the reverse side of all sheets of paper will be printed. Be careful not to change the order of paper in the stack.
- The procedure for reversing the paper varies depending on the staple side and printing orientation. Follow the on-screen instructions.

### Macintosh

Manual duplex printing is not available.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > For Windows Users

---

# For Windows Users

## Printer Status Monitor Is Not Displayed

- **Check: Is the printer status monitor enabled?**

Make sure that Enable Status Monitor is selected on the Option menu of the printer status monitor.

1. Open the printer properties dialog box.

➡ [Opening the Printer Properties Dialog Box \(Windows\)](#)

2. On the Maintenance sheet, click View Printer Status.

3. Select Enable Status Monitor on the Option menu if it is not selected.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Error Message Appears on a PictBridge Compliant Device

# Error Message Appears on a PictBridge Compliant Device

The following are the possible errors that may occur when printing directly from a PictBridge compliant device and the countermeasures to clear them.

### Note

- This section describes errors that are indicated on Canon-brand PictBridge compliant devices. The error messages and operations may vary depending on the device you are using. For errors on non-Canon PictBridge compliant devices, check the error message on the LCD and take the appropriate action to clear the error. For details, see [An Error Message Is Displayed on the LCD](#).
- For the errors indicated on the PictBridge compliant device and their solution, also refer to the instruction manual of the device. For other troubles on the device, contact the manufacturer.

Error Message on the PictBridge Compliant Device	Action
"Printer in use"	If the machine is printing from the computer or warming up, wait until the job ends. When it is ready, the machine starts printing automatically.
"No paper"	Load paper on the Rear Tray, and select Continue* in the display on your PictBridge compliant device. * To resume printing, you can also press the <b>OK</b> button on the machine instead of selecting Continue on the device.
"Paper jam"	Select Stop in the display on your PictBridge compliant device to stop printing. Remove the jammed paper, load new paper, press the <b>OK</b> button on the machine, and try printing again.
"Printer cover open"	Close the Scanning Unit (Cover) on the machine.
"No print head"	The Print Head is defective or is not installed. Check: See <a href="#">Print head is not installed</a> . in <a href="#">An Error Message Is Displayed on the LCD</a> and take the appropriate action.
"Waste tank full"/"Ink absorber full"	The ink absorber is nearly full. Check: See <a href="#">The ink absorber is almost full</a> . in <a href="#">An Error Message Is Displayed on the LCD</a> and take the appropriate action.
"No ink"/"Ink cassette error"	The ink tank is not installed properly or empty. Check the error message on the LCD and take the appropriate action to resolve the error. ➡ <a href="#">An Error Message Is Displayed on the LCD</a>
"Ink Error"	An ink tank that was once empty is installed. Check: See <a href="#">The remaining level of the ink cannot be correctly detected</a> . in <a href="#">An Error Message Is Displayed on the LCD</a> and take the appropriate action.
"Hardware Error"	Ink tank errors have occurred. Replace the ink tank. ➡ <a href="#">Routine Maintenance</a>
"Printer error"	An error requiring servicing may have occurred. (The <b>Power</b> lamp flashes green and <b>Alarm</b> lamp flashes orange alternately.) Disconnect the USB cable between the machine and the PictBridge compliant device, turn off the machine, and unplug the power cord of the machine from the power supply. Plug the power cord of the machine back in, turn on the machine, and then reconnect the PictBridge compliant device to the machine. If the same error occurs, contact the service center.

---

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Cannot Print Properly from a Wireless Communication Device

### Cannot Print Properly from a Wireless Communication Device

- **Check: Is printing possible through Bluetooth communication?**

▶ Printing via Bluetooth Communication

Page top ↑

## Advanced Guide

Advanced Guide > Troubleshooting > Cannot Print Properly from a Photo Index Sheet

### Cannot Print Properly from a Photo Index Sheet

- Check the following if Failed to scan Photo Index Sheet. is displayed on the LCD, press the OK button, and perform the Scan sheet and print menu again.

- Did you set Photo Index Sheet in the correct position and orientation on the Platen Glass?
- Are the Platen Glass and the Photo Index Sheet dirty?
- Are all required circles on the Photo Index Sheet filled in?

#### Note

- If the filled circles on the Photo Index Sheet are not dark or vast enough, the machine may not scan the Photo Index Sheet properly.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Cannot Remove a Memory Card

### Cannot Remove a Memory Card

Contact the service center.

#### Important

- Never attempt to remove a memory card using a thin stick or tweezers. Doing so may damage the machine.

#### Note

- Exclusive adapters are required for the following memory cards. Insert these cards in the machine with adapters attached.  
miniSD Card/miniSDHC Card/microSD Card/microSDHC Card/xD-Picture Card/xD-Picture Card Type M/xD-Picture Card Type H/Memory Stick Micro/RS-MMC (ver.4.1)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Problems with Scanning

---

# Problems with Scanning

- ▶ Scanner Does Not Work
- ▶ ScanGear (Scanner Driver) Does Not Start
- ▶ Error Message Appears and the ScanGear (Scanner Driver) Screen Does Not Appear
- ▶ Scan Quality (Image Displayed on the Monitor) Is Poor
- ▶ Scanned Image Is Surrounded by Extra White Areas
- ▶ Cannot Scan Properly with Multi Crop
- ▶ Cannot Scan Properly in Auto Scan Mode
- ▶ Slow Scanning Speed
- ▶ "There is not enough memory." Message Is Displayed
- ▶ Computer Stops Operating during Scanning
- ▶ Scanner Does Not Work After Upgrading Windows

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Problems with Scanning > Scanner Does Not Work

---

### Scanner Does Not Work

**Check:** Restart the computer.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Problems with Scanning > ScanGear (Scanner Driver) Does Not Start

### ScanGear (Scanner Driver) Does Not Start

#### Check 1: Make sure that the MP Drivers are installed.

If it is not installed, insert the *Setup CD-ROM* into the computer's disc drive, then select Custom Install and install MP Drivers.

#### Check 2: On the File menu of the application, select Select Source and select the machine.

##### Important

- Do not select the model name that includes WIA in it.

##### Note

- The operation may differ depending on the application.

#### Check 3: Start from a TWAIN-compliant application.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Problems with Scanning > Error Message Appears and the ScanGear (Scanner Driver) Screen Does Not Appear

### Error Message Appears and the ScanGear (Scanner Driver) Screen Does Not Appear

**Check 1: Make sure that the machine is turned on.**

**Check 2: Connect the USB cable to a different USB port on the computer.**

**Check 3: If the USB cable is connected to a hub, remove it from the hub and connect it to a USB port on the computer.**

**Check 4: Make sure that the MP Drivers are installed.**

If it is not installed, insert the *Setup CD-ROM* into the computer's disc drive, then select Custom Install and install MP Drivers.

**Check 5: On the File menu of the application, select Select Source and select the machine.**

#### Note

- The operation may differ depending on the application.

**Check 6: Make sure that the application is TWAIN-compliant.**

You cannot open ScanGear (scanner driver) from applications not supporting TWAIN.

**Check 7: Exit ScanGear (scanner driver) if it is running on another application.**

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Problems with Scanning > Scan Quality (Image Displayed on the Monitor) Is Poor

# Scan Quality (Image Displayed on the Monitor) Is Poor

## Check 1: Increase the scanning resolution.

▶ Resolution

## Check 2: Set the scale to 100%.

Some applications do not display images clearly if the image is too small.

## Check 3: If moire (stripe pattern) appears, take the following measures and scan again.

- On the Basic Mode tab of ScanGear (scanner driver), select Magazine(Color) in Select Source.
- On the Advanced Mode tab of ScanGear (scanner driver), set Descreen in Image Settings to ON.

▶ Image Settings

### Note

- If moire appears when you scan a digital print photo, take the above measures and scan again.
- If you use MP Navigator EX, set Document Type to Magazine(Color) or enable Descreen in the Scan Settings dialog box and scan again.

▶ Scan Settings Dialog Box (Photos/Documents)

## Check 4: Check the monitor's color depth.

From the Start menu, select Control Panel > Appearance and Personalization > Adjust screen resolution to open the Display Settings dialog box. Set the color depth to Medium (16 bit) or Highest (32 bit).

### • Windows XP:

From the Start menu, select Control Panel > Display to open the Display Properties dialog box. On the Settings tab, set Colors to Medium (16 bit) or Highest (32 bit).

### • Windows 2000:

From the Start menu, select Settings > Control Panel > Display to open the Display Properties dialog box. On the Settings tab, set Colors to High Color (16 bit) or True Color (32 bit).

## Check 5: Clean the Platen and Document Cover.

See "Cleaning the Exterior of the Machine" to clean the parts.

## Check 6: If the document is in poor condition (dirty, faded, etc.), use Reduce Dust and Scratches, Fading Correction, Grain Correction, etc. in Image Settings on the Advanced Mode tab of ScanGear (scanner driver).

▶ Image Settings

## Check 7: If the color tone of images with consistent color tone (such as the sky) is different from the original document, take the following measures and scan again.

- On the Advanced Mode tab of ScanGear (scanner driver), set Auto Tone in Image Settings to OFF.
- ▶ Image Settings
- Open the Preferences dialog box from the Advanced Mode tab of ScanGear (scanner driver) and set Color Matching on the Color Settings tab.
- ▶ Color Settings Tab

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Problems with Scanning > Scanned Image Is Surrounded by Extra White Areas

# Scanned Image Is Surrounded by Extra White Areas

## Check: Specify the scan area.

Click  (Auto Crop) in ScanGear (scanner driver) to automatically set the scan area for your document. You can also manually specify the scan area, for example when there are white margins along the document.

▶ [Adjusting Cropping Frames](#)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Problems with Scanning > Cannot Scan Properly with Multi Crop

### Cannot Scan Properly with Multi Crop

**Check 1: Make sure that the documents are placed correctly.**

↳ [Placing Documents](#)

**Check 2: Scan each item individually without using Multi Crop.**

Some applications do not support multiple image scanning.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Problems with Scanning > Cannot Scan Properly in Auto Scan Mode

### Cannot Scan Properly in Auto Scan Mode

#### Check 1: Make sure that the documents are placed correctly.

▶ Placing Documents

#### Check 2: Multiple image scanning may not be supported.

Some applications do not support multiple image scanning. In that case, scan each item individually.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Problems with Scanning > Slow Scanning Speed

### Slow Scanning Speed

**Check 1: To view the image on a monitor, set the output resolution to around 150 dpi. To print, set it to around 300 dpi.**

▶ Resolution

**Check 2: Set Fading Correction, Grain Correction, etc. to None.**

▶ Image Settings

**Check 3: In MP Navigator EX, deselect the Correct slanted document checkbox and scan again.**

▶ Scan Settings Dialog Box

**Check 4: In MP Navigator EX, deselect the Detect the orientation of text documents and rotate images checkbox and scan again.**

▶ Scan Settings Dialog Box

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Problems with Scanning > "There is not enough memory." Message Is Displayed

### "There is not enough memory." Message Is Displayed

**Check 1: Exit other applications and try again.**

**Check 2: Reduce the resolution or output size and scan again.**

◀ Resolution

Page top↑

## Advanced Guide

Advanced Guide > Troubleshooting > Problems with Scanning > Computer Stops Operating during Scanning

### Computer Stops Operating during Scanning

**Check 1: Restart the computer, reduce the output resolution in ScanGear (scanner driver) and scan again.**

**Check 2: Delete unnecessary files to obtain sufficient free hard disk space, then scan again.**

Error message may appear when scanning a large document at high resolution.

**Check 3: For Location of Temporary Files in MP Navigator EX, specify a folder on a drive with sufficient free space.**

See "[General Tab](#)" for details.

**Check 4: Multiple devices may be connected to USB ports.**

Disconnect other devices.

[Page top](#) ⇧

## Advanced Guide

Advanced Guide > Troubleshooting > Problems with Scanning > Scanner Does Not Work After Upgrading Windows

# Scanner Does Not Work After Upgrading Windows

**Check: Disconnect the machine from the computer, then uninstall and reinstall the MP Drivers and MP Navigator EX.**

- **Step 1: Uninstall the MP Drivers.**

See "[Uninstalling the MP Drivers](#)" for details.

- **Step 2: Uninstall MP Navigator EX.**

1. From the Start menu, select (All) Programs > Canon Utilities > MP Navigator EX 2.1 > MP Navigator EX Uninstall.

2. When a confirmation appears, click Yes.

3. When uninstallation is complete, click OK.

MP Navigator EX is uninstalled.

- **Step 3: Reinstall the MP Drivers and MP Navigator EX.**

Insert the *Setup CD-ROM* into the computer's disc drive, then select Custom Install and reinstall the MP Drivers and MP Navigator EX.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Software Problems

---

### Software Problems

- ▶ E-mail Software Program You Want to Use Does Not Appear in the Screen for Selecting an E-mail Software Program
- ▶ Scanned Image Is Printed Enlarged (Reduced)
- ▶ Scanned Image Is Enlarged (Reduced) on the Computer Monitor
- ▶ Scanned Image Does Not Open

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Software Problems > E-mail Software Program You Want to Use Does Not Appear in the Screen for Selecting an E-mail Software Program

# E-mail Software Program You Want to Use Does Not Appear in the Screen for Selecting an E-mail Software Program

## Check 1: MP Navigator EX may not support the e-mail software program.

The following e-mail software programs are supported. (Image are attached to the mail message automatically.)

- Windows Mail (Windows Vista)
- Outlook Express (Windows XP/Windows 2000)
- Microsoft Outlook

## Check 2: If an e-mail software program does not operate properly, check that the program's MAPI is enabled.

To enable MAPI, refer to the manual of the e-mail software program.

## Check 3: If using an e-mail software program other than the ones listed above, select None (Attach Manually) when prompted to select a program and attach the scanned image manually.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Software Problems > Scanned Image Is Printed Enlarged (Reduced)

---

### Scanned Image Is Printed Enlarged (Reduced)

**Check:** Set the printing size in the application.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Software Problems > Scanned Image Is Enlarged (Reduced) on the Computer Monitor

# Scanned Image Is Enlarged (Reduced) on the Computer Monitor

## Check 1: Change the display setting in the application.

You cannot reduce the display size in "Paint." To reduce the display size, open the images in an application that accompanies the machine.

For details, refer to the application's manual. If you have any questions, contact the manufacturer of the application.

## Check 2: Change the resolution setting in ScanGear (scanner driver) and scan again.

The higher the resolution, the larger the resulting image will be.

▶ Resolution

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Software Problems > Scanned Image Does Not Open

### Scanned Image Does Not Open

**Check: If the file format is not supported by the application, scan the image again and save it in a popular file format such as JPEG.**

For details, refer to the application's manual. If you have any questions, contact the manufacturer of the application.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > MP Navigator EX Problems

---

### MP Navigator EX Problems

- ▶ Cannot Scan at the Correct Size
- ▶ Position or Size of the Image Cannot be Detected Correctly When Scanning Using the Operation Panel
- ▶ Document Is Placed Correctly, but the Scanned Image Is Slanted
- ▶ Document Is Placed Correctly, but the Orientation Changes in the Scanned Image

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > MP Navigator EX Problems > Cannot Scan at the Correct Size

### Cannot Scan at the Correct Size

#### Check 1: Make sure that the documents are placed correctly.

◀ Placing Documents

#### Check 2: Set Document Size to the actual document size and scan again.

If the matching size is not found, scan at a larger size and trim the image.

See the Toolbar (Trimming) in "Correct/Enhance Images Window" for details.

Page top↑

## Advanced Guide

Advanced Guide > Troubleshooting > MP Navigator EX Problems > Position or Size of the Image Cannot be Detected Correctly When Scanning Using the Operation Panel

# Position or Size of the Image Cannot be Detected Correctly When Scanning Using the Operation Panel

## Check 1: Make sure that the documents are placed correctly.

▶ Placing Documents

## Check 2: Check that the MP Navigator EX settings are correctly set according to the document.

If you cannot scan properly with Auto Mode using the Operation Panel, specify the document type on the Scanner Button Settings tab of the Preferences dialog box.

▶ Scanner Button Settings Tab (Save)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > MP Navigator EX Problems > Document Is Placed Correctly, but the Scanned Image Is Slanted

### Document Is Placed Correctly, but the Scanned Image Is Slanted

**Check: In MP Navigator EX, deselect the Correct slanted document checkbox and scan again.**

▶ Scan Settings Dialog Box (Photos/Documents)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > MP Navigator EX Problems > Document Is Placed Correctly, but the Orientation Changes in the Scanned Image

### Document Is Placed Correctly, but the Orientation Changes in the Scanned Image

**Check: In MP Navigator EX, deselect the Detect the orientation of text documents and rotate images checkbox and scan again.**

➡ Scan Settings Dialog Box (Photos/Documents)

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Problems with Faxing

# Problems with Faxing

This section mainly describes the problems you may encounter when using a fax.

- ▶ [Problems Receiving Faxes](#)
- ▶ [Problems Sending Faxes](#)
- ▶ [Telephone Problems](#)

### Note

- For details on messages for faxing displayed on the LCD, see [A Message for Faxing Is Displayed on the LCD](#).

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Problems Receiving Faxes

# Problems Receiving Faxes

- ▶ Cannot Receive a Fax, Cannot Print a Fax
- ▶ Machine Does Not Switch Automatically between Voice and Fax Calls
- ▶ Quality of Received Fax is Poor
- ▶ Errors Often Occur When You Receive a Fax

## Cannot Receive a Fax, Cannot Print a Fax

- **Check 1: Is the power turned on?**

- You cannot receive faxes if the power is turned off. Press the **ON** button to turn the power on.
- If you disconnected the power cord without turning off the power (one of the buttons on the Operation Panel is lit), reconnecting it turns on the power automatically.
- If you disconnected the power cord after pressing the **ON** button to turn off the power (no buttons on the Operation Panel are lit), reconnect it, then press the **ON** button to turn on the power.
- If the power was turned off due to power failure, etc., the power is automatically turned on when the power failure is resolved.

- **Check 2: Is the machine's memory full?**

Either print or delete documents in the machine's memory to free it up, then ask the sender to resend the fax.

- ▶ Document Stored in Memory

- **Check 3: Does an error occur during reception?**

- Check the LCD for an error message.
  - ▶ A Message for Faxing Is Displayed on the LCD
- Print the Activity report and check for an error.
  - ▶ Activity Report

- **Check 4: Is the telephone line connected correctly?**

Check that the telephone line is connected correctly to the Telephone Line Jack and that the telephone (or another external device such as an answering machine or a computer modem) is connected correctly to the External Device Jack. Refer to your setup manual.

- **Check 5: Is a different size of paper from that specified by Page size loaded?**

If a different size of paper from that specified by Page size is loaded for printing faxes, incoming faxes will not be printed completely and will be stored in memory. Load the same size of paper as that specified by Page size, then press the **OK** button on the machine. For MX860 series, load Legal-sized paper\* on the Rear Tray.

\* Legal may not be available depending on the country or region of purchase.

- **Check 6: Is Page size set to other than A4, 8.5"x11"(LTR), or 8.5"x14"(Legal)? (MX330 series)**

If Page size is set to other than A4, 8.5"x11"(LTR), or 8.5"x14"(Legal), the received fax will not be printed and will be stored in memory (Memory Reception). Set Page size to A4, 8.5"x11"(LTR), or 8.5"x14"(Legal).

- **Check 7: Is paper loaded?**

If paper is not loaded in the Cassette (MX860 series) or on the Rear Tray, received faxes will be stored in memory without being printed. Load paper in the Cassette (MX860 series) or on the Rear Tray, then press the **OK** button.

- **Check 8: Has the ink run out?**

If the ink has run out, received faxes will be stored in memory without being printed. Check the ink level and take the appropriate action, then print the faxes in memory.

- ▶ Document Stored in Memory

 Note

- If the machine was receiving faxes in the fax mode, printing will start automatically after checking the ink level and taking appropriate action.  
For details, refer to [Routine Maintenance](#).
- You can set the machine to forcibly print a received fax even if the ink has run out.  
However, part or all of the fax may not be printed since ink has run out.  
Also, the contents of the fax will not be stored in memory.  
In addition, if the ink has already run out, we recommend that OFF be selected for Auto print in User settings to store the received fax in memory once. When you print the fax stored in memory manually, check the ink level and take the appropriate action. For details, see [Document Stored in Memory](#).

- **Check 9: Is the machine set to the appropriate receive mode?**

Check the receive mode setting and change it to a mode suited to your connection if necessary.

▶ [Setting the Receive Mode](#)

- **Check 10: Is Fax reception reject set to ON?**

Set Fax reception reject to OFF.

▶ [Fax reception reject](#)

- **Check 11: Is Caller rejection set to Yes?**

Set Caller rejection to No.

▶ [Caller rejection](#)

## Machine Does Not Switch Automatically between Voice and Fax Calls

- **Check: Is the receive mode set to Fax priority mode?**

If the receive mode is set to Fax only mode, there will be no automatic switching between voice and fax calls. Set the receive mode to Fax priority mode, DRPD\*1, or Network switch\*2. If the receive mode is TEL priority mode and an answering machine is connected to the machine, check whether a proper message is played back when the answering machine answers.

▶ [Setting the Receive Mode](#)

\*1 This setting is available only in the US and Canada.

\*2 This setting may not be available depending on the country or region of purchase.

## Quality of Received Fax is Poor

- **Check 1: Is ECM RX set to OFF?**

Set ECM RX to ON.

▶ [ECM RX](#)

If ECM RX is enabled, the sender's fax machine resends the fax after correcting errors automatically.

- **Check 2: Is the sender's original document or the scanning area of the sender's fax machine dirty?**

The image quality of the fax is mainly determined by the sender's fax machine. Contact the sender and ask the sender to check whether the scanning area of the fax machine is dirty.

- **Check 3: Is ECM transmission/reception enabled although the line/connection is poor, or is the sender's fax machine compatible with ECM?**

- On your machine, select ON for ECM RX on Reception settings.  
▶ [ECM RX](#)
- Contact the sender and ask the sender to check whether the machine is set to enable ECM transmission.
- If the sender's or recipient's fax machine is not compatible with ECM, the fax will be sent/received in the standard mode.
- Reduce the reception start speed.  
▶ [RX start speed](#)

- **Check 4: Did you confirm the paper and print quality settings?**

▶ Print Results Not Satisfactory

### Errors Often Occur When You Receive a Fax

- **Check 1: Check the telephone line condition or the connection.**

If the telephone line or connection is poor, reducing the reception start speed may correct the error.

Reduce the reception start speed.

▶ RX start speed

- **Check 2: Is the sender's fax machine operating normally?**

Contact the sender and ask the sender to check whether the fax machine is operating normally.

Page top ↑

## Advanced Guide

Advanced Guide > Troubleshooting > Problems Sending Faxes

# Problems Sending Faxes

- ▶ Cannot Send a Fax
- ▶ Cannot Perform Sequential Broadcasting by Redialing, or Cannot Dial Using the Numeric Buttons
- ▶ Cannot Send a Fax Clearly
- ▶ Errors Often Occur When You Send a Fax

## Cannot Send a Fax

- **Check 1: Is the power turned on?**

- You cannot send faxes if the power is turned off. Press the **ON** button to turn the power on.
- If you disconnected the power cord without turning off the power (one of the buttons on the Operation Panel is lit), reconnecting it turns on the power automatically.
- If you disconnected the power cord after pressing the **ON** button to turn off the power (no buttons on the Operation Panel are lit), reconnect it, then press the **ON** button to turn on the power.
- If the power was turned off due to power failure, etc., the power is automatically turned on when the power failure is resolved.

- **Check 2: Is the document being sent from memory?**

When the **In Use/Memory** lamp is flashing, another document is being sent from memory. Wait until the machine finishes sending it.

- **Check 3: Is the telephone line connected to the External Device Jack?**

Reconnect it to the Telephone Line Jack. Refer to your setup manual. If you still cannot send a fax, there is a problem with the telephone line. Contact your telephone company and the manufacturer of your terminal adapter or telephone adapter.

- **Check 4: Is the telephone line type set correctly?**

Check the telephone line type setting and change it as necessary.

▶ Confirming the Telephone Line Connection

- **Check 5: Is Hook key setting set to Disable? (MX860 series)**

When you send a fax manually, dial the number with Hook key setting set to Enable, or dial the number using the telephone connected to the machine.

- **Check 6: Is Dial tone detect set to ON?**

Resend the fax after a while. If you still cannot send the fax, set Dial tone detect to OFF.

▶ Dial tone detect

- **Check 7: Is the fax number registered correctly for speed dialing?**

Make sure that the fax number is registered correctly for speed dialing.

▶ Registering Recipients for Speed Dialing

- **Check 8: Does an error occur during transmission?**

- Check the LCD for an error message.
  - ▶ A Message for Faxing Is Displayed on the LCD
- Print the Activity report and check for an error.
  - ▶ Printing the Activity report manually

- **Check 9: Is the telephone line connected correctly?**

Check that the telephone line is connected correctly to the proper jack. If so, then there is a problem with your telephone line. Contact your telephone company.

- **Check 10: Is the document loaded properly?**

Remove the document, then reload it on the Platen Glass or in the ADF.

 Loading Paper / Originals

- **Check 11: Does a printer error occur?**

Check the error message on the LCD, then resolve the problem.

 An Error Message Is Displayed on the LCD

If you are in a hurry, press the **Stop** button to close the message, then send the fax.

## Cannot Perform Sequential Broadcasting by Redialing, or Cannot Dial Using the Numeric Buttons

- **Check: Have you already selected the recipient from the redial history, or already dialed a number by using the Numeric buttons?**

You can dial one recipient by selecting from the redial history or by using the Numeric buttons as the recipient of sequential broadcasting. Select the recipient from the one-touch dial (MX860 series) or coded speed dial code list.

## Cannot Send a Fax Clearly

- **Check 1: Is the document loaded correctly?**

Remove the document, then reload it on the Platen Glass or in the ADF.

 Loading Paper / Originals

- **Check 2: Is the Platen Glass and/or the inner side of the Document Cover dirty?**

Clean the Platen Glass and/or the inner side of the Document Cover, then reload the document.

 Cleaning the Platen Glass and Document Cover

- **Check 3: Is the image quality setting or the scan contrast setting suitable for the document?**

On the LCD, select an image quality setting and a scan contrast setting that are suitable for the document.

 Sending Faxes

- **Check 4: Is the original document loaded with the wrong side facing upwards or downwards?**

When loading a document on the Platen Glass, the side to be scanned should be face down. When loading a document in the ADF, the side to be scanned should be face up.

- **Check 5: Are you scanning thick or curled documents?**

Thick or curled documents may not be sent as good quality faxes, because of a shadow or distortion caused when such documents are scanned.

Press on the Document Cover with your hand when scanning.

## Errors Often Occur When You Send a Fax

- **Check: Check the telephone line condition or the connection.**

If the telephone line or connection is poor, reducing the transmission start speed may correct the error.

Reduce the transmission start speed.

 TX start speed

## Advanced Guide

Advanced Guide > Troubleshooting > Telephone Problems

# Telephone Problems

- ▶ Cannot Dial
- ▶ Telephone Disconnects During a Call

## Cannot Dial

- **Check 1: Is the telephone line connected correctly?**

Check that the telephone line is connected correctly. Refer to your setup manual.

- **Check 2: Is the telephone line type set correctly?**

Check the telephone line type setting and change it as necessary.

▶ Confirming the Telephone Line Connection

## Telephone Disconnects During a Call

- **Check: Is the telephone line or the telephone (or a peripheral device such as an external telephone, an answering machine, or a computer modem) connected correctly?**

Check that the telephone line and the telephone (or a peripheral device such as an external telephone, an answering machine, or a computer modem) are connected correctly.

Page top ↑

## Advanced Guide

Advanced Guide > Troubleshooting > FAQs

---

### FAQs

- ▶ No Printing Results/Printing Is Blurred/Colors Are Wrong/White Streaks
- ▶ Machine Moves But Ink Is Not Ejected
- ▶ Cannot Install the MP Drivers
- ▶ Printing Does Not Start
- ▶ Copying/Printing Stops Before It Is Completed
- ▶  Writing Error/Output Error/Communication Error
- ▶ Print Results Not Satisfactory
- ▶ Paper Jams
- ▶ Paper Does Not Feed Properly

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > If You Cannot Resolve the Problem

# If You Cannot Resolve the Problem

If you cannot resolve the problem with any of the workarounds in this chapter, please contact the seller of the machine or the service center.

Canon support staff are trained to be able to provide technical support to satisfy customers.

### Caution

- If the machine emits any unusual sound, smoke, or odor, turn it off immediately. Unplug the power cord from the outlet and contact the seller or the service center. Never attempt to repair or disassemble the machine yourself.
- Attempts by customers to repair or take apart the machine will invalidate any warranty regardless of whether the warranty has expired.

Before contacting the service center, confirm the following:

- Product name:  
\* Your machine's name is located on the front cover of the setup manual.
- Serial number: please refer to the setup manual
- Details of the problem
- What you tried to solve the problem, and what happened

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > Instructions for Use (Printer Driver)

# Instructions for Use (Printer Driver)

This printer driver is subject to the following restrictions. Keep the following points in mind when using the printer driver.

## Restrictions on the Printer Driver

- Depending on the document type to be printed, the paper feed method specified in the printer driver may not operate correctly.  
If this happens, open the printer driver setup screen from the Print dialog box of the application software, and check the setting in the Paper Source field on the Main tab.
- With some applications, the Copies setting in the Page Setup tab of the printer driver may not be enabled.  
In this case, use the copies setting in the Print dialog box of the application software.
- If the selected Language in the About dialog box does not match the operating system interface language, the driver screen may not be displayed properly.
- Do not change the Advanced tab items of the printer properties. If you change any of the items, you will not be able to use the following functions correctly.  
Also, if Print to file is selected in the Print dialog box of the application software and with applications that prohibit EMF spooling, such as Adobe Photoshop LE and MS Photo Editor, the following functions will not operate.
  - Preview before printing on the Main tab
  - Prevent loss of print data in the Print Options dialog box
  - Page Layout, Poster, Booklet, Duplex Printing (manually), Specify Margin..., Print from Last Page, Collate, and Stamp/Background... on the Page Setup tab
- Since the resolution in the preview display differs from the printing resolution, text and lines in the preview display may appear different from the actual print result.
- With some applications, the printing is divided into multiple print jobs.  
To cancel printing, delete all divided print jobs.
- If image data is not printed correctly, display the Print Options dialog box from the Page Setup tab and change the setting of Disable ICM required from the application software. This may solve the problem.
- If you use the Bluetooth option and perform one of the actions listed below, the print job may not end and "Printing" may remain displayed on the status monitor even after printing ends and the printout is ejected. If this happens, either click the Cancel Printing button on the Status Monitor or cancel that print job from the print job queue of the printer.
  - If you move the machine during printing to a location where radio waves cannot reach or if the radio wave status becomes poor
  - If you turn off the machine
- If you are using a Bluetooth printer and you cancel printing after a printer error occurs, you may not be able to execute subsequent printing operations. If this happens, turn off the machine and turn it back on again.
- If you are using Bluetooth, you cannot use the operation panel on the machine while the status monitor is displayed from View Printer Status... on the Maintenance tab.
- Software windows may not appear correctly on Windows Vista when fonts are set to Larger scale. If you want to display the windows with Larger scale fonts, set the desktop theme to Windows Classic as follows:
  1. Select Control Panel from the Start menu.
  2. Select Appearance and Personalization -> Personalization -> Theme.  
The Theme Settings dialog box opens.

3. At the Theme Settings dialog box, click the Themes tab, and select Windows Classic from Theme.
  4. Click OK.  
Desktop changes to Windows Classic display.
- The card slot (memory card) of the machine may become inaccessible. In such cases, restart the machine or turn it off and reconnect the USB cable.

## Points to Note with Applications

- There are following restrictions in Microsoft Word (Microsoft Corporation).
  - If Microsoft Word has the same printing functions as the printer driver, use Word to specify them.
  - When selecting Scaled, Fit-to-Page, or Page Layout from the Page Layout list on the Page Setup tab, the selected printing function may not be effective, depending on the version of Word. If this happens, follow the procedure below.
    1. Open Word's Print dialog box.
    2. Open the printer driver setup window, specify Page Layout on the Page Setup tab, and click OK.
    3. Without starting printing, close the Print dialog box.
    4. Open Word's Print dialog box again.
    5. Open the printer driver setup window again and click OK.
    6. Start printing.
- Illustrator/Adobe Systems Inc.  
If Bitmap Printing takes effect, printing may take time or some data may not be printed. Print after clearing the Bitmap Printing check box in the Print dialog box.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > General Notes (Scanner Driver)

# General Notes (Scanner Driver)

ScanGear (scanner driver) is subject to the following restrictions. Keep these points in mind when using it.

## Scanner Driver Restrictions

- When using the NTFS file system, the TWAIN data source may not be invoked. This is because the TWAIN module cannot be written to the winnt folder for security reasons. Contact the computer's administrator for help.
- Some computers (including laptops) connected to the machine may not resume correctly from standby mode. In that case, restart the computer.
- Do not connect two or more machines or multifunction printers with scanner function to the same computer simultaneously. If multiple scanning devices are connected, you cannot scan from the Operation Panel of the machine and also may experience errors while accessing the devices.
- Software screens may not appear correctly on Windows Vista when font size is set to Larger scale. If you want to display the screens with Larger scale fonts, change the theme in Appearance and Personalization to Windows Classic as follows:
  1. From the Start menu, select Control Panel.
  2. Select Appearance and Personalization > Personalization > Theme.  
The Theme Settings dialog box opens.
  3. On the Theme tab of the Theme Settings dialog box, select Windows Classic under Theme.
  4. Click OK.Desktop changes to Windows Classic view.
- Use the default display font size of the OS. Otherwise, software screens may not appear correctly.
- Scanning may fail if the computer has resumed from sleep or standby mode. In that case, follow these steps and scan again.
  1. Turn off the machine.
  2. Exit ScanGear (scanner driver), then disconnect the USB cable from the computer and reconnect it.
  3. Turn on the machine.
- ScanGear (scanner driver) cannot be opened in multiple applications at the same time. Within an application, ScanGear (scanner driver) cannot be opened for the second time when it is already open.
- Be sure to close the ScanGear (scanner driver) window before closing the application.
- With network connection, the machine cannot be accessed from multiple computers at the same time.
- With network connection, scanning takes longer than usual.
- Make sure that you have adequate disk space available when scanning large images at high resolutions. For example, at least 300 MB of free space is required to scan an A4 document at 600 dpi in full-color.
- ScanGear (scanner driver) and WIA driver cannot be used at the same time.
- Do not enter the computer into sleep or hibernate state during scanning.
- Calibration may take time if the machine is connected via USB 1.1.

## Applications with Restrictions on Use

- If you start Media Center included in Windows XP Media Center Edition 2005, you may not be able to scan using the Operation Panel of the machine. In that case, restart the computer.
- You cannot scan images with Media Center included in Windows Vista™ and Windows XP Media Center Edition 2005. Scan with other applications such as MP Navigator EX.
- In some applications, you may encounter a problem when you use Multi-Crop in the Advanced Mode tab of ScanGear (scanner driver). In that case, scan each document individually, changing Paper

Size according to the document.

- In some applications, if you select the View scanned images checkbox in the Auto Scan Mode tab of ScanGear (scanner driver), the window displaying the thumbnails of the scanned images may close automatically.
- Some applications may not display the TWAIN user interface. In that case, refer to the application's manual and change the settings accordingly.
- Some applications do not support continuous scanning of multiple documents. In some cases, only the first scanned image is accepted, or multiple images are scanned as one image. For such applications, do not scan multiple documents from the ADF.
- When scanning platen size images into a Microsoft Office application (such as Word, Excel or PowerPoint), click Custom Insert in the Insert Picture from Scanner or Camera screen. Otherwise, images may not be scanned correctly.
- Images may not be scanned correctly in some applications. In that case, increase the operating system's virtual memory and retry.
- When image size is too large (such as when scanning large images at high resolution), your computer may not respond or the progress bar may remain at 0% depending on the application. In that case, cancel the action (for example by clicking Cancel on the progress bar), then increase the operating system's virtual memory or reduce the image size/resolution and retry. Alternatively, scan the image via MP Navigator EX first, then save and import it into the application.

[Page top↑](#)

## Advanced Guide

Advanced Guide > Troubleshooting > General Notes (Fax Driver)

### General Notes (Fax Driver)

This fax driver is subject to the following restrictions. Keep the following points in mind when using the fax driver.

- **Microsoft Excel 2002 may not always work correctly when sending a document as a fax using the fax driver and with the option Allow A4/Letter Paper Resizing. Follow the instructions below to solve the problem:**

1. Click Options... from the Tools menu.
2. Uncheck the Allow A4/Letter Paper Resizing option on the International tab.

- **If you use a network compatible printer, the following message appears to stop sending if you send a fax from your computer to a printer on the network when someone else is sending from another computer:**

"The fax transmission was unsuccessful. Check the followings and send your fax again:

- cable connections
- printer status
- recipient information
- recipient's fax line is not busy
- (when connected to the network) fax is not being sent from other computer"

- **If you assign the fax driver to the Bluetooth port, you cannot send a fax from the computer.**

[Page top↑](#)

## Advanced Guide

Advanced Guide > Appendix

---

# Appendix

- ▶ Printing Area
- ▶ Deleting the Undesired Print Job
- ▶ Updating the MP Drivers
- ▶ Uninstalling the On-Screen Manuals
- ▶ Transporting the Machine
- ▶ Opening the Printer Properties Dialog Box (Windows)
- ▶ Opening the Page Setup and Print Dialog Box (Macintosh)
- ▶ Opening the Canon IJ Printer Utility (Macintosh)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Appendix > Printing Area


### Printing Area

To ensure the best print quality, the machine allows a margin along each edge of media. The actual printable area will be the area inside these margins.

Recommended printing area : Canon recommends that you print within this area.

Printable area : The area where it is possible to print.

However, printing in this area can affect the print quality or the paper feed precision.

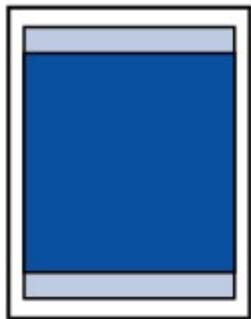

#### Note

##### ■ Borderless Printing

- By selecting Borderless Printing option, you can make prints with no margins.
- When performing Borderless Printing, slight cropping may occur at the edges since the printed image is enlarged to fill the whole page.
- For Borderless Printing, use the following paper:
  - Glossy Photo Paper "Everyday Use" GP-501
  - Photo Paper Glossy GP-502
  - Photo Paper Plus Semi-Gloss SG-201
  - Photo Paper Pro Platinum PT-101
  - Photo Paper Plus Glossy II PP-201
  - Photo Paper Pro II PR-201
  - Matte Photo Paper MP-101

Performing Borderless Printing on any other type of paper may substantially reduce printing quality and/or result in printouts with altered color hues.

Borderless Printing on plain paper may result in printouts with reduced quality. Use them only for test printing. You can perform Borderless Printing on plain paper only when printing from your computer.

- Depending on the type of paper, Borderless Printing may reduce the print quality at the top and bottom edges of the paper or cause these parts to become smudged.
- In Borderless Copying, you can specify the amount of extension by Extended copy amount in Device settings.

▶ [Changing the Machine Settings on the LCD](#)

▶ [Letter, Legal](#)

▶ [Envelopes](#)

▶ [Other Sizes than Letter, Legal, Envelopes](#)


## Advanced Guide

Advanced Guide > Appendix > Printing Area > Other Sizes than Letter, Legal, Envelopes

### Other Sizes than Letter, Legal, Envelopes

Size	Printable Area (width x height)
A5	5.56 x 7.95 inches / 141.2 x 202.0 mm
A4	8.00 x 11.38 inches / 203.2 x 289.0 mm
B5	6.90 x 9.80 inches / 175.2 x 249.0 mm
4" x 6" / 10 x 15 cm	3.73 x 5.69 inches / 94.8 x 144.4 mm
4" x 8" / 10 x 20 cm*	3.73 x 7.69 inches / 94.8 x 195.2 mm
5" x 7" / 13 x 18 cm*	4.73 x 6.69 inches / 120.2 x 169.8 mm
8" x 10" / 20 x 25 cm	7.73 x 9.69 inches / 196.4 x 246.0 mm
Wide	3.73 x 6.80 inches / 94.8 x 172.6 mm

\* This page size can be used only when printing from your computer.

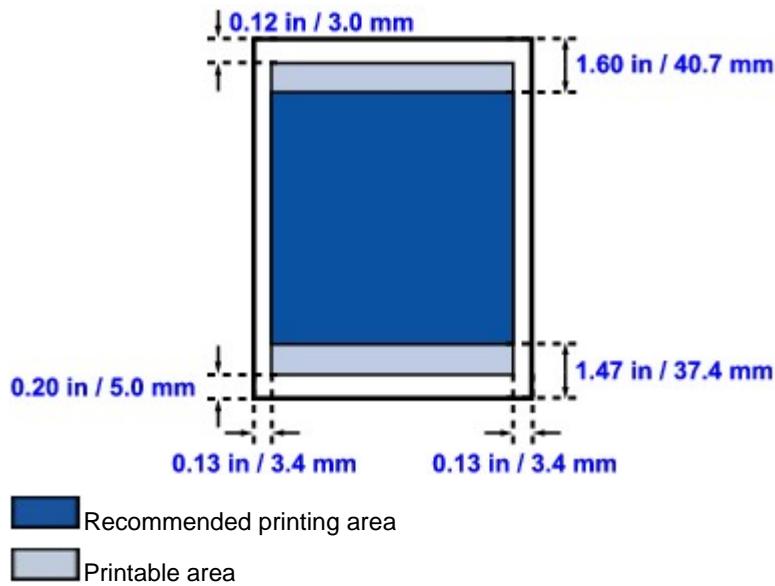


[Page top ↑](#)

## Advanced Guide

Advanced Guide > Appendix > Printing Area > Letter, Legal

### Letter, Legal

Size	Printable Area (width x height)
Letter	8.00 x 10.69 inches / 203.2 x 271.4 mm
Legal	8.00 x 13.69 inches / 203.2 x 347.6 mm

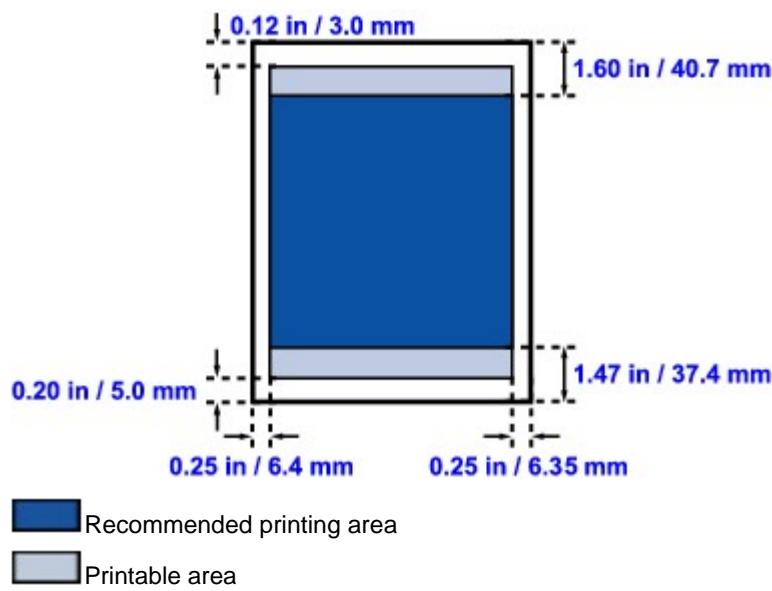

[Page top ↑](#)


## Advanced Guide

Advanced Guide > Appendix > Printing Area > Envelopes

### Envelopes

Size	Recommended Printing Area (width x height)
European DL*	4.06 x 7.50 inches / 103.2 x 190.5 mm
US Comm. Env. #10*	3.86 x 8.34 inches / 98.0 x 211.8 mm

\* This page size can be used only when printing from your computer.

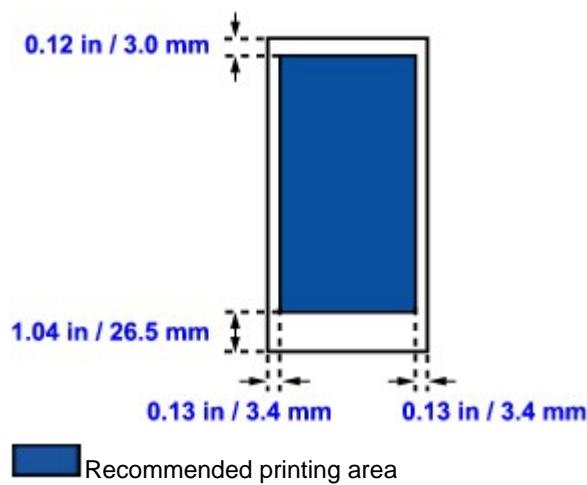

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Appendix > Deleting the Undesired Print Job

# Deleting the Undesired Print Job

If the printer does not start printing, the print job data cancelled or failed may be remaining. Delete the undesired print job by using the Canon IJ Status Monitor.

## 1. Display the Canon IJ Status Monitor

Click the Status Monitor button displayed on the Task Bar.  
The Canon IJ Status Monitor appears.

## 2. Display the print jobs

Click Display Print Queue....  
The print queue window opens.

## 3. Delete the print jobs

Select Cancel All Documents from the Printer menu.  
When the confirmation message appears, click Yes.  
The print job is deleted.

### Important

- Users who have not been granted access permission for printer management cannot delete the print job of another user.

### Note

- When you perform this operation, all print jobs are deleted. If the print queue list contained a necessary print job, start the printing process over from the beginning.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Appendix > Updating the MP Drivers

---

# Updating the MP Drivers

- ▶ Obtaining the Latest MP Drivers
- ▶ Uninstalling the MP Drivers
- ▶ Before Installing the MP Drivers
- ▶ Installing the MP Drivers

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Appendix > Updating the MP Drivers > Obtaining the Latest MP Drivers

# Obtaining the Latest MP Drivers

The MP Drivers include a printer driver, scanner driver (ScanGear), and fax driver.

By updating the MP Drivers to the latest version of the MP Drivers, unresolved problems may be solved.

Access our web site through the Internet and download the latest MP Drivers for your model.

### Important

- You can download the MP Drivers for free, but any Internet access charges incurred are your responsibility.
- Before installing the latest MP Drivers, delete the previously installed version.  
For information on how to delete the MP Drivers, refer to [Uninstalling the MP Drivers](#).

### Related Topics

- ▶ [Before Installing the MP Drivers](#)
- ▶ [Installing the MP Drivers](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Appendix > Updating the MP Drivers > Uninstalling the MP Drivers

# Uninstalling the MP Drivers

The MP Drivers you no longer use can be deleted.

When deleting the MP Drivers, first exit all programs that are running.

The procedure to delete the unnecessary MP Drivers is as follows:

## If There is an Uninstaller

### 1. Start the uninstaller

- In Windows Vista or Windows XP, select the Start menu -> All Programs -> "Your model name" -> MP Drivers Uninstaller.
- In Windows 2000, select the Start menu -> Programs -> "Your model name" -> MP Drivers Uninstaller.

The MP Drivers Uninstaller dialog box is displayed.

#### Important

- In Windows Vista, a confirmation/warning dialog box may appear when installing, uninstalling or starting software.  
This dialog box appears when administrative rights are required to perform a task.  
If you are logged on to an administrator account, click Continue or Allow to continue.  
Some applications require an administrator account to continue. If you are logged on to a standard account, switch to an administrator account, and restart the operation from the beginning.

### 2. Execute the uninstaller

Click Execute. When the confirmation message appears, click Yes.

When all the files have been deleted, click Complete.

The deletion of the MP Drivers is completed.

#### Important

- Printer driver, fax driver, and scanner driver (ScanGear) will be deleted if you uninstall the MP Drivers.

## If There is No Uninstaller

If there is no uninstaller in the Start menu of Windows Vista, follow these steps:

### 1. Select the printer to be deleted

Select the Start menu -> Control Panel -> Hardware and Sound -> Printers.

Click the model to delete, then press the Alt key on your keyboard. On the File menu, click Delete.

### 2. Delete the printer

If the User Account Control dialog box appears, click Continue. Then when the confirmation message appears, click Yes.

The icon is deleted.

### 3. Select the printer driver to be deleted

Press the Alt key. On the File menu, select Run as administrator, and then click Sever Properties....

If the User Account Control dialog box appears, click Continue.

Click the Drivers tab. In the Installed printer drivers list, click the printer to delete.

### 4. Delete the printer driver

When you click Remove..., Remove Driver And Package dialog box is displayed.

Select Remove driver and driver package, and then click OK.

In the confirmation dialog box, click Yes.

When data collection is completed in the Remove Driver Package dialog box, click Delete.

**5. Click OK.**

The deletion of the printer driver is complete.

 **Important**

- You may not be able to delete the printer driver properly from the Installed printer drivers list.  
If this happens, restart your computer, and try again.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Appendix > Updating the MP Drivers > Before Installing the MP Drivers

# Before Installing the MP Drivers

This section describes the items that you should check before installing the MP Drivers. You should also refer to this section if the MP Drivers cannot be installed.

## Check the Machine Status

- Properly connect the personal computer and the machine. For details on connection instructions, refer to the "Setup the Machine and the Computer" in the manual: Getting Started.
- Turn off the machine.

## Check the Personal Computer Settings

- Terminate all running applications.
- In Windows Vista, log on as a user who has the administrator rights.  
In Windows XP, log on as the computer administrator.  
In Windows 2000, log on as a member of the Administrators group.

### Note

- If an old version of the MP Drivers is already installed, first delete (uninstall) that version. For instructions on deleting the MP Drivers, see [Uninstalling the MP Drivers](#).

## Related Topics

- ▶ [Obtaining the Latest MP Drivers](#)
- ▶ [Installing the MP Drivers](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Appendix > Updating the MP Drivers > Installing the MP Drivers

# Installing the MP Drivers

You can access our web site through the Internet and download the latest MP Drivers for your model.

The procedure for installing the downloaded MP Drivers is as follows:

## 1. Turn off the machine

### Important

- If you turn on the computer while the machine is on, the Windows Plug and Play function is executed automatically, and the Found New Hardware window (Windows Vista) or Found New Hardware Wizard window (Windows XP, Windows 2000) is displayed. In this case, click Cancel.

## 2. Start the installer

Double-click the icon of the downloaded file.

The installation program starts.

### Important

- In Windows Vista, a confirmation/warning dialog box may appear when installing, uninstalling or starting software.  
This dialog box appears when administrative rights are required to perform a task.  
If you are logged on to an administrator account, click Continue or Allow to continue.  
Some applications require an administrator account to continue. If you are logged on to a standard account, switch to an administrator account, and restart the operation from the beginning.

## 3. Install the driver

At the Welcome window, click Next.

Read the contents of the License Agreement window. After checking the contents, click Yes.

Installation of the MP Drivers begins.

After the Installation Complete window is displayed, check that the machine and the computer are connected through a cable.

If the machine is connected directly to the network, follow the procedure below to select the connection destination.

1. Check the Select printer port check box, and click Manual section.
2. At the Select printer port window, select printer output port (FILE) as connection destination, and then click OK.

## 4. Complete the installation

Click Complete.

Turn on the machine, and wait awhile until the connection is recognized.

If you are using a USB connection, the installation of the MP Drivers ends here.

Depending on the environment you are using, a message prompting you to restart the computer may be displayed. To complete the installation properly, restart the computer.

If a problem occurs, such as not being able to scan through a network connection, reinstall Canon IJ Network Tool. To do so, download the latest Canon IJ Network Tool from our web site, and then set up the software.

### Important

- You can download the MP Drivers for free, but any Internet access charges incurred are your responsibility.

## Related Topics

➡ Obtaining the Latest MP Drivers

◀ Before Installing the MP Drivers

Page top ↑

## Advanced Guide

Advanced Guide > Appendix > Uninstalling the On-Screen Manuals

# Uninstalling the On-Screen Manuals

Follow the procedure below to uninstall all of the installed on-screen manuals from your computer.

Before uninstalling the on-screen manuals, exit all on-screen manuals that are opening.



All of the installed on-screen manuals will be deleted at the same time.

1. Click Start > All Programs (Programs in Windows 2000) > Canon XXX Manual (where "XXX" is your machine's name) > Uninstall.
2. Click OK when the confirmation message appears.

### Note

- When the message prompting you to restart your computer is displayed, click OK to restart your computer.



On-screen manuals other than printer driver's help and scanner driver's help are uninstalled at a time.

1. Select Applications on the Go menu.
2. Double-click the Canon Utilities folder, and then the IJ Manual folder.
3. Drag the folder of your machine's name into the trash.
4. Drag the  Canon XXX On-screen Manual icon (where "XXX" is your machine's name) on your desktop into the trash.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Appendix > Transporting the Machine

# Transporting the Machine

When relocating the machine, pack the machine using the original packing materials.

If you do not have the original packing materials, pack the machine carefully using protective material and place it inside a sturdy box.

### Important

- Do not transport or store the machine slanted, vertically, or upside-down, as the ink may leak and damage the machine.

**1.** Turn the machine off.

**2.** Confirm that all the lamps on the Operation Panel have gone out, and then unplug the machine.

### Important

- Do not unplug the machine while one of the mode buttons (e.g., the **COPY** button) is lit or flashing, as it may cause malfunction or damage to the machine, making the machine unable to print.

**3.** Retract the Paper Support and the Output Tray Extension, then close the Paper Output Tray.

**4.** Disconnect the printer cable from the computer and from the machine, and then disconnect the power plug from the machine.

**5.** Use adhesive tape to secure all the covers on the machine to keep them from opening during transportation. Then pack the machine in the plastic bag.

**6.** Attach the protective material to the machine when packing the machine.

### Important

- Pack the machine with the Print Head and ink tanks left installed in the machine.

### Note

- Clearly label the box as "FRAGILE" or "HANDLE WITH CARE".

## Advanced Guide

Advanced Guide > Appendix > Opening the Printer Properties Dialog Box (Windows)

# Opening the Printer Properties Dialog Box (Windows)

The printer driver setup window can be displayed through the application software in use or the Start menu of the Windows.

## Open the Printer Properties Dialog Box through the Application Software

Follow the procedure below to configure print settings when printing.

### 1. Select the command you perform printing on the application software in use.

In general, select Print on the File menu to open the Print dialog box.

### 2. Select your model name and click Preferences (or Properties).

The printer properties dialog box opens.



### Note

- Depending on application software you use, command names or menu names may vary and there may be more steps. For details, refer to the user's manual of your application software.

## Open the Printer Properties Dialog Box through the Start Menu

Follow the procedure below to perform maintenance operations such as print head cleaning, or to configure print settings that are common for all application software.

### 1. Select items from the Start menu as shown below.

- In Windows Vista, select the Start menu > Control Panel > Hardware and Sound > Printers.
- In Windows XP, select the Start menu > Control Panel > Printers and Other Hardware > Printers and Faxes.
- In Windows 2000, select the Start menu > Settings > Printers.

### 2. Right-click your model name icon, and then select Printing Preferences from the displayed menu.

The printer properties dialog box opens.



### Important

- Opening the printer properties dialog box through Properties displays such tabs regarding the Windows functions as the Ports (or Advanced) tab. Those tabs do not appear when opening through Printing Preferences or application software. About tabs regarding Windows functions, refer to the user's manual for the Windows.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Appendix > Opening the Page Setup and Print Dialog Box (Macintosh)

# Opening the Page Setup and Print Dialog Box (Macintosh)

You can open the Page Setup dialog box and the Print dialog box from the application program you are using.

## Opening the Page Setup Dialog Box

Open the Page Setup dialog box to specify page (paper) settings before printing.

**1. Select Page Setup... on the File menu in your application program.**

The Page Setup dialog box opens.

## Opening the Print Dialog Box

Open the Print dialog box to specify print settings before printing.

**1. Select Print... on the File menu in your application program.**

The Print dialog box opens.

[Page top ↑](#)

## Advanced Guide


Advanced Guide > Appendix > Opening the Canon IJ Printer Utility (Macintosh)

# Opening the Canon IJ Printer Utility (Macintosh)

To open the Canon IJ Printer Utility, follow the procedure below.


## In Mac OS X v.10.5.x

- 1. Select System Preferences on the Apple menu.**
- 2. Click Print & Fax.**
- 3. Select your machine's name in the Printers and click Open Print Queue....**  
The job list of your machine is displayed.
- 4. Click Utility.**

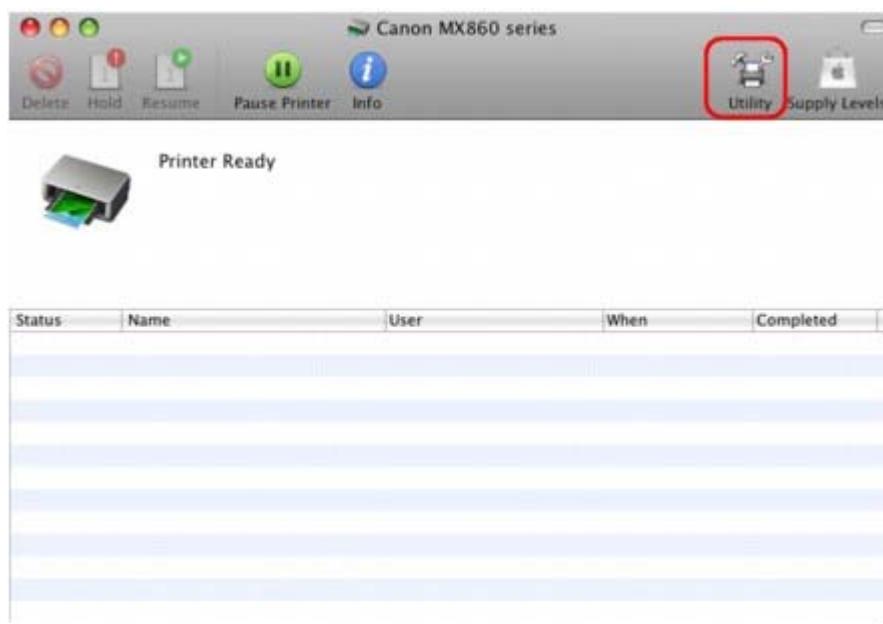

The Printer List opens.

- 5. Select your machine's name in the Product list and click Maintenance.**

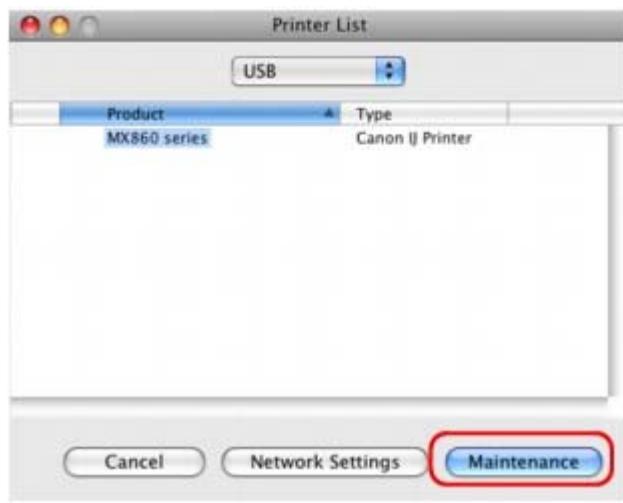

The Canon IJ Printer Utility starts up.

## In Mac OS X v.10.4.x or Mac OS X v 10.3.9

1. Select Applications on the Go menu.
2. Double-click the Utilities folder, and then double-click the Printer Setup Utility icon.  
The Printer List opens.
3. Select your machine's name in the Name list and click Utility.



4. Select your machine's name in the Product list and click Maintenance.



The Canon IJ Printer Utility starts up.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > Using Easy-PhotoPrint EX

Easy-PhotoPrint EX

# Using Easy-PhotoPrint EX

## --- Transforming Your Photos into Creative Works of Art ---

Easy-PhotoPrint EX allows you to create albums, calendars and stickers easily using photos taken with digital cameras.

You can also print borderless photos easily.

### Start Easy-PhotoPrint EX

 Click Here: [Easy-PhotoPrint EX](#)


#### Note

- See the section below for details on how to use Easy-PhotoPrint EX.  
▶ [Printing with the Bundled Application Software](#)

### Create a Personalized Photo Album

Creating a personalized photo album is an easy task if you use Easy-PhotoPrint EX!

All you need to do is select which photos to use, select a layout, then load paper into your printer and print. After you bind the printed sheets, you'll have the one and only album of your memories!

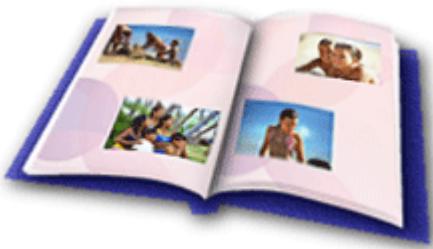

You can change the layout and background, and attach comments to photos.



You can also select the size and orientation.

You can arrange a photo across the left and right pages.

CHECK! .....

Select a theme (background design) to create a single-themed album.

### Decorate Items with Text and Frames

You can add text and frames to photos. Attach a description of the photo in an album, and add a frame to enhance the photo's atmosphere.



CHECK! •••••

Select Album to add text and frames. You cannot decorate photos with Photo Print.

### Create a Calendar Using Your Favorite Photos

Create calendars easily with Easy-PhotoPrint EX. Create your own calendar using your favorite photos! It'll be exciting to turn the calendar pages.



You can use all kinds of photos.

You can also create 2-month, 6-month and 12-month calendars.

### Create Stickers

Create stickers easily with Easy-PhotoPrint EX!

Create stickers of your favorite photos and share them with your friends!



CHECK! •••••

You can add text to photos.

## Advanced Guide

Advanced Guide > Using MP Navigator EX

### MP Navigator EX

## Using MP Navigator EX

MP Navigator EX is an application that enables you to easily scan photos and documents. It is suitable even for beginners.

### Start MP Navigator EX



### Note

- See "Let's Try Scanning" for details on how to scan images using MP Navigator EX.


### Scan Photos and Documents

You can scan easily by navigating through MP Navigator EX screens. You can also save/print scanned images using MP Navigator EX.



### Scan Small Documents at One Time

You can scan multiple small documents (photos, cards, etc.) at one time. It is useful as you do not need to scan multiple times.

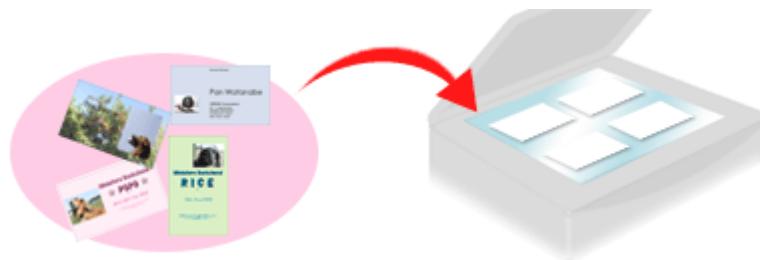


### Scan Large Documents

You can easily scan documents that are larger than the Platen using MP Navigator EX. It allows you to scan the left and right halves of a document separately and combine them back into one image.




### Scan with One-click

In One-click Mode, MP Navigator EX completes from scanning to saving, with a click of an icon. One-click Mode also allows you to scan and save images as PDF files or attach them to e-mail automatically.

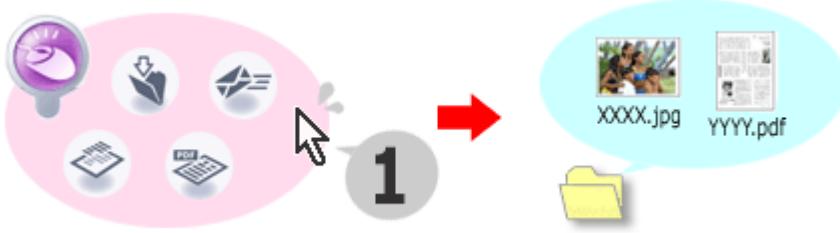

### Scan and Correct/Enhance Photos

You can easily correct/enhance scanned photos using MP Navigator EX. You do not need to use other applications.

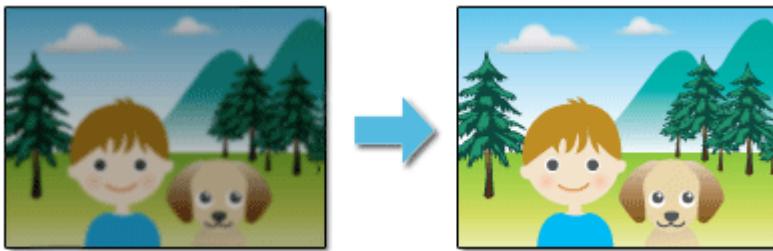

For details on how to use MP Navigator EX, refer to " Scanning with the Bundled Application Software ."

[Page top↑](#)


## Advanced Guide

Advanced Guide > About Solution Menu

# About Solution Menu

## Quick Shortcut!! Solution Menu


Solution Menu is a menu window that provides quick access from your desktop to Canon applications, manuals, and online product information.

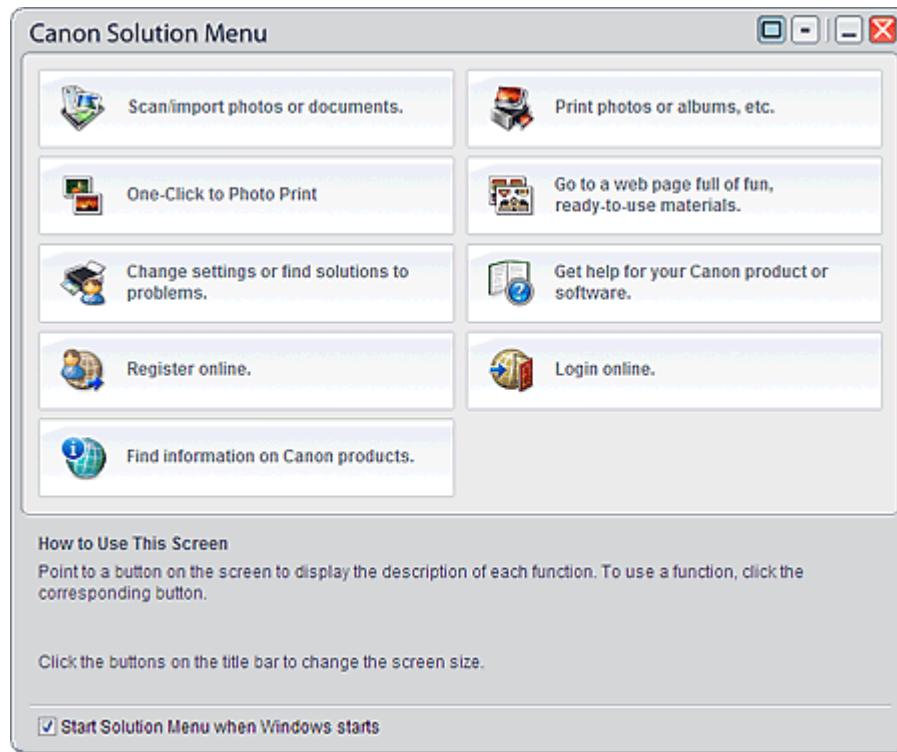

### Important

- The number and types of buttons displayed in the window may vary depending on your printer and region.

## Starting Solution Menu

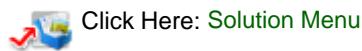

To start from desktop, see below.

Double-click the Canon Solution Menu icon on the desktop. Alternatively, from the Start menu, select (All) Programs > Canon Utilities > Solution Menu > Solution Menu.

From the next time, Solution Menu starts when Windows starts.

If the Start Solution Menu when Windows starts checkbox at the bottom left of the window is not selected, Solution Menu does not start when Windows starts.

### Note


- Solution Menu will start automatically when you install it using the Setup CD-ROM that accompanies the printer.

## Changing the Window Size

Click (window size: large) or (window size: small) on the title bar to change the window size (large or small).

Solution Menu opens with the last used window size next time it is started.

- When screen size is small

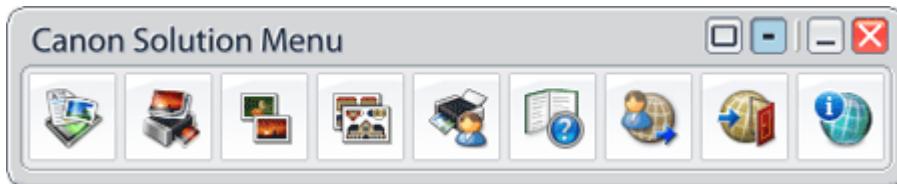

## Starting an Application

1. Point to a button on the window to display the description of each application.
2. By clicking each button, the introduced application starts.

Follow the same steps to view the manuals or online product information.

### Important

- Internet connection is required to access the online information. Internet connection fees apply.

## Exiting Solution Menu

Click  (Close) on the title bar.

## Restriction on Use of Solution Menu

This software is subject to the following restriction. Keep this point in mind when using it.

- All icons of the installed applications that support Solution Menu are displayed in the window. After the installation, you cannot rearrange the icons or delete only the icons.

[Page top↑](#)

## Advanced Guide

Advanced Guide > About Network Communication

---

# About Network Communication

- ▶ [Changing and Confirming Network Settings](#)
- ▶ [Troubleshooting](#)
- ▶ [Appendix](#)
- ▶ [Glossary](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Changing and Confirming Network Settings

# Changing and Confirming Network Settings

- ▶ Canon IJ Network Tool
- ▶ Canon IJ Network Tool Dialog Box
- ▶ Canon IJ Network Tool Menus
- ▶ Changing the Settings in the Wireless LAN Sheet
- ▶ Changing the WPA or WPA2 Detailed Settings
- ▶ Changing the Settings in the Wired LAN Sheet
- ▶ Changing the Settings in the Admin Password Sheet
- ▶ Monitoring Wireless LAN Status
- ▶ Initializing the Network Settings of the Machine
- ▶ Viewing the Modified Settings
- ▶ Printing Out Network Setting Information

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Changing and Confirming Network Settings > Canon IJ Network Tool

# Canon IJ Network Tool

The Canon IJ Network Tool is a utility that enables you to display and modify the machine network settings. It is installed when the machine is set up.

### Important

- Do not start up the Canon IJ Network Tool while printing.
- Do not print when the Canon IJ Network Tool is running.
- If the firewall function of your security software is turned on, a message may appear warning that Canon software is attempting to access the network. If the warning message appears, set the security software to always allow access.

## Starting up Canon IJ Network Tool

### 1. Double-click the Canon IJ Network Tool shortcut icon on the desktop.

Click Start and select All programs (or Programs), Canon IJ Network Utilities, Canon IJ Network Tool, and then Canon IJ Network Tool.

[Page top ↑](#)

## Advanced Guide


Advanced Guide > About Network Communication > Changing and Confirming Network Settings > Canon IJ Network Tool Dialog Box

# Canon IJ Network Tool Dialog Box

This section describes the items displayed on the Canon IJ Network Tool dialog box.

### Important

- To use the machine over LAN, make sure you have the equipment necessary for the connection type, such as an access point or a LAN cable.

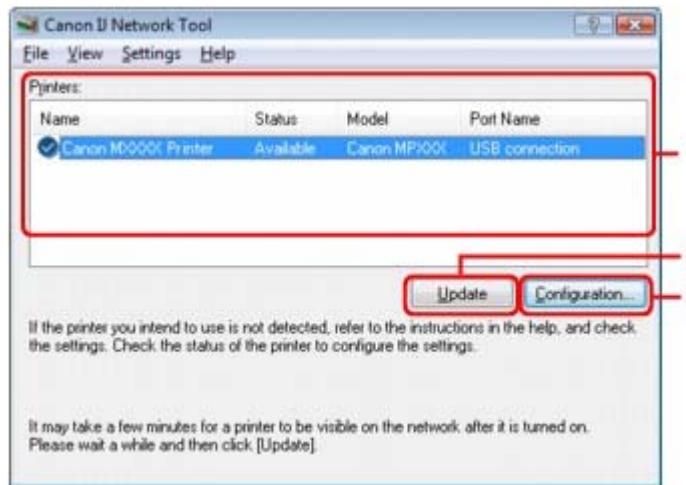

## 1. Printers

The printer name, status, printer model name, and port name are displayed.

A check mark next to the printer in the Name list indicates it is set as the default printer.

Configuration changes are applied to the selected printer.

## 2. Update

Performs printer detection again. Click this button if the target printer is not displayed.

### Important

- For a printer to be detected with the Canon IJ Network Tool, it must be connected via USB or a LAN.
- If No Driver is displayed for the name, associate the port with the printer.
- If Not Found is displayed for the status, check the location of the printer and access point.
- If the printer on a network is not detected, make sure that the printer is turned on, then click Update. It may take several minutes to detect printers. If the printer is still detected, connect the machine and the computer with a USB cable, then click Update.
- If the printer is being used from another computer, a dialog box is displayed informing you of this condition.

### Note

- This item has the same function as Refresh in the View menu.

## 3. Configuration

Click to configure settings of the selected printer.

### Note


- You cannot configure a printer that has the status Not Found.
- This item has the same function as Configuration in the Settings menu.

## Advanced Guide

Advanced Guide > About Network Communication > Changing and Confirming Network Settings > Canon IJ Network Tool Menus

# Canon IJ Network Tool Menus

This section describes the menus in the Canon IJ Network Tool dialog box.

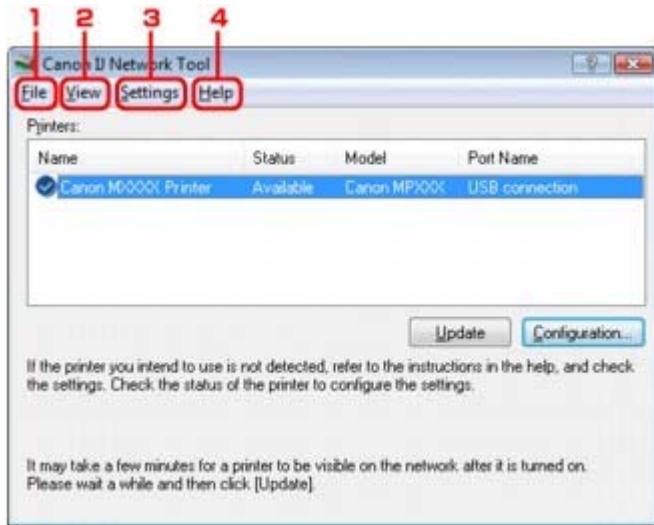

## 1. File menu

### Exit

Exits the Canon IJ Network Tool.

## 2. View menu

### Status

Displays the Status dialog box to confirm the printer connection status and wireless communication status.

### Refresh

Updates and displays the contents of Printers to the latest information.

### Important

- For a printer to be detected with the Canon IJ Network Tool, it must be connected via USB or a LAN.
- If No Driver is displayed for the name, associate the port with the printer.
- If Not Found is displayed for the status, check the location of the printer and access point.
- If the printer on a network is not detected, make sure that the printer is turned on, then click Update. It may take several minutes to detect printers. If the printer is still detected, connect the machine and the computer with a USB cable, then click Update.
- If the printer is being used from another computer, a dialog box is displayed informing you of this condition.

### Note

- This item has the same function as Update in the Canon IJ Network Tool dialog box.

### Network Information

Displays the Network Information dialog box to confirm the network settings of the printer and the computer.

### Display Warning Automatically

Enables or disables automatic display of warnings.

When this menu is selected, a warning is displayed if one or more ports are unavailable for printing.

## 3. Settings menu

### Configuration

Displays the Configuration dialog box to configure settings of the selected printer.

 **Note**

- 
- This item has the same function as Configuration in the Canon IJ Network Tool dialog box.

**Associate Port**

Displays the Associate Port dialog box and you can associate a port with the printer.  
This menu is available when No Driver is displayed for the selected printer. Associating a port with the printer enables you to use it.

**Maintenance**

Displays the Maintenance dialog box to revert the network settings of the printer to factory default and to mount the Card Slot as the network drive.

**4. Help menu****Help Topics**

Displays the application's online help.

**About**

Displays the version of the Canon IJ Network Tool.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Changing and Confirming Network Settings > Changing the Settings in the Wireless LAN Sheet

# Changing the Settings in the Wireless LAN Sheet

To change the wireless network settings of the printer, connect the printer and the computer with a USB cable temporarily. If you modify the wireless network settings of the computer over wireless connection without USB connection, your computer may not be able to communicate with the machine after modifying the settings.

### Note

- Select Wireless LAN active in the Change WLAN/LAN on the Operation Panel to change the settings in the Wireless LAN sheet.
- ▶ [Changing the Machine Settings on the LCD](#)

## 1. Start up the Canon IJ Network Tool.

▶ [Starting up Canon IJ Network Tool](#)

## 2. Select the printer in Printers.

## 3. Select Configuration from the Settings menu.

## 4. Click the Wireless LAN tab.

Click OK after changing configuration. A dialog box is displayed asking you for confirmation before the settings are sent to the printer. If you click Yes, the settings are sent to the printer and the Transmitted Settings dialog box is displayed.



### 1. Network Type

#### Infrastructure

Connects the printer to the wireless LAN with an access point.

### 2. SSID

The SSID of the wireless LAN is displayed

### Note

- Enter the same SSID that the access point is configured to use. The SSID is case sensitive.

### 3. Search

The Search dialog box is displayed to select an access point to connect to.

▶ [Search dialog box](#)

## Note

- When the Canon IJ Network Tool runs over a LAN, the button is grayed out and cannot be selected. Connect the printer and the computer with a USB cable temporarily to change the settings.

### 4. Encryption Method

Select the encryption method used over the wireless LAN.

## Important

- If all encryption types of the access point, printer, or computer do not match, the printer cannot communicate with the computer. If the printer cannot communicate with the computer after the encryption type of the printer was switched, make sure that encryption types for the computer and the access point matches that set to the printer.  
⇒ [How to Set a WEP/WPA/WPA2 Key](#)
- If you connect to a network that is not protected with security measures, there is a risk of disclosing data such as your personal information to a third party.

#### Do not use

Select to disable encryption.

#### Use WEP

Transmission is encrypted using a WEP key you specified.

If a WEP key has not been set, the WEP Details dialog box is displayed automatically. To change WEP settings set before, click Configuration to display the dialog box.

⇒ [WEP Details dialog box](#)

#### Use WPA/Use WPA2

Transmission is encrypted using a WPA or WPA2 key you specified.

The security has been strengthened more than WEP.

If a WPA or WPA2 key has not been set, the Authentication Type Confirmation dialog box is displayed automatically. To change WPA or WPA2 settings set before, click Configuration to display the WPA Details dialog box or WPA2 Details dialog box.

⇒ [Changing the WPA or WPA2 Detailed Settings](#)

### 5. Configuration

The detailed settings dialog box is displayed. The WEP, the WPA, or the WPA2 key selected in Encryption Method can be confirmed and changed.

#### For details on WEP setting:

⇒ [WEP Details dialog box](#)

#### For details on WPA or WPA2 setting:

⇒ [Changing the WPA or WPA2 Detailed Settings](#)

### 6. TCP/IP Setup

Sets the IP address of the printer to be used over the LAN. Set a value appropriate for your network environment.


#### Get IP address automatically

Select this option to use an IP address automatically assigned by a DHCP server. DHCP server functionality must be enabled on your wireless LAN router or access point.

#### Use next IP address

If no DHCP server functionality is available in your setup where you use the printer or you want to use a particular IP address, select this option to use a fixed IP address.

## • Search dialog box

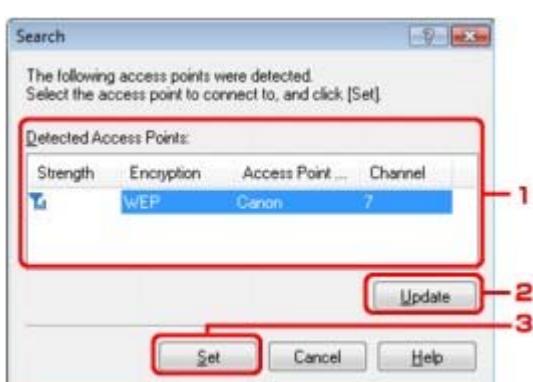

## 1. Detected Access Points

The signal strength from the access point, encryption type, name of access point, and the radio channel can be confirmed.

### Important

- If you connect to a network that is not protected with security measures, there is a risk of disclosing data such as your personal information to a third party.

### Note

- Signal strength is displayed as follows.



- Type of encryption is displayed as follows.

Blank: No encryption

WEP: WEP is set

WPA: WPA is set

WPA2: WPA2 is set

## 2. Update

Click to update the list of access points when your target access point is not detected.

If the target access point is set to the stealth mode, click Cancel to return to the previous screen and enter the access point's Service Set Identifier in SSID.

### Note

- Make sure that the access point is turned on.


## 3. Set

Click to set the access point's SSID in SSID on the Wireless LAN sheet.

### Note

- Depending on your settings, WEP Details dialog box, WPA Details dialog box, or WPA2 Details dialog box appears when you click the Set button. In the dialog box, configure the details to use the same encryption settings set to the access point.
- Access points that cannot be used by this machine (including those configured to use different encryption methods) are displayed grayed out and cannot be configured.

### • WEP Details dialog box

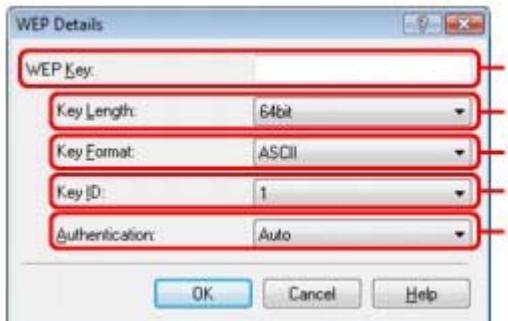

Specify the printer WEP settings. When changing the password (WEP key), the same change must be made to the password (WEP key) of the access point.

### 1. WEP Key

Enter the same key as the one set to the access point.

The number of characters and character type that can be entered differ depending on the key length and key format.

	Key Length	
	64 bit	128 bit

Key Format	ASCII	5 characters	13 characters
	Hexadecimal (Hex)	10 digits	26 digits

## 2. Key Length

Select either 64bit or 128bit.

## 3. Key Format

Select either ASCII or Hex.

## 4. Key ID

Select the Key ID (index) set to the access point.

## 5. Authentication

Select the authentication method to authenticate the printer's access to the access point. Normally, select Auto. If you want to specify the method manually, select Open System or Shared Key according to the setting of the access point.

### Important

- If the printer cannot communicate with the computer after the encryption type of the printer was switched, make sure that encryption types for the computer and the access point matches that set to the printer.

➡ [How to Set a WEP/WPA/WPA2 Key](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Changing and Confirming Network Settings > Changing the WPA or WPA2 Detailed Settings

# Changing the WPA or WPA2 Detailed Settings

To change the wireless network settings of the printer, connect the printer and the computer with a USB cable temporarily. If you modify the wireless network settings of the computer over wireless connection without USB connection, your computer may not be able to communicate with the machine after modifying the settings.

The example screenshots in this section refer to the WPA detailed settings.

## 1. Start up the Canon IJ Network Tool.

▶ Starting up Canon IJ Network Tool

## 2. Select the printer in Printers.


## 3. Select Configuration from the Settings menu.

## 4. Click the Wireless LAN tab.

## 5. Select Use WPA or Use WPA2 in Encryption Method and click Configuration.

Go to step 7 if encryption is not set to the printer.

## 6. Click Change Settings.

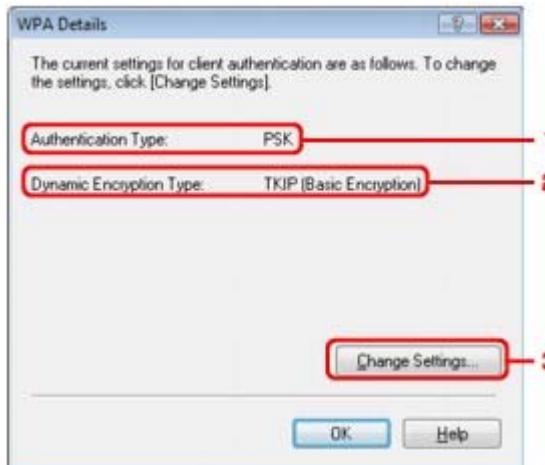

### 1. Authentication Type

Displays the type of authentication used for client authentication.  
This machine supports the PSK authentication method.


### 2. Dynamic Encryption Type

Displays the dynamic encryption method as either TKIP (Basic Encryption), or AES (Secure Encryption).

### 3. Change Settings

Displays a dialog box to change WPA or WPA2 settings.

## 7. Check the client authentication type and click Next.

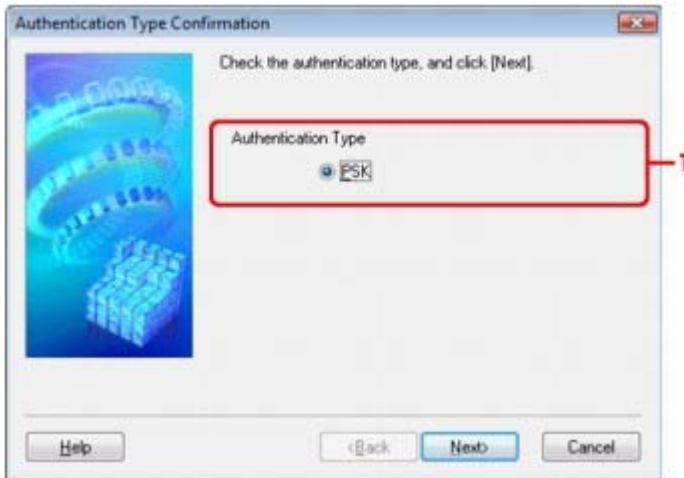


1. Authentication Type

Type of authentication used for client authentication is displayed.  
This machine supports the PSK authentication method.

**PSK**

This authentication type uses a passphrase entered in the next screen.

**8. Enter the passphrase, confirm the type of dynamic encryption and click Next.**

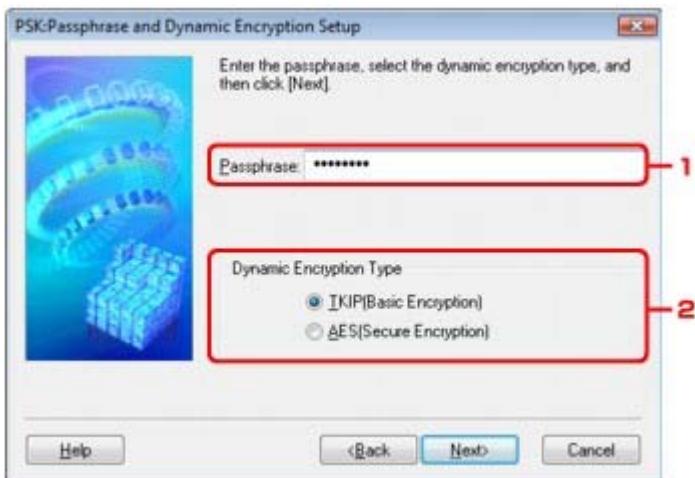

1. Passphrase


Enter the passphrase set to the access point. The passphrase should be a string of 8 to 63 alphanumeric characters or a 64-digit hexadecimal value.

If you do not know the access point passphrase, refer to the manual provided with the access point or contact its manufacturer.

2. Dynamic Encryption Type

Select the dynamic encryption method from either TKIP (Basic Encryption), or AES (Secure Encryption).

**9. Click Finish.**

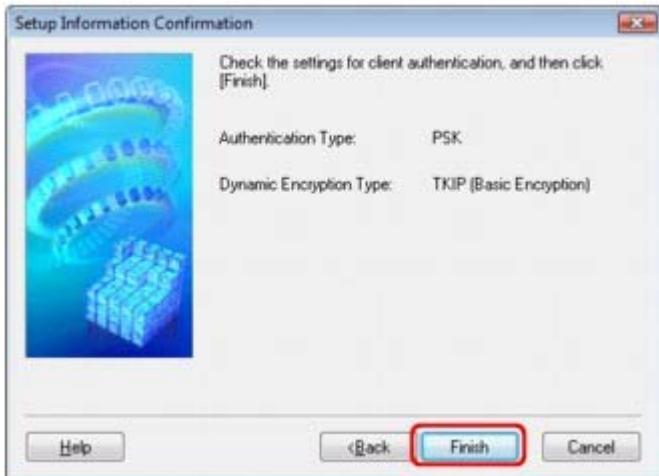

### Important

- If the printer cannot communicate with the computer after the encryption type of the printer was switched, make sure that encryption types for the computer and the access point matches that set to the printer.

[How to Set a WEP/WPA/WPA2 Key](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Changing and Confirming Network Settings > Changing the Settings in the Wired LAN Sheet

# Changing the Settings in the Wired LAN Sheet

## Note

- Select Wired LAN active in the Change WLAN/LAN on the Operation Panel to change the settings in the Wired LAN sheet.

▶ [Changing the Machine Settings on the LCD](#)

### 1. Start up the Canon IJ Network Tool.


▶ [Starting up Canon IJ Network Tool](#)

### 2. Select the printer in Printers.

### 3. Select Configuration from the Settings menu.

### 4. Click the Wired LAN tab.

Click OK after changing configuration. A dialog box is displayed asking you for confirmation before the settings are sent to the printer. If you click Yes, the settings are sent to the printer and the Transmitted Settings dialog box is displayed.

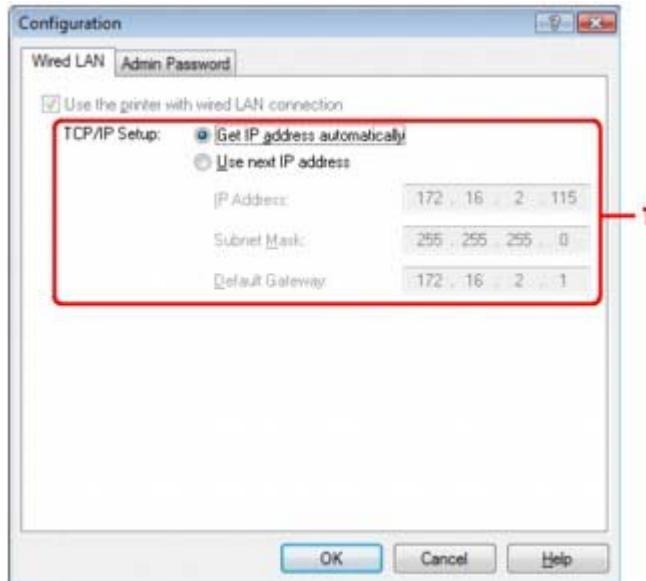

#### 1. TCP/IP Setup

Sets the IP address of the printer to be used over the LAN. Set a value appropriate for your network environment.

##### **Get IP address automatically**

Select this option to use an IP address automatically assigned by a DHCP server. DHCP server functionality must be enabled on your wireless LAN router or access point.

##### **Use next IP address**

If no DHCP server functionality is available in your setup where you use the printer or you want to use a particular IP address, select this option to use a fixed IP address.

## Advanced Guide

Advanced Guide > About Network Communication > Changing and Confirming Network Settings > Changing the Settings in the Admin Password Sheet

# Changing the Settings in the Admin Password Sheet


1. Start up the Canon IJ Network Tool.

▶ Starting up Canon IJ Network Tool

2. Select the printer in Printers.

3. Select Configuration from the Settings menu.

4. Click the Admin Password tab.

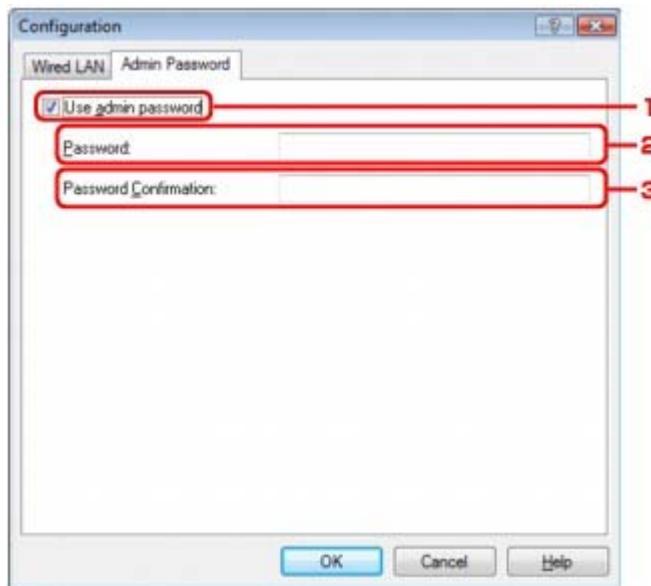

1. Use admin password

Set a password for the administrator with privileges to set up and change detailed options. To use this feature, select this check box and enter a password.

### Important

- The password should consist of alphanumeric characters and be no longer than 32 characters. The password is case-sensitive. Do not forget the password you set.

2. Password

Enter the password to set.

3. Password Confirmation

Enter the password again for confirmation.

5. Click OK.

A dialog box is displayed asking you for confirmation before the settings are sent to the printer. If you click Yes, the settings are sent to the printer and the Transmitted Settings dialog box is displayed.

## Advanced Guide

Advanced Guide > About Network Communication > Changing and Confirming Network Settings > Monitoring Wireless LAN Status

# Monitoring Wireless LAN Status

### Note


- When using the printer over the Wired LAN, Signal Strength, Link Quality, or Advanced Measurement is not available.

## 1. Start up the Canon IJ Network Tool.

▶ Starting up Canon IJ Network Tool

## 2. Select the printer in Printers.

## 3. Select Status from the View menu.

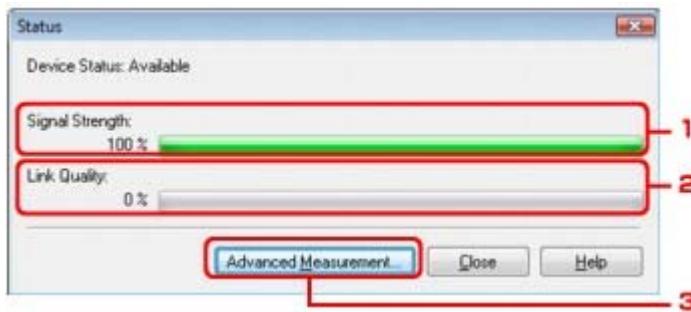

### 1. Signal Strength

Indicates the strength of the signal received by the printer, ranging from 0% to 100%.

### 2. Link Quality

Indicates the signal quality excluding the noise while communicating, ranging from 0% to 100%.

### Important

- If the indicated value is low, move your printer closer to the wireless network device.

### 3. Advanced Measurement

Click to examine the connection performance between the printer and the access point. Follow the instructions on the screen to start measuring and display the status. Measurement takes a few minutes.

When is displayed in Connection Performance between the Printer and the Access Point, the printer can communicate with the access point. Otherwise, refer to displayed comments and Help for improving the status of communication link.

### Note

- If any messages appear on Overall Network Performance, move the machine and access point as instructed to improve the performance.

## Advanced Guide

Advanced Guide > About Network Communication > Changing and Confirming Network Settings > Initializing the Network Settings of the Machine

# Initializing the Network Settings of the Machine

1. Start up the Canon IJ Network Tool.

▶ Starting up Canon IJ Network Tool

2. Select the printer in Printers.

3. Select Maintenance from the Settings menu.



1. Setting Initialization

### Initialize

Reverts all the network settings of the printer to factory default. Click Initialize to display the Initialize Settings dialog box and click Yes to initialize the network settings of the printer. Do not turn off the printer during initialization. Click OK when initialization is complete.

Performing initialization when connected over wireless LAN will break the connection, so connect the computer and the printer with a USB cable and perform setup again, or restart the Canon IJ Network Tool.

### Important

- Note that initialization erases all connection settings with computers, disabling printing, scanning, or faxing.

2. Network Setup of the Card Slot

Displays the status of the Card Slot. For details on how to mount the Card Slot as a network drive, see [Using the Card Slot over a Network](#).

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Changing and Confirming Network Settings > Viewing the Modified Settings

### Viewing the Modified Settings

The Confirmation dialog box is displayed when you modified the printer settings on the Configuration dialog box. When you click Yes on the Confirmation dialog box, the following screen is displayed for confirming the modified settings.



#### 1. Settings

A list of changes made in the Configuration dialog box is displayed.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Changing and Confirming Network Settings > Printing Out Network Setting Information

# Printing Out Network Setting Information

You can print out the network settings of the machine such as its IP address and SSID.

### Important

- This print out contains valuable information about your computer. Handle it with care.

**1.** Make sure that the machine is turned on.

**2.** Load A4 or Letter-sized plain paper in the Cassette.

**3.** Press the **Menu** button.



**4.** Use the **◀▶** button to select Settings, then press the **OK** button.



**5.** Use the **◀▶** button to select Device settings, then press the **OK** button.

**6.** Use the **▲▼** button to select LAN settings, then press the **OK** button.

**7.** Use the **▲▼** button to select Print LAN details, then press the **OK** button.

**8.** Use the **▲▼** button to select Yes, then press the **OK** button.

The following information on the machine's network setting is printed out.

Item	Explanations of the item	Setting
Wireless LAN	Wireless LAN	Enable/Disable
Link Status	Status of the Wireless LAN	Active/Inactive
MAC Address	MAC Address	XX:XX:XX:XX:XX:XX
TCP/IP Version	TCP/IP Version	IPv4/IPv6
IP Address	Selected IP Address	XXX.XXX.XXX.XXX
Default Gateway	Default Gateway	XXX.XXX.XXX.XXX
Subnet Mask*	Subnet Mask	XXX.XXX.XXX.XXX
Subnet Prefix Length**	Subnet Prefix Length	XXX
IPsec	IPsec setting	Active/Inactive
Security Protocol**	Method of the Security Protocol	ESP/ESP & AH/AH
Pre-shared Key**	Pre-shared Key	XXXXXXXXXXXX
SSID	SSID	SSID of the wireless LAN
Connection Mode	Connection Mode	Infrastructure
Channel	Channel	XX(1~13)
Encryption	Method of the Encryption	none/WEP/TKIP/AES
WEP Key Length	WEP Key Length	Inactive/128/64
Authentication	Method of the Authentication	none/auto/open/Shared Key/WPA-PSK/WPA2-PSK
Wired LAN	Wired LAN	Enable/Disable
Link Status	Status of the Wired LAN	Active/Inactive
MAC Address	MAC Address	XX:XX:XX:XX:XX:XX

TCP/IP Version	TCP/IP Version	IPv4/IPv6
IP Address	IP Address	XXX.XXX.XXX.XXX
Default Gateway	Default Gateway	XXX.XXX.XXX.XXX
Subnet Mask*	Subnet Mask	XXX.XXX.XXX.XXX
Subnet Prefix Length**	Subnet Prefix Length	XXX
IPsec	IPsec setting	Active/Inactive
Security Protocol**	Method of the Security Protocol	ESP/ESP & AH/AH
Pre-shared Key**	Pre-shared Key	XXXXXXXXXXXX

("X" represents an alphanumeric character ranging from 0 to 9 and A to F.)

\* Only when IPv4 is selected on IPv4/IPv6 setting, the status of the network is printed.

\*\* Only when IPv6 is selected on IPv4/IPv6 setting and Active is selected on IPsec Settings, the status of the network is printed.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting

# Troubleshooting

- ▶ Troubleshooting
- ▶ How to Set a Network Key/Network Password
- ▶ Cannot Communicate With the Machine/Cannot Print from the Machine
- ▶ The Following Screen Is Displayed During Setup
- ▶ Printer Status Monitor of the Machine Does Not Operate
- ▶ Cannot Print, Scan, Fax, or Access the Card Slot from a Computer Connected to the Network
- ▶ It Takes a Long Time for Printing to Start
- ▶ The Admin Password Set to the Machine Was Forgotten
- ▶ Checking Information about the Network
- ▶ Restoring the Machine's Network Settings to Factory Default
- ▶ Updating the MP Drivers
- ▶ Uninstalling the Canon IJ Network Tool/Canon IJ Network Scan Utility
- ▶ Cannot Mount the Card Slot
- ▶ Cannot Use the Card Slot
- ▶ Cannot Access to the Memory Card in the Card Slot Using MP Navigator EX
- ▶ Cannot Access to the Card Slot Because of Some Security Settings on the Computer
- ▶ Date Modified of Files Changes When Saving Them on the Memory Card over Network

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > Troubleshooting

---

# Troubleshooting

This section describes troubleshooting tips for problems you may encounter when using the machine.  
For troubleshooting tips related to the setup, refer to the *Network Setup Troubleshooting*.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > How to Set a Network Key/Network Password

# How to Set a Network Key/Network Password

- ▶ Cannot Connect with an Access Point to Which a WEP/WPA/WPA2 Key Is Set (You Forgot the WEP/WPA/WPA2 Key)
- ▶ How to Set a WEP/WPA/WPA2 Key

## Cannot Connect with an Access Point to Which a WEP/WPA/WPA2 Key Is Set (You Forgot the WEP/WPA/WPA2 Key)

For information on how to set up the access point, refer to the manual provided with the access point or contact its manufacturer. Make sure that the computer and the access point can communicate with each other, then set up the machine to match the settings of the access point.

## How to Set a WEP/WPA/WPA2 Key

Refer to the manual provided with the access point or contact its manufacturer and check the access point settings. Make sure that the computer and the access point can communicate with each other, then set up the machine to match the settings of the access point.

### • When using WEP

The key length, key format, the key to use (out of 1 to 4), and the authentication method must match among the access point, the printer, and the computer.

For access points that use automatically generated WEP keys, use the hexadecimal key format for the machine.

Example:

Using 64 bit key length, when the string "canon" is entered, an access point generates the following codes.

Key 1: C9 42 28 B8 AE

Key 2: 87 C0 FB 05 6B

Key 3: 9A 15 FB F6 F3

Key 4: 62 56 67 58 44

In order to communicate with such an access point, you must configure the machine to use the key generated by the access point by entering it in hexadecimal format.

Normally, select Auto for the authentication method. Otherwise, select Open System or Shared Key according to the setting of the access point.

When the WEP Details dialog box appears after clicking Set on the Search dialog box, follow the on-screen instructions and set the key length, the key format, the key number, and the authentication to enter a WEP key.

For details, see [WEP Details dialog box](#).

### • When using WPA or WPA2

The authentication method, passphrase, and dynamic encryption type must match on the access point, the machine, and the computer.

Enter the passphrase configured on the access point (a sequence of between 8 and 63 alphanumeric characters, or a 64-character hexadecimal number).

Select either TKIP (Basic Encryption) or AES (Secure Encryption) for the dynamic encryption method.

For details, see [Changing the WPA or WPA2 Detailed Settings](#).

### Note

- This machine supports WPA-PSK (WPA-Personal) and WPA2-PSK (WPA2-Personal). WPA-Enterprise and WPA2-Enterprise are not supported.

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > Cannot Communicate With the Machine/Cannot Print from the Machine

# Cannot Communicate With the Machine/Cannot Print from the Machine

- ▶ Cannot Communicate with the Machine after Applying MAC/IP Address Filtering or Entering a WEP/WPA/WPA2 Key to the Access Point
- ▶ Cannot Communicate with the Machine After the Network Settings Are Changed
- ▶ Cannot Connect to the Target Access Point
- ▶ When Encryption Is Enabled, Cannot Communicate With the Machine After the Encryption Type Was Switched on the Access Point
- ▶ Cannot Communicate with the Machine with USB Connection
- ▶ Cannot Communicate with the Machine over the Network
- ▶ The Machine Cannot Be Detected in the Network

## Cannot Communicate with the Machine after Applying MAC/IP Address Filtering or Entering a WEP/WPA/WPA2 Key to the Access Point

- **Check 1: Confirm the access point setting.**

Refer to the manual provided with the access point or contact its manufacturer to confirm the access point setting. Make sure that the computer and the access point can communicate with each other under this setting.

- **Check 2: If you are performing MAC address filtering at the access point, confirm that the MAC addresses for both the computer or the network device and the printer are registered.**
- **Check 3: If you are using a WEP/WPA/WPA2 key, make sure that the key for the computer or the network device and the printer matches that set to the access point.**

Besides the WEP key itself, the key length, key format, the key ID to use, and the authentication method must match among the machine, the access point, and the computer.

Normally, select Auto for the authentication method. If you want to specify the method manually, select Open System or Shared Key according to the setting of the access point.

▶ [How to Set a WEP/WPA/WPA2 Key](#)

## Cannot Communicate with the Machine After the Network Settings Are Changed

Wait until the IP address is assigned to the computer. You may need to restart your computer.

Search for the printer again after confirming a valid IP address is assigned to the computer.

## Cannot Connect to the Target Access Point

- **Check 1: Make sure that the SSID/network name of the target access point and the machine are identical.**

For the procedures to connect an access point and set it up, refer to the manual of your access point or contact its manufacturer.

For the procedures to set up the printer, see [Changing the Settings in the Wireless LAN Sheet](#).

- **Check 2: Make sure that Wireless LAN active is selected in the Change WLAN/LAN on the Operation Panel.**

▶ [Changing the Machine Settings on the LCD](#)

- **Check 3: If a network key is set to the access point, set the machine to match it.**

▶ [How to Set a WEP/WPA/WPA2 Key](#)

- **Check 4: Make sure that the valid wireless channel is used.**

The wireless channel to be used may be limited depending on wireless network devices installed in the computer. Refer to the manual provided with your computer or your wireless network device to specify the valid wireless channel.

- **Check 5: Make sure that the channel set to the access point is valid to communicate with the computer, confirmed in Check 4.**

If not, change the channel set to the access point.

- **For placement:**

Make sure that there is no barrier or obstacle between the access point and the machine.

- **When using the printer in a multiple access point setup, make sure that the access point to be used can communicate with the machine and the computer.**

Make sure that the wireless channel of the access point is far enough away with those of other access points.

Windows XP may automatically connect to an unintended access point. Follow the steps below to make your access point the highest priority.

**1. Select Start and Connect To.**

**2. Right click Wireless Network Connection and select Properties.**

**3. Click the Wireless Networks tab and confirm that Use Windows to configure my wireless network settings is checked.**

**4. Confirm that the target access point is displayed in the Preferred networks list.**

### When Encryption Is Enabled, Cannot Communicate With the Machine After the Encryption Type Was Switched on the Access Point

If the printer cannot communicate with the computer after the encryption type of the printer was switched, make sure that encryption types for the computer and the access point matches that set to the printer.

➔ Cannot Communicate with the Machine after Applying MAC/IP Address Filtering or Entering a WEP/WPA/WPA2 Key to the Access Point

### Cannot Communicate with the Machine with USB Connection

- **Check 1: Make sure that the machine is turned on.**

- **Check 2: Make sure that the USB cable is connected properly.**

Refer to the setup manual of the machine to connect the USB cable properly.

- **Check 3: Do not start up the Canon IJ Network Tool while printing.**

- **Check 4: Do not print while the Canon IJ Network Tool is running.**

- **Check 5: Make sure that Enable bidirectional support is selected in the Ports sheet of the properties dialog box of the printer driver.**

➔ Opening the Printer Properties Dialog Box (Windows)

### Cannot Communicate with the Machine over the Network

- **Check 1: Make sure that the machine is turned on.**

- **Check 2: When using wired LAN, make sure that the LAN cable is connected properly.**

- **Check 3: When using wireless LAN, make sure that the network settings in the machine are identical with those of the access point.**

Refer to the manual provided with the access point or contact its manufacturer to check the access point settings, and then modify the machine settings.

➡ [How to Set a WEP/WPA/WPA2 Key](#)

- **Check 4: When using wireless LAN, make sure that the machine is not place as far away from the access point.**

The access point is located indoors within the effective range for wireless communication. Locate the machine within 50 m from the access point.

- **Check 5: When using wireless LAN, make sure that there is no obstruction.**

Wireless communication between different rooms or floors is generally poor. Adjust the location of the devices.

- **Check 6: When using wireless LAN, make sure that there is no source of radio wave interference in your vicinity.**

There may be a device such as a microwave oven using the same frequency bandwidth as the wireless station. Place the wireless devices as far away from the interference source as possible.

- **Check 7: Make sure that the network settings of the computer are correct.**

For the procedures to connect a network device to the computer and set them up, refer to the manual of your network device or contact its manufacturer.

- **Check 8: Make sure that the radio status is good and adjust the installation positions while monitoring the radio status with Canon IJ Network Tool.**

➡ [Monitoring Wireless LAN Status](#)

- **Check 9: Make sure that the valid wireless channel is used.**

The wireless channel to be used may be limited depending on wireless network devices installed in the computer. Refer to the manual provided with your computer or your wireless network device to specify the valid wireless channel.

- **Check 10: Make sure that the channel set to the access point is valid to communicate with the computer, confirmed in Check 9.**

If not, change the channel set to the access point.

- **Check 11: Make sure that the firewall of the security software is disabled.**

If the firewall function of your security software is turned on, a message may appear warning that Canon software is attempting to access the network. If the warning message appears, set the security software to always allow access.

If using any programs that switch the network environment, check their settings. Some programs will enable a firewall by default.

- **Check 12: When using a router, connect the printer and computer to the LAN side (same network segment).**

- **For placement:**

When using wireless LAN, make sure that there is no barrier or obstacle between the access point and the machine.

## The Machine Cannot Be Detected in the Network

- **Check 1: Make sure that the machine is turned on.**

- **Check 2: Make sure that the USB cable is connected properly.**

Refer to the setup manual of the machine to connect the USB cable properly.

- **Check 3: Make sure that the machine setup is completed.**

If not, refer to your setup manual of the machine to complete the machine setup.

- **Check 4: When using wired LAN, make sure that the LAN cable is connected properly.**

- **Check 5: When using Canon IJ Network Tool, click Update to search for the printer again.**

➡ [Canon IJ Network Tool Dialog Box](#)

- **Check 6: When searching for a printer over a network, make sure that the machine is associated with the port driver.**

When No Driver is displayed under Name in the Canon IJ Network Tool, there is no association. Select Associate Port on the Settings menu, then associate the port with the printer.

➡ [Canon IJ Network Tool Menus](#)

- **Check 7: When using wireless LAN, make sure that the network settings in the printer are identical with those of the access point.**

Refer to the manual provided with the access point or contact its manufacturer to check the access point settings, and then modify the machine settings.

➡ [How to Set a WEP/WPA/WPA2 Key](#)

- **Check 8: When using wireless LAN, make sure that there is no obstruction.**

Wireless communication between different rooms or floors is generally poor. Adjust the location of the devices.

- **Check 9: When using wireless LAN, make sure that the machine is not place as far away from the access point.**

The access point is located indoors within the effective range for wireless communication. Locate the machine within 50 m from the access point.

- **Check 10: When using wireless LAN, make sure that there is no source of radio wave interference in your vicinity.**

There may be a device such as a microwave oven using the same frequency bandwidth as the wireless station. Place the wireless devices as far away from the interference source as possible.

- **Check 11: Make sure that the network settings of the computer are correct.**

Make sure that the computer can communicate with the printer and the access point over the wireless LAN.

- **Check 12: Make sure that Enable bidirectional support is selected in the Ports sheet of the properties dialog box of the printer driver.**

➡ [Opening the Printer Properties Dialog Box \(Windows\)](#)

- **Check 13: Make sure that the firewall of the security software is disabled.**

If the firewall function of your security software is turned on, a message may appear warning that Canon software is attempting to access the network. If the warning message appears, set the security software to always allow access.

If using any programs that switch the network environment, check their settings. Some programs will enable a firewall by default.

- **Check 14: When using a router, connect the printer and computer to the LAN side (same network segment).**

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > The Following Screen Is Displayed During Setup

# The Following Screen Is Displayed During Setup

- ▶ The Enter Password Dialog Box Is Displayed During Setup
- ▶ The Dialog Box for Setting the Encryption Is Displayed After Selecting the Access Point in the Search Dialog Box
- ▶ "You are connecting the machine to the non encrypted wireless network" Is Displayed

## The Enter Password Dialog Box Is Displayed During Setup

The following dialog box is displayed if an administrator password is set to the machine which has already been set up.



Enter the administrator password you have set.

- ▶ Changing the Settings in the Admin Password Sheet

## The Dialog Box for Setting the Encryption Is Displayed After Selecting the Access Point in the Search Dialog Box

This dialog box is displayed automatically if the encryption settings are changed on the access point. You need to change the machine's encryption settings to match those of the access point.

For information on the encryption settings, see [Changing the Settings in the Wireless LAN Sheet](#).

## "You are connecting the machine to the non encrypted wireless network" Is Displayed

Security is not configured on the access point. The machine can still be used, so continue the setup procedure to complete it.

### Important

- If you connect to a network that is not protected with security measures, there is a risk of disclosing data such as your personal information to a third party.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > Printer Status Monitor of the Machine Does Not Operate

### Printer Status Monitor of the Machine Does Not Operate

Use the printer driver with bidirectional communication.

Select Enable bidirectional support in the Ports sheet of the properties dialog box of the printer driver.

▶ [Opening the Printer Properties Dialog Box \(Windows\)](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > Cannot Print, Scan, Fax, or Access the Card Slot from a Computer Connected to the Network

### Cannot Print, Scan, Fax, or Access the Card Slot from a Computer Connected to the Network

- **Check 1: Make sure that the network settings of the computer are correct.**

For the procedures to set up the computer, refer to the manual of your computer or contact its manufacturer.

- **Check 2: If the MP Drivers is not installed, refer to your setup manual of the machine to install the MP Drivers.**

- **Check 3: When using wireless LAN, make sure that access control is not set to the access point.**

For the procedures to connect an access point and set it up, refer to the manual of your access point or contact its manufacturer.

#### Note

- Print out the network setting information of the computer to check whether the MAC address or the IP address is registered or not. For details, see [Checking the IP Address or the MAC Address of the Computer](#).

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > It Takes a Long Time for Printing to Start

### It Takes a Long Time for Printing to Start

- **Check 1: The machine may be printing out or scanning a large job issued from another computer.**
- **Check 2: Make sure that the radio status is good and adjust the installation positions while monitoring the radio status with Canon IJ Network Tool.**

#### ▶ Monitoring Wireless LAN Status

Make sure that there is no barrier or obstacle between the access point and the machine. Wireless communication between different rooms or floors is generally poor. The metal, concrete, or timber including the metallic material, mud wall, or insulator may interrupt a wireless communication. If the machine cannot communicate with the computer over a Wireless LAN for the wall material, place the machine and the computer in the same room or floor.

- **Check 3: When using wireless LAN, make sure that there is no source of interference in your vicinity.**

Since a device such as a microwave oven uses the same frequency bandwidth, it may cause interference. Place the wireless devices as far away from the source of interference as possible.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > The Admin Password Set to the Machine Was Forgotten

# The Admin Password Set to the Machine Was Forgotten

Initialize the LAN settings.

## ▶ Restoring the Machine's Network Settings to Factory Default

After initializing the LAN settings, refer to your setup manual of the machine to set up the machine again.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > Checking Information about the Network

# Checking Information about the Network

- ▶ Checking the IP Address or the MAC Address of the Machine
- ▶ Checking the IP Address or the MAC Address of the Computer
- ▶ Checking If the Computer and the Machine, or Computer and the Access Point Can Communicate
- ▶ Checking the Network Setting Information

## Checking the IP Address or the MAC Address of the Machine

To check the IP address or the MAC address of the machine, display the network setting information using the Operation Panel of the machine or print out the network setting information of the machine.

- ▶ Changing the Machine Settings on the LCD
- ▶ Printing Out Network Setting Information

To display the network setting information using the Canon IJ Network Tool, select Network Information on the View menu.

- ▶ Canon IJ Network Tool Menus

## Checking the IP Address or the MAC Address of the Computer

To check the IP address or MAC address assigned to the computer, follow the procedure below.

1. Click Start > All Programs (or Programs) > Accessories > Command Prompt.
2. Enter "ipconfig/all" and press the Enter key.

The IP addresses and the MAC addresses of the network devices installed on your computer are displayed. When the network device is not connected to the network, the IP address is not displayed.

## Checking If the Computer and the Machine, or Computer and the Access Point Can Communicate

To check that communication is available, perform the ping test.

1. Display the command prompt.

### Windows Vista or Windows XP

From the Start menu, select All Programs, Accessories, and Command Prompt.

### Windows 2000

From the Start menu, select Programs, Accessories, and Command Prompt.

2. Type the ping command and the IP address of the target printer or the target access point, and then press the Enter key.

ping XXX.XXX.XXX.XXX

"XXX.XXX.XXX.XXX" is the IP address of the target device.

If the communication is available, a message such as the following is displayed.

Reply from XXX.XXX.XXX.XXX: bytes=32 time=10ms TTL=255

When Request timed out is displayed, the communication is not available.

## Checking the Network Setting Information

To check the IP address or the MAC address of the machine, display the network setting information using the Operation Panel of the machine or print out the network setting information of the machine.

- ▶ Changing the Machine Settings on the LCD
- ▶ Printing Out Network Setting Information

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > Restoring the Machine's Network Settings to Factory Default

# Restoring the Machine's Network Settings to Factory Default

## Important

- Note that initialization erases all network settings on the machine, and printing, scanning, or faxing operation from a computer over network may become impossible. To use the machine over network, refer to the setup manual of the machine to set up the machine again.

Select Reset LAN settings on the Operation Panel of the machine to initialize the network setting.

▶ [Changing the Machine Settings on the LCD](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > Updating the MP Drivers

### Updating the MP Drivers

Download the latest MP Drivers and the Canon IJ Network Tool in advance.

After uninstalling the MP drivers, install the latest MP drivers according to the regular procedure. When the installation is completed, select the printer port (FILE) as connection destination manually.

After installing the latest MP Drivers, install the Canon IJ Network Tool, then perform printer detection following the on-screen instructions.

You can use the machine over a LAN without performing setup again.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > Uninstalling the Canon IJ Network Tool/Canon IJ Network Scan Utility

# Uninstalling the Canon IJ Network Tool/Canon IJ Network Scan Utility

## • Uninstalling the Canon IJ Network Tool

Follow the procedure below to uninstall the Canon IJ Network Tool from your computer.

### Important

- Even if the Canon IJ Network Tool is uninstalled, you can print, scan, and fax from the computer over network. However, you cannot change the network settings and use the Card Slot of the machine over network.
- Log into a user account with administrator privilege.

**1.** Click Start > All Programs (or Programs) > Canon IJ Network Utilities > Canon IJ Network Tool > Uninstaller.

**2.** Click Yes when the confirmation message appears.

When the message prompting you to restart your computer is displayed, click OK to restart your computer.

### Note

- To reinstall the Canon IJ Network Tool, uninstall the Canon IJ Network Tool and the Canon IJ Network Scan Utility, then perform Custom Install with the *Setup CD-ROM* and select the Canon IJ Network Tool to install them again.
- You can also uninstall the Canon IJ Network Tool by double-clicking CNMNUU.exe provided on the *Setup CD-ROM* or in the folder where you saved the downloaded installer.
- You can also use Uninstall a program (or Add or Remove Programs, or Add/Remove Applications) on Control Panel to uninstall the Canon IJ Network Tool.

## • Uninstalling the Canon IJ Network Scan Utility

Follow the procedure below to uninstall the Canon IJ Network Scan Utility from your computer.

### Important

- Even if the Canon IJ Network Scan Utility is uninstalled, you can print, scan, and fax from a computer over network. However, you cannot scan over network using the Operation Panel on the machine.
- Log into a user account with administrator privilege.

**1.** Click Start > All Programs (or Programs) > Canon IJ Network Utilities > Canon IJ Network Scan Utility > Uninstaller.

**2.** Click Yes when the confirmation message appears.

When the message prompting you to restart your computer is displayed, click OK to restart your computer.

### Note

- To reinstall the Canon IJ Network Scan Utility, uninstall the Canon IJ Network Scan Utility and the Canon IJ Network Tool, then perform Custom Install with the *Setup CD-ROM* and select the Canon IJ Network Tool to install them again.
- You can also uninstall the Canon IJ Network Scan Utility by double-clicking CNMNSU.exe provided on the *Setup CD-ROM* or in the folder where you saved the downloaded installer.
- You can also use Uninstall a program (or Add or Remove Programs, or Add/Remove Applications) on Control Panel to uninstall the Canon IJ Network Scan Utility.

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > Cannot Mount the Card Slot

# Cannot Mount the Card Slot

- ▶ The Available Drive Letter Cannot Be Selected on the Network Setup of the Card Slot Dialog Box
- ▶ The Card Slot Cannot Be Mounted with the Canon IJ Network Tool

## The Available Drive Letter Cannot Be Selected on the Network Setup of the Card Slot Dialog Box

On this dialog box, only D to Z can be selected as the network drive for the Card Slot.

When the Card Slot has been set up to be used over network, you cannot select a drive letter. If you want to assign another drive letter to the network drive for the Card Slot, disconnect it from the network, then set up the Card Slot again using the Canon IJ Network Tool.

- ▶ Using the Card Slot over a Network

## The Card Slot Cannot Be Mounted with the Canon IJ Network Tool

If you cannot mount the Card Slot to use it over network with the Canon IJ Network Tool, follow the procedure below to mount the Card Slot manually.

**1. Check the Default Name of the machine by selecting Network Information on the View menu of the Canon IJ Network Tool.**

**2. Click Start > All Programs > Accessories > Run.**

In Windows XP and Windows 2000, click Start > Run.

**3. Input "\xxxxxxxxxxxx\"", then click OK.**

"xxxxxxxxxxxx" is the string of 12 alphanumeric characters of the Default Name. For example, if the Default Name is "0000000847B6\canon\_memory", then input only "\0000000847B6\".

### Note

- If you cannot mount the Card Slot with the method above, input the IP address of the machine instead of the 12 alphanumeric characters of the Default Name, and try again. For example, "\192.168.1.1\". If you mount the Card Slot with the IP address, you have to remount it whenever the machine's IP address changes.

**4. When the  canon\_memory icon appears, right-click the icon, then select Map Network Drive.**

**5. Select the drive letter, then click Finish.**

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > Cannot Use the Card Slot

# Cannot Use the Card Slot

## • Check 1: Is the icon of the Card Slot displayed?

To use the Card Slot over network, you have to mount the Card Slot as the network drive of the computer.

The canon\_memory (\xxxxxxxxxxxx) (or canon\_memory on 'xxxxxxxxxxxx') icon with the mapped drive letter appears on Computer (or My Computer).

- "xxxxxxxxxxxx" is a string of 12 alphanumeric characters.
- The icon name may vary depending on the language version of Windows you are using.

If the icon is not displayed, mount the Card Slot.

▶ Mounting the Card Slot as the Network Drive

## • Check 2: Is the memory card inserted in the Card Slot?

Make sure that a memory card is inserted in the Card Slot. If it is not inserted, insert it.

For information on how to insert a memory card, refer to [Printing from a Memory Card](#).

## • Check 3: Is Read/write attribute set to Writable from USB PC?

When Read/write attribute in Device settings is set to Writable from USB PC, you cannot access the memory card over network. Set Read/write attribute to Writable from LAN PC to write data to the memory card over network.

▶ Changing the Machine Settings on the LCD

## • Check 4: Is Read/write attribute set to Not writable from PC?

When Read/write attribute in Device settings is set to Not writable from PC, you can read data on the memory card, but cannot write data to it. To write data to the memory card in the Card Slot over network, set Read/write attribute to Writable from LAN PC.

▶ Changing the Machine Settings on the LCD

## • Check 5: Is another computer writing data to the memory card?

While one computer is writing a file into the memory card, other computers cannot access the same file. Wait for a while, then try again.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > Cannot Access to the Memory Card in the Card Slot Using MP Navigator EX

# Cannot Access to the Memory Card in the Card Slot Using MP Navigator EX

If "Cannot access the memory card" is displayed when you click Memory Card under Scan/Import Documents or Images on MP Navigator EX, confirm what the message says, then click Retry. If the message appears again, mount the Card Slot as the network drive. For details on how to mount the Card Slot, see [Mounting the Card Slot as the Network Drive](#). Confirm the icon for the Card Slot appears on Computer (or My Computer), and try to access using MP Navigator EX.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > Cannot Access to the Card Slot Because of Some Security Settings on the Computer

# Cannot Access to the Card Slot Because of Some Security Settings on the Computer

- **Check 1: Make sure that Read/write attribute in Device settings is set to Writable from LAN PC.**

➡ Changing the Machine Settings on the LCD

- **Check 2: Make sure that the memory card is inserted in the Card Slot.**

- **Check 3: Disable the Windows Firewall function, or open port 137:139 to allow communication with the machine following the procedure below.**

For information on other security software, refer to its instruction manual or manufacturer.

### Important

- If you disabled the firewall function, disconnect your network from the Internet. You can do this by configuring your access point or router not to connect to the Internet or WAN.

- **To disable the Windows Firewall:**

1. Click Start > Control Panel > Security > Windows Firewall > Change settings.

In Windows XP, click Start > Control Panel > Security Center > Windows Firewall.

2. Select Off and click OK.

- **To open port 137:139:**

1. Click Start > Control Panel > Security > Windows Firewall > Change settings.

In Windows XP, click Start > Control Panel > Security Center > Windows Firewall.

2. Click the Exceptions tab, and click Add port.

3. On the Add a Port dialog box, input the following information, and click OK.

Name: Input any name for the port.

Port number: Input "137".

Protocol: Select TCP.

4. Repeat steps 2 and 3.

On the Add a Port dialog box, input the same information as you did in step 3 except for selecting UDP in Protocol.

5. Use the same procedure to open the other ports (138TCP, 138UDP, 139TCP, and 139UDP).

6. Confirm that the port names are added on the Exceptions sheet, and click OK.

- **Check 4: Change the workgroup name to "WORKGROUP" following the**

**procedure below.**

- 1.** Right-click Computer (or My Computer), select Properties, then click Change settings.

In Windows XP, right-click My Computer, then select Properties.

- 2.** Click the Computer Name tab, then click Change.

- 3.** Change the workgroup name to "WORKGROUP", then click OK.

- **Check 5: Disconnect the network drive for the Card Slot and mount it again following the procedure below.**

- 1.** Right-click Computer (or My Computer), and select Disconnect Network Drive.

- 2.** Select the network drive to disconnect, then click OK.

- 3.** Remount the Card Slot using the Canon IJ Network Tool.

➡ Using the Card Slot over a Network

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Troubleshooting > Date Modified of Files Changes When Saving Them on the Memory Card over Network

# Date Modified of Files Changes When Saving Them on the Memory Card over Network

## • Check: Does the Canon IJ Network Scan Utility run?

If you write files to a memory card over a network when the Canon IJ Network Scan Utility is not running, the Date Modified of the files will change. Make sure to start up the Canon IJ Network Scan Utility before you write files to a memory card over the network.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Appendix

---

# Appendix

- ▶ Restrictions
- ▶ Initial Values Set at Factory (Network)
- ▶ Using the Card Slot over a Network

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Appendix > Restrictions

---

### Restrictions

If you use a printer over the wireless LAN, the printer may recognize nearby wireless systems, you should set a network key (WEP, WPA, or WPA2) to the access point to encrypt wireless transmission. Wireless communication with a product that does not comply with the Wi-Fi standard cannot be guaranteed.

Connecting with too many computers may affect the printer performance, such as printing speed.

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Appendix > Initial Values Set at Factory (Network)

### Initial Values Set at Factory (Network)

Wireless LAN	Active
Communication mode	Infrastructure
SSID	BJNPSETUP
Data encryption	Disable
TCP/IP Settings	Get IP address automatically
Wired LAN	Inactive
TCP/IP Settings	Get IP address automatically

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Appendix > Using the Card Slot over a Network


# Using the Card Slot over a Network

- ▶ Confirming Whether the Card Slot is Mounted
- ▶ Mounting the Card Slot as the Network Drive
- ▶ Restrictions on Card Slot Use over a Network

## Confirming Whether the Card Slot is Mounted

The Card Slot must be mounted to use it over a network.

When the Card Slot is mounted, the following icon appears on Computer (or My Computer). If the icon does not appear, see [Cannot Use the Card Slot](#).

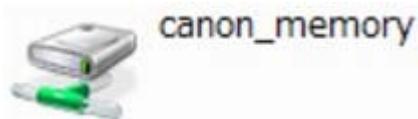

If these icons are not found, the network drive for the Card Slot is not mounted yet. For details on how to mount the Card Slot, see [Mounting the Card Slot as the Network Drive](#).

## Mounting the Card Slot as the Network Drive


### 1. Start up the Canon IJ Network Tool.

Double-click the  Canon IJ Network Tool icon on the desktop.  
You can also click Start > All Programs (or Programs) > Canon IJ Network Utilities > Canon IJ Network Tool > Canon IJ Network Tool to start up the tool.


### 2. Select the machine.

### 3. Select Maintenance on the Settings menu.

### 4. Click Setup.

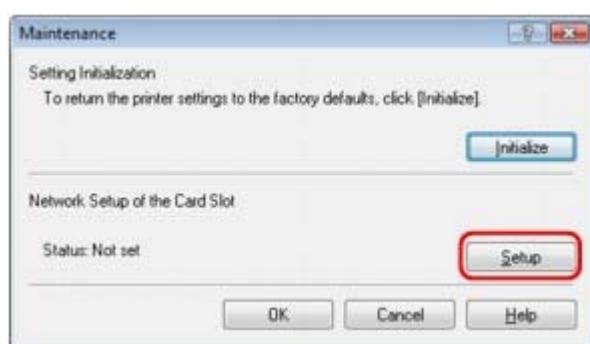

### 5. Specify the drive letter, then click OK.

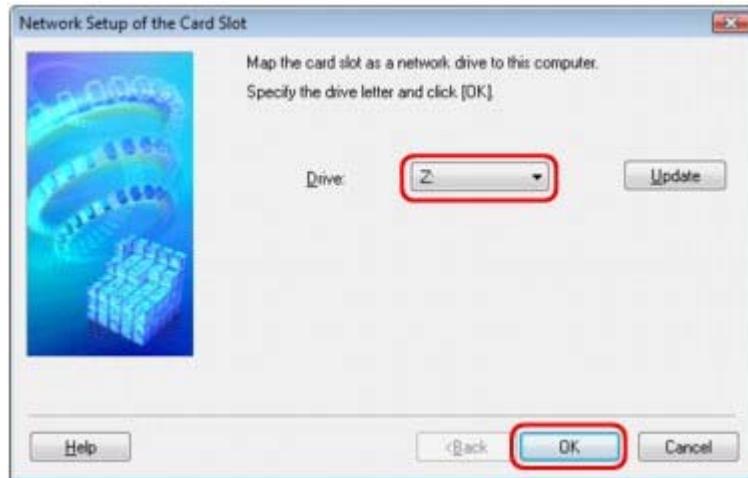

6. Confirm that the  canon\_memory icon for the Card Slot appears on Computer (or My Computer).

#### Note

- If the Card Slot cannot be mounted properly, see [Cannot Mount the Card Slot](#).

#### Restrictions on Card Slot Use over a Network

- The Card Slot can be shared by multiple computers, if the machine is connected to a network. Multiple computers can read files from a memory card in the Card Slot at the same time. However, while one computer is writing a file into a memory card, other computers cannot access the same file.
- If your computer joins a domain, the Card Slot may not be mounted as the network drive.
- If you use the memory card stored the large size files or many files, a large amount of card access may be generated. In this case, the operation in the memory card may be impossible or slow. Operate after the Access lamp of the machine is lit.
- When you access the network drive for the Card Slot over the network, file names consisting of eight or less lowercase letters (not including its extension) may be shown in uppercase.  
For example, a file name such as "abcdefg.doc" will be "ABCDEFG.DOC", while a name such as "AbcdeFG.doc" will appear the same.  
The file is not actually renamed, but merely appears to be changed.
- When the Read/write attribute setting of the machine is set to Writable from USB PC, you cannot access the network drive of the Card Slot. On the other hand, when this setting is set to Writable from LAN PC, the Card slot is not detected via USB. Make sure that the Read/write attribute setting is set properly depending on your connection type. Select Not writable from PC to read files from a memory card via USB and over a network, although you cannot write files to a memory card in either way with this setting.  
For details on how to change the machine setting, refer to [Changing the Machine Settings on the LCD](#).
- When the Read/write attribute setting of the machine is set to Writable from LAN PC, you can write files to a memory card from a computer connected to a network. Note that it may increase the risk that the data on the memory card is infected by computer viruses or accessed illegally.  
It is recommended to use the access control function of the machine or connect to the Internet via a router. For information on using a router, contact your Internet service provider or a network device manufacturer.
- If you write files to a memory card over a network when the Canon IJ Network

**Scan Utility is not running, the Date Modified of the files may not be proper.**  
**Make sure to start up the Canon IJ Network Scan Utility before you write files to a memory card over the network. For details on how to use the Canon IJ Network Scan Utility, refer to the online help of the Canon IJ Network Scan Utility.**



## Note

- If the following occurs when using the network drive for the Card Slot over a network, see [Cannot Use the Card Slot](#).

- Cannot access the Card Slot after the network setup of the Card Slot is complete
- Can read the memory card in the Card Slot, but cannot write to it
- The Card Slot is disconnected
- The Date Modified of files changes when saving them in the network drive for the Card Slot

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Glossary

---

# Glossary

◀ [About Technical Terms](#)

[Page top ↑](#)

## Advanced Guide

Advanced Guide > About Network Communication > Glossary > About Technical Terms

# About Technical Terms

In this section, technical terms used in the manual are explained.

- ➡ A
- ➡ C
- ➡ D
- ➡ F
- ➡ I
- ➡ K
- ➡ L
- ➡ M
- ➡ O
- ➡ P
- ➡ R
- ➡ S
- ➡ T
- ➡ U
- ➡ W

## A

- **Access Point**

A wireless transceiver or base station that receives information from wireless clients/the machine and rebroadcasts it. Required in an infrastructure network.

- **Ad-hoc**

Client computer and machine setting where wireless communication occurs on a peer-to-peer basis, i.e., all clients in with the same SSID/network name communicate directly with each other. No access point is required. This machine does not support ad-hoc communication.

- **Admin Password**

Administration password to restrict access to network users. It must be entered to access the printer and change printer settings.

- **AES**

An encryption method that is mandated by WPA2 but is optional for WPA. Strong cryptographic algorithm adopted within U.S. government organizations for information processing.

- **ANY-rejection**

Feature of an access point to hide itself from and/or reject connection with clients whose SSID /network name is set to "ANY".

- **Authentication Method**

The method that an access point uses to authenticate a printer before it communicates with a printer through a wireless LAN.

For WPA/WPA2, authentication method is PSK.

The method can be selected from Auto, Open System, or Shared Key. The same settings must be specified between the access point and the machine.

- **Auto**

The printer automatically changes its authentication method to match the access point.

- **Open System**

In this authentication method, the communication partner is authenticated without using WEP key even if "Use WEP" is selected.

- **Shared Key**  
In this authentication method, the communication partner is authenticated using the WEP key that was set for encryption.

## C

- **Channel**

Frequency channel for wireless communication. In the infrastructure mode, the channel is automatically adjusted to match that set to the access point. This machine supports channels 1 to 13. Note that the number of channels that can be used for your wireless LAN varies depending on the region or country.

## D

- **Default Gateway**

The gateway in a network that a computer uses to enter another network if a gateway is not specified. A gateway relays data between the terminals and transmits the transferred data to the target terminal.

- **DHCP server functionality**

The router or the access point assigns an IP address automatically whenever the printer or the personal computer on a network starts up.

## F

- **Firewall**

It is a system that prevents an unlawful computer access from the outside in the network. To prevent, you can use the firewall function of a broadband router or the security software installed in the computer.

## I

- **IEEE 802.11b**

International standard for wireless LAN using the 2.4 GHz frequency range with a throughput of up to 11 Mbps.

- **IEEE 802.11g**

International standard for wireless LAN using the 2.4 GHz frequency range with a throughput of up to 54 Mbps. Compatible with 802.11b.

- **Infrastructure**

Client computer and machine setup where all wireless communications pass through an access point.

- **IP Address**

A unique number with four parts separated by dots. Every network device that is connected to the Internet has an IP address. Example: 192.168.0.1

- **IPv4/IPv6**

They are internetwork-layer protocol used on the internet. IPv4 uses 32-bit addresses and IPv6 uses 128-bit addresses.

## K

- **Key Format**

Select either ASCII or Hex as the WEP key format. The character that can be used for the WEP key differs depending on the selected key formats.

- **ASCII**

Specify with a 5 or 13-character string that can include alphanumeric and underscore "\_" characters. It is case-sensitive.

- **Hex**  
Specify a 10-digit or 26-digit string that can contain hexadecimal (0 to 9, A to F, and a to f).

## • **Key Length**

Length of the WEP key. Select either 64 bits or 128 bits. Longer key length allows you to set a more complex WEP key.

## L

### • **Link Quality**

The status of connection between the access point and the printer excluding noise (interference) is indicated with a value from 0 to 100%.

## M

### • **MAC Address**

Also known as the physical address. A unique and permanent hardware identifier that is assigned to network devices by its manufacturer. MAC addresses are 48 bits long and are written as a hexadecimal number separated by colons, i.e., 11:22:33:44:55:66. To check the MAC address of this machine, see [Checking the IP Address or the MAC Address of the Machine](#).

## O

### • **Operation Status**

Indicates the status on whether the printer can be used.

## P

### • **PSK**

An encryption method employed by WPA/WPA2, which uses a Pre-Shared Key.

## R

### • **Router**

The gateway in a network that a computer uses to enter another network if a gateway is not specified. A gateway relays data between the terminals and transmits the transferred data to the target terminal.

## S

### • **Signal Strength**

The strength of the signal received by the printer from the access point is indicated with a value from 0 to 100%.

### • **SSID**

Unique label that distinguishes one wireless LAN from another. The machine and all clients on a wireless LAN must use the same SSID in order to communicate with each other. The SSID can be up to 32 characters long, and is made up of alphanumeric characters. The SSID may also be referred to by its network name.

### • **Stealth**

In the stealth mode, an access point hides itself by not broadcasting its SSID. The client must specify the SSID set to the access point to detect it.

### • **Subnet Mask**

Number used to specify which portion of the IP address refers to the network, and which refers to the host.

**Example:**

IP Address: 192.168.127.123  
Subnet Mask: 255.255.255.0  
Subnet Mask Address: 192.168.127.0

**T**

- **TCP/IP**

Suite of communications protocols used to connect hosts on the Internet. This protocol allows different terminals to communicate with each other.

- **TKIP**

An encryption method employed by WPA/WPA2. Uses encryption and changes cryptographic keys automatically at fixed intervals.

**U**

- **USB**

Serial interface designed to enable you to "hot-swap" devices, i.e., by plugging and unplugging them without turning off the power.

**W**

- **WCN (Windows Connect Now)**

Users running Windows Vista can easily create network configuration settings and transmit them to the access point using the USB flash memory.

- **WEP**

Transmission is encrypted using a WEP key you specified.

- **WEP Key**

Shared security key used to encrypt and decrypt data sent over wireless networks. This printer supports key length of 64 bits or 128 bits, key format of ASCII code or Hexadecimal, and key number of 1 to 4.

- **Wi-Fi**

International association that certifies interoperability of wireless LAN products based on the IEEE 802.11 specification.

This machine is a Wi-Fi authorized product.

- **Wireless LAN**

A network that, instead of being connected by physical wires, is connected by a wireless technology, such as Wi-Fi.

- **WPA**

Security framework announced by the Wi-Fi Alliance in October 2002. Enables cryptographic keys to be changed automatically at fixed intervals, and access points to perform user authentication.

- Authentication

WPA defines the following authentication methods: PSK that can be used without an authentication server, plus WPA-802.1x that do require an authentication server.

This machine supports WPA-PSK.

- Passphrase

This encrypted key is used to perform WPA-PSK authentication.

The passphrase should be a string of 8 to 63 alphanumeric characters or a 64-digit hexadecimal value.

- **WPA2**

Security framework released by the Wi-Fi Alliance in September in 2004 as a later version of WPA. Provides a stronger encryption mechanism through Advanced Encryption Standard (AES).

- Authentication

WPA defines the following authentication methods: PSK that can be used without an authentication server, plus WPA2-802.1x that do require an authentication server.

This machine supports WPA2-PSK.

- Passphrase

This encrypted key is used to perform WPA2-PSK authentication.

The passphrase should be a string of 8 to 63 alphanumeric characters or a 64-digit hexadecimal value.

- **WPS (Wi-Fi Protected Setup)**

WPS is a standard for easy and secure establishment of a wireless network.

There are 2 primary methods used in the Wi-Fi Protected Setup:

PIN entry: a mandatory method of setup for all WPS certified devices

Push button configuration (PBC): an actual push button on the hardware or through a simulated push button in the software.

[Page top ↑](#)