

EASY SCAN 19200 PLUS

User's manual

Version 1.0

Thank you

Thank you very much for purchasing this product from the Trust range. We wish you hours of fun with it. Please read this manual carefully before using the product.

Registration

Register your purchase now at the Trust Internet site (www.trust.com) and you could win one of the fabulous prizes. The web site is also the place to look for dealer addresses, comprehensive product information, drivers, and FAQ (Frequently Asked Questions) sheets.

Copyright Statement

No part of this manual may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, for any purpose other than the purchaser's personal use, without the prior written permission of the manufacturer.

Disclaimer Statement

The manufacturer specifically disclaims all warranties, either express or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose, with respect to the software, the product manual(s) and written materials, and any other accompanying hardware. The manufacturer reserves the right to revise or make improvements to its product at any time and without obligation to notify any person of such revisions or improvements.

In no event shall the manufacturer be liable for any consequential or incidental damages, including any loss of business profits or any other commercial damages, arising out of the use of its product.

* All company or product names are trademarks or registered trademarks or service marks of their respective owners.

Contents

1. Introduction.....	2
1.1. Conventions.....	2
1.2. Contents.....	2
2. Safety.....	4
3. Connecting the scanner.....	5
3.1. Unlocking the transport locks	5
3.2. Connecting the scanner	6
4. Installing the driver and software.....	7
4.1. Installing the driver.....	7
4.2. Installing TextBridge Classic 2.0	9
4.3. Installing Adobe PhotoDeluxe 2.0.....	12
5. Making a scan	16
5.1. TWAIN main menu	16
5.2. Advanced TWAIN menu.....	18
5.3. Monitor calibration	20
5.4. Preferences	21
5.5. Making a scan	22
6. Working with Adobe PhotoDeluxe.....	23
6.1. Initial scanner settings	23
6.2. Scanning with Adobe PhotoDeluxe	24
7. Working with TextBridge	25
7.1. Settings	25
7.2. Scanning with TextBridge Classic.....	26
8. Maintenance.....	28
9. Troubleshooting.....	29
9.1. Testing the scanner.....	29
10. Specifications	32
11. Trust Service Centers	33

1. Introduction

This manual is intended for users of the Easy Scan 19200 Plus scanner. No previous knowledge is required for installation and use of this product.

Note: *This scanner will not work with MS-DOS, Windows 3.1x/NT3.x, or Apple Macintosh computers.*

If you have any questions after reading this manual, please contact one of the Trust service centres. You will find information on the service centre nearest to you at the back of this manual. You can also visit the Trust website (www.trust.com) for support, comprehensive product information, drivers, and FAQ (Frequently Asked Questions) sheets.

1.1. Conventions

This manual uses the following layout conventions for instructions:

<key>	Requires the user to press a key. The key legend is shown between the angle brackets.
'System'	This is a software-specific term, e.g. a term used by Windows.
[DIR]	Text in this font is to be typed by the user.
(term)	The text between the parentheses (...) is the English term, e.g. (File), referred to in the accompanying illustration.

Additional information is shown as follows:

Note: *Switch off the computer before connecting the scanner*

The examples assume that your computer system has assigned the letter "D" to your CD-ROM drive. If your computer uses a different drive designation for your CD-ROM drive, e.g. "E", replace "D" in the text with "E".

1.2. Contents

After unpacking, you should have the following items:

- Scanner
- Power supply adapter
- Interface cable
- CD-ROM with drivers, applications, and user's manual
- Adobe PhotoDeluxe 2.0 CD-ROM
- Quick Installation Manual

Minimum system requirements

- IBM Compatible PC with Pentium 75MHz CPU and 16 MB RAM
- Microsoft Windows 95 / 98 or Windows NT 4.0
- Printer port (EPP)
- Hard disk drive with at least 60 MB free disk space (for installation)
- 4-speed CD-ROM drive

ENGLISH

2. Safety

Read the following instructions carefully before use:

1. Disconnect any power plugs from the mains supply before cleaning the equipment.
2. Do not use this equipment in humid environments like bathrooms, damp cellars, swimming pools, etc.
3. Make sure nothing is placed on the power supply lead.
4. Do not insert any objects into the slots in the equipment's casing.
5. Do not attempt to repair this equipment yourself.
6. If any of the following conditions occur, remove the power plug from the mains supply and have the equipment serviced by qualified personnel:
 - a) the power lead or plug have become damaged or worn;
 - b) liquid has entered the equipment;
 - c) the equipment has been dropped, and/or the casing has become damaged;
7. Do not place this product in direct sunlight. Exposure to direct sunlight or excessive heat can damage the product.

3. Connecting the scanner

Note: Switch off the computer before connecting peripheral equipment.

3.1. Unlocking the transport locks

1. The scanner has 2 locks to prevent damage during transport. Before the scanner can be used, these must be unlocked.
2. The first lock is on the front of the scanner. Slide the lever to the left to unlock (Figure 1).

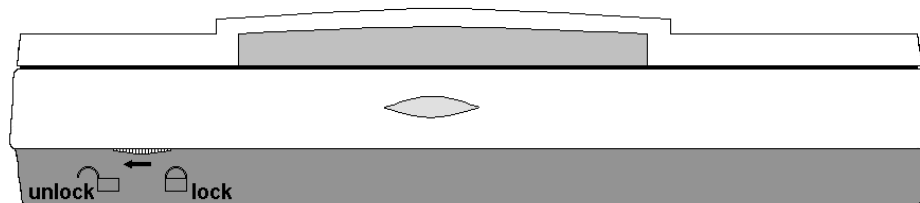 


Figure 1: Unlocking the transport locks

3. The second lock is on the underside of the scanner. Turn the knob a quarter turn anti-clockwise to unlock (Figure 2).

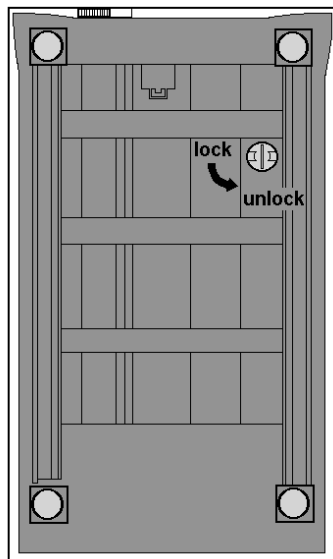 


Figure 2: Unlocking the transport locks

3.2. Connecting the scanner

Proceed as follows to connect the scanner to your computer:

1. Switch off the computer and any peripheral equipment.
2. Disconnect the power plug from the mains supply.
3. Disconnect the printer cable plug from the parallel port at the rear of the computer (if in use).
4. Connect the printer cable (if in use) to the 'Printer' connection at the rear of the scanner (connector A, Figure 3).
5. Take the interface cable supplied and connect it to the parallel port of your computer.
6. Connect the other end of the cable to the 'Host' connection on the scanner (connector B, Figure 3).
7. Connect the power supply adapter lead to the scanner (connector C, Figure 3).
8. Connect the power supply adapter to the mains supply.
9. Connect the power plug of your computer to the mains supply.

Your scanner (and printer) have now been connected and you are ready to start installing the driver and application software. You may have to reinstall your printer.

Note: *The scanner is switched on and off automatically by the driver. This is why the scanner has no on/off switch.*

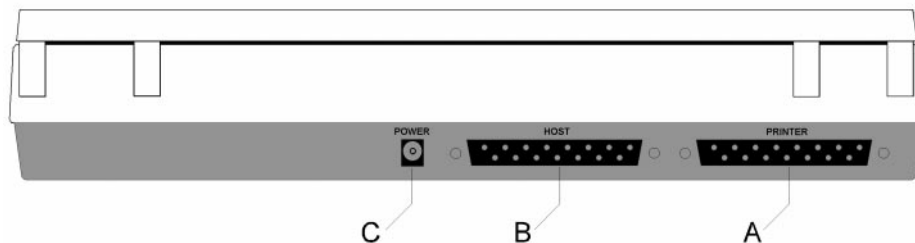 


Figure 3: Rear view of the scanner

4. Installing the driver and software

4.1. Installing the driver

In order for you to be able to use your scanner under Windows, the TWAIN driver and applications software must first be installed.

Close any active programs before installing the software.

1. Start Windows.
2. Insert the application CD-ROM supplied into your CD-ROM drive.
3. Using the mouse, click on 'Start' and select 'Run'.
4. On the command line, type [D:\SETUP.EXE], then click on 'OK' (Figure 4).

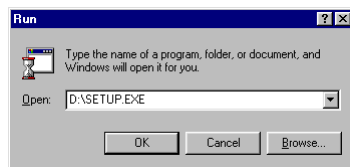 


Figure 4: Installation in Windows 95, 98 and NT 4

5. Using the mouse, select your preferred language for the installation (English, French, German, Italian, Spanish, Portuguese, or Dutch, see Figure 5). After you have selected the preferred language, a screen like the one shown in Figure 6 is displayed.

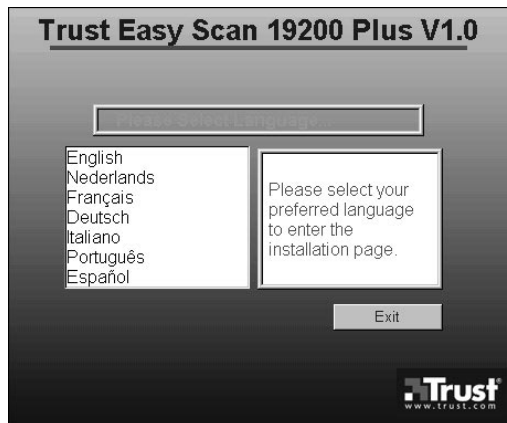 


Figure 5: Language selection

6. Click on 'Scanner Driver'. A screen as in Figure 7 is displayed.

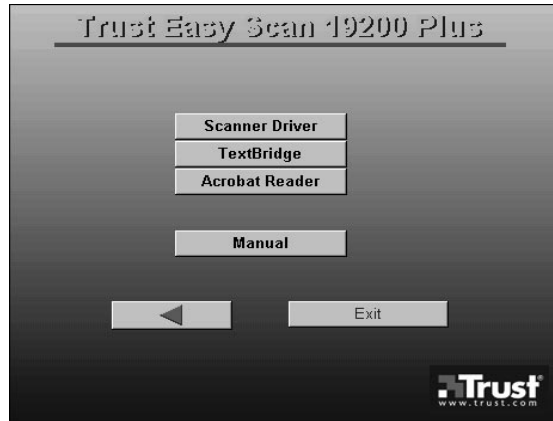 


Figure 6: Installation menu

7. Click on 'Next'. The driver is installed.

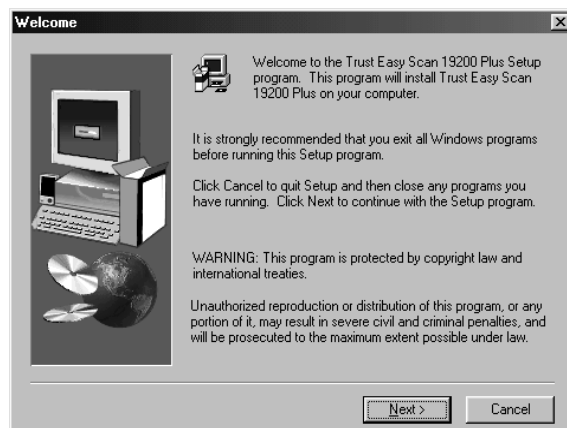 


Figure 7: Driver Installation

8. You have now completed the driver installation. Proceed with section 4.2 to install TextBridge Classic 2.0.

4.2. Installing TextBridge Classic 2.0

After the driver installation, the installation menu will remain visible (Figure 6). If this is not the case, repeat steps 1 to 5 from section 4.1. Proceed as follows to install TextBridge.

1. In the installation menu (Figure 6), click on 'TextBridge'. A screen as in Figure 8 is displayed.



Figure 8: Language selection

2. Select the language for TextBridge Classic (US English, UK English, French, Spanish, Italian, or Portuguese). A screen as in Figure 9 is displayed.

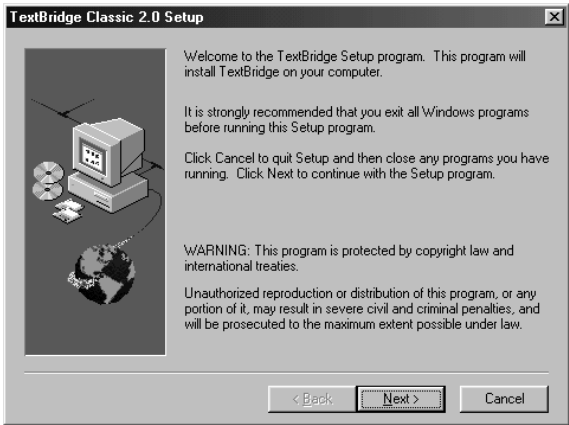 


Figure 9: Installing TextBridge Classic 2.0

ENGLISH

- Click on 'Next'. A screen as in Figure 10 is displayed.

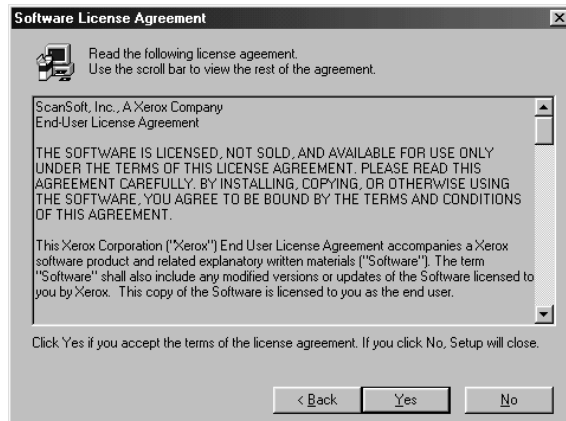 


Figure 10: Installing TextBridge Classic 2.0

- Click on 'Yes' to accept the license agreement and continue with the installation. A screen as in Figure 11 is displayed.

 
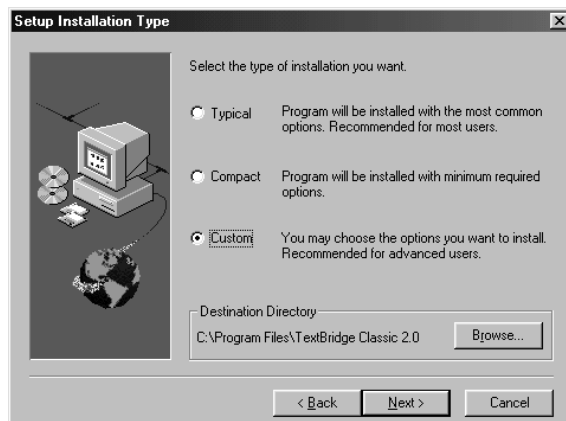 


Figure 11: Installing TextBridge Classic 2.0

- Click on 'Custom' so a bullet appears in the box.
- Click on 'Next' to select the languages you wish to use for OCR. A new window is displayed.

7. Click on 'Language packs' to select the languages to use (Figure 12).

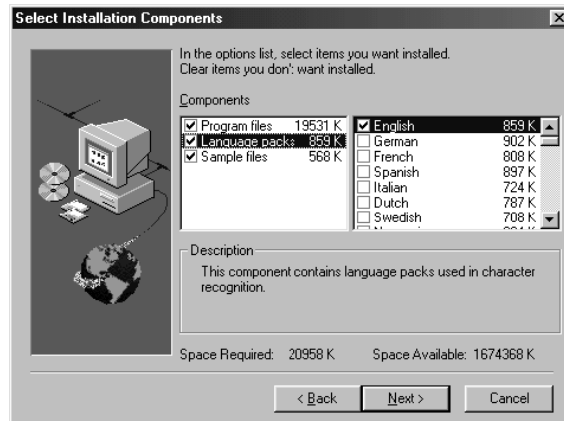

ENGLISH

Figure 12: Language selection

Note: You will be able to recognize text only in the languages you select at this point. Once the installation has been completed, you will be able to add other languages for OCR.

8. Click on 'Next' to continue with the installation of TextBridge Classic. A new window about the registration of TextBridge is displayed.
9. Click on 'Next'. A window about product registration is displayed.
10. Click on 'Cancel'. You are asked to confirm the cancellation of the product registration.
11. Click on 'Yes'. A screen is displayed informing you that you will receive a registration reminder two weeks after the installation of TextBridge.
12. Click on 'OK' to complete the installation of TextBridge Classic.
13. Click on 'OK' to restart your computer.
14. You have now completed the installation of TextBridge Classic 2.0. Proceed with section 4.3 for the installation of Adobe PhotoDeluxe 2.0.

4.3. Installing Adobe PhotoDeluxe 2.0

Adobe PhotoDeluxe 2.0 is a program that will enable you to scan and edit images. Follow the instructions below for the installation of PhotoDeluxe.

1. Insert the 'Adobe PhotoDeluxe' CD-ROM into the CD-ROM drive.
2. Using the mouse, click on 'Start'. Select 'Run' if the installation does not start automatically.
3. On the command line, type [D:\AUTORUN.EXE] and click on 'OK'. A screen as in Figure 13 is displayed.

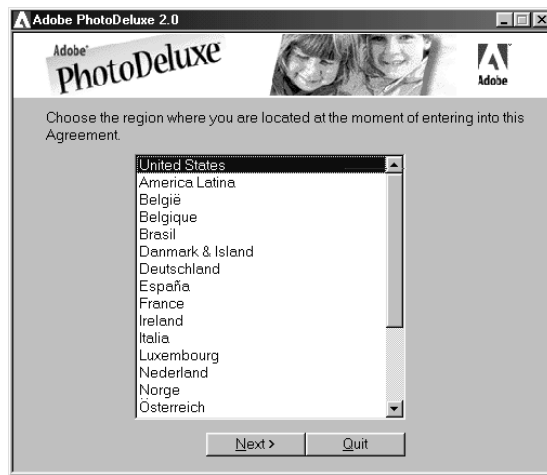 


Figure 13: Language selection

4. Select your preferred language and click on 'Next'. A screen as in Figure 14 is displayed.



Figure 14: Licence agreement

5. Click on 'Accept' to accept the license agreement and continue with the installation. A screen as in Figure 15 is displayed.

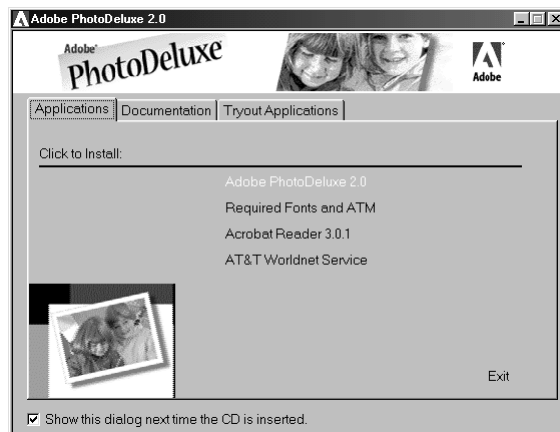 


Figure 15: Installing Adobe PhotoDeluxe 2.0

6. Click on 'Adobe PhotoDeluxe 2.0' to start the installation.

7. In the next screen, click on 'Next'. A screen as in Figure 16 is displayed.

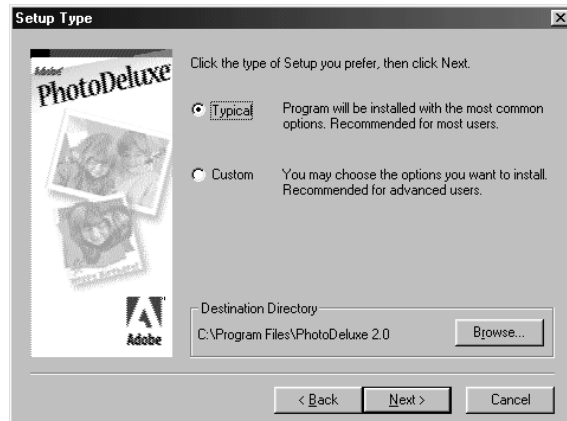 


Figure 16: Installing Adobe PhotoDeluxe 2.0

8. Select 'Typical' and click on 'Next' to continue. A screen as in Figure 17 is displayed.

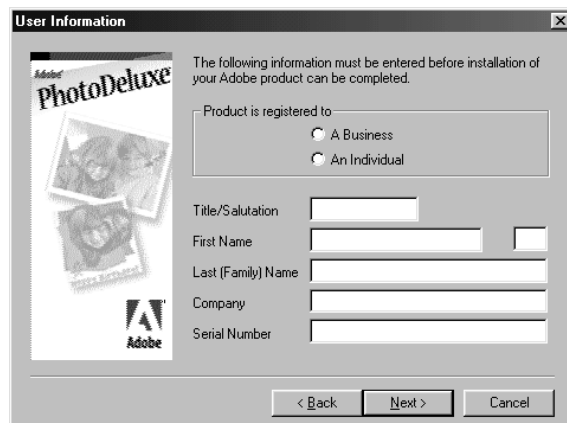 


Figure 17: Installing Adobe PhotoDeluxe 2.0

9. You are prompted to enter information in this window. The serial number can be found on the CD-ROM box. Click on 'Next' to continue.

10. The next screen will ask you to confirm the information you have provided. Click on 'Yes'. A screen as in Figure 18 is displayed.

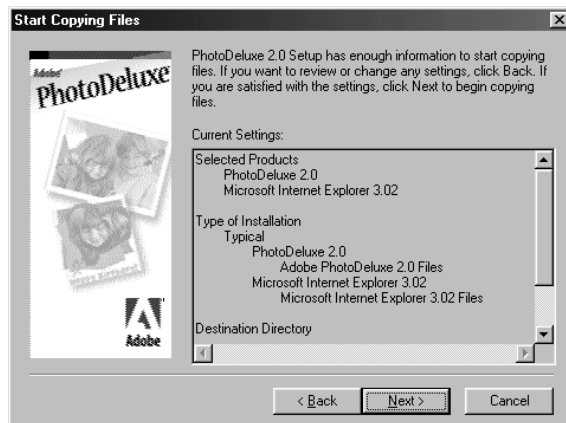 


Figure 18: Installing Adobe PhotoDeluxe 2.0

11. Click on 'Next'. A screen as in Figure 19 is displayed.

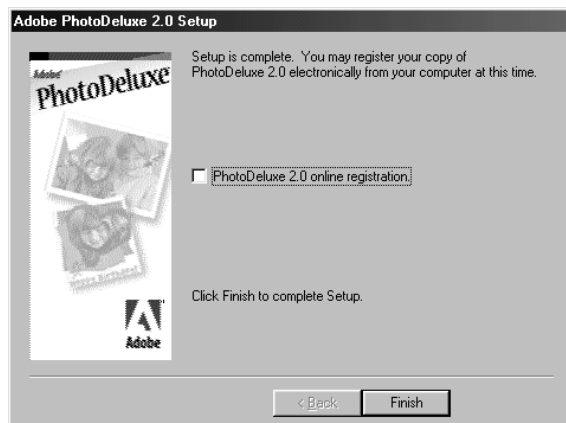 


Figure 19: Installing Adobe PhotoDeluxe 2.0

12. Disable the on-line registration option for PhotoDeluxe (Figure 19). Click on 'Finish' to complete the installation.
13. Click on 'OK' to restart your computer.
14. You have now completed the installation of Adobe PhotoDeluxe 2.0. If you have a modem, you can register the software on-line after installation. For instructions, refer to the software manual supplied on the CD-ROM. Refer to the next sections for instructions on using the scanner and the applications.

5. Making a scan

To make a scan with the scanner, open the TWAIN dialog box. You can open the TWAIN dialog box by selecting it from the Windows Start menu, or by selecting it from a TWAIN compatible application.

For instructions on how to select the scanner and start TWAIN, refer to the manual of the application you plan to use.

5.1. TWAIN main menu

Go to 'Start - Programs - Trust Easy Scan 19200 Plus' and select 'Trust Easy Scan 19200 Plus'. The TWAIN dialog box is displayed (Figure 20).

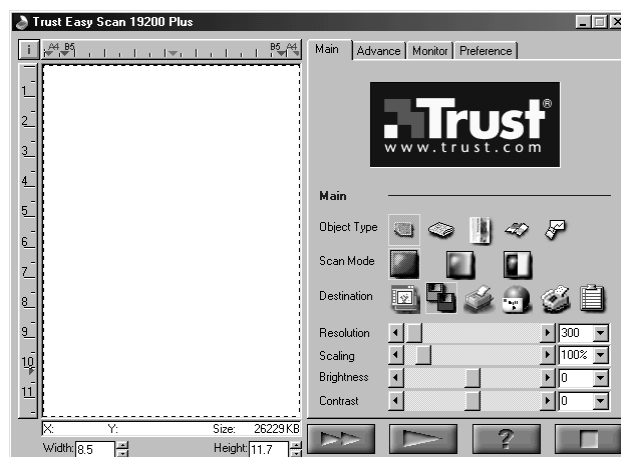 


Figure 20: TWAIN dialog box main menu

Button	Description	Function
	Prescan	Makes a test scan of the image on the glass plate.
	Scan	Scans the selected area.
	Help	Help function.
	Exit	Close the TWAIN dialog box.

Button		Description	Function
Object Type		Normal/Photo	Optimum setting for scanning photographs.
		Newspaper	Optimum setting for scanning newsprint.
		Catalog/Magazine	Optimum setting for scanning magazines.
		Art Magazine	Optimum setting for scanning art magazines.
		User Define Object	User defined settings.
Scan Mode		Color	Scan colour picture (photographs).
		Gray	Scan greyscale values (black & white photographs).
		BW	Scan black and white originals (text).
Destination		Application	Sends the scanned image data to an application (e.g. PhotoDeluxe).
		Disk	Transfers the scanned image data to a diskette or hard disk drive.
		Printer	Sends the scanned image data to the printer.
		EMail	Sends the scanned image data to an e-mail address.
		Fax	Sends the scanned image data to a fax device.
		Clipboard	Sends the scanned image data to the Windows clipboard.

Setting	Function
Resolution	Adjusts resolution.
Scaling	Adjusts the size of the scanned image.
Brightness	Adjusts the brightness.
Contrast	Adjusts the contrast.

5.2. Advanced TWAIN menu

In the TWAIN dialog box (Figure 20) click on the 'Advanced' tab. A screen as in Figure 21 is displayed.

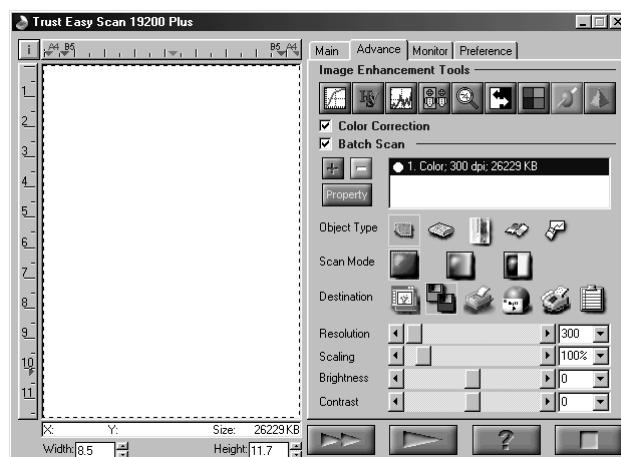 


Figure 21: Advanced TWAIN menu

Color Correction	Select 'Color Correction' for a natural reproduction of the colour in the scanned area.	
Batch scan	Scan several areas in one pass.	
		Add area. Select the area for the Prescan.
		Remove the active area.
		Show properties of the active area.

Button		Description	Function
Image enhancement tools		Gamma	Set gamma correction value.
		HSV	Set colour hue and saturation..
		Tone	Correct colour.
		Mirror	Mirror the image vertically.
		Zoom	Zoom in on the image.
		Invert	Show colours in negative.
		Levels	Adjust colours spread over a 256-colour scale.
		Filter	Filter out certain colours (red, green, or blue).
		Effects	Add effects to the image (blurred or sharper image).

5.3. Monitor calibration

In the TWAIN dialog box (Figure 20), click on the 'Monitor' tab. A screen as in Figure 22 is displayed. In this window you can alter the colour settings of the scanned image. When the scanned image is printed, the colours are reproduced exactly as shown in this window.

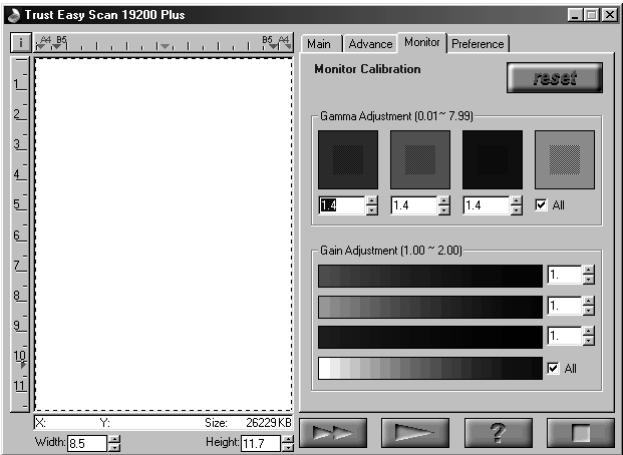 


Figure 22: Monitor calibration

Monitor calibration	Gamma Adjustment	Alter 'Gamma' settings.
	Gain Adjustment	Alter 'Gain' settings.
	Reset	Restore factory settings.

5.4. Preferences

In the TWAIN dialog box (Figure 20), click on the 'Preferences' tab. A screen as in Figure 23 is displayed.

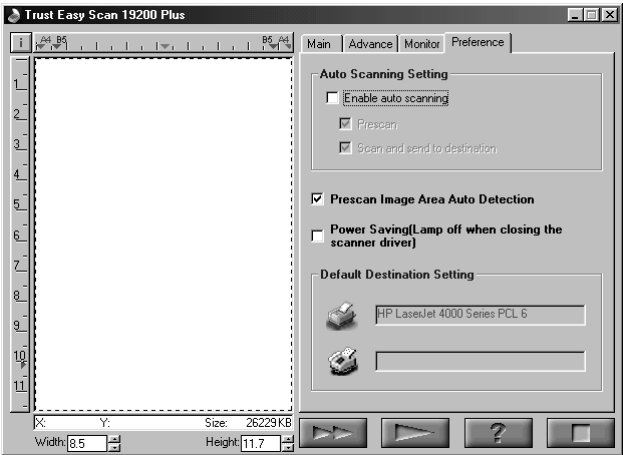 


Figure 23: Preferences

Auto Scanning	With this feature selected you can make a test scan and scan an image into an application with one touch of a button (on the front of the scanner).	
Area Auto Detection	This feature automatically detects the size of the scanned image.	
Power Saving	This feature automatically switches off the lamp in the scanner when the TWAIN dialog box is closed. The power indicator on the scanner remains lit.	
Destination Setting		By clicking on this icon you can select a printer. Works only if a printer has been connected.
		By clicking on this icon you can select a fax device. Works only if a fax device has been connected.

ENGLISH

5.5. Making a scan

Proceed as follows to make a scan.

1. Position the image or document face downwards on the glass plate.
2. Using the mouse, click on the 'Prescan' button (Figure 20).
3. Select the desired scan mode (colour, greyscale, black & white).
4. Using the mouse, select the scan area in the prescan window.
5. Set the resolution. 300 DPI will be sufficient for most purposes.
6. Using the mouse, click on the 'Scan' button to start the scan. The results are copied to the currently active application.

Tip: *The scan process can be interrupted by clicking on 'Cancel'.*

6. Working with Adobe PhotoDeluxe

Adobe PhotoDeluxe is a drawing and image editing program with a large number of options. You can use this program to edit the scanned images.

6.1. Initial scanner settings

1. Start the 'Adobe PhotoDeluxe' program.
2. Go to 'File - Open Special - Scan Photo...' (Figure 24).



Figure 24: Selecting TWAIN, starting TWAIN

3. From the window, select 'Trust Easy Scan 19200 Plus' (Figure 25).

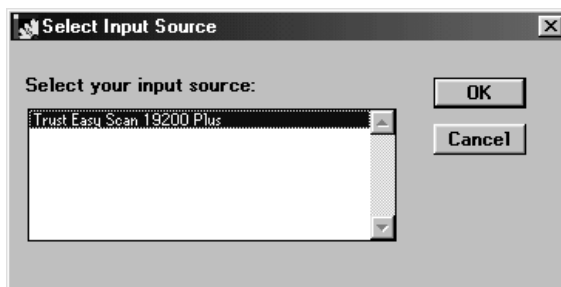 


Figure 25: Scanner selection

4. Click on 'OK'. The TWAIN dialog box is displayed (Figure 20).

You have now adjusted the scanner settings ready for use.

6.2. Scanning with Adobe PhotoDeluxe

1. Start the 'Adobe PhotoDeluxe' program.
2. Position the document to be scanned on the scanner.
3. Click on 'File', select 'Open Special', and then select 'Scan Photo...' (Figure 24). The TWAIN dialog box is displayed (Figure20).
4. Click on 'Prescan' to make a test scan.
5. Using the mouse, select the area you wish to scan.
6. Set the scan mode to 'Color mode'.
7. Set the 'Destination' to 'Application'.
8. Set the desired resolution (300 dpi recommended).
9. Click on 'Scan'. When the scan process has finished, the image data are transferred to Adobe PhotoDeluxe.
10. When the scanner has finished scanning, click on 'Exit' to return to Adobe PhotoDeluxe. You can now start editing the image.

This has been a short introduction to the program. Please refer to the Help feature of the program for more information. The CD-ROM contains a manual.

7. Working with TextBridge

TextBridge is a program for scanning text and converting it to a document format for editing in a word processor. You will find a complete manual on the CD-ROM.

7.1. Settings

1. Start TextBridge.
2. Click on 'File'.
3. Click on 'Select Scanner...'. A new window is displayed.
4. Next, select the 'Trust Easy Scan 19200 Plus'.
5. Click on 'OK'.
6. You can now select the language of the document to be scanned. Click on 'Process'.
7. Click on 'Settings'. A new window is displayed.
8. Click on the 'Processing' tab.
9. Select the language in the 'Process With' box by clicking on the triangle and selecting the language (Figure 26).



Figure 26: Language selection

10. Click on 'OK'.
11. You have now completed the TextBridge Classic settings. Continue with section 7.2.

7.2. Scanning with TextBridge Classic

Note: To show some non-English language characters, e.g. in Polish, 'Multi-language Support' should be selected in Windows. See the Windows 'Help' feature for more information. You should also make sure your application is capable of showing non-English language characters.

1. Position the document to be scanned on the scanner.
2. Click on the button marked 'Auto Process' (Figure 27). A new window is opened.



Figure 27: Auto Process button

3. Select the document type.
4. Set 'Page Source' to 'Scanner' by clicking with the mouse (Figure 28).

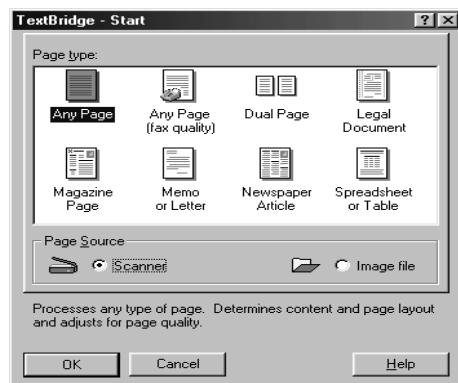 


Figure 28: Selecting 'Page Source'

5. Click on 'OK'. The TWAIN dialog box (Figure 20) is opened.
6. Click on 'Prescan' to make a test scan.
7. Using the mouse, select the area you wish to scan.

8. Set 'Scan Mode' to 'BW' (black & white).
9. Set 'Destination' to 'Application'.
10. Set the resolution to 300 dpi.
11. Click on 'Scan'.
12. After completing the scan, TextBridge will start the OCR process of the scanned document and will ask you if you wish to scan additional documents.
13. Click on 'More Pages' or 'Other side' to scan more pages.
14. Click on 'No More' to stop scanning. A window is displayed asking for a location to save the scanned text in.
15. Under 'File Name', type a name for the text produced.
16. Under 'Save as Type' select the format for the file. Select a file format that will be recognized by your word processor application. If in doubt, select 'ASCII Std. (*.txt)'.
17. Click on 'Save' to save the file. This completes the OCR process.
18. Close TextBridge Classic.

In order to edit the scanned text you have just saved to disk, you need a word processing program. Start the program and point it to the name you used to save the file in step 15.

TextBridge includes a number of advanced options. Refer to the on-line help and the documentation on the CD-ROM for more information.

8. Maintenance

Clean the glass plate regularly with a soft, clean cloth to remove dust and dirt. A clean glass plate is important since any dirt will show up in the scanned image.

When cleaning the equipment, observe the following safety measures:

1. Disconnect the power plug from the mains supply before cleaning the equipment.
2. Do not use aggressive cleaning liquids, liquid cleansers, or aerosols to clean the scanner or the glass plate.

9. Troubleshooting

9.1. Testing the scanner

During the installation of the TWAIN driver and the applications, a test program was also installed. The test program provides a simple means of checking the correct operation of the basic features of the scanner.

Note: *The test program will be displayed in the language selected under the regional settings of your Windows version.*

1. Start the 'Trust Scanner Test Program'. (Start - Programs - Trust Easy Scan 19200 Plus - Test Program). A screen as in Figure 29 is displayed.

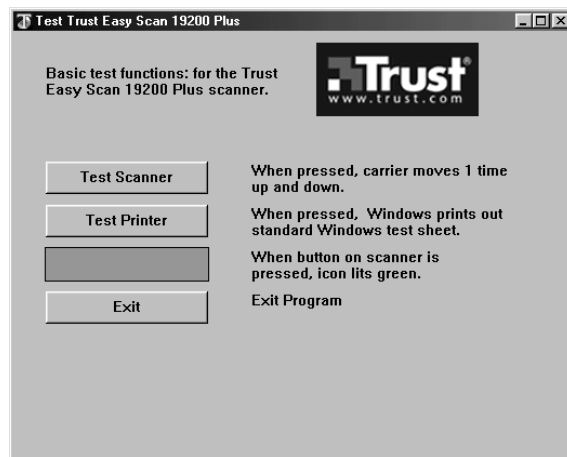 


Figure 29: Test Program

2. Click on 'Test Scanner'. The transport mechanism will move up and down once.

Note: *You cannot use the 'Test Scanner' button if the interface cable or the power supply of the scanner are not connected.*

3. Click on 'Test Printer' if you have installed a printer on your computer. A standard text is printed.
4. Press the button on the front of the scanner. The icon in the test program should light up green.
5. Click on 'Exit' to close the test program.

Problem	Possible cause	Solution
Scan too dark.	Monitor set too dark.	Adjust the monitor's brightness.
	Incorrect TWAIN settings.	Adjust the brightness in the TWAIN settings menu. See section 5.
Low-quality scan.	Resolution too low.	In the TWAIN driver, set the resolution to at least 300 DPI.
	Incorrect TWAIN settings.	Adjust the TWAIN settings. See section 5.
	Glass plate dirty. Dirt on the glass plate shows up in the scanned image.	Thoroughly clean the glass of the scanner.
Scanner operates very slowly.	Computer printer port not set to EPP.	In the BIOS setup program, change the printer port of your computer to EPP. Refer to the computer manual.
	High resolution setting.	For normal purposes, a maximum resolution of 600 DPI should suffice. Use higher resolutions for small originals only.
	Insufficient memory.	You need a minimum of 16MB RAM. Recommended value is 64 MB for Windows 95, 98, and Windows NT 4.
Error message during scan.	Hard disk full.	You need 3 times the space required by the scanned image as free space on your hard disk drive. The amount of disk space required can be viewed in the TWAIN window. Free up disk space or select a lower resolution.
	Resolution set too high.	Select a maximum resolution of 600 DPI when scanning an A4 area.
	Area selected too large.	Use the 4800 or 19200 DPI settings for small originals only (5x5 mm).
No response from printer.	Printer is incompatible.	The printer connection of the scanner can pose problems with a number of printers. Consider adding a printer port expansion card.
	Scanner is not connected to the mains supply.	Make sure the scanner is connected to the mains supply.

Problem	Possible cause	Solution
	Printer only works directly with the Windows interface.	Install a separate printer card, or connect your printer directly to the parallel port.
'Flatbed scanner not ready' error message is displayed.	The interface cable has not been connected.	Connect the interface cable (see section 3).
	Power supply adapter not connected.	Connect power supply adapter (see section 3).

ENGLISH

If the above list does not help you solve the problem with your scanner, please contact your dealer, or visit our Internet site (www.trust.com) to check the FAQ and the latest version of the driver software. Please have the following information ready:

1. Operating system
2. Hardware configuration
 - CPU (MHz)
 - Memory (MB)
 - Free hard disk space (MB)
 - Display adapter: resolution and colour depth
3. Scanner settings
 - Scan mode (colour, greyscale, black & white)
 - Resolution (DPI)
 - Destination (application, printer, etc.)
 - Size:
4. Version of TWAIN program
5. Name and version of the application software

10. Specifications

Type	Flatbed, CCD scanner
Optical resolution (H x V)	600 x 1200 DPI
Maximum resolution through interpolation	19200 DPI
Scan modes	• 1-bit black and white • 12-bit greyscale • 36-bit colour
Document size	210 x 297 mm (A4) 8.5 x 11 inch (Letter)
Interface	Parallel port EPP
Power supply	• 220 Vac - 240 Vac • 50 - 60 Hz • external
Power consumption	15 W
Dimensions (B x H x D)	297 x 93 x 475 mm
Weight (excl. packaging)	2.7 kg

11. Trust Service Centers

Country:	Contact:
UK Ireland	UK Office Internet www.trust.com E-mail trustuk@globalnet.co.uk Mail Aashima Distribution U.K. Ltd. Trust Support PO Box 5277 Witham CM8 3XU United Kingdom Fax +44-(0)1376-514633
Italy	Italian Office Internet www.trust.com E-mail trusttdp@tin.it Mail Aashima Italia s.r.l. Trust Support via dei Pignattari 174 Blocco 37 CENTERGROSS Funo di Argelato (BO) Italia Fax 051-6635843
France North Africa	French Office Internet www.trust.com E-mail aashimatec@aol.com Mail Aashima France sarl Trust Support BP 50002 95945 Roissy C.D.G. France Fax +33-(0)1-48174918
All other countries	European Head Office Internet www.trust.com E-mail support@aashima.nl Mail Aashima Technology B.V. Trust Support P.O. Box 8043 3301 CA Dordrecht The Netherlands Fax +31-(0)78-6543299 Fax +49-(0)2821-58873 (for Germany)