

Installation Guide

Rack Power Distribution Unit

EN 990-1583B-001– 03/2026

Safety and Grounding

Read the following information before installing or operating the APC Power Distribution Unit (PDU):

- The PDU is intended only for use with four-wire grounded connections on APC Uninterruptible Power Supplies (UPSs). Do not plug the PDU into an electrical outlet or other device.
- This PDU is intended for indoor use only.
- Do not install this PDU where excessive moisture or heat is present.
- Never install any wiring, equipment, or PDUs during a lightning storm.
- Do not use extension cords or adapters with this PDU.
- Do not work alone under hazardous conditions.
- Check that the power cord, plug, and socket are in good condition.
- Disconnect the PDU from the power outlet before you install or connect equipment to reduce the risk of electric shock when you cannot verify grounding. Reconnect the PDU to the power outlet only after you make all connections.
- Install the PDU so that the power plug may be disconnected for service.
- Install the PDU so that there is not an uneven mechanical load.
- Follow the nameplate ratings when connecting equipment to the supply circuit. Do not overload the circuits. An overload condition could put your over-current protection at risk or cause problems with your supply wiring.

⚠ Caution

Electrical HAZARD

Use only the supplied hardware to attach the mounting brackets.

Failure to follow these instructions can result in injury or equipment damage.

 
NOTICE

The Rack PDUs are to be used only with InfraStruXure Type A systems.

Inventory


AP7580, AP7581, AP7582, AP7583, and AP7584 are 24 A Rack Power Distribution Units (PDUs) that provide 120- or 208-volt power to rack mounted equipment.

AP7580 and AP7581

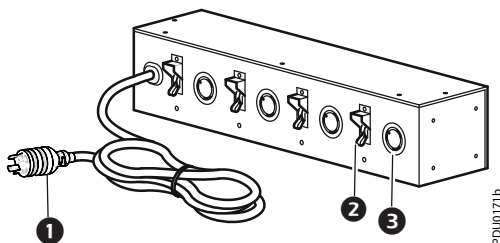


Item	Description
1	28-foot NEMA L14-30 power cord
2	Four 20-amp circuit breakers
3	AP7580: Four NEMA L5-20 outlets AP7581: Four NEMA L6-20 outlets

 AP7582

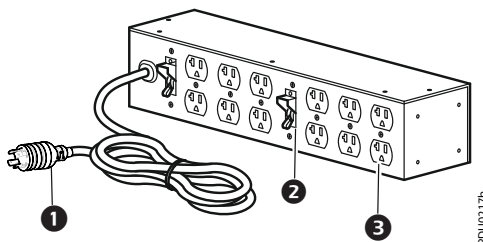

Item	Description
1	28-foot NEMA L14-30 power cord
2	Two 20-amp circuit breakers
3	Twelve NEMA 5-20 outlets

 AP7583 and AP7584

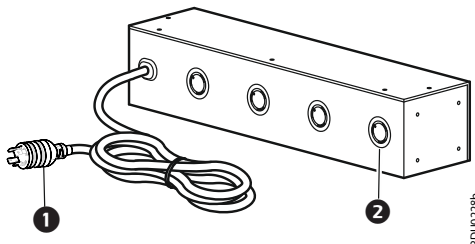

Item	Description
1	28-foot NEMA L14-30 power cord
2	AP7583: Four NEMA L5-30 outlets AP7584: Four NEMA L6-30 outlets

Install the PDU

Mounting options

Install the PDU in the bottom 2U of a NetShelter® or any standard 19-inch EIA-310-D rack or enclosure, using the mounting brackets (provided).


NOTICE

- The PDU can be installed in one of two ways, with the outlets facing out of the rack or toward the roof of the rack.
- The PDU is intended only for use with an APC UPS. Do not plug it into an electrical outlet or another device.


Bracket-mounting

1. Attach the mounting brackets to the PDU, using four flat-head screws per bracket (provided).

 - a. To mount the PDU with the outlets facing out of the rack:

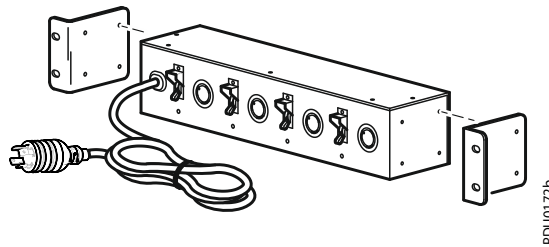


 - b. To mount the PDU with the outlets facing the top of the rack:

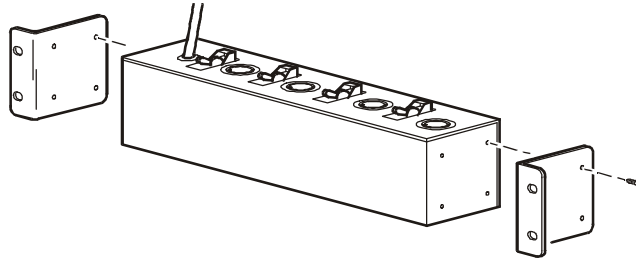


2. Choose a location for the PDU

 Note: The PDU occupies two U-spaces. The numbers on the enclosure’s vertical rail denote the middle of a U-space.

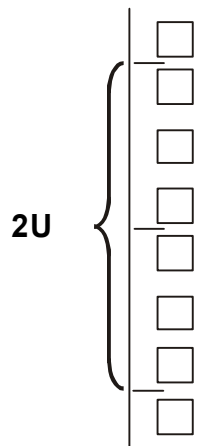

 - a. Insert a caged nut (provided with the enclosure) above and below a notched hole on each vertical mounting rail in your chosen location.
- b. Align the mounting holes of the brackets with the installed caged nuts. Insert and tighten the screws.

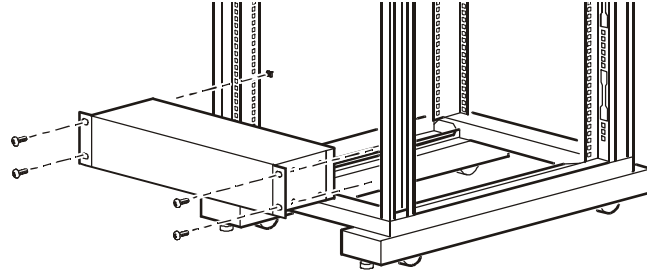

Connect to a UPS

1. Route the power cord through one of the slots on the roof of the enclosure.
2. If necessary, route the PDU cord across a ladder connected to the enclosure to connect to an APC UPS.
3. Plug the PDU into the L14 outlet on the rear of the UPS.

Specifications

Electrical

Nominal input voltage	120 or 208 V
Input frequency	50 or 60 Hz
Input connectors	NEMA L14-30 plug
Output connectors	AP7580: Four NEMA L5-20 outlets AP7581: Four NEMA L6-20 outlets AP7582: Twelve NEMA 5-20 outlets AP7583: Four NEMA L5-30 outlets AP7584: Four NEMA L6-30 outlets
Maximum total current draw	24 A

Physical

Size (H × W × D)	3.50 × 17.20 × 3.50 in (8.89 × 43.69 × 8.89 cm)
Weight	14.0 lb (6.4 kg)
Shipping weight	16.0 lb (7.3 kg)

Environmental

Elevation (above MSL)	
Operating	0–10,000 ft (0–3000 m)
Storage	0–50,000 ft (0–15 000 m)
Temperature	
Operating	0 to 45° C (32 to 115° F)
Storage	–25 to 65° C (–13 to 149° F)
Humidity	
Operating	0–95% RH Non-condensing
Storage	0–95% RH Non-condensing

Compliance

Safety verification	UL, cUL
---------------------	---------

Two-year Factory Warranty

The limited warranty provided by Schneider Electric in this Statement of Limited Factory Warranty applies only to products you purchase for your commercial or industrial use in the ordinary course of your business.

Terms of Warranty

Schneider Electric warrants its products to be free from defects in materials and workmanship for a period of one year from the date of purchase. The obligation of Schneider Electric under this warranty is limited to repairing or replacing, at its sole discretion, any such defective products. This warranty does not apply to equipment that has been damaged by accident, negligence or misapplication or has been altered or modified in any way. Repair or replacement of a defective product or part thereof does not extend the original warranty period. Any parts furnished under this warranty may be new or factory-remanufactured.

Non-transferable Warranty

This warranty extends only to the original purchaser who must have properly registered the product. The product may be registered at www.se.com.

Exclusions

Schneider Electric shall not be liable under the warranty if its testing and examination disclose that the alleged defect in the product does not exist or was caused by end user's or any third person's misuse, negligence, improper installation or testing. Further, Schneider Electric shall not be liable under the warranty for unauthorized attempts to repair or modify wrong or inadequate electrical voltage or connection, inappropriate on-site operation conditions, corrosive atmosphere, repair, installation, exposure to the elements, Acts of God, fire, theft, or installation contrary to Schneider Electric recommendations or specifications or in any event if the Schneider Electric serial number has been altered, defaced, or removed, or any other cause beyond the range of the intended use.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE, OF PRODUCTS SOLD, SERVICED OR FURNISHED UNDER THIS AGREEMENT OR IN CONNECTION HERewith. SCHNEIDER ELECTRIC DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTION AND FITNESS FOR A PARTICULAR PURPOSE. SCHNEIDER ELECTRIC EXPRESS WARRANTIES WILL NOT BE ENLARGED, DIMINISHED, OR AFFECTED BY AND NO OBLIGATION OR LIABILITY WILL ARISE OUT OF, SCHNEIDER ELECTRIC RENDERING OF TECHNICAL OR OTHER ADVICE OR SERVICE IN CONNECTION WITH THE PRODUCTS. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES. THE WARRANTIES SET FORTH ABOVE CONSTITUTE SCHNEIDER ELECTRIC'S SOLE LIABILITY AND PURCHASER'S EXCLUSIVE REMEDY FOR ANY BREACH OF SUCH WARRANTIES. SCHNEIDER ELECTRIC WARRANTIES EXTEND ONLY TO PURCHASER AND ARE NOT EXTENDED TO ANY THIRD PARTIES.

IN NO EVENT SHALL SCHNEIDER ELECTRIC, ITS OFFICERS, DIRECTORS, AFFILIATES OR EMPLOYEES BE LIABLE FOR ANY FORM OF INDIRECT, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, ARISING OUT OF THE USE, SERVICE OR INSTALLATION, OF THE PRODUCTS, WHETHER SUCH DAMAGES ARISE IN CONTRACT OR TORT, IRRESPECTIVE OF FAULT, NEGLIGENCE OR STRICT LIABILITY OR WHETHER SCHNEIDER ELECTRIC HAS BEEN ADVISED IN ADVANCE OF THE POSSIBILITY OF FOR ANY COSTS, SUCH AS LOST PROFITS OR REVENUE, LOSS OF EQUIPMENT, LOSS OF USE OF EQUIPMENT, LOSS OF SOFTWARE, LOSS OF DATA, COSTS OF SUBSTITUTES, CLAIMS BY THIRD PARTIES, OR OTHERWISE.

NO SALESMAN, EMPLOYEE OR AGENT OF SCHNEIDER ELECTRIC IS AUTHORIZED TO ADD TO OR VARY THE TERMS OF THIS WARRANTY. WARRANTY TERMS MAY BE MODIFIED, IF AT ALL, ONLY IN WRITING SIGNED BY AN SCHNEIDER ELECTRIC OFFICER AND LEGAL DEPARTMENT.

Warranty Claims

Customers with warranty claims issues may access the customer support network through the Support page, www.se.com/support. Select your country from the country selection pull-down menu at the top of the Web page. Select the **Support** tab to obtain contact information for customer support in your region.