

# USER MANUAL

---

DKM FX MODULAR KVM MATRIX SWITCHES SERIES

# MODULAR KVM MATRIX SWITCHES

---

24/7 TECHNICAL SUPPORT AT 1.877.877.2269 OR VISIT [BLACKBOX.COM](http://BLACKBOX.COM)



# TABLE OF CONTENTS

<b>SAFETY INSTRUCTIONS .....</b>	<b>6</b>
Installation .....	6
Repair.....	6
<b>1. SPECIFICATIONS.....</b>	<b>7</b>
1.1 Interfaces .....	7
1.1.1 DVI-D Single-Link.....	7
1.1.2 USB-HID .....	7
1.1.3 RJ-45 (Network).....	7
1.1.4 RJ-45 (Serial).....	7
1.1.5 RJ-45 (Interconnect).....	8
1.1.6 Fiber SFP Type LC (Interconnect) .....	8
1.1.7 SDI (Interconnect) .....	8
1.2 Interconnect Cable.....	8
1.2.1 CATx .....	8
1.2.2 Fiber .....	9
1.2.3 Coaxial.....	10
1.3 Connector Pinouts .....	10
1.3.1 CPU Board.....	10
1.3.2 I/O Port CATx.....	11
1.3.3 I/O Port SFP .....	12
1.3.4 I/O Port SDI .....	12
1.4 Power Supply .....	12
1.5 Environmental Conditions .....	13
1.6 Dimensions .....	14
1.7 Shipping Weight.....	14
1.8 MTBF .....	14
<b>2. OVERVIEW.....</b>	<b>16</b>
2.1 Application.....	16
2.2 Access Options .....	16
2.3 System Overview.....	17
2.4 Product Range.....	18
2.5 Options.....	18
2.6 Device Views.....	20
2.6.1 576-Port Chassis (ACX576-R2, ACX576S-R2).....	20
2.6.2 288-Port Chassis (ACX288-R2).....	21
2.6.3 160-Port Chassis (ACX160-R2).....	23
2.6.4 80-Port Chassis (ACX080-R2).....	24
2.6.5 48-Port Chassis (ACX048-R2).....	25
2.7 Diagnostics and Status.....	26
2.7.1 Status LEDs .....	26
2.7.2 Port Status.....	32
2.7.3 Port Status Matrix Grid.....	36



# TABLE OF CONTENTS

2.7.4 Extender OSD .....	37
2.7.5 Network Status .....	39
2.7.6 Firmware Status Matrix .....	41
2.7.7 Firmware Status Extender.....	43
2.8 Trace Function.....	44
2.9 Syslog Monitoring .....	45
2.10 SNMP.....	47
2.11 System Check .....	51
2.12 Device Finder .....	52
<b>3. INSTALLATION .....</b>	<b>54</b>
3.1 Package Contents .....	54
3.2 System Setup .....	54
3.3 Example Applications .....	55
3.3.1 KVM Matrix.....	56
3.3.2 Video Matrix.....	57
3.3.3 Parallel Operation (Stacking) .....	58
3.3.4 Matrix Grid.....	59
<b>4. CONFIGURATION .....</b>	<b>60</b>
4.1 Command Mode.....	60
4.2 Control Options .....	61
4.2.1 Control via OSD.....	61
4.2.2 Control via Java Tool.....	65
4.2.3 Control via Serial Interface.....	71
4.3 Assignment.....	72
4.3.1 Virtual CPU .....	72
4.3.2 Virtual Console .....	74
4.4 System Settings .....	76
4.4.1 System Data.....	76
4.4.2 Automatic ID .....	79
4.4.3 Access.....	82
4.4.4 Switch.....	84
4.4.5 Network .....	88
4.4.6 Date and Time.....	92
4.5 User Settings .....	95
4.5.1 User .....	95
4.5.2 Favorite List Users.....	98
4.5.3 User Macros.....	100
4.5.4 User Groups .....	104
4.6 Extender Settings.....	105
Flexible Port Extender Units .....	107
4.7 USB 2.0 Extender.....	108
4.8 Extenders for I/O Boards (USB 2.0/USB 3.0).....	110

# TABLE OF CONTENTS

4.9 Configuration of SDI.....	113
4.10 CPU Settings.....	115
4.11 CPU Groups.....	118
4.12 Console Settings.....	119
4.12.1 CON Devices.....	119
4.12.2 Mouse and Keyboard.....	124
4.12.3 Extender OSD.....	127
4.12.4 Favorite List Consoles.....	129
4.12.5 Console Macros.....	132
4.12.6 Shared Operation.....	135
4.12.7 Multi-Screen Control.....	137
4.12.8 Active Directory.....	140
4.13 Saving and Loading Configurations.....	143
4.13.1 Active Configuration.....	143
4.13.2 Saving Configurations (Internal).....	143
4.13.3 Loading Configurations (Internal).....	146
4.13.4 Saving Configurations (External).....	147
4.13.5 Loading Configurations (External).....	148
4.14 Export and Import Options.....	149
4.14.1 Export Options.....	149
4.14.2 Import Options.....	150
4.15 Matrix Cascading.....	151
4.16 Matrix Grid.....	153
4.17 USB-HID Ghosting.....	157
4.18 Management of DDC Information (EDID).....	159
4.19 Firmware Update.....	161
4.19.1 Matrix Update.....	161
4.19.2 Extender Update.....	163
4.20 License Management.....	166
<b>5. OPERATION.....</b>	<b>167</b>
5.1 Operation via Hotkeys.....	167
5.1.1 Direct Switching.....	167
5.1.2 Scan Mode.....	168
5.1.3 Function Keys: <F1> – <F6>.....	169
5.1.4 Addressing of Main and Sub Matrices.....	169
5.2 KVM Switching.....	170
5.3 Extended Switching.....	172
5.4 Switching via a Macro List.....	177
5.5 Switching of Single Extenders within Devices.....	178
5.6 CON Switch.....	179
5.7 Multi-Screen Control.....	180
5.8 USB 2.0 Switching.....	181
5.9 Presets.....	181



# TABLE OF CONTENTS

5.10 Redundancy Function .....	183
5.11 LDAP Integration.....	185
5.12 Serial Interface.....	193
5.13 Power On and Power Down Functions .....	194
5.13.1 Restart.....	194
5.13.2 Factory Reset .....	194
5.13.3 Power Down.....	195
5.14 Summary of Keyboard Commands.....	196
<b>6. MAINTENANCE .....</b>	<b>198</b>
6.1 Power Supply Units .....	198
6.2 Fan Trays.....	198
6.3 CPU Board.....	198
6.4 I/O Board.....	199
6.5 Filter Pads.....	199
<b>7. TROUBLESHOOTING .....</b>	<b>200</b>
7.1 External Failure .....	200
7.2 Video Interference.....	200
7.3 Fan Malfunction.....	200
7.4 Power Supply Units Malfunction.....	200
7.5 Network Error.....	200
7.6 Failure at the Matrix.....	201
7.7 Blank Screen .....	201
<b>8. TECHNICAL SUPPORT.....</b>	<b>202</b>
8.1 Support Checklist.....	202
8.2 Shipping Checklist .....	202
<b>9. REGULATORY INFORMATION .....</b>	<b>203</b>
9.1 FCC Statement.....	203
9.2 CE Declaration of Conformity .....	203
9.3 Product Safety.....	203
9.4 WEEE .....	203
9.5 RoHS/RoHS2 .....	203
<b>10. GLOSSARY .....</b>	<b>204</b>
10.1 Video and KVM Technology Terms.....	204
10.2 Matrix-Specific Terms.....	205
<b>11. DISCLAIMER/TRADEMARKS .....</b>	<b>207</b>
11.1 Disclaimer.....	207
11.2 Trademarks Used in this Manual.....	207

# SAFETY INSTRUCTIONS

To ensure reliable and safe long-term operation of your Modular KVM Matrix Switch, note the following guidelines.

## INSTALLATION

- ♦ Only use the device according to this User Manual. Failure to follow these procedures could result in damage to the equipment or injury to the user or installer.
- ♦ Only use in dry, indoor environments.
- ♦ The Modular KVM Matrix Switch and the power supply units can get warm. Do not install components in an enclosed space without any airflow.
- ♦ Do not obscure ventilation holes.
- ♦ Only use power supplies originally supplied with the product or manufacturer-approved replacements. Do not use a power supply if it appears to be defective or has a damaged chassis.
- ♦ Connect all power supplies to grounded outlets. In each case, ensure that the ground connection is maintained from the outlet socket through to the power supply's AC power input.
- ♦ In case the device is equipped with one or more grounding screws, be sure to use these for normal operation to ensure the grounding of the chassis.
- ♦ Do not connect the link interface to any other equipment, particularly network or telecommunications equipment.
- ♦ Only connect devices to the serial interface that are protected against short circuit currents and incorrect voltages at the serial interface.
- ♦ To disconnect the Modular KVM Matrix Switch from the power supply, remove the power cord cables of all power supply units or switch supplies off.
- ♦ Take any required ESD precautions.
- ♦ To disconnect the device completely from the electric circuit, all power cables have to be removed.

## REPAIR

- ♦ Do not attempt to open or repair a power supply unit.
- ♦ Do not attempt to open or repair the Modular KVM Matrix Switch. There are no user serviceable parts inside.
- ♦ Contact Black Box Technical Support at 877-877-2269 or [info@blackbox.com](mailto:info@blackbox.com) if there is a fault.



# CHAPTER 1: SPECIFICATIONS

## 1.1 INTERFACES

### 1.1.1 DVI-D SINGLE-LINK

---

The video interface supports the DVI-D protocol. All signals that comply with DVI-D Single Link norm can be transmitted. This includes monitor resolutions such as 1920 x 1200 @ 60 Hz, Full HD (1080p) or 2K HD (up to 2048 x 1152). Data rate is limited to 165 MPixel/s.

### 1.1.2 USB-HID

---

Modular KVM Desktop Switch devices with USB-HID interface support a maximum of two devices with USB-HID protocol. Each USB-HID port provides a maximum current of 100 mA.

#### KEYBOARD

The Modular DKM Desktop Switch is compatible with most USB keyboards. Certain keyboards with additional functions may require custom firmware to operate. Keyboards with an integral USB Hub (e.g., Mac keyboards) are also supported.

#### MOUSE

The Modular DKM Desktop Switch is compatible with most 2-button, 3-button and scroll mice.

#### OTHER USB-HID DEVICES

The proprietary USB emulation also supports certain other USB-HID devices, such as specific touch screens, graphic tablets, barcode scanners or special keyboards. Support cannot be guaranteed, however, for every USB-HID device.

NOTE: Only two USB-HID devices are supported concurrently, such as keyboard and mouse or keyboard and touch screen. A hub is allowed, but it does not increase the number of HID devices allowed.

To support other USB "non-HID" devices, such as scanners, web cams or memory devices, choose our devices with transparent USB support.

### 1.1.3 RJ-45 (NETWORK)

---

The communication of the CATx devices requires a 1000BASE-T connection.

The cabling must comply with EIA/TIA-568-B (1000BASE-T) standards with RJ45 connectors at both ends. All four wire pairs are used in both directions. The cabling is suitable for a full duplex operation. For the cable connection to a source (computer, CPU), you must use a crossed network cable (cross cable).

### 1.1.4 RJ-45 (SERIAL)

---

Communication takes place with a transmission speed of 115.2 KBaud, regardless of the file format. The transmission takes place with eight data bits and a stop bit, but without a parity bit. Limited hardware handshake (DSR) is possible.

## CHAPTER 1: SPECIFICATIONS

### 1.1.5 RJ-45 (INTERCONNECT)

Communication between CATx devices requires a 1000BASE-T connection.

Connector wiring must comply with EIA/TIA-568-B (1000BASE-T), with RJ-45 connectors at both ends. All four cable wire pairs are used.

### 1.1.6 FIBER SFP TYPE LC (INTERCONNECT)

Communication of fiber devices is performed via Gigabit SFPs that are connected to suitable fibers fitted with LC type connectors (see Section 1.2.2).

The correct function of the device can only be guaranteed with SFPs provided by Black Box.

CAUTION: SFP modules can be damaged by electrostatic discharge (ESD). Consider ESD handling specifications.

### 1.1.7 SDI (INTERCONNECT)

Communication of the SDI devices requires a mini coax connection with mini BNC connectors or 3G SFPs with transmission speeds of 0.36 Gbit/s (SD-SDI, SMPTE 259M), 1.485 Gbit/s (HD-SDI, SMPTE 292M) and 2.97 Gbit/s (3G SDI).

## 1.2 INTERCONNECT CABLE

### 1.2.1 CATX

NOTE: A point-to-point connection is required. Operation with several patch fields is possible. Routing over an active network component, such as an Ethernet Hub, Router or Matrix, is not allowed.

- ♦ Avoid routing CATx cables along power cables.

CAUTION: To maintain regulatory EMC compliance, correctly installed shielded CATx cable must be used throughout the interconnection link.

CAUTION: To maintain regulatory EMC compliance, all CATx cables need to carry ferrites on both cable ends close to the device.

#### TYPE OF INTERCONNECT CABLE

The Modular KVM Matrix Switch requires interconnect cabling specified for Gigabit Ethernet (1000BASE-T). The use of solid-core (AWG24), shielded, CAT5e (or better) is recommended.

**TABLE 1-1. CATX INTERCONNECT CABLE TYPES**

CABLE TYPE	DESCRIPTION
CATx Solid-Core Cable AWG24	Cable S/UTP (CAT5e) cable according to EIA/TIA- 568-B. Four pairs of AWG24 wires. Connection according to EIA/TIA-568-B (1000BASE-T).
CATx Patch Cable AWG26/8	Cable S/UTP (CAT5e) cable according to EIA/TIA- 568-B. Four pairs of AWG26/8 wires. Connection according to EIA/TIA-568-B (1000BASE-T).

NOTE: The use of flexible cables (patch cables) type AWG26/8 is possible, but the maximum possible extension distance is halved.





# CHAPTER 1: SPECIFICATIONS

**TABLE 1-2. MAXIMUM ACCEPTABLE CATX CABLE LENGTHS**

CABLE TYPE	LENGTH
CATx Solid-Core Cable AWG24	400 ft. (140 m)
CATx Patch Cable AWG26/8	200 ft. (70 m)

## 1.2.2 FIBER

NOTE: A point-to-point connection is required. Operation with several patch fields is possible. Routing over an active network component, such as an Ethernet Hub, Router or Matrix, is not allowed.

**TABLE 1-3. FIBER INTERCONNECT CABLE TYPES**

CABLE TYPE	DESCRIPTION
Single-mode 9- $\mu$ m	<ul style="list-style-type: none"> <li>◆ Two fibers 9-<math>\mu</math>m</li> <li>◆ In-house patch cable</li> <li>◆ In-house breakout cable</li> <li>◆ In-house or outdoor breakout cable, resistant</li> <li>◆ Outdoor cable, with protection against rodents</li> </ul>
Multimode 50- $\mu$ m	<ul style="list-style-type: none"> <li>◆ Two fibers 50-<math>\mu</math>m</li> <li>◆ In-house patch cable</li> <li>◆ In-house or outdoor breakout cable, resistant</li> </ul>
Multimode 62.5- $\mu$ m	<ul style="list-style-type: none"> <li>◆ Two fibers 62.5-<math>\mu</math>m</li> <li>◆ In-house breakout cable</li> <li>◆ Outdoor cable, with protection against rodents</li> </ul>

NOTE: Only use single-mode connection cables for fiber connections that are based on 3G SFPs.

**TABLE 1-4. MAXIMUM ACCEPTABLE FIBER CABLE LENGTHS**

CABLE TYPE	1.25 GBPS	3.125 GBPS
Single-mode 9- $\mu$ m	32,800 ft. (10,000 m)	16,400 ft. (5000 m)
Multimode 50- $\mu$ m (OM3)	3280 ft. (1000 m)	1640 ft. (500 m)
Multimode 50- $\mu$ m	1300 ft. (400 m)	650 ft. (200 m)
Multimode 62.5- $\mu$ m	650 ft. (200 m)	325 ft. (100 m)

NOTE: If you use single-mode SFPs with multimode fibers, you normally can increase the maximum acceptable length.

**TABLE 1-5. TYPE OF CONNECTOR**

CONNECTOR	LC CONNECTOR
-----------	--------------

## CHAPTER 1: SPECIFICATIONS

### 1.2.3 COAXIAL

NOTE: A point-to-point connection is required.

**TABLE 1-6. INTERCONNECT COAXIAL CABLE TYPES**

CABLE TYPE	DESCRIPTION
Mlni coaxial cable AWG 18	RG 6, 75 ohms impedance

**TABLE 1-7. MAXIMUM COAXIAL CABLE LENGTH**

BANDWIDTH	MAXIMUM ACCEPTABLE CABLE LENGTH
0.270 Gbit/s	1312 ft. (400 m)
1.485 Gbit/s	459 ft. (140 m)
2.970 Gbit/s	394 ft. (120 m)

 
**TABLE 1-8. TYPE OF CONNECTOR**

CONNECTOR	MINI BNC CONNECTOR

## 1.3 CONNECTOR PINOUTS

 
### 1.3.1 CPU BOARD

**TABLE 1-9. DVI-D SINGLE LINK CONNECTOR PINOUT**

 
PICTURE	PIN	SIGNAL	PIN	SIGNAL	PIN	SIGNAL
	1	T.M.D.S. data 2-	9	T.M.D.S. data 1-	17	T.M.D.S. data 0-
	2	T.M.D.S. data 2+	10	T.M.D.S. data 1+	18	T.M.D.S. data 0+
	3	T.M.D.S. data 2 GND	11	T.M.D.S. data 1 GND	19	T.M.D.S. data 0 GND
	4	not connected	12	not connected	20	not connected
	5	not connected	13	not connected	21	not connected
	6	DDC input (SCL)	14	+5 VDC high impedance	22	T.M.D.S. clock GND
	7	DDC output (SCL)	15	GND	23	T.M.D.S. clock +
	8	Internal use	16	Hot Plug recognition	24	T.M.D.S. clock -
	C1	Internal use			C3	Internal use
	C2	not connected	C5	GND	C4	Internal use

# CHAPTER 1: SPECIFICATIONS

 
**TABLE 1-10. USB TYPE A CONNECTOR PINOUT**

PICTURE	PIN	SIGNAL	COLOR
	1	VCC (+5 VDC)	Red
	2	Data -	White
	3	Data +	Green
	4	GND	Black

**TABLE 1-11. DB9 SERIAL RS-232, DTE CONNECTOR PINOUT**

 
PICTURE	PIN	SIGNAL	PIN	SIGNAL
	1	not connected	6	DSR
	2	RxD	7	RTS
	3	TxD	8	CTS
	4	DTR	9	not connected
	5	GND	—	—

**TABLE 1-12. RJ-45 CONNECTOR PINOUT**

PICTURE	PIN	SIGNAL	PIN	SIGNAL
	1	D1+	6	not connected
	2	D1-	7	D2-
	3	D2+	8	not connected
	4	not connected	9	not connected

## 1.3.2 I/O PORT CATX

 
**TABLE 1-13. RJ-45**

PICTURE	PIN	SIGNAL	PIN	SIGNAL
	1	D1+	5	D3-
	2	D1-	6	D2-
	3	D2+	7	D4+
	4	D3+	8	D4-

# CHAPTER 1: SPECIFICATIONS

 
## 1.3.3 I/O PORT SFP

**TABLE 1-14. FIBER SFP TYPE LC**

PICTURE	DIODE	SIGNAL
	1	Data OUT
	2	Data IN-

## 1.3.4 I/O PORT SDI

**TABLE 1-15. MINI BNC (SDI)**

PICTURE	PIN	SIGNAL
	1	Data IN
	2	GND

## 1.4 POWER SUPPLY

**TABLE 1-16. MAXIMUM CURRENT/VOLTAGE**

PRODUCT CODE	MAX. CURRENT/VOLTAGE
ACX576-R2, ACX576S-R2	20 A, 100-240 VAC, 50/60 Hz
ACX288-R2	12 A, 100-240 VAC, 50/60 Hz
ACX160-R2	9 A, 100-240 VAC, 50/60 Hz
ACX080-R2, ACX048-R2	5 A, 100-240 Vac, 50/60 Hz

## CHAPTER 2: OVERVIEW

**TABLE 1-17. POWER REQUIREMENT**

PRODUCT CODE	MAX. CURRENT/VOLTAGE
ACX576-R2, ACX576S-R2	450 W max.without I/O boards
ACX288-R2	202 W max.without I/O boards
ACX160-R2	188 W max.without I/O boards
ACX080-R2	99 W max.without I/O boards
ACX048-R2	94 W max.without I/O boards
I/O board	13 W max

### 1.5 ENVIRONMENTAL CONDITIONS

**TABLE 1-18. TEMPERATURE AND HUMIDITY**

SPECIFICATION	VALUE
Operating Temperature	41 to 113°F (5 to 45°C)
Storage Temperature	-13 to 140°F (-25 to 60°C)
Relative Humidity	Max. 80% non-condensing

**TABLE 1-19. NOISE EMISSION**

SPECIFICATION	VALUE
Sound Pressure Level (SPL)	ACX576-R2, ACX576S-R2: max. 65 dBA per fan; ACX288-R2: max. 65 dBA per fan; ACX160-R2: max. 65 dBA per fan; ACX080-R2: max. 46 dBA per fan; ACX048-R2: max. 58 dBA per fan

**TABLE 1-20. HEAT DISSIPATION**

SPECIFICATION	VALUE
Thermal Output	Corresponds to power consumption in Watts (W)

# CHAPTER 1: SPECIFICATIONS

## 1.6 DIMENSIONS

TABLE 1-21. DIMENSIONS

PRODUCT CODE	SPECIFICATION	DIMENSION
ACX576-R2	Matrix	43.75"H x 17.7"W x 17.1"D (110.8 x 45 x 43.5 cm)
	Shipping Box	49"H x 25.6"W x 26.8"D (124.5 x 65.1 x 68.1 cm)
ACX576S-R2	Matrix	43.75"H x 17.7"W x 17.1"D (110.8 x 45 x 43.5 cm)
	Shipping Box	49"H x 25.6"W x 26.8"D (124.5 x 65.1 x 68.1 cm)
ACX288-R2	Matrix	12"H x 19"W x 22.8"D (33 x 48.3 x 57.8 cm)
	Shipping Box	29.9"H x 25.6"W x 26.8"D (76 x 65 x 68 cm)
ACX160-R2	Matrix	12"H x 19"W x 15.8"D (33 x 48.3 x 40 cm)
	Shipping Box	21.3"H x 25.6"W x 26.8"D (54 x 65 x 68 cm)
ACX080-R2	Matrix	9.1"H x 19"W x 7"D (23 x 48.3 x 17.8 cm)
	Shipping Box	14.2"H x 25.2"W x 22.4"D (36 x 64 x 57 cm)
ACX048-R2	Matrix	9.1"H x 19"W x 5.3"D (23 x 48.3 x 13.3 cm)
	Shipping Box	12.4"H x 25.2"W x 22.4"D (31.6 x 64 x 57 cm)

## 1.7 SHIPPING WEIGHT

TABLE 1-22. SHIPPING WEIGHT

PRODUCT CODE	SPECIFICATION	WEIGHT
ACX576-R2, ACX576S-R2	Matrix	170 lb. (77.3 kg) fully equipped
	Shipping Box	190.6 lb. (86.6 kg)
ACX288-R2	Matrix	76.2 lb. (34.6 kg), fully equipped
	Shipping Box	90.6 lb. (41.1 kg)
ACX160-R2	Matrix	60.0 lb. (26.3 kg), fully equipped
	Shipping Box	69.9 lb. (31.7 kg)
ACX080-R2	Matrix	24.5 lb. (11.1 kg), fully equipped
	Shipping Box	34.4 lb. (15.6 kg)
ACX048-R2	Matrix	19.6 lb. (8.9 kg), fully equipped
	Shipping Box	26.7 lb. (12.1 kg)

## 1.8 MTBF

The following table contains the mean time between failure (MTBF) in power-on hours (POH). The estimate is based on the FIT rates of the parts included. FIT rates are based on normalized environmental conditions of T = 140° F (60° C) and activation energy (Ea) of 0.7 eV. Calculations are based on 90% confidence limit.

We estimate that inside the housing, temperature will be 59° F (15° C) higher than the ambient temperature. Therefore, the MTBF calculation refers to an ambient temperature of 113° F (45° C). The humidity is limited to 60%.

# CHAPTER 1: SPECIFICATIONS

**TABLE 1-23. MEAN TIME BETWEEN  
FAILURE (MTBF) IN POWER-ON HOURS  
(POH)**

PRODUCT CODE	POH
ACX576-R2	200,000
ACX576S-R2	200,000
ACX288-R2	260,000
ACX160-R2	310,000
ACX080-R2	320,000
ACX048-R2	350,000
CPU board	480,000
I/O board SFP	500,000
I/O board CATx	410,000
ACX288-R2/ACX160-R2 PSU	200,000
ACX080-R2, ACX048-R2 PSU	130,000

## CHAPTER 2: OVERVIEW

### 2.1 APPLICATION

The Modular KVM Matrix Switch is used to establish connections from consoles (monitor, keyboard, mouse and other peripheral devices) to various sources (computer, CPU).

In its maximum configuration, up to 576 independent ports can be defined and switched either as a console or a CPU. The Modular KVM Matrix Switch is designed to operate with extenders that are able to transmit video, KVM and USB 2.0 signals. But it can also be used as a video matrix.





The connection between the matrix and the peripheral devices, such as KVM extenders or video sources, can be made by CATx, fiber, or coaxial cables.

The matrix serves as a repeater and can be run at a maximum distance of 6.2 miles (10 km) from the consoles and 6.2 miles (10 km) from the sources.

### 2.2 ACCESS OPTIONS

The following options are available to configure and operate the Modular KVM Matrix Switch.

**TABLE 2-1. SWITCH ACCESS OPTIONS**

ACCESS OPTION	SYMBOL
OSD	
Java Tool	
Serial Interface	
ControlBridge	



## CHAPTER 2: OVERVIEW

### 2.3 SYSTEM OVERVIEW

A Modular KVM Matrix Switch system consists of a Modular KVM Matrix Switch and, for KVM applications, one or more CPU Units / CON Units. The Modular KVM Matrix Switch is connected to the CPU Units / CON Units by interconnect cables or directly to the video devices where used as a video matrix.

CPU Units are connected directly to the sources (computer, CPU) by the provided cables.

Monitor(s), keyboard and mouse are connected to the CON Units.

Communication between the Modular KVM Matrix Switch and the CPU Units / CON Units occurs over the respective interconnect cables.

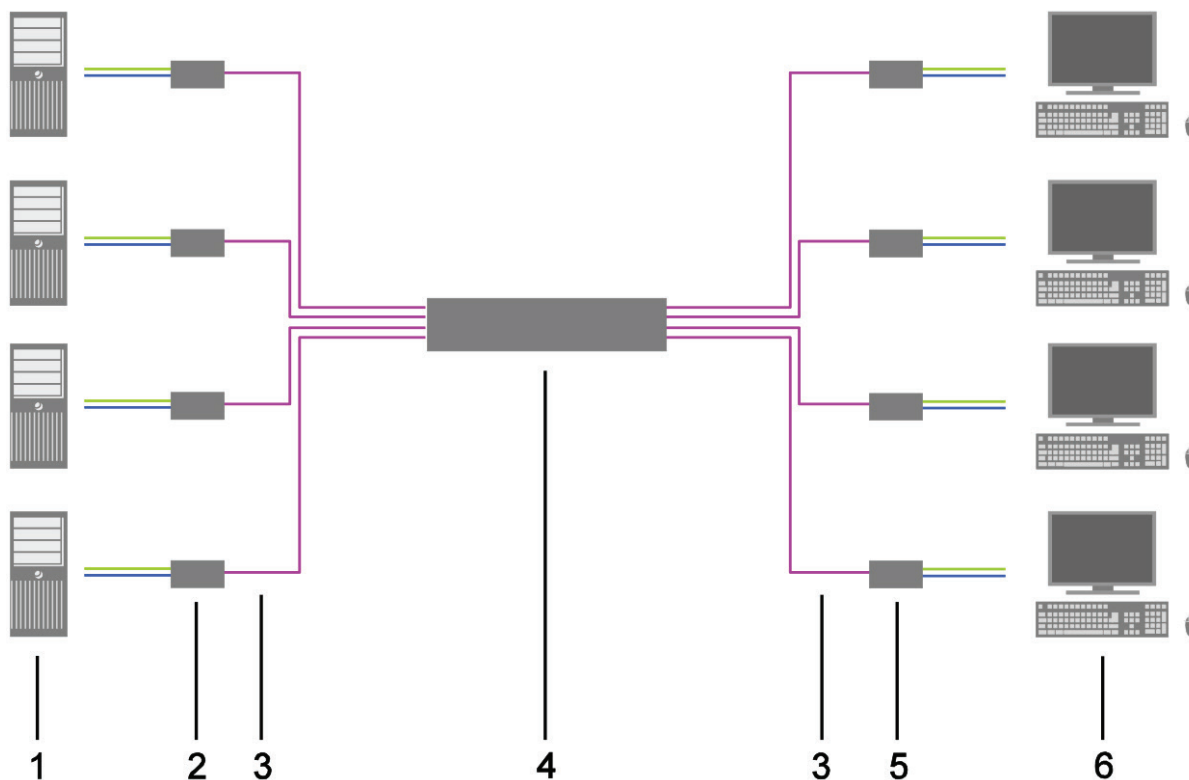


FIGURE 2-1. SYSTEM OVERVIEW

TABLE 2-2. SYSTEM OVERVIEW DIAGRAM COMPONENTS

NUMBER IN FIGURE 2-1	COMPONENT
1	Source (computer, CPU)
2	CPU units
3	Interconnect cable
4	Modular KVM Matrix Switch
5	CON units
6	Console (monitor, keyboard, mouse)

NOTE: See Section 3.3 for installation examples.

## CHAPTER 2: OVERVIEW

### 2.4 PRODUCT RANGE

**TABLE 2-3. PRODUCT RANGE**

PART NUMBER	DESCRIPTION
ACX576-R2, ACX576S-R2	Modular KVM Matrix Switch with 576 ports, unpopulated
ACX288-R2	Modular KVM Matrix Switch with 288 ports, unpopulated
ACX160-R2	Modular KVM Matrix Switch with 160 ports, unpopulated
ACX080-R2	Modular KVM Matrix Switch with 80 ports, unpopulated
ACX048-R2	Modular KVM Matrix Switch with 48 ports, unpopulated

### 2.5 OPTIONS

**TABLE 2-4. OPTIONS**

PART NUMBER	DESCRIPTION
ACXIO8-G2-C	CATx I/O board
ACXIO8-G2-SM	Fiber I/O board, single-mode
ACXIO8-HS	Fiber I/O board, single-mode, 3.125 Gbit/s
ACXIO8-6G	UNI I/O board for USB 3.0 and SDI
ACXIO8-GRID	Used with any modular DKM to create a cascade between multiple switches, has (2) LC interconnects
ACXIO8-SFP	This is a blank I/O card that can have copper or fiber installed
ACX288-CTL	CPU board
*ACX288-ADCTL	DKM FX Controller Card Enhanced Edition
ACXSFPHS	Single-mode GBIC, LC duplex, bidirectional, for use with Modular KVM Matrix Switch (3.125 Gbit/s)
ACX288-FAN	ACX288-R2/ACX160-R2 fan tray (spare part)
ACX080-FAN	ACX080-R2 fan tray (spare part)
ACX048-FAN	ACX048-R2 fan tray (spare part)
ACX288-PS	ACX288-R2/ACX160-R2 plug-in power supply unit (spare part or redundancy)
ACX080-PS	ACX080-R2 plug-in power supply unit (spare part or redundancy)
ACX288-FIL	ACX288-R2, ACX160-R2 filter pads as consumable supply
ACX080-FIL	ACX080-R2 filter pads as consumable supply
ACX048-FIL	ACX048-R2 filter pads as consumable supply

\*The DKM FX Controller Card Enhanced Edition offers a dual TCP/IP interface (redundant) for monitoring, updates and external control. It has an HDMI connector for local configuration and monitoring console, two USB connectors for local keyboard and mouse access, and an RS-232 interface for connecting media controllers.



## CHAPTER 2: OVERVIEW

### 2.6 DEVICE VIEWS

The following views of the Modular KVM Matrix Switch illustrate the various available chassis types.

#### 2.6.1 576-PORT CHASSIS (ACX576-R2, ACX576S-R2)

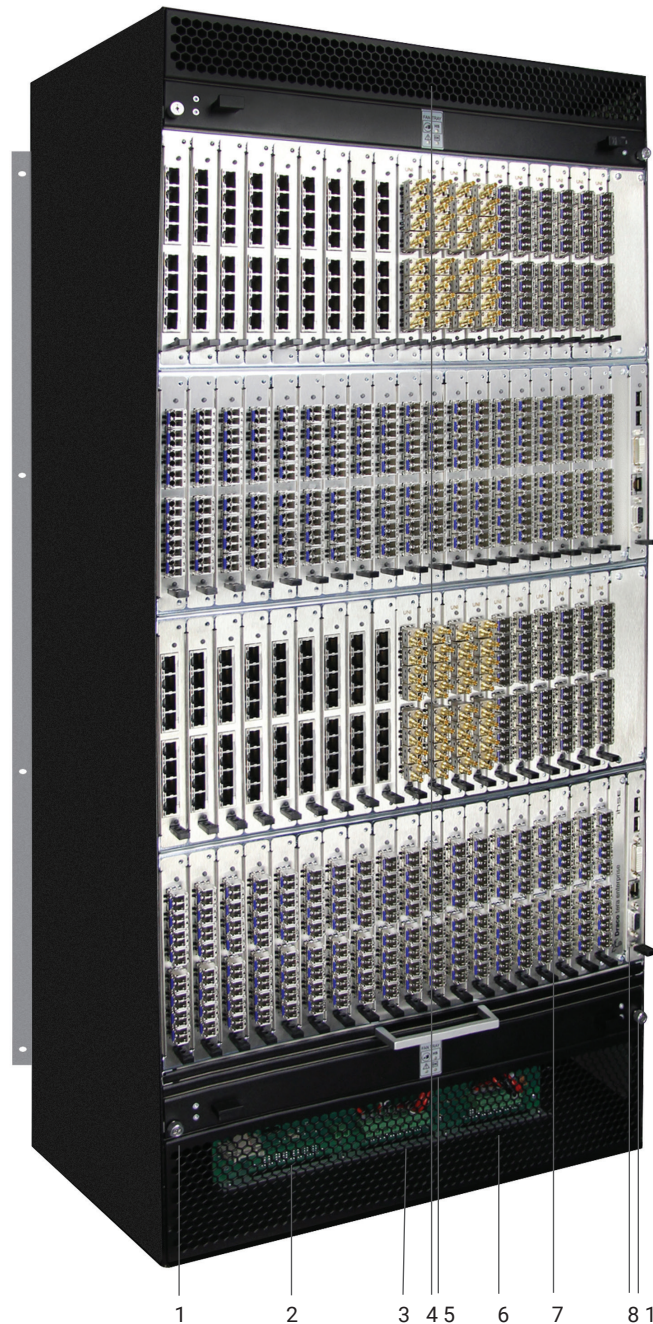


FIGURE 2-2. 576-PORT CHASSIS, FRONT VIEW

## CHAPTER 2: OVERVIEW

TABLE 2-5. 576-PORT CHASSIS FRONT VIEW COMPONENTS

NUMBER IN FIGURE 2-2	COMPONENT
1	Grounding
2	Slot for power supply unit 1
3	Slot for power supply unit 2
4	Slot for fan tray 1
5	Slot for fan tray 2
6	Slot for power supply unit 3
7	Slot for I/O boards
8	Slot for CPU board



## 2.6.2 288-PORT CHASSIS (ACX288-R2)

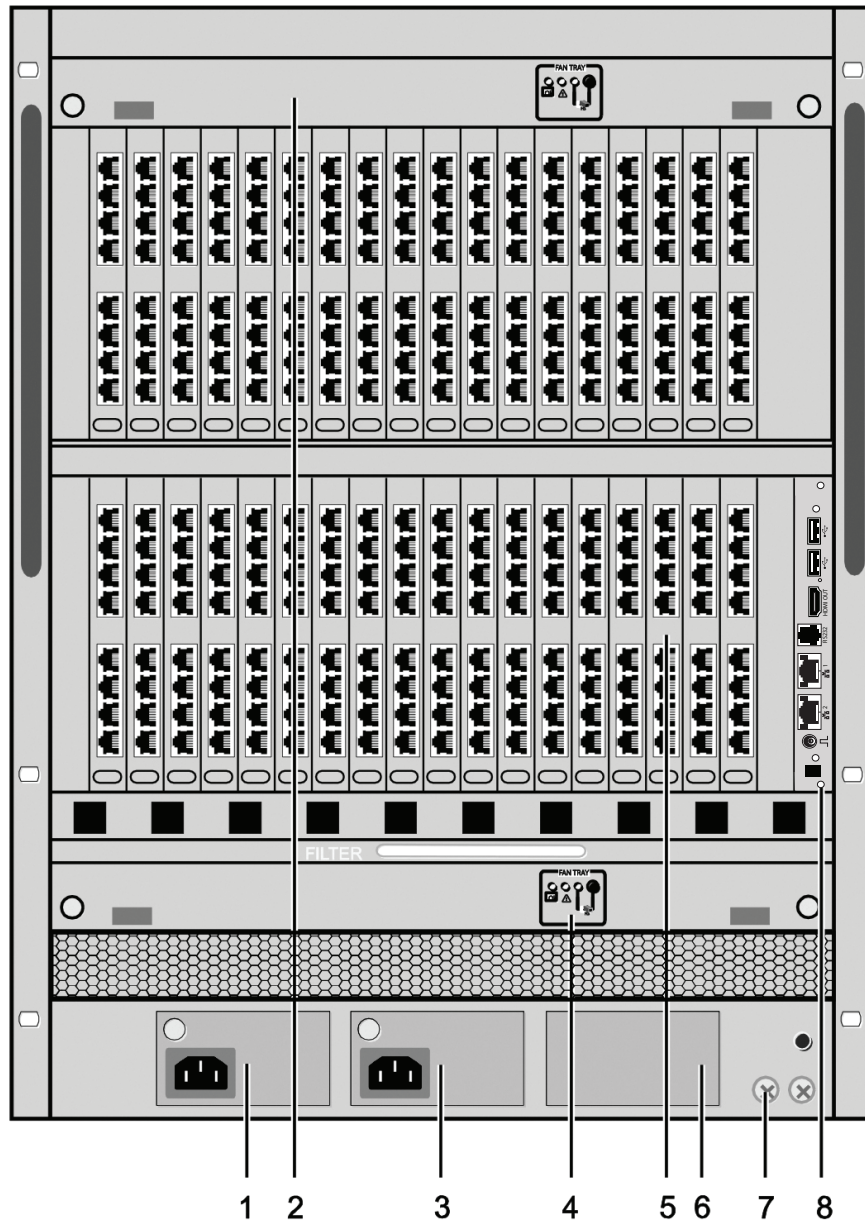


FIGURE 2-3. 288-PORT CHASSIS, FRONT VIEW

## CHAPTER 2: OVERVIEW

TABLE 2-6. 288-PORT CHASSIS FRONT VIEW COMPONENTS

NUMBER IN FIGURE 2-3	COMPONENT
1	Slot for power supply unit 1
2	Slot for fan tray 1
3	Slot for power supply unit 2
4	Slot for fan tray 2
5	Slot for I/O boards #1–36
6	Slot for power supply unit 3
7	Grounding
8	Slot for CPU board



## 2.6.3 160-PORT CHASSIS (ACX160-R2)

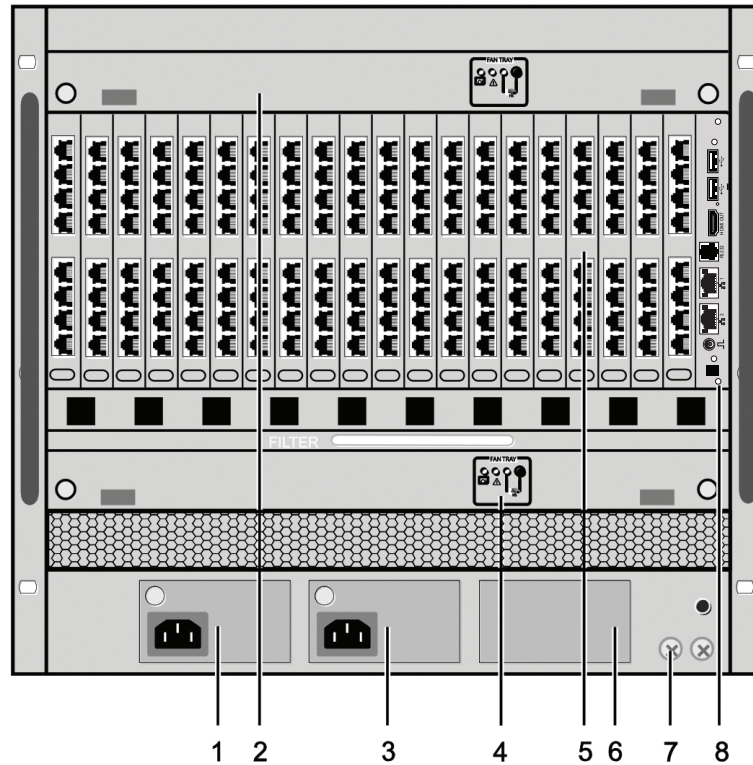


FIGURE 2-4. 160-PORT CHASSIS, FRONT VIEW

TABLE 2-7. 160-PORT CHASSIS FRONT VIEW COMPONENTS

NUMBER IN FIGURE 2-4	COMPONENT
1	Slot for power supply unit 1
2	Slot for fan tray 1
3	Slot for power supply unit 2
4	Slot for fan tray 2
5	Slot for I/O boards #1–20
6	Slot for power supply unit 3
7	Grounding
8	Slot for CPU board

## CHAPTER 2: OVERVIEW

### 2.6.4 80-PORT CHASSIS (ACX080-R2)

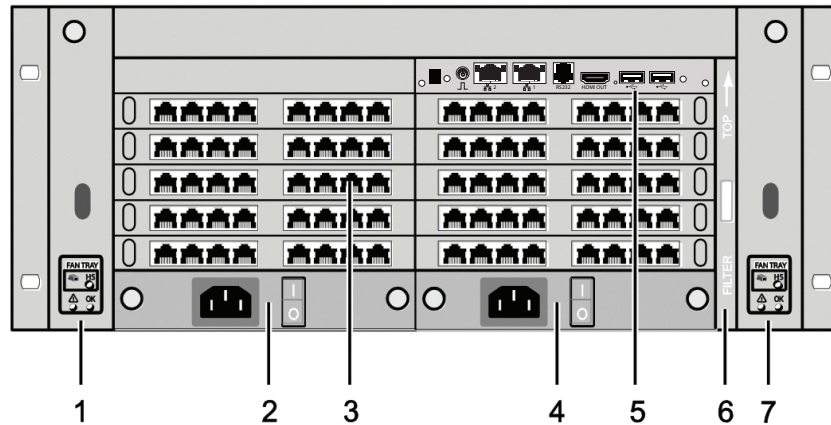


FIGURE 2-5. 80-PORT CHASSIS, FRONT VIEW

TABLE 2-8. 80-PORT CHASSIS FRONT VIEW COMPONENTS

NUMBER IN FIGURE 2-5	COMPONENT
1	Slot for fan tray 1
2	Slot for power supply unit 1
3	Slot for I/O boards #1-10
4	Slot for power supply unit 2
5	Slot for CPU board
6	Slot for air filter
7	Slot for fan tray 2



## 2.6.5 48-PORT CHASSIS (ACX048-R2)

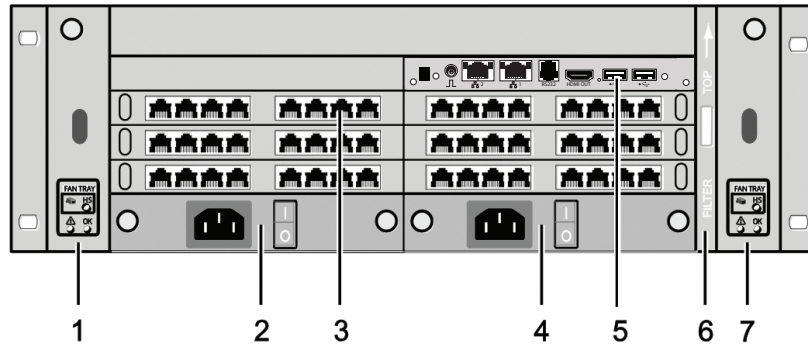


FIGURE 2-6. 48-PORT CHASSIS, FRONT VIEW

TABLE 2-9. 48-PORT CHASSIS FRONT VIEW COMPONENTS

NUMBER IN FIGURE 2-6	COMPONENT
1	Slot for fan tray 1
2	Slot for power supply unit 1
3	Slot for I/O boards #1-6
4	Slot for power supply unit 2
5	Slot for CPU board
6	Slot for air filter
7	Slot for fan tray 2

## CHAPTER 2: OVERVIEW

### 2.7 DIAGNOSTICS AND STATUS

#### 2.7.1 STATUS LEDS

Modular KVM Matrix Switch components are fitted with the following LEDs for overall status indication.

##### CPU BOARD (ACX288-R2-CTL)

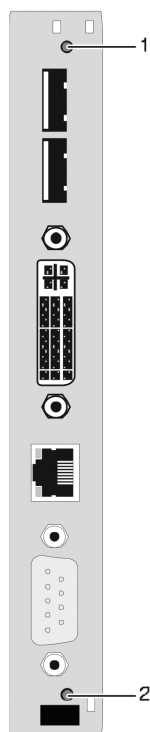


FIGURE 2-7. STATUS LEDS ON CPU BOARD (ACX288-R2-CTL)

TABLE 2-10. CPU STATUS LEDS FUNCTIONS

NUMBER IN FIGURE 2-7	LED	STATUS	DESCRIPTION
1	Status LED 1	White	CPU board is in registration process
		Blue flashing	Registration of the matrix has started
		Red flashing	Registration in progress
		Green flashing	Operating condition
		Green	CPU board de-registered
2	Status LED 2	White	CPU board is in registration process
		Red flashing	Registration of the matrix has started
		OFF	Operating condition

NOTE: Due to variations in type, "white" might also appear as light purple or light blue.

## DKM FX CONTROLLER CARD ENHANCED EDITION (ACX288-R2-ADCTL)

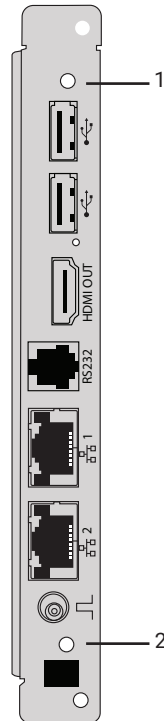


FIGURE 2-8. STATUS LEDS ON CPU BOARD (ACX288-R2-ADCTL)

TABLE 2-11. CPU STATUS LEDS FUNCTIONS

NUMBER IN FIGURE 2-8	LED	STATUS	DESCRIPTION
1	Status LED 1	White	CPU board is in registration process
		Blue flashing	Registration of the matrix has started
		Red flashing	Registration in progress
		Green flashing	Operating condition
		Green	CPU board de-registered
2	Status LED 2	White	CPU board is in registration process
		Red flashing	Registration of the matrix has started
		OFF	Operating condition

NOTE: Due to variations in type, "white" might also appear as light purple or light blue.

# CHAPTER 2: OVERVIEW

## I/O BOARD

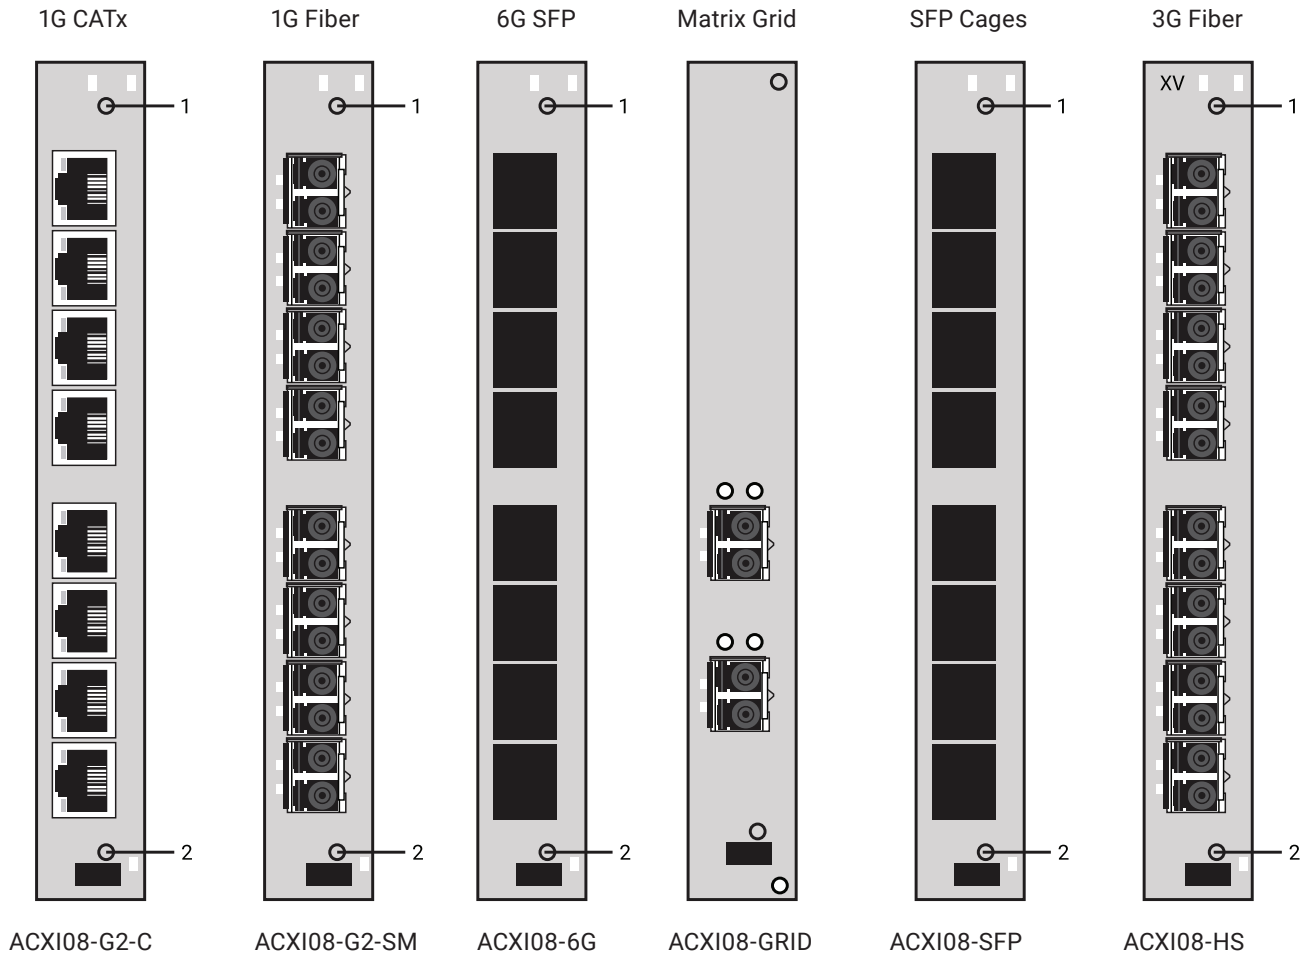


FIGURE 2-9. STATUS LEDS ON I/O BOARDS

TABLE 2-12. STATUS LEDS ON THE I/O BOARDS

NUMBER IN FIGURE 2-9	LED	STATUS	DESCRIPTION
1	Status 1	Light Blue	I/O board boot process
		Red flashing	I/O board registration process
		Red/Yellow flashing	I/O board in service mode or firmware conflict with CPU board
		Green flashing	Operating condition. I/O board registered at the matrix
		Green	I/O board de-registered (locking pin pulled out)
2	Status 2	White	I/O board boot process
		Blue	I/O board registration process
		Blue flashing	Operating condition. Communication active with CPU board active
		Red flashing	I/O board de-registered (locking pin pulled out)

## PORTS I/O BOARD

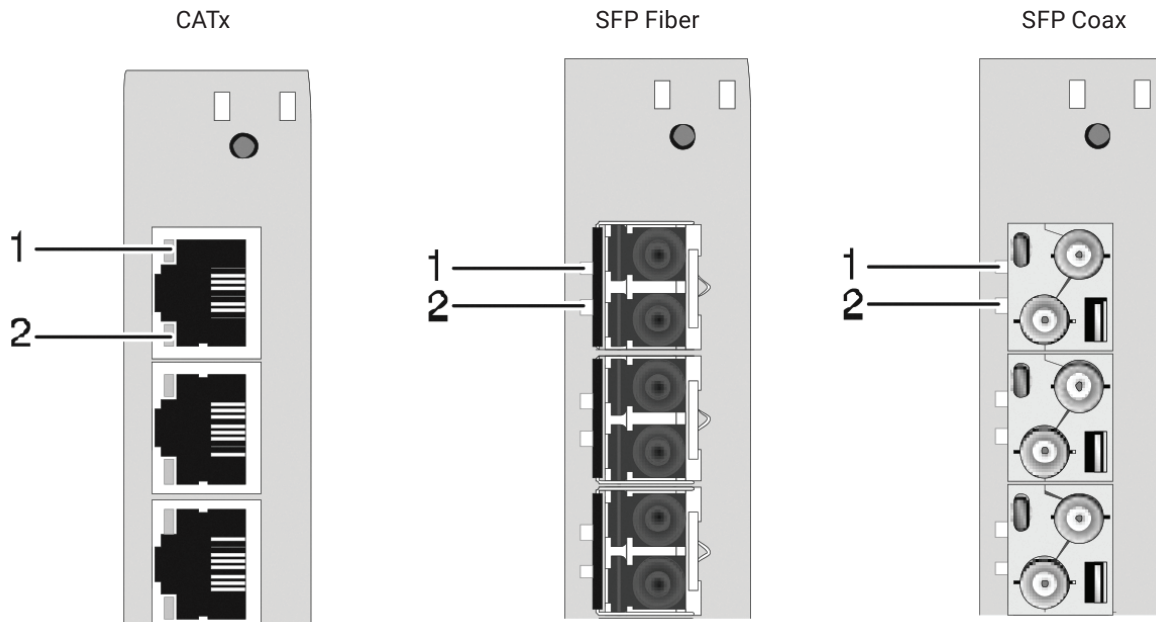


FIGURE 2-10. STATUS LEDS ON THE PORTS OF THE I/O BOARDS

TABLE 2-13. STATUS LEDS ON THE PORTS OF THE I/O BOARDS

NUMBER IN FIGURE 2-10	LED	STATUS	DESCRIPTION
1	Link Status (orange)	Off	Port not activated
		Flashing	Port activated, no connection via interconnect cable
2	Link Status (green)	Off	Port not activated
		Flashing	Port activated, no connection via interconnect cable
		On	Connection via interconnect cable OK, data traffic active

## CHAPTER 2: OVERVIEW

### FAN TRAY

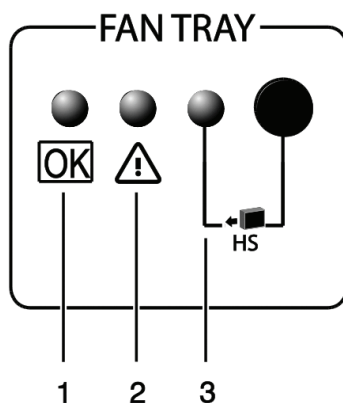


FIGURE 2-11. STATUS LEDS ON THE PORTS OF THE I/O BOARDS

TABLE 2-14. FAN TRAY LEDS

NUMBER IN FIGURE 2-11	COMPONENT
1	Status LED 1
2	Status LED 2
3	Hot Swap LED

TABLE 2-15. STATUS LEDS ON THE FAN TRAYS

NUMBER IN FIGURE 2-11	LED	STATUS	DESCRIPTION
1	Status 1 (green)	On	Operating condition
		Off	Operating condition
2	Status 2 (red)	On	Error indication
		Off	Operating condition
3	Hot Swap (blue)	Off	Hot Swap option deactivated
		On	Hot Swap option activated

### POWER SUPPLY UNIT FOR ACX288-R2 AND ACX160-R2

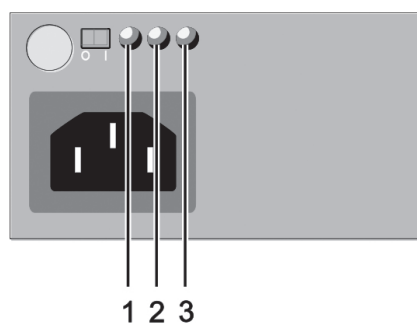


FIGURE 2-12. STATUS LEDS ON THE POWER SUPPLY UNIT

**TABLE 2-16. STATUS LEDS ON THE ACX288-R2/ACX160-R2 POWER SUPPLY UNIT**

NUMBER IN FIGURE 2-12	LED	STATUS	DESCRIPTION
1	AC Input OK (green)	ON	Operating condition
2	DC Output OK (green)	OFF	Operating condition
3	O/T (yellow)	OFF	Normal temperature
		ON	High temperature

## POWER SUPPLY UNIT FOR ACX080-R2 AND ACX048-R2



**FIGURE 2-13. STATUS LED ON THE POWER SUPPLY UNIT**

**TABLE 2-17. STATUS LEDS ON THE ACX080-R2/ACX048-R2 POWER SUPPLY UNIT**

NUMBER IN FIGURE 2-13	LED	STATUS	DESCRIPTION
1	DC Input OK (green)	ON	Operating condition
		OFF	No power supply
	DC Input (red)	ON	Power supply unit not active. Matrix is powered by second power supply.
		OFF	Operating condition

# CHAPTER 2: OVERVIEW

## 2.7.2 PORT STATUS

The connections and the switching status between the various consoles and CPUs are shown in this menu.

You have the following option to access the menu:



### JAVA TOOL

The current port configuration of the Modular KVM Matrix Switch is illustrated in this menu.

Select Status > Matrix View in the task area when connected to the matrix.

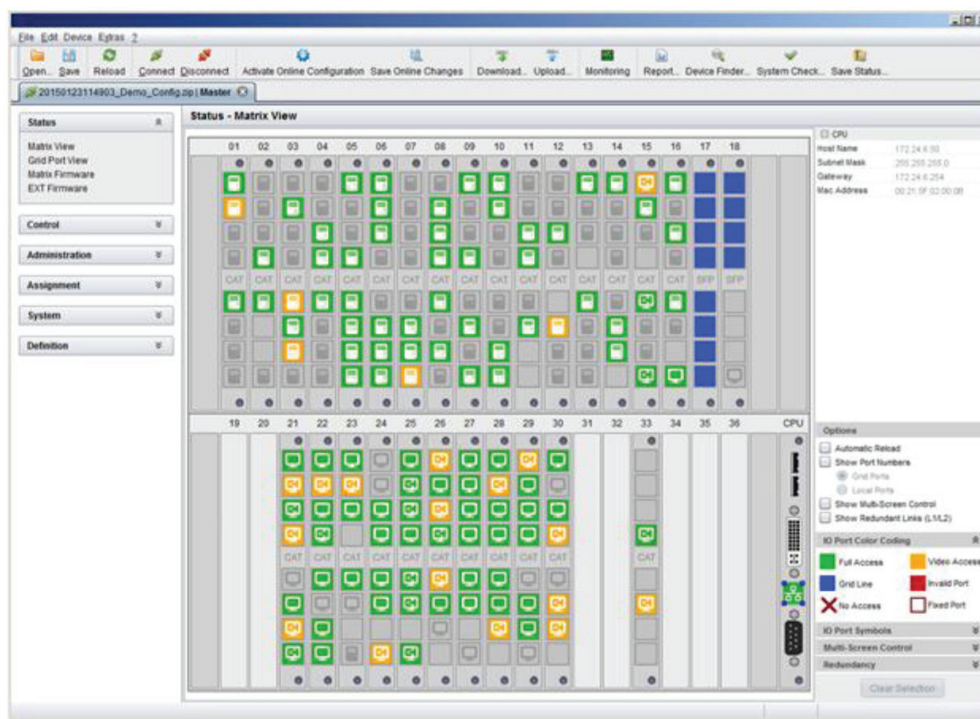


FIGURE 2-14. STATUS—MATRIX VIEW (EXAMPLE #1)





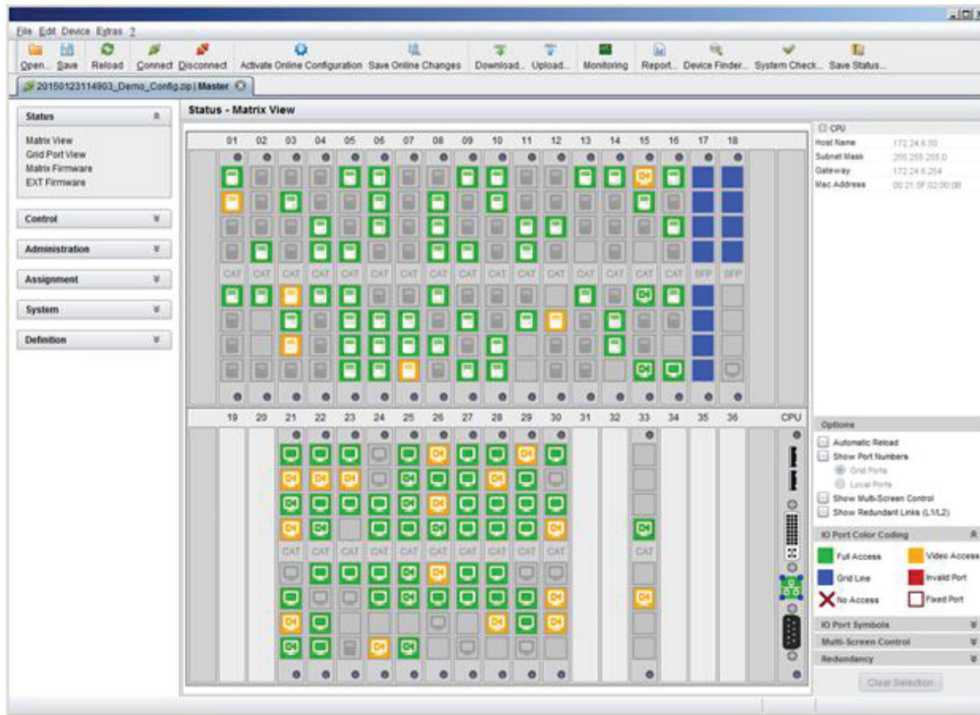


FIGURE 2-15. STATUS–MATRIX VIEW (EXAMPLE #2)

The colors indicate the connection status.











TABLE 2-18. STATUS LEDS

COLOR IN FIGURES 2-14 AND 2-15	DESCRIPTION
Gray	Port not connected
Yellow	Video connection
Green	KVM connection
Red	Faulty port
Blue	Port connected to another matrix via grid line



**CHAPTER 2: OVERVIEW**

The symbol indicates the extender that is recognized and defined at a certain port.

**TABLE 2-19. SYMBOLS**

SYMBOL	DESCRIPTION
	Port connected to a CPU Unit
	Port is connected to a CPU Unit that is switched to a CON Unit in Private Mode
	Port connected to a CON Unit
	Port connected to a CON Unit with Shared Access to a CPU
	Port is connected to a CON Unit that is connected to a CPU Unit in Private Mode
	Port connected to a USB 2.0 CPU Unit
	Port connected to a USB 2.0 CON Unit
	Port is configured as Cascade-CON port for cascading of matrices
	Port is configured as Cascade-CPU port for cascading of matrices
	Port is a UNI port of an I/O board that can be used for USB 3.0 or SDI switching

**TABLE 2-19 (CONTINUED). SYMBOLS**

SYMBOL	DESCRIPTION
	UNI port is configured as CON port to connect USB 3.0 CON extenders, for example
	UNI port is configured as CPU port to connect USB 3.0 CPU extenders, for example

**NOTES:**

- ♦ Red framed ports are defined as "fixed" (e. g. for USB 2.0 connections).
- ♦ The port with four static blue squares is currently selected.
- ♦ If a port is selected, all other ports are transparent, except those connected to the currently selected port. To clear a selection, press the Clear Selection button.
- ♦ In Matrix View, a red cross on a port indicates that the console to be connected does not have access rights to the respective CPU at this port.

Press the left mouse button to show the extender information of the currently selected port on the right hand side of the working area.

The following information is available:

**TABLE 2-20. EXTENDER INFORMATION OF THE CURRENTLY SELECTED PORT**

FIELD	DESCRIPTION
Extender Name	Name of selected extender
Extender Type	Type of selected extender
Port ID	Number of selected port
Device Name	Name of connected console or CPU
Connections	Listing of assigned connections to marked port (Full Access or Video Access)

Press the right mouse button to open the context menu with additional functions for the currently selected port.

The following functions are available:

**TABLE 2-21. CONTEXT FUNCTIONS**

FUNCTION	DESCRIPTION
Open Extender	The menu for definition of the currently selected extender will be opened
Open Device	The menu for definition of the currently selected console or CPU will be opened
Switch	The menu for execution of switching operations will be opened

## CHAPTER 2: OVERVIEW

To reload the Matrix View, you have the following options:

- ◆ Press <F5> on a connected keyboard
- ◆ Execute Edit > Reload in the menu bar
- ◆ Press the Reload button in the tool bar

### 2.7.3 PORT STATUS MATRIX GRID

In this menu, the connections and the switching status between the various CON and CPU Devices are shown within the Matrix Grid. The port view is divided into the different Grid matrices. As a result, each matrix is displayed in an optimized view of 24 ports per line to be able to show also a larger number of ports.

You have the following option to access the menu:



### JAVA TOOL

The current port configuration of the Matrix Grid is illustrated in this menu.

Select Status > Grid Port View in the task area when connected to the matrix.

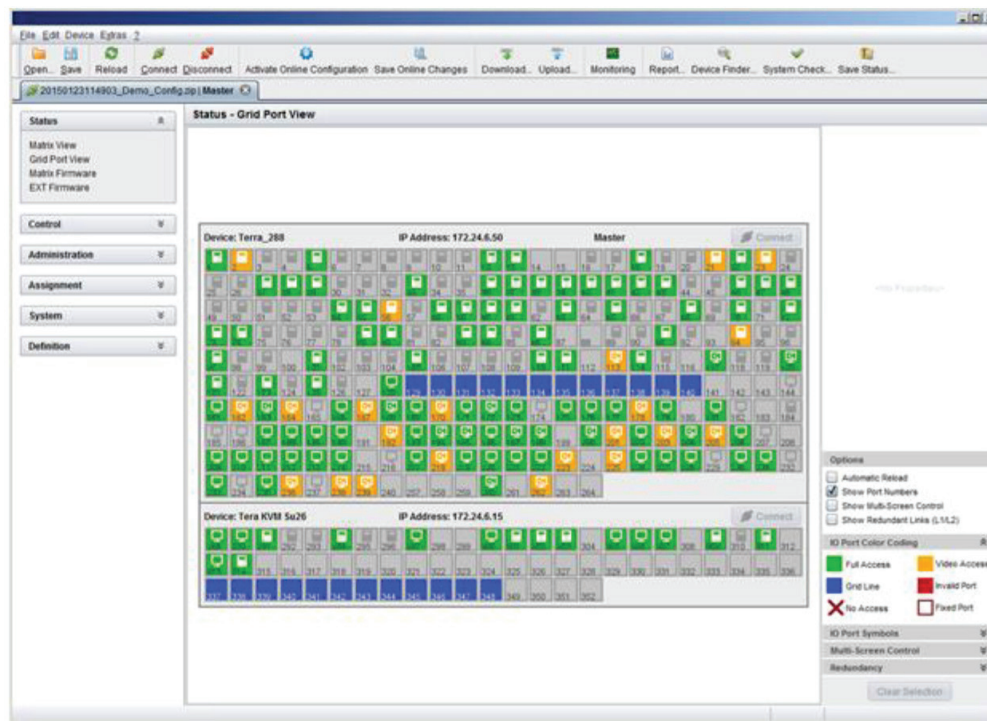


FIGURE 2-16. STATUS—GRID PORT VIEW

NOTE: Functions, colors and symbols used in the Grid Port View are identical to those in the port status of the Matrix View.

## 2.7.4 EXTENDER OSD

All extenders used with the Modular KVM Matrix Switch are provided with their own OSD to display the connection status of the console.

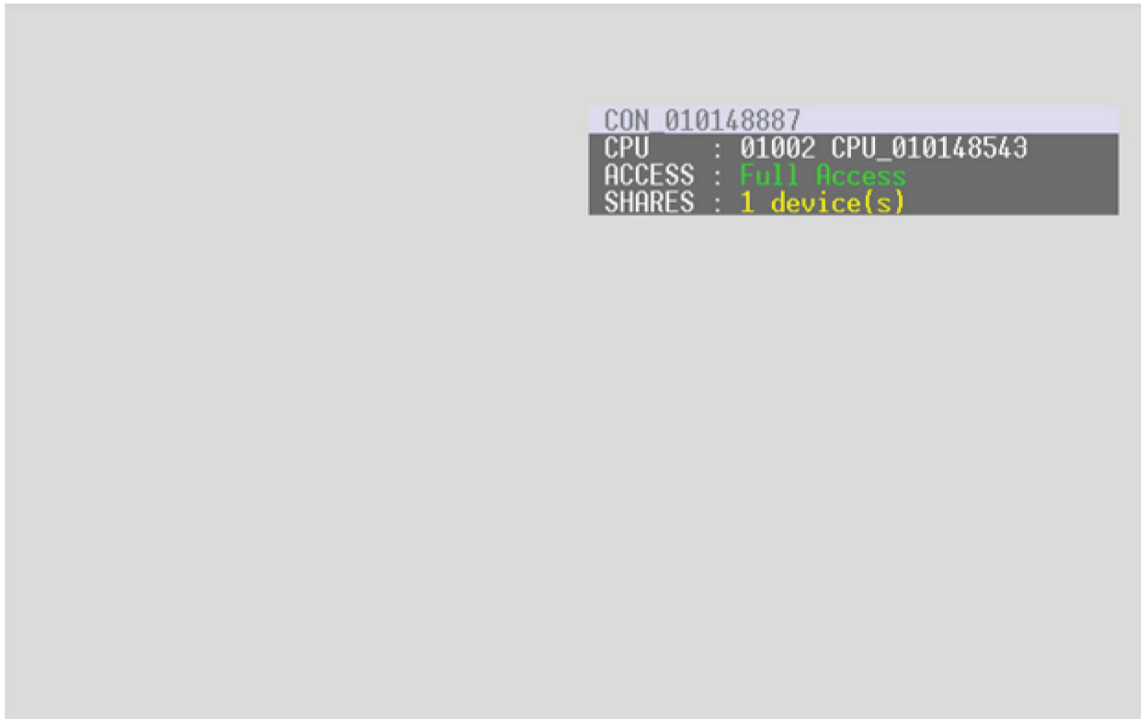


FIGURE 2-17. EXTENDER OSD

## CHAPTER 2: OVERVIEW

The following information is shown in the OSD menu:

TABLE 2-22. OSD MENU INFORMATION

FIELD	DESCRIPTION
CON	Name of console
CPU	Name of currently connected CPU Color Coding: <ul style="list-style-type: none"><li>♦ Green: The connection to the selected CPU is completely established.</li><li>♦ Yellow: The connection to the selected CPU is partially established.</li><li>♦ Red: The connection to the selected CPU cannot be established.</li></ul> NOTE: Possible reasons for any incomplete or non-established connection can be switched off extenders or insufficiently available Grid lines in Matrix Grid operation.
ACCESS	Full Access: Console has a KVM connection to the displayed CPU. <ul style="list-style-type: none"><li>♦ Video Access: Console has a video only connection to the displayed CPU.</li><li>♦ Private Mode: Console has a Private Mode connection to the displayed CPU.</li><li>♦ not connected: Console is not connected to a CPU.</li></ul>
SHARED	x device(s) shows the exact number of devices that are connected to the current CPU of the console (e.g. 3 devices). If the field remains empty, no other devices are connected to the current CPU.

NOTE: If the options Mouse Connect or Keyboard Connect are used, the name of the console with keyboard / mouse control will be displayed on those consoles that do not have current K/M control. The console is displayed in yellow under Access.



## CHAPTER 2: OVERVIEW

### 2.7.5 NETWORK STATUS

The current network configuration is shown in this menu.

You have the following options to access the menu:



The following information is shown in this menu:

**TABLE 2-23. NETWORK CONFIGURATION**

FIELD	DESCRIPTION
DHCP	Information whether the network settings are applied dynamically. Display Y (Yes) or N (No)
IP Address	Information about the IP address as provided manually or via DHCP
Subnet Mask	Information about the subnet mask as provided manually or via DHCP
Gateway	Information about the gateway address as provided manually or via DHCP
MAC ID	Information about the MAC address of the matrix

### OSD

Select Status > Network in the main menu.

```

CON 010167832
Status
-----
Network Interface
DHCP      : YES  Enable configuration of network parameters via DHCP server
IP Address : 192.168.100.211
Subnet Mask : 255.255.255.000
Gateway   : 192.168.100.001
MAC ID    : 00:21:5F:02:00:61
-----
Network Services
API Service : YES  Enable API Service port (5555)
FTP Server  : YES  Enable FTP Server for configuration file transfers
Syslog      #1: NO   Enable Syslog Server #1
Syslog Server #1: 000.000.000.000:514
Syslog      #2: NO   Enable Syslog Server #2
Syslog Server #2: 000.000.000.000:514
LDAP        : NO   Enable authentication with Active Directory Server
LDAP Server : 000.000.000.000:389
LDAP Base DN :
-----
Log Levels
Trace      : DEB NO   INF NO   NOT YES  WAR YES  ERR YES
Syslog     #1: DEB NO   INF NO   NOT YES  WAR YES  ERR YES
Syslog     #2: DEB NO   INF NO   NOT YES  WAR YES  ERR YES

```

FIGURE 2-18. STATUS>NETWORK

## CHAPTER 2: OVERVIEW

### JAVA TOOL

1. Select Status > Matrix View in the task area.

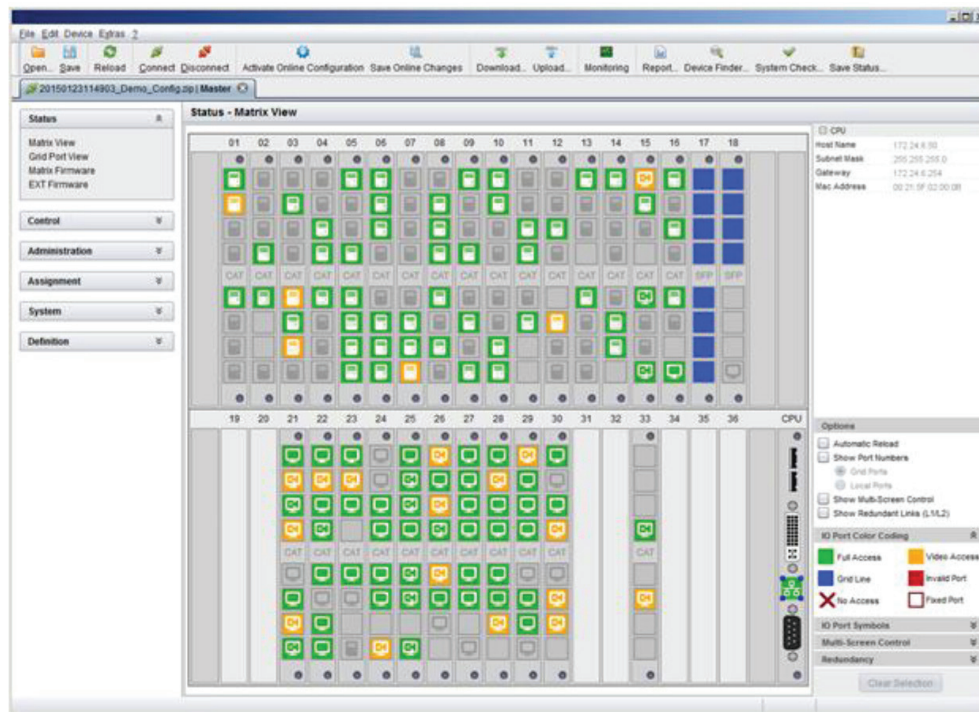


FIGURE 2-19. STATUS—MATRIX VIEW

2. Use the left mouse button to click on the network port of the CPU board. The corresponding network status will be shown on the right hand side of the working area.

The available information can be faded in or hidden by pressing the left mouse button on the “plus” or “minus” icon.



## CHAPTER 2: OVERVIEW

### 2.7.6 FIRMWARE STATUS MATRIX

The current firmware status of the installed boards is shown in this menu.

You have the following options to access the menu:



The following information is shown in this menu:

TABLE 2-24. FIRMWARE STATUS INFORMATION

FIELD	DESCRIPTION
Name	Description of modules
Type	Type number
Ports	Number of ports
Version	Complete description of firmware version
Date	Date of firmware version
Status	Module status

### OSD

Select Status > Firmware in the main menu.

```
03000 CON 010123614
Status
ESC

Firmware
Slot Firmware
00 1E80888 (300 1 140 80 09 08 11)
01 108SFP 108 8 F02.02 09.08.11
02 108SFP 108 8 F02.02 09.08.11
03 108SFP 108 8 F02.02 09.08.11
06 108CAT 108 8 F02.02 09.08.11
10 108SFP 108 8 F02.02 09.08.11
13 108CAT 108 8 F02.02 09.08.11
30 108SFP 108 8 F02.02 09.08.11

SWITCH 01
```

FIGURE 2-20. STATUS—FIRMWARE

## CHAPTER 2: OVERVIEW

### JAVA TOOL

1. Select Status > Matrix Firmware in the task area.

Slot	Name	Type	Ports	Serial Number	Version	Date	Status
00	TERRA_288	Matrix	288	0000000000			
	MATX288	CPU	1	0000000000	F03.00	2014-08-21	Available
	MATX288	OSD	1		F01.14	2013-02-26	
	MATX288	HD	2		F03.00	2014-08-19	
01	MATXCAT	IOB	8	0000000000	B03.00	2014-08-21	Available
	MATXOSD	OSD	8		F03.03	2014-04-04	
02	MATXCAT	IOB	8	0000000000	B03.00	2014-08-21	Available
	MATXOSD	OSD	8		F03.03	2014-04-04	
03	MATXCAT	IOB	8	0000000000	B03.00	2014-08-21	Available
	MATXOSD	OSD	8		F03.03	2014-04-04	
04	MATXCAT	IOB	8	0000000000	B03.00	2014-08-21	Available
	MATXOSD	OSD	8		F03.03	2014-04-04	
05	MATXCAT	IOB	8	0000000000	B03.00	2014-08-21	Available
	MATXOSD	OSD	8		F03.03	2014-04-04	
06	MATXCAT	IOB	8	0000000000	B03.00	2014-08-21	Available
	MATXOSD	OSD	8		F03.03	2014-04-04	
07	MATXCAT	IOB	8	0000000000	B03.00	2014-08-21	Available
	MATXOSD	OSD	8		F03.03	2014-04-04	
08	MATXCAT	IOB	8	0000000000	B03.00	2014-08-21	Available
	MATXOSD	OSD	8		F03.03	2014-04-04	
09	MATXCAT	IOB	8	0000000000	B03.00	2014-08-21	Available
	MATXOSD	OSD	8		F03.03	2014-04-04	
10	MATXCAT	IOB	8	0000000000	B03.00	2014-08-21	Available
	MATXOSD	OSD	8		F03.03	2014-04-04	
11	MATXCAT	IOB	8	0000000000	B03.00	2014-08-21	Available
	MATXOSD	OSD	8		F03.03	2014-04-04	
12	MATXCAT	IOB	8	0000000000	B03.00	2014-08-21	Available
	MATXOSD	OSD	8		F03.03	2014-04-04	
13	MATXCAT	IOB	8	0000000000	B03.00	2014-08-21	Available

FIGURE 2-21. STATUS—MATRIX FIRMWARE

2. To read out the overall status of the matrix and store it locally (file extension .zip), select Matrix > Save Status or press the respective button in the symbol bar.

The various modules can be expanded and retracted in the Name column by clicking with the left mouse button on the plus or minus symbols.

By clicking on the plus or minus symbol in the upper right corner of the working area you can expand and retract all module information with one click of the left mouse button.

## CHAPTER 2: OVERVIEW

### 2.7.7 FIRMWARE STATUS EXTENDER

The current firmware status of connected extenders is shown in this menu.

You have the following option to access the menu:



The following information is shown in this menu:

**TABLE 2-25. FIRMWARE STATUS OF CONNECTED EXTENDERS INFORMATION**

FIELD	DESCRIPTION
Name	Description of firmware
Type	Description of extender module
Ports	Number of ports
Cur. Version	Description of current firmware version
Cur. Date	Date of current firmware version

Select Status > EXT Firmware in the task area.

#	ID	Name	Port	Type	Version	Date
01	10128502	LH2_116_1_1	1	CPU UNIT		
		EXTCPU		EXT	F02.39	2014-02-05
		HDCPU		HID	F02.03	2014-02-04
		EXTMSD		MSD	B02.31	2014-06-02
02	10135817	LH2_102_1_1	2	CPU UNIT		
		EXTCPU		EXT	F02.39	2014-02-05
		HDCPU		HID	F02.03	2014-02-04
		EXTMSD		MSD	B02.31	2014-06-02
03	10135875	LH2_101_3_1	3	CPU UNIT		
		EXTCPU		EXT	F02.39	2014-02-05
		HDCPU		HID	F02.03	2014-02-04
		EXTMSD		MSD	B02.31	2014-06-02
04	40001109	LH2_116_6_1	4	CPU UNIT		
		EXTCPU		EXT	B92.39	2014-02-05
		HDCPU		HID	B02.03	2014-02-04
		EXTMSD		MSD	B02.31	2014-06-02
05	10135871	LH1_27_2_1	5	CPU UNIT		
		EXTCPU		EXT	F02.39	2014-02-05
		HDCPU		HID	F02.03	2014-02-04
		EXTMSD		MSD	B02.29	2013-06-11

■ Extender firmware version conflict  
■ Manual update of EXTMSD / EXTMSD recommended  
■ Wrong module type (CPU/CON mismatch)  
■ Undefined type

**FIGURE 2-22. STATUS—EXT FIRMWARE**

## CHAPTER 2: OVERVIEW

### 2.8 TRACE FUNCTION

All events, e.g. activities and switching operations of the Modular KVM Matrix Switch are logged and displayed in this menu.

This function is used for diagnostic purposes.

You have the following option to request various trace views in the menu:



The following information is shown in this menu:

TABLE 2-25. TRACE FUNCTION MENU

FIELD	DESCRIPTION
Date	Date stamp
Time	Time stamp
Message	Detailed description of the event

Trace possibilities:

- ◆ Select Status > Trace IO Board in the main menu to check the events on your current I/O board.
- ◆ Select Status > Trace Matrix to check the matrix events.

# CHAPTER 2: OVERVIEW

## 2.9 SYSLOG MONITORING

The complete logging of the Modular KVM Matrix Switch activities, switching operations and surveillance of the function of critical components such as fans or power supply units takes place in this menu.

You have the following option to access the menu:



To start Syslog Monitoring, proceed as follows:

- Select the Monitoring symbol in the symbol bar.

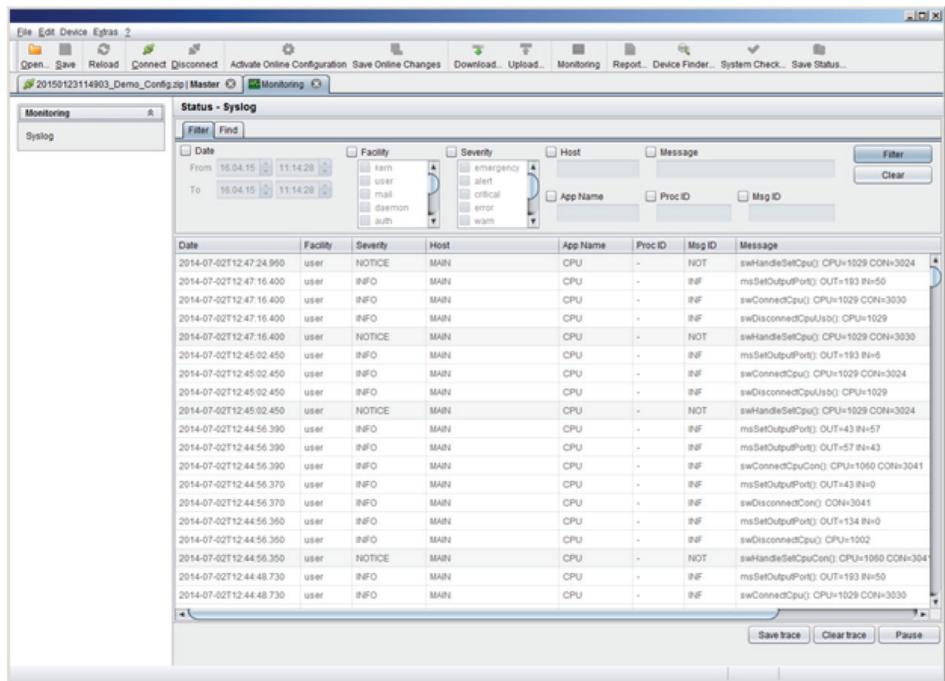


FIGURE 2-22. MONITORING—SYSLOG

Logging of system activities starts when the Monitoring menu is opened and remains active until the tab is closed.

NOTE: Syslog messages are transmitted via UDP. Therefore, port 514 within the used network should not be blocked, e.g. by a firewall.

During logging, the activities are written continuously into logging files and stored locally. This process can be set with various options.

## CHAPTER 2: OVERVIEW

### OPTIONS

- ◆ Select Extras > Options in the menu bar and open the tab.

The following options are available:

**TABLE 2-27. SYSLOG OPTIONS**

OPTION	DESCRIPTION
Log File Directory	Default directory to store the log files
Log File Name	Default name of the log file
Log File Extension	Default extension for the log file
Daily Log files	Log files are stored every 24 hours (daily)
Maximum Log File Size (KB)	Allowed maximum size of log file
Maximum Number of Log Files	Allowed maximum number of log files
Autostart	When starting the Java Tool, the Syslog function will be started in the background
Open Monitoring Tab	When starting the Java Tool, the Monitoring tab will be opened

NOTE: When reaching the maximum log file size, a new log file will be created. When reaching the maximum number of log files, the oldest one will be overwritten with the new information.

### FILTER FUNCTION

To filter relevant messages out of a number of logged activities of the Modular KVM Matrix Switch, the Syslog Monitoring offers various filter options.

To set and activate a filter, proceed as follows:

1. Set the desired filter option(s) by activating the respective checkbox(es).
2. Activate the filter settings by pressing the Filter button.
3. To deactivate an activated filter setting, press the Clear button.

The following filter options are available:

**TABLE 2-28. FILTER OPTIONS**

OPTION	DESCRIPTION
Date	Messages for a defined date range will be filtered
Facility	Messages for a defined facility will be filtered
Severity	Messages for a defined severity will be filtered
Host	Messages for a defined host will be filtered
Message	Messages with defined text parts will be filtered

NOTE: Filter options are not valid within the locally stored log files.

## CHAPTER 2: OVERVIEW

### RECORDING FUNCTION

All messages shown in the Syslog are equipped with various recording functions.

- ♦ To store messages shown in the Syslog (filtered or unfiltered), press the Save trace button. The messages will be stored in a .txt file.
- ♦ To remove messages shown in the Syslog, press the Clear trace button.
- ♦ To stop recording messages, press the Pause button. To continue, press the button again.

### 2.10 SNMP

The SNMP function allows all function-critical and safety-critical elements of the matrix to be monitored and queried. This function complies with the RFC 1157 standard.

NOTE: When using SNMP monitoring, we recommend using a dedicated network to maintain continuous access.

You have the following options to configure the SNMP monitoring:



#### OSD

To activate the SNMP agent, proceed as follows:

1. Select Configuration > SNMP in the main menu.

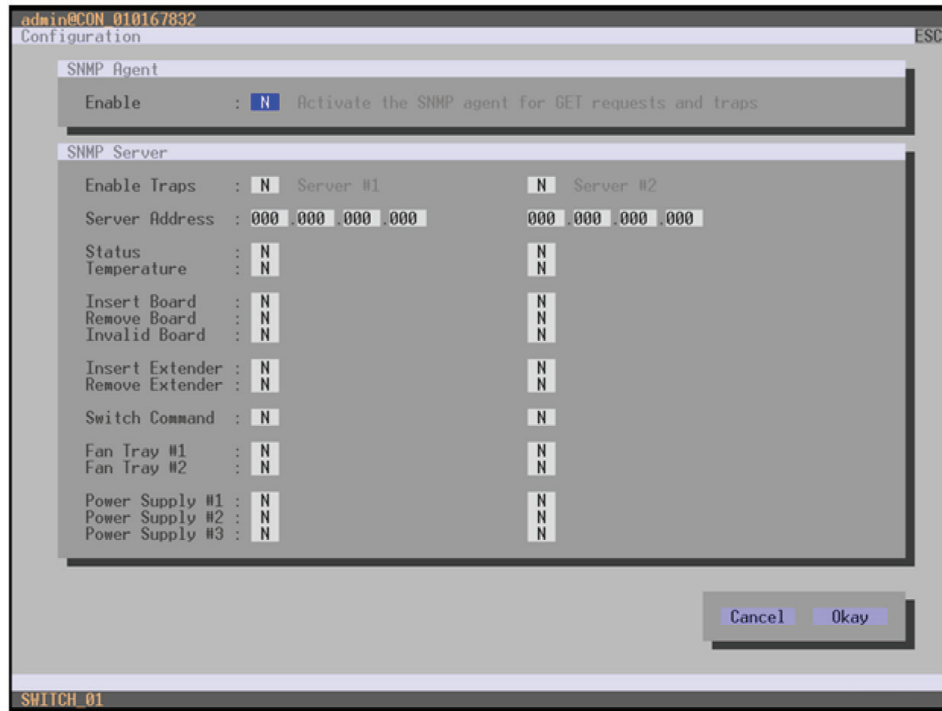


FIGURE 2-24. CONFIGURATION—SNMP

2. Set the Enable option to Y (Yes) under SNMP Agent. By activating this option, the permission for an active query of the SNMP agent is granted.

To configure an SNMP server, proceed as follows:

- ◆ Select Configuration > SNMP in the main menu.
- ◆ Set the Enable Traps option to Y (Yes) within SNMP Server. This function allows an active transmission of trap messages from the SNMP agent to the SNMP server.
- ◆ Set the IP address of the SNMP server within Server Address.
- ◆ Activate the requested traps by enabling them to Y (Yes).



## CHAPTER 2: OVERVIEW

You can select the following traps:

**TABLE 2-29. TRAPS**

TRAP	DESCRIPTION
Status	Notification about matrix status
Temperature	Notification about temperature within the matrix
Insert Board	Notification about insertion of a new I/O board into a slot
Remove Board	Notification about removal of an I/O board out of a slot
Invalid Board	Notification about a faulty I/O board
Insert Extender	Notification about a newly connected extender to the matrix, notification about a switched on extender, notification about a newly established link between extender and matrix
Remove Extender	Notification about a removed extender from the matrix, notification about a switched off extender, notification about an interrupted link between extender and matrix
Switch Command	Notification about a performed switching operation at the matrix
Fan Tray #1	Notification about the status of fan tray #1
Fan Tray #2	Notification about the status of fan tray #2
Power Supply #1	Notification about the status of power supply unit #1
Power Supply #2	Notification about the status of power supply unit #2
Power Supply #3	Notification about the status of power supply unit #3

To query the SNMP status, proceed as follows:

1. Select Status > SNMP in the main menu.

**NOTE:** To activate the SNMP agent function or the SNMP server function, you must restart the matrix.

Two SNMP servers can be used at the same time.

## CHAPTER 2: OVERVIEW

### JAVA TOOL

To activate the SNMP agent, proceed as follows:

1. Select System > Network in the task area.

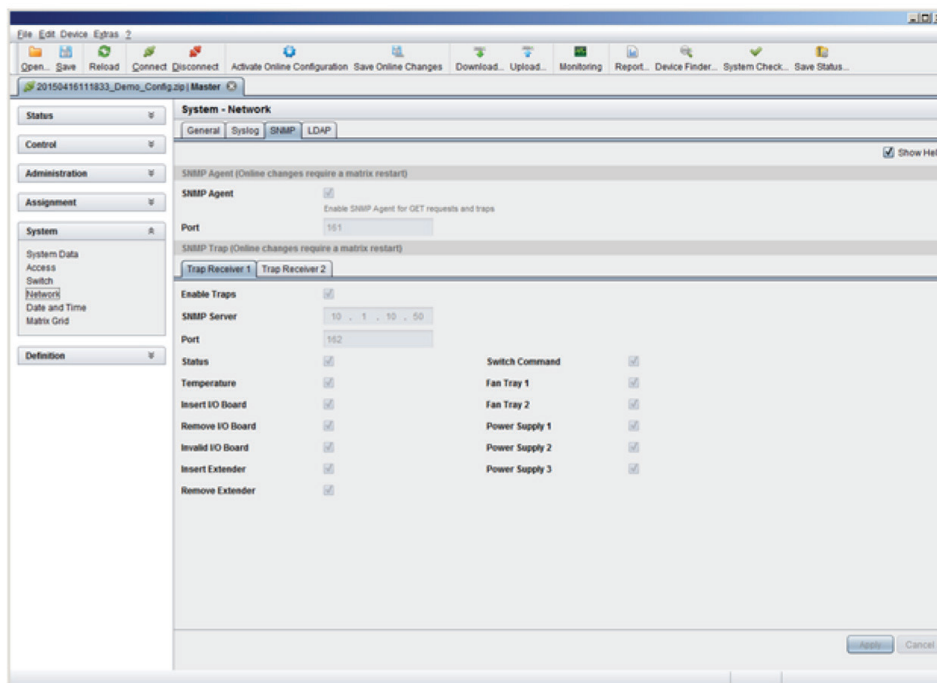


FIGURE 2-25. SYSTEM—NETWORK

2. Activate the SNMP Agent option in the SNMP tab. By activating this option, the permission for an active query of the SNMP agent is granted.

To configure an SNMP server, proceed as follows:

- ◆ Select Configuration > Network in the task area.
- ◆ Activate the Enable Traps option within SNMP Server. This function allows an active transmission of trap messages from the SNMP agent to the SNMP server.
- ◆ Set the IP address of the SNMP within SNMP Server.
- ◆ Activate the requested traps.

NOTE: To activate the SNMP agent function or the SNMP server function, you must restart the matrix.

## CHAPTER 2: OVERVIEW

### 2.11 SYSTEM CHECK

System Check offers a diagnostic function for checking the matrix configuration. The feature indicates suboptimal and faulty settings.

System Check is exclusively used for a confidence check and does not make any active changes in the configuration.

You have the following option to access the menu:



The following configuration parts are checked:

- ◆ Matrix Firmware
- ◆ Extender Firmware
- ◆ Multi-Screen Control
- ◆ Ext Units
- ◆ CPU Devices
- ◆ CON Devices
- ◆ User
- ◆ System Configuration
- ◆ Matrix Grid

The following notification levels can be shown:

**TABLE 2-30. NOTIFICATION LEVELS**

LEVEL	DESCRIPTION
OK (green)	System Check completed without any abnormalities
WARNING (yellow)	System Check revealed abnormalities in the configuration that point to incomplete parts of the configuration, firmware differences, duplications or unconnected extenders but without being system critical
ERROR (red)	System Check revealed errors in the configuration that can have both functional and system-critical influences on the system

**NOTE:** If the messages "WARNING" and "ERROR" are generated by the System Check function, the respective problem will be described and a basic guideline will be provided.

## CHAPTER 2: OVERVIEW

To start System Check, proceed as follows:

- ◆ Select the System Check symbol in the symbol bar.

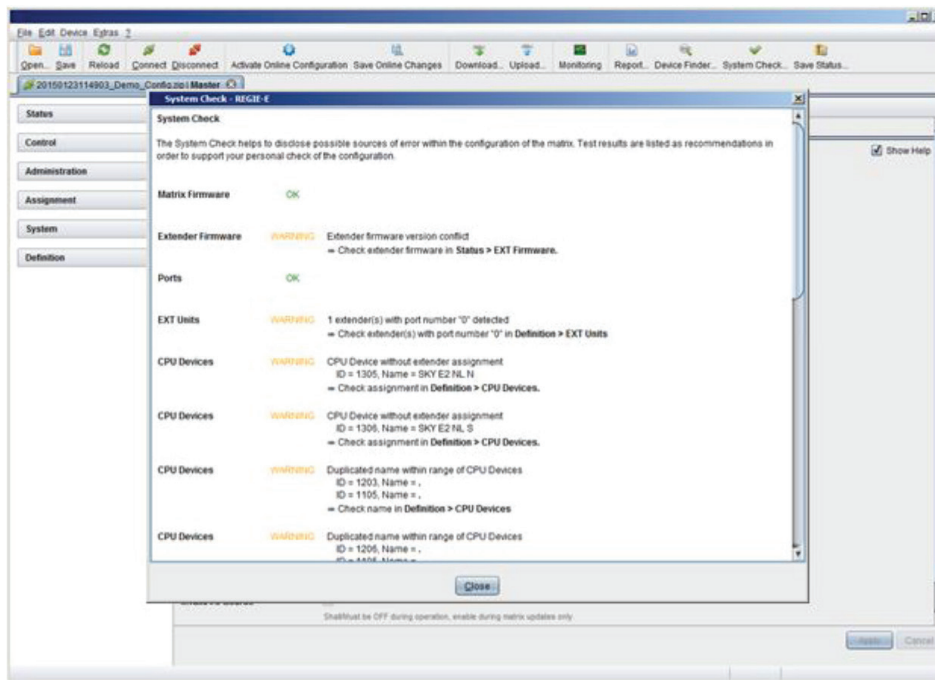


FIGURE 2-26. SYSTEM CHECK

## 2.12 DEVICE FINDER

The Device Finder offers the possibility to find all matrices or SNMP boards that are located in the same subnetwork. This is useful, for example, if the IP address of a specific matrix is unknown and should be accessed via IP.

You have the following option to access the function:



The following device information is shown in the Device Finder:

TABLE 2-31. DEVICE INFORMATION

INFORMATION	DESCRIPTION
Device	Name of device
Name	Name of the active configuration
IP Address	Current IP address of the device
MAC Address	MAC address of the device
Type	Type of device

NOTE: You can use the last column of the Device Finder to access the respective matrix directly using the Connect button.

To start the Device Finder, proceed as follows:

- ◆ Select the symbol Device Finder in the symbol bar.

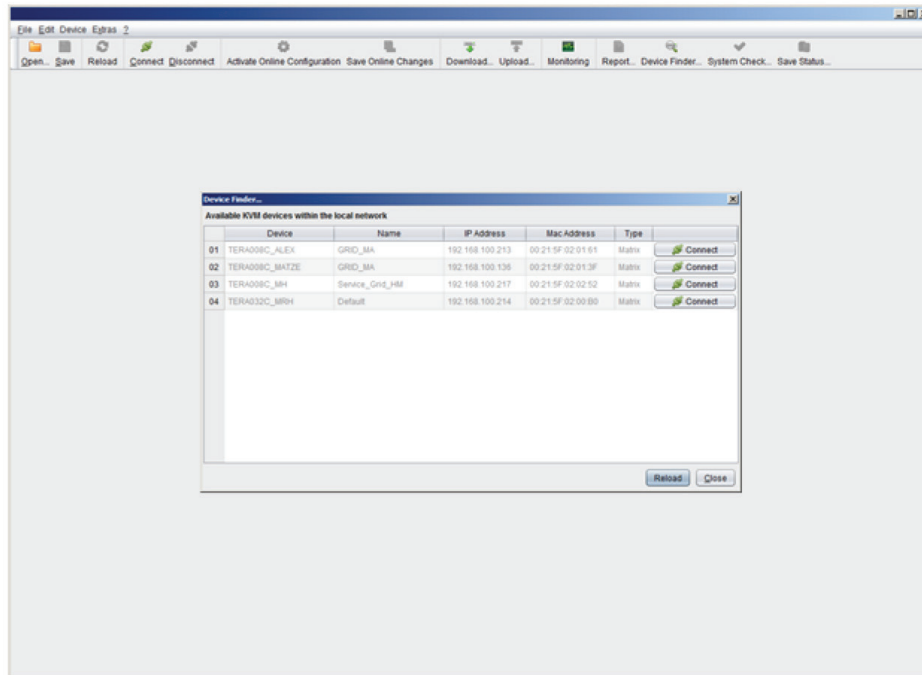


FIGURE 2-27. DEVICE FINDER

## CHAPTER 3: INSTALLATION

### 3.1 PACKAGE CONTENTS

Your package contains the following items:

- ♦ (1) Modular KVM Matrix Switch
- ♦ (1) power cord per built-in power supply unit
- ♦ (1) serial control cable
- ♦ Mounting accessories
- ♦ Java tool
- ♦ (1) CATx network cable (cross-wired)
- ♦ (1) Quick Start Guide

If anything is missing or damaged, contact Black Box Technical Support at 877-877-2269 or [info@blackbox.com](mailto:info@blackbox.com).

### 3.2 SYSTEM SETUP

NOTE: We recommend that first-time users set up the system in the same room as a test setup. This will allow you to identify and solve any cabling problems, and experiment with your system more conveniently.

#### MATRIX SETUP

1. Install the CPU and CPU boards.
2. Connect keyboard, mouse and monitor to the CPU board of the matrix.
3. Connect the matrix to the power supply.
4. Open OSD via keyboard command <hotkey>, <o> and log in with administrator rights in the main menu under configuration (see Section 4.2.1).
5. Configure initially as requested.

NOTE: After you configure the system, we recommend that you save the configuration by selecting Configuration > Save and restart the matrix by selecting Restart Matrix.

6. Optional: Establish a network connection between the matrix and the Java Tool so you can set an extended configuration (see Section 4.2.2).

The default IP address is 192.168.100.99 and DHCP is deactivated. When installing several matrices at the same time, we strongly recommend that you install them in sequence and to assign unique IP addresses in order to avoid IP address conflicts.

#### EXTENDER SETUP

1. Connect the CON Units to the matrix by using the interconnect cables (CATx or fiber).
2. Connect the CON Units to the input devices to be used (for example, keyboard and mouse).
3. Connect the 5-VDC power supply units to the CON Units.
4. Check the basic function of the CON Unit by opening the OSD via keyboard command <hotkey>, <o>.
5. Connect the source (computer, CPU) to the CPU Unit of the extender using the provided connection cables.
6. Connect the CPU Unit to the matrix using the interconnect cables (CATx or fiber).



## CHAPTER 3: INSTALLATION

7. If you have a video matrix, connect the video source directly to the matrix using the interconnect cables (coax, fiber).
8. Connect the 5-VDC power supply units to the CPU Units.
9. Start the system.

### 3.3 EXAMPLE APPLICATIONS

The Modular KVM Matrix Switch supports a wide and flexible range of system configurations:

A part of the Modular KVM Matrix Switch can be configured as a Single-Head work station, a part as Dual-Head, as Quad-Head or even as a video matrix for example. In addition to that, there are configurations with KVM and USB 2.0 available.

In addition to OSD access by a keyboard connected to the CPU board or and extender CON Unit, other methods of control are available, including:

- ♦ Java Tool
- ♦ Serial interface

A connection to common media controls is also possible.

The following sections show typical example installations of the Modular KVM Matrix Switch.

## CHAPTER 3: INSTALLATION

### 3.3.1 KVM MATRIX

In Single-Head mode, up to 288 ports can be used either as an input or as an output port depending on components and equipment. Non-blocking access is available for all users, i.e. user access is not limited by the activities of another user.

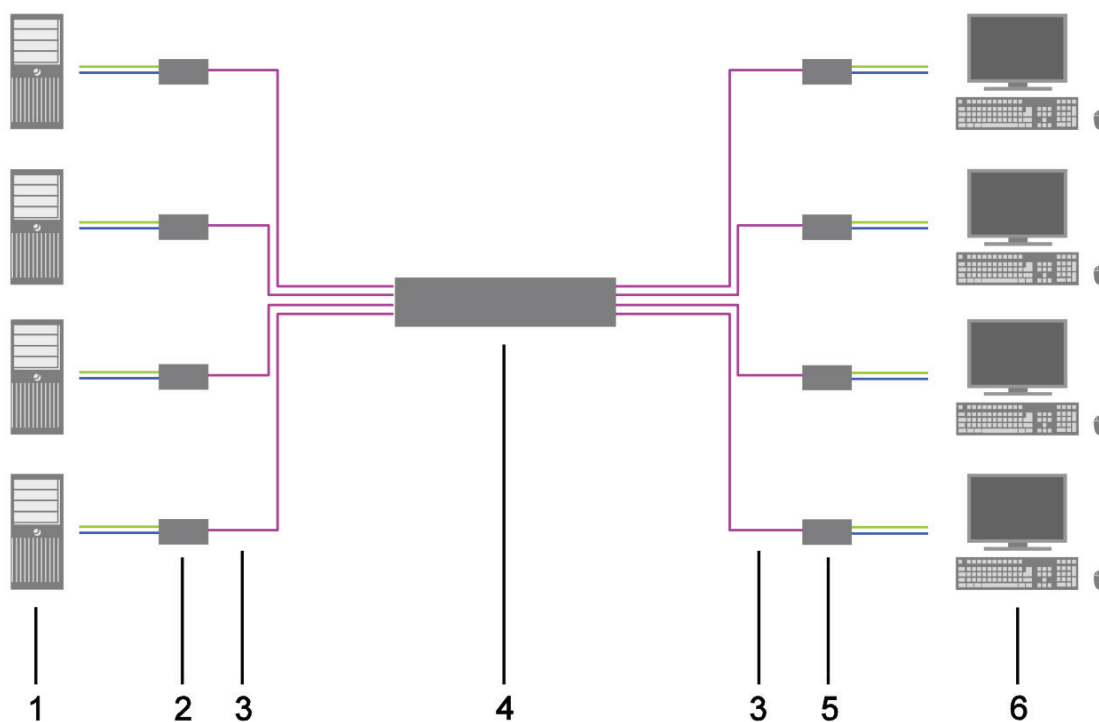


FIGURE 3-1. KVM MATRIX INSTALLATION EXAMPLE

TABLE 3-1. SINGLE-HEAD KVM MATRIX INSTALLATION COMPONENTS

NUMBER IN FIGURE 3-1	COMPONENT
1	Source (computer, CPU)
2	CPU Unit
3	Interconnect cable
4	Modular KVM Matrix Switch
5	CON Unit
6	Console (monitor, keyboard, mouse)

If you have a Single-Head console, you can also get access to a Dual-Head or Quad-Head console for example. However, control is only possible at monitor 1.

Any signal source can be switched to any number of monitors that will show the video signal at the same time. Audio may also be switched if required.



## CHAPTER 3: INSTALLATION

### 3.3.2 VIDEO MATRIX

If you use the Modular KVM Matrix Switch as a video matrix, up to 288 input ports can be switched to up to 288 output ports, depending on components and equipment.

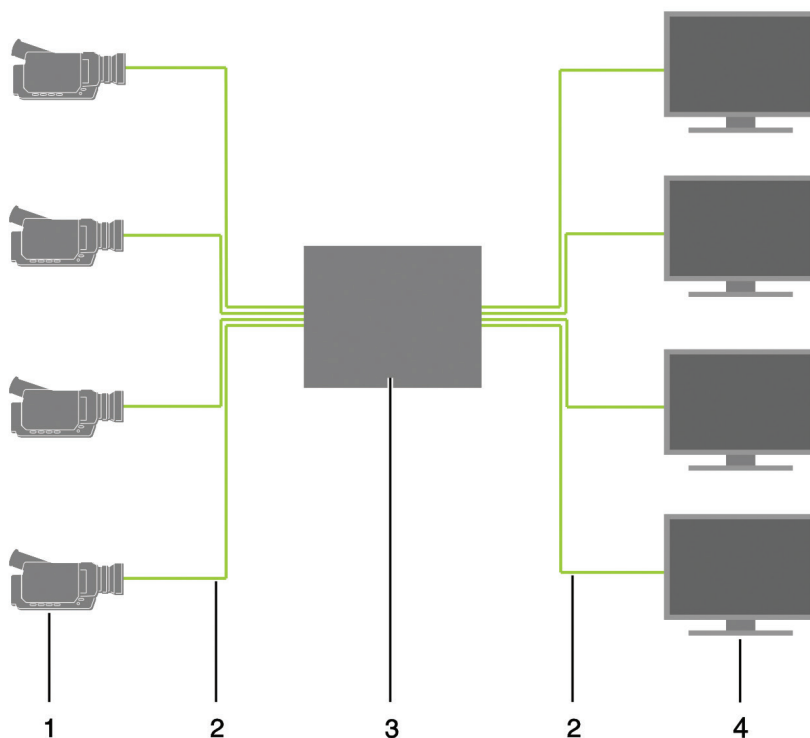


FIGURE 3-2. VIDEO MATRIX INSTALLATION EXAMPLE

TABLE 3-2. VIDEO MATRIX INSTALLATION COMPONENTS

NUMBER IN FIGURE 3-2	COMPONENT
1	Video source (e.g., SDI camera)
2	Interconnect cable
3	Modular KVM Matrix Switch
4	Video sink (e.g., monitor)

## CHAPTER 3: INSTALLATION

### 3.3.3 PARALLEL OPERATION (STACKING)

If you have special configurations, especially at installations with several monitors per workstation or additional support of USB 2.0 transmission paths, the number of connectable CPUs and consoles can be increased by a parallel operation (stacking) of several Modular KVM Matrix Switches.

One Modular KVM Matrix Switch is defined as the Master Matrix and its IP address entered into the Master IP Address field (see Section 4.4.1). All other matrices are defined as Sub Matrices. Sub matrices must be connected to the master matrix via a network connector (RJ-45) on the CPU board. The Enable LAN Echo option has to be activated at the master matrix (see Section 4.4.1).

If a switching command is performed using the OSD, the synchronized matrices will also switch automatically.

NOTE: Switching of stacked devices might be delayed by several seconds.

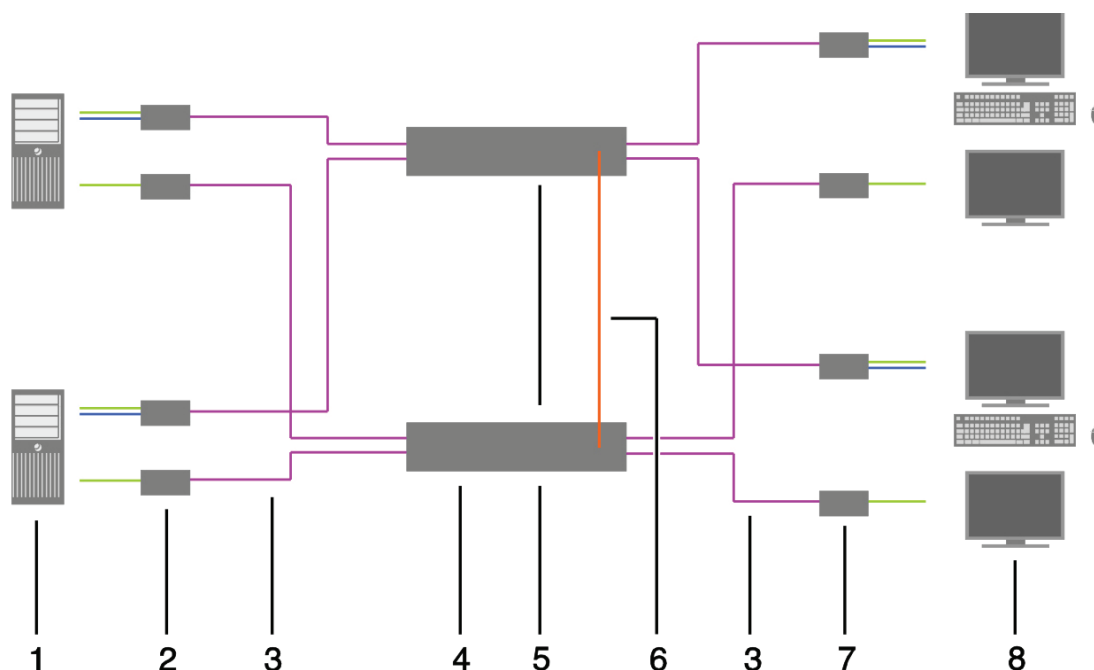


FIGURE 3-3. PARALLEL OPERATION (STACKING) INSTALLATION EXAMPLE

TABLE 3-3. PARALLEL OPERATION (STACKING) INSTALLATION COMPONENTS

NUMBER IN FIGURE 3-3	COMPONENT
1	Dual-Head Source (computer, CPU)
2	CPU Unit
3	Interconnect cable
4	Master matrix
5	Synchronized matrix
6	Network connection master matrix/synchronized matrix
7	CON Unit
8	Console (two monitors, keyboard, mouse)

## CHAPTER 3: INSTALLATION

### 3.3.4 MATRIX GRID

You can use a matrix grid for applications where the required number of ports is not sufficient or important connections need to be made to several matrices to provide redundancy.

A matrix grid consists of one master matrix and at least one slave matrix. In its maximum configuration, it can consist of up to 16 matrices.

To build a matrix grid, the grid matrices are interconnected by "Grid Lines." In this case, the slave matrices can be connected directly to the master matrix or between themselves.

When arranging the grid lines, various grid setups can be realized, for example: a ring setup, a hub and spoke setup or a fully connected setup of matrices.

Grid lines can process signals bidirectional (Smart Connect). Per grid line, one KVM connection can be transmitted.

All switching operation will be exclusively performed through the Grid Master.

To configure the matrix grid, see see Section 4.15.

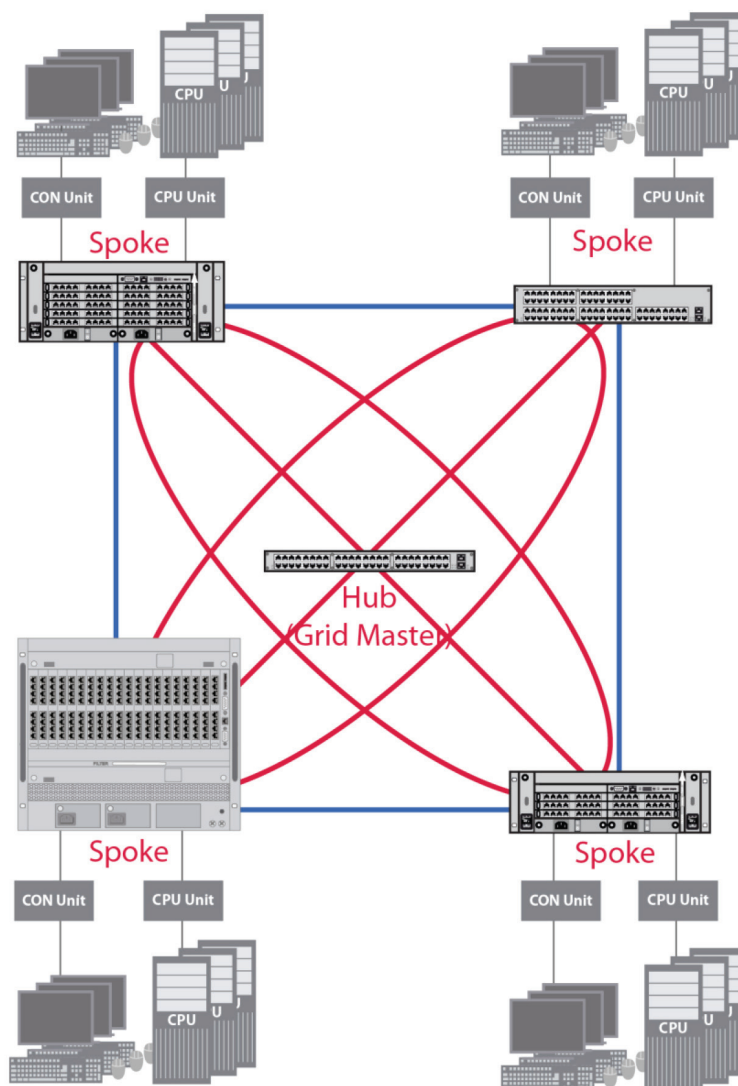


FIGURE 3-4. MATRIX GRID INSTALLATION EXAMPLE

## CHAPTER 4: CONFIGURATION

### 4.1 COMMAND MODE

The Modular KVM Matrix Switch includes a Command Mode that allows several functions to be controlled by keyboard commands during normal use.

To enter Command Mode, use a Hotkey sequence, and to exit Command Mode, press <Esc>. While in Command Mode, the Shift and Scroll LEDs on the console keyboard will flash.

**NOTE:** In Command Mode, normal keyboard and mouse operation will cease. Only selected keyboard commands are available. If there is no keyboard command executed within 10 seconds after activating Command Mode, it will be deactivated automatically.

The following table lists the keyboard commands to enter and to exit Command Mode and to change the Hotkey sequence.

**TABLE 4-1. KEYBOARD COMMANDS**

FUNCTION	KEYBOARD COMMAND
Enter Command Mode (default)	2x <Left Shift> (or Hotkey)
Exit Command Mode	<Esc>
Change Hotkey Sequence	<current Hotkey>, <c>, <new Hotkey code>, <Enter>
	Until 2011-30-09: <Left Ctrl> + <Left Shift> + <c>, <Hotkey code>, <Enter>

**NOTE:**

- <Key> + <Key>    Press keys simultaneously
- <Key>, <Key>    Press keys successively
- 2x <Key>        Press key quickly, twice in a row (similar to a mouse double-click)

The Hotkey sequence to enter Command Mode can be changed. The following table lists the Hotkey Codes for the available key sequences:

**TABLE 4-2. HOTKEY CODES AND KEY SEQUENCES**

HOTKEY CODE	HOTKEY
0	Freely selectable (from 2012-01-12 on)
2	2x <Scroll>
3	2x <Left Shift>
4	2x <Left Ctrl>
5	2x <Left Alt>
6	2x <Right Shift>
7	2x <Right Ctrl>
8	2x <Right Alt>

**NOTE:** In a combined KVM matrix / U-Switch configuration, choose different Hotkeys for the KVM matrix and the U-Switch.



## CHAPTER 4: CONFIGURATION

### SET FREELY SELECTABLE HOTKEY (EXAMPLE)

To set a freely selectable Hotkey (e.g. 2x <Space>), use the following keyboard sequence:

<current Hotkey>, <c>, <0>, <Space>, <Enter>

### SET HOTKEY FOR DIRECT OSD ACCESS

Next to the Hotkey for standard functions, this Hotkey can be exclusively used for opening the OSD directly.

To select a Hotkey from the Hotkey table for a direct opening of the OSD, use the following keyboard sequence:

<current Hotkey>, <f>, <Hotkey code>, <Enter>

To select a freely selectable Hotkey (e.g. 2x <Space>) for opening OSD directly, use the following keyboard sequence:

<current Hotkey>, <f>, <0>, <Space>, <Enter>

### RESET HOTKEY

To set a Hotkey back to default settings of the extender, press the key combination <Right Shift> + <Del> within 5 seconds after switching on the CON Unit or plugging in a keyboard.

To delete the Hotkey for direct OSD access, use the following keyboard sequence:

<current Hotkey>, <f>, <0>, <Del>, <Enter>

## 4.2 CONTROL OPTIONS

The Modular KVM Matrix Switch contains an internal CPU that allows you to control all functions from any console without the need for an external CPU or media control.

You have the following options to access the Modular KVM Matrix Switch for configuration and operation:

- ♦ via OSD
- ♦ via Java Tool
- ♦ via serial interface

### 4.2.1 CONTROL VIA OSD



Via OSD (On-Screen-Display), you set the configuration of the Modular KVM Matrix Switch operating system. The settings of the Configuration menu are described below. All other menus are described in later chapters.

You have the following options to enter the OSD of the Modular KVM Matrix Switch:

- ♦ via keyboard connected to the CPU board
- ♦ via keyboard connected to a CON Unit of an extender

## CHAPTER 4: CONFIGURATION

### ENTERING OSD

1. Start Command Mode with the Hotkey (see Section 4.1).
2. Press <o> to open OSD. You will see a list of all available CPUs as a start menu.
3. Press <Esc> to enter the main menu.

**NOTE:** If the Enable CPU Selection option is enabled in the Configuration menu, the selection list for switching CPU devices will be opened initially. To skip this list, press the <F7> key.

### LEAVING OSD

Press <Esc> in the main menu or simultaneously <Left Shift> + <Esc> anywhere within the OSD.

The OSD will be closed without any further changes and the currently active CPU connection will be displayed.

### MENU STRUCTURE

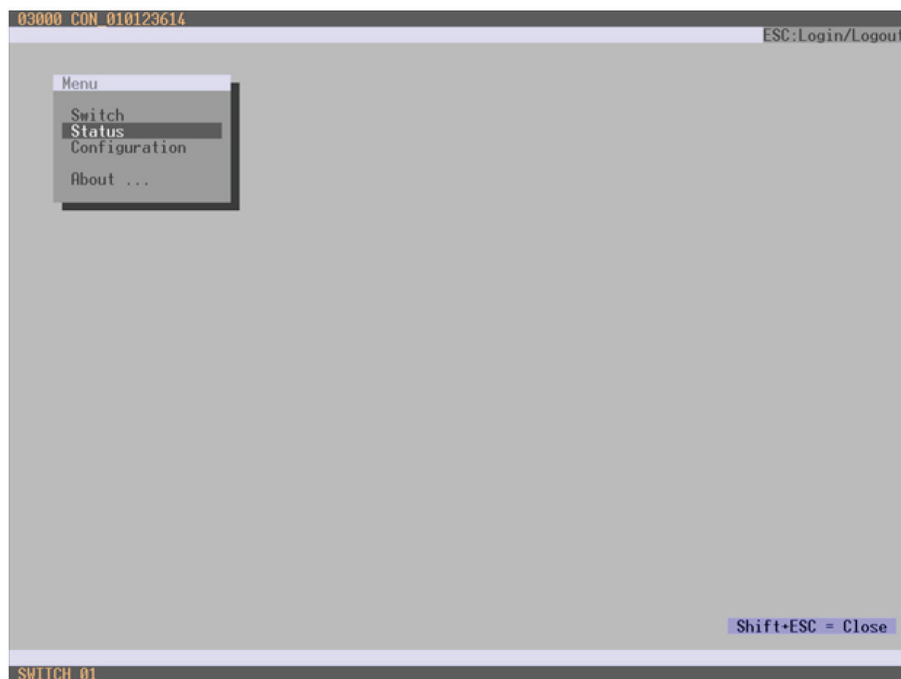


FIGURE 4-1. EXAMPLE VIEW

The general layout of the OSD is structured into three areas:

- ◆ Upper status area (topmost two text lines)
- ◆ Working area
- ◆ Lower status area (lowest two text lines)

## CHAPTER 4: CONFIGURATION

### KEYBOARD CONTROL

You can select the following keyboard commands.

TABLE 4-3. KEYBOARD COMMANDS

FUNCTION	KEYBOARD COMMAND
Left cursor - only within an input field or a switching screen	<Cursor Left>
Right cursor - only within an input field or a switching screen	<Cursor Right>
<ul style="list-style-type: none"> <li>In input fields: Line up (with wrap around)</li> <li>In menus: Line up (without wrap around)</li> </ul>	<Cursor Up>
<ul style="list-style-type: none"> <li>In input fields: Line down (with wrap around)</li> <li>In menus: Line down (without wrap around)</li> </ul>	<Cursor Down>
Previous page in menus with more than one page	<Page Up>
Next page in menus with more than one page	<Page Down>
Next input field	<Tab>
Previous input field	<Left Shift> + <Tab>
Next option in selection fields	<+>
Previous option in selection fields	<->
Switching in selection fields between two conditions, e. g. between ON / OFF or Y (Yes) / N (No)	<Space>
<ul style="list-style-type: none"> <li>In menus with input fields: Save data</li> <li>In menus: Select menu item</li> </ul>	<Enter>
<ul style="list-style-type: none"> <li>In menus with input fields: Cancel data input without saving</li> <li>In menus with selection fields: Go back to the superior menu</li> </ul>	<Esc>

### SORTING FUNCTION

Lists and tables in the Java Tool offer a sorting function for fast and smooth search.

The following sorting functions are available.

TABLE 4-4. SORTING FUNCTIONS

FUNCTION	KEYBOARD COMMAND
Sort ID numbers in descending order by pressing the keyboard command once.	<F1>
Sort ID numbers in ascending order by pressing the keyboard command twice (ID).	
Sort ID names in descending order by pressing the keyboard command once.	<F2>
Sort ID names in ascending order by pressing the keyboard command twice (Name).	
Go to the next result in the list of results of the search field (Next).	<F3>
Go to the previous result in the list of results of the search field (Previous).	<F4>
Refresh the currently shown list (Refresh).	<F5>
Jump between the search field and the list of results (Find).	<F6>

## CHAPTER 4: CONFIGURATION

### PASSWORD REQUEST

You have to login with administrator rights to be able to set configurations.

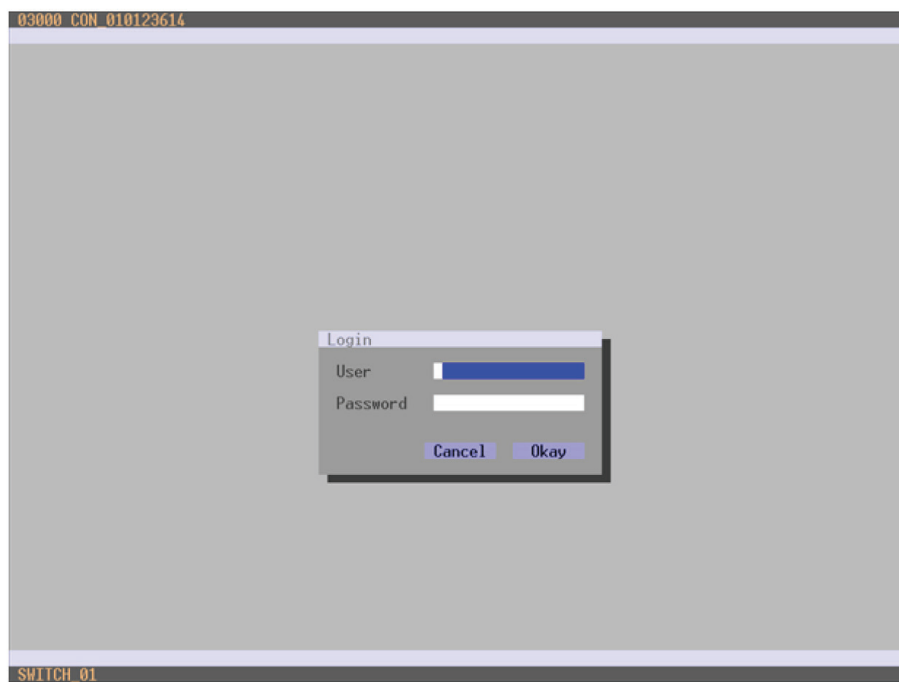


FIGURE 4-2. LOGIN

Access to the configuration menu requires administrator rights. User login is mandatory.

TABLE 4-5. LOGIN

FIELD	INPUT
User	admin
Password	admin

By pressing <F10> in the main menu of the OSD, the login mask will be opened. To log out a user, press <F10> again.

For security reasons, please change the administrator password as soon as possible (see Section 4.4.1).



## CHAPTER 4: CONFIGURATION

### 4.2.2 CONTROL VIA JAVA TOOL

---



#### REQUIREMENTS

If you want to use the Java Tool, you will need:

- ♦ Computer with an executable Java Tool and an installed Java Runtime Environment (JRE, version 1.7 or higher)
- ♦ Java Tool software
- ♦ Available network connection between the Java Tool and the matrix

NOTE: Contact your system administrator concerning JRE and network connection.

#### INSTALLATION OF THE JAVA TOOL

The Java Tool is available as a single executable program file that does not require a separate installation.

- ♦ Copy the tool after receiving the file to a directory on your computer.

NOTE: If you do not have a copy of the Java Tool, contact Black Box Technical Support at 877-877-2269 or [info@blackbox.com](mailto:info@blackbox.com).

#### COMPUTER CONNECTION TO THE MATRIX

For a direct connection between computer and matrix, a cross-wired network cable is required.

For a connection between computer and matrix via switch or hub, a parallel assembled network cable is required.

Do not use a network connection between Java Tool and the matrix that is primarily used for transmitting audio data.

- ♦ Connect the network cable to the RJ-45 ports of computer and CPU board of the matrix.

#### START OF THE JAVA TOOL

- ♦ Open the Java Tool by double-clicking on the program icon or press the <Enter> key of the keyboard.

#### CONNECTION TO THE MATRIX

NOTE: At least FTP rights are required.

1. Open the Java Tool.
2. Select Matrix > Connect in the menu bar.
3. Enter the IP address in the popup input field according to the network configuration of the Modular KVM Matrix Switch (see Section 4.2.3).
4. Enter the user name and password for the Modular KVM Matrix Switch (see Section 4.4.1).
5. Confirm your inputs with the OK button or reject with Cancel.

# CHAPTER 4: CONFIGURATION

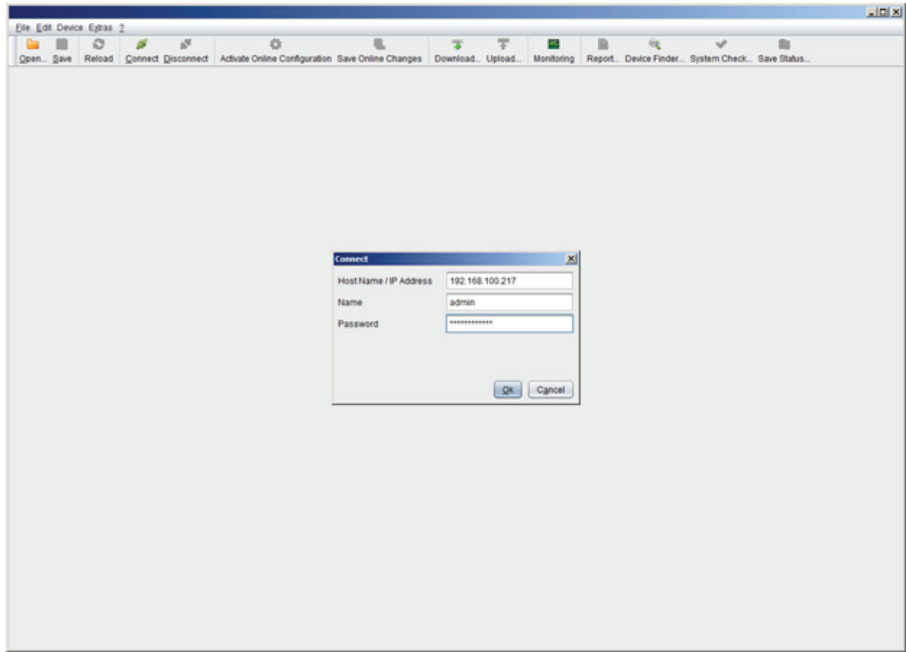


FIGURE 4-3. CONNECT

NOTE: Up to twelve connections between the matrix and the Java Tool can be established at the same time due to a limitation of available sockets.

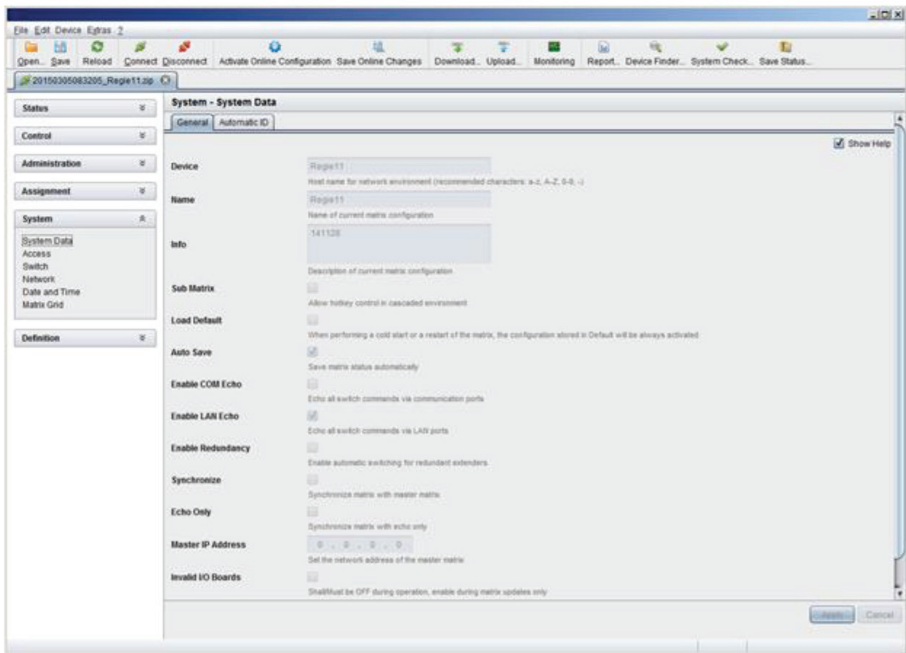


FIGURE 4-4. SYSTEM–SYSTEM DATA



## CHAPTER 4: CONFIGURATION

The menu structure of the Java Tool is subdivided into various sections:

- ◆ Menu bar (top line)
- ◆ Toolbar (second line)
- ◆ Tab bar (third line)
- ◆ Task area (left menu section)
- ◆ Working area (right menu section)
- ◆ Status bar (bottom line section)

### OPERATING INSTRUCTIONS

The operation of the Java Tool is intuitive and corresponds to the user interface of common operating systems.

The Java Tool contains its own support function.

The integrated help texts in the working area of the Java Tool can be activated or deactivated by the checkbox in the upper right corner.

### MOUSE CONTROL

You can select the following mouse commands.

**TABLE 4-6. MOUSE COMMANDS**

FUNCTION	MOUSE COMMAND
Menu selection, marking	Left mouse button
Open function-specific selection menus	Double-click left mouse button
Open context-specific selection menus	Right mouse button

### KEYBOARD CONTROL

You can select the following keyboard commands.

**TABLE 4-7. KEYBOARD COMMANDS**

FUNCTION	MOUSE COMMAND
Cursor to the left	<Cursor Left>
Cursor to the right	<Cursor Right>
Line up	<Cursor Up>
Line down	<Cursor Down>
Previous page in input or status menus with more than one page	<Page Up>
Next page in input or status menus with more than one page	<Page Down>
Next field in input menus	<Tab>
Previous field in input menus	<Left Shift> + <Tab>

## CHAPTER 4: CONFIGURATION

**TABLE 4-7 (CONTINUED). KEYBOARD COMMANDS**

FUNCTION	MOUSE COMMAND
<ul style="list-style-type: none"> <li>◆ Switching in selection fields between two conditions (checkmark or not).</li> <li>◆ Open already marked fields with editing or selecting possibility.</li> </ul>	<Space>
<ul style="list-style-type: none"> <li>◆ In menus: Data saving</li> <li>◆ Menu item selection</li> </ul>	<Enter>
<ul style="list-style-type: none"> <li>◆ Leave tables</li> <li>◆ Jump from tables into the next field</li> </ul>	<Ctrl> + <Tab>
<ul style="list-style-type: none"> <li>◆ Leave tables</li> <li>◆ Jump from tables into the previous field</li> </ul>	<Ctrl> + <Left Shift> + <Tab>

NOTE: Various functions within the menus in the menu bar can be executed with the provided keyboard commands (e. g. press <Ctrl> + <S> to execute Save) that are listed to the right of the respective menu item.

### RELOAD OPTIONS

The information shown in the Java Tool can be reloaded in different ways.

- ◆ Via <F5> on the keyboard used
- ◆ Via Edit > Reload in the menu bar
- ◆ Via "Reload" Symbol in the symbol bar

### CONTEXT FUNCTION

The Java Tool offers several context functions that support user-friendly and effective operation. The context functions are described in the respective chapters.

- ◆ To execute a context function, use the right mouse button on the corresponding field and select the desired function.

### SORTING FUNCTION

Lists and tables in the Java Tool offer a sorting function for fast and smooth search.

1. Ascending: Click left mouse button once on the header of the column to be sorted. The sort status is indicated by an arrow that points upwards.
2. Descending: Click left mouse button once on the header of the column to be sorted. The sort is displayed by an arrow that points downwards.
3. Cancel sort: Click left mouse button once or twice on the head of the sorted column. The arrow displayed disappears.

### FILTER FUNCTION

Lists and tables in the Java Tool offer a filter function that allows a fast and smooth search.

1. To activate a filter, use the right mouse button to click on the header of the column to be filtered and select Set Filter.
2. Write the word or part of a word that has to be filtered into the header. The filter results are shown immediately.
3. To delete a filter, use the right mouse button to click on the header of the column that has to be filtered and select Clear Filter.



## CHAPTER 4: CONFIGURATION

NOTE: An active filter is indicated by an asterisk in the header.

The filter function is based on the functional principle of common web search engines.

### OFFLINE CONFIGURATION

Configuration and system settings via Java Tool can be changed in offline mode without a direct connection between matrix and Java Tool.

To activate a matrix configuration, proceed as follows:

1. Select File > Upload in the menu bar.
2. Enter the IP address of the matrix (see Section 4.2.3) and the name and password of the user authorization and select the storage location of the new configuration (default or config01-08) in the Select Configuration menu.
3. Select Matrix > Connect in the menu bar and enter the IP address of the matrix and the name and password for user authorization.
4. Select Administration > Activate Configuration in the task area and select the storage location that has been selected above.
5. Use the Activate button to open the selected configuration within the matrix.

The connection and the open tab will be closed and the matrix will be restarted.

NOTE During the activation of a configuration, the matrix is temporarily unavailable.

### ONLINE CONFIGURATION

Configurations and system settings can be also edited via Java Tool in online mode with an active connection between matrix and Java Tool.

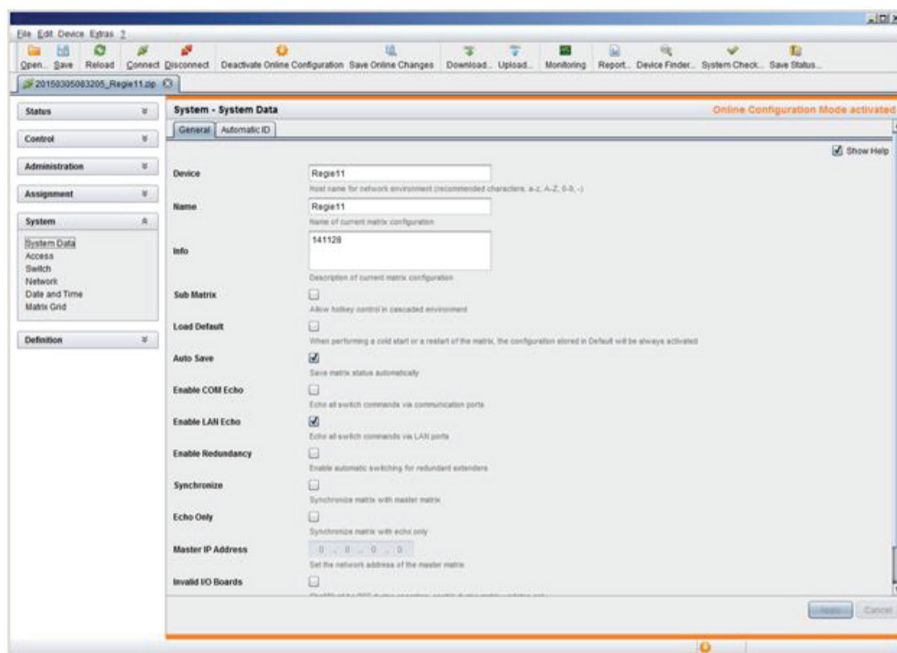


FIGURE 4-5. SYSTEM–SYSTEM DATA

## CHAPTER 4: CONFIGURATION

To edit a configuration in online mode, proceed as follows:

1. Select the menu item Matrix > Activate Online Configuration Mode. This setting will also be shown in the lower part of the working area.
2. Make any edits at the configuration and system settings and confirm them by pressing the Apply button. The changes will be applied immediately.
3. To deactivate the online mode, select the menu item Matrix > Deactivate Online Configuration Mode in the menu bar.

On newer firmware, you will need to enable the Java Tool using the local OSD from a receiver by logging into the Configuration Menu as admin, and go to System options. You will then find a setting to allow Java communication. Save the settings and the Java tool will be able to work using the Online Configuration Mode.

### OPTIONS MENU

The Java Tool can be adapted and customized by editing various default settings.

To activate or change the default settings, proceed as follows:

- ♦ Select Extras > Options in the menu bar. The Default Settings tab will open.

The following default settings parameters can be changed.

**TABLE 4-8. DEFAULT SETTINGS PARAMETERS OPTIONS**

OPTION	DESCRIPTION
IP / Hostname	Default IP address of the matrix required for connection
User	Default user name required for connection
Configuration Directory	Default directory for configuration files
Firmware Directory	Default directory for update files
Status Directory	Default directory for the firmware status
Import / Export Directory	Default directory for import and export files
Presets Directory	Default directory for macro files

To set various font sizes for the Java Tool, proceed as follows:

1. Select Extras > Options in the menu bar.
2. Open the Font tab.
3. Select the desired font size (normal or large).

### REPORT

The Java Tool is equipped with a report function that shows the current switching status and all relevant parts of the matrix configuration in a PDF file.

To create a report, proceed as follows:

1. Select File > Report... in the menu bar. A selection assistant will be opened.
2. Select contents that should be included in the report (Matrix View, EXT Units, CPU Devices, CON Devices and Users) and confirm with the Next > button.
3. Select the preferred location for storage of the report and confirm with the Finish button.

The report will be created as a PDF file.



## CHAPTER 4: CONFIGURATION

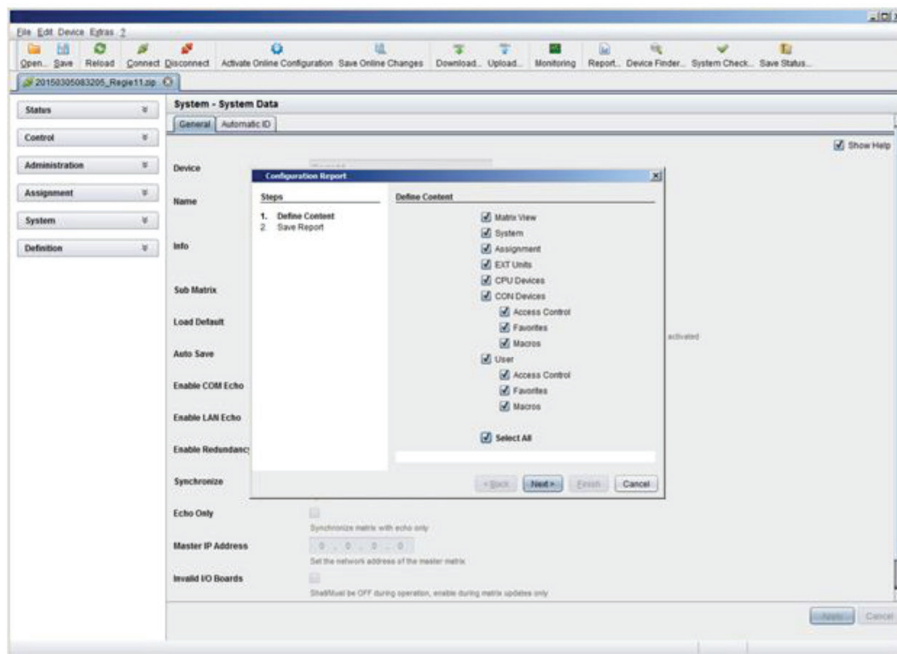


FIGURE 4-6. REPORT

NOTE: The report function can be used in both online or offline mode of the Java Tool.

### 4.2.3 CONTROL VIA SERIAL INTERFACE



The Modular KVM Matrix Switch operating system offers various functions for operation via a serial interface. There are telegrams for switching single or all connections available, both unidirectional and bidirectional. In addition, there are telegrams for an overall definition of the total switching status and for saving and loading such switching states.

The Modular KVM Matrix Switch optionally provides an echo of all affected switching operations via a serial interface or a network interface. This aids continuous tracking of a matrix configuration and enables your own applications to be updated.

As an additional application, you can switch matrix clones in parallel as synchronized matrices (Stacking) via a serial network interface.

## CHAPTER 4: CONFIGURATION

### 4.3 ASSIGNMENT

The Modular KVM Matrix Switch offers the option of a console-specific or a CPU-specific assignment.

- ♦ Assign virtual CPUs to real CPUs.
- ♦ Assign real consoles to virtual consoles.

#### 4.3.1 VIRTUAL CPU

You can assign virtual to real CPUs in this menu.

With this function, the effort of switching several consoles to the same CPU can be reduced. If several consoles are connected to a virtual CPU that is assigned to a real CPU, you only have to change the real CPU once and all consoles will receive the video signal of the new CPU.

You have the following options to access the menu:



#### OSD

- ♦ Select Assignments > Virtual CPU Devices in the main menu.

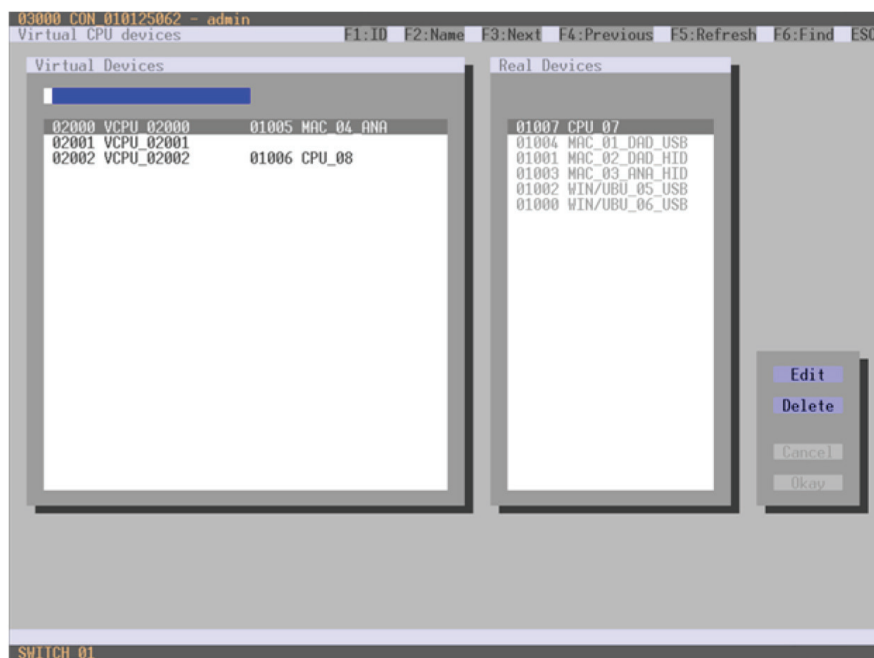


FIGURE 4-7. VIRTUAL CPU DEVICES



## CHAPTER 4: CONFIGURATION

For an assignment, proceed as follows:

1. Select the virtual CPU in the Virtual Devices list that has to be assigned to a real CPU.
2. Press the Edit button.
3. Select the CPU in the Real Devices list that has to be assigned to the selected virtual CPU.
4. Press the Okay button to confirm the assignment.

The assignment will be made.

NOTE: Only one virtual CPU can be assigned to a real CPU.

### JAVA TOOL

- ◆ Select Assignments > Virtual CPU Devices in the task area.

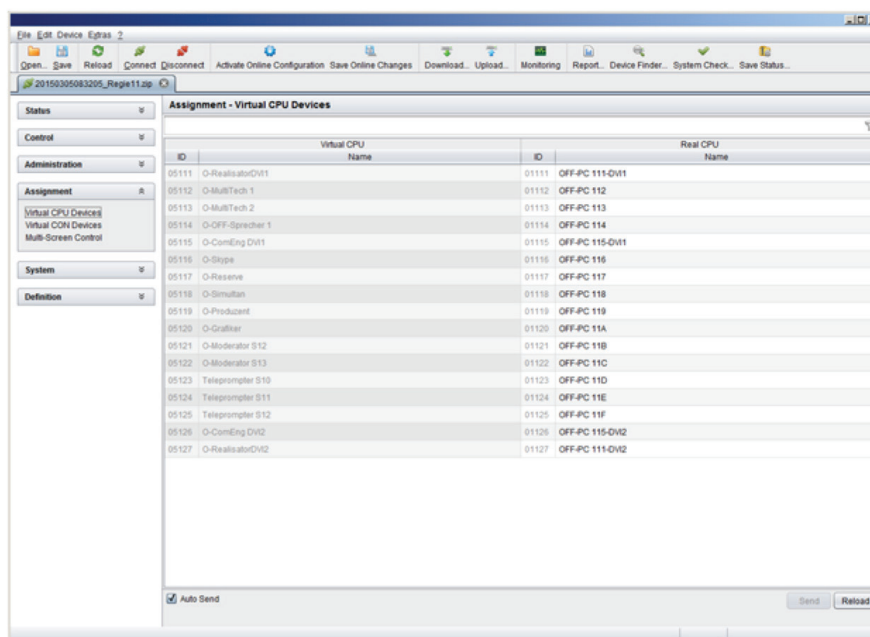


FIGURE 4-8. VIRTUAL CPU DEVICES

For an assignment, proceed as follows:

1. Select a virtual CPU in the Virtual CPU list.
2. Double-click in the Real CPU column to display a list of all available real CPUs.
3. Select a real CPU.

You can select the following buttons.

TABLE 4-9. BUTTONS

BUTTON	FUNCTION
Send	Send assignments to the matrix
Reload	Reload changes

## CHAPTER 4: CONFIGURATION

NOTE: When the Auto Send function in the left lower corner of the work area is ticked, switching operations will be completed immediately without user confirmation via the Send button.

The selection boxes in the Real CPU column contain a filter function for easy selection of a single CPU from a larger pool of CPUs (see Section 4.2.2).

The Java tool offers the option to switch directly from the Assignment menu to the Definition menu to check specific settings for the respective console or CPU.

- ◆ Use the right mouse button to select the respective console or CPU and select Open CON Device or Open CPU Device.


### 4.3.2 VIRTUAL CONSOLE

You can assign real consoles to virtual consoles in this menu.

This function reflects changes in permission made to virtual consoles onto real consoles.

Virtual consoles can be switched in the same way as real consoles. Real consoles that are assigned to a virtual console that is connected to a CPU will receive the video signal. The last-assigned console will also have control of the keyboard and mouse.

You have the following options to access the menu:

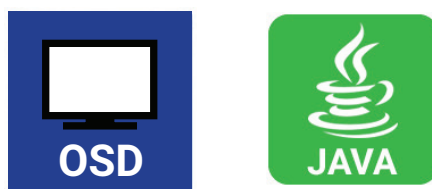

#### OSD

- ◆ Select Assignments > Virtual CON Devices in the main menu.

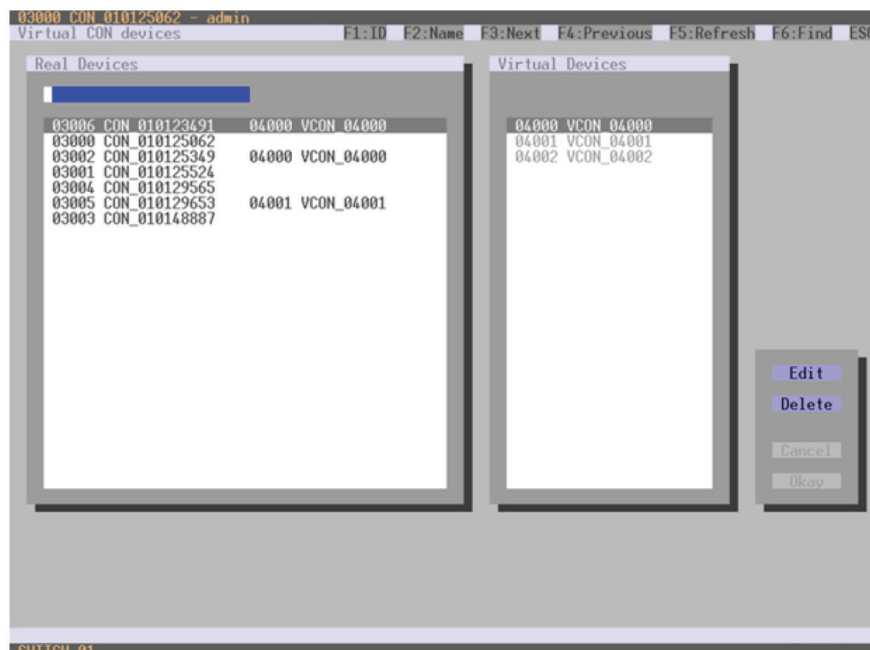


FIGURE 4-9. VIRTUAL CON DEVICES

## CHAPTER 4: CONFIGURATION

For an assignment, proceed as follows:

1. Select the real console in the Real Devices list that has to be assigned to a virtual CPU.
2. Press the Edit button.
3. Select the virtual console in the Virtual Devices list that has to be assigned to the selected real console.
4. Press the Okay button to confirm the assignment. The assignment will be made.

NOTE: A virtual console can be assigned to more than one real console.

### JAVA TOOL

- ◆ Select Assignments > Virtual CON Devices in the task area.

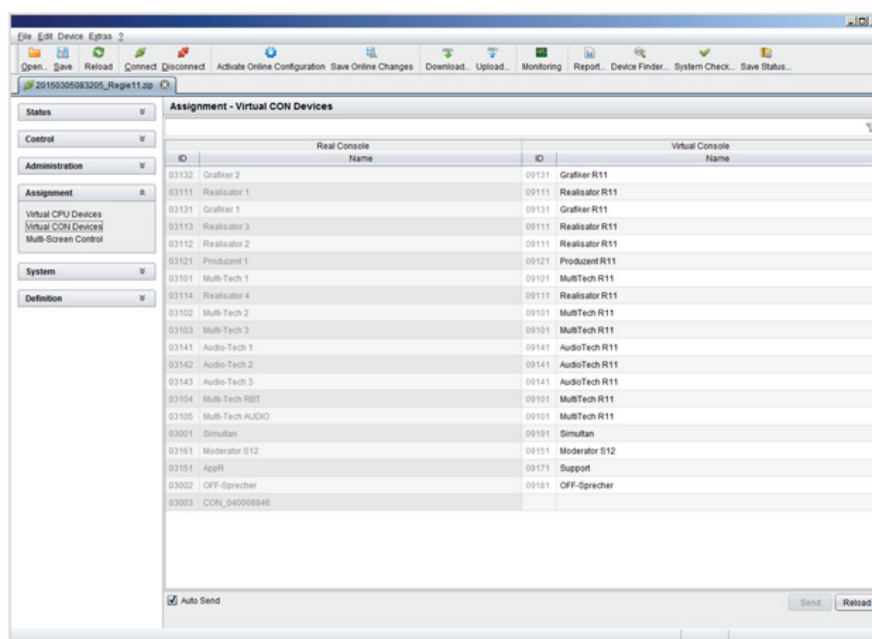


FIGURE 4-10. VIRTUAL CON DEVICES

To place an assignment, proceed as follows:

1. Select the required real console in the Real Console table.
2. Double-click in the Virtual Console column to display a list of all available virtual consoles.
3. Select the required virtual console.

You can select the following buttons:

TABLE 4-10. BUTTONS

BUTTON	FUNCTION
Send	Send assignments to the matrix
Cancel	Reject changes

NOTE: When the Auto Send function in the lower left corner of the work area is ticked, switching operations will be completed immediately without user confirmation via the Send button.

## CHAPTER 4: CONFIGURATION

The selection boxes in the Virtual Console column contain a filter function for easy selection of a single CON from a larger pool of CON devices (see Chapter 4.2.2).

### 4.4 SYSTEM SETTINGS

You have the option to configure the system settings of the Modular KVM Matrix Switch.

- ◆ The configuration of the system settings can only be done by users with administrator rights.

#### 4.4.1 SYSTEM DATA

The system configuration is set in this menu.

You have the following options to access the menu.



You can select the following settings.

TABLE 4-11. SYSTEM DATA SETTINGS

FIELD	SELECTION	DESCRIPTION
Device	Text	Enter the device name of the matrix (default: SWITCH_01)
Name	Text	Enter the name of the configuration that is used to save the current settings (default: Standard)
Info	Text	Additional text field to describe the configuration (default: Factory settings)
Sub Matrix	activated	If the matrix is defined as a sub matrix in the OSD, the user will lose control. Control can be recovered by using the keyboard command <Shift>, <Shift>, <s>, <o>. The OSD for the matrix that has been defined as a sub matrix will be reopened.
	deactivated	Function not active (default)
Load Default	activated	Starting the matrix after a restart or a switch-on with the default configuration
	deactivated	Starting the matrix after a restart or a switch-on with the last saved configuration (default).
Auto Save	activated	Save the current configuration of the matrix in the flash memory periodically. NOTE: During the save operation, the matrix will not operate. Saving takes place every 600 seconds, as long as changes of the configuration or switching operations have been executed in the meantime.
	deactivated	Function not active (default)

**TABLE 4-11 (CONTINUED). SYSTEM DATA SETTINGS**

FIELD	SELECTION	DESCRIPTION
Enable COM Echo	activated	Send all switching commands performed in the matrix as an echo via serial interface. NOTE: This function should be enabled when using a media control via serial interface.
	deactivated	Function not active (default)
Enable LAN Echo	activated	Send all switching commands performed in the matrix as an echo via LAN connection. NOTE: This function should be enabled when using a media control via LAN connection or when using stacking with two ore more matrices.
	deactivated	Function not active (default)
Enable Redundancy	activated	Automatically switch to the second link of a connected redundant CON Unit when losing the primary link of a CPU Unit (default). NOTE: This function will have to be activated for both matrices in a fully redundant setup.
	deactivated	Function not active
Synchronize	activated	Synchronize the slave matrix to the switch status of the master matrix.
	deactivated	Function not active (default)
Echo Only	activated	Synchronize the matrix according to the echo of a second matrix. NOTE: This is a bidirectional synchronization where both matrices have to be configured as Synchronize with the Master IP of the respective other matrix.
	deactivated	Function not active (default)
Master IP Address	Numerical value	Set the network address of the master matrix (default value: 000.000.000.000)
Invalid IO-Boards	activated	Keep I/O boards with incorrect or invalid firmware online in the matrix. NOTE: To keep an I/O board with wrong or damaged firmware online in the matrix, the maintenance mode of the matrix will be activated.
	deactivated	Shut down I/O boards with incorrect or invalid firmware automatically (default).
Hor. Mouse Speed 1/x	1–9	Adjustment of the horizontal mouse speed, 1 = slow, 9 = fast (default value: 4)
Ver. Mouse Speed 1/x	1–9	Adjustment of the vertical mouse speed, 1 = slow, 9 = fast (default value: 5)
Double Click Time	100–800	Adjustment of the time slot for a double-click (default value: 200 ms)
Keyboard layout	Region	Set the OSD keyboard layout according to the keyboard used (default: German (DE))

# CHAPTER 4: CONFIGURATION

## OSD

- ◆ Select Configuration > System in the main menu.

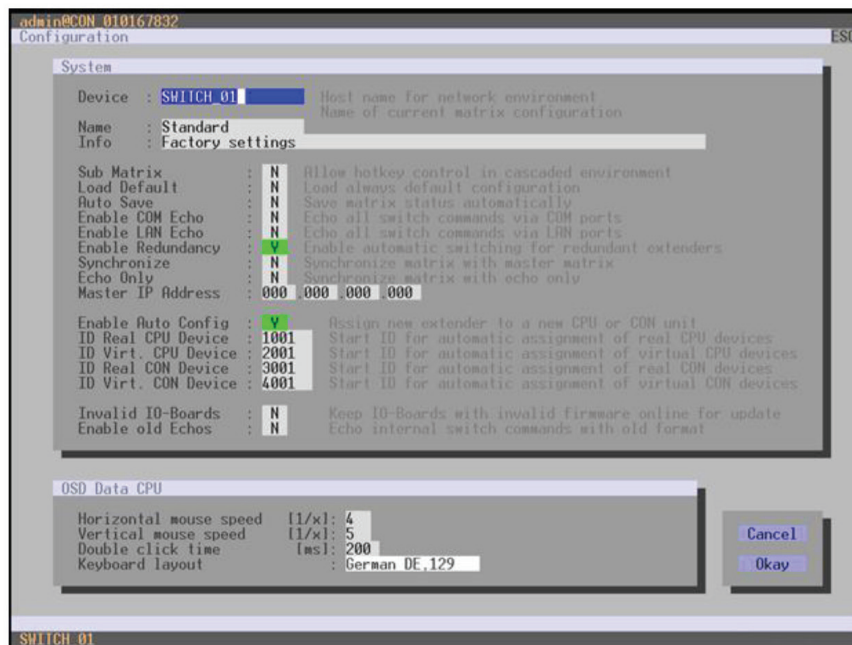


FIGURE 4-11. CONFIGURATION—SYSTEM

You can select the following buttons.

TABLE 4-12. BUTTONS

BUTTON	FUNCTION
Cancel	Reject changes
Save	Save changes



# CHAPTER 4: CONFIGURATION

## JAVA TOOL

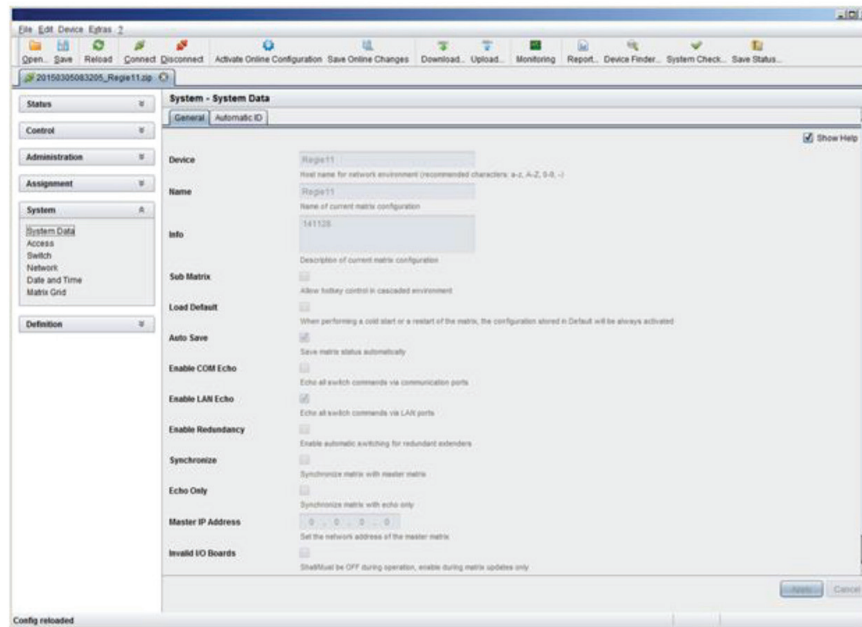


FIGURE 4-12. SYSTEM DATA

### 4.4.2 AUTOMATIC ID

Settings for automatic creation of CPU and CON Devices when a new extender unit is connected are made in this menu. You have the following options to access the menu.



## CHAPTER 4: CONFIGURATION

You can select the following settings.

TABLE 4-13. AUTOMATIC ID SETTINGS

FIELD	SELECTION	DESCRIPTION
Enable Auto Config	activated	Automatic creation of a new CPU or CON Device if new extender units are connected (default)
	deactivated	Function not active
ID Real CPU Device	Numerical value	Initial value of the automatic ID for real CPUs (default value: 1000)
ID Virtual CPU Device	Numerical value	Initial value of the automatic ID for virtual CPUs (default value: 2000)
ID Real CON Device	Numerical value	Initial value of the automatic ID for real CONs (default value: 3000)
ID Virtual CON Device	Numerical value	Initial value of the automatic ID for virtual CONs (default value: 4000)

### OSD

- ◆ Select Configuration > System in the main menu.

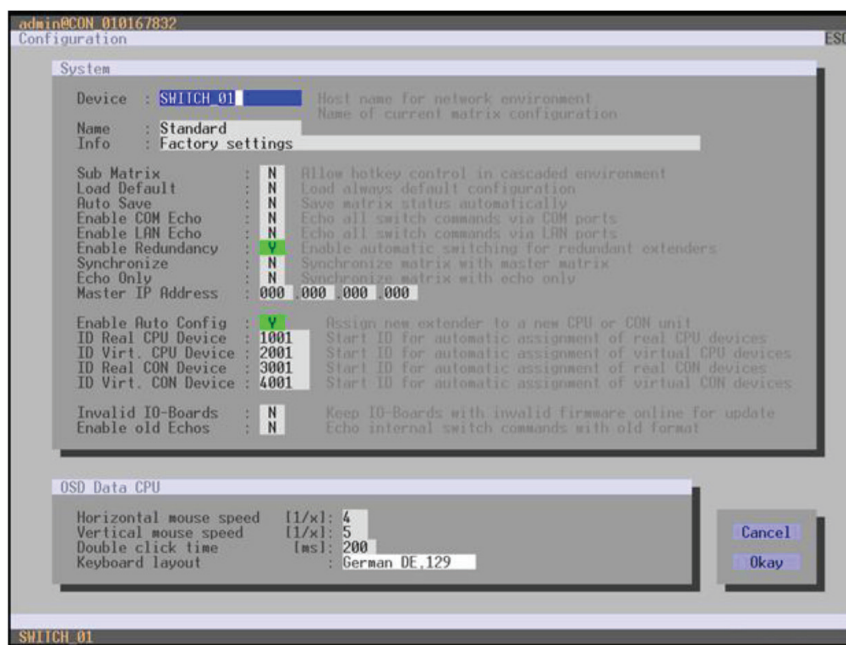


FIGURE 4-13. CONFIGURATION—SYSTEM

You can select the following buttons.

TABLE 4-14. BUTTONS

BUTTON	FUNCTION
Cancel	Reject changes
Save	Save changes



# CHAPTER 4: CONFIGURATION

## JAVA TOOL

- ◆ Select the Automatic ID tab in System > System Data.

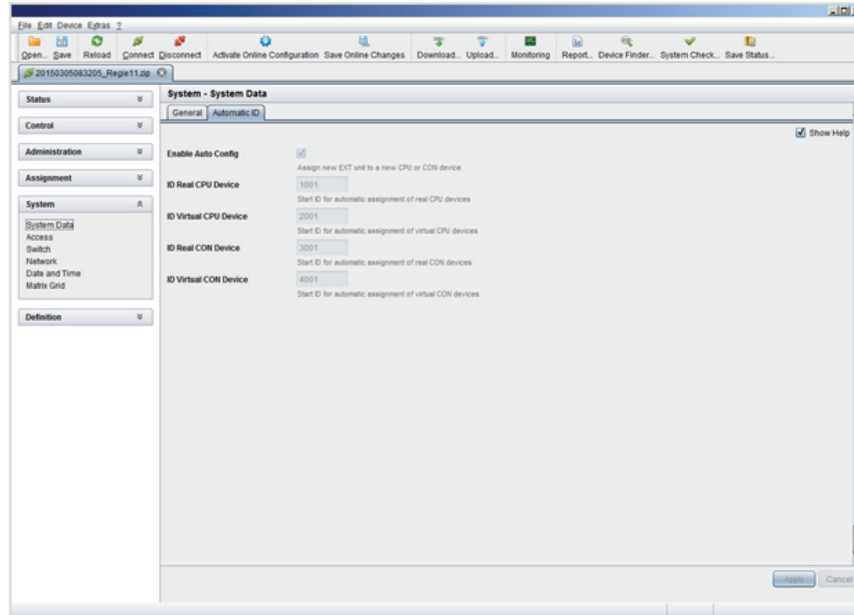


FIGURE 4-14. SYSTEM—AUTOMATIC ID

## CHAPTER 4: CONFIGURATION

### 4.4.3 ACCESS

The access configuration is set in this menu.

You have the following options to access the menu.



You can select the following settings.

**TABLE 4-15. ACCESS SETTINGS**

FIELD	SELECTION	DESCRIPTION
Force User Login	activated	The user has to login with a user name and a password once to enter the OSD. The user remains logged in until he explicitly logs out or an auto logout occurs.  NOTE: When using the Force User Login function, console favorites and console macros still remain active.
	deactivated	Function not active (default)
Enable User ACL	activated	CPU access is restricted according to the permissions in the ACL (Access Control List). <ul style="list-style-type: none"> <li>♦ <b>User login is required.</b></li> <li>♦ <b>Switching by keyboard Hotkeys requires a prior login.</b></li> </ul>
	deactivated	Function not active (default)
Enable Console ACL	activated	CPU access is restricted according to the permissions in the respective Console ACL (Access Control List). No login required.
	deactivated	Function not active
Enable new User	activated	Newly created users automatically receive access to all CPUs
	deactivated	Function not active (default)
Enable new CON	activated	Newly created CON Devices automatically receive access to all CPUs
	deactivated	Function not active (default)
Auto Disconnect	activated	Upon opening the OSD, the console will be automatically disconnected from the current CPU.
	deactivated	Function not active (default)
OSD Timeout	0-999 seconds	Period of inactivity after which OSD will be closed automatically. <ul style="list-style-type: none"> <li>♦ <b>Select 0 seconds for no timeout</b></li> </ul> (default: 0 seconds)
Auto Logout	0-999 minutes	Period of inactivity of a logged-in user at a console after which he will be automatically logged out. There may be a disconnect because of the logout, depending on the defined rights in each CON and user ACL. <ul style="list-style-type: none"> <li>♦ <b>Select 0 minutes for an automatic user logout when leaving OSD.</b></li> <li>♦ <b>Using the setting -1 allows the user to be logged in permanently, until a manual logout is executed.</b></li> <li>♦ <b>The timer is not active as long as the OSD is open</b></li> </ul> (default: 0 minutes)

## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Configuration > Access in the main menu.

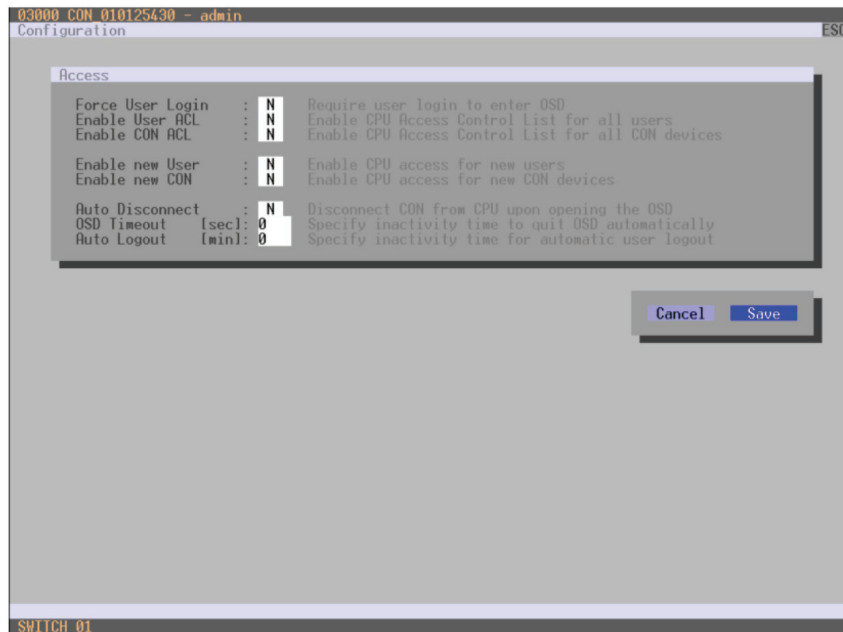


FIGURE 4-15. CONFIGURATION—ACCESS

You can select the following buttons.

TABLE 4-16. BUTTONS

BUTTON	FUNCTION
Cancel	Reject changes
Save	Save changes

## CHAPTER 4: CONFIGURATION

### JAVA TOOL

- ◆ Select System > Access in the task area.

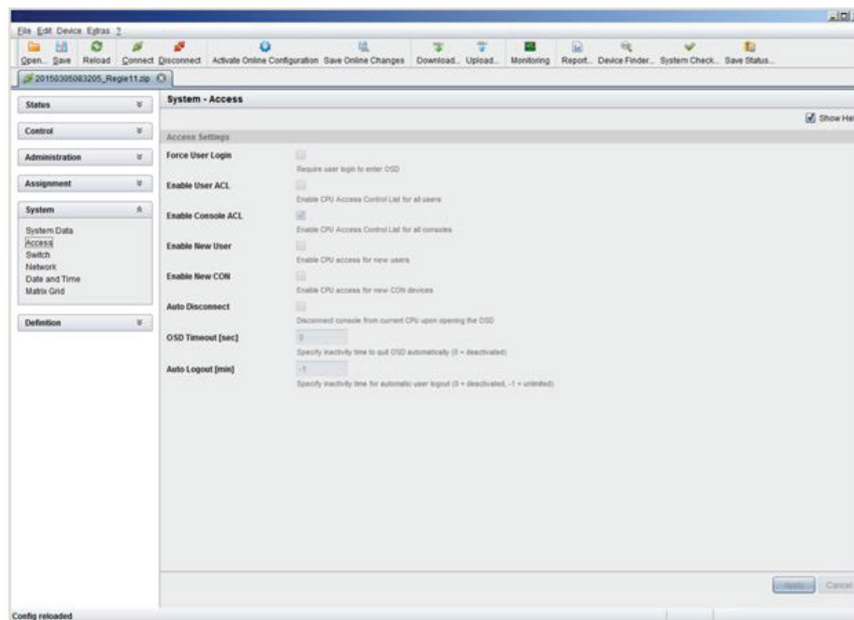


FIGURE 4-16. SYSTEM—ACCESS

### 4.4.4 SWITCH

The configuration of the switching parameters is set in this menu.

You have the following options to access the menu.



You can select the following settings.

**TABLE 4-17. SWITCH SETTINGS**

FIELD	SELECTION	DESCRIPTION
Video Sharing	activated	The user can switch to any CPU as an observer, including ones that are already assigned to another user (observer is without keyboard/mouse access). NOTE: Switch with the <Space> key, not the <Enter> key. ♦ <b>The operator will not be informed if further users connect as an observer to the CPU that is connected to his console.</b>
	deactivated	Function not active (default)
Force Connect	activated	The user can connect to every single CPU as an operator, including ones that are related to another user. NOTE: The previous user is set to video-only status. ♦ <b>To share K/M control, Force Connect has to be activated.</b>
	deactivated	Function not active (default)
Force Disconnect	activated	Extension of Force Connect: If the user connects as an operator to a CPU already related to another user, the previous user will be disconnected. NOTE: To share K/M control Force Disconnect has to be deactivated.
	deactivated	Function not active (default)
CPU Auto Connect	activated	If a console is not connected to a CPU, you can establish an automatic connection to the next available CPU by pressing any key or mouse button.
	deactivated	Function not active (default)
CPU Timeout	0–999 minutes	Period of inactivity after which a console will be automatically disconnected from its current CPU (default value: 0 minutes)
Keyboard Connect	activated	Activate request of K/M control by keyboard event (key will be lost)
	deactivated	Function not active (default)
Mouse Connect	activated	Activate request of K/M control by mouse event
	deactivated	Function not active (default)
Release Time	0–999 seconds	Period of inactivity of a connected console after which K/M control can be requested by other consoles connected to the CPU. NOTE: Set "0" for an immediate transfer in real-time. Only one console can have keyboard and mouse control at the same time. The other consoles that are connected to the same CPU have a video only status (default value: 10 seconds)

NOTE: If the Keyboard Connect and/or Mouse Connect options are activated, the Release Time condition will have to be met until a new user will gain control.

## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Configuration > Switch in the main menu.

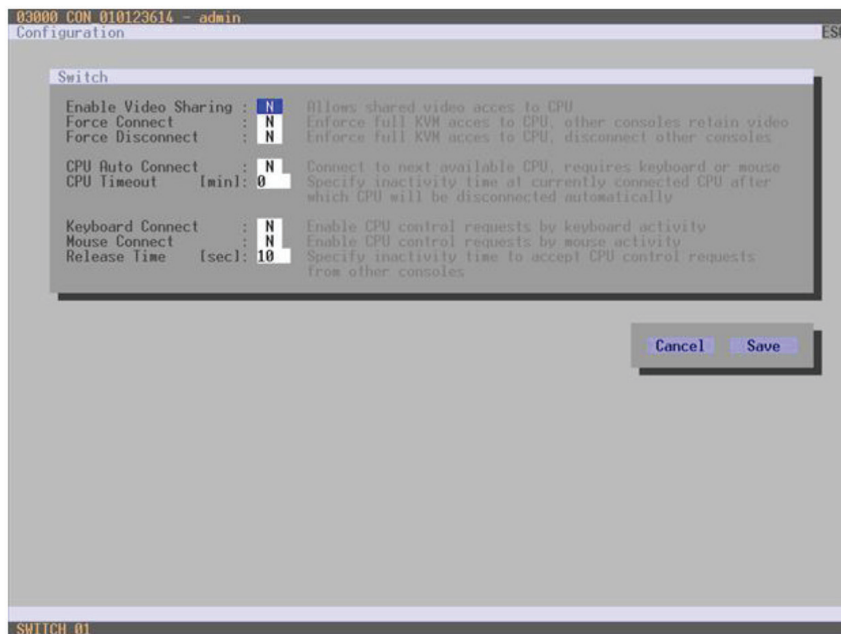


FIGURE 4-17. CONFIGURATION—SWITCH

You can select the following buttons.

TABLE 4-18. BUTTONS

BUTTON	FUNCTION
Cancel	Reject changes
Save	Save changes

## JAVA TOOL

- ◆ Select System > Switch in the task area.

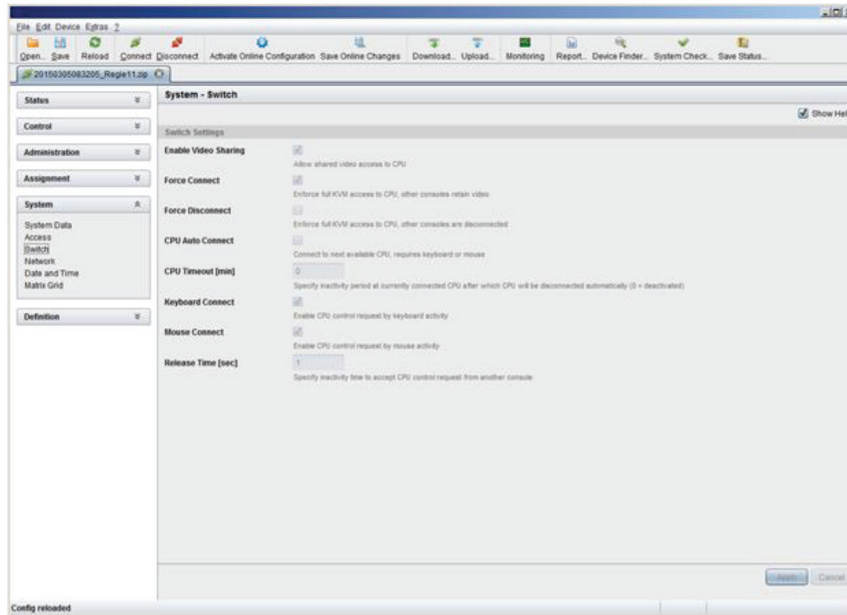


FIGURE 4-18. SYSTEM—SWITCH

## CHAPTER 4: CONFIGURATION

### 4.4.5 NETWORK

The network configuration is set in this menu.

You have the following options to access the menu.



You can select the following settings.

**TABLE 4-19. NETWORK SETTINGS**

FIELD	SELECTION	DESCRIPTION
DHCP	activated	The network settings are automatically supplied by a DNS server NOTE: If DHCP is activated and there is no physical network connection available, the boot times might increase.
	deactivated	Function not active (default)
IP address	Byte	Input of the IP address, if DHCP is not active (default: 192.168.100.99)
Subnet Mask	Byte	Input of the subnet mask in the form "255.255.255.0" if DHCP is not active (default: 255.255.255.0)
Gateway	Byte	Input of the subnet mask in the form "192.168.1.1" if DHCP is not active
API Service	activated	LAN interface at the Modular KVM Matrix Switch activated for access via Java tool (API service port 5555)
	deactivated	Function not active
FTP Server	activated	FTP server for transmission of configuration files activated
	deactivated	Function not active
Syslog #1/#2	activated	Syslog server for status request is active
	deactivated	Function not active (default)
Syslog Server #1/#2	Byte	Input of the IP address of the Syslog servers in the form "192.168.1.1" and of the Syslog port (default: 514)
LDAP	activated	LDAP for the request of information from a user administration is active
	deactivated	Function not active (default)
LDAP Server	Byte	Input of the IP address for the LDAP-Servers in the form "192.168.1.1" and the LDAP port (Default: 389)
LDAP Base DN	Text	Input of the LDAP Base DN according to the existing structure of the user directory
Trace	DEB	Activate debug messages in Trace (default: NO) NOTE: The debug messages are exclusively for matrix diagnostics. They only should be activated after consultation with the manufacturer. Otherwise, increased data traffic might limit the performance of the CPU board.
	INF	Activate information messages in Trace (default: NO)



**TABLE 4-19 (CONTINUED). NETWORK SETTINGS**

FIELD	SELECTION	DESCRIPTION
Trace (continued)	NOT	Activate notification messages in Trace (default: YES)
	WAR	Activate warning messages in Trace (default: YES)
	ERR	Activate error messages in Trace (default: YES)
Syslog #1/#2	DEB	Activate debug messages in Syslog (default: NO)  NOTE: The debug messages are exclusively for matrix diagnostics. They only should be activated after consultation with the manufacturer. Otherwise, increased data traffic might limit the performance of the CPU board.
	INF	Activate information messages in Syslog (default: NO)
	NOT	Activate notification messages in Syslog (default: YES)
	WAR	Activate warning messages in Syslog (default: YES)
	ERR	Activate error messages in Syslog (default: YES)

NOTE: Activate the modified network parameters by restarting the matrix.

CAUTION: Consult your system administrator before modifying the network parameters. Otherwise, unexpected results and failures can occur in combination with the network.

## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Configuration > Network in the main menu.

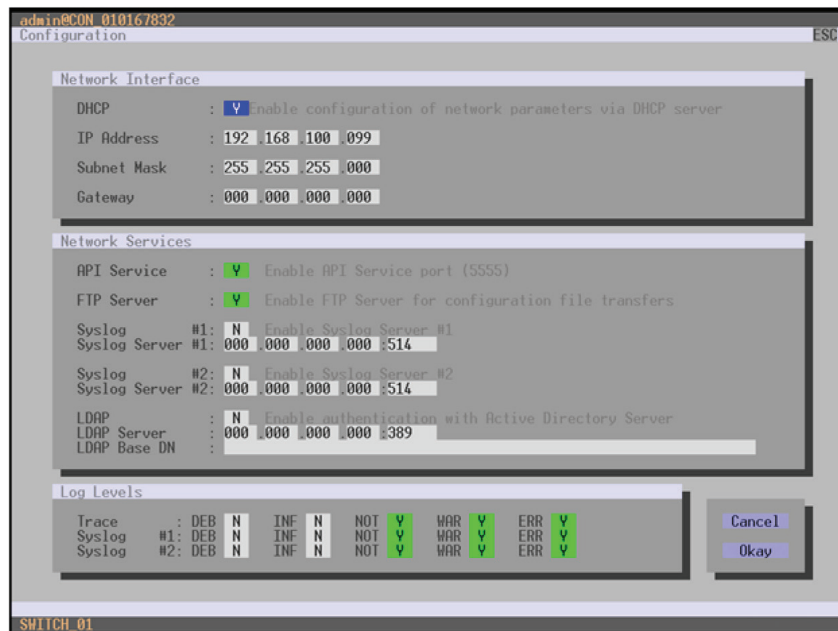


FIGURE 4-19. CONFIGURATION—NETWORK

You can select the following buttons.

TABLE 4-20. BUTTONS

BUTTON	FUNCTION
Cancel	Reject changes
Save	Save changes

## CHAPTER 4: CONFIGURATION

### RELEASE OF NETWORK PORTS

The following ports are used by the matrix depending on the configuration and have to be released at the security gateway, if necessary. The ports only will have to be released if you want to use the respective function.

**TABLE 4-21. NETWORK PORTS**

FUNCTION	PORT
FTP	21
DNS	53
SNTP	123
SNMP	161/162
LDAP	389
Syslog	514
API	5555
Broadcast	5556
Matrix-Grid	5557

### JAVA TOOL

- ◆ Select System > Network in the task area.

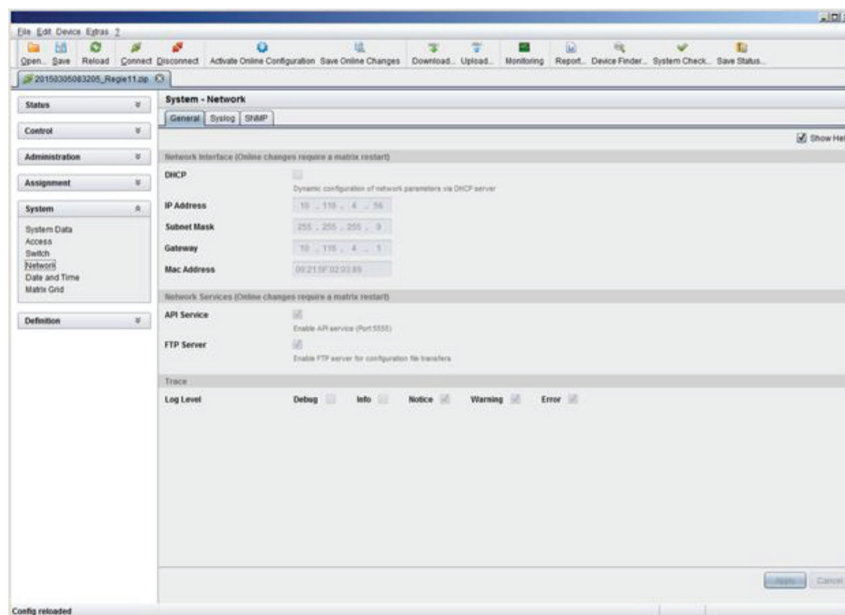


FIGURE 4-20. SYSTEM-NETWORK

## CHAPTER 4: CONFIGURATION

### 4.4.6 DATE AND TIME

Date and Time are set in this menu, based on Simple Network Time Protocol (SNTP).

You have the following options to access the menu.



You can select the following settings.

**TABLE 4-22. DATE AND TIME SETTINGS**

FIELD	SELECTION	DESCRIPTION
SNTP Client	activated	Enable network time server synchronization
	deactivated	Function not active (default)
SNTP Server	Byte	Input of the SNTP server IP address (default: 000.000.000.000)
Time Zone	Region	Set your specific time zone
Month	1–12	Enter month
Date	1–31	Enter date
Year	1–99	Enter year
Day	1–7	Enter day of week
Hours	0–23	Enter hour
Minutes	0–59	Enter minutes
Seconds	0–59	Enter seconds

**NOTE:** This is date format according to the English notation.

## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Configuration > Date + Time in the main menu.

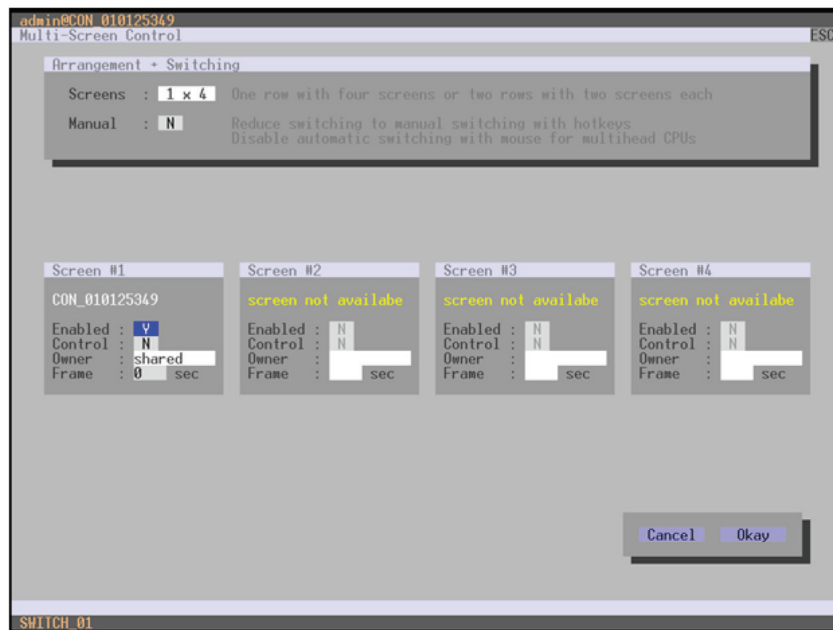


FIGURE 4-21. CONFIGURATION—DATE + TIME

To configure a time server, follow these steps:

1. Set the SNTP Client option to Y (Yes).
2. Enter the IP address of your SNTP server in the SNTP Server field.
3. Select your time zone in the Time Zone field.
4. Press the Okay button to confirm your settings.
5. Restart the matrix. The system time will be now provided by the SNTP server.

To set the real time clock without using SNTP, follow these steps:

1. Set the current date in the Date field.
2. Set the current Day in the Day field.
3. Set the current time in the Time field.
4. Press the RTC button to confirm your settings.

## CHAPTER 4: CONFIGURATION

### JAVA TOOL

- ◆ Select System > Date + Time in the main menu.

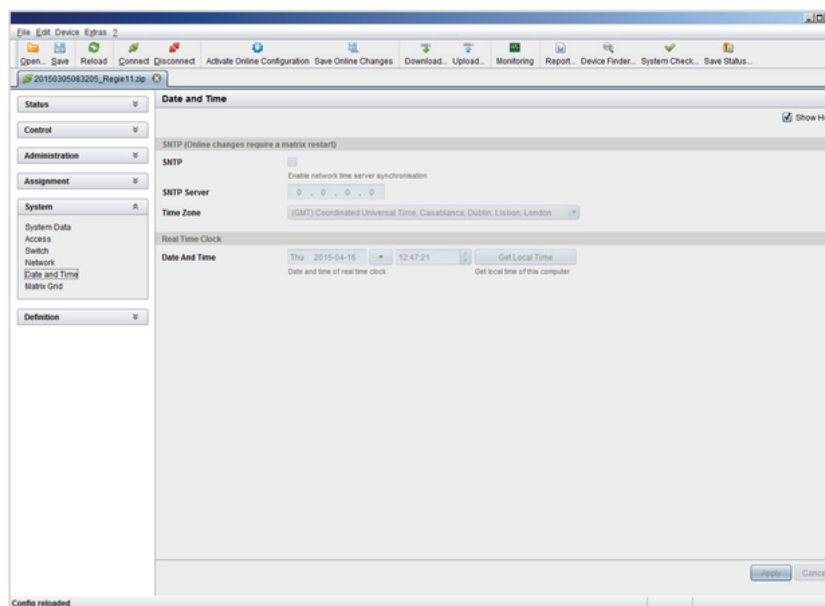


FIGURE 4-22. CONFIGURATION—DATE + TIME

To configure a time server, follow these steps:

1. Enable SNTP option.
2. Enter the IP address of your SNTP server in the SNTP Server field.
3. Select your time zone in the Time Zone field.
4. Press the Apply button to confirm your settings.
5. Restart the matrix. The system time will be now provided by the SNTP server.

To set the real time clock without using SNTP, follow these steps:

1. Set the current date in the Date and Time field.
2. Set the current time in the Day and Time field.
3. Press the Apply button to set the system time.
4. Option: If you want to receive the time from your currently used computer, press the Get Local Time button.

## CHAPTER 4: CONFIGURATION

### 4.5 USER SETTINGS

You have the option to configure the following user settings.

#### 4.5.1 USER

New users and their user settings and permissions are set in this menu.

You have the following options to access the menu.



You can select the following settings.

TABLE 4-23. USER SETTINGS

FIELD	SELECTION	DESCRIPTION
Name	Text	User name (case-sensitive)
Password	Text	User password (case-sensitive)
Repeat Password	Text	Repeat user password (case-sensitive)
FTP	activated	Access permission via FTP. This setting is necessary for file access from the Java tool or any web browser.
	desactivated	Function not active (default).
Power User	activated	<ul style="list-style-type: none"> <li>◆ User has user rights</li> <li>◆ Permission to switch consoles to CPUs in Extended Switching according to the CON or User ACL</li> </ul>
	desactivated	Function not active
Super User	activated	Permission to switch any console to any CPU in Extended Switching.
	desactivated	Function not active
Administrator	activated	<ul style="list-style-type: none"> <li>◆ Permission for system configuration and all switching operations</li> <li>◆ User has administrator rights</li> <li>◆ This setting is required for an online connection with the Java tool</li> </ul>
	desactivated	Function not active
LDAP User	activated	Permission to login via domain user
	desactivated	Function not active

## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Configuration > User in the main menu.

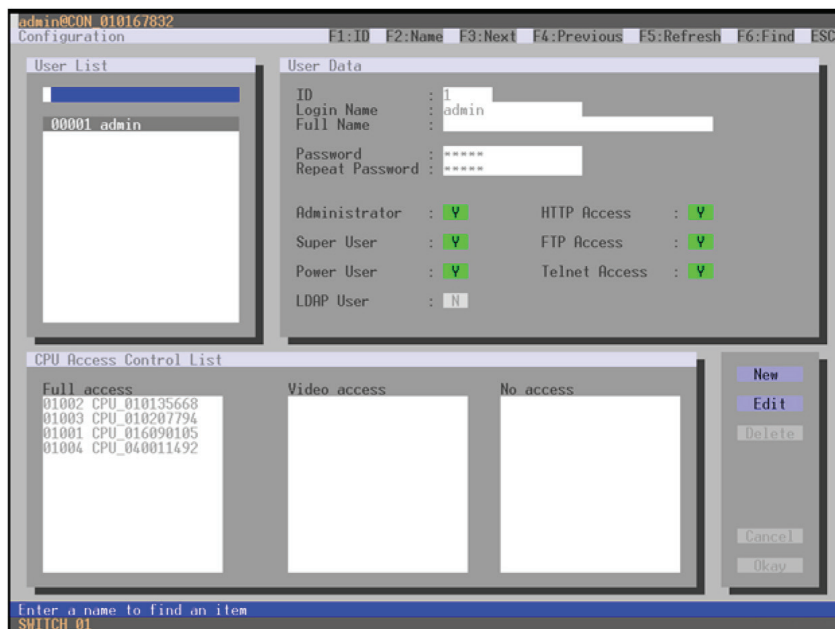


FIGURE 4-23. CONFIGURATION—USER

You can select the following buttons.

TABLE 4-24. BUTTONS

BUTTON	FUNCTION
New	Create a new user
Edit	Edit an existing user
Delete	Delete an existing user
Cancel	Reject changes
Save	Save changes



## CHAPTER 4: CONFIGURATION

### JAVA TOOL

- ◆ Select Definition > User in the task area.

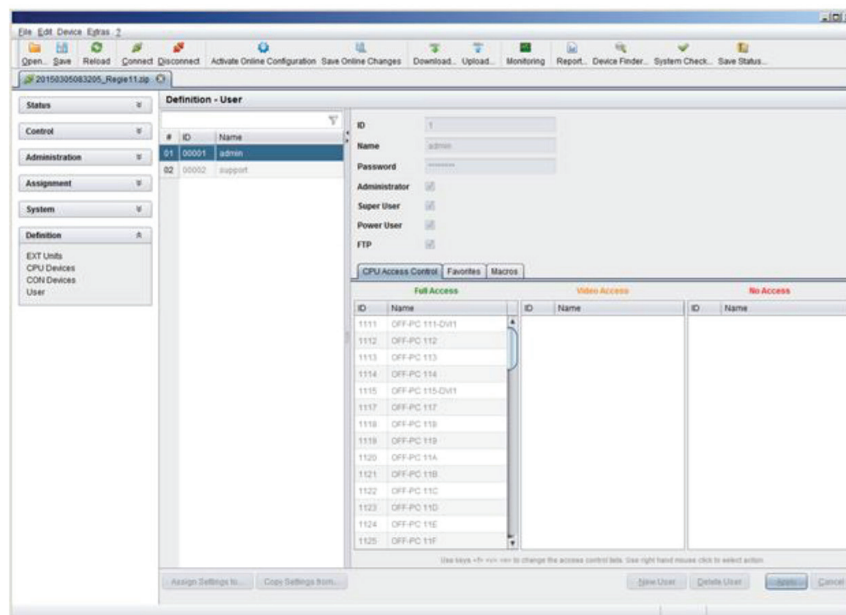


FIGURE 4-24. DEFINITION—USER

You can select the following buttons.

TABLE 4-25. BUTTONS

BUTTON	FUNCTION
New	Open a new user configuration
Delete	Delete an existing user
Apply	Create a new user account
Cancel	Reject changes

To configure user access rights for CPUs, follow these steps.

1. Select a user in the User list.
2. Click the right mouse button once on a CPU in one of the respective access lists (Full Access, Video Access and No Access). Two lists for selection will appear in which you can move the respective CPU and change the access rights.
3. Confirm the configuration with the Apply button.

To create a new user, follow these steps.

1. Press the New button.
2. Select a template of an existing user if applicable (Choose template).
3. Press the OK button.

## CHAPTER 4: CONFIGURATION

4. Set a user name.
5. Set a password.
6. Set general access permissions.
7. Set user permissions for CPU access (paste function).
8. Set user favorites for OSD access.
9. Press the Apply button to save the new user settings.

You can select the following keyboard commands.

**TABLE 4-26. KEYBOARD COMMANDS**

FUNCTION	KEYBOARD COMMAND
Add CPU to Full Access list	<F>
Add CPU to Video Access list	<V>
Add CPU to No Access list	<N>

### 4.5.2 FAVORITE LIST USERS

Individual favorite lists of CPUs that will be switched frequently can be created for different users in this menu. A favorite list can contain up to 16 different CPUs.

The switching of the favorites is done via hotkey using the keyboard (see Section 5.1.1).

You have the following options to access the menu.



## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Assignments > User Favorites in the main menu.

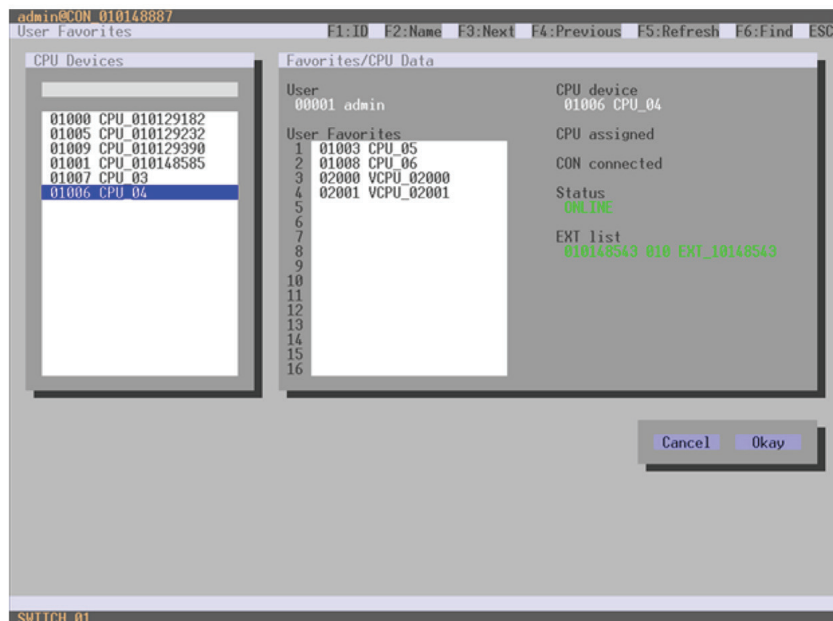


FIGURE 4-25. ASSIGNMENTS—USER FAVORITES

To create a favorite list for your user, proceed as follows:

1. Select a CPU to be moved to the favorite list on the CPU Devices list. Press <a> to move a CPU Device to the favorite list. Press <r> to remove a CPU.
2. The order of the CPU Devices within the favorite list can be changed by pressing <+> and <->.
3. Press the Save button to save the settings.

## CHAPTER 4: CONFIGURATION

### JAVA TOOL

Select the respective user in the working area of the User menu for the favorite list and open the Favorites tab.

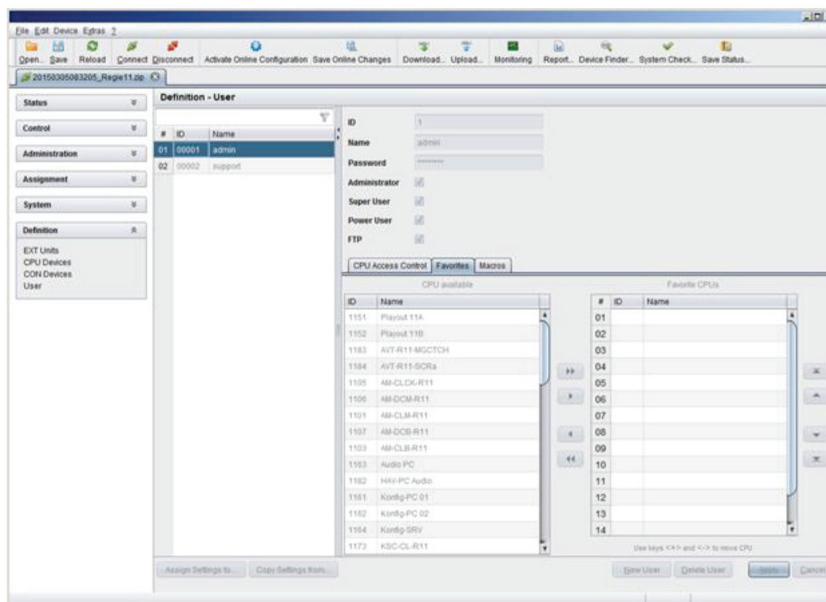


FIGURE 4-26. DEFINITION—USER

To create a favorite list for any user, proceed as follows:

1. Select the CPUs in the CPU available list that should be added to the favorite list (CPU assigned). By pressing the <Ctrl> at the same time, more than one CPU Device can be marked.
2. Press the > button to move the marked CPU Devices to the favorite list. If you press the >> button, the first eight CPU Devices from the CPU available list will be moved to the favorite list (CPU assigned).
3. The order of marked CPU Devices within the favorite list can be changed by pressing <+> and <->.
4. To remove marked CPU Devices from the favorite list, press the < button. If you press the << button, all CPU Devices will be removed from the favorite list.

### 4.5.3 USER MACROS

In this menu, macro commands for switching, disconnection or user administration can be created. Macro commands are created for each user separately.

A macro can execute up to 16 switching commands successively.

The execution of the macros is done via hotkey and the <F1>-<F16> function keys (see Section 5.1.3).

To execute user macros, the user has to be logged in to the matrix.

## CHAPTER 4: CONFIGURATION

You can select the following settings.

**TABLE 4-27. USER MACROS SETTINGS**

FIELD	SELECTION	DESCRIPTION
Function (01–16)	Connect (P1 = CON, P2 = CPU)	Set bidirectional connection from console P1 to CPU P2
	Connect Video (P1=CON, P2=CPU)	Set video connection from console P1 to CPU P2
	Disconnect (P1=CON)	Disconnect console P1
	Logout User	Logout current user
	Set Real CPU (P1=VCPU, P2=RCPU)	Assign a virtual CPU to a real CPU
	Set Virtual CON (P1=RCON, P2=VCON)	Assign a real console to a virtual console
	Push (P1=CON)	The user's KVM connection is forwarded to console P1 and is changed to a video only connection.
	Push Video (P1=CON)	The video signal of the current connection (KVM or video only) is forwarded to console P1. The user's connection remains unchanged (KVM or video only).
	Get (P1=CON)	The user's console gets a KVM connection to the CPU that is currently connected to console P1. The connection of console P1 is changed into a video only connection.
	Get Video (P1=CON)	The user's console gets a video only connection to the CPU that is currently connected to console P1. The connection of console P1 remains unchanged (KVM or video only).
	Login User console P2	Login a certain user P1 at console P2
P1	CON or CPU Device	Name of CON or CPU Device
P2	CPU or CPU Device	Name of CPU or CPU Device

You have the following options to access the menu.



## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Configuration > User Macros in the main menu and select the user for which a user macro will be created.

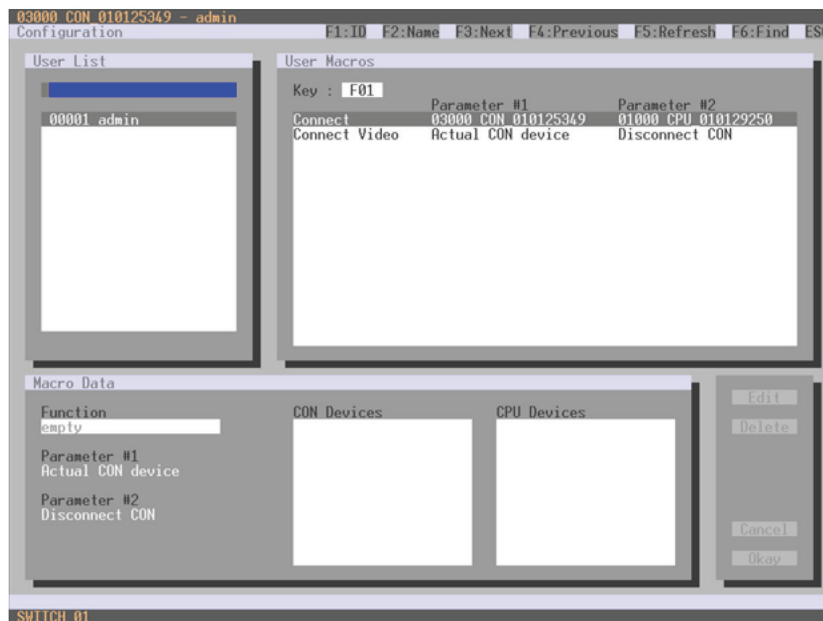


FIGURE 4-27. CONFIGURATION—USER MACROS

To create a macro for the selected user, proceed as follows:

1. Select in the Key field the function key (F1–F16) for which a macro has to be created.
2. Select the position in the Key list where a macro command is to be inserted.
3. Select a macro command in the Macro Data field.
4. Set the necessary parameters P1 and P2 (e.g., CON Devices or CPU Devices) for the selected macro command.
5. Confirm your selection by pressing <Enter> and repeat the process for further macro commands, if necessary.

## CHAPTER 4: CONFIGURATION

### JAVA TOOL

Select in the working area of the Definition > User menu the user for which macros are to be created and open the Macros tab.

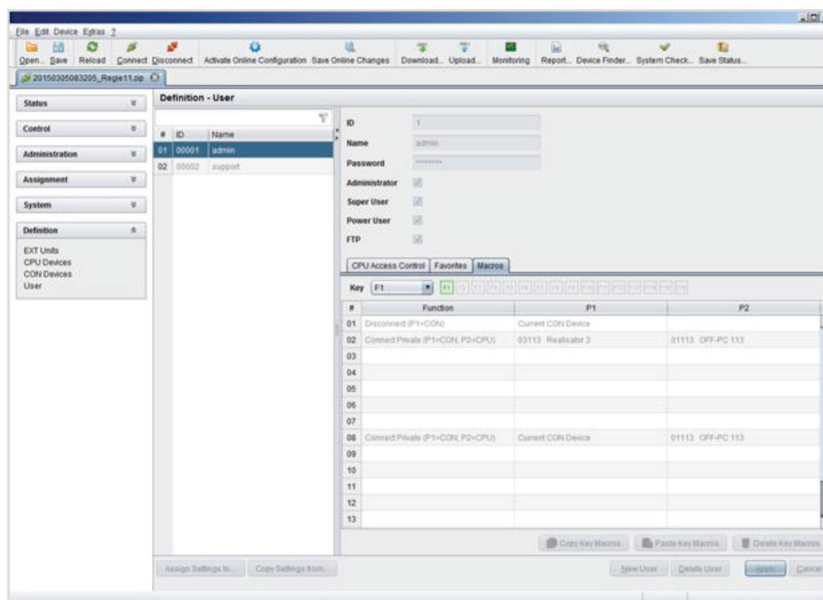


FIGURE 4-28. DEFINITION—USER

To create a macro for the selected user, proceed as follows:

1. Select in the Key field the function key (F1–F16) for which a macro has to be created.
2. Select in the Function column the commands that should be part of the macro. The selection list is opened by a double-click on the empty fields.
3. Select in the P1 and P2 columns the respective parameters for the macro functions (e.g. corresponding consoles and CPUs).
4. Confirm your selections by pressing the Apply button.

For an efficient macro configuration, the following context functions are available:

- ♦ Via right-click on the Macros tab, macros can be assigned to other users by using the Assign Macros to ... function and can be copied from other users by using the Copy Macros from ... function.
- ♦ Via right-click on the macro list, macros of the selected key can be copied into the cache by using the Copy Key Macros function. You can paste the macros from the cache into a key by using the Paste Key Macros function and you can reset all macros of the selected key by using the Reset Key Macros function.

## CHAPTER 4: CONFIGURATION

### 4.5.4 USER GROUPS

---

The KVM matrix allows you to bundle the users of a configuration into User Groups. The groups can be used to logically or thematically subdivide the users. As an application example, you can group all power users together.

The configuration of User Groups at the same times increases the clarity of the configuration.

You have the following options to access the menu:



#### OSD

To create and configure a User Group, proceed as follows:

1. Select Configuration > User in the main menu.
2. Press the New G button.
3. Enter a group name into the field Name.
4. Press the Okay button.

The group is created now.

To assign a user to a group, proceed as follows:

1. Select Configuration > User in the main menu.
2. Select the user you want to assign to a User Group.
3. Select the User Group for the assignment in the field Member of Group using the cursor up and down keys.
4. Press the Okay button.

The user is assigned to the User Group now.

#### Java-Tool

To create and configure a User Group, proceed as follows:

1. Select the User Groups tab in the Definition > Groups menu of the task area.
  2. Press the New Group button.
- A popup window will open.
3. Select Create a standard Group in the popup window and press Ok.
  4. Enter a group name into the Name field.
  5. Press the Apply button.

The group is created now.

To assign a user to a group, proceed as follows:

1. Select the User Groups tab in the Definition > Groups menu of the task area.
2. Select the User Group to be assigned with a user.
3. Select a user in the CPU/Group available list that you want to assign to the User Group.
4. Move the highlighted user to the CPU/Group assigned list.
5. Press the Okay button.

The user is assigned to the User Group now.



## CHAPTER 4: CONFIGURATION

### 4.6 EXTENDER SETTINGS

All extender units are managed in this menu. This includes the creation of new extender units and the deletion of existing extender units.

The extender unit describes the connection of an physical extender to the matrix. Every extender board with a direct cable connection to the matrix is recognized as an extender unit. Dual-Head KVM extenders will be recognized as two independent extender units.

NOTE: KVM Extenders automatically create extender units inside the matrix.

You have the following options to access the menu.



You can select the following settings.

**TABLE 4-28. EXTENDER SETTINGS**

FIELD	SELECTION	DESCRIPTION
ID	Text	Numerical value of the extender ID (KVM extenders: ID is provided by extender unit [Serial No.] and cannot be changed)
Name	Text	Name of the extender unit
Fixed	activated	Create an extender unit with a fixed port assignment (default)
	deactivated	Function not active.
Port	1–288 (depending on the matrix)	Port number of the extender unit

## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Configuration > EXT Units in the main menu.

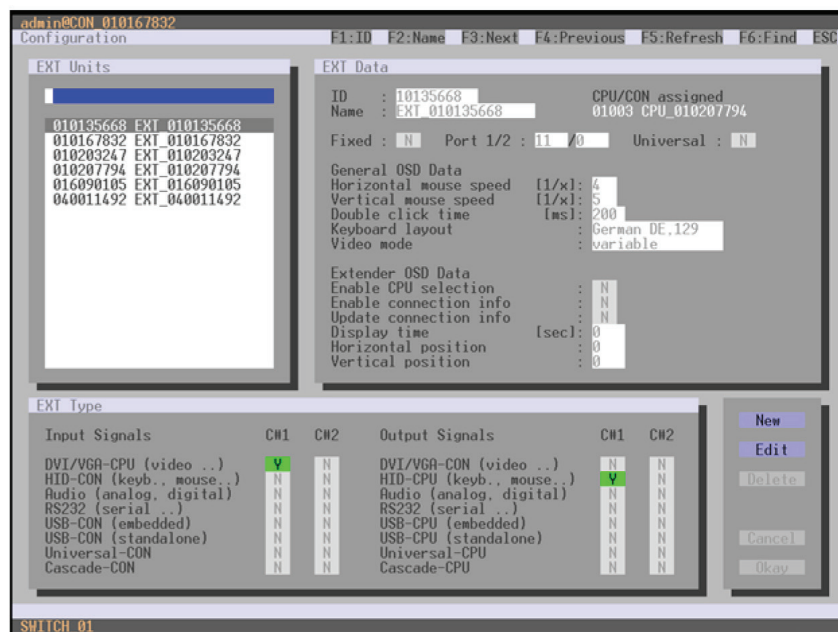


FIGURE 4-29. CONFIGURATION—EXT UNITS

You can select the following buttons.

TABLE 4-29. BUTTONS

BUTTON	FUNCTION
New	Create a new extender unit
Edit	Edit an existing extender unit
Delete	Delete an existing extender unit
Cancel	Reject changes
Save	Save changes

The settings for the OSD Data are described in Section 4.11.2.

## CHAPTER 4: CONFIGURATION

### JAVA TOOL

- ◆ Select Definition > EXT Units in the task area.

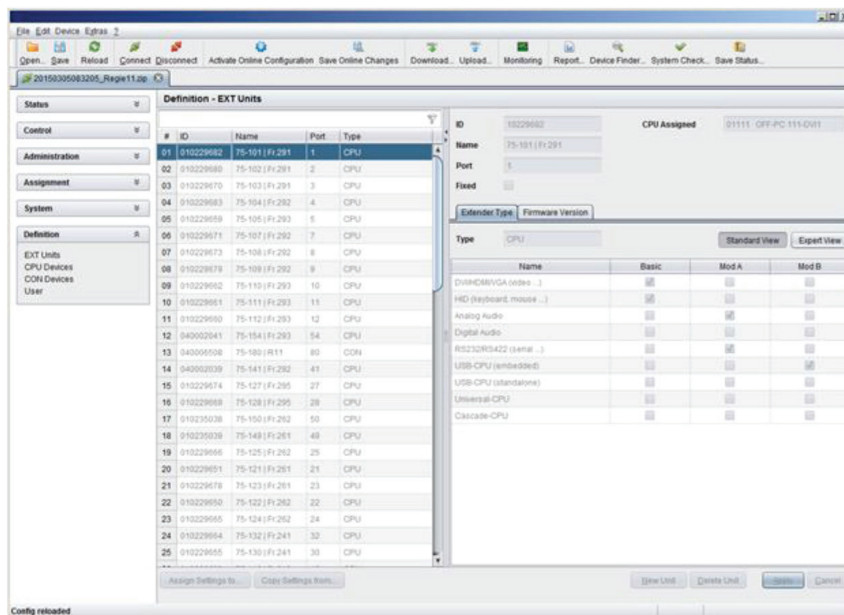


FIGURE 4-30. DEFINITION—EXT UNITS

You can select the following buttons.

TABLE 4-30. BUTTONS

BUTTON	FUNCTION
New	Create a new extender unit
Delete	Delete an existing extender unit
Apply	Confirm changes of an extender unit
Cancel	Reject changes

### FLEXIBLE PORT EXTENDER UNITS

Extenders with auto-ID functionality are automatically recognized and cannot be created manually. This is the Flex Port function of the matrix.

**CAUTION:** The connection of a fixed port extender unit (e.g., USB 2.0) to a Flex-Port can cause unintended results.

## CHAPTER 4: CONFIGURATION

### 4.7 USB 2.0 EXTENDER

This section helps you to configure and use your USB 2.0 extenders. These extenders will have to be connected to standard I/O boards in this case. USB 2.0 extenders can be configured for independent switching or can be assigned to already existing KVM extenders.

You have the following options to access the menu.



#### OSD

- ◆ Select Configuration > EXT Units in the main menu.

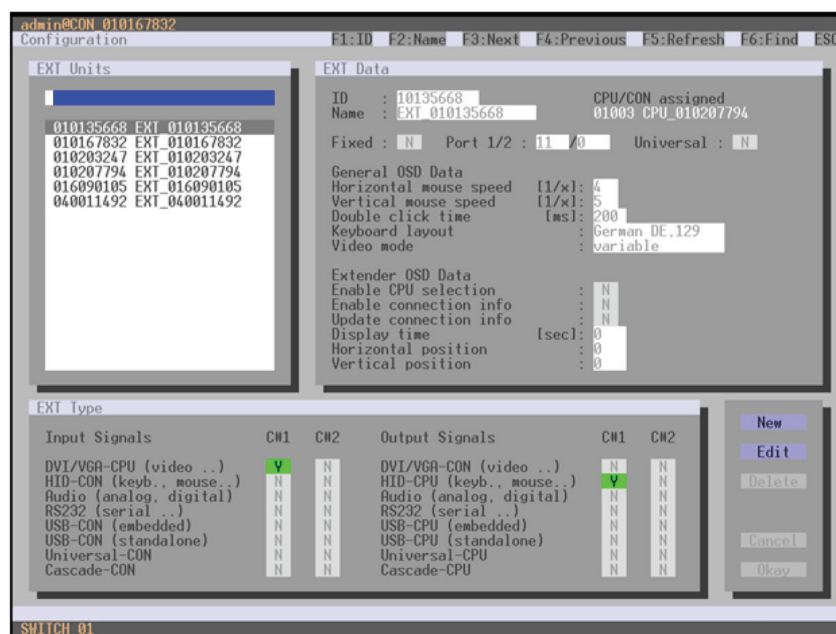


FIGURE 4-31. CONFIGURATION—EXT UNITS

1. To configure a USB 2.0 extender unit, press the New button. An extender with an eight-digit ID will be created, starting with digit 9.
2. Assign an appropriate name to the extender in the Name field.
3. Enter the port number of the matrix physically connected to the USB 2.0 extender unit into the Port field.
4. To configure the created extender as a CON Unit, set the USB-CON (standalone) option to Y (C#1 in the Input Signals column) and confirm by pressing the Okay button.
5. To configure the created extender as a CON Unit, set the USB-CPU (standalone) option to Y (C#1 in the Output Signals column) and confirm by pressing the Okay button.

## CHAPTER 4: CONFIGURATION

- To create an individually switchable Device for the USB 2.0 CON extender, select Configuration > CON Devices and press the New R button. Alternatively, you can assign the USB 2.0 CON extender to an already existing CON Device. For this purpose, select the Device and move the USB 2.0 CON extender from the EXT available field into the EXT assigned field.
- Give an appropriate name to the new Device in the Name field.
- Repeat steps 6 and 7 for all USB 2.0 CPU extenders in the Configuration > CPU Devices menu.
- If you use parallel operation within the matrix, set the Release Time in the Configuration > Switch menu to 10 seconds or more (see Section 4.11.6).
- Restart all I/O boards on which USB 2.0 extenders have been configured or alternatively restart the matrix. The USB 2.0 extenders are now configured and can be used.

### JAVA TOOL

- Select Definition > EXT Units in the task area.

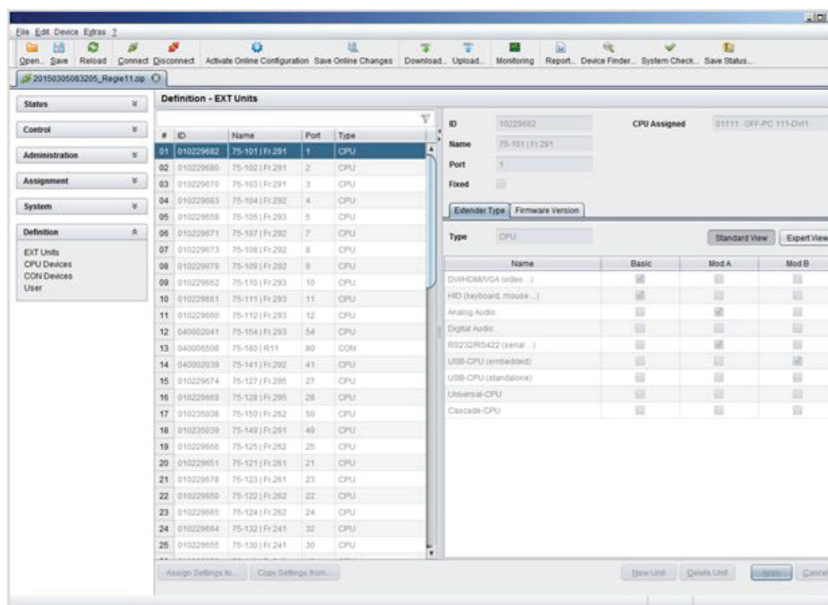


FIGURE 4-32. DEFINITION—EXT UNITS

- Press the New button. A popup window opens.
- Select (Templates) in the selection box, if you want to use a template for a USB 2.0 CON Unit (USB CON Unit) or a USB 2.0 CPU Unit (USB CPU Unit). An extender with an eight-digit ID will be created, starting with digit 9.
- Give an appropriate name to the extender in the Name field.
- Enter the port number of the matrix physically connected to the USB 2.0 extender unit into the Port field.
- Confirm your settings by pressing the Apply button.
- The USB 2.0 CON extender now has to be either assigned to an existing CON Device in the menu Definition > CON Devices or a new CON Device has to be created for the assignment by pressing the New button.

## CHAPTER 4: CONFIGURATION

7. The USB 2.0 CPU extender now has to be either assigned to an existing CON Device in the Definition > CPU Devices menu or a new CON Device has to be created for the assignment by pressing the New button.
8. If you use parallel operation within the matrix, set the Release Time in the Configuration > Switch menu to 10 seconds or more (see Section 4.11.6).
9. Restart all I/O boards on which USB 2.0 extenders have been configured or alternatively restart the matrix.

The USB 2.0 extenders are now configured and can be used.

NOTE: Created extender units are always set as fixed-port extenders. This configuration is necessary if you want to switch, e.g. USB 2.0 connections via the matrix.

NOTE: To make a fixed port available again for Flex-Port extender units after deleting a fixed-port extender unit, you must restart the I/O board.

### 4.8 EXTENDERS FOR UNI I/O BOARDS (USB 2.0/USB 3.0)

This section will help you to configure and use your USB 2.0/3.0 extenders. To use USB 3.0 extenders, you need at least one UNI I/O board and SFP modules based on 6.25 Gbit/s for the matrix.

You have the following options to configure the system:



## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Configuration > EXT Units in the main menu.

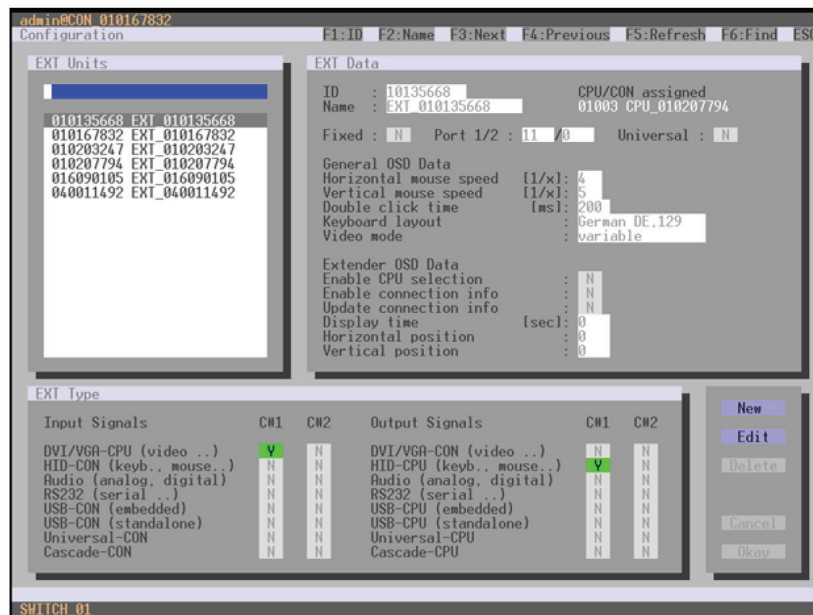


FIGURE 4-33. CONFIGURATION—EXT UNITS

1. Insert the SFP modules into the matrix and connect the extenders according to the required application.
  - One extender will be created for each SFP module in the EXT Units list. The appropriate names always start with “UNI.”
2. To configure a CON Unit, select one of the extenders in the EXT Units list that are physically connected to a USB CON Unit.
3. Edit the extender by setting the USB-CON (standalone) option in the Input Signals field to Y for C#1. Set also the Universal-CPU option in the Output Signals field to N for C#1.
4. To configure a CPU Unit, select one of the extenders in the Ext Units list that are physically connected to a USB CPU Unit.
5. Edit the extender by setting the USB-CPU (standalone) option in the Output Signals field to Y for C#1. Set also the Universal-CPU option in the Input Signals field to N for C#1.
6. The edited EXT Units for the respective USB CON Units now have to be either assigned to an existing CON Device or you have to create a new CON Device by using the New R. button for an assignment in the Configuration > CON Devices menu.
7. The edited EXT Units for the respective USB CPU Units now have to be either assigned to an existing CPU Device or you have to create a new CPU Device by using the New R. button for an assignment in the Configuration > CPU Devices menu.
8. If you use parallel operation within the matrix, set the Release Time in the Configuration > Switch menu to 10 seconds or more.
9. Restart the matrix.

The USB extenders are completely configured now and can be used.

## CHAPTER 4: CONFIGURATION

### JAVA TOOL

- ♦ Select Definition > EXT Units in the task area.

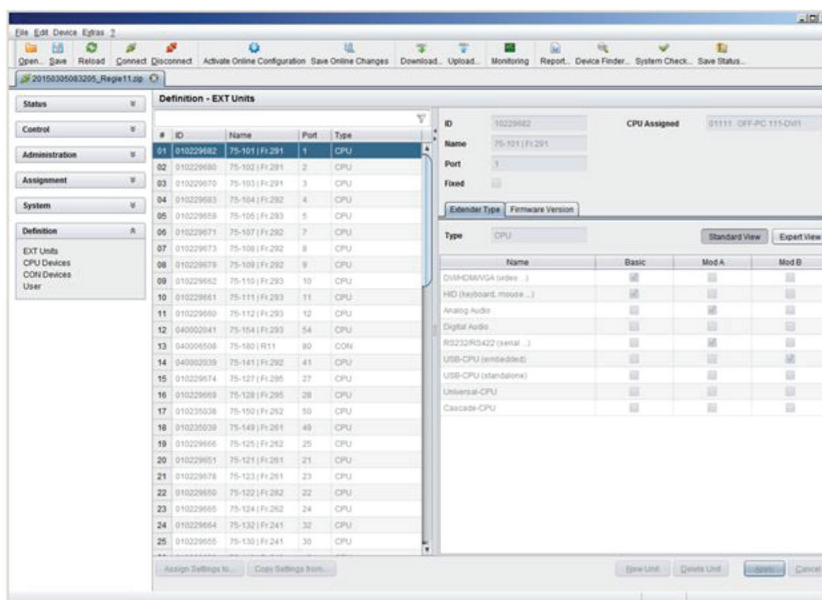


FIGURE 4-34. DEFINITION—EXT UNITS

1. Insert the SFP modules into the matrix and connect the extender according to the required application.  
One extender will be created for each SFP module in the Ext Units list. The appropriate names always start with "UNI."
2. To configure a CON Unit, select one of the extenders in the Ext Units list that are physically connected to a USB CON Unit.
3. Select the item UNI CON USB in the Type selection box of the Extender Type tab and confirm your settings by pressing the Apply button.
4. Restart the I/O board upon request in the popup window by pressing the Yes button.
5. To configure a CPU Unit, select one of the extenders in the Ext Units list that are physically connected to a USB CPU Unit.
6. Select the item UNI CPU USB in the Type selection box of the Extender Type tab and confirm your settings by pressing the Apply button.
7. Restart the I/O board upon request in the popup window by pressing the Yes button.
8. The edited EXT Units for the respecting USB CON Units now have to be either assigned to an existing CON Device or you have to create a new CON Device by using the New button for an assignment in the Definition > CON Devices menu.
9. The edited EXT Units for the respecting USB CPU Units now have to be either assigned to an existing CPU Device or you have to create a new CPU Device by using the New button for an assignment in the Definition > CPU Devices menu.
10. If you use parallel operation within the matrix, set the Release Time in the System > Switch menu to 10 s or more ( ).  
The USB extenders are completely configured now and can be used.



## CHAPTER 4: CONFIGURATION

### 4.9 CONFIGURATION OF SDI

This section will help you to configure the matrix for the use of SDI. Using SDI requires at least one I/O board and appropriate SFP modules according to the SDI video signal to be used.



#### OSD

- ◆ Select Configuration > EXT Units in the main menu.

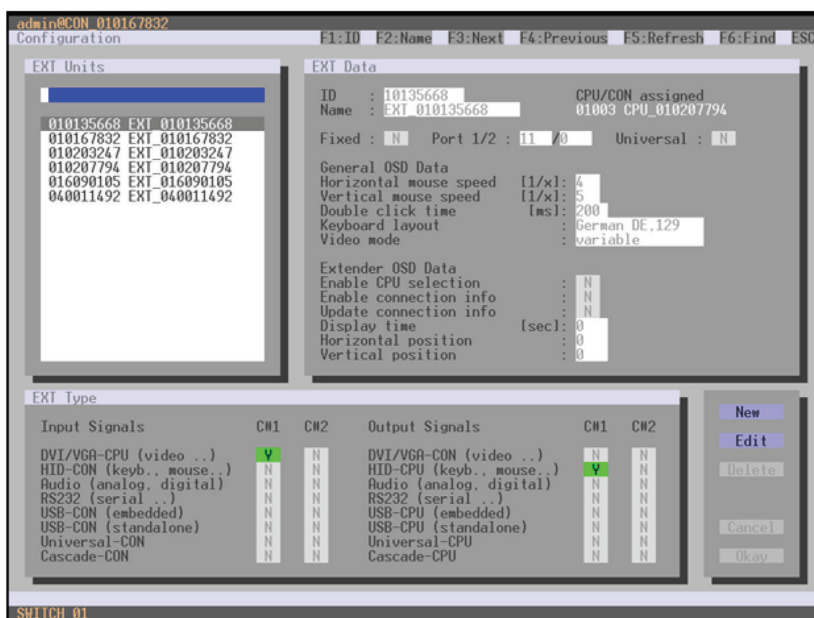


FIGURE 4-35. CONFIGURATION—EXT UNITS

1. Insert the SFP modules into the matrix. One extender will be created for each SFP module in the EXT Units list. The appropriate names always start with "UNI."
2. To configure an SDI input, select one of the extenders in the EXT Units list that corresponds to the respective SFP and is intended to be used as input.
3. Edit the extender by setting the Universal-CPU option in the Output Signals field to Y for C#1. Set also the Universal-CON option in the Input Signals field to N for C#1.
4. To configure an SDI output, select one of the extenders in the EXT Units list that corresponds to the respective SFP and is intended to be used as output.
5. Edit the extender by setting the Universal-CON option in the Input Signals field to Y for C#1. Set also the Universal-CPU option in the Output Signals field to N for C#1.

## CHAPTER 4: CONFIGURATION

- The edited EXT Units for the SDI inputs now have to be either assigned to an existing CPU Device or you have to create a new CPU Device by using the New R. button for an assignment in the Configuration > CPU Devices menu.
- The edited EXT Units for the SDI outputs now have to be either assigned to an existing CON Device or you have to create a new CON Device by using the New R. button for an assignment in the Configuration > CON Devices menu.
- Restart the Matrix.

The SDI inputs and outputs are completely configured now and can be used.

### JAVA TOOL

- Select Definition > EXT Units in the task area.

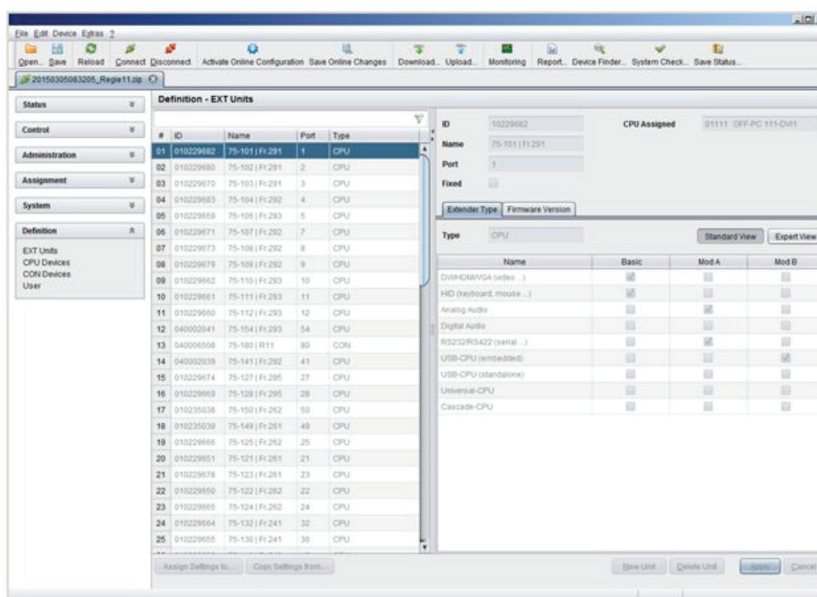


FIGURE 4-36. DEFINITION—EXT UNITS

- Insert the SFP modules into the matrix.  
One extender will be created for each SFP module in the EXT Units list. The appropriate names always start with “UNI.”
- To configure an SDI input, select one of the extenders in the EXT Units list that corresponds to the respective SFP and is intended to be used as input.
- Select the item UNI CPU in the Type selection box of the Extender Type tab and confirm your settings by pressing the Apply button.
- Restart the I/O board upon request in the popup window by pressing the Yes button.
- To configure an SDI output, select one of the extenders in the EXT Units list that corresponds to the respective SFP and is intended to be used as output.
- Select the item UNI CON in the Type selection box of the Extender Type tab and confirm your settings by pressing the Apply button.
- Restart the I/O board upon request in the popup window by pressing the Yes button.
- The edited EXT Units for the SDI inputs now have to be either assigned to an existing CPU Device or you have to create a new CPU Device by using the New R. button for an assignment in the Configuration > CPU Devices menu.

## CHAPTER 4: CONFIGURATION

9. The edited EXT Units for the SDI outputs now have to be either assigned to an existing CON Device or you have to create a new CON Device by using the New R. button for an assignment in the Configuration > CON Devices menu.

The SDI inputs and outputs are completely configured now and can be used.

### 4.10 CPU SETTINGS

New CPU Devices are configured in this menu including their assignment to extenders.

The assignment helps to describe and switch more complex computer configurations (e.g. Quad-Head with USB 2.0) in the matrix.

You have the following options to access the menu.



You can select the following settings.

**TABLE 4-31. CPU SETTINGS**

FIELD	SELECTION	DESCRIPTION
ID	Text	ID of the CPU Unit (see Section 4.4.2)
Name	Text	Name of the CPU Device
Virtual Device	activated	Create new CPU Device as a virtual one
	deactivated	Function not active (default)
Allow Private	activated	Allow switching to the respective CPU Device in Private Mode
	deactivated	Function not active (default)
Force Private	activated	Force switching to the respective CPU only in Private Mode
	deactivated	Function not active (default)
Fix Frame	activated	Force showing a red frame when switching to the respective CPU
	deactivated	Function not active (default)

## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Configuration > CPU Units in the main menu.

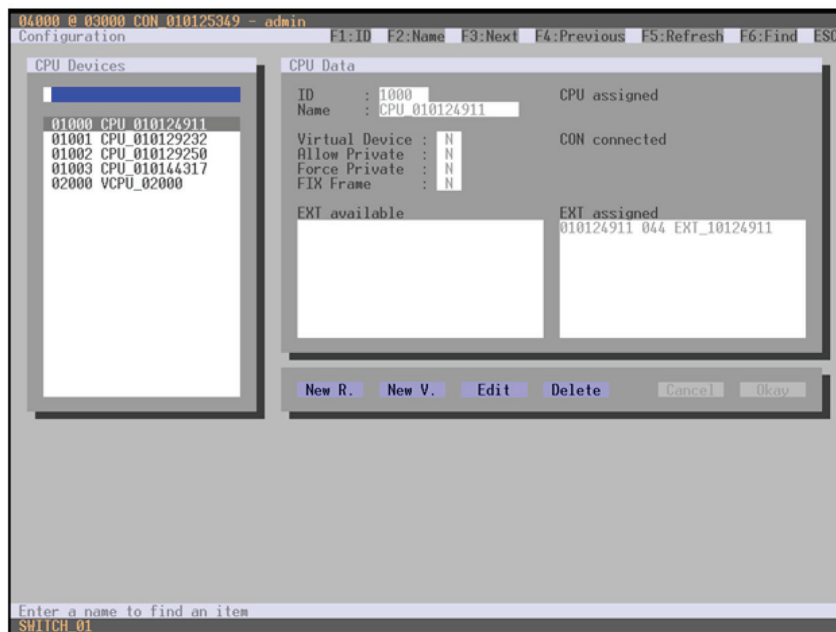


FIGURE 4-37. CONFIGURATION—CPU DEVICES

You can select the following buttons.

TABLE 4-32. BUTTONS

BUTTON	FUNCTION
New R.	Create a new real CPU device
New V.	Create a new virtual CPU device
Edit	Edit an existing CPU device
Delete	Delete an existing CPU device
Cancel	Reject changes
Save	Save changes

# CHAPTER 4: CONFIGURATION

## JAVA TOOL

- ◆ Select Definition > CPU Devices in the task area.

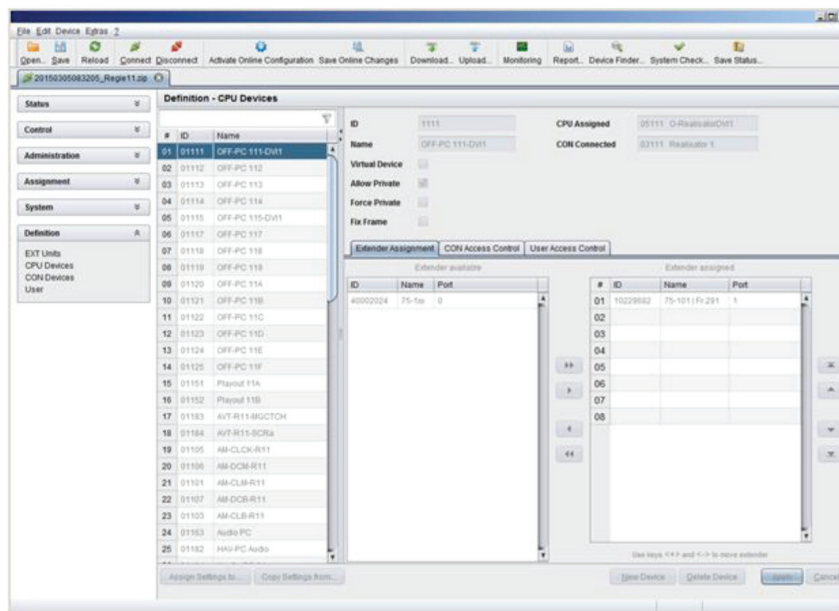


FIGURE 4-38. DEFINITION—CPU DEVICES

You can select the following buttons.

TABLE 4-33. BUTTONS

BUTTON	FUNCTION
New	Open a new CPU device
Delete	Delete a new CPU device
Apply	Confirm a created CPU device
Cancel	Reject changes
>	Assign selected extender units
>>	Assign all available extender units
<	Remove selected extender units
<<	Remove all extender units

You can select the following keyboard commands.

TABLE 4-34. KEYBOARD COMMANDS

FUNCTION	KEYBOARD COMMAND
Change assignment number of EXT unit upwards	<+>
Change assignment number of EXT unit downwards	<->



## CHAPTER 4: CONFIGURATION

To create a new CPU Device, proceed as follows:

1. Press the New button.
2. Select a real CPU (Create a real CPU) or a virtual CPU (Create a virtual CPU) or a template of an existing CPU (Choose template).

NOTE: A template can only be used if there is at least one existing CPU Device.

3. Press the OK button.
4. Determine all parameters that are relevant for the CPU.
5. To confirm the new CPU, press the Apply button.

To access a new CPU via matrix, an assignment of one or more CPU type extender units is required. Proceed as follows:

1. Select the new CPU in the CPU Devices list.
2. Select one or more extenders in the Extender available list.
3. Perform the assignment by pressing the > button. To assign all available extenders to the CPU, press the >> button.

The assignments are displayed in the Extender assigned list.

4. Confirm the assignment by pressing the Apply button.

To remove an extender assignment, proceed as follows:

1. Select a CPU in the CPU Devices list.
2. Select one or more extenders in the Extender assigned list.
3. Remove the assignment with the < button. To remove all existing assignments, press the << button.
4. Confirm the removal with the Apply button.

### 4.11 CPU GROUPS

The KVM matrix allows you to bundle the CPU Devices of a configuration into CPU groups. The groups can be used to logically or thematically subdivide the CPU Devices. As an application example, you can group all CPU Devices together that are connected to a specific matrix in a matrix grid.

The configuration of CPU groups at the same times increases the clarity of the configuration.

You have the following options to configure CPU groups:



#### OSD

To create and configure a CPU Group, proceed as follows:

1. Select Configuration > CPU Devices in the main menu.
2. Press the New Gr. button.
3. Enter a group name into the Name field.
4. Press the Okay button.

The group is created now.

## CHAPTER 4: CONFIGURATION

To assign a CPU Device to a group, proceed as follows:

1. Select Configuration > CPU Devices in the main menu.
2. Select the CPU Device you want to assign to a CPU group.
3. Select the CPU Group for the assignment in the Member of Group field using the cursor up and down keys.
4. Press the Okay button.

The CPU Device is assigned to the CPU Group now.

### Java Tool

To create and configure a CPU Group, proceed as follows:

1. Select the CPU Groups tab in the Definition > Groups menu of the task area.
2. Press the New Group button.

A popup window will open.

3. Select Create a standard Group in the popup window and press Ok.
4. Enter a group name into the Name field.

Press the Apply button. The group is created now.

To assign a CPU Device to a group, proceed as follows:

1. Select the CPU Groups tab in the Definition > Groups menu of the task area.
2. Select the CPU Group to be assigned with a CPU Device.
3. Select a CPU Device in the CPU/Group available list that you want to assign to the CPU Group.
4. Move the highlighted CPU Device to the CPU/Group assigned list.
5. Press the Okay button.

The CPU Device is assigned to the CPU Group now.

## 4.12 CONSOLE SETTINGS

You have the option to perform the following console settings.

### 4.12.1 CON DEVICES

New CON Devices are created in this menu including access rights and assignment to extenders.

You have the following options to access the menu.



## CHAPTER 4: CONFIGURATION

You can select the following settings.

**TABLE 4-35. CON DEVICES SETTINGS**

FIELD	SELECTION	DESCRIPTION
ID	Text	ID of the CON Unit (see Section 4.4.2)
Name	Text	Name of the CON Device
Virtual Device	activated	Create new CON Device as a virtual one
	deactivated	Function not active (default)
Allow User ACL	activated	Allow activation of the User ACL at the local console
	deactivated	Function not active (default)
Force Login	activated	Force user login at this CON Device
	deactivated	Function not active (default)
LOS Frame	activated	<ul style="list-style-type: none"> <li>◆ When the video signal between source (computer, CPU) and the CPU Unit or the connection between matrix and the CON Unit is lost, an orange frame will be displayed.</li> <li>◆ When switching to a CPU without video signal, a blank screen will appear surrounded by an orange frame.</li> </ul>
	deactivated	Function not active (default)
Allow CPU Scan	activated	Allow a scan mode with an automatic change of the video signal for the favorite list (CPU Devices) of the respective console or a logged in user
	deactivated	Function not active (default)
Force CPU scan	activated	Force a scan mode with an automatic change of the video signal for the favorite list (CPU Devices) of the respective console or a logged in user
	deactivated	Function not active (default)
Scan Time	0-99 seconds	Retention period until switching to the next CPU Device
Port Mode	activated	<p>The favorite list will be replaced by a port list where the ports from 1-99 can be directly selected at each matrix.</p> <p>NOTE: The selection only works for CPU Devices and has to be made according to the switching of favorites.</p> <p>When using the Port Mode, CON and User favorites will be deactivated</p>
	deactivated	Function not active (default)
Redundancy OFF	activated	Function not active
	deactivated	Automatically switch to the second link of a connected redundant CON Unit when losing the primary link of a CPU Unit (default)





## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Configuration > CON Devices in the main menu.

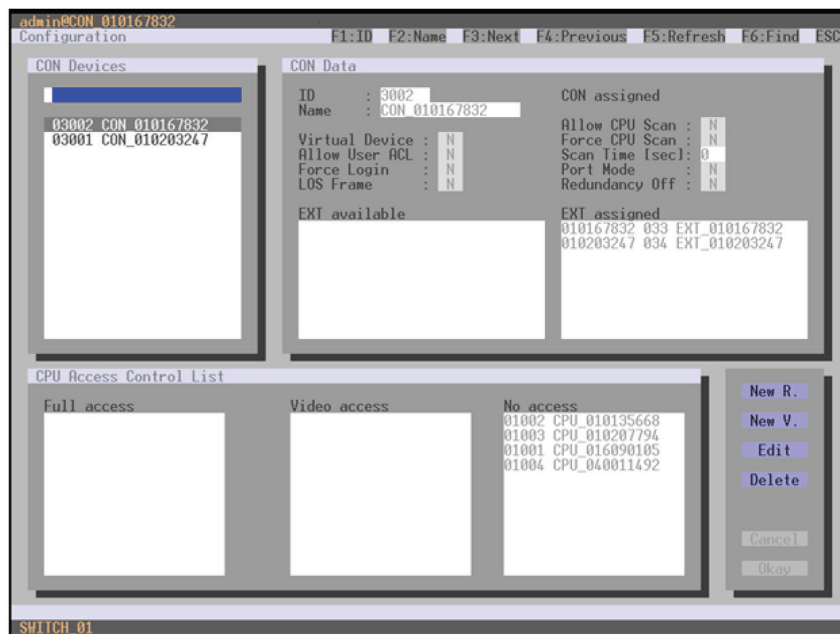


FIGURE 4-39. CONFIGURATION—CON DEVICES

You can select the following buttons.

TABLE 4-36. BUTTONS

BUTTON	FUNCTION
New R.	Create a real console
New V.	Create a virtual console
Edit	Edit an existing console
Delete	Delete an existing console
Cancel	Reject changes
Save	Save changes

# CHAPTER 4: CONFIGURATION

## JAVA TOOL

- ◆ Select Definition > CON Devices in the task area.

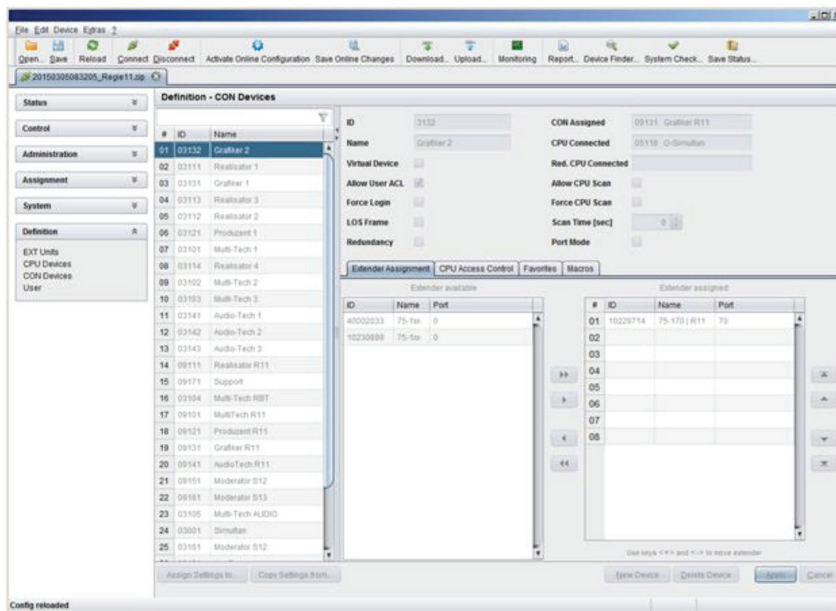


FIGURE 4-40. DEFINITION—CON DEVICES

You can select the following buttons.

TABLE 4-37. BUTTONS

BUTTON	FUNCTION
New	Open a new CON device
Delete	Delete a new CON device
Apply	Confirm a created CON device
Cancel	Reject changes
>	Assign selected extender units
>>	Assign all available extender units
<	Remove the selected extender units
<<	Remove all extender units

You can select the following keyboard commands.

TABLE 4-38. KEYBOARD COMMANDS

FUNCTION	KEYBOARD COMMAND
Decrease assignment number of EXT unit	<+>
Increase assignment number of EXT unit	<->



## CHAPTER 4: CONFIGURATION

To create a new console, proceed as follows:

1. Press the New button.
2. Select a real console (Create a real Console) or a virtual console (Create a virtual Console) or a template of an existing console (Choose template).

NOTE: A template can only be used if there is at least one existing CON Device.

3. Press the OK button.
4. Determine all parameters that are relevant for the console.
5. To confirm a created console, press the Apply button.

To run a CPU via a matrix, one or more CON Units (extender) must be assigned. To place an assignment, proceed as follows:

1. Select the console in the CON Devices list that has to be assigned to an extender.
2. Select the extender in the Extender available list that should be assigned to the CON.
3. Perform the assignment by pressing the > button. To assign all available extenders to the console, press the >> button. The assignments are displayed in the Extender assigned list.
4. Confirm the assignment by pressing the Apply button.

To remove an extender assignment, proceed as follows:

1. Select the console in the CON Devices list to be modified.
2. Select the extender(s) in the Extender assigned list to be removed.
3. Remove the assignment with the < button. To remove all existing assignments, press the << button.
4. Confirm the changes by pressing the Apply button.

To configure CPU access rights of consoles, proceed as follows:

1. Select a console in the CON Devices list.
2. Open the CPU Access Control tab.
3. Assign new access rights by using the right mouse button or the respective keyboard commands.
4. Confirm the configuration by pressing the Apply button.

You can select the following keyboard commands.

**TABLE 4-39. KEYBOARD COMMANDS**

FUNCTION	KEYBOARD COMMAND
Add CPU to Full Access list	<F>
Add CPU to Video Access list	<V>
Add CPU to No Access list	<N>

## CHAPTER 4: CONFIGURATION

### 4.12.2 MOUSE AND KEYBOARD

The OSD configuration for mouse and keyboard is made in this menu.

You have the following options to access the menu.



You can select the following settings.

**TABLE 4-40. MOUSE AND KEYBOARD SETTINGS**

FIELD	SELECTION	DESCRIPTION
Hor. Speed 1/x	1–9	Adjustment of the horizontal mouse speed, 1 = slow, 9 = fast (default value: 4)
Ver. Speed 1/x	1–9	Adjustment of the vertical mouse speed, 1 = slow, 9 = fast (default value: 5)
Double Click	100–800	Adjustment of the time slot for a double click (default value: 200 ms)
Keyboard layout	Region	Set the OSD keyboard layout according to the used keyboard (default: German [DE])
Video Mode	Variable or specific resolution	Resolution that is used when opening OSD

**NOTE:** The mouse and keyboard settings are console specific and can be set separately for each console.

# CHAPTER 4: CONFIGURATION

## OSD

- ◆ Select Configuration > EXT Units in the main menu.

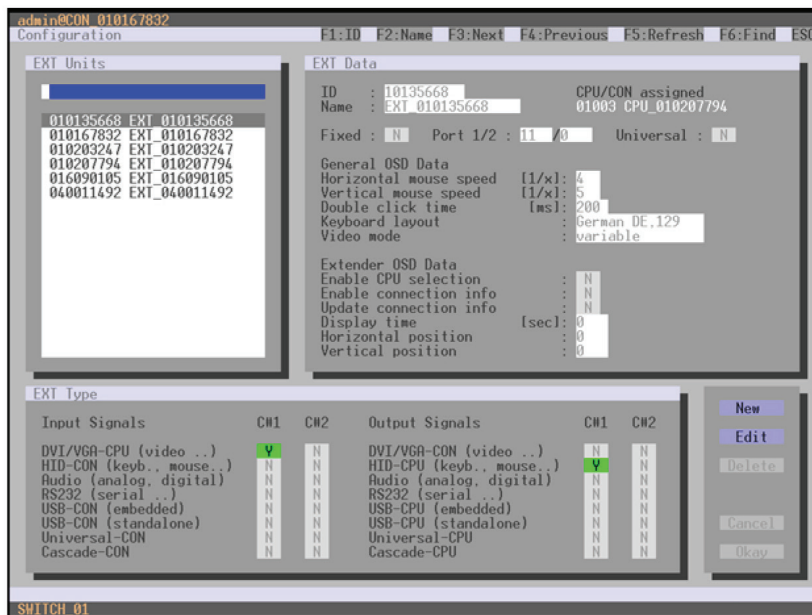


FIGURE 4-41. DEFINITION—EXT UNITS

You can select the following buttons.

TABLE 4-41. BUTTONS

BUTTON	FUNCTION
Cancel	Reject changes
Save	Save changes



## CHAPTER 4: CONFIGURATION

### JAVA TOOL

- ◆ Select Configuration > EXT Units in the task area.

NOTE: Mouse and keyboard settings are made in the OSD Data tab.

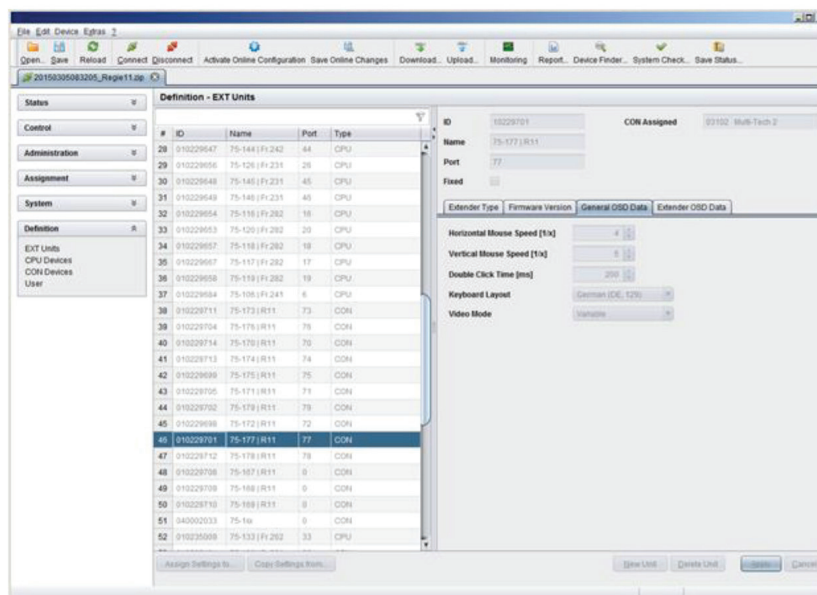


FIGURE 4-42. DEFINITION—EXT UNITS

## CHAPTER 4: CONFIGURATION

### 4.12.3 EXTENDER OSD

In this menu, the settings for the Extender OSD can be adjusted. These are local settings that can be made individually for each console.

You can select the following Extender OSD settings.

TABLE 4-42. EXTENDER OSD SETTINGS

FIELD	SELECTION	DESCRIPTION
Enable CPU Selection List	activated	When executing the key sequence for opening the OSD, a selection list for switching CPU Devices will be displayed in the center of the monitor. Pressing the <F7> button within the selection list opens the standard OSD.
	deactivated	Function not active (default)
Enable Connection Info	activated	Enable Extender OSD (default: YES)
	deactivated	Function not active
Update Connection Info	activated	Update connection changes during fade-in of Extender OSD (default: YES)
	deactivated	Function not active
Display Time	0–999 seconds	Duration of OSD fade-in (default: 10)
Horizontal Position	10 pixels	Horizontal OSD position (default: -2)
Vertical Position	10 pixels	Vertical OSD position (default: 2)

NOTE: When setting the horizontal OSD position, a prefixed minus describes the orientation to the right edge of the monitor, e.g. -2 means 2 x 10 = 20 pixels to this edge. When setting a vertical position, a prefixed minus describes the orientation to the bottom edge of the monitor.

If the Update Connections function is deactivated, the Extender OSD only appears when switching via OSD.

You have the following options to access the menu.



## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Configuration > EXT Units in the main menu.

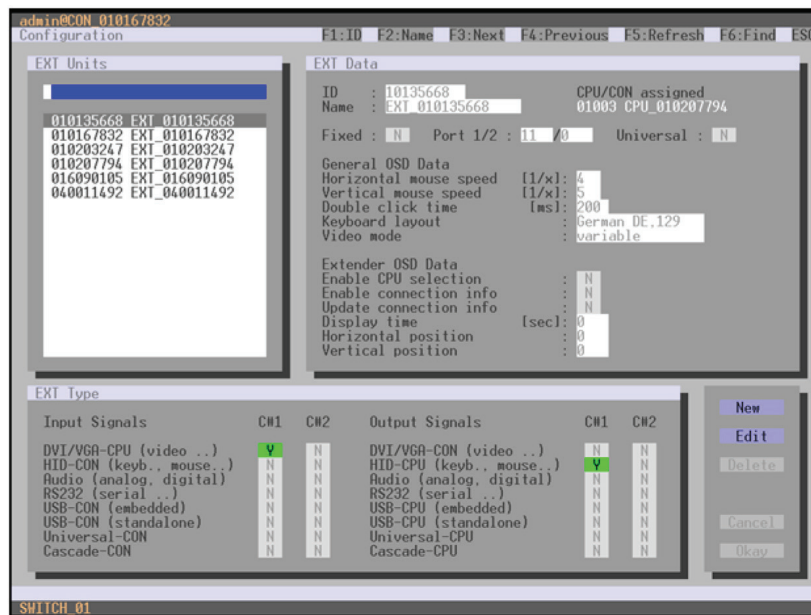


FIGURE 4-43. CONFIGURATION—EXT UNITS

To change the Extender OSD settings, proceed as follows:

1. Select the console extender in the EXT Units list whose Extender OSD settings has to be adjusted.
2. When confirming the selection by pressing <Enter>, the respective console extender will be enabled for editing.



# CHAPTER 4: CONFIGURATION

## JAVA TOOL

- ◆ Select Definition > EXT Units in the task area.

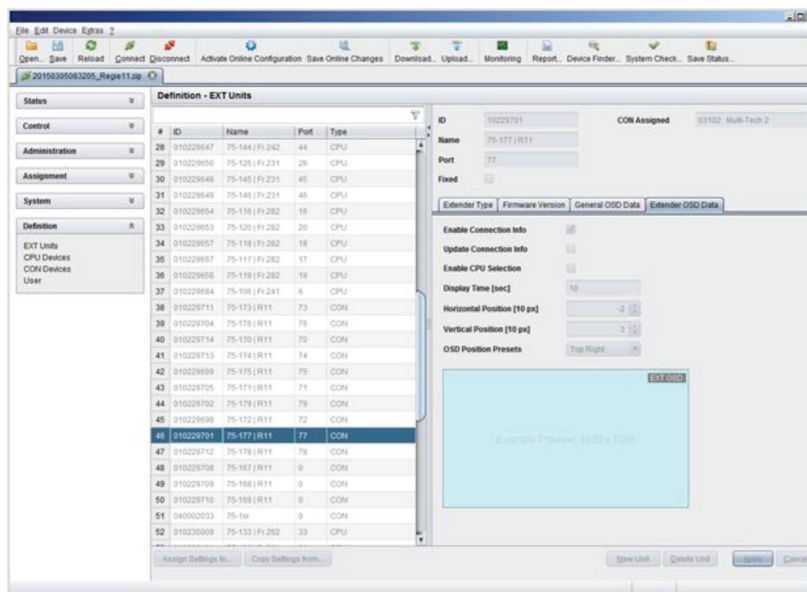


FIGURE 4-44. DEFINITION—EXT UNITS

To change the Extender OSD settings, proceed as follows:

1. Select the console extender in the EXT Units list for which the Extender OSD settings are to be adjusted.
2. Open the Extender OSD Data tab.
3. Adjust the desired settings and confirm your changes by pressing the Apply button.

### 4.12.4 FAVORITE LIST CONSOLES

Individual favorite lists of CPUs to be switched frequently can be created for all consoles in this menu. A favorite list can contain up to 16 different CPUs.

The switching of the favorites is done via hotkey using the keyboard (see Section 5.1.1).

You have the following options to access the menu.



## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Assignments > CON Favorites in the main menu.

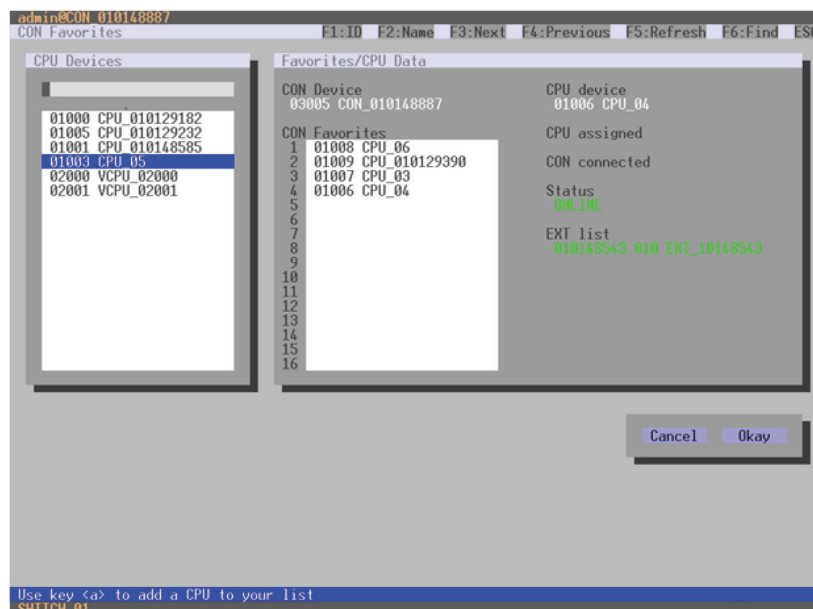


FIGURE 4-45. ASSIGNMENTS—CON FAVORITES

To create a favorite list for your own console, proceed as follows:

1. Select a CPU to be moved to the favorite list on the CPU Devices list. Press <a> to move a CPU Device to the favorite list. Press <r> to remove a CPU from the favorite list.
2. The order of the CPU devices within the favorite list can be changed by pressing <+> and <->.
3. Press the Save button to save the settings.

# CHAPTER 4: CONFIGURATION

## JAVA TOOL

- ◆ Select the user in the working area of the CON Devices menu for the favorite list and open the Favorites tab.

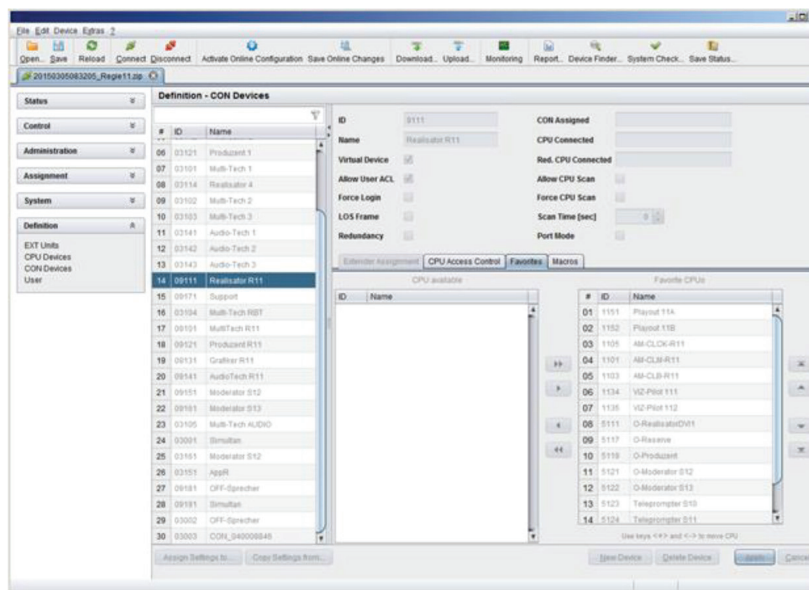


FIGURE 4-46. DEFINITION—CON DEVICES

To create a favorite list for any console, proceed as follows:

1. Select the CPUs in the CPU available list that should be added to the favorite list (CPU assigned). At the same time, multiple CPU Devices can be marked by pressing and holding <Ctrl>.
2. Press the > button to move the marked CPU Devices to the favorite list. If you press the >> button, the first eight CPU Devices from the list will be moved to the favorite list (CPU assigned).
3. To change the order of marked CPU Devices within the favorite list, press <+> and <->.
4. To remove marked CPU Devices from the favorite list, press the < button. If you press the << button, all CPU Devices will be removed from the favorite list.



## CHAPTER 4: CONFIGURATION

### 4.12.5 CONSOLE MACROS

In this menu, macro commands for switching, disconnection or user administration can be created. The macro commands are created for each console separately.

A macro can execute up to 16 switching commands successively.

The execution of the macros is done via hotkey and the function keys <F1>-<F16> (see Section 5.1.3).

You can select the following settings.

**TABLE 4-43. CONSOLE MACROS SETTINGS**

FIELD	SELECTION	DESCRIPTION
Function (01-16)	Connect (P1 = CON, P2 = CPU)	Set bidirectional connection from console P1 to CPU P2
	Connect Video (P1=CON, P2=CPU)	Set video connection from console P1 to CPU P2
	Disconnect (P1=CON)	Disconnect console P1
	Logout User	Logout current user
	Set Real CPU (P1=VCPU, P2=RCPU)	Assign a virtual CPU to a real CPU
	Set Virtual CON (P1=RCON, P2=VCON)	Assign a real console to a virtual console
	Push (P1=CON)	The user's KVM connection is forwarded to console P1 and is changed to a video only connection.
	Push Video (P1=CON)	The video signal of the current connection (KVM or video only) is forwarded to console P1. The user's connection remains unchanged (KVM or video only).
	Get (P1=CON)	The console gets a KVM connection to the CPU that is currently connected to console P1. The connection of console P1 is changed into a video only connection.
	Get Video (P1=CON)	The console gets a video only connection to the CPU that is currently connected to console P1. The connection of console P1 remains unchanged (KVM or video only).
	Login User	Login a certain user P1 at console P2
P1	CON or CPU Device	Name of CON or CPU Device
P2	CPU or CPU Device	Name of CPU or CPU Device

You have the following options to access the menu.



## OSD

- ◆ Select via Configuration > CON Macros in the main menu the console for which a console macro is to be created.

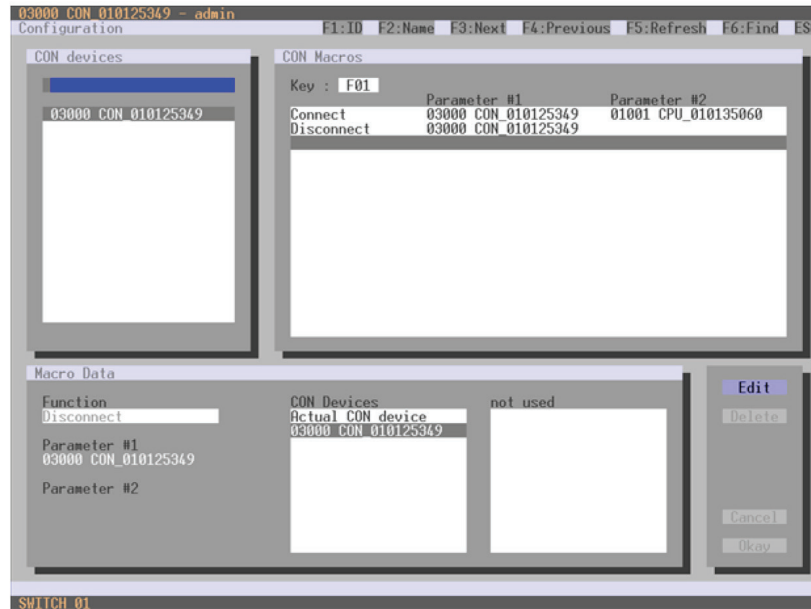


FIGURE 4-47. CONFIGURATION—CON MACROS

To create a macro for the selected console, proceed as follows:

1. Select in the Key field the function key (F1-F16) for which a macro should be created.
2. Select the respective place on the list (1-16) the key that should be set with a macro key.
3. Select for the highlighted position on the list a macro command in the Macro Data field.
4. Set the necessary parameters P1 and P2 (e.g. CON Devices or CPU Devices) for the selected macro command.
5. Confirm your inputs by pressing <Enter> and repeat the process for further macro commands, if necessary.

## CHAPTER 4: CONFIGURATION

### JAVA TOOL

- ◆ Select the console in the working area of the Definition > CON Devices menu for which a macro has to be created and open the Macros tab.

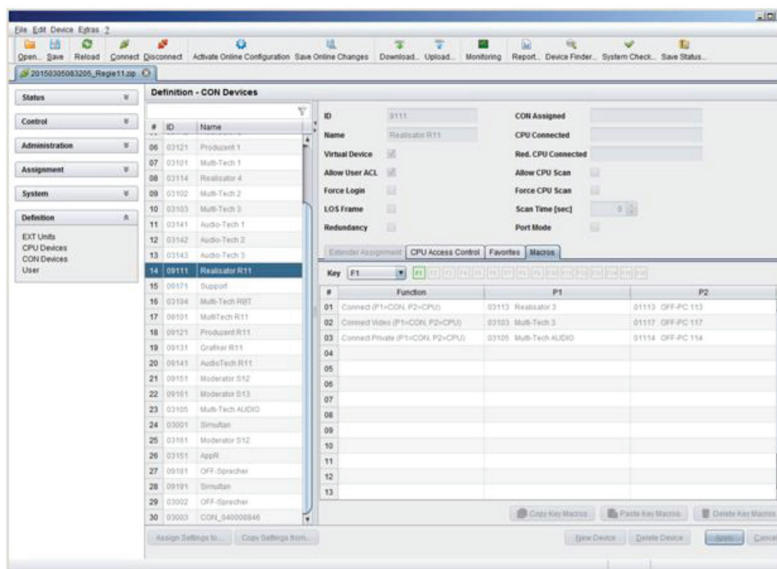


FIGURE 4-48. DEFINITION—CON DEVICES

To create a macro for the selected console, proceed as follows:

1. Select in the Key field the function key (F1-F16) for which a macro has to be created.
2. Select in the Function column the commands that should be part of the macro. The selection list will be opened by a double-click on the empty fields.
3. Select the respective parameters for the macro functions (e.g. corresponding consoles and CPUs) in the P1 and P2 columns.
4. Confirm your inputs by pressing the Apply button.

For an efficient macro configuration, the following context functions are available:

- ◆ When clicking on the Macros tab, macros can be assigned to other consoles by using the Assign Macros to ... function and can be copied from other consoles by using the Copy Macros from ... function.
- ◆ When clicking on the macro list, macros of the selected key can be copied into the cache by using the Copy Key Macros function. You can paste the macros from the cache into a key by using the Paste Key Macros function and you can reset all macros of the selected key by using the Reset Key Macros function.

## CHAPTER 4: CONFIGURATION

### 4.12.6 SHARED OPERATION


This menu enables shared operation of a CPU Device by two or more CON Devices. A CPU Device can be controlled by only one CON Device at a time but can be taken over successively by other CON Devices. Control of a CPU Unit by a CON Unit is relinquished after the expiration of an inactivity timer associated with the controlling CON Device. The mouse or keyboard may also be used to take control.

To allow a smooth and accurate function of the shared operation, you should use identical mice and keyboards. They should be connected to the same USB-HID ports of each CON Unit.

The alternative is using USB-HID Ghosting (see Section 5.11).

When taking over control within 10 seconds, any assigned USB 2.0 / 3.0 extenders, if available, will not be switched because of security and stability aspects.

You have the following options to configure shared operation.

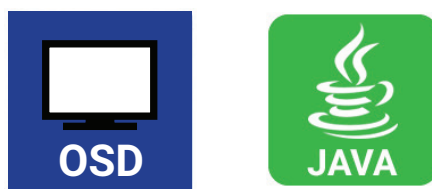

#### OSD

- ◆ Select via Configuration > Switch in the main menu.

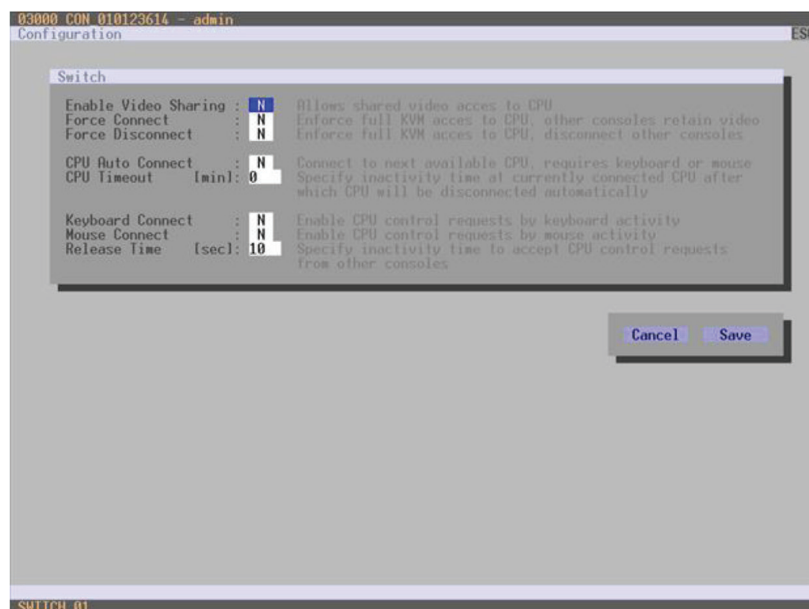


FIGURE 4-49. CONFIGURATION—SWITCH

## CHAPTER 4: CONFIGURATION

To configure shared operation, proceed as follows:

1. Activate the Enable Video Sharing function.
2. Activate the Force Connect function.
3. Activate the Keyboard Connect function, if taking over control by a keyboard event should be possible.
4. Activate the Mouse Connect function, if taking over control by a keyboard movement should be possible.
5. Define a Release Time of inactivity (0–999 sec.) after which control can be taken over.

### JAVA TOOL

- ◆ Select via System > Switch in the task area.

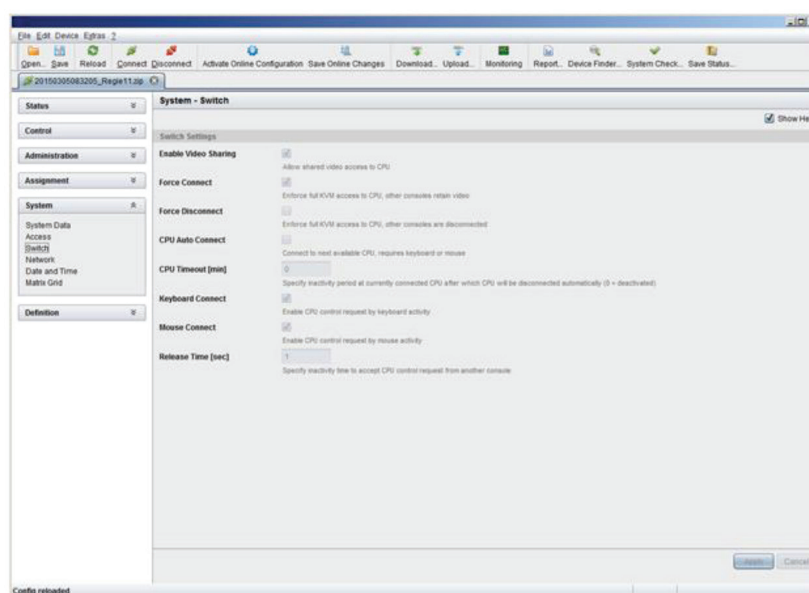


FIGURE 4-50. SYSTEM—SWITCH

To configure shared operation, proceed as follows:

1. Activate the Enable Video Sharing function.
2. Activate the Force Connect function.
3. Activate the Keyboard Connect function, if taking over control by a keyboard event is to be permitted.
4. Activate the Mouse Connect function, if taking over control by a keyboard movement should be possible.
5. Define a Release Time of inactivity (0 - 999 sec.) after which control can be taken over.



## CHAPTER 4: CONFIGURATION

### 4.12.7 MULTI-SCREEN CONTROL

---

This menu configures the USB-HID switching operation, allowing a CON Device with several monitors to control several connected sources (computers, CPUs). Smooth switching can be performed for up to four connected sources by dragging the mouse pointer beyond the respective monitor to an adjacent one.

Monitors can be arranged side-by-side or in a grid layout.

**CAUTION:** When using sources (computers, CPUs) in multi-head operation (e.g. dual-head), switching only works manually via keyboard commands. Noncompliance may have a negative influence on the stability of the system.

When using CON Units with the possibility to connect a local source (computer, CPU) in a Multi-Screen Control environment, the local switching will be disabled.

**NOTE:** To enable Multi-Screen Control, all Extender Units assigned to the related CON Device, must be physically connected to the same block of 4 ports on the I/O board of the matrix.

CON Units that have been already configured for Multi-Screen Control can be connected together to other blocks of 4 ports. In this case, any further configuration is not necessary; their functionality will remain as set previously.

You have the following options to access the menu.



## CHAPTER 4: CONFIGURATION

### OSD

- ◆ Select Assignments > Multi-Screen Control in the main menu.

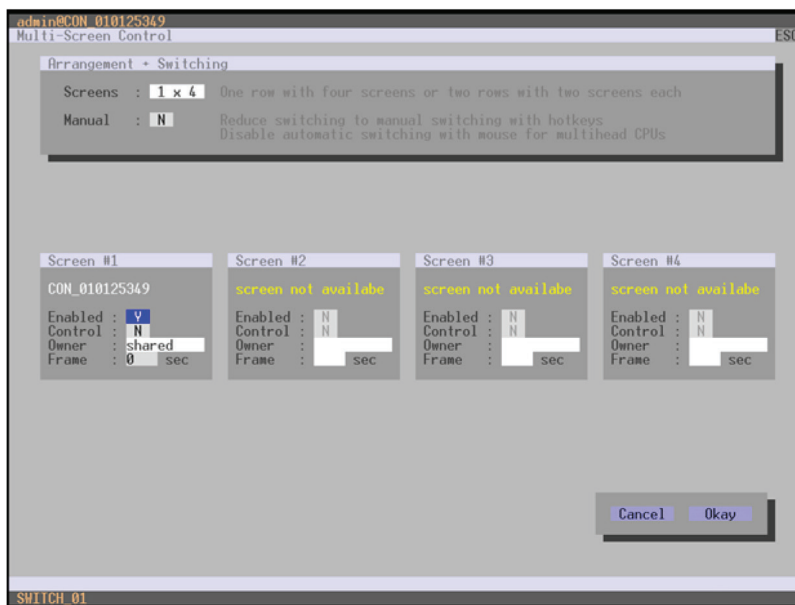


FIGURE 4-51. ASSIGNMENTS—MULTI-SCREEN CONTROL

To configure the Multi-Screen Control, proceed as follows:

1. In the Arrangement field, select the layout for the CON Device you want to configure (1 x 4 or 2 x 2). The fields for the configuration of the individual displays will be arranged accordingly.
2. Activate Manual option, if USB-HID switching is to be restricted to keyboard commands (see Section 5.6). Manual switching allows the use of multi-head consoles.
3. Ensure that the Enabled option is set to Y on all displays in order to activate the respective display for Multi-Screen Control.
4. Select one or more control displays within the CON Device by setting the Control function to Y in the display field. Control displays are referred to the extender units within the Multi-Screen Control that are connected to keyboard and mouse.
5. When using the Owner function, you can determine which control display is permitted for USB-HID switching to the different displays. Select that display from the list. To make a display accessible to all neighboring control displays, set the Owner function to shared.
6. Use the Frame function to configure a red frame that shows the current display with mouse control after the expiration of a selectable timer. The frame to fade in can be individually activated by using a timer >0 seconds.

## CHAPTER 4: CONFIGURATION

### JAVA TOOL

- ♦ Select Assignment > Multi-Screen Control in the task area.

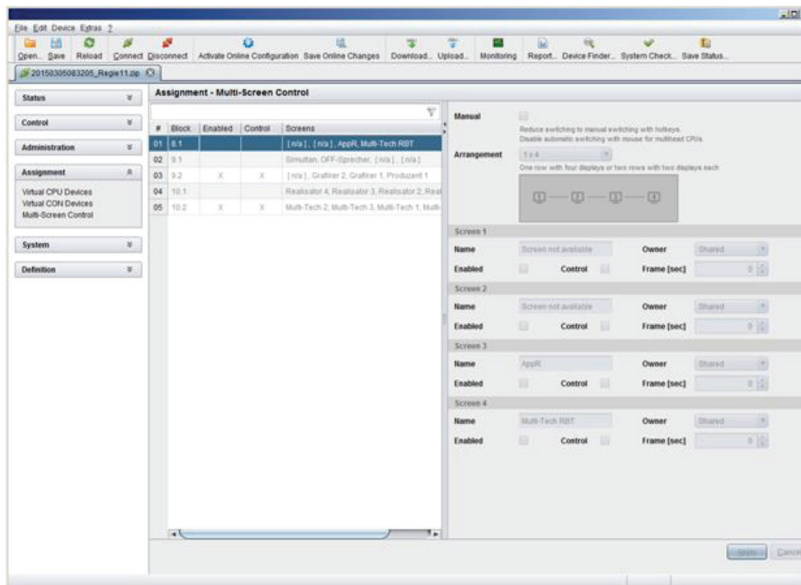


FIGURE 4-52. ASSIGNMENTS—MULTI-SCREEN CONTROL

To configure the Multi-Screen Control, proceed as follows:

1. Select the block of four ports in the list of the working area that should be configured for Multi-Screen Control. Only blocks of four ports that contain at least one CON Unit are shown.
2. Activate Manual option, if the USB-HID switching is to be restricted to keyboard commands (see Section 5.6). Manual switching allows the use of multi-head consoles.
3. In the Arrangement field, select the layout for the CON Devices you want to configure (1 x 4 or 2 x 2). The fields for the configuration of the individual displays will be arranged accordingly.
4. Select one or more control displays within the CON Device by setting the Control function to Y in the respective display field. Control displays are referred to the extender units within the Multi-Screen Control that are connected to keyboard and mouse.
5. When using the Owner function, you can determine which control display is permitted for USB-HID switching to the different displays. Select that display from the list. To make a display accessible for all neighboring control displays, set the Owner function to shared.
6. Use the Frame function to configure a red frame that shows the current display with mouse control after the expiration of a selectable timer. The frame to fade-in can be individually activated by using a timer >0 seconds.

## CHAPTER 4: CONFIGURATION

### 4.12.8 ACTIVE DIRECTORY

---

The KVM matrix can be synchronized with the Active Directory directory service with regard to user authentication. This allows the user to login at the KVM matrix using login information from the Active Directory service.

The connection between KVM matrix and the Active Directory server is established via OpenLDAP and periodically synchronized every 5 minutes.

The integration of Active Directory is only available with the ACX288-ADCTL controller board.

You have the following options to to configure the service:



#### OSD

To configure the sychronization to the Active Directory server, proceed as follows:

1. Create the KVMMatrixUser user group in your Active Directory domain (Active Directory setting).
2. Add the Active Directory users to the user group who are relevant for the KVM matrix and should be able to authenticate at it. (Active Directory setting).
3. Select an existing Active Directory bind user or create a new one (Active Directory setting).
4. Select Configuration > Network in the main menu of the KVM matrix.
5. Activate the LDAP function.
6. Enter the respective IP address and port number under LDAP Server (default port number: 389)
7. Enter the LDAP Base DN into the respective field (e.g. dc=example,dc=com).
8. Select Configuration > User in the main menu of the KVM matrix.

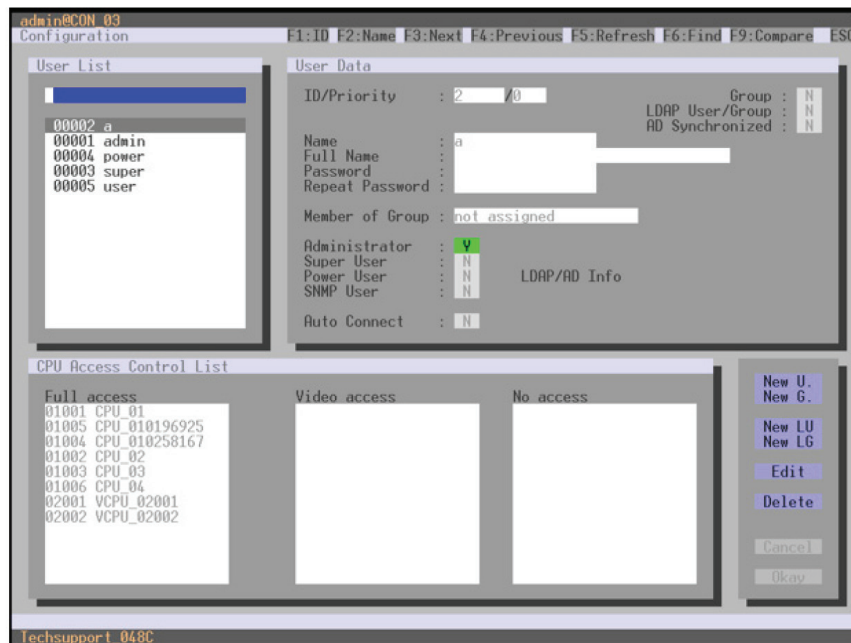


FIGURE 4-53. MENU CONFIGURATION – USER

9. Create a new LDAP user (bind user) by pressing New LU.
10. Enter a user name into the Name field.
11. Enter the login name of the bind user from the Active Directory into the Login Name field.
12. Enter the password of the bind user from the Active Directory into the Password field. The password also acts as local password, if the Active Directory service is not available.
13. Save your settings and restart the KVM matrix.

The Active Directory users will be then synchronized with the KVM matrix and imported into its configuration.

Single Active Directory users can be subsequently imported into the KVM matrix. Thereby there is no synchronization. These single users are not subject to the Active Directory group structure. To create a user, proceed as follows:

1. Select Configuration > User in the main menu of the matrix.
2. Create a new LDAP user, by pressing the New LU button.
3. Enter a user name into the Name field. At the same time, the name is the login name at the matrix if the Active Directory service is not available.
4. Enter the complete domain name of the Active Directory user into the Login Name field (e.g. firstname.lastname@example.com).
5. Enter the local password for the user into the Password field.
6. Save your settings.

The Active Directory can be used now.

## CHAPTER 4: CONFIGURATION

### Java Tool

To configure the synchronization to the Active Directory server, proceed as follows:

1. Perform steps 1-3 as mentioned in the OSD section.
2. Select the tab LDAP under System > Network in the task area.
3. Activate the LDAP function.
4. Enter the respective IP address and port number into the LDAP Server field (default port number: 389).
5. Enter the LDAP Base DN into the respective field (e.g. dc=example,dc=com).
6. Select Definition > User in the task area.

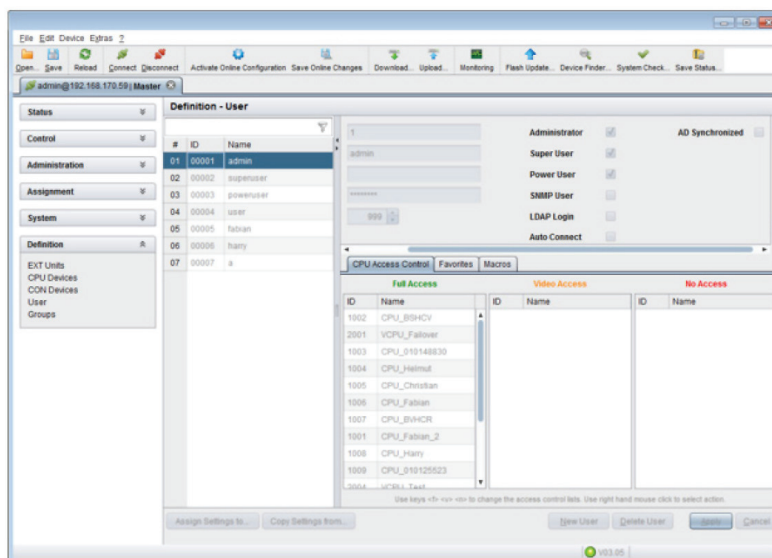


FIGURE 4-54. MENU CONFIGURATION – USER CONFIGURATION

7. Create a new LDAP user (bind user) by pressing the New User button.  
A popup window will appear.
8. Select Create a LDAP User in the popup window.
9. Enter a user name into the Name field.
10. Enter the login name of the bind user from the Active Directory into the Login Name field.
11. Enter the password of the bind user from the Active Directory into the Password field. The password also acts as local password, if the Active Directory service is not available.
12. Save your settings and restart the KVM matrix.

The Active Directory users will be then synchronized with the KVM matrix and imported into its configuration.

Single Active Directory users can be subsequently imported into the KVM matrix. Thereby there is no synchronization. These single users are not subject to the Active Directory group structure. To create a user, proceed as follows:

1. Select the tab LDAP under System > User in the task area.
2. Create a new LDAP user by pressing the New User button.  
A popup window will appear.
3. Select Create a LDAP User in the popup window.

## CHAPTER 4: CONFIGURATION

4. Enter the complete domain name of the Active Directory user into the Login Name field (e.g. firstname.lastname@example.com).
5. Enter a local password into the Password field.
6. Save your settings.

The Active Directory can be used now.

### 4.13 SAVING AND LOADING CONFIGURATIONS

You have the option to set the following administration of configurations.

#### 4.13.1 ACTIVE CONFIGURATION

You have the following option to access the menu.



- ♦ Select Configuration > Save in the main menu.

By selecting this menu item, the active configuration of the matrix is saved to the permanent matrix memory. By default, the last configuration that has been saved in this way will be restored after a restart of the matrix.

NOTE: Changing or saving configurations blocks the matrix memory and leads to a freeze of all OSD menus for a few seconds. The switching connections are not affected by this freeze.

If you select Auto Save within the system settings, an additional automatic saving of the configuration will be periodically performed (see Section 4.3.2).

#### 4.13.2 SAVING CONFIGURATION (INTERNAL)

In this menu, the current matrix configuration is saved to predefined storage locations. However, it does not replace the buffering of configuration (see Section 4.12.1).

You have the following options to access the menu.



In Active, the name and detailed information of the current configuration are shown. This configuration can be saved.

## CHAPTER 4: CONFIGURATION

In Default and File #1 to File #8, the name and detailed information of the respective saved configuration are shown. These storage locations can be overwritten.

The storage location to be overwritten by the current configuration must be selected explicitly.

The current configuration will be saved to this storage location and will be shown immediately in the menu. The previously saved configuration saved to this storage location is deleted.

### OSD

You have the possibility to save the created configuration within eight storage locations in the matrix (File #1 – File #8). Additionally, a configuration can also be saved as default configuration.

1. Select Configuration > Save As... in the main menu.
2. Select the required storage location (File #1 – File #8) or Default.

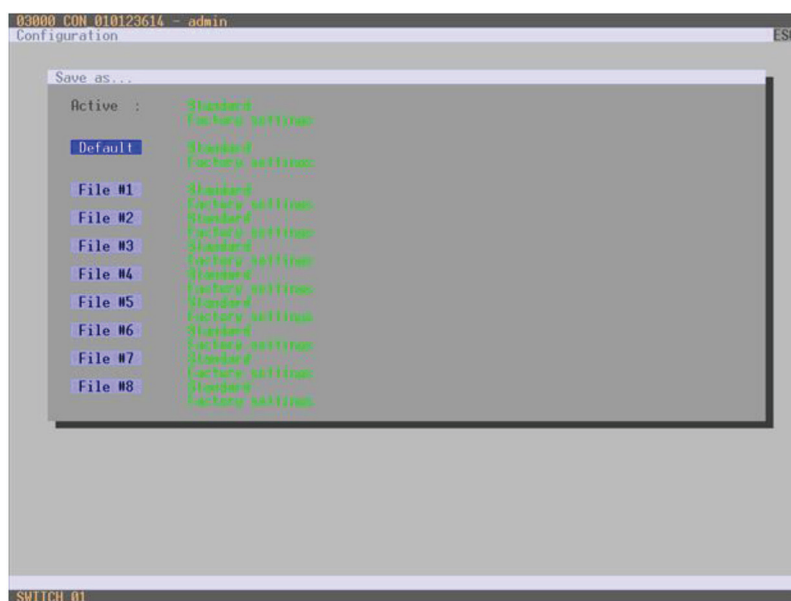


FIGURE 4-55. CONFIGURATION—SAVE AS



## CHAPTER 4: CONFIGURATION

### JAVA TOOL

To save the configuration into the matrix memory, proceed as follows:

1. Select File > Upload in the menu bar.
2. Enter the IP address of the matrix, your user name and your password and press the Next button to confirm your inputs.
3. Select the storage location where the configuration will be saved (default or config01–config08) and press the OK button to confirm.

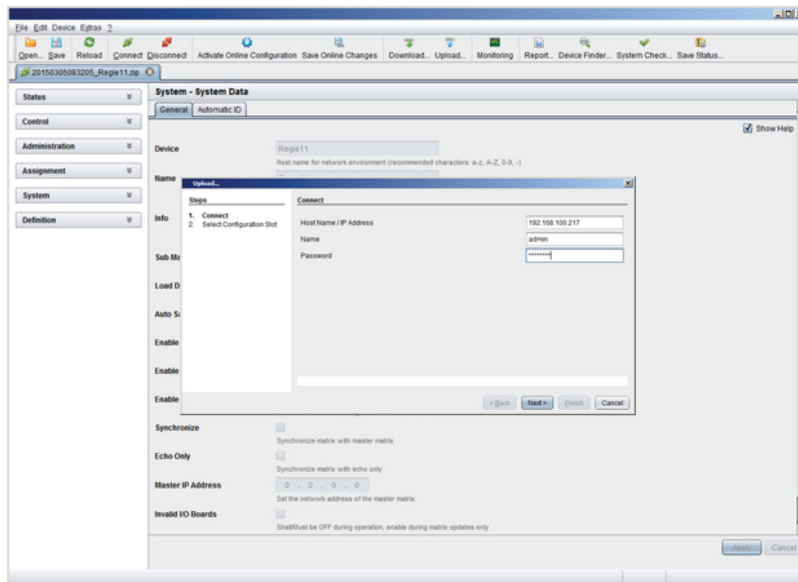


FIGURE 4-56. FILE—UPLOAD

## CHAPTER 4: CONFIGURATION

### 4.13.3 LOADING CONFIGURATION (INTERNAL)

Previously saved configurations are loaded in this menu.

You have the following options to load configurations from files.



In Active, the currently loaded configuration is displayed.

In addition to the default configuration, up to eight further configurations can be loaded.

The selection of the configuration to be loaded can be made between eight personalizable configurations and the default settings.

The selected configuration is immediately loaded and displayed in the menu as Active. The previously active configuration is deleted.

#### OSD

1. Select Configuration > Open in the main menu.
2. Select the desired configuration.
3. Load the configuration by pressing <Enter>.

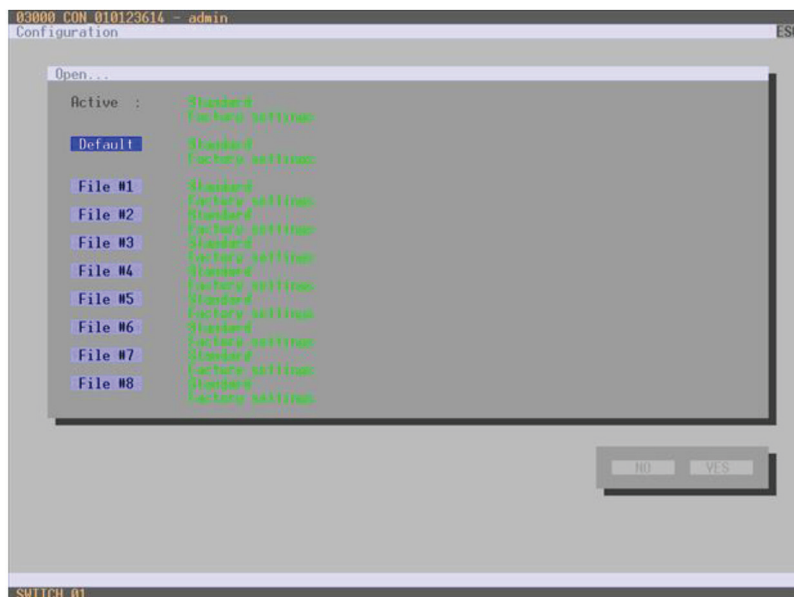


FIGURE 4-57. CONFIGURATION—OPEN

## CHAPTER 4: CONFIGURATION

### JAVA TOOL

1. Select Administration > Activate Configuration during online mode in the task area.
2. Select the desired configuration.
3. Load the configuration by pressing the Activate button.

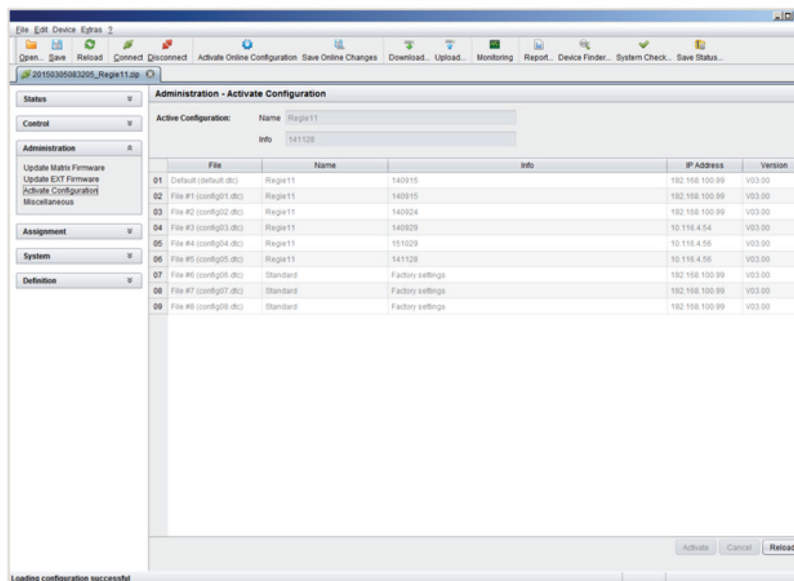


FIGURE 4-58. ADMINISTRATION—ACTIVATE CONFIGURATION

### 4.13.4 SAVING CONFIGURATIONS (EXTERNAL)

Configurations can be saved as files that can be stored independent of the matrix.

You have the following option to access the menu.



1. Select File > Save As in the menu bar.
2. Enter a name for the configuration.
3. Select the directory of the configuration on your storage medium where it is to be saved.

NOTE: Configurations are always saved in a file with the ending dtc.

## CHAPTER 4: CONFIGURATION

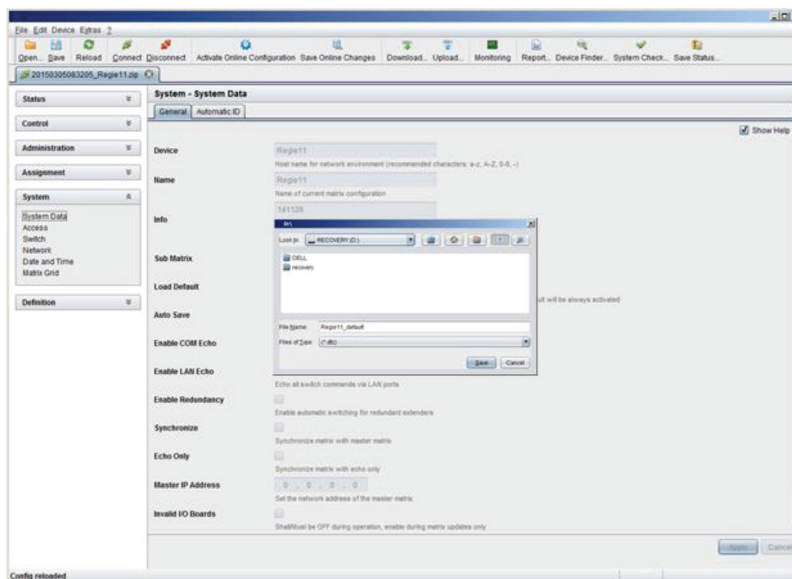


FIGURE 4-59. FILE—SAVE AS

### 4.13.5 LOADING CONFIGURATIONS (EXTERNAL)

Externally saved configurations are opened and activated in this menu.

You have the following option to load configurations from files.



1. Select File > Open... during offline mode and select the storage location of the configuration file that has to be opened.
2. Open the configuration by pressing the Open button.
3. Select File > Upload in the menu bar to transfer the opened configuration to the matrix. Enter the necessary parameters.
4. Select Matrix > Connect in the menu bar to make a connection between the matrix and the Java tool. Enter the necessary parameters.
5. Select Administration > Activate Configuration and select the configuration to be activated.
6. Confirm the process with the Activate button.

The opened configuration is activated.

## CHAPTER 4: CONFIGURATION

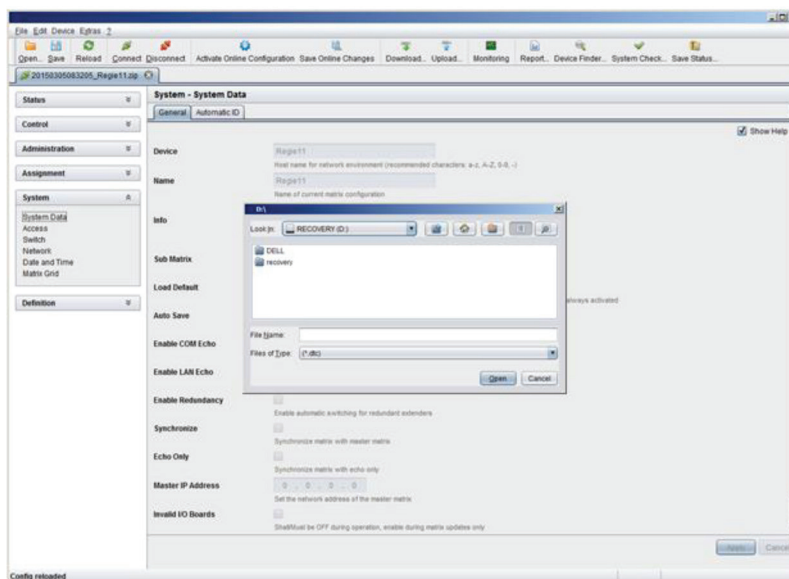


FIGURE 4-60. FILE-OPEN

### 4.14 EXPORT AND IMPORT OPTIONS

The Modular KVM Matrix Switch offers the ability to read out available configuration lists (extender, CPUs, consoles and users) for export and import again via Java tool. You have the following option to handle configuration lists.

Exported configuration lists are always saved in .csv format that allows offline editing with common spreadsheet applications.

You have the following option to export or import configuration lists:



#### 4.14.1 EXPORT OPTIONS

Configuration lists are exported in this menu. In order to export, proceed as follows:

1. Select File > Export in the menu bar.
2. After opening the menu, select the list to export (Extender, CPU, Console or User).
3. Select the storage location for the export file.
4. Confirm the export with the Finish button.

## CHAPTER 4: CONFIGURATION

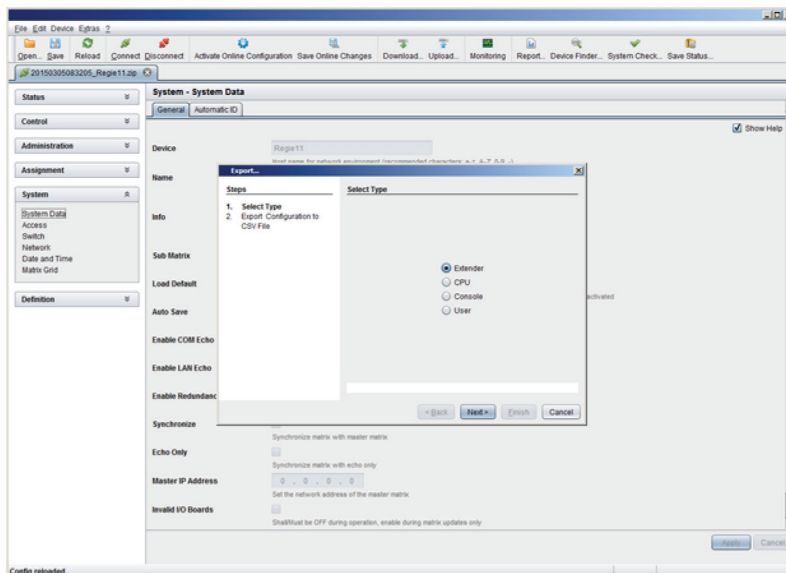


FIGURE 4-61. FILE—EXPORT

### 4.14.2 IMPORT OPTIONS

Configuration lists are imported in this menu. To import, proceed as follows:

1. Select File > Import in the menu bar of an offline configuration.
2. After opening the menu, select the list to import (Extender, CPU, Console or User).
3. Select the directory of the list to import.
4. Confirm the import with the Finish button.

NOTE: Importing configuration lists is only possible in offline configurations.

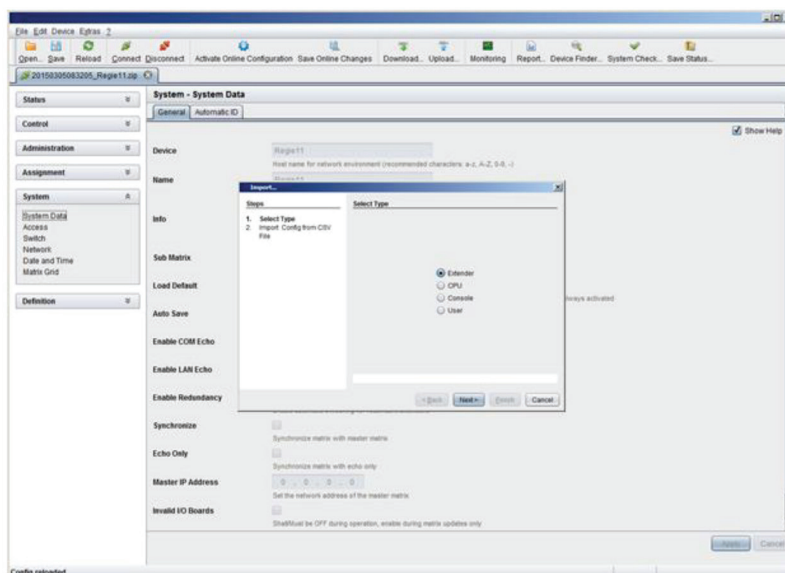


FIGURE 4-62. FILE—IMPORT

## CHAPTER 4: CONFIGURATION

### 4.15 MATRIX CASCADING

This simple method of cascading allows a switchable connection between two matrices via Tie Lines.

The Matrix Cascading does not require Bundle 4.

This kind of configuration may become necessary if the number of ports in the entire system has to be increased or if certain important connections should be distributed to several matrices because of redundancy.

The Tie Lines are unidirectional and can only be used in one direction according to their configuration. For bidirectional use of cascading, you have to configure opposite Tie Lines.

To connect Tie Lines to the matrices, you have to create intended Master/Slave CON and Master/Slave CPU Devices that have to be switched within the cascaded environment.

You have the following options to configure Matrix Cascading:



### GENERAL PREPARATION

1. Define a Master Matrix. All further matrices will be configured as Sub Matrices in the configuration process.
2. Ensure that the Tie Lines will only be connected after finishing the configuration.

### OSD

- ♦ Select Configuration > EXT Units in the main menu of the master matrix.

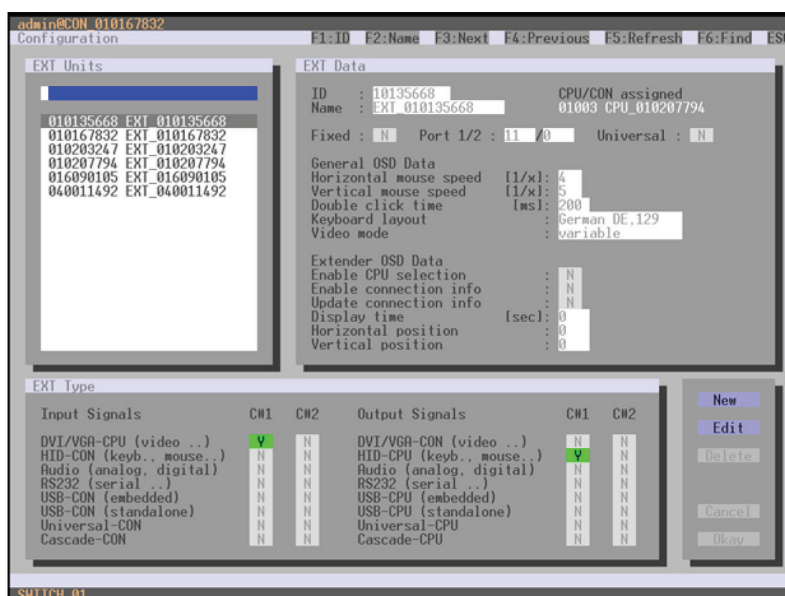


FIGURE 4-63. CONFIGURATION—EXT UNITS

## CHAPTER 4: CONFIGURATION

1. Press the New button. A new Extender Unit will be created that is needed for the connection of Tie Lines.
2. Enter an appropriate extender name into the Name field.
3. Enter a port number into the Port field according to the required connection of the Tie Line.
4. If the Tie Line should be directed from the Sub to the Master, set the Cascade-CON option to Y (C#1) in the Input Signals column. If the Tie Line should be directed from the Master to the Sub, set the Cascade-CPU option to Y (C#1) in the Output Signals column.
5. Save your settings by pressing the Okay button.
6. If you have created a Master/Slave CON Unit, select Configuration > CON Devices in the main menu of the master matrix and press the New R button. A switchable CON Device will be created.
7. If you have created a Master/Slave CPU Unit, select Configuration > CPU Devices in the main menu of the master matrix and press the New R button. A switchable CPU Device will be created.
8. Enter an appropriate Device name into the Name field.
9. Assign the previously configured Extender Unit to the just created Device by moving the Extender Unit from the Ext available field into the Ext assigned field and save your settings.
10. Repeat steps 1 to 9 for the Sub Matrix.
11. Select Configuration > System in the main menu of the Sub Matrix and set the Sub Matrix option to Y.
 

The OSD of the Sub Matrix will immediately freeze and will be only accessible by using the keyboard command <Hotkey>, <s>, <o>.
12. Restart all I/O boards on which any Master/Slave CON or CPU Units have been configured or alternatively restart the matrix.
13. Connect the Tie Lines to the matrices. Ensure that each Master/Slave CON on one matrix is connected to Master/Slave CPU on the other matrix to achieve switchability between two matrices.

The Matrix Cascading is now configured and can be used. Additional Tie Lines are configured accordingly. The use of cascading is described in Section 5.1.4.

### JAVA TOOL

1. Connect to the Master Matrix and activate the Online Configuration Mode.
2. Select the menu Definition > EXT Units in the task area and press the New button. A popup window opens.

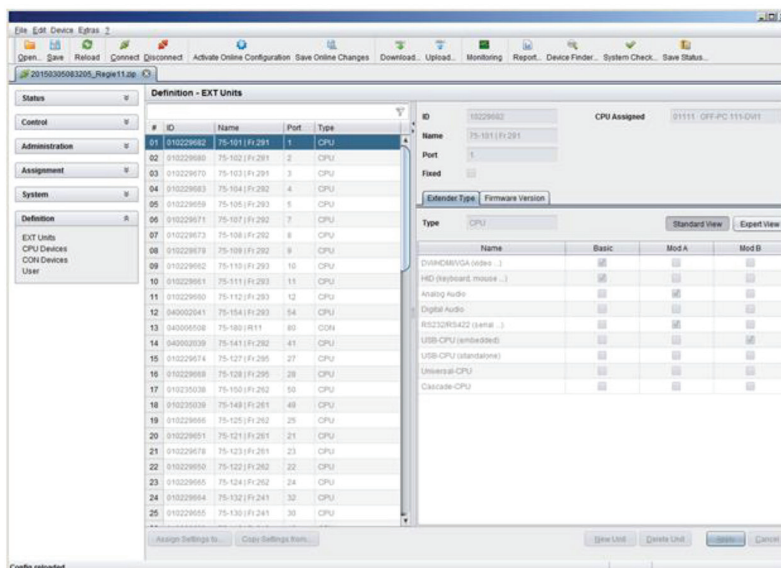


FIGURE 4-64. DEFINITION—EXT UNITS



## CHAPTER 4: CONFIGURATION

3. If the Tie Line should be directed from the Sub to the Master, select Master/Slave CON Unit in the Choose Extender Type selection box. If the Tie Line should be directed from the Sub to the Master, select Master/Slave CPU Unit in the Choose Extender Type selection box.
4. Enter an appropriate extender name into the Name field.
5. Enter a port number into the Port field according to the required connection of the Tie Line.
6. Confirm your settings by pressing the Apply button.
7. If you have created a Master/Slave CON Unit, select Definition > CON Devices in the task area of the master matrix and press the New button. A switchable CON Device will be created.
8. If you have created a Master/Slave CPU Unit, select Definition > CPU Devices in the task area of the Master Matrix and press the New button. A switchable CPU Device will be created.
9. Enter an appropriate extender name into the Name field.
10. Assign the previously configured Extender Unit to the just created Device by moving the Extender Unit from the Extender available field into the Extender assigned field and save your settings by pressing the Apply button.
11. Connect to the Sub Matrix and repeat steps 1 to 10.
12. Select System > System Data in the task area of the Sub Matrix and activate the Sub Matrix option.  
The OSD of the Sub Matrix will immediately freeze and will be only accessible by using the keyboard command <Hotkey>, <s>, <o>.
13. Restart all I/O boards on which any Master/Slave CON or CPU Units have been configured or alternatively restart the matrix.
14. Connect the Tie Lines to the matrices. Ensure that each Master/Slave CON on one matrix is connected to Master/Slave CPU on the other matrix in order to achieve switchability between two matrices.  
The Matrix Cascading is now configured and can be used. Additional Tie Lines are configured accordingly. The use of cascading is described in Section 5.1.4.

### 4.16 MATRIX GRID

In this menu, you can configure a Matrix Grid to connect two or more matrices. This kind of configuration may be necessary if the number of ports in the entire system has to be increased or if certain important connections should be distributed to several matrices because of redundancy.

The connections between two matrices have to be established by Grid Lines that are connected between particular I/O ports as connecting links. The Grid Lines can be used bidirectionally and can respectively handle a full access connection of a CON Device to a CPU Device.

The number of Grid Lines in the system specifies if a CON Device can be switched to a CPU Device in Non-Blocking Access or in Blocking Access and has to be separately determined for each Grid environment.

In this case, Non-Blocking Access means that a Grid Line for a cross-matrix switching operation of a CON Device to a CPU Device is available at any time.

Blocking Access means that for a certain switching operation no Grid Line may be available according to the switching status within the Grid. As a result, no cross-matrix switching will be possible.

## CHAPTER 4: CONFIGURATION

You have the following options to configure Matrix Grid:



### ADMINISTRATION OF SETTINGS

Within a Matrix Grid, you have to differ between settings that have to be made locally for each matrix and settings that can be made globally so that they are valid for the whole Matrix Grid.

The settings in the following menus have to be made separately for each matrix or within the master matrix to affect all matrices in the Grid:

**System, Access, Switch, Network, Date + Time, SNMP, Matrix Grid, Multi-Screen Control**

The settings in the following menus have to be made globally and only once within the Matrix Grid:

**EXT Units, CPU Devices, CON Devices, User, CON Macros, User Macros, CON Favorites, User Favorites, Virtual CPU Devices, Virtual CON Devices**

NOTE: If global settings are made in the respective menus, they will be immediately available on each matrix within the Matrix Grid.

### GENERAL PREPARATION

The following requirements have to be fulfilled before starting the Matrix Grid configuration:

1. The Matrix Grid function (Bundle 4) must be activated on all matrices to be connected to the Grid by a license key (see Section 4.17).
2. Firmware V03.10 must be installed on all matrices to be connected to the Grid.
3. All matrices to be connected to the Grid must be within the same TCP/IP network (see Section 4.4.5).
4. The port 5556 needed for network communication must not be blocked by a firewall.

## CHAPTER 4: CONFIGURATION

### OSD

To configure a Matrix Grid, proceed as follows. The following configuration steps have to be repeated for each matrix separately:

- ◆ Select Configuration > System in the main menu.

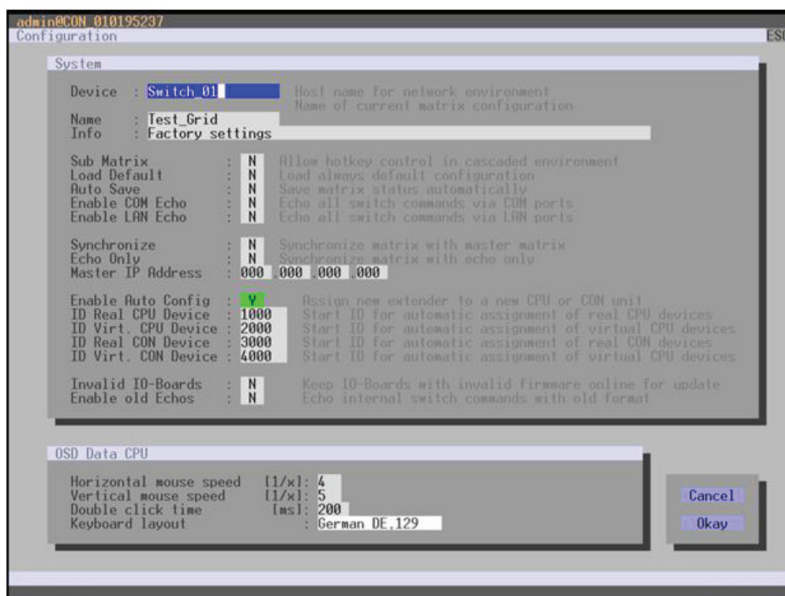


FIGURE 4-65. CONFIGURATION—SYSTEM

1. Enter a unique name for each matrix into the Device field. Each name only may exist once within the Matrix Grid.
2. Enter a unique Grid name into the Name field. The Grid name has to be same within all Grid matrices.
3. Select Configuration > Matrix Grid in the main menu.

## CHAPTER 4: CONFIGURATION

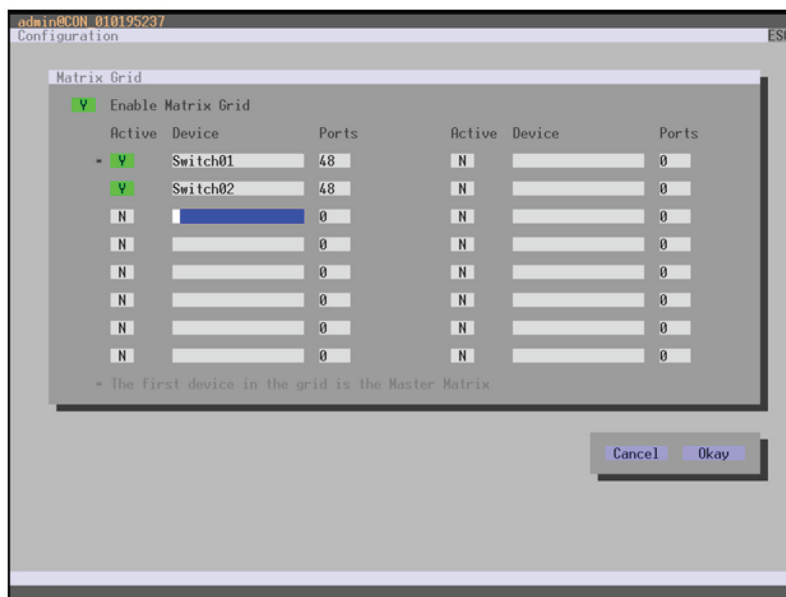


FIGURE 4-66. CONFIGURATION—MATRIX GRID

4. Activate the Enable Matrix Grid function.
5. Write all device names of the Grid matrices into the Matrix Grid list, starting in the left column. Based on the listings, a Grid master will be automatically determined for the Matrix-Grid. The more on the top a matrix is listed in the matrix Grid list, the more likely the matrix is considered in the automatic master selection, provided that certain criteria like system availability are fulfilled.
6. Activate the single matrices in the Matrix Grid list by enabling the Y (YES) function.
7. Enter the number of chassis ports for each matrix (8, 16, 32, 48, 64, 80, 160 or 288).
8. Restart all matrices, beginning with the master matrix.

The Matrix Grid can be used now and offers the possibility for a cross-matrix switching of CON Devices to CPU Devices.

## CHAPTER 4: CONFIGURATION

### JAVA TOOL

- ♦ To use the Matrix Grid, execute the configuration wizard in the menu System > Matrix Grid. It guides you through the configuration of Matrix Grids.

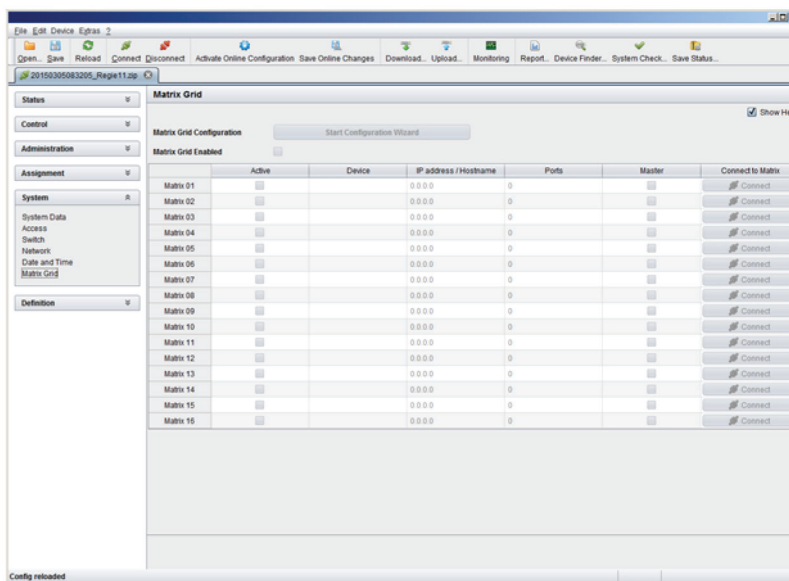


FIGURE 4-67. SYSTEM—MATRIX GRID

### 4.17 USB-HID GHOSTING

This function allows specific keyboard and mice descriptors (device descriptions) to be permanently stored in the CPU unit. This eliminates the need to register and deregister the keyboard and mouse on an operating system each time there is a shared use of a source (computer, CPU) by two or more consoles within a KVM matrix.

Next to the use of Hot Keys commands, the activation and management of the USB-HID Ghosting information can also be handled centrally via KVM matrix to reach all connected KVM extenders at the same time.

You have the following option to option to perform the central management of USB-HID Ghosting information:



#### General Preparation

To use the USB-HID Ghosting management via Tera tool, this requires that USB-HID Ghosting has been already activated at a CPU Unit via Hotkey command or the USB-HID Ghosting information is already available as a file with the extension .dmg.

## CHAPTER 4: CONFIGURATION

### Java Tool

Several general options are available. For these options select the Definition > EXT Units menu in the task area, select an EXT Unit (CPU) and open the USB-HID Ghosting tab:

- ♦ To read the USB-HID Ghosting information of an EXT Unit (CPU), select it and press the button Read in the symbol bar of the tab.
- ♦ To locally store existing USB-HID ghosting information of an EXT Unit (CPU), select it and press the Save As.... button.
- ♦ To delete existing USB-HID ghosting information of an EXT Unit (CPU), press the Reset button.

To transmit any manually activated USB-HID Ghosting information of a single EXT Unit (CPU) to other extenders, proceed as follows:

1. Connect to the KVM matrix via Java tool and activate the Online Configuration mode in the symbol bar.
2. Select the Definition > EXT Units menu in the task area and select the EXT Unit (CPU) with active USB-HID Ghosting.

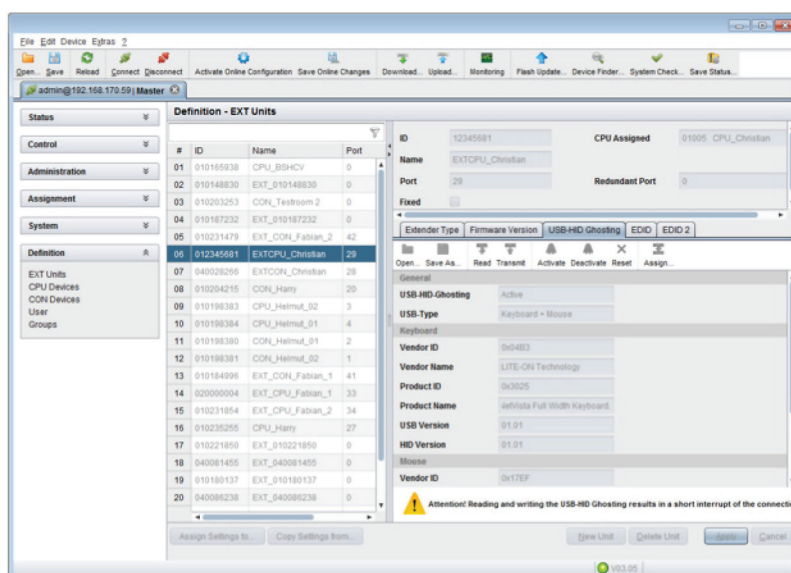


FIGURE 4-68. MENU DEFINITION – EXT UNITS

3. Select the USB-HID Ghosting tab.
4. Press the Read button. The current USB-HID Ghosting information of the EXT Unit (CPU) is read out and shown. At the same time, the USB-HID connection will be disconnected for a few seconds.
5. Press the Assign.... button.
  - A popup window will appear.
6. Select the those EXT Units (CPU) in the field Available to assign settings to that are intended to receive the USB-HID Ghosting information.
7. Press the respective button to move the EXT Units (CPU) into the Assign settings to.... field.
8. Press the Next > button, confirm the occurring notification and finally press Next > again.
9. Press the Start button to activate the transmission and press the Finish button as soon as the transmission is completed.

## CHAPTER 4: CONFIGURATION

To load a USB-HID Ghosting template (.dhg file extension) for a further distribution proceed as follows:

1. Press the Open button in the USB-HID Ghosting tab.
2. Select the respective template with the file extension .dhg and press the Select button.
3. Select the EXT Unit (CPU) the USB-HID Ghosting template should be transmitted to and press the Transmit button.
4. If required, the USB-HID Ghosting information can be transmitted to any connected extender by pressing the Assign.... button.

NOTE: During reading and writing USB-HID Ghosting information, there will be a short interrupt of the USB-HID and video signal.

### 4.18 MANAGEMENT OF DDC INFORMATION (EDID)

By default, the KVM extenders transmit the factory preset DDC (EDID) to the sources (computer, CPU). This information is suitable in most cases.

For special requirements, DDC information can be retrieved and uploaded as a binary file to both the CPU Unit and the CON Unit.

Next to the use of Hotkeys commands, the activation and management of the DDC information can also be handled centrally via KVM matrix to reach all connected KVM extenders at the same time.

You have the following option to manage DDC Information:



#### General Preparation

To use the DDC information management via Tera tool, this requires that DDC information has been already transmitted at a CPU Unit via Hotkey command or the DDC information is already available as a file with the extension .bin.

#### Java Tool

Several general options are available. For these options select the Definition > EXT Units menu in the task area, select an EXT Unit (CPU) and open the EDID tab:

- ♦ To read the DDC information of an EXT Unit (CPU), select it and press the Read button in the symbol bar of the tab.
- ♦ To locally store existing DDC information of an EXT Unit (CPU), select it and press the Save As.... button.
- ♦ To set existing DDC information of an EXT Unit (CPU) back to factory default, press the Reset button.

To copy any manually transmitted USB-HID Ghosting information of a single EXT Unit (CPU) to other extenders, proceed as follows:

1. Connect to the KVM matrix via Java tool and activate the Online Configuration mode in the symbol bar.
2. Select the Definition > EXT Units menu in the task area and select the EXT Unit (CPU) with already transmitted EDID information.

## CHAPTER 4: CONFIGURATION

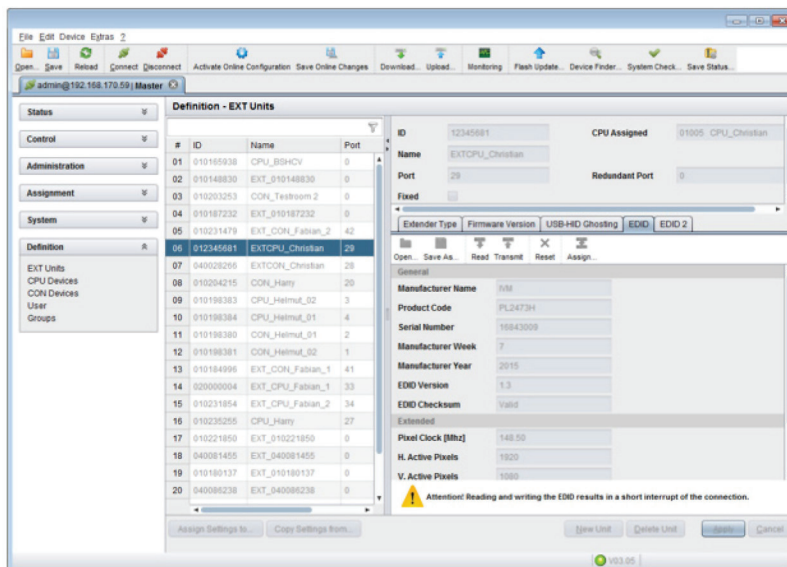


FIGURE 4-69. MENU DEFINITION – EXT UNITS

3. Select the EDID tab.

4. Press the Read button.

The current DDC information of the EXT Unit (CPU) is read out and shown.

5. Press the Assign.... button.

A popup window will appear.

6. Select those EXT Units (CPU) in the Available to assign settings to field that are intended to receive the USB-DDC information.

7. Press the respective button to move the EXT Units (CPU) into the Assign settings to.... field.

8. Press the Next > button, confirm the occurring notification and finally press Next > again.

9. Press the Start button to activate the transmission and press the Finish button as soon as the transmission is completed.

To load a DDC information template (.bin file extension) for a further distribution proceed as follows:

1. Press the Open button in the EDID tab.

2. Select the respective template with the file extension .bin and press the Select button.

3. Select the EXT Unit (CPU) the DDC template should be transmitted to and press the Transmit button.

4. If required, the DDC Ghosting information can be transmitted to any connected extender by pressing the Assign.... button.



## CHAPTER 4: CONFIGURATION

### 4.19 FIRMWARE UPDATE

#### 4.19.1 MATRIX UPDATE

---

The firmware of the matrix can be updated in this menu.

You have the following option to access the menu:



#### JAVA TOOL

NOTE: To update the matrix, only use computers that are not integrated into the KVM extender / matrix setup.

Ensure that the computer used for the update is not set into standby mode or sleep mode during the update.

Ensure that your configuration has been saved externally before you start the update.

For network stability, we do NOT recommend updating via a WLAN.

# CHAPTER 4: CONFIGURATION

## PREPARATION

Take the following steps to prepare for the matrix update:

1. Save the matrix configuration externally (see Section 4.12.4).
2. Open Extras > Options in the menu bar and insert in the setting Firmware Directory the directory from which the update files should be standardly sourced.
3. Put all hot spare boards into the matrix.
4. Activate the Syslog function (see Section 4.12.4) for the monitoring of the update, if unlocked via license key.

NOTE: Ensure that all USB 2.0 extenders are only connected to the provided ports (fixed ports) before you start the matrix update. Non-compliance may affect the stability of the update.

## PERFORMING THE UPDATE

Take the following steps in order to be prepared for the matrix update:

1. Select Administration > Update Matrix Firmware in the task area.

All components of the matrix that can be updated will be automatically selected and highlighted in green.

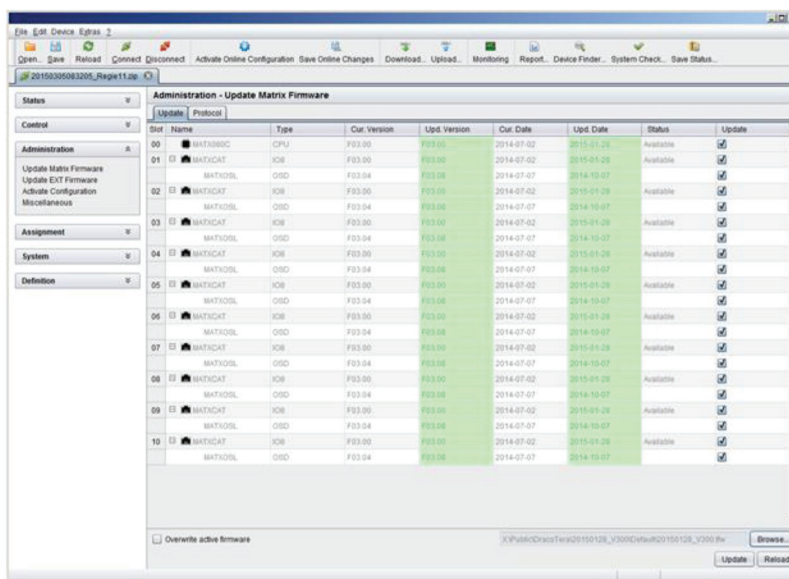


FIGURE 4-70. ADMINISTRATION—UPDATE MATRIX FIRMWARE

2. Start the update by pressing the Update button in the appearing pop up window.
  3. Restart the Matrix after the update by pressing the Restart matrix button in the lower part of the working area.
- For a safe initialization of the matrix, we recommend a cold start (power cycle).



## CHAPTER 4: CONFIGURATION

### 4.19.2 EXTENDER UPDATE

The firmware of the extenders connected to the matrix can be updated in this menu.

You have the following option to access the menu:



#### PREPARATION

Take the following steps in order to be prepared for the extender update:

1. Save the matrix configuration externally (see Section 2.9). Open Extras > Options in the menu bar and insert the name of the directory from which the update files should be sourced in Firmware Directory.
2. Connect all hot spare extenders to the matrix.

CAUTION: For network stability, an update via WLAN is not recommended.

#### PERFORMING THE UPDATE IN STANDARD MODE (PARALLEL UPDATE)

1. Select Administration > Update EXT Firmware in the task area. The standard mode for the parallel update will be selected by default and the Upload Firmware tab will be opened.

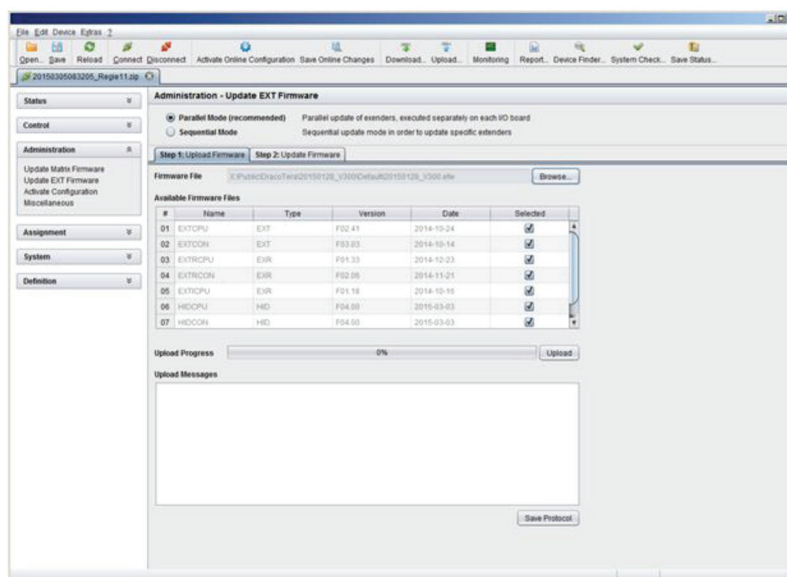


FIGURE 4-71. ADMINISTRATION—UPDATE EXT FIRMWARE

## CHAPTER 4: CONFIGURATION

2. Before the actual update process, all firmware files have to be uploaded to the respective I/O boards on that extenders will have to be updated. If a newer firmware is available, appropriate I/O boards will be automatically selected for the upload in the Selected column and highlighted in green.

3. Start the upload and distribution of the update files by pressing the Upload button.

NOTE: By performing the upload process, no update files will be installed. The update process can be performed at a later time.

If all I/O cards are not selected, the upload of the update files will be performed in sequence.

4. After finishing the upload process, successful completion will be confirmed by a popup message. If you want to directly start the actual update process, you will have to confirm this by pressing the Yes button. You will be immediately forwarded to the Update Firmware tab.

NOTE: When updating an identical or an older firmware version than the version currently installed, the Force Update option in the lower part of the working area must be enabled.

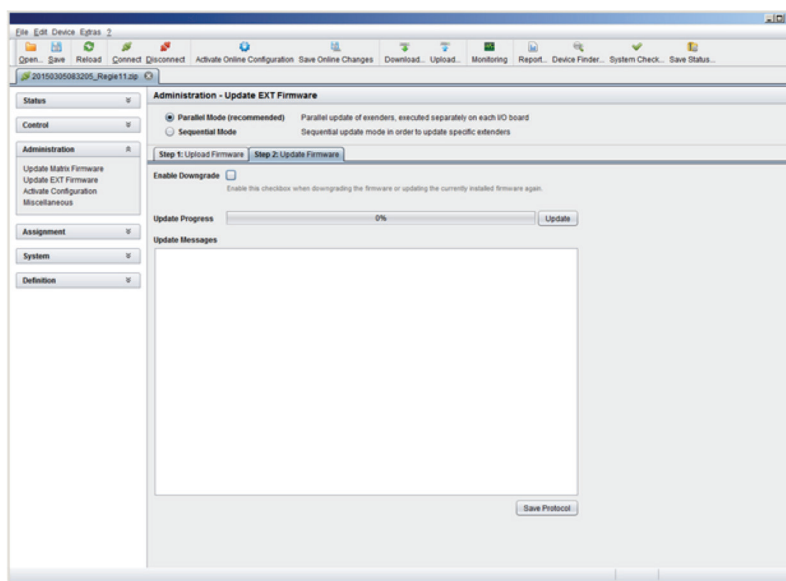


FIGURE 4-72. ADMINISTRATION—UPDATE EXT FIRMWARE

5. Start the actual update process by pressing the Update button.

NOTE: Just before the update process, all affected I/O boards will be set into Service Mode and retrieved gradually after finishing the respective updates.

### PERFORMING THE UPDATE IN EXPERT MODE (SEQUENTIAL UPDATE)

Take the following steps in order to be prepared for the extender update:

1. Select Administration > Update EXT Firmware and select Expert Mode in the upper part of the working area. All extenders that can be updated will be automatically selected and highlighted in green.

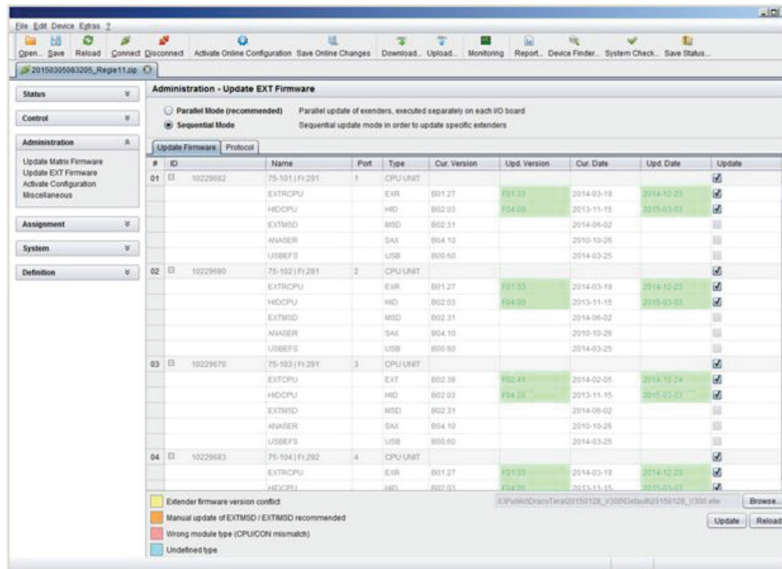


FIGURE 4-73. ADMINISTRATION—UPDATE EXT FIRMWARE

2. Set the matrix into Service Mode upon request in the popup window or via Matrix > Activate Service Mode in the menu bar. During activation, all matrix functions are disabled on the I/O boards on which an update is currently performed. An OSD picture indicates the activation of the Service Mode and is displayed on all monitors that are connected to the matrix via a CON device. In addition, the Service Mode is indicated by a red tool icon in the lower part of the working area.

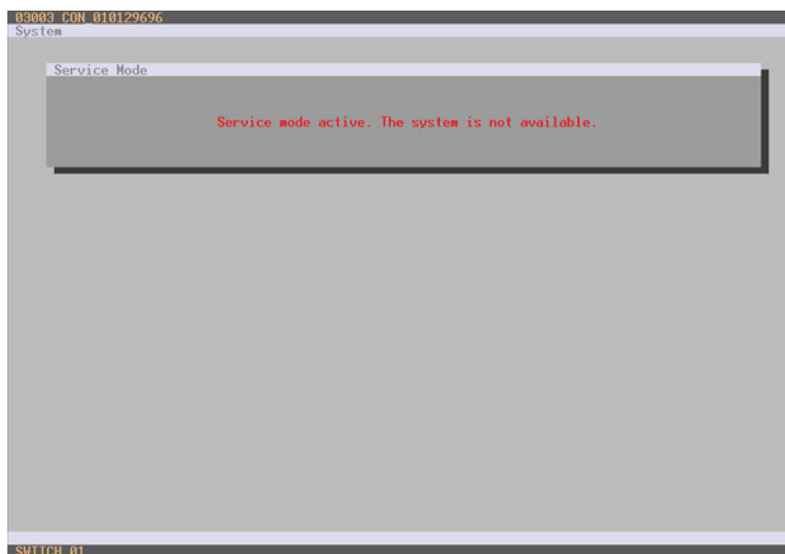


FIGURE 4-74. OSD VIEW—SERVICE MODE

3. Start the update by pressing the Update button in the lower part of the working area.

## CHAPTER 4: CONFIGURATION

4. Quit Service Mode after updating after responding to the confirmation request in the popup window or via Matrix > Deactivate Service Mode in the task area.
5. Verify after the update in the Java tool via Administration > Update EXT Firmware in the Protocol tab of the Expert Mode that the updates for all extenders have been installed correctly.

### 4.20 LICENSE MANAGEMENT

In this menu, the matrix can be upgraded with new function bundles by installation of license keys.

To obtain license keys to upgrade matrix functions, contact Black Box Technical Support at 877-877-2269 or [info@blackbox.com](mailto:info@blackbox.com).

You have the following option to access the menu.



#### JAVA TOOL

To activate a function bundle, proceed as follows:

1. Select Administration > Miscellaneous > License Management in the task area.

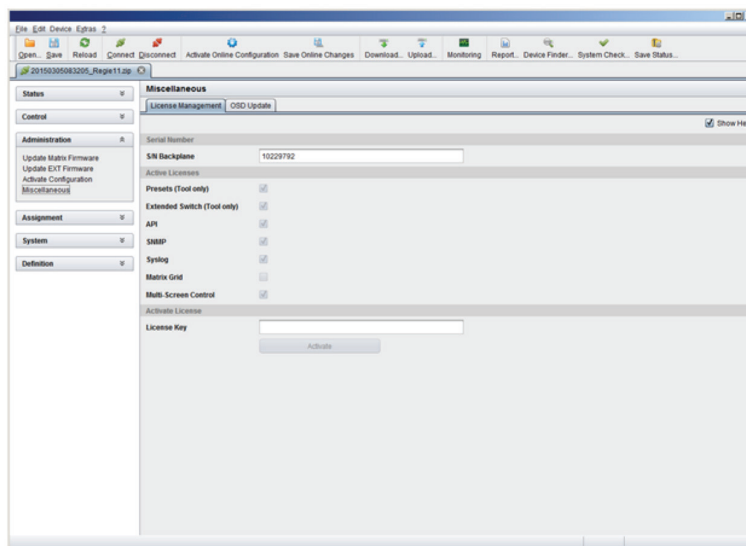


FIGURE 4-75. ADMINISTRATION—MISCELLANEOUS—LICENSE MANAGEMENT

2. Enter your license key in the working area under Activate Bundles in the License Key field.
3. To activate the license key, press the Activate button. The new functions will be immediately enabled; a restart of the matrix will not be necessary.

## CHAPTER 5: OPERATION

The Modular KVM Matrix Switches can be operated in three different ways.

### 1. Direct Switching

- ♦ via a keyboard connected to a CON port and the favorites
- ♦ by a macro keyboard connected to a console port

### 2. OSD

- ♦ via keyboard/mouse directly connected to the CPU board of the matrix
- ♦ via keyboard/mouse connected to a CON Unit and the OSD

### 3. External Switching Commands

- ♦ via an external computer via Java tool (network connection required)
- ♦ via a media control (network or serial connection required)

## 5.1 OPERATION VIA HOTKEYS

### 5.1.1 DIRECT SWITCHING

---

Direct switching by favorites on a keyboard is the fastest way for a user to switch at his console between different CPUs. This offers the option to switch video, keyboard and mouse or video only.

#### DIRECT SWITCHING OF VIDEO, KEYBOARD AND MOUSE

1. Start Command Mode with the hotkey. Shift and Scroll LEDs on the keyboard will flash if Command Mode is activated.
2. Enter the index number of the new CPU from the list of favorites and confirm with <Enter>.

At the same time, the Command Mode is closed and the console is connected to the new CPU, which takes over complete control.

Example: Switching to favorite CPU 7 with video, keyboard and mouse

<left Shift>, <left Shift>, <7>, <Enter>

NOTE: Fastest switching time can be achieved by using identical mice, keyboards and monitors. This contributes to a smooth and seamless direct switching of the matrix.

#### SWITCHING IN PRIVATE MODE

1. Start Command Mode with the hotkey. Shift and Scroll LEDs on the keyboard will flash if command mode is activated.
  2. Enter the index number of the new CPU from the list of favorites and confirm with <left Shift>, <Enter> pressed at the same time.
- At the same time, the Command Mode is closed and the console is connected to the new CPU with complete control in Private Mode.

## CHAPTER 5: OPERATION

Example: Switching to favorite CPU 3 in Private Mode

<left Shift>, <left Shift>, <3>, <left Shift>, <Enter>

### DIRECT SWITCHING OF VIDEO

1. Start Command Mode with the hotkey.

Shift and Scroll LEDs on the keyboard will flash if command mode is activated.

2. Enter the index number of the new CPU from the list of favorites and confirm with <Space>.

At the same time, Command Mode is closed and the console is connected to the new CPU with video only.

Example: Switching to favorite CPU 1 with video only

<left Shift>, <left Shift>, <1>, <Space>

### SWITCH TO PREVIOUS CPU

1. Start Command Mode with the hotkey. Shift and Scroll LEDs on the keyboard will flash if Command Mode is activated.

2. Press the key <p> of your keyboard.

At the same time, Command Mode is closed and the console is connected to the previous CPU with complete control.

NOTE: If you switch to a CPU that was previously connected with Video Access only, you will be connected to this CPU with full KVM access.

NOTE: You can only switch to valid, unused CPUs using hotkeys. The options Force Connect and Force Disconnect as well as the restrictions of the User ACL and CON ACL are taken into account.

Hotkeys are only supported if neither Enable User Login nor the Enable User ACL is selected and the user is logged in the OSD.

### DISCONNECT CURRENT CONNECTION

1. Start Command Mode with the hotkey. Shift and Scroll LEDs on the keyboard will flash if Command Mode is activated.

2. Press the <Backspace> key on your keyboard.

The Command Mode is closed and the console is disconnected from the previous connected CPU.

#### 5.1.2 SCAN MODE

---

Scan Mode enables fast switching between video signals from different CPUs registered as favorites without continuously using the hotkey.

Switching between two video signals can even take place within one frame.

1. Start command mode with the hotkey. Shift and Scroll LEDs on the keyboard will flash if command mode is activated.

2. Press the key <Left Shift> and hold it down. You can now enter the index numbers of the various CPUs from the list of favorites with the keyboard and immediately switch to the video signal of the respective CPU after entering the index number.

3. Leave Scan Mode by pressing <Left Shift> + <Esc>.

NOTE: Optimal results can be achieved by the use of as identical resolutions as possible. This contributes to a smooth and seamless function of the scan mode.





## CHAPTER 5: OPERATION

### 5.1.3 FUNCTION KEYS <F1>–<F6>

---

In Command Mode, you can retrieve the macros 1–16 with the function keys <F1>–<F16> on the connected standard keyboard instead of the special macro keyboard.

The stored command sequence for the appropriate function key is executed and Command Mode is left immediately.

NOTE: It is not necessary to use <Enter> to confirm selection of macros.

### 5.1.4 ADDRESSING OF MAIN AND SUB MATRICES

---

The Modular KVM Matrix Switch can be cascaded over two levels. You can send the commands (including opening the OSD) to either the main or the sub matrix.

When in command mode, you can select whether commands should be handled in the main or the sub matrix.

#### OSD Access

- OSD access to the main matrix: <Left Shift>, <Left Shift>, <m> (optional), <o>
- OSD access to the sub matrix: <Left Shift>, <Left Shift>, <s>, <o>

To do a cross-matrix switching, proceed as follows:

1. Open the OSD of the master matrix with the following keyboard sequence:

<hotkey>, <o>

2. Select the CPU device configured as Tie Line in the CPU selection list and press <Enter> to switch.

3. Open the OSD of the sub matrix with the following keyboard command:

<hotkey>, <s>, <o>

4. Select your target CPU in the CPU selection list of the sub matrix.

NOTE: The selected master matrix / sub matrix mode is permanently activated until the other mode will be manually activated. This means that if you select <s>, all prospective commands will be sent to the sub matrix, but not if the Command Mode is left in the meantime.

## CHAPTER 5: OPERATION

### 5.2 KVM SWITCHING

You have the following option to perform switching operations with the Modular KVM Matrix Switch.



#### OSD

- Select Switch in the main menu.

Press <F8> to show inactive CPU devices to expand the current view.

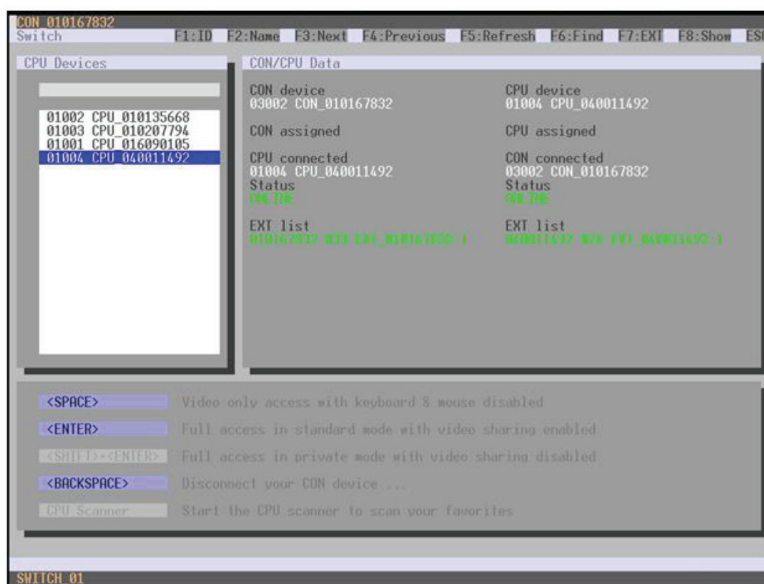


FIGURE 5-1. SWITCH MENU

To switch the console to any available CPU, proceed as follows:

1. Select in the CPU Devices list on the left hand side that one that should be connected to the CON Device.
2. Confirm desired connection type with the appropriate keyboard command.

Switching operations from the own CON Device can only be performed on CPU Devices that are available in the CPU Devices list.

NOTE: Listed CPU Devices highlighted in red color are currently connected in Private Mode and are blocked by the connected CON Device.



## CHAPTER 5: OPERATION

### SWITCHING VIA SELECTION LIST FOR CPU DEVICES

The matrix offers the ability to execute KVM switching operations via a selection list for CPU Devices next to the OSD in full screen.

To use the selection list for CPU Devices, proceed as follows:

1. Activate the Enable CPU Selection List option in the Configuration menu for those consoles where the selection list for CPU Devices should be available.
2. Execute the key sequence for opening the OSD. The selection list immediately appears in the preset position of the extender OSD.

NOTE: Pressing <F8> hides inactive CPU Devices to provide a clearer overview.

3. Execute the desired switching operation by pressing the respective key (see Section 5.3). To prevent a switching operation and access OSD, press <F7>. To close the selection list, press <Esc>.

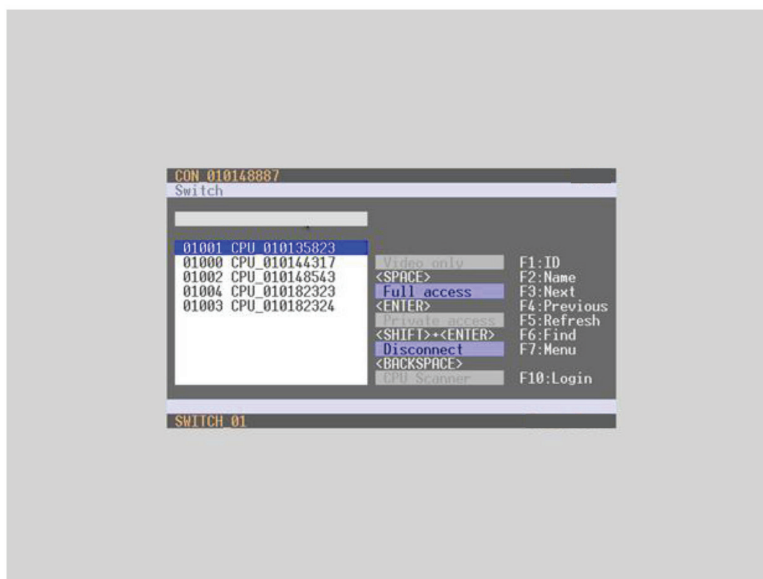


FIGURE 5-2. SELECTION LIST CPU DEVICES

### ACTIVATING THE AUTOMATIC SCAN MODE FOR CPU DEVICES

The matrix offers the ability to use a scan mode based on the favorite list of each console or user. Scan mode allows the matrix to switch in sequence between the CPU Devices in the favorite list within a predefined time. All scans are performed in video only mode.

To configure scan mode, refer to Section 4.11.1.

You have the following option to activate the scan mode:



## CHAPTER 5: OPERATION

To activate scan mode, proceed as follows:

1. Define a favorite list for the respective CON Device or user (see Section 4.11.4 for CON Devices or see Section 4.5.2 for users).
2. Start Command Mode with the hotkey and press <o> to open OSD.
3. Select one of the CPU Devices in the CPU selection list that are defined in your favorite list.
4. Confirm your selection by pressing the CPU Scanner button. The scan will automatically start.
5. If you have enabled the Force CPU Scan option, the scan will automatically start after switching the respective CON Device to any CPU Device from the favorite list without the need to press the CPU Scanner button.

### 5.3 EXTENDED SWITCHING

You have the following option to perform switching operations with the Modular KVM Matrix Switch.



#### OSD

To switch any console to any available CPU, proceed as follows:

- ♦ Select Extended Switch in the main menu.

NOTE: Pressing <F8> hides inactive CPU Devices to provide a clearer overview.

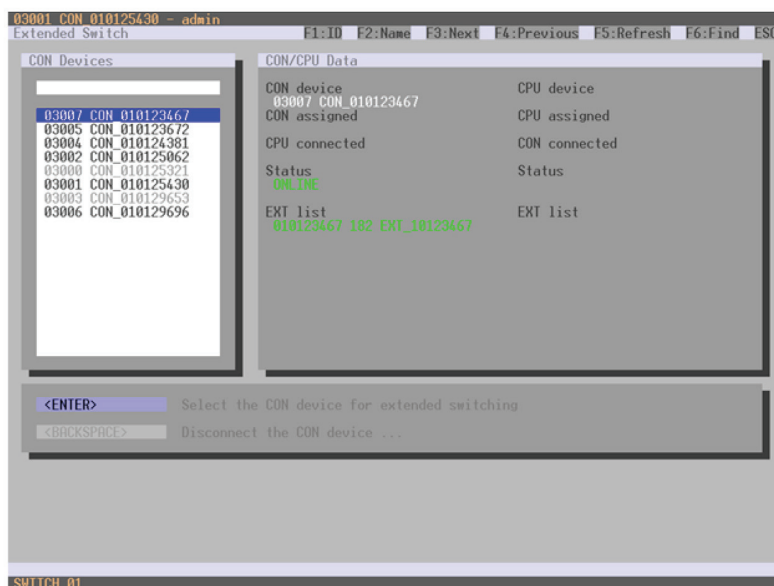


FIGURE 5-3. EXTENDED SWITCH MENU

## CHAPTER 5: OPERATION

1. Select in the CON Devices list on the left hand side the one that should be switched to a CPU Device and open it by pressing <Enter>.
2. Select in the CPU Devices list on the left hand side that one that should be connected to the open CON Device.
3. Confirm the desired connection type with the respective keyboard command.

Switching operations from the user's CON Device can only be performed on CPU Devices that are available in the CPU Devices list.

The following information is shown in this menu.

**TABLE 5-1. EXTENDED SWITCH MENU OPTIONS**

FIELD	DESCRIPTION
CON device	Assigned physical extender unit (CON Unit)
CON assigned	Virtual CON Device that is assigned to the real CON Device
CPU connected	Currently connected CPU Device
CON status	Current connection status (CON Device)
EXT list	List of all available physical extender units (CON Units)
CPU device	Assigned physical extender unit (CPU Unit)
CPU assigned	Real CPU Device that is assigned to a virtual CPU Device
CON connected	Currently connected CON Device
CPU status	Current connection status (CPU Device)
EXT list	List of all available physical extender units (CPU Units)

You can select the following switching functions.

**TABLE 5-2. SWITCHING FUNCTIONS**

FUNCTION	KEYBOARD COMMAND
Set a video only connection	<Space>
Set a KVM connection	<Enter>
Set a KVM connection in private mode (video sharing disabled).	<Shift> + <Enter>
Disconnect a CON Device from a CPU Device.	<Backspace>

## CHAPTER 5: OPERATION

### JAVA TOOL

You have two options to perform switching operations for the Modular KVM Matrix Switch via Java tool.

Possibility 1:

- ◆ Select Control > Extended Switch in the task area.

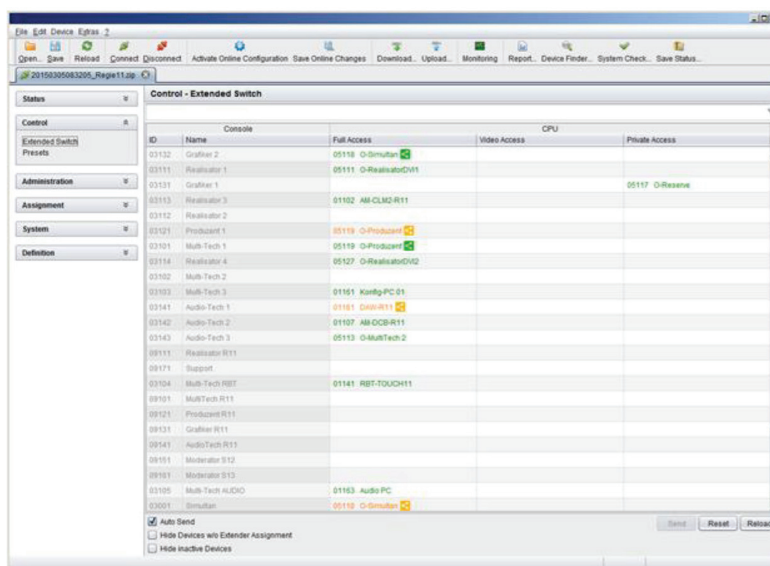


FIGURE 5-4. CONTROL—EXTENDED SWITCH

All connected consoles and the associated CPU connections are shown in columns in the working area in this menu.



NOTE: Switching operations can only be performed in online mode. That means an active network connection is required between the matrix and the Java Tool.

- ◆ To set a KVM connection between a console and a CPU, double-click on the corresponding selection box within the Full Access column and select the requested CPU.
- ◆ To set a video connection between a console and a CPU, double-click on the corresponding selection box within the Video Only column and select the requested CPU.
- ◆ To set a Private Mode connection between a console and a CPU, double-click on the corresponding selection box within the Private Mode column and select the requested CPU.

NOTE: If a CPU console does not have access rights, it will not appear in the list.

The following symbols are shown in the connection overview.

**TABLE 5-3. SYMBOLS**

SYMBOL	DESCRIPTION
	CON Device is connected via Shared Access with at least one further console to the same CPU. The CON Device has Full Access at the moment.
	CON Device is connected via Shared Access with at least one further console to the same CPU. The CON Device has a Video Access connection at the moment.

You can use the following buttons to perform a switching operation.

**TABLE 5-4. SWITCHING BUTTONS**

BUTTON	FUNCTION
Send	Send switching operations to the matrix
Reset	Disconnect all existing connections within the matrix
Reload	Reload switching status

**NOTE:** When the Auto Send function in the left lower corner of the work area is ticked, switching operations will be completed immediately without user confirmation via the Send button.

When the Hide Devices w/o Extender Assignment function in the left lower corner of the work area is ticked, only CON and CPU Devices that are assigned to extenders are shown.

## CHAPTER 5: OPERATION

Possibility 2:

- ◆ Select Status > Matrix View in the task area or select Status > Grid Port View when using a Matrix Grid.

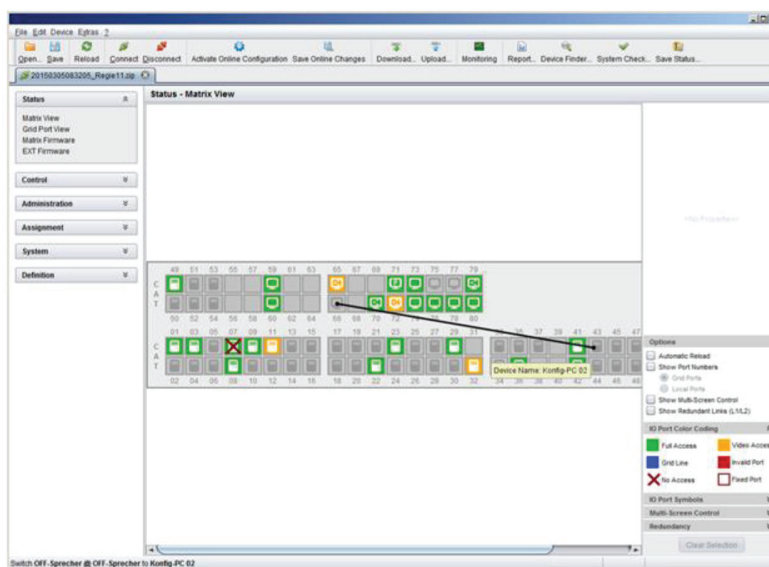


FIGURE 5-5. STATUS—MATRIX VIEW

To perform switching operations between CON and CPU Devices, proceed as follows:

1. Move the mouse cursor to the port that has to be switched.
2. Hold down the left mouse button and move the cursor to the port that has to be connected to the initial port. The current cursor movement will be displayed by a black auxiliary line.
3. Release the left mouse button. A popup to select the available switching type (Full Access, Video Access or Private Mode) will be opened.
4. Select the desired switching type. The switching operation will be immediately executed. At the same time all extender units that are assigned to the involved devices will be switched.

NOTE: If a port is shown with a red cross on Matrix View, the console does not have access rights to the CPU connected to that port.

To disconnect an existing connection between CON and CPU Devices, proceed as follows:

1. Click on the port that is to be disconnected by using the right mouse button.
2. Select the Disconnect function in the popup that appears. The connected ports will be immediately disconnected. At the same time, all further connections of the extenders assigned to the involved devices will be disconnected.



## CHAPTER 5: OPERATION

### 5.4 SWITCHING VIA A MACRO LIST

Next to executing macros via function keys <F1>-<F16>, they can also be executed via Macro List in the OSD. At the same time this specific list offers the possibility to see the content of the various macros including the single commands before executing them. There are 16 of the total 32 macros displayed per page.

You have the following option to to use the Macro List:



#### OSD

Select Macro List in the main menu.

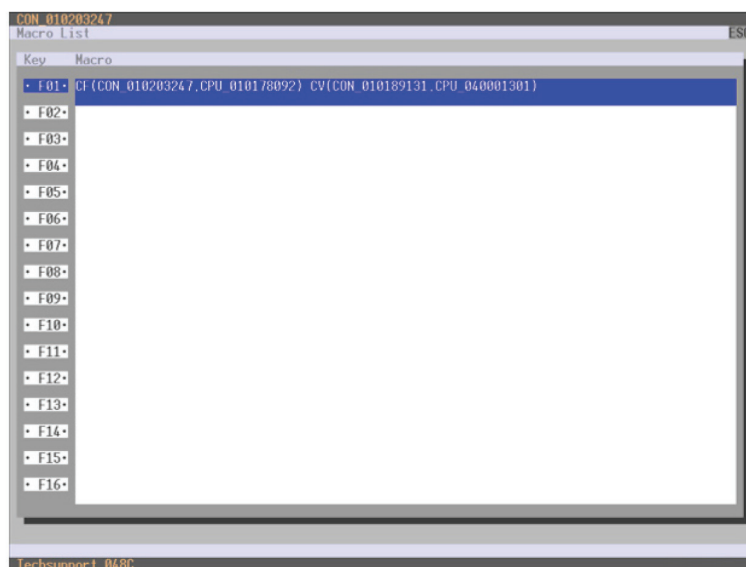


FIGURE 5-6. MENU – MACRO LIST

1. Make sure that you have already configured CON or user macros.
2. Select the respective macro in the list that you want to execute. If you want to execute a macro 17-32 (<Shift>< F1>-<F16>), press the <Page Down> key and select the macro afterwards.
3. Execute the macro by pressing the key <Enter>. The macro will be immediately executed.

NOTE: If the Macro List should be directly displayed upon opening OSD, activate the Show Macro List option in the Configuration > CON Devices menu for the respective CON Devices.

## CHAPTER 5: OPERATION

### 5.5 SWITCHING OF SINGLE EXTENDERS WITHIN DEVICES

You can independently switch single extenders within configurations consisting of CON and CPU devices with multiple extenders. You have the following option to switch single extenders.



#### OSD

To switch a single extender a device with multiple extender, proceed as follows:

- Select Switch in the main menu.

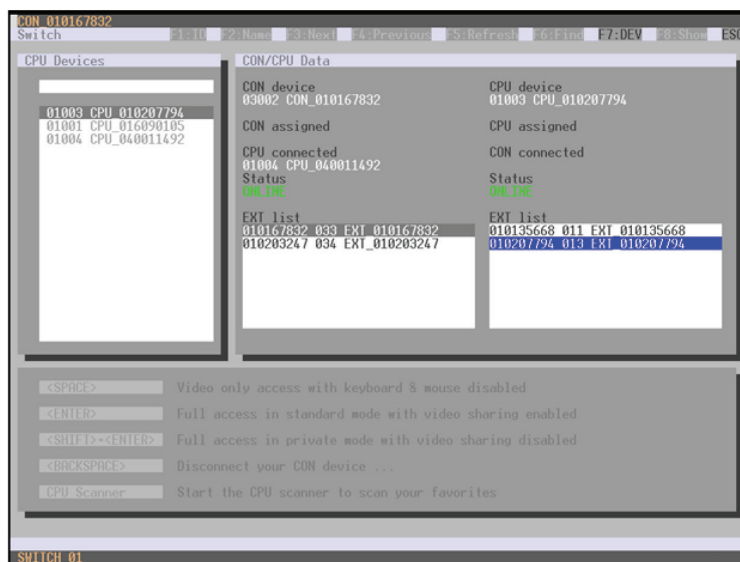


FIGURE 5-7. SWITCH MENU

1. Select the respective CPU Device in the CPU selection list containing the extender you want to have access to.
2. Press the function key <F7> on the keyboard. The standard will change into the switching mode for single extenders.
3. Select the extender you want to switch within your CON Device.
4. Access the extender list of the selected CPU Device by pressing the key <Tab>.
5. Select the CPU extender you want to switch to and press the key <Space> to execute the switching operation.

NOTE: Switching of single extenders from a Device is only possible in video only mode. Single extenders of a Device that are already switched will be highlighted with "!".

## CHAPTER 5: OPERATION

### 5.6 CON SWITCH

KVM extender CON Units connected to a local source (computer, CPU) can be locally switched via the matrix. Switching is performed between the local source and the KVM connection and can be executed via hotkeys or via OSD.

If you switch to the local source, the KVM connection will be automatically disconnected.

NOTE: When using CON Units with the possibility to connect a local source (computer, CPU) in a Multi-Screen Control environment, the local switching will be disabled.

You have the following option to switch to the local source.



#### OSD

- Select Switch in the main menu.

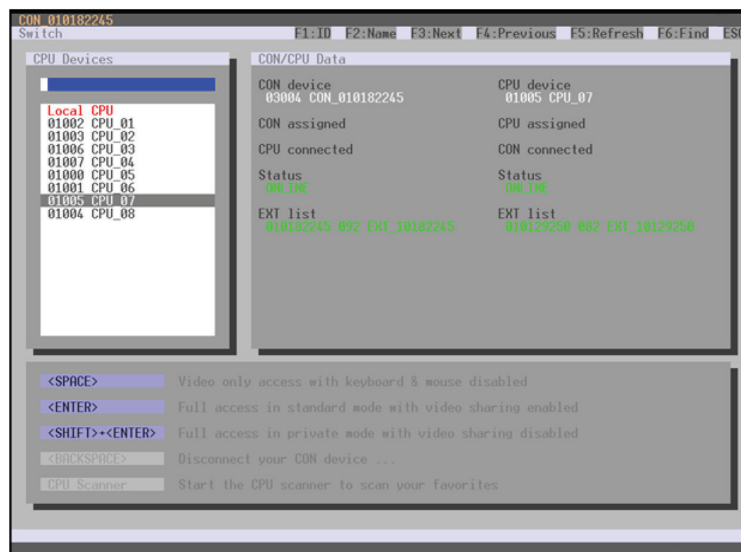


FIGURE 5-8. CON SWITCH

To switch to a local source, proceed as follows:

1. If you are not in the Switch menu of the OSD, start Command Mode with the hotkey (see Section 4.1).
2. Press <o> to open OSD. You will see a list of all available CPUs as a start menu.
3. Switch to the CPU in the Local CPU list. The switching operation to the local source will be performed immediately.

## CHAPTER 5: OPERATION

NOTE: The local source (computer, CPU) will be only shown in the OSD if the connected CON Unit includes the option for a local connection.

As an alternative, the following keyboard commands are available to switch to the local source.

**TABLE 5-5. KEYBOARD COMMANDS TO SWITCH TO A LOCAL SOURCE**

FUNCTION	KEYBOARD COMMAND
Switching to extender connection	<hotkey>, <k>, <1>, <Enter>
Switching to extender connection 2 (only with redundant CON Units)	<hotkey>, <k>, <2>, <Enter>
Switching to the local source (computer, CPU)	<hotkey>, < >, <Enter>

### 5.7 MULTI-SCREEN CONTROL

The Multi-Screen function contains a switching of the USB-HID signal between different statically connected sources (computer, CPU) within a CON Device and can be performed in two different ways:

#### SWITCHING VIA MOUSE

The switching of the USB-HID signal can be made by a movement of the mouse pointer beyond the edge of the current display to a neighboring display (see Section 4.11.7).

To perform a switching operation by movement of the mouse pointer, proceed as follows:

1. Move the mouse pointer to the edge of the display that borders the neighboring display vertically or horizontally.
2. Move the mouse pointer beyond the edge of the display. The mouse pointer will appear on the adjacent display. The switching operation has been performed and the USB-HID signal will now be available at the target display.

#### SWITCHING VIA KEYBOARD

Switching of the USB-HID signal can also be achieved using the keyboard (for configuration, see Section 4.11.7).

To perform a switching operation via keyboard command, proceed as follows:

1. Start Command Mode with the hotkey (see Section 4.1).
2. Select the target display by pressing the respective key on the numeric pad of the keyboard. The switching operation will be performed and the USB-HID signal will be available at the target display.



## CHAPTER 5: OPERATION

You can select the following switching operations.

TABLE 5-6. SWITCHING OPERATIONS

KEYBOARD COMMAND	FUNCTION
<current hotkey>, <Num 0>	Switching of the USB-HID signal to the display (CON Unit with keyboard and mouse)
<current hotkey>, <Num 1>	Switching of the USB-HID signals to display #1
<current hotkey>, <Num 2>	Switching of the USB-HID signals to display #2
<current hotkey>, <Num 3>	Switching of the USB-HID signals to display #3
<current hotkey>, <Num 4>	Switching of the USB-HID signals to display #4

### 5.8 USB 2.0 SWITCHING

Switching USB 2.0 extenders basically works like switching KVM extenders. The following scenarios to switch USB 2.0 extenders are possible.

1. An extender unit with USB 2.0 will be created and assigned to an already existing device with existing KVM extender units (see Section 4.10 or Section 4.11.1).
2. A separate device for the extender unit with USB 2.0 will be created without assigning a KVM extender unit to that device. This possibility offers separate switching of the USB 2.0 signal (see Section 4.10 or Section 4.11.1).

NOTE: Switching USB 2.0 signals uses Extended Switching functionality (see Section 5.3).

When using parallel operation within the matrix, set the Release Time in the Configuration > Switch menu to 10 seconds or more (see Section 4.11.6). Otherwise, the connection of the USB 2.0 extender will not be established for security and stability reasons.

### 5.9 PRESETS

Predefined macros to switch the matrix without loading a new configuration can be created and activated in this menu. You have the following option to access the menu.



## CHAPTER 5: OPERATION

- ◆ Select Control > Presets in the task area.

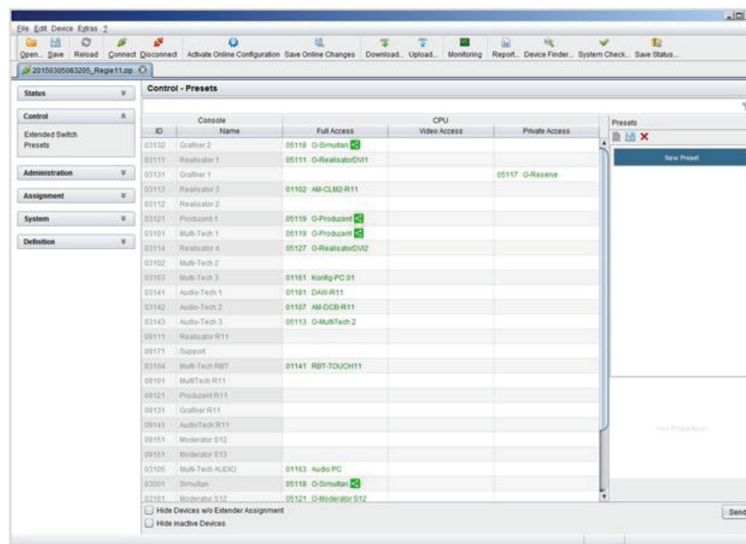


FIGURE 5-9. CONTROL—PRESETS

To create a new switch macro, proceed as follows:

1. Open a new switch macro by clicking the New symbol in the right column of the working area.

You are asked if the existing connections should be taken over for the new switch macro.

2. Set the desired switching operations in the corresponding columns (Full Access, Video Only or Private Mode) by using a double click on the appropriate selection box or use the function for a disconnect (Disconnect CPU).
3. Save the created switch macro by clicking the Save symbol in the right column of the working area. A save dialog will be opened.
4. Enter a name or the new switch macro and confirm by pressing the Ok button in the save dialog.
5. By clicking on a selected switch macro with the right mouse button, you can create a copy of the current switch macro when using the Save as... option.
6. Previously saved macros can be deleted by pressing the Delete symbol.

To load a predefined switching, proceed as follows:

1. Select the switch macro in the right column of the working area that has to be loaded.
2. Activate the selected switch macro by pressing the Send button on the bottom right of the working area.

NOTE: A predefined switch macro can only be activated in online mode. When loading presets, only those switching operations that are compliant with the hardware and the configuration of the currently used matrix are taken into account.

# CHAPTER 5: OPERATION

## 5.10 REDUNDANCY FUNCTION

KVM extenders with redundant connectors for interconnect cables can be simultaneously operated with both connectors at a single Matrix or a Matrix Grid (from firmware version V04.00).

The connector labeled with Link 1 at the KVM extender is meant for the primary connection. If the connection on CON or CPU Unit side is interrupted due to any problem, the connection will be automatically re-established through the second connector labeled with Link 2.

For this kind of redundancy function, there is no need for any configuration of the KVM matrix or the KVM extenders.

If needed, you can manually switch between Link 1 and Link 2 at the CON Unit (see Section 5.5).

You have the following possibilities to check the status of redundancy.



### OSD

- Select Switch in the main menu.

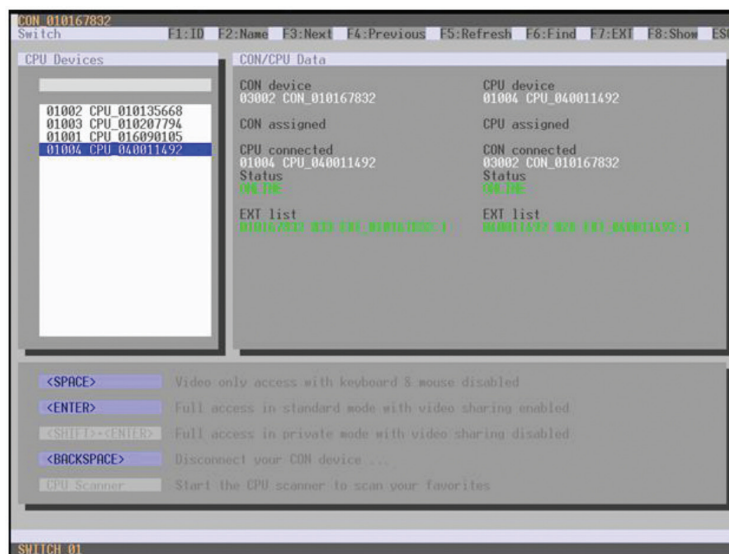


FIGURE 5-10. SWITCH

When using redundant KVM extenders, the respectively active connector is shown in this view under EXT list in the field CON/CPU Data. If the first connector (Link 1) is active, it will be highlighted with :1 behind the respective extender. If the second connector (Link 2) is active, this will be highlighted with :2.

## CHAPTER 5: OPERATION

### JAVA TOOL

- ◆ Select Status > Matrix View in the task area.

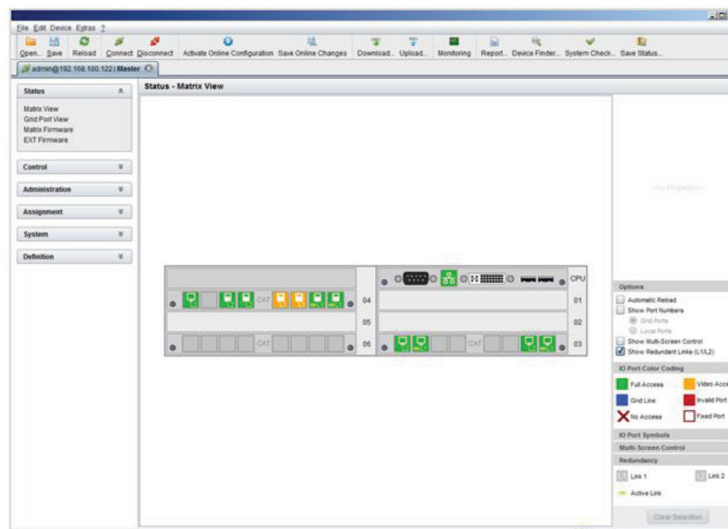


FIGURE 5-11. MATRIX VIEW

To check the connection status of the redundant KVM extenders, proceed as follows:

1. Activate the checkbox Show Redundant Links (L1/L2) under Options on the right side of the working area.
2. Open the menu Redundancy on the right side of the working area, in order to receive the respective legend information. Redundant connectors are highlighted in the Matrix View with L1 and L2. The respectively active link is highlighted with a light green label.



# CHAPTER 5: OPERATION

## 5.11 LDAP INTEGRATION

This section outlines the steps taken to configure the DKM FX system with an Active Directory Server using LDAP. This section only applies to the new CPU board.

**Step 1:** Go to your Active Directory server and create a new LDAP User who will be used for the auto synchronization between the AD server and DKM. You can place this user anywhere, but they must be configured so that they are not removed and the password doesn't change (if password changes for this user, you need to update it accordingly in DKM). In our example, we created the user "adsync" and his password never expires.

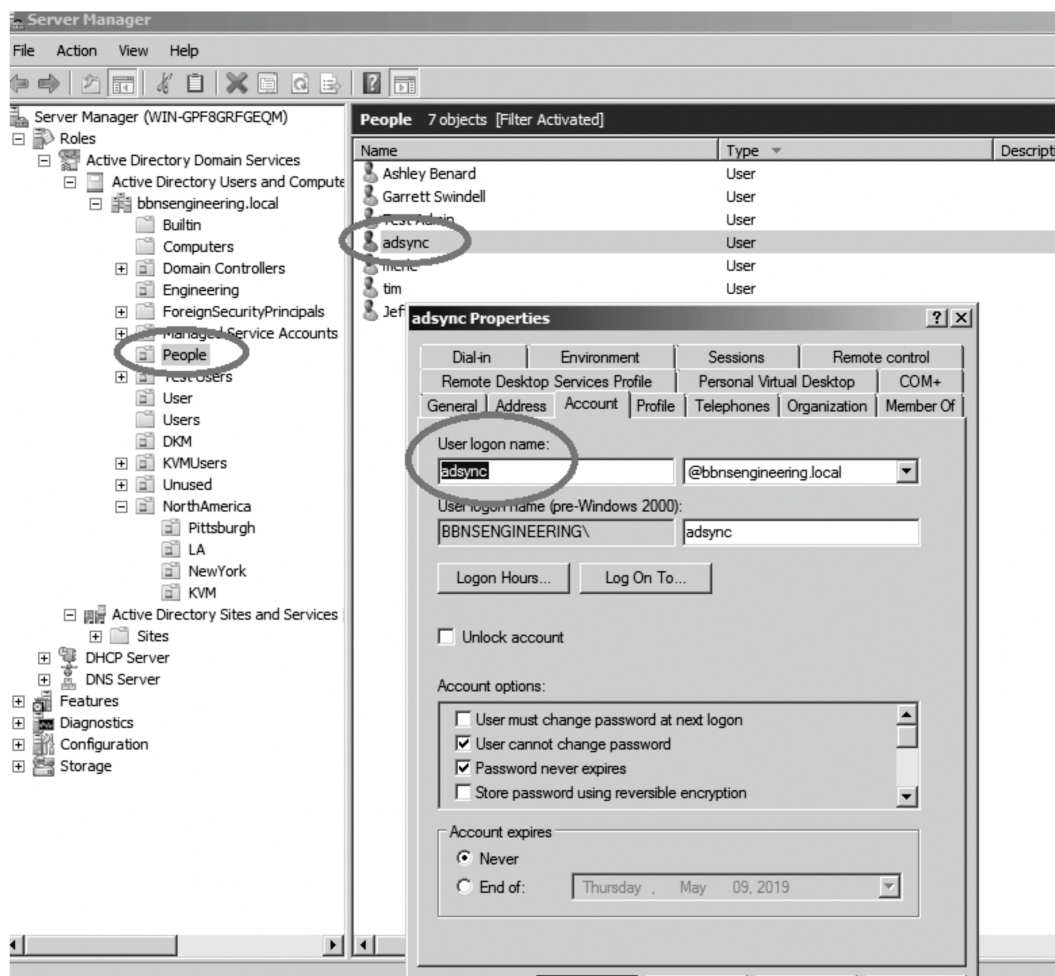


FIGURE 5-12.

## CHAPTER 5: OPERATION

**Step 2:** Next, you need to create your KVM Groups within the AD Server. We recommend that you create a new Organization Unit (it can be named anything, but we chose the OU=KVM) as seen in the next image first. Once you create your new Organizational Unit, go to that OU group and right click and select "Group". Create as many groups as you like. In our example I have 3 groups, Pittsburgh, LA, and New York.

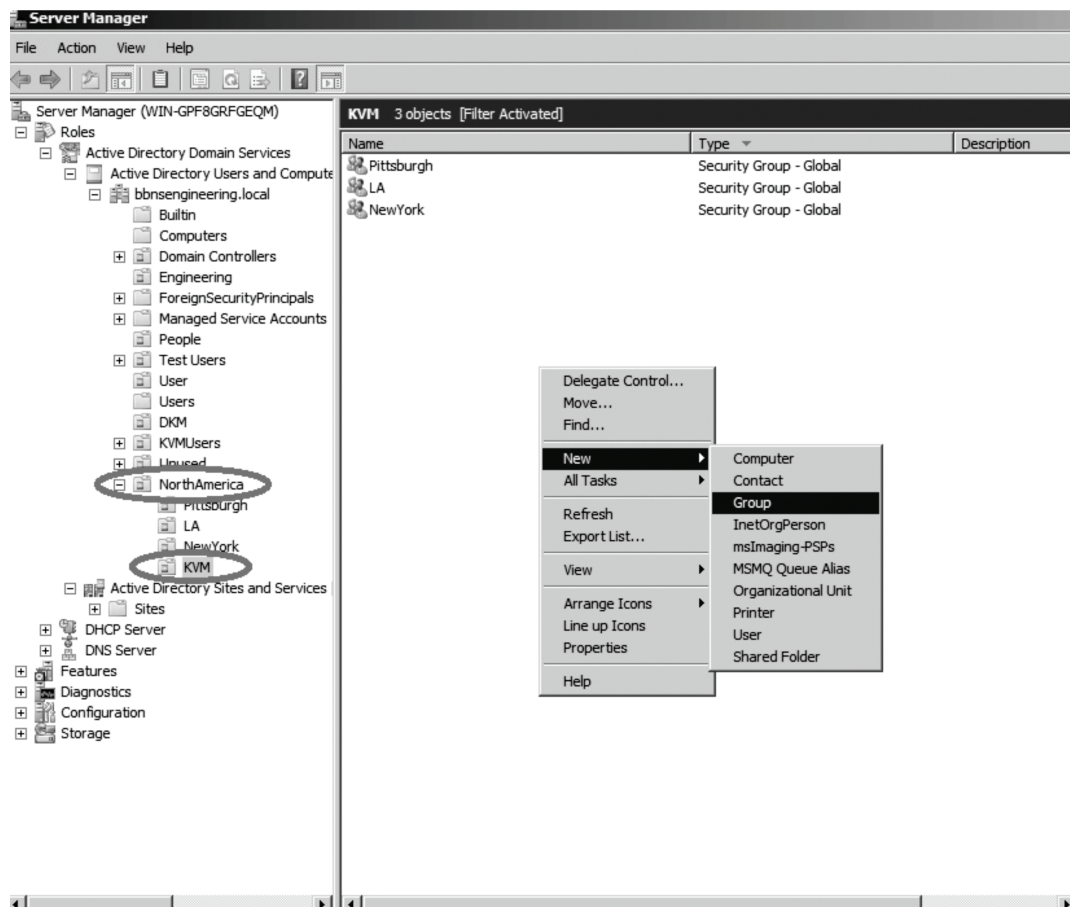


FIGURE 5-13.

**Step 3:** Now that you have created several groups to organize your KVM Users, you can now begin adding users to these groups. The users can be located anywhere in the Active Directory server, but when you create the group, you can quickly add those other users in other Organizational Units into this group. As seen below, we have the Group Pittsburgh with 2 users. These users are located under `bbnsengineering.local/NorthAmerica/Pittsburgh`. These are the only two users that need KVM access.

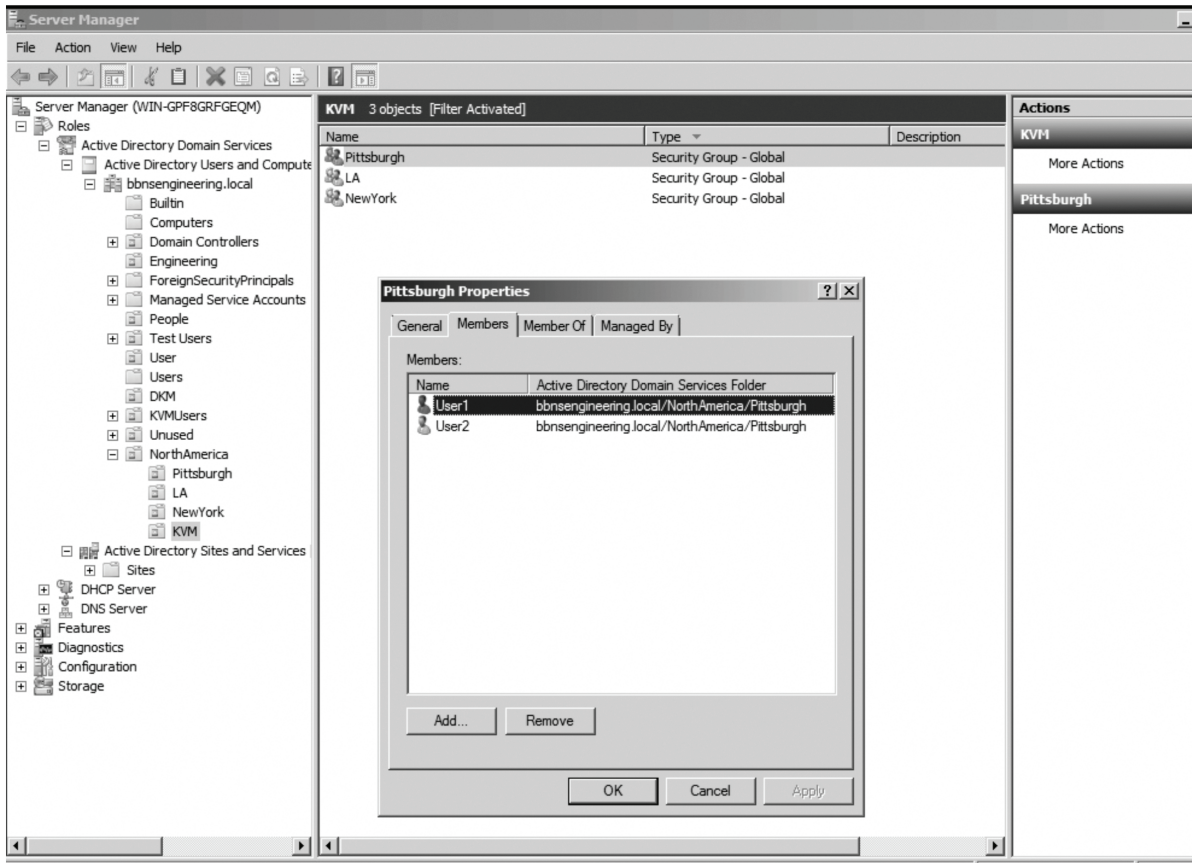


FIGURE 5-14.

## CHAPTER 5: OPERATION

**Step 4:** Now, go to your DKM Java Tool and be sure you enable Remote Configuration (at the top of the toolbar). First go to Network>>SNMP and enable the SNMP agent. This feature is required to be turned on if using LDAP.

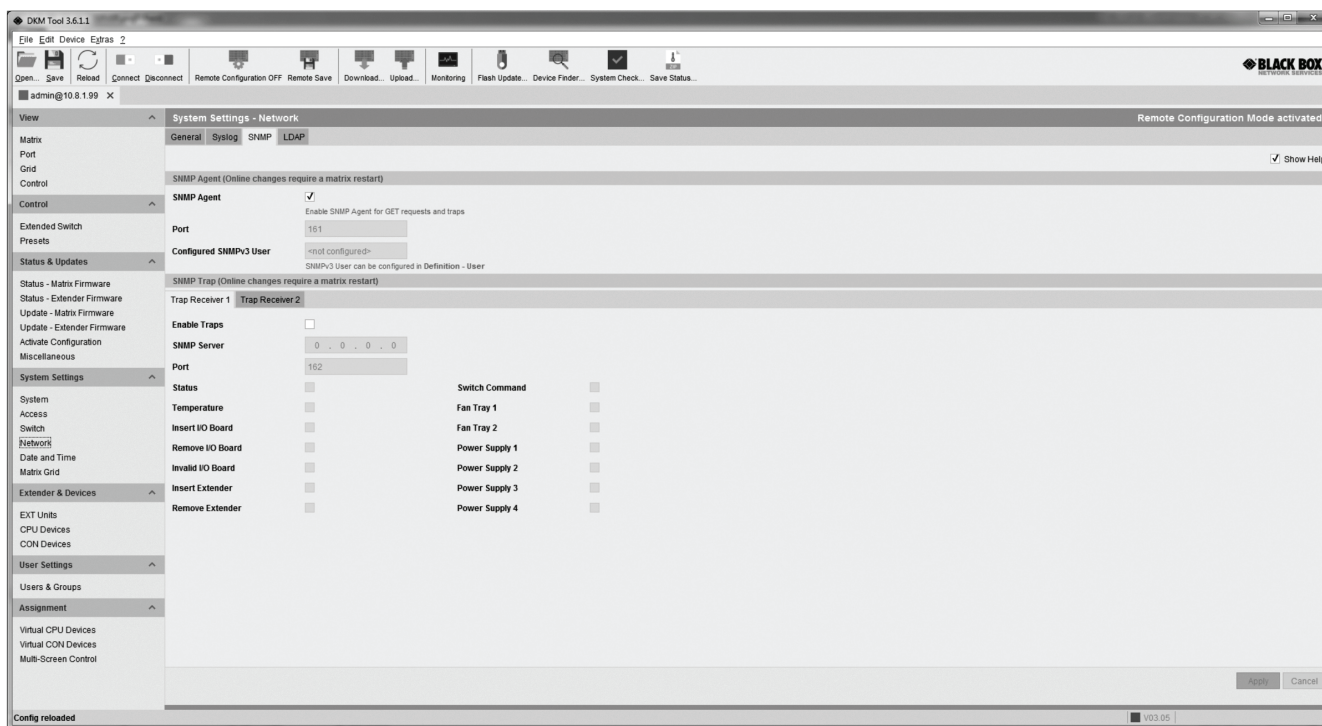


FIGURE 5-15.

## CHAPTER 5: OPERATION

**Step 5:** Next, click on the LDAP tab (located in System Settings>>Network>>LDAP) and enable LDAP. If your AD server uses TLS/SSL, you need to enable this (if you select wrong, you will not be able to sync with server). You may use LDP.EXE, which is a Microsoft tool that can help you determine if you are using TLS/SSL.

Enter the LDAP Server IP address (on my server I went to Start and typed CMD, then did IPCONFIG and confirmed my NIC was configured for 10.8.1.100). Now enter the Port number (default 389). You can now type in your Base DN which should be similar to ours of "dc=bbnsengineering,dc=local". Your domain name can be found in your AD server.

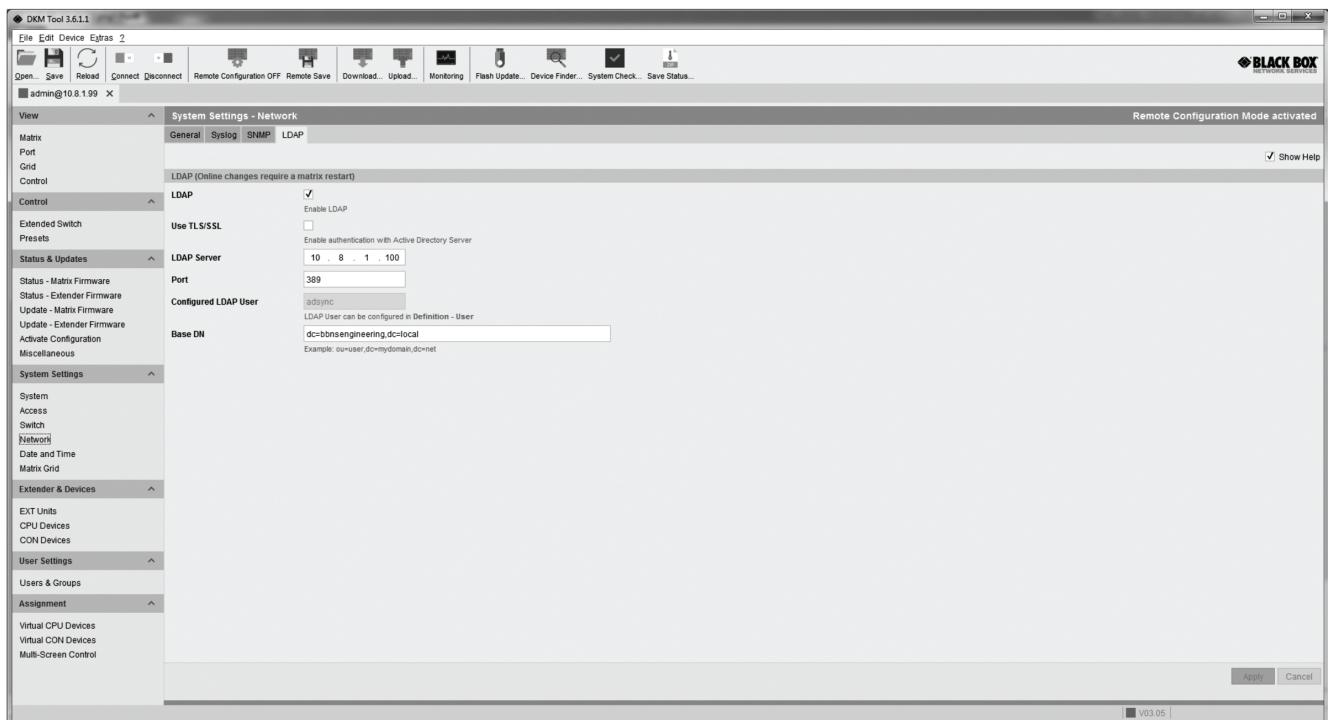


FIGURE 5-16.

## CHAPTER 5: OPERATION

**Step 6:** Now create your Active Directory / LDAP Sync User by going to User Settings>>Users & Groups, and click on New User and make them an LDAP USER. This user should be a special user that is only used for synchronization. In our configuration, we made sure this adsync user's password doesn't expire. The Name can be any name you choose, the Login Name MUST match the AD Login name, and for this ADSYNC user you MUST enter the password so that it can synchronize all other users. Once you add this user, they should automatically be added to the LDAP configuration as seen in step 5.

YOU MUST NOW PERFORM A RESTART ON THE SWITCH SO IT CAN ENABLE THE LDAP SERVICE. BE SURE TO APPLY YOUR CHANGES AND ACTIVATE THE CONFIGURATION, THEN RESTART.

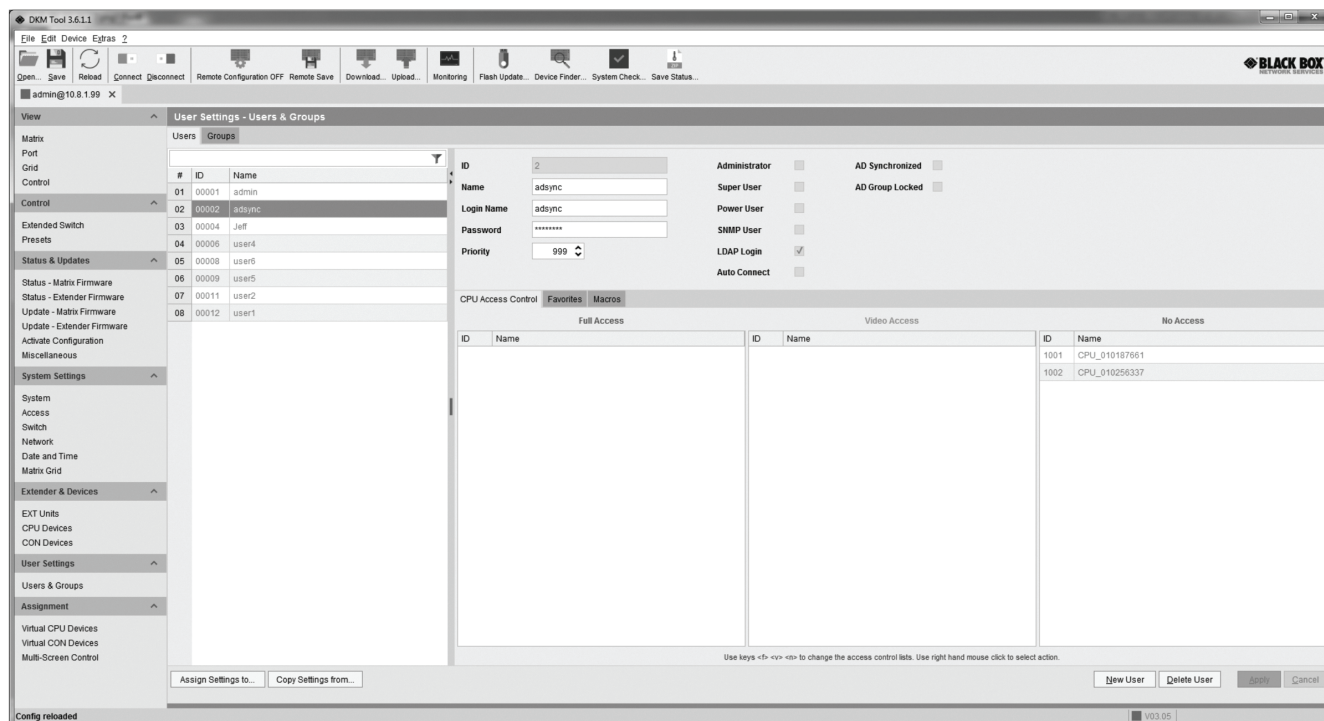


FIGURE 5-17.

## CHAPTER 5: OPERATION

**Step 7:** Go to Users & Groups, then click on the Groups tab at the top of the page. Now click on “New Group” in bottom right, and when prompted, configure it as an LDAP group. Give this group any Name, but in the LDAP OU=, be sure to enter your OU properly in the format of “OU=KVM” as seen below.

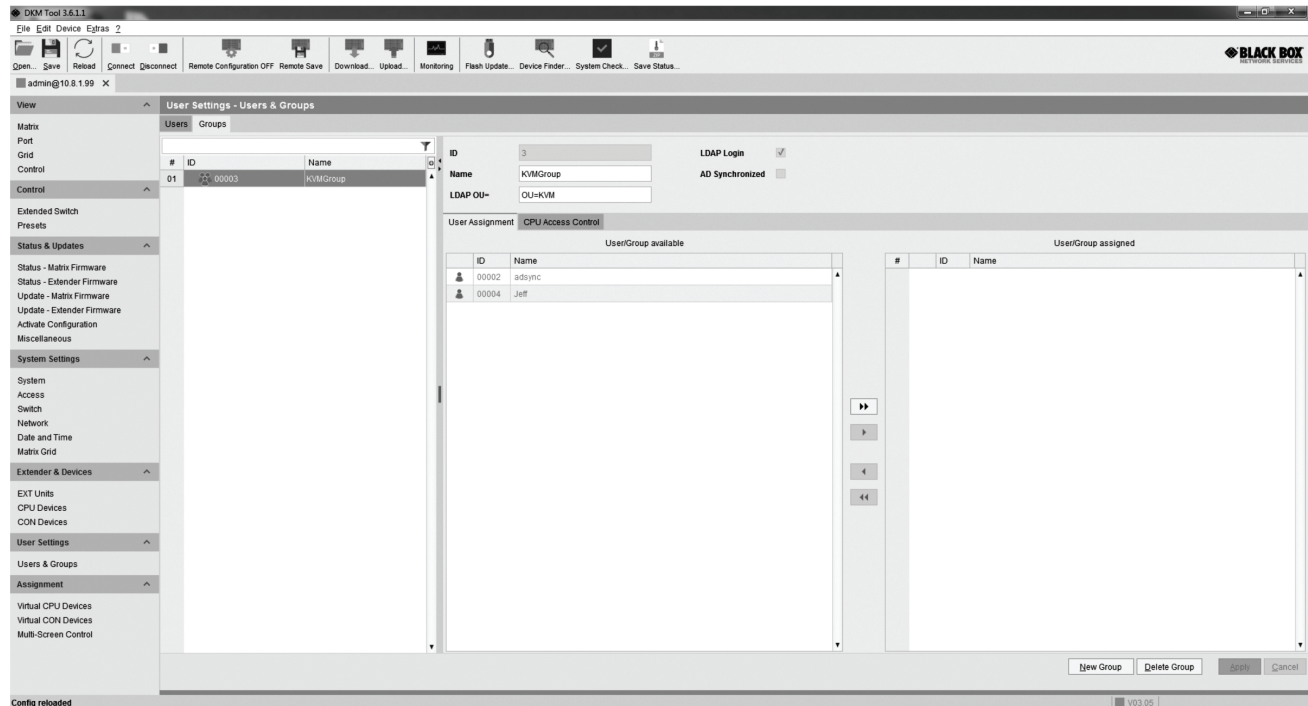


FIGURE 5-18.

## CHAPTER 5: OPERATION

**Step 8:** Within a 5 minute window (the DKM syncs every 5 minutes), users/groups will begin populating with the Java Tool. You can press the F5 to refresh the page, or use the manual Reload button at the top to check for updates. These groups/users will automatically be imported. Once imported, you may configure the access rights of the group or individual. If you do not see any updates, you will want to enable SYSLOG, as it will show you if there are any LDAP communication errors.

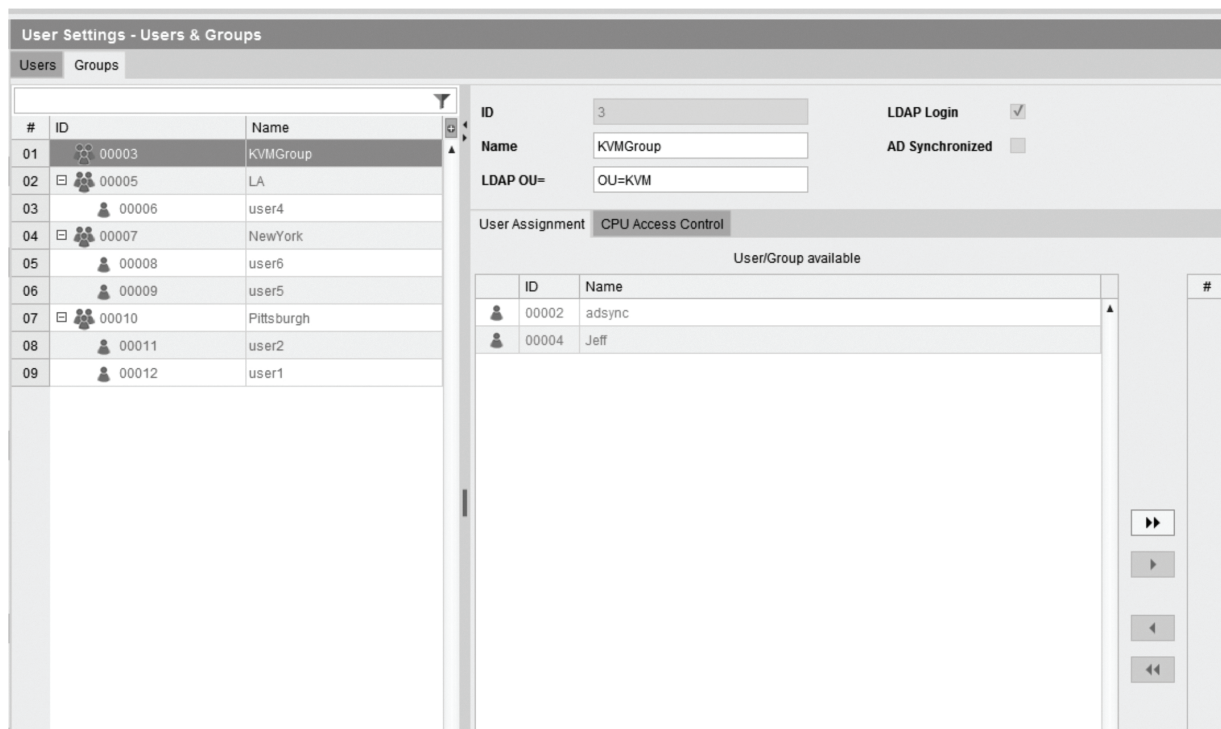


FIGURE 5-19.

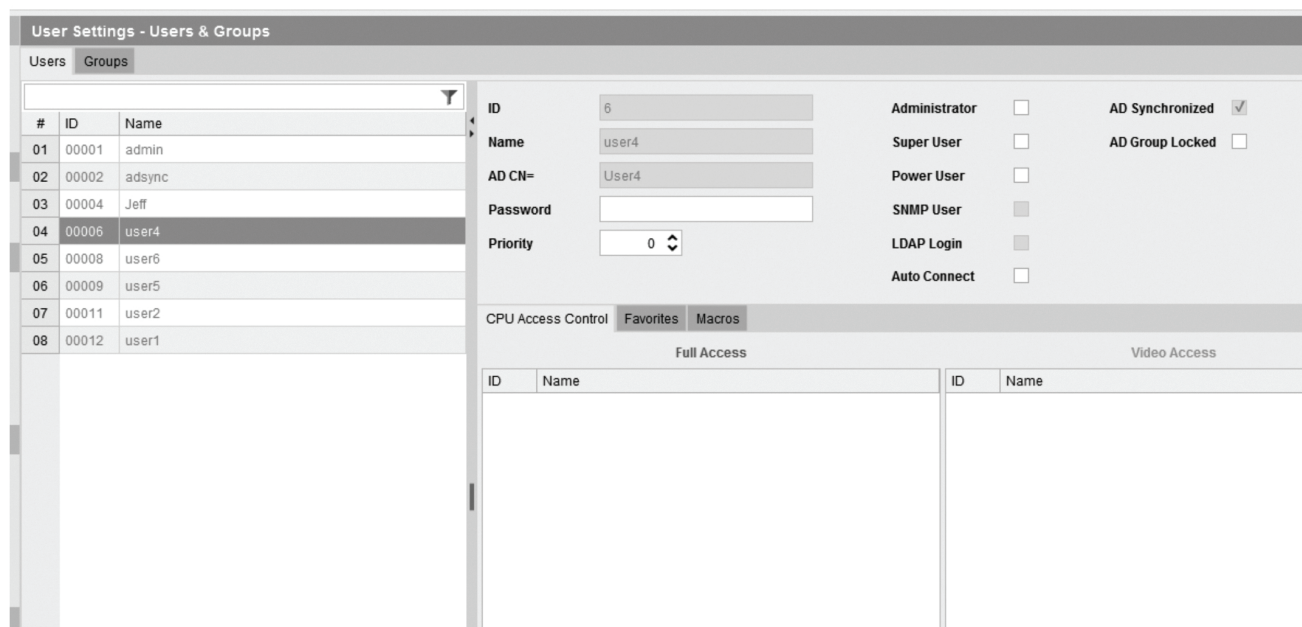


FIGURE 5-20.



## CHAPTER 5: OPERATION

NOTE: You may also create an LDAP user manually by going to the Users page and select New User>>LDAP User. Once here, enter the Name for the user, and for the Login Name, enter the user in the following format (user@domain.local). Save this user and when you login, it will store the user password in case the AD Server cannot be accessed.

NOTE: The DKM will store the last used LDAP password in the event the AD server cannot be accessed.

NOTE: You must create a Group for your users so they are properly imported/synchronized. If you use an Organizational Unit (like People below), you will import, but the users will show up as groups and not users. You must go to your AD server and right-click to create a group, then add users to that group for synchronization.

Video Setup: <https://youtu.be/JLsbJQTZdyU>

Our Active Directory structure used for this setup is as follows:

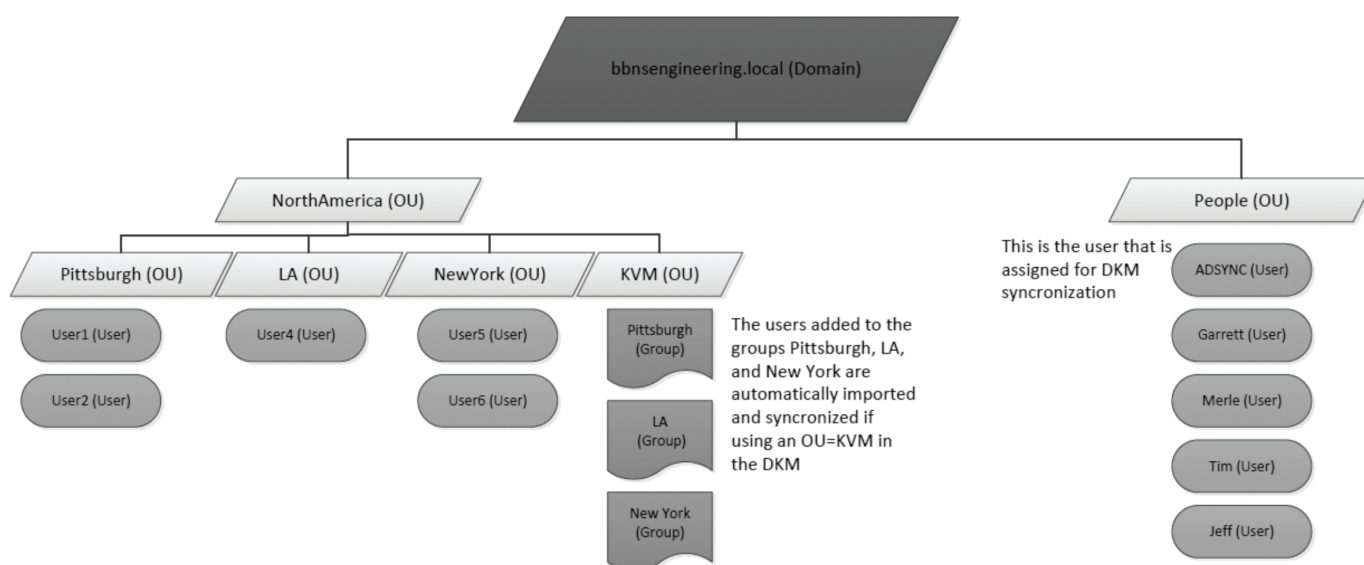


FIGURE 5-21.

### 5.12 SERIAL INTERFACE

Predefined macros to switch the matrix without loading a new configuration can be created and activated in this menu.

You have the following option to access the menu.



The Modular KVM Matrix Switch offers the option to switch via a serial interface (RS-232).

Detailed information for the serial interface and the corresponding switching commands are available in form of an API (application programming interface) at [blackbox.com](http://blackbox.com) or [ftp://ftp.blackbox.com/manuals/A/ACX048-R2\\_API\\_rev2.pdf](ftp://ftp.blackbox.com/manuals/A/ACX048-R2_API_rev2.pdf).


## CHAPTER 5: OPERATION

### 5.13 POWER ON AND POWER DOWN FUNCTIONS

#### 5.13.1 RESTART

---

You have the following options to perform a restart.

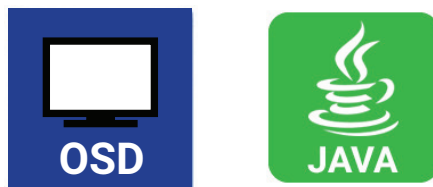

##### OSD

1. Select Configuration > Restart Matrix or Restart IO Board in the main menu to restart either the matrix or the I/O boards.
2. Confirm the selection with Okay button.

The matrix and the I/O boards will be restarted with the current settings.

##### JAVA TOOL

- ♦ Select Matrix > Restart Matrix in the menu bar.

The matrix will be restarted with the current settings.

NOTE: The boot process of the matrix might take longer if there is no physical network connection available.

#### 5.13.2 FACTORY RESET

---

You have the following option to perform a restart.



CAUTION: If you perform a (factory) reset, all current settings and all configurations stored in the matrix will be lost. This also applies to the network parameters (reset to DHCP) and the admin password.

NOTE: If a firmware update has been installed since the delivery, the matrix will be set to the state defined there.

## CHAPTER 5: OPERATION

### OSD

1. Select Configuration > Factory Reset in the main menu.
2. Confirm the selection with the Okay button.

The matrix will be reset to factory settings.

### 5.13.3 POWER DOWN

---

You have the following option to shut down the system or single components.



### OSD

To shut down the system, proceed as follows:

1. Select Configuration > Shut down Matrix in the main menu.
2. Confirm the selection with the Okay button.

The matrix will be shut down.

To shut down an I/O board, proceed as follows:

1. Select Configuration > Shut Down IO Board in the main menu.
2. Confirm the selection with the Okay button.

The I/O board will be shut down.

## CHAPTER 5: OPERATION

### 5.14 SUMMARY OF KEYBOARD COMMANDS

The following table contains a summary of keyboard commands that can activate extender and matrix functions after executing the hotkey.

**TABLE 5-7. EXTENDER KEYBOARD COMMANDS**

KEYBOARD COMMAND	DESCRIPTION
<hotkey>, <a>	Download of DDC information for the monitor connected to the CON Unit into the CPU Unit
<hotkey>, <k>, <1>, <Enter>	Switch to the KVM connection 1 (only with HDMI CON Units with available connection for a local source)
<hotkey>, <k>, <2>, <Enter>	Switch to the KVM connection 2 (only with HDMI CON Units with available connection for a local source and a redundant interconnection)
<hotkey>, <l>, <Enter>	Switch to local source (computer, CPU) (only with HDMI CON Units with available connection for a local source)
<hotkey>, <h>, <w>, <Enter>	USB-HID Ghosting: Write device descriptions of the input devices connected to the CON Unit into the CPU Unit. Activate the emulation in the CPU Unit.
<hotkey>, <h>, <e>, <Enter>	Activate the emulation of already stored device descriptions in the CPU Unit
<hotkey>, <h>, <d>, <Enter>	Deactivate the emulation of active device descriptions in the CPU Unit. The input devices connected to the CON Unit will be passed transparently to the source (computer, CPU)
<hotkey>, <h>, <r>, <Enter>	Deactivate the emulation of active device descriptions in the CPU Unit. Delete the descriptions out of the CPU Unit. The input devices connected to the CON Unit will be passed transparently to the source (computer, CPU)
<hotkey>, <d>, <1>, <Enter>	Switch to video channel 1 of the Dual-Head CPU Unit (dual-head series only)
<hotkey>, <d>, <2>, <Enter>	Switch to video channel 2 of the Dual-Head CPU Unit (dual-head series only)

**TABLE 5-8. MATRIX KEYBOARD COMMANDS**

KEYBOARD COMMAND	DESCRIPTION
<hotkey>, <o>	Open OSD
<hotkey>, <m>, <o>	Open OSD of the master matrix in a cascaded environment
<hotkey>, <s>, <o>	Open OSD of the sub matrix in a cascaded environment
<hotkey>, <Enter>	Set a KVM connection (keyboard, mouse and video) to the selected source (computer, CPU)
<hotkey>, <Space>	Set a video only connection to the selected source (computer, CPU)
<hotkey>, <Left-Shift> + <Enter>	Set a Private Mode connection to the selected source (computer, CPU)
<hotkey>, <Backspace>	Close the current connection of the console
<hotkey>, <p>	Switch back to the previous connected source (computer, CPU) with a KVM connection
<hotkey>, <1>...<16>, <Enter> (<Space> or <Left-Shift> + <Enter>)	Switch to a source (computer, CPU) stored in the Favorite List with a KVM connection (video only or Private-Mode connection)
<hotkey>, <F1>...<F16>	Execute a predefined macro
<hotkey>, <c>, <new hotkey code> <Enter>	Change the hotkey according to the predefined hotkey table
<hotkey>, <c>, <0>, <new hotkey key> <Enter>	Define freely selectable hotkey
<hotkey>, <f>, <new hotkey key code> <Enter>	Change the hotkey for direct OSD access according to the predefined hotkey table
<hotkey>, <f>, <0>, <new hotkey key> <Enter>	Define freely selectable hotkey for direct OSD access
<hotkey>, <Num 0>	Switch the USB-HID signal to the user's display (CON Unit with keyboard and mouse)
<hotkey>, <Num 1>	Switching of the USB-HID signals to display #1
<hotkey>, <Num 2>	Switching of the USB-HID signals to display #2



TABLE 5-8 (CONTINUED). MATRIX KEYBOARD COMMANDS

KEYBOARD COMMAND	DESCRIPTION
<hotkey>, <Num 3>	Switching of the USB-HID signals to display #3
<hotkey>, <Num 4>	Switching of the USB-HID signals to display #4

## CHAPTER 6: MAINTENANCE

The Modular KVM Matrix Switch contains various components and assemblies that can be maintained. All relevant components and assemblies are hot swappable and can be removed and exchanged during operation.

The following exchangeable components can be found within the Modular KVM Matrix Switch.

### 6.1 POWER SUPPLY UNITS

To exchange the power supply units, proceed as follows:

1. Make sure that the power cord cable is removed from the power supply that has to be exchanged.
2. Unlock the locking screw(s).
3. With the power supply units of ACX288-R2 and ACX160-R2, turn the unlocked bracket down.
4. Pull the power supply unit out of the corresponding slot.
5. Push a new or maintained power supply unit into the slot and lock it accordingly.
6. Connect the power cord cable to the power supply unit. It will be recognized by the system and can be used afterwards.

### 6.2 FAN TRAYS

To exchange the fan trays, proceed as follows:

1. Unlock the locking screw(s).
2. Pull the fan tray out of the corresponding slot by using the provided mount.
3. Push a new or maintained fan tray into the slot.
4. Lock the fan tray accordingly. It will be recognized by the system and can be used afterwards.

### 6.3 CPU BOARD

To exchange the CPU board, proceed as follows:

1. Pull the locking pin slowly out of the CPU board up to the stop. Wait until the CPU board is deregistered from the matrix. The deregistration will be confirmed by a permanent green light of the status LED #1 on the CPU board (see Section 2.7.1).
  2. Remove all cables from the CPU board.
  3. Pull the CPU board out of the corresponding slot by using the locking pin.
  4. Push a new or maintained CPU board into the slot and lock it accordingly.
- A successful registration of the CPU board will be shown by a permanent green flashing of status LED #1.
5. Connect all cables to the CPU board according to the exchanged board.

NOTE: When exchanging a CPU board the new one will automatically receive the current matrix configuration. During CPU board exchange the Modular KVM Matrix Switch should not be switched off.

## CHAPTER 6: MAINTENANCE

### 6.4 I/O BOARD

To exchange a I/O board, proceed as follows:

1. Pull the locking pin slowly out of the I/O board up to the stop. Wait until the I/O board is deregistered from the matrix. The deregistration will be confirmed by a permanent green light of the status LED #1 on the CPU board (see Section 2.7.1).
2. Remove all cables from the I/O board.
3. Pull the I/O board out of the corresponding slot by using the locking pin.
4. Push a new or maintained CPU board into the slot and lock it accordingly.

A successful registration of the CPU board will be shown by a permanent green flashing of status LED #1.

5. Connect all cables to the I/O board according to the exchanged board.

NOTE: For a 24/7 operation, we recommend that you maintain a stock of critical spare parts, including a chassis.

### 6.5 FILTER PADS

Filter pads should be checked regularly for accumulated dust and cleaned with low pressure compressed air or suction.

The inspection cycle depends on the ambient air and cannot be determined generally, but a period of 6 months should not be exceeded.

Filter pads or filter trays should be replaced at regular intervals not exceeding one year.

To replace a filter pad, proceed as follows:

1. Pull the filter pad together with the mounting frame out of the proper slot by using the handle.
2. Press the used filter pad out of the proper mounting frame. In Chapters 7 and 8, support for problems with the Modular KVM Matrix Switch is provided. It is assumed that fully operational CPU and CON Devices are available, which can be tested over a peer-to-peer connection using CATx or fiber cables. Refer to the relevant manuals for assistance with this if necessary.
3. Insert a new filter pad into the mounting frame.
4. Replace the mounting frame in the slot.

## CHAPTER 7: TROUBLESHOOTING

### 7.1 EXTERNAL FAILURE

TABLE 7-1. EXTERNAL FAILURE TROUBLESHOOTING TIPS

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Matrix cannot be started anymore	Fuse at the standard appliance outlet	Check fuse

### 7.2 VIDEO INTERFERENCE

TABLE 7-2. VIDEO INTERFERENCE TROUBLESHOOTING TIPS

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Cannot open the OSD	No OSD jumper set	Set jumper 11 on the CON unit
Incorrect video display	Cable connection disabled	Check the connection, length and quality of the interconnect cable to the units

### 7.3 FAN MALFUNCTION

TABLE 7-3. FAN MALFUNCTION TROUBLESHOOTING TIPS

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Fans only run under full load	Communication to fan tray is not working	<ul style="list-style-type: none"> <li>◆ Remove and reinstall fan tray</li> <li>◆ Swap both fan trays to the other slot</li> <li>◆ Restart the matrix</li> </ul>
Fans do not run, LED OK on	Fans defective	Contact Black Box Technical Support at 877-877-2269 or <a href="mailto:info@blackbox.com">info@blackbox.com</a>
Fans do not run, LED OK off	Power supply	Check power supply and power connection

### 7.4 POWER SUPPLY UNITS MALFUNCTION

TABLE 7-4. POWER SUPPLY UNITS MALFUNCTION TROUBLESHOOTING TIPS

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Matrix does not start	Power supply units could not be locked correctly	Check lock and plug-in of the power supply units
	No power supply available	Check if power supply cables are connected correctly
	Power supply units are not switched on	Check switch on the power supply units

### 7.5 NETWORK ERROR

TABLE 7-5. NETWORK ERROR TROUBLESHOOTING TIPS

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Network settings are not assumed after editing	Restart of the matrix is not yet completed	Restart the matrix



# CHAPTER 7: TROUBLESHOOTING

## 7.6 FAILURE AT THE MATRIX

TABLE 7-6. FAILURE AT THE MATRIX TROUBLESHOOTING TIPS

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Serial control impossible or only restrictedly possible	CPU and matrix operating at different baud rates	Change baud rate in the matrix and CPU (see Section 4.3.2)
Serial control via RS-232 port not possible	Wrong network cable	Use a crossed network cable
Port definitions as USB 2.0 invalid	Restart of the matrix not yet completed	Restart the matrix

## 7.7 BLANK SCREEN

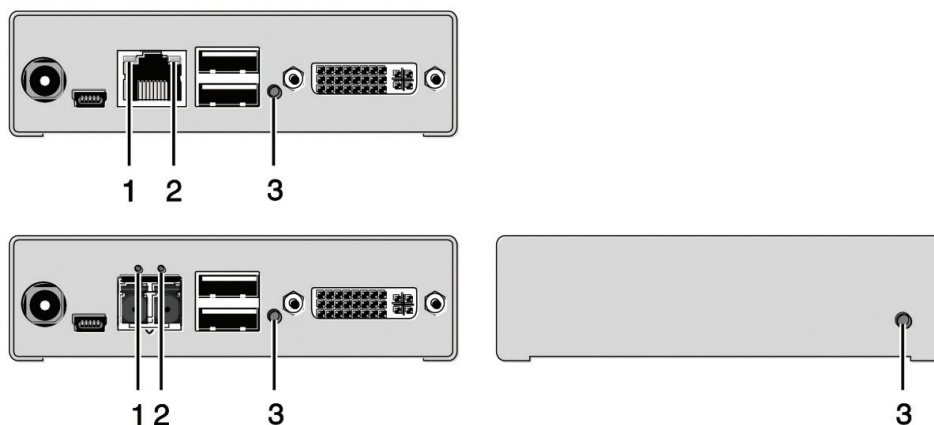


FIGURE 7-1. LEDS ON THE BACK AND FRONT OF THE UNIT

TABLE 7-7. BLANK SCREEN TROUBLESHOOTING TIPS

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Monitors remain dark after switching operation	Switching to a CPU port without an active source (computer, CPU)	Switching to a CPU port with an active source (computer, CPU)
LED 1 ON or LED 2 OFF	Connections CON unit, matrix and CPU unit	Check connected cables and connectors. (No cable, cable break, CPU/CON unit offline, CPU/CON unit connected to the wrong port)
LED 3 OFF	Power supply	Check power supply units and the connection to the power network

## CHAPTER 8: TECHNICAL SUPPORT

Before contacting technical support, make sure you have read this manual and then installed and set up your Modular KVM Matrix Switch as recommended.

### 8.1 SUPPORT CHECKLIST

To efficiently handle your request, make sure that you have the following information available before you call:

- ♦ Company, name, phone number and email
- ♦ Type and serial number of the device (see bottom of device)
- ♦ Nature, circumstances and duration of the problem
- ♦ Components included in the system (such as graphic source/CPU, OS, graphic card, monitor, USB-HID/USB 2.0 devices, interconnect cable) including manufacturer and model number
- ♦ Results from any testing you have done

Contact Black Box Technical Support at 877-877-2269 or [info@blackbox](mailto:info@blackbox)

### 8.2 SHIPPING CHECKLIST

1. To return your device, contact your Black Box Technical Support at 877-877-2269 or [info@blackbox.com](mailto:info@blackbox.com) to obtain an RMA (Return Material Authorization) number.
2. Package your devices carefully, preferably using the original box. Add all pieces that you received originally.
3. Note your RMA number visibly on your shipment.

NOTE: Devices that are sent in without a RMA number cannot be accepted. The shipment will be sent back without being opened, postage unpaid.



## CHAPTER 9: REGULATORY INFORMATION

### 9.1 FCC STATEMENT

This equipment has been found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded cables must be used with this equipment to maintain compliance with radio frequency energy emission regulations and ensure a suitably high level of immunity to electromagnetic disturbances.

All power supplies are certified to the relevant major international safety standards.

### 9.2 CE DECLARATION OF CONFORMITY

The Modular KVM Matrix Switch as delivered complies with the provisions of the following European Directives:

- ♦ 2014/30/EU Council Directive on the approximation of the laws of the Member States relating to electromagnetic compatibility
- ♦ 2014/35/EU Council Directive on the harmonization of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits.

### 9.3 PRODUCT SAFETY

The product safety of the devices is proven by the compliance to the following standards:

- ♦ IEC 60950-1A1:2010
- ♦ EN 60950-1/A12:2011/A1:2010/A11:2009
- ♦ UL 60950-1-2007
- ♦ CAN/CSA-C22.2 60950-1-07

### 9.4 WEEE

The manufacturer complies with the EU Directive 2012/19/EU on the prevention of waste electrical and electronic equipment (WEEE).

### 9.5 ROHS/ROHS2

This device complies with the Directive 2011/65/EU of the European Parliament and of the council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS 2, RoHS II).

## CHAPTER 10: GLOSSARY

### 10.1 VIDEO AND KVM TECHNOLOGY TERMS

**AES/EBU:** Digital audio standard that is officially known as AES3 and that is used for carrying digital audio signals between devices.

**CATx:** Any CAT5e, CAT6, CAT7 cable.

**CGA:** Color Graphics Adapter (CGA) is an old analog graphic standard with up to 16 displayable colors and a maximum resolution of 640 x 400 pixels.

**Component Video:** Component Video (YPbPr) is a high-quality video standard that consists of three independently and separately transmittable video signals, the luminance signal and two color difference signals.

**Composite Video:** Composite Video is also called CVBS and it is part of the PAL TV standard.

**CON Unit:** Component of a KVM Extender or Media Extender to connect to the console (monitor[s], keyboard and mouse; optionally also with USB 2.0 devices).

**Console:** Keyboard, mouse and monitor.

**CPU Unit:** Component of a KVM Extender or Media Extender to connect to a source (computer, CPU).

**CVBS:** The analog color video baseband signal (CVBS) is also called Composite Video and it is part of the PAL TV standard.

**DDC:** Display Data Channel (DDC) is a serial communication interface between monitor and source (computer, CPU). It allows a data exchange via a monitor cable and an automatic installation and configuration of a monitor driver by the operating system.

**DisplayPort:** A VESA standardized interface for an all-digital transmission of audio and video data. It is differentiated between the DisplayPort standards 1.1 and 1.2. The signals have LVDS level.

**Dual Access:** A system to operate a source (computer, CPU) from two consoles.

**Dual Link:** A DVI-D interface for resolutions up to 2560 x 2048 by signal transmission of up to 330 MPixel/s (24-bit).

**Dual-Head:** A system with two video connections.

**DVI:** Digital video standard, introduced by the Digital Display Working Group (<http://www.ddwg.org>). Single Link and Dual Link standards are distinguished. The signals have TMDS level.

**DVI-I:** A combined signal (digital and analog) that allows running a VGA monitor at a DVI-I port—in contrast to DVI-D (see DVI).

**EGA:** The Enhanced Graphics Adapter (EGA) is an old analog graphic standard, introduced by IBM in 1984. A DB9 connector is used for connection.

**Fiber:** Single-mode or multimode fiber cables.

**HDMI:** An interface for an all-digital transmission of audio and video data. It is differentiated between the HDMI standards 1.0 to 1.4a. The signals have TMDS level.

**KVM:** Keyboard, video and mouse.

**Mini-XLR:** Industrial standard for electrical plug connections (3-pole) for the transmission of digital audio and control signals.

**Multimode:** 62.5μ multimode fiber cable or 50μ multimode fiber cable.

**OSD:** The On-Screen Display is used to display information or to operate a device.

**Quad-Head:** A system with four video connections.

**RCA (Cinch):** A non-standard plug connection for transmission of electrical audio and video signals, especially with coaxial cables.

**S/PDIF:** A digital audio interconnect that is used in consumer audio equipment over relatively short distances.

**SFP:** SFPs (Small Form Factor Pluggable) are pluggable interface modules for Gigabit connections. SFP modules are available for CATx and fiber interconnect cables.

**Single Link:** A DVI-D interface for resolutions up to 1920 x 1200 by signal transmission of up to 165 MPixel/s (24-bit). Alternative frequencies are Full HD (1080p), 2K HD (2048 x 1080) and 2048 x 1152.



## CHAPTER 10: GLOSSARY

**Single-Head:** A system with one video connection.

**Single-mode:** 9 $\mu$  single-mode fiber cable.

**S-Video (Y/C):** S-Video (Y/C) is a video format transmitting luminance and chrominance signals separately. It has a higher quality standard than CVBS.

**TOSLINK:** Standardized fiber connection system for digital transmission of audio signals (F05 plug connection).

**Triple-Head:** A system with three video connections.

**USB-HID:** USB-HID devices (Human Interface Device) allow for data input. There is no need for a special driver during installation; "New USB-HID device found" is reported. Typical HID devices include keyboards, mice, graphics tablets and touch screens. Storage, video and audio devices are not HID.

**VGA:** Video Graphics Array (VGA) is a computer graphics standard with a typical resolution of 640 x 480 pixels and up to 262,144 colors. It can be seen as a follower of the graphics standards MDA, CGA and EGA.

### 10.2 MATRIX-SPECIFIC TERMS

**Auto Disconnect:** Matrix function that allows an automatic disconnect between a console and a CPU if OSD is opened via this console.

**Auto Logout:** Matrix function that describes the duration of inactivity after the user has been logged out from the OSD at this console.

**CON Device:** Logical term that summarizes several physical extenders to switch more complex console systems via matrix.

**CON Timeout:** Matrix function that allows an automatic disconnect of a console from the connected CPU after a predefined time.

**Console ACL:** Console Access Control List is a list that shows the respective switching rights for the various consoles.

**CPU Auto Connect:** Matrix function that allows an automatic connection establishment between a console and a random CPU that is available.

**CPU Device:** Logical term that summarizes several physical extenders to switch more complex CPU systems via matrix.

**CPU Timeout:** Matrix function that allows the user to disconnect after a predefined period of time of inactivity from the respective CPU.

**EXT Unit:** Part or extender board of a CON or CPU unit with a connection to the matrix. A CON or CPU unit can consist of several EXT devices.

**Force Connect:** Matrix function that allows you to switch a console to a CPU that is already used to take keyboard and mouse control. The console that is connected before switching loses K/M control, but keeps video.

**Force Disconnect:** Matrix function that allows you to switch a console to a CPU that is already used to take KVM control. The console that is connected before switching loses complete KVM control.

**Java Tool:** Java based control and configuration tool for the Modular KVM Matrix Switch.

**Keyboard Connect:** Matrix function that allows taking over the keyboard control of an inactive console.

**Macro Keys:** Programmable keys that can execute a stringing together of commands to the matrix.

**Mouse Connect:** Matrix function that allows taking the mouse control of an inactive console.

**Non-Blocking Access:** Matrix configuration where no user can be disturbed by an activity of another user.

**OSD Timeout:** Matrix function that closes the OSD automatically after a predefined period of time of inactivity.

**Release Time:** Matrix function that allows a console that is connected with the same CPU to release the K/M control after a predefined time.

## CHAPTER 10: GLOSSARY

**Service Mode:** Defined maintenance condition that allows updating of extenders that are connected to the matrix.

**Tie Line:** Communication connection to and between extension modules in a network environment.

**User ACL:** User Access Control List is a list that shows the respective switching rights for the various users.

**Video Sharing:** Matrix function that allows switching from the user's console to any CPU with video.



## CHAPTER 11: DISCLAIMER/TRADEMARKS

### 11.1 DISCLAIMER

Black Box Corporation shall not be liable for damages of any kind, including, but not limited to, punitive, consequential or cost of cover damages, resulting from any errors in the product information or specifications set forth in this document and Black Box Corporation may revise this document at any time without notice.

### 11.2 TRADEMARKS USED IN THIS MANUAL

Black Box and the Black Box logo type and mark are registered trademarks of Black Box Corporation.

Any other trademarks mentioned in this manual are acknowledged to be the property of the trademark owners.

**NEED HELP?  
LEAVE THE TECH TO US**

---

**LIVE 24/7  
TECHNICAL  
SUPPORT**

---

**1.877.877.2269**

