

SAMSUNG

Samsung Multiroom

User Manual

imagine the possibilities

Thank you for purchasing this Samsung speaker.
To receive more complete service,
please register your speaker at
www.samsung.com/register

Contents

CONNECTING TO A WI-FI NETWORK

Preparing to Connect	4
Requirements	4
Installing the Samsung Multiroom App ...	4
Launching the Samsung Multiroom App ...	4
Connecting to Wi-Fi.....	5
Connecting to Wi-Fi automatically (Android/iOS)	5
Connecting to Wi-Fi manually (Android)..	7
Connecting to Wi-Fi manually (iOS)	9
Connecting with a LAN Cable (Soundbar only)	12
Connecting with a HUB (Not Included)...	12
Adding a HUB.....	15
Adding additional speaker(s).....	16

USING THE SAMSUNG MULTIROOM APP

The App at a Glance.....	18
Playing Music	19
Playing a music file stored in the smart device.....	19
Listening to music using the Phone Speaker function.....	20
Listening to streaming music.....	21

Listening to Internet radio	22
Following a station	23
Setting Presets	23
Connecting to Bluetooth Devices ...	24
Connecting a Samsung TV to the speaker	25
Connecting to a Samsung TV via bluetooth (TV SoundConnect)	25
Connecting to a TV via Wi-Fi.....	26
Listening to music from other devices connected to your network	26
Using the playback menu	27
Adjusting the Equalizer and DRC functions	28
Managing a queue	29
Managing a playlist	31
Using the Settings menu	33
Add Speaker.....	33
Guide.....	34
Services.....	34
Device Settings	35
Clock.....	37
Support	39
Information.....	39

CONNECTING MULTIPLE SPEAKERS

Setting Groups	40
Configuring the Surround Sound Mode	42

USING MISCELLANEOUS FUNCTIONS

Playing Media Content Saved on a PC ...	44
Samsung Link.....	44
Wireless Audio - Multiroom for Desktop ...	45

APPENDIX

Troubleshooting.....	47
Compatible devices	47

Connecting to a Wi-Fi network

Preparing to Connect



Requirements

- 1 Wireless Router, Smart Device
- 2 The wireless router must be connected to the Internet.
- 3 The smart device must be connected to the router via a Wi-Fi connection.

Installing the Samsung Multiroom App


To use the speaker, you must download and then install the **Samsung Multiroom** App on your smart device. You can download the app from Google play or the App Store.

With the **Samsung Multiroom** App installed, you can play music stored in your smart device, from connected devices and other content providers, and from Internet radio stations through the speaker.

Android	iOS
Market search : Samsung Multiroom 	Market search : Samsung Multiroom 

Launching the Samsung Multiroom App

To launch the **Samsung Multiroom** app, touch the Multiroom app icon on your smart device.

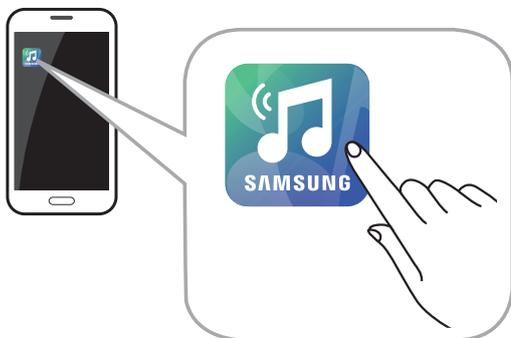


NOTE

- ✓ Please terminate the **Samsung Multiroom** App when you are not using your speaker. The app can cause the battery in your smart device to discharge more quickly if it continues to run.

Connecting to Wi-Fi

■ Connecting to Wi-Fi automatically (Android/iOS)

- 1 Plug the speaker into an electrical outlet.
- 2 On your Smart device, select the **Samsung Multiroom** app.
- 3 Run the **Tutorial** and then touch **Done**.
- 4 Touch **Connect Now**.
 - Your smart device searches for devices available for pairing.

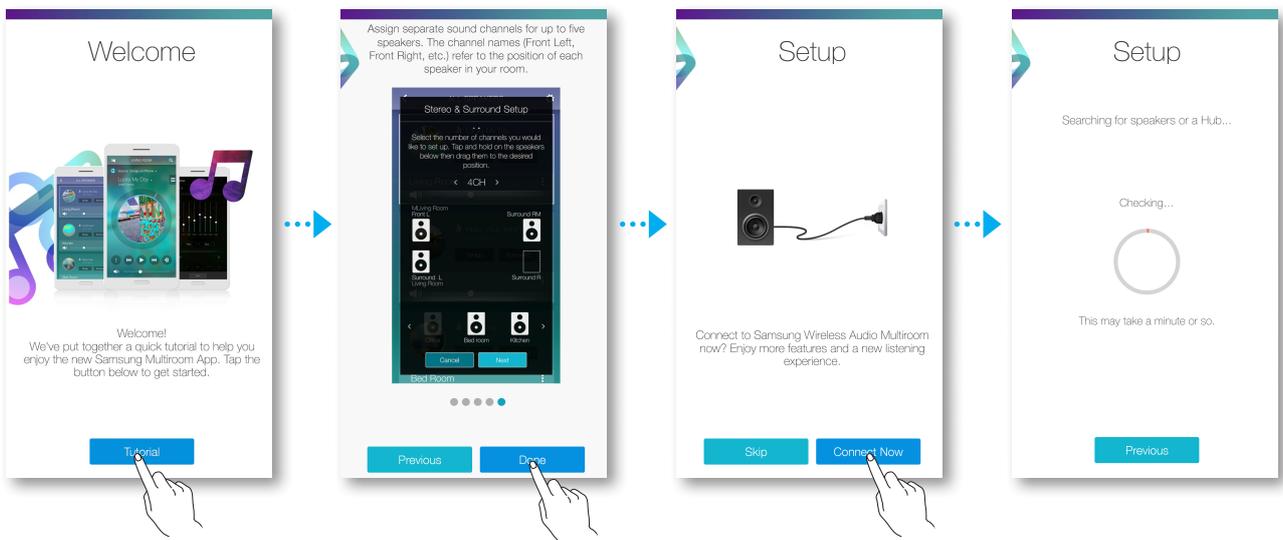


- 5 Once your smart device finds the Speaker, it attempts to connect it to your wireless network.
If your network requires a password, the password prompt appears on the smart device's screen.
Use the on-screen keyboard to enter the password.
 - Depending on your network environment, the speaker may not connect automatically. If this occurs, select **Manual Setup**, and then go to pages 7~11 for instructions.

[Click here.](#)

6 Touch **Next**.

- The network connection is complete.

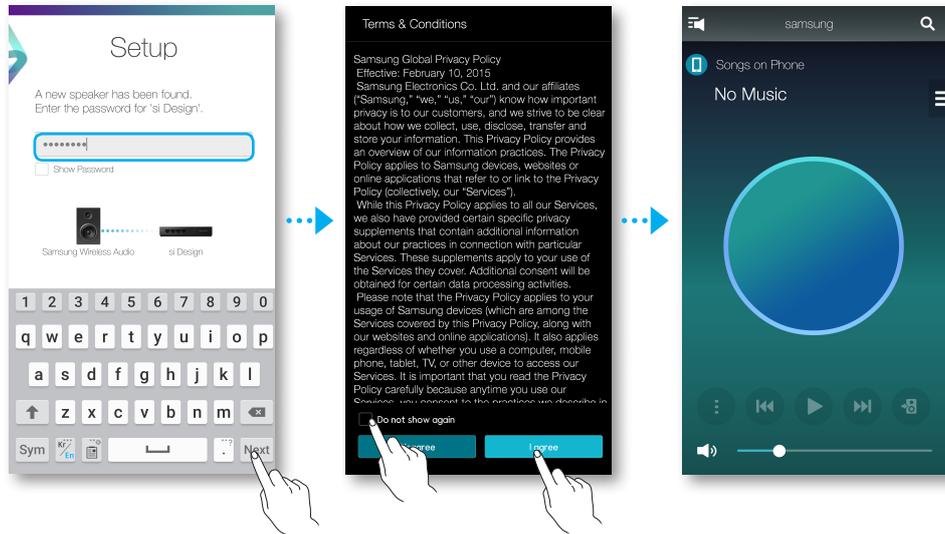


NOTES

- ✓ To connect the Speaker to a secure wireless network safely, you must enter a valid password.
 - If you have network specific questions about connecting this speaker to your home or work wireless network, consult your service provider or the network administrator.
- ✓ If the Speaker fails to connect to your network or the network connection does not work normally, move the speaker closer to the HUB or router, and then try again.
- ✓ The distance between devices, obstructions, or interference from other wireless devices may impact communication between the Speaker and your network.
- ✓ This speaker may be found by some other Wi-Fi devices. However, they are not allowed to connect to it.
- ✓ Once the Wi-Fi connection is established initially, it is maintained unless the wireless router is replaced or its network settings are changed.
- ✓ In case of mobile device that supports Quick Connect function, connection with the Speaker can be easily done by the pop-up screen on your mobile device.


■ Connecting to Wi-Fi manually (Android)

Depending on your network environment, the speaker(s) may not connect automatically. If this occurs, you can set up the Speaker manually to connect to the network.

- 1 If the Speaker fails to connect to your network automatically, select **Manual** in the **Samsung Multiroom** app.
- 2 Touch a device that you want to connect to.

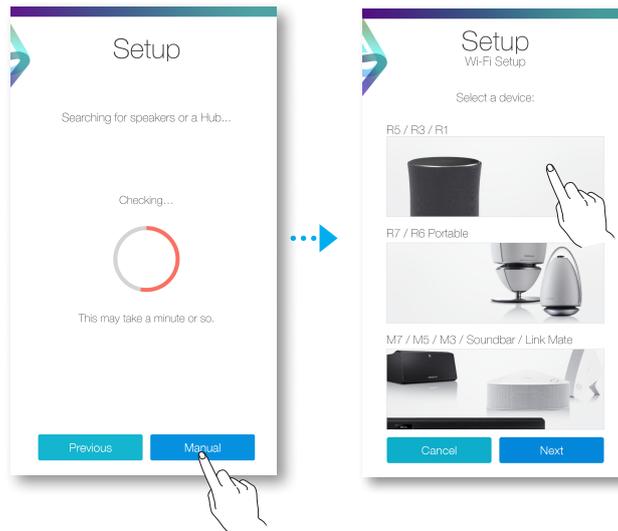


- 3 **WAM5500/WAM3500/WAM1500** : Press and hold the **SPK ADD/Wi-Fi SETUP** button on the bottom of the speaker for more than 5 seconds to begin **Wi-Fi Setup**.

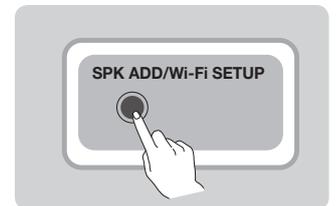

Soundbar : After turning the speaker on, press and hold the **Wi-Fi SETUP** button located at the back for 5 seconds.




WAM7500/WAM6500 : Press and hold the **Play/Pause** and **Standby** buttons on the speaker simultaneously for more than 5 seconds to initiate **Wi-Fi Setup**.

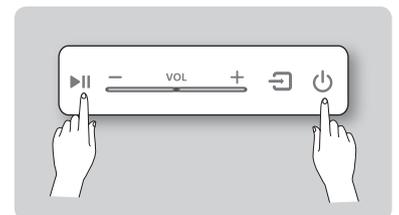


- After initiating Wi-Fi Setup, you have two minutes to establish the Wi-Fi connection using your smart device.

- 4 On your smart device, touch **Next**.
- Your smart device searches for devices available for pairing.

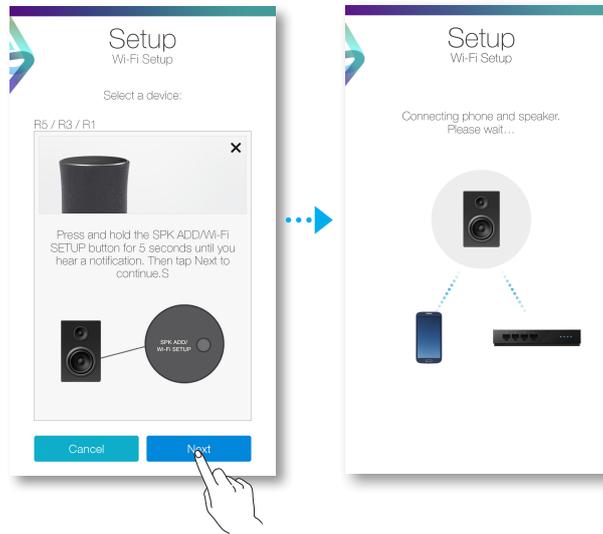


- 5 After your smart device and the speaker connect, the smart device will connect the speaker to your network. If your network is password protected you will be prompted to enter your password. If no password is needed, setup will finish automatically.

- 6 Touch **Done**.
- The network connection is complete.

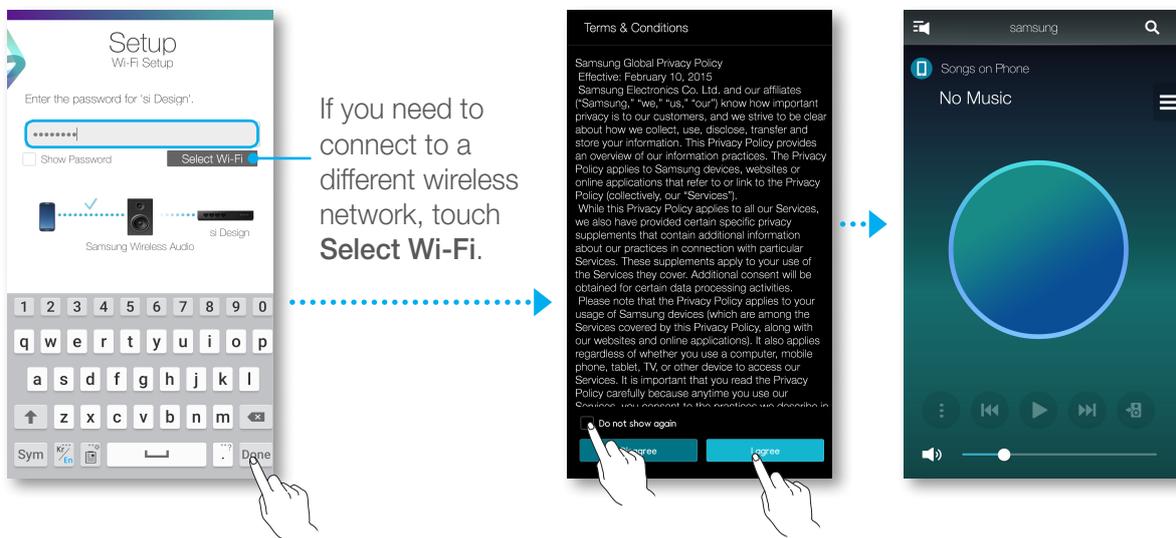


■ Connecting to Wi-Fi manually (iOS)


- 1 If the Speaker fails to connect to your network automatically, select **Manual** in the **Samsung Multiroom** app.
- 2 Touch a device that you want to connect to.

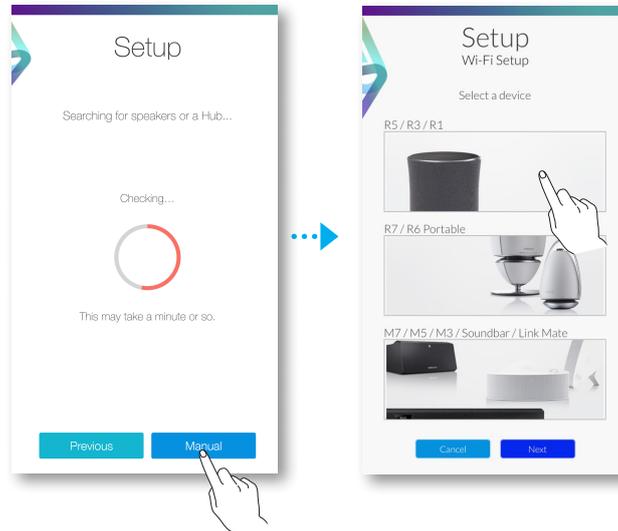


- 3 **WAM5500/WAM3500/WAM1500** : Press and hold the **SPK ADD/Wi-Fi SETUP** button on the bottom of the speaker for more than 5 seconds to begin **Wi-Fi Setup**.

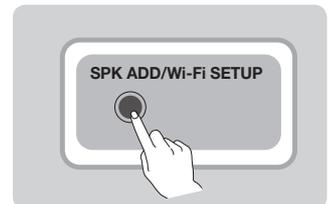

Soundbar : After turning the speaker on, press and hold the **Wi-Fi SETUP** button located at the back for 5 seconds.

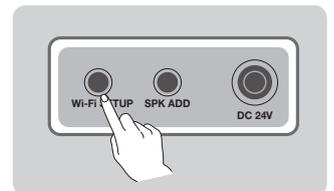


WAM7500/WAM6500 : Press and hold the **Play/Pause** and **Standby** buttons on the speaker simultaneously for more than 5 seconds to initiate **Wi-Fi Setup**.

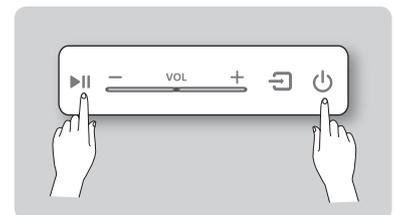


- After initiating Wi-Fi Setup, you have two minutes to establish the Wi-Fi connection using your smart device.


- 4 On your smart device, touch **Next**.
- Your smart device searches for devices available for pairing.

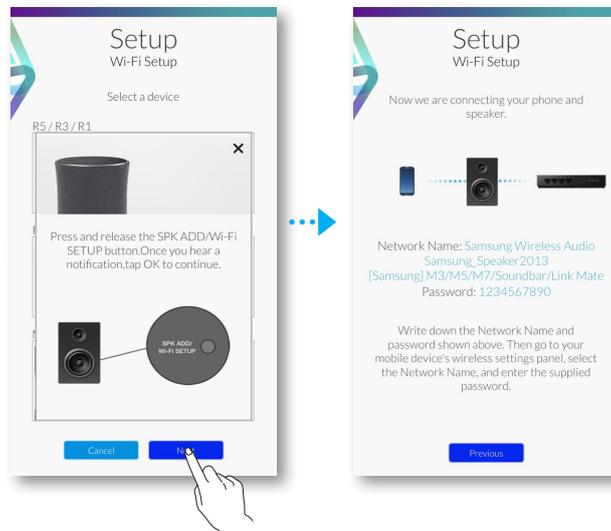

- 5 Go to **Settings** → **Wi-Fi** in iOS, and then select the **Samsung Wireless Audio**.
- 6 To connect your smart device to the speaker, use the on-screen keyboard to enter your password.
- The default password is **1234567890**.
 - The speaker and the smart device connect to each other.

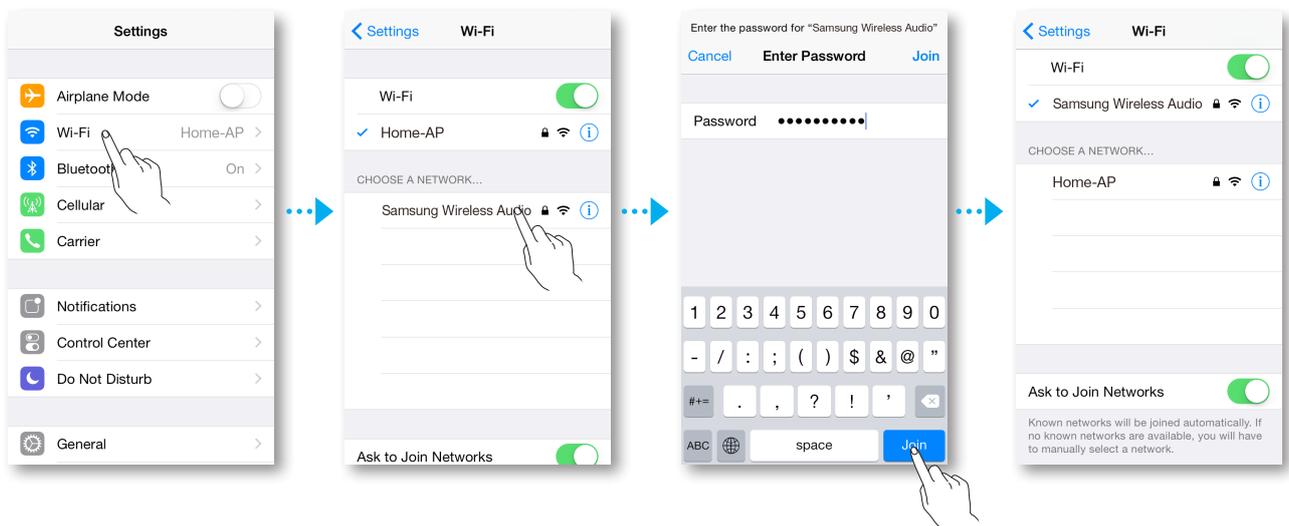

- 7 Go back to the **Samsung Multiroom** app.
- 8 From the wireless network list, select your network.
- 9 If your network requires a password, the password prompt appears on the smart device screen. Use the onscreen keyboard to enter the password.
 - Once you finish entering, touch **Done**. The speaker connects to the network.

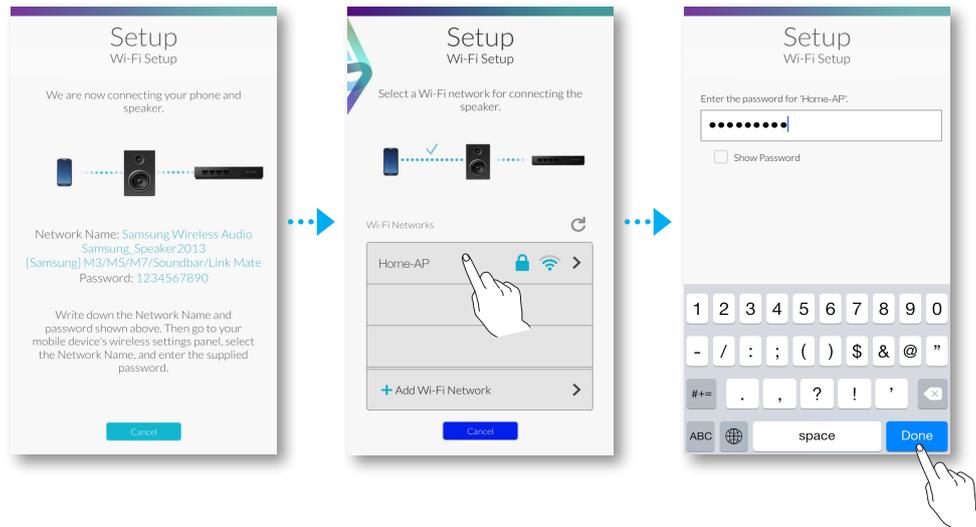


- 10 Go to **Settings** → **Wi-Fi** in iOS, and then select your network.
(The speaker and the smart device must be connected to the same network.)

 **NOTE**

- ✓ The smart device connects to the network.

- 11 Go back to the **Samsung Multiroom** app.
- 12 When the speaker is completely connected, touch **Next**.
 - The network connection process is complete.

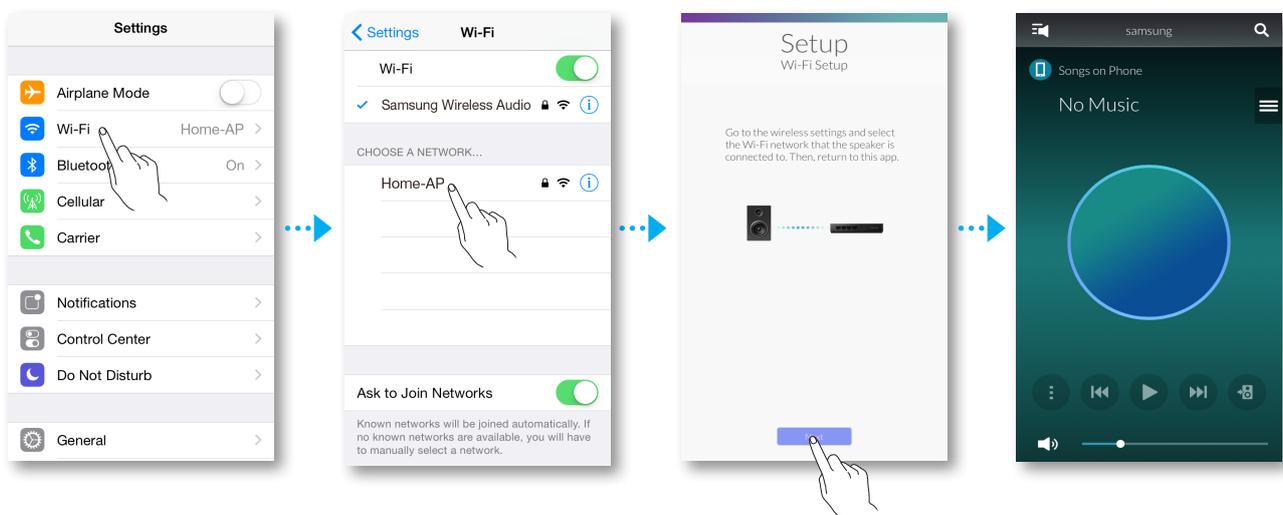


Connecting with a LAN Cable (Soundbar only)

- 1 Connect one end of the LAN cable to the speaker's **LAN** port and the other end to the wireless router.
(The speaker and smart device must be connected to the same wireless router.)
- 2 Plug the speaker into an electrical outlet.
- 3 Launch the **Samsung Multiroom** app from your smart device. Proceed with connecting your speaker.

Connecting with a HUB (Not Included)

- If the Speaker fails to connect to your network or its network connection operates abnormally, place the speaker closer to the HUB or your router and try again.
- The Speaker is a wireless network device. Its communications with your network may be disrupted because of the distance between it and other devices on the network, obstructions, or interference from other wireless devices.

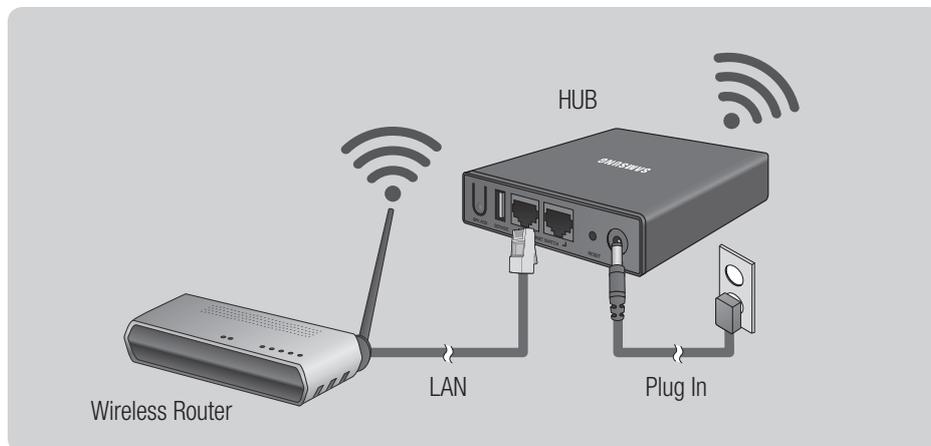

- 1 Connect a LAN cable to the router and the **ETHERNET SWITCH** port on the back of the HUB.



NOTE

- ✓ You can connect the LAN cable to any **ETHERNET SWITCH** Port on the HUB.

- 2 Attach the HUB's power cord to the power port on the rear of the HUB, and then plug the power cord into an electrical outlet.
- 3 The power () and the HUB () indicators on the HUB's front turn on. When the pairing indicator () begins to flash, plug the speaker(s) into an outlet. If the HUB's pairing indicator does not flash, press the **SPK ADD** button on the rear of the HUB.



NOTE

- ✓ If you are adding multiple speakers, connect all the speakers to electrical outlets. If you are not connecting all the speakers, refer to pages 16~17. [Click here.](#)

- 4 The pairing is completed when you hear, "Connection is complete." If you don't hear "Connection is complete", check if the volume is muted.




NOTES

- ✓ Place each speaker at least 20 inches (50 cm) from the HUB when connecting them to the HUB.
- ✓ Your smart device cannot connect to the speakers or the HUB if there is no wireless router.
- ✓ To confirm you have a proper connection, check the pairing indicator on the front of the HUB.
 - When you turn on the HUB for the first time, there is a 20 minute pairing period. The pairing indicator () will blink for these 20 minutes or until pairing occurs. When you press the **SPK ADD** button to pair additional speakers, the pairing period is reduced to 10 minutes. The pairing indicator () flashes for 10 minutes or until pairing occurs. Turn on the speaker you want to pair with the HUB while the pairing indicator is flashing.
 - If pairing mode turns off, start pairing mode again by pressing the **SPK ADD** button on the rear of the HUB, and then unplugging and re-plugging the speaker, or press and hold the **SPK ADD/Wi-Fi SETUP** button on the bottom of the speaker for 1 second.
- ✓ For a proper connection, connect the HUB to your router before turning on your speaker.
 - Connecting the speaker to the HUB may take a few minutes.

- 5 Connect your smart device to your Wi-Fi network. (The HUB and the smart device must be connected to the same router.)

- 6 Download the **Samsung Multiroom** app from Google Play or the App Store if you haven't already.
- 7 On your smart device, select the **Samsung Multiroom** app. Setup starts.

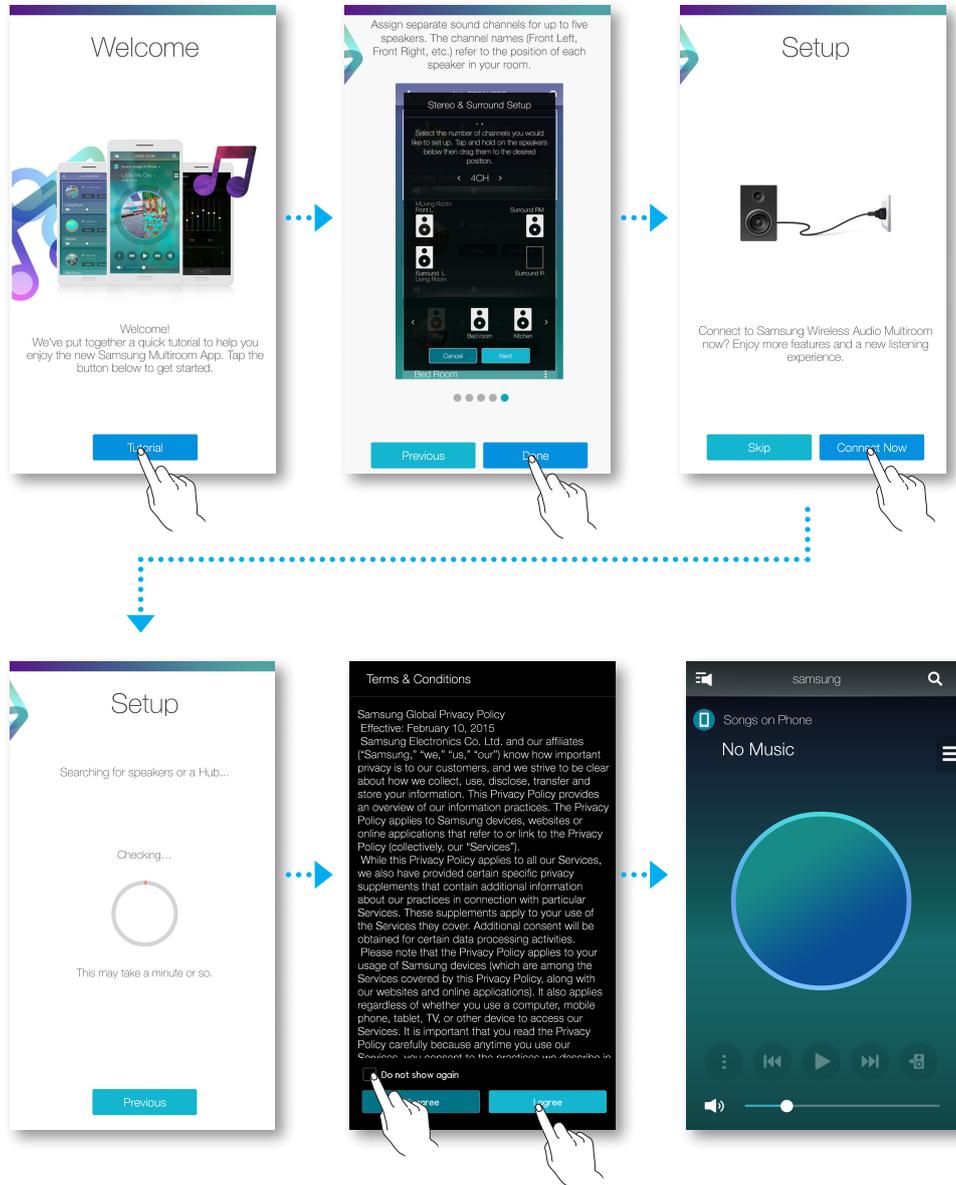


- 8 If the automatic setup fails, run the App again and follow the instructions in the app guide on your device to connect your speaker and the HUB.

■ Adding a HUB

Your speaker and a HUB may not pair successfully if your speaker and the HUB are too far apart or are on different floors.

In such cases, you can link two HUBs together by setting the second HUB to Repeater mode. The additional HUB amplifies the signal and lets you pair your speaker to the closest HUB.

- 1 Set the HUB that is connected to the wireless router to Pairing mode by pressing its **SPK ADD** button for 1 second.
- 2 Plug in the new HUB you are using as an extender, and then press its **SPK ADD** button for 10 seconds.
- 3 The newly added HUB's LED indicators turn off and on, and it switches to Repeater mode.
- 4 Once the connection between the two HUBs has been established, the added HUB's () indicator stops blinking.

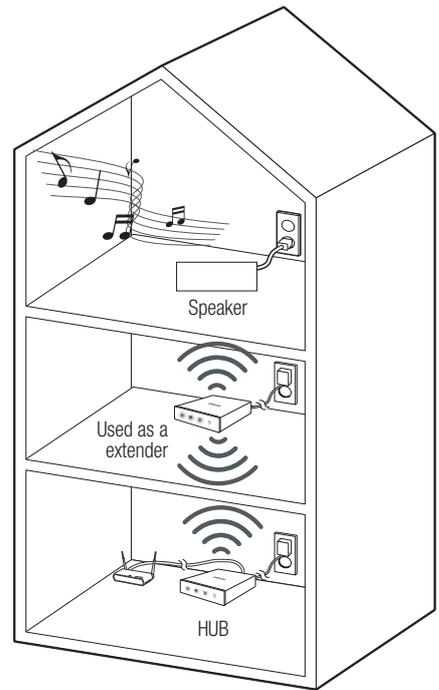

NOTES

- ✓ If your smart device is not connected to the wireless router with a Wi-Fi connection, your speaker will not appear on the **Samsung Multiroom** app.
- ✓ Place the HUB that is in Repeater mode in an appropriate location between the speaker and the HUB that is connected to the wireless router.
- ✓ You can set only one HUB to Repeater mode.

Relocating the speaker


When relocating your speaker, refer to the below table.

Wireless router HUB	If you want to connect your speaker to the current wireless router.	If you want to connect your speaker to a different wireless router
Without a HUB	Turn off the speaker, relocate it and then turn it on.	Turn off the speaker, relocate it, then establish the new connection as described in the installation instructions on pages 5 through 11. Click here.
With a HUB		Connect a LAN cable between the HUB and the new wireless router, turn on the HUB, and then turn on the speaker.

Adding additional speaker(s)


You can add additional speakers to your network using the **Add Speaker** function.

- 1 Connect the power cable of the new speaker to a wall outlet.
 - When you connect the power cable of the speaker to a wall outlet, the speaker boots up (which takes about 30 seconds), and then initiates Wi-Fi setup automatically.
 - After Wi-Fi setup is initiated, you have two minutes to establish the Wi-Fi connection using your smart device.
- 2 Run the **Samsung Multiroom** app on your smart device.
- 3 Touch  to view the list of all speakers.
- 4 Touch .
- 5 Touch **Add Speaker**.

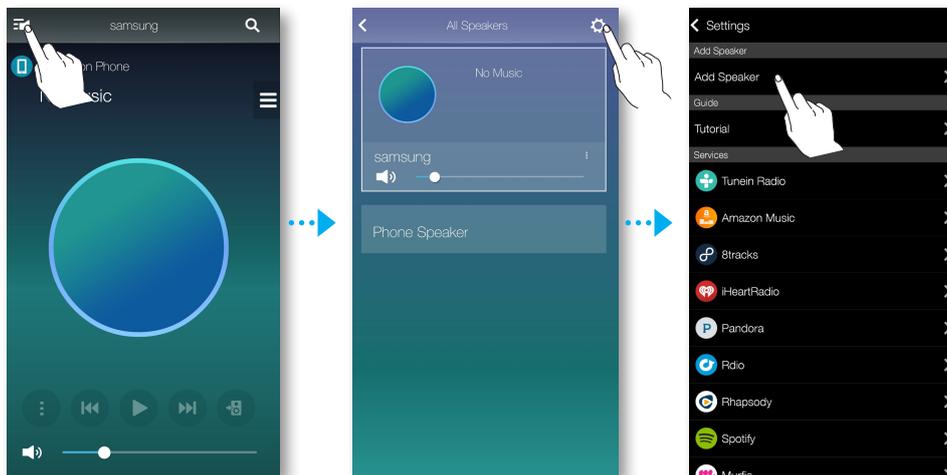


- 6 Your smart device searches for available devices. Once it finds the speaker, it attempts to connect it to your wireless network. If your network requires a password, the password prompt appears on the smart device screen. Use the on-screen keyboard to enter the password.
 - Depending on your network environment, the speaker(s) may not connect automatically. If this occurs, refer to pages 7~8 [Click here.](#) for Android, or pages 9~11 [Click here.](#) for iOS devices to continue.

7 Your new speaker is added.

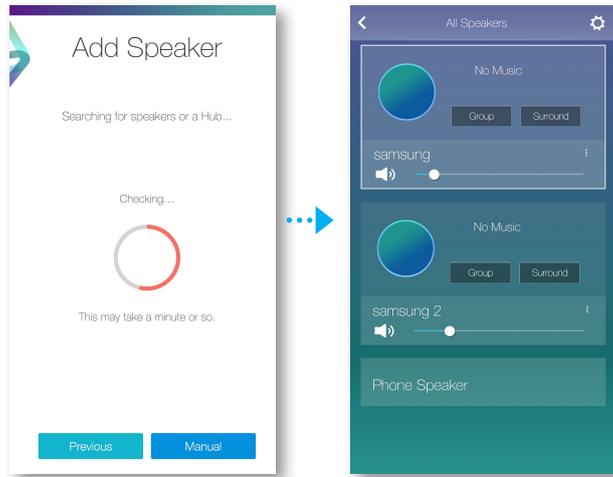

Using the Samsung Multiroom App

The App at a Glance

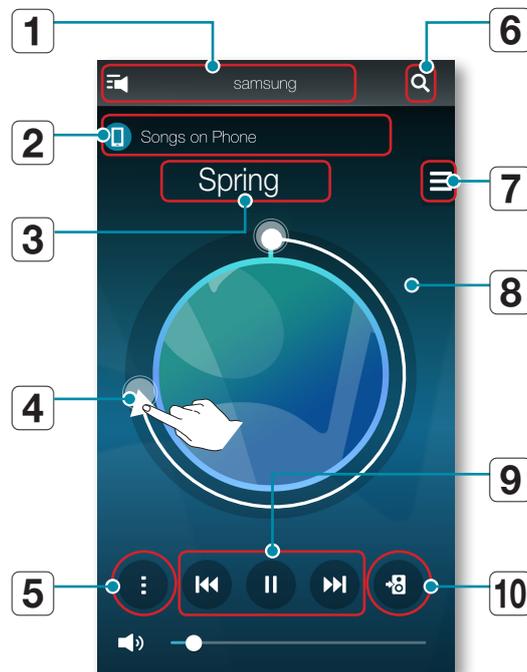

- | | |
|-----------|---|
| 1 | View the full list of connected speakers. |
| 2 | Displays the current source. |
| 3 | Check the queue or edit the playlist. |
| 4 | Rotate the wheel to select music from the queue. |
| 5 | Displays the options. |
| 6 | Enter a keyword to search for the music desired. |
| 7 | Change the sound source. Browse a list of songs. |
| 8 | Touch outside the circle while a song is playing to display the song time line. |
| 9 | Play, Pause, or select the Previous/Next Song. |
| 10 | To change the speaker currently playing music. |




NOTE

- ✓ To switch the mode from Bluetooth to Wi-Fi, launch the Samsung Multiroom app, and then disconnect Bluetooth.

Playing Music


■ Playing a music file stored in the smart device

- 1 Touch  on the home screen, and then select **Songs on Phone** (files stored on the smart device).
- 2 Select a category.
 - **Songs** : Lists all the music files by name.
 - **Albums** : Lists all the music files by album.
 - **Artists** : Lists all the music files by artist.
 - **Genres** : Lists all the music files by genre.
 - **Folders** : Lists all the music files by stored folder.
 - **Playlists** : Lists all the music files by playlist.
 - **Favorites** : Lists all the music files marked as favorites.
- 3 After selecting a category, find and select your desired music.

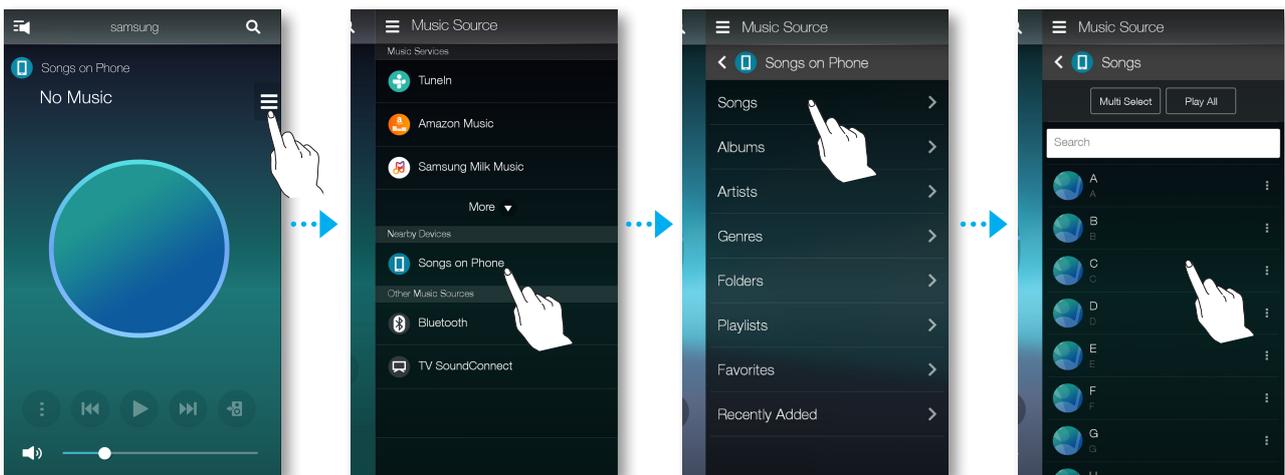


■ Listening to music using the Phone Speaker function

- 1 Touch  on the home screen, and then select **Phone Speaker**.

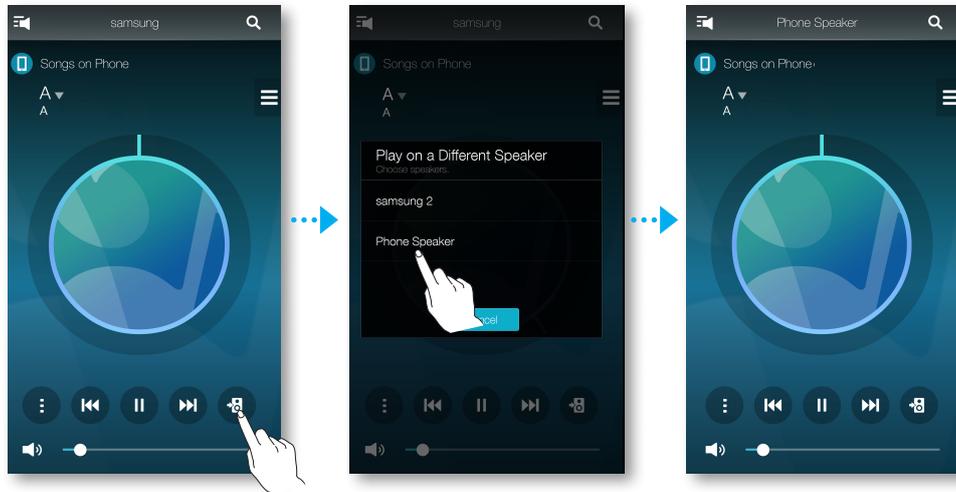

Or

- 1-1 Select **Phone Speaker** from the list of **All Speakers**.

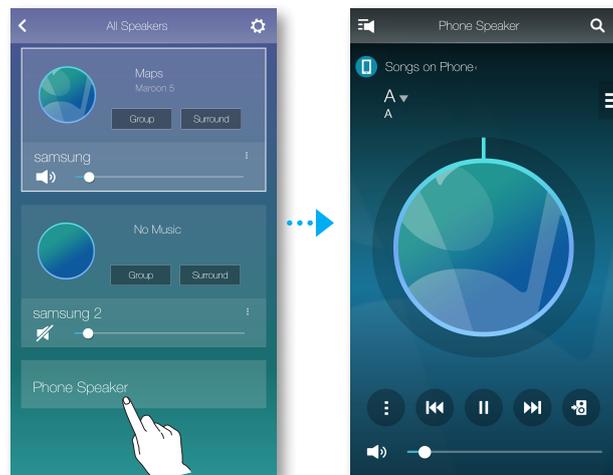

- 2 You can listen to any audio stored on your mobile device through the device's speakers or headphones.




NOTES

- ✓ If you do not have a Wi-Fi connection, use **Phone Speaker** to listen to the music stored on your mobile device.
- ✓ When you use **Phone Speaker**, you can only listen to the music stored on your mobile device. Streaming services are not available.


■ Listening to streaming music

You can select your desired streaming service.

- 1 Touch  on the home screen.
- 2 Select **More**.
The entire list of **Music Services** is displayed.
- 3 From **Music Services**, select your desired service.

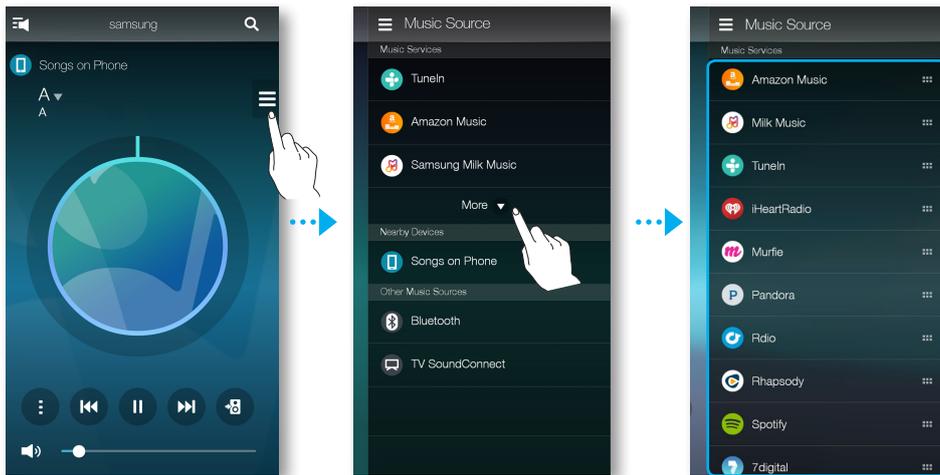

- 4 To change the order of your streaming services, touch and hold the  icon to the right of a service, and then drag it up or down to change its position.

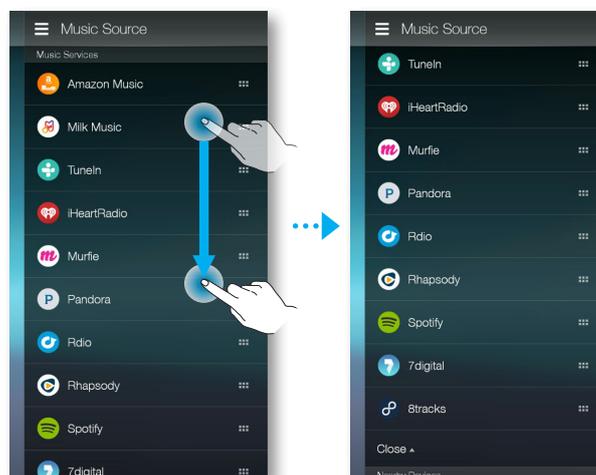


NOTES


- ✓ Depending on your region or smart device manufacturer, supported content services may differ.
- ✓ Some streaming services may require you to sign up for a membership or log in.
- ✓ You cannot initiate a subscription to a service using your smart device.
To use a for-pay service, first subscribe to the service through your computer.
- ✓ Some Tuneln radio channels may be restricted depending to their site policy.
- ✓ Supported streaming services are provided by third parties and may be terminated at any time.

Listening to Internet radio

- 1 Touch  on the home screen.
- 2 Select **TuneIn**.
- 3 Select a category.
 - **Following** : Shows the list of stations added to the preset list or marked by you as stations you are following. By default, 3 radio stations are displayed in the preset list.
 - **Browse** : Lists all supported Internet radio stations.
 - **Search** : Allows you to search for an Internet radio station using the on screen keyboard.

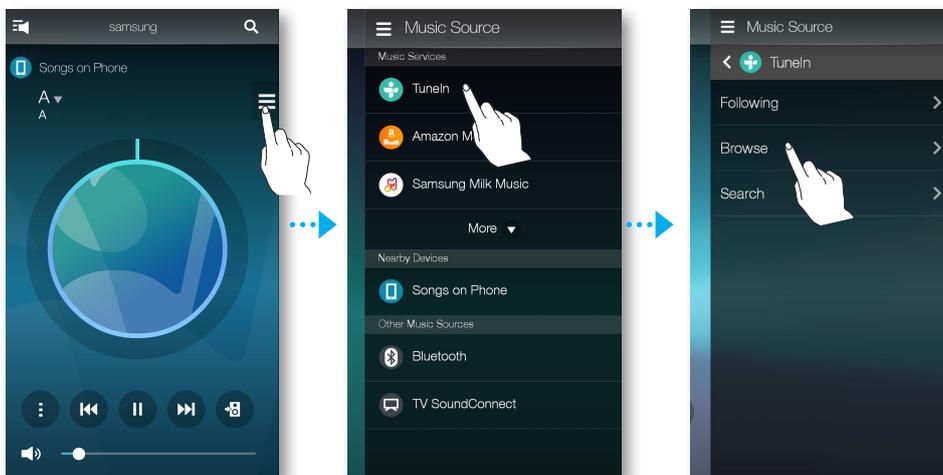


- 4 Find and select a station.

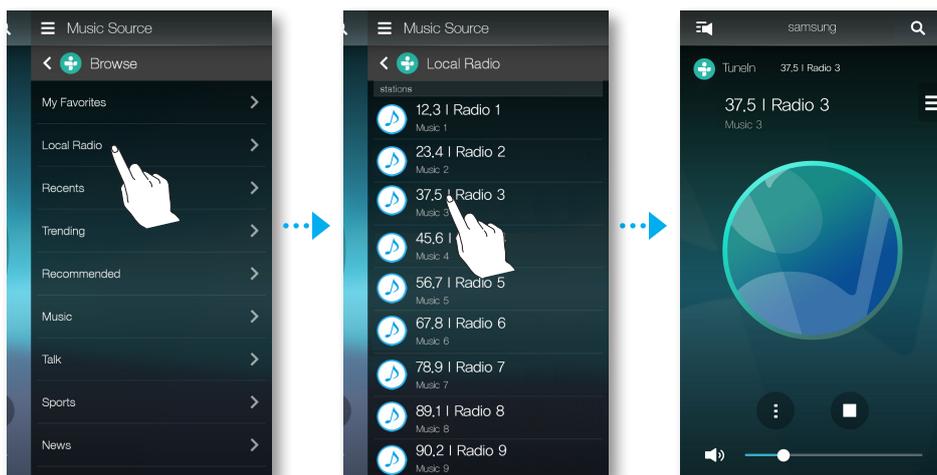

■ Following a station

You can add a station to the **Following** list.


- 1 Select the desired station.
- 2 Touch  to display the available options, and then select **+ Following**.
- 3 Touch **Save**.
 - The station you are currently listening to is added to the **Following** list.

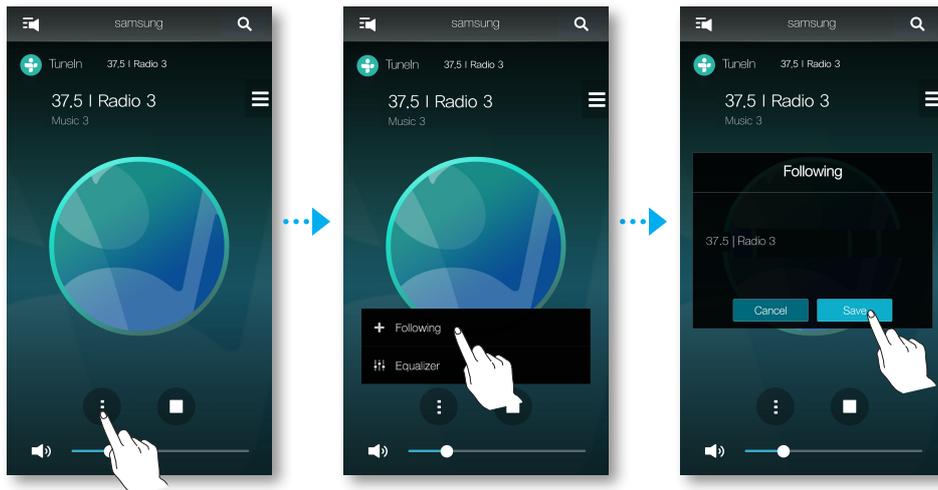


■ Setting Presets

You can add an Internet radio station you are following to the preset list or re-arrange the order of the list.

- 1 Touch , and then touch **Following** in the menu.
- 2 Touch **Edit**.

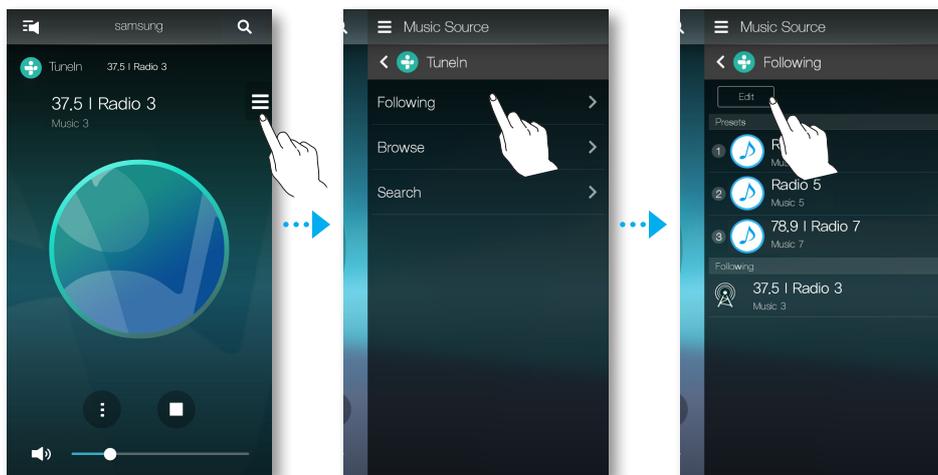


- 3 Touch, hold, and then drag the desired station from **Following** to **Presets**.
- 4 To finish touch **Done**.

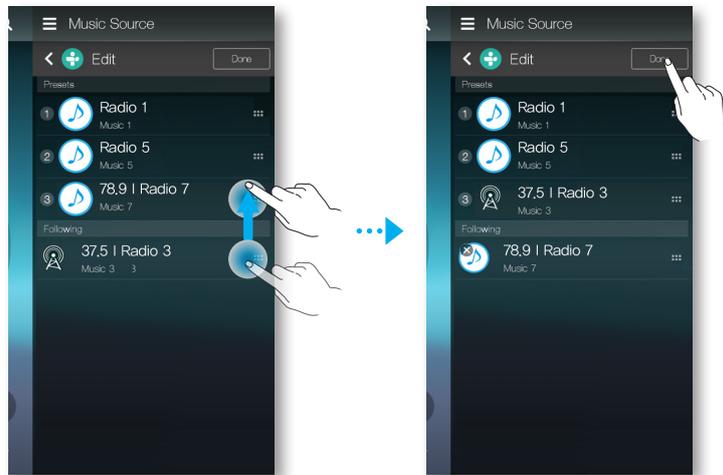

Connecting to Bluetooth Devices

You can connect the speaker to a Bluetooth device and listen to the music stored on the device.

- 1 Touch  on the home screen, and then select **Bluetooth**.

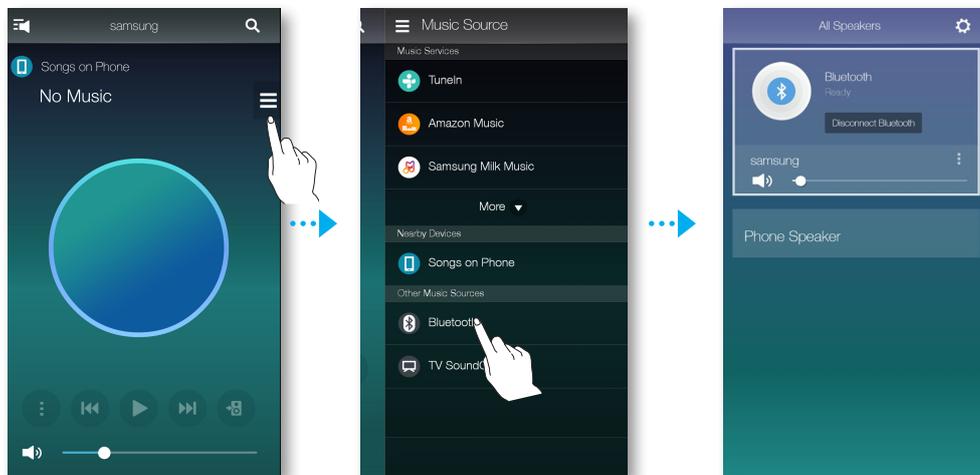


- 2 The Bluetooth connection between the smart device and the speaker is made.

Connecting a Samsung TV to the speaker

Connecting to a Samsung TV via bluetooth (TV SoundConnect)

The TV SoundConnect function lets you conveniently connect a Samsung TV to an external speaker wirelessly and listen to the TV's sound through the speaker.

- 1 Touch  on the home screen, and then select **TV SoundConnect**.

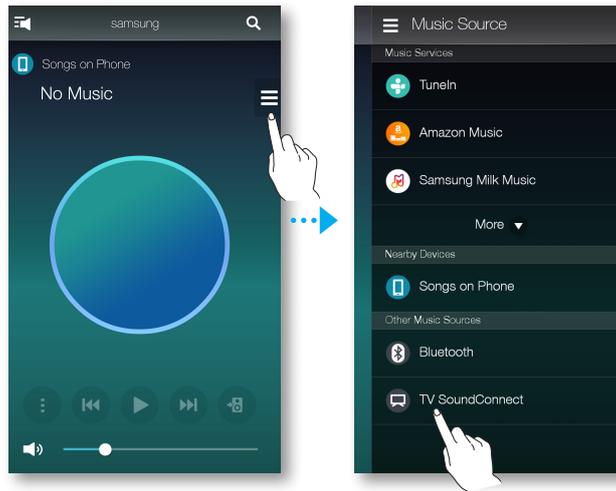


- 2 A message asking whether to proceed with Bluetooth pairing appears on the TV. Select **Yes**. The speaker is paired to the TV.

NOTE

- ✓ Be sure that **Add New Device** is set to **On** in the TV's Sound Settings Menu before you begin.

■ Connecting to a TV via Wi-Fi

- 1 Set the TV and speaker to the same Wi-Fi network.
- 2 Touch  on the app's Home screen, and then select the TV you want to connect to from the **Other Music Sources** list.

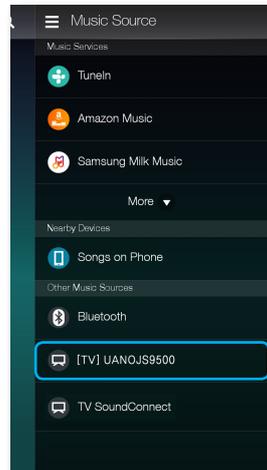

- 3 A message appears on the TV to asking if you want to pair the speaker.
- 4 Select **Yes** to connect the TV to the speaker.
- 5 You can now listen to the TV's audio through the speaker.


■ Listening to music from other devices connected to your network

You can listen to music stored on another device, such as PC, tablet, or smart phone, that is connected to the same network as the speaker.


You can share music stored on your PC or on smart devices connected to your PC.

For details, refer to "**Wireless Audio - Multiroom for Desktop**" on pages 45~46. [Click here.](#)

- 1 Touch  on the home screen.

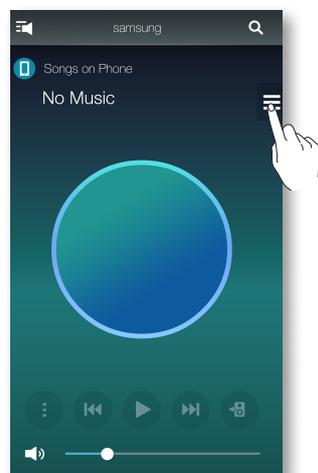


- 2 From **Nearby Devices**, select a device.
- 3 You can play music files stored on the device you selected through the speaker.

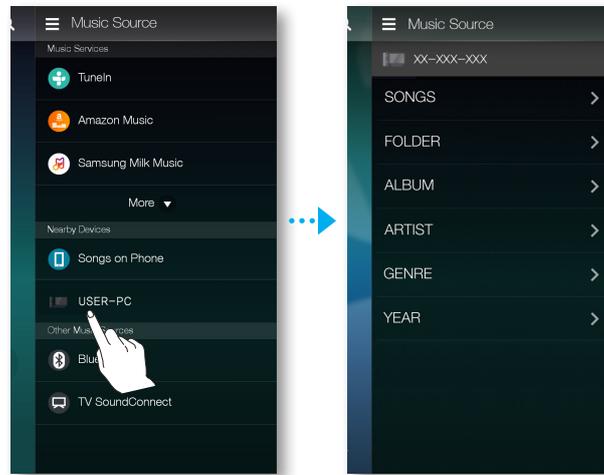

Using the playback menu

- 1 Touch .
- 2 A popup menu appears. Select a function.
 - **Shuffle** : Randomly plays music files from the song queue.
 - **Repeat** : Repeatedly plays the current music file or all the music files in the song queue.
 - **Add to Playlist** : Adds the current song to a new or existing playlist.
 - **Favorite** : Adds the current song to your favorites list.
 - **Equalizer** : Lets you adjust how the speaker sounds by changing the loudness of the high, mid, and low frequency ranges.


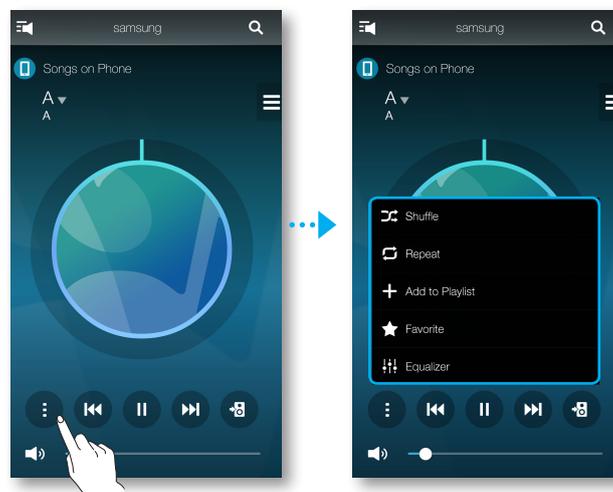


■ Adjusting the Equalizer and DRC functions

You can select one of the presets provided by default in the Equalizer option or create your own settings by adjusting the frequencies manually. You can also set **DRC** to **On** so that volume changes smoothly. If the volume is turned down, **DRC** lets you hear voices clearly.

To create your own **Equalizer/DRC** setting:

- 1 Touch .
- 2 A pop-up menu appears. Select **Equalizer**.
- 3 To adjust the bass or treble frequency ranges, drag the slider up or down. Set **DRC**, and then touch **Save**.
- 4 Touch **Custom**, and then enter a name. Touch **Done**.
- 5 Touch **Yes**, and then select **OK**.

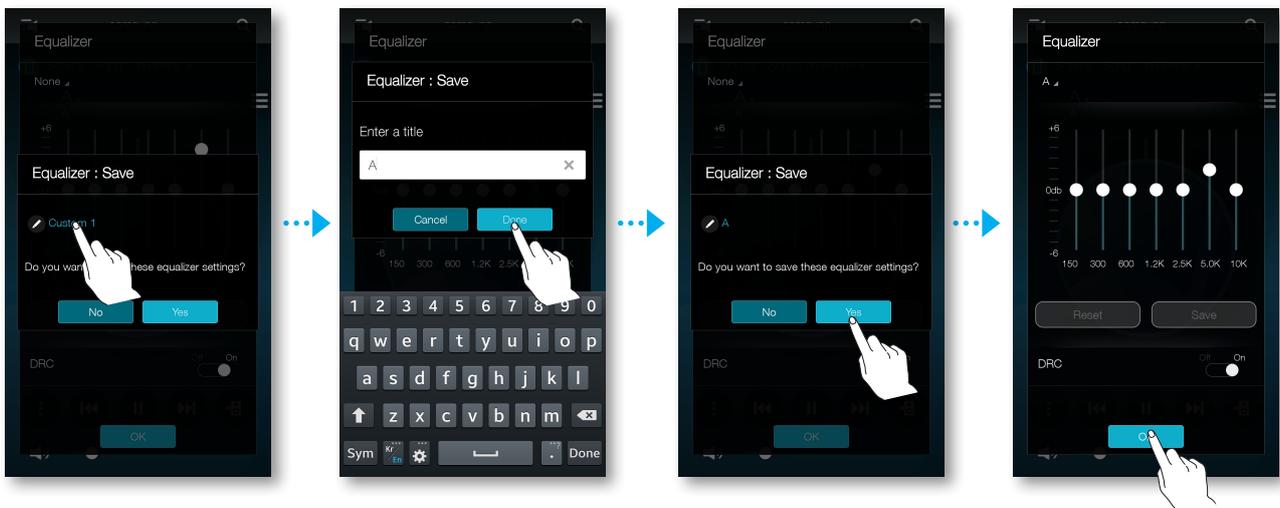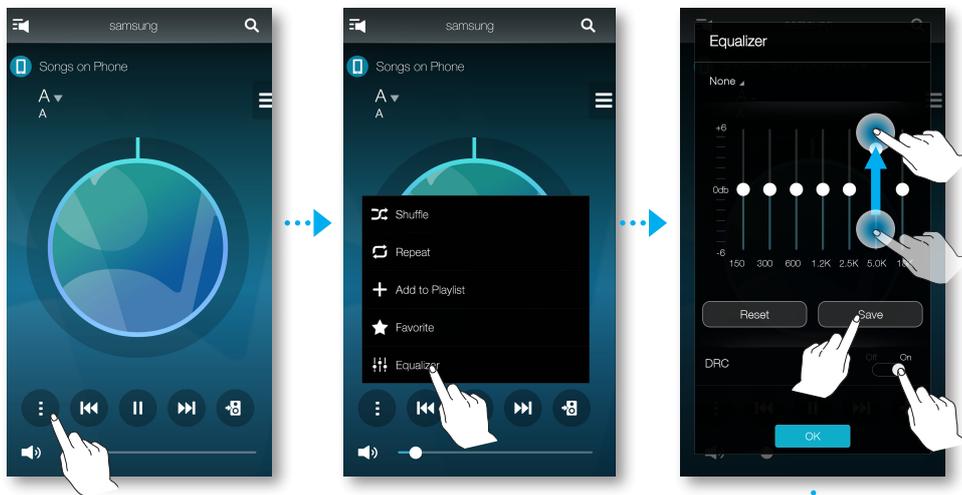

NOTE


✓ The function is not available in the **surround** mode.

■ Managing a queue


■ Adding music to the queue

You can add new music to the current music list or edit the music list.

- 1 Touch , and then select **Songs**.
- 2 Select  to the right of the music file you want to add, and then select **Add to Queue**. (Select **Multi Select** to save multiple music files to the **Queue** at the same time.)

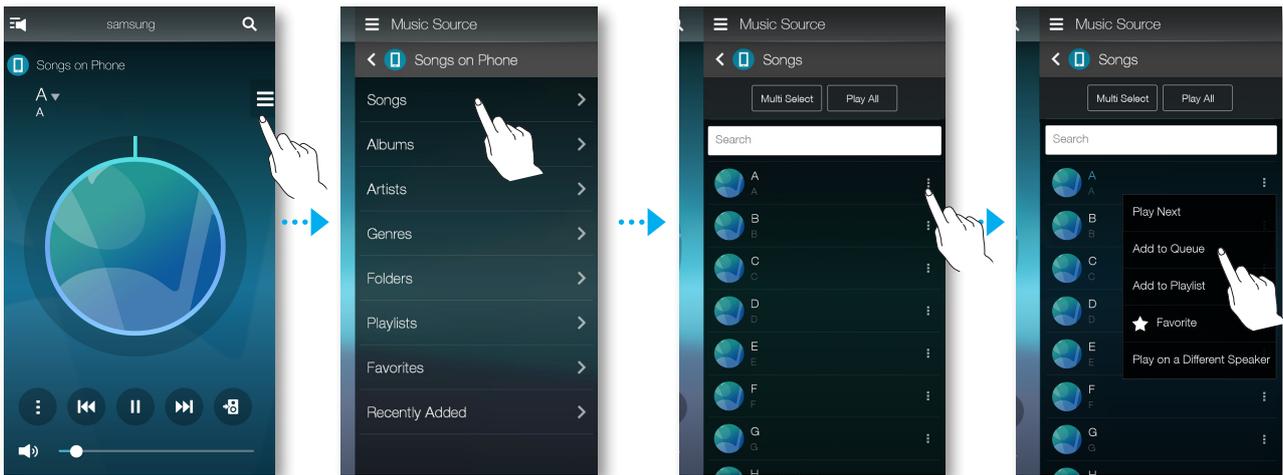

- 3 On the Home Screen, select the title of the music file you'd selected to confirm it has been saved to the **Queue**.

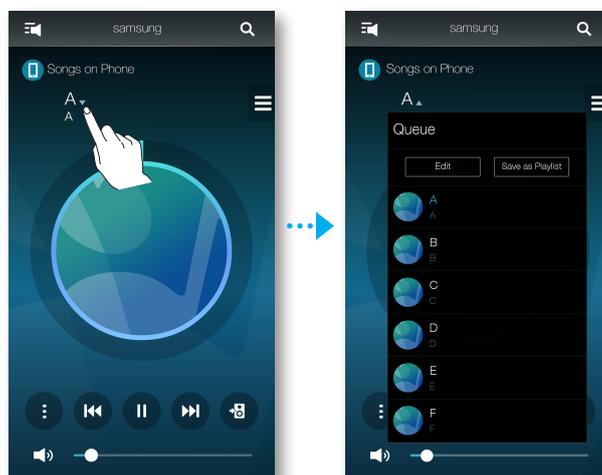


NOTES

- ✓ You can save up to 360 music files in the queue.
- ✓ You cannot save music played by station-based music providers such as TuneIn, Pandora, etc. in the queue.


■ Editing the queue

You can change the order of music files in the queue and delete files from the queue.

- 1 Select a music file title on the Home screen, and then touch **Edit**.

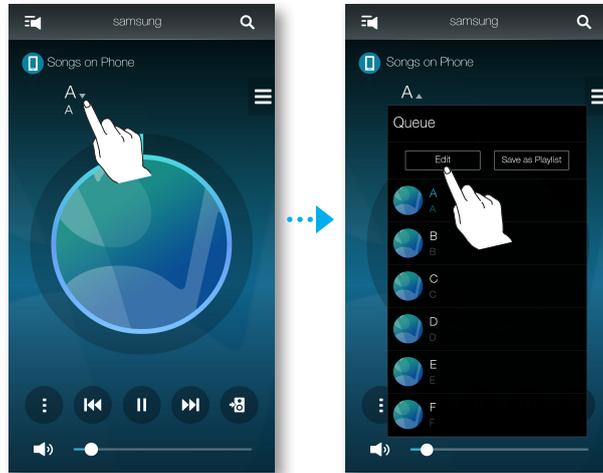

- 2 Touch and hold  and then drag to change the order of the music files, files.
- 3 Select files you want to delete (if any).
- 4 Touch **Done**, and then touch **Yes**.

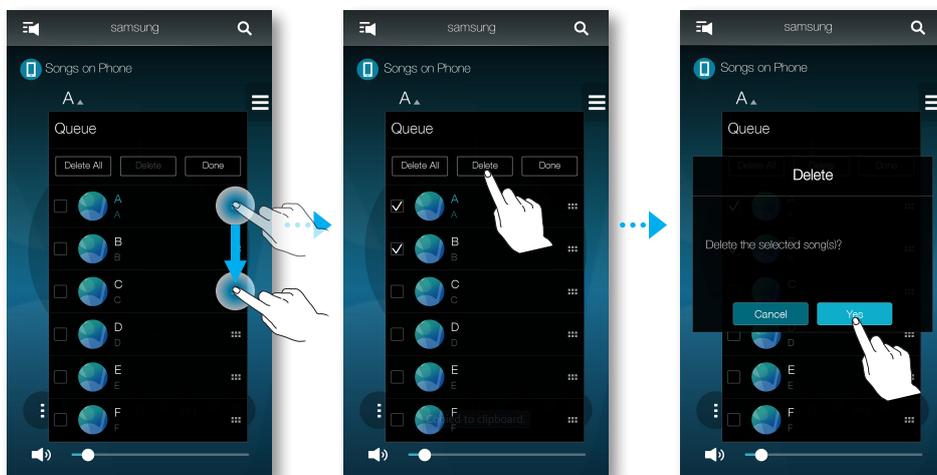


■ Managing a playlist

■ Creating a Playlist

You can create your own playlist.


- 1 Touch , and then select **Playlists**.

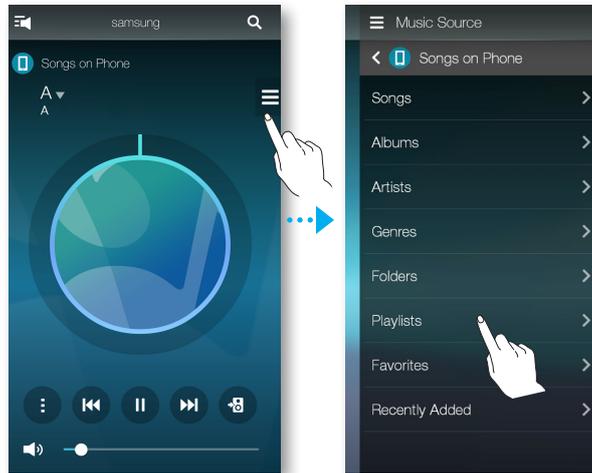

- 2 Select **Create Playlist**, and then enter a name for the playlist. Touch **Done**.

- 3 Touch **Songs**.

- 4 Select the music you want to save in playlist, and then touch **Add**.

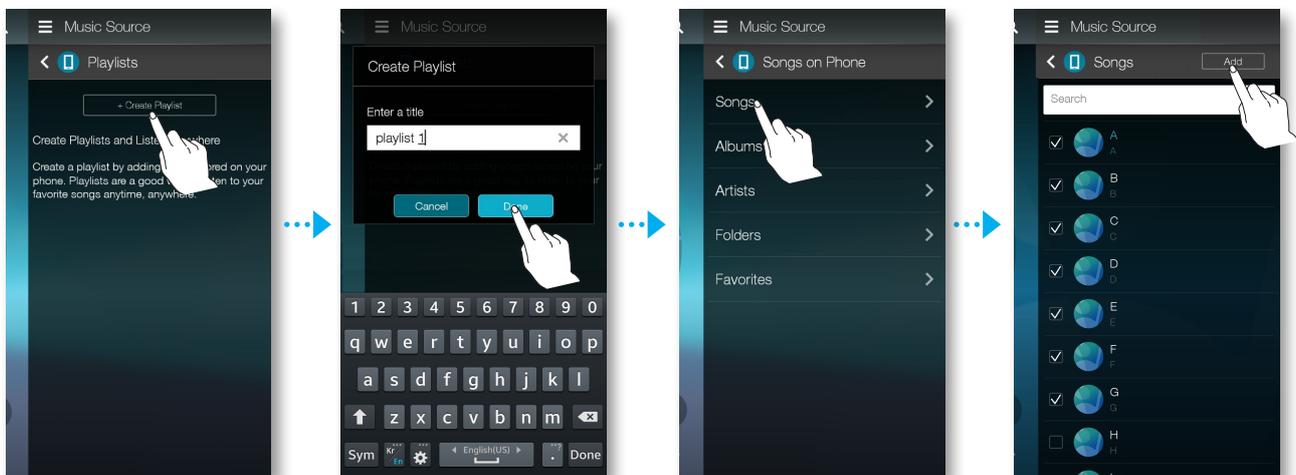

NOTE


- ✓ You can save up to 360 music files in a playlist.

■ Editing a Playlist


You can delete playlists or edit the name of a playlist.

You can also access additional options for song files in a selected Playlist. In a selected Playlist.

- 1 Touch , and then select **Playlists**.

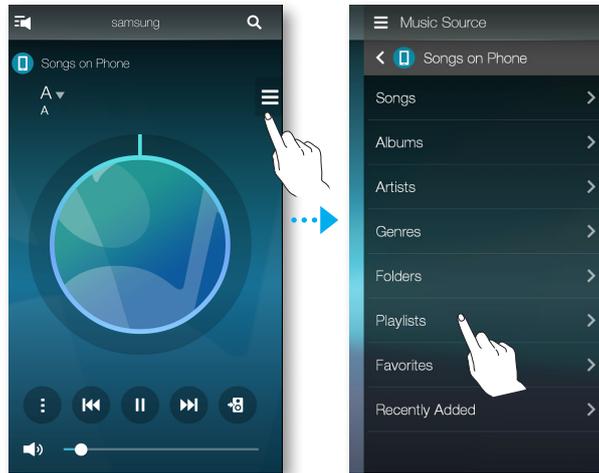


- 2 To delete a playlist or edit the name of a playlist, select  to the right of the playlist, and then select **Delete** or **Edit Name**.
- 3 To access additional options, touch the name of the playlist to bring up the list of songs. Then, select  to the right of a music file. On the screen that appears, select an option. You can select **Play Next**, **Add to Queue**, **Favorite**, **Play on a Different Speaker**, or **Delete**.

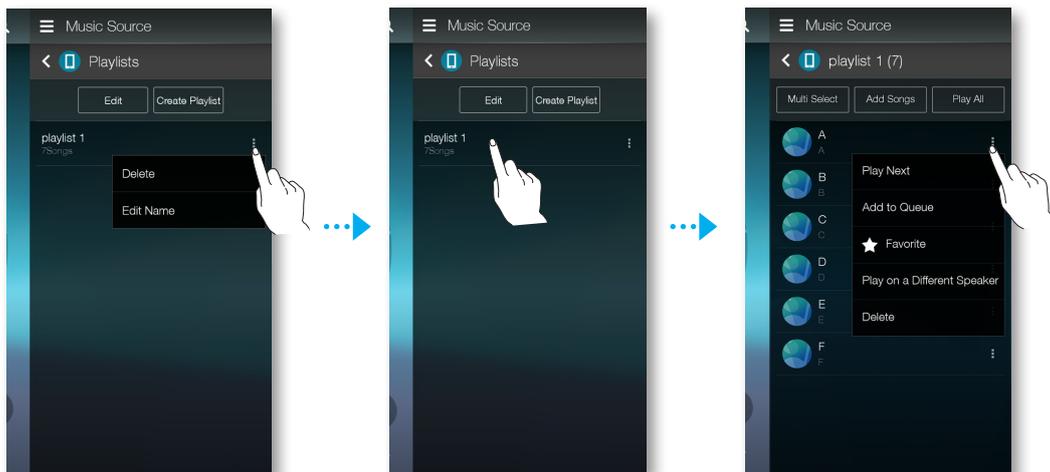

Using the Settings menu

- 1 On your Smart device, select the **Samsung Multiroom** app.
- 2 Touch  to view the list of all speakers.
- 3 Touch  to open the settings menu.

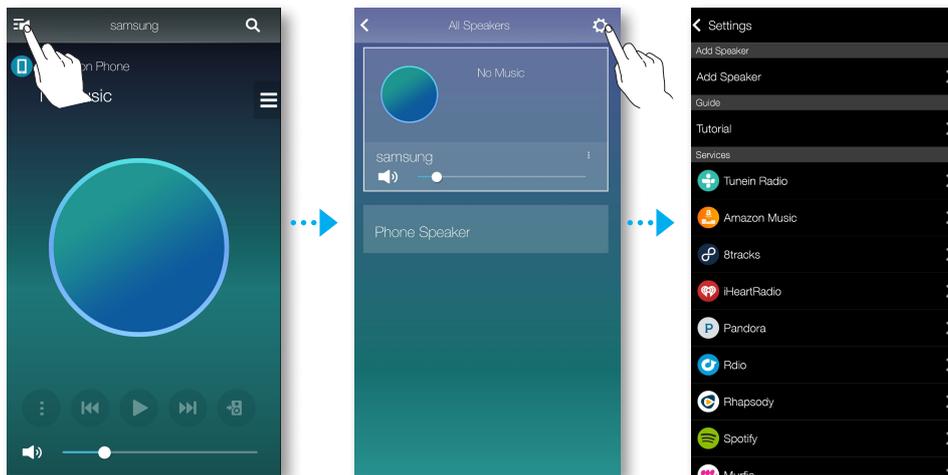


Add Speaker

Add Speaker

You can connect multiple Samsung WAM wireless speakers to your network. To add speaker(s) to your network, refer to "Adding additional speaker(s)" on pages 16~17.

[Click here.](#)

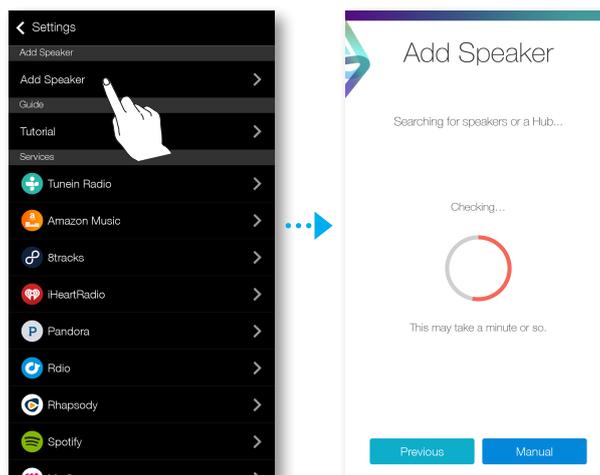


NOTE

- ✓ You must first select a speaker to view all the settings. Some settings are not available if phone speaker is selected.

Guide


Tutorial

Select the **Tutorial** to learn how to use the app.

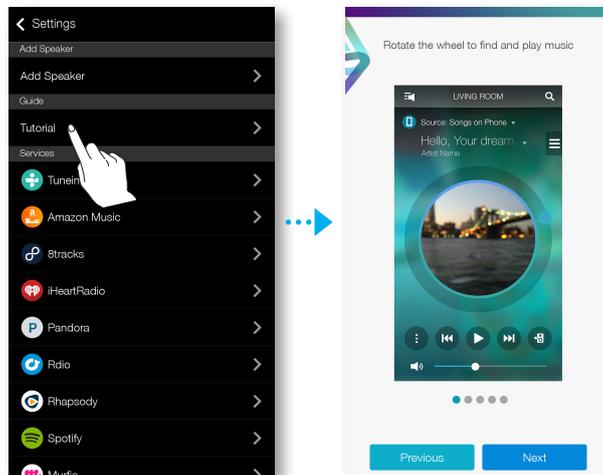

Services

Displays a list of available streaming services and allows you to manage them.

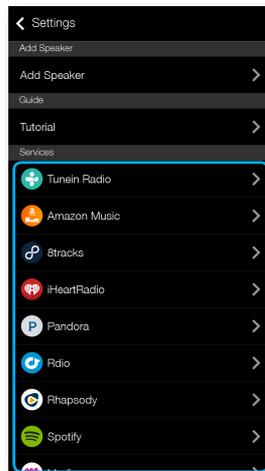

NOTES


- ✓ Depending on your region or smart device manufacturer, supported content services may differ.
- ✓ Some music services may require you to sign up for a membership or log in.
- ✓ You cannot initiate a subscription to a service using your smart device.
To use a for-pay service, first subscribe to the service through your computer.
- ✓ Some TuneIn radio channels may be restricted depending to their site policy.
- ✓ Supported streaming services are provided by third parties and may be terminated at any time.

■ Device Settings

■ Sound Feedback

Sound Feedback indicates the current status of the speaker through various sounds.


- **Off** : Turns off **Sound Feedback**.
- **On** : Turns on **Sound Feedback**.

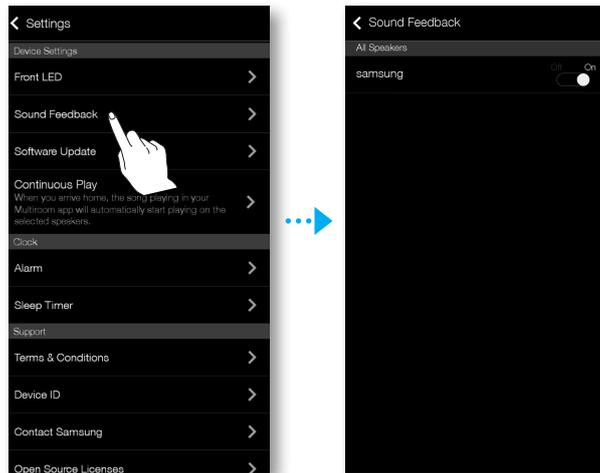

■ Software Update

Shows the speaker's current software version, and lets you turn auto update on or off.

- **On** : When on, automatically updates the software when new software is released.
- **Off** : Turns off the auto update function.

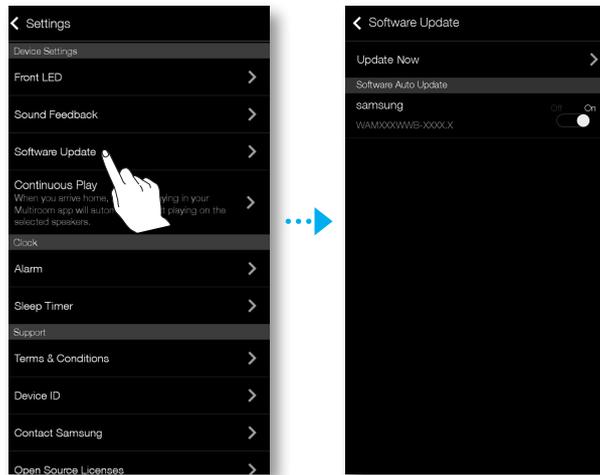



NOTES

- ✓ Auto update is available when your speaker is connected to a network and the **Software Auto Update** function is set to **On**.
- ✓ We strongly recommend that you set Software Update for all your Samsung speakers to **On**. Problems with networked functions (such as Group Play) may otherwise occur due to incompatibility issues when a variety of software versions is used on linked speakers.
- ✓ **Software Auto Update** will only update the speaker when the speaker is in Standby mode. To manually place the speaker in Standby mode:
 - 1) Set **Software Auto Update** to **On**.
 - 2) Touch and hold a touch area for 5 seconds. Touch to wake up.


Update Now

You can update your speaker's software manually using **Update Now**.

- 1 Touch .
- 2 Select **Software Update**.
- 3 Select **Update Now**.
- 4 **Update Now** searches for a current software update. If an update is available, it will download and install the update on your speaker. If you already have the most current software on you speaker, **Update Now** displays "Latest version already installed."

■ Continuous Play


Continuous Play switches the sound output from your mobile device to your speaker automatically when the speaker comes within range so you can listen to music seamlessly.

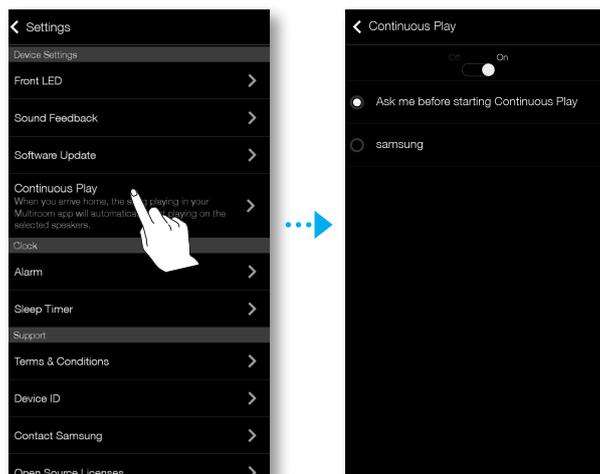


Clock

Alarm

- 1 Touch **Alarm**, and then touch **Add Alarm**.
- 2 Select the alarm date, time, day of the week, alarm volume, and duration.

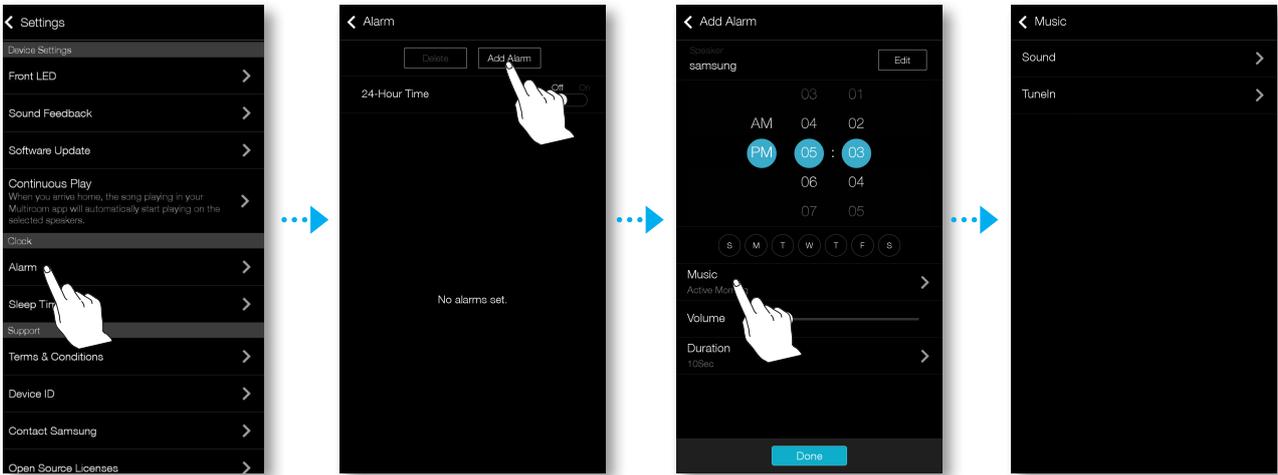


- 3 Touch **Music**, and then select **Sound** or **TuneIn** to select your desired alarm sound.

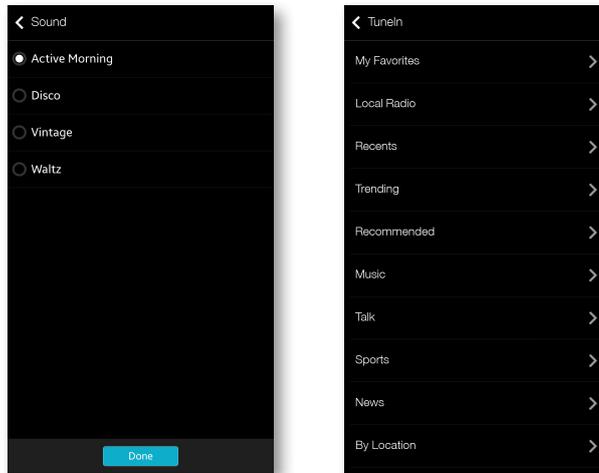


■ Sleep Timer

You can set the speaker to turn off after a set amount of time has passed by setting the **Sleep Timer**.

1 Touch **Sleep Timer**, and then touch **Off**.

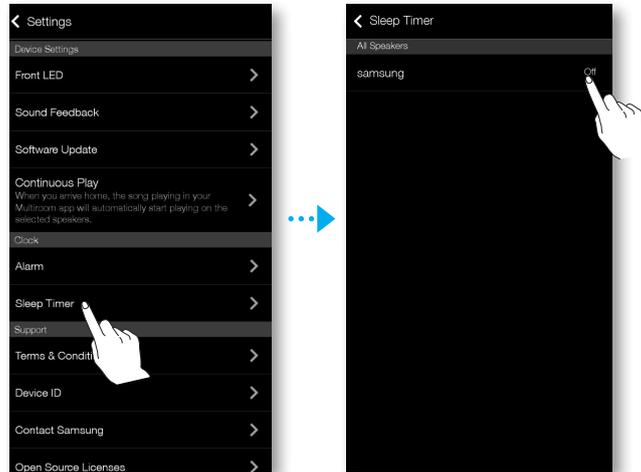


2 Drag to **On**, set a desired length of time, and then select **Start**.

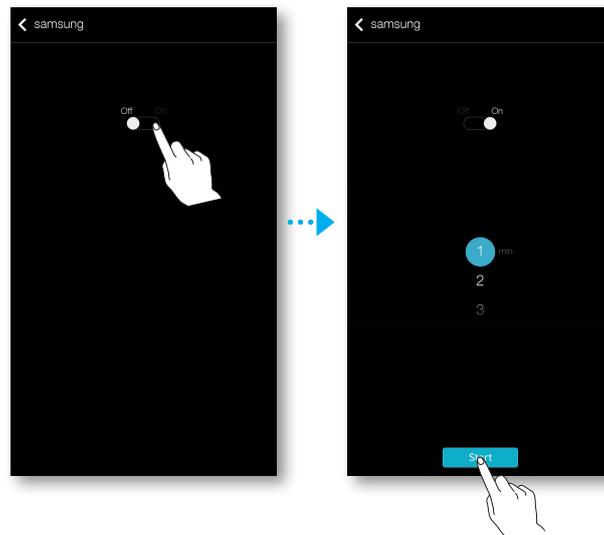

Support

- **Terms & Conditions**
Lets you view the **Terms & Conditions**.
- **Device ID**
Lets you see the **Device ID**.
- **Contact Samsung**
Provides a link to the Samsung website.
- **Open Source Licenses**
Lets you view the Open Source Licenses.

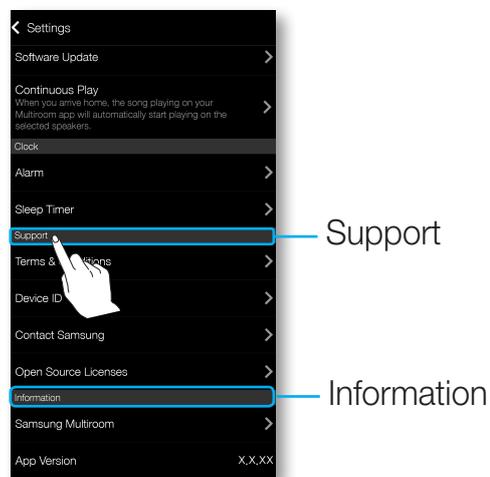

Information


- **Samsung Multiroom**
Displays the software version number of the speaker.
- **App Version**
Displays the Samsung Multiroom app version.

Connecting multiple speakers

Setting Groups

You can group multiple speakers into one group that plays the same music. Grouping is available only when multiple speakers are connected to the same network.

- 1 Touch  to go to the list of all speakers.
- 2 Touch **Group**. If you have more than two connected speakers, go to Step 3. Otherwise, stop here.
- 3 Select speakers to add to the group, and then touch **Done**.

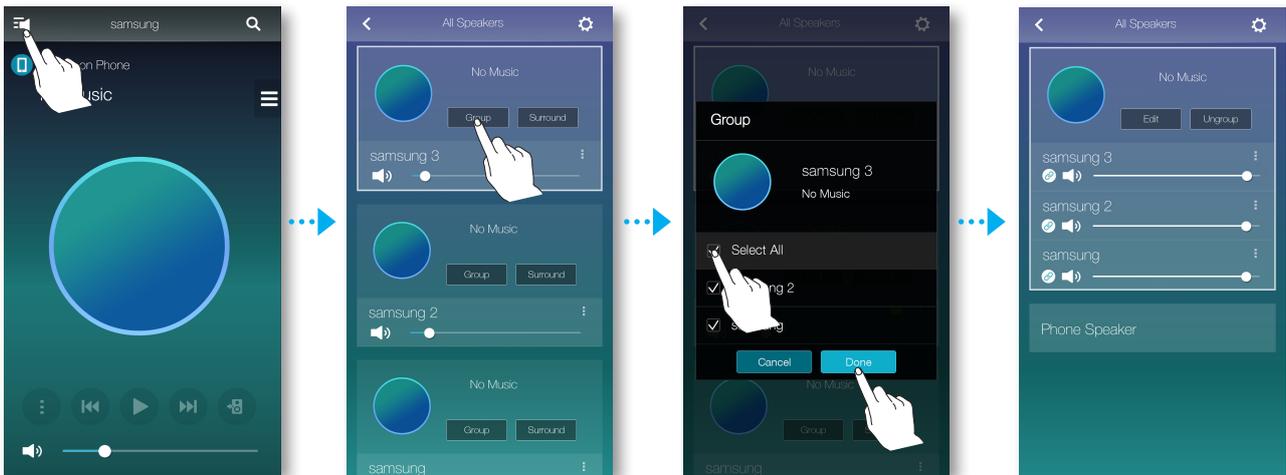


NOTES

- ✓ You cannot use Group with Bluetooth or a TV SoundConnect connection.
- ✓ If you have only two speakers connected, the speakers are grouped automatically when you touch Group.

■ Editing group

You can add or delete speakers from a group.

- 1 Touch **Edit**.
- 2 Select the speaker to edit, and then touch **Done**.

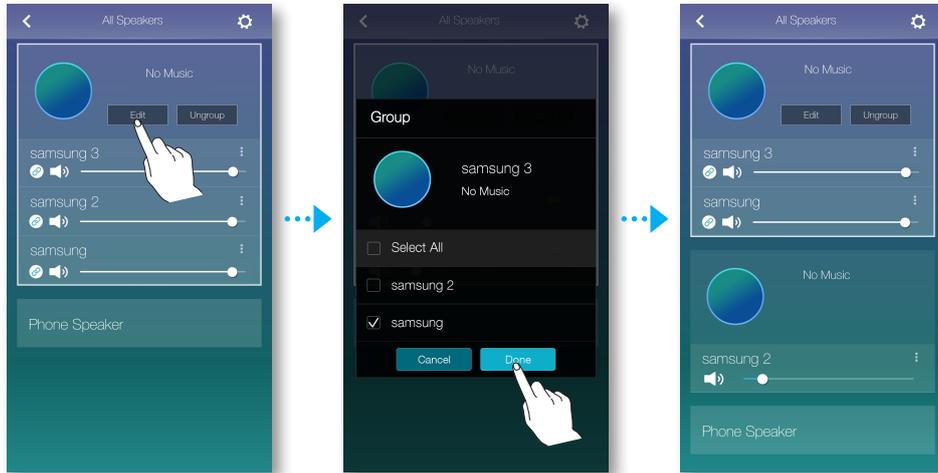

■ Ungrouping


Touch **Ungroup**.




Configuring the Surround Sound Mode

You can configure multiple speakers for Surround Sound.

- 1 Touch  to go to the list of all speakers.
- 2 Touch **Surround**. If you have more than two connected speakers, go to Step 3. Otherwise, stop here.

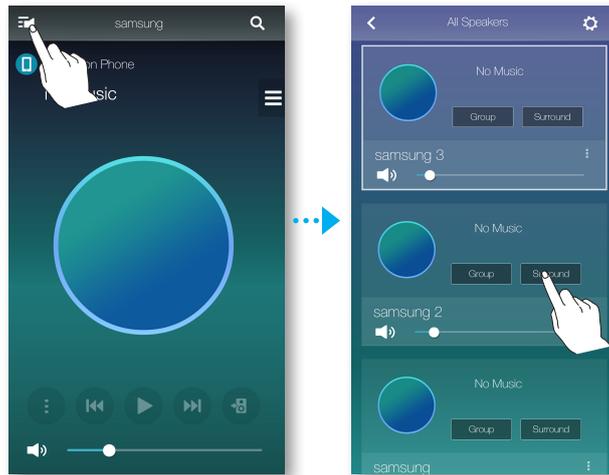


- 3 Touch and hold a speaker icon, drag it to the desired place, and then select **Next**.

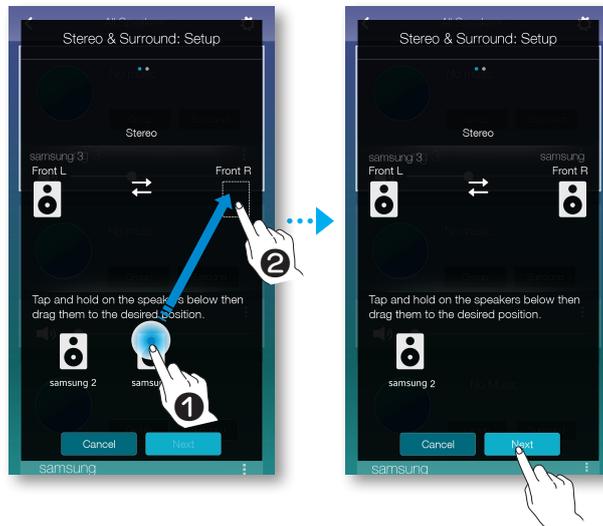

NOTE

- ✓ If you have only two speakers connected, the speakers are automatically configured for Surround Sound when you touch **Surround**.

- 4 Test the speakers, adjust their volume as needed, and then touch **Done**.

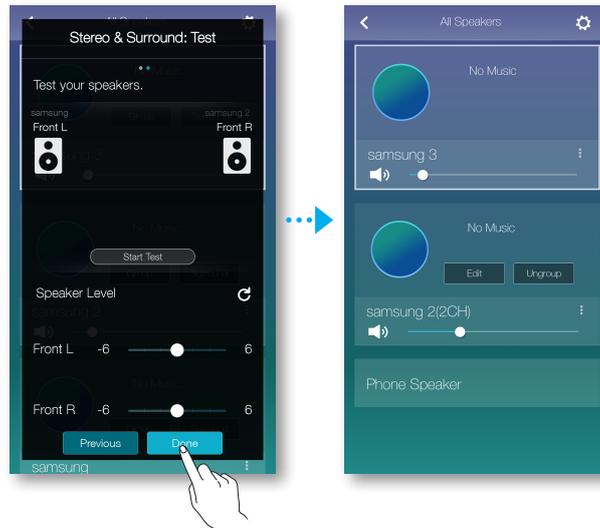

NOTES

- ✓ When you set up Surround mode, we recommend that you connect similarly located speakers to the same output (**Front L** or **Front R**).
- ✓ You can configure 4.1 channel surround sound system with a soundbar and 2 speakers.
- ✓ You cannot configure a **Surround** sound system with a soundbar and one speaker.
- ✓ Unless the TV is selected as the source, only 2 speakers can be grouped using Surround Sound.

Using miscellaneous functions


Playing Media Content Saved on a PC

Samsung Link

Install the **Samsung Link** program for easier playback of music stored in your PC through your speaker.

Visit <http://link.samsung.com>, and then download and install the **Samsung Link** application.

- 1 Visit <http://link.samsung.com>, and then login with your Samsung account. Follow the instructions shown on the screen to install the program.
- 2 Select the folder to be shared.
 - 1) Move the mouse pointer over the **Samsung Link** icon in the icons tray, right click it, and then select "❶".

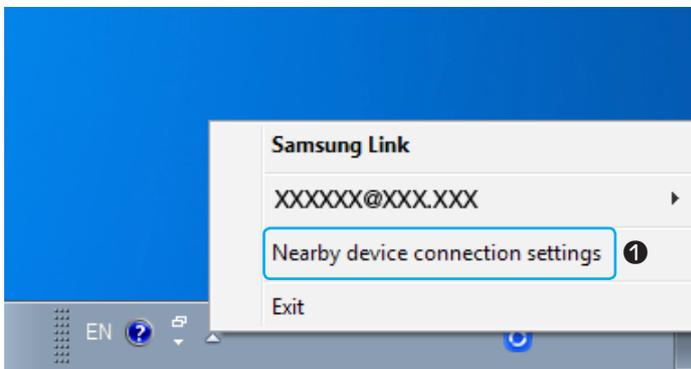

- 2) On the displayed screen, add or delete shared folders. If you add to or change the contents of any shared folders, make sure you press the  button.
- 3 Select **Devices** in the **Samsung Multiroom** app, and then select PC. Shared PC folders and music files are displayed.



NOTES

- ✓ Note that the PC containing the shared folders and your speaker must be connected to the same wireless router.
- ✓ Samsung Link software must be installed on the computer. The mobile device must support Samsung Link. For more information, visit Samsung's content and service portal at <http://link.samsung.com>.
- ✓ You may experience compatibility issues when attempting to play media files via a third-party DLNA server.
- ✓ The content shared by a computer may not play depending on the encoding type and file format of the content. In addition, some functions may not be available.
- ✓ The media content may not play smoothly depending on the network status.

■ Wireless Audio - Multiroom for Desktop

To play iTunes music files and other shared PC music files through your speaker, install the **Wireless Audio - Multiroom for Desktop** program.

To download the Wireless Audio - Multiroom for Desktop program and install it, visit www.samsung.com, and then select **Owners & Support > Manuals & Downloads**. Enter the name of your speaker in the search field (WAM5500, WAM3500 or WAM1500), and then select the name from the drop down list that appears. On the screen that appears, select **Manuals & Downloads**. Under Downloads, select **More**.




NOTES

- ✓ The PC containing the shared folders and your speaker must be connected to the same wireless router.
- ✓ If the connected Windows PC or the Mac switches to display-off mode, power saving, or hibernation mode, the App will stop.
- ✓ If the firewall of the Windows computer is activated, the App may not work. If this occurs, deactivate the Windows firewall and any other firewalls that are active.
- ✓ The *.pkg file is for Mac while *.msi is for Windows. Download the appropriate file for your computer and install it.
- ✓ Supported OS: Windows 7 or higher, Mac OS X 10.7 or later.

To use the Wireless Audio Multiroom for Desktop program after you have installed it, follow these steps:


- 1 Double click the program's icon on the PC's desktop.

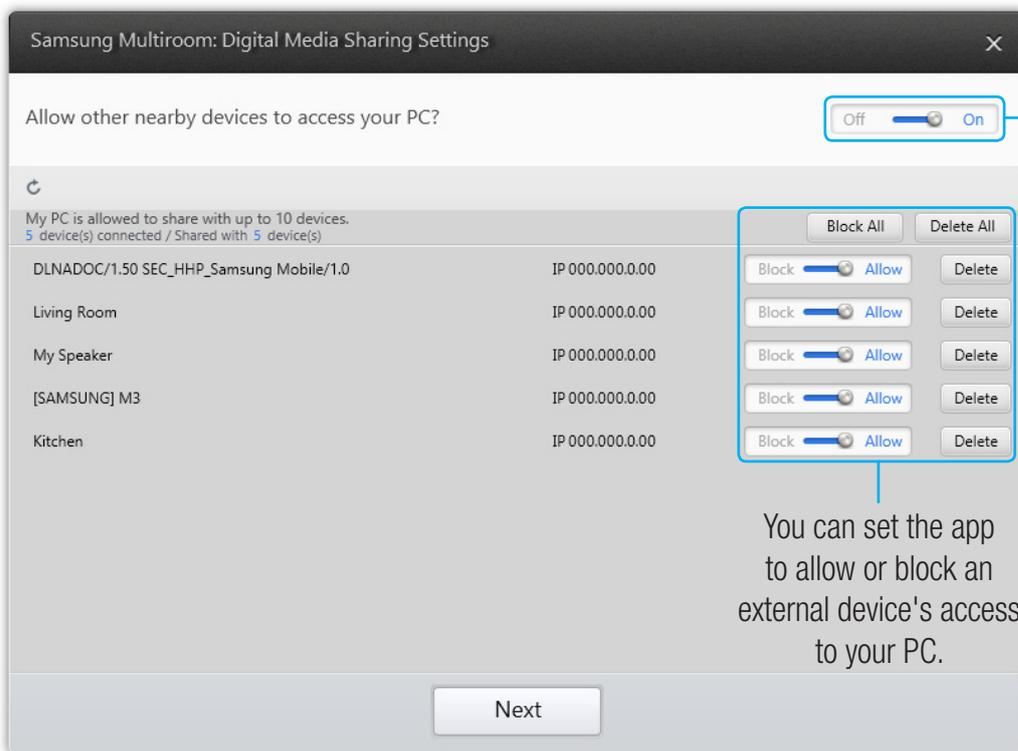

Allow to share external device's access: Off, On

You can set the app to allow or block an external device's access to your PC.

- 2 Select **Next** to set the shared folders.
- 3 Select the content type, and then add the selected folder to the shared folders list. After sharing folders, make sure to press the **Done** button.

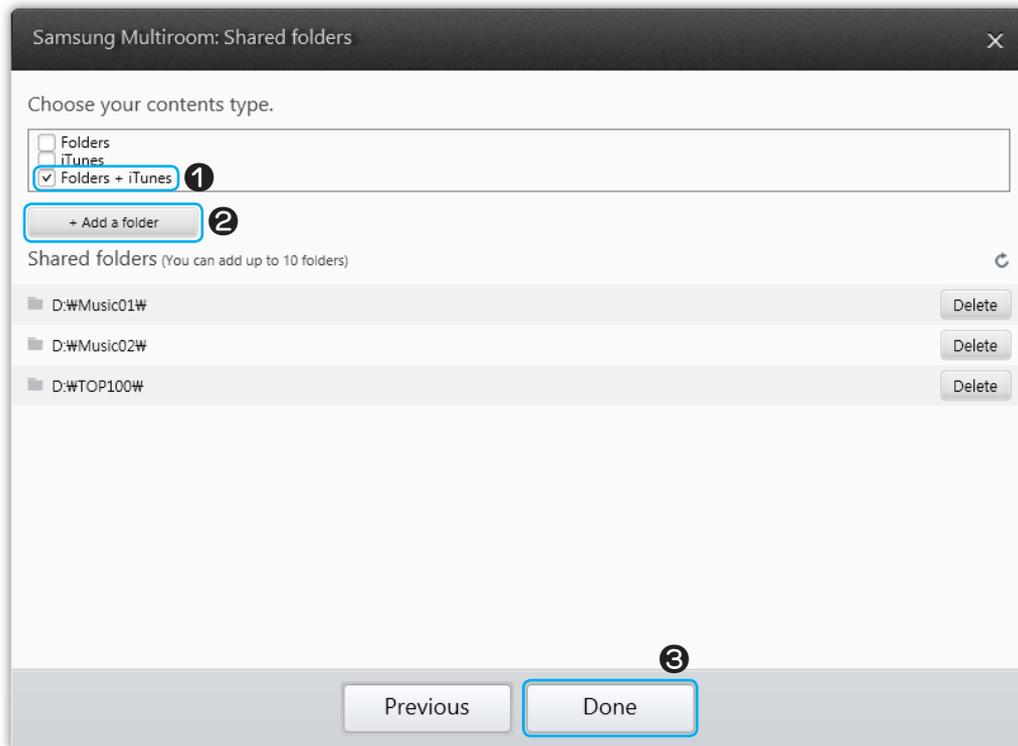

- 4 On your Smart device, select the **Samsung Multiroom** app.
- 5 Select the PC in the **Samsung Multiroom** app. The app displays the shared folders and files that are stored on the PC. (For further details, refer to pages 26~27) [Click here.](#)

NOTE

- ✓ If you add to or change the contents of any shared folders, make sure to press the  button. If you don't press the  button, the files shared by a computer may not be displayed in the **Samsung Multiroom** app.

Appendix

Troubleshooting

Refer to the table below when this speaker does not function properly. If the problem you are experiencing is not listed below or if the instructions below do not help, turn off the speaker, disconnect the power cord, and contact Samsung Electronics at 1-800-SAMSUNG (1-800-726-7864).

Symptom	Check	Remedy
I cannot group speakers.	<ul style="list-style-type: none">• Are the speakers connected to the network via Wi-Fi?	<ul style="list-style-type: none">• If the speakers are connected to the network via Bluetooth or TV SoundConnect, you cannot use the Group function.
The Multiroom app doesn't work properly.	<ul style="list-style-type: none">• Does an error occur when accessing the app?	<ul style="list-style-type: none">• Make sure your smart device is compatible with the app.• Make sure the app is the latest version.• If used with a HUB<ul style="list-style-type: none">- Make sure the HUB and the smart device are connected to same router.- Make sure the HUB's indicator LED's show that it is working correctly. (See page 12, item 3.) Click here.- If you experience problems connecting the HUB and speaker, try relocating the speaker so that it is closer to the wireless router or HUB.



NOTE

- ✓ If the problem persists, contact the Samsung Call Center for troubleshooting.

Compatible devices

- Mobile : Android 2.3.3 (Gingerbread) or above, iOS (6.0) or above



NOTES

- ✓ Some devices may not be compatible with the speaker.
- ✓ Note that older versions of compatible speakers may not be supported.

SAMSUNG