


WNST-APL-1 & WNST-APL-2 Winston Workstation® for Apple iMac | Installation Instructions

STEP 1 COLUMN	Page 3
STEP 2 MOUNT	Page 4
STEP 3 WORK SURFACE	Page 5
STEP 4 BEAM	Page 6
STEP 5 MONITOR TILTER	Page 7
STEP 6 MONITOR CUPS	Page 8
STEP 7 CABLE MANAGEMENT	Page 9

NOTE: Depending on your Winston Workstation* configuration, you may not receive all the parts shown within this instruction booklet.

Installation may require two people.

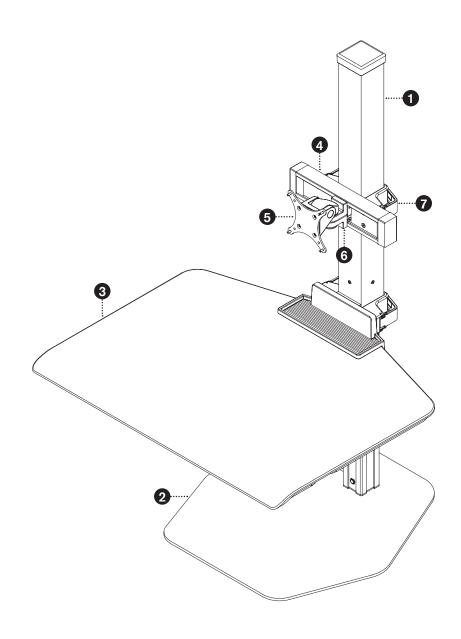


WNST-APL-1 & WNST-APL-2 Winston Workstation® for Apple iMac | Parts List


A	Work Surface 411469	F 3/8-16 x 1" FHSCS 701124	K Center Beam (10" or 30") 111098-10 or 111098-30	P 10-32 x 3/8" PhPHS 702281	U Dog Washer 111230-603
В	Column 411470-M	G 10-32 x 1" FHSCS 711467	L 1/8" Allen Wrench 701312	Q 75/100 mm VESA Adapter 105587	V 10-32 x 1/2" FHSCS 711240
		O DITION			
С	Felt Pad 111464	H Column Clamp	M 7/32" Allen Wrench	R Standard Monitor Tilter 405397	W Column Cable Clip 111203-708
	Freestanding Base	I Utility Tray	N End Cap 111159-708	S M4 x 12mm PhPHS 702096	
	Cable Retainer	J FHSCS 10-32 x 1-1/2" 711101	O Column Cap 111275-708	T Monitor Cup	
		8)			

STEP 1 COLUMN


IMPORTANT: Do not pull excessively on cable – doing so may result in accidental actuation of column.

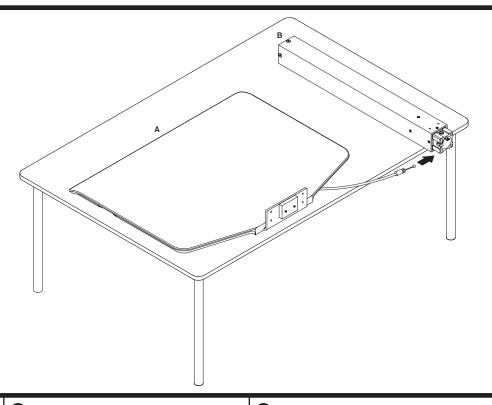

Confirm cable is properly seated into position.

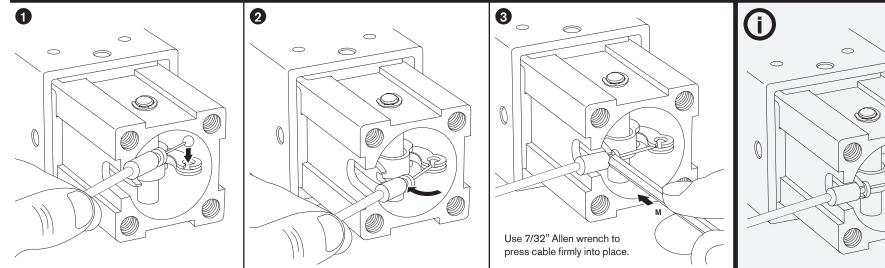


STEP 2 MOUNT

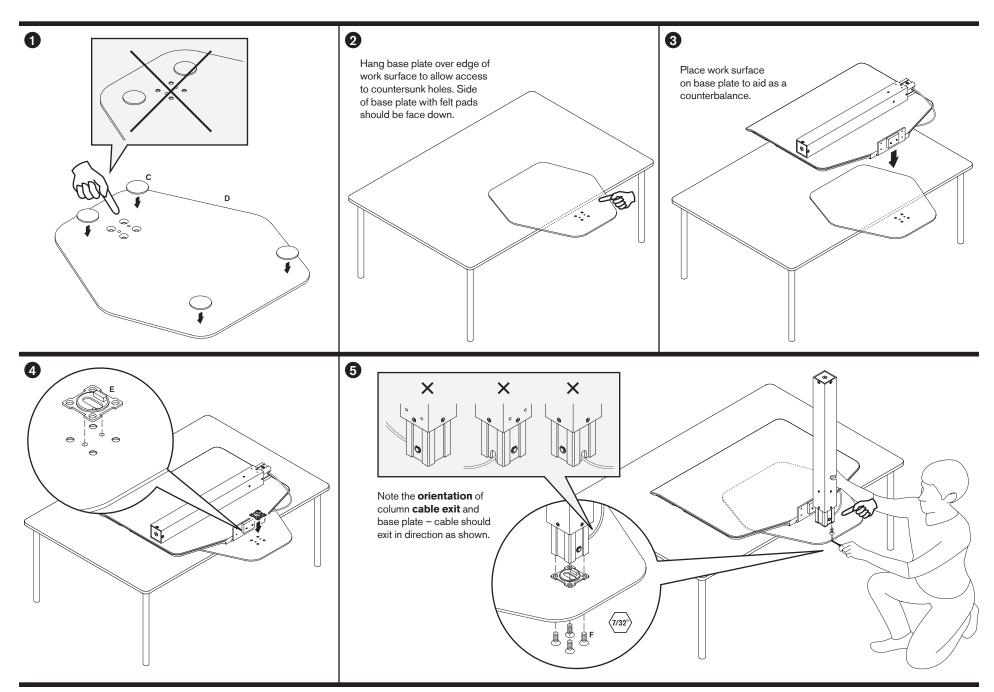


STEP 3


WORK SURFACE

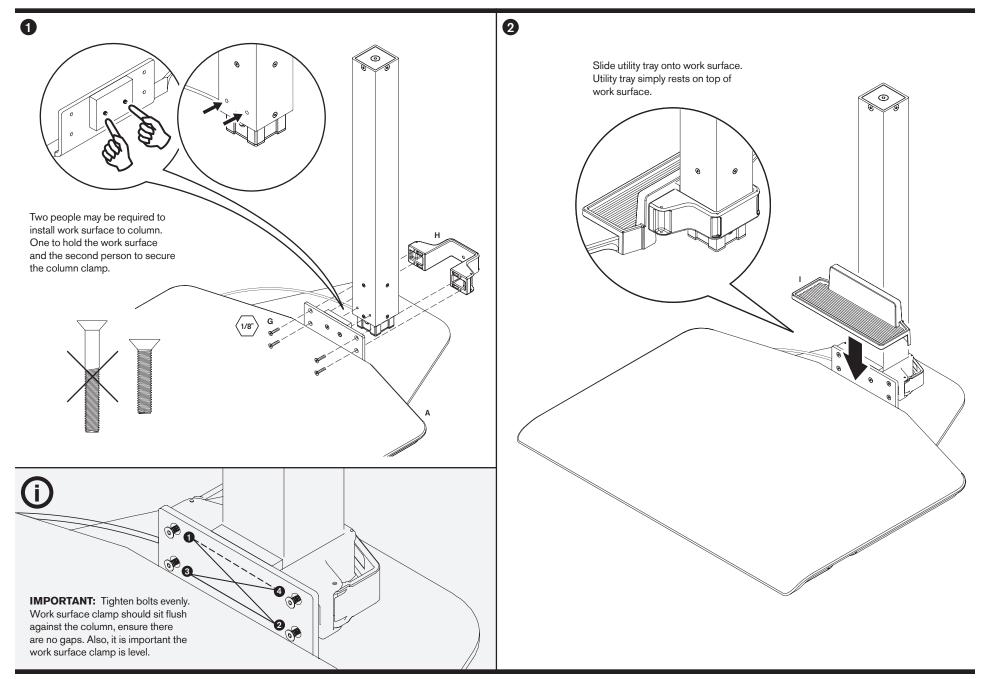


STEP 4 BEAM

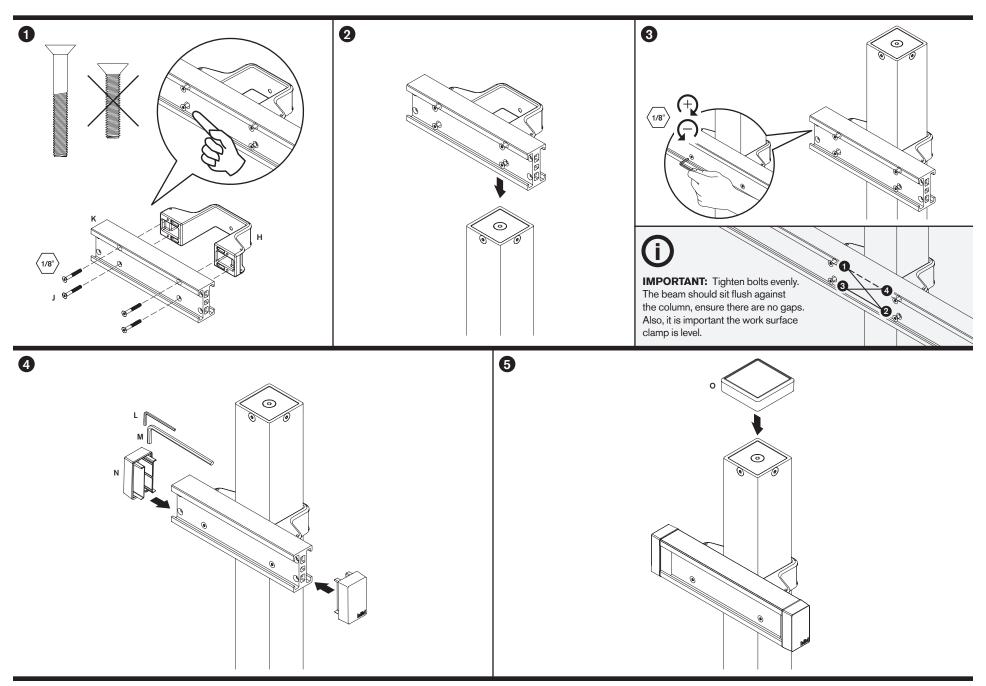


a

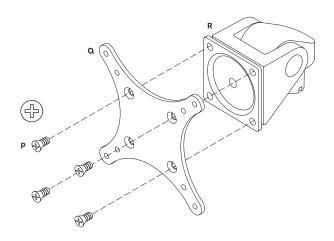

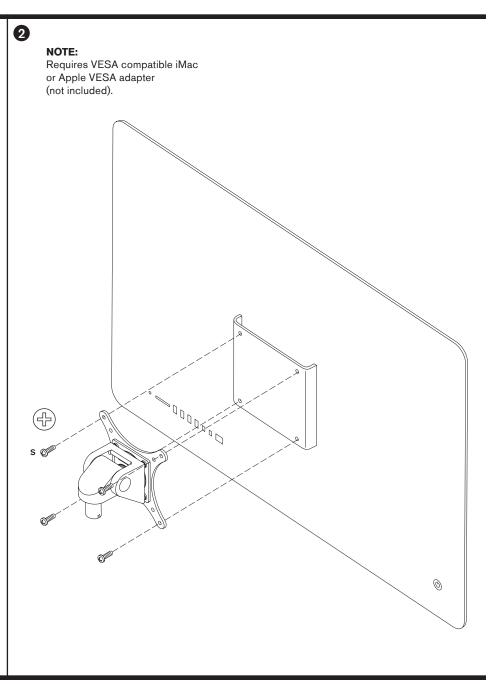

2

0

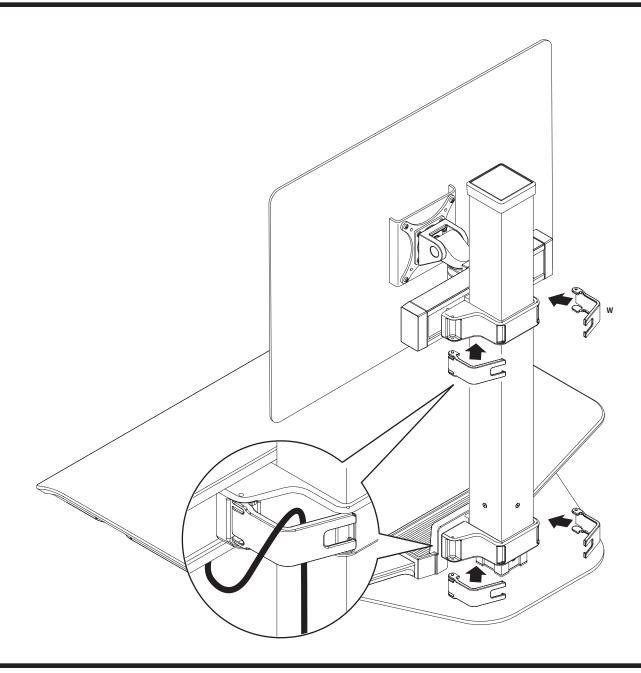

HEIGHT ADJUSTMENT

