INSTRUCTION MANUAL

Intensifier T Motorized Zoom Focus Camera

HT7248TM

(Dome Camera)



Contents

	1
• Precautions	2, 3
● Safety Instructions	4
Package Contents	5
	8
● Specifications	9
	10
● Features	11
OSD Menu Details	12-30
● Trouble Shooting	31

Precautions


Do not install the camera in extreme temperature conditions.

Do not install the camera under unstable lighting conditions.


Do not touch the front lens of the camera.



Only use the camera under conditions where temperatures are between -10°C and +50°C. Be especially careful to provide ventilation when operating under high temperatures.

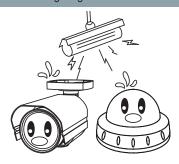

Severe lighting change or flicker can cause the camera to work improperly.

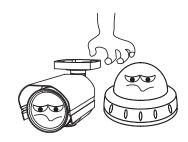


This is one of the most important parts of the camera. Be careful not to leave fingerprints on the lens cover.

Never keep the camera pointed directly at strong light.

Do not drop the camera or subject it to physical shocks.

Do not expose the camera to radioactivity.

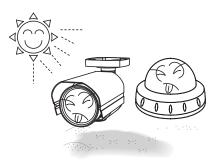

It can cause malfunctions to occur.



Housing damage can compromise weatherproof ratings.



If exposed to radioactivity the CCD will fail.

NOTE

- * If the camera is exposed to spotlight or object reflecting strong light, smear or blooming may occur.
- * please check that the power satisfies the normal specification before connecting the camera.





The lightning flash with an arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

In USA and Canada, Use Class 2 Power Supply Only

INFORMATION - This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules & CE Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

WARNING - Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

CAUTION: To prevent electric shock and risk of fire hazards: Do NOT use power sources other than those specified.

Safety Instructions

Precautions for use

- This camera should be installed by qualified personnel only
- There are no user serviceable parts inside
- Do not disassemble this camera other than to make initial adjustments
- Use a UL approved regulated 24 volt AC or 12 volt DC power supply
- Use appropriate low voltage power cable to prevent fire or electrical shock
- Please insure that your installation area can support the weight of the camera

Please handle this camera carefully:

- Do not use a strong or abrasive detergent when cleaning the camera
- Do not install near cooling or heating device

Package Contents

Please make sure that the following items are included in the Package:

- 1 Video Test Connector, Power Jack
- 1 Chameleon Cover
- 1 Wrench
- Set Screw
- 3 Tapping Screws 4x40 3 Plastic Anchor

CAMERA INSTALLATION

CONNECT POWER CABLE

1. WHEN USING 12 VOLTS DC (constant voltage 500mA)



2. WHEN USING 24 VOLTS AC (40 Volt Amps)




- 3. CONNECT VIDEO CABLE
- 1) WHEN USING IT AS ANALOG OUTPUT, CONNECT YELLOW COLOR BNC CABLE TO THE BNC JACK.



2) WHEN USING IT AS TVI OUTPUT, CONNECT BLACK COLOR BNC CABLE TO THE BNC JACK.




- 4. CONNECT RS-485 CABLE
- CONNECT 2 WIRE CABLE TO THE 485 PORT AS BELOW.

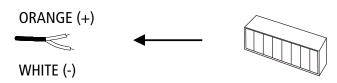


CAMERA INSTALLATION

Compatibility

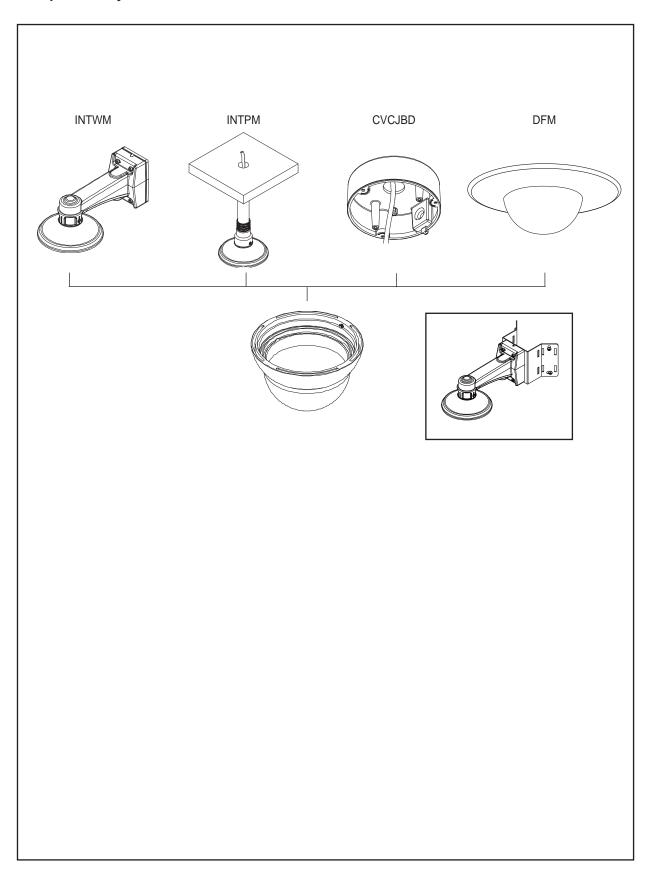

CAMERA INSTALLATION

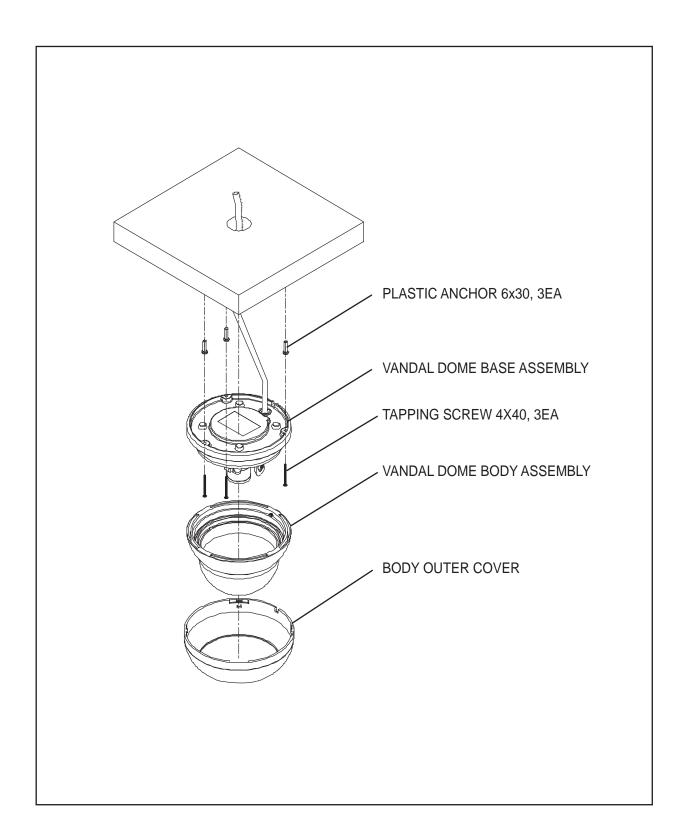

Intensifier T Motorized Zoom Focus Camera

2.8-10mm Auto Iris Varifocal Motorized Lens




■ HT7248TM (2.8-10mm)



SPECIFICATIONS

MODEL	HT7248TM
Image Sensor	1/3" SONY 2Mega Exmor CMOS Sensor Imx222
Effective Pixels	1984(H) X 1105(V), 2.19M Pixels
Total pixels	2000(H) X 1121(V), 2.24M Pixels
Scanning System	Progressive Scan
S/N Ratio	More than 50dB
Danalistics.	Digital: 1920X1080(1080p@30f / 1080p@25f))"
Resolution	1280X720(720p@60f / 720p@50f)
Video Output	1.0Vp-p Composite. 75 Ohms
Video Output	1.0Vp-p TVI(Transport Video Interface) 75 Ohms
Minimum Illumination	0.001 Lux(Sens-Up X32)
LENS	2.8-10mm Auto Iris Varifocal Motorized Lens
Shutter Speed	AUTO / Manual(1/30,1/25Sec ~ 1/30000Sec) / FLICKER
OSD	Built-in
BLC	0
HSBLC	0
WDR(Wide Dynamic Range)	ON / OFF (Low,Middle,High)-(Only For TVI Output)
ACE	OFF/LOW/MIDDLE/HIGH
Day&Night	AUTO/COLOR/NIGHTEXTERN0
Smart-IR	0~20
White Balance	AUTO/AWB/AWC-SET/MANUAL
Sense-Up	x2 ~ x32
Motion	ON / OFF (4 Area)
Digital Noise Reduction	3DNR (OFF/LOW/MIDDLE/HIGH)
De-Fog	ON(AUTO/MANUAL) / OFF
Brightness	0 ~ 20, Default : 10
AGC	0~20(Level Adjustable), Default : 20
Privacy	ON / OFF (16 Area)
Mirror	MIRROR,V-FLIP
Sharpness	0~20
Defect	AUTO DETECT
Lens Shading(LSC)	0
COLORBAR	ON/OFF
TVI / CVBS OUTPUT	NTSC/PAL Selectable
Language	English
Power	DC 12V/AC 24V Dual Voltage Operation
Power Consumption	DC 12V : Heater ON-500mA, Heater OFF-300mA
	AC 24V: Heater ON-195mA, Heater OFF-130mA
RS-485	PELCO-D / PELCO-P (Only for CVBS Output)
Operating Temperature	-4°F ~ +140°F(Humidity : 20%RH ~ 95%RH)
Storage Temperature	-4°F ~ +140°F(Humidity : 20%RH ~ 95%RH)
Dimension	5.10"(Dia)*3.46"(H)
Weight	1.0 lbs

CAMERA DIMENSION

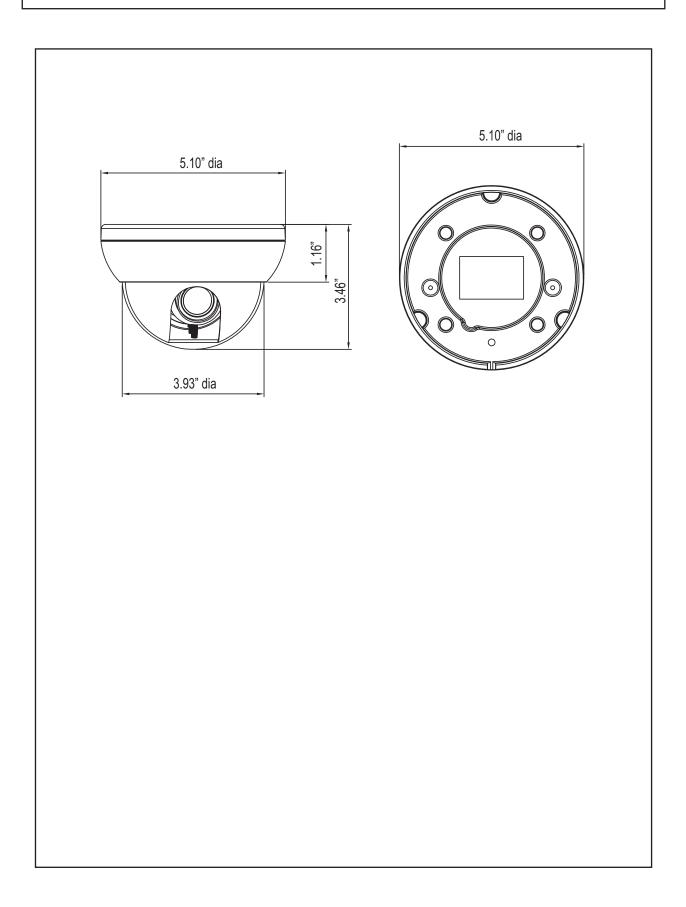

General Features

Transfer Video Interface

The combination of a 2Mega CMOS image sensor and TVI DSP provides an excellent resolution of TVI picture.

3D-DNR

Smart 3DNR prevents the image blurring of moving object and activates only if moving objects are appearing on the scene.

Smart-IR

No saturation image, vivid image in darkness! "TVI" camera makes very sharp video image in darkness! This technology eliminates saturation of video image of the closer object in darkness by control of the IR sensitivity. Saturation never happens in our "TVI" cameras, you can enjoy vivid image in any dark condition!

Sens-Up

Despite a limited & low light condition, Sens-Up - Max. x32 helps the viewer to get visible and clear images.

Defog

Defog function "improves" the clarity of images taken in poor conditions such as fog, smoke, rain or snow.

WDR(Only For TVI Output)

A powerful and advanced technology that captures a high resolution picture even where images appear dark.

CVBS(Composite Video Blanking and Sync)

TV system is switchable 'NTSC' or 'PAL' with built-in OSD.

Intelligent Function

An extraordinary technology that enables Speco Technologies TVI to become the ultimate solution by providing intelligent features based on motion detection. It also strengthens crime prevention and detection.

How to Set Up the camera menu

Setup Menu

SPECO TECH		SUB MENU 1	SUB MENU 2	SUB MENU 3	SUB MENU 4	
1.PRESET			INDOOR / OUTDOOR / LOW LIGHT / HALLWAY / LOBBY(WDR) / ELEV/		OBBY(WDR) / ELEVATOR	
		AE MODE	AUTO			
		AF MODE	MANUAL			
		COANININO	HALF			
		SCANNING	FULL			
	1. 2MOTOR	ONEPUSHAF				
		DEEDEOU	OFF			
		REFRESH	ON			
		INITIAL	ON			
		RETURN				
0.144111		D0	MODE	INDOOR / O	UTDOOR / DE	BLUR
2.MAIN SETUP	0.1.50.10	DC	RETURN			
OLIOI	2.LENS	NAANII IAI	MODE	NORMAL / D	EBLUR	
		MANUAL	RETURN			
			BRIGHTNESS	0 ~ 20		
				AUTO		
			SHUTTER	MANUAL	SPEED	1/30 ~ 1/30000
	3.EXPOSURE			ELIQUED.	RETURN	
				FLICKER		
			SENS-UP	OFF~ X32		
			AGC	0 ~ 20		
		=	RETURN			
		AUTO				
		AWB				
		AWC-SET	.,=	LIONIANDO	15/11011	
	4.WHITE BAL		KELVIN	LOW / MIDD	LE / HIGH	
		MANUAL	R-GAIN	0 ~ 20		
			B-GAIN 0 ~ 20			
			RETURN			
		OFF		1		
			LEVEL	0 ~ 20		
		HLC	MODE	ALL DAY / N	IGHT ONLY	
5.BACKLIGHT		RETURN				
		H-POS	0 ~ 18			
		V-POS	0~17			
	BLC	H-SIZE	0 ~ 18			
		V-SIZE	0 ~ 17			
			RETURN			
		WDR(Only For TVI Output)	WEIGHT	LOW / MIDD	LE / HIGH	
			RETURN			
	6.DNR	OFF/LOW/MIDDLE/HIG	<u> </u>			

How to Set Up the camera menu

Setup Menu

I			SMART IR	0 ~ 20		ı	
	AUTO	AGC THRES	0~20				
		AGC MARGIN	0 ~ 20				
		DELAY	LOW/MIDDLE/HIGH				
			RETURN				
	7.DAY&NIGHT	COLOR					
	1.DATANIGHT	B/W	SMART IR	0 ~ 20			
		D/ VV	RETURN				
2.MAIN			SMART IR	0 ~ 20			
SETUP		EXTERN	EXTERN S/W	LOW/HIGH			
		LATLINI	DELAY	LOW/MIDDL	LOW/MIDDLE/HIGH		
			RETURN				
			SHARPNESS	0 ~ 20			
			GAMMA	0.45 ~ 0.65			
			COLOR GAIN	0 ~ 20			
			MIRROR	ON/OFF			
			FLIP	ON/OFF			
			D-ZOOM	X 1.0 ~ X 8.0	X 1.0 ~ X 8.0		
			ACE	OFF/LOW/MIDDLE/HIGH			
				OFF			
			DEFOG		MODE	AUTO/MANUAL	
				ON	LEVEL	LOW/MIDDLE/HIGH	
					RETURN		
				OFF			
	8.IMAGE		SHADING	ON	WEIGHT	0% ~ 100%	
	O.IIVIAOL			ON	RETURN		
				OFF	_		
					ZONE NUM	0~15	
					ZONE DISP	ON/OFF	
					H-POS	0~60	
				V-POS	0~33		
		PRIVACY	ON	H-SIZE	0~48		
			OIV	V-SIZE	0~31		
				Y LEVEL	0~20		
				CR LEVEL	0~20		
				CB LEVEL	0~20		
				RETURN			
			RETURN				

How to Set Up the camera menu

Setup Menu

		OFF				
		SENSITIVITY	0 ~ 20			
		WINDOW TONE	0~6			
			WINDOW USE	0~3		
			WINDOW ZONE	ON / OFF		
	9.MOTION	ON	DET H-POS	1 ~ 60		
2.MAIN		ON	DET V-POS	1 ~ 34		
SETUP			DET H-SIZE	1 ~ 60		
			DET V-SIZE	1 ~ 34		
			RETURN			
				CAM ID	0 ~ 255	
		C	COM.	BAUDRATE	2400/4800/96	600/57600/115200
				RETURN		
			FULL			
		IMAGE I	IMAGE RANGE	COMP		
			IWAGE RANGE	USER	OFFSET	0~20
					RETURN	
		OUTPUT	OUTPUT MODE	720P / 720P CROP/ 1080P		
	10.SYSTEM		COLOR SPACE		cr / HD-cbcr	
			FRAME RATE	25 FPS / 30 F	FPS	
			CVBS	PAL / NTSC		
		LANGUAGE	ENG / CHN / CHN(S) / JPN / KOR		/ KOR	
		COLOR BAR	OFF/ON			
			RETURN			
	RETURN					
3.EXIT	-					

Menu Set Up

Menu setting can be selected by the button inside the camera.

- 1. Press the set button.
- * MENU will be displayed on the monitor.
- PRESET MODE: Preset is provided to maximize user convenience.
 (PRESET: Indoor // Outdoor // Low light // Hallway // Lobby // Elevator)



◆ MAIN SETUP: Enter the MAIN SETUP to adjust further settings.(page.16)




◆ EXIT : Click joystick to the Right (R) on 3. EXIT, "RESET" will be shown. RESET : All settings will be restored to factory default.




Menu Set Up

Menu setting can be selected by the button inside the camera.

- 1. Press the set button.
- * The Set Up menu will be displayed on the monitor.

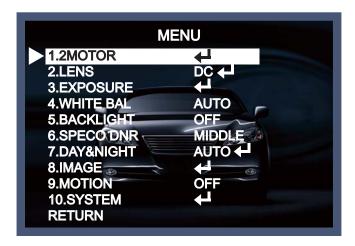

- 2. Move and select the required function using the Up and Down button.
- * Move the triangular indicator Up or Down to select the desired feature by pressing the Up or Down button.

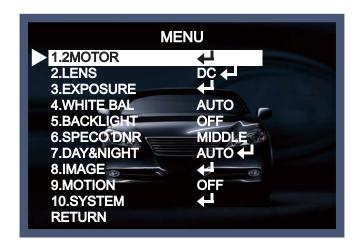


- 3. Change menu settings using the Left or Right button.
- * Available values or Status are displayed by pressing the Left or Right buttons.

 Press the button until desired value / status is displayed.
- 4. After Changing the setting move the arrow indicator to EXIT and press the SET button to EXIT.

* Move to the available submenu by moving $\begin{tabular}{ll} & \end{tabular}$ arrow to desired feature.

2MOTOR

- 1. Move the triangular indicator to 2MOTOR using the Up and Down buttons on the Set Up menu screen.
- 2. Select the desired lens type by pressing the Left of Right button.

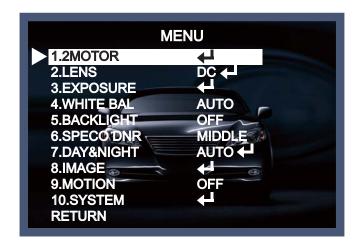



◆ AF MODE : AUTO / MANUAL

AUTO : Adjust zoom and focus automatically.
 MANUAL : Adjust zoom and focus manually.

SCANNING: HALF / FULL

- HALF : Adjust auto focusing when lens focus fixed. If lens focus is not fixed well, adjust focus manually.

- FULL: Scanning full size of screen and adjust autofocusing.

◆ ONEPUSHAF: ON/OFF

If you press OSD button 3~4 seconds, focus will be fixed automatically.

- REFRESH: 1DAY, 2DAY, 3DAY, 4DAY, 5DAY, 6DAY, 7DAY, OFF Start lens initializing when you select refresh mode.
- ◆ INITIAL: ON/OFF If you press OSD button 3~4 seconds, Lens Initializing start.

LENS

- 1. Move the triangular indicator to LENS using the Up and Down buttons on the Set Up menu screen.
- 2. Select the desired lens type by pressing the Left or Right button.






- * When you select the mode setup, you can select INDOOR, OUTDOOR or DEBLUR depending on the installation environment.
- *On manual mode, you can select NORMAL or DEBLUR depending on the installation environment.

EXPOSURE

1. On the Set Up menu, Select EXPOSURE by using the Up or Down button.

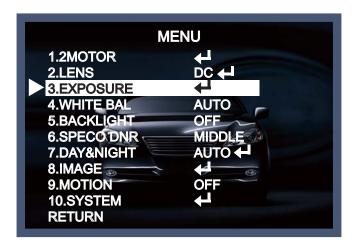

2. Select the desired shutter mode by pressing the Left or Right button.




- ◆ BRIGHTNESS: The brightness can be adjusted. The brightness control range is 1~20.
- ◆ SHUTTER: DC lens is launched with the setting of 1/30 and the manual lens is launched with the setting of Auto shutter, but the shutter speed can be adjusted from 1/30 to 1/30,000.
 - → FLK : Select FLK mode if flickering occurs ; caused by the unmatched frequency of electric light.

- * Sense-Up mode does not work when Electronic shutter is set to Manual.
- ◆ INTENSIFY: The bright screen can be displayed by sensing the degree of the darkness automatically under the circumstance of low light condition or at night.
 - → Off ~x32 Level Adjustable.
- ◆ AGC (Auto Gain Control): The higher the AGC level is, the more noises appear.
 - \rightarrow 0~20 Level selectable.


White Balance

Use this function when the color adjustment of a screen is needed.

- 1. Move the triangular indicator to WHITE BAL on the SETUP menu screen using the Up and Down button.
- 2. Select the desired mode by using the left or Right button.

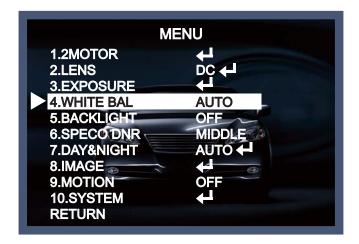

- ◆ AUT0 : Use this mode when the color temperature is from 2,500k to 9,500k.
- AWB: The function to search for the color which is matched well with the ambient environment.
- ◆ AWC→SET: After letting camera focus on the blank white paper to the best condition of current lighting environment, press the SET button. If the lighting condition is changed, Re-adjustment should be needed.
- ◆ MANUAL: Manual compensation make the more detailed control possible. First, after adjusting the white balance using the ATW or AWB mode, change the mode into the manual compensation mode and then press Set button. While looking at the color change of the subject seen on the screen after setting up the proper color temperature, increase the each value of the blue and the red.

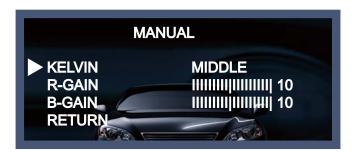

- KELVIN: LOW/MIDDLE/HIGH level adjustable.
- R-GAIN: 0~20 level adjustable.
- B-GAIN: 0~20 level adjustable.
- Return: Every function is set up at the EXPOSURE menu, and then return the previous menu.

White Balance may not work properly in the following conditions. If this doesn't work, use the AWB mode * When there is a very high color temperature in the circumstances of the subject.


(for example, clear sky, Sunset)

- * It is very dark.
- * If the camera is headed to the fluorescent light directly or if there is a drastic lighting change, The operation of White balance may become unstable.

BACKLIGHT

On this menu, backlight image can be compensated by users selecting one of modes. (HLC, BLC, WDR)


- 1. Move the triangular indicator to BACKLIGHT on the SETUP menu screen using the Up and Down button.
- 2. Select the desired mode by using the left or Right button.

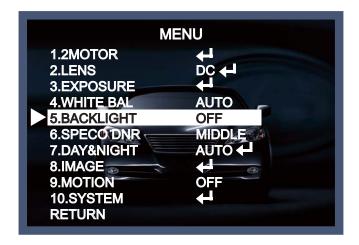

- Off : Deactivated status.
- ◆ HLC : This fuction is used to surpress or strong light source (for example, headlights of cars during nighttime) so that other subjects can be seen in more detail. If you select HLC, a submenu appears where you can make finer adjustments.
 - LEVEL : Adjust the brightness level from which on the light source is to be masked out. $0\sim20$ level adjustable.
 - MODE : All day/night only adjustable.



- ◆ BLC: This fuction is used to counterbalance the screen image by increasing the brightness so that a subject which appears dark due to a strong backlight can be displayed in more detail. If you select BLC, a submenu appears where you can make finer adjustments.
 - H-POS/V-POS/H-SIZE/V-SIZE : Define the position and size of the area of interest by changing the position & size.

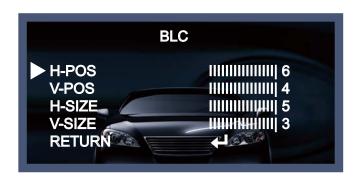

- ◆ WDR(Only For TVI Output): The WDR (Wide Dynamic Range) fuction works to correct excessive light within the frame to produce a usable image. When the image has simultaneous bright and dark areas, it makes both areas distinct. If you select WDR, a submenu appears where you can make finer adjustments.
- WEIGHT [MIDDLE, HIGH, LOW] : Select the WDR level of the camera.



SPECO DNR

This fuction is used to improve the picture quality by filtering the noise which is generated under low brightness conditions. You can set different levels here.

- 1. Move the triangular indicator to DNR by using the Up and Down button.
- 2. Select the mode to use by pressing the left or Right button and LOW/MIDDLE/HIGH level selectable.



Day&Night

You can change the color mode of color or black / white by setting up the mode.

- 1. Select Day&Night using the Up or Down button on the Set Up menu screen.
- 2. Select the desired mode using the Left or Right buttons.



◆ AUTO : Automatically, It shifts into the color mode in the bright environment and the B/W mode in the low light condition. It can adjust the delay time, starting brightness and end brightness according to the ambient conditions by pressing the Set button.



- SMART IR: 0~20 smart IR level adjustable.
- AGC THRES: 0~20 AGC THRES level adjustable.
- AGC MARGIN: 0~20 AGC MARGIN level adjustable.
- DELAY [LOW/MIDDLE/HIGH] : Set the delay time for switching between COLOR and B/W
- COLOR: Making the video output color always.
- ◆ B / W : Making the video output B/W always.



- SMART IR : It controls the IR LED (bright portion base), saturation is not expected. 0~20 level adjustable.
- ◆ EXTERN : It can change the color or B/W mode automatically through the connection with the ground terminal. (Option for box camera and IR camera)
- SMART IR: It controls the IR LED (bright portion base), saturation is not expected. 0~20 level adjustable.




- EXTERN S/W [LOW/HIGH]: Set the external signal for switching between COLOR and B/W.
- DELAY [LOW/MIDDLE/HIGH] : Set the delay time for switching between color and B/W.

IMAGE

When selecting, the following submenu will appear.




Here you can optimise the image quality by adjusting different options.

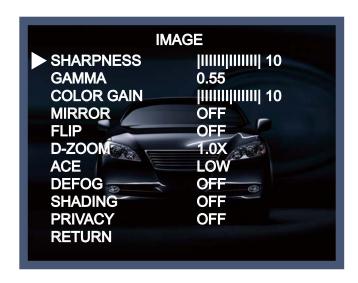

- SHARPNESS [1 \sim 20] : Adjusts the image sharpness. If the level goes up excessively, it may affect the video image and generate a noise.
- GAMMA $[0.45 \sim 0.65]$: Changes the gamma curve of the camera.
- COLOR GAIN $[0 \sim 20]$: Changes the color gain of the camera.
- MIRROR [ON, OFF]: Mirrors the image horizontally on the screen.
- FLIP [ON, OFF]: Flips the image vertically on the screen.


- D-ZOOM : You can use the digital zoom with x1~x8 magnification. The higher the digital zoom magnification is, the lower the resolution is.
- ACE [LOW/MIDDLE/HIGH] : Intelligent lighting level control to overcome even strong backlight conditions.
- DEFOG [ON, OFF] : This fuction helps to recognize the object in a dusty weather condition. ON, a submenu appears where you can make finer adjustments.
- SHADING [ON, OFF]: Compensates the shading effects of lenses when the lens is set to a very wide angle. This function will reduce the brightness difference between the centre and the edges. If you select ON, a submenu appears where you can make finer adjustments.
- ◆ PRIVACY [ON, OFF]: This is used to hide certain areas on the monitor. You can designate each different 16 area. The size of a designated area can be adjusted. The color of a privacy area can be selected various colors. When you select the return, the setting values in this function menu are saved, then get out of this menu.

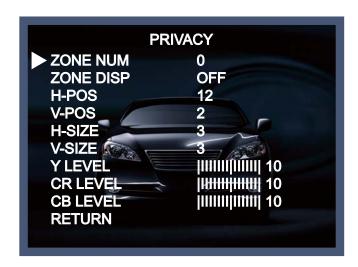


- ZONE NUM [0~15]: Select a mask out of the 16 mask areas and set the options below for the selected mask.
- ZONE DISP [ON, OFF]: Choose ON to activate privacy masks and press OFF to deactivate masks.
- H-POS [0~60]: Define the horizontal start position of the privacy mask.
- V-POS [0~33]: Define the vertical start position of the privacy mask.
- H-SIZE [0~48] : Define the horizontal size of the privacy mask.
- V-SIZE [0~31]: Define the vertical size of the privacy mask.
- Y LEVEL [0~20]: Define the brightness of the mask color.
- CR LEVEL [0~20]: Define the red amount of the mask color.
- CB LEVEL [0~20]: Define the blue amount of the mask color.

MOTION

This function is used to detect moving objects in the monitored area. When choosing ON, the following submenu will appear where you can adjust the settings for the MOTION function.

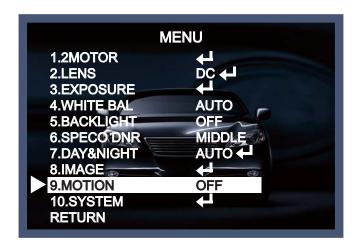

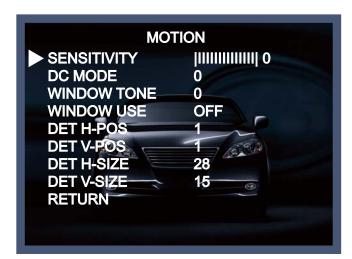


- SENSITIVITY [0~20] : The higher the setting value is, the higher the sensitivity gets, even though the movement of a subject.
- DC MODE [0~6]: Adjust window tone where not use motion function.
- WINDOW TONE [0~3] : Select the window tone.
- WINDOW USE [ON, OFF]
- DET H-POS [0~60]: Define the horizontal start position of the monitoring area.
- DET V-POS [0~34]: Define the vertical start position of the monitoring area.
- DET H-SIZE [0~60]: Define the horizontal size of the monitoring area.
- DET V-SIZE $[0\sim34]$: Define the vertical size of the monitoring area.

SYSTEM

This can be used when you want to select the additional function control.

- 1. When the SETUP menu is displayed, select SYSTEM using the Up and Down button.
- 2. Select one of the mode using the Up and Down button.



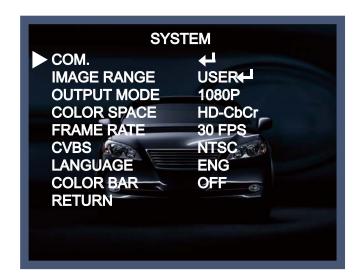

- COM. : This menu id used for RS-485 communication. Users are able to select CAM ID(0 \sim 255) and BAU D RATE (2400/4800/9600/57600/115200).



- IMAGE RANGE [FULL/COMP/USER] : Adjust the rate of YC signal to 100%(FULL), 75%(COMP) or 100%~75%(USER).
- OUTPUT MODE [720P/720P CROP/1080P]: Choose output type.
- COLOR SPACE [YUV/SD-CBCR/HD-CBCR] : Select different color settings for a warmer or a colder image.
- FRAME RATE [25 FPS/30 FPS] : Choose a frame rate.
- CVBS [PAL/NTSC] : Select the video format that matches the present TV system.
- LANGUAGE: ENG, CHN, CHN(S), JPN, KOR
- COLOR BAR [OFF/ON] : Check current condition with color bar.

Return

Press the Set button in the exit menu to save the current settings and exit the Set Up menu.

• Trouble Shooting

PROBLEM	POSSIBLE CAUSE
Northing appears on the screen.	Check the power cable, power supply output and video connection between the camera and monitor.
The image on the screen is dim.	 Are the camera lens or the lens glass dirty? Clean the lens / glass with a soft clean cloth. Adjust the monitor controls, as required. If the camera is facing a very strong light, change the camera position. Adjust the lens focus.
The image on the screen is dark.	$\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
The camera is not working properly and the surface of the camera is hot.	Check the camera is correctly connected to an appropriate regulated power source.
Motion Detection is not activated.	Has MOTION DET been set to ON in the menu? Has MD AREA been properly defined?
The color of the picture is not correct.	
The image on the screen flickers.	Make sure that the camera isn't facing direct sunlight or fluorescent lighting. If necessary, change the camera position.
The INTENSIFY does not work.	Check that the AGC setting in the EXPOSURE menu is not set to OFF. Check the EXPOSURE menu and make sure SHUTTER is set to



LIMITED WARRANTY - VIDEO PRODUCTS

THIS WARRANTY IS VALID ONLY ON PRODUCTS PURCHASED AND USED IN THE UNITED STATES OF AMERICA AND CANADA. THIS WARRANTY APPLIES ONLY TO THE ORIGINAL USER.

SUBJECT TO CONDITIONS AND EXCLUSIONS FOUND BELOW, THIS PRODUCT IS WARRANTED AGAINST MANUFACTURING DEFECTS IN MATERIAL AND WORKMANSHIP FOR THE FOLLOWING PERIOD FOR PARTS AND LABOR:

SPECO TECHNOLOGIES C	AMERAS5 YEARS	DVRs	3 YEARS
SPECO TECHNOLOGIES IP	CAMERAS2 YEARS	NVRs	3 YEARS
SPECO PTZ AND VL CAME	RAS1 YEAR	BALANCE OF	
SPECO TECHNOLOGIES M	ONITORS1 YEAR	SPECO TECHNOLOGIES LINE	1 YEAR
IR I FDS	90 DAVS		

SPECO TECHNOLOGIES WILL REPAIR OR REPLACE (AT OUR DISCRETION) ANY PARTS FOUND TO BE DEFECTIVE FOR THE WARRANTY PERIOD SPECIFIED. WE WILL PROVIDE A REPLACEMENT FOR ANY DEFECTIVE PART.

CONDITIONS

- 1. YOU MUST OBTAIN A RETURN AUTHORIZATION (RA) NUMBER FOR ANY MERCHANDISE BEING RETURNED TO SPECO TECHNOLOGIES, WHETHER FOR RETURN/EXCHANGE OR REPAIR, WHETHER IN OR OUT OF WARRANTY.
- 2. THIS WARRANTY WILL BE HONORED ONLY LIPON PRESENTATION OF THE ORIGINAL DATED BILL OF SALE OR SALES SLIP
- 3. TRANSPORTATION OF THE PRODUCT TO OUR SERVICE DEPARTMENT IS THE RESPONSIBILITY OF THE USER. REPAIRED OR REPLACED PRODUCT WILL BE RETURNED PREPAID DURING THE WARRANTY PERIOD.
- 4. SPECO TECHNOLOGIES DOES NOT AUTHORIZE ANY INTERNET OR MAIL ORDER PRODUCT SALES. IF A SPECO TECHNOLOGIES PRODUCT IS PURCHASED FROM AN UNAUTHORIZED DISTRIBUTOR OR OTHER SOURCE, INCLUDING RETAILERS, MAIL ORDER SELLERS AND ONLINE SELLERS, IT WILL NOT BE HONORED OR SERVICED UNDER THE EXISTING SPECO TECHNOLOGIES WARRANTY POLICY. ANY SPECO TECHNOLOGIES PRODUCT PURCHASED FROM THESE ONLINE MERCHANTS WILL VOID THE APPLICABLE WARRANTY AND IS INELIGIBLE FOR TECHNICAL SUPPORT. IF YOU HAVE QUESTIONS ABOUT A RESELLER, PLEASE CONTACT SPECO TECHNOLOGIES AT 1-800-645-5516 FOR A LIST OF UNAUTHORIZED DEALERS, VISIT: www.specotech.com/unauthorized.

EXCLUSIONS

- 1. THIS WARRANTY SHALL NOT COVER ADJUSTMENT OF CUSTOMER OPERATED CONTROLS AS EXPLAINED IN THE APPROPRIATE Model 's INSTRUCTION MANUAL OR PRODUCTS WHICH HAVE BEEN ALTERED, ABUSED, OR HAVE MISSING OR ALTERED SERIAL NUMBERS.
- 2. THIS WARRANTY SHALL NOT APPLY TO UNCRATING, SETUP, INSTALLATION, OR THE REMOVAL AND REINSTALLATION OF PRODUCTS AFTER REPAIR.
- 3. THIS WARRANTY SHALL NOT APPLY TO REPAIRS OR REPLACEMENTS NECESSITATED BY ANY CAUSE BEYOND THE RESULT OF MANUFACTURE INCLUDING, BUT NOT LIMITED TO, ANY MALFUNCTION, DEFECTS OR FAILURE CAUSED BY OR RESULTING FROM UNAUTHORIZED SERVICE OR PARTS, IMPROPER MAINTENANCE, MODIFICATION OR REPAIR BY THE USER, ABUSE, MISUSE, NEGLECT, ACCIDENT, FIRE, FLOOD, OR OTHER ACTS OF NATURE, INCORRECT LINE VOLTAGE, DAMAGE OR IMAGE BURNS TO TELEVISION PICTURE TUBES CAUSED BY OR ATTRIBUTABLE TO THE USE OF ANY ACCESSORY, ELECTRONICS GAME OR DEVICE, OR DAMAGE CAUSED TO IMAGE PICKUP DEVICES BY EXCESSIVE LIGHT.

THE FOREGOING IS IN LIEU OF ALL OTHER EXPRESSED WARRANTIES AND WE DO NOT AUTHORIZE ANY PARTY TO ASSUME FOR US ANY OTHER OBLIGATION OR LIABILITY. IN NO EVENT SHALL WE BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM

THE USE OF THIS PRODUCT, OR FOR ANY DELAY IN THE USE OF THIS PRODUCT DUE TO CAUSES BEYOND OUR CONTROL. SOME STATES DO NOT ALLOW LIMITATIONS OF HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF CONSEQUENTIAL DAMAGES. THE ABOVE LIMITATIONS ON IMPLIED WARRANTY AND CONSEQUENTIAL DAMAGES MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

NOTE: FOR YOUR PROTECTION IN THE EVENT OF THEFT OR LOSS OF THIS PRODUCT. PLEASE FILL IN THE INFORMATION REQUESTED BELOW AND RETAIN WITH YOUR SALES RECEIPT.

MODEL NO.:(LOCATED ON BACK OR BOTTOM OF UNIT)			SERIAL NO.:	
(LOCATED ON E	BACK OR BOTTOM OF U	NII)		
DATE OF PURC	HASE:			
WHERE PURCHASED:		PURCHASE PRICE:		
	Speco Technologies 200 New Highway Amitvville. NY 11701		ATION REGARDING SERVICE OR RETURN,]

ALWAYS USE DISCRETION WHEN INSTALLING VIDEO AND/OR AUDIO SURVEILLANCE EQUIPMENT ESPECIALLY WHEN THERE IS AN EXPECTATION OF PRIVACY. INQUIRE REGARDING FEDERAL, STATE AND/OR LOCAL REGULATIONS APPLICABLE TO THE LAWFUL INSTALLATION OF VIDEO AND/OR AUDIO RECORDING OR SURVEILLANCE EQUIPMENT. PARTY CONSENT MAY BE REQUIRED.

www.specotech.com

CALL US TOLL FREE: 1-800-645-5516 IN METRO NY: 631-957-8700

- MEMO -

- MEMO -

speco technologies

200 New Highway
Amityville, NY 11701
631-957-8700
1 800 645 5516
www.specotech.com