



CTA DIGITAL

# Dual Security Gooseneck Kiosk Stand with Locking Case and Anti-Theft Cable


for iPad 5th-6th Gen., iPad Air, and iPad Pro 9.7

## INSTRUCTION MANUAL

# PAD-DSGK



### Package Contents

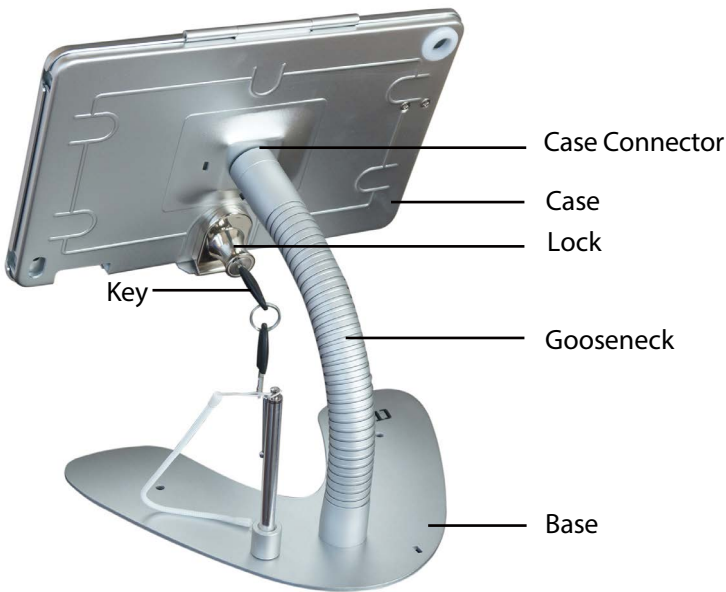

(2) Nuts with bolts

(2) Screws

For iPad Air 2 and iPad Pro 9.7, use included adhesive pads inside case for a snug fit.

Keep charge cable slack neatly organized in bottom of case, and route through rubber cutout.


Use included metal insert piece to block home button access.

## Assemble the Stand

- 1) Align gooseneck screw holes with holes on stand base, then use Allen key to screw hex screws into the gooseneck.



- 2) Attach case to gooseneck, align the screw hole with the marker line on the case connector, then use the Allen key to tighten the hex screw inside the keyhole at the top of the gooseneck.

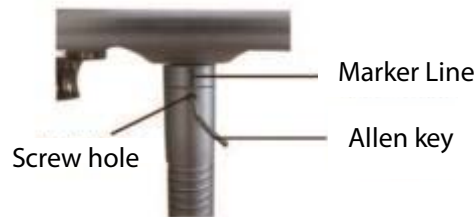

## Inserting Your Tablet

- 1) Insert key and turn counter clockwise to unlock. Consult front page to determine if you need to attach adhesive foam pads.



- 2) Close case door and turn key clockwise to lock.

## Anti-Theft Cable



## Using the Cable Management System



- 1) Thread charge cable with small head first through the bottom of the base into the bottom of the gooseneck.



- 2) Pull through the top then attach gooseneck to case. Route cable and slack through rubberized cutout hole in case.



- 3) Attach cable protector to the slack at the bottom. Slide up to the base.