

The RCA logo is displayed in white, bold, sans-serif capital letters within a red square.

INSTRUCTION MANUAL

Before using the TV, please read this manual thoroughly, and retain it for future reference.

CURVED 4K ULTRA HD TV



Model:RTUC5537



Verified
Energy Performance
Énergie Performance
Verifier

CONTENTS

1	SAFETY PRECAUTION	1
2	IMPORTANT SAFETY INSTRUCTION	2
3	ACCESSORIES	3
4	GETTING STARTED	3
5	CONTROL REFERENCE GUIDE	Remote Control 4 Front View 6 Back View 6 Front View 7
6	CONNECTIONS	Antenna Connection 8 AV Connection 8 YPbPr Connection 9 HDMI Connection 9 Power Cord Connection 10 Optical Out Connection 11
7	WALL MOUNT INSTALLATION	12
8	ATTACHING THE STAND	13
9	INITIAL SETUP	Putting The Unit On A Proper Place 14 Source Selection 14 Turning The Unit On For The First Time 14 Setup Wizard 15

CONTENTS

10	TV SETUP	TV(CHANNEL) Menu	16
		Picture Menu	17
		Sound enu	18
		Time Menu	19
		Setup Menu	20
		LOCK(Parental) Menu	21
11	USB Media Player		22
12	DISPLAY MODE	Video Formats	24
13	SPECIFICATION		25
14	TROUBLE-SHOOTING GUIDE	TV Symptom	26

SAFETY PRECAUTION

- * CAUTION MARKING WAS LOCATED AT THE REAR OF THE APPARATUS. **PLACEMENT INFORMATION**



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



CAUTION

- DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.
- USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.



WARNING:

- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. DO NOT PLACE OBJECTS FILLED WITH LIQUIDS ON OR NEAR THIS UNIT.
- SHOULD ANY TROUBLE OCCUR, DISCONNECT THE AC POWER CORD AND REFER SERVICING TO A QUALIFIED TECHNICIAN.

- Do not use this unit in places that are extremely hot, cold, dusty or humid.
- Do not restrict the airflow of this unit by placing it somewhere with poor airflow, by covering it with a cloth, by placing it on bedding or carpeting.

SAFETY INFORMATION

- When connecting or disconnecting the AC power cord, grip the plug and not the cord itself. Pulling the cord may damage it and create a hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

RATING PLATE LOCATION

The rating plate is located on the rear of the unit.

FCC STATEMENTS

NOTE: This unit has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This unit generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this unit does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the unit and receiver.
- Connect the unit into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the unit.



“HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.”

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with a dry cloth.
- 7) Do not block any ventilation openings.
Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug.
A polarized plug has two blades with one wider than the other.
A groundingtype plug has two blades and a third grounding prong.
The wide blade or the third prong is provided for your safety.
If the provided plug does not fit into your wall outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments / accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning Storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



PERSONAL SAFETY NOTICE

- ALWAYS read and follow all instructions for the installation and use of the TV.
- Place the TV in a location that is level and sturdy.
- DO NOT place the TV on a furniture with drawers that can be used as steps by small children.
- DO NOT allow children to pull the TV or climb on the furniture where the TV is placed.
- DO NOT allow children to play in front of or around the TV.
- ALWAYS route all the cables connecting to the TV so the cables cannot be easily pulled and grabbed by children.
- When installing the TV on a wall, please purchase a TV mount recommended by a professional TV installer, and follow the installation instructions that come with the TV mount.
- Before installing the TV on a wall, please check to make sure the wall structure can support the weight of the TV and the mount. If in doubt, please ask the advice from a professional TV installer.

ACCESSORIES

Please check and identify the supplied accessories.

Remote control	x 1
Battery(AAA)	x 2
Warranty Card	x 1
Instruction Manual	x 1
2Base stands and 4 base stand screws	x 1
Mini Line Out Cable	x 1

GETTING STARTED

 
USING THE REMOTE CONTROL

- Point the remote control at the remote sensor located on the unit.
- When there is a strong ambient light source, the performance of the infrared remote sensor may be degraded, causing unreliable operation.
- The recommended effective distance for remote operation is about 16 feet (5 meters).

TO INSTALL THE BATTERIES

1.Open the battery door.

2. Insert 2"AAA"batteries.

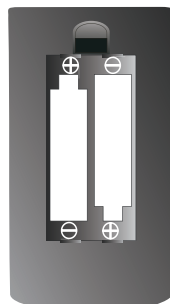

BATTERY REPLACEMENT

When the batteries become weak, the operating distance of the remote control is greatly reduced and you will need to replace the batteries.

CAUTION : Danger of explosion if battery is incorrectly replaced.

 
NOTES

- If the remote control is not going to be used for a long time, remove the batteries to avoid damage caused by battery leakage corrosion.
- Do not mix old and new batteries. Do not mix ALKALINE, standard (CARBON-ZINC) or rechargeable (NICKEL-CADMIUM) batteries.
- Always remove batteries as soon as they become weak.
- Weak batteries can leak and severely damage the remote control.

WARNING :
Do not dispose batteries in a fire. Batteries may explode or leak.
Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

CONTROL REFERENCE GUIDE

REMOTE CONTROL

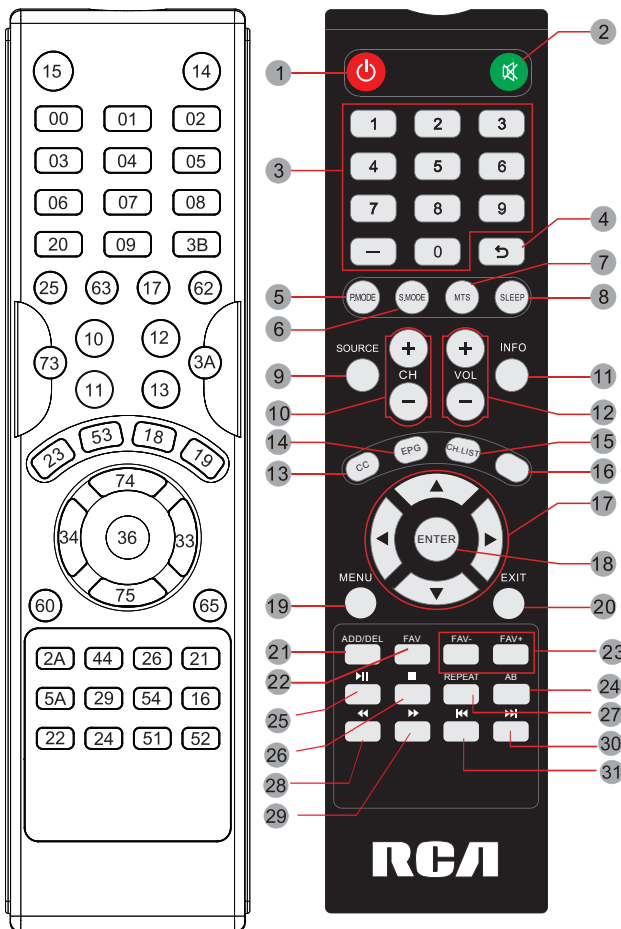

Universal remote code

This is the code for remote control of RTUC5537, if you want to change to a universal remote control, you can edit this code into your universal remote control.

Universal Remote Code: 1218

(Universal Remote Control is not included.)

1. STANDBY

To switch on the TV or make the TV into standby mode.

2. MUTE

Press this button to mute or restore sound.

3. 0-9

Allows you to change the channel of the TV.

4. ↺

Switches back and forth between the current and previous channels.

5. P.MODE

Press this button to select a picture mode for different picture qualities.

6. S.MODE

Press this button to select sound setting for different sound effects.

7. MTS

To change among STEREO, MONO and SAP. If there is no second language available for the signal received, LED Display audio will output to mono.

8. SLEEP

To select the amount of time before your TV turns Off automatically.

9. SOURCE

Press this button to select an input source.

10. CH+/CH-

Skips to the next/previous channel on TV mode.

11. INFO

Show the information of the program you are watching.

12. VOL+/VOL-

Increases/Decreases the Volume control.

13. CC

Press the button to enter into the CC mode.

14. EPG

Press this button to select the electronic programme guide in DTV mode.

15. CH.LIST

Press this button to display the channel list.

16.

The control function of this button does not apply to this model.

17. UP/DOWN/LEFT/RIGHT

Moves the cursor upward/downward/to the left/to the right when making a selection.

18. ENTER

Press to confirm selections on a menu screen.

19. MENU

Displays the OSD Menu of the TV.

20. Exit

Press this button to exit the on screen display.

21. ADD/DEL

Press to increase/decrease your favourite program.

 
22. FAV

Press this button to show the favourite list.

23. FAV+/FAV-

Press this button to go through the FAV channel list.

REMOTE CONTROL

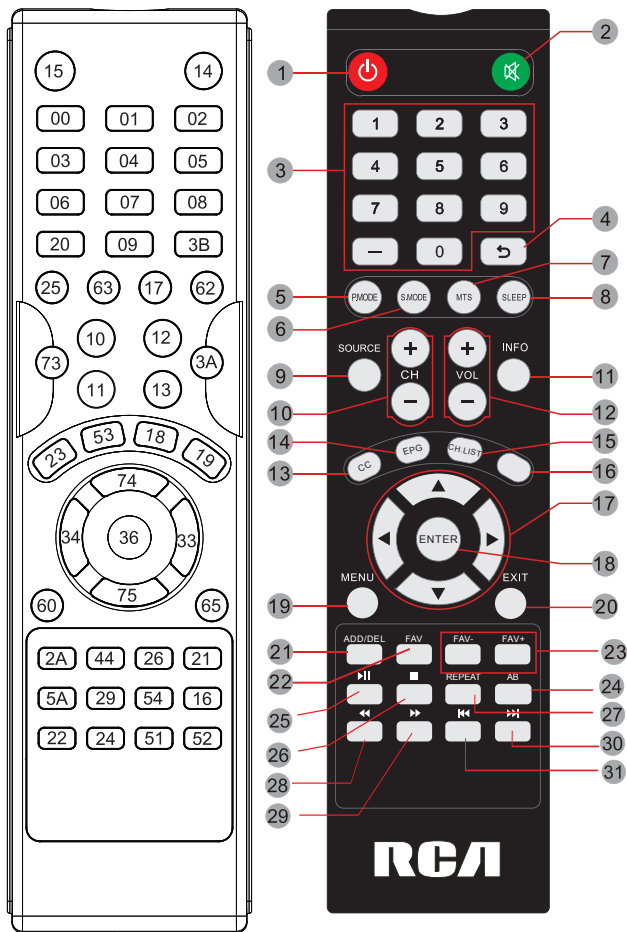

24. AB

Press this button for repeat play point A and B.

25. ►||

Press this button to play or pause the USB you are watching.

26. ■

Press this button to stop playing the USB you are watching.

27. REPEAT

Press this button for repeat the program.

28. ◀◀

Fast reverse in USB mode.

29. ▶▶

Fast forward in USB mode.

30. ▶▶▶

Next chapter in USB mode.

31. ◀◀◀

Previous chapter in USB mode.

Universal remote code

 
This is the code for remote control of RTUC5537, if you want to change to a universal remote control, you can edit this code into your universal remote control.

Universal Remote Code: 1218

(Universal Remote Control is not included.)

CONTROL REFERENCE GUIDE

FRONT VIEW

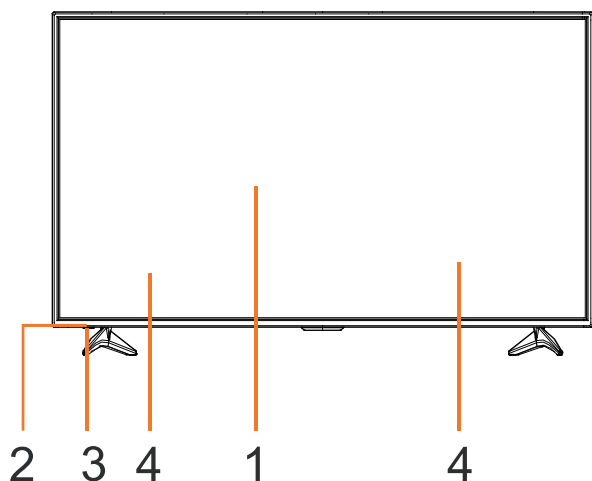

1.Color Screen

2.Remote Sensor

Do not block this sensor or the remote control will not work.

 
3.Standby Indicator

Indicates whether the unit is ON or in STANDBY (OFF) mode.

Light in red: The unit is in STANDBY.
Light in blue:The unit is turned ON.

4. Speakers

BACK VIEW

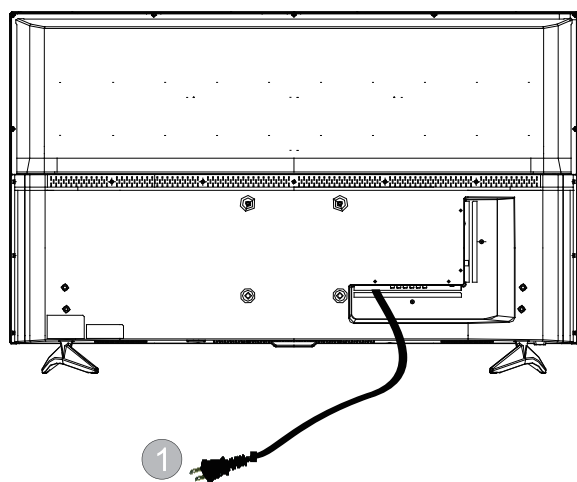

1.Power Cord

2.Optical Out Jack

3.AV IN Jack

4.COMPONENT IN Jack

 
5.Line Out Jack

6.HDMI IN Jacks (Connect to HDMI1 for Audio Return Channel Function).

7.TV ANTENNA Terminal


8. USB Media Player: Connect USB device, such as flash disk to access media function of TV. (Support format: TXT for Text. MP3 for music. JPG and JPEG for photo).

NOTE: It can not play video format.

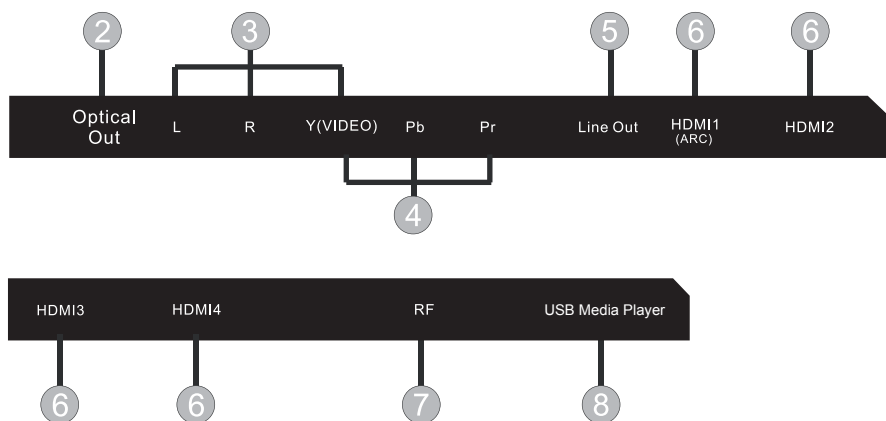

CONTROL REFERENCE GUIDE

 FRONT VIEW

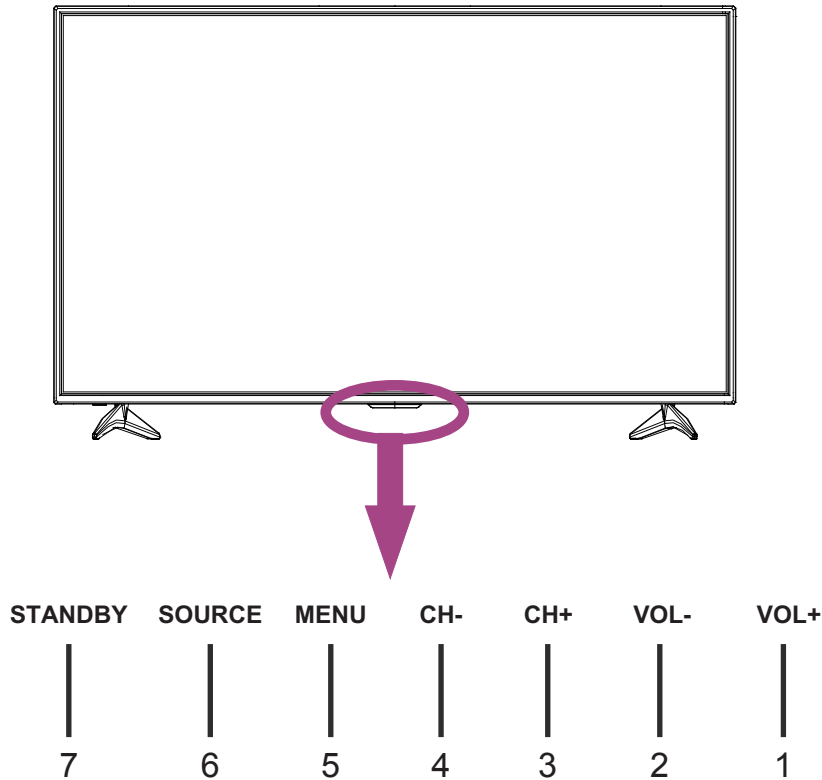

1. VOL+ Button

This button increases the TV's volume. If a sub-menu is active, pressing this button will move the select right.

2. VOL- Button

This button decreases the TV's volume. If a sub-menu is active, pressing this button will move the selection left.

3. CH+ Button

This button changes the TV channel up. If the OSD is active, this button functions as up for the menu.

4. CH- Button

This button changes the TV channel down. If the OSD is active, this button functions as down for the menu.

5. Menu Button

This button activates the On Screen Display (OSD). If a sub-menu is active, pressing this button will exit the OSD.

6. SOURCE Button

Press to select the input source of the TV.

7. STANDBY Button

Turn on the TV by pressing the button once. Press the button again to turn off the TV.

CONNECTIONS

 
CONNECTING A TV ANTENNA / CABLE / SATELLITE

To view television channels correctly, a signal must be received from one of the following sources:

- An indoor or outdoor aerial antenna
- A cable system
- A satellite system

NOTE

For receiving over-the-air TV broadcasts, we recommend that you use an external fixed antenna. Should you require the use of a temporary antenna, please ensure that you purchase an antenna with sufficient ability to receive in weak signal areas. Only when you are in close proximity to a transmitter will a temporary antenna reproduce a signal as strongly as a fixed antenna.

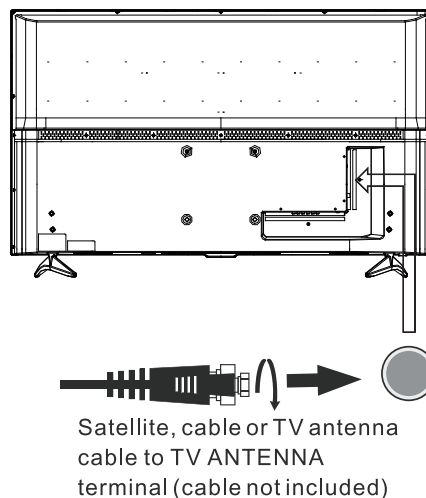

CONNECTING AN A/V DEVICE

To connect to other equipment such as a VCR, camcorder, satellite system or cable, etc.

CONNECTING DEVICES WITH A COMPOSITE VIDEO OUTPUT

To connect A/V devices such as a VCR, video game system or camcorder.

Connecting to a VCR / Video Game System / Camcorder

 
Connect the AUDIO / VIDEO cable (not included) as shown.

Make sure you connect the cable from the other equipment (**AUDIO** and **VIDEO OUT**) to this unit (AV in)

NOTE

1. Please refer to the user manual for the other equipment for more information.

2. Composite video input (shared with component)

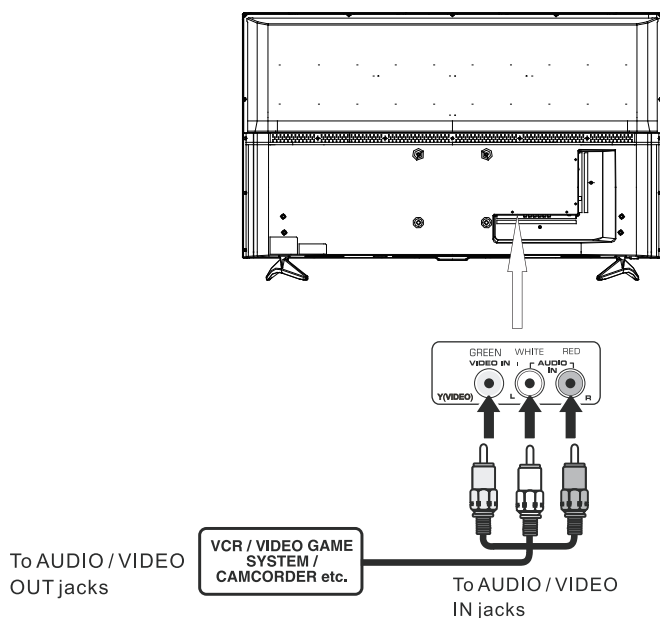

CONNECTIONS

CONNECTING A HIGH-DEFINITION (HD) SOURCE USING COMPONENT CONNECTION

High-Definition (HD) Devices with component video output must be connected to the YPbPr input.

 
Connect the component video cable and audio cable (not included) as shown.

Make sure you connect the component video cable and audio cable from the other equipment (COMPONENT OUT and AUDIO OUT) to the unit COMPONENT IN.

NOTE

When connecting a DVD player to the television, the picture resolution is solely dependent upon the resolution supported by the DVD player attached. DVD player resolutions vary from 480i to 1080p, and this television can support DVD players up to a maximum resolution of 1080p.


* May require a subscription for receiving HD channels, check with your cable/satellite service provider for details.

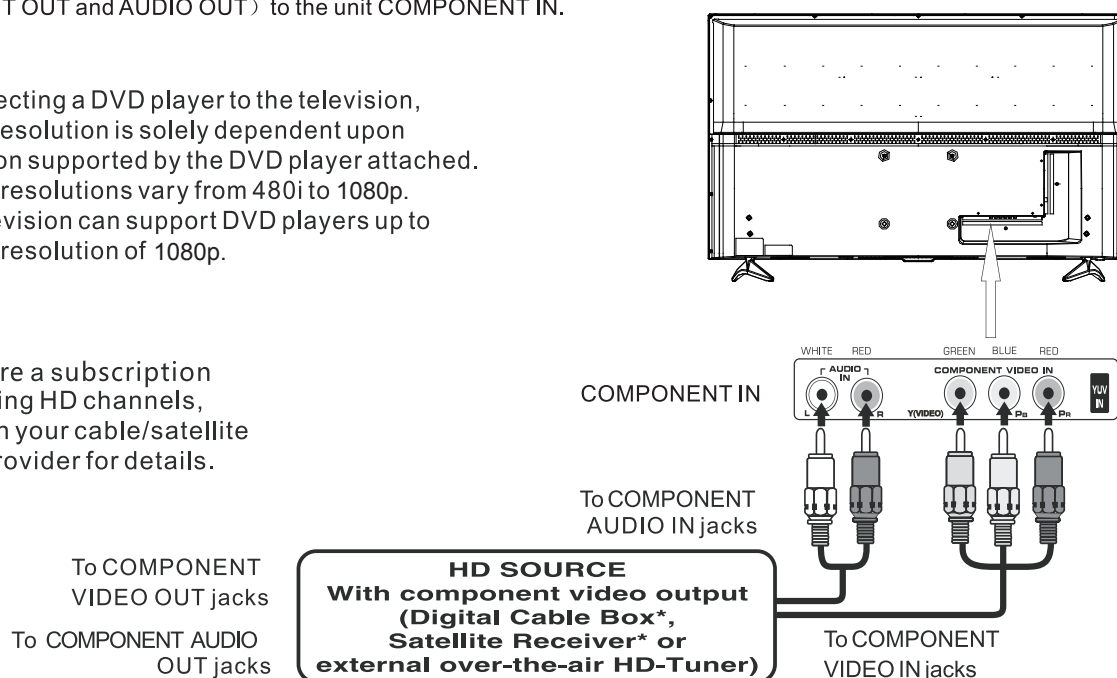

CONNECTING A HIGH-DEFINITION (HD) SOURCE USING HDMI CONNECTION


HDMI (High Definition Multimedia Interface) supports both video and audio on a single digital connection for use with DVD players, DTV, set-top boxes and other digital AV devices. HDMI was developed to provide the technologies of High Bandwidth Digital Content Protection (HDCP) as well as Digital Visual Interface (DVI) in one specification. HDCP is used to protect digital content transmitted and received by DVI-compliant or HDMI-compliant displays.

 HDMI has the capability to support standard, enhanced or high-definition video plus standard to multi-channel surround-sound audio. HDMI features include uncompressed digital video, a bandwidth of up to 2.2 gigabytes per second (with HDTV signals), one connector (instead of several cables and connectors), and communication between the AV source and AV devices such as DTVs.

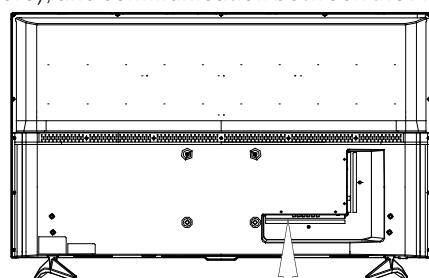

Connect the HDMI cable (not included) as shown:

 Make sure you connect the cable from the source equipment (HDMI OUT) to this unit (HDMI IN).

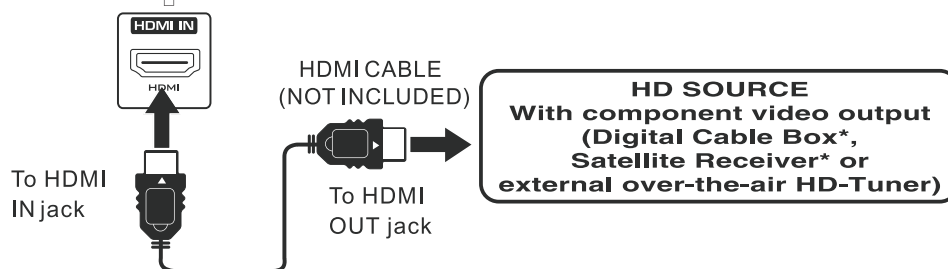


CONNECTIONS

CONNECTING THE POWER CORD

You can power on your TV unit before you make sure the power cord is inserted well. At the same time, please check that the rated voltage of your unit matches your local Voltage.

NOTE

 - Insert the power plug fully into the socket outlet.
(If the power plug is loose it could generate heat and cause fire .)
- Ensure that the power plug is easily accessible.
- Ensure the earth pin on the power plug is securely connected to prevent electrical shock.
- Do not touch the power plug with a wet hand.
(This may cause electrical shock)
- Do not use any power cord other than that provided with this TV. (This may cause fire or electrical shock.)
- Do not damage the power cord.
(A damaged cord may cause fire or electrical shock.)
- Do not move the TV with the cord plugged in the socket outlet.
- Do not place a heavy object on the cord or place the cord near a high-temperature object.
- Do not twist the cord, bend it excessively, or stretch it.
- Do not pull on the cord. Hold onto the power plug body when disconnecting cord.
- Do not use a damaged power plug or socket outlet.

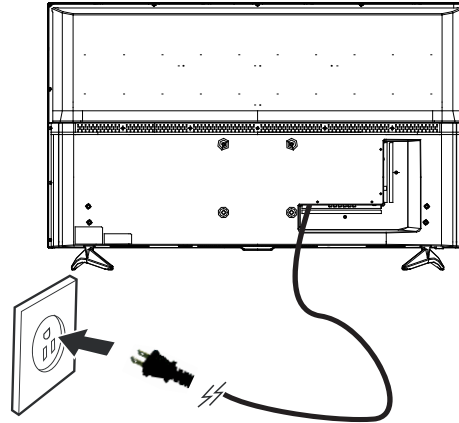

To AC wall outlet

CONNECTIONS

 
Connection to a Home Theater Audio System

For BEST audio performance

Connecting to a Home Theater System
Dolby Digital can deliver optimal 2 channel stereo or surround sound with five discrete full range channels plus a sixth channel for a subwoofer.

Enjoy optimal sound reproduction from your system with a Dolby Digital amplifier that incorporates a digital optical input. Connect an optional digital cable directly to the television's Optical audio output to listen through all inputs except VGA.

(The VGA does not support digital audio)

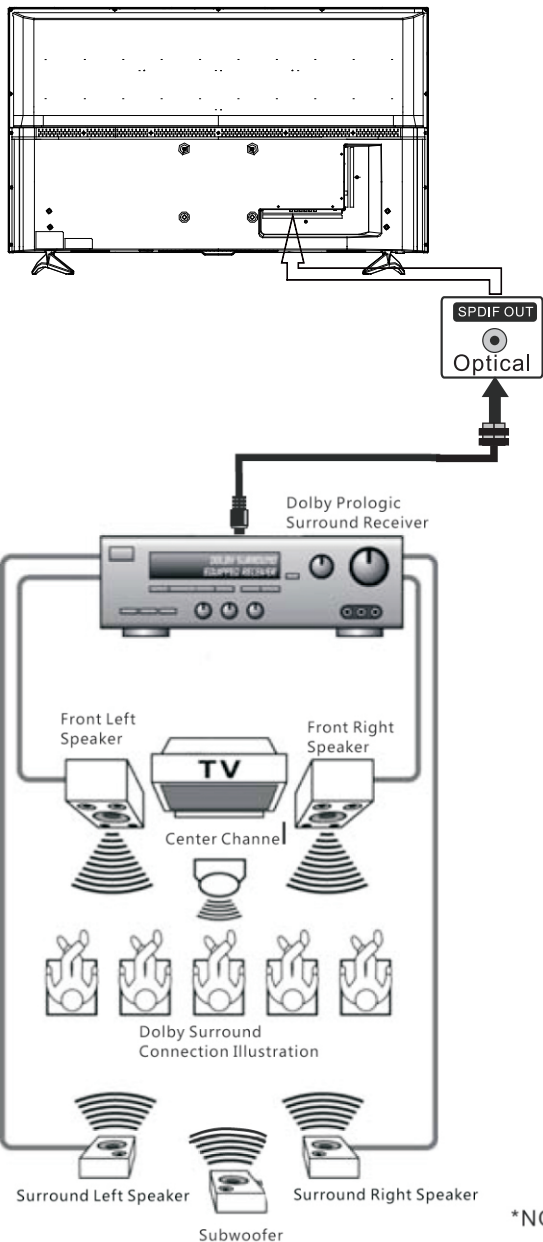


How To Setup Digital Output

Press the MENU button on the remote control

Press the right ► arrow button to select sound

 Press the down ▼ arrow button to highlight SPDIF type right ► Raw or PCM

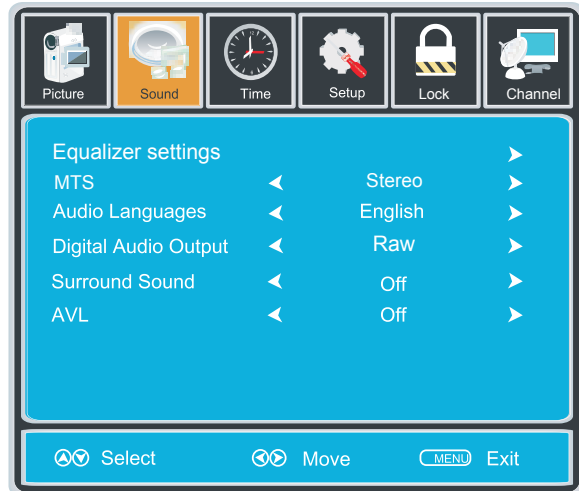

optional digital cable

*NOTE: Refer to the User Manual from your home theater equipment for recommended audio settings.

 
WALL MOUNT INSTALLATION

INSTALLING / REMOVING THE BASE STAND

WARNING : The LED Display is very fragile , and must be protected at all times when removing the base Stand .

Be sure that no hard or sharp object or anything that could scratch or damage the LED display comes into contact with it .Do NOT exert pressure on the front of the unit at any time because the screen could crack.

1. Disconnect **all** cables or cords connected to the unit.
2. Lay the unit down on a flat surface with the back side facing down.
3. To remove the base stand , loosen screws off the holes then pull downwards to release the base stand.

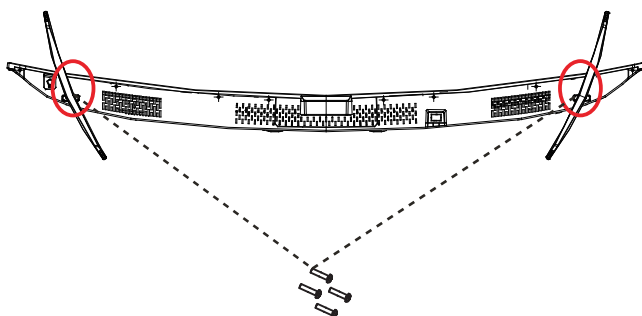


MOUNTING ON THE WALL

This unit is VESA-compliant, and is designed to be wall-mounted with a VESA-compliant 8"x8" (200x200mm) mounting kit designed for flat-panel TVs (not supplied). Mount this unit according to the instructions included in the mounting kit.

Length of screw should not exceed 10 mm.


NOTE

 Remove the base stand before mounting the unit on the wall.

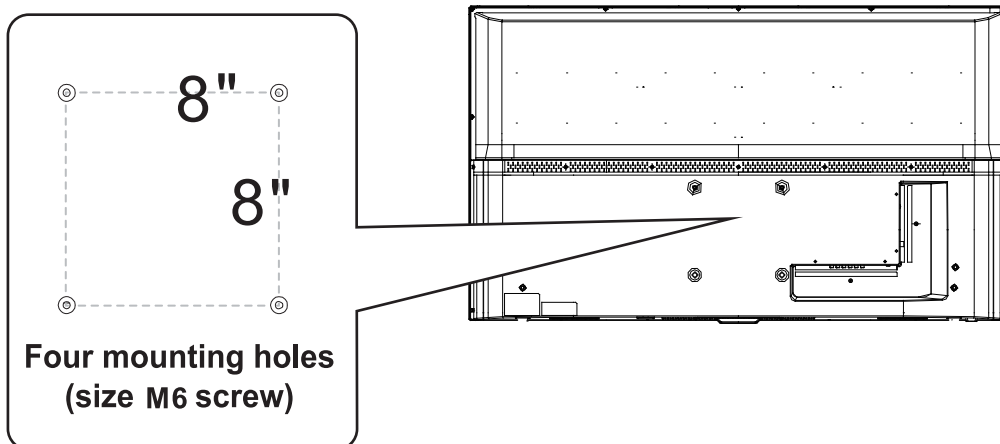


ATTACHING THE STAND

 Place the stand on the TV, insert and tighten the screws M6x14mm (found in the accessories bag) in the circled area with the screwdriver (not provided).

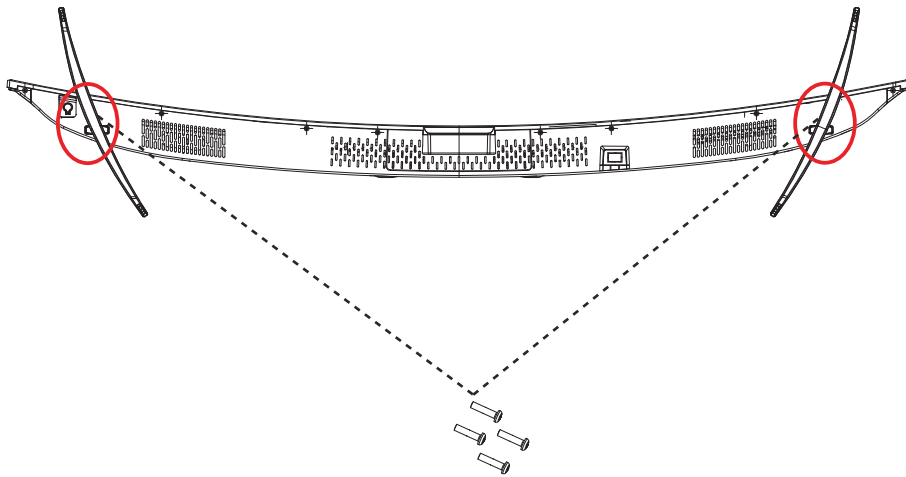

Then the TV is ready for use now.

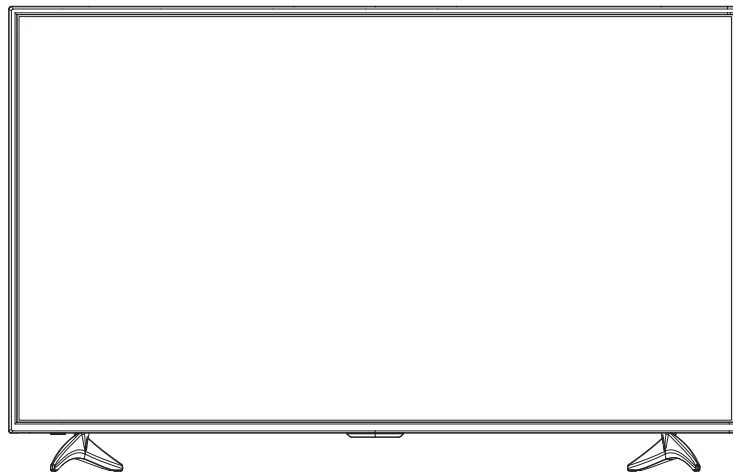 

INITIAL SETUP

PUTTING THE UNIT ON A PROPER PLACE

When you turn on your television set for the first time, be sure to place it on a solid stable surface.

To avoid danger, do not expose the TV to water, or a heat source (e.g. lamp, candle, radiator).

Do not obstruct the ventilation grid at the rear and be sure to leave sufficient gaps around the unit.



TURNING THE UNIT ON FOR THE FIRST TIME

 
After you have initially connected your TV antenna or cable, turn the television ON.

A screen will display asking you to run a **Channel Auto Scan** to search and receive available local digital channels.

It is here where you will select antenna options and run **Channel Auto Scan**.

Channels will be stored in the TV tuner.

Press the **MENU** button on the remote control. Using the ◀▶ buttons, scroll to highlight channel mode. Press the ▼ button to highlight AIR/CABLE.

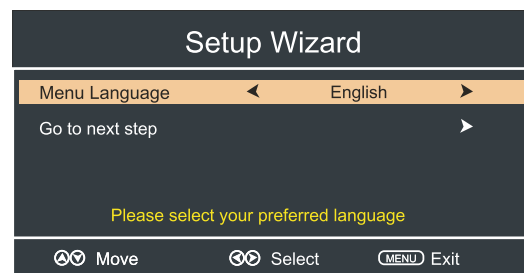


SOURCE SELECTION

1. Press the **SOURCE** button on the remote control.
2. Use the ▲ or ▼ button to select the options (TV, YPbPr/AV, HDMI1, HDMI2, HDMI3, HDMI4, USB Media Player) and select any of them using the ▶ button or the **ENTER** button.
(The screen will change to your desired source).

Note:

 Before watching please make sure all necessary cables and devices are connected.

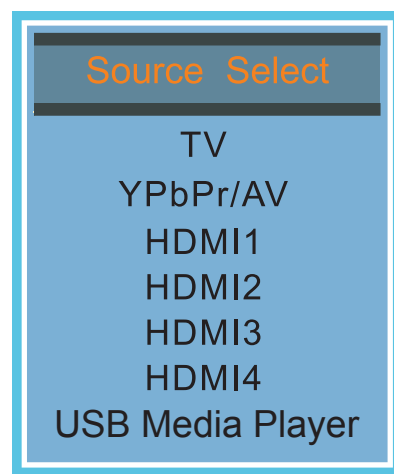


INITIAL SETUP

HOME MODE SELECTION



 RETAIL MODE SELECTION

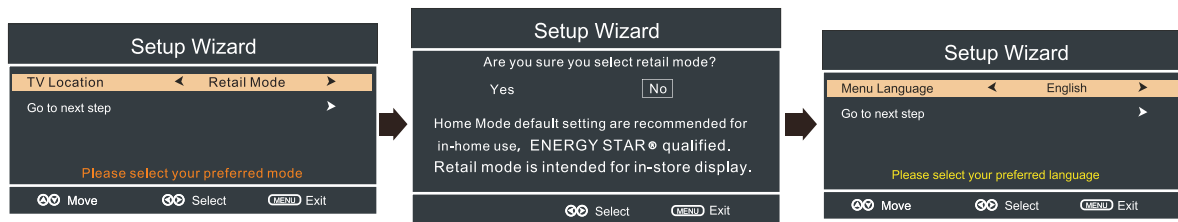

Home Mode(Energy Saving):Select Home Mode to maximize energy efficiency.Please note if you select Home Mode the picture will be darker.This mode meets the requirements of Energy Star® Qualification.

 
Retail Mode:Select Retail Mode if you would like your picture to be brighter. At times this mode may use more energy to operate the Volume/Sound Mode and the Picture Mode.In this setting,the power consumption may possibly exceed the limited requirement of Energy Star® Qualification.

TV SETUP

CHANNEL MENU

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **CHANNEL** in the main menu, it will highlight the first option.

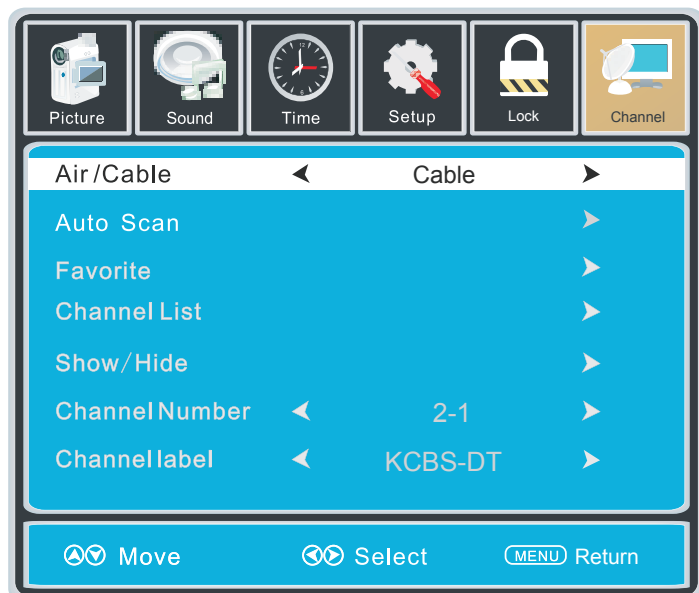

AIR / CABLE

This feature allows you to switch between air (such as using antenna) and cable.

AUTO SCAN

This feature searches channels automatically for you.

FAVORITE

This feature gives the favorite list of channels added by you.

CHANNEL LIST

This feature shows the list of stored channels.

SHOW / HIDE

This feature tells you if you have chosen for channel to be skipped.

CHANNEL NUMBER

This feature tells you what channel you are currently on.

CHANNEL LABEL

This feature changes the name of the channel.

Please Note:

The channel options are only available when you select TV as your SOURCE.

 
When you open the OSD menu on other sources (HDMI, YPbPr/AV) these options will be grayed out.

TV SETUP

PICTURE MENU

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **PICTURE** in the main menu, it will highlight the first option.

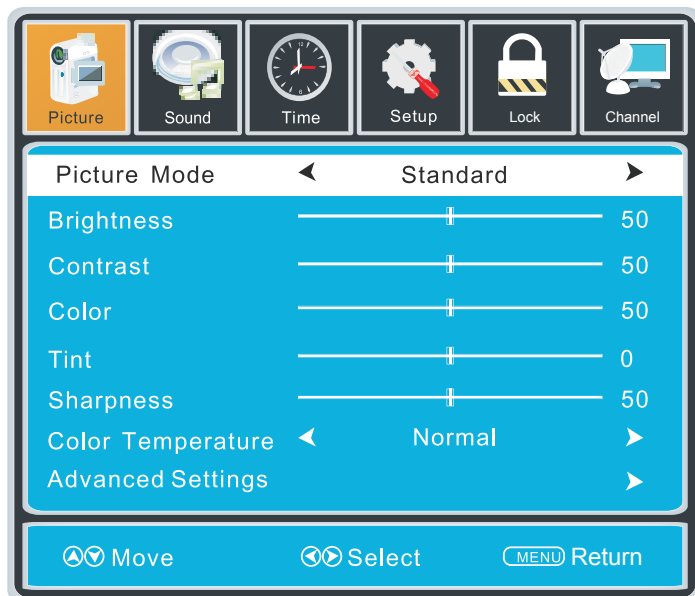

PICTURE MODE

This feature changes various color modes for the TV.

BRIGHTNESS

This feature changes the picture's detail in dark colors.

CONTRAST

This feature changes the difference between dark and bright objects.

COLOR

This feature changes the amount of color in the picture.

TINT (The "Tint" item only works in user mode.)

Adjusting tint will affect the skin tone. -50 will increase red, +50 will increase green. Ideally, the tint scale on the TV OSD should show the red/green color for easy adjustment.

SHARPNESS

This feature changes the picture quality.

COLOR TEMPERATURE

This feature adjusts the color temperature of the TV, giving warm, normal, cool.

ADVANCED SETTINGS

a) **ASPECT RATIO** This feature changes the various aspects of the TV's video. (Aspects include wide, zoom, cinema, normal).

b) **NOISE REDUCTION** This feature reduces general pixilation by blurring them.

 
c) **DYNAMIC CONTRAST** This feature allows the TV to automatically adjust the contrast of the TV depending on the picture you are viewing.

TV SETUP

SOUND MENU

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **SOUND** in the main menu, it will highlight the first option.

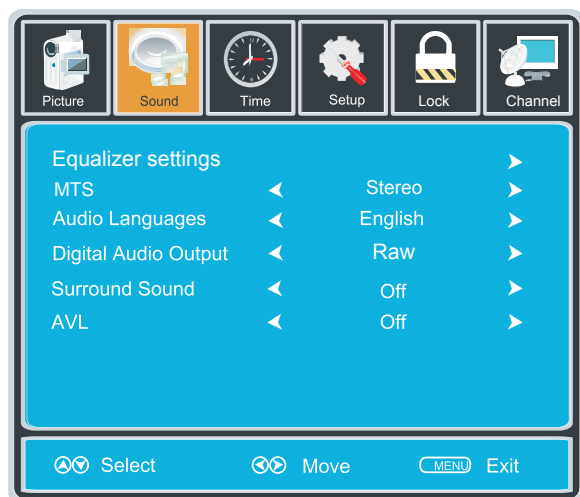

EQUALIZER SETTINGS

This feature enables the internal equalizer of the speakers. You can adjust the settings individually or use the presets .

MTS

This feature adjusts the second audio programming in analog channels.

AUDIO LANGUAGE

This feature adjusts the digital second audio programming in digital channels.

DIGITAL AUDIO OUTPUT

This feature adjusts the digital audio output.

SURROUND SOUND

This feature adjusts the dimensional surround effect on or off (for built-in speakers only).

AVL

This feature adjusts the auto volume leveler enabling volume protection from overly loud commercials.

Please Note:

 
AUDIO LANGUAGE and MTS are dependent on the broadcasting station's support and are only available under the source TV.

TV SETUP

TIME MENU

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **TIME** in the main menu, it will highlight the first option.

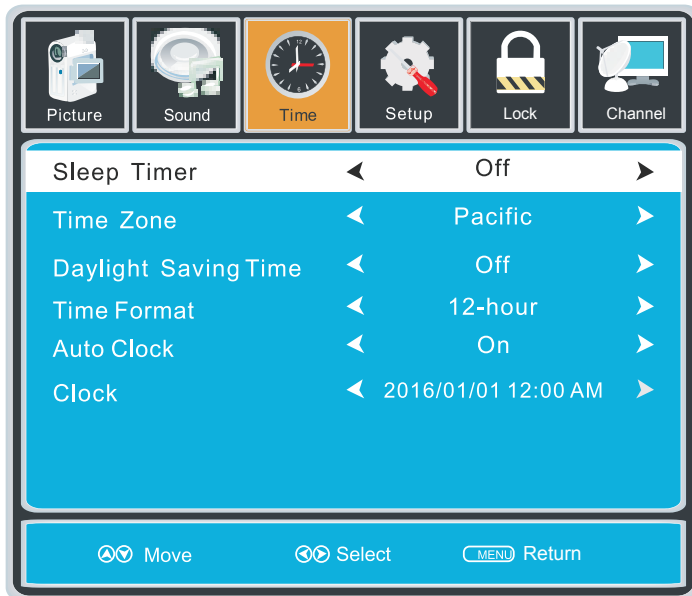

SLEEP TIMER

This timer automatically turns off the TV at the designated time.

TIME ZONE

This option adjusts the global time zone for the TV.

DAYLIGHT SAVING TIME

This option toggles the daylight saving time feature.

TIME FORMAT

This option adjusts the display format for the time.

AUTO CLOCK

This option enables the TV to sync time with the antenna.

(Put it on AUTO if you have an antenna attached to the TV. If you have CABLE or SATELLITE or anything else please use make sure AUTO CLOCK is turned off)

CLOCK

This option adjusts the time and date of the TV. You need to disable AUTO CLOCK in order to use this function.

Please Note:

 
The TIME function will only keep accurate time if the TV is plugged into a power source. If the TV is unplugged or the power strip is turned off, the TV's time will not be accurate.

TV SETUP

SETUP MENU

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **SETUP** in the main menu, it will highlight the first option.

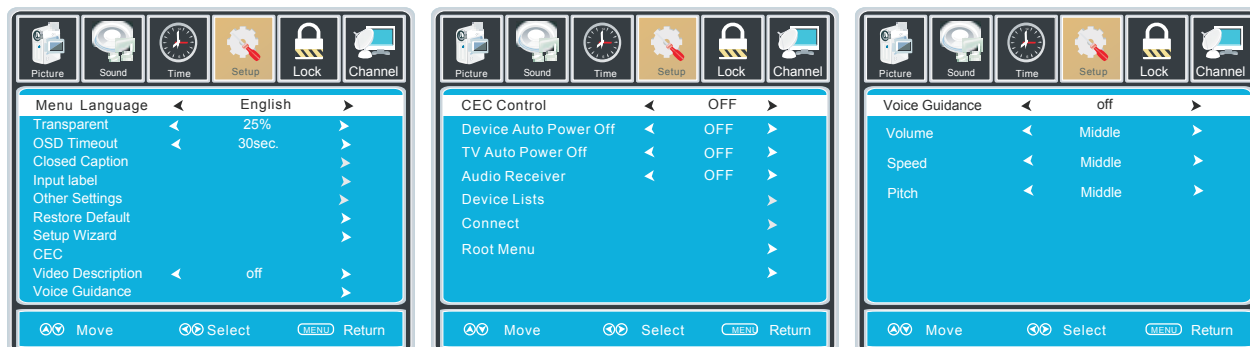

MENU LANGUAGE

This option changes the language of the TV's OSD menu.

TRANSPARENT

This option changes the transparency of the menu allowing background TV images to show through.

OSD TIMEOUT

This option changes the time which the TV's OSD menu automatically goes off.

CLOSED CAPTION

This option displays words on the TV.

INPUT LABEL

This option changes the source names to your personal preference.

OTHER SETTINGS

This option adjusts miscellaneous options of the TV.

AUDIO ONLY-This option turns off the screen while the audio is still playing.

RESTORE DEFAULT

This option reset all settings to factory default and restart the initial TV setup, All channel and user settings will be reset, except parental controls.

SETUP WIZARD

This option enables the TV to show you the setup wizard of the TV again.

Please Note:

Closed captioning is only available under AV and TV ports.

Closed captioning depends on your TV program's support. Sometimes due to the TV channel or the signal, closed captioning will not be available.

In United States, closed captioning under analog signals is CC1.

In United States, closed captioning under digital signal is Service1.

CEC

Press to enter CEC submenu.

Video Description

The default is OFF. This option can be used only on the DTV mode.

Voice Guidance

The default is OFF. When you want to use this function, you can select On, and adjust the Volume, Speed, Pitch.

 
TV SETUP

LOCK MENU

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **LOCK** in the main menu, it will highlight the first option.

Press "0000" for the lock password.

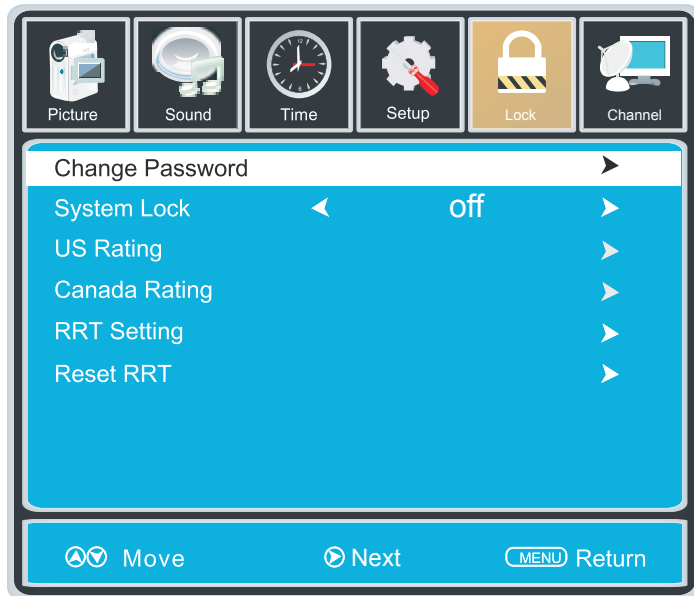

CHANGE PASSWORD

This option allows you to change the LOCK menu password.

SYSTEM LOCK

This option enables parental locking and filtering for the TV.

US RATING

This option filters US TV programming and movies.

CANADA RATING

This option filters CANADA TV ratings.

RRT SETTING

This feature is a downloadable rating filter based on TV broadcasts. With the transition of TV broadcasts to digital, future changes, and enhancements in how TV shows are rated for content are possible.

RESET RRT

This option resets the RRT5 settings.

Please Note:

Please refer to RATINGS EXPLAINED for more information on ratings definitions.

Downloadable rating and clear downloadable data might be grayed out depending on the TVs' ratings support.

RRT5 options are based on TV broadcasts, if it is grayed out, then it is not available in your region.

USB Media Player

USB Media Menu

Before operating Media menu, Plug in USB device, then press INPUT button.

Press ▼/▲ button to select USB Media Player in the Source menu, then press Enter button to enter.

Press ◀/▶ button to select the option you want to adjust in the main Media menu, then press Enter button to enter.


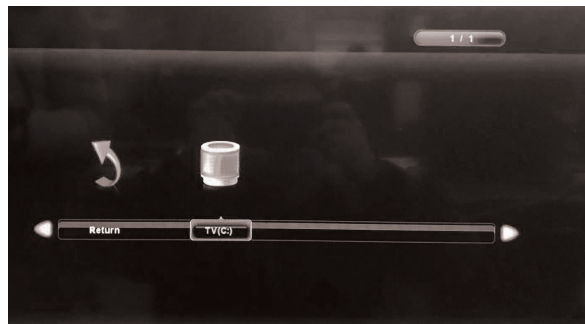 


Photo Menu

Press ◀/▶ button to select PHOTO in the main menu, then press Enter button to enter.

Press ◀/▶ button to select drive disk you want to watch, then press Enter button to enter.

 Press ◀/▶ button to select return option to back to the previous menu.

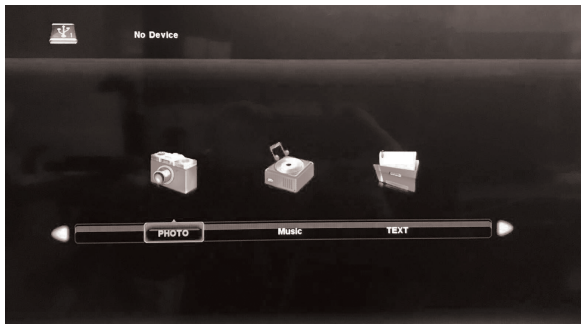

Press ◀/▶ button to select the file you want to watch in the file selecting menu, then press media button to display picture.



Press ◀/▶ button to select the file folder you want to search in the file selecting menu, then press Enter button on your remote control to enter sub-menu.

 
USB Media Player

Music Menu

Press ◀/▶ button to select MUSIC in the main menu, then press Enter button to enter.

Press menu button to return back to the previous menu and exit menu to quit.

Press ◀/▶ button to select drive disk you want to watch, then press Enter button to enter.

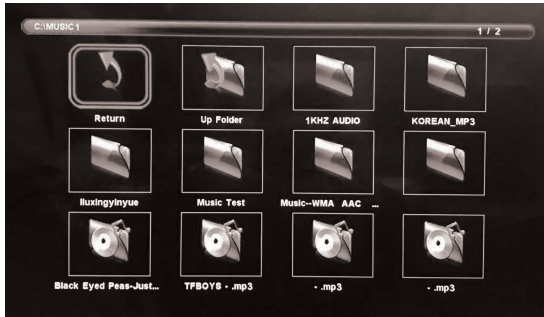

Press ◀/▶ button to select the file you want to watch in the file selecting menu, then press

Enter button to add the file to play list, press media button to display and operate file details.



Press ◀/▶ button to select menu in the bottom you want to run, then press Enter button to operate.

Press Menu button to back to the previous menu and exit button to quit the entire menu.

Press button to hide the menu into the button.

 
Text Menu

Press ◀/▶ button to select TEXT in the main menu, then press Enter button to enter.

Press menu button to return back to the previous menu and exit menu to quit.

Press ◀/▶ button to select drive disk you want to watch, then press Enter button to enter.

When reading Text books, press FF button of remote to next page, press FR button of remote to previous page. Press Next button of remote to next part or chapter, press PREV button of remote to previous part or chapter. Press the EXIT button of remote to return submenu.

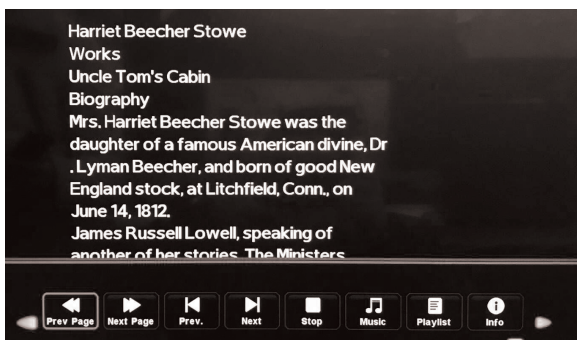

Support format: TXT for Text. MP3 for music. JPG and JPEG for photo.

NOTE: It can not play video format.

DISPLAY MODE

VIDEO FORMATS

SUPPORTED COMPONENT / HDMI INPUT MODE			
Resolution	Horizontal Scanning Frequency (KHz)	Vertical Scanning Frequency (Hz)	Format
720 x 480	31. 47	59. 94	480 i
720 x 480	15. 734	59. 94	480 p
1280 x 720	37. 5	50	720 p
1280 x 720	45	60	720 p
1920 x 1080	31. 25	50	1080 i
1920 x 1080	33. 75	60	1080 i
1920 x 1080	27	24	1080 p
1920 x 1080	56. 25	50	1080 p
1920 x 1080	67. 50	60	1080 p
3840 x 2160	54	24	4K2K
3840 x 2160	67.50	30	4K2K
3840 x 2160	135	60	4K2K

NOTE:

The above listed formats are also related to the AV devices you are about to connect. Before you connect this unit with others please read all instructions carefully and make sure all necessary cables are connected.
This unit may be incompatible with some other formats which are not meet the above conditions.

Input/Outputs	Version	Max Resolution	Max FPS	Others
HDMI1	HDMI2.0	3840x2160(4K)	60	HDCP2.2
HDMI2	HDMI2.0	3840x2160(4K)	60	HDCP2.2
HDMI3	HDMI2.0	3840x2160(4K)	60	HDCP2.2
HDMI4	HDMI2.0	3840x2160(4K)	60	HDCP2.2
Component	/	1080p	60Hz	/
AV IN	/	NTSC	60Hz	/
Optical	/	/	/	/

SPECIFICATION

Model Description		55"LED TV
Panel	Panel Type	LED Panel
	Diagonal Size	55 inches
	Screen Format	16:9
	Resolution	3840 x 2160
	Brightness	250cd/m ²
	Contrast	3000:1
	View Angle	178(H)/178(V)
	Response Time	8 ms
	Maximum Color	1.07G colors
Systems	Color System	ATSC/QAM/NTSC
	Sound System	M
	Audio System	BTSC
	Sound Output	L/R Speaker: 9W+9W
Input / Output Jacks	RF Input	75 ohm external terminal
	HDMI Input <small>HDMI1 has Audio Return Channel function only.</small>	Video: 480i, 480p, 720p, 1080i, 1080p,4K2K. Audio: Two channel linear PCM 32, 44.1 and 48kHz, 16, 20 and 24 bits
	Composite Video Input	1.0 Vp-p, 75ohms RCA
	Component/Y Pb Pr Input	Y: 1.0 Vp-p, 75ohms, 0.3V negative sync Pb: 0.7Vp-p, 75ohms Pr: 0.7Vp-p, 75ohms
	Sound Input	AV AUDIO: For CVBS/COMPONENT Audio input 500mV rms, Impedance: 20k ohms
	Optical Audio Out	Optical
Power	Power Requirement	100-240V~ 50/60Hz
	Rated Power Consumption	150 W

This manual is only for your reference.
Specifications are subject to update without prior notice.

TROUBLESHOOTING GUIDE

SYMPTOM

CAUSE (AND REMEDY)

TV

Bad Picture (snow, multiple images distortion, blurry)

- Check the location of the antenna and adjust it if necessary.
- Make sure the antenna cable is firmly connected.
- Make sure all input cables are firmly connected.

No sound.

- Increase the volume.
- Check whether the mute function has been activated on the Remote Control.

Black and White picture.

- Check the PICTURE setting within the PICTURE menu.
- Check to make sure the program you are watching is broadcast in Color and not Black & White.

No picture or sound.

- Make sure the unit is plugged in and turned on.
- Make sure that the ATV mode is selected.
- Try a new channel to check for possible station trouble.
- Make sure the antenna is connected properly.
- Increase the volume.
- Make sure the antenna or audio/video source device is working properly.
- Make sure all cables are firmly connected.
- Check for local interference.

Colored patches of picture.

- Make sure there are no unshielded electrical devices nearby that are causing interference.
- Turn the TV off for 30 minutes, then try it again.

Panel function key does not respond correctly.

- Under the influence of electrostatic phenomenon, the product may malfunction and require user power reset.
- Unplug and re-plug the AC power cord.

The display monitor's panel goes hot.

- LED TV takes inside light phosphor. It may increase the temperature of the screen in some occasions. It's not a defect.

Unusual dots

- Black dots and Bright points may appear on the LED screen. This is a structural property of the LED panel and is not a defect.

Stripes on screen

- Adjust the impulse phase may decrease stripes. RGB in

The top of the monitor gets hot.

- It may occur during long-time working. It's not a defect.

Unable to select a certain channel.

- The channel may be skipped. Choose this channel by directly selecting the buttons from the remote control.

Disorder display at power on.

- This may be caused because of a very short interval between POWER OFF and ON.
- Unplug the power and restart.