


iPad Air iPad Air 2 iPad Pro 9.7 iPad Gen. 5 (2017) iPad Gen. 6 (2018)

PAD-SCGS9




Compact Security Gooseneck Floor Stand for iPad 9.7" **INSTRUCTION MANUAL**

Thank you for choosing CTA Digital's product. We hope that you will enjoy using it. Please follow the guidelines and instructions as laid out in this instruction manual.

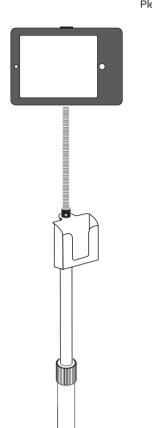

Package contents:

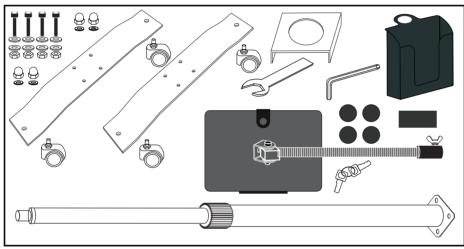

Instructions: 1. Attaching EVA Pads to **Tablet Enclosure**




For iPad Air and iPad 9.7 Gen 5,use the

Attach included metal home button cover if desired.




For iPad Air 2 and iPad Pro 9.7.label with the included adhesive EVA pads inside case for a snug fit as the following:

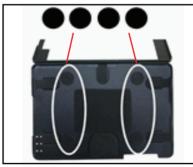

2. Installing the Wheels




Place a spring washer over the screw bolt on the wheel.

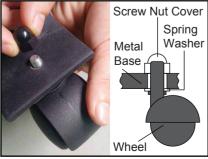

Place the screw bolt from each wheel through the metal base, then place a nut cover over the top of each. Screw down clockwise by hand, then use wrench to tighten


SUPPORT@CTADIGITAL.COM

3. Base Assembly and Connecting the Metal Cover:

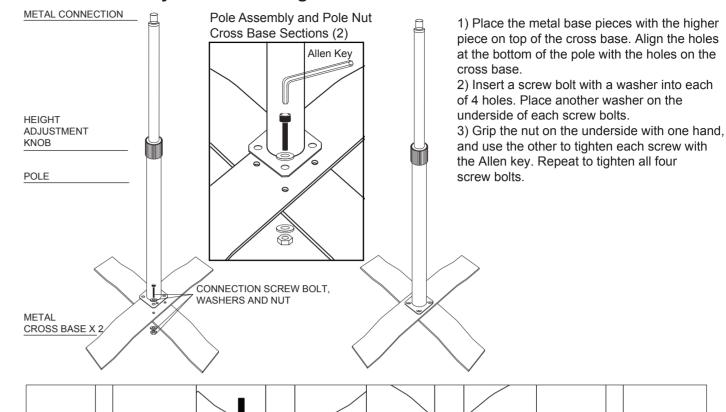


- 4. Rotate the grip counter clockwise to loosen completely and remove from top
- 5. Place the square metal cover over the top of the pole and slide down to
- 6. Place grip back over stand pole


4. Connecting the Tablet gooseneck holder & Battery Case

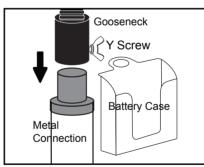

1. Place battery case over top of metal connection. Note: if Y screw is already in, unscrew before attaching gooseneck.

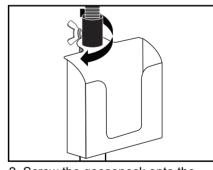


2. Screw the gooseneck onto the metal connection of the pole by turning clockwise. Be sure that the battery case is on the opposite side of the pole as the Y screw.

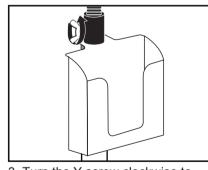

3. Turn the Y screw clockwise to tighten the connection.

5. Installing your Device and Adjusting the Floor Stand:

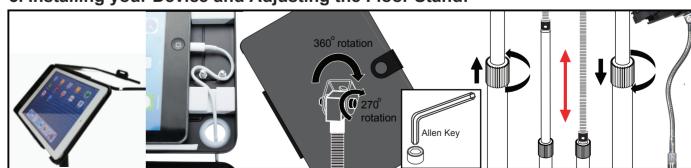

- 1. Unlock the enclosure, insert tablet, attach charge cable, then thread charge cable through the cutout at the rear of the tablet. Close and lock the enclosure.
- 2.Use included Allen key to tighten and 3. Rotate plastic grip to adjust pole loosen the gooseneck to holder connection screw to adjust ease of
- to desired height.
- Flex the gooseneck freely to adjust your favorite view angle.

SUPPORT@CTADIGITAL.COM