User's Guide

TRENDNET



Indoor/Outdoor 4MP H.265 PoE IR Fixed
Turret Network Camera

TV-IP323PI

Contents

Product Overview	1
Features	
Specifications	
Package Contents	
Front View	
Angle Adjustment	
Hardware Reset Button	
Warnings	4
Cautions	4
Plan for installation location	5
Viewing angle	
Weather Conditions	
Hardware Installation	
Cabling	
Waterproof cap	
Setup Your Camera with Camera Utility	
Logging-in to the Camera for the First Time (Windows)	
Logging-in to the Camera for the First Time (OS X)	
Live View	
Playback	
Search for video recordings	
Time Line	
Playback	
Slice images from video playback	
Download snapshots	
Download Strapshots	1

	LOg	. 18
	Search for logs	19
	System Information	. 20
	Logout	. 20
S	ystem Configuration	21
	Device Settings	. 21
	User Accounts	. 22
	Time Settings	. 22
	Daylight Savings	. 23
	Live View Settings	. 23
	Maintenance	. 24
	System Service	. 25
N	etwork Settings	26
	TCP/IP	. 26
	Port	. 27
	DDNS	. 27
	PPPoE	. 28
	SNMP	. 28
	802.1X	. 30
	IP Address Filter	. 30
	Quality of Service (QoS)	. 31
	UPnP	. 31
٧	ideo Settings	32
	Video Format	. 32
	Display Settings	. 33
	On Screen Display Settings	. 35
	Text Overlay	. 36

	Privacy Mask	36
	Video Recording	37
Ξ,	vents	38
	Motion Detection	38
	Face Detection	40
	Intrusion Detection	41
	Line Crossing Detection	43
	Video Tampering	44
	Notification	46
	Snapshot	46
	Email	47
5	torage	49
	Network Storage	49
	Storage Management	50
	FTP Server	51
₹	egulations	52
	Federal Communication Commission Interference Statement	52
	RoHS	52
	Europe – EU Declaration of Conformity	53
_i	mited Warranty	54

Product Overview



Features

TRENDnet's Indoor/Outdoor 4MP H.265 PoE IR Fixed Turret Network Camera, model TV-IP323PI, provides day and night surveillance with a night vision range of up to 30 meters (98 ft.). This fixed turret network camera delivers year-round surveillance with an IP67 weather rated housing to withstand outdoor environments. Record up to 4MP HD video at 30 fps in a space saving H.265 compression format. View live video from your mobile device using our free mobile apps, or from your PC with our desktop camera management software.

Specifications

4 Megapixel

Record up to 4MP HD video (2560 x 1440) at 30 fps in the space saving H.265 compression format

Smart IR

Smart IR dynamically adjusts the Infrared (IR) LEDs by lowering the IR intensity when objects are near, and increasing IR intensity when objects are farther away. Night-time viewing up to 30 meters (98 ft.) away.

PoE

Save installation costs with Power over Ethernet (PoE)

Outdoor Ready

Outdoor IP67 weather rated housing

3-Axis Adjustment

Manually adjust the pan and tilt angles to find the optimal camera lens position

Storage

Record video to a network storage device or to a Micro SD card (up to 128GB not included)

Advanced Playback

Advanced in-camera archived video playback functionality

Motion Detection

Create custom motion detection zones to record video and send email notifications when a zone is triggered.

Wide Dynamic Range (WDR)

Adjustable 120dB WDR setting improves image quality and focus when a camera is exposed to high contrast lighting environments by enhancing the dark areas of the image to make them more visible.

Recording Flexibility

Define custom schedules using continuous (24/7) and event based recording modes.

ONVIF

ONVIF Profile S and Profile G compliant

Complimentary Software

Complimentary pro-grade software to manage TRENDnet cameras

Complimentary Apps

 
Live video to a mobile device with free iOS[®] and Android[™] apps

Package Contents

TV-IP323PI package includes:

- TV-IP323PI
- Weather seal
- Torx® Security Allen Key
- Quick installation guide
- Camera mounting hardware






Drilling Template

Mounting Screws



If any package content is missing or damaged, please contact the retail store, online retailer, or reseller/distributor from which the product was purchased.


Front View

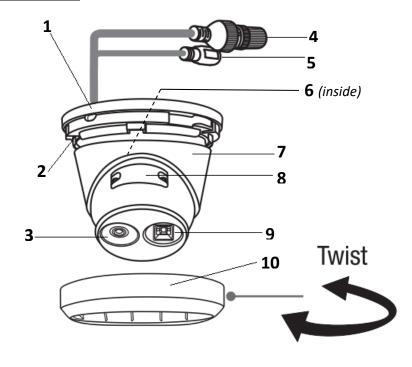

- 1. Mounting base
- 2. Tilt-Lock screw
- 3. Lens
- 4. 10/100Mbps PoE network port
- 5. Power port (optional)
- 6. Grounding point (inside of base)
- 7. Camera Housing
- 8. Micro-SD and Reset button cover
- 9. Smart Infra-Red LEDs
- 10. Camera base cover

Angle Adjustment

Loosen the Tilt-Lock screw, rotate and angle the camera to your desired position, and then tighten the Tilt-Lock screw.

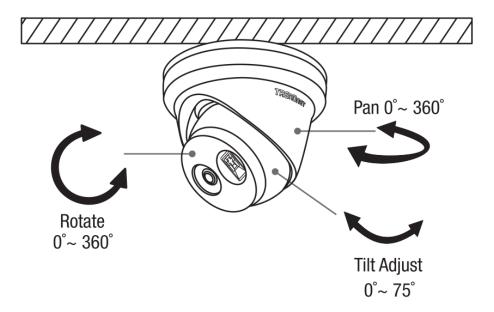

Hardware Reset Button

The hardware reset button is located under the removable cover labeled "Micro SD // Reset". To reset the camera to factory default settings using the hardware reset button:

- 1. Disconnect the camera from its power source.
- 2. Remove the cover labeled "Micro SD // Reset".
- 3. Press and hold the reset button **BEFORE** you connect the camera to its power source.
- 4. Continue to hold the reset button for at-least 15seconds.
- 5. Your camera should now be reset to factory settings.

Warnings

Serious injury or death may be caused if any of these warnings are neglected. Follow these safety guards to prevent serious injury or death.

- If using the power adapter, please choose the power adapter that meets the safety extra low voltage (SELV) standard or IEC60950-1 and Limited Power Source standard.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the camera yourself. Disassembling the product will void the warranty and may cause harm or injury.
- To reduce the risk of fire or electrical shock, do not expose this product to rain or water.
- The installation should be done by a qualified service person and should conform to all construction and electric regulations and other local codes.

Cautions

Injury or equipment damage may be caused if any of these cautions are neglected. Follow these precautions to prevent potential injury or material damage.

- Make sure the power supply voltage is correct before using the Camera.
- Do not drop the camera or subject to physical shock.
- Do not touch sensor modules with fingers. If cleaning is necessary, use a clean cloth with a bit of ethanol and wipe it gently. If the camera will not be used for an extended period of time, put on the lens cap to protect the sensor from dirt.
- Do not aim the camera lens at the strong light such as the Sun or an incandescent lamp. Strong light can damage the camera sensor.
- The sensor may be burned out by a laser beam, so when any laser equipment is being used, make sure that the surface of the sensor will not be exposed to the laser beam.
- Do not place the camera in extremely hot, cold temperatures (the operating temperature should be between -10°C to 60°C), dusty or damp environment, and do not expose it to high electromagnetic radiation.
- To avoid heat accumulation, good ventilation is required for a proper operating environment.
- Keep out of water and any liquid.
- While shipping, the camera should be packed in its original packing.

TRENDnet User's Guide TV-IP323PI

Plan for installation location

Viewing angle

The TV-IP323PI is a fixed turret camera with a focused viewing angle (78°) that provides non-distorted and detailed images. Choose the location where has good angle to shoot the image you expect to see. The motion detection area should also be considered when installing the camera.

Weather Conditions

The TV-IP323PI is a small fixed turret camera, which fits most installations indoor and outdoor. The camera can work under a wide range of weather conditions. For severe weather conditions, a camera housing with temperature and moisture control is recommended. Using the camera in milder weather conditions will help extend the camera's product life and preserve the quality of the video image.

- Moisture: Avoid damp or moist environments whenever you can. The TV-IP323PI is an IP67 grade water proof camera, and it will work in moist environments. However, rain may affect the picture quality, especially at night, water may reflect the light from the infra-red illumination and degrade picture quality.
- Temperature: TV-IP323PI works within a specified temperature range.
 Areas with extreme temperatures should be avoided when installing the camera. It's recommended that you use an enclosure with a heater and blower if you plan on using this camera outside of the specified temperature range.

- **Sunlight:** Avoid direct sun light exposure. Direct sun light will damage the image sensor. If sunlight is necessary for your viewing purposes, provide protection for the image sensor.
- **Lighting:** Consider installing your camera faces the same direction of the light sources. Shooting images with top-down position outdoor or next to the existing light source are good choices. Avoid the light source if it creates a shade that darkens the viewing area.


Hardware Installation

Cabling

It's recommended that the wiring of the cables in your home or office be done by an installation professional. If you already have the cable deployed, make sure the cable and the connectors meet the category 5 Ethernet cable standards. At least 2 pairs of twisted lines are required for power and data. Poor cable quality may cause unexpected problems. Testing your cable or running a new cable is suggested for new camera installation.


Waterproof cap

The TV-IP323PI itself is IP67 grade water and dust proof. There is a set of network cable water proof caps that comes with the package as well. Run your cable going through the accessories, and then crimp the cable with an RJ45 module. Plug in the network cable and then tighten the waterproof cap to prevent water running into camera through the cable.

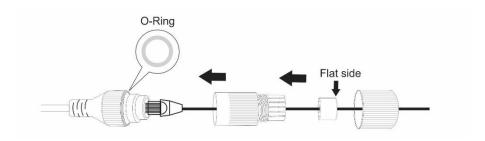


Setup Your Camera with Camera Utility

- Please download the utility at http://www.trendnet.com/camerautility
- 2. Extract the downloaded file and double click on the camera utility file to install

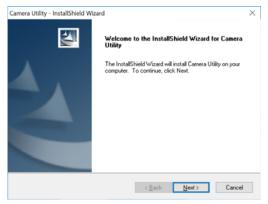


3. Last, click Next to finish the installation.

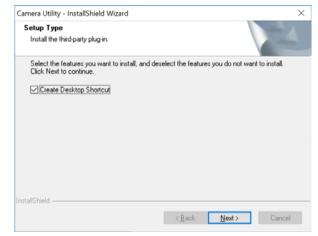


4. This will also require you to Install WinPcap program if you don't have this installed before, please follow the on screen Instructions to Install It.




5. Restart the computer after the Installation.

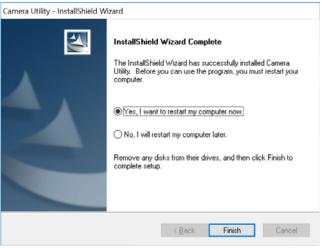

6. After the computer has restarted, double click on the Camera Utility icon to launch the program.

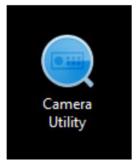


7. Find the camera you would like to access and configure then double click on the IP address.

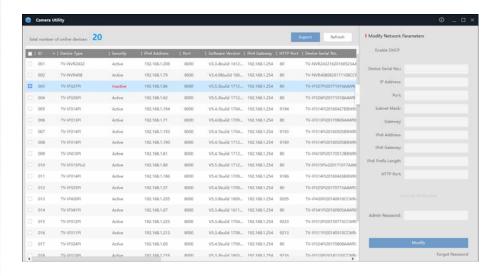


8. Continue to the next section **Access your Camera with the Web Browser** for detail configurations of the camera.

Logging-in to the Camera for the First Time (Windows)


1. Find the camera from the Utility and double click on the IP address to open the browser.

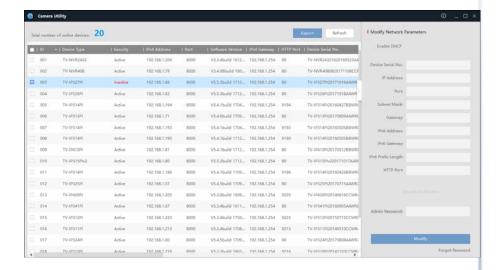

2. Activate the **admin** User Account by entering your desired password, and then click **OK**.

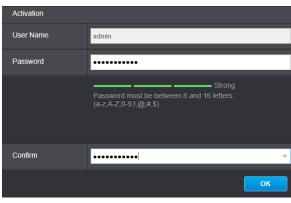


 The camera management page will detect if you installed the camera video streaming plug-in or not. . Click the link to download the plug-in from the camera. (For Internet Explorer and Safari only) Google and Firefox users, skip to step 9.

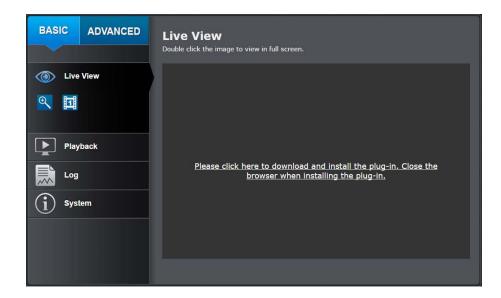


4. Download the plug-in to your computer and then and close your browser. Launch the plug-in installation to install the plug-in.




5. Permission request may show up depends on the Internet security settings on your computer. Click **Yes** to install the plug- in.

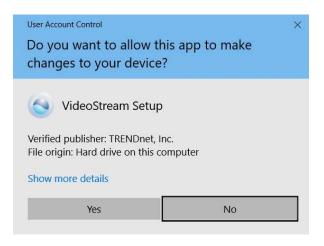

6. Click **Next** to install the plug-in.

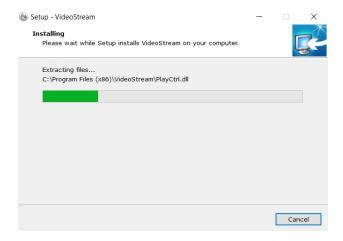


7. Click **Finish** to finish the installation.

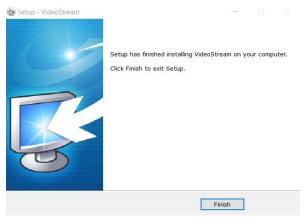

8. Open the browser and login again, enter the user name **admin** and new password again to start secured session.




9. Refresh the browser and the Live View page will show up and begin streaming video

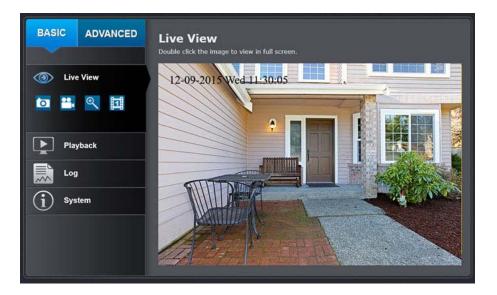


Logging-in to the Camera for the First Time (OS X)

 1. Open the web browser on your computer. In the address bar, enter the default IP address of the camera 192.168.10.30. If the camera is connected to a router/network, please use a windows machine to setup the camera with Camera Utility.




3. Enter the user name, **admin**, and the default password, **admin**, and then click **OK**.

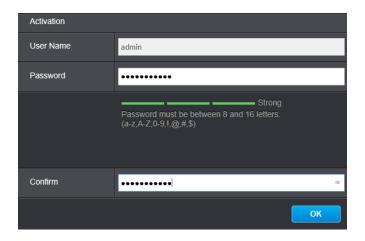

4. The camera management page will detect if you installed the camera webcomponent plug-in or not. Click the link to download the plug-in from the camera.


Note: Internet connection is required to download the plug-in. If you do not have Internet access, you can find the plug-in on the CD comes with the package under /Mac folder.

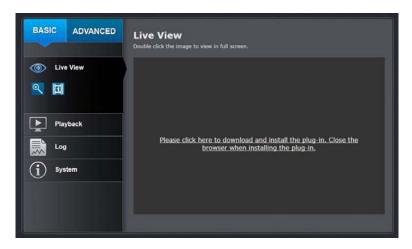


5. Quit your browser completely by **command-Click** on the browser icon and then click **Quit** before installing the plug-in.



6. Go to the **Finder** and navigate to the **Download** folder. **Command-Click** the **WebComponents.pkg** and then click **Open**. (If you are install the plugin from the CD when you don't have internet connection, just browse to /Mac folder and double click the **WebComponents.pkg** file.)

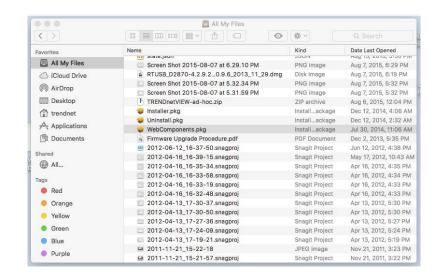


7. Click **Open with** → **Installer** to start installation.

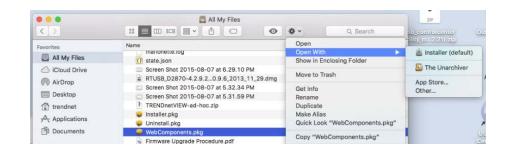

8. Click **Continue** to install the plug-in.



9. Select a destination to install the plug-in. Then click Continue.

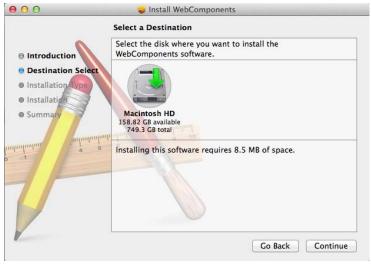


10. Use the default location and click Install.




11. Enter your password and click Install Software



12. Installation will process automatically.

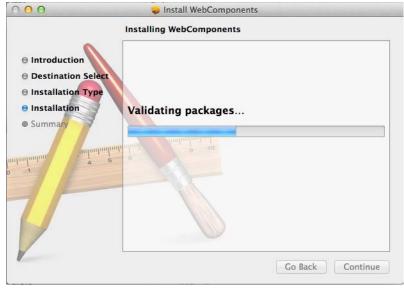


13. Click **Close** to exit the installation.

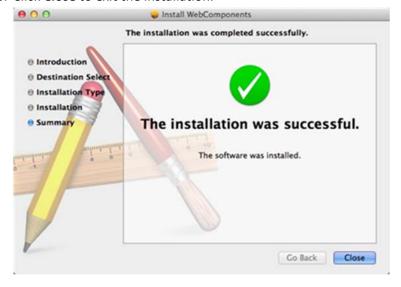

14. Open the browser and login again with the default IP 192.168.10.30 or the IP that was dynamically assigned by your router. Enter the user name, admin, and the default password, admin, and then click **OK**.



15. The Live View page shows up and the video starts to stream.

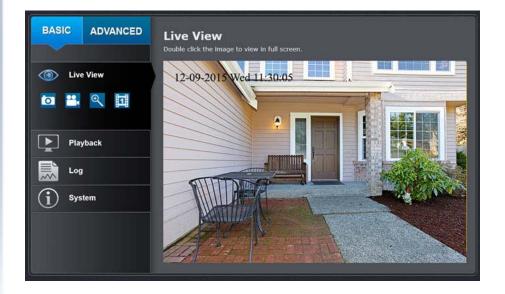

Live View

After you log-in into the camera management page, you'll see the Live View page.



Click this icon to take a video snapshot.

Q Zoom


Click once to enable zoom. When enabled, click and drag the area on the picture to zoom in. Right click to resume 100% zoom. Click the icon again to disable zoom. The zoom function works in full screen mode as well.

Recording

Click once to start recording. Click it again to stop recording. The status bar will indicate if it is in recording state or not.



Camera has three video streams: Switch to view the different video streams by clicking this icon. (For Internet Explorer and Safari only, Google and Firefox stream Live steam resolution only)

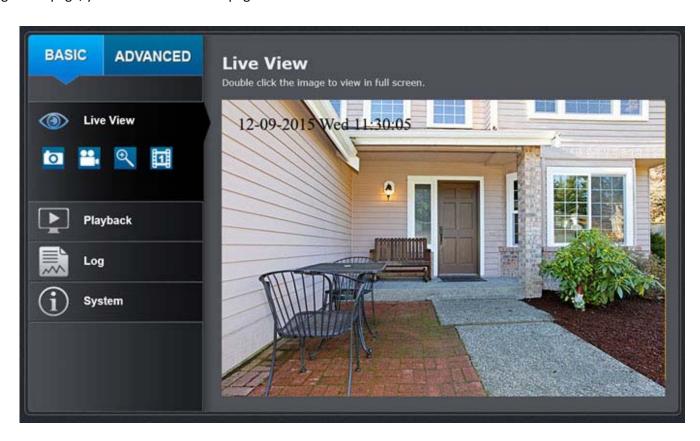

Full Screen Mode


Click the picture to view in full screen mode. Double click again or press escape key on your keyboard to exit full screen mode.

Status Bar

The status bar shows the status you are at, including enabled the zoom, recording video, and successfully taking a snapshot.


Playback

You can playback the video recording on the network storage and download the video clip and snapshots to your local computer.

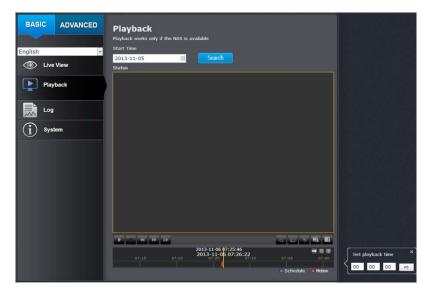

Search for video recordings

Click the date selection, and then choose a date as the date range of searching. Click **Search** to start searching.

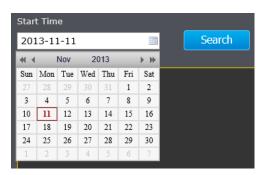

Time Line

There is a play back head in the center of the time line represented in a yellow vertical line. To look for a specific video recording, move the time line by clicking and dragging it. If the recording is short, zoom in by clicking button. Click to zoom out the time scale. If you know the exact time of the day you are looking for, click then enter the time you want to playback.

Different types of recordings are identified differently. The scheduled recordings are marked in blue, and the recordings triggered by motion detection are marked in red.



Playback

Use playback controls to play back the video recording.



•	Click this button to play the video.
Ш	Click this button to pause video playback.
	Click this button to stop playback.
₩	Click this button increase playback speed*.
*	Click this button decrease playback speed*.
I ▶	Click to playback video frame by frame. Click again for the next frame

^{*} Note: There are 5 steps of playback speed you can choose from: 1/4, 1/2, 1, 2, and 4 times of original speed.

Slice images from video playback

You can take snapshots from playback video or make new video clips from the video you are playing back.




Q	Click this button to enable zoom. Then click and drag on the video to define the area you want to zoom in. Click again to get back to 100% zoom.
	Double click to show video in full screen and press ESC on keyboard to exit full screen mode.
Q	Click this button to disable zoom.
0	Click this button to take a snapshot of current playback.
*	Click this button to start clipping a video from playback.
*	Click this button to stop clipping a video from playback.

Download sections of video

To save complete video sections or snapshots, you can download the files directly.




Click button to download video sections.

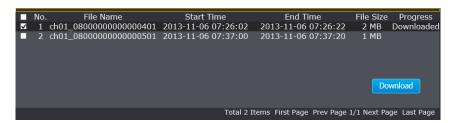

Check the time of the recording, select the videos you want to download, and then click **Download**.

Download snapshots

Click ___ button to list snapshots to download

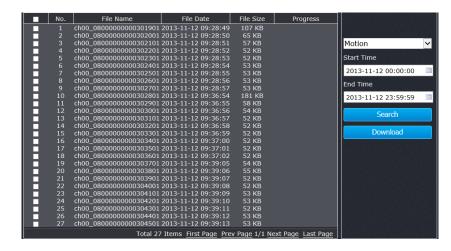

Schedule Motion

Select the type of event that triggered the snapshots. Choose the Start Time and End Time. Then, click **Search** to find the snapshot list. Check the time of the snapshot, and then select the snapshots you want to download, then click **Download**.


TRENDnet User's Guide TV-IP323PI

Log

The log of the TV-IP323PI will be saved on the network storage. You can search the relevant records and save to your local computer. (See

TRENDnet User's Guide TV-IP323PI

Storage on page 49 to setup the storage.)

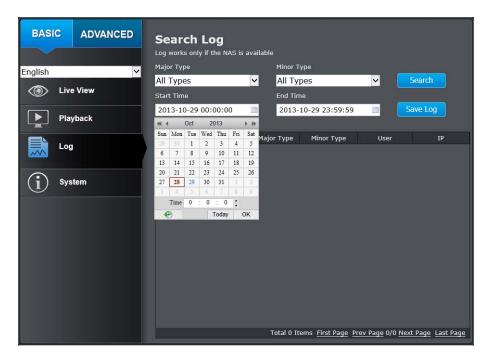

Search for logs

Click the type of log and then the Start Time and End Time. Click **Search** to start searching.

Total 129 Items First Page Prev Page 1/2 Next Page Last Page

Click **First Page**, **Prev Page**, **Next Page**, and **Last Page** to show the logs. Click **Save Log** to save the logs to your computer.

System Information

System Information page shows the camera's basic information.




Basic Information	
Device Name:	Human readable device name for easy
	identification.
Firmware Version:	Firmware version
MAC Address:	The MAC address of Ethernet Interface
Device Time:	The system time setup in the camera. Keeping this
	time correct is important for recording, scheduled
	control and logging accurately.

Network Information	
IP Address:	IP address of the TV-IP323PI
Subnet Mask:	Network range of IP address
Default Gateway:	The default route going from the TV-IP323PI
	subnet.
Primary DNS:	Primary DNS server address
Secondary DNS:	Secondary DNS server address

Logout


Logging out of the camera configuration page

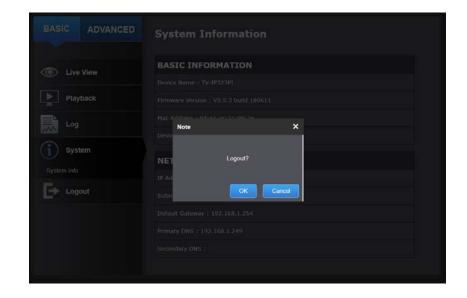

System Configuration

Device Settings

Setup your camera name and location for easy identification. This camera name will also be recognized by other network camera software as the name of this camera. OSD, On Screen Display, camera name is referring to this setting as well.

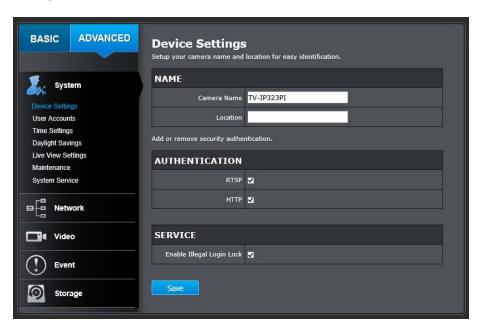


Names	
Camera Name:	Name of the camera. The camera name setup
	here can be discovered by other network camera
	software and OSD, On Screen Display. The default
	camera name is the model number: TV-IP323PI
Location:	Label where you installed this camera for reference


Authentic	Authentication	
RTSP:	TV-IP323PI's video stream can be accessed with	
	RTSP, Real Time Streaming Protocol. Only the	
	administrator and users can view this video stream	
	Un-checking this box will allow everyone access to this video	
	stream without authentication. Default: Checked.	
HTTP:	TV-IP323Pl's web management interface can be accessed with HTTP. Only the administrator and authorized users can access the web based management interface. Un-checking this box will allow everyone access to this without authentication. Default: Checked.	

Service	
Enable	TV-IP323PI is designed to lock out all access to its web
Illegal	interface if the password is entered incorrectly 6 consecutive
Login	times. Un-checking this box will disable the lockout feature.
Lock	Default: Checked.

User Accounts

You can setup up to 16 user accounts to access the camera's video stream with a web browser or real time video stream (RTSP). Only one administrator account can be setup to configure the TV-IP323PI and cannot be deleted.

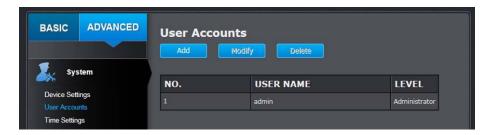

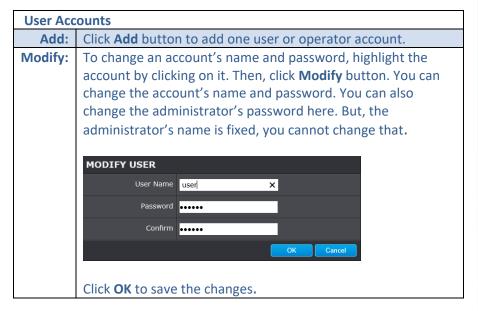

Time Settings

The accuracy of the system clock is important for scheduling and accurate logging. You can synchronize the system time with your computer, or automatically check the time accuracy with a network time server (NTP server).




Automatic	Automatic Update	
NTP	Specify a time server (NTP server) to synchronize with.	
Server:	(e.g. pool.ntp.org)	
NTP Port:	Specify the port for the NTP server specified above.	
Interval:	The time interval that the TV-IP323PI will synchronize the	
	time with NTP server. Default: 1440 minutes (24 hours)	

Manual Time Sync	
Device Time:	The system time of this camera.
Set Time:	Click the calendar icon and manually select the date.
	Check the Sync. with computer time to copy the time
	from your computer.

Click **Save** to save the changes

Daylight Savings

Setup daylight savings.

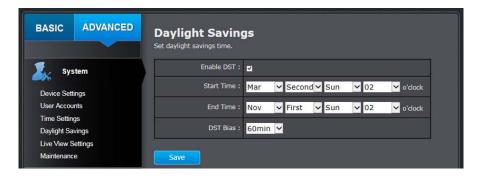


Automatic Update Enable DST: Check this box if your time zone has daylight savings. Start Time: Enter the date that daylight savings starts End Time: Enter the date that daylight savings ends DST Bias Enter how much time the daylight saving adjusted by

Click **Save** to save the changes

daylight savings.

Live View Settings

Setup the live view video quality, file size and file saving directories.

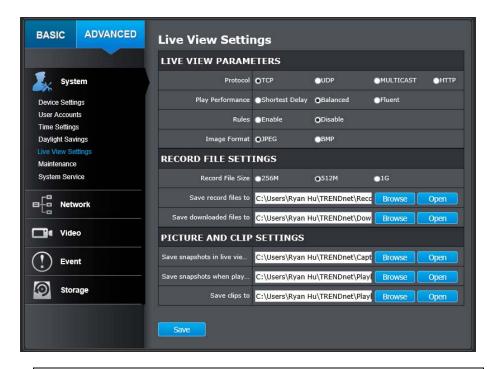

Live View Parameters	
Protocol:	Select the check box you would like the camera's live view feed to use.
Play Performance:	Select the quality of the feed from the predetermined selections. Shortest Delay for lowest quality but as close to live as possible, and Fluent for a bias toward quality.
Rules:	Select Enable if you would like to set and enforce rules for the live view.
Image Format:	Select the format you would like to save snapshots as.


Record File Settings	
Record file size:	This size of live view video recording. You can choose
	256MB, 512MB, or 1GB a file. Smaller file size is good
	for many short recordings.
Save record	Click Browse and then choose a new destination if you
files to:	want to save the file somewhere else.
Save	Click Browse and then choose a new destination if you
downloaded	want to save the file somewhere else.
files to:	

Picture and Clip Settings	
Save snapshots	Click Browse and then choose a new destination if you
in	want to save the file somewhere else.
live view to:	
Save snapshots	Click Browse and then choose a new destination if you
when playback	want to save the file somewhere else.
to:	
Save clips to:	Click Browse and then choose a new destination if you
	want to save the file somewhere else.

Click **Save** to save the changes

Maintenance

You can restart, load camera settings and upgrade the camera firmware on this page.

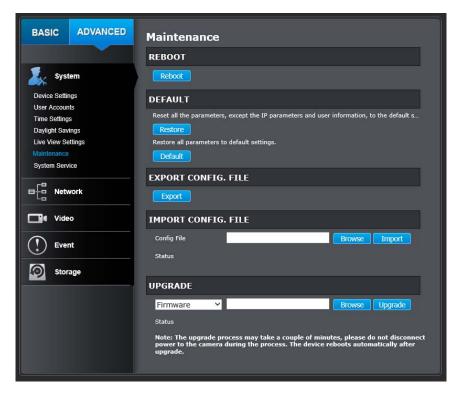

Reboot	
Reboot:	Click this button to reboot this camera.

Reset	
Reset:	Reset all camera parameters, except the IP parameters
	and user information.
Default:	Load complete factory default to the camera.

Export Config. File	
Export:	Click Export to download configuration file. The file will
	be downloaded to the Download folder by default.

Import Config. File	
Config File:	To load previously saved settings, click Browse to find the configuration file and then click Import .
Status:	Shows the status in loading configuration file.

Upgrade	
Firmware:	Click Browse to find the latest firmware and then click
	Upgrade.
Status:	Shows the status in firmware upgrade.


TRENDnet may periodically release firmware upgrades that might add features or fix problems associated with your camera. To find out if there is a firmware upgrade available for your device, please check your TRENDnet model and version using the link.

http://www.trendnet.com/downloads/

- 1. If a firmware upgrade is available, download the firmware to your computer.
- 2. Unzip the file to a folder on your computer.
- 3. Read the firmware upgrade instruction for specific version update information.
- 4. Log into the TV-IP323PI.
- 5. Getting to this Maintenance page to upgrade firmware.

System Service

You can enable or disable the IR Light and the Face Detection functions here.

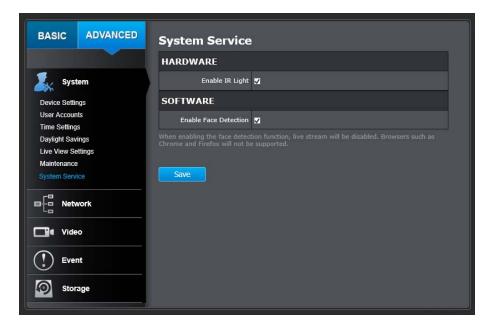


Hardware	
Enable IR	Select the check box to enable this feature.
Light:	Default: Checked

Software	
Enable Face	Select the check box to enable this feature.
Detection:	Default: Checked

Network Settings

TCP/IP

Setup your basic IPv4 and IPv6 network settings on this page.

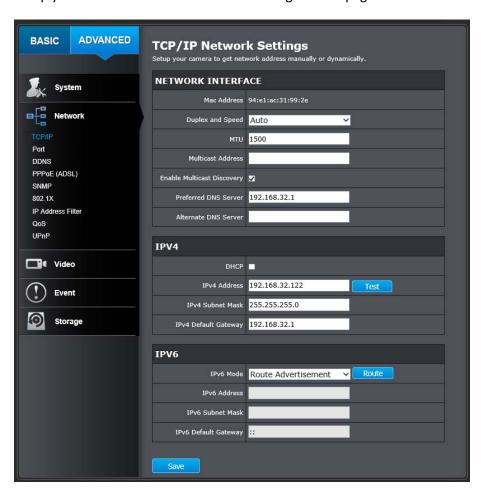

Network Interface	
MAC Address:	Click this button to reboot this camera.
Duplex and Speed:	Choose one of the Ethernet duplex and speed to match your network. Default: auto.
MTU:	Maximum transmission unit. The maximum field size in the Ethernet packet.
Multicast Address:	Sends a stream to the multicast group address and allows multiple clients to acquire the stream at the same time by requesting a copy from the multicast group address. **Note: Multicast function needs to be supported by your Local Area Network.
Enable Multicast Discovery:	Check this box if you would like to allow this device's multicast address to be discoverable.
Primary DNS:	Enter your first IPv4 or IPv6 DNS server address.
Secondary DNS:	Enter your second IPv4 or IPv6 DNS server address.
IPv4	
DHCP:	Check this box if the IP address is assigned by DHCP server.
IPv4 Address:	The IPv4 dynamic or static address.
IPv4 Subnet Mask:	Network range of the subnet.
Default Gateway:	The default route going further from TV-IP323PI IPv4 subnet.
IPv6	
IPv6 Mode:	Choose Manual, DHCP, or Route Advertisement. Click View Route Advertisement to find a route advertisement.
IPv6 Address:	IPv6 address of TV-IP323PI.
IPv6 Subnet Mask:	Length of network prefix.
Default Gateway:	The default route going further from TV-IP323PI IPv6 subnet.

Port

You can change the service port numbers of TV-IP323PI and enable/disable RTSP or HTTPS services.




Port Numbers	
HTTP Port:	The default web access port. You can change the port
	number. However, you cannot disable the web
	service. The default port number is 80.
RTSP Port:	The Real-Time Streaming Protocol port for video
	streaming. You can change the port number or
	disable the service by uncheck the box. The default
	port number is 554.
HTTPS Port:	The secured web service port. You can change the
	port number, or you can disable the service by
	uncheck the box. The default port number is 443.

Click **Save** to save the changes.

DDNS

Dynamic Domain Name Service, DDNS, allows you to find your camera from the Internet with an easy to remember domain name.

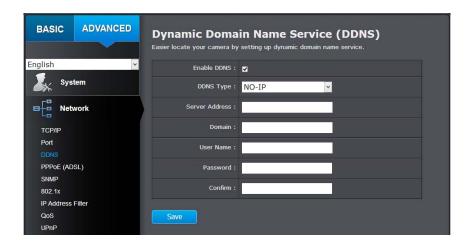

DDNS		
Enable DDNS:	Check this box to enable DDNS Service.	
DDNS Type: NO-IP IPServer DynDNS NO-IP HIDDNS	Select a DDNS service provider.	
Server Address:	Enter the DDNS server address.	
Domain:	Enter your registered domain/host name on selected DDNS service.	
User Name:	Enter the account name.	
Password:	Enter the password.	
Confirm:	Enter the password again.	

Click **Save** to save the changes

PPPoE

Setup PPPoE (ADSL) connection to connect your camera with your ISP, Internet Service Provider.




PPPoE (ADSL)	
Enable PPPoE:	Check this box to enable PPPoE connection.
Dynamic IP:	The IP address assigned by ISP
User Name:	Enter the account name.
Password:	Enter the password.
Confirm:	Enter the password again.

Click **Save** to save the changes

*Note: To view the camera remotely, please make sure the HTTP and RTSP ports are opened (port forwarded) on your network/router.

SNMP

SNMP Settings allows you to assign the contact details, location, community name and trap settings of SNMP. This is a networking management protocol used to monitor network-attached devices. SNMP allows messages (called protocol data units) to be sent to various parts of a network. Upon receiving these messages, SNMP compatible devices (called agents) return data stored in their Management Information Bases.

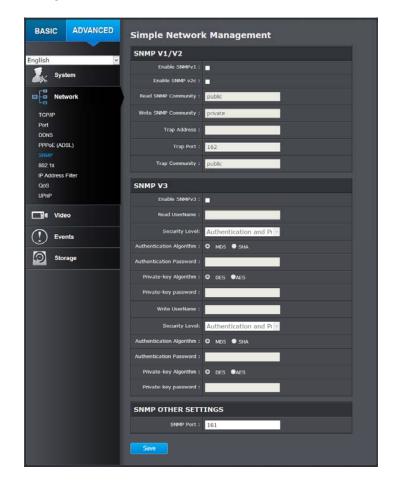

SNMP V1/V2		
Enable SNMPv1:	Check this box to enable SNMP v1 management.	
Enable SNMPv2c:	Check this box to enable SNMP v2c management.	
Read SNMP	Specify the password to access the SNMP	
Community:	community for read only access.	
Write SNMP	Specify the password for access to the SNMP	
Community:	community with read/write access.	
Trap Address:	Specify the IP address for the SNMP trap	
	community.	
Trap Port:	Specify the port number for the SNMP trap	
	community.	
Trap Community:	Specify the name of SNMP trap community.	

SNMP V3		
Enable SNMPv3:	Check this box to enable SNMP v3 management.	
Read User Name:	SNMP v3 member user name.	
Security Level:	Choose one of the security levels. Authentication and Privacy Authentication only Privacy only	
Authentication Algorithm:	Choose the authentication method to verify the source of information: MD5 or SHA.	
Authentication Password:	Specify the authentication password between 8 to 32 letters.	
Private-key Algorithm:	Choose the privacy key to encrypt SNMP messages: DES or AES.	
Private-key Password:	Specify the privacy key between 8 to 32 letters.	
Write User Name:	SNMP v3 manager user name.	

Security Level:	Choose one of the security levels. Authentication and Privacy Authentication only Privacy only	
Authentication Algorithm:	Choose the authentication method to verify the source of information: MD5 or SHA.	
Authentication Password:	Specify the authentication password between 8 to 32 letters.	
Private-key Algorithm:	Choose the privacy key to encrypt SNMP messages: DES or AES.	
Private-key Password:	Specify the privacy key between 8 to 32 letters.	


SNMP Other Settings	
SNMP Port:	SNMP service port number.

Click **Save** to save the changes

802.1X

TRENDnet User's Guide

Setup 802.1X for remote authentication service.

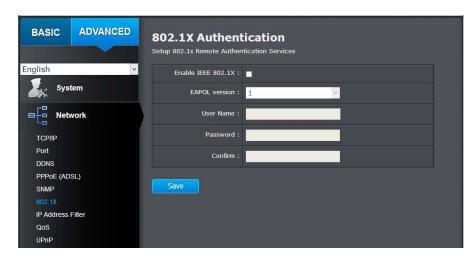

802.1X Authentication		
Enable IEEE	Check this box to enable 802.1X authentication	
802.1X:	service.	
EAPOL version:	Extensible Authentication Protocol (EAP) over LAN	
	(EAPoL). Choose version 1 or 2. This version number	
	has to match to your 802.1X service EAPOL version.	
User Name:	Enter the account name.	
Password:	Enter the password.	
Confirm:	Enter the password again.	

Click **Save** to save the changes

IP Address Filter

Set up a list of clients allow only the clients on the list to access this camera or to reject clients on the list from access this camera.




IP Address Filter		
Enable IP	Check this box to enable IP address filtering service.	
Address Filter:		
IP Address Filter	Choose Forbidden to ban the listed IP addresses or	
Type:	Allowed to allow listed host to access this camera.	
Add:	Click Add to add a user account	
Modify:	To modify an entry on the list, highlight the entry by	
	clicking on it. Then, click the Modify button.	
	Modify IP Address	
	IP Address 10.10.10.10 ×	
	10.10.10.10	
	OK Cancel	
	Enter the IP address then click OK	
Delete:	To delete an entry on the list, highlight the entry by	
	clicking on it. Then, click Delete	
Clear:	To clear all entries, click Clear	

Click **Save** to save the changes

Quality of Service (QoS)

Setup traffic prioritization tags the video packets to go through network switches and routers with assigned priority. You can set the Differentiated Services Code Point (DSCP) bits on outgoing data streams. The QoS capable network device will forward different data in different priorities. The meaning of the value is different in different DiffServ domains. Consult your network manager for the setup details.

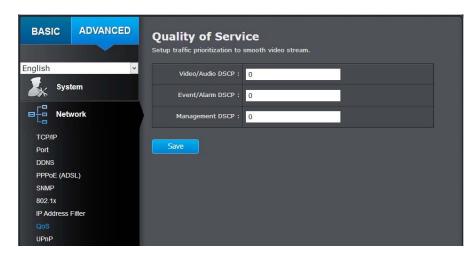


IP Address Filter	
Video/Audio	Enter Video/Audio DSCP. Default: 0.
DSCP:	
Event/Alarm	Enter Event/Alarm DSCP. Default: 0.
DSCP:	
Management	Enter Management DSCP. Default: 0.
DSCP:	

Click **Save** to save the changes

UPnP

Universal Plug-and-Play is a device discovery protocol set. It allows your camera to easily be found, for example, on a Windows operation system.

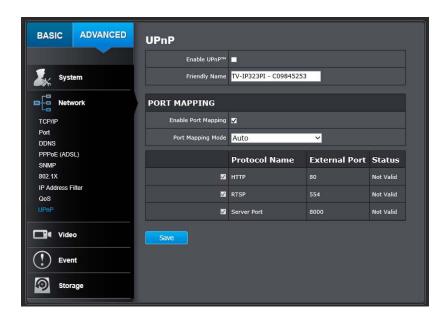

UPnP	
Enable UPnP:	Check this box to enable UPnP connection.
Friendly Name:	The name that will be appeared when searched.


Port Mapping		
Enable Port	Check this box to enable UPnP connection.	
Mapping:		
Port Mapping	Choose Manual or Auto port mapping.	
Mode:		
External Port:	Choose the port number for mapping.	

Click **Save** to save the changes

TRENDnet User's Guide TV-IP323PI

Video Settings

Video Format

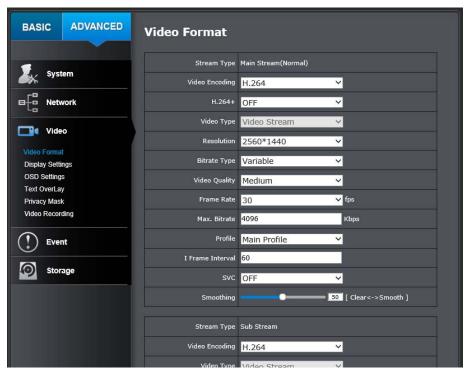

Video Encoding: H.264 H.265	Choose the video stream you want to modify. H.264 and H.265 videos are always streaming and can be configured separately.	
H.264+ / H.265+	Higher compression option	
Resolution:	Main Stream 1920*1080P 2304*1296 2560*1440	Second/Sub Stream 352*288 640*360

Bitrate Type:	Choose between variable bit rate or constant bit rate for video compression. The default is variable rate.
Video Quality:	Choose the video quality. The default is medium quality.
Frame Rate:	Choose the capturing frame rate. The default value is 30 frames per second. Reduce the frame rate to reduce the capture file size.
Max. Bitrate:	Choose the maximum video sampling bit rate. Default: 2048
I Frame Interval	An I Frame is a frame that records a complete picture. Frames between I frames, (P frame or B frame) only records the image differences between two frames. Choose the I Frame Interval here. The default is 60.

Click **Save** to save the changes


Sub stream can be used for lower resolution needed application, for example mobile app streaming or NVR streaming.

Third stream is used for Live view only, it has resolution limitation on Chrome, Firefox and Safari. Max resolution can be supported under Internet Explorer.


Note: When H.264+/H.265+ is enabled, Live view on Chrome or Firefox will be disabled due to browser limitation, you can continue to use Internet Explorer or Safari to view the camera otherwise disable the H.264+ and H.265+ option.

Display Settings


Adjust video image quality, lightness, and color settings here.

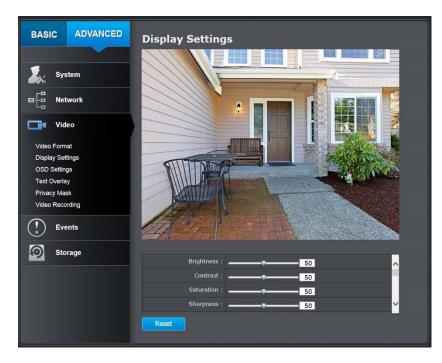



Brightness:	Use the slider or enter a number (0-100) to adjust the
	image brightness. Default: 50
Contrast:	Use the slider or enter a number (0-100) to adjust the
	image contrast. Default: 50
Saturation:	Use the slider or enter a number (0-100) to adjust the
	color saturation. The greater number means the color
	will be more saturated. Default: 50
Sharpness:	Use the slider or enter a number (0-100) to adjust the
	image sharpness. Default: 50

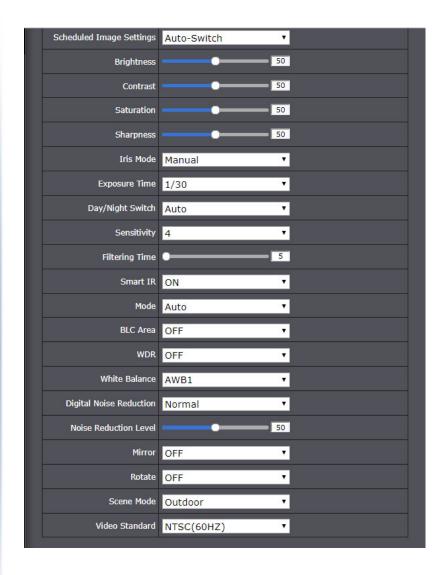

Light sensitivities	
Smart IR:	Smart IR can adjust the strength of infrared lights at night depending on the distance of an object to
	maintain the maximum IR light distance and while
	maintaining a clear picture when object is close by.
	Default: On.
Max. Exposure	Adjust this value for exposure time for
Time:	1/30 Each picture. Tou can choose a value
	1/120 Detween 1/3 Second to 1/100,000
	1/500 Second. The default value is 1/30 second
	1/750 exposure time for each picture.
	1/4000
	1/10000 1/100000
Video Standard:	This is the base frequency for the video refresh rate. It
	is recommended to set to the same frequency of your
	local video standard (NTSC: 60, PAL: 50). Default:
	60Hz.
Day/Night	Choose whether you want the
Switch:	Day camera to be set to the day mode
	Auto (color video) or night mode (IR
	Schedule enhanced black/white video). You
	can manually set it to day mode or
	night mode, adjust by lighting
	(Auto), or pre-define schedule.
	Auto:
	Sensitivity: The light sensor sensitivity.
	Switch Time: The time delayed to switch between
	modes. Longer switch time can prevent unnecessary
	mode flipping if an object is blocking the light source
	temporarily. Range: 5-120 seconds, default: 5
	seconds.

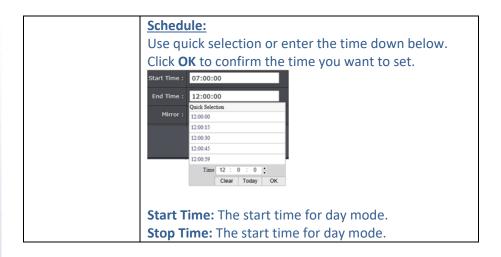

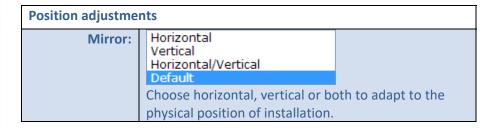


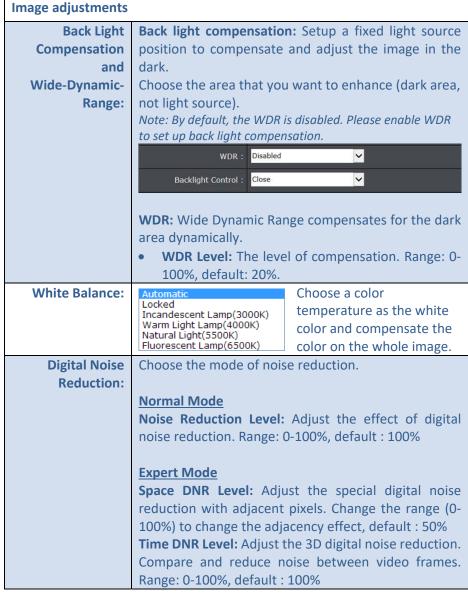

Click **Reset** to reset the display adjustments

On Screen Display Settings

Display the camera name and the time the video is shooting on the screen

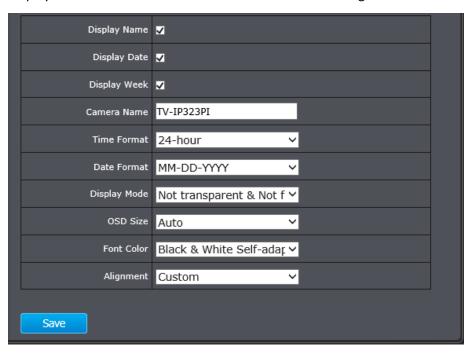


Display	Check this box to display the product name that was
Name:	setup in the device settings
Display Date:	Check this box to display system time.
Display Week:	Check this box to display time of the week.
Time Format:	Select 12 or 24-hour time format.
Date Format:	Select the date format
Display Mode:	Choose how the text will show on the screen.
OSD Size:	Select the text size from 16 to 64 or adjusted by
	screen size automatically.

Move the red box to position the text. Click **Save** to save the changes.

Text Overlay

Display extra information on the screen over the image.

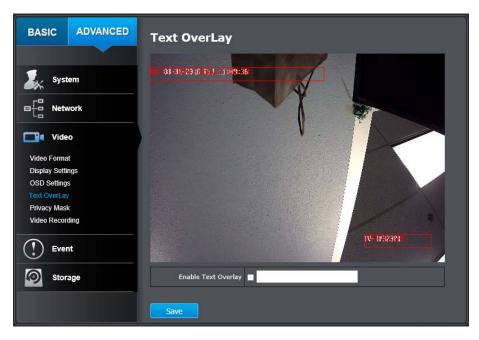


Check Box:	Check this box to enable text overlay.
Text Field:	Enter the text you want to display. You can enter your
	local language if you want. The text field allows
	maximum 44 English letters or 20 non-English
	characters.

Move the red box to position the text. Click **Save** to save the changes

Privacy Mask


Create a masking area to keep your privacy. You can create up to four independent masking areas by clicking and dragging on the screen.

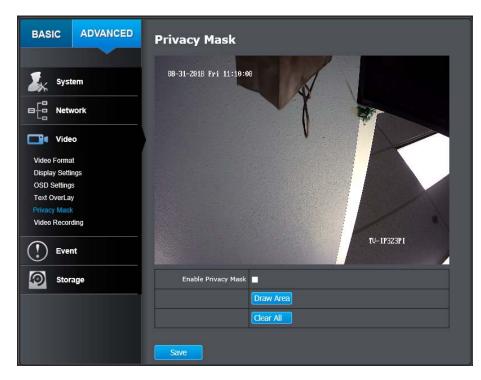

Enable Privacy Mask:	Check this box to enable privacy masking.
Stop Drawing:	Click this button to stop drawing.
Clear All:	Click this button to clear all the masking areas.


Click **Save** to save the changes

Video Recording

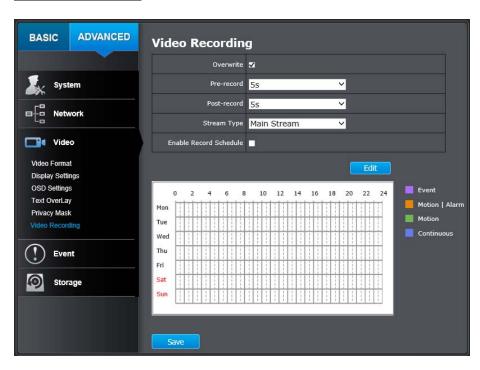

Overwrite:	Select the check box to allow older recordings to be automatically overwritten.
Pre-record:	Recording time before trigger event.
Post-record:	Recording time after trigger event.
Stream Type:	Specify to record from the main stream or sub
	stream.
Enable Record	Check this box and then click Save to enable video
Schedule:	recording.


Click **Save** to save the changes

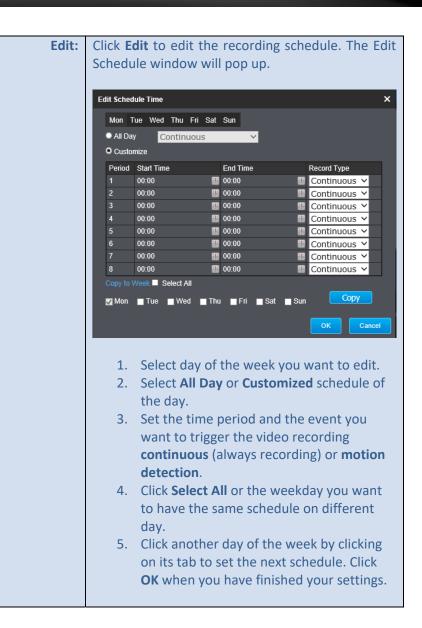


Events

Motion Detection


Set up how the motion detection event will be triggered and what actions will be triggered.

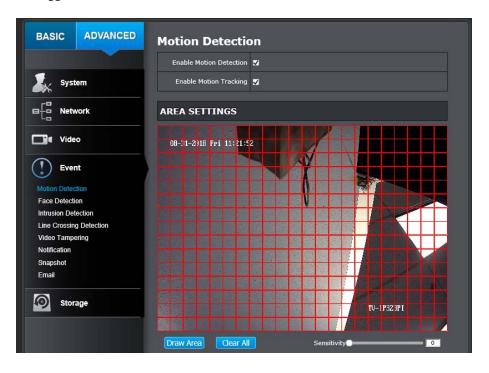

Enable Motion Detection:	Check this box to enable motion detection. Click Save to save the choice.
Enable Motion Tracking:	Check this box to enable motion tracking. Motion tracking is a dynamic display that shows the current status of motion detection. The motion tracking is displayed with grids in green. The grid area represents the camera motion is happening. Click Save to save the choices.
Draw Area:	Click Draw Area button to start drawing. Click and drag on the area you want to set up the motion detection. You can draw up to 8 different areas. Click Stop Drawing to stop drawing motion detection areas. The red grids represent the motion detection area.
Sensitivity:	Move the slider to adjust detection sensitivity.
Clear All:	Click this button to clear all the set up areas.

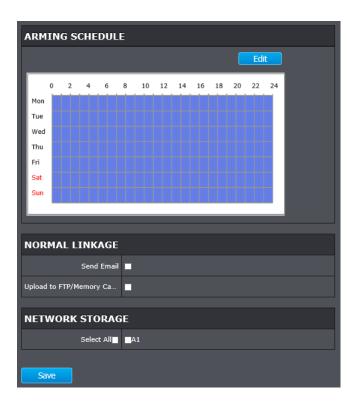


Normal Linkage / Network Storage	
Send Email:	Check this box to send an e-mail notification when
	motion is detected.
Upload to	Check this box to send snapshots to an FTP server
FTP/Memory	or the installed SD card when motion is detected.
Card:	
Network	You may select your configured network storage
Storage:	drives can be found here.

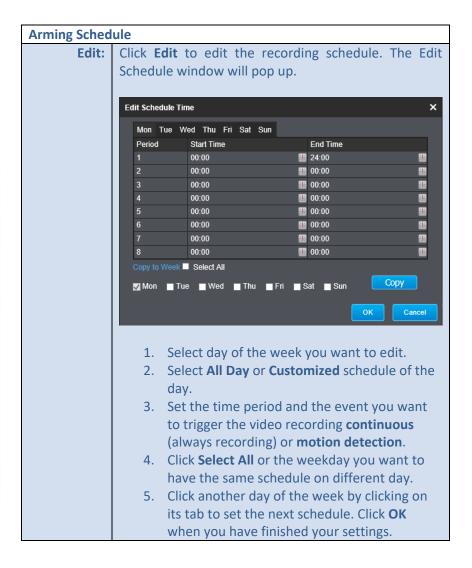


Click **Save** to save the changes


Face Detection

Set up how the facial detection event will be triggered and what actions will be triggered.

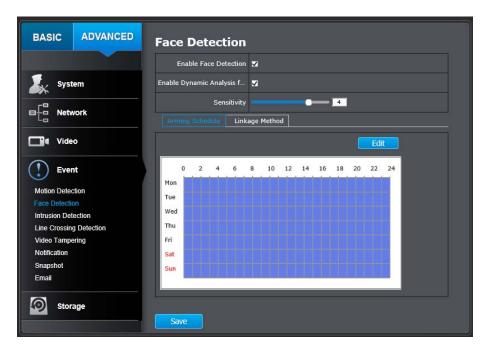

Face Detection	
Enable Face	Check this box to enable the face detection feature.
Detection:	
Enable Dynamic	Check this box to enable the dynamic learning of the
Analysis for	face detection of this camera's video analysis.
Facial Detection:	
Sensitivity:	Move the slider to adjust detection sensitivity.

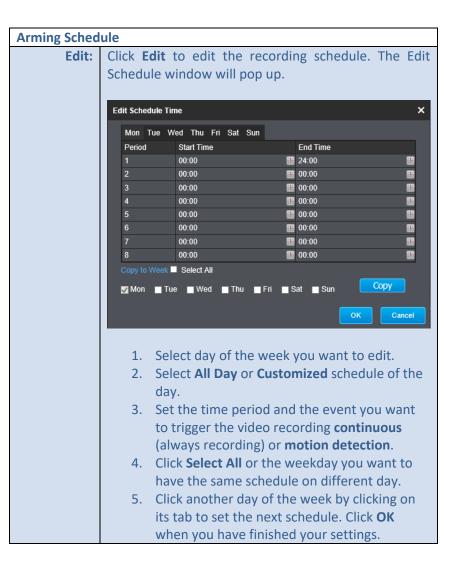

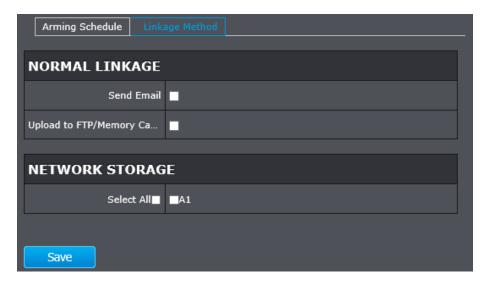


Normal Linkage / Network Storage	
Send Email:	Check this box to send an e-mail notification when
	motion is detected.
Upload to	Check this box to send snapshots to an FTP server
FTP/Memory	or the installed SD card when motion is detected.
Card:	
Network	You may select your configured network storage
Storage:	drives can be found here.


Click **Save** to save the changes


Intrusion Detection

Set up how the intrusion detection event will be triggered and what actions will be triggered.

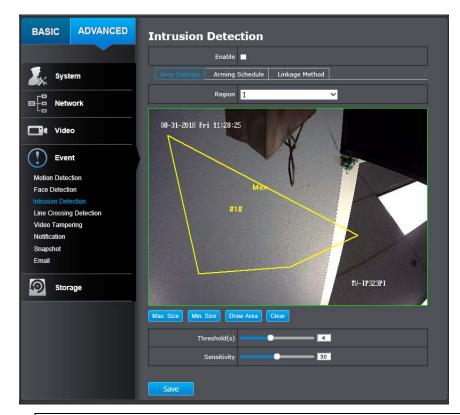


Intrusion Detection Area Settings	
Enable:	Check this box to enable the intrusion detection
	feature.
Max. Size &	Click this button to set the region's
Min. Size:	maximum/minimum size.
Draw Area:	Click this button to custom draw a region.
Threshold:	Move the slider to adjust detection threshold.
Sensitivity:	Move the slider to adjust detection sensitivity.

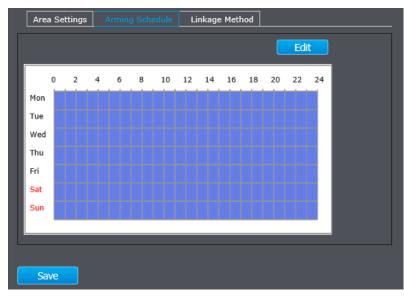

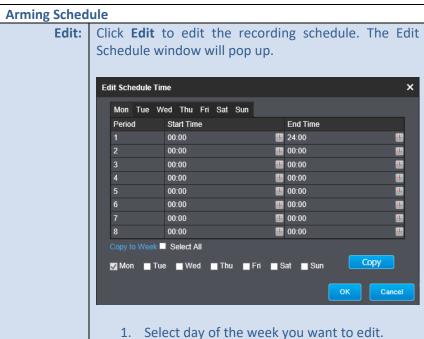

- 2. Select **All Day** or **Customized** schedule of the day.
- 3. Set the time period and the event you want to trigger the video recording **continuous** (always recording) or **motion detection**.
- 4. Click **Select All** or the weekday you want to have the same schedule on different day.
- 5. Click another day of the week by clicking on its tab to set the next schedule. Click **OK** when you have finished your settings.

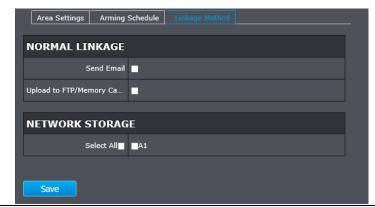


Normal Linkage / Network Storage	
Send Email:	Check this box to send an e-mail notification when
	motion is detected.
Upload to	Check this box to send snapshots to an FTP server
FTP/Memory	or the installed SD card when motion is detected.
Card:	
Network	You may select your configured network storage
Storage:	drives can be found here.


Click **Save** to save the changes


Line Crossing Detection

Set up how the Line Crossing detection event will be triggered and what actions will be triggered.

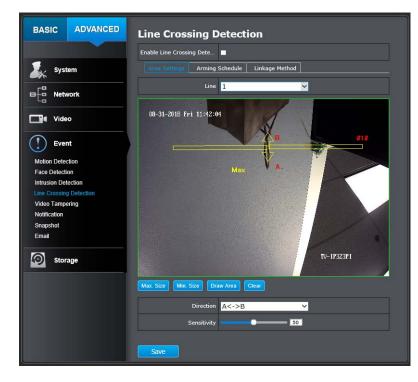


Line Crossing Detection Area Settings	
Enable:	Check this box to enable the Line Crossing detection
	feature.
Max. Size &	Click this button to set the region's
Min. Size:	maximum/minimum size.
Draw Area:	Click this button to custom draw a region.
Direction:	Select the direction of which the event will trigger.
Sensitivity:	Move the slider to adjust detection sensitivity.

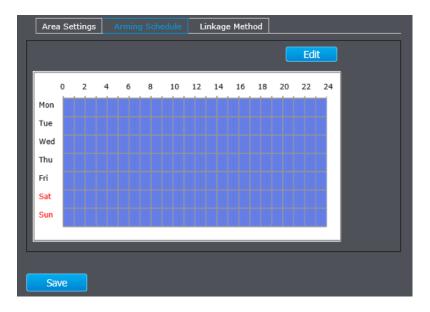

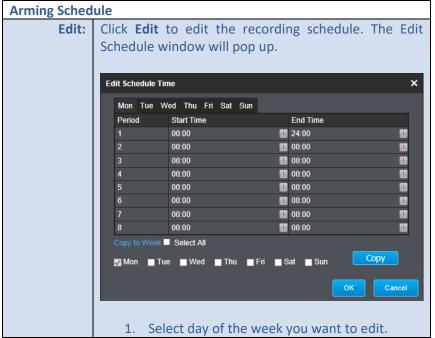

- 2. Select **All Day** or **Customized** schedule of the day.
- 3. Set the time period and the event you want to trigger the video recording **continuous** (always recording) or **motion detection**.
- 4. Click **Select All** or the weekday you want to have the same schedule on different day.
- Click another day of the week by clicking on its tab to set the next schedule. Click **OK** when you have finished your settings.

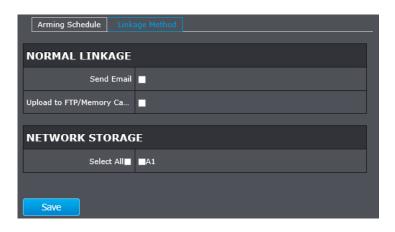


Normal Linkage / Network Storage	
Send Email:	Check this box to send an e-mail notification when motion is detected.
Upload to FTP/Memory Card:	Check this box to send snapshots to an FTP server or the installed SD card when motion is detected.
Network Storage:	You may select your configured network storage drives can be found here.


Click **Save** to save the changes


Video Tampering

This is to detect if the camera has been tampered with and surveillance is compromised. You can set up tamper proof notifications to alert the system manager to check the camera.

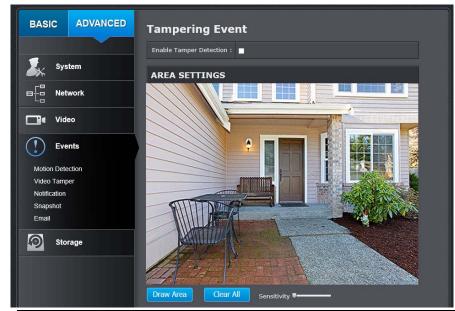

Enable	Check this box to enable tamper detection. Click Save
Tamper	to save the settings.
Detection:	
Draw Area:	Click Draw Area button to start drawing. Click and drag
	on the area you want to set up the tamper detection.
	You can setup only one area for tamper detection.
	Click Stop Drawing to stop drawing motion detection
	areas. The gray block represents the detection area.
Sensitivity:	Move the slider to adjust detection sensitivity.
Clear All:	Click this button to clear all the set up areas.

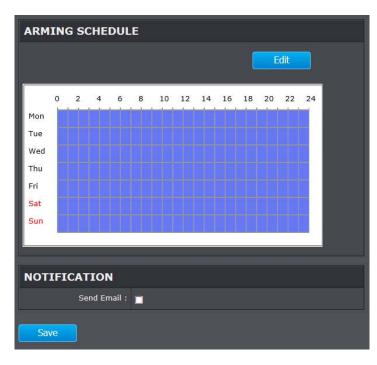

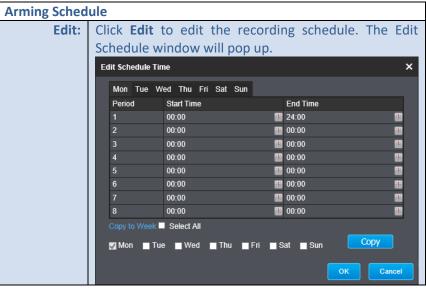


- 1. Select day of the week you want to edit.
- 2. Select **All Day** or **Customized** schedule of the day.
- 3. Set the time period and the event you want to trigger the video recording **continuous** (always recording) or **motion detection**.
- 4. Click **Select All** or the weekday you want to have the same schedule on different day.
- 5. Click another day of the week by clicking on its tab to set the next schedule. Click **OK** when you have finished your settings.

Notification	
Send Email:	Check this box to send an e-mail notification when
	motion is detected.

Click **Save** to save the changes

Notification

Provide notifications for other system events, set up your notifications here.

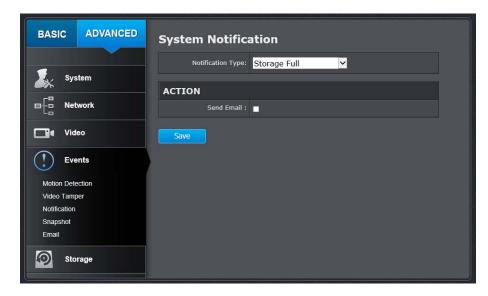


Notification	
	First, choose the exception type, and then choose
Type:	the corresponding action.
Send Email:	Check this box to send an e-mail notification when
	motion is detected.

Click **Save** to save the changes

Snapshot

You can set up your camera to continuously taking snapshots or taking snapshots only when events happening.

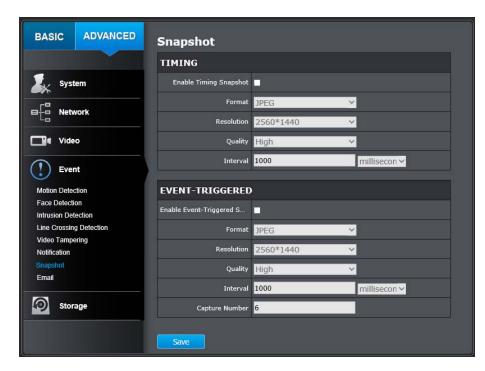


Timing	
Enable Timing	Check this box to take snapshots continuously.
Snapshot:	
Format:	Save snapshots in JPEG format
Resolution:	Uses the same resolution set in Video Format for the
	snapshot resolution.
Quality:	Choose a compression quality for snapshots.
Interval:	State the time interval between snapshots. The default
	interval is 10 seconds.

Event triggered	
Enable Event-	Check this box to take snapshots when an event is
Triggered	occurred.
Snapshot:	
Format:	Save snapshots in JPEG format
Resolution:	Uses the same resolution set in Video Format for the
	snapshot resolution.
Quality:	Choose a compression quality for snapshot.
Interval:	State the time interval between this series of
	snapshots. The default interval is 1 second.
Capture	State how many snapshots you want to take in a single
Number:	triggered event. Default: 3 pictures.

Click **Save** to save the changes

Email

Set up email accounts for notifications.

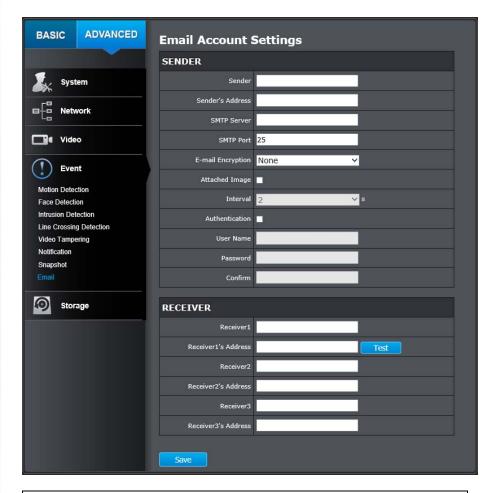

Sender	
Sender:	Enter the name to be appeared as the email sender.
Sender's	Enter sender's email address.
Address:	

SMTP Server:	Simple Mail Transportation Protocol Server address, the outgoing email server address. It may be has address as your incoming email server, maybe not. Please ask your email service provider for detail.
SMTP Port:	Service port number for outgoing email.*
E-mail	If your service provider requires SSL or TLS
Encryption:	encryption, please specify here.
Attach	Check Attach Image if you want to send a snapshot
Image/Interval:	image with the email notification and select the
	interval of snapshots in seconds.
Authentication:	Check this box if your server requires a password in
	order to send email. Most email servers require
	authentication when sending an email.
User name:	Enter the user name of outgoing email account
Password:	Enter the password
Confirm:	Enter the password again to confirm that the
	password was entered correctly.

Click **Save** to save the changes

Receiver	
Receiver 1:	The first receiver's name.
Receiver 1's	The first receiver's email address.
Address:	
Receiver 2:	The second receiver's name.
Receiver 2's	The second receiver's email address.
Address:	
Receiver 3:	The third receiver's name.
Receiver 3's	The third receiver's email address.
Address:	

Click **Save** to save the changes

^{*}Note: Many ISPs does not allow service port 25 going through their network. Other popular ports are 587 and 465. Please consult your email service provider and ISP for detail.


Storage

Network Storage

Network Storage must be setup before it can be managed. For storage management, please refer to the next section.

The TV-IP323PI supports two formats of network storage file systems: NFS and CIFS. NFS, Network File System, is natively supported by Linux computers and most NAS, Network Attached Storage. CIFS, Common Internet File System, is natively supported by Windows® systems and now is generally supported by Linux. (OS X® file sharing is not standard SMB and not compatible as a network storage disk here.)

You can add up to 8 network storages for your camera. The recordings will subsequently be stored in these spaces. Save video from the first storage and then the next when the first one is full. Click on the entry to change the settings and click Save to save the settings.

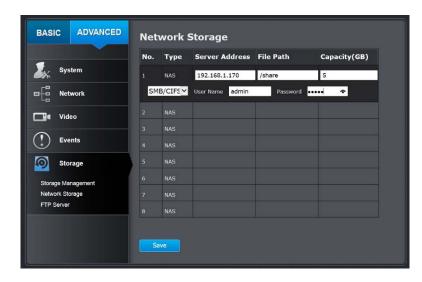

No:	The sequential number of the network storage.
Туре:	The type of storage.
Server	Enter the IP address of your network storage.
Address:	
File Path:	Enter the shared folder as file path for network storage. You
	can create a folder under the shared folder and make it a
	network volume here. Just create the folder and enter the
	correct path name here.
Capacity:	Enter the size of the disk space you want to assign for this
	storage. The minimum disk space requirement is 8GB. If you
	do not want to limit the size and use the full physical disk
	space, put number 0 in this field.
File System:	Choose between NFS or CIFS for file system. If you assign the
	network storage on a Windows® computer, set it to CIFS.
User Name:	Enter the user name if the network storage requires user
	name and password. Enter any non-blank letters if no
	authentication is required.
Password:	Enter the password to access the network storage. Enter any
	non-blank letters if no authentication is required.

Click **Save** to save the changes. The camera may reboot to make the network storage available. Go to the next section to format and manage your network storage.

Tip: To create a network storage on your Windows® based system, create a



Users

shared folder and then test your set up with another computer. Enter the IP address of the computer here and enter the shared folder name with a leading forward slash. For example, if you have a shared folder named "SMB", enter "/SMB" in the File Path.

Storage Management

Network Storage must be setup before it can be managed. To setup storage, please refer to the previous section.



Format:	Select a network storage volume and then click Format to format your network storage. This action will format the network volume (shared folder) for video recording. Placeholder files (formatting files) will be created to make sure disk allocation is appropriate and the file searching is optimized. The volume format is a proprietary user space storage format. Meaning that you visit the shared folder and see some structured files. Please do not modify these files manually. Modifying these files may cause recording and playback problems. Access your recording and system log via the web management user interface to download the recording and snapshots.	
Capacity:	The total capacity this network storage can use.	
Free Space:	The free space left for video recording, snapshot and log.	
Status:	The connection status to the network storage.	
Property:	This network storage is read only or can be read and write.	
Progress:	The progress of ongoing task.	
	Note: The formatting progress depends on the size of the storage	
	and the network bandwidth. It takes a while if you are formatting	
	a big volume or the network connection is not stable.	

FTP Server



Enable Snapshot to FTP:	Check this box if you want to store snapshots on the FTP.	
Server Address:	Enter the FTP server IP address.	
Port:	Enter the service port number of the FTP server.	
User	Check Anonymous if the FTP server does not	
Name/Anonymous:	require authentication. Enter the User Name if the	
	FTP server requires authentication.	
Password:	Enter the password of the FTP account.	
Confirm:	Enter the password again to make sure the	
	password was entered correctly.	
Directory Structure:	When saving snapshots on an FTP server, they can	
	be saved in a single place or organized with	
	meaningful directory names.	
	Save in root directory: You can choose to store	
	all files in the same folder of FTP login.	
	Save in directory: Structure your folders with	
	camera name or IP address.	
Directory:	Use Camera Name: Use the camera name to	
	organize the saved files.	
	Use Camera IP: Use the camera IP address to	
	organize the saved files.	

Click **Save** to save the changes

Regulations

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

RoHS

This product is RoHS compliant.



Europe – EU Declaration of Conformity

This device complies with the essential requirements of the Directive 2004/108/EC and 2006/95/EC. The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the Directive 2004/108/EC and 2006/95/EC:

Safety /EMC

EN 55022:2010 + AC: 2011 Class A

EN 61000-3-2: 2006 + A1: 2009 + A2: 2009

EN 61000-3-3: 2008

EN 50130-4: 2011 + A1: 2014

Safety /EMC

RoHS Directive 2011/65/EU

WEEE Directive 2012/19/EU | REACH Regulation (EC) No.

1907/2006 | Low Voltage Directive 2014/35/EU

Česky [Czech]	TRENDnet tímto prohlašuje, že tento TV-IP323PI je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2004/108/ES a 2006/95/ES.
Dansk [Danish]	Undertegnede TRENDnet erklærer herved, at følgende udstyr TV-IP323PI overholder de væsentlige krav og øvrige relevante krav i direktiv 2004/108/EF og 2006/95/EF.
Deutsch [German]	Hiermit erklärt TRENDnet, dass sich das Gerät TV-IP323PI in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2004/108/EG und 2006/95/EG befindet.
Eesti [Estonian]	Käesolevaga kinnitab TRENDnet seadme TV-IP323PI vastavust direktiivi 2004/108/EÜ ja 2006/95/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
English	Hereby, TRENDnet, declares that this TV-IP323PI is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC and 2006/95/EC.
Español [Spanish]	Por medio de la presente TRENDnet declara que el TV-IP323PI cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2004/108/CE y 2006/95/CE.

Ελληνική [Greek]	ME THN ΠΑΡΟΥΣΑΤRENDnet ΔΗΛΩΝΕΙ ΟΤΙ TV-IP323PI
	ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ
	ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2004/108/ΕΚ, 2006/95/ΕΚ και.
Français [French]	Par la présente TRENDnet déclare que l'appareil TV-IP323PI est
	conforme aux exigences essentielles et aux autres dispositions
	pertinentes de la directive 2004/108/CE, 2006/95/CE et.
Italiano[Italian]	Con la presente TRENDnet dichiara che questo TV-IP323PI è
	conforme ai requisiti essenziali ed alle altre disposizioni pertinenti
	stabilite dalla direttiva 2004/108/CE e 2006/95/CE.
Latviski [Latvian]	AršoTRENDnetdeklarē, ka TV-IP323PI atbilstDirektīvas 2004/108/EK
	un 2006/95/EK būtiskajāmprasībām un citiemar to
	saistītajiemnoteikumiem.
Lietuvių	Šiuo TRENDnet deklaruoja, kad šis TV-IP323PI atitinka esminius
[Lithuanian]	reikalavimus ir kitas 2004/108/EB ir 2006/95/EB Direktyvos
	nuostatas.
Nederlands	Hierbij verklaart TRENDnet dat het toestel TV-IP323PI in
[Dutch]	overeenstemming is met de essentiële eisen en de andere relevante
	bepalingen van richtlijn 2004/108/EG en 2006/95/EG.
Malti [Maltese]	Hawnhekk, TRENDnet, jiddikjara li dan TV-IP323PI jikkonforma mal-
	ħtiġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-
	Dirrettiva 2004/108/KE u 2006/95/KE.
Magyar	Alulírott, TRENDnet nyilatkozom, hogy a TV-IP323PI megfelel a
[Hungarian]	vonatkozó alapvető követelményeknek és az 2004/108/EK és a
	2006/95/EK irányelv egyéb előírásainak.
Polski [Polish]	Niniejszym TRENDnet oświadcza, że TV-IP323PI jest zgodny z
	zasadniczymi wymogami oraz pozostałymi stosownymi
	postanowieniami Dyrektywy 2004/108/WE i 2006/95/.
Português	TRENDnet declara que este TV-IP323PI está conforme com os
[Portuguese]	requisitos essenciais e outras disposições da Directiva2004/108/CE e
	2006/95/CE.
Slovensko	TRENDnet izjavlja, da je ta TV-IP323PI v skladu z bistvenimi zahtevami
[Slovenian]	in ostalimi relevantnimi določili direktive2004/108/ES in 2006/95/ES.
Slovensky	TRENDnettýmtovyhlasuje, že TV-IP323PI spĺňazákladnépožiadavky a
[Slovak]	všetkypríslušnéustanoveniaSmernice 2004/108/ES a 2006/95/ES.
Suomi [Finnish]	TRENDnet vakuuttaa täten että TV-IP323PI tyyppinen laite on
	direktiivin2004/108/EY ja 2006/95/EY oleellisten vaatimusten ja sitä
	koskevien direktiivin muiden ehtojen mukainen.
Svenska	Härmed intygar TRENDnet att denna TV-IP323PI står I
[Swedish]	överensstämmelse med de väsentliga egenskapskrav och övriga
1	
	relevanta bestämmelser som framgår av direktiv 2004/108/EG och

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TV-IP323PI - 3 Years Warranty

If a product does not operate as warranted during the applicable warranty period, TRENDnet shall reserve the right, at its expense, to repair or replace the defective product or part and deliver an equivalent product or part to the customer. The repair/replacement unit's warranty continues from the original date of purchase. All products that are replaced become the property of TRENDnet. Replacement products may be new or reconditioned. TRENDnet does not issue refunds or credit. Please contact the point-of purchase for their return policies.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet within the applicable warranty period and providing a copy of the dated proof of the purchase. Upon proper submission of required documentation a Return Material Authorization (RMA) number will be issued. An RMA number is required in order to initiate warranty service support for all TRENDnet products. Products that are sent to TRENDnet for RMA service must have the RMA number marked on the outside of return packages and sent to TRENDnet prepaid, insured and packaged appropriately for safe shipment. Customers shipping from outside of the USA and Canada are responsible for return shipping fees. Customers shipping from outside of the USA are responsible for custom charges, including but not limited to, duty, tax, and other fees.

WARRANTIES EXCLUSIVE: IF THE TRENDNET PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDNET'S OPTION, REPAIR OR REPLACE. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

TRENDNET NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDNET'S PRODUCTS.

TRENDNET SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLECT, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDNET ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATE, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDNET'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

Some TRENDnet products include software code written by third party developers. These codes are subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL").

Go to http://www.trendnet.com/gpl or http://www.trendnet.com Download section and look for the desired TRENDnet product to access to the GPL Code or LGPL Code. These codes are distributed WITHOUT WARRANTY and are subject to the copyrights of the developers. TRENDnet does not provide technical support for these codes. Please go to http://www.gnu.org/licenses/gpl.txt or http://www.gnu.org/licenses/lgpl.txt for specific terms of each license.

9.11.18 TV-IP323PI 1.0

TRENDNET

Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at http://www.trendnet.com/register

TRENDnet 20675 Manhattan Place Torrance, CA 90501. USA

Copyright ©2018. All Rights Reserved. TRENDnet.