



TX64

User Guide

Revision history—90002348

Revision	Date	Description
A	November 2019	Initial release of DigiTX64 firmware version 19.11.
B	February 2020	Release of DigiTX64 firmware version 20.2: <ul style="list-style-type: none">■ Digi SureLink™ support (formerly known as active recovery).<ul style="list-style-type: none">• Enabled by default on preconfigured WANs and WWANs.■ Role-based user access.<ul style="list-style-type: none">• Allow shell option added to authentication.• Read-only access option added to user configuration.

Trademarks and copyright

Digi, Digi International, and the Digi logo are trademarks or registered trademarks in the United States and other countries worldwide. All other trademarks mentioned in this document are the property of their respective owners.

© 2020 Digi International Inc. All rights reserved.

Disclaimers

Information in this document is subject to change without notice and does not represent a commitment on the part of Digi International. Digi provides this document “as is,” without warranty of any kind, expressed or implied, including, but not limited to, the implied warranties of fitness or merchantability for a particular purpose. Digi may make improvements and/or changes in this manual or in the product(s) and/or the program(s) described in this manual at any time.

Warranty

To view product warranty information, go to the following website:

www.digi.com/howtobuy/terms

Customer support

Gather support information: Before contacting Digi technical support for help, gather the following information:

- ✓ Product name and model
- ✓ Product serial number (s)
- ✓ Firmware version
- ✓ Operating system/browser (if applicable)
- ✓ Logs (from time of reported issue)
- ✓ Trace (if possible)

- ✔ Description of issue
- ✔ Steps to reproduce

Contact Digi technical support: Digi offers multiple technical support plans and service packages. Contact us at +1 952.912.3444 or visit us at www.digi.com/support.

Feedback

To provide feedback on this document, email your comments to

techcomm@digi.com

Include the document title and part number (TX64 User Guide, 90002348 B) in the subject line of your email.

Contents

Revision history—90002348	2
---------------------------------	---

What's new in Digi TX64 version 20.2

Digi TX64 Quick start

Quick start using the Digi Remote Manager mobile app	14
Step 1: What's in the box	14
Step 2: Gather accessories	15
Step 3: Connect	16
Step 4: Power up	16
Step 5: Configure	16

Digi TX64 hardware reference

TX64 key features	17
TX64 hardware specifications	17
TX64 front view	17
TX64 LEDs	18
Power	18
GNSS Service	18
Wi-Fi1 Service	18
Wi-Fi2 Service	18
WWAN1/WWAN2 Signal	18
WWAN1/WWAN2 Service	18
Ethernet 1-4 Link and Activity (on rear panel)	19
Power sensor and button behavior	19
TX64 back view	19
Digi TX64 serial connector pinout	20

Hardware setup

Install SIM cards	22
Tips for improving cellular signal strength	22
Connect data cables	22
Connect antennas	22
Mount the TX64 to a mounting surface	23
Connect power	23
Mount and ground chassis	24
TX64 electrical rating	24

TX64 power connector	25
----------------------------	----

Configuration and management

Review TX64 default settings	27
Local WebUI	27
Digi Remote Manager	27
Default interface configuration	27
Other default configuration settings	29
Reset default password for the default admin user	30
Configuration methods	31
Using Digi Remote Manager	32
Access Digi Remote Manager	32
Using the web interface	32
Log out of the web interface	34
Using the command line	35
Access the command line interface	35
Log in to the command line interface	35
Exit the command line interface	36

Interfaces

Wide Area Networks (WANs)	38
Wide Area Networks (WANs) and Wireless Wide Area Networks (WWANs)	39
Configure WAN/WWAN priority and default route metrics	39
WAN/WWAN failover	42
Configure SureLink active recovery to detect WAN/WWAN failures	43
Configure the device to reboot when a failure is detected	50
Disable SureLink	56
Example: Use a ping test for WAN failover from Ethernet to cellular	60
Using Ethernet devices in a WAN	64
Using cellular modems in a Wireless WAN (WWAN)	64
Configure a Wide Area Network (WAN)	80
Configure a Wireless Wide Area Network (WWAN)	87
Show WAN and WWAN status and statistics	96
Delete a WAN or WWAN.	98
Local Area Networks (LANs)	100
About Local Area Networks (LANs)	101
Configure a LAN	101
Example: Configure two LANs	108
Show LAN status and statistics	117
Delete a LAN	118
DHCP servers	119
Create a Virtual LAN (VLAN) route	136
Bridging	140
Edit the preconfigured LAN1 bridge	141
Configure a bridge	144

Serial port

Configure the serial port	149
Show serial status and statistics	153

Wi-Fi

Wi-Fi configuration	155
Default Wi-Fi configuration	155
Configure the Wi-Fi module channel	156
Configure the Wi-Fi module band and protocol	158
Configure a Wi-Fi access point with no security	160
Configure a Wi-Fi access point with personal security	166
Configure a Wi-Fi access point with enterprise security	172
Show Wi-Fi access point status and statistics	179
Configure a Wi-Fi client and add client networks	180
Show Wi-Fi client status and statistics	187

Hotspot

Hotspot authentication modes	190
Hotspot DHCP server	191
Hotspot security	191
Hotspot configuration	192
Enable hotspot using the default configuration	193
Change the default hotspot SSID	198
Change the default hotspot IP address and subnet	200
Change the default hotspot bandwidth limits	203
Add an Ethernet port to the default hotspot	205
Create a new hotspot	208
Configure the hotspot to use local shared password authentication	221
Configure the hotspot to use RADIUS shared password authentication	223
Configure the hotspot to use RADIUS users authentication	227
Configure the hotspot to use HotspotSystem authentication	231
Show hotspot status and statistics	234
Customize the hotspot login page	236
Edit sample hotspot HTML pages	237
Upload custom hotspot HTML pages	238
Restore hotspot default sample pages	240
Hotspot RADIUS attributes	241

Routing

IP routing	243
Configure a static route	244
Delete a static route	247
Policy-based routing	249
Configure a routing policy	250
Example: Dual WAN policy-based routing	258
Example: Route traffic to a specific WAN interface based on the client MAC address	261
Routing services	266
Configure routing services	267
Show the routing table	269
Dynamic DNS	271
Configure dynamic DNS	271
Virtual Router Redundancy Protocol (VRRP)	277
Configure VRRP	277
Show VRRP status and statistics	281

Virtual Private Networks (VPN)

IPsec	283
IPsec data protection	283
IPsec modes	283
Internet Key Exchange (IKE) settings	283
Authentication	284
Configure an IPsec tunnel	284
Configure IPsec failover	306
Configure SureLink active recovery for IPsec	307
Show IPsec status and statistics	314
Configure a Simple Certificate Enrollment Protocol client	315
Example: SCEP client configuration with Fortinet SCEP server	320
OpenVPN	325
Configure an OpenVPN server	326
Configure an OpenVPN Authentication Group and User	335
Configure an OpenVPN client by using an .ovpn file	340
Configure an OpenVPN client without using an .ovpn file	343
Configure active recovery for OpenVPN	348
Show OpenVPN server status and statistics	355
Show OpenVPN client status and statistics	356
Generic Routing Encapsulation (GRE)	357
Configuring a GRE tunnel	357
Show GRE tunnels	363
Example: GRE tunnel over an IPsec tunnel	364

Services

Allow remote access for web administration and SSH	382
Configure the web administration service	386
Configure SSH access	394
Use SSH with key authentication	401
Generating SSH key pairs	401
Configure telnet access	404
Configure DNS	409
Simple Network Management Protocol (SNMP)	416
SNMP Security	416
Configure Simple Network Management Protocol (SNMP)	416
Download MIBs	421
Location information	422
Configure the location server	423
Enable or disable the internal GNSS module	427
Use a dead reckoning external USB GNSS receiver	429
Configure the device to accept location messages from external sources	430
Forward location information to a remote host	436
Show location information	443
System time	444
Configure the system time	444
Network Time Protocol	447
Configure the device as an NTP server	447
Configure a multicast route	453
Enable service discovery (mDNS)	456
Use the iPerf service	459
Example performance test using Iperf3	464

Applications

Configure applications to run automatically	467
Task one: Upload the application	467
Task two: Configure the application to run automatically	469
Run a Python application at the shell prompt	473
Start an interactive Python session	475
Digidevice module	477
Use digidevice.cli to execute CLI commands	478
Use digidevice.datapoint to upload custom datapoints to Digi Remote Manager	479
Use digidevice.config for device configuration	481
Use Python to respond to Digi Remote Manager SCI requests	483
Use digidevice runtime to access the runtime database	492
Using Python to upload the device name to Digi Remote Manager	494
The digidevice led submodule	496

User authentication

TX64 user authentication	500
User authentication methods	500
Add a new authentication method	502
Delete an authentication method	504
Rearrange the position of authentication methods	506
Authentication groups	508
Change the access rights for a predefined group	510
Add an authentication group	512
Delete an authentication group	516
Local users	519
Change a local user's password	520
Configure a local user	522
Delete a local user	529
Terminal Access Controller Access-Control System Plus (TACACS+)	532
TACACS+ user configuration	533
TACACS+ server failover and fallback to local authentication	534
Configure your TX64 device to use a TACACS+ server	534
Remote Authentication Dial-In User Service (RADIUS)	539
RADIUS user configuration	540
RADIUS server failover and fallback to local configuration	540
Configure your TX64 device to use a RADIUS server	541
Disable shell access	545
Set the idle timeout for TX64 users	547
Example user configuration	550
Example 1: Administrator user with local authentication	550
Example 2: RADIUS, TACACS+, and local authentication for one user	552

Firewall

Firewall configuration	560
Create a custom firewall zone	560
Configure the firewall zone for a network interface	562
Delete a custom firewall zone	564
Port forwarding rules	566
Configure port forwarding	566
Delete a port forwarding rule	571

Packet filtering	574
Configure packet filtering	574
Enable or disable a packet filtering rule	578
Delete a packet filtering rule	580
Configure custom firewall rules	582
Configure captive portals	585
Delete captive portals	589
Configure Quality of Service options	590
Web filtering	602
Configure web filtering with Cisco Umbrella	602
Configure web filtering with manual DNS servers	605
Verify your web filtering configuration	608
Show web filter service information	611

System administration

Review device status	613
Configure system information	614
Update system firmware	616
Manage firmware updates using Digi Remote Manager	616
Certificate management for firmware images	616
Update cellular module firmware	618
Reboot your TX64 device	619
Reboot your device immediately	619
Schedule reboots of your device	620
Reset the device to factory defaults	621
Configure power delays for power ignition sensor	624
Configure power button behavior	626
Configure automatic reboot behavior for temporary power drop	629
Configuration files	631
Save configuration changes	631
Save configuration to a file	632
Restore the device configuration	633
Schedule system maintenance tasks	636

Monitoring

intelliFlow	644
Enable intelliFlow	644
Use intelliFlow to display average CPU and RAM usage	647
Use intelliFlow to display top data usage information	648
Use intelliFlow to display data usage by host over time	650
Configure NetFlow Probe	651
Enable the Bluetooth scanner	656
Display the output of the Bluetooth scanner.	661
Enable the Wi-Fi scanner	663
Required configuration	663
Additional configuration	663
Display the output of the Wi-Fi scanner.	669

Central management with Digi Remote Manager

Digi Remote Manager support	673
-----------------------------------	-----

Configure Digi Remote Manager	673
Collect device health data and set the sample interval	677
Log into Digi Remote Manager	679
Use Digi Remote Manager to view and manage your device	680
Add a device to Digi Remote Manager	681
View Digi Remote Manager connection status	681
Use the Digi Remote Manager mobile app	682
Configure multiple devices using profiles	683
Learn more	683

File system

The TX64 local file system	685
Display directory contents	685
Create a directory	686
Display file contents	687
Copy a file or directory	687
Move or rename a file or directory	688
Delete a file or directory	689
Upload and download files	690
Upload and download files by using the WebUI	690
Upload and download files by using the Secure Copy command	691
Upload and download files using SFTP	692

Diagnostics

Generate a support report	695
View system event logs	696
View System Logs	696
View Event Logs	699
Configure syslog servers	701
Configure options for the event and system logs	703
Analyze network traffic	708
Configure packet capture for the network analyzer	709
Example filters for capturing data traffic	713
Capture packets from the command line	714
Stop capturing packets	715
Show captured traffic data	716
Save captured data traffic to a file	717
Download captured data to your PC	718
Clear captured data	719
Use the ping command to troubleshoot network connections	721
Ping to check internet connection	721
Stop ping commands	721
Use the traceroute command to diagnose IP routing problems	721

Digi TX64 regulatory and safety statements

RF exposure statement	723
Federal Communication (FCC) Part 15 Class B	723
Radio Frequency Interference (RFI) (FCC 15.105)	723
European Community - CE Mark Declaration of Conformity (DoC)	723
CE mark (Europe)	724

Maximum transmit power for radio frequencies	725
Innovation, Science, and Economic Development Canada (IC) certifications	725
RoHS compliance statement	726
Safety statements	726
Special safety notes for wireless routers	727
Product disposal instructions	728

DigiTX64 Certifications

International EMC (Electromagnetic Compatibility) and safety standards	729
--	-----

Command line interface

Access the command line interface	731
Log in to the command line interface	731
Exit the command line interface	732
Execute a command from the web interface	732
Display help for commands and parameters	733
The help command	733
The question mark (?) command	733
Display help for individual commands	734
Use the Tab key or the space bar to display abbreviated help	735
Auto-complete commands and parameters	735
Available commands	737
Use the scp command	738
Display status and statistics using the show command	739
show config	739
show system	740
show network	740
Device configuration using the command line interface	741
Execute configuration commands at the root Admin CLI prompt	741
Display help for the config command from the root Admin CLI prompt	741
Configuration mode	743
Enable configuration mode	743
Enter configuration commands in configuration mode	743
Save changes and exit configuration mode	744
Exit configuration mode without saving changes	744
Configuration actions	744
Display command line help in configuration mode	745
Move within the configuration schema	748
Manage elements in lists	748
The revert command	751
Enter strings in configuration commands	752
Example: Create a new user by using the command line	753
Example: Configure multiple WANs and LANs by using the command line	754
Command line reference	765
analyzer	766
cp	768
help	769
ls	770
mkdir	771
modem	772
more	777
mv	778

ping	779
reboot	780
rm	781
scp	782
show	783
system	791
traceroute	793
update	796

What's new in Digi TX64 version 20.2

Release of DigiTX64 firmware version 20.2:

- Digi SureLink™ support (formerly known as active recovery).
 - Enabled by default on preconfigured WANs and WWANs.
- Role-based user access.
 - Allow shell option added to authentication.
 - Read-only access option added to user configuration.

Digi TX64 Quick start

The following steps guide you through the setup of your DigiTX64 device.

Quick start using the Digi Remote Manager mobile app

After connecting your hardware and powering up, you can use the Digi Remote Manager mobile app to quickly install your TX64 into your Digi Remote Manager account.

Here's how:

If you already have a Digi Remote Manager account:

1. Download the **Digi Remote Manager** mobile app from the [App Store](#) (iPhone) or [Google Play](#) (Android).
2. Click **Log in or Sign Up** and log in to your account.
3. From the menu, select **Install a device with a QR or bar code** and scan the installation QR code on the label.
4. Follow the prompts to complete your TX64 registration.

If you need to sign up for a Digi Remote Manager account:

1. Click [here](#) to create a new account. You'll receive an email with login instructions.
2. On your smartphone or tablet, download the **Digi Remote Manager** mobile app from the [App Store](#) (iPhone) or [Google Play](#) (Android).
3. Open the **Digi Remote Manager** mobile app, click **Log in** and log into your new account.
4. From the menu, select **Install a device with a QR or bar code** and scan the installation QR code on the label.
5. Follow the prompts to complete your TX64 registration.

Step 1: What's in the box

When you open the TX64 package, look for the following:

- **Digi TX64 device**

The Digi TX64 has a product label on the bottom of the device. The label includes product identification information and the default password assigned to the device.

- **Welcome card**

Provides a link to this *Quick start*.

- **Digi TX64 label**

Printed copy of the product label on the bottom of your device. You can affix this label to the top or side of the device such that you can access the label after the device is mounted or store the label in a safe place for future reference.

Step 2: Gather accessories


Digi offers several **TX64 accessory kits** so you can purchase exactly what you need to support your TX64. See [TX64 support](#) for a list of accessory kits.

Here's the list of accessories used in this *Quick start*:




Antennas

Use antennas provided by a Digi accessory kit or use alternate antennas that comply with the TX64 antenna requirements.

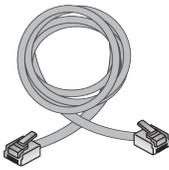

Ethernet cable(s)

- If you intend to configure Ethernet WAN access at this time, use an Ethernet cable to connect the TX64 **WAN/ETH1** port to a WAN.
- Use an Ethernet cable to connect the TX64 **ETH2** port to a laptop or PC to access the local web interface via a browser.

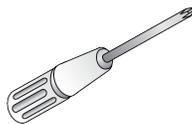

Phillips-head screwdriver

Use a #1 Phillips-head screwdriver to remove and replace the SIM gasket cover when installing SIM cards.




Power supply

Use a power supply provided by a Digi accessory kit or use an alternate power supply that complies with the power supply requirements.



Laptop or personal computer

Use an Ethernet cable to connect your TX64 to a laptop or PC.

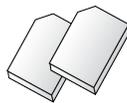

SIM card(s)


If you intend to configure cellular WWAN access at this time, acquire SIM cards as needed. Note the carrier, network APN (Access Point Name), and SIM pin (if any) for each card.



Smart phone or tablet

Optional: Use a smart phone or table to to automatically register your TX64 in your Digi Remote Manager account and connect to your cellular network. See [Quick start using the Digi Remote Manager mobile app](#).

Step 3: Connect

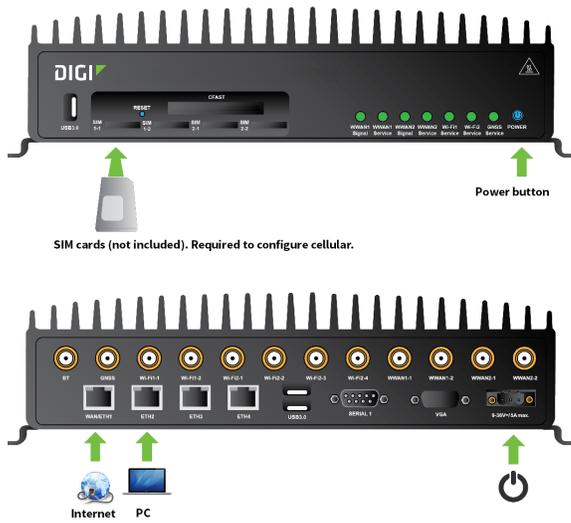

SIM cards (not included). Required to configure cellular.

- If you intend to configure cellular WWAN access at this time, [Install SIM cards](#).
- Attach antenna(s).
- If you intend to configure Ethernet WAN access at this time, use an Ethernet cable to connect the TX64 **WAN/ETH1** port to a hub with access to the Internet.
- Use an Ethernet cable to connect the TX64 **ETH2** port to your PC.

Step 4: Power up

- Connect DC power.

Note If you need help understanding power requirements, see [TX64 power connector](#).

- Indicator LEDs blink to show status during startup.
- Wait for the power LED to stop blinking. The device is ready.

Step 5: Configure

- On the PC connected to the TX64, open a browser and go to **192.168.2.1**.
- Log into the TX64:

User name: Use the default user name: **admin**.

Password: Use the unique password printed on the bottom label of the device (or the printed label included in the package).

Digi TX64 hardware reference

TX64 key features

The Digi TX64 is an LTE-Advanced (LTE-A) router. Key features include:

- Wired Gigabit Ethernet (4-port) for onboard systems.
- Segmented private versus public data communication across dual 600 Mbps CAT 11 cellular.
- Video offload over 1.7 Gbps 802.11ac Wi-Fi backhaul.
- Passenger Wi-Fi over 867 Mbps 802.11ac access point.
- Superior network performance management through Digi Remote Manager.
- Global deployment support.

TX64 hardware specifications

For a detailed list of TX64 hardware specifications, see [Digi TX64 specifications](#).

TX64 front view

The following figure shows front view of the TX64.



Item	Description
SIM gasket	See Install SIM cards .
LEDs	See TX64 LEDs .
Power button	See Power sensor and button behavior .

TX64 LEDs

The TX64 LEDs are located on the top front panel. The number of LEDs varies by model. During bootup, the front-panel LEDs light up in sequence to indicate boot progress.



Power

- **Off:** No power.
- **Blinking Blue:** Unit is powering on.
- **Blue:** Unit has power.

GNSS Service

- **Solid Green:** GNSS is enabled and has a valid fix.
- **Blinking Green:** GNSS is enabled but does not have a valid fix.
- **Off:** GNSS is not enabled.

Wi-Fi1 Service

- **Solid Green:** Wi-Fi access points or Wi-Fi clients using Wi-Fi1 radio are enabled.
- **Off:** No Wi-Fi access points or Wi-Fi clients using Wi-Fi1 radio are enabled.

Wi-Fi2 Service

- **Solid Green:** Wi-Fi access points or Wi-Fi clients using Wi-Fi2 radio are enabled.
- **Off:** No Wi-Fi access points or Wi-Fi clients using Wi-Fi2 radio are enabled.

WWAN1/WWAN2 Signal

Indicates strength of cellular signal.

- **Off:** No service.
- **Yellow:** Poor / Fair signal.
- **Green:** Good / Excellent signal.


WWAN1/WWAN2 Service

Indicates the presence and level of cellular service running on the device.

- **Off:** No service.
- **Blinking Green:** 2G/3G/4G connection is coming up.
- **Solid Yellow:** 2G or 3G connection is up.
- **Solid Green:** 4G connection is up.

Ethernet 1-4 Link and Activity (on rear panel)

The LEDs on the **WAN/ETH1**, **ETH2**, **ETH3**, and **ETH4** ports indicate that the Ethernet network interface is up and there is activity on the network interface.

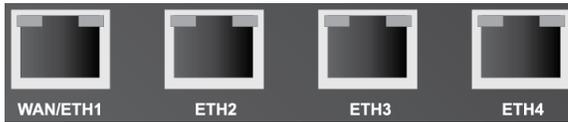

Left LED (on top of port connector)

- **Off**: No Ethernet link detected.
- **Blinking amber**: Indicates Ethernet traffic.

Right LED (on top of port connector)

- **Off**: No Ethernet link detected.
- **Solid green**: 10/100 Mbps link detected.
- **Solid amber**: 1000 Mbps link detected.

Power sensor and button behavior

The TX64 has an ignition sensor that can automatically power on the device when the ignition line is on.



You can also power on the TX64 using the **Power** button. If the TX64 does not automatically restart when the power ignition sense is on, press the **Power** button to restore power.

TX64 back view

The following figure shows the back view of the TX64.



- Antenna connectors
- WAN/ETH1
- ETH2/ETH3/ETH4
- USB 3.0

- Serial
- Power

Digi TX64 serial connector pinout

The TX64 is a DTE device. The pinout for the DB9 serial connector is as follows:

Signal name	RS232 signal	DTE signal direction	DB9 pin number
Transmit Data	TxD	In	3
Receive Data	RxD	Out	2
Ready To Send	RTS	In	7
Clear to Send	CTS	Out	8
Data Set Ready	DSR	Out	6
Ground	GND	N/A	5
Data Carrier Detect	DCD	Out	1
Data Terminal Ready	DTR	In	4
Ring Indicate	RI	Out	9

Hardware setup

This chapter contains the following topics:

Install SIM cards	22
Connect data cables	22
Connect antennas	22
Mount the TX64 to a mounting surface	23
Connect power	23


Install SIM cards

To install SIM cards:

1. On the TX64 front panel, use a screwdriver to remove the SIM slot cover.
2. For high-vibration environments, apply a thin layer of dielectric grease to the SIM contacts.

Note If the TX64 device is used in an environment with high vibration levels, SIM card contact fretting may cause unexpected SIM card failures. To protect the SIM cards, Digi strongly recommends that you apply a thin layer of dielectric grease to the SIM contacts prior to installing the SIM cards.

3. Insert the SIM card(s) into the SIM sockets. Insert the end of each SIM card with the chamfered corner first and the SIM contacts facing upwards:

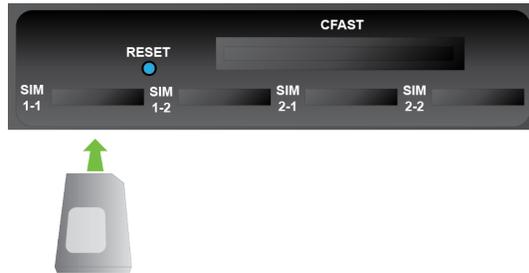

4. After all SIM cards are in place, replace the SIM slot cover.

Tips for improving cellular signal strength

If the signal strength LEDs or the signal quality for your device indicate **Poor** or **No service**, try the following things to improve signal strength:

- Move the device to another location.
- Try connecting a different set of antennas, if available.
- Purchase a Digi Antenna Extender Kit: [Antenna Extender Kit, 1m](#).

Connect data cables

The TX64 provides two types of data ports:

- **Ethernet** (RJ-45): Use a Cat 5e or Cat 6 Ethernet cable.
- **Serial** (9-pin RS-232): Use a serial cable with a 9-pin RS-232 connector.

Connect antennas

Connect antennas to the appropriate antenna connector:


- GNSS
- Wi-Fi1-1/Wi-Fi1-2 and Wi-Fi2-1/Wi-Fi2-2
- WWAN1-1/WWAN1-2 and WWAN2-1/WWAN2-2

Mount the TX64 to a mounting surface

Mount the TX64 device to a mounting surface by using the two mounting brackets. The mounting brackets are preinstalled when the device is delivered.

Tighten self-tapping screws to the mounting surface through the mounting holes of mounting brackets.

Note The mounting screw specifications are: Roundhead M4 size screws or comparable non-metric (6-32 size). Type and length is dependent on the mounting surface type.

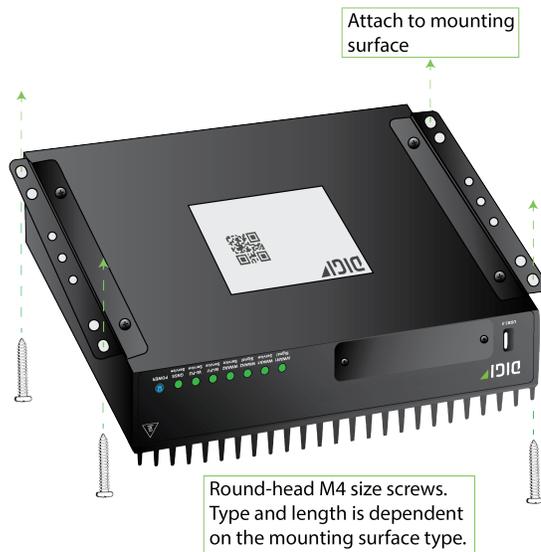

Connect power

Connect the TX64 power cable to a power source.

Vehicle installation

The TX64 shall be powered from a 5 A fused circuit or shall be installed with an in-line Slow Blow fuse rated at 5 A.

Maximum ambient operating temperature is limited to 74°C.

Note Always follow the vehicle manufacturer recommendations for electrical accessories connections. All components used in the electrical connection to the vehicle should be UL listed. See also [Mount and ground chassis](#).

Alternate installations

The TX64 shall be powered by a Certified ITE LPS power supply or a Direct Plugin Class 2 output transformer rated at either 12 VDC/2.5 A or 24 VDC/1.25 A minimum. Supplies shall be suitable for the ambient for which they are installed.

Maximum ambient operating temperature is limited to the lower of the maximum ambient operating temperature of the power supply or 74° C.

Digi recommends the power supplies in the following accessory kits:

- Installations up to +40° C: Digi part number 24000140
- Installations up to +70° C: Digi part number 76002079 or 76002081
- Installations up to +74° C: TRACO Power TPP-30-112J, TPP-30-115J, TPP-30-124J, and TEX120-112

Mount and ground chassis

If you intend to install the TX64 in a vehicle, follow these directions for mounting and grounding the device.

Note Always follow the vehicle manufacturer recommendations for electrical accessories connections.

Mount the device following these general guidelines:

- Device position allows easy access to all ports located on the back of the device.
- Device position allows you to easily view the LEDs located on the front of the device.
- Device location is away from direct exposure to the elements, such as sun, rain, dust, and similar conditions.
- Device and cables should not be near high amperage or exposed to extreme temperatures.
- Device and cables should be installed in an area with adequate airflow.

The TX64 has two mounting brackets located on the left and right sides of the device.

For DC installations (with a fixed system ground reference), ground the TX64 chassis to the system ground reference.

For proper grounding reference:

- Attach the device to a grounded metal surface.
- Connect one end of a short AWG or larger gauge wire to the upper-right grounding hole and connect the other end to the vehicle chassis.

Special considerations

- Separate Ethernet and power cables from other wiring in the vehicle and route the cables away from sharp edges.
- Use cable strain relief for installations in high-vibration environments.

TX64 electrical rating

The TX64 device requires connection to a conditioned power system that meets these requirements:

- Tolerance within maximum operating voltage range 9 VDC to 36 VDC.
- [TX64 power connector](#) on the front of the device requires wiring terminals with the following specifications:

Wire size: 30-12 AWG

Wire type: copper wire only

Terminal blocks torque: 5-7 pounds per inch

For supply connections, use wires suitable for at least 85° C.

- Power installation must be performed by a qualified electrician, following the National Electrical Code, ANSI/NFPA 70 and Canadian Electrical Code, Part I, CSA C22.1.
- There must be a disconnect device in front of TX64 devices to protect maintenance workers. Use a 20 A circuit-breaker as the disconnect device.
- Before doing any maintenance, the maintenance worker must use caution and close the general power supply.

TX64 power connector

The TX64 has a power connector located on the back of the device:



Pin	Connection
1	Ignition sensor
2	Positive
3	Negative

See [Connect power](#) for information on connecting power to the device.

Configuration and management

This chapter contains the following topics:

Review TX64 default settings	27
Reset default password for the default admin user	30
Configuration methods	31
Using Digi Remote Manager	32
Access Digi Remote Manager	32
Using the web interface	32
Using the command line	35
Access the command line interface	35
Log in to the command line interface	35
Exit the command line interface	36

Review TX64 default settings

You can review the default settings for your TX64 device by using the local WebUI or Digi Remote Manager:

Local WebUI

1. Log into the TX64 WebUI as a user with Admin access. See [Using the web interface](#) for details.
2. On the menu, click **System > Device Configuration**.

Digi Remote Manager

1. If you have not already done so, connect to your Digi Remote Manager account.
2. Click **Device Management** to display a list of your devices.
3. Locate and select your device as described in [Use Digi Remote Manager to view and manage your device](#).
4. Click **Configure**.

The following tables list important factory default settings for the TX64.

Default interface configuration

Interface type	Preconfigured interfaces	Devices	Default configuration
Wide Area Network (WAN)	<ul style="list-style-type: none"> ■ WAN1 	<ul style="list-style-type: none"> ■ Ethernet: ETH1 	<ul style="list-style-type: none"> ■ Firewall zone: External ■ WAN priority: Metric=1 ■ IP Address: DHCP client ■ Digi SureLink™ enabled for IPv4
Wireless Wide-Area Networks (WWANs)	<ul style="list-style-type: none"> ■ WWAN1 	<ul style="list-style-type: none"> ■ WWAN1 cellular modem 	<ul style="list-style-type: none"> ■ Firewall zone: External ■ WAN priority: Metric=3 ■ SIM failover after 5 attempts ■ SureLink enabled for IPv4
	<ul style="list-style-type: none"> ■ WWAN2 	<ul style="list-style-type: none"> ■ WWAN2 cellular modem 	<ul style="list-style-type: none"> ■ Firewall zone: External ■ WAN priority: Metric=3 ■ SIM failover after 5 attempts ■ SureLink enabled for IPv4

Interface type	Preconfigured interfaces	Devices	Default configuration
Local Area Networks (LANs)	<ul style="list-style-type: none"> LAN1 	<ul style="list-style-type: none"> Bridge: LAN1 	<ul style="list-style-type: none"> Firewall zone: Internal IP address: 192.168.2.1/24 DHCP server enabled LAN priority: Metric=5
	<ul style="list-style-type: none"> LAN hotspot 	<ul style="list-style-type: none"> Bridge: hotspot_bridge 	<ul style="list-style-type: none"> DHCP server: disabled
	<ul style="list-style-type: none"> Loopback 	<ul style="list-style-type: none"> Ethernet: Loopback 	<ul style="list-style-type: none"> Firewall zone: Loopback IP address: 127.0.0.1/8
	<ul style="list-style-type: none"> Default IP 	<ul style="list-style-type: none"> Bridge: LAN1 	<ul style="list-style-type: none"> Firewall zone: Setup IP address 192.168.210.1/24
	<ul style="list-style-type: none"> Default Link-local IP 	<ul style="list-style-type: none"> Bridge: LAN1 	<ul style="list-style-type: none"> Firewall zone: Setup IP address 169.254.100.100/16
Wi-Fi	<ul style="list-style-type: none"> Wi-Fi access point: Digi AP (Wi-Fi1) 	<ul style="list-style-type: none"> Wi-Fi1 radio 	<ul style="list-style-type: none"> Disabled SSID: Digi2 Encryption: WAP2 Personal (PSK) Pre-shared key: Not configured
	<ul style="list-style-type: none"> Wi-Fi access point: Digi AP (Wi-Fi2) 	<ul style="list-style-type: none"> Wi-Fi2 radio 	<ul style="list-style-type: none"> Disabled SSID: Digi2 Encryption: WAP2 Personal (PSK) Pre-shared key: Not configured
	<ul style="list-style-type: none"> Digi Hotspot AP (Wi-Fi1) 	<ul style="list-style-type: none"> Wi-Fi1 radio 	<ul style="list-style-type: none"> Disabled SSID: Digi Hotspot Encryption: Open (Unencrypted)
	<ul style="list-style-type: none"> Digi Hotspot AP (Wi-Fi2) 	<ul style="list-style-type: none"> Wi-Fi2 radio 	<ul style="list-style-type: none"> Disabled SSID: Digi Hotspot Encryption: Open (Unencrypted)

Interface type	Preconfigured interfaces	Devices	Default configuration
Bridges	<ul style="list-style-type: none"> Bridge: LAN1 	<ul style="list-style-type: none"> Ethernet: ETH2 Ethernet: ETH3 Ethernet: ETH4 Wi-Fi access point: Digi AP (Wi-Fi1) Wi-Fi access point: Digi AP (Wi-Fi2) 	<ul style="list-style-type: none"> Enabled Used by the LAN1 interface
	<ul style="list-style-type: none"> hotspot_bridge 	<ul style="list-style-type: none"> Wi-Fi access point: Digi Hotspot AP (Wi-Fi1) Wi-Fi access point: Digi Hotspot AP (Wi-Fi2) 	<ul style="list-style-type: none"> Disabled Used by the hotspot interface
Hotspot	<ul style="list-style-type: none"> hotspot 	<ul style="list-style-type: none"> Bridge: hotspot_bridge 	<ul style="list-style-type: none"> Disabled Authentication mode: Click-through IP address: 10.1.0.1/24 DHCP server: Automatically enabled (on all hotspots) DHCP server lease range: 100-250

Other default configuration settings


Feature	Configuration
Central management	<ul style="list-style-type: none"> Digi Remote Manager enabled as the central management service.
Security policies	<ul style="list-style-type: none"> Packet filtering allows all outbound traffic. SSH and web administration: <ul style="list-style-type: none"> Enabled for local administration Firewall zone: Internal
Monitoring	<ul style="list-style-type: none"> Device health metrics uploaded to Digi Remote Manager at 60 minute interval. SNMP: Disabled

Reset default password for the default admin user


When you first log into the WebUI or the command line, you will be required to change the unique, factory-assigned default password for the default **admin** user prior to being able to save any changes or exit the user interface. The unique, factory-assigned default password is printed on the bottom label of the device (or the printed label included in the package).

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

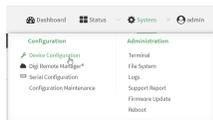

The **Configuration** window is displayed.

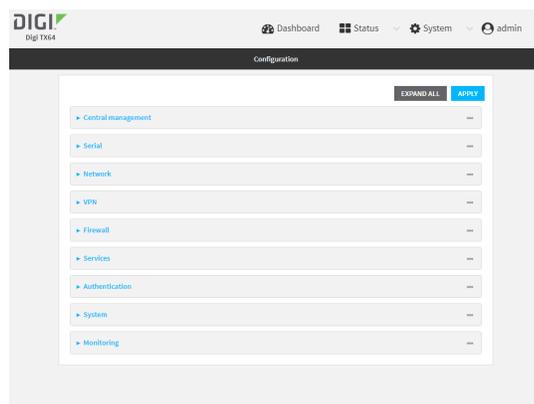

3. Click **Authentication > Users > admin**.
4. Enter a new password for the admin user.

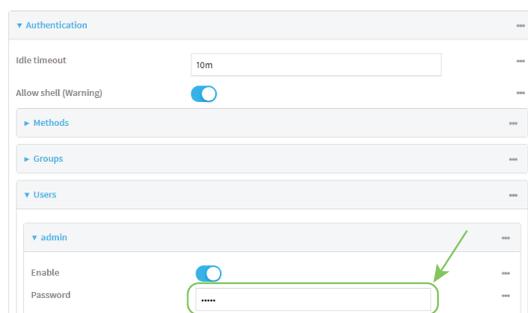

5. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of

the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:


```
> config
(config)>
```
- Enter a new password by using the following command:


```
(config)> auth user admin password new-password
```
- Save the configuration and apply the change:


```
(config)> save
Configuration saved.
>
```
- Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configuration methods

There are two primary methods for configuring your TX64 device:

- Web interface.

The web interface can be accessed in two ways:

- Central management using the Digi Remote Manager, a cloud-based device management and data enablement platform that allows you to connect any device to any application, anywhere. With the Remote Manager, you can configure your TX64 device and use the configuration as a basis for a profile which can be applied to other similar devices. See [Using Digi Remote Manager](#) for more information about using the Remote Manager to manage and configure your TX64 device.
- The local web interface. See [Using the web interface](#) for more information about using the local web interface to manage and configure your TX64 device.

Web-based instructions in this guide are applicable to both the Remote Manager and the local web interface.

- Command line.

A robust command line allows you to perform all configuration and management tasks from within a command shell. Both the Remote Manager and the local web interface also have the option to open a terminal emulator for executing commands on your TX64 device. See [Using the command line](#) for more information about using the command line to manage and configure your TX64 device.

In this guide, task topics show how to perform tasks:

 **WebUI**

Shows how to perform a task by using the local web interface.

 **Command line**

Shows how to perform a task by using the command line interface.

Using Digi Remote Manager

By default, your TX64 device is configured to use Digi Remote Manager as its central management server. No configuration changes are required to begin using the Remote Manager.

For information about configuring central management for your TX64 device, see [Central management with Digi Remote Manager](#).

Access Digi Remote Manager

To access Digi Remote Manager:




1. If you have not already done so, go to <https://myaccount.digi.com/> to sign up for a Digi Remote Manager account.
Check your email for Digi Remote Manager login instructions.
2. Go to remotemanager.digi.com.
2. Enter your username and password.
The Digi Remote Manager Dashboard appears.

Using the web interface

To connect to the TX64 local WebUI:

1. Use an Ethernet cable to connect the TX64's **ETH2** port to a laptop or PC.
2. Open a browser and go to **192.168.2.1**.
3. Log into the device using a configured user name and password.
The default user name is **admin** and the default password is the unique password printed on the label packaged with your device.

After logging in, the local web admin dashboard is displayed.

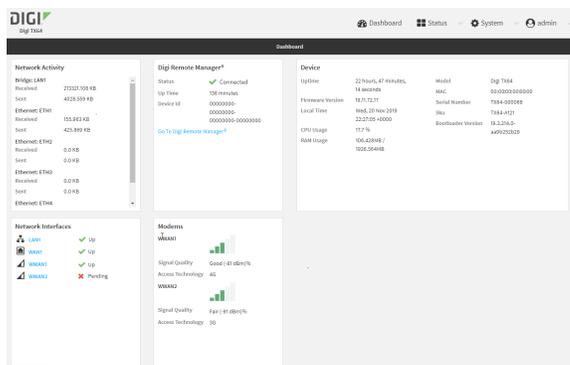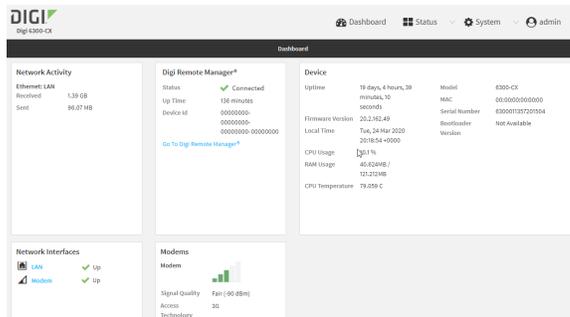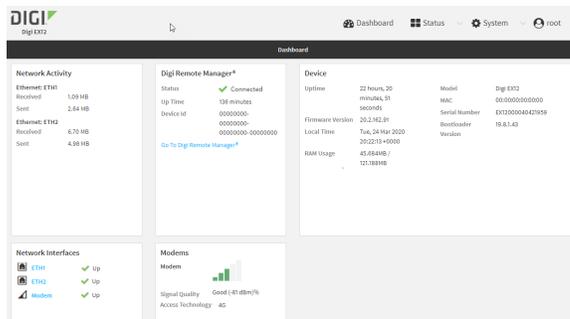


The dashboard shows the current state of the device.

Dashboard area	Description
Network activity	Summarizes network statistics: the total number of bytes sent and received over all configured bridges and Ethernet devices.
Digi Remote Manager	Displays the device connection status for Digi Remote Manager, the amount of time the connection has been up, and the Digi Remote Manager device ID. See Using Digi Remote Manager .
Device	Displays the TX64 device's status, statistics, and identifying information.
Network Interfaces	Displays the status of the network interfaces configured on the device.
Modems	Provides information about the signal strength and technology of the cellular modem (s).

Log out of the web interface

- On the main menu, click your user name. Click **Log out**.

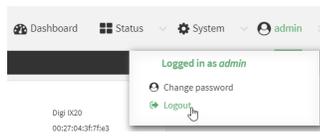

Using the command line

The Digi TX64 device provides a command-line interface that you can use to configure the device, display status and statistics, update firmware, and manage device files.

See [Command line interface](#) for detailed instructions on using the command line interface and see [Command line reference](#) for information on available commands.

Access the command line interface

You can access the TX64 command line interface using an SSH connection, a telnet connection, or a serial connection. You can use an open-source terminal software, such as PuTTY or TeraTerm, to access the device through one of these mechanisms.

You can also access the command line interface in the WebUI by using the **Terminal**, or the Digi Remote Manager by using the **Console**.

To access the command line, your device must be configured to allow access, and you must log in as a user who has been configured for the appropriate access. For further information about configuring access to these services, see:

- Serial: [Configure the serial port](#)
- WebUI: [Configure the web administration service](#)
- SSH: [Configure SSH access](#)
- Telnet: [Configure telnet access](#)

Log in to the command line interface

Command line

1. Connect to the TX64 device by using a serial connection, SSH or telnet, or the **Terminal** in the WebUI or the **Console** in the Digi Remote Manager. See [Access the command line interface](#) for more information.
 - For serial connections, the default configuration is:
 - **115200** baud rate
 - **8** data bits
 - **no** parity
 - **1** stop bit
 - **no** flow control
 - For SSH and telnet connections, the default IP address of the device is **192.168.2.1** on the ETH2, ETH3, and ETH4 Ethernet ports.
2. At the login prompt, enter the username and password of a user with Admin access:

```
login: admin
Password: *****
```

The default username is **admin**. The default unique password for your device is printed on the device label.

- Depending on the device configuration, you may be presented with another menu, for example:

```
Access selection menu:
```

```
  a: Admin CLI
  s: Shell
  q: Quit
```

```
Select access or quit [admin] :
```

Type **a** or **admin** to access the TX64 command line.

You will now be connected to the Admin CLI:

```
Connecting now, 'exit' to disconnect from Admin CLI ...
```

```
>
```

See [Command line interface](#) for detailed instructions on using the command line interface.

Exit the command line interface

Command line

- At the command prompt, type **exit**.

```
> exit
```

- Depending on the device configuration, you may be presented with another menu, for example:

```
Access selection menu:
```

```
  a: Admin CLI
  s: Shell
  q: Quit
```

```
Select access or quit [admin] :
```

Type **q** or **quit** to exit.

Interfaces

TX64 devices have several physical communications interfaces. These interfaces can be bridged in a Local Area Network (LAN) or assigned to a Wide Area Network (WAN).

This chapter contains the following topics:

Wide Area Networks (WANs)	38
Local Area Networks (LANs)	100
Bridging	140

Wide Area Networks (WANs)

The TX64 device is preconfigured with one Wide Area Network (WAN), named **WAN1**, and two Wireless Wide Area Network (WWAN)s, named **WWAN1** and **WWAN2**.

Interface type	Preconfigured interfaces	Devices	Default configuration
Wide Area Network (WAN)	<ul style="list-style-type: none"> ■ WAN1 	<ul style="list-style-type: none"> ■ Ethernet: ETH1 	<ul style="list-style-type: none"> ■ Firewall zone: External ■ WAN priority: Metric=1 ■ IP Address: DHCP client ■ Digi SureLink™ enabled for IPv4
Wireless Wide-Area Networks (WWANs)	<ul style="list-style-type: none"> ■ WWAN1 	<ul style="list-style-type: none"> ■ WWAN1 cellular modem 	<ul style="list-style-type: none"> ■ Firewall zone: External ■ WAN priority: Metric=3 ■ SIM failover after 5 attempts ■ SureLink enabled for IPv4
	<ul style="list-style-type: none"> ■ WWAN2 	<ul style="list-style-type: none"> ■ WWAN2 cellular modem 	<ul style="list-style-type: none"> ■ Firewall zone: External ■ WAN priority: Metric=3 ■ SIM failover after 5 attempts ■ SureLink enabled for IPv4

You can modify configuration settings for the existing WAN and WWANs, and you can create new WANs and WWANs.

This section contains the following topics:

Wide Area Networks (WANs) and Wireless Wide Area Networks (WWANs)	39
Configure WAN/WWAN priority and default route metrics	39
WAN/WWAN failover	42
Configure SureLink active recovery to detect WAN/WWAN failures	43
Configure the device to reboot when a failure is detected	50
Disable SureLink	56
Example: Use a ping test for WAN failover from Ethernet to cellular	60
Using Ethernet devices in a WAN	64
Using cellular modems in a Wireless WAN (WWAN)	64
Configure a Wide Area Network (WAN)	80
Configure a Wireless Wide Area Network (WWAN)	87
Show WAN and WWAN status and statistics	96
Delete a WAN or WWAN.	98

Wide Area Networks (WANs) and Wireless Wide Area Networks (WWANs)

A Wide Area Network (WAN) provides connectivity to the internet or a remote network. A WAN configuration consists of the following:

- A physical device, such as an Ethernet device or a cellular modem.
- Several networking parameters for the WAN, such as firewall configuration and IPv4 and IPv6 support.
- Several parameters controlling failover.

Configure WAN/WWAN priority and default route metrics

The TX64 device is preconfigured with one Wide Area Network (WAN), named **WAN1**, and two Wireless Wide Area Network (WWAN)s, named **WWAN1** and **WWAN2**. You can also create additional WANs and WWANs.

When a WAN is initialized, the TX64 device automatically adds a default IP route for the WAN. The priority of the WAN is based on the metric of the default route, as configured in the WAN's IPv4 and IPv6 metric settings.

Assigning priority to WANs

By default, the TX64 device's WAN (**WAN1**) is configured with the lowest metric (**1**), and is therefore the highest priority WAN. By default, the Wireless WANs (**WWAN1** and **WWAN2**) are configured with a metric of **3**, which means they have an equal priority between themselves, and a lower priority than **WAN1**. You can assign priority to WANs based on the behavior you want to implement for primary and backup WAN interfaces. For example, if you want a cellular connection to be your primary WAN, with an Ethernet interface as backup, configure the metric of the WWAN to be lower than the metric of the WAN.

Example: Configure cellular connection as the primary WAN, and the Ethernet connection as backup

Required configuration items


- Configured WAN and WWAN interfaces. This example uses the preconfigured **WAN1** and **WWAN1** interfaces.
- The metric for each WAN.

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

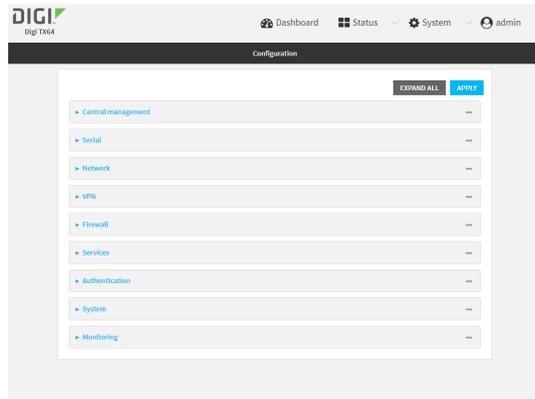

- 3. Set the metrics for **WWAN1**:
 - a. Click **Network > Interfaces > WWAN1 > IPv4**.
 - b. For **Metric**, type **1**.
 - c. Click **IPv6**.
 - d. For **Metric**, type **1**.

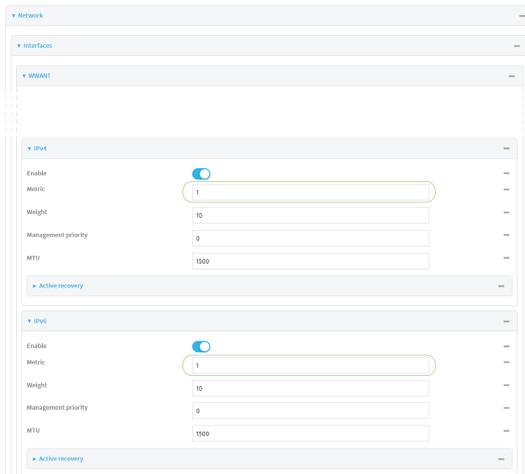

- 4. Set the metrics for **WAN1**:
 - a. Click **Network > Interfaces > WAN1 > IPv4**.
 - b. For **Metric**, type **2**.
 - c. Click **IPv6**.
 - d. For **Metric**, type **2**.

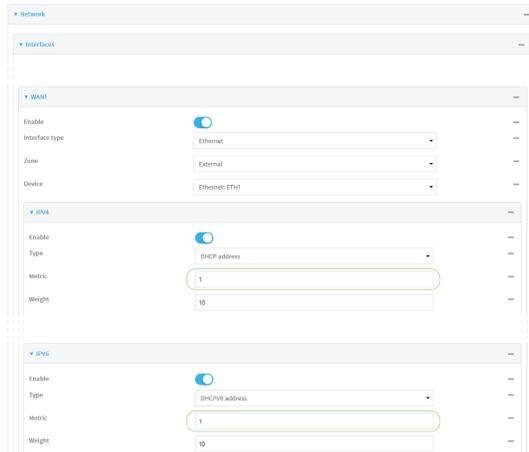

5. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



The TX64 device is now configured to use the cellular modem WWAN, **WWAN1**, as its highest priority WAN, and its Ethernet WAN, **WAN1**, as its secondary WAN.

Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Set the metrics for **WWAN1**:
 - a. Set the IPv4 metric for **WWAN1** to **1**. For example:

```
(config)> network interface wwan1 ipv4 metric 1
(config)>
```

- b. Set the IPv6 metric for **WWAN1** to **1**:

```
(config)> network interface wwan1 ipv6 metric 1
(config)>
```

4. Set the metrics for **WAN1**:
 - a. Set the IPv4 metric for **WAN1** to **2**:

```
(config)> network interface wan1 ipv4 metric 2
(config)>
```

- b. Set the IPv6 metric for **WAN1** to **1**:

```
(config)> network interface wan1 ipv6 metric 2
(config)>
```

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

The TX64 device is now configured to use the cellular modem WWAN, **WWAN1**, as its highest priority WAN, and its Ethernet WAN, **WAN1**, as its secondary WAN.

WAN/WWAN failover

If a connection to a WAN interface is lost for any reason, the TX64 device will immediately fail over to the next WAN or WWAN interface, based on WAN priority. See [Configure WAN/WWAN priority and default route metrics](#) for more information about WAN priority.

Active vs. passive failure detection

There are two ways to detect WAN or WWAN failure: active detection and passive detection.

- Active detection uses Digi SureLink™ technology to send probe tests to a target host or to test the status of the interface. The WAN/WWAN is considered to be down if there are no responses for a configured amount of time. See [Configure SureLink active recovery to detect WAN/WWAN failures](#) for more information about active failure detection.
- Passive detection involves detecting the WAN going down by monitoring its link status by some means other than active detection. For example, if an Ethernet cable is disconnected or the state of a cellular interface changes from **on** to **off**, the WAN is down.

Default Digi SureLink configuration

Beginning with firmware version 20.2.x, Surelink is enabled by default for IPv4 on all WAN and WWAN interfaces, and is configured to perform two tests on these interfaces:

- Interface connectivity.
- DNS query to the DNS servers for interface's the network connection.
DNS servers are typically received as part of the interface's DHCP client connection, although you can manually configure the DNS servers that will be used by SureLink.

Note If your device is operating on a private APN or on wired network with firewall restrictions, ensure that the DNS servers on your private network allow DNS lookups for my.devicecloud.com; otherwise, the SureLink DNS query test will fail and the TX64 device will determine that the interface is down.

By default, these tests will be performed every 15 minutes, with a response timeout of 15 seconds. If the tests fail three consecutive times, the device will reset the network interface to attempt to recover the connection.

Configure SureLink active recovery to detect WAN/WWAN failures

Problems can occur beyond the immediate WAN/WWAN connection that prevent some IP traffic from reaching its destination. Normally this kind of problem does not cause the TX64 device to detect that the WAN has failed, because the connection continues to work while the core problem exists somewhere else in the network.

Using Digi SureLink, you can configure the TX64 device to regularly probe connections through the WAN to determine if the WAN has failed.

Required configuration items

- Enable SureLink.
SureLink can be enabled for both IPv4 and IPv6 configurations. By default, SureLink is enabled for IPv4 for the preconfigured WAN (**WAN1**) and WWANs (**WWAN1** and **WWAN2**). It is disabled for IPv6.
- The type of probe test to be performed, either:
 - Ping: Requires the hostname or IP address of the host to be pinged.
 - DNS query: You can perform a DNS query to a named DNS server, or to the DNS servers configured for the WAN.
 - HTTP or HTTPS test: Requires the URL of the host to be tested.
 - Interface status: Determines if the interface has an IP address assigned to it, that the physical link is up, and that a route is present to send traffic out of the network interface.

The preconfigured WAN is configured by default to use SureLink to both test the interface status and perform a test DNS query.

Additional configuration items

- The behavior of the TX64 device upon test failure:
 - The default behavior, which is to fail over to the next priority WAN/WWAN.
 - Restart the WAN interface.
 - Reboot the device.
- The interval between connectivity tests.
- The number of probe attempts before the WAN is considered to have failed.
- The amount of time that the device should wait for a response to a probe attempt before considering it to have failed.

- If the type of probe test is:
 - Ping: Configure the number of bytes in the ping packet.
 - Interface status: Configure the amount of time that the interface is down before it is considered to have failed, and the amount of time it takes to make an initial connection before it is considered down.
- Additional test targets.
- If more than one test target is configured, determine whether the interface should fail over based on the failure of one of the test targets, or all of the test targets.

To configure the TX64 device to regularly probe connections through the WAN:


WebUI

SureLink can be configured for both IPv4 and IPv6.

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

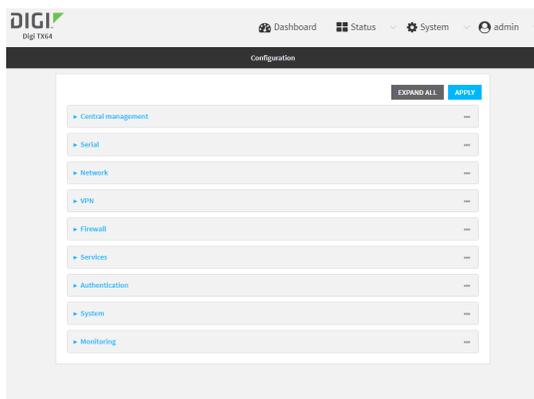

3. Click **Network > Interfaces**.
4. Create a new WAN or WWAN or select an existing one:
 - To create a new WAN or WWAN, see [Configure a Wide Area Network \(WAN\)](#) or [Configure a Wireless Wide Area Network \(WWAN\)](#).
 - To edit an existing WAN or WWAN, click to expand the appropriate WAN or WWAN.

- After creating or selecting the WAN or WWAN, click **IPv4** (or **IPv6**) > **SureLink**.

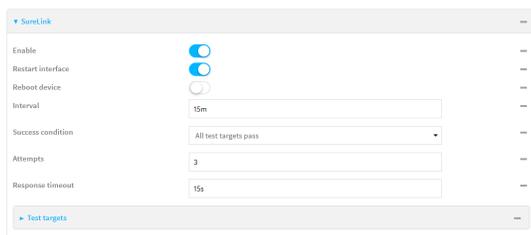

- Enable** SureLink.

SureLink can be enabled for both IPv4 and IPv6 configurations. By default, SureLink is enabled for IPv4 for the preconfigured WAN (**WAN1**) and WWANs (**WWAN1** and **WWAN2**). It is disabled for IPv6.

- Click to expand **Test targets**.
- For **Add Test Target**, click **+**.



- Select the **Test type**:

- **Ping test:** Tests connectivity by sending an ICMP echo request to the hostname or IP address specified in **Ping host**. You can also optionally change the number of bytes in the **Ping payload size**.
- **DNS test:** Tests connectivity by sending a DNS query to the specified **DNS server**.
- **HTTP test:** Tests connectivity by sending an HTTP or HTTPS GET request to the URL specified in **Web servers**. The URL should take the format of **http[s]://hostname/[path]**.
- **Test DNS servers configured for this interface:** Tests connectivity by sending a DNS query to the DNS servers configured for this interface.
- **Test the interface status:** The interface is considered to be down based on:
 - **Down time:** The amount of time that the interface can be down before this test is considered to have failed.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Down time** to ten minutes, enter **10m** or **600s**.
The default is 60 seconds.
 - **Initial connection time:** The amount of time to wait for an initial connection to the interface before this test is considered to have failed.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Initial connection time** to ten minutes, enter **10m** or **600s**.
The default is 60 seconds.

- Optional active recovery configuration parameters:

- For **Restart interface**, enable to configure the device to restart the interface when its connection is considered to have failed. This is useful for interfaces that may regain

connectivity after restarting, such as a cellular modem.

- b. For **Reboot device**, enable to instruct the device to reboot when the WAN connection is considered to have failed.
- c. Change the **Interval** between connectivity tests.
 Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
 For example, to set **Interval** to ten minutes, enter **10m** or **600s**.
 The default is 15 minutes.
- d. If more than one test target is configured, for **Success condition**, determine whether the interface should fail over based on the failure of one of the test targets, or all of the test targets.
- e. For **Attempts**, type the number of probe attempts before the WAN is considered to have failed.
- f. For **Response timeout**, type the amount of time that the device should wait for a response to a probe attempt before considering it to have failed.
 Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
 For example, to set **Response timeout** to ten minutes, enter **10m** or **600s**.
 The default is 15 seconds.

- 11. (Optional) Repeat this procedure for IPv6.
- 12. Click **Apply** to save the configuration and apply the change.
 The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

Active recovery can be configured for both IPv4 and IPv6. These instructions are for IPv4; to configure IPv6 active recovery, replace **ipv4** in the command line with **ipv6**.

- 1. Log into the TX64 command line as a user with full Admin access rights.
 Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Create a new WAN or WWAN, or edit an existing one:
 - To create a new WAN or WWAN, see [Configure a Wide Area Network \(WAN\)](#) or [Configure a Wireless Wide Area Network \(WWAN\)](#).

- To edit an existing WAN or WWAN, change to the WAN or WWAN's node in the configuration schema. For example, for a WAN or WWAN named **my_wan**, change to the **my_wan** node in the configuration schema:

```
(config)> network interface my_wan
(config network interface my_wan)>
```

4. Enable SureLink.

SureLink can be enabled for both IPv4 and IPv6 configurations. By default, SureLink is enabled for IPv4 for the preconfigured WAN (wan1) and WWANs (wwan1 and wwan2). It is disabled for IPv6.

```
(config network interface my_wan> ipv4 surelink enable true
(config network interface my_wan)>
```

5. Add a test target:

```
(config network interface my_wan)> add ipv4 surelink target end
(config network interface my_wan ipv4 surelink target 0)>
```

6. Set the test type:

```
(config network interface my_wan ipv4 surelink target 0)> test value
(config network interface my_wan ipv4 surelink target 0)>
```

where *value* is one of:

- **ping**: Tests connectivity by sending an ICMP echo request to a specified hostname or IP address.

- Specify the hostname or IP address:

```
(config network interface my_wan ipv4 surelink target 0)> ping_
host host
(config network interface my_wanipv4 surelink target 0)>
```

- (Optional) Set the size, in bytes, of the ping packet:

```
(config network interface my_wan ipv4 surelink target 0)> ping_
size [num]
(config network interface my_wan ipv4 surelink target 0)>
```

- **dns**: Tests connectivity by sending a DNS query to the specified DNS server.

- Specify the DNS server. Allowed value is the IP address of the DNS server.

```
(config network interface my_wan ipv4 surelinktarget 0)> dns_
server ip_address
(config network interface my_wan ipv4 surelinktarget 0)>
```

- **dns_configured**: Tests connectivity by sending a DNS query to the DNS servers configured for this interface.

- **http**: Tests connectivity by sending an HTTP or HTTPS GET request to the specified URL.
 - Specify the url:

```
(config network interface my_wan ipv4 surelink target 0)> http_url
value
(config network interface my_wan ipv4 surelink target 0)>
```

where *value* uses the format **http[s]://hostname/[path]**

- **interface_down**: The interface is considered to be down based on the interfaces down time, and the amount of time an initial connection to the interface takes before this test is considered to have failed.
 - (Optional) Set the amount of time that the interface can be down before this test is considered to have failed:

```
(config network interface my_wan ipv4 surelink target 0)>
interface_down_time value
(config network interface my_wan ipv4 surelink target 0)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **interface_down_time** to ten minutes, enter either **10m** or **600s**:

```
(config network interface my_wan ipv4 surelink target 0)>
interface_down_time 600s
(config network interface my_wan ipv4 surelink target 0)>
```

The default is 60 seconds.

- (Optional) Set the amount of time to wait for an initial connection to the interface before this test is considered to have failed:

```
(config network interface my_wan ipv4 surelink target 0)>
interface_timeout value
(config network interface my_wan ipv4 surelink target 0)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **interface_timeout** to ten minutes, enter either **10m** or **600s**:

```
(config network interface my_wan ipv4 surelink target 0)>
interface_timeout 600s
(config network interface my_wan ipv4 surelink target 0)>
```

The default is 60 seconds.

(Optional) Repeat to add additional test targets.

7. Optional active recovery configuration parameters:
 - a. Move back two levels in the configuration by typing **.. ..**:

```
(config network interface my_wan ipv4 surelink target 0)> .. ..
(config network interface my_wan ipv4 surelink>
```

- b. To configure the device to restart the interface when its connection is considered to have failed:

```
(config network interface my_wan ipv4 surelink)> restart enable
(config network interface my_wan ipv4 surelink>
```

This is useful for interfaces that may regain connectivity after restarting, such as a cellular modem.

- c. To configure the device to reboot when the interface is considered to have failed:

```
(config network interface my_wan ipv4 surelink)> reboot enable
(config network interface my_wan ipv4 surelink>
```

- d. Set the **Interval** between connectivity tests:

```
(config network interface my_wan ipv4 surelink)> interval value
(config network interface my_wan ipv4 surelink>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **interval** to ten minutes, enter either **10m** or **600s**:

```
(config network interface my_wan ipv4 surelink)> interval 600s
(config network interface my_wan ipv4 surelink>
```

The default is 15 minutes.

- e. If more than one test target is configured, determine whether the interface should fail over based on the failure of one of the test targets, or all of the test targets:

```
(config network interface my_wan ipv4 surelink)> success_condition value
(config network interface my_wan ipv4 surelink>
```

Where *value* is either **one** or **all**.

- f. Set the number of probe attempts before the WAN is considered to have failed:

```
(config network interface my_wan ipv4 surelink)> attempts num
(config network interface my_wan ipv4 surelink>
```

The default is **3**.

- g. Set the amount of time that the device should wait for a response to a probe attempt before considering it to have failed:

```
(config network interface my_wan ipv4 surelink)> timeout value
(config network interface my_wan ipv4 surelink>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **timeout** to ten minutes, enter either **10m** or **600s**:

```
(config network interface my_wan ipv4 surelink)> timeout 600s
(config network interface my_wan ipv4 surelink)>
```

The default is 15 seconds.

8. (Optional) Repeat this procedure for IPv6.
9. Save the configuration and apply the change:

```
(config network interface my_wan ipv4 surelink)> save
Configuration saved.
>
```

10. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the device to reboot when a failure is detected

Using SureLink, you can configure the TX64 device to reboot when it has determined that an interface has failed.

Required configuration items

- Enable SureLink.
SureLink can be enabled for both IPv4 and IPv6 configurations. By default, SureLink is enabled for IPv4 for the preconfigured WAN (**WAN1**) and WWANs (**WWAN1** and **WWAN2**). It is disabled for IPv6.
- Enable device reboot upon interface failure.
- The type of probe test to be performed, either:
 - Ping: Requires the hostname or IP address of the host to be pinged.
 - DNS query: You can perform a DNS query to a named DNS server, or to the DNS servers configured for the WAN.
 - HTTP or HTTPS test: Requires the URL of the host to be tested.
 - Interface status: Determines if the interface has an IP address assigned to it, that the physical link is up, and that a route is present to send traffic out of the network interface.

Additional configuration items

- See [Configure SureLink active recovery to detect WAN/WWAN failures](#) for optional SureLink configuration parameters.

To configure the TX64 device to reboot when an interface has failed:


WebUI

SureLink can be configured for both IPv4 and IPv6.


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

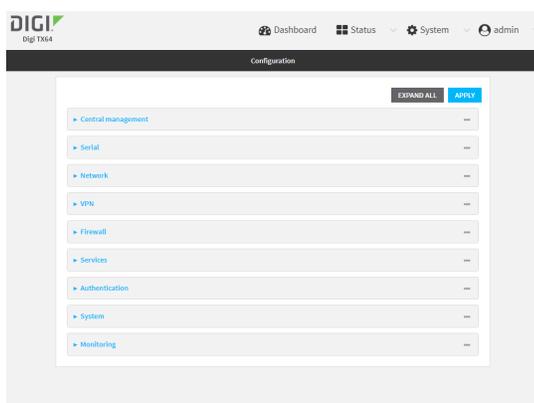

3. Click **Network > Interfaces**.
4. Create a new interface or select an existing one:
 - To create a new interface, see [Configure a LAN](#), [Configure a Wide Area Network \(WAN\)](#), or [Configure a Wireless Wide Area Network \(WWAN\)](#).
 - To edit an existing interface, click to expand the appropriate interface.
5. After creating or selecting the interface, click **IPv4 (or IPv6) > SureLink**.

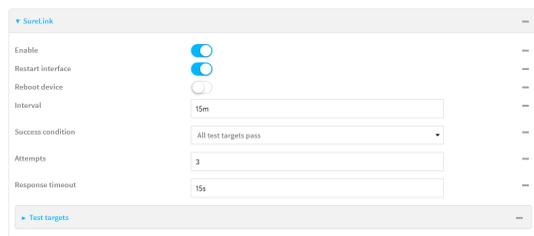

6. **Enable SureLink.**
 SureLink can be enabled for both IPv4 and IPv6 configurations. By default, SureLink is enabled for IPv4 for the preconfigured WAN (**WAN1**) and WWANs (**WWAN1** and **WWAN2**). It is disabled for IPv6.
7. Enable **Reboot device**.
8. Click to expand **Test targets**.

9. For **Add Test Target**, click **+**.



10. Select the **Test type**:

- **Ping test:** Tests connectivity by sending an ICMP echo request to the hostname or IP address specified in **Ping host**. You can also optionally change the number of bytes in the **Ping payload size**.
- **DNS test:** Tests connectivity by sending a DNS query to the specified **DNS server**.
- **HTTP test:** Tests connectivity by sending an HTTP or HTTPS GET request to the URL specified in **Web servers**. The URL should take the format of **http[s]://hostname/[path]**.
- **Test DNS servers configured for this interface:** Tests connectivity by sending a DNS query to the DNS servers configured for this interface.
- **Test the interface status:** The interface is considered to be down based on:
 - **Down time:** The amount of time that the interface can be down before this test is considered to have failed.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Down time** to ten minutes, enter **10m** or **600s**.
The default is 60 seconds.
 - **Initial connection time:** The amount of time to wait for an initial connection to the interface before this test is considered to have failed.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Initial connection time** to ten minutes, enter **10m** or **600s**.
The default is 60 seconds.

11. Optional active recovery configuration parameters:

- a. Change the **Interval** between connectivity tests.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Interval** to ten minutes, enter **10m** or **600s**.
The default is 15 minutes.
- b. If more than one test target is configured, for **Success condition**, determine whether the interface should fail over based on the failure of one of the test targets, or all of the test targets.
- c. For **Attempts**, type the number of probe attempts before the WAN is considered to have failed.
- d. For **Response timeout**, type the amount of time that the device should wait for a response to a probe attempt before considering it to have failed.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Response timeout** to ten minutes, enter **10m** or **600s**.

The default is 15 seconds.

12. (Optional) Repeat this procedure for IPv6.
13. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

Active recovery can be configured for both IPv4 and IPv6. These instructions are for IPv4; to configure IPv6 active recovery, replace **ipv4** in the command line with **ipv6**.

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Create a new interface, or edit an existing one:
 - To create a new interface, see [Configure a LAN](#), [Configure a Wide Area Network \(WAN\)](#), or [Configure a Wide Area Network \(WAN\)](#) or [Configure a Wireless Wide Area Network \(WWAN\)](#).
 - To edit an existing interface, change to the interface's node in the configuration schema. For example, for a interface named **my_wan**, change to the **my_wan** node in the configuration schema:

```
(config)> network interface my_wan
(config network interface my_wan)>
```

4. Enable SureLink.
SureLink can be enabled for both IPv4 and IPv6 configurations. By default, SureLink is enabled for IPv4 for the preconfigured WAN (wan1) and WWANs (wwan1 and wwan2). It is disabled for IPv6.

```
(config network interface my_wan> ipv4 surelink enable true
(config network interface my_wan)>
```

5. Set the device to reboot when the interface is considered to have failed:

```
(config network interface my_wan ipv4 surelink)> reboot true
(config network interface my_wan ipv4 surelink>
```

6. Add a test target:

```
(config network interface my_wan)> add ipv4 surelink target end
(config network interface my_wan ipv4 surelink target 0)>
```

7. Set the test type:

```
(config network interface my_wan ipv4 surelink target 0)> test value
(config network interface my_wan ipv4 surelink target 0)>
```

where *value* is one of:

- **ping:** Tests connectivity by sending an ICMP echo request to a specified hostname or IP address.

- Specify the hostname or IP address:

```
(config network interface my_wan ipv4 surelink target 0)> ping_
host host
(config network interface my_wanipv4 surelink target 0)>
```

- (Optional) Set the size, in bytes, of the ping packet:

```
(config network interface my_wan ipv4 surelink target 0)> ping_
size [num]
(config network interface my_wan ipv4 surelink target 0)>
```

- **dns:** Tests connectivity by sending a DNS query to the specified DNS server.

- Specify the DNS server. Allowed value is the IP address of the DNS server.

```
(config network interface my_wan ipv4 surelinktarget 0)> dns_
server ip_address
(config network interface my_wan ipv4 surelinktarget 0)>
```

- **dns_configured:** Tests connectivity by sending a DNS query to the DNS servers configured for this interface.

- **http:** Tests connectivity by sending an HTTP or HTTPS GET request to the specified URL.

- Specify the url:

```
(config network interface my_wan ipv4 surelink target 0)> http_url
value
(config network interface my_wan ipv4 surelink target 0)>
```

where *value* uses the format **http[s]://hostname/[path]**

- **interface_up:** The interface is considered to be down based on the interfaces down time, and the amount of time an initial connection to the interface takes before this test is considered to have failed.

- (Optional) Set the amount of time that the interface can be down before this test is considered to have failed:

```
(config network interface my_wan ipv4 surelink target 0)>
interface_down_time value
(config network interface my_wan ipv4 surelink target 0)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **interface_down_time** to ten minutes, enter either **10m** or **600s**:

```
(config network interface my_wan ipv4 surelink target 0)>
interface_down_time 600s
(config network interface my_wan ipv4 surelink target 0)>
```

The default is 60 seconds.

- (Optional) Set the amount of time to wait for an initial connection to the interface before this test is considered to have failed:

```
(config network interface my_wan ipv4 surelink target 0)>
interface_timeout value
(config network interface my_wan ipv4 surelink target 0)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **interface_timeout** to ten minutes, enter either **10m** or **600s**:

```
(config network interface my_wan ipv4 surelink target 0)>
interface_timeout 600s
(config network interface my_wan ipv4 surelink target 0)>
```

The default is 60 seconds.

(Optional) Repeat to add additional test targets.

8. Optional active recovery configuration parameters:
 - a. Move back two levels in the configuration by typing **.. ..**:

```
(config network interface my_wan ipv4 surelink target 0)> .. ..
(config network interface my_wan ipv4 surelink>
```

- b. Set the **Interval** between connectivity tests:

```
(config network interface my_wan ipv4 surelink)> interval value
(config network interface my_wan ipv4 surelink>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **interval** to ten minutes, enter either **10m** or **600s**:

```
(config network interface my_wan ipv4 surelink)> interval 600s
(config network interface my_wan ipv4 surelink)>
```

The default is 15 minutes.

- c. If more than one test target is configured, determine whether the interface should fail over based on the failure of one of the test targets, or all of the test targets:

```
(config network interface my_wan ipv4 surelink)> success_condition value
(config network interface my_wan ipv4 surelink>
```

Where *value* is either **one** or **all**.

- d. Set the number of probe attempts before the WAN is considered to have failed:

```
(config network interface my_wan ipv4 surelink)> attempts num
(config network interface my_wan ipv4 surelink>
```

The default is **3**.

- e. Set the amount of time that the device should wait for a response to a probe attempt before considering it to have failed:

```
(config network interface my_wan ipv4 surelink)> timeout value
(config network interface my_wan ipv4 surelink>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **timeout** to ten minutes, enter either **10m** or **600s**:

```
(config network interface my_wan ipv4 surelink)> timeout 600s
(config network interface my_wan ipv4 surelink)>
```

The default is 15 seconds.

9. (Optional) Repeat this procedure for IPv6.
10. Save the configuration and apply the change:

```
(config network interface my_wan ipv4 surelink)> save
Configuration saved.
>
```

11. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Disable SureLink

If your device uses a private APN with no Internet access, or your device has a restricted wired WAN connection that doesn't allow DNS resolution, follow this procedure to disable the default SureLink connectivity tests. You can also disable DNS lookup or other internet activity, while retaining the SureLink interface test.


WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.


- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

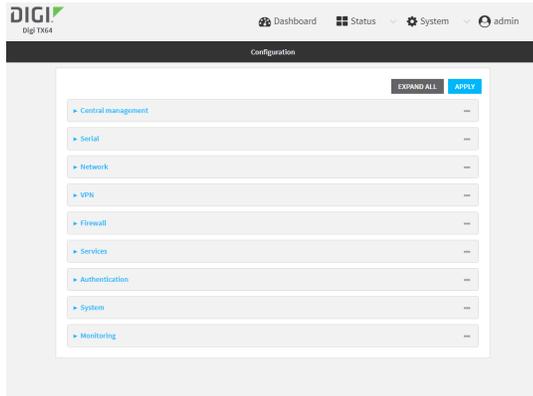

- Click **Network > Interfaces**.
- Select the appropriate WAN or WWAN on which SureLink should be disabled..
- After selecting the WAN or WWAN, click **IPv4 > SureLink**.

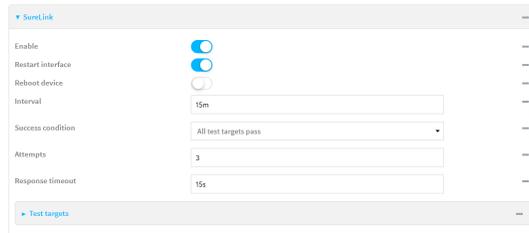

- Toggle off **Enable** to disable SureLink.
- Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Change to the WAN or WWAN's node in the configuration schema. For example, to disable SureLink for the WWAN1 interface:

```
(config)> network interface wwan1
(config network interface wwan1)>
```

- Disable SureLink:

```
(config network interface wwan1> ipv4 surelink enable false
(config network interface wwan1)>
```

- Save the configuration and apply the change:

```
(config network interface my_wwan ipv4 surelink)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.


Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Disable DNS lookup


Alternatively, you can disable DNS lookup or other internet activity for device that use a private APN with no Internet access, or that have restricted wired WAN connections that do not allow DNS resolution, while retaining the SureLink interface test. The SureLink interface test determines if the interface has an IP address assigned to it, that the physical link is up, and that a route is present to send traffic out of the network interface.

WebUI


- Log into the TX64 WebUI as a user with full Admin access rights.
- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

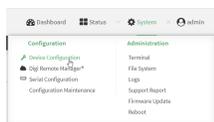


The **Configuration** window is displayed.

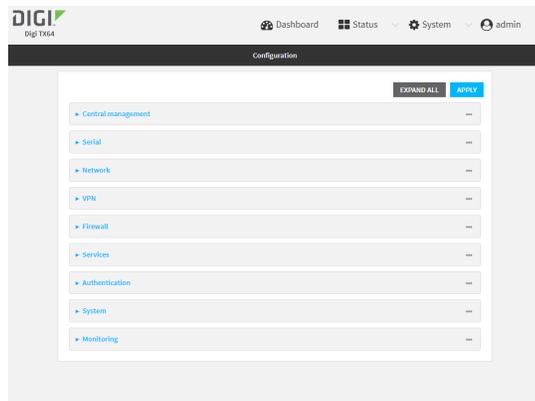

3. Click **Network > Interfaces**.
4. Select the appropriate WAN or WWAN on which SureLink should be disabled..
5. After selecting the WAN or WWAN, click **IPv4 > SureLink**.

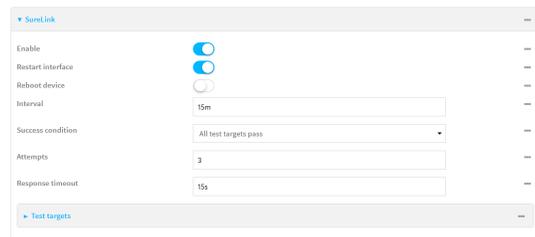

6. Click to expand **Test targets**.
7. Click to expand the second test target. This test target has its **Test type** set to **Test DNS servers configured for this interface**.

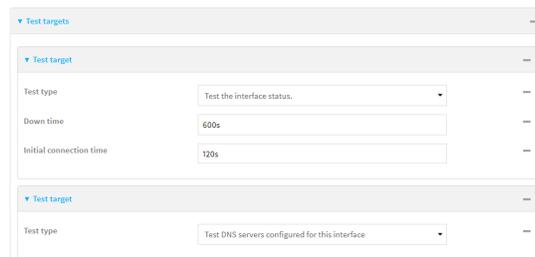

8. Click the menu icon (...) next to the target and select **Delete**.



9. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Change to the WAN or WWAN's node in the configuration schema. For example, to disable SureLink for the WWAN1 interface:

```
(config)> network interface wwan1
(config network interface wwan1)>
```

4. Determine the index number of the target:

```
(config network interface wwan1)> show ipv4 surelink target
0
    interface_down_time 600s
    interface_timeout 120s
    test interface_up
    1 test dns_configured
(config network interface wwan1)>
```

5. Delete the target:

```
(config network interface wwan1)> del ipv4 surelink target 1
(config network interface wwan1)>
```


6. Save the configuration and apply the change:

```
(config network interface my_wwan ipv4 surelink)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example: Use a ping test for WAN failover from Ethernet to cellular

In this example configuration, the **WAN1** interface serves as the primary WAN, while the cellular **WWAN1** and **WWAN2** interfaces, respectively, serve as the backup WANs.

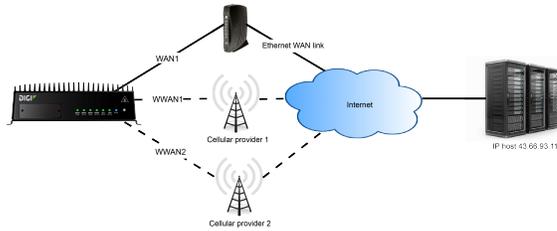

In this example configuration, SureLink is used over for the **WAN1** interface to send a probe packet of size **256** bytes to the IP host **43.66.93.111** every **10** seconds. If there are three consecutive failed responses, the TX64 device brings the **WAN1** interface down and starts using the **WWAN1** interface. If the TX64 device cannot get a connection on the **WWAN1** interface, it attempts to use the **WWAN2** interface. It continues to regularly test the connection to **WAN1** and **WWAN1**, and when tests on one of those WANs succeeds, the device falls back to the successful highest priority WAN.


To achieve this WAN failover from the **WAN1** to the **WWAN1** and **WWAN2** interfaces, the WAN failover configuration is:

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

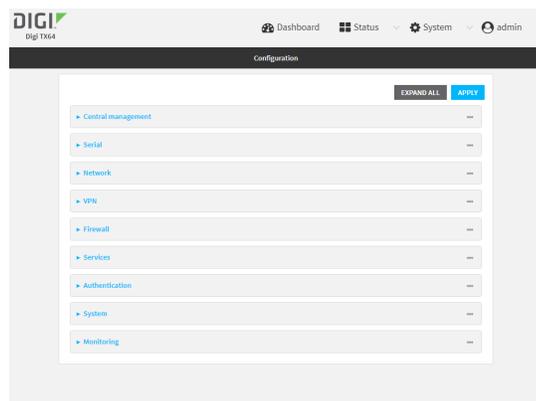

3. Configure active recovery on **WAN1**:
 - a. Click **Network > Interface > WAN1 > IPv4 > SureLink**.

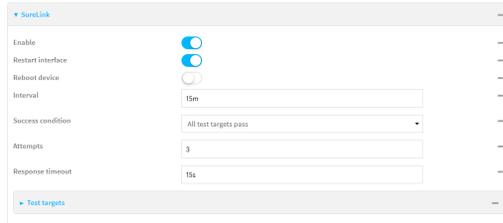

- b. For **Interval**, type **10s**.
- c. Click to expand **Test targets**.
- d. Delete the existing test targets:
Click the menu icon (...) next to each target and select **Delete**.



- e. For **Add Test Target**, click **+**.



- f. For **Test type**, select **Ping test**.
- g. For **Ping host**, type **43.66.93.111**.
- h. For **Ping payload size**, type **256**.



4. Repeat the above step for **WWAN1** and **WWAN2** to enable SureLink on those interfaces.
5. Configure **WWAN1** to have priority over **WWAN2**. The default configurations for **WWAN1** and **WWAN2** both have the metric set to **3**, while **WAN1** has a metric of **1**. To configure **WWAN1** to have priority over **WWAN2** and continue to be serve as a backup to **WAN1**, **WWAN1's** metric should be set to **2**.
 - a. Click **Network > Interface > WWAN1 > IPv4**.
 - b. For **Metric**, type **2**.



6. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Configure SureLink on **WAN1**:
 - a. Set the interval to ten seconds:

```
(config)> network interface wan1 ipv4 surelink interval 10s
(config)>
```

- b. Delete the existing test targets:

```
(config network interface wan1> del ipv4 surelink target 0
(config network interface wan1> del ipv4 surelink target 1
(config network interface wan1)>
```

- c. Add a test target:

```
(config)> add network interface wan1 ipv4 surelink target end
(config network interface wan1 ipv4 surelink target 0)>
```

- d. Set the probe type to ping:

```
(config network interface wan1 ipv4 surelink target 0)> test ping
(config network interface wan1 ipv4 surelink target 0)>
```

- e. Set the packet size to 256 bytes:

```
(config network interface wan1 ipv4 surelink target 0)> ping_size 256
(config network interface wan1 ipv4 surelink target 0)>
```

- f. Set the host to ping:

```
(config network interface wan1 ipv4 surelink target 0)> ping_host
43.66.93.111
(config network interface wan1 ipv4 surelink target 0)>
```

3. Repeat the above step for the cellular **WWAN1** (wwan1) and **WWAN2** (wwan2) interfaces to enable SureLink on those interfaces.
4. Configure **WWAN1** to have priority over **WWAN2**. The default configurations for **WWAN1** and **WWAN2** both have the metric set to **3**, while **WAN1** has a metric of **1**. To configure **WWAN1** to have priority over **WWAN2** and continue to be serve as a backup to **WAN1**, **WWAN1's** metric should be set to **2**.

- a. Type ... to return to the root of the config prompt:

```
(config network interface wan1 ipv4 surelink target 0)> ...
(config)>
```

- b. Set the metric for **WWAN1**:

```
(config)> network interface wwan1 ipv4 metric 2
(config)>
```

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Using Ethernet devices in a WAN

The TX64 device has four Ethernet devices, named **ETH1**, **ETH2**, **ETH3**, and **ETH4**. You can use these Ethernet interfaces as a WAN when connecting to the Internet, through a device such as a cable modem:



By default, the **WAN/ETH1** Ethernet device is configured as a WAN, named **WAN1**, with both DHCP and NAT enabled and using the **External** firewall zone. This means you should be able to connect to the Internet by connecting the **WAN/ETH1** Ethernet port to another device that already has an internet connection.

The **ETH2**, **ETH3**, and **ETH4** devices are by default configured as part of a bridge named **LAN1** that is used by the **LAN1** interface, which uses the **Internal** firewall zone. If desired, you can assign these Ethernet devices to a WAN.

Using cellular modems in a Wireless WAN (WWAN)

The TX64 supports two cellular modems, named **WWAN1 cellular modem** and **WWAN2 cellular modem**, which are included in two preconfigured Wireless WANs, **WWAN1** and **WWAN2**.

Each cellular modem can have only one active interface at any one time. For example, **WWAN1 cellular modem** can have either SIM1 or SIM2 up at one time.

Typically, you configure SIM1 of the cellular modem as the primary cellular interface, and SIM2 as the backup cellular interface. In this way, if the TX64 device cannot connect to the network using SIM1, it

automatically fails over to SIM2. TX64 devices automatically use the correct cellular module firmware for each carrier when switching SIMs.

Because the TX64 device has two cellular modems, it can have two cellular interfaces up at one time—one for each modem. Typically, an administrator would route traffic to different destinations over a specific cellular interface.

Configure cellular modem APNs

The TX64 device uses a preconfigured list of Access Point Names (APNs) when attempting to connect to a cellular carrier for the first time. After the device has successfully connected, it will remember the correct APN. As a result, it is generally not necessary to configure APNs. However, you can configure the system to use a specified APN.


To configure the APN:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

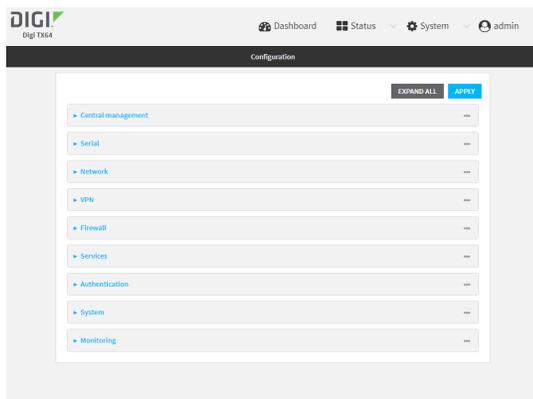

3. The TX64 device has two WWANs, **WWAN1** and **WWAN2**, which correspond to each cellular modem. Select the appropriate WWAN.

For example, to configure the Access Point Names (APNs) for **WWAN1**, click **Network > Interfaces > WWAN1 > APN list > APN**.

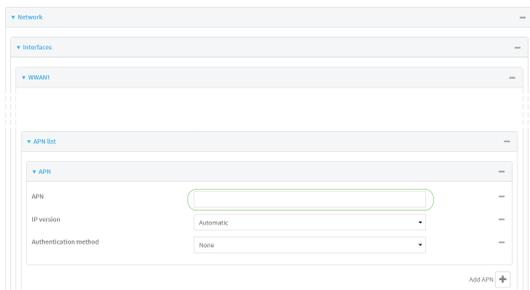

4. For **APN**, type the Access Point Name (APN) to be used when connecting to the cellular carrier.

5. (Optional) **IP version**:

For **IP version**, select one of the following:

- **Automatic**: Requests both IPv4 and IPv6 address.
- **IPv4**: Requests only an IPv4 address.
- **IPv6**: Requests only an IPv6 address.

The default is **Automatic**.

6. (Optional) **Authentication method**:

For **Authentication method**, select one of the following:


- **None**: No authentication is required.
- **Automatic**: The device will attempt to connect using CHAP first, and then PAP.
- **CHAP**: Uses the Challenge Handshake Authentication Profile (CHAP) to authenticate.
- **PAP**: Uses the Password Authentication Profile (PAP) to authenticate.

If **Automatic**, **CHAP**, or **PAP** is selected, enter the **Username** and **Password** required to authenticate.

The default is **None**.

7. To add additional APNs, for **Add APN**, click **+** and repeat the preceding instructions.

8. (Optional) To configure the device to bypass its preconfigured APN list and only use the configured APNs, enable **APN list only**.

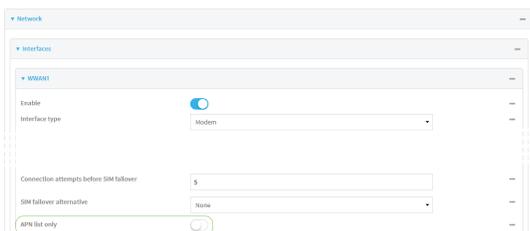

9. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. The TX64 device has two WWANs, **wwan1** and **wwan2**, which correspond to each cellular modem. Use the appropriate WWAN name to set the APN for the modem used by that WWAN. For example, to configure the APN for the modem used by **wwan1**:

```
(config)> network interface wwan1 modem apn 0 apn value
(config)>
```

where *value* is the APN for the SIM card.

4. (Optional) Set the IP version:

```
(config)> network interface wwan1 modem apn 0 ip_version version
(config)>
```

where *version* is one of the following:

- **auto**: Requests both IPv4 and IPv6 address.
- **ipv4**: Requests only an IPv4 address.
- **ipv6**: Requests only an IPv6 address.

The default is **auto**.

5. (Optional) Set the authentication method:

```
(config)> network interface wwan1 modem apn 0 auth method
(config)>
```

where *method* is one of the following:

- **none**: No authentication is required.
- **auto**: The device will attempt to connect using CHAP first, and then PAP.
- **chap**: Uses the Challenge Handshake Authentication Profile (CHAP) to authenticate.
- **pap**: Uses the Password Authentication Profile (PAP) to authenticate.

If **auto**, **chap**, or **pap** is selected, enter the **Username** and **Password** required to authenticate:

```
(config)> network interface wwan1 modem apn 0 username name
(config)> network interface wwan1 modem apn 0 password pwd
(config)>
```

The default is **none**.

- (Optional) To configure the device to bypass its preconfigured APN list and only use the configured APNs:

```
(config)> network interface wwan1 modem apn_lock true
(config)>
```

- Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show cellular status and statistics

You can view a summary status for all cellular modems, or view detailed status and statistics for a specific modem.

WebUI

- Log into the TX64 WebUI as a user with Admin access.
- On the menu, click **Status**.
- Under **Connections**, click **Modems**.

The modem status window is displayed

Command line

- Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

- Use the **show modem** command:
 - To view a status summary for all modems:

```
> show modem
```

Modem	SIM	Status	APN	Signal Strength
wwan1	1 (ready)	connected	1234	Good (-84 dBm)
wwan2	1 (ready)	connected	1234	Good (-84 dBm)

 >

- To view detailed status and statistics for a specific modem, use the [show modem name name](#) command. For example, to view detailed status and statistics for a modem named **wwan1**:

 > show modem name wwan1

 wwan1: [Telit] LM940

```

-----
IMEI                : 781154796325698
Manufacturer        : Telit
Model               : LM940
FW Version          : 24.01.541_ATT
Revision            : 24.01.541
  
```

 Status

```

-----
State                : connected
APN                  : 1234
Signal Strength      : Good (-85 dBm)
Bars                  : 2/5
Access Mode          : 4G
Temperature          : 34C
IP address (IPv4)    : 10.200.1.2
Gateway (IPv4)       : 10.200.1.1
  
```

 SIM

```

---
SIM Slot              : 1
SIM Status            : ready
IMSI                  : 21685216482134
ICCID                  : 26587956542156312312
SIM Provider          : AT&T
  
```

 >

Unlock a SIM card

A SIM card can be locked if a user tries to set an invalid PIN for the SIM card too many times. In addition, some cellular carriers require a SIM PIN to be added before the SIM card can be used. If the SIM card is locked, the TX64 device cannot make a cellular connection.

Command line

To unlock a SIM card:

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, use the [modem](#) command to set a new PIN for the SIM card:

```
> modem puk unlock puk_code new_pin modem_name
>
```

For example, to unlock a SIM card in the modem named **wwan1** with PUK code **12345678**, and set the new SIM PIN to **1234**:

```
> modem puk unlock 12345678 1234 wwan1
>
```

3. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Note If the SIM remains in a locked state after using the unlock command, contact your cellular carrier.

Signal strength for 4G cellular connections

For 4G connections, the **RSRP** value determines signal strength.

- **Excellent:** > -90 dBm
- **Good:** -90 dBm to -105 dBm
- **Fair:** -106 dBm to -115 dBm
- **Poor:** -116 dBm to -120 dBm:
- **No service:** < -120 dBm

See [Show cellular status and statistics](#) for procedures to view this information.

Signal strength for 3G and 2G cellular connections

For 3G and 2G cellular connections, the current **RSSI** value determines signal strength.

- **Excellent:** > -70 dBm
- **Good:** -70 dBm to -85 dBm
- **Fair:** -86 dBm to -100 dBm
- **Poor:** < -100 dBm to -109 dBm
- **No service:** -110 dBm

See [Show cellular status and statistics](#) for procedures to view this information.

Tips for improving cellular signal strength

If the signal strength LEDs or the signal quality for your device indicate **Poor** or **No service**, try the following things to improve signal strength:

- Move the TX64 device to another location.
- Try connecting a different set of antennas, if available.

- Purchase a Digi Antenna Extender Kit:
 - [Antenna Extender Kit, 1m](#)
 - [Antenna Extender Kit, 3m](#)

AT command access

To run AT commands from the TX64 command line:

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the Admin CLI prompt, type **modem at-interactive** and press **Enter**. Type **n** if you do not want exclusive access. This allows you to send AT commands to the device while still allowing the device to connect, disconnect, and/or reconnect to the cellular network.
3. At the Admin CLI prompt, use the **modem** command to begin an interactive AT command session:

```
> modem at-interactive name wwan1
```

```
Do you want exclusive access to the modem? (y/n) [y]:
```

4. Type **n** if you do not want exclusive access. This allows you to send AT commands to the device while still allowing the device to connect, disconnect, and/or reconnect to the cellular network. The following is an example interactive AT command:

```
> modem at-interactive name wwan1
```

```
Do you want exclusive access to the modem? (y/n) [y]: n
Starting terminal access to modem AT commands.
Note that the modem is still in operation.
```

To quit enter '~.' ('~.' if using an ssh client) and press ENTER

```
Connected
ati
Manufacturer: Sierra Wireless, Incorporated
Model: MC7455
Revision: SWI9X30C_02.24.03.00 r6978 CARMD-EV-FRMWR2 2017/03/02 13:36:45
MEID: 35907206045169
IMEI: 359072060451693
IMEI SV: 9
FSN: LQ650551070110
+GCAP: +CGSM
OK
```


5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure dual APNs

Some cellular carriers offer a dual APN feature that allows a SIM card to be provisioned with two separate APNs that can be used simultaneously. For example, Verizon offers this service as its Split Data Routing feature. This feature provides two separate networking paths through a single cellular modem and SIM card, and allows for configurations such as:

- Segregating public and private traffic, including policy-based routes to ensure that your internal network traffic always goes through the private connection.
- Separation of untrusted Internet traffic from trusted internal network traffic.
- Secure connection to internal customer network without using a VPN.
- Separate billing structures for public and private traffic.
- Site-to-site networking, without the overhead of tunneling for each device.


In the following example configuration, all traffic on LAN1 is routed through the public APN to the internet, and all traffic on LAN2 is routed through the private APN to the customer's data center:

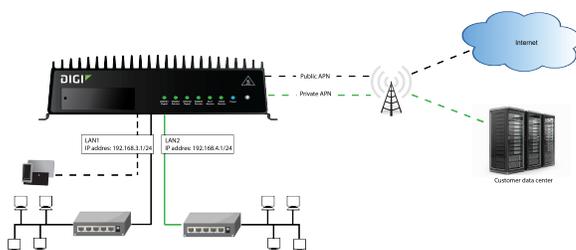


To accomplish this, we will create separate WWAN interfaces that use the same modem but use different APNs, and then use routing roles to forward traffic to the appropriate WWAN interface.

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

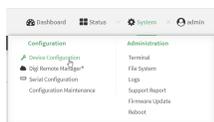

The **Configuration** window is displayed.

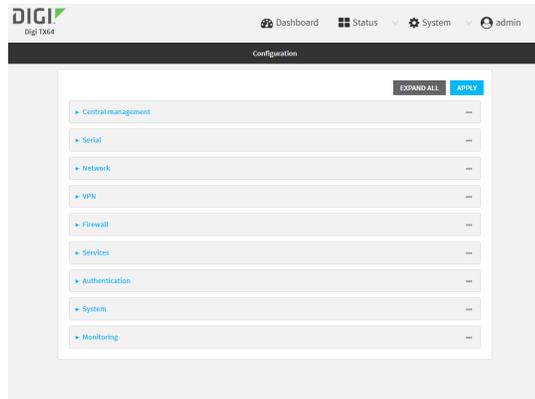


3. Increase the maximum number of interfaces allowed for the modem:
 - a. Click **Network > Modems > WWAN1 cellular modem**.
 - b. For **Maximum number of interfaces**, type **2**.

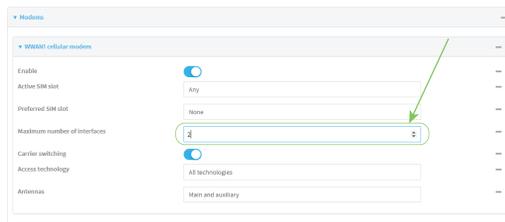


4. Create the WWAN interfaces:

In this example, we will create two interfaces named **WWAN_Public** and **WWAN_Private**.


 - a. Click **Network > Interfaces**.
 - b. For **Add Interface**, type **WWAN_Public** and click **+**.

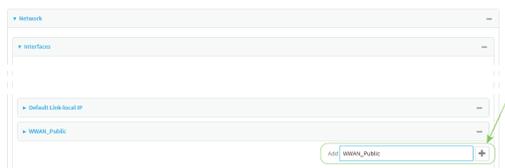


- c. For **Interface type**, select **Modem**.
 - d. For **Zone**, select **External**.
 - e. For **Device**, select **WWAN1 cellular modem**.
 - f. (Optional): Configure the public APN. If the public APN is not configured, the TX64 will attempt to determine the APN.
 - i. Click to expand **APN list > APN**.
 - ii. For **APN**, type the public APN for your cellular carrier.

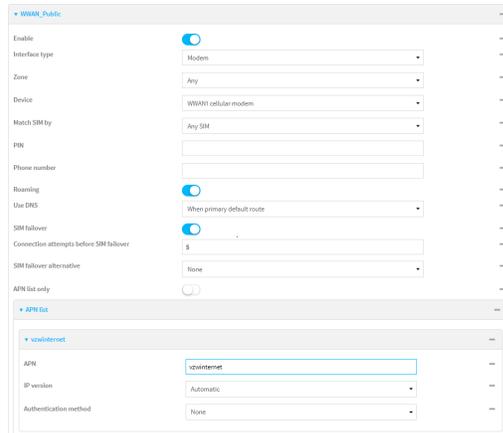

g. For **Add Interface**, type **WWAN_Private** and click **+**.

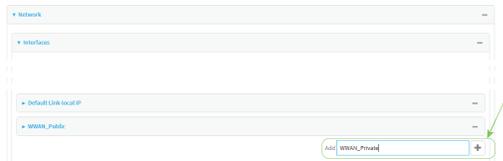

- h. For **Interface type**, select **Modem**.
- i. For **Zone**, select **External**.
- j. For **Device**, select **WWAN1 cellular modem**.
This should be the same modem selected for the **WWAN_Public** WWAN.
- k. Enable **APN list only**.
- l. Click to expand **APN list** > **APN**.
- m. For **APN**, type the private APN provided to you by your cellular carrier.

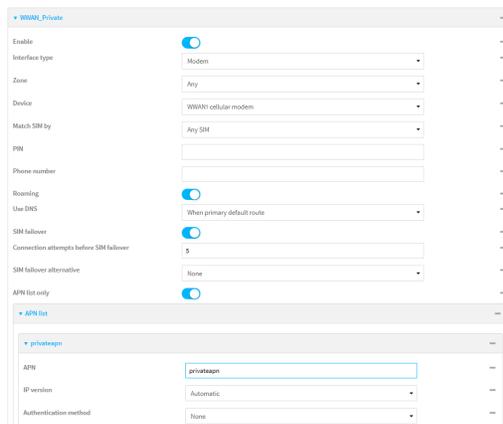


5. Create the routing policies. For example, to route all traffic from LAN1 through the public APN, and LAN2 through the private APN:

- a. Click **Network > Routes > Policy-based routing**.
- b. Click the **+** to add a new route policy.




- c. For **Label**, enter **Route through public APN**.
- d. For **Interface**, select **Interface: WWAN_Public**.
- e. Configure the source address:
 - i. Click to expand **Source address**.
 - ii. For **Type**, select **Interface**.
 - iii. For **Interface**, select **LAN1**.
- f. Configure the destination address:
 - i. Click to expand **Destination address**.
 - ii. For **Type**, select **Interface**.
 - iii. For **Interface**, select **Interface: WWAN_Public**.

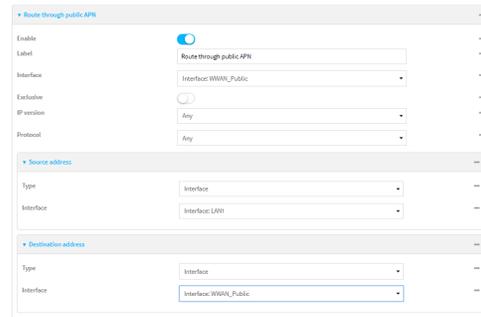

- g. Click the **+** to add another route policy.
- h. For **Label**, enter **Route through private APN**.
- i. For **Interface**, select **Interface: WWAN_Private**.
- j. Configure the source address:
 - i. Click to expand **Source address**.
 - ii. For **Type**, select **Interface**.
 - iii. For **Interface**, select **LAN2**.
- k. Configure the destination address:
 - i. Click to expand **Destination address**.
 - ii. For **Type**, select **Interface**.

- iii. For **Interface**, select **Interface: WWAN_Private**.

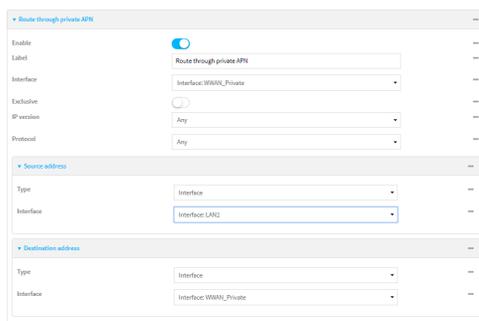

- 6. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- 1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Set the maximum number of interfaces for the modem:

```
(config)> network modem wwan1 max_intfs 2
(config)>
```

- 4. Create the WWAN interfaces:
 - a. Create the **WWANPublic** interface:

```
(config)> add network interface WWANPublic
(config network interface WWANPublic)>
```

- b. Set the interface type to modem:

```
(config network interface WWANPublic)> type modem
(config network interface WWANPublic)>
```

- c. Set the modem device:

```
(config network interface WWANPublic)> modem device wwan1
(config network interface WWANPublic)>
```

- d. (Optional): Set the public APN. If the public APN is not configured, the TX64 will attempt to determine the APN.

```
(config network interface WWANPublic)> modem apn public_apn
(config network interface WWANPublic)>
```

- e. Use to periods (..) to move back one level in the configuration:

```
(config network interface WWANPublic)> ..
(config network interface)>
```

- f. Create the **WWANPrivate** interface:

```
(config network interface)> add WWANPrivate
(config network interface WWANPrivate)>
```

- g. Set the interface type to modem:

```
(config network interface WWANPrivate)> type modem
(config network interface WWANPrivate)>
```

- h. Set the modem device:

```
(config network interface WWANPrivate)> modem device wwan1
(config network interface WWANPrivate)>
```

- i. Enable **APN list only**:

```
(config network interface WWANPrivate)> apn_lock true
(config network interface WWANPrivate)>
```

- j. Set the private APN:

```
(config network interface WWANPublic)> modem apn private_apn
(config network interface WWANPublic)>
```

5. Create the routing policies. For example, to route all traffic from LAN1 through the public APN, and LAN2 through the private APN:

- a. Add a new routing policy:

```
(config)> add network route policy end
(config network route policy 0)>
```

- b. Set the label that will be used to identify this route policy:

```
(config network route policy 0)> label "Route through public apn"
(config network route policy 0)>
```

- c. Set the interface:

```
(config network route policy 0)> interface /network/interface/WWANPublic
(config network route policy 0)>
```

- d. Configure the source address:

- i. Set the source type to **interface**:

```
(config network route policy 0)> src type interface
(config network route policy 0)>
```

- ii. Set the interface to **LAN1**:

```
(config network route policy 0)> src interface LAN1
(config network route policy 0)>
```

- e. Configure the destination address:

- i. Set the type to **interface**:

```
(config network route policy 0)> dst type interface
(config network route policy 0)>
```

- ii. Set the interface to **WWANPublic** :

```
(config network route policy 0)> interface
/network/interface/WWANPublic
(config network route policy 0)>
```

- f. Use to periods (..) to move back one level in the configuration:

```
(config nnetwork route policy 0)> ..
(config nnetwork route policy)>
```

- g. Add a new routing policy:

```
(config network route policy )> add end
(config network route policy 1)>
```

- h. Set the label that will be used to identify this route policy:

```
(config network route policy 1)> label "Route through private apn"
(config network route policy 1)>
```

- i. Set the interface:

```
(config network route policy 1)> interface
/network/interface/WWANPrivate
(config network route policy 1)>
```

j. Configure the source address:

i. Set the source type to **interface**:

```
(config network route policy 1)> src type interface  
(config network route policy 1)>
```

ii. Set the interface to **LAN2**:

```
(config network route policy 1)> src interface LAN2  
(config network route policy 1)>
```

k. Configure the destination address:

i. Set the type to **interface**:

```
(config network route policy 1)> dst type interface  
(config network route policy 1)>
```

ii. Set the interface to **WWANPrivate** :

```
(config network route policy 1)> interface  
/network/interface/WWANPrivate  
(config network route policy 1)>
```

6. Save the configuration and apply the change:

```
(config network route policy 1)> save  
Configuration saved.  
>
```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a Wide Area Network (WAN)

Configuring a Wide Area Network (WAN) involves configuring the following items:

Required configuration items

- The interface type: **Ethernet**.
- The firewall zone: **External**.
- The network device or bridge that is used by the WAN.
- Configure the WAN as a DHCP client.

Additional configuration items


- Additional IPv4 configuration:
 - The metric for IPv4 routes associated with the WAN.
 - The relative weight for IPv4 routes associated with the WAN.
 - The IPv4 management priority of the WAN. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.
 - The IPv4 Maximum Transmission Unit (MTU) of the WAN.
 - When to use DNS servers for this interface.
 - Whether to include the TX64 device's hostname in DHCP requests.
 - SureLink active recovery configuration. See [Configure SureLink active recovery to detect WAN/WWAN failures](#) for further information.
- IPv6 configuration:
 - The metric for IPv6 routes associated with the WAN.
 - The relative weight for IPv6 routes associated with the WAN.
 - The IPv6 management priority of the WAN. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.
 - The IPv6 Maximum Transmission Unit (MTU) of the WAN.
 - When to use DNS servers for this interface.
 - Whether to include the TX64 device's hostname in DHCP requests.
 - Active recovery configuration. See [Configure SureLink active recovery to detect WAN/WWAN failures](#) for further information.
- MAC address blacklist and whitelist.

To create a new WAN or edit an existing WAN:


WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.

- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

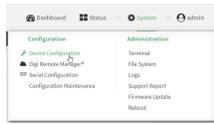

The **Configuration** window is displayed.

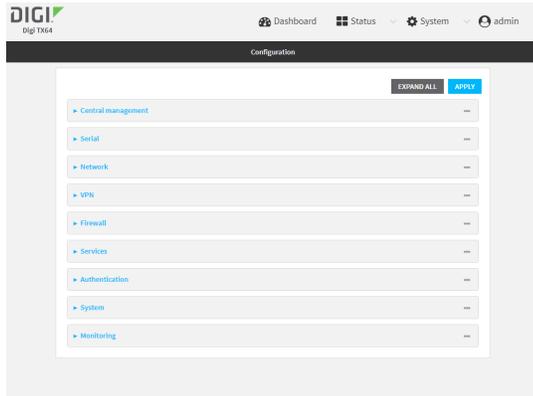


- Click **Configuration > Network > Interfaces**.
- Create the WAN or select an existing WAN:
 - To create a new WAN, for **Add interface**, type a name for the WAN and click **+**.



- To edit an existing WAN, click to expand the WAN.

The Interface configuration window is displayed.

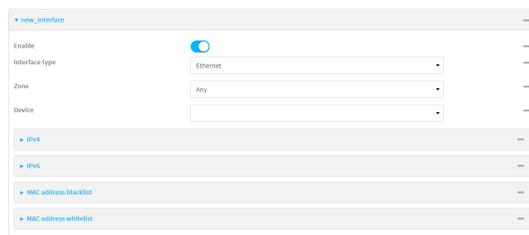

New WANs are enabled by default. To disable, click **Enable**.

- For **Interface type**, leave at the default setting of **Ethernet**.
- For **Zone**, select **External**.
- For **Device**, select an Ethernet device, a Wi-Fi client, or a bridge. See [Bridging](#) for more information about bridging.

8. Configure IPv4 settings:
 - a. Click to expand **IPv4**.

IPv4 support is enabled by default.
 - b. For **Type**, select **DHCP address**.
 - c. Optional IPv4 configuration items:
 - i. Set the **Metric**.

See [Configure WAN/WWAN priority and default route metrics](#) for further information about metrics.
 - ii. For **Weight**, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, **Weight** is used to load balance traffic to the interfaces.
 - iii. Set the **Management priority**. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
 - iv. Set the **MTU**.
 - v. For **Use DNS**, select one of the following:
 - **Always**: DNS will always be used for this WAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
 - **When primary default route**: Only use the DNS servers provided for this interface when the interface is the primary route.
 - **Never**: Never use DNS servers for this interface.
 - vi. Enable **DHCP Hostname** to instruct the TX64 device to include the device's system name with DHCP requests as the Client FQDN option. The DHCP server can then be configured to register the device's hostname and IP address with an associated DNS server.
 - See [RFC4702](#) for further information about DHCP server support for the Client FQDN option.
 - See [Configure system information](#) for information about setting the TX64 device's system name.
 - d. See [Configure SureLink active recovery to detect WAN/WWAN failures](#) for information about configuring **Active recovery**.
9. (Optional) Configure IPv6 settings:
 - a. Click to expand **IPv6**.
 - b. **Enable** IPv6 support.
 - c. For **Type**, select **DHCPv6 address**.
 - d. For **Prefix length**, type the minimum length of the prefix to assign to this LAN. If the minimum length is not available, then a longer prefix will be used.
 - e. For **Prefix ID**, type the identifier used to extend the prefix to the assigned length. Leave blank to use a random identifier.
 - f. Set the **Metric**.

See [Configure WAN/WWAN priority and default route metrics](#) for further information about metrics.

- g. For **Weight**, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, **Weight** is used to load balance traffic to the interfaces.
 - h. Set the **Management priority**. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
 - i. Set the **MTU**.
 - j. For **Use DNS**:
 - **Always**: DNS will always be used for this WAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
 - **When primary default route**: Only use the DNS servers provided for this interface when the interface is the primary route.
 - **Never**: Never use DNS servers for this interface.
 - k. Enable **DHCP Hostname** to instruct the TX64 device to include the device's system name with DHCP requests as the Client FQDN option. The DHCP server can then be configured to register the device's hostname and IP address with an associated DNS server.
 - See [RFC4702](#) for further information about DHCP server support for the Client FQDN option.
 - See [Configure system information](#) for information about setting the TX64 device's system name.
10. (Optional) Click to expand **MAC address blacklist**.
Incoming packets will be dropped from any devices whose MAC addresses is included in the **MAC address blacklist**.
- a. Click to expand **MAC address blacklist**.
 - b. For **Add MAC address**, click **+**.
 - c. Type the **MAC address**.
11. (Optional) Click to expand **MAC address whitelist**.
If there whitelist entries are specified, incoming packets will only be accepted from the listed MAC addresses.
- a. Click to expand **MAC address whitelist**.
 - b. For **Add MAC address**, click **+**.
 - c. Type the **MAC address**.
12. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Create a new WAN or edit an existing one:

- To create a new WAN named **my_wan**:

```
(config)> add network interface my_wan
(config network interface my_wan)>
```

- To edit an existing WAN named **my_wan**, change to the **my_wan** node in the configuration schema:

```
(config)> network interface my_wan
(config network interface my_wan)>
```

4. Set the appropriate firewall zone:

```
(config network interface my_wan)> zone zone
(config network interface my_wan)>
```

See [Firewall configuration](#) for further information.

5. Select an Ethernet device, a Wi-Fi device, or a bridge. See [Bridging](#) for more information about bridging.
 - a. Enter **device ?** to view available devices and the proper syntax.

```
(config network interface my_wan)> device ?
```

Device: The network device used by this network interface.

Format:

```
/network/device/eth1
/network/device/eth2
/network/device/eth3
/network/device/eth4
/network/device/loopback
/network/bridge/hotspot_bridge
/network/bridge/lan1
/network/wireless/ap/digi_ap1
/network/wireless/ap/digi_ap2
/network/wireless/ap/digi_hotspot_ap1
/network/wireless/ap/digi_hotspot_ap2
```

Current value:

```
(config network interface my_wan)> device
```

- b. Set the device for the LAN:

```
(config network interface my_wan)> device device
(config network interface my_wan)>
```

6. Configure IPv4 settings:

- IPv4 support is enabled by default. To disable:

```
(config network interface my_wan)> ipv4 enable false
(config network interface my_wan)>
```

- Configure the WAN to be a DHCP client:

```
(config network interface my_wan)> ipv4 type dhcp
(config network interface my_wan)>
```

- a. Optional IPv4 configuration items:

- i. Set the IP metric:

```
(config network interface my_wan)> ipv4 metric num
(config network interface my_wan)>
```

See [Configure WAN/WWAN priority and default route metrics](#) for further information about metrics.

- ii. Set the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, the weight is used to load balance traffic to the interfaces.

```
(config network interface my_wan)> ipv4 weight num
(config network interface my_wan)>
```

- iii. Set the management priority. This determines which interface will have priority for central management activity. The interface with the highest number will be used.

```
(config network interface my_wan)> ipv4 mgmt num
(config network interface my_wan)>
```

- iv. Set the MTU:

```
(config network interface my_wan)> ipv4 mtu num
(config network interface my_wan)>
```

- v. Configure how to use DNS:

```
(config network interface my_wan)> ipv4 use_dns value
(config network interface my_wan)>
```

where *value* is one of:

- **always:** DNS will always be used for this WAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.

- **primary:** Only use the DNS servers provided for this interface when the interface is the primary route.
 - **never:** Never use DNS servers for this interface.
- vi. Enable DHCP Hostname to instruct the TX64 device to include the device's system name with DHCP requests as the Client FQDN option. The DHCP server can then be configured to register the device's hostname and IP address with an associated DNS server.

```
(config network interface my_wan)> ipv4 dhcp_hostname true
(config network interface my_wan)>
```

- See [RFC4702](#) for further information about DHCP server support for the Client FQDN option.
 - See [Configure system information](#) for information about setting the TX64 device's system name.
- b. See [Configure SureLink active recovery to detect WAN/WWAN failures](#) for information about configuring active recovery.

7. (Optional) Configure IPv6 settings:

- a. Enable IPv6 support:

```
(config network interface my_wan)> ipv6 enable true
(config network interface my_wan)>
```

- b. Set the IPv6 type to DHCP:

```
(config network interface my_wan)> ipv6 type dhcpv6
(config network interface my_wan)>
```

- c. Generally, the default settings for IPv6 support are sufficient. You can view the default IPv6 settings by using the question mark (?):

```
(config network interface my_wan)> ipv6 ?
```

IPv6

Parameters	Current Value	
dhcp_hostname	false	DHCP Hostname
enable	true	Enable
metric	0	Metric
mgmt	0	Management priority
mtu	1500	MTU
type	dhcpv6	Type
use_dns	always	Use DNS
weight	10	Weight

Additional Configuration

```
connection_monitor      Active recovery
```

```
(config network interface my_wan)>
```

- d. Modify any of the remaining default settings as appropriate. For example, to change the metric:

```
(config network interface my_wan)> ipv6 metric 1
(config network interface my_wan)>
```

If the minimum length is not available, then a longer prefix will be used.

See [Configure WAN/WWAN priority and default route metrics](#) for further information about metrics.

8. Save the configuration and apply the change:

```
(config network interface my_wan)> save
Configuration saved.
>
```

9. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a Wireless Wide Area Network (WWAN)

Configuring a Wireless Wide Area Network (WWAN) involves configuring the following items:

Required configuration items

- The interface type: **Modem**.
- The firewall zone: **External**.
- The cellular modem that is used by the WWAN.

Additional configuration items

- SIM selection for this WWAN.
- The SIM PIN.
- The SIM phone number for SMS connections.
- Enable or disable roaming.
- DNS options.
- SIM failover configuration.
- APN configuration.
- The custom gateway/netmask.
- IPv4 configuration:
 - The metric for IPv4 routes associated with the WAN.
 - The relative weight for IPv4 routes associated with the WAN.


- The IPv4 management priority of the WAN. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.
 - The IPv4 Maximum Transmission Unit (MTU) of the WAN.
 - SureLink active recovery configuration. See [Configure SureLink active recovery to detect WAN/WWAN failures](#) for further information.
- IPv6 configuration:
- The metric for IPv6 routes associated with the WAN.
 - The relative weight for IPv6 routes associated with the WAN.
 - The IPv6 management priority of the WAN. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.
 - The IPv6 Maximum Transmission Unit (MTU) of the WAN.
 - SureLink active recovery configuration. See [Configure SureLink active recovery to detect WAN/WWAN failures](#) for further information.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

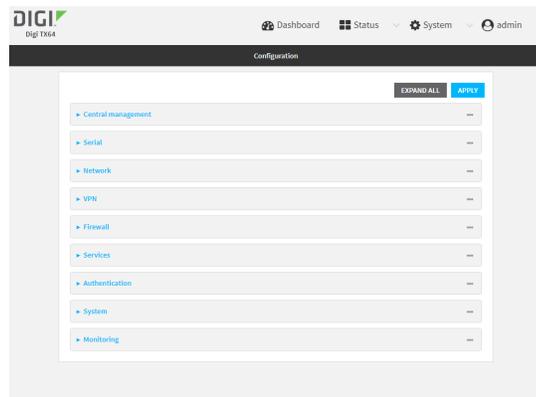

3. Click **Network > Interfaces**.


4. Create the WWAN or select an existing WWAN:

- To create a new WWAN, for **Add interface**, type a name for the WWAN and click **+**.



- To edit an existing WWAN, click to expand the WWAN.
New WWANs are enabled by default. To disable, click **Enable**.

5. For **Interface type**, select **Modem**.

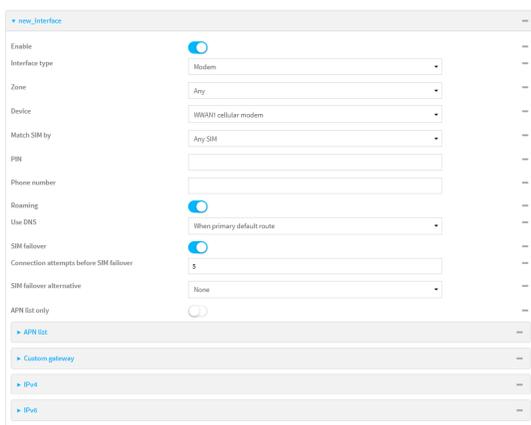

6. For **Zone**, select **External**.

7. For **Device**, select a cellular modem.

8. Optional WWAN configuration items:

- For **Match SIM by**, select a SIM matching criteria to determine when this WWAN should be used:

- If **SIM slot** is selected, for **Match SIM slot**, select which SIM slot must be in active for this WWAN to be used.
- If **Carrier** is selected, for **Match SIM carrier**, select which cellular carrier must be in active for this WWAN to be used.
- If **PLMN identifier** is selected, for **Match PLMN identifier**, type the PLMN id that must be in active for this WWAN to be used.
- If **IMSI** is selected, for **Match IMSI**, type the International Mobile Subscriber Identity (IMSI) that must be in active for this WWAN to be used.
- If **ICCID** is selected, for **Match ICCID**, type the unique SIM card ICCID that must be in active for this WWAN to be used.

- Type the **PIN** for the SIM. Leave blank if no PIN is required.

- Type the **Phone number** for the SIM, for SMS connections.

Normally, this should be left blank. It is only necessary to complete this field if the SIM does not have a phone number or if the phone number is incorrect.

- Roaming** is enabled by default. Click to disable.

- e. For **Use DNS**:
- **Always**: DNS will always be used for this WWAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
 - **When primary default route**: Only use the DNS servers provided for this WWAN when the WWAN is the primary route.
 - **Never**: Never use DNS servers for this WWAN.

The default setting is **When primary default route**.

- f. **SIM failover** is enabled by default, which means that the modem will automatically fail over from the active SIM to the next available SIM when the active SIM fails to connect. If enabled:
- i. For **Connection attempts before SIM failover**, type the number of times that the device should attempt to connect to the active SIM before failing over to the next available SIM.
 - ii. For **SIM failover alternative**, configure how SIM failover will function if automatic SIM switching is unavailable:
 - **None**: The device will perform no alternative action if automatic SIM switching is unavailable.
 - **Reset modem**: The device will reset the modem if automatic SIM switching is unavailable.
 - **Reboot device**: The device will reboot if automatic SIM switching is unavailable.
9. For **APN list** and **APN list only**, the TX64 device uses a preconfigured list of Access Point Names (APNs) when attempting to connect to a cellular carrier for the first time. After the device has successfully connected, it will remember the correct APN. As a result, it is generally not necessary to configure APNs. See [Configure cellular modem APNs](#) for further information and instructions for setting an APN.
10. (Optional) To configure the IP address of a custom gateway or a custom netmask:
- a. Click **Custom gateway** to expand.
 - b. Click **Enable**.
 - c. For **Gateway/Netmask**, enter the IP address and netmask of the custom gateway. To override only the gateway netmask, but not the gateway IP address, use all zeros for the IP address. For example, **0.0.0.0/32** will use the network-provided gateway, but with a /32 netmask.
11. Optional IPv4 configuration items:
- a. Click **IPv4** to expand.
 - b. IPv4 support is **Enabled** by default. Click to disable.
 - c. Set the **Metric**.
See [Configure WAN/WWAN priority and default route metrics](#) for further information about metrics.
 - d. For **Weight**, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, **Weight** is used to load balance traffic to the interfaces.

- e. Set the **Management priority**. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
 - f. Set the **MTU**.
 - g. See [Configure SureLink active recovery to detect WAN/WWAN failures](#) for information about configuring **Active recovery**.
12. Optional IPv6 configuration items:
- a. Click **IPv6** to expand.
 - b. IPv6 support is **Enabled** by default. Click to disable.
 - c. Set the **Metric**.
See [Configure WAN/WWAN priority and default route metrics](#) for further information about metrics.
 - d. For **Weight**, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, **Weight** is used to load balance traffic to the interfaces.
 - e. Set the **Management priority**. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
 - f. Set the **MTU**.
 - g. See [Configure SureLink active recovery to detect WAN/WWAN failures](#) for information about configuring **Active recovery**.

Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Create a new WWAN or edit an existing one:

- To create a new WWAN named **my_wwan**:

```
(config)> add network interface my_wwan
(config network interface my_wwan)>
```

- To edit an existing WWAN named **my_wwan**, change to the my_wwan node in the configuration schema:

```
(config)> network interface my_wwan
(config network interface my_wwan)>
```

4. Set the appropriate firewall zone:

```
(config network interface my_wwan)> zone zone
(config network interface my_wwan)>
```

See [Firewall configuration](#) for further information.

5. Select a cellular modem:
 - a. Enter **modem device ?** to view available modems and the proper syntax.

```
(config network interface my_wwan)> modem device ?
```

```
Device: The modem used by this network interface.
```

```
Format:
```

```
  wwan1
```

```
  wwan2
```

```
Current value:
```

```
(config network interface my_wwan)> device
```

- b. Set the device:

```
(config network interface my_wwan)> modem device device
```

```
(config network interface my_wwan)>
```

6. Optional WWAN configuration items:
 - a. Set the SIM matching criteria to determine when this WWAN should be used:

```
(config network interface my_wwan)> modem match value
```

```
(config network interface my_wwan)>
```

Where *value* is one of:

- **any**
- **carrier**

Set the cellular carrier must be in active for this WWAN to be used:

- i. Use **?** to determine available carriers:

```
(config network interface my_wwan)> modem carrier
```

```
Match SIM carrier: The SIM carrier match criteria. This interface is applied when the SIM card is provisioned from the carrier.
```

```
Format:
```

```
  AT&T
```

```
  Rogers
```

```
  Sprint
```

```
  T-Mobile
```

```
  Telstra
```

```
  Verizon
```

```
  Vodafone
```

```
  other
```

```
Default value: AT&T
```

```
Current value: AT&T
```

```
(config network interface my_wwan)>
```

- ii. Set the carrier:

```
(config network interface my_wwan)> modem carrier value
(config network interface my_wwan)>
```

■ **iccid**

Set the unique SIM card ICCID that must be in active for this WWAN to be used:

```
(config network interface my_wwan)> modem iccid ICCID
(config network interface my_wwan)>
```

■ **imsi**

Set the International Mobile Subscriber Identity (IMSI) that must be in active for this WWAN to be used:

```
(config network interface my_wwan)> modem imsi IMSI
(config network interface my_wwan)>
```

■ **plmn_id**

Set the PLMN id that must be in active for this WWAN to be used:

```
(config network interface my_wwan)> modem plmn_id PLMN_ID
(config network interface my_wwan)>
```

■ **sim_slot**

Set which SIM slot must be in active for this WWAN to be used:

```
(config network interface my_wwan)> modem sim_slot value
(config network interface my_wwan)>
```

where *value* is either **1** or **2**.

- b. Set the PIN for the SIM. Leave blank if no PIN is required.

```
(config network interface my_wwan)> modem pin value
(config network interface my_wwan)>
```

- c. Set the phone number for the SIM, for SMS connections:

```
(config network interface my_wwan)> modem phone num
(config network interface my_wwan)>
```

Normally, this should be left blank. It is only necessary to complete this field if the SIM does not have a phone number or if the phone number is incorrect.

- d. Roaming is enabled by default. To disable:

```
(config network interface my_wwan)> modem roaming false
(config network interface my_wwan)>
```

- e. Configure when the WWAN's DNS servers will be used:

```
(config network interface my_wwan)> modem dns value
(config network interface my_wwan)>
```

Where *value* is one of:

- **always:** DNS will always be used for this WWAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
- **never:** Never use DNS servers for this WWAN.
- **primary:** Only use the DNS servers provided for this WWAN when the WWAN is the primary route.

The default setting is **primary**.

- f. SIM failover is enabled by default, which means that the modem will automatically fail over from the active SIM to the next available SIM when the active SIM fails to connect. To disable:

```
(config network interface my_wwan)> modem sim_failover false
(config network interface my_wwan)>
```

If enabled:

- i. Set the number of times that the device should attempt to connect to the active SIM before failing over to the next available SIM:

```
(config network interface my_wwan)> modem sim_failover_retries num
(config network interface my_wwan)>
```

The default setting is **5**.

- ii. Configure how SIM failover will function if automatic SIM switching is unavailable:

```
(config network interface my_wwan)> modem sim_failover_alt value
(config network interface my_wwan)>
```

where *value* is one of:

- **none:** The device will perform no alternative action if automatic SIM switching is unavailable.
- **reset:** The device will reset the modem if automatic SIM switching is unavailable.
- **reboot:** The device will reboot if automatic SIM switching is unavailable.

7. The TX64 device uses a preconfigured list of Access Point Names (APNs) when attempting to connect to a cellular carrier for the first time. After the device has successfully connected, it will remember the correct APN. As a result, it is generally not necessary to configure APNs. See [Configure cellular modem APNs](#) for further information and instructions for setting an APN.

8. (Optional) To configure the IP address of a custom gateway or a custom netmask:

- a. Enable the custom gateway:

```
(config network interface my_wwan)> modem custom_gw enable true
(config network interface my_wwan)>
```

- b. Set the IP address and netmask of the custom gateway:

```
(config network interface my_wwan)> modem custom_gw gateway ip_
address/netmask
(config network interface my_wwan)> modem custom_gw
```

To override only the gateway netmask, but not the gateway IP address, use all zeros for the IP address. For example, **0.0.0.0/32** will use the network-provided gateway, but with a /32 netmask.

9. Optional IPv4 configuration items:

- a. IPv4 support is enabled by default. To disable:

```
(config network interface my_wwan)> ipv4 enable false
(config network interface my_wwan)>
```

- b. Set the metric:

```
(config network interface my_wwan)> ipv4 metric num
(config network interface my_wwan)>
```

See [Configure WAN/WWAN priority and default route metrics](#) for further information about metrics.

- c. Set the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, the weight is used to load balance traffic to the interfaces.

```
(config network interface my_wwan)> ipv4 weight num
(config network interface my_wwan)>
```

- d. Set the management priority. This determines which interface will have priority for central management activity. The interface with the highest number will be used.

```
(config network interface my_wwan)> ipv4 mgmt num
(config network interface my_wwan)>
```

- e. Set the MTU:

```
(config network interface my_wwan)> ipv4 mtu num
(config network interface my_wwan)>
```

- f. See [Configure SureLink active recovery to detect WAN/WWAN failures](#) for information about configuring active recovery.

10. Optional IPv6 configuration items:

- a. Click **IPv6** to expand.

- b. IPv6 support is enabled by default. To disable:

```
(config network interface my_wwan)> ipv6 enable false
(config network interface my_wwan)>
```

- c. Set the metric.

```
(config network interface my_wwan)> ipv6 metric num
(config network interface my_wwan)>
```

See [Configure WAN/WWAN priority and default route metrics](#) for further information about metrics.

- d. Set the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, the weight is used to load balance traffic to the interfaces.

```
(config network interface my_wwan)> ipv6 weight num
(config network interface my_wwan)>
```

- e. Set the management priority. This determines which interface will have priority for central management activity. The interface with the highest number will be used.

```
(config network interface my_wwan)> ipv6 mgmt num
(config network interface my_wwan)>
```

- f. Set the **MTU**.

```
(config network interface my_wwan)> ipv6 mtu num
(config network interface my_wwan)>
```

- g. See [Configure SureLink active recovery to detect WAN/WWAN failures](#) for information about configuring active recovery.

Show WAN and WWAN status and statistics

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. From the menu, click **Status**.
3. Under **Networking**, click **Interfaces**.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Enter the `show network` command at the Admin CLI prompt:

```
> show network
```

Interface	Proto	Status	Address
defaultip	IPv4	up	192.168.210.1/24
defaultlinklocal	IPv4	up	169.254.100.100/16
lan1	IPv4	up	192.168.2.1/24
lan1	IPv6	up	fd00:2704::1/48
loopback	IPv4	up	127.0.0.1/8
wan1	IPv4	up	10.10.10.10/24
wan1	IPv6	up	fe00:2404::240:f4ff:fe80:120/64
wwan1	IPv4	up	10.200.1.101/30
wwan1	IPv6	down	
wwan2	IPv4	pending	
wwan2	IPv6	down	

```
>
```

3. Enter `show network interface name` at the Admin CLI prompt to display additional information about a specific WAN. For example, to display information about WAN1, enter `show network interface wan1`:

```
> show network interface wan1
```

```
wan1 Interface Status
-----
Device           : wan1
Zone             : external

IPv4 Status      : up
IPv4 Type        : dhcp
IPv4 Address(es) : 10.10.10.10/24
IPv4 Gateway     : 10.10.10.1
IPv4 MTU         : 1500
IPv4 Metric      : 1
IPv4 Weight      : 10
IPv4 DNS Server(s) : 10.10.10.2, 10.10.10.3

IPv6 Status      : up
IPv6 Type        : dhcpv6
IPv6 Address(es) : fe00:2404::240:f4ff:fe80:120/64
IPv6 Gateway     : ff80::234:f3ff:ff0e:4320
IPv6 MTU         : 1500
IPv6 Metric      : 1
IPv6 Weight      : 10
IPv6 DNS Server(s) : fd00:244::1, fe80::234:f3f4:fe0e:4320

>
```

4. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a WAN or WWAN.


Follow this procedure to delete any WANs and WWANs that have been added to the system. You cannot delete the preconfigured WAN, **WAN1**, or the preconfigured WWANs, **WWAN1** and **WWAN2**.

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

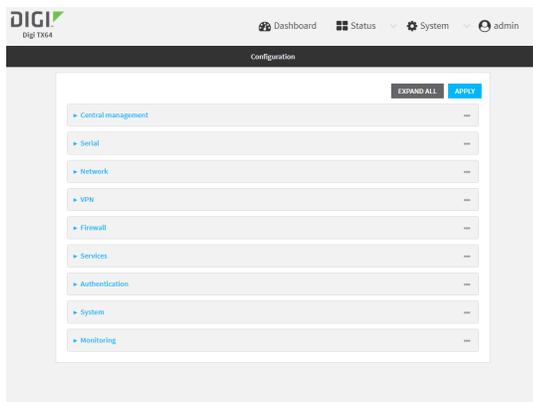

3. Click **Network > Interfaces**.
4. Click the menu icon (...) next to the name of the WAN or WWAN to be deleted and select **Delete**.

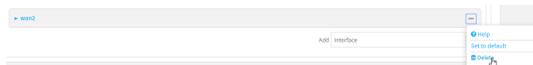

5. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



 **Command line**

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Use the **del** command to delete the WAN or WWAN. For example, to delete a WWAN named my_wwan:

```
(config)> del network interface my_wwan
```

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Local Area Networks (LANs)

The TX64 device is preconfigured with the following Local Area Networks (LANs):

Interface type	Preconfigured interfaces	Devices	Default configuration
Local Area Networks (LANs)	<ul style="list-style-type: none"> LAN1 	<ul style="list-style-type: none"> Bridge: LAN1 	<ul style="list-style-type: none"> Firewall zone: Internal IP address: 192.168.2.1/24 DHCP server enabled LAN priority: Metric=5
	<ul style="list-style-type: none"> LAN hotspot 	<ul style="list-style-type: none"> Bridge: hotspot_bridge 	<ul style="list-style-type: none"> DHCP server: disabled
	<ul style="list-style-type: none"> Loopback 	<ul style="list-style-type: none"> Ethernet: Loopback 	<ul style="list-style-type: none"> Firewall zone: Loopback IP address: 127.0.0.1/8
	<ul style="list-style-type: none"> Default IP 	<ul style="list-style-type: none"> Bridge: LAN1 	<ul style="list-style-type: none"> Firewall zone: Setup IP address 192.168.210.1/24
	<ul style="list-style-type: none"> Default Link-local IP 	<ul style="list-style-type: none"> Bridge: LAN1 	<ul style="list-style-type: none"> Firewall zone: Setup IP address 169.254.100.100/16

You can modify configuration settings for **LAN1**, and you can create new LANs.


This section contains the following topics:

About Local Area Networks (LANs)	101
Configure a LAN	101
Example: Configure two LANs	108
Show LAN status and statistics	117
Delete a LAN	118
DHCP servers	119
Create a Virtual LAN (VLAN) route	136

About Local Area Networks (LANs)

A Local Area Network (LAN) connects network devices together, such as Ethernet or Wi-Fi, in a logical Layer-2 network.

The following diagram shows a LAN connected to the **ETH2**, **ETH3**, and **ETH4** Ethernet devices and the **Digi AP (Wi-Fi)** access point. Once the LAN is configured and enabled, the devices connected to the network interfaces can communicate with each other, as demonstrated by the **ping** commands.

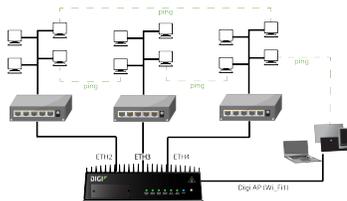

Configure a LAN

Configuring a Local Area Network (LAN) involves configuring the following items:

Required configuration items

- The interface type: either **Ethernet**, **IP Passthrough**, or **PPPoE**.
- The firewall zone: **Internal**.
- The network device or bridge that is used by the LAN.
- The IPv4 address and subnet mask for the LAN. While it is not strictly necessary for a LAN to have an IP address, if you want to send traffic from other networks to the LAN, you must configure an IP address.

Note By default, **LAN1** is set to an IP address of 192.168.2.1 and uses the IP subnet of 192.168.2.0/24. If the **WAN/ETH1** Ethernet device is being used by a WAN with the same IP subnet, you should change the default IP address and subnet of LAN1.

Additional configuration items


- Additional IPv4 configuration:
 - The metric for IPv4 routes associated with the LAN.
 - The relative weight for IPv4 routes associated with the LAN.
 - The IPv4 management priority of the LAN. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.
 - The IPv4 Maximum Transmission Unit (MTU) of the LAN.
 - IPv4 DHCP server configuration. See [DHCP servers](#) for more information.
- IPv6 configuration:
 - The metric for IPv6 routes associated with the LAN.
 - The relative weight for IPv6 routes associated with the LAN.

- The IPv6 management priority of the LAN. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.
- The IPv6 Maximum Transmission Unit (MTU) of the LAN.
- The IPv6 prefix length and ID.
- IPv6 DHCP server configuration. See [DHCP servers](#) for more information.
- MAC address blacklist and whitelist.


To create a new LAN or edit an existing LAN:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

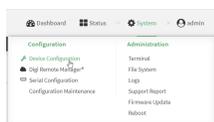

The **Configuration** window is displayed.

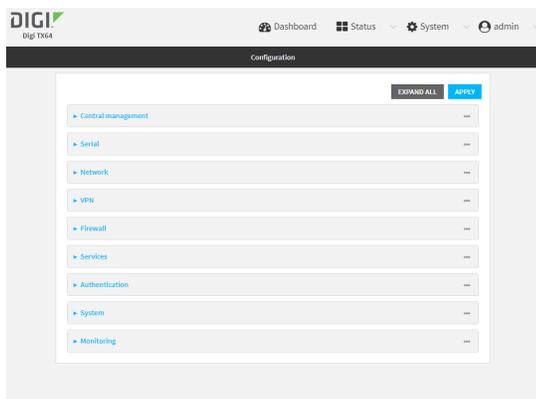

3. Click **Configuration > Network > Interfaces**.
4. Create the LAN or select an existing LAN:
 - To create a new LAN, for **Add interface**, type a name for the LAN and click **+**.



- To edit an existing LAN, click to expand the LAN.

The Interface configuration window is displayed.

New LANs are enabled by default. To disable, click **Enable**.

5. For **Interface type**, leave at the default setting of **Ethernet**.
6. For **Zone**, select the appropriate firewall zone. See [Firewall configuration](#) for further information.
7. For **Device**, select an Ethernet device, a Wi-Fi access point, or a bridge. See [Bridging](#) for more information about bridging.
8. Configure IPv4 settings:
 - a. Click to expand **IPv4**.
IPv4 support is enabled by default.
 - b. For **Type**, select **Static IP address**.
 - c. For **Address**, type the IP address and subnet of the LAN interface. Use the format *IPv4_address/netmask*, for example, 192.168.2.1/24.
 - d. Optional IPv4 configuration items:
 - i. Set the **Metric**.
 - ii. For **Weight**, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, **Weight** is used to load balance traffic to the interfaces.
 - iii. Set the **Management priority**. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
 - iv. Set the **MTU**.
 - e. Enable the DHCP server:
 - i. Click to expand **DHCP server**.
 - ii. Click **Enable**.
See [DHCP servers](#) for information about configuring the DHCP server.
9. See [Configure DHCP relay](#) for information about configuring **DHCP relay**.
10. (Optional) Configure IPv6 settings:
 - a. Click to expand **IPv6**.
 - b. **Enable** IPv6 support.
 - c. For **Type**, select **IPv6 prefix delegation**.
 - d. For **Prefix length**, type the minimum length of the prefix to assign to this LAN. If the minimum length is not available, then a longer prefix will be used.
 - e. For **Prefix ID**, type the identifier used to extend the prefix to the assigned length. Leave blank to use a random identifier.
 - f. Set the **Metric**.

- g. For **Weight**, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, **Weight** is used to load balance traffic to the interfaces.
 - h. Set the **Management priority**. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
 - i. Set the **MTU**.
11. (Optional) Click to expand **MAC address blacklist**.
Incoming packets will be dropped from any devices whose MAC addresses is included in the **MAC address blacklist**.
 - a. Click to expand **MAC address blacklist**.
 - b. For **Add MAC address**, click **+**.
 - c. Type the **MAC address**.
 12. (Optional) Click to expand **MAC address whitelist**.
If there whitelist entries are specified, incoming packets will only be accepted from the listed MAC addresses.
 - a. Click to expand **MAC address whitelist**.
 - b. For **Add MAC address**, click **+**.
 - c. Type the **MAC address**.
 13. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Create a new LAN or edit an existing one:

- To create a new LAN named **my_lan**:

```
(config)> add network interface my_lan
(config network interface my_lan)>
```

- To edit an existing LAN named **my_lan**, change to the **my_lan** node in the configuration schema:

```
(config)> network interface my_lan
(config network interface my_lan)>
```

4. Set the appropriate firewall zone:

```
(config network interface my_lan)> zone zone
(config network interface my_lan)>
```

See [Firewall configuration](#) for further information.

5. Select an Ethernet device, a Wi-Fi device, or a bridge. See [Bridging](#) for more information about bridging.
 - a. Enter **device ?** to view available devices and the proper syntax.

```
(config network interface my_lan)> device ?
```

Device: The network device used by this network interface.

Format:

```
/network/device/eth1
/network/device/eth2
/network/device/eth3
/network/device/eth4
/network/device/loopback
/network/bridge/hotspot_bridge
/network/bridge/lan1
/network/wireless/ap/digi_ap1
/network/wireless/ap/digi_ap2
/network/wireless/ap/digi_hotspot_ap1
/network/wireless/ap/digi_hotspot_ap2
```

Current value:

```
(config network interface my_lan)> device
```

- b. Set the device for the LAN:

```
(config network interface my_lan)> device device
(config network interface my_lan)>
```

6. Configure IPv4 settings:

- IPv4 support is enabled by default. To disable:

```
(config network interface my_lan)> ipv4 enable false
(config network interface my_lan)>
```

- The LAN is configured by default to use a static IP address for its IPv4 configuration. To configure the LAN to be a DHCP client, rather than using a static IP address:

```
(config network interface my_lan)> ipv4 type dhcp
(config network interface my_lan)>
```

These instructions assume that the LAN will use a static IP address for its IPv4 configuration.

- a. Set the IPv4 address and subnet of the LAN interface. Use the format *IPv4_address/netmask*, for example, 192.168.2.1/24.

```
(config network interface my_lan)> ipv4 address ip_address/netmask
(config network interface my_lan)>
```

- b. Optional IPv4 configuration items:

- i. Set the IP metric:

```
(config network interface my_lan)> ipv4 metric num
(config network interface my_lan)>
```

- ii. Set the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, the weight is used to load balance traffic to the interfaces.

```
(config network interface my_lan)> ipv4 weight num
(config network interface my_lan)>
```

- iii. Set the management priority. This determines which interface will have priority for central management activity. The interface with the highest number will be used.

```
(config network interface my_lan)> ipv4 mgmt num
(config network interface my_lan)>
```

- iv. Set the MTU:

```
(config network interface my_lan)> ipv4 mtu num
(config network interface my_lan)>
```

- c. Enable the DHCP server:

```
(config network interface my_lan)> ipv4 dhcp_server enable true
```

See [DHCP servers](#) for information about configuring the DHCP server.

7. (Optional) Configure IPv6 settings:

- a. Enable IPv6 support:

```
(config network interface my_lan)> ipv6 enable true
(config network interface my_lan)>
```

- b. Set the IPv6 type to DHCP:

```
(config network interface my_lan)> ipv6 type dhcpv6
(config network interface my_lan)>
```

- c. Generally, the default settings for IPv6 support are sufficient. You can view the default IPv6 settings by using the question mark (?):

```
(config network interface my_lan)> ipv6 ?
```

```
IPv6
```

```

Parameters                Current Value
-----
enable                    true           Enable
metric                    0           Metric
mgmt                      0           Management priority
mtu                       1500       MTU
prefix_id                 1           Prefix ID
prefix_length             48         Prefix length
type                      prefix_delegation  Type
weight                    10         Weight

Additional Configuration
-----
connection_monitor        Active recovery
dhcpv6_server             DHCPv6 server

(config network interface my_lan)>

```

View default settings for the IPv6 DHCP server:

```

(config network interface my_lan)> ipv6 dhcpv6_server ?

DHCPv6 server: The DHCPv6 server settings for this network interface.

Parameters                Current Value
-----
enable                    true           Enable

(config network interface my_lan)>

```

- d. Modify any of the remaining default settings as appropriate. For example, to change the minimum length of the prefix:

```

(config network interface my_lan)> ipv6 prefix_length 60
(config network interface my_lan)>

```

If the minimum length is not available, then a longer prefix will be used.

See [Configure WAN/WWAN priority and default route metrics](#) for further information about metrics.

- 8. Save the configuration and apply the change:

```

(config network interface my_lan)> save
Configuration saved.
>

```

9. Type **exit** to exit the Admin CLI.


Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example: Configure two LANs

The default configuration of the TX64 consists of one LAN (LAN1), which is configured to use the LAN1 bridge. Its default IP address is 192.168.2.1, and it has its DHCP server enabled. The default configuration of the LAN1 bridge consists of the following devices:

- ETH2
- ETH3
- ETH4
- WWAN2 cellular modem.
- WWAN2 cellular modem

In this example, we will create a second bridge, called LAN2. We will then create a second LAN, LAN2, and configure LAN2 to use the new bridge.

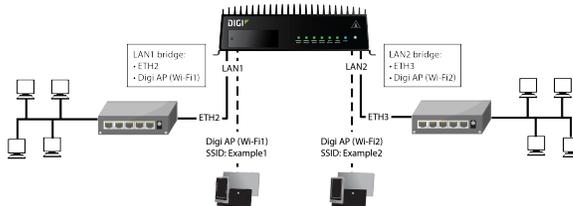

Note To avoid potential problems with access to the device while performing these procedures, you should use an Ethernet connection connected to LAN1 through the ETH2 Ethernet port, or, if using the command line, use the serial port.

Task one: Configure bridges

In this task, we will create a new bridge and configure the LAN1 and LAN2 bridges to use the following devices:


- LAN1 bridge:
 - ETH2
 - WWAN2 cellular modem.
- LAN2 bridge:
 - ETH3
 - Digi AP (Wi-Fi2)

In task two, we will assign the new LAN2 bridge to a LAN.


≡ WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.


- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

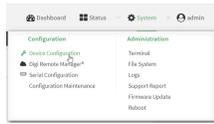

The **Configuration** window is displayed.

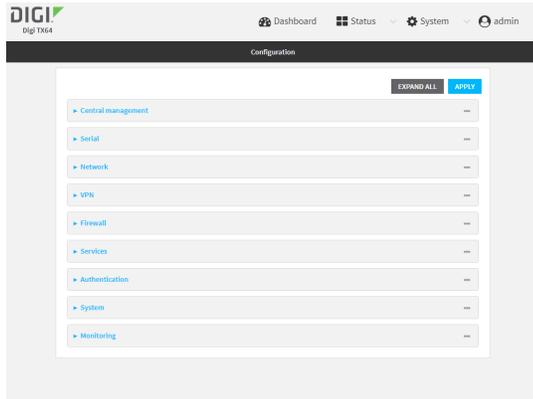


- Click **Configuration > Network > Bridges > LAN1 > Devices**.
- Delete the **ETH3**, **ETH4**, and **Digi AP (Wi-Fi2)** devices from the bridge:
 - Click the menu icon (...) next to the **ETH3** device and select **Delete**.

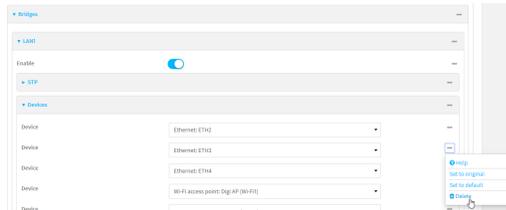


- Repeat for the **ETH4** and **Digi AP (Wi-Fi2)** devices.
- Create a new bridge:
 - For **Add Bridge**, type **LAN2** and click **+**.



- Add the **ETH3** and **Digi AP (Wi-Fi2)** devices to the bridge:
 - Click to expand **Devices**.
 - For **Add Device**, click **+**.

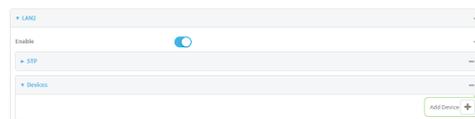

iii. For **Device**, select **Ethernet: ETH3**.

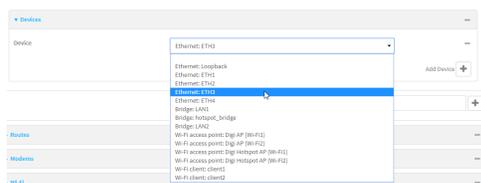

iv. For **Add device**, click **+** again and select **WiFi access point: Digi AP (Wi-Fi2)**.

6. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Display a list of devices currently configured for the LAN1 bridge:

```
(config)> show network bridge lan1 device
0 /network/device/eth2
1 /network/device/eth3
2 /network/device/eth4
3 /network/wireless/ap/digi_ap1
4 /network/wireless/ap/digi_ap2
(config)>
```

4. Remove devices from the LAN1 bridge that will be used by other interfaces in this configuration.

a. Remove the Digi AP (Wi-Fi2) access point (/network/wireless/ap/digi_ap2) from the bridge, using its index number, **4**, as determined above with the show command:

```
(config)> del network bridge lan1 device 4
(config)>
```

b. Remove the ETH4 device (/network/device/eth4) from the bridge, using its index number, **2**, as determined above with the show command:

```
(config)> del network bridge lan1 device 2
(config)>
```

- c. Remove the ETH3 device (/network/device/eth3) from the bridge, using its index number, **1**, as determined above with the show command:

```
(config)> del network bridge lan1 device 1
(config)>
```

- d. Use the show command again to verify that the LAN1 bridge now has only two devices, ETH2 and Digi AP (Wi-Fi1):

```
(config)> show network bridge lan1 device
0 /network/device/eth2
1 /network/wireless/ap/digi_ap1
(config)>
```

5. Create a new bridge, named LAN2:

```
(config)> add network bridge LAN2
(config network bridge LAN2)>
```

6. Add devices to the bridge:

- a. View available devices and the proper syntax by using the add device command with the **TAB** autocomplete feature:

```
(config network bridge LAN2)> add device end <TAB>
(config network bridge LAN2)> add device end /network/<TAB>
/network/device/eth1          /network/device/eth2
/network/device/eth3
/network/device/eth4          /network/device/loopback
/network/bridge/LAN2
/network/bridge/lan1         /network/wireless/ap/digi_ap1
/network/wireless/ap/digi_ap2
(config network bridge LAN2)>
```

- b. Add the ETH3 device to the bridge:

```
(config network bridge LAN2)> add device end /network/device/eth3
(config network bridge LAN2)>
```

- c. Add the Digi AP (Wi-Fi2) access point to the bridge:

```
(config network bridge LAN2)> add device end /network/wireless/ap/digi_
ap2
(config network bridge LAN2)>
```

- d. Use the show command again to verify that the LAN2 bridge now has two devices, ETH3 and Digi AP (Wi-Fi2):

```
(config network bridge LAN2)> show network bridge lan2 device
0 /network/device/eth3
```

```
1 /network/wireless/ap/digi_ap2
(config network bridge LAN2)>
```

7. Save the configuration and apply the change:

```
(config network bridge LAN2)> save
Configuration saved.
>
```

8. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Task two: Create a new LAN


In this task, we will create a new LAN, named LAN2, to use the LAN2 bridge created in task one.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

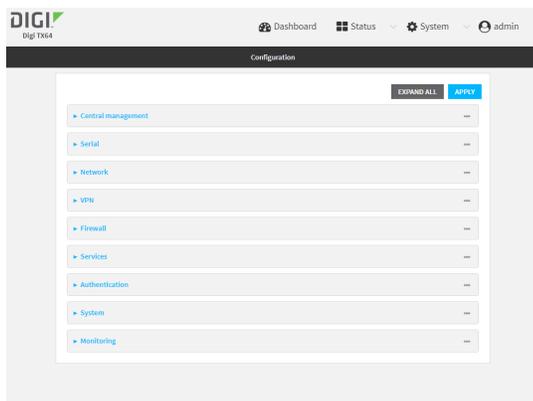


3. Click **Network > Interfaces**.

4. For **Add Interface:**, type **LAN2** and click **+**.



5. Configure the **LAN2** LAN:
 - a. For **Zone**, select **Internal**.
 - b. For **Device**, select **Bridge: LAN2**.
 - c. Click to expand **IPv4**.
 - d. For **Address**, type **192.168.3.1/24**.
 - e. Click to expand **DHCP server**.
 - f. Click **Enable**.

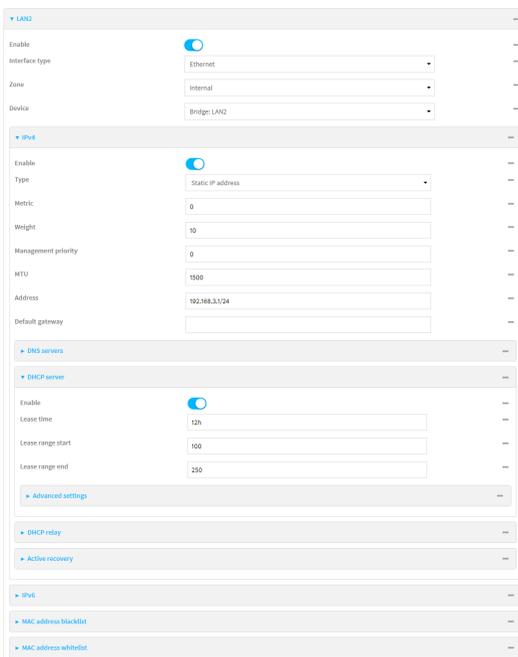

6. Enable the access points and set the SSIDs:
 - a. Configure **Digi AP (Wi-Fi1)**:
 - i. Click **Network > Wi-Fi > Access points > Digi AP (Wi-Fi1)**.
 - ii. Click **Enable**.
 - iii. For **SSID**, type **Example1**.
 - iv. For **Pre-shared key**, enter a password that clients will use to connect to this access point.



b. Configure **Digi AP (Wi-Fi2)**:

- i. Click **Network > Wi-Fi > Access points > Digi AP (Wi-Fi2)**.
- ii. Click **Enable**.
- iii. For **SSID**, type **Example2**.
- iv. For **Pre-shared key**, enter a password that clients will use to connect to this access point.



7. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a new network interface named LAN2:

```
(config)> add network interface LAN2
(config network interface LAN2)>
```

4. Configure the device for the LAN2 interface:

- a. Enter
- device ?**
- to view available devices and the proper syntax.

```
(config network interface LAN2)> device ?
```

```
Device: The network device used by this network interface.
```

```
Format:
```

```
/network/device/eth1  
/network/device/eth2  
/network/device/eth3  
/network/device/eth4  
/network/device/loopback  
/network/bridge/LAN2  
/network/bridge/lan1  
/network/wireless/ap/digi_ap1  
/network/wireless/ap/digi_ap2
```

```
Current value:
```

```
(config network interface LAN2)> device
```

- b. Set the device for the LAN2 interface to the LAN2 bridge created in task one:

```
(config network interface LAN2)> device /network/bridge/LAN2  
(config network interface LAN2)>
```

5. Configure the firewall zone for the LAN2 interface to **internal**:

```
(config network interface LAN2)> zone internal  
(config network interface LAN2)>
```

6. Configure the IPv4 address for the LAN2 interface:

```
(config network interface LAN2)> ipv4 address 192.168.3.1/24  
(config network interface LAN2)>
```

7. Enable the DHCP server for the LAN2 interface:

```
(config network interface LAN2)> ipv4 dhcp_server enable true  
(config network interface LAN2)>
```

8. Enable the access points and set the SSIDs:

- a. Move to the root of the configuration schema by typing three periods (...):

```
(config network interface LAN2)> ...  
(config)>
```

- b. Enable the Digi AP (Wi-Fi1) access point:

```
(config)> network wifi ap digi_ap1 enable true  
(config)>
```

- c. Set the SSID for the Digi AP (Wi-Fi1) access point:

```
(config)> network wifi ap digi_ap1 ssid Example1
(config)>
```

- d. Set the password for the Digi AP (Wi-Fi1) access point:

```
(config)> network wifi ap digi_ap1 encryption key_psk2 password1
(config)>
```

- e. Enable the Digi AP (Wi-Fi2) access point:

```
(config)> network wifi ap digi_ap2 enable true
(config)>
```

- f. Set the SSID for the Digi AP (Wi-Fi2) access point:

```
(config)> network wifi ap digi_ap1 ssid Example2
(config)>
```

- g. Set the password for the Digi AP (Wi-Fi2) access point:

```
(config)> network wifi ap digi_ap2 encryption key_psk2 password2
(config)>
```

9. Save the configuration and apply the change:

```
(config network bridge LAN2)> save
Configuration saved.
>
```

10. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Task three: Verify the new configuration

The final step in this example is to verify the new configuration.

1. Connect an Ethernet cable from an internet-connected modem to WAN1 through the WAN/ETH1 Ethernet port.
2. Verify that LAN1 is operating correctly:
 - a. Connect a device to LAN1 through the ETH2 Ethernet port, or by connecting to the Digi AP (Wi-Fi1) access point.
 - b. Verify that the device has been provided an IP address from the LAN1 DHCP server in the 192.168.2.* subnet.
3. Verify that LAN2 is operating correctly:
 - a. Connect a device to LAN2 through the ETH3 Ethernet port, or by connecting to the Digi AP (Wi-Fi2) access point.
 - b. Verify that the device has been provided an IP address from the LAN2 DHCP server in the 192.168.3.* subnet.

Show LAN status and statistics

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. From the menu, click **Status**.
3. Under **Networking**, click **Interfaces**.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Enter the **show network** command at the Admin CLI prompt:

```
> show network
```

Interface	Proto	Status	Address
defaultip	IPv4	up	192.168.210.1/24
defaultlinklocal	IPv4	up	169.254.100.100/16
lan1	IPv4	up	192.168.2.1/24
lan1	IPv6	up	fd00:2704::1/48
loopback	IPv4	up	127.0.0.1/8
wan1	IPv4	up	10.10.10.10/24
wan1	IPv6	up	fe00:2404::240:f4ff:fe80:120/64
wwan1	IPv4	up	10.200.1.101/30
wwan1	IPv6	down	
wwan2	IPv4	pending	
wwan2	IPv6	down	

```
>
```

3. Enter **show network interface name** at the Admin CLI prompt to display additional information about a specific LAN. For example, to display information about LAN1, enter **show network interface lan1**:

```
> show network interface lan1
```

```
lan1 Interface Status
-----
Device           : lan1
Zone             : internal

IPv4 Status      : up
IPv4 Type        : static
IPv4 Address(es) : 192.168.2.1/24
IPv4 Gateway     :
IPv4 MTU         : 1500
IPv4 Metric      : 5
```

IPv4 Weight : 10
IPv4 DNS Server(s) :

IPv6 Status : up
IPv6 Type : prefix
IPv6 Address(es) : fd00:2704::1/48
IPv6 Gateway :
IPv6 MTU : 1500
IPv6 Metric : 5
IPv6 Weight : 10
IPv6 DNS Server(s) :

>

4. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a LAN


Follow this procedure to delete any LANs that have been added to the system. You cannot delete the preconfigured LAN, **LAN1**.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

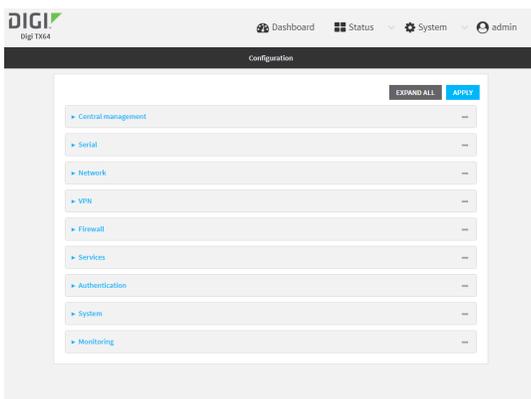

3. Click **Network > Interfaces**.

- Click the menu icon (...) next to the name of the LAN to be deleted and select **Delete**.

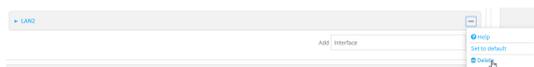

- Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Use the **del** command to delete the LAN. For example, to delete a LAN named my_lan:

```
(config)> del network interface my_lan
```

- Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

DHCP servers

You can enable DHCP on your TX64 device to assign IP addresses to clients, using either:

- The DHCP server for the device's local network, which assigns IP addresses to clients on the device's local network. Addresses are assigned from a specified pool of IP addresses. For a local network, the device uses the DHCP server that has the IP address pool in the same IP subnet as the local network.

When a host receives an IP configuration, the configuration is valid for a particular amount of time, known as the lease time. After this lease time expires, the configuration must be renewed. The host renews the lease time automatically.

- A DHCP relay server, which forwards DHCP requests from clients to a DHCP server that is running on a separate device.

Configure a DHCP server

Note These instructions assume you are configuring the device to use its local DHCP server. For instructions about configuring the device to use a DHCP relay server, see [Configure DHCP relay](#).

Required configuration items

- Enable the DHCP server.

Additional configuration items


- The lease address pool: the range of IP addresses issued by the DHCP server to clients.
- Lease time: The length, in minutes, of the leases issued by the DHCP server.
- The Maximum Transmission Units (MTU).
- The domain name suffix appended to host names.
- The IP gateway address given to clients.
- The IP addresses of the preferred and alternate Domain Name Server (DNS), NTP servers, and WINS servers that are given to clients.
- The TFTP server name.
- The filepath and name of the bootfile on the TFTP server.
- Custom DHCP options. See [Configure DHCP options](#) for information about custom DHCP options.
- Static leases. See [Map static IP addresses to hosts](#) for information about static leases.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

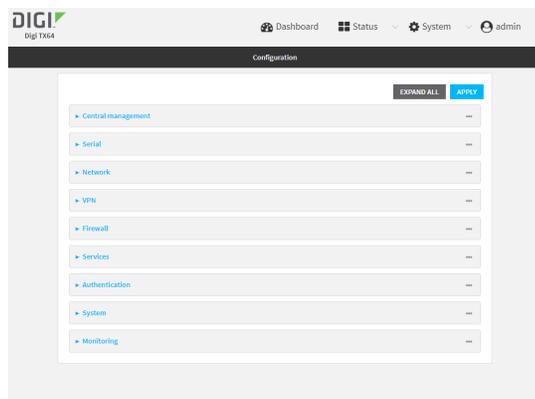

3. Click **Network > Interfaces**.
4. Click to expand an existing LAN, or create a new LAN. See [Configure a LAN](#).
5. Click to expand **IPv4 > DHCP server**.
6. **Enable** the DHCP server.
7. (Optional) For **Lease time**, type the amount of time that a DHCP lease is valid.
 Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
 For example, to set **Lease time** to ten minutes, enter **10m** or **600s**.
 The default is 12 hours.
8. (Optional) For **Lease range start** and **Lease range end**, type the lowest and highest IP address that the DHCP server will assign to a client. This value represents the low order byte of the address (the final triplet in an IPv4 address, for example, 192.168.2.**xxx**). The remainder of the IP address will be based on the LAN's static IP address as defined in the **Address** field.
 Allowed values are between **1** and **254**, and the default is **100** for **Lease range start** and **250** for **Lease range end**.
9. Optional DHCP server settings:
 - a. Click to expand **Advanced settings**.
 - b. For **Gateway**, select either:
 - **None**: No gateway is broadcast by the DHCP server. Client destinations must be resolvable without a gateway.
 - **Automatic**: Broadcasts the TX64 device's gateway.
 - **Custom**: Allows you to identify the IP address of a **Custom gateway** to be broadcast.
 The default is **Automatic**.
 - c. For **MTU**,
 - **None**: An MTU of length **0** is broadcast. This is not recommended.
 - **Automatic**: No MTU is broadcast and clients will determine their own MTU.
 - **Custom**: Allows you to identify a **Custom MTU** to be broadcast.
 The default is **Automatic**.
 - d. For **Domain name suffix**, type the domain name that should be appended to host names.

- e. For **Primary** and **Secondary DNS**, **Primary** and **Secondary NTP server**, and **Primary** and **Secondary WINS server**, select either:
 - **None**: No server is broadcast.
 - **Automatic**: Broadcasts the TX64 device's server.
 - **Custom**: Allows you to identify the IP address of the server.
- f. For **Bootfile name**, type the relative path and file name of the bootfile on the TFTP server.
- g. For **TFTP server name**, type the IP address or host name of the TFTP server.
10. See [Configure DHCP options](#) for information about **Custom DHCP options**.
11. See [Map static IP addresses to hosts](#) for information about **Static leases**.
12. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable the DHCP server for an existing LAN. For example, to enable the DHCP server for a LAN named **my_lan**:

```
(config)> network interface my_lan ipv4 dhcp_server enable true
(config)>
```

See [Configure a LAN](#) for information about creating a LAN.

4. (Optional) Set the amount of time that a DHCP lease is valid:

```
(config)> network interface my_lan ipv4 dhcp_server lease_time value
(config)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **network interface my_lan ipv4 dhcp_server lease_time** to ten minutes, enter either **10m** or **600s**:

```
(config)> network interface my_lan ipv4 dhcp_server lease_time 600s
(config)>
```

5. (Optional) Set the lowest IP address that the DHCP server will assign to a client. This value represents the low order byte of the address (the final triplet in an IPv4 address, for example, 192.168.2.**xxx**). The remainder of the IP address will be based on the LAN's static IP address as defined in the **address** parameter.

```
(config)> network interface my_lan ipv4 dhcp_server lease_start num
(config)>
```

Allowed values are between **1** and **254**, and the default is **100**.

6. (Optional) Set the highest IP address that the DHCP server will assign to a client:

```
(config)> network interface my_lan ipv4 dhcp_server lease_end num
(config)>
```

Allowed values are between **1** and **254**, and the default is **250**.

7. Optional DHCP server settings:

- a. Click to expand **Advanced settings**.
- b. Determine how the DHCP server should broadcast the gateway server:

```
(config)> network interface my_lan ipv4 dhcp_server advanced gateway
value
(config)>
```

where **value** is one of:

- **none**: No gateway is broadcast by the DHCP server. Client destinations must be resolvable without a gateway.
- **auto**: Broadcasts the TX64 device's gateway.
- **custom**: Allows you to identify the IP address of a custom gateway to be broadcast:

```
(config)> network interface my_lan ipv4 dhcp_server advanced
gateway_custom ip_address
(config)>
```

The default is **auto**.

- c. Determine how the DHCP server should broadcast the the MTU:

```
(config)> network interface my_lan ipv4 dhcp_server advanced mtu value
(config)>
```

where **value** is one of:

- **none**: An MTU of length **0** is broadcast. This is not recommended.
- **auto**: No MTU is broadcast and clients will determine their own MTU.
- **custom**: Allows you to identify a custom MTU to be broadcast:

```
(config)> network interface my_lan ipv4 dhcp_server advanced mtu_
custom mtu
(config)>
```

The default is **auto**.

- d. Set the domain name that should be appended to host names:

```
(config)> network interface my_lan ipv4 dhcp_server advanced domain_
suffix name
(config)>
```

- e. Set the IP address or host name of the primary and secondary DNS, the primary and secondary NTP server, and the primary and secondary WINS servers:

```
(config)> network interface my_lan ipv4 dhcp_server advanced primary_dns
value
(config)> network interface my_lan ipv4 dhcp_server advanced secondary_
dns value
(config)> network interface my_lan ipv4 dhcp_server advanced primary_ntp
value
(config)> network interface my_lan ipv4 dhcp_server advanced secondary_
ntp value
(config)> network interface my_lan ipv4 dhcp_server advanced primary_
wins value
(config)> network interface my_lan ipv4 dhcp_server advanced secondary_
wins value
(config)>
```

where **value** is one of:

- **none**: No server is broadcast.
- **auto**: Broadcasts the TX64 device's server.
- **custom**: Allows you to identify the IP address of the server. For example:

```
(config)> network interface my_lan ipv4 dhcp_server advanced
primary_dns_custom ip_address
(config)>
```

The default is **auto**.

- f. Set the IP address or host name of the TFTP server:

```
(config)> network interface my_lan ipv4 dhcp_server advanced nftp_server
ip_address
(config)>
```

- g. Set the relative path and file name of the bootfile on the TFTP server:

```
(config)> network interface my_lan ipv4 dhcp_server advanced bootfile
filename
(config)>
```

8. See [Configure DHCP options](#) for information about custom DHCP options.
9. See [Map static IP addresses to hosts](#) for information about static leases.

10. Save the configuration and apply the change:

```
(config network interface my_lan ipv4 dhcp_server advanced static_lease 0)>
save
Configuration saved.
>
```

11. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Map static IP addresses to hosts

You can configure the DHCP server to assign static IP addresses to specific hosts.

Required configuration items

- IP address that will be mapped to the device.
- MAC address of the device.

Additional configuration items

- A label for this instance of the static lease.


To map static IP addresses:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

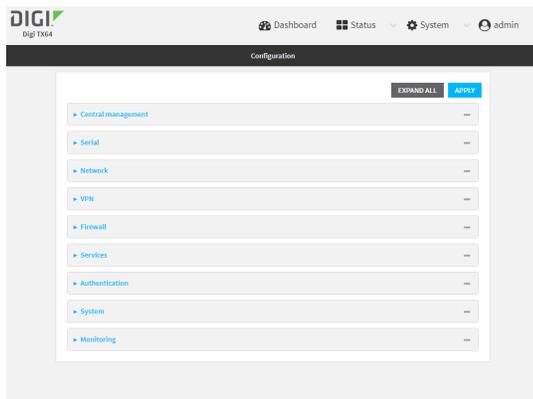

3. Click **Network > Interfaces**.
4. Click to expand an existing LAN, or create a new LAN. See [Configure a LAN](#).

5. Click to expand **IPv4 > DHCP server > Advanced settings > Static leases**.
6. For **Add Static lease**, click **+**.
7. Type the **MAC address** of the device associated with this static lease.
8. Type the **IP address** for the static lease.

Note The IP address here should be outside of the DHCP server's configured lease range. See [Configure a DHCP server](#) for further information about the lease range.

9. (Optional) For **Hostname**, type a label for the static lease. This does not have to be the device's actual hostname.
10. Repeat for each additional DHCP static lease.
11. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a static lease to the DHCP server configuration for an existing LAN. For example, to add static lease to a LAN named **my_lan**:

```
(config)> add network interface my_lan ipv4 dhcp_server advanced static_
lease end
(config network interface my_lan ipv4 dhcp_server advanced static_lease 0)>
```

See [Configure a LAN](#) for information about creating a LAN.

4. Set the MAC address of the device associated with this static lease, using the colon-separated format:

```
(config network interface my_lan ipv4 dhcp_server advanced static_lease 0)>
mac 00:40:D0:13:35:36
(config network interface my_lan ipv4 dhcp_server advanced static_lease 0)>
```

5. Set the IP address for the static lease:

```
(config network interface my_lan ipv4 dhcp_server advanced static_lease 0)>  
ip 10.01.01.10  
(network interface my_lan ipv4 dhcp_server advanced static_lease 0)>
```

Note The IP address here should be outside of the DHCP server's configured lease range. See [Configure a DHCP server](#) for further information about the lease range.

6. (Optional) Set a label for this static lease:

```
(config network interface my_lan ipv4 dhcp_server advanced static_lease 0)>  
name label  
(config network interface my_lan ipv4 dhcp_server advanced static_lease 0)>
```

7. Save the configuration and apply the change:

```
(config network interface my_lan ipv4 dhcp_server advanced static_lease 0)>  
save  
Configuration saved.  
>
```

8. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show current static IP mapping

To view your current static IP mapping:

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the main menu, click **Status**
3. Under **Networking**, click **DHCP Leases**.

Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config  
(config)>
```

3. Show the static lease configuration. For example, to show the static leases for a lan named **my_lan**:

```
(config)> show network interface my_lan ipv4 dhcp_server advanced static_lease
```

```

0
 ip 192.168.2.10
 mac BF:C3:46:24:0E:D9
 no name
1
 ip 192.168.2.11
 mac E3:C1:1F:65:C3:0E
 no name
(config)>
    
```

4. Type **cancel** to exit configuration mode:

```

(config)> cancel
>
    
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete static IP mapping entries


To delete a static IP entry:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

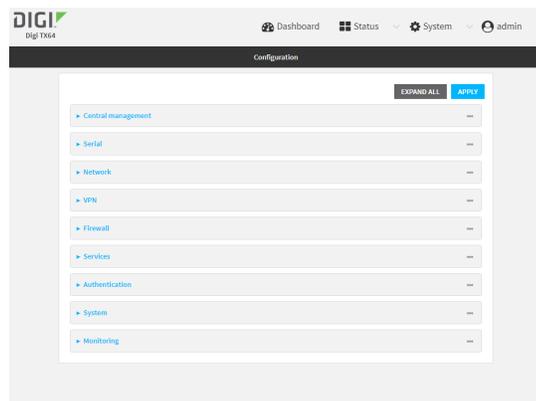

3. Click **Network > Interfaces**.
4. Click to expand an existing LAN.
5. Click to expand **IPv4 > DHCP server > Advanced settings > Static leases**.

- Click the menu icon (...) next to the name of the static lease to be deleted and select **Delete**.

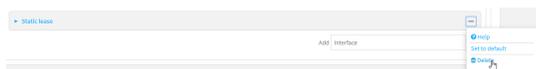

- Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Show the static lease configuration. For example, to show the static leases for a lan named **my_lan**:

```
(config)> show network interface my_lan ipv4 dhcp_server advanced static_lease
0
  ip 192.168.2.10
  mac BF:C3:46:24:0E:D9
  no name
1
  ip 192.168.2.11
  mac E3:C1:1F:65:C3:0E
  no name
(config)>
```

- Use the **del index_number** command to delete a static lease. For example, to delete the static lease for the device listed in the above output with a mac address of BF:C3:46:24:0E:D9 (index number **0**):

```
(config)> del network interface lan1 ipv4 dhcp_server advanced static_lease 0
(config)>
```

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure DHCP options

You can configure DHCP servers running on your TX64 device to send certain specified DHCP options to DHCP clients. You can also set the user class, which enables you to specify which specific DHCP clients will receive the option. You can also force the command to be sent to the clients.

DHCP options can be set on a per-LAN basis, or can be set for all LANs. A total of 32 DHCP options can be configured.

Required configuration items

- DHCP option number.
- Value for the DHCP option.

Additional configuration items


- The data type of the value.
- Force the option to be sent to the DHCP clients.
- A label for the custom option.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

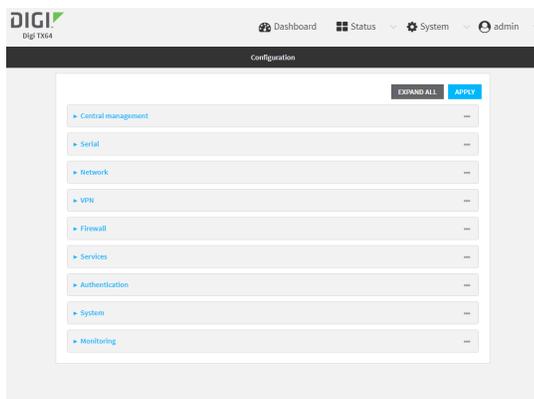

3. Click **Network > Interfaces**.
4. Click to expand an existing LAN, or create a new LAN. See [Configure a LAN](#).
5. Click to expand **IPv4 > DHCP server > Advanced settings > Custom DHCP option**.
6. For **Add Custom option**, click **+**.
7. For **Option number**, type the DHCP option number.
8. For **Value**, type the value of the DHCP option.
9. (Optional) For **Label**, type a label for the custom option.
10. (Optional) If **Forced send** is enabled, the DHCP option will always be sent to the client, even if the client does not ask for it.
11. (Optional) For **Data type**, select the data type that the option uses. If the incorrect data type is selected, the device will send the value as a string.
12. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a custom DHCP option to the DHCP server configuration for an existing LAN. For example, to add static lease to a LAN named **my_lan**:

```
(config)> add network interface my_lan ipv4 dhcp_server advanced custom_
option end
(config network interface my_lan ipv4 dhcp_server advanced custom_option
0)>
```

See [Configure a LAN](#) for information about creating a LAN.

4. Custom options are enabled by default. To disable:

```
(config network interface my_lan ipv4 dhcp_server advanced custom_option
0)> enable false
(config network interface my_lan ipv4 dhcp_server advanced custom_option
0)>
```

5. Set the option number for the DHCP option:

```
(config network interface my_lan ipv4 dhcp_server advanced custom_option
0)> option 210
(config network interface my_lan ipv4 dhcp_server advanced custom_option
0)>
```

6. Set the value for the DHCP option:

```
(config network interface my_lan ipv4 dhcp_server advanced custom_option
0)> value_str value
(network interface my_lan ipv4 dhcp_server advanced custom_option 0)>
```

7. (Optional) Set a label for this custom option:

```
(config network interface my_lan ipv4 dhcp_server advanced custom_option
0)> name label
(config network interface my_lan ipv4 dhcp_server advanced custom_option
0)>
```

8. (Optional) To force the DHCP option to always be sent to the client, even if the client does not ask for it:

```
(config network interface my_lan ipv4 dhcp_server advanced custom_option
0)> force true
(config network interface my_lan ipv4 dhcp_server advanced custom_option
0)>
```

9. (Optional) Set the data type that the option uses.

If the incorrect data type is selected, the device will send the value as a string.

```
(config network interface my_lan ipv4 dhcp_server advanced custom_option
0)> datatype value
(config network interface my_lan ipv4 dhcp_server advanced custom_option
0)>
```

where *value* is one of:

- **1byte**
- **2byte**

- **4byte**
- **hex**
- **ipv4**
- **str**

The default is **str**.

10. Save the configuration and apply the change:

```
(config network interface my_lan ipv4 dhcp_server advanced custom_option
0)> save
Configuration saved.
>
```

11. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure DHCP relay

DHCP relay allows a router to forward DHCP requests from one LAN to a separate DHCP server, typically connected to a different LAN.

For the TX64 device, DHCP relay is configured by providing the IP address of a DHCP relay server, rather than an IP address range. If both the DHCP relay server and an IP address range are specified, DHCP relay is used, and the specified IP address range is ignored.

Multiple DHCP relay servers can be provided for each LAN. If multiple relay servers are provided, DHCP requests are forwarded to all servers without waiting for a response. Clients will typically use the IP address from the first DHCP response received.

Configuring DHCP relay involves the following items:

Required configuration items

- Disable the DHCP server, if it is enabled.
- IP address of the primary DHCP relay server, to define the relay server that will respond to DHCP requests.

Additional configuration items


- IP address of additional DHCP relay servers.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

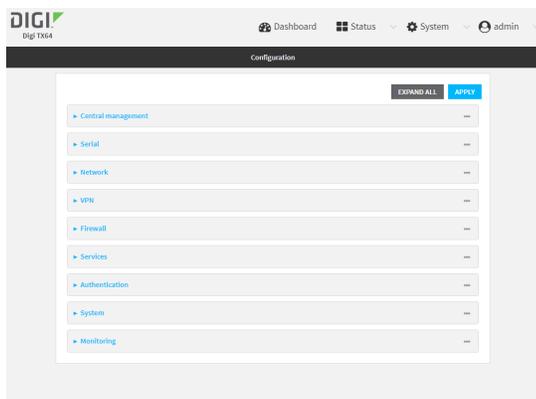

3. Click **Network > Interfaces**.
4. Click to expand an existing LAN, or create a new LAN. See [Configure a LAN](#).
5. Disable the DHCP server, if it is enabled:
 - a. Click to expand **IPv4 > DHCP server**.
 - b. Click **Enable** to toggle off the DHCP server.
6. Click to expand **DHCP relay**.
7. For **Add DHCP Server**, click **+**.
8. For **DHCP server address**, type the IP address of the relay server.
9. Repeat for each additional DHCP relay server.
10. Click **Apply** to save the configuration and apply the change.
 The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
 Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a DHCP relay server to an existing LAN. For example, to add a server to a LAN named **my_lan**:

```
(config)> add network interface my_lan ipv4 dhcp_relay end
(config network interface lan1 my_lan dhcp_relay 0)>
```

See [Configure a LAN](#) for information about creating a LAN.

4. Set the IP address of the DHCP relay server:

```
(config network interface my_lan ipv4 dhcp_relay 0)> address 10.10.10.10
(config network interface my_lan ipv4 dhcp_relay 0)>
```

5. (Optional) Add additional DHCP relay servers:

- a. Move back one step in the configuration schema by typing two periods (..):

```
(config network interface my_lan ipv4 dhcp_relay 0)> ..
(config network interface my_lan ipv4 dhcp_relay)>
```

- b. Add the next server:

```
(config network interface lan1 ipv4 dhcp_relay)> add end
(config network interface lan1 ipv4 dhcp_relay 1)>
```

- c. Set the IP address of the DHCP relay server:

```
(config network interface my_lan ipv4 dhcp_relay 1)> address 10.10.10.11
(config network interface my_lan ipv4 dhcp_relay 1)>
```

- d. Repeat for each additional relay server.

2. Disable the DHCP server, if it is enabled:

```
(config network interface my_lan ipv4 dhcp_relay 1)> .. .. dhcp_server
enable false
(config network interface my_lan ipv4 dhcp_relay 1)>
```

6. Save the configuration and apply the change:

```
(config network interface lan1 ipv4 dhcp_relay 1)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show DHCP server status and settings

View DHCP status to monitor which devices have been given IP configuration by the TX64 device and to diagnose DHCP issues.

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the main menu, click **Status**
3. Under **Networking**, click **DHCP Leases**.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Enter the [show dhcp-lease](#) command at the Admin CLI prompt:

```
> show dhcp-lease
```

IP Address	Hostname	Expires
192.168.2.194	MTK-ENG-USER1	
192.168.2.195	MTK-ENG-USER2	

```
>
```

3. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Create a Virtual LAN (VLAN) route

Virtual LANs (VLANs) allow splitting a single physical LAN into separate Virtual LANs. This is useful for security reasons, and also helps to reduce broadcast traffic on the LAN.

Required configuration items

- Device to be assigned to the VLAN.
- The VLAN ID. The TCP header uses the VLAN ID to identify the destination VLAN for the packet.


To create a VLAN:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

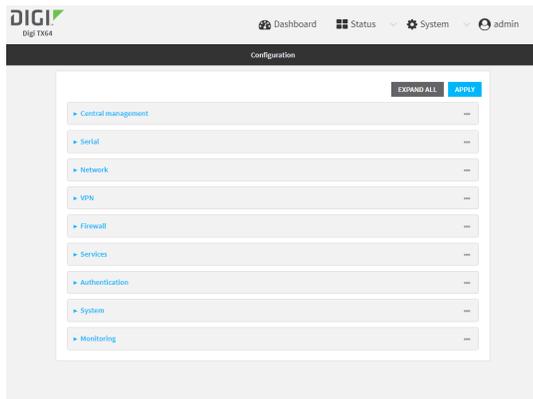

3. Click **Network > Virtual LAN**.
4. Type a name for the VLAN and click **+**.
5. Select the **Device**.
6. Type or select a unique numeric **ID** for the VLAN ID.
7. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add the VLAN:

```
(config)> add network vlan name
(config)>
```

4. Set the device to be used by the VLAN:

- a. View a list of available devices:

```
(config network vlan vlan1)> device ?

Device: The Ethernet device to use for this virtual LAN
Format:
/network/device/wan1
/network/device/lan1
/network/device/eth3
/network/device/eth4
/network/device/loopback
/network/vlan/vlan1
/network/bridge/lan1
/network/wireless/ap/digi_ap1
/network/wireless/ap/digi_ap2
Current value:
```

```
(config network vlan vlan1)>
```

- b. Add the device:

```
(config network vlan vlan1)> device /network/device/eth4
(config network vlan vlan1)>
```

5. Set the VLAN ID:

```
(config network vlan vlan1)> id value
```

where *value* is an integer between **1** and **4095**.

6. Save the configuration and apply the change:

```
(config network vlan vlan1)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Bridging

Bridging is a mechanism to create a single network consisting of multiple devices, such as Ethernet devices and wireless access points.

By default, the TX64 has the following preconfigured bridges:

Interface type	Preconfigured interfaces	Devices	Default configuration
Bridges	<ul style="list-style-type: none"> Bridge: LAN1 	<ul style="list-style-type: none"> Ethernet: ETH2 Ethernet: ETH3 Ethernet: ETH4 Wi-Fi access point: Digi AP (Wi-Fi1) Wi-Fi access point: Digi AP (Wi-Fi2) 	<ul style="list-style-type: none"> Enabled Used by the LAN1 interface
	<ul style="list-style-type: none"> hotspot_bridge 	<ul style="list-style-type: none"> Wi-Fi access point: Digi Hotspot AP (Wi-Fi1) Wi-Fi access point: Digi Hotspot AP (Wi-Fi2) 	<ul style="list-style-type: none"> Disabled Used by the hotspot interface

You can modify configuration settings for the existing bridge, and you can create new bridges.

This section contains the following topics:

Edit the preconfigured LAN1 bridge	141
Configure a bridge	144

Edit the preconfigured LAN1 bridge

Required configuration items

- Enable or disable the bridge.
- Modify the devices included in the bridge.

Additional configuration items

- Enable Spanning Tree Protocol (STP).


To edit the preconfigured **LAN1** bridge:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

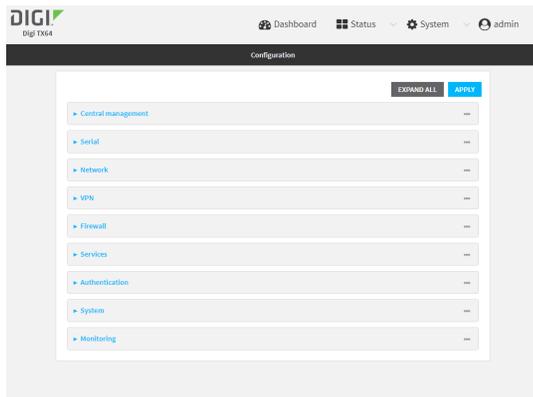

3. Click **Network > Bridges > LAN1**.
4. The **LAN1** bridge is enabled by default. To disable, uncheck **Enable**.
5. Modify the list of devices that are a part of the bridge. By default, the **LAN1** bridge includes the following devices:
 - Ethernet: ETH2
 - Ethernet: ETH3
 - Ethernet: ETH4
 - Wi-Fi access point: Digi AP (Wi-Fi1)
 - Wi-Fi access point: Digi AP (Wi-Fi2)

- a. To delete a device from the bridge, click the down arrow (▼) next to the field label and select **Delete**.

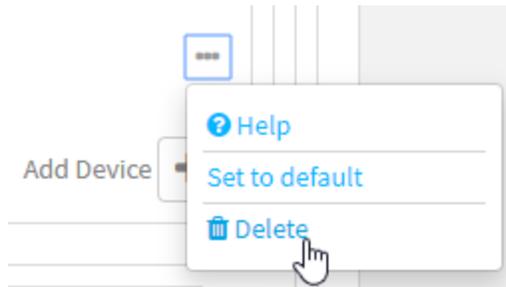

- b. To add a device, for **Add device**, click **+** and select the **Device**.
- 6. (Optional) Enable Spanning Tree Protocol (STP).
STP is used when using multiple LANs on the same device, to prevent bridge loops and other routing conflicts.
 - a. Click **STP**.
 - b. Click **Enable**.
 - c. For **Forwarding delay**, enter the number of seconds that the device will spend in each of the listening and learning states before the bridge begins forwarding data. The default is **2** seconds.
- 7. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. The **LAN1** bridge is enabled by default.

- To disable:

```
(config)> network bridge lan1 enable false
(config)>
```

- To enable if it has been disabled:

```
(config)> network bridge lan1 enable true
(config)>
```

4. Modify the list of devices that are a part of the bridge. By default, the **LAN1** bridge includes the following devices:

- Ethernet: ETH2
- Ethernet: ETH3
- Ethernet: ETH4
- Wi-Fi access point: Digi AP (Wi-Fi1)
- Wi-Fi access point: Digi AP (Wi-Fi2)

- a. To delete a device from the bridge:

- i. Determine the index numbers of the devices included with the bridge:

```
(config)> show network bridge lan1 device
0 /network/device/eth2
1 /network/device/eth3
2 /network/device/eth4
3 /network/wireless/ap/digi_ap1
4 /network/wireless/ap/digi_ap2
(config)>
```

- ii. Use the index number to delete the appropriate device. For example, to delete the **Digi AP (Wi-Fi1)** Wi-Fi access point from the bridge:

```
(config)> del network bridge lan1 device 3
(config)>
```

Note If you are deleting multiple devices from the bridge, the device index may be reordered after each deletion. As a result, best practice is to perform a **show network bridge lan1 device** command after each device is deleted to determine the new index numbering.

- b. Add devices to the bridge:

- i. Determine available devices:

```
(config network bridge my_bridge)> .. .. interface lan1 device ?
```

Device: The network device used by this network interface.

Format:

```
/network/device/eth1
/network/device/eth2
/network/device/eth3
/network/device/eth4
/network/device/loopback
/network/bridge/hotspot_bridge
/network/bridge/lan1
/network/wireless/ap/digi_ap1
```

```

/network/wireless/ap/digi_ap2
/network/wireless/ap/digi_hotspot_ap1
/network/wireless/ap/digi_hotspot_ap2

```

```

Default value: /network/bridge/lan1
Current value: /network/bridge/lan1

```

```

(config network bridge my_bridge)>

```

- ii. Add the appropriate device. For example, to add the **Digi AP (Wi-Fi1)** Wi-Fi access point:

```

(config network bridge my_bridge)> add device end
/network/wireless/ap/digi_ap1
(config)>

```

5. (Optional) Enable Spanning Tree Protocol (STP).

STP is used when multiple LANs are configured on the same device, to prevent bridge loops and other routing conflicts.

- a. Enable STP:

```

(config)> network bridge lan1 stp enable true

```

- b. Set the number of seconds that the device will spend in each of the listening and learning states before the bridge begins forwarding data:

```

(config)> network bridge lan1 stp forward_delay num
(config)>

```

The default is **2** seconds.

6. Save the configuration and apply the change:

```

(config)> save
Configuration saved.
>

```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a bridge

Required configuration items

- A name for the bridge.
Bridges are enabled by default.
- Devices to be included in the bridge.

Additional configuration items

- Enable Spanning Tree Protocol (STP).


To create a bridge:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

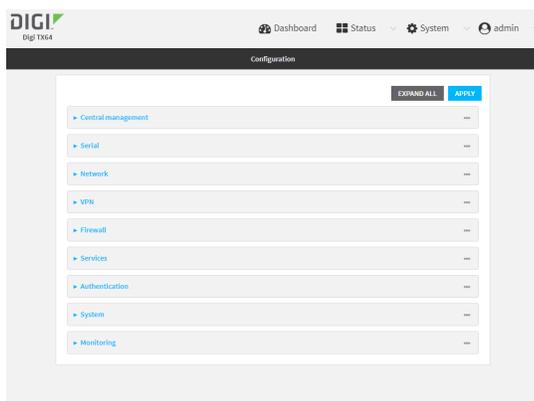

3. Click **Network > Bridges**.
4. For **Add Bridge**, type a name for the bridge and click **+**.
5. Bridges are enabled by default. To disable, uncheck **Enable**.
6. Add devices to the bridge:
 - a. Click to expand **Devices**.
 - b. For **Add device**, click **+**.
 - c. Select the **Device**.
 - d. Repeat to add additional devices.
7. (Optional) Enable Spanning Tree Protocol (STP).
 STP is used when using multiple LANs on the same device, to prevent bridge loops and other routing conflicts.
 - a. Click **STP**.
 - b. Click **Enable**.
 - c. For **Forwarding delay**, enter the number of seconds that the device will spend in each of the listening and learning states before the bridge begins forwarding data. The default is **2** seconds.
8. Click **Apply** to save the configuration and apply the change.
 The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Create the bridge:

```
(config)> add network bridge my_bridge
(config network bridge my_bridge)>
```

4. Bridges are enabled by default.

- To disable:

```
(config network bridge my_bridge)> enable false
(config network bridge my_bridge)>
```

- To enable if it has been disabled:

```
(config network bridge my_bridge)> enable true
(config network bridge my_bridge)>
```

5. Add devices to the bridge:

- a. Determine available devices:

```
(config network bridge my_bridge)> .. .. interface lan1 device ?
```

Device: The network device used by this network interface.

Format:

```
/network/device/eth1
/network/device/eth2
/network/device/eth3
/network/device/eth4
/network/device/loopback
/network/bridge/hotspot_bridge
/network/bridge/lan1
/network/wireless/ap/digi_ap1
/network/wireless/ap/digi_ap2
/network/wireless/ap/digi_hotspot_ap1
/network/wireless/ap/digi_hotspot_ap2
```

Default value: /network/bridge/lan1

Current value: /network/bridge/lan1

```
(config network bridge my_bridge)>
```

- b. Add the appropriate device. For example, to add the **Digi AP (Wi-Fi1)** Wi-Fi access point:

```
(config network bridge my_bridge)> add device end
/network/wireless/ap/digi_ap1
(config)>
```

6. (Optional) Enable Spanning Tree Protocol (STP).

STP is used when using multiple LANs on the same device, to prevent bridge loops and other routing conflicts.

- a. Enable STP:

```
(config network bridge my_bridge)> stp enable true
```

- b. Set the number of seconds that the device will spend in each of the listening and learning states before the bridge begins forwarding data:

```
(config network bridge my_bridge)> stp forward_delay num
(config)>
```

The default is **2** seconds.

7. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

8. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Serial port

TX64 devices have a single serial port that provides access to the command-line interface.

Use an RS-232 serial cable to establish a serial connection from your TX64 to your local laptop or PC. Use a terminal emulator program to establish the serial connection. The terminal emulator's serial connection must be configured to match the configuration of the TX64 device's serial port. The default serial port configuration for the TX64 is:

- Baud rate: **115200**
- Data bits: **8**
- Parity: **None**
- Stop bits: **1**
- Flow control: **None**

Configure the serial port

By default, the TX64 serial port is configured as follows:


- **Enabled**
- **Serial mode:** Login
- **Label:** None
- **Baud rate:** 115000
- **Data bits:** 8
- **Parity:** None
- **Stop bits:** 1
- **Flow control:** None

To change the configuration to match the serial configuration of the device to which you want to connect:


WebUI

1. Log into the TX64 WebUI as a user with Admin access.

- On the menu, click **System**. Under **Configuration**, click **Serial Configuration**.

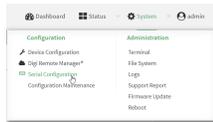


The **Serial Configuration** page is displayed.

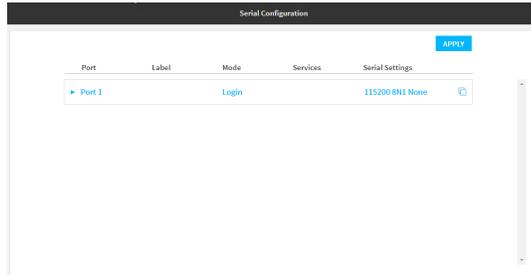

Note You can also configure the serial port by using **Device Configuration > Serial**. Changes made by using either **Device Configuration** or **Serial Configuration** will be reflected in both.

- Click to expand **Port 1**.

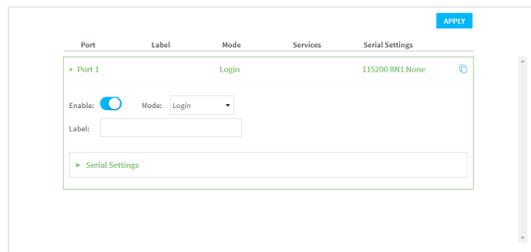


The serial port is enabled by default. To disable, toggle off **Enable**.

- For **Mode**, select either **Login** or **Remote**.
 - Login**: Allows the user to log into the device through the serial port.
 - Remote**: Allows for remote access to another device that is connected to the serial port.


The default is **Login**.

- (Optional) For **Label**, enter a label that will be used when referring to this port.
- Click to expand **Serial Settings**.

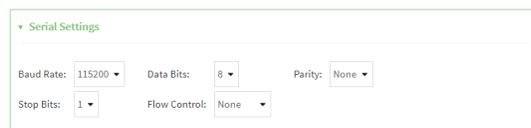

- For **Baud rate**, select the baud rate used by the device to which you want to connect.
- For **Data bits**, select the number of data bits used by the device to which you want to connect.
- For **Parity**, select the type of parity used by the device to which you want to connect.
- For **Stop bits**, select the number of stop bits used by the device to which you want to connect.

11. For **Flow control**, select the type of flow control used by the device to which you want to connect.
12. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.

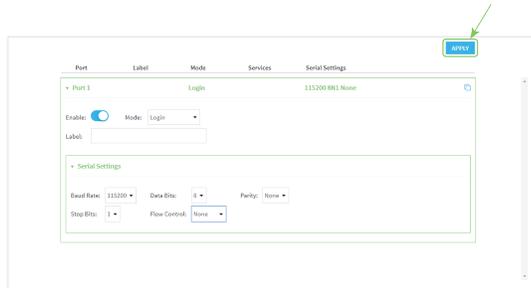

 **Command line**

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config  
(config)>
```

3. The serial port is enabled by default. To disable:

```
(config)> serial port1 enable false
```

4. Set the mode:

```
(config)> serial port1 mode mode
```

where *mode* is either:

 - **login**: Allows the user to log into the device through the serial port.
 - **remote**: Allows for remote access to another device that is connected to the serial port.

The default is **login**.
5. (Optional) Set a label that will be used when referring to this port.

```
(config)> serial port1 label label
```

6. Set the baud rate used by the device to which you want to connect:

```
(config)> serial port1 baudrate rate
```

7. Set the number of data bits used by the device to which you want to connect:

```
(config)> serial port1 databits bits
```

8. Set the type of parity used by the device to which you want to connect:

```
(config)> serial port1 parity parity
```

Allowed values are:

 - **even**
 - **odd**
 - **none**

The default is **none**.
9. Set the stop bits used by the device to which you want to connect:

```
(config)> serial port1 stopbits bits
```

10. Set the type of flow control used by the device to which you want to connect:

```
(config)> serial port1 flow type
```

Allowed values are:

- **none**
- **rts/cts**
- **xon/xoff**

The default is **none**.

11. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

12. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show serial status and statistics

To show the status and statistics for the serial port:

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the main menu, click **Status**
3. Under **Connections**, click **Serial**.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Use the `show serial` command:

```
> show serial
```

Label	Port	Enable	Mode	Baudrate
Serial 1	port1	true	login	115000

```
>
```

3. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Wi-Fi

This chapter applies to the TX64W Wi-Fi enabled model only. The TX64W device is preconfigured with the following access point:

The TX64 device is preconfigured with the following Wi-Fi access points:

Interface type	Preconfigured interfaces	Devices	Default configuration
Wi-Fi	<ul style="list-style-type: none"> Wi-Fi access point: Digi AP (Wi-Fi1) 	<ul style="list-style-type: none"> Wi-Fi1 radio 	<ul style="list-style-type: none"> Disabled SSID: Digi2 Encryption: WAP2 Personal (PSK) Pre-shared key: Not configured
	<ul style="list-style-type: none"> Wi-Fi access point: Digi AP (Wi-Fi2) 	<ul style="list-style-type: none"> Wi-Fi2 radio 	<ul style="list-style-type: none"> Disabled SSID: Digi2 Encryption: WAP2 Personal (PSK) Pre-shared key: Not configured
	<ul style="list-style-type: none"> Digi Hotspot AP (Wi-Fi1) 	<ul style="list-style-type: none"> Wi-Fi1 radio 	<ul style="list-style-type: none"> Disabled SSID: Digi Hotspot Encryption: Open (Unencrypted)
	<ul style="list-style-type: none"> Digi Hotspot AP (Wi-Fi2) 	<ul style="list-style-type: none"> Wi-Fi2 radio 	<ul style="list-style-type: none"> Disabled SSID: Digi Hotspot Encryption: Open (Unencrypted)

You can modify configuration settings for the existing Wi-Fi access points, and you can create new Wi-Fi access points. You can also create Wi-Fi clients.

This chapter contains the following topics:

Wi-Fi configuration	155
Configure the Wi-Fi module channel	156
Configure the Wi-Fi module band and protocol	158
Configure a Wi-Fi access point with no security	160
Configure a Wi-Fi access point with personal security	166

Configure a Wi-Fi access point with enterprise security172
 Show Wi-Fi access point status and statistics179
 Configure a Wi-Fi client and add client networks180
 Show Wi-Fi client status and statistics187

Wi-Fi configuration

The TX64 device has two Wi-Fi radios. You can configure the Wi-Fi radios for either Wi-Fi access point mode or Wi-Fi client mode. By default, the TX64 radios are configured to use access point mode.

A typical configuration is to configure one Wi-Fi radio in access point mode with one or multiple access points, and configure the other radio, connected to a separate set of antennas, as a Wi-Fi client to be used as a WAN interface.

Default Wi-Fi configuration

The default Wi-Fi configuration of the TX64 device is:

- Radios:

	Wi-Fi1 radio	Wi-Fi2 radio:
Enabled or disabled	Enabled	Enabled
Frequency band	2.4 GHz	5 GHz
Access point mode	802.11b/g/n	802.11ac/n
Channel	Automatic	Automatic
Channel width	20/40 MHz	40 MHz
Beacon interval	100	100

- Access points:

	Digi AP (Wi-Fi1)	Digi AP (Wi-Fi2):
Enabled or disabled	Disabled	Disabled
Radio	Wi-Fi1 radio	Wi-Fi2 radio
SSID	Digi2	Digi2
SSID broadcast	Enabled	Enabled
Encryption	WPA2 Personal (PSK)	WPA2 Personal (PSK)
Pre-shared key	Default password as found on the device's label	Default password as found on the device's label
Group rekey interval	10 minutes	10 minutes

- Client mode connections: none.


Configure the Wi-Fi module channel

By default, each Wi-Fi radio is configured to automatically select the best channel to use with respect to other Wi-Fi networks. You can configure a specific channel to use for a Wi-Fi Wi-Fi radio by using the following steps.


Note For the 2.4 GHz band, only channels 1 to 11 are supported; channels 12, 13, and 14 are not supported. For the 5.0 GHz band, only non-Dynamic Frequency Selection (DFS) channels are supported.

≡ WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

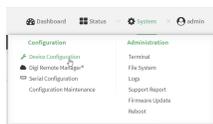

The **Configuration** window is displayed.

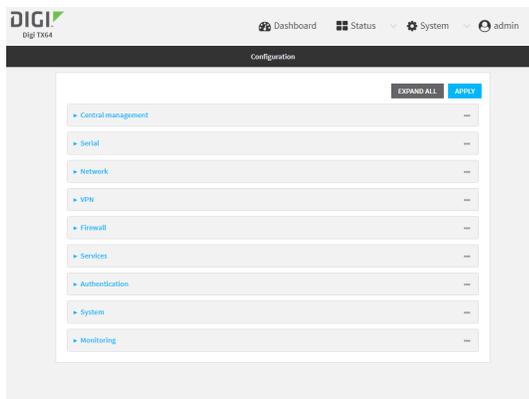

3. Click **Network > WiFi**.
4. Click to expand the appropriate Wi-Fi radio.
5. For **Channel**, select the channel. Only channels appropriate for the band are displayed.

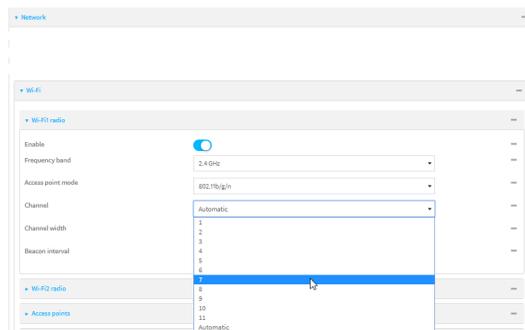

- Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Set the channel for the radio:
 - Determine available radios:

```
(config)> network wifi radio ?
```

```
Additional Configuration
```

```
-----
```

```
wifi1                Wi-Fi1 radio
wifi2                Wi-Fi2 radio
```

```
(config)> network wifi radio
```

- Determine the band for the appropriate radio:

```
(config)> network wifi radio wifi1 band
2400mhz
(config)>
```

- Set the channel for the Wi-Fi radio:

```
(config)> network wifi radio wifi1 2400mhz channel value
(config)>
```

where *value* is:

- For 2.4 GHz:
 - **1** through **11**
 - **auto**
- For 5 GHz:

- 36
 - 40
 - 44
 - 48
 - auto
4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the Wi-Fi module band and protocol


For Wi-Fi radios that support both 2.4 GHz and 5 GHz modes, you can configure the band. **Wi-Fi1 radio** defaults to use 2.4 GHz b/g/n band, and **Wi-Fi2 radio** only supports 5 GHz ac/n.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

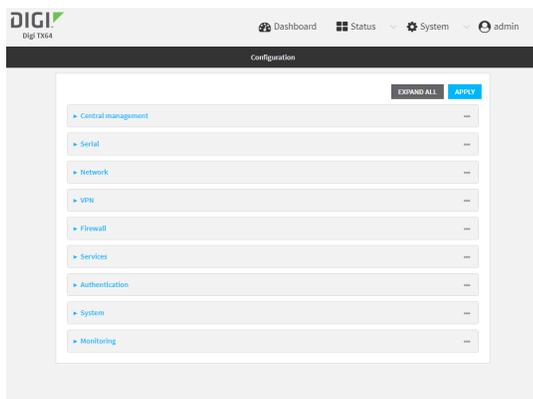

3. Click **Network > WiFi**.
4. Click to expand the appropriate Wi-Fi radio.
5. For **Frequency band**, select either **2.4 GHz** or **5 GHz**. Only channels appropriate for the band are displayed.

- 6. For **Access point mode**, select the appropriate mode.

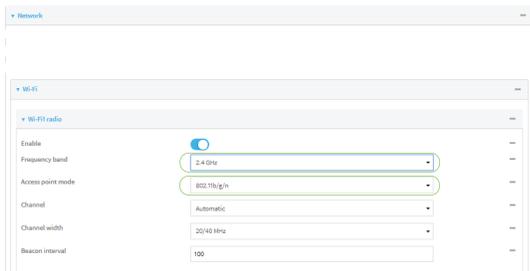

- 7. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- 1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Set channel for the radio:
 - a. Determine available radios:

```
(config)> network wifi radio ?

Additional Configuration
-----
wifi1                Wi-Fi1 radio
wifi2                Wi-Fi2 radio

(config)> network wifi radio
```

- b. Set the frequency band for the appropriate radio:

```
(config)> network wifi radio wifi1 band value
(config)>
```

where *value* is either **2400mhz** or **5000mhz**.

c. Set the mode for the Wi-Fi radio. For example:

- If the Wi-Fi radio has a band of **2400mhz**:

```
(config)> network wifi radio wifi1 2400mhz mode value
(config)>
```

where *value* is one of **b**, **bg**, **bgn**, **g**, **gn**, or **n**.

- If the Wi-Fi radio has a band of **5000mhz**:

```
(config)> network wifi radio wifi1 5000mhz mode value
(config)>
```

where *value* is one of **ac**, **acn**, or **n**.

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a Wi-Fi access point with no security

This procedure configures a Wi-Fi access point that does not require a password for client connections, and uses no security or encryption.

By default, the TX64 device comes with two preconfigured access points, **Digi AP (Wi-Fi1)** and **Digi AP (Wi-Fi2)**. You cannot delete default access points, but you can modify them or you can create your own access points.

Required configuration items

- Enable the Wi-Fi access point
- Select a Wi-Fi radio for the access point.
- The Service Set Identifier (SSID) for the access point.
- Configure security for the access point to unencrypted.
- LAN/bridge assignment. Once you configure a Wi-Fi access point, you must assign the Wi-Fi access point to a LAN interface or to a bridge. See [Configure a LAN](#) and [Configure a bridge](#) for more information.

Additional configuration items

- Determine whether to broadcast the access point's SSID.
- The amount of time to wait before changing the group key.


To configure a Wi-Fi access point with no security:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

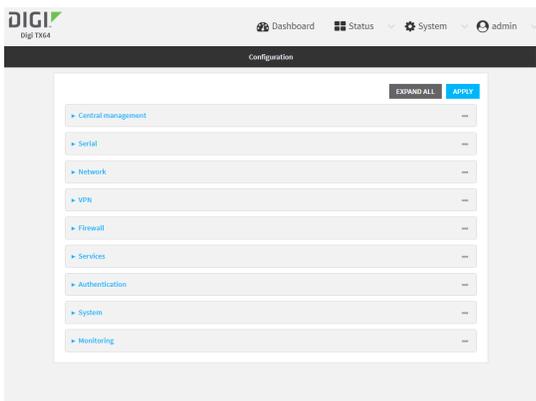


3. Click **Configuration > Network > WiFi > Access points**.
4. Create a new access point or modify an existing access point:
 - To create a new access point, for **Add WiFi access point**, type a name for the access point and click **+**.



- To modify an existing access point, click to expand the access point.

The Wi-Fi access point configuration window is displayed.

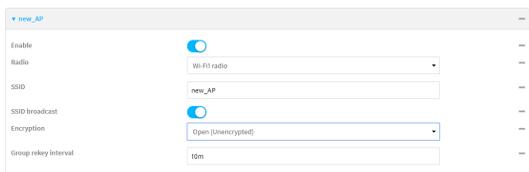

5. **Enable** the access point.
New access points are enabled by default. The default preconfigured access points are disabled by default.
6. For **Radio**, select the appropriate Wi-Fi radio.
7. For **SSID**, type the SSID. Up to 32 characters are allowed.
8. Enable **SSID broadcast** to configure the radio to broadcast the SSID.
9. For **Encryption**, select **Open (Unencrypted)**.
10. (Optional) For **Group rekey interval**, type the amount of time to wait before changing the group key.
The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.
Allowed values are any number of days, hours, minutes, or seconds, and take the format **number{d|h|m|s}**.
For example, to set **Group rekey interval** to ten minutes, enter **10m** or **600s**.
Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.
11. Assign the Wi-Fi access point to a LAN interface or to a bridge. See [Configure a LAN](#) and [Configure a bridge](#) for more information.
The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.
12. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

Configure a new Access point

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Create a new access point:

```
(config)> add network wifi ap new_AP
(config network wifi ap new_AP)>
```

New access points are enabled by default.

4. Set the Wi-Fi radio for the new access point:

- a. Show available radios:

```
(config network wifi ap new_AP)> radio ?

Radio: The Wi-Fi radio to run this access point on.
Format:
  wifi1
  wifi2
Current value:

(config network wifi ap new_AP)>
```

- b. Set the appropriate radio:

```
(config network wifi ap new_AP)> radio wifi1
(config network wifi ap new_AP)>
```

5. Set the SSID for the Wi-Fi access point. Up to 32 characters are allowed.

```
(config network wifi ap new_AP)> ssid my_SSID
(config network wifi ap new_AP)>
```

SSID broadcasting is enabled by default for new access points.

6. Set the security for the access point to **none** :

```
(config network wifi ap new_AP)> encryption type none
(config network wifi ap new_AP)>
```

7. (Optional) Set the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

```
(config network wifi ap new_AP)> encryption group_rekey value
(config network wifi ap new_AP)>
```

where *value* is any number of days, hours, minutes, or seconds, and takes the format **number {d|h|m|s}**.

For example, to set **group rekey interval** to ten minutes, enter either **10m** or **600s**:

```
(config network wireless ap new_AP)> encryption group_rekey 600s
(config network wireless ap new_AP)>
```

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected see all

broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

5. Assign the Wi-Fi access point to a LAN interface or to a bridge. See [Configure a LAN](#) and [Configure a bridge](#) for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

6. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Edit an existing Access point

1. Log into the TX64 command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Show available access points:

```
(config)> network wifi ap ?
```

```
Additional Configuration
```

```
-----
```

```
digi_ap1          Digi AP (Wi-Fi1)
digi_ap2          Digi AP (Wi-Fi2)
```

```
(config)>
```

4. Set the SSID for the appropriate access point:

```
(config)> network wifi ap digi_ap1 ssid my_SSID
(config)>
```

5. SSID broadcasting is enabled by default for the preconfigured access points. If SSID broadcasting is disabled:

```
(config)> network wifi ap digi_ap1 ssid_broadcast true
(config)>
```

6. Set the security for the access point to **none** :

```
(config)> network wifi ap digi_ap1 encryption type none
(config)>
```

7. (Optional) Change the Wi-Fi radio for the access point:

- a. Show available radios:

```
(config)> network wifi radio ?

Additional Configuration
-----
wifi1                Wi-Fi1 radio
wifi2                Wi-Fi2 radio

(config)>
```

- b. Set the appropriate radio:

```
(config)> network wifi ap digi_ap1 radio wifi1
(config)>
```

8. (Optional) Set the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

```
(config)> network wifi ap digi_ap1 encryption group_rekey value
(config)>
```

where *value* is any number of days, hours, minutes, or seconds, and takes the format **number {d|h|m|s}**.

For example, to set **group rekey interval** to ten minutes, enter either **10m** or **600s**:

```
(config)> network wireless ap digi_ap1 encryption group_rekey 600s
(config)>
```

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

5. Assign the Wi-Fi access point to a LAN interface or to a bridge. See [Configure a LAN](#) and [Configure a bridge](#) for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

6. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a Wi-Fi access point with personal security

The WPA and WPA2 personal security modes allow a Wi-Fi access point to authenticate clients by using a preshared key that the client enters when connecting to the access point.

By default, the TX64 device comes with two preconfigured access points, **Digi AP (Wi-Fi1)** and **Digi AP (Wi-Fi2)**. You cannot delete default access points, but you can modify them or you can create your own access points.

Required configuration items

- Enable the Wi-Fi access point
- Select a Wi-Fi radio for the access point.
- The Service Set Identifier (SSID) for the access point.
- Configure security for the access point to WPA personal (PSK) or WPA2 personal (PSK).
- The password (preshared key) that clients will use to connect to the access point.
- LAN/bridge assignment. Once you configure a Wi-Fi access point, you must assign the Wi-Fi access point to a LAN interface or to a bridge. See [Configure a LAN](#) and [Configure a bridge](#) for more information.

Additional configuration items

- Determine whether to broadcast the access point's SSID.
- The amount of time to wait before changing the group key.


To configure a Wi-Fi access point with WPA personal (PSK) or WPA2 personal (PSK) security:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

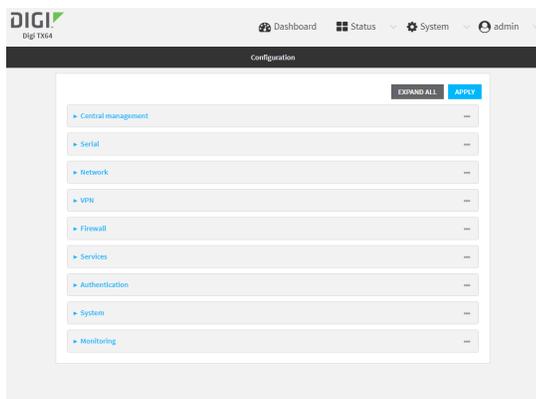

3. Click **Configuration > Network > WiFi > Access points**.
4. Create a new access point or modify an existing access point:
 - To create a new access point, for **Add WiFi access point**, type a name for the access point and click **+**.



- To modify an existing access point, click to expand the access point. The Wi-Fi access point configuration window is displayed.

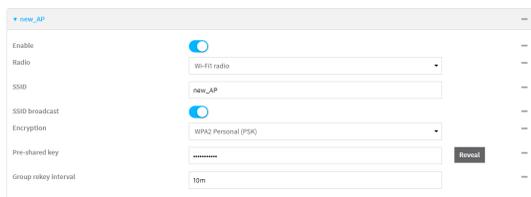

5. **Enable** the access point.
New access points are enabled by default. The default preconfigured access points are disabled by default.
6. For **Radio**, select the appropriate Wi-Fi radio.
7. For **SSID**, type the SSID. Up to 32 characters are allowed.
8. Enable **SSID broadcast** to configure the radio to broadcast the SSID.
9. For **Encryption**, select **WPA Personal (PSK)** or **WPA2 Personal (PSK)**.
10. For **Pre-shared key**, enter the password that clients will use when connecting to the access point.
11. (Optional) For **Group rekey interval**, type the amount of time to wait before changing the

group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

Allowed values are any number of days, hours, minutes, or seconds, and take the format **number{d|h|m|s}**.

For example, to set **Group rekey interval** to ten minutes, enter **10m** or **600s**.

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

12. Assign the Wi-Fi access point to a LAN interface or to a bridge. See [Configure a LAN](#) and [Configure a bridge](#) for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

13. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

Configure a new Access point

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Create a new access point:

```
(config)> add network wifi ap new_AP
(config network wifi ap new_AP)>
```

New access points are enabled by default.

4. Set the Wi-Fi radio for the new access point:
 - a. Show available radios:

```
(config network wifi ap new_AP)> radio ?
```

```
Radio: The Wi-Fi radio to run this access point on.
```

Format:

wifi1

wifi2

Current value:

```
(config network wifi ap new_AP)>
```

- b. Set the appropriate radio:

```
(config network wifi ap new_AP)> radio wifi1
```

```
(config network wifi ap new_AP)>
```

5. Set the SSID for the Wi-Fi access point. Up to 32 characters are allowed.

```
(config network wifi ap new_AP)> ssid my_SSID
```

```
(config network wifi ap new_AP)>
```

SSID broadcasting is enabled by default for new access points.

6. Set the security for the access point to **psk** or **psk2** :

```
(config network wifi ap new_AP)> encryption type psk2
```

```
(config network wifi ap new_AP)>
```

7. Set the password that clients will use when connecting to the access point:

```
(config network wifi ap new_AP)> encryption key_psk2 password
```

```
(config network wifi ap new_AP)>
```

8. (Optional) Set the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

```
(config network wifi ap new_AP)> encryption group_rekey value
```

```
(config network wifi ap new_AP)>
```

where *value* is any number of days, hours, minutes, or seconds, and takes the format **number {d|h|m|s}**.

For example, to set **group rekey interval** to ten minutes, enter either **10m** or **600s**:

```
(config network wireless ap new_AP)> encryption group_rekey 600s
```

```
(config network wireless ap new_AP)>
```

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

5. Assign the Wi-Fi access point to a LAN interface or to a bridge. See [Configure a LAN](#) and [Configure a bridge](#) for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

6. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Edit an existing Access point

1. Log into the TX64 command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Show available access points:

```
(config)> network wifi ap ?
```

```
Additional Configuration
```

```
-----
```

```
digi_ap1          Digi AP (Wi-Fi1)
digi_ap2          Digi AP (Wi-Fi2)
```

```
(config)>
```

4. Set the SSID for the appropriate access point:

```
(config)> network wifi ap digi_ap1 ssid my_SSID
(config)>
```

5. SSID broadcasting is enabled by default for the preconfigured access points. If SSID broadcasting is disabled:

```
(config)> network wifi ap digi_ap1 ssid_broadcast true
(config)>
```

6. Set the security for the access point to **psk** or **psk2** :

```
(config)> network wifi ap digi_ap1 encryption type psk2
(config)>
```

7. Set the password that clients will use when connecting to the access point:

```
(config)> network wifi ap digi_ap1 encryption key_psk2 password
(config)>
```

8. (Optional) Change the Wi-Fi radio for the access point:

- a. Show available radios:

```
(config)> network wifi radio ?

Additional Configuration
-----
wifi1                Wi-Fi1 radio
wifi2                Wi-Fi2 radio

(config)>
```

- b. Set the appropriate radio:

```
(config)> network wifi ap digi_ap1 radio wifi1
(config)>
```

9. (Optional) Set the amount of time to wait before changing the group key.
The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

```
(config)> network wifi ap digi_ap1 encryption group_rekey value
(config)>
```

where *value* is any number of days, hours, minutes, or seconds, and takes the format **number {d|h|m|s}**.

For example, to set **group rekey interval** to ten minutes, enter either **10m** or **600s**:

```
(config)> network wireless ap digi_ap1 encryption group_rekey 600s
(config)>
```

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

5. Assign the Wi-Fi access point to a LAN interface or to a bridge. See [Configure a LAN](#) and [Configure a bridge](#) for more information.
The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.
6. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a Wi-Fi access point with enterprise security

The WPA2 enterprise security mode allows a Wi-Fi access point to authenticate clients by using a RADIUS server. When the Wi-Fi access point receives a connection request from a client, it authenticates the client with the RADIUS server before allowing the client to connect.

Using enterprise security modes allows each client to have different usernames and passwords configured in the RADIUS server, rather than using preshared key on the TX64 device.

By default, the TX64 device comes with two preconfigured access points, **Digi AP (Wi-Fi1)** and **Digi AP (Wi-Fi2)**. You cannot delete default access points, but you can modify them or you can create your own access points.

Required configuration items

- Enable the Wi-Fi access point
- Select a Wi-Fi radio for the access point.
- The Service Set Identifier (SSID) for the access point.
- Configure security for the access point to WPA2 enterprise.
- The RADIUS server IP address
- The RADIUS secret key.
- LAN/bridge assignment. Once you configure a Wi-Fi access point, you must assign the Wi-Fi access point to a LAN interface or to a bridge. See [Configure a LAN](#) and [Configure a bridge](#) for more information.

Additional configuration items

- Determine whether to broadcast the access point's SSID.
- The Radius server port
- The amount of time to wait before changing the group key.


To configure a Wi-Fi access point with WPA2 enterprise security:

≡ WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

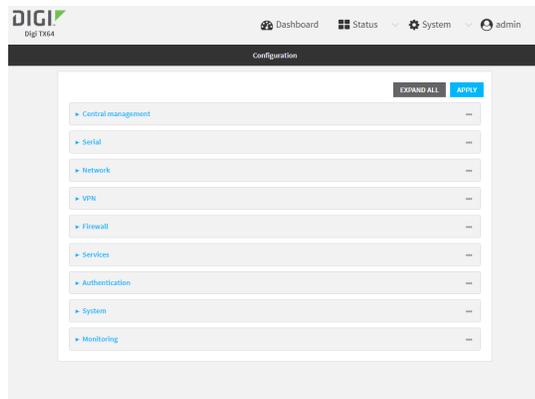

3. Click **Configuration > Network > WiFi > Access points**.
4. Create a new access point or modify an existing access point:
 - To create a new access point, for **Add WiFi access point**, type a name for the access point and click **+**.

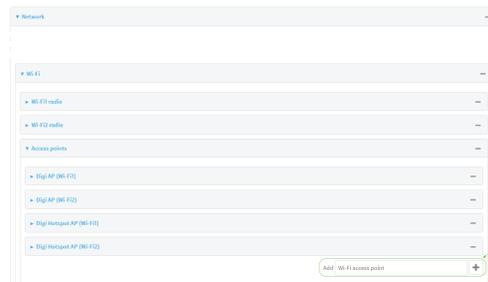

- To modify an existing access point, click to expand the access point. The Wi-Fi access point configuration window is displayed.

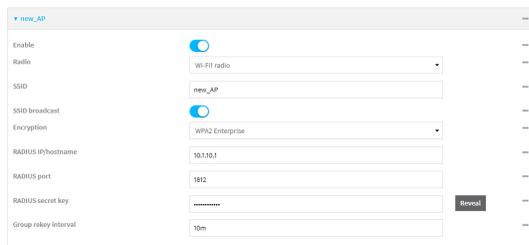

5. **Enable** the access point.
New access points are enabled by default. The default preconfigured access points are disabled by default.
6. For **Radio**, select the appropriate Wi-Fi radio.
7. For **SSID**, type the SSID. Up to 32 characters are allowed.
8. Enable **SSID broadcast** to configure the radio to broadcast the SSID.
9. For **Encryption**, select **WPA2 Enterprise**.
10. For **RADIUS IP/hostname**, type the IP address or hostname of the RADIUS server.
11. (Optional) Change the **RADIUS port**. The default port is 1812.

12. For **RADIUS secret key**, type the secret key as configured on the RADIUS server.
13. (Optional) For **Group rekey interval**, type the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed. Allowed values are any number of days, hours, minutes, or seconds, and take the format **number{d|h|m|s}**.

For example, to set **Group rekey interval** to ten minutes, enter **10m** or **600s**.

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.
14. Assign the Wi-Fi access point to a LAN interface or to a bridge. See [Configure a LAN](#) and [Configure a bridge](#) for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.
15. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

Configure a new Access point

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Create a new access point:

```
(config)> add network wifi ap new_AP
(config network wifi ap new_AP)>
```

New access points are enabled by default.

4. Set the Wi-Fi radio for the new access point:

- a. Show available radios:

```
(config network wifi ap new_AP)> radio ?

Radio: The Wi-Fi radio to run this access point on.
Format:
  wifi1
  wifi2
Current value:
```

```
(config network wifi ap new_AP)>
```

- b. Set the appropriate radio:

```
(config network wifi ap new_AP)> radio wifi1
(config network wifi ap new_AP)>
```

5. Set the SSID for the Wi-Fi access point. Up to 32 characters are allowed.

```
(config network wifi ap new_AP)> ssid my_SSID
(config network wifi ap new_AP)>
```

SSID broadcasting is enabled by default for new access points.

6. Set the security for the access point to **wpa2**:

```
(config network wifi ap new_AP)> encryption type wpa2
(config network wifi ap new_AP)>
```

7. Set the IP address or hostname of the RADIUS server:

```
(config network wifi ap new_AP)> encryption host_wpa2 hostname
(config network wifi ap new_AP)>
```

- Set the secret key as configured on the RADIUS server:

```
(config network wifi ap new_AP)> encryption key_wpa2 secret_key
(config network wifi ap new_AP)>
```

- (Optional) Set the RADIUS server's port. The default is 1812.

```
(config network wifi ap new_AP)> encryption port_wpa2 port
(config network wifi ap new_AP)>
```

- (Optional) Set the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

```
(config network wifi ap new_AP)> encryption group_rekey value
(config network wifi ap new_AP)>
```

where *value* is any number of days, hours, minutes, or seconds, and takes the format **number {d|h|m|s}**.

For example, to set **group rekey interval** to ten minutes, enter either **10m** or **600s**:

```
(config network wireless ap new_AP)> encryption group_rekey 600s
(config network wireless ap new_AP)>
```

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

- Assign the Wi-Fi access point to a LAN interface or to a bridge. See [Configure a LAN](#) and [Configure a bridge](#) for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

- Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Edit an existing Access point

- Log into the TX64 command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Show available access points:

```
(config)> network wifi ap ?
```

```
Additional Configuration
```

```
-----
```

```
-----  
digi_ap1          Digi AP (Wi-Fi1)  
digi_ap2          Digi AP (Wi-Fi2)
```

```
(config)>
```

4. Set the SSID for the appropriate access point:

```
(config)> network wifi ap digi_ap1 ssid my_SSID
```

```
(config)>
```

5. SSID broadcasting is enabled by default for the preconfigured access points. If SSID broadcasting is disabled:

```
(config)> network wifi ap digi_ap1 ssid_broadcast true
```

```
(config)>
```

6. Set the security for the access point to **wpa2**:

```
(config)> network wifi ap digi_ap1 encryption type wpa2
```

```
(config)>
```

7. Set the IP address or hostname of the RADIUS server:

```
(config)> network wifi ap digi_ap1 encryption host_wpa2 hostname
```

```
(config)>
```

8. Set the secret key as configured on the RADIUS server:

```
(config)> network wifi ap digi_ap1 encryption key_wpa2 secret_key
```

```
(config)>
```

9. (Optional) Set the RADIUS server's port. The default is 1812.

```
(config)> network wifi ap digi_ap1 encryption port_wpa2 port
```

```
(config)>
```

10. (Optional) Change the Wi-Fi radio for the access point:

- a. Show available radios:

```
(config)> network wifi radio ?
```

```
Additional Configuration
```

```
-----
```

```
-----  
wifi1          Wi-Fi1 radio  
wifi2          Wi-Fi2 radio
```

```
(config)>
```

- b. Set the appropriate radio:

```
(config)> network wifi ap digi_ap1 radio wifi1  
(config)>
```

11. (Optional) Set the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

```
(config)> network wifi ap digi_ap1 encryption group_rekey value  
(config)>
```

where *value* is any number of days, hours, minutes, or seconds, and takes the format **number {d|h|m|s}**.

For example, to set **group rekey interval** to ten minutes, enter either **10m** or **600s**:

```
(config)> network wireless ap digi_ap1 encryption group_rekey 600s  
(config)>
```

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

5. Assign the Wi-Fi access point to a LAN interface or to a bridge. See [Configure a LAN](#) and [Configure a bridge](#) for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

6. Save the configuration and apply the change:

```
(config)> save  
Configuration saved.  
>
```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show Wi-Fi access point status and statistics

You can show summary status for all Wi-Fi access points, and detailed status and statistics for individual Wi-Fi access points.

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the main menu, click **Status**.
3. Under **Connections**, click **Wi-Fi > Access Points**.

Command line

Show summary of Wi-Fi access points

To show the status and statistics for Wi-Fi access points, use the `show wifi` command.

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the Admin CLI prompt, type **show wifi ap**:

```
> show wifi ap
```

AP	Enabled	Status	SSID	BSSID
my_AP	true	up	my_SSID	01:41:D1:14:36:37
digi_ap1	true	up	Digi2	00:40:D0:13:35:36

```
>
```

3. To view information about both active and inactive access points, include the **all** parameter:

```
> show wifi ap all
```

AP	Enabled	Status	SSID	BSSID
my_AP	true	up	my_SSID	01:41:D1:14:36:37
digi_ap1	true	up	Digi2	00:40:D0:13:35:36
digi_ap2	false	down		

```
>
```

Show detailed status and statistics of a specific Wi-Fi access point

To show a detailed status and statistics of a Wi-Fi access point, use the `show wifi ap name name` command.

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

- At the Admin CLI prompt, type **show wifi ap name name:**

```
> show wifi ap name my_AP

Enabled           : true
Status            : up

SSID              : my_AP
Security          : none

Channel           :
Channel Width     :
Radio             : wifi1
BSSID             : 01:41:D1:14:36:37

Client            Signal  RX      TX      Uptime
-----
cc:c0:78:34:d5:a2 -68     260997 279481 801

>
```

Configure a Wi-Fi client and add client networks

Required configuration items

- Create the Wi-Fi client.
- The TX64 device's Wi-Fi radio that the Wi-Fi client will use.
- The Wi-Fi network that the client will log into:
 - SSID of the Wi-Fi network's access point.
 - Type of security, and user name and/or password if applicable, used by the access point.
- WAN assignment. Once you configure a Wi-Fi client, you must assign the Wi-Fi client to a WAN. See [Wide Area Networks \(WANs\)](#) and [Wireless Wide Area Networks \(WWANs\)](#) for further information.

Additional configuration items

- Enable and configure background scanning, which allows the Wi-Fi client to move between access points that have the same SSID as their signal strength varies.
- Additional access points that client will attempt to use. If connection to one access point fails, the device will attempt to connect to the next access point in the list.

To configure a Wi-Fi client:


WebUI

- Log into the TX64 WebUI as a user with full Admin access rights.

- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

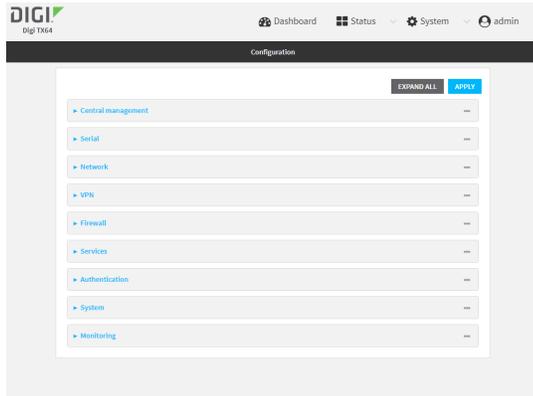

- Click **Network > WiFi > Client mode connections**.
- For **Add WiFi client:**, type the name of the client and click **+**.



The Wi-Fi client configuration window is displayed.



New Wi-Fi clients are enabled by default. To disable, or to enable a client if it has been disabled, click **Enable**.

- For **Radio**, select the appropriate Wi-Fi radio.
- Configure the Wi-Fi network that the client will use:
 - Click to expand **SSID list**.
 - Enter the **SSID** of the access point that the client will use to connect to the Wi-Fi network.
 - Select the type of **Encryption** used by the access point.
 - If **WPA Personal (PSK)** or **WPA2 Personal (PSK)** is selected as the type of **Encryption**, for **Pre-shared key**, enter the password that the client will use to connect to the access point.

- If **WPA2 Enterprise** is selected as the type of **Encryption**, enter the **Username** and **Password** that the client will use to connect to the access point.

7. (Optional) Configure **Background scanning**.

Background scanning allows the device to scan for nearby access points and to move between access points that have the same SSID that is configured for the client connection, based on the signal strength of the access points.

- a. Click to expand **Background scanning**.

- b. Click **Enable background scanning** to enable.
- c. For **Scan threshold**, enter a value in dB that is used to determine the scanning frequency. The allowed value is an integer between **-113** and **0**.

The **Scan threshold** works with the **Short interval** and **Long interval** options to determine how often the device should scan for available access points:

- If the signal strength from the access point to which the client is currently connected is below the **Scan threshold**, it will use the **Short interval** to determine how often to scan for available access points.
 - If the signal strength from the access point to which the client is currently connected is stronger the **Scan threshold**, it will use the **Long interval** to determine how often to scan for available access points.
 - If **Short interval** and **Long interval** are set to the same value, **Scan threshold** is ignored. For example, the default configuration has both **Short interval** and **Long interval** set to **1** second, which means that the device will scan for access points once per second regardless of the **Scan threshold**.
- d. For **Short interval**, type the number of seconds to wait between scans for access points, when the signal strength from the access point to which the client is currently connected is below the **Scan threshold**.
- e. For **Long interval**, type the number of seconds to wait between scans for access points, when the signal strength from the access point to which the client is currently connected is stronger than the **Scan threshold**.
- f. Click to expand **Scan frequencies list**.

The TX64 device has three preconfigured channels that will be scanned for available access points:


- Channel 1 (2412 MHz)
- Channel 6 (2437 MHz)
- Channel 11 (2462 MHz)

You can delete the preconfigured channels and add additional channels. At least one channel is required.

- g. To delete a preconfigured channel, click the menu icon (...) next to the channel and select **Delete**.



h. To add a channel, click **Add Scan frequency** and select the appropriate channel.

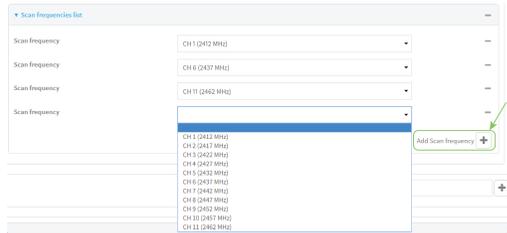

8. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Create a new Wi-Fi client:

```
(config)> add network wifi client new_client
(config network wifi client new_client)>
```

New access points are enabled by default.

4. Set the Wi-Fi radio for the new access point:

a. Show available radios:

```
(config network wifi client new_client)> .. .. radio ?
```

Additional Configuration

```
wifi1 Wi-Fi1 radio
```

```
wifi2                Wi-Fi2 radio
```

```
(config network wifi client new_client)>
```

- b. Set the appropriate radio:

```
(config network wifi client new_client)> radio wifi1
(config network wifi client new_client)>
```

5. Configure the Wi-Fi network that the client will use:

- a. Set the SSID of the access point that the client will use to connect to the Wi-Fi network:

```
(config network wifi client new_client)> ssid 0 ssid value
```

where *value* is the SSID of the access point.

- b. Set the security for the access point:

```
(config network wifi client new_client)> ssid 0 encryption type value
(config network wifi client new_client)>
```

where *value* is the type of encryption used by the access point. Allowed values are:

- **none**: no encryption.
- **psk**: WPA personal encryption.
- **psk2**: WPA2 personal encryption.
- **wpa2**: WPA2 enterprise encryption.

- c. If the type of encryption is set to:

- **psk** or **psk2**, set the password that the client will use to connect to the access point:

```
(config network wifi client new_client)> ssid 0 encryption key_
psk2 password
(config network wifi client new_client)>
```

- **wpa2**:

- i. Set the username that the client will use to connect to the access point:

```
(config network wifi client new_client)> ssid 0 encryption id_
wpa2 username
(config network wifi client new_client)>
```

- ii. Set the password that the client will use to connect to the access point:

```
(config network wifi client new_client)> ssid 0 encryption
password_wpa2 pwd
(config network wifi client new_client)>
```

6. (Optional) Configure background scanning.

Background scanning allows the device to scan for nearby access points and to move between access points that have the same SSID that is configured for the client connection, based on the signal strength of the access points.

- a. Enable background scanning:

```
(config network wifi client new_client)> background_scanning enable true
(config network wifi client new_client)>
```

- b. Set the scan threshold (**bgscan_strength**), in dB, that is used to determine the scanning frequency.

```
(config network wifi client new_client)> bgscan_strength value
(config network wifi client new_client)>
```

where *value* is an integer between **-113** and **0**.

The scan threshold works with the short and long intervals (**bgscan_short_interval** and **bgscan_long_interval**) to determine how often the device should scan for available access points:

- If the signal strength from the access point to which the client is currently connected is below the value of **bgscan_strength**, it will use **bgscan_short_interval** to determine how often to scan for available access points.
 - If the signal strength from the access point to which the client is currently connected is stronger than the value of **bgscan_strength**, it will use **bgscan_long_interval** to determine how often to scan for available access points.
 - If **bgscan_short_interval** and **bgscan_long_interval** are set to the same value, **bgscan_strength** is ignored. For example, the default configuration has both **bgscan_short_interval** and **bgscan_long_interval** set to **1** second, which means that the device will scan for access points once per second regardless of the value of **bgscan_strength**.
- c. Set the number of seconds to wait between scans for access points, when the signal strength from the access point to which the client is currently connected is below the value of **bgscan_strength**:

```
(config network wifi client new_client)> bgscan_short_interval value
(config network wifi client new_client)>
```

where *value* is any integer greater than 0. The default is **1**.

- d. Set the number of seconds to wait between scans for access points, when the signal strength from the access point to which the client is currently connected is greater than the value of **bgscan_strength**:

```
(config network wifi client new_client)> bgscan_long_interval value
(config network wifi client new_client)>
```

where *value* is any integer greater than 0. The default is **1**.

- e. Configure the frequencies that will be scanned for available access points.

The TX64 device has three preconfigured frequencies:

- 2412 MHz
- 2437 MHz
- 2462 MHz

You can delete the preconfigured frequencies and add additional frequencies. At least one frequency is required.

- f. To delete a preconfigured frequencies:
- i. Use the **show** command to determine the index number of the channel to be deleted:

```
(config network wifi client new_client)> show background_scanning
scan_freq
0 2412
1 2437
2 2462
(config network wifi client new_client)>
```

- ii. Use the appropriate index number to delete the channel. For example, to delete the 2412 frequency:

```
(config network wifi client new_client)> del 0
(config network wifi client new_client)>
```

- g. To add a frequency:

- i. Use the **?** with an existing index number to determine the allowed values for frequencies:

```
(config network wifi client new_client)> background_scanning scan_
freq 1
```

Scan frequency: Enable this frequency in the background scan.

Format:

```
2412
2417
2422
2427
2432
2437
2442
2447
2452
2457
2462
```

Current value: 2437

- ii. Add the appropriate frequency. For example, to add the **2457** frequency to the end of the list:

```
(config network wifi client new_client)> add background_scanning
scan_freq end 2457
(config network wifi client new_client)>
```

- Save the configuration and apply the change:

```
(config network wireless client new_client)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show Wi-Fi client status and statistics

You can show summary status for all Wi-Fi clients, and detailed status and statistics for individual Wi-Fi clients.

WebUI

- Log into the TX64 WebUI as a user with Admin access.
- On the main menu, click **Status**.
- Under **Connections**, click **Wi-Fi > Clients**.

Command line

Show summary of Wi-Fi clients

To show the status and statistics for Wi-Fi client, use the `show wifi` command.

- Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the Admin CLI prompt, type **show wifi client**:

```
> show wifi client
```

Client	Enabled	SSID	Status	Sig	MAC
my_client	true	my_SSID	up	-43	91:fe:86:d1:0e:81

```
>
```

- To view information about both active and inactive clients, include the **all** parameter:

```
> show wifi client all
```

Client	Enabled	SSID	Status	Sig	MAC
my_client	true	my_SSID	up	-43	91:fe:86:d1:0e:81
client2	true	SSID2	down		

```
>
```

Show detailed status and statistics of a specific Wi-Fi client

To show a detailed status and statistics of a Wi-Fi client, use the **show wifi client name name**

command.

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the Admin CLI prompt, type **show wifi cleint name *name***:

```
> show wifi client name my_client

Client           : my_client
Enabled          : true
SSID             : my_SSID
Status           : up
Signal           : -43
MAC              : 91:fe:86:d1:0e:81
Channel          : 48
Radio            : wifi1
TX Power         : 23
Link Quality     : 67/70
BSSID            : 6D:B9:DD:BD:EE:C4

>
```

Hotspot

Your TX64 device offers the ability to create a publicly available hotspot, which allows you to provide internet access to users while restricting their ability to access other functionality on the TX64 device, as well as applying bandwidth limits, authenticating users, and other features. The TX64 device's implementation of hotspot uses a "captive portal" page—a web page that is displayed to users when they first connect to the hotspot and requires users to perform some specific action before they are granted access to the internet, such as accepting terms of use, logging in with a shared password or a username/password combination, or using a payment service to purchase web access via your hotspot.

Authentication of hotspot users can be performed by the device itself, by an external RADIUS server or other remote server, or by HotspotSystem (a cloud-based hotspot management and billing service). The device provides sample html pages to be used for authentication, and you can modify these pages, add your own pages, or host HTML login pages on a remote web server.

Note Sample HTML pages provided by your TX64 device are located in the `/etc/config/hotspot` directory on your device's filesystem. The files are created when you enable a hotspot and its associated access point or bridge for the first time, and cannot be accessed prior to that.

This chapter contains the following topics:

Hotspot authentication modes	190
Hotspot DHCP server	191
Hotspot security	191
Hotspot configuration	192
Show hotspot status and statistics	234
Customize the hotspot login page	236
Hotspot RADIUS attributes	241

Hotspot authentication modes

During hotspot configuration, you select one of the following authentication modes for the hotspot:

- **Click-through:** Requires each user to accept the terms and conditions. The sample HTML page included with your TX64 device for click-through authentication is **terms.html**.
See [Create a new hotspot](#) for information about configuring hotspot for click-through authentication.
- **Local shared password:** Requires each user to enter a password. This password is validated locally on the TX64 device, and the password is the same for all users. The sample HTML page included with your TX64 device for local shared password authentication is **password.html**.
See [Configure the hotspot to use local shared password authentication](#) for information about configuring hotspot for local shared password authentication.
- **RADIUS shared password:** Requires each user to enter a password. This password is validated by an external RADIUS server, and the password is the same for all users. The RADIUS server should be "white listed" by including it in the **Walled garden > Allowed domains** or **Walled garden > Allowed subnets** setting for the hotspot, which allows unauthenticated hotspot clients to access the server for authentication. The sample HTML page included with your TX64 device for RADIUS shared password authentication is **password.html**.
See [Configure the hotspot to use RADIUS shared password authentication](#) for information about configuring hotspot for RADIUS shared password authentication.
- **RADIUS users:** Requires each user to enter username and password credentials that are established on an external RADIUS server. The credentials are validated by the RADIUS server. The RADIUS server should be "white listed" by including it in the **Walled garden > Allowed domains** or **Walled garden > Allowed subnets** setting for the hotspot, which allows unauthenticated hotspot clients to access the server for authentication. The sample HTML page included with your TX64 device for RADIUS shared password authentication is **login.html**.
See [Configure the hotspot to use RADIUS users authentication](#) for information about configuring hotspot for RADIUS users authentication.
- **HotspotSystem:** Requires each user to be authenticated by HotspotSystem, a cloud hotspot service that supports various free and paid authentication methods, including social media account, SMS, voucher, and PayPal. Domains needed for HotspotSystem authentication, payment options, and social media login should be "white listed" by including them in the **Walled garden > Allowed domains** or **Walled garden > Allowed subnets** setting for the hotspot, which allows unauthenticated hotspot clients to access them for authentication. When **HotspotSystem** is selected for the authentication mode, the browser is redirected to the **HotspotSystem** web page.
See [Configure the hotspot to use HotspotSystem authentication](#) for information about configuring hotspot for HotspotSystem authentication.

Prior to authentication, a hotspot client that attempts to make an HTTP request to any domain other than those included in white-listed sites in the **Walled garden > Allowed domains** or **Walled garden > Allowed subnets** settings will be redirected to the login webpage. HTTPS requests will time out, because the hotspot cannot provide a valid SSL certificate for the requested domain. Requests made via any other protocol will also time out. Most operating systems will detect this scenario and automatically notify users to open the login page in a web browser.

Hotspot DHCP server

When the hotspot is enabled on the TX64 device, it automatically enables a DHCP server. During hotspot configuration, you assign an IPv4 address to the hotspot, and the DHCP server then uses the subnet of the hotspot's IP address, along with the hotspot's subnet mask, to assign IPv4 addresses to clients that connect to the hotspot.

To prevent the hotspot's DHCP server from assigning IP addresses that are already in use elsewhere in your local network, the hotspot must use a subnet that is not currently being used in your local network.

Hotspot security

A typical hotspot is an open network. This means that traffic transferred between the hotspot and the hotspot clients is not encrypted and can be intercepted by a packet sniffer or similar technology. However, the sample HTML login pages provided with your TX64 device use CHAP-MD5 authentication, providing a level of security during the authentication process. Additionally, websites that use the HTTPS protocol provide end-to-end encryption between the browser and the web server.

Hotspot clients are typically untrusted and only given access to the WAN interface on the device. The hotspot firewall zone settings prevent hotspot clients from accessing any of the other interfaces on the device (such as the LAN and VPN interfaces). Additionally, the hotspot zone prevents hotspot clients from accessing the device itself (for example, via the web interface or SSH).

Hotspot configuration

This section provides information about enabling and configuring the default hotspot that is provided with your TX64 installation, as well as creating a new hotspot and configuring the type of authentication mode you select for your hotspot.

This section contains the following topics:

Enable hotspot using the default configuration	193
Change the default hotspot SSID	198
Change the default hotspot IP address and subnet	200
Change the default hotspot bandwidth limits	203
Add an Ethernet port to the default hotspot	205
Create a new hotspot	208
Configure the hotspot to use local shared password authentication	221
Configure the hotspot to use RADIUS shared password authentication	223
Configure the hotspot to use RADIUS users authentication	227
Configure the hotspot to use HotspotSystem authentication	231

Enable hotspot using the default configuration

The default configuration of the TX64 device's hotspot is:

	Default configuration
Hotspot	<ul style="list-style-type: none"> ■ Name: hotspot ■ Disabled ■ Authentication mode: Click-through ■ IP address: 10.1.0.1/24 ■ DHCP server: Automatically enabled ■ DHCP server lease range: 100-250 ■ Bandwidth limits: <ul style="list-style-type: none"> • Maximum download speed: 10000 Kbps • Maximum upload speed: 10000 Kbps
Bridge	<ul style="list-style-type: none"> ■ Name: hotspot_bridge ■ Disabled ■ 2.4 GHz Wi-Fi access point: Digi Hotspot AP (Wi-Fi1) ■ 5 GHz Wi-Fi access point: Digi Hotspot AP (Wi-Fi2)
Access points	<ul style="list-style-type: none"> ■ Name: <ul style="list-style-type: none"> • Digi Hotspot AP (Wi-Fi1) • Digi Hotspot AP (Wi-Fi2) ■ Disabled ■ SSID: Digi Hotspot ■ Encryption: Open (unencrypted) ■ Hotspot access points should be set to open (unencrypted). See Hotspot security for further information.
LAN	<ul style="list-style-type: none"> ■ Name: LAN hotspot ■ Disabled ■ Device: hotspot_bridge ■ IP address: 192.168.100.1/30 This IP address is not used by the hotspot or the hotspot's DHCP server. It must be a unique IP address that is not used elsewhere in your network. ■ DHCP server: Disabled ■ The hotspot will use the hotspot's DHCP server rather than the LAN's DHCP server.

To use the default hotspot with click-through authentication, enable the hotspot, the bridge, the access points, and the LAN.

In addition to enabling the default hotspot configuration, you may also want to:


- [Change the default hotspot SSID.](#)
- Change the default authentication method:
 - [Configure the hotspot to use local shared password authentication.](#)
 - [Configure the hotspot to use RADIUS shared password authentication.](#)
 - [Configure the hotspot to use RADIUS users authentication.](#)
 - [Configure the hotspot to use HotspotSystem authentication.](#)
- [Change the default hotspot IP address and subnet.](#)
- Modify the sample local HTML page that the TX64 device uses by default for click-through authentication. See [Edit sample hotspot HTML pages](#) for information.

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

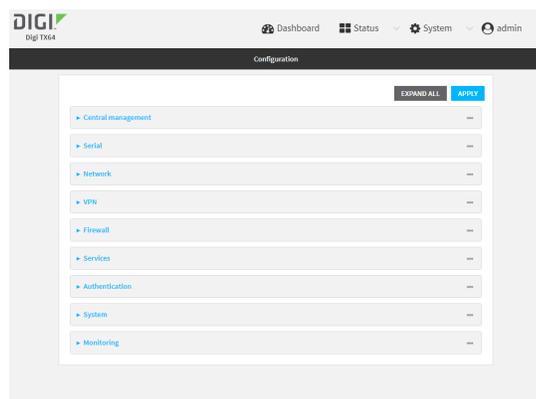

3. Enable the hotspot:
 - a. Click **Network > Hotspots > hotspot**.
 - b. Click **Enable hotspot**.

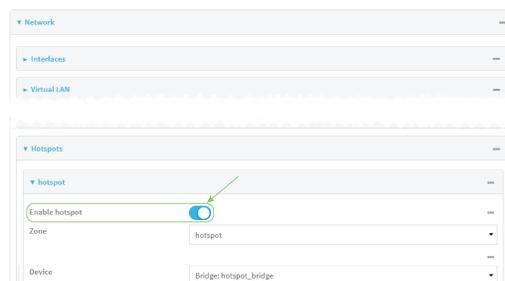

4. Enable the hotspot access points:
 - a. Click **Network > Wi-Fi > Access points > Digi Hotspot AP (Wi-Fi1)**.
 - b. Click **Enable**.
 - c. Click **Digi Hotspot AP (Wi-Fi2)**.
 - d. Click **Enable**.

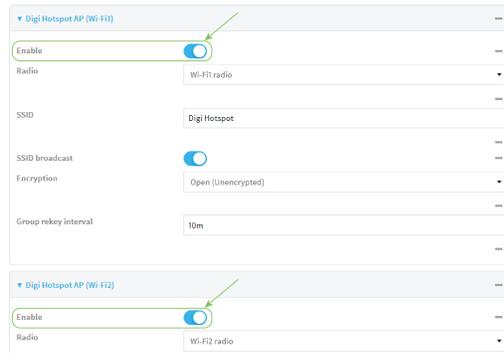

5. Enable the hotspot bridge:
 - a. Click **Network > Bridges > hotspot_bridge**.
 - b. Click **Enable**.



6. Enable the hotspot LAN:
 - a. Click **Network > Interface > LAN > LAN hotspot**.
 - b. Click **Enable**.



7. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



 **Command line**

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config  
(config)>
```

3. Enable the hotspot:

```
(config)> network hotspot hotspot enable true  
(config)>
```

4. Enable the hotspot access points:

```
(config)> network ap digi_hotspot_ap1 enable true  
(config)> network ap digi_hotspot_ap2 enable true  
(config)>
```

5. Enable the hotspot bridge:

```
(config)> network bridge hotspot_bridge enable true  
(config)>
```

6. Enable the hotspot LAN:

```
(config)> network interface lan_hotspot enable true  
(config)>
```

7. Save the configuration and apply the change:

```
(config)> save  
Configuration saved.  
>
```

8. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Change the default hotspot SSID

Required configuration items


- Enable default hotspot configuration. See [Enable hotspot using the default configuration](#) for instructions.
- An SSID for the hotspot.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

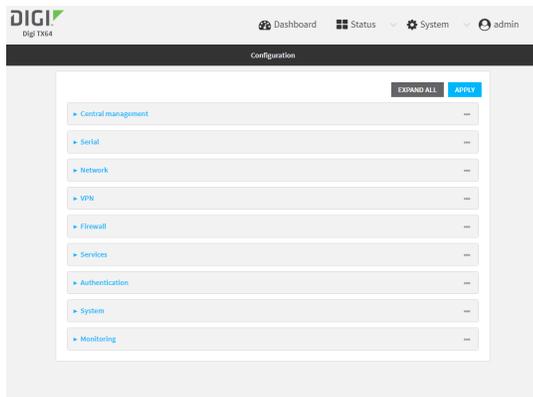

3. Click **Network > Wi-Fi > Access points > Digi Hotspot AP (Wi-Fi1)**.
4. Change the default SSID, **Digi Hotspot**, to your preferred value.
5. Click **Digi Hotspot AP (Wi-Fi2)**.

- Change the default SSID, Digi Hotspot, to your preferred value.

The image shows two screenshots of the Digi Hotspot AP configuration page. The top screenshot is for the Wi-Fi1 interface, and the bottom is for the Wi-Fi2 interface. Both show the SSID field set to 'Digi Hotspot', which is highlighted with a green circle and a green arrow pointing to it. Other settings like 'Enable', 'Radio', 'SSID broadcast', 'Encryption', and 'Group rekey interval' are also visible.

- Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Change the SSID for **digi_hotspot_ap1** to your preferred value:

```
(config)> network wifi ap digi_hotspot_ap1 ssid value
```

where *value* is a string of 1 to 32 characters. If the value contains spaces, enclose in quote marks ("").

- Change the SSID for **digi_hotspot_ap2** to your preferred value:

```
(config)> network wifi ap digi_hotspot_ap1 ssid value
```

where *value* is a string of 1 to 32 characters. If the value contains spaces, enclose in quote marks ("").

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Change the default hotspot IP address and subnet

Required configuration items

- Enable default hotspot configuration. See [Enable hotspot using the default configuration](#) for instructions.
- An IP address and subnet for the hotspot.

Additional configuration items

- Hotspot DHCP server settings:
 - Lease time.
 - Lease range start and end.


To change the default hotspot IP address and subnet:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

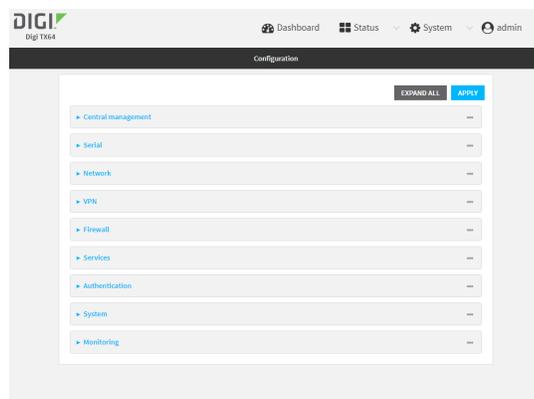

3. Click **Network > Hotspots > hotspot**.
4. Click to expand **IPv4**.
5. For **Address**, enter a new IP address and subnet mask.

6. (Optional) Change the default DHCP server configuration.

Note The hotspot DHCP server is automatically enabled and cannot be disabled.

- a. Click to expand **DHCP server**.

- b. For **Lease time**, type the amount of time that a client DHCP lease is valid. The default is 10 minutes.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Lease time** to ten minutes, enter **10m** or **600s**.
 - c. For **Lease range start**, type the lowest IP address in the range to assign to hotspot clients. The value entered here represents the low order byte of the IP address, and is combined with the subnet of the hotspot's static IP address. The default is **100**.
 - d. For **Lease range end**, type the highest IP address in the range to assign to hotspot clients. The value entered here represents the low order byte of the IP address, and when DHCP addresses are assigned to client, this number is combined with the subnet of the hotspot's static IP address. The default is **250**.
7. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Change the default hotspot IP address and subnet mask:

```
(config)> network hotspot hotspot ipv4 address ip_address/mask
(config)>
```

4. (Optional) Change the default DHCP server configuration.

Note The hotspot DHCP server is automatically enabled and cannot be disabled.

- a. Set the amount of time that a client DHCP lease is valid:

```
(config)> network hotspot hotspot ipv4 address dhcp_server lease_time
value
(config)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **lease_time** to ten minutes, enter either **10m** or **600s**:

```
(config)> network hotspot hotspot ipv4 dhcp_server lease_time 600s
(config)>
```

The default is 10 minutes.

- b. Set the lowest IP address in the range to assign to hotspot clients. This value represents the low order byte of the IP address, and is combined with the subnet of the hotspot's static IP address.

```
(config)> network hotspot hotspot ipv4 address dhcp_server lease_start
value
(config)>
```

where *value* is any integer between **1** and **254**. The default is **100**.

- c. Set the highest IP address in the range to assign to hotspot clients. This value represents the low order byte of the IP address, and is combined with the subnet of the hotspot's

static IP address.

```
(config)> network hotspot hotspot ipv4 address dhcp_server lease_end
value
(config)>
```

where *value* is any integer between **1** and **254**. The default is **250**.

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Change the default hotspot bandwidth limits

Required configuration items

- Enable default hotspot configuration. See [Enable hotspot using the default configuration](#) for instructions.
- Maximum download speed, in Kbps.
- Maximum upload speed, in Kbps.


To change the default hotspot IP address and subnet:

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

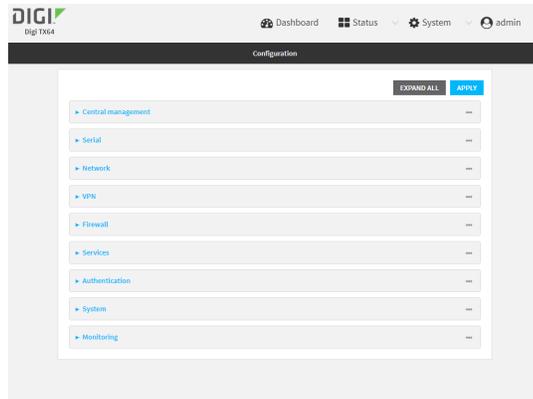

3. Click **Network > Hotspots > hotspot**.
4. For **Maximum download speed**, type the maximum download speed in kilobytes per second (Kbps).
5. For **Maximum upload speed**, type the maximum upload speed in kilobytes per second (Kbps).

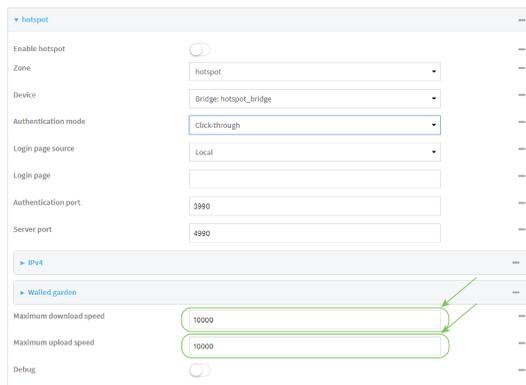

6. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Change the default maximum download speed:

```
(config)> network hotspot hotspot bandwidth_max_down value
(config)>
```

where *value* is an integer between 1 and 100000 and represents the maximum download speed in Kbps.

- Change the default maximum upload speed:

```
(config)> network hotspot hotspot bandwidth_max_up value
(config)>
```

where *value* is an integer between 1 and 100000 and represents the maximum upload speed in Kbps.

- Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Add an Ethernet port to the default hotspot

Required configuration items

- Enable default hotspot configuration. See [Enable hotspot using the default configuration](#) for instructions.
- Ethernet port to be added to the hotspot.


To add an Ethernet port to the default hotspot:

WebUI


- Log into the TX64 WebUI as a user with full Admin access rights.
- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

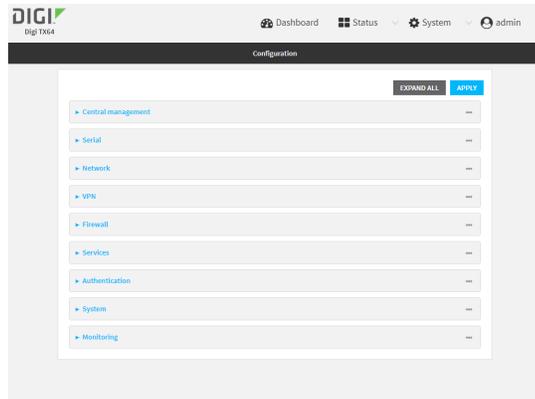

- 3. Click **Network > Bridges > hotspot_bridge > Devices**.
- 4. Click the **+** to add a new device.

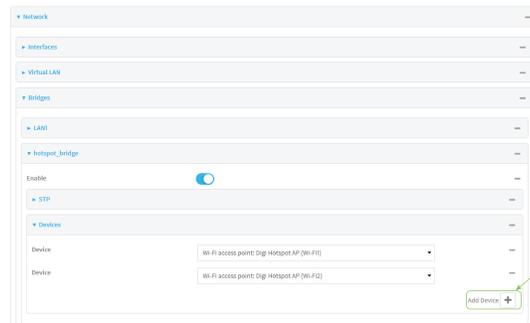


- 5. By default, For **Device**, select the appropriate Ethernet port.

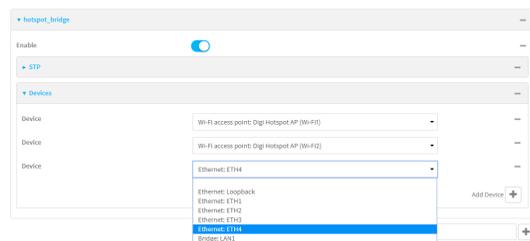

By default, the **ETH1** device is configured as the device for the **WAN1** interface, and **ETH2**, **ETH3**, and **ETH4** are configured as devices in the **LAN1** bridge, which is used by the **LAN1** interface. As a result, when you add an Ethernet port to the hotspot, you may need to reconfigure the Ethernet port configuration for other interfaces. For example, to remove the **ETH4** port from the **LAN1** bridge:

- a. Click **Network > Bridges > LAN1 > Devices**.
- b. Click the **...** menu icon next to the **Ethernet: ETH4** device entry and select **Delete**.

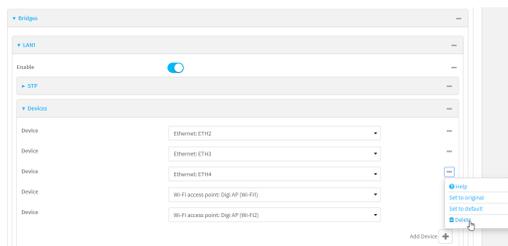

6. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Display a list of available devices by using the tab autocomplete feature:

```
(config)> add network bridge hotspot_bridge device end /network/<tab>
/network/device/eth1           /network/device/eth2
/network/device/eth3           /network/device/eth4
/network/device/loopback       /network/bridge/hotspot_bridge
/network/bridge/lan1           /network/wifi/ap/digi_ap1
/network/wifi/ap/digi_ap2      /network/wifi/ap/digi_hotspot_ap1
/network/wifi/ap/digi_hotspot_ap2
(config)> add network bridge hotspot_bridge device end /network/
```

4. Add a new device. For example, to add the **ETH4** device:

```
(config)> add network bridge hotspot_bridge device end /network/device/eth4
(config)>
```

By default, the **ETH1** device is configured as the device for the **WAN1** interface, and **ETH2**, **ETH3**, and **ETH4** are configured as devices in the **LAN1** bridge, which is used by the **LAN1** interface. As a result, when you add an Ethernet port to the hotspot, you may need to

reconfigure the Ethernet port configuration for other interfaces. For example, to remove the **ETH4** port from the **LAN1** bridge:

- a. Display the current **LAN1** bridge configuration:

```
(config)> show network bridge lan1 device
0 /network/device/eth2
1 /network/device/eth3
2 /network/device/eth4
3 /network/wifi/ap/digi_ap1
4 /network/wifi/ap/digi_ap2
(config)>
```

- b. Use the index number, **2**, to remove the **ETH4** device from the **LAN1** bridge:

```
(config)> del network bridge lan1 device 2
(config)>
```

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Create a new hotspot

Required configuration items

- A device or bridge for the hotspot.
 - If a bridge is used, it must be included in an interface with an assigned IP address.
- The authentication mode:
 - If **Local shared password** is selected for the authentication mode, include the password.
 - If **RADIUS shared password** or **RADIUS users** is selected for the authentication mode, include RADIUS configuration information.
 - If **HotspotSystem** is selected for the authentication mode, include HotspotSystem configuration information.

See [Hotspot authentication modes](#) for more information about authentication modes.
- The login page source, either **Local** or **Remote**.
 - If **Remote** is selected, include the IP address of fully-qualified domain name of the remote web server that serves the login page.
- An IP address and subnet for the hotspot.

Additional configuration items

- If the login page source is **Local**, include the name of the local HTML file, if different than the default.

- If the login page source is **Remote**, include the shared secret that the remote server and the hotspot. Used with cloud-based hotspot providers.
- The **Authentication port** used by the hotspot.
- The **Server port** used by the hotspot.
- Hotspot DHCP server settings:
 - Lease time.
 - Lease range start and end.
- Walled garden configuration:
 - Domains that clients connected to the hotspot can access prior to the client being authenticated.
 - Subnets that clients connected to the hotspot can access prior to the client being authenticated.
- Maximum download speed, in Kbps.
- Maximum upload speed, in Kbps.
- Enable verbose logging.


To create a new hotspot:

≡ WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

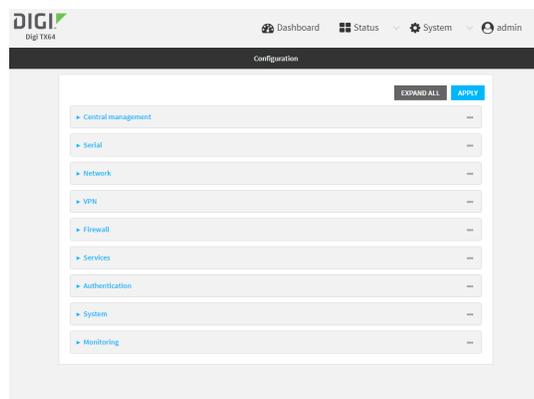

3. (Optional) Create new access points for the hotspot.
 You can also use existing access points for the hotspot. Access Points that are assigned to a hotspot or to a bridge used by a hotspot cannot be used for any other purpose.
 If more than one access point is being used by the hotspot, you must create a bridge that includes the access points.

- a. Click **Configuration > Network > WiFi > Access points**.
 - b. For **Add WiFi access point**, type a name for the access point and click **+**.
 - c. For **Radio**, select the appropriate Wi-Fi radio.
 - d. For **SSID**, type the SSID. Up to 32 characters are allowed.
This will be the SSID used by clients to connect to the hotspot. If you are creating multiple access points, each access point must have the same SSID.
 - e. For **Encryption**, select **Open (Unencrypted)**.
Hotspot access points must use open (unencrypted) communication. See [Hotspot security](#) for more information.
 - f. Add additional access points by following the above instructions.
4. (Optional) Create a new bridge and interface for the hotspot.

Note Hotspot bridges must also be part of an interface with a configured IP address.

- a. Click **Network > Bridges**.
- b. For **Add Bridge**, type a name for the bridge and click **+**.
- c. Add devices to the bridge:
 - i. Click to expand **Devices**.
 - ii. For **Add device**, click **+**.
 - iii. Select the **Device**.
 - iv. Repeat to add additional devices.
- d. Create an interface for the bridge:
 - i. Click **Configuration > Network > Interfaces**.
 - ii. For **Add Interface**, create a new interface and click **+**.
 - iii. For **Device**, select the bridge created above.
 - iv. Click to expand **IPv4**.
 - v. For Address, enter an IP address and subnet mask for the LAN. This IP address must be unique from all other interfaces.

Note This IP address is not the IP address of the hotspot. The hotspot IP address is configured during hotspot configuration.

5. Click **Network > Hotspots**.
6. For **Add Hotspot**, enter a name for the hotspot and click **+**.



The new hotspot configuration appears.

7. Hotspots are enabled by default when they are created. To disable, click **Enable hotspot**.
8. For **Zone**, leave at the default setting of **hotspot**. The **hotspot** firewall zone provides the necessary firewall rules for hotspot functionality.
9. For **Device**, select an access point, and Ethernet port, or a bridge.
10. For **Authentication Mode**, select one of the following:
 - **Click-through**: Requires each user to accept the terms and conditions.
 - **Local shared password**: Requires each user to enter a password. This password is validated locally on the TX64 device, and the password is the same for all users.
See [Configure the hotspot to use local shared password authentication](#) for information about configuring hotspot for local shared password authentication.
 - **RADIUS shared password**: Requires each user to enter a password. This password is validated by an external RADIUS server, and the password is the same for all users.
See [Configure the hotspot to use RADIUS shared password authentication](#) for information about configuring hotspot for RADIUS shared password authentication.
 - **RADIUS users**: Requires each user to enter username and password credentials that are established on an external RADIUS server. The credentials are validated by the RADIUS server.
See [Configure the hotspot to use RADIUS users authentication](#) for information about configuring hotspot for RADIUS users authentication.
 - **HotspotSystem**: Requires each user to be authenticated by HotspotSystem, a cloud hotspot service that supports various free and paid authentication methods, including social media account, SMS, voucher, and PayPal.
See [Configure the hotspot to use HotspotSystem authentication](#) for information about configuring hotspot for HotspotSystem authentication.
11. For **Login page source**, select either:
 - **Local**: Uses an HTML page for authentication that is stored locally on the TX64 device's filesystem, in the `/etc/config/hotspot` directory. Note that the **hotspot** directory is not visible until hotspot has been enabled for the first time.
 - **Remote**: Uses an HTML page for authentication that is served by a remote web server.
This parameter is not available if **HotspotSystem** is selected for the **Authentication mode**.
12. (Optional) If **Local** is selected for **Login page source**, for **Login page**, type the name of the local HTML file used for authentication. This parameter is not available if **HotspotSystem** is

selected for the **Authentication mode**.

Normally, this field should be left blank, and the device will use the default authentication HTML page. See [Hotspot authentication modes](#) for information about the default authentication HTML page used for each authentication mode.

If you upload a custom HTML file that uses a filename other than the default filename, type the custom filename here. See [Upload custom hotspot HTML pages](#) for more information about creating and uploading custom HTML files.

13. (Optional) For **Authentication port**, type the port number that the hotspot authentication server will use. The default is **3990**.
14. (Optional) For **Server port**, type the port number of the hotspot server. The default is **4990**.
15. If **Remote** is selected for **Login page source**, click to expand **Remote web server**.
 - a. For **FQDN**, type the IP address or fully-qualified domain name or the remote web server that will be used for client authentication.
 - b. (Optional) For **Secret**, type the shared secret that the remote server and the hotspot. Used with cloud-based hotspot providers.
 - c. (Optional) Change the default DHCP server configuration.

Note The hotspot DHCP server is automatically enabled and cannot be disabled.

- i. Click to expand **DHCP server**.

- ii. For **Lease time**, type the amount of time that a client DHCP lease is valid. The default is 10 minutes.
 Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
 For example, to set **Lease time** to ten minutes, enter **10m** or **600s**.
- iii. For **Lease range start**, type the lowest IP address in the range to assign to hotspot clients. The value entered here represents the low order byte of the IP address, and is combined with the subnet of the hotspot's static IP address. The default is **100**.
- iv. For **Lease range end**, type the highest IP address in the range to assign to hotspot clients. The value entered here represents the low order byte of the IP address, and when DHCP addresses are assigned to client, this number is combined with the subnet of the hotspot's static IP address. The default is **250**.

16. Click to expand **Walled garden**.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. If external servers are used for client authentication, such as a RADIUS server or HotspotSystem, they should be included in the walled garden settings. If

Remote has been selected for **Login page source**, the domain for the web server that is being use to serve the remote HTML files must be included in the white list defined in these fields.

- To add domains that can be accessed by the client prior to authentication:
 - a. Click to expand **Allowed domains**.
 - b. Click **+** to add a domain.
 - c. For **Domain**, type the hostname of the allowed domain.
 - d. Repeat to add additional domains.
 - To add subnets that can be accessed by the client prior to authentication:
 - a. Click to expand **Allowed subnets**.
 - b. Click **+** to add a subnet.
 - c. For **Subnet**, type an IPv4 address and optional subnet mask, using the format *IPv4_address[/netmask]*, or the keyword **any**.
 - d. Repeat to add additional subnets.
17. (Optional) For **Maximum download speed**, type the maximum download speed in kilobytes per second (Kbps).
 18. (Optional) For **Maximum upload speed**, type the maximum upload speed in kilobytes per second (Kbps).

19. (Optional) Click **Debug** to enable verbose logging to the system log.
20. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. (Optional) Create new access points for the hotspot.

You can also use existing access points for the hotspot. Access Points that are assigned to a hotspot or to a bridge used by a hotspot cannot be used for any other purpose.

If more than one access point is being used by the hotspot, you must create a bridge that includes the access points.

- a. Create a new access point:

```
(config)> add network wifi ap new_hotspot_AP1
(config network wifi ap new_hotspot_AP1)>
```

New access points are enabled by default.

- b. Set the Wi-Fi radio for the new access point:

- i. Show available radios:

```
(config network wifi ap new_hotspot_AP1)> radio ?
```

Radio: The Wi-Fi radio to run this access point on.

Format:

wifi1

wifi2

Current value:

```
(config network wifi ap new_hotspot_AP1)>
```

- ii. Set the appropriate radio:

```
(config network wifi ap new_hotspot_AP1)> radio wifi1
```

```
(config network wifi ap new_hotspot_AP1)>
```

- c. Set the SSID:

```
(config network wifi ap new_hotspot_AP1)> ssid my_SSID
```

```
(config network wifi ap new_hotspot_AP1)>
```

This will be the SSID used by clients to connect to the hotspot. If you are creating multiple access points, each access point must have the same SSID. Up to 32 characters are allowed.

- d. Set the encryption to open:

```
(config network wifi ap new_hotspot_AP1)> encryption type none
```

```
(config network wifi ap new_hotspot_AP1)>
```

Hotspot access points must use open (unencrypted) communication. See [Hotspot security](#) for more information.

- e. Type ... to return to the config prompt:

```
(config network wifi ap new_hotspot_AP1)> ...
(config)>
```

- f. Add additional access points by following the above instructions.

4. (Optional) Create a new bridge and interface for the hotspot.

Note Hotspot bridges must also be part of an interface with a configured IP address.

- a. Create a bridge:

```
(config)> add network bridge new_hotspot_bridge
(config network bridge new_hotspot_bridge)>
```

- b. Add devices to the bridge:

- i. Determine available devices:

```
(config network bridge new_hotspot_bridge)> .. .. interface lan1
device ?
```

Device: The network device used by this network interface.

Format:

```
/network/device/eth1
/network/device/eth2
/network/device/eth3
/network/device/eth4
/network/device/loopback
/network/bridge/hotspot_bridge
/network/bridge/lan1
/network/wireless/ap/digi_ap1
/network/wireless/ap/digi_ap2
/network/wireless/ap/digi_hotspot_ap1
/network/wireless/ap/digi_hotspot_ap2
```

Default value: /network/bridge/lan1

Current value: /network/bridge/lan1

```
(config network bridge new_hotspot_bridge)>
```

- ii. Add the appropriate device. For example, to add the **Digi AP (Wi-Fi1)** Wi-Fi access point:

```
(config network bridge new_hotspot_bridge)> add device end
/network/wireless/ap/digi_ap1
(config)>
```

- c. Type ... to return to the config prompt:

```
(config network bridge new_hotspot_bridge)> ...
(config)>
```

- d. Create an interface for the bridge:

```
(config)> add network interface hotspot_bridge_interface
(config network interface hotspot_bridge_interface)>
```

- e. Add the new bridge to the interface:

```
(config network interface hotspot_bridge_interface)> device
/network/bridge/new_hotspot_bridge
(config network interface hotspot_bridge_interface)>
```

- f. Set an IP address for the interface.

Note This IP address is not the IP address of the hotspot. The hotspot IP address is configured during hotspot configuration.

```
(config network interface hotspot_bridge_interface)> ipv4 address ip_
address/netmask
(config network interface hotspot_bridge_interface)>
```

- g. Type ... to return to the config prompt:

```
(config network interface hotspot_bridge_interface)> ...
(config)>
```

5. Create a new hotspot:

```
(config)> add network hotspot new_hotspot
(config network hotspot new_hotspot)>
```

New hotspots are enabled by default.

- To disable:

```
(config network hotspot new_hotspot)> enable false
(config network hotspot new_hotspot)>
```

- To enable, if it has been disabled:

```
(config network hotspot new_hotspot)> enable true
(config network hotspot new_hotspot)>
```

6. Add devices to the bridge:

- a. Determine available devices:

```
(config network bridge new_hotspot_bridge)> .. .. interface lan1 device
?
```

Device: The network device used by this network interface.

Format:

```
/network/device/eth1
/network/device/eth2
/network/device/eth3
```

```

/network/device/eth4
/network/device/loopback
/network/bridge/hotspot_bridge
/network/bridge/lan1
/network/wireless/ap/digi_ap1
/network/wireless/ap/digi_ap2
/network/wireless/ap/digi_hotspot_ap1
/network/wireless/ap/digi_hotspot_ap2

```

```

Default value: /network/bridge/lan1
Current value: /network/bridge/lan1

```

```
(config network bridge new_hotspot_bridge)>
```

- b. Add the appropriate device. For example, to add the **Digi AP (Wi-Fi1)** Wi-Fi access point:

```

(config network bridge new_hotspot_bridge)> add device end
/network/wireless/ap/digi_ap1
(config)>

```

7. Set an access point, and Ethernet port, or a bridge for the hotspot's device:

- a. Determine available devices:

```
(config network hotspot new_hotspot)> device ?
```

Device: Device to use for this hotspot interface.

Format:

```

/network/device/eth1
/network/device/eth2
/network/device/eth3
/network/device/eth4
/network/device/loopback
/network/bridge/hotspot_bridge
/network/bridge/lan1
/network/bridge/new_hotspot_bridge
/network/wifi/ap/digi_ap1
/network/wifi/ap/digi_ap2
/network/wifi/ap/digi_hotspot_ap1
/network/wifi/ap/digi_hotspot_ap2
/network/wifi/ap/new_hotspot_ap1
/network/wifi/ap/new_hotspot_ap2

```

Current value:

```
(config network hotspot new_hotspot)>
```

- b. Add the device:

```

(config network hotspot new_hotspot)> device /network/bridge/new_
hotspot_bridge
(config network hotspot new_hotspot)>

```

8. Set the authentication mode:

```
(config network hotspot new_hotspot)> auth value
(config network hotspot new_hotspot)>
```

where *value* is one of:

- **click_through**: Requires each user to accept the terms and conditions.
- **local_shared_password**: Requires each user to enter a password. This password is validated locally on the TX64 device, and the password is the same for all users.
See [Configure the hotspot to use local shared password authentication](#) for information about configuring hotspot for local shared password authentication.
- **radius_shared_password**: Requires each user to enter a password. This password is validated by an external RADIUS server, and the password is the same for all users.
See [Configure the hotspot to use RADIUS shared password authentication](#) for information about configuring hotspot for RADIUS shared password authentication.
- **radius_user**: Requires each user to enter username and password credentials that are established on an external RADIUS server. The credentials are validated by the RADIUS server.
See [Configure the hotspot to use RADIUS users authentication](#) for information about configuring hotspot for RADIUS users authentication.
- **hotspotsystem**: Requires each user to be authenticated by HotspotSystem, a cloud hotspot service that supports various free and paid authentication methods, including social media account, SMS, voucher, and PayPal.
See [Configure the hotspot to use HotspotSystem authentication](#) for information about configuring hotspot for HotspotSystem authentication.

9. Set the login page source. (This option is not available if **auth** is set to **hotspotsystem**.)

```
(config network hotspot new_hotspot)> login value
(config network hotspot new_hotspot)>
```

where *value* is either:

- **local**: Uses an HTML page for authentication that is stored locally on the TX64 device's filesystem, in the **/etc/config/hotspot** directory. Note that the **hotspot** directory is not visible until hotspot has been enabled for the first time.
 - **remote**: Uses an HTML page for authentication that is served by a remote web server.
10. (Optional) If **local** is selected for **login**, set the name of the local HTML file used for authentication. (This option is not available if **auth** is set to **hotspotsystem**.)

```
(config network hotspot new_hotspot)> local_page HTML_filename
(config network hotspot new_hotspot)>
```

Normally, this parameter should be left blank, and the device will use the default authentication HTML page. See [Hotspot authentication modes](#) for information about the default authentication HTML page used for each authentication mode.

If you upload a custom HTML file that uses a filename other than the default filename, type the custom filename here. See [Upload custom hotspot HTML pages](#) for more information about creating and uploading custom HTML files.

11. (Optional) Set the port number that the hotspot authentication server will used.

```
(config network hotspot new_hotspot)> auth_port port
(config network hotspot new_hotspot)>
```

The default is **3990**.

12. (Optional) Set the port number of the hotspot server.

```
(config network hotspot new_hotspot)> server_port port
(config network hotspot new_hotspot)>
```

The default is **4990**.

13. If **remote** is selected for **login**:

- a. Set the IP address or fully-qualified domain name or the remote web server that will be used for client authentication:

```
(config network hotspot new_hotspot)> remote url address
(config network hotspot new_hotspot)>
```

- b. (Optional) Set the shared secret that the remote server and the hotspot. Used with cloud-based hotspot providers.

```
(config network hotspot new_hotspot)> remote secret secret
(config network hotspot new_hotspot)>
```

14. (Optional) Change the default DHCP server configuration.

Note The hotspot DHCP server is automatically enabled and cannot be disabled.

- a. Set the amount of time that a client DHCP lease is valid:

```
(config network hotspot new_hotspot)> ipv4 address dhcp_server lease_
time value
(config network hotspot new_hotspot)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **lease_time** to ten minutes, enter either **10m** or **600s**:

```
(config network hotspot new_hotspot)> ipv4 dhcp_server lease_time 600s
(config network hotspot new_hotspot)>
```

The default is 10 minutes.

- b. Set the lowest IP address in the range to assign to hotspot clients. This value represents the low order byte of the IP address, and is combined with the subnet of the hotspot's static IP address.

```
(config network hotspot new_hotspot)> ipv4 address dhcp_server lease_
start value
(config network hotspot new_hotspot)>
```

where *value* is any integer between **1** and **254**. The default is **100**.

- c. Set the highest IP address in the range to assign to hotspot clients. This value represents the low order byte of the IP address, and is combined with the subnet of the hotspot's static IP address.

```
(config network hotspot new_hotspot)> ipv4 address dhcp_server lease_end
value
(config network hotspot new_hotspot)>
```

where *value* is any integer between **1** and **254**. The default is **250**.

15. Set walled garden settings.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. If external servers are used for client authentication, such as a RADIUS server or HotspotSystem, they should be included in the walled garden settings.

- Add domains that can be accessed by the client prior to authentication:

```
(config network hotspot new_hotspot)> add walled_garden domains end
domain_name
```

```
(config network hotspot new_h
```

Repeat to add additional domains.

- Add IP addresses and subnets that can be accessed by the client prior to authentication:

```
(config network hotspot new_hotspot)> add walled_garden subnets end
value
```

```
(config network hotspot new_hotspot)>
```

where *value* is an IPv4 address and optional subnet mask, using the format *IPv4_address* *[/netmask]*, or the keyword **any**.

Repeat to add additional IP addresses or subnets.

16. (Optional) Change the default maximum download speed:

```
(config network hotspot new_hotspot)> bandwidth_max_down value
(config network hotspot new_hotspot)>
```

where *value* is an integer between 1 and 100000 and represents the maximum download speed in Kbps.

17. (Optional) Change the default maximum upload speed:

```
(config network hotspot new_hotspot)> bandwidth_max_up value
(config network hotspot new_hotspot)>
```

where *value* is an integer between 1 and 100000 and represents the maximum upload speed in Kbps.

18. (Optional) Enable verbose logging to the system log:

```
(config network hotspot new_hotspot)> debug true
(config network hotspot new_hotspot)>
```

- Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the hotspot to use local shared password authentication

Local shared password authentication requires each user to enter a password. This password is validated locally on the TX64 device, and the password is the same for all users.

By default, the router redirects unauthenticated users to the HTML authentication page located on the router at **etc/config/hotspot/password.html**. You can customize the authentication page as needed, or host an authentication page on a remote server. See [Customize the hotspot login page](#) for further information.

Required configuration items

- [Create a new hotspot](#) or [Enable hotspot using the default configuration](#).
- Select local shared password authentication.
- The local password that will be used for authentication.

Additional configuration items

- Modify the local HTML authentication page, **/etc/config/hotspot/password.html**, or enter the name of an alternative HTML authentication page stored in the same directory, or identify a remote web server to host the HTML authentication page and include that server in the "white list" of servers that unauthenticated hotspot clients can access. See [Customize the hotspot login page](#) for further information.


Hotspot LAN configuration:

Configure hotspot for local shared password authentication from the WebUI

- Log into the TX64 WebUI as a user with full Admin access rights.
- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

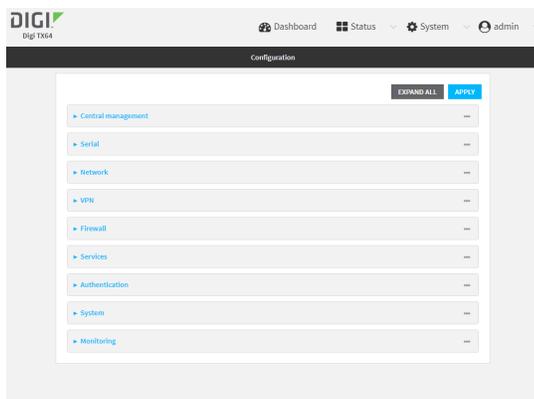

3. [Create a new hotspot](#) or [Enable hotspot using the default configuration](#).
4. During hotspot configuration, for **Authentication mode**, select **Local shared password**.
5. For **Local shared password**, type the password that all users will be required to enter to authentication with the hotspot.
6. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Configure hotspot for local shared password authentication from the Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. [Create a new hotspot](#) or [Enable hotspot using the default configuration](#).
4. Set the authentication mode to **local-shared-password**:

```
(config)> network hotspot hotspot_name auth local-shared-password
(config)>
```

5. Set the password that all users will be required to enter to authentication with the hotspot:

```
(config)> network hotspot hotspot_name local_shared_password password
(config)>
```

6. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the hotspot to use RADIUS shared password authentication

RADIUS shared password authentication requires each user to enter a password. This password is validated by an external RADIUS server, and the password is the same for all users.

Create a user on the RADIUS server with the username **guest**. The password assigned at the RADIUS server for the user **guest** is the shared password that your hotspot users should enter to authenticate to the hotspot via the RADIUS server.

By default, the router redirects unauthenticated users to the HTML authentication page located on the router at **etc/config/hotspot/password.html**. You can customize the authentication page as needed, or host an authentication page on a remote server. See [Customize the hotspot login page](#) for further information.

Required configuration items

- [Create a new hotspot](#) or [Enable hotspot using the default configuration](#).
- Select RADIUS shared password authentication.
- IP address or hostname of the primary RADIUS server.
- A user on the RADIUS server with the username **guest**.
- RADIUS server secret.
- RADIUS NAS ID.
- Domain name or subnet of the RADIUS server included in the "white list" of servers that unauthenticated hotspot clients can access.

Additional configuration items

- IP address or hostname of the secondary RADIUS server to be used if the primary RADIUS server is unreachable.
- Modify the local HTML authentication page, **/etc/config/hotspot/password.html**, or enter the name of an alternative HTML authentication page stored in the same directory, or identify a remote web server to host the HTML authentication page and include that server in the "white list" of servers that unauthenticated hotspot clients can access. See [Customize the hotspot login page](#) for further information.

Hotspot LAN configuration:




Configure hotspot for RADIUS shared password authentication from the WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

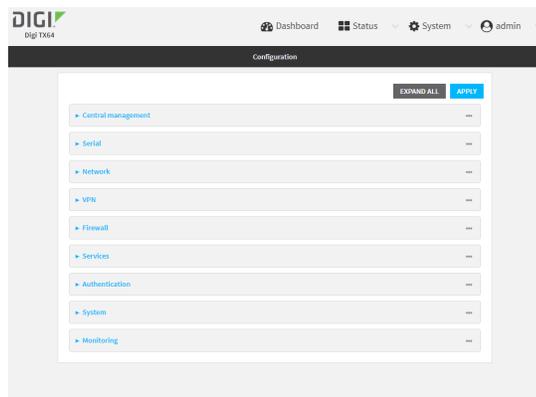

3. [Create a new hotspot](#) or [Enable hotspot using the default configuration](#).
4. During hotspot configuration, for **Authentication mode**, select **RADIUS shared password**.
5. Click to expand **RADIUS**.
 - a. For **Primary server name**, enter the IP address or fully-qualified domain name of the primary RADIUS server to use to authenticate hotspot users.
 - b. (Optional) For **Secondary server name**, enter the IP address or fully-qualified domain name of the backup RADIUS server to use to authenticate hotspot users if the primary RADIUS server is not available.
 - c. (Optional) For **Port**, type the port number to use for RADIUS authentication requests. The default is **1812**.
 - d. (Optional) For **Accounting port**, type the port number to use for RADIUS accounting requests. The default is **1813**.
 - e. For **Secret**, enter the shared secret for the RADIUS server. This is configured on the RADIUS server.
 - f. For **NAS ID**, enter the unique Network Access Server (NAS) identifier used by the RADIUS server. The default is **hotspot**.
 - g. (Optional) Enable Swap Octets to swap the meaning of the input octets/packets and output octets/packets RADIUS attributes. This can fix issues if the data limits and/or accounting reports appear to be reversed on the RADIUS server. The default is disabled.
6. Click to expand **Walled garden**.
Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. Include the domain or subnet of the RADIUS server(s) that are being used for authentication.

- To add domains that can be accessed by the client prior to authentication:
 - a. Click to expand **Allowed domains**.
 - b. Click **+** to add a domain.
 - c. For **Domain**, type the hostname of the allowed domain.
 - d. Repeat to add additional domains.
 - To add subnets that can be accessed by the client prior to authentication:
 - a. Click to expand **Allowed subnets**.
 - b. Click **+** to add a subnet.
 - c. For **Subnet**, type an IPv4 address and optional subnet mask, using the format *IPv4_address[/netmask]*, or the keyword **any**.
 - d. Repeat to add additional subnets.
7. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Configure hotspot for RADIUS shared password authentication from the Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. [Create a new hotspot](#) or [Enable hotspot using the default configuration](#).
4. Set the authentication mode to **radius-shared-password**:

```
(config)> network hotspot hotspot_name auth radius-shared-password
(config)>
```

5. Configure the RADIUS server:
 - a. Set the fully qualified domain name or IP address of the primary RADIUS server:

```
(config)> network hotspot hotspot_name radius primary_radius_server
address
(config)>
```

- b. (Optional) Set the fully qualified domain name or IP address of the secondary RADIUS server, used if the primary RADIUS server is unreachable:

```
(config)> network hotspot hotspot_name radius backup_radius_server
address
(config)>
```

- c. (Optional) Set the port number to use for RADIUS authentication requests.

```
(config)> network hotspot hotspot_name radius auth_port port
(config)>
```

The default is **1812**.

- d. (Optional) Set the port number to use for RADIUS accounting requests.

```
(config)> network hotspot hotspot_name radius acct_port port
(config)>
```

The default is **1813**.

- e. Set the shared secret for the RADIUS server. This is configured on the RADIUS server.

```
(config)> network hotspot hotspot_name radius secret secret
(config)>
```

- f. Set the unique Network Access Server (NAS) identifier used by the RADIUS server:

```
(config)> network hotspot hotspot_name radius nas_id id
(config)>
```

The default is **hotspot**.

- g. (Optional) Enable Swap Octets to swap the meaning of the input octets/packets and output octets/packets RADIUS attributes. This can fix issues if the data limits and/or accounting reports appear to be reversed on the RADIUS server:

```
(config)> network hotspot hotspot_name radius swap octets true
(config)>
```

The default is disabled.

6. Set walled garden settings.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. Include the domain or subnet of the RADIUS server(s) that are being used for authentication.

- Add domains that can be accessed by the client prior to authentication:

```
(config network hotspot new_hotspot)> add walled_garden domains end
domain_name
(config network hotspot new_hotspot)>
```

Repeat to add additional domains.

- Add IP addresses and subnets that can be accessed by the client prior to authentication:

```
(config network hotspot new_hotspot)> add walled_garden subnets end
value
(config network hotspot new_hotspot)>
```

where *value* is an IPv4 address and optional subnet mask, using the format *IPv4_address* *[/netmask]*, or the keyword **any**.

Repeat to add additional IP addresses or subnets.

7. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

8. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the hotspot to use RADIUS users authentication

RADIUS users authentication requires each hotspot user to enter a username and password. Users are created on an external RADIUS server, and the username and password is validated by the external RADIUS server.

By default, the router redirects unauthenticated users to the HTML authentication page located on the router at **etc/config/hotspot/login.html**. You can customize the authentication page as needed, or host an authentication page on a remote server. See [Customize the hotspot login page](#) for further information.

Required configuration items

- [Create a new hotspot](#) or [Enable hotspot using the default configuration](#).
- Select RADIUS users authentication.
- IP address or hostname of the primary RADIUS server.
- Users configured on the RADIUS server.
- RADIUS server secret.
- RADIUS NAS ID.
- Domain name or subnet of the RADIUS server included in the "white list" of servers that unauthenticated hotspot clients can access.

Additional configuration items

- IP address or hostname of the secondary RADIUS server to be used if the primary RADIUS server is unreachable.
- Modify the local HTML authentication page, **/etc/config/hotspot/login.html**, or enter the name of an alternative HTML authentication page stored in the same directory, or identify a remote web server to host the HTML authentication page and include that server in the "white list" of servers that unauthenticated hotspot clients can access. See [Customize the hotspot login page](#) for further information.


Hotspot LAN configuration:

Configure hotspot for RADIUS users authentication from the WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

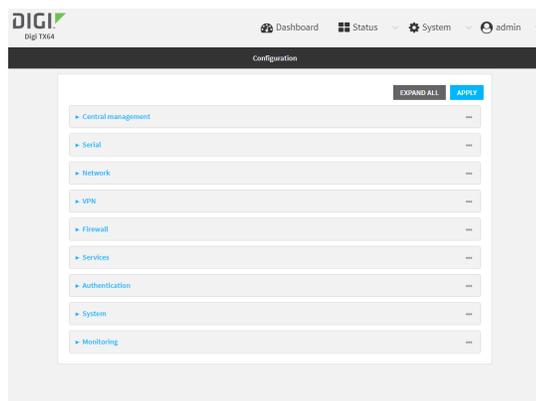

3. [Create a new hotspot](#) or [Enable hotspot using the default configuration](#).
4. During hotspot configuration, for **Authentication mode**, select **RADIUS users**.
5. Click to expand **Radius**.
 - a. For **Primary server name**, enter the IP address or fully-qualified domain name of the primary RADIUS server to use to authenticate hotspot users.
 - b. (Optional) For **Secondary server name**, enter the IP address or fully-qualified domain name of the backup RADIUS server to use to authenticate hotspot users if the primary RADIUS server is not available.
 - c. (Optional) For **Port**, type the port number to use for RADIUS authentication requests. The default is **1812**.
 - d. (Optional) For **Accounting port**, type the port number to use for RADIUS accounting requests. The default is **1813**.
 - e. For **Secret**, enter the shared secret for the RADIUS server. This is configured on the RADIUS server.
 - f. For **NAS ID**, enter the unique Network Access Server (NAS) identifier used by the RADIUS server. The default is **hotspot**.
 - g. (Optional) Enable Swap Octets to swap the meaning of the input octets/packets and output octets/packets RADIUS attributes. This can fix issues if the data limits and/or accounting reports appear to be reversed on the RADIUS server. The default is disabled.
6. Click to expand **Walled garden**.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. Include the domain or subnet of the RADIUS server(s) that are being used for authentication.

- To add domains that can be accessed by the client prior to authentication:
 - a. Click to expand **Allowed domains**.
 - b. Click **+** to add a domain.
 - c. For **Domain**, type the hostname of the allowed domain.
 - d. Repeat to add additional domains.
 - To add subnets that can be accessed by the client prior to authentication:
 - a. Click to expand **Allowed subnets**.
 - b. Click **+** to add a subnet.
 - c. For **Subnet**, type an IPv4 address and optional subnet mask, using the format *IPv4_address[/netmask]*, or the keyword **any**.
 - d. Repeat to add additional subnets.
7. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Configure hotspot for RADIUS users authentication from the Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. [Create a new hotspot](#) or [Enable hotspot using the default configuration](#).
4. Set the authentication mode to **radius-users**:

```
(config)> network hotspot hotspot_name auth radius-users
(config)>
```

5. Configure the RADIUS server:
 - a. Set the fully qualified domain name or IP address of the primary RADIUS server:

```
(config)> network hotspot hotspot_name radius primary_radius_server
address
(config)>
```

- b. (Optional) Set the fully qualified domain name or IP address of the secondary RADIUS server, used if the primary RADIUS server is unreachable:

```
(config)> network hotspot hotspot_name radius backup_radius_server
address
(config)>
```

- c. (Optional) Set the port number to use for RADIUS authentication requests.

```
(config)> network hotspot hotspot_name radius auth_port port
(config)>
```

The default is **1812**.

- d. (Optional) Set the port number to use for RADIUS accounting requests.

```
(config)> network hotspot hotspot_name radius acct_port port
(config)>
```

The default is **1813**.

- e. Set the shared secret for the RADIUS server. This is configured on the RADIUS server.

```
(config)> network hotspot hotspot_name radius secret secret
(config)>
```

- f. Set the unique Network Access Server (NAS) identifier used by the RADIUS server:

```
(config)> network hotspot hotspot_name radius nas_id id
(config)>
```

The default is **hotspot**.

- g. (Optional) Enable Swap Octets to swap the meaning of the input octets/packets and output octets/packets RADIUS attributes. This can fix issues if the data limits and/or accounting reports appear to be reversed on the RADIUS server:

```
(config)> network hotspot hotspot_name radius swap octets true
(config)>
```

The default is disabled.

6. Set walled garden settings.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. Include the domain or subnet of the RADIUS server(s) that are being used for authentication.

- Add domains that can be accessed by the client prior to authentication:

```
(config network hotspot new_hotspot)> add walled_garden domains end
domain_name
(config network hotspot new_hotspot)>
```

Repeat to add additional domains.

- Add IP addresses and subnets that can be accessed by the client prior to authentication:

```
(config network hotspot new_hotspot)> add walled_garden subnets end
value
(config network hotspot new_hotspot)>
```

where *value* is an IPv4 address and optional subnet mask, using the format *IPv4_address* *[/netmask]*, or the keyword **any**.

Repeat to add additional IP addresses or subnets.

7. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

8. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the hotspot to use HotspotSystem authentication

You can configure TX64 hotspot to use HotspotSystem, a cloud hotspot service that supports various free and paid authentication methods, including social media account, SMS, voucher, and PayPal.

By default, the router redirects unauthenticated users to the HTML authentication page located on the router at **etc/config/hotspot/login.html**. You can customize the authentication page as needed, or host an authentication page on a remote server. See [Customize the hotspot login page](#) for further information.

Required configuration items

- [Create a new hotspot](#) or [Enable hotspot using the default configuration](#).
- Select HotspotSystem authentication.
- Create and configure a HotspotSystem account.
- The Operator name and location ID for the HotspotSystem.

Additional configuration items

- Modify the local HTML authentication page, **/etc/config/hotspot/login.html**, or enter the name of an alternative HTML authentication page stored in the same directory, or identify a remote web server to host the HTML authentication page and include that server in the "white list" of servers that unauthenticated hotspot clients can access. See [Customize the hotspot login page](#) for further information.

Hotspot LAN configuration:

Configure a HotspotSystem account

1. Sign up for an operator account. Go to [HotspotSystem signup](#).
2. Add a new location for the hotspot. Take care when selecting the Business Model because some options cannot be changed after you create the location. Go to [Add a new location](#).
3. Click **Modify Hotspot Data & Settings**.

4. Click **Splash Page Settings**.
5. Set **Internal Login URL** to **http://{UAMIP}:{UAMPORT}/prelogin**.
6. Set **Internal Logout URL** to **http://{UAMIP}:{UAMPORT}/logoff**.
7. Click **Submit**.

Configure allowed domains


HotspotSystem uses various additional domains for payment processing and social media login. While unauthorized users are automatically able to access **hotspotsystem.com**, your hotspot configuration may require unauthorized users to have access to additional domains. These domains need to be listed by the **Allowed garden > Allowed domains** option. For example, this may include sites like the following:

- **PayPal** and other payment processors require access to a number of domains, depending on which services you select. Contact HotspotSystem for an up-to-date list of domains that need to be whitelisted.
- **FREE Social login** requires a number of domains, depending on which services you select. Refer to the following page for an up-to-date list of social login domains that need to be whitelisted: [Whitelist for hotspot free social login](#).




Configure hotspot for HotspotSystem authentication from the WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

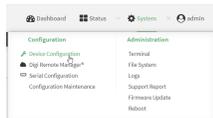

The **Configuration** window is displayed.

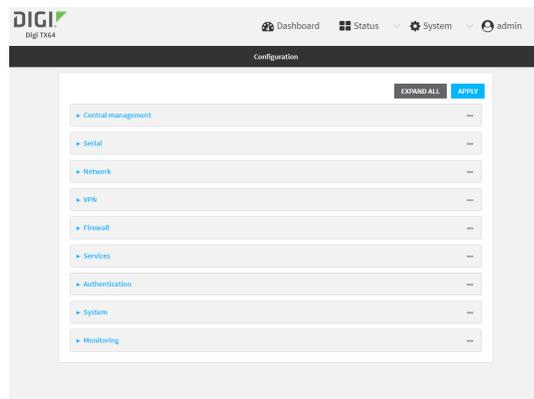

3. [Create a new hotspot](#) or [Enable hotspot using the default configuration](#).

4. During hotspot configuration, for **Authentication mode**, select **HotspotSystem**.
5. Click to expand **HotspotSystem**.
 - a. For **Operator name**, type the operator name that you registered with **hotspotsystem.com**.
 - b. For **Location ID**, type the location ID of this hotspot. The default is **1**.
6. Click to expand **Walled garden**.
 Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. Include the domain or subnet of supporting servers for payment or other external login and authentication (such as social media sites).
 - To add domains that can be accessed by the client prior to authentication:
 - a. Click to expand **Allowed domains**.
 - b. Click **+** to add a domain.
 - c. For **Domain**, type the hostname of the allowed domain.
 - d. Repeat to add additional domains.
 - To add subnets that can be accessed by the client prior to authentication:
 - a. Click to expand **Allowed subnets**.
 - b. Click **+** to add a subnet.
 - c. For **Subnet**, type an IPv4 address and optional subnet mask, using the format *IPv4_address[/netmask]*, or the keyword **any**.
 - d. Repeat to add additional subnets.
7. Click **Apply** to save the configuration and apply the change.
 The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Configure hotspot for HotspotSystem authentication from the Command line

1. Log into the TX64 command line as a user with full Admin access rights.
 Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. [Create a new hotspot](#) or [Enable hotspot using the default configuration](#).
4. Set the authentication mode to **hotspotsystem**:

```
(config)> network hotspot hotspot_name auth hotspotsystem
(config)>
```

5. Configure **HotspotSystem**:

- a. Set the operator name that you registered with **hotspotsystem.com**.

```
(config)> network hotspot hotspot_name hotspotsystem operator name
(config)>
```

- b. Set the location ID of this hotspot.

```
(config)> network hotspot hotspot_name hotspotsystem location value
(config)>
```

where *value* is any integer. The default is **1**.

6. Set walled garden settings.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. Include the domain or subnet of supporting servers for payment or other external login and authentication (such as social media sites).

- Add domains that can be accessed by the client prior to authentication:

```
(config network hotspot new_hotspot)> add walled_garden domains end
domain_name
(config network hotspot new_hotspot)>
```

Repeat to add additional domains.

- Add IP addresses and subnets that can be accessed by the client prior to authentication:

```
(config network hotspot new_hotspot)> add walled_garden subnets end
value
(config network hotspot new_hotspot)>
```

where *value* is an IPv4 address and optional subnet mask, using the format *IPv4_address* [*/netmask*], or the keyword **any**.

Repeat to add additional IP addresses or subnets.

7. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

8. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show hotspot status and statistics


WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the main menu, click **Status**

- Under **Networking**, click **Hotspot**.



The **Hotspot** status page is displayed.

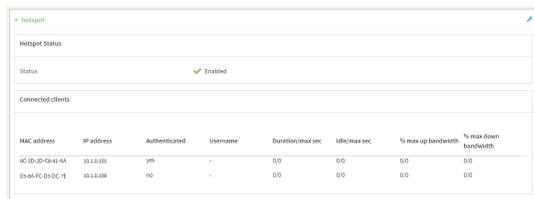

Command line

- Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- Enter the [show hotspot](#) command at the Admin CLI prompt:

```
> show hotspot

Hotspot      Enabled  Device
-----
hotspot      true    hotspot_bridge
new_hotspot  false   new_hotspot_ap

>
```

- Enter the **show hotspot name *hotspot_name*** command at the Admin CLI prompt to display information about clients connected to a specific hotspot:

```
> show hotspot name hotspot

MAC Address      IP Address  Auth  Username  Duration/max sec  Idle/max
sec  %/max up bandwidth  %/max down bandwidth
-----
8C-2D-2D-C8-41-AA  10.1.0.101  yes   mariev    0/0              0/0
0/0
E5-8A-FC-D3-DC-7E  10.1.0.100  no    -         0/0              0/0
0/0

>
```

- Enter the **show hotspot ip *ip_address*** command at the Admin CLI prompt to display information about clients connected to a specific hotspot:

```
> show hotspot ip hotspot 10.1.0.101
```

MAC Address sec %/max up	IP Address bandwidth %/max	Auth	Username	Duration/max sec	Idle/max
8C-2D-2D-C8-41-AA 0/0	10.1.0.101 0/0	yes	mariev	0/0	0/0

```
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Customize the hotspot login page

The TX64 device provides three sample HTML webpages for use with the hotspot feature. When hotspot is enabled for the first time, the sample webpages are installed to the **/etc/config/hotspot** folder on the device's filesystem. By default, the hotspot redirects users to one of the sample webpages based on the authentication mode being used. See [Hotspot authentication modes](#) for information about which HTML file is used for each authentication mode. The sample HTML webpages use **ChilliLibrary.js** to perform authentication. Do not modify **ChilliLibrary.js**.

You can customize the sample HTML pages, or replace them with your own page, so that hotspot users will be redirected to your custom HTML page when they log into the hotspot. You can also host the HTML pages on an external web server, rather than on the TX64 device. See [Create a new hotspot](#) for information about configuring the HTML page that the hotspot will use.

This section contains the following topics:

Edit sample hotspot HTML pages	237
Upload custom hotspot HTML pages	238
Restore hotspot default sample pages	240


Edit sample hotspot HTML pages

To edit the sample HTML pages, download the files and edit the files on your local machine. After they have been edited, upload the edited files to the TX64 device.

The edited HTML page should call the same JavaScript functions that the sample HTML pages do. Additional pages and assets can be uploaded to the hotspot folder, and additional subfolders can be created as needed. Supported file extensions include: .html, .gif, .js, .jpg, .mp4, .ogv, .png, .swf, .json, and .dat.

≡ WebUI

1. Download the sample HTML file:
 - a. Log into the TX64 WebUI as a user with Admin access.
 - b. On the menu, click **System**. Under **Administration**, click **File System**.

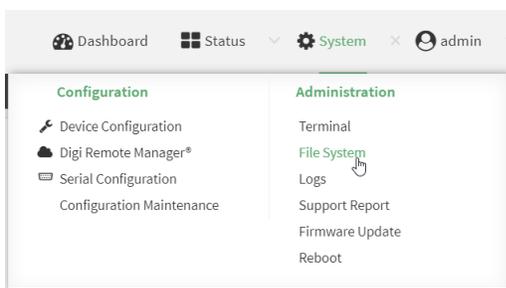

The **File System** page appears.



- c. Highlight the **hotspot** directory and click ↻ to open the directory.
- d. Select the HTML file you want to edit and click ⬇️ (download).

Note The files in the **hotspot** directory are only available after hotspot has been enabled for the first time.

2. On your local machine, edit the file as needed.
3. Upload the edited file:
 - a. In the TX64WebUI, return to the **hotspot** directory.
 - b. Click ⬆️ (upload).
 - c. Use the local file system to browse to the location of the edited HTML file. Select the file and click **Open** to upload the file.

🗂️ Command line

Use the `scp` command to download and upload the sample HTML files using utilities.

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Download the file to your local machine. For example:

```
> scp host 192.168.4.1 user admin remote /home/admin/temp/ local
/etc/config/hotspot/login.html to remote
admin@192.168.4.1's password: adminpwd
login.html
>
```

Note The files in the **hotspot** directory are only available after hotspot has been enabled for the first time.

3. On your local machine, edit the file as needed.
4. Upload the edited file from your local machine the the TX64 device. For example:

```
> scp host 192.168.4.1 user admin remote /home/admin/temp/ local
/etc/config/hotspot/login.html to local
admin@192.168.4.1's password: adminpwd
login.html
>
```

Upload custom hotspot HTML pages


Rather than editing the sample HTML pages, you can upload a custom login page with a different filename.

The new page should include **ChilliLibrary.js** and call the same JavaScript functions that the sample HTML pages do. Additional pages and assets can be uploaded to the hotspot folder, and additional subfolders can be created as needed. Supported file extensions include: .html, .gif, .js, .jpg, .mp4, .ogv, .png, .swf, .json, and .dat.

You can configure the TX64 device to use your custom HTML page using either the WebUI or the command line:

WebUI

1. Upload your custom HTML file to the TX64 device's filesystem:
 - a. Log into the TX64 WebUI as a user with Admin access.
 - b. On the menu, click **System**. Under **Administration**, click **File System**.

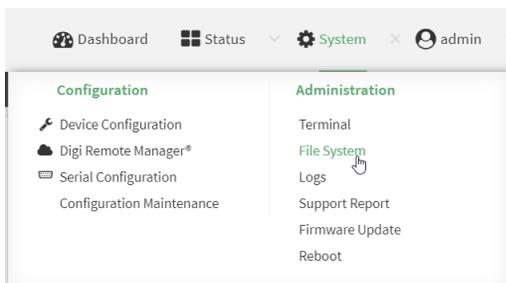


The **File System** page appears.



- c. Highlight the **hotspot** directory and click to open the directory.
 - d. Click (upload).
 - e. Browse to the location of the HTML file on your local machine. Select the file and click **Open** to upload the file.
2. Configure the hotspot to use your custom HTML file:
 - a. On the menu, click **Network > Hotspot**.
 - b. Click the name of the appropriate hotspot to expand.
 - c. Ensure that **Login page source** is set to **Local**.
 - d. For **Login page**, type the name of your custom HTML file.
 - e. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.

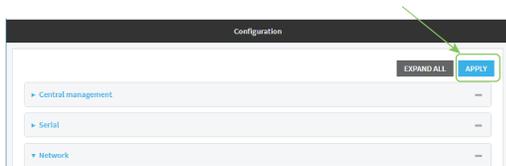

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Use the **scp** command to upload the edited file from your local machine to the TX64 device.
For example:

```
> scp host 192.168.4.1 user admin remote /home/admin/temp/ local
/etc/config/hotspot/custom.html to local
```

3. Configure the hotspot to use your custom HTML file:
 - a. Type **config** to change to configuration mode:

```
> config
(config)>
```

- b. Set **login** to **local-page**:

```
(config)> network hotspot hotspot_name login local
(config)>
```

- c. Set **local-page** to your custom HTML file:

```
(config)> network hotspot hotspot_name local-page custom.html
```

- d. Save the configuration and apply the change:

```
(config)> save  
Configuration saved.  
>
```

- e. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Restore hotspot default sample pages

If you have customized the sample HTML pages without making a backup of the samples, you may wish to restore the original version of the HTML pages without doing a factory reset.

The **hotspot** directory and files are loaded when the hotspot is enabled, and you can restore the default pages by doing the following:

1. Log into the TX64 command line as a user with Admin access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the **mv** command to change the name of the existing hotspot directory:

```
> mv /etc/config/hotspot /etc/config/hotspot_modified.  
>
```

3. Use the WebUI or the command line to disable all hotspots and then reenable them. This will recreate the default hotspot directory. For example:

- a. Type **config** to change to configuration mode:

```
> config  
(config)>
```

- b. Disable the hotspot:

```
(config)> network hotspot hotspot_name enabled false  
(config)>
```

- c. Save the configuration and apply the change:

```
(config)> save  
Configuration saved.  
>
```

- d. Type **config** again to change to configuration mode:

```
> config  
(config)>
```

- e. Reenable the hotspot:

```
(config)> network hotspot hotspot_name enabled true
(config)>
```

- f. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- g. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Hotspot RADIUS attributes

The RADIUS server may send attributes to the hotspot to affect the operation of a client session. For example, here are some of the RADIUS attributes that the hotspot handles:

- Session-Timeout
- Idle-Timeout
- Acct-Interim-Interval
- WISPr-Redirection-URL
- WISPr-Session-Terminate-Time
- ChilliSpot-Max-Input-Octets
- ChilliSpot-Max-Output-Octets
- ChilliSpot-Max-Total-Octets

Also, if the RADIUS server requests it, the hotspot will send accounting information back to the RADIUS server. For example, here are some of the RADIUS attributes that the hotspot sends:

- Acct-Input-Octets
- Acct-Output-Octets
- Acct-Session-Time
- Acct-Input-Packets
- Acct-Output-Packets
- Acct-Input-Gigawords
- Acct-Output-Gigawords

Routing

This chapter contains the following topics:

IP routing	243
Show the routing table	269
Dynamic DNS	271
Virtual Router Redundancy Protocol (VRRP)	277

IP routing

The TX64 device uses IP routes to decide where to send a packet it receives for a remote network. The process for deciding on a route to send the packet is as follows:

1. The device examines the destination IP address in the IP packet, and looks through the IP routing table to find a match for it.
2. If it finds a route for the destination, it forwards the IP packet to the configured IP gateway or interface.
3. If it cannot find a route for the destination, it uses a default route.
4. If there are two or more routes to a destination, the device uses the route with the longest mask.
5. If there are two or more routes to a destination with the same mask, the device uses the route with the lowest metric.

This section contains the following topics:

Configure a static route	244
Delete a static route	247
Policy-based routing	249
Configure a routing policy	250
Example: Dual WAN policy-based routing	258
Example: Route traffic to a specific WAN interface based on the client MAC address	261
Routing services	266
Configure routing services	267

Configure a static route

A static route is a manually configured routing entry. Information about the route is manually entered rather than obtained from dynamic routing traffic.

Required configuration items

- The destination address or network.
- The interface to use to reach the destination.

Additional configuration items

- A label used to identify this route.
- The IPv4 address of the gateway used to reach the destination.
- The metric for the route. When multiple routes are available to reach the same destination, the route with the lowest metric is used.
- The Maximum Transmission Units (MTU) of network packets using this route.


To configure a static route:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

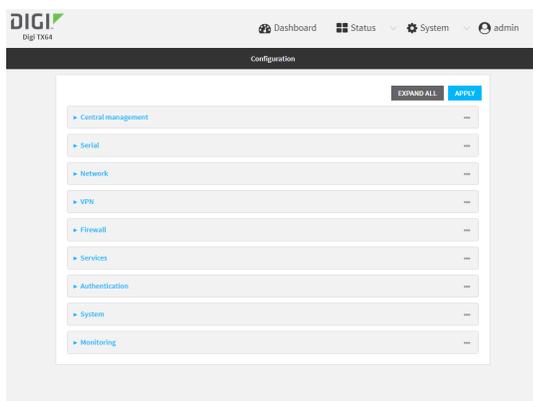


3. Click **Network > Routes > Static routes**.

- Click the **+** to add a new static route.



The new static route configuration page is displayed:

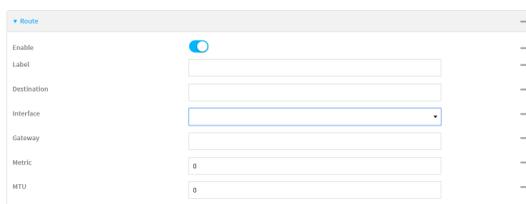

New static route configurations are enabled by default. To disable, click to toggle **Enable** to off.

- (Optional) For **Label**, type a label that will be used to identify this route.
- For **Destination**, type the IP address or network of the destination of this route.
For example, to route traffic to the 192.168.47.0 network that uses a subnet mask of 255.255.255.0, type **192.168.47.0/24**. The **any** keyword can also be used to route packets to any destination with this static route.
- For **Interface**, select the interface on the TX64 device that will be used with this static route.
- (Optional) For **Gateway**, type the IPv4 address of the gateway used to reach the destination. Set to blank if the destination can be accessed without a gateway.
- (Optional) For **Metric**, type the metric for the route. When multiple routes are available to reach the same destination, the route with the lowest metric is used.
- (Optional) For **MTU**, type the Maximum Transmission Units (MTU) of network packets using this route.
- Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a new static route:

```
(config)> add network route static end
(config network route static 0)>
```

New static route instances are enabled by default. To disable:

```
(config network route static 0)> enable false
(config network route static 0)>
```

4. (Optional) set a label that will be used to identify this route. For example:

```
(config network route static 0)> label "route to accounting network"
(config network route static 0)>
```

5. Set the IP address or network of the destination of this route. For example:

```
(config network route static 0)> destination ip_address[/netmask]
(config network route static 0)>
```

For example, to route traffic to the 192.168.47.0 network that uses a subnet mask of 255.255.255.0:

```
(config network route static 0)> dst 192.168.47.0/24
(config network route static 0)>
```

The **any** keyword can also be used to route packets to any destination with this static route.

6. Set the interface on the TX64 device that will be used with this static route:
 - a. Use the **?** to determine available interfaces:

```
(config network route static 0)> interface ?
```

Interface: The network interface to use to reach the destination.

Format:

```
/network/interface/defaultip
/network/interface/defaultlinklocal
/network/interface/lan1
/network/interface/lan_hotspot
/network/interface/loopback
/network/interface/wan1
/network/interface/wwan1
/network/interface/wwan2
```

Current value:

```
(config network route static 0)> interface
```

- b. Set the interface. For example:

```
(config network route static 0)> interface /network/interface/wan1
(config network route static 0)>
```

7. (Optional) Set the IPv4 address of the gateway used to reach the destination. Set to blank if the destination can be accessed without a gateway.

```
(config network route static 0)> gateway IPv4_address
(config network route static 0)>
```

8. (Optional) Set the metric for the route. When multiple routes are available to reach the same destination, the route with the lowest metric is used.

```
(config network route static 0)> metric value
(config network route static 0)>
```

where *value* is an interger between **0** and **65535**. The default is **0**.

9. (Optional) Set the Maximum Transmission Units (MTU) of network packets using this route:

```
(config network route static 0)> mtu integer
(config network route static 0)>
```

10. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

11. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.


Delete a static route

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

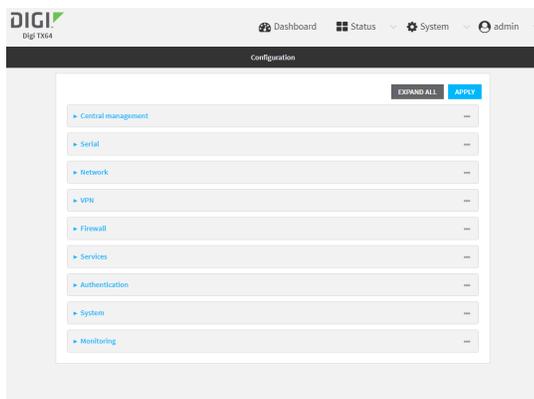

3. Click **Network > Routes > Static routes**.
4. Click the menu icon (...) for a static route and select **Delete**.



5. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Determine the index number of the static route to be deleted:

```
(config)> show network route static
0
  dst 10.0.0.1
  enable true
  no gateway
  interface /network/interface/lan1
  label new_static_route
```

```
metric 0
mtu 0
1
dst 192.168.5.1
enable true
gateway 192.168.5.1
interface /network/interface/lan2
label new_static_route_1
metric 0
mtu 0
(config)>
```

4. Use the index number to delete the static route:

```
(config)> del network route static 0
(config)>
```

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Policy-based routing

Normally, a routing device determines how to route a network packet based on its destination address. However, you can use policy-based routing to forward the packet based on other criteria, such as the source of the packet. For example, you can configure the TX64 device so that high-priority traffic is routed through the cellular connection, while all other traffic is routed through an Ethernet (WAN) connection.

Policy-based routing for the TX64 device uses the following criteria to determine how to route traffic:

- Firewall zone (for example, internal/outbound traffic, external/inbound traffic, or IPSec tunnel traffic).
- Network interface (for example, the cellular connection, the WAN, or the LAN).
- IPv4 address.
- IPv6 address.
- MAC address.
- Domain.
- Protocol type (TCP, UDP, ICMP, or all).

The order of the policies is important. Routing policies are processed sequentially; as a result, if a packet matches an earlier policy, it will be routed using that policy's rules. It will not be processed by any subsequent rules.

Configure a routing policy

Required configuration items

- The packet matching parameters. It can any combination of the following:
 - Source interface.
 - Source address. This can be a firewall zone, an interface, a single IPv4/IPv6 address or network, or a MAC address.
 - Destination address. This can be a firewall zone, an interface, a single IPv4/IPv6 address or network, or a domain.
 - Protocol. This can be **any**, **tcp**, **udp** or **icmp**.
 - Source port. This is only used if the protocol is set to **tcp** or **udp**.
 - Destination port. This is only used if protocol is set to **tcp** or **udp**.
- The network interface used to reach the destination.

Additional configuration items

- A label for the routing policy.
- Whether packets that match this policy should be dropped when the gateway interface is disconnected, rather than forwarded through other interfaces.


To configure a routing policy:

≡ WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

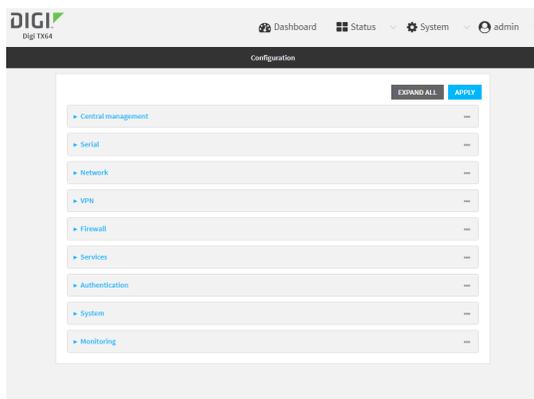

3. Click **Network > Routes > Policy-based routing**.

4. Click the **+** to add a new route policy.



The new route policy page is displayed:

New route policies are enabled by default. To disable, click to toggle **Enable** to off.

5. (Optional) For **Label**, type a label that will be used to identify this route policy.
6. For **Interface**, select the interface on the TX64 device that will be used with this route policy.
7. (Optional) Enable **Exclusive** to configure the policy to drop packets that match the policy when the gateway interface is disconnected, rather than forwarded through other interfaces.
8. For **IP version**, select **Any**, **IPv4**, or **IPv6**.
9. For **Protocol**, select **Any**, **TCP**, **UDP**, or **ICMP**.
 - If **TCP** or **UDP** is selected for **Protocol**, type the port numbers of the **Source port** and **Destination port**, or set to **any** to match for any port.
 - If **ICMP** is selected for **Protocol**, type the ICMP type and optional code, or set to **any** to match for any ICMP type.
10. Configure source address information:
 - a. Click to expand **Source address**.
 - b. For **Type**, select one of the following:
 - **Zone**: Matches the source IP address to the selected firewall zone. See [Firewall configuration](#) for more information about firewall zones.
 - **Interface**: Matches the source IP address to the selected interface's network address.
 - **IPv4 address**: Matches the source IP address to the specified IP address or network. Use the format **IPv4_address[/netmask]**, or use **any** to match any IPv4 address.
 - **IPv6 address**: Matches the source IP address to the specified IP address or network. Use the format **IPv6_address[/prefix_length]**, or use **any** to match any IPv6 address.
 - **MAC address**: Matches the source MAC address to the specified MAC address.
11. Configure the destination address information:
 - a. Click to expand **Destination address**.
 - b. For **Type**, select one of the following:
 - **Zone**: Matches the destination IP address to the selected firewall zone. See [Firewall configuration](#) for more information about firewall zones.
 - **Interface**: Matches the destination IP address to the selected interface's network address.

- **IPv4 address:** Matches the destination IP address to the specified IP address or network. Use the format *IPv4_address/[netmask]*, or use **any** to match any IPv4 address.
 - **IPv6 address:** Matches the destination IP address to the specified IP address or network. Use the format *IPv6_address/[prefix_length]*, or use **any** to match any IPv6 address.
 - **Domain:** Matches the destination IP address to the specified domain names. To specify domains:
 - i. Click to expand **Domains**.
 - ii. Click the **+** to add a domain.
 - iii. For **Domain**, type the domain name.
 - iv. Repeat to add additional domains.
12. Click **Apply** to save the configuration and apply the change.
- The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a new routing policy:

```
(config)> add network route policy end
(config network route policy 0)>
```

New route policies are enabled by default. To disable:

```
(config network route policy 0)> enable false
(config network route policy 0)>
```

4. (Optional) Set the label that will be used to identify this route policy:

```
(config network route policy 0)> label "New route policy"
(config network route policy 0)>
```

5. Set the interface on the TX64 device that will be used with this route policy:
 - a. Use the **?** to determine available interfaces:

```
(config network route policy 0)> interface ?
```

Interface: The network interface used to reach the destination. Packets that satisfy the matching criteria will be routed through this interface. If the interface has a gateway then it will be used as the next hop.

Format:

```
/network/interface/defaultip
/network/interface/defaultlinklocal
/network/interface/lan1
/network/interface/lan_hotspot
/network/interface/loopback
/network/interface/wan1
/network/interface/wwan1
/network/interface/wwan2
```

Current value:

```
(config network route policy 0)> interface
```

- b. Set the interface. For example:

```
(config network route policy 0)> interface /network/interface/wan1
(config network route policy 0)>
```

6. (Optional) Enable **exclusive** to configure the policy to drop packets that match the policy when the gateway interface is disconnected, rather than forwarded through other interfaces:

```
(config network route policy 0)> exclusive true
(config network route policy 0)>
```

7. Select the IP version:

```
(config network route policy 0)> ip_version value
(config network route policy 0)>
```

where *value* is one of **any**, **ipv4**, or **ipv6**.

8. Set the protocol:

```
(config network route policy 0)> protocol value
(config network route policy 0)>
```

where *value* is one of:

- **any**: All protocols are matched.
- **tcp**: Source and destination ports are matched:
 - a. Set the source port:

```
(config network route policy 0)> src_port value
(config network route policy 0)>
```

where *value* is the port number, or the keyword **any** to match any port as the source port.

- b. Set the destination port:

```
(config network route policy 0)> dst_port value
(config network route policy 0)>
```

where *value* is the port number, or the keyword **any** to match any port as the destination port.

- **upd**: Source and destination ports are matched:

- a. Set the source port:

```
(config network route policy 0)> src_port value
(config network route policy 0)>
```

where *value* is the port number, or the keyword **any** to match any port as the source port.

- b. Set the destination port:

```
(config network route policy 0)> dst_port value
(config network route policy 0)>
```

where *value* is the port number, or the keyword **any** to match any port as the destination port.

- **icmp**: The ICMP protocol is matched. Identify the ICMP type:

```
(config network route policy 0)> icmp_type value
(config network route policy 0)>
```

where *value* is the ICMP type and optional code, or set to **any** to match for any ICMP type.

9. Set the source address type:

```
(config network route policy 0)> src type value
(config network route policy 0)>
```

where *value* is one of:

- **zone**: Matches the source IP address to the selected firewall zone. Set the zone:

- a. Use the **?** to determine available zones:

```
(config network route policy 0)> src zone ?
```

Zone: Match the IP address to the specified firewall zone.

Format:

```
any
dynamic_routes
edge
external
hotspot
internal
```

```

ipsec
loopback
setup

```

```

Default value: any
Current value: any

```

```

(config network route policy 0)> src zone

```

- b. Set the zone. For example:

```

(config network route policy 0)> src zone external
(config network route policy 0)>

```

See [Firewall configuration](#) for more information about firewall zones.

- **interface:** Matches the source IP address to the selected interface's network address.

Set the interface:

- a. Use the **?** to determine available interfaces:

```

(config network route policy 0)> src interface ?

```

Interface: The network interface.

Format:

```

/network/interface/defaultip
/network/interface/defaultlinklocal
/network/interface/lan1
/network/interface/lan_hotspot
/network/interface/loopback
/network/interface/wan1
/network/interface/wwan1
/network/interface/wwan2

```

Current value:

```

(config network route policy 0)> src interface

```

- b. Set the interface. For example:

```

(config network route policy 0)> src interface
/network/interface/wan1
(config network route policy 0)>

```

- **address:** Matches the source IPv4 address to the specified IP address or network. Set the address that will be matched:

```

(config network route policy 0)> src address value
(config network route policy 0)>

```

where value uses the format **IPv4_address[/netmask]**, or **any** to match any IPv4 address.

- **address6:** Matches the source IPv6 address to the specified IP address or network. Set the address that will be matched:

```
(config network route policy 0)> src address6 value
(config network route policy 0)>
```

where *value* uses the format *IPv6_address[/prefix_length]*, or **any** to match any IPv6 address.

- **mac**: Matches the source MAC address to the specified MAC address. Set the MAC address to be matched:

```
(config network route policy 0)> src mac MAC_address
(config network route policy 0)>
```

10. Set the destination address type:

```
(config network route policy 0)> dst type value
(config network route policy 0)>
```

where *value* is one of:

- **zone**: Matches the destination IP address to the selected firewall zone. Set the zone:
 - a. Use the **?** to determine available zones:

```
(config network route policy 0)> dst zone ?
```

Zone: Match the IP address to the specified firewall zone.

Format:

```
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

Default value: any

Current value: any

```
(config network route policy 0)> dst zone
```

- b. Set the zone. For example:

```
(config network route policy 0)> dst zone external
(config network route policy 0)>
```

See [Firewall configuration](#) for more information about firewall zones.

- **interface**: Matches the destination IP address to the selected interface's network address. Set the interface:

- a. Use the **?** to determine available interfaces:

```
(config network route policy 0)> dst interface ?
```

Interface: The network interface.

Format:

```
/network/interface/defaultip
/network/interface/defaultlinklocal
/network/interface/lan1
/network/interface/lan_hotspot
/network/interface/loopback
/network/interface/wan1
/network/interface/wwan1
/network/interface/wwan2
```

Current value:

```
(config network route policy 0)> dst interface
```

- b. Set the interface. For example:

```
(config network route policy 0)> dst interface
/network/interface/wan1
(config network route policy 0)>
```

- **address:** Matches the destination IPv4 address to the specified IP address or network. Set the address that will be matched:

```
(config network route policy 0)> dst address value
(config network route policy 0)>
```

where value uses the format **IPv4_address[/netmask]**, or **any** to match any IPv4 address.

- **address6:** Matches the destination IPv6 address to the specified IP address or network. Set the address that will be matched:

```
(config network route policy 0)> dst address6 value
(config network route policy 0)>
```

where value uses the format **IPv6_address[/prefix_length]**, or **any** to match any IPv6 address.

- **mac:** Matches the destination MAC address to the specified MAC address. Set the MAC address to be matched:

```
(config network route policy 0)> dst mac MAC_address
(config network route policy 0)>
```

11. Save the configuration and apply the change:


```
(config)> save
Configuration saved.
>
```

12. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example: Dual WAN policy-based routing

This example routes traffic to a specific IP address to go through the cellular WWAN interface, while all other traffic uses the Ethernet WAN interface.

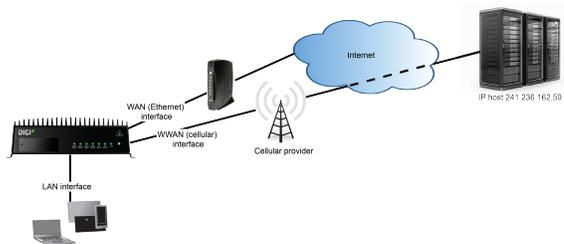


WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

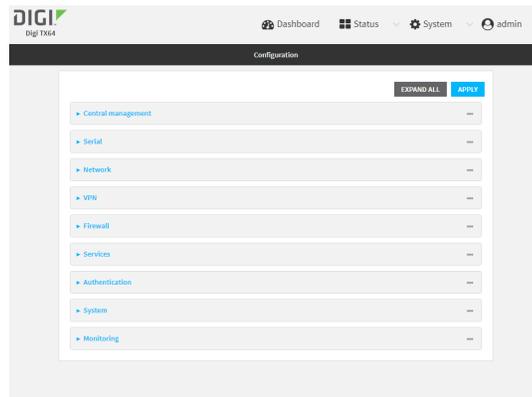


3. Click **Network > Routes > Policy-based routing**.
4. Click the **+** to add a new route policy.



5. For **Label**, enter **Route through cellular**.
6. For **Interface**, select **WWAN1**.

7. Configure the source address:
 - a. Click to expand **Source address**.
 - b. For **Type**, select **Zone**.
 - c. For **Zone**, select **Internal**.
8. Configure the destination address:
 - a. Click to expand **Destination address**.
 - b. For **Type**, select **IPv4 address**.
 - c. For **IPv4 address**, type the IP address that will be the destination for outgoing traffic routed through the WWAN interface. In the above example, this is 241.236.162.59.

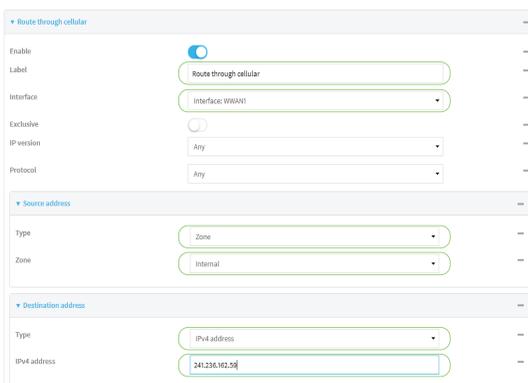

9. Click **Apply** to save the configuration and apply the change.
 The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
 Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Create the route policy:
 - a. Add a new routing policy:

```
(config)> add network route policy end
(config network route policy 0)>
```

- b. Set the label that will be used to identify this route policy:

```
(config network route policy 0)> label "Route through cellular"  
(config network route policy 0)>
```

- c. Set the interface:

```
(config network route policy 0)> interface /network/interface/wwan1  
(config network route policy 0)>
```

- d. Configure the source address:

- i. Set the source type to **zone**:

```
(config network route policy 0)> src type zone  
(config network route policy 0)>
```

- ii. Set the zone to **internal**:

```
(config network route policy 0)> src zone internal  
(config network route policy 0)>
```

- e. Configure the destination address:

- i. Set the destination to use an IPv4 address:

```
(config network route policy 0)> dst type address  
(config network route policy 0)>
```

- ii. Set the IP address that will be the destination for outgoing traffic routed through the WWAN interface. In the above example, this is 241.236.162.59.

```
(config network route policy 0)> dst address 241.236.162.59  
(config network route policy 0)>
```

4. Save the configuration and apply the change:

```
(config)> save  
Configuration saved.  
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example: Route traffic to a specific WAN interface based on the client MAC address

This example routes all data from a certain client device through a cellular WAN based on the device's MAC address, while all other client devices are routed through the Ethernet WAN.




WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

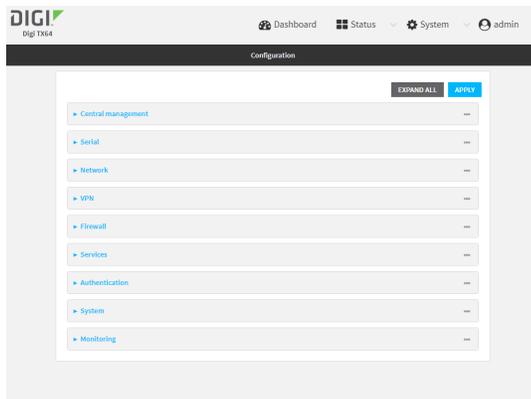

3. Create new firewall zones:
 - a. Create a firewall zone named CellularWAN with Source NAT enabled:
 - i. Click **Firewall > Zones**.
 - ii. For **Add Zone**, type **CellularWAN** and click **+**.



- iii. Enable Source **NAT**.

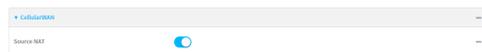


- b. Create second firewall zone named EthernetWAN with Source NAT enabled:
 - i. For **Add Zone**, type **EthernetWAN** and click **+**.
 - ii. Enable Source **NAT**.
- 4. Configure the WAN interfaces to use the new zones:
 - a. Configure the cellular WAN interface:
 - i. Click **Network > Interfaces > WWAN1**.
 - ii. For **Zone**, select **CellularWAN**.



- b. Configure the Ethernet WAN interface:
 - i. Click **Network > Interfaces > WAN1**.
 - ii. For **Zone**, select **EthernetWAN**.
- 5. Configure the policy-based route for traffic from the client device that will be sent over the cellular WAN:
 - a. Click **Network > Routes > Policy-based routing**.
 - b. Click the **+** to add a new route policy.




- c. For **Label**, type **VoIP phone**.
- d. For **Interface**, select **WWAN1**.
- e. Configure the source as the MAC address of the VoIP phone:
 - i. Click to expand **Source address**.
 - ii. For **Type**, select **MAC address**.
 - iii. For **MAC address**, type **26:88:0E:23:50:C2**.
- f. Configure the destination zone:
 - i. Click to expand **Destination address**.
 - ii. For **Type**, select **Zone**.
 - iii. For **Zone**, select **CellularWAN**.

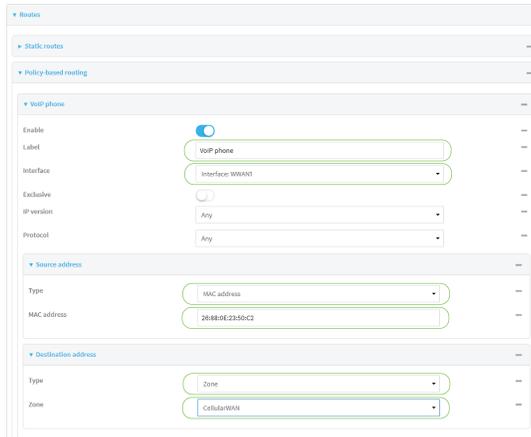

6. Create a packet filtering rule that rejects all other LAN packets on the cellular WAN interface.
 - a. Click **Firewall > Packet filtering**.
 - b. Click the **+** to add a new packet filtering rule.



- c. For **Label**, type **Reject LAN traffic to cellular WAN**.
 - d. For **Action**, select **Drop**.
 - e. For **Source zone**, select **Internal**.
 - f. For **Destination zone**, select **CellularWAN**.

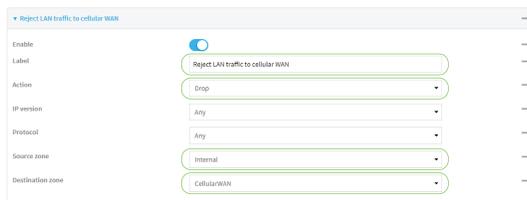

7. Click **Apply** to save the configuration and apply the change.
 The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Create new firewall zones:

- a. Create a firewall zone named CellularWAN with Source NAT enabled:

- i. Create the firewall zone:

```
(config)> add firewall zone CellularWAN
(config firewall zone CellularWAN)>
```

- ii. Enable Source NAT on the new zone:

```
(config firewall zone CellularWAN)> src_nat true
(config firewall zone CellularWAN)>
```

- b. Create second firewall zone named EthernetWAN with Source NAT enabled:

- i. Type **..** to move back one node in the configuration:

```
(config firewall zone CellularWAN)> ..
(config firewall zone)>
```

- ii. Create the firewall zone:

```
(config firewall zone)> add EthernetWAN
(config firewall zone EthernetWAN)>
```

- ii. Enable Source NAT on the new zone:

```
(config firewall zone EthernetWAN)> src_nat true
(config firewall zone EthernetWAN)>
```

4. Configure the WAN interfaces to use the new zones:

- a. Set the zone for the cellular WAN interface:

- i. Type **...** to move to the root of the configuration:

```
(config firewall zone EthernetWAN)> ...
(config)>
```

- ii. Set the zone:

```
(config)> network interface wwan1 zone CellularWAN
(config)>
```

- b. Set the zone for the Ethernet WAN interface:

```
(config)> network interface wan1 zone EthernetWAN
(config)>
```

5. Configure the policy-based route for traffic from the client device that will be sent over the cellular WAN:

- a. Add a new routing policy:

```
(config)> add network route policy end  
(config network route policy 0)>
```

- b. Set the label that will be used to identify this route policy:

```
(config network route policy 0)> label "VoIP phone"  
(config network route policy 0)>
```

- c. Set the interface:

```
(config network route policy 0)> interface /network/interface/wwan1  
(config network route policy 0)>
```

- d. Configure the source as the MAC address of the VoIP phone:

- i. Set the source type to **mac**:

```
(config network route policy 0)> src type mac  
(config network route policy 0)>
```

- ii. Set the MAC address to the MAC address of the VoIP phone:

```
(config network route policy 0)> src mac 26:88:0E:23:50:C2  
(config network route policy 0)>
```

- e. Configure the destination zone:

- i. Set the source destination to **zone**:

```
(config network route policy 0)> dst type zone  
(config network route policy 0)>
```

- ii. Set the zone to **CellularWAN**:

```
(config network route policy 0)> dst zone CellularWAN  
(config network route policy 0)>
```

6. Create a packet filtering rule that rejects all other LAN packets on the cellular WAN interface:

- a. Create a new packet filtering rule:

- i. Type ... to move to the root of the configuration:

```
(config network route policy 0)> ...  
(config)>
```

- ii. Create the packet filtering rule:

```
(config)> add firewall filter end  
(config firewall filter 2)>
```

- b. Set the label to **Reject LAN traffic to cellular WAN**:

```
(config firewall filter 2)> label "Reject LAN traffic to cellular WAN"
(config firewall filter 2)>
```

- c. Set the action to **drop**:

```
(config firewall filter 2)> action drop
(config firewall filter 2)>
```

- d. Set the source zone to **internal**:

```
(config firewall filter 2)> src_zone internal
(config firewall filter 2)>
```

- e. Set the destination zone to **CellularWAN**:

```
(config firewall filter 2)> dst_zone CellularWAN
(config firewall filter 2)>
```

7. Save the configuration and apply the change:

```
(config firewall filter 2)> save
Configuration saved.
>
```

8. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Routing services

Your TX64 includes support for dynamic routing services and protocols. The following routing services are supported:

Service or protocol	Information
RIP	The IPv4 Routing Information Protocol (RIP) service supports RIPv2 (RFC2453) and RIPv1 (RFC1058).
RIPng	The IPv6 Routing Information Protocol (RIP) service supports RIPng (RFC2080).
OSPFv2	The IPv4 Open Shortest Path First (OSPF) service supports OSPFv2 (RFC2328).
OSPFv3	The IPv6 Open Shortest Path First (OSPF) service supports OSPFv3 (RFC2740).
BGP	The Border Gateway Protocol (BGP) service supports BGP-4 (RFC1771).
Babel	The IPv4 and IPv6 Babel service.
IS-IS	The IPv4 and IPv6 Intermediate System to Intermediate System (IS-IS) service.

Configure routing services

Required configuration items


- Enable routing services.
- Enable and configure the types of routing services that will be used.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

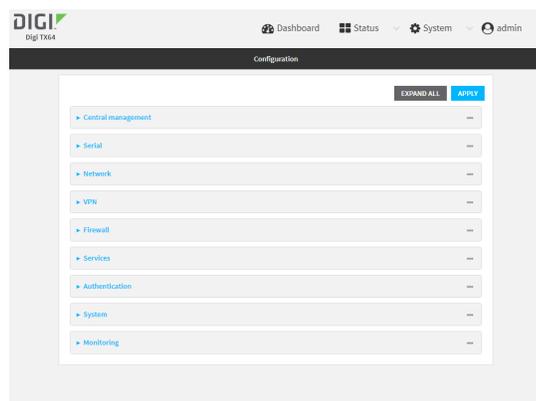

3. Click **Network > Routes > Routing services**.
4. Click **Enable**.



The default firewall zone setting, **Dynamic routes**, is specifically designed to work with routing services and should be left as the default.

5. Configure the routing services that will be used:
 - a. Click to expand a routing service.
 - b. **Enable** the routing service.
 - c. Complete the configuration of the routing service.

- Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Enable routing services:

```
(config)> network route service enable true
(config)>
```

- Configure routing services that will be used:
 - Use the **?** to display available routing services:

```
(config)> network route service ?
```

Routing services: Settings for dynamic routing services and protocols.

Parameters	Current Value
enable	true Enable
zone	dynamic_routes Zone

Additional Configuration

babel	Babel
bgp	BGP
isis	IS-IS
ospfv2	OSPFv2
ospfv3	OSPFv3
rip	RIP
ripng	RIPng

```
(config)>
```

- b. Enable a routing service that will be used. For example, to enable the RIP service:

```
(config)> network route service rip enable true
(config)>
```

- c. Complete the configuration of the routing service. For example, use the ? to view the available parameters for the RIP service:

```
(config)> network route service rip ?

Parameters                Current Value
-----
ecmp                       false        Allow ECMP
enable                     true         Enable

Additional Configuration
-----
interface                  Interfaces
neighbour                  Neighbours
redis                      Route redistribution
timer                      Timers

(config)>
```

- 5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- 6. Type **exit** to exit the Admin CLI. Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show the routing table


To display the routing table:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

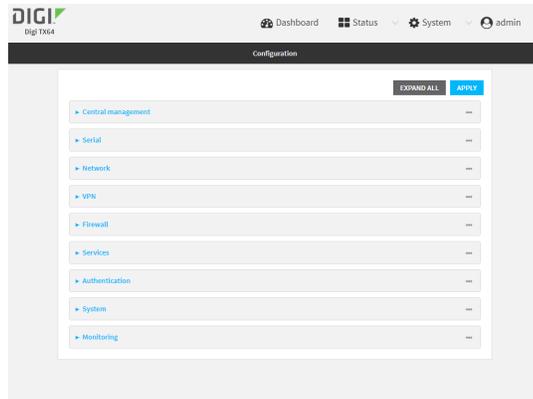

3. Click **Status > Routes**.
The **Network Routing** window is displayed.

Destination	Gateway	Source address	Metric	Type	Device
default	10.1.25.1		1	static	Ethernet: ETH1
10.1.14.25	10.1.25.1	10.1.25.99	1	static	Ethernet: ETH1
10.1.14.27	10.1.25.1	10.1.25.99	1	static	Ethernet: ETH1
10.1.25.0/24		10.1.25.99	1	static	Ethernet: ETH1
127.0.0.0/8		127.0.0.1	0	static	Loopback: Loopback
1600:2704::1	fe80::204:ef8:f4b2:a231		1	static	Ethernet: ETH1
1600:2704::1:84			1	static	Ethernet: ETH1
1600:2704::1:84		214:7493:647		static	Loopback: Loopback
fe80::204:ef8:f4b2:a231	fe80::204:ef8:f4b2:a231		1	static	Ethernet: ETH1
fe80::204:ef8:f4b2:a231	fe80::204:ef8:f4b2:a231		1	static	Ethernet: ETH1
fe80::1:84		236		local	Ethernet: ETH1
fe80::1:84		236		local	Bridge: LAN1
default	fe80::204:ef8:f4b2:a231		1	static	Ethernet: ETH1
default		1024		ra	Loopback: Loopback

4. Click **IPv4 Load Balance** to view IPv4 load balancing.
5. Click **IPv6 Load Balance** to view IPv6 load balancing.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the Admin CLI prompt, type **show route**:

```
> show route
```

Destination Interface	Gateway	Source	Metric
default	10.1.21.1		1
10.1.14.25 /network/device/eth1	10.1.21.1	10.1.21.99	1
10.1.14.27 /network/device/eth1	10.1.21.1	10.1.21.99	1
10.1.25.0/24 /network/device/eth1		10.1.21.99	1

127.0.0.0/8		127.0.0.1	
/network/device/loopback			
fd00:2704::1	fe80::204:f3ff:fe80:e231		1
fd00:2704::/64			1
fd00:2704::/48			
2147483647			
fe80::204:f3ff:fe80:e231	fe80::204:f3ff:fe80:e231		1
fe80::204:f3ff:ff80:c525	fe80::204:f3ff:fe80:e231		1
fe80::/64			256
fe80::/64			256
default	fe80::204:f3ff:fe80:e231		1
default			1024

IPv4 Route Load Balance (%)
 ----- -----

wan1 75.0
 wwan1 25.0

IPv6 Route Load Balance (%)
 ----- -----

wan1 75.0
 wwan1 25.0

>

You can limit the display to only IPv4 entries by using **show route ipv4**, or to IPv6 entries by using **show route ipv6**. You can also display more information by adding the **verbose** option to the **show route** and **show route ip_type** commands.

3. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Dynamic DNS

The Domain Name System (DNS) uses name servers to provide a mapping between computer-readable IP addresses and human-readable hostnames. This allows users to access websites and personal networks with easy-to-remember URLs. Unfortunately, IP addresses change frequently, invalidating these mappings when they do. Dynamic DNS has become the standard method of addressing this problem, allowing devices to update name servers with their new IP addresses.

By providing the TX64 device with the domain name and credentials obtained from a dynamic DNS provider, the router can automatically update the remote nameserver whenever your WAN or public IP address changes.

Your TX64 device supports a number of Dynamic DNS providers as well as the ability to provide a custom provider that is not included on the list of providers.

Configure dynamic DNS

This section describes how to configure dynamic DNS on a TX64 device.

Required configuration items

- Add a new Dynamic DNS service.
- The interface that has its IP address registered with the Dynamic DNS provider.
- The name of a Dynamic DNS provider.
- The domain name that is linked to the interface's IP address.
- The username and password to authenticate with the Dynamic DNS provider.

Additional configuration items


- If the Dynamic DNS service provider is set to **custom**, identify the URL that should be used to update the IP address with the Dynamic DNS provider.
- The amount of time to wait to check if the interface's IP address needs to be updated.
- The amount of time to wait to force an update of the interface's IP address.
- The amount of time to wait for an IP address update to succeed before retrying the update.
- The number of times to retry a failed IP address update.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

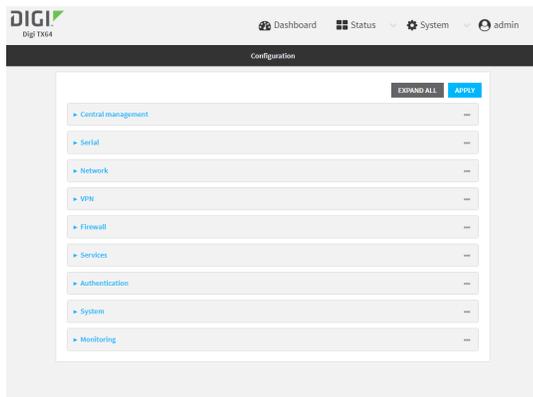


3. Click **Network > Dynamic DNS**.

4. Type a name for this Dynamic DNS instance in **Add Service** and click **+**.



The Dynamic DNS configuration page displays.

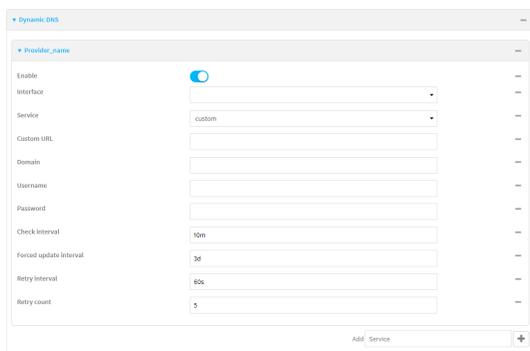

New Dynamic DNS configurations are enabled by default. To disable, click to toggle **Enable** to off.

5. For **Interface**, select the interface that has its IP address registered with the Dynamic DNS provider.
6. For **Service**, select the Dynamic DNS provider, or select **custom** to enter a custom URL for the Dynamic DNS provider.
7. If **custom** is selected for **Service**, type the **Custom URL** that should be used to update the IP address with the Dynamic DNS provider.
8. Type the **Domain** name that is linked to the interface's IP address.
9. Type the **Username** and **Password** used to authenticate with the Dynamic DNS provider.
10. (Optional) For **Check Interval**, type the amount of time to wait to check if the interface's IP address needs to be updated.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.

For example, to set **Check interval** to ten minutes, enter **10m** or **600s**.

11. (Optional) For **Forced update interval**, type the amount of time to wait to force an update of the interface's IP address.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.

For example, to set **Forced update interval** to ten minutes, enter **10m** or **600s**.

The setting for **Forced update interval** must be larger than the setting for **Check Interval**.

12. (Optional) For **Retry interval**, type the amount of time to wait for an IP address update to succeed before retrying the update.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.

For example, to set **Retry interval** to ten minutes, enter **10m** or **600s**.

13. (Optional) For **Retry count**, type the number of times to retry a failed IP address update.
14. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a new Dynamic DNS instance. For example, to add an instance named **new_ddns_instance**:

```
(config)> add network ddns new_ddns_instance
(config network ddns new_ddns_instance)>
```

New Dynamic DNS instances are enabled by default. To disable:

```
(config network ddns new_ddns_instance)> enable false
(config network ddns new_ddns_instance)>
```

4. Set the interface for the Dynamic DNS instance:
 - a. Use the **?** to determine available interfaces:

```
(config network ddns new_ddns_instance)> interface ?
```

Interface: The network interface from which to obtain the IP address to register with the dynamic DNS service.

Format:

```
defaultip
defaultlinklocal
lan1
lan_hotspot
loopback
wan1
wwan1
```

```

    wwan2
Current value:

(config network ddns new_ddns_instance)> interface

```

- b. Set the interface. For example:

```

(config network ddns new_ddns_instance)> interface wan1
(config network ddns new_ddns_instance)>

```

5. Set the Dynamic DNS provider service:

- a. Use the **?** to determine available services:

```

(config network ddns new_ddns_instance)> service ?

Service: The provider of the dynamic DNS service.
Format:
  custom
  3322.org
  changeip.com
  ddns.com.br
  dnsdynamic.org
  ...

Default value: custom
Current value: custom

```

```

(config network ddns new_ddns_instance)> service

```

- b. Set the service:

```

(config network ddns new_ddns_instance)> service service_name
(config network ddns new_ddns_instance)>

```

6. If **custom** is configured for **service**, set the custom URL that should be used to update the IP address with the Dynamic DNS provider:

```

(config network ddns new_ddns_instance)> custom url
(config network ddns new_ddns_instance)>

```

7. Set the domain name that is linked to the interface's IP address:

```

(config network ddns new_ddns_instance)> domain domain_name
(config network ddns new_ddns_instance)>

```

8. Set the username to authenticate with the Dynamic DNS provider:

```

(config network ddns new_ddns_instance)> username name
(config network ddns new_ddns_instance)>

```

9. Set the password to authenticate with the Dynamic DNS provider:

```
(config network ddns new_ddns_instance)> password pwd
(config network ddns new_ddns_instance)>
```

10. (Optional) Set the amount of time to wait to check if the interface's IP address needs to be updated:

```
(config network ddns new_ddns_instance)> check_interval value
(config network ddns new_ddns_instance)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **check_interval** to ten minutes, enter either **10m** or **600s**:

```
(config network ddns new_ddns_instance)> check_interval 600s
(config network ddns new_ddns_instance)>
```

The default is **10m**.

11. (Optional) Set the amount of time to wait to force an update of the interface's IP address:

```
(config network ddns new_ddns_instance)> force_interval value
(config network ddns new_ddns_instance)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **force_interval** to ten minutes, enter either **10m** or **600s**:

```
(config network ddns new_ddns_instance)> force_interval 600s
(config network ddns new_ddns_instance)>
```

The default is **3d**.

12. (Optional) Set the amount of time to wait for an IP address update to succeed before retrying the update:

```
(config network ddns new_ddns_instance)> retry_interval value
(config network ddns new_ddns_instance)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **retry_interval** to ten minutes, enter either **10m** or **600s**:

```
(config network ddns new_ddns_instance)> retry_interval 600s
(config network ddns new_ddns_instance)>
```

The default is **60s**.

13. (Optional) Set the number of times to retry a failed IP address update:

```
(config network ddns new_ddns_instance)> retry_count value
(config network ddns new_ddns_instance)>
```

where *value* is any interger. The default is **5**.

- Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Virtual Router Redundancy Protocol (VRRP)

Virtual Router Redundancy Protocol (VRRP) is a standard for gateway device redundancy and failover that creates a "virtual router" with a floating IP address. Devices connected to the LAN then use this virtual router as their default gateway. Responsibility for the virtual router is assigned to one of the VRRP-enabled devices on a LAN (the "master router"), and this responsibility transparently fails over to backup VRRP devices if the master router fails. This prevents the default gateway from being a single point of failure, without requiring configuration of dynamic routing or router discovery protocols on every host.

Multiple TX64 devices can be configured as VRRP devices and assigned a priority. The router with the highest priority will be used as the master router. If the master router fails, then the IP address of the virtual router is mapped to the backup device with the next highest priority. Each VRRP router is configured with a unique LAN IP address, and the same shared VRRP address.

Configure VRRP

This section describes how to configure VRRP on a TX64 device.

Required configuration items


- Enable VRRP.
- The interface used by VRRP.
- The Router ID that identifies the virtual router instance. The Router ID must be the same on all VRRP devices that participate in the same VRRP device pool.
- The VRRP priority of this device.
- The shared virtual IP address for the VRRP virtual router that devices connected to the LAN will use as their default gateway.

WebUI

- Log into the TX64 WebUI as a user with full Admin access rights.
- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

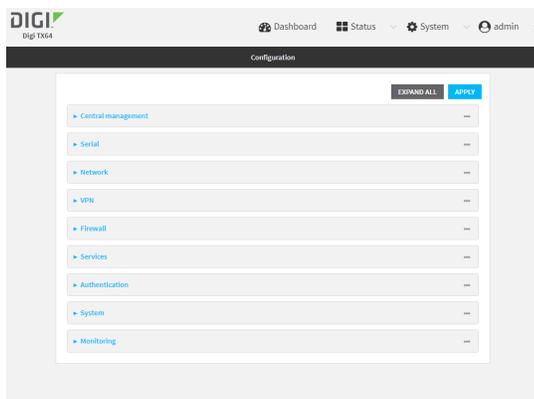

3. Click **Network > VRRP**.
4. For **Add VRRP instance**, type a name for the VRRP instance and click **+**.



The new VRRP instance configuration is displayed.



5. Click **Enable**.
6. For **Interface**, select the interface on which this VRRP instance should run.
7. For **Router ID** field, type the ID of the virtual router instance. The Router ID must be the same on all VRRP devices that participate in the same VRRP device pool. Allowed values are from **1** and **255**, and it is configured to **50** by default.
8. For **Priority**, type the priority for this router in the group. The router with the highest priority will be used as the master router. If the master router fails, then the IP address of the virtual router is mapped to the backup device with the next highest priority. If this device's actual IP address is being used as the virtual IP address of the VRRP pool, then the priority of this device should be set to **255** . Allowed values are from **1** and **255**, and it is configured to **100** by default.

9. (Optional) For **Password**, type a password that will be used to authenticate this VRRP router with VRRP peers. If the password length exceeds 8 characters, it will be truncated to 8 characters.
10. Configure the virtual IP addresses associated with this VRRP instance:
 - a. Click to expand **Virtual IP addresses**.
 - b. Click **+** to add a virtual IP address.



- c. For **Virtual IP**, type the IPv4 or IPv6 address for a virtual IP of this VRRP instance.
 - d. (Optional) Repeat to add additional virtual IPs.
11. Click **Apply** to save the configuration and apply the change.
 The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
 Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a VRRP instance. For example:

```
(config)> add network vrrp new_vrrp_instance
(config network vrrp new_vrrp_instance)>
```

4. Enable the VRRP instance:

```
(config network vrrp new_vrrp_instance)> enable true
(config network vrrp new_vrrp_instance)>
```

5. Set the interface on which this VRRP instance should run:

- a. Use the **?** to determine available interfaces:

```
(config network vrrp new_vrrp_instance)> interface ?
```

Interface: The network interface to communicate with VRRP peers on and listen for traffic to virtual IP addresses.

Format:

```
/network/interface/defaultip
/network/interface/defaultlinklocal
/network/interface/lan1
/network/interface/lan_hotspot
/network/interface/loopback
/network/interface/wan1
/network/interface/wwan1
/network/interface/wwan2
```

Current value:

```
(config network vrrp new_vrrp_instance)> interface
```

- b. Set the interface. For example:

```
(config network vrrp new_vrrp_instance)> interface
/network/interface/wan1
(config network vrrp new_vrrp_instance)>
```

6. Set the router ID. The Router ID must be the same on all VRRP devices that participate in the same VRRP device pool. Allowed values are from **1** and **255**, and it is configured to **50** by default.

```
(config network vrrp new_vrrp_instance)> router_id int
(config network vrrp new_vrrp_instance)>
```

7. Set the priority for this router in the group. The router with the highest priority will be used as the master router. If the master router fails, then the IP address of the virtual router is mapped to the backup device with the next highest priority. If this device's actual IP address is being used as the virtual IP address of the VRRP pool, then the priority of this device should be set to **255**. Allowed values are from **1** and **255**, and it is configured to **100** by default.

```
(config network vrrp new_vrrp_instance)> priority int
(config network vrrp new_vrrp_instance)>
```

8. (Optional) Set a password that will be used to authenticate this VRRP router with VRRP peers. If the password length exceeds 8 characters, it will be truncated to 8 characters.

```
(config network vrrp new_vrrp_instance)> password pwd
(config network vrrp new_vrrp_instance)>
```

9. Add a virtual IP address associated with this VRRP instance. This can be an IPv4 or IPv6 address.

```
(config network vrrp new_vrrp_instance)> add virtual_address end ip_address
(config network vrrp new_vrrp_instance)>
```

Additional virtual IP addresses can be added by repeating this step with different values for *ip_address*.

10. Save the configuration and apply the change:

```
(config network vrrp new_vrrp_instance)> save
Configuration saved.
>
```

11. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show VRRP status and statistics


This section describes how to display VRRP status and statistics for a TX64 device. VRRP status is available from the Web UI only.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

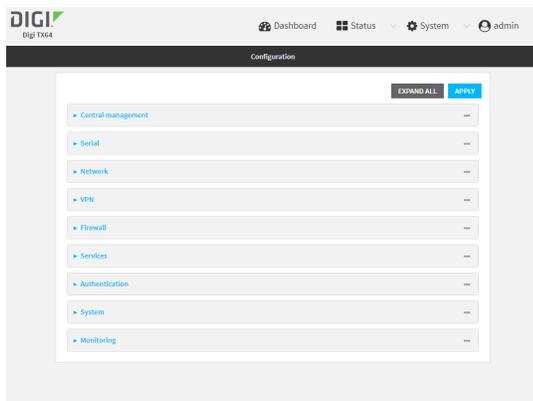

3. Click **Status > VRRP**.

The **Virtual Router Redundancy Protocol** window is displayed.

A screenshot of the Virtual Router Redundancy Protocol status window. It displays a table with the following data:

VRRP Instance	IPv4 State	Time In current IPv4 State	IPv6 State	Time In current IPv6 State
1	Master	0 minutes	N/A	0

Virtual Private Networks (VPN)

Virtual Private Networks (VPNs) are used to securely connect two private networks together so that devices can connect from one network to the other using secure channels.

This chapter contains the following topics:

IPsec	283
OpenVPN	325
Generic Routing Encapsulation (GRE)	357

IPsec

IPsec is a suite of protocols for creating a secure communication link—an IPsec tunnel—between a host and a remote IP network or between two IP networks across a public network such as the Internet.

IPsec data protection

IPsec protects the data being sent across a public network by providing the following:

Data origin authentication

Authentication of data to validate the origin of data when it is received.

Data integrity

Authentication of data to ensure it has not been modified during transmission.

Data confidentiality

Encryption of data sent across the IPsec tunnel to ensure that an unauthorized device cannot read the data.

Anti-Replay

Authentication of data to ensure an unauthorized device has not injected it into the IPsec tunnel.

IPsec modes

IPsec can run in two different modes: **Tunnel** and **Transport**.

Tunnel

The entire IP packet is encrypted and/or authenticated and then encapsulated as the payload in a new IP packet.

Transport

Only the payload of the IP packet is encrypted and/or authenticated. The IP header is left untouched. This mode has limitations when using an authentication header, because the IP addresses in the IP header cannot be translated (for example, with Network Address Translation (NAT), as it would invalidate the authentication hash value).

Internet Key Exchange (IKE) settings

IKE is a key management protocol that allows IPsec to negotiate the security associations (SAs) that are used to create the secure IPsec tunnel. Both IKEv1 and IKEv2 are supported.

SA negotiations are performed in two phases, known as **phase 1** and **phase 2**.

Phase 1

In phase 1, IKE creates a secure authenticated communication channel between the device and the peer (the remote device which is at the other end of the IPsec tunnel) using the configured pre-shared key and the Diffie-Hellman key exchange. This creates the IKE SAs that are used to encrypt further IKE communications.

For IKEv1, there are two modes for the phase 1 negotiation: **Main mode** and **Aggressive mode**. IKEv2 does not use these modes.

Main mode

Main mode is the default mode. It is slower than aggressive mode, but more secure, in that all sensitive information sent between the device and its peer is encrypted.

Aggressive mode

Aggressive mode is faster than main mode, but is not as secure as main mode, because the device and its peer exchange their IDs and hash information in clear text instead of being encrypted.

Aggressive mode is usually used when one or both of the devices have a dynamic external IP address.

Phase 2

In phase 2, IKE negotiates the SAs for IPsec. This creates two unidirectional SAs, one for each direction. Once the phase 2 negotiation is complete, the IPsec tunnel should be fully functional.

IPsec and IKE renegotiation

To reduce the chances of an IPsec tunnel being compromised, the IPsec SAs and IKE SA are renegotiated at a regular interval. This results in different encryption keys being used in the IPsec tunnel.

Authentication

Client authenticaton

XAUTH (extended authentication) pre-shared key authentication mode provides additional security by using client authentication credentials in addition to the standard pre-shared key. The TX64 device can be configured to authenticate with the remote peer as an XAUTH client.

RSA Signatures

With RSA signatures authentication, the TX64 device uses a private RSA key to authenticate with a remote peer that is using a corresponding public key.

Certificate-based Authentication

X.509 certificate-based authentication makes use of private keys on both the server and client which are secured and never shared. Both the server and client have a certificate which is generated with their respective private key and signed by a Certificate Authority (CA).

The TX64 implementation of IPsec can be configured to use X.509 certificate-based authentication using the private keys and certificates, along with a root CA certificate from the signing authority and, if available, a Certificate Revocation List (CRL).

Configure an IPsec tunnel

Configuring an IPsec tunnel with a remote device involves configuring the following items:

Required configuration items

■ **IPsec tunnel configuration items:**

- The mode: either tunnel or transport.
- Enable the IPsec tunnel.
 - The IPsec tunnel is enabled by default.
- The firewall zone of the IPsec tunnel.
- The authentication type and pre-shared key or other applicable keys and certificates.

If SCEP certificates will be selected as the Authentication type, create the SCEP client prior to configuring the IPsec tunnel. See [Configure a Simple Certificate Enrollment Protocol client](#) for instructions.

- The local endpoint type and ID values, and the remote endpoint host and ID values.
- **IKE configuration items**
 - The IKE version, either IKEv1 or IKEv2.
 - Whether to initiate a key exchange or wait for an incoming request.
 - The IKE mode, either main aggressive.
 - The IKE authentication protocol to use for the IPsec tunnel negotiation during phase 1 and phase 2.
 - The IKE encryption protocol to use for the IPsec tunnel negotiation during phase 1 and phase 2.
 - The IKE Diffie-Hellman group to use for the IPsec tunnel negotiation during phase 1 and phase 2.
- Enable dead peer detection and configure the delay and timeout.
- Destination networks that require source NAT.
- Active recovery configuration. See [Configure SureLink active recovery for IPsec](#) for information about IPsec active recovery.


Additional configuration items

The following additional configuration settings are not typically configured to get an IPsec tunnel working, but can be configured as needed:


- Determine whether the device should use UDP encapsulation even when it does not detect that NAT is being used.
- If using IPsec failover, identify the primary tunnel during configuration of the backup tunnel.
- The Network Address Translation (NAT) keep alive time.
- The protocol, either Encapsulating Security Payload (ESP) or Authentication Header (AH).
- The management priority for the IPsec tunnel interface. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.
- Enable XAUTH client authentication, and the username and password to be used to authenticate with the remote peer.
- Enable Mode-configuration (MODECFG) to receive configuration information, such as the private IP address, from the remote peer.
- Disable the padding of IKE packets. This should normally not be done except for compatibility purposes.
- Destination networks that require source NAT.
- **Tunnel and key renegotiating**
 - The lifetime of the IPsec tunnel before it is renegotiated.
 - The amount of time before the IKE phase 1 lifetime expires.
 - The amount of time before the IKE phase 2 lifetime expires
 - The lifetime margin, a randomizing amount of time before the IPsec tunnel is renegotiated.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

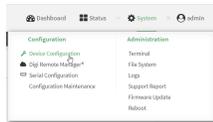

The **Configuration** window is displayed.

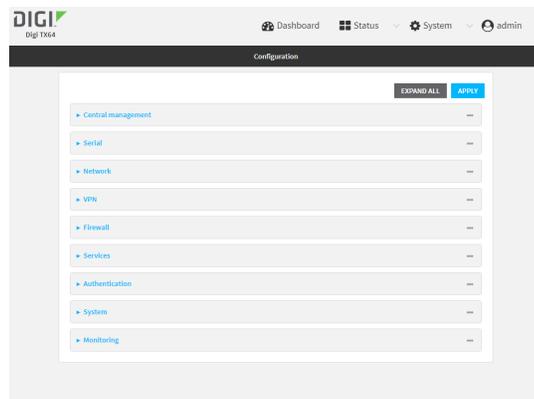

3. Click **VPN > IPsec**.
4. (Optional) Change the **NAT keep alive time**.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **NAT keep alive time** to ten minutes, enter **10m** or **600s**.
The default is 40 seconds.
5. Click to expand **Tunnels**.
6. For **Add IPsec tunnel**, type a name for the tunnel and click **+**.



The new IPsec tunnel configuration is displayed.

The screenshot shows the configuration page for a tunnel named 'test_IPsec_tunnel'. The settings are as follows:

- Enable:** A toggle switch is turned on (blue).
- Preferred tunnel:** A dropdown menu is currently empty.
- Force UDP encapsulation:** A toggle switch is turned off (grey).
- Zone:** A dropdown menu is set to 'IPsec'.
- Mode:** A dropdown menu is set to 'Tunnel mode'.
- Protocol:** A dropdown menu is set to 'ESP'.
- Authentication:** A section header with a right-pointing arrow.
- Management priority:** A text input field containing the number '0'.
- XAUTH client:** A section header with a right-pointing arrow.
- Enable MODECFG client:** A toggle switch is turned off (grey).
- Local endpoint:** A section header with a right-pointing arrow.
- Remote endpoint:** A section header with a right-pointing arrow.
- Policies:** A section header with a right-pointing arrow.
- IKE:** A section header with a right-pointing arrow.
- Dead peer detection:** A section header with a right-pointing arrow.
- NAT:** A section header with a right-pointing arrow.
- Active recovery:** A section header with a right-pointing arrow.

7. The IPsec tunnel is enabled by default. To disable, click **Enable**.
8. (Optional) The **Preferred tunnel** option allows you to configure IPsec failover behavior. When configuring a backup IPsec tunnel, for **Preferred tunnel**, select the primary IPsec tunnel. This instructs the backup tunnel to only start when the primary tunnel is determined to have failed. It will continue to operate until the preferred tunnel returns to full operational status.
When configuring the primary tunnel, and when configuring tunnels that will not fail over to a backup tunnel, leave this option blank.
9. (Optional) Enable **Force UDP encapsulation** to force the tunnel to use UDP encapsulation even when it does not detect that NAT is being used.
10. For **Zone**, select the firewall zone for the IPsec tunnel. Generally this should be left at the default of **IPsec**.
11. Select the **Mode**, either:
 - **Tunnel:** The entire IP packet is encrypted and/or authenticated and then encapsulated as the payload in a new IP packet.
 - **Transport:** Only the payload of the IP packet is encrypted and/or authenticated. The IP header is unencrypted.
12. Select the **Protocol**, either:
 - **ESP** (Encapsulating Security Payload): Provides encryption as well as authentication and integrity.
 - **AH** (Authentication Header): Provides authentication and integrity only.

13. Click to expand **Authentication**.



- a. For **Authentication type**, select one of the following:
 - **Pre-shared key:** Uses a pre-shared key (PSK) to authenticate with the remote peer.
 - i. Type the **Pre-shared key**.
 - **RSA signature:** Uses a private RSA key to authenticate with the remote peer.
 - i. For **Private key**, paste the device's private RSA key in PEM format.
 - ii. Type the **Private key passphrase** that is used to decrypt the private key. Leave blank if the private key is not encrypted.
 - iii. For **Peer public key**, paste the peer's public RSA key in PEM format.
 - **SCEP certificates:** Uses Simple Certificate Enrollment Protocol (SCEP) to download a private key, certificates, and an optional Certificate Revocation List (CRL) to the TX64 device from a SCEP server.
 You must create the SCEP client prior to configuring the IPsec tunnel. See [Configure a Simple Certificate Enrollment Protocol client](#) for instructions.
 - i. For **SCEP Client**, select the SCEP client.
 - **X.509 certificate:** Uses private key and X.509 certificates to authenticate with the remote peer.
 - i. For **Private key**, paste the device's private RSA key in PEM format.
 - ii. Type the **Private key passphrase** that is used to decrypt the private key. Leave blank if the private key is not encrypted.
 - iii. For **Certificate**, paste the local X.509 certificate in PEM format.
 - iv. For Peer verification, select either:
 - **Peer certificate:** For **Peer certificate**, paste the peer's X.509 certificate in PEM format.
 - **Certificate Authority:** For **Certificate Authority chain**, paste the Certificate Authority (CA) certificates. These must include all peer certificates in the chain up to the root CA certificate, in PEM format.
14. (Optional) For **Management Priority**, set the priority for this IPsec tunnel.
15. (Optional) To configure the device to connect to its remote peer as an XAUTH client:
- a. Click to expand **XAUTH client**.



- b. Click **Enable**.


- c. Type the **Username** and **Password** that the device will use to authenticate as an XAUTH client with the peer.
16. (Optional) Click **Enable MODECFG client** to receive configuration information, such as the private IP address, from the remote peer.
17. Click to expand **Local endpoint**.
 - a. For **Type**, select either:
 - **Default route**: Uses the same network interface as the default route.
 - **Interface**: Select the **Interface** to be used as the local endpoint.
 - b. Click to expand **ID**.
 - i. Select the ID type:
 - **Auto**: The ID will be automatically determined from the value of the tunnels endpoints.
 - **Raw**: Enter an ID and have it passed unmodified to the underlying IPsec stack. For **Raw ID value**, type the ID that will be passed.
 - **Any**: Any ID will be accepted.
 - **IPv4**: The ID will be interpreted as an IP address and sent as an ID_IPV4_ADDR IKE identity. For **IPv4 ID value**, type an IPv4 formatted ID. This can be a fully-qualified domain name or an IPv4 address.
 - **IPv6**: The ID will be interpreted as an IP address and sent as an ID_IPV6_ADDR IKE identity. For **IPv6 ID value**, type an IPv6 formatted ID. This can be a fully-qualified domain name or an IPv6 address.
 - **RFC822/Email**: The ID will be interpreted as an RFC822 (email address). For **RFC822 ID value**, type the ID in internet email address format.
 - **FQDN**: The ID will be interpreted as FQDN (Fully Qualified Domain Name) and sent as an ID_FQDN IKE identity. For **FQDN ID value**, type the ID as an FQDN.
 - **KeyID**: The ID will be interpreted as a Key ID and sent as an ID_KEY_ID IKE identity. For **KEYID ID value**, type the key ID.
18. Click to expand **Remote endpoint**.
 - a. For **Hostname**, select either a hostname or IP address. If your device is not configured to initiate the IPsec connection (see **IKE > Initiate connection**), you can also use the keyword **any**, which means that the hostname is dynamic or unknown.
 - b. Click to expand **ID**.
 - i. Select the ID type:
 - **Auto**: The ID will be automatically determined from the value of the tunnels endpoints.
 - **Raw**: Enter an ID and have it passed unmodified to the underlying IPsec stack. For **Raw ID value**, type the ID that will be passed.
 - **Any**: Any ID will be accepted.

- **IPv4:** The ID will be interpreted as an IPv4 address and sent as an ID_IPV4_ADDR IKE identity.
 For **IPv4 ID value**, type an IPv4 formatted ID. This can be a fully-qualified domain name or an IPv4 address.
- **IPv6:** The ID will be interpreted as an IPv6 address and sent as an ID_IPV6_ADDR IKE identity.
 For **IPv6 ID value**, type an IPv6 formatted ID. This can be a fully-qualified domain name or an IPv6 address.
- **RFC822/Email:** The ID will be interpreted as an RFC822 (email address).
 For **RFC822 ID value**, type the ID in internet email address format.
- **FQDN:** The ID will be interpreted as FQDN (Fully Qualified Domain Name) and sent as an ID_FQDN IKE identity.
 For **FQDN ID value**, type the ID as an FQDN.
- **KeyID:** The ID will be interpreted as a Key ID and sent as an ID_KEY_ID IKE identity.
 For **KEYID ID value**, type the key ID.

19. Click to expand **Policies**.


Policies define the network traffic that will be encapsulated by this tunnel.

a. Click **+** to create a new policy.

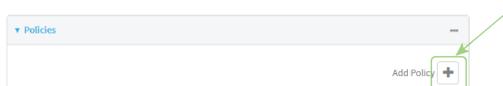

The new policy configuration is displayed.

b. Click to expand **Local network**.

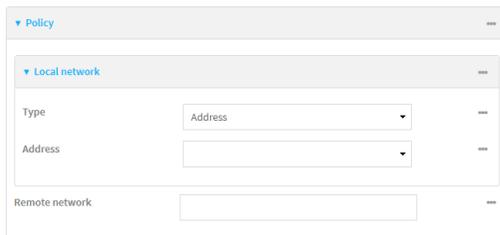

c. For **Type**, select one of the following:

- **Address:** The address of a local network interface.
 For **Address**, select the appropriate interface.
- **Network:** The subnet of a local network interface.
 For **Address**, select the appropriate interface.
- **Custom network:** A user-defined network.
 For **Custom network**, enter the IPv4 address and optional netmask. The keyword **any** can also be used.
- **Request a network:** Requests a network from the remote peer.

- d. For **Remote network**, enter the IP address and optional netmask of the remote network. The keyword **any** can also be used. .
20. Click to expand **IKE**.

The screenshot shows the configuration page for IKE. The 'IKE' section is expanded, revealing several settings:

- IKE version:** A dropdown menu set to 'IKEv1'.
- Initiate connection:** A toggle switch that is turned on.
- Mode:** A dropdown menu set to 'Main mode'.
- Enable padding:** A toggle switch that is turned on.
- Phase 1 lifetime:** A text input field containing '3h'.
- Phase 2 lifetime:** A text input field containing '1h'.
- Lifetime margin:** A text input field containing '9m'.

At the bottom of the configuration area, there are two expandable sections: 'Phase 1 Proposals' and 'Phase 2 Proposals', each with a right-pointing arrow.

- a. For **IKE version**, select either IKEv1 or IKEv2. This setting must match the peer's IKE version.
- b. **Initiate connection** instructs the device to initiate the key exchange, rather than waiting for an incoming request. This must be disabled if **Remote endpoint** > **Hostname** is set to **any**.
- c. For **Mode**, select either **Main mode** or **Aggressive mode**.
- d. For **Enable padding**, click to disable the padding of IKE packets. This should normally not be disabled except for compatibility purposes.
- e. For Phase 1 lifetime, enter the amount of time that the IKE security association expires after a successful negotiation and must be re-authenticated.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Phase 1 lifetime** to ten minutes, enter **10m** or **600s**.
- f. For Phase 2 lifetime, enter the amount of time that the IKE security association expires after a successful negotiation and must be rekeyed.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Phase 2 lifetime** to ten minutes, enter **10m** or **600s**.
- g. For Lifetime margin, enter a randomizing amount of time before the IPsec tunnel is renegotiated.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Lifetime margin** to ten minutes, enter **10m** or **600s**.
- h. Click to expand **Phase 1 Proposals**.
- Click **+** to create a new phase 1 proposal.
 - For **Cipher**, select the type of encryption.
 - For **Hash**, select the type of hash to use to verify communication integrity.

- iv. For **Diffie-Hellman group**, select the type of Diffie-Hellman group to use for key exchange.
 - v. You can add additional Phase 1 proposals by clicking **+** next to **Add Phase 1 Proposal**.
- i. Click to expand **Phase 2 Proposals**.
 - i. Click **+** to create a new phase 2 proposal.
 - ii. For **Cipher**, select the type of encryption.
 - iii. For **Hash**, select the type of hash to use to verify communication integrity.
 - iv. For **Diffie-Hellman group**, select the type of Diffie-Hellman group to use for key exchange.
 - v. You can add additional Phase 2 proposals by clicking **+** next to **Add Phase 2 Proposal**.
- 21. (Optional) Click to expand **Dead peer detection**. Dead peer detection is enabled by default. Dead peer detection uses periodic IKE transmissions to the remote endpoint to detect whether tunnel communications have failed, allowing the tunnel to be automatically restarted when failure occurs.
 - a. To enable or disable dead peer detection, click **Enable**.
 - b. For **Delay**, type the number of seconds between transmissions of dead peer packets. Dead peer packets are only sent when the tunnel is idle.
 - c. For **Timeout**, type the number of seconds to wait for a response from a dead peer packet before assuming the tunnel has failed.
- 22. (Optional) Click to expand **NAT** to create a list of destination networks that require source NAT.
 - a. Click **+** next to **Add NAT destination**.
 - b. For **Destination network**, type the IPv4 address and optional netmask of a destination network that requires source NAT. You can also use **any**, meaning that any destination network connected to the tunnel will use source NAT.
- 23. See [Configure SureLink active recovery for IPsec](#) for information about IPsec **Active recovery**.
- 24. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add an IPsec tunnel. For example, to add an IPsec tunnel named **ipsec_example**:

```
(config)> add vpn ipsec tunnel ipsec_example
(config vpn ipsec tunnel ipsec_example)>
```

The IPsec tunnel is enabled by default. To disable:

```
(config vpn ipsec tunnel ipsec_example)> enable false
(config vpn ipsec tunnel ipsec_example)>
```

4. (Optional) Configure the device to serve as a backup IPsec tunnel.

When configuring a backup IPsec tunnel the **ipsec_failover** parameter instructs the backup tunnel to only start when the primary tunnel is determined to have failed. It will continue to operate until the preferred tunnel returns to full operational status.

When configuring the primary tunnel, and when configuring tunnels that will not fail over to a backup tunnel, do not set this parameter.

- a. Use the **?** to view a list of available tunnels:

```
(config vpn ipsec tunnel ipsec_example)> ipsec_failover ?
```

```
Preferred tunnel: This tunnel will not start until the preferred tunnel
has failed. It will continue
to operate until the preferred tunnel returns to full operation status.
```

```
Format:
```

```
primary_ipsec_tunnel
```

```
Optional: yes
```

```
Current value:
```

```
(config vpn ipsec tunnel ipsec_example)> ipsec_failover
```

- b. Set the primary IPsec tunnel:

```
(config vpn ipsec tunnel ipsec_example)> ipsec_failover primary_ipsec_
tunnel
(config vpn ipsec tunnel ipsec_example)>
```

5. (Optional) Set the tunnel to use UDP encapsulation even when it does not detect that NAT is being used:

```
(config vpn ipsec tunnel ipsec_example)> force_udp_encap true
(config vpn ipsec tunnel ipsec_example)>
```

6. Set the firewall zone for the IPsec tunnel. Generally this should be left at the default of **ipsec**.

```
(config vpn ipsec tunnel ipsec_example)> zone zone
(config vpn ipsec tunnel ipsec_example)>
```

To view a list of available zones:

```
(config vpn ipsec tunnel ipsec_example)> zone ?
```

Zone: The firewall zone assigned to this IPsec tunnel. This can be used by packet filtering rules and access control lists to restrict network traffic on this tunnel.

Format:

```
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

Default value: ipsec

Current value: ipsec

```
(config vpn ipsec tunnel ipsec_example)>
```

7. Set the mode:

```
(config vpn ipsec tunnel ipsec_example)> mode mode
(config vpn ipsec tunnel ipsec_example)>
```

where *mode* is either:

- **tunnel**: The entire IP packet is encrypted and/or authenticated and then encapsulated as the payload in a new IP packet.
- **transport**: Only the payload of the IP packet is encrypted and/or authenticated. The IP header is unencrypted.

The default is **tunnel**.

8. Set the protocol:

```
(config vpn ipsec tunnel ipsec_example)> type protocol
(config vpn ipsec tunnel ipsec_example)>
```

where *protocol* is either:

- **esp** (Encapsulating Security Payload): Provides encryption as well as authentication and integrity.
- **ah** (Authentication Header): Provides authentication and integrity only.

The default is **esp**.

9. (Optional) Set the management priority for this IPsec tunnel:

```
(config vpn ipsec tunnel ipsec_example)> mgmt value
(config vpn ipsec tunnel ipsec_example)>
```

where *value* is any interger between **0** and **1000**.

10. Set the authentication type:

```
(config vpn ipsec tunnel ipsec_example)> auth type value
(config vpn ipsec tunnel ipsec_example)>
```

where *value* is one of:

- **secret:** Uses a pre-shared key (PSK) to authenticate with the remote peer.

- a. Set the pre-shared key:

```
(config vpn ipsec tunnel ipsec_example)> auth secret key
(config vpn ipsec tunnel ipsec_example)>
```

- **rsasig:** Uses a private RSA key to authenticate with the remote peer.

- a. For the **private_key** parameter, paste the device's private RSA key in PEM format:

```
(config vpn ipsec tunnel ipsec_example)> auth private_key key
(config vpn ipsec tunnel ipsec_example)>
```

- b. Set the private key passphrase that is used to decrypt the private key. Leave blank if the private key is not encrypted.

```
(config vpn ipsec tunnel ipsec_example)> auth private_key_
passphrase passphrase
(config vpn ipsec tunnel ipsec_example)>
```

- c. For the **peer_public_key** parameter, paste the peer's public RSA key in PEM format:

```
(config vpn ipsec tunnel ipsec_example)> auth peer_public_key key
(config vpn ipsec tunnel ipsec_example)>
```

- **x509:** Uses private key and X.509 certificates to authenticate with the remote peer.

- a. For the **private_key** parameter, paste the device's private RSA key in PEM format:

```
(config vpn ipsec tunnel ipsec_example)> auth private_key key
(config vpn ipsec tunnel ipsec_example)>
```

- b. Set the private key passphrase that is used to decrypt the private key. Leave blank if the private key is not encrypted.

```
(config vpn ipsec tunnel ipsec_example)> auth private_key_
passphrase passphrase
(config vpn ipsec tunnel ipsec_example)>
```

- c. For the **cert** parameter, paste the local X.509 certificate in PEM format:

```
(config vpn ipsec tunnel ipsec_example)> auth cert certificate
(config vpn ipsec tunnel ipsec_example)>
```

- d. Set the method for verifying the peer's X.509 certificate:

```
(config vpn ipsec tunnel ipsec_example)> auth peer_verify value
(config vpn ipsec tunnel ipsec_example)>
```

where *value* is either:

- **cert**: Uses the peer's X.509 certificate in PEM format for verification.
 - For the **peer_cert** parameter, paste the peer's X.509 certificate in PEM format:

```
(config vpn ipsec tunnel ipsec_example)> auth peer_cert
certificate
(config vpn ipsec tunnel ipsec_example)>
```

- **ca**: Uses the Certificate Authority chain for verification.
 - For the **ca_cert** parameter, paste the Certificate Authority (CA) certificates. These must include all peer certificates in the chain up to the root CA certificate, in PEM format.

```
(config vpn ipsec tunnel ipsec_example)> auth ca_cert cert_
chain
(config vpn ipsec tunnel ipsec_example)>
```

11. (Optional) Configure the device to connect to its remote peer as an XAUTH client:

- a. Enable XAUTH client functionality:

```
(config vpn ipsec tunnel ipsec_example)> xauth_client enable true
(config vpn ipsec tunnel ipsec_example)>
```

- b. Set the XAUTH client username:

```
(config vpn ipsec tunnel ipsec_example)> xauth_client username name
(config vpn ipsec tunnel ipsec_example)>
```

- c. Set the XAUTH client password:

```
(config vpn ipsec tunnel ipsec_example)> xauth_client password pwd
(config vpn ipsec tunnel ipsec_example)>
```

12. (Optional) Enable MODECFG client functionality:

MODECFG client functionality configures the device to receive configuration information, such as the private IP address, from the remote peer.

- a. Enable MODECFG client functionality:

```
(config vpn ipsec tunnel ipsec_example)> modecfg_client enable true
(config vpn ipsec tunnel ipsec_example)>
```

13. Configure the local endpoint:

- a. Set the method for determining the local network interface:

```
(config vpn ipsec tunnel ipsec_example)> local type value
(config vpn ipsec tunnel ipsec_example)>
```

where *value* is either:

- **defaultroute**: Uses the same network interface as the default route.
- **interface**: Select the **Interface** to be used as the local endpoint.

- b. Set the ID type:

```
(config vpn ipsec tunnel ipsec_example)> local id type value
(config vpn ipsec tunnel ipsec_example)>
```

where *value* is one of:

- **auto**: The ID will be automatically determined from the value of the tunnels endpoints.
- **raw**: Enter an ID and have it passed unmodified to the underlying IPsec stack.
Set the unmodified ID that will be passed:

```
(config vpn ipsec tunnel ipsec_example)> local id raw_id id
(config vpn ipsec tunnel ipsec_example)>
```

- **any**: Any ID will be accepted.
- **ipv4**: The ID will be interpreted as an IPv4 address and sent as an ID_IPV4_ADDR IKE identity.
Set an IPv4 formatted ID. This can be a fully-qualified domain name or an IPv4 address.

```
(config vpn ipsec tunnel ipsec_example)> local id ipv4_id id
(config vpn ipsec tunnel ipsec_example)>
```

- **ipv6**: The ID will be interpreted as an IPv6 address and sent as an ID_IPV6_ADDR IKE identity.
Set an IPv6 formatted ID. This can be a fully-qualified domain name or an IPv6 address.

```
(config vpn ipsec tunnel ipsec_example)> local id ipv6_id id
(config vpn ipsec tunnel ipsec_example)>
```

- **rfc822**: The ID will be interpreted as an RFC822 (email address).
Set the ID in internet email address format:

```
(config vpn ipsec tunnel ipsec_example)> local id rfc822_id id
(config vpn ipsec tunnel ipsec_example)>
```

- **fqdn**: The ID will be interpreted as FQDN (Fully Qualified Domain Name) and sent as an ID_FQDN IKE identity.

Set the ID as an FQDN:

```
(config vpn ipsec tunnel ipsec_example)> local id rfc822_id id
(config vpn ipsec tunnel ipsec_example)>
```

- **keyid:** The ID will be interpreted as a Key ID and sent as an ID_KEY_ID IKE identity.

Set the key ID:

```
(config vpn ipsec tunnel ipsec_example)> local id keyid_id id
(config vpn ipsec tunnel ipsec_example)>
```

14. Configure the remote endpoint:

- Set the hostname or IP address of the remote endpoint:

```
(config vpn ipsec tunnel ipsec_example)> remote hostname value
(config vpn ipsec tunnel ipsec_example)>
```

If your device is not configured to initiate the IPsec connection (see [ike initiate](#)), you can also use the keyword **any**, which means that the hostname is dynamic or unknown.

- Set the ID type:

```
(config vpn ipsec tunnel ipsec_example)> remote id type value
(config vpn ipsec tunnel ipsec_example)>
```

where *value* is one of:

- **auto:** The ID will be automatically determined from the value of the tunnels endpoints.
- **raw:** Enter an ID and have it passed unmodified to the underlying IPsec stack.

Set the unmodified ID that will be passed:

```
(config vpn ipsec tunnel ipsec_example)> remote id raw_id id
(config vpn ipsec tunnel ipsec_example)>
```

- **any:** Any ID will be accepted.
- **ipv4:** The ID will be interpreted as an IPv4 address and sent as an ID_IPV4_ADDR IKE identity.

Set an IPv4 formatted ID. This can be a fully-qualified domain name or an IPv4 address.

```
(config vpn ipsec tunnel ipsec_example)> remote id ipv4_id id
(config vpn ipsec tunnel ipsec_example)>
```

- **ipv6:** The ID will be interpreted as an IPv6 address and sent as an ID_IPV6_ADDR IKE identity.

Set an IPv6 formatted ID. This can be a fully-qualified domain name or an IPv6 address.

```
(config vpn ipsec tunnel ipsec_example)> remote id ipv6_id id
(config vpn ipsec tunnel ipsec_example)>
```

- **rfc822:** The ID will be interpreted as an RFC822 (email address).

Set the ID in internet email address format:

```
(config vpn ipsec tunnel ipsec_example)> remote id rfc822_id id
(config vpn ipsec tunnel ipsec_example)>
```

- **fqdn:** The ID will be interpreted as FQDN (Fully Qualified Domain Name) and sent as an ID_FQDN IKE identity.

Set the ID as an FQDN:

```
(config vpn ipsec tunnel ipsec_example)> remote id rfc822_id id
(config vpn ipsec tunnel ipsec_example)>
```

- **keyid:** The ID will be interpreted as a Key ID and sent as an ID_KEY_ID IKE identity.

Set the key ID:

```
(config vpn ipsec tunnel ipsec_example)> remote id keyid_id id
(config vpn ipsec tunnel ipsec_example)>
```

15. Configure IKE settings:

- a. Set the IKE version:

```
(config vpn ipsec tunnel ipsec_example)> ike version value
(config vpn ipsec tunnel ipsec_example)>
```

where *value* is either **ikev1** or **ikev2**. This setting must match the peer's IKE version.

- b. Determine whether the device should initiate the key exchange, rather than waiting for an incoming request. By default, the device will initiate the key exchange. This must be disabled if [remote hostname](#) is set to **any**. To disable:

```
(config vpn ipsec tunnel ipsec_example)> ike initiate false
(config vpn ipsec tunnel ipsec_example)>
```

- c. Set the IKE phase 1 mode:

```
(config vpn ipsec tunnel ipsec_example)> ike mode value
(config vpn ipsec tunnel ipsec_example)>
```

where *value* is either **aggressive** or **main**.

- d. Padding of IKE packets is enabled by default and should normally not be disabled except for compatibility purposes. To disable:

```
(config vpn ipsec tunnel ipsec_example)> ike pad false
(config vpn ipsec tunnel ipsec_example)>
```

- e. Set the amount of time that the IKE security association expires after a successful negotiation and must be re-authenticated:

```
(config vpn ipsec tunnel ipsec_example)> ike phase1_lifetime value
(config vpn ipsec tunnel ipsec_example)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **phase1_lifetime** to ten minutes, enter either **10m** or **600s**:

```
(config vpn ipsec tunnel ipsec_example)> ike phase1_lifetime 600s
(config vpn ipsec tunnel ipsec_example)>
```

The default is three hours.

- f. Set the amount of time that the IKE security association expires after a successful negotiation and must be rekeyed.

```
(config vpn ipsec tunnel ipsec_example)> ike phase2_lifetime value
(config vpn ipsec tunnel ipsec_example)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **phase2_lifetime** to ten minutes, enter either **10m** or **600s**:

```
(config vpn ipsec tunnel ipsec_example)> ike phase2_lifetime 600s
(config vpn ipsec tunnel ipsec_example)>
```

The default is one hour.

- g. Set a randomizing amount of time before the IPsec tunnel is renegotiated:

```
(config vpn ipsec tunnel ipsec_example)> ike lifetime_margin value
(config vpn ipsec tunnel ipsec_example)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **lifetime_margin** to ten minutes, enter either **10m** or **600s**:

```
(config vpn ipsec tunnel ipsec_example)> ike lifetime_margin 600s
(config vpn ipsec tunnel ipsec_example)>
```

The default is nine minutes.

- h. Configure the types of encryption, hash, and Diffie-Hellman group to use during phase 1:
- i. Add a phase 1 proposal:

```
(config vpn ipsec tunnel ipsec_example)> add ike phase1_proposal end
(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)>
```

- ii. Set the type of encryption to use during phase 1:

```
(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)>
cipher value
(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)>
```

where *value* is one of **3des**, **aes128**, **aes192**, **aes256**, or **null**. The default is **3des**.

- iii. Set the type of hash to use during phase 1 to verify communication integrity:

```
(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)> hash
value
(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)>
```

where *value* is one of **md5**, **sha1**, **sha256**, **sha384**, or **sha512**. The default is **sha1**.

- iv. Set the type of Diffie-Hellman group to use for key exchange during phase 1:

```
(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)> dh_
group value
(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)>
```

where *value* is one of **ecp384**, **modp768**, **modp1024**, **modp1536**, **modp2048**, **modp3072**, **modp4096**, **modp6144**, or **modp8192**. The default is **modp1024**.

- v. (Optional) Add additional phase 1 proposals:

- i. Move back one level in the schema:

```
(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)>
..
(config vpn ipsec tunnel ipsec_example ike phase1_proposal)>
```

- ii. Add an additional proposal:

```
(config vpn ipsec tunnel ipsec_example ike phase1_proposal)> add
end
(config vpn ipsec tunnel ipsec_example ike phase1_proposal 1)>
```

Repeat the above steps to set the type of encryption, hash, and Diffie-Hellman group for the additional proposal.

- iii. Repeat to add more phase 1 proposals.

- i. Configure the types of encryption, hash, and Diffie-Hellman group to use during phase 2:

- i. Move back two levels in the schema:

```
(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)> .. ..
(config vpn ipsec tunnel ipsec_example ike)>
```

- ii. Add a phase 2 proposal:

```
(config vpn ipsec tunnel ipsec_example ike)> add ike phase2_proposal
end
(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)>
```

- iii. Set the type of encryption to use during phase 2:

```
(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)>
cipher value
(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)>
```

where *value* is one of **3des**, **aes128**, **aes192**, **aes256**, or **null**. The default is **3des**.

- iv. Set the type of hash to use during phase 2 to verify communication integrity:

```
(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)> hash
value
(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)>
```

where *value* is one of **md5**, **sha1**, **sha256**, **sha384**, or **sha512**. The default is **sha1**.

- v. Set the type of Diffie-Hellman group to use for key exchange during phase 2:

```
(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)> dh_
group value
(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)>
```

where *value* is one of **ecp384**, **modp768**, **modp1024**, **modp1536**, **modp2048**, **modp3072**, **modp4096**, **modp6144**, or **modp8192**. The default is **modp1024**.

- vi. (Optional) Add additional phase 2 proposals:

- i. Move back one level in the schema:

```
(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)>
..
(config vpn ipsec tunnel ipsec_example ike phase2_proposal)>
```

- ii. Add an additional proposal:

```
(config vpn ipsec tunnel ipsec_example ike phase2_proposal)> add
end
(config vpn ipsec tunnel ipsec_example ike phase2_proposal 1)>
```

Repeat the above steps to set the type of encryption, hash, and Diffie-Hellman group for the additional proposal.

- iii. Repeat to add more phase 2 proposals.

16. (Optional) Configure dead peer detection:

Dead peer detection is enabled by default. Dead peer detection uses periodic IKE transmissions to the remote endpoint to detect whether tunnel communications have failed, allowing the tunnel to be automatically restarted when failure occurs.

- a. Change to the root of the configuration schema:

```
(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)> ...
(config)>
```

- b. To disable dead peer detection:

```
(config)> vpn ipsec tunnel ipsec_example dpd enable false
(config)>
```

- c. Set the number of seconds between transmissions of dead peer packets. Dead peer packets are only sent when the tunnel is idle. The default is **60**.

```
(config)> vpn ipsec tunnel ipsec_example dpd delay value
(config)>
```

- d. Set the number of seconds to wait for a response from a dead peer packet before assuming the tunnel has failed. The default is **90**.

```
(config)> vpn ipsec tunnel ipsec_example dpd timeout value
(config)>
```

17. (Optional) Create a list of destination networks that require source NAT:

- a. Add a destination network:

```
(config)> add vpn ipsec tunnel ipsec_example nat end
(config vpn ipsec tunnel ipsec_example nat 0)>
```

- b. Set the IPv4 address and optional netmask of a destination network that requires source NAT. You can also use **any**, meaning that any destination network connected to the tunnel will use source NAT.

```
(config vpn ipsec tunnel ipsec_example nat 0)> dst value
(config vpn ipsec tunnel ipsec_example nat 0)>
```

18. Configure policies that define the network traffic that will be encapsulated by this tunnel:

- a. Change to the root of the configuration schema:

```
(config vpn ipsec tunnel ipsec_example nat 0)> ...
(config)>
```

- b. Add a policy:

```
(config)> add vpn ipsec tunnel ipsec_example policy end
(config vpn ipsec tunnel ipsec_example policy 0)>
```

- c. Set the type of local network policy:

```
(config vpn ipsec tunnel ipsec_example policy 0)> local type value
(config vpn ipsec tunnel ipsec_example policy 0)>
```

where *value* is one of:

- **address**: The address of a local network interface.

Set the address:

- i. Use the **?** to determine available interfaces:

```
(config vpn ipsec tunnel ipsec_example policy 0)> local
address ?
```

Address: The local network interface to use the address of. This field must be set when 'Type' is set to 'Address'.

Format:

```
defaultip
defaultlinklocal
lan1
lan_hotspot
loopback
```

```
wan1
wwan1
wwan2
Current value:

(config vpn ipsec tunnel ipsec_example policy 0)> local
address
```

- ii. Set the interface. For example:

```
(config vpn ipsec tunnel ipsec_example policy 0)> local
address wan1
(config vpn ipsec tunnel ipsec_example policy 0)>
```

- **network:** The subnet of a local network interface.

Set the network:

- i. Use the **?** to determine available interfaces:

```
(config vpn ipsec tunnel ipsec_example policy 0)> local
network ?
```

Interface: The network interface.

Format:

```
defaultip
defaultlinklocal
lan1
lan_hotspot
loopback
wan1
wwan1
wwan2
```

Current value:

```
(config vpn ipsec tunnel ipsec_example policy 0)> local
network
```

- ii. Set the interface. For example:

```
(config vpn ipsec tunnel ipsec_example policy 0)> local
network wan1
(config vpn ipsec tunnel ipsec_example policy 0)>
```

- **custom:** A user-defined network.

Set the custom network:

```
(config vpn ipsec tunnel ipsec_example policy 0)> local custom
value
(config vpn ipsec tunnel ipsec_example policy 0)>
```

where *value* is the IPv4 address and optional netmask. The keyword **any** can also be used.

- **request**: Requests a network from the remote peer.

- d. Set the IP address and optional netmask of the remote network. The keyword **any** can also be used.

```
(config vpn ipsec tunnel ipsec_example policy 0)> remote network value
(config vpn ipsec tunnel ipsec_example policy 0)>
```

19. (Optional) Change the NAT keep alive time:

- a. Change to the root of the configuration schema:

```
(config vpn ipsec tunnel ipsec_example policy 0)> ...
(config)>
```

- b. (config)> vpn ipsec advanced keep_alive *value*
(config)>
-

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **keep_alive** to ten minutes, enter either **10m** or **600s**:

```
(config)> vpn ipsec advanced keep_alive 600s
(config)>
```

The default is 40 seconds.

20. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

21. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure IPsec failover

You can configure the TX64 device to fail over from a primary IPsec tunnel to a backup tunnel.

During configuration of the backup IPsec tunnel, identify the primary IPsec tunnel in the **Preferred tunnel** parameter. The **Preferred tunnel** parameter instructs the backup IPsec tunnel to start only when the preferred tunnel has been determined to have failed. It will continue to operate until the preferred tunnel returns to full operational status.

Required configuration items

- Two configured IPsec tunnels: The primary tunnel, and the backup tunnel.
- Identify the primary tunnel during configuration of the backup tunnel.

WebUI

1. Configure the primary IPsec tunnel. See [Configure an IPsec tunnel](#) for instructions.
2. Create a backup IPsec tunnel. See [Configure an IPsec tunnel](#) for instructions.
3. During configuration of the backup IPsec tunnel, identify the primary IPsec tunnel in the **Preferred tunnel** parameter.

The screenshot shows the configuration page for a tunnel named 'test_ipsec_tunnel'. The 'Enable' toggle is turned on. The 'Preferred tunnel' dropdown menu is highlighted with a green box and an arrow pointing to it. Other configuration options include 'Force UDP encapsulation' (disabled), 'Zone' (IPsec), 'Mode' (Tunnel mode), and 'Protocol' (ESP).

4. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Configure the primary IPsec tunnel. See [Configure an IPsec tunnel](#) for instructions.
2. Create a backup IPsec tunnel. See [Configure an IPsec tunnel](#) for instructions.
3. During configuration of the backup IPsec tunnel, identify the primary IPsec tunnel:
 - a. Use the **?** to view a list of available tunnels:

```
(config vpn ipsec tunnel backup_ipsec_tunnel)> ipsec_failover ?
```

```
Preferred tunnel: This tunnel will not start until the preferred tunnel
has failed. It will continue
to operate until the preferred tunnel returns to full operation status.
```

```
Format:
```

```
primary_ipsec_tunnel
backup_ipsec_tunnel
```

```
Optional: yes
```

```
Current value:
```

```
(config vpn ipsec tunnel backup_ipsec_tunnel)> ipsec_failover
```

- b. Set the primary IPsec tunnel:

```
(config vpn ipsec tunnel backup_ipsec_tunnel)> ipsec_failover primary_
ipsec_tunnel
(config vpn ipsec tunnel backup_ipsec_tunnel)>
```

4. Save the configuration and apply the change:

```
(config vpn ipsec tunnel backup_ipsec_tunnel)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure SureLink active recovery for IPsec

You can configure the TX64 device to regularly probe IPsec client connections to determine if the connection has failed and take remedial action.

You can also configure the IPsec tunnel to fail over to a backup tunnel. See [Configure IPsec failover](#) for further information.

Required configuration items

- A valid IPsec configuration. See [Configure an IPsec tunnel](#) for configuration instructions.
- Enable IPsec active recovery.
- The behavior of the TX64 device upon IPsec failure: either
 - Restart the IPsec interface
 - Reboot the device.

Additional configuration items

- The interval between connectivity tests.
- Whether the interface should be considered to have failed if one of the test targets fails, or all of the test targets fail.
- The number of probe attempts before the IPsec connection is considered to have failed.
- The amount of time that the device should wait for a response to a probe attempt before considering it to have failed.


To configure the TX64 device to regularly probe the IPsec connection:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

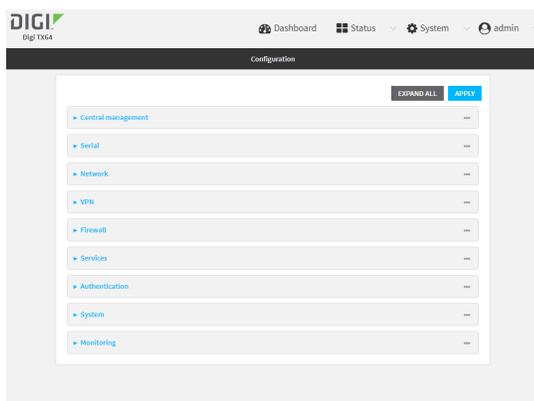

3. Click **VPN > IPsec**.
4. Create a new IPsec tunnel or select an existing one:
 - To create a new IPsec tunnel, see [Configure an IPsec tunnel](#).
 - To edit an existing IPsec tunnel, click to expand the appropriate tunnel.


- After creating or selecting the IPsec tunnel, click **Active recovery**.

The screenshot shows a configuration window for 'Active recovery'. It includes the following fields and controls:

- Enable:** A toggle switch that is currently turned off.
- Restart interface:** A toggle switch that is currently turned off.
- Reboot device:** A toggle switch that is currently turned off.
- Interval:** A text input field containing '15m'.
- Success condition:** A dropdown menu showing 'One test target passes'.
- Attempts:** A text input field containing '3'.
- Response timeout:** A text input field containing '15s'.
- Test targets:** A button with a right-pointing arrow.

- Enable** active recovery.
- For **Restart interface**, enable to configure the device to restart the interface when its connection is considered to have failed. This is useful for interfaces that may regain connectivity after restarting, such as a cellular modem.
- For **Reboot device**, enable to instruct the device to reboot when the WAN connection is considered to have failed.
- Change the **Interval** between connectivity tests.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Interval** to ten minutes, enter **10m** or **600s**.
The default is 15 minutes.
- For **Success condition**, determine whether the interface should fail over based on the failure of one of the test targets, or all of the test targets.
- For **Attempts**, type the number of probe attempts before the WAN is considered to have failed.
- For **Response timeout**, type the amount of time that the device should wait for a response to a probe attempt before considering it to have failed.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Response timeout** to ten minutes, enter **10m** or **600s**.
The default is 15 seconds.

13. Add a test target:
 - a. Click to expand **Test targets**.

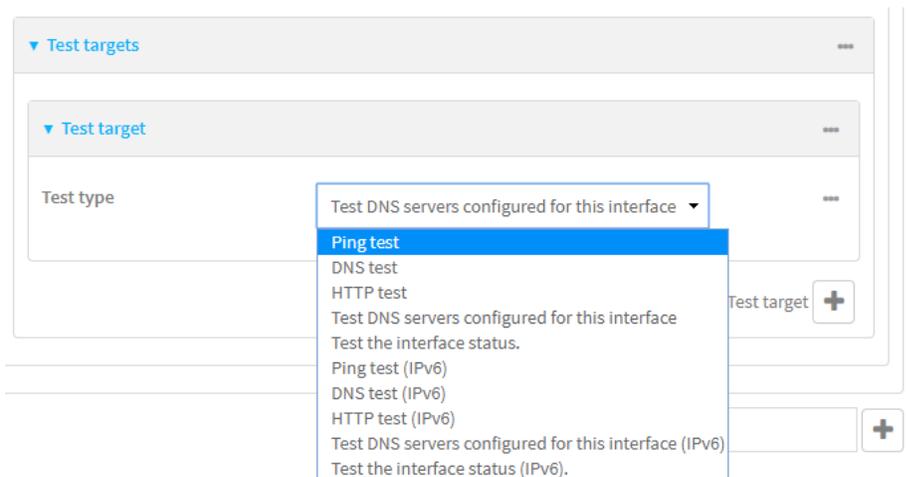

- b. For **Add Test target**, click **+**.
- c. Select the **Test type**:
 - **Ping test** or **Ping test (IPv6)**: Tests connectivity by sending an ICMP echo request to the hostname or IP address specified in **Ping host**. You can also optionally change the number of bytes in the **Ping payload size**.
 - **DNS test** or **DNS test (IPv6)**: Tests connectivity by sending a DNS query to the specified **DNS server**.
 - **HTTP test HTTP test (IPv6)**: Tests connectivity by sending an HTTP or HTTPS GET request to the URL specified in **Web servers**. The URL should take the format of **http[s]://hostname/[path]**.
 - **Test DNS servers configured for this interface** or **Test DNS servers configured for this interface (IPv6)**: Tests connectivity by sending a DNS query to the DNS servers configured for this interface.
 - **Test the interface status** or **Test the interface status IPv6**: The interface is considered to be down based on:
 - **Down time**: The amount of time that the interface can be down before this test is considered to have failed.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Down time** to ten minutes, enter **10m** or **600s**.
The default is 60 seconds.
 - **Initial connection time**: The amount of time to wait for an initial connection to the interface before this test is considered to have failed.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Initial connection time** to ten minutes, enter **10m** or **600s**.
The default is 60 seconds.

- Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Create a new IPsec tunnel, or edit an existing one:
 - To create a new IPsec tunnel, see [Configure an IPsec tunnel](#).
 - To edit an existing IPsec tunnel, change to the IPsec tunnel's node in the configuration schema. For example, for an IPsec tunnel named **ipsec_example**, change to the **ipsec_example** node in the configuration schema:

```
(config)> vpn ipsec tunnel ipsec_example
(config vpn ipsec tunnel ipsec_example)>
```

- Enable active recovery:

```
(config vpn ipsec tunnel ipsec_example)> connection_monitor enable true
(config vpn ipsec tunnel ipsec_example)>
```

- To configure the device to restart the interface when its connection is considered to have failed:

```
(config vpn ipsec tunnel ipsec_example)> connection_monitor restart true
(config vpn ipsec tunnel ipsec_example)>
```

This is useful for interfaces that may regain connectivity after restarting, such as a cellular modem.

- To configure the device to reboot when the interface is considered to have failed:

```
(config vpn ipsec tunnel ipsec_example)> connection_monitor reboot enable
(config vpn ipsec tunnel ipsec_example)>
```

7. Set the **Interval** between connectivity tests:

```
(config vpn ipsec tunnel ipsec_example)> connection_monitor interval value
(config vpn ipsec tunnel ipsec_example)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **interval** to ten minutes, enter either **10m** or **600s**:

```
(config vpn ipsec tunnel ipsec_example)> connection_monitor interval 600s
(config vpn ipsec tunnel ipsec_example)>
```

The default is 15 minutes.

8. Determine whether the interface should fail over based on the failure of one of the test targets, or all of the test targets:

```
(config vpn ipsec tunnel ipsec_example)> connection_monitor success_
condition value
(config vpn ipsec tunnel ipsec_example)>
```

Where *value* is either **one** or **all**.

9. Set the number of probe attempts before the WAN is considered to have failed:

```
(config vpn ipsec tunnel ipsec_example)> connection_monitor attempts num
(config vpn ipsec tunnel ipsec_example)>
```

The default is **3**.

10. Set the amount of time that the device should wait for a response to a probe attempt before considering it to have failed:

```
(config vpn ipsec tunnel ipsec_example)> connection_monitor timeout value
(config vpn ipsec tunnel ipsec_example)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **timeout** to ten minutes, enter either **10m** or **600s**:

```
(config vpn ipsec tunnel ipsec_example)> connection_monitor interval 600s
(config vpn ipsec tunnel ipsec_example)>
```

The default is 15 seconds.

11. Configure test targets:

- a. Add a test target:

```
(config vpn ipsec tunnel ipsec_example)> add connection_monitor target
end
(config vpn ipsec tunnel ipsec_example connection_monitor target 0)>
```

- b. Set the test type:

```
(config vpn ipsec tunnel ipsec_example connection_monitor target 0)>
test value
(config vpn ipsec tunnel ipsec_example connection_monitor target 0)>
```

where *value* is one of:

- **ping** (IPv4) or **ping6** (IPv6): Tests connectivity by sending an ICMP echo request to a specified hostname or IP address.

- Specify the hostname or IP address by using **ping_host** or **ping_host6**:

```
(config vpn ipsec tunnel ipsec_example connection_monitor
target 0)> ping_host host
(config vpn ipsec tunnel ipsec_example connection_monitor
target 0)>
```

- (Optional) Set the size, in bytes, of the ping packet by using **ping_size** or **ping_size6**:

```
(config vpn ipsec tunnel ipsec_example connection_monitor
target 0)> ping_size [num]
(config vpn ipsec tunnel ipsec_example connection_monitor
target 0)>
```

- **dns** (IPv4) or **dns6** (IPv6): Tests connectivity by sending a DNS query to the specified DNS server.

- Specify the DNS server. Allowed value is the IP address of the DNS server.

```
(config vpn ipsec tunnel ipsec_example connection_monitor
target 0)> dns_server ip_address
(config vpn ipsec tunnel ipsec_example connection_monitor
target 0)>
```

- **dns_configured** (IPv4) or **dns_configured6** (IPv6): Tests connectivity by sending a DNS query to the DNS servers configured for this interface.

- **http** (IPv4) or **http6** (IPv6): Tests connectivity by sending an HTTP or HTTPS GET request to the specified URL.

- Specify the url. Allowed value uses the format **http[s]://hostname/[path]**.

```
(config vpn ipsec tunnel ipsec_example connection_monitor
target 0)> http_url url
(config vpn ipsec tunnel ipsec_example connection_monitor
target 0)>
```

- **interface_up** (IPv4) or **interface_up6** (IPv6): The interface is considered to be down based on the interfaces down time, and the amount of time an initial connection to the interface takes before this test is considered to have failed.

- (Optional) Set the amount of time that the interface can be down before this test is considered to have failed:

```
(config vpn ipsec tunnel ipsec_example connection_monitor
target 0)> interface_down_time value
(config vpn ipsec tunnel ipsec_example connection_monitor
target 0)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format ***number*{w|d|h|m|s}**.

For example, to set **interface_down_time** to ten minutes, enter either **10m** or **600s**:

```
(config ipsec tunnel ipsec_example connection_monitor target
0)> interface_down_time 600s
(config ipsec tunnel ipsec_example connection_monitor target
0)>
```

The default is 60 seconds.

- (Optional) Set the amount of time to wait for an initial connection to the interface before this test is considered to have failed:

```
(config vpn ipsec tunnel ipsec_example connection_monitor
target 0)> interface_timeout value
(config vpn ipsec tunnel ipsec_example connection_monitor
target 0)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format ***number*{w|d|h|m|s}**.

For example, to set **interface_timeout** to ten minutes, enter either **10m** or **600s**:

```
(config network interface my_wan ipv4 connection_monitor target
0)> interface_timeout 600s
(config network interface my_wan ipv4 connection_monitor target
0)>
```

The default is 60 seconds.

12. Save the configuration and apply the change:

```
(config ipsec tunnel ipsec_example connection_monitor target 0)> save
Configuration saved.
>
```

13. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show IPsec status and statistics



1. Log into the TX64 WebUI as a user with Admin access.
2. On the menu, select **Status > IPsec**.
The **IPsec** page appears.
3. To view configuration details about an IPsec tunnel, click the  (configuration) icon in the upper right of the tunnel's status pane.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. To display details about all configured OpenVPN servers, type the following at the prompt:

```
> show ipsec all
```

Name	Enable	Status	Hostname
ipsec1	true	up	192.168.2.1
vpn1	false	pending	192.168.3.1

```
>
```

3. To display details about a specific server:

```
> show ipsec tunnel ipsec1
```

```
Tunnel           : ipsec1
Enable           : true
Status           : pending
Hostname         : 192.168.2.1
Zone             : ipsec
Mode             : tunnel
Type             : esp
```

```
>
```

4. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a Simple Certificate Enrollment Protocol client

Simple Certificate Enrollment Protocol (SCEP) is a mechanism that allows for large-scale X.509 certificate deployment. You can configure TX64 device to function as a SCEP client that will connect to a SCEP server that is used to sign Certificate Signing Requests (CSRs), provide Certificate Revocation Lists (CRLs), and distribute valid certificates from a Certificate Authority (CA).

Required configuration


- Enable the SCEP client.
- The fully-qualified domain name of the SCEP server to be used for certificate requests.
- The challenge password provided by the SCEP server that the SCEP client will use when making SCEP requests.
- The distinguished name to be used for the CSR.
- The file name of the Certificate Revocation List (CRL) from the Certificate Authority (CA).

Additional configuration


- The number of days that the certificate enrollment can be renewed, prior to the request expiring.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

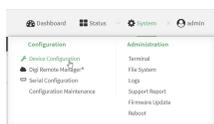

The **Configuration** window is displayed.

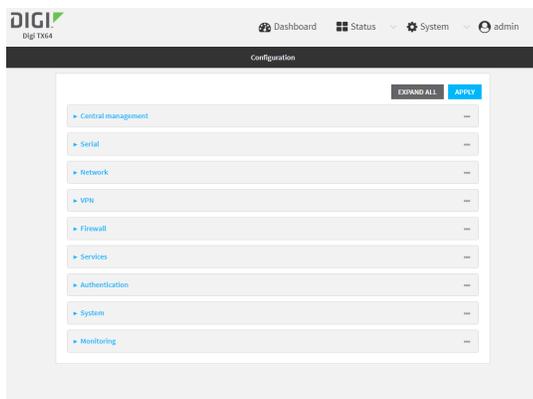

3. Click **Network > SCEP Client**.
4. For **Add clients**, enter a name for the SCEP client and click **+**.



The new SCEP client configuration is displayed.

5. Click **Enable** to enable the SCEP client.
6. For **Renewable Time**, type the number of days that the certificate enrollment can be renewed, prior to the request expiring. This value is configured on the SCEP server, and is used by the TX64 device to determine when to start attempting to auto-renew an existing certificate. The default is **7**.
7. (Optional) For CRL file name, type the filename of the Certificate Revocation List (CRL) from the CA.
The CRL is stored on the TX64 device in the `/etc/config/scep_client/client_name` directory.
8. Click to expand **SCEP server**.

9. For **FQDN**, type the fully qualified domain name or IP address of the SCEP server.
10. For **Password**, type the challenge password as configured on the SCEP server.
11. Click to expand **Distinguished Name**.

12. Type the value for each appropriate Distinguished Name attribute.
13. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a new SCEP client:

```
(config)> add network scep_client scep_client_name
(config network scep_client scep_client_name
)>
```

4. Enable the SCEP client:

```
(config network scep_client scep_client_name)> enable true
(config network scep_client scep_client_name)>
```

5. Set the url parameter to the fully qualified domain name or IP address of the SCEP server:

```
(config network scep_client scep_client_name)> server url
https://scep.example.com
(config network scep_client scep_client_name)>
```

6. Set the challenge password as configured on the SCEP server:

```
(config network scep_client scep_client_name)> server password challenge_
password
(config network scep_client scep_client_name)>
```

7. Set Distinguished Name attributes:

- a. Set the Domain Component:

```
(config network scep_client scep_client_name)> distinguished_name dc
value
(config network scep_client scep_client_name)>
```

- b. Set the two letter Country Code:

```
(config network scep_client scep_client_name)> distinguished_name c
value
(config network scep_client scep_client_name)>
```

- c. Set the State or Province:

```
(config network scep_client scep_client_name)> distinguished_name st
value
(config network scep_client scep_client_name )>
```

- d. Set the Locality:

```
(config network scep_client scep_client_name)> distinguished_name l
value
(config network scep_client scep_client_name)>
```

- e. Set the Organization:

```
(config network scep_client scep_client_name)> distinguished_name o
value
(config network scep_client scep_client_name)>
```

- f. Set the Organizational Unit:

```
(config network scep_client scep_client_name)> distinguished_name ou
value
(config network scep_client scep_client_name)>
```

- g. Set the Common Name:

```
(config network scep_client scep_client_name)> distinguished_name cn
value
(config network scep_client scep_client_name)>
```

8. Set the number of days that the certificate enrollment can be renewed, prior to the request expiring. This value is configured on the SCEP server, and is used by the TX64 device to determine when to start attempting to auto-renew an existing certificate. The default is **7**.

```
(config network scep_client scep_client_name)> renewable_time interger
(config network scep_client scep_client_name)>
```

9. (Optional) Set the filename of the Certificate Revocation List (CRL) from the CA. The CRL is stored on the TX64 device in the `/etc/config/scep_client/client_name` directory.

```
(config network scep_client scep_client_name)> crl_name name
(config network scep_client scep_client_name)>
```

10. Save the configuration and apply the change:

```
(config network scep_client scep_client_name)> save
Configuration saved.
>
```

11. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example: SCEP client configuration with Fortinet SCEP server

In this example configuration, we will configure the TX64 device as a SCEP client that will connect to a Fortinet SCEP server.

Fortinet configuration

On the Fortinet server:

1. Enable ports for SCEP services:
 - a. From the menu, select **Network > Interfaces**.
 - b. Select the appropriate port and click **Edit**.
 - c. For **Access Rights > Services**, enable the following services:
 - **HTTPS > SCEP**
 - **HTTPS > CRL Downloads**
 - **HTTP > SCEP**
 - **HTTP > CRL Downloads**
 - d. The remaining fields can be left at their defaults or changed as appropriate.
 - e. Click **OK**.
2. Create a Certificate Authority (CA):
 - a. From the menu, click **Certificate Authorities > Local CAs**.
 - b. Click **Create New**.
 - c. Type a **Certificate ID** for the CA, for example, **fortinet_example_ca**.
 - d. Complete the **Subject Information** fields.
 - e. The remaining fields can be left at their defaults or changed as appropriate.
 - f. Click **OK**.
3. Edit SCEP settings:
 - a. From the menu, click **SCEP > General**.
 - b. Click **Enable SCEP** if it is not enabled.
 - c. For **Default enrollment password**, enter a password. The password entered here must correspond to the challenge password configured for the SCEP client on the TX64 device.
 - d. The remaining fields can be left at their defaults or changed as appropriate.
 - e. Click **OK**.
4. Create an **Enrollment Request**:
 - a. From the menu, click **SCEP > Enrollment Requests**.
 - b. Click **Create New**.
 - c. For **Automatic request type**, select **Wildcard**.
 - d. For **Certificate authority**, select the CA created in step 1, above.
 - e. Complete the **Subject Information** fields. The Distinguished Name (DN) attributes entered here must correspond to the Distinguished Name attributes configured for the SCEP client on the TX64 device.
 - f. For **Renewal > Allow renewal x days before the certified is expired**, type the number of days that the certificate enrollment can be renewed, prior to the request expiring. The **Renewable Time** setting on the TX64 device must match the setting of this parameter.

- g. The remaining fields can be left at their defaults or changed as appropriate.
- h. Click **OK**.

TX64 configuration


On the TX64 device:

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

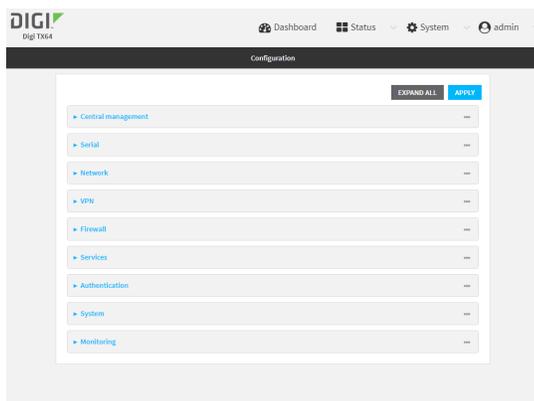

3. Click **Network > SCEP Client**.
4. For **Add clients**, enter a name for the SCEP client and click **+**.

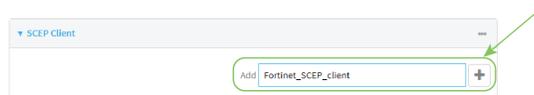


The new SCEP client configuration is displayed.

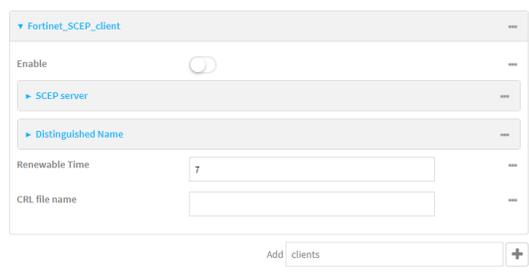


5. Click **Enable** to enable the SCEP client.

6. For **Renewable Time**, type the number of days that the certificate enrollment can be renewed, prior to the request expiring. This value must match the setting of the **Allow renewal x days before the certified is expired** option on the Fortinet server.
7. (Optional) For CRL file name, type the filename of the Certificate Revocation List (CRL) from the CA. The filename of the CRL corresponds to the Certificate ID of the CA created on the Fortinet server, for example, **fortinet_example_ca.crl**.
8. Click to expand **SCEP server**.

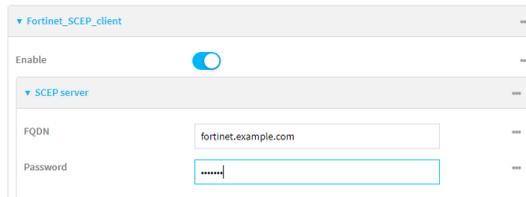

9. For **FQDN**, type the fully qualified domain name or IP address of the Fortinet server.
10. For **Password**, type the challenge password. This corresponds to the **Default enrollment password** on the Fortinet server.
11. Click to expand **Distinguished Name**.

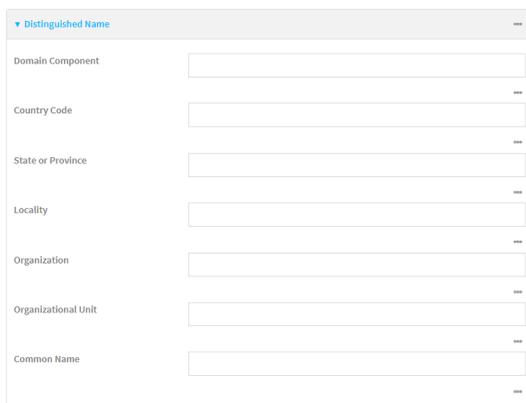

12. Type the value for each appropriate Distinguished Name attribute. The values entered here must correspond to the DN attributes in the **Enrollment Request** on the Fortinet server.
13. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:


```
> config
(config)>
```
3. Add a new SCEP client, for example, **Fortinet_SCEP_client**:


```
(config)> add network scep_client Fortinet_SCEP_client
(config network scep_client Fortinet_SCEP_client
)>
```
4. Enable the SCEP client:


```
(config network scep_client Fortinet_SCEP_client)> enable true
(config network scep_client Fortinet_SCEP_client)>
```
5. Set the url parameter to the fully qualified domain name or IP address of the SCEP server:


```
(config network scep_client Fortinet_SCEP_client)> server url
https://fortinet.example.com
(config network scep_client Fortinet_SCEP_client)>
```
6. Set the challenge password as configured on the SCEP server. This corresponds to the **Default enrollment password** on the Fortinet server.


```
(config network scep_client Fortinet_SCEP_client)> server password
challenge_password
(config network scep_client Fortinet_SCEP_client)>
```
7. Set Distinguished Name attributes. The values entered here must correspond to the DN attributes in the **Enrollment Request** on the Fortinet server.
 - a. Set the Domain Component:


```
(config network scep_client Fortinet_SCEP_client)> distinguished_name dc
value
(config network scep_client Fortinet_SCEP_client)>
```
 - b. Set the two letter Country Code:


```
(config network scep_client Fortinet_SCEP_client)> distinguished_name c
value
(config network scep_client Fortinet_SCEP_client)>
```
 - c. Set the State or Province:


```
(config network scep_client Fortinet_SCEP_client)> distinguished_name st
value
(config network scep_client Fortinet_SCEP_client)>
```

- d. Set the Locality:

```
(config network scep_client Fortinet_SCEP_client)> distinguished_name l
value
(config network scep_client Fortinet_SCEP_client)>
```

- e. Set the Organization:

```
(config network scep_client Fortinet_SCEP_client)> distinguished_name o
value
(config network scep_client Fortinet_SCEP_client)>
```

- f. Set the Organizational Unit:

```
(config network scep_client Fortinet_SCEP_client)> distinguished_name ou
value
(config network scep_client Fortinet_SCEP_client)>
```

- g. Set the Common Name:

```
(config network scep_client Fortinet_SCEP_client)> distinguished_name cn
value
(config network scep_client Fortinet_SCEP_client)>
```

8. Set the number of days that the certificate enrollment can be renewed, prior to the request expiring. This value must match the setting of the **Allow renewal x days before the certified is expired** option on the Fortinet server.

```
(config network scep_client Fortinet_SCEP_client)> renewable_time interger
(config network scep_client Fortinet_SCEP_client)>
```

9. (Optional) Set the filename of the Certificate Revocation List (CRL) from the CA.
The CRL is stored on the TX64 device in the `/etc/config/scep_client/client_name` directory.

```
(config network scep_client Fortinet_SCEP_client)> crl_name name
(config network scep_client Fortinet_SCEP_client)>
```

10. Save the configuration and apply the change:

```
(config network scep_client Fortinet_SCEP_client)> save
Configuration saved.
>
```

11. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

OpenVPN

OpenVPN is an open-source Virtual Private Network (VPN) technology that creates secure point-to-point or site-to-site connections in routed or bridged configurations. OpenVPN uses a custom security protocol that is Secure Socket Layer (SSL) / Transport Layer Security (TLS) for key exchange. It uses standard encryption and authentication algorithms for data privacy and authentication over TCP or UDP.

The OpenVPN server can push the network configuration, such as the topology and IP routes, to OpenVPN clients. This makes OpenVPN simpler to configure as it reduces the chances of a configuration mismatch between the client and server. OpenVPN also supports cipher negotiation between the client and server. This means you can configure the OpenVPN server and clients with a range of different cipher options and the server will negotiate with the client on the cipher to use for the connection.

For more information on OpenVPN, see www.openvpn.net.

OpenVPN modes:

There are two modes for running OpenVPN:

- Routing mode, also known as TUN.
- Bridging mode, also known as TAP.

Routing (TUN) mode

In routing mode, each OpenVPN client is assigned a different IP subnet from the OpenVPN server and other OpenVPN clients. OpenVPN clients use Network Address Translation (NAT) to route traffic from devices connected on its LAN interfaces to the OpenVPN server.

The manner in which the IP subnets are defined depends on the OpenVPN topology in use. The TX64 device supports two types of OpenVPN topology:

OpenVPN Topology	Subnet definition method
net30	Each OpenVPN client is assigned a /30 subnet within the IP subnet specified in the OpenVPN server configuration. With net30 topology, pushed routes are used, with the exception of the default route. . Automatic route pushing (exec) is not allowed, because this would not inform the firewall and would be blocked.
subnet	Each OpenVPN client connected to the OpenVPN server is assigned an IP address within the IP subnet specified in the OpenVPN server configuration. For the TX64 device, pushed routes are not allowed; you will need to manually configure routes on the device.

For more information on OpenVPN topologies, see [OpenVPN topology](#).

Bridging (TAP) mode

In bridging mode, a LAN interface on the OpenVPN server is assigned to OpenVPN. The LAN interfaces of the OpenVPN clients are on the same IP subnet as the OpenVPN server's LAN interface. This means that devices connected to the OpenVPN client's LAN interface are on the same IP subnet as devices.

With TAP mode, the TX64 device creates the interface and then uses its standard configuration to set up the connection (for example, its standard DHCP server configuration).

Additional OpenVPN information

For more information on OpenVPN, see these resources:

[Bridging vs. routing](#)

[OpenVPN/Routing](#)

Configure an OpenVPN server

Required configuration items

- Enable the OpenVPN server.
 - The OpenVPN server is enabled by default.
- The mode used by the OpenVPN server, either routing (TUN), or bridging (TAP).
- The firewall zone to be used by the OpenVPN server.
- The IP network and subnet mask of the OpenVPN server.
- The server's Certificate authority (CA) certificate, and public, private and Diffie-Hellman (DH) keys.
- An OpenVPN authentication group and an OpenVPN user.
- Determine the method of certificate management:
 - Certificates managed by the server.
 - Certificates created externally and added to the server.
- If certificates are managed created and added to the server, determine the level of authentication:
 - Certificate authentication only.
 - Username and password authentication only.
 - Certificate and username and password authentication.

If username and password authentication is used, you must create an OpenVPN authentication group and user. See [Configure an OpenVPN Authentication Group and User](#) for instructions.

- Certificates and keys:
 - The **CA certificate** (usually in a ca.crt file).
 - The **Public key** (for example, server.crt)
 - The **Private key** (for example, server.key).
 - The **Diffie Hellman key** (usually in dh2048.pem).
- Active recovery configuration. See [Configure active recovery for OpenVPN](#) for information about OpenVPN active recovery.

Additional configuration items


- The route metric for the OpenVPN server.
- The range of IP addresses that the OpenVPN server will provide to clients.
- The TCP/UDP port to use. By default, the TX64 device uses port **1194**.
- Access control list configuration to restrict access to the OpenVPN server through the firewall.
- Additional OpenVPN parameters.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

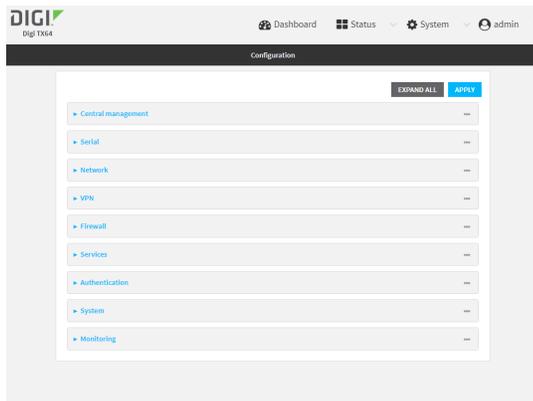

3. Click **VPN > OpenVPN > Servers**.
4. For **Add**, type a name for the OpenVPN server and click **+**.



The new OpenVPN server configuration is displayed.

The screenshot shows the configuration page for an OpenVPN server. The 'test_OpenVPN_server' section is expanded. The 'Enable' toggle is turned on. The 'Device type' dropdown is set to 'TUN'. The 'Zone' dropdown is empty. The 'Metric' input field contains '0'. The 'Address' input field is empty. The 'First IP address' input field contains '80'. The 'Last IP address' input field contains '99'. The 'VPN port' input field contains '1194'. The 'Server managed certificates' toggle is turned off. The 'Authentication' dropdown is set to 'Username/password only'. The 'CA certificate', 'Public key', 'Private key', and 'Diffie Hellman key' input fields are all empty. At the bottom, there are two expandable sections: 'Access control list' and 'Advanced options'.

The OpenVPN server is enabled by default. To disable, click **Enable**.

5. For **Device type**, select the mode used by the OpenVPN server, either:
 - **TUN**: Routing mode. See [OpenVPN](#) for information about TUN mode.
 - **TAP**: Bridging mode. See [OpenVPN](#) for information about TAP mode.
6. For **Zone**, select the firewall zone for the OpenVPN server. For TUN device types, this should be set to **Internal** to treat clients as LAN devices.
7. (Optional) Select the **Metric** for the OpenVPN server. If multiple active routes match a destination, the route with the lowest metric will be used.
8. (Optional) For **Address**, type the IP address and subnet mask of the OpenVPN server. If **Address** is blank, the server will not provide an IP address to the client, which allows the server to be added to a bridge or an interface. The interface then provides the IP address to the client.
9. (Optional) For **First IP address** and **Last IP address**, set the range of IP addresses that the OpenVPN server will use when providing IP addresses to clients. The default is from **80** to **99**.
10. (Optional) Set the **VPN port** that the OpenVPN server will use. The default is **1194**.
11. For **Server managed certificates**, determine the method of certificate management. If enabled, the server will manage certificates. If not enabled, certificates must be created externally and added to the server.
12. If **Server managed certificates** is not enabled:
 - a. Select the **Authentication** type:
 - **Certificate only**: Uses only certificates for client authentication. Each client requires a public and private key.

14. (Optional) Click to expand **Advanced Options** to manually set additional OpenVPN parameters.
 - a. Click **Enable** to enable the use of additional OpenVPN parameters.
 - b. Click **Override** if the additional OpenVPN parameters should override default options.
 - c. For **OpenVPN parameters**, type the additional OpenVPN parameters.
15. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. At the config prompt, type:

```
(config)> add vpn openvpn server name
(config vpn openvpn server name)>
```

where *name* is the name of the OpenVPN server.

The OpenVPN server is enabled by default. To disable the server, type:

```
(config vpn openvpn server name)> enable false
(config vpn openvpn server name)>
```

4. Set the mode used by the OpenVPN server:

```
(config vpn openvpn server name)> device_type value
(config vpn openvpn server name)>
```

where *value* is one of:

- **tun**: Routing mode. See [OpenVPN](#) for information about TUN mode.
- **tap**: Bridging mode. See [OpenVPN](#) for information about TAP mode.

The default is **tun**.

5. Set the firewall zone for the OpenVPN server. For TUN device types, this should be set to **internal** to treat clients as LAN devices.

```
(config vpn openvpn server name)> zone value
(config vpn openvpn server name)>
```

To view a list of available zones:

```
(config vpn openvpn server name)> firewall zone ?
```

Zone: The zone for the local TUN interface. To treat clients as LAN devices this would usually be set to `internal`.

Format:

```
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

Current value:

```
(config vpn openvpn server name)>
```

6. (Optional) Set the route metric for the OpenVPN server. If multiple active routes match a destination, the route with the lowest metric will be used.

```
(config vpn openvpn server name)> metric value
(config vpn openvpn server name)>
```

where *value* is an interger between **0** and **65535**. The default is **0**.

7. (Optional) Set the IP address and subnet mask of the OpenVPN server. If not set, the server will not provide an IP address to the client, which allows the server to be added to a bridge or an interface. The interface then provides the IP address to the client.

```
(config vpn openvpn server name)> address ip_address/netmask
(config vpn openvpn server name)>
```

8. (Optional) Set the range of IP addresses that the OpenVPN server will use when providing IP addresses to clients:

- a. Set the first address in the range limit:

```
(config vpn openvpn server name)> server_first_ip value
(config vpn openvpn server name)>
```

where *value* is a number between **1** and **255**. The number entered here will represent the first client IP address. For example, if **address** is set to **192.168.1.1/24** and **server_first_ip** is set to **80**, the first client IP address will be 192.168.1.80.

The default is from **80**.

- b. Set the last address in the range limit:

```
(config vpn openvpn server name)> server_last_ip value
(config vpn openvpn server name)>
```

where *value* is a number between **1** and **255**. The number entered here will represent the last client IP address. For example, if **address** is set to **192.168.1.1/24** and **server_last_ip** is set to **99**, the last client IP address will be 192.168.1.80.

The default is from **80**.

9. (Optional) Set the port that the OpenVPN server will use:

```
(config vpn openvpn server name)> port port
(config vpn openvpn server name)>
```

The default is **1194**.

10. Determine the method of certificate management:

- a. To allow the server to manage certificates:

```
(config vpn openvpn server name)> autogenerate true
(config vpn openvpn server name)>
```

- b. To create certificates externally and add them to the server

```
(config vpn openvpn server name)> autogenerate false
(config vpn openvpn server name)>
```

The default setting is **false**.

- c. If **autogenerate** is set to false:

- i. Set the authentication type:

```
(config vpn openvpn server name)> authentication value
(config vpn openvpn server name)>
```

where *value* is one of:

- **cert**: Uses only certificates for client authentication. Each client requires a public and private key.
 - **passwd**: Uses a username and password for client authentication. You must create an OpenVPN authentication group and user. See [Configure an OpenVPN Authentication Group and User](#) for instructions.
 - **cert_passwd**: Uses both certificates and a username and password for client authentication. Each client requires a public and private key, and you must create an OpenVPN authentication group and user. See [Configure an OpenVPN Authentication Group and User](#) for instructions.
- ii. Paste the contents of the CA certificate (usually in a ca.crt file) into the value of the **cacert** parameter:

```
(config vpn openvpn server name)> cacert value
(config vpn openvpn server name)>
```

- iii. Paste the contents of the public key (for example, server.crt) into the value of the **server_cert** parameter:

```
(config vpn openvpn server name)> server_cert value
(config vpn openvpn server name)>
```

- iv. Paste the contents of the private key (for example, server.key) into the value of the **server_key** parameter:

```
(config vpn openvpn server name)> server_key value
(config vpn openvpn server name)>
```

- v. Paste the contents of the Diffie Hellman key (usually in dh2048.pem) into the value of the **diffie** parameter:

```
(config vpn openvpn server name)> diffie value
(config vpn openvpn server name)>
```

11. (Optional) Set the access control list to restrict access to the OpenVPN server:

- To limit access to specified IPv4 addresses and networks:

```
(config vpn openvpn server name)> add acl address end value
(config vpn openvpn server name)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- **any**: No limit to IPv4 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:

```
(config vpn openvpn server name)> add acl address6 end value
(config vpn openvpn server name)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- **any**: No limit to IPv6 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:

```
(config vpn openvpn server name)> add acl interface end value
(config vpn openvpn server name)>
```

Where *value* is an interface defined on your device.

Display a list of available interfaces:

Use **... network interface ?** to display interface information:

```
(config vpn openvpn server name)> ... network interface ?
```

```
Interfaces
```

```
Additional Configuration
```

```
-----
defaultip           Default IP
defaultlinklocal    Default Link-local IP
lan1                LAN1
loopback            Loopback
wan1                WAN1
wwan1               WWAN1
wwan2               WWAN2
```

```
(config vpn openvpn server name)>
```

Repeat this step to list additional interfaces.

- To limit access based on firewall zones:

```
(config vpn openvpn server name)> add acl zone end value
```

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... **firewall zone ?** at the config prompt:

```
(config vpn openvpn server name)> ... firewall zone ?
```

```
Zones: A list of groups of network interfaces that can be
referred to by packet
filtering rules and access control lists.
```

```
Additional Configuration
```

```
-----
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

```
(config vpn openvpn server name)>
```

Repeat this step to list additional firewall zones.

12. (Optional) Set additional OpenVPN parameters.
 - a. Enable the use of additional OpenVPN parameters:

```
(config vpn openvpn server name)> advanced_options enable true
(config vpn openvpn server name)>
```

- b. Configure whether the additional OpenVPN parameters should override default options:

```
(config vpn openvpn server name)> advanced_options override true
(config vpn openvpn server name)>
```

- c. Set the additional OpenVPN parameters:

```
(config vpn openvpn server name)> extra parameters
(config vpn openvpn server name)>
```

13. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

14. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure an OpenVPN Authentication Group and User

If username and password authentication is used for the OpenVPN server, you must create an OpenVPN authentication group and user.


See [Configure an OpenVPN server](#) for information about configuring an OpenVPN server to use username and password authentication. See [TX64 user authentication](#) for more information about creating authentication groups and users.

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

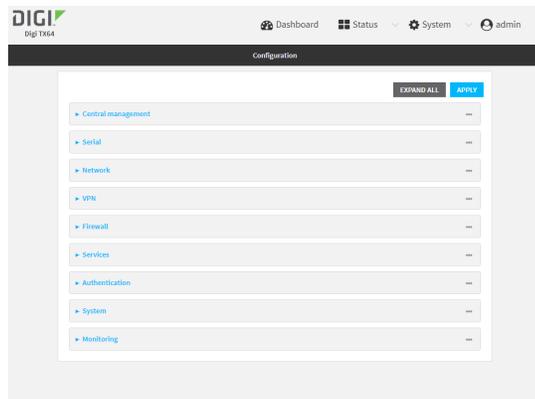


- 3. Add an OpenVPN authentication group:
 - a. Click **Authentication > Groups**.
 - b. For **Add Group**, type a name for the group (for example, **OpenVPN_Group**) and click **+**.

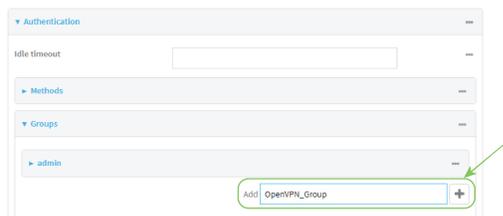


The new authentication group configuration is displayed.

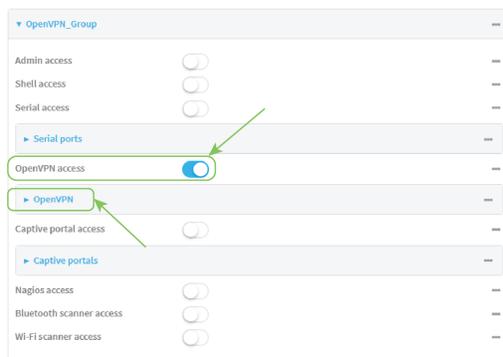


- c. Click **OpenVPN access** to enable OpenVPN access rights for users of this group.
 - d. Click to expand the **OpenVPN** node.
 - e. Click **+** to add a tunnel.

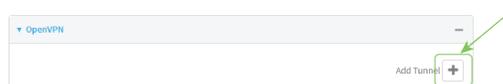


- f. For **Tunnel**, select an OpenVPN tunnel to which users of this group will have access.

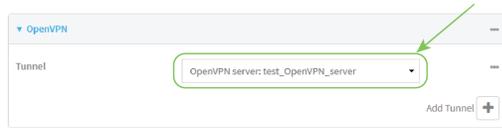


- g. Repeat to add additional OpenVPN tunnels.
4. Add an OpenVPN authentication user:
 - a. Click **Authentication > Users**.
 - b. For **Add**, type a name for the user (for example, **OpenVPN_User**) and click **+**.

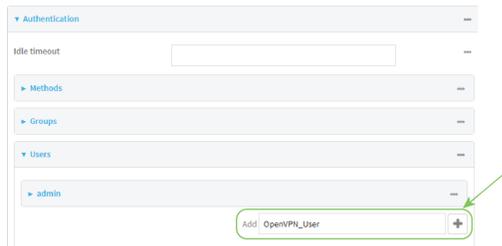


- c. Type a password for the user.
This password is used for local authentication of the user. You can also configure the user to use RADIUS or TACACS+ authentication by configuring authentication methods. See [User authentication methods](#) for information.
- d. Click to expand the **Groups** node.

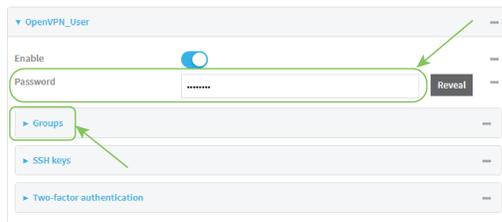

- e. Click **+** to add a group to the user.

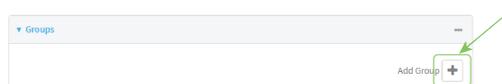

- f. Select a **Group** with **OpenVPN access** enabled.

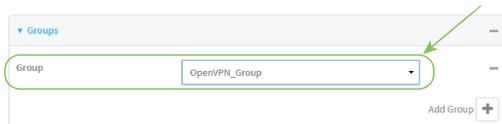

5. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Use the **add auth group** command to add a new authentication. For example, to add a group named **OpenVPN_Group**:

```
(config)> add auth group OpenVPN_Group
(config auth group OpenVPN_Group)>
```

4. Enable OpenVPN access rights for users of this group:

```
(config auth group OpenVPN_Group)> acl openvpn enable true
```

5. Add an OpenVPN tunnel to which users of this group will have access:

- a. Determine available tunnels:

```
(config auth group OpenVPN_Group)> .. .. .. vpn openvpn server ?
```

```
Servers: A list of openvpn servers
```

```
Additional Configuration
```

```
-----
```

```
OpenVPN_server1          OpenVPN server
```

```
(config auth group OpenVPN_Group)>
```

- b. Add a tunnel:

```
(config auth group OpenVPN_Group)> add auth group test acl openvpn
tunnels end /vpn/openvpn/server/OpenVPN_server1
(config auth group OpenVPN_Group)>
```

6. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure an OpenVPN client by using an .ovpn file

Required configuration items

- Enable the OpenVPN client.
The OpenVPN client is enabled by default.
- The firewall zone to be used by the OpenVPN client.

Additional configuration items

- The route metric for the OpenVPN client.
- The login credentials for the OpenVPN client, if configured on the OpenVPN server.


See [Configure active recovery for OpenVPN](#) for information about OpenVPN active recovery.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

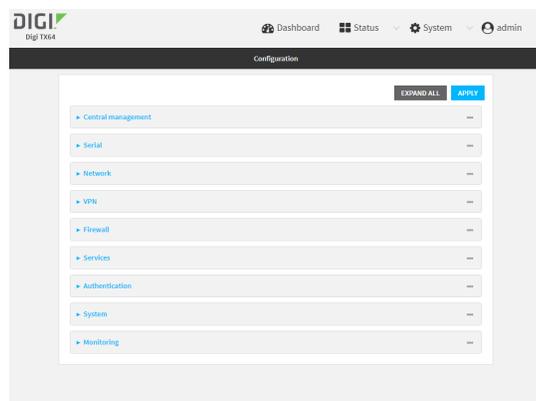

3. Click **VPN > OpenVPN > Clients**.
4. For **Add**, type a name for the OpenVPN client and click **+**.



The new OpenVPN client configuration is displayed.

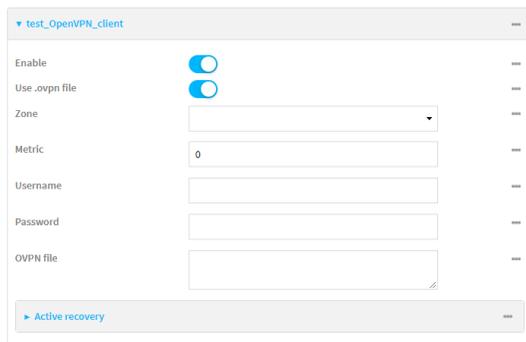

5. The OpenVPN client is enabled by default. To disable, click **Enable**.
6. The default behavior is to use an OVPN file for client configuration. To disable this behavior and configure the client manually, click **Use .ovpn file** to disable. If **Use .ovpn file** is disabled, see [Configure an OpenVPN client without using an .ovpn file](#) for configuration information.
7. For **Zone**, select the firewall zone for the OpenVPN client.
8. (Optional) Select the **Metric** for the OpenVPN client. If multiple active routes match a destination, the route with the lowest metric will be used.
9. (Optional) For **Username** and **Password**, type the login credentials as configured on the OpenVPN server.
10. For **OVPN file**, paste the content of the client.ovpn file.
11. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights. Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. At the config prompt, type:

```
(config)> add vpn openvpn client name
(config vpn openvpn client name)>
```

where *name* is the name of the OpenVPN server.

The OpenVPN client is enabled by default. To disable the client, type:

```
(config vpn openvpn client name)> enable false
(config vpn openvpn client name)>
```

4. Set the firewall zone for the OpenVPN client:

```
(config vpn openvpn client name)> zone value
(config vpn openvpn client name)>
```

To view a list of available zones:

```
(config vpn openvpn client name)> zone ?
```

Zone: The zone for the openvpn client interface.

Format:

```
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

Current value:

```
(config vpn openvpn client name)>
```

5. (Optional) Set the route metric for the OpenVPN server. If multiple active routes match a destination, the route with the lowest metric will be used.

```
(config vpn openvpn client name)> metric value
(config vpn openvpn client name)>
```

where *value* is an interger between **0** and **65535**. The default is **0**.

6. (Optional) Set the login credentials as configured on the OpenVPN server:

```
(config vpn openvpn client name)> username value
(config vpn openvpn client name)> password value
(config vpn openvpn client name)>
```

7. Paste the content of the client.ovpn file into the value of the **config_file** parameter:

```
(config vpn openvpn client name)> config_file value
(config vpn openvpn client name)>
```

8. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

9. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure an OpenVPN client without using an .ovpn file

Required configuration items

- Enable the OpenVPN client.
The OpenVPN client is enabled by default.
- The mode used by the OpenVPN server, either routing (TUN), or bridging (TAP).
- The firewall zone to be used by the OpenVPN client.
- The IP address of the OpenVPN server.
- Certificates and keys:
 - The **CA certificate** (usually in a ca.crt file).
 - The **Public key** (for example, client.crt)
 - The **Private key** (for example, client.key).

Additional configuration items

- The route metric for the OpenVPN client.
- The login credentials for the OpenVPN client, if configured on the OpenVPN server.
- Additional OpenVPN parameters.


See [Configure active recovery for OpenVPN](#) for information about OpenVPN active recovery.

≡ WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

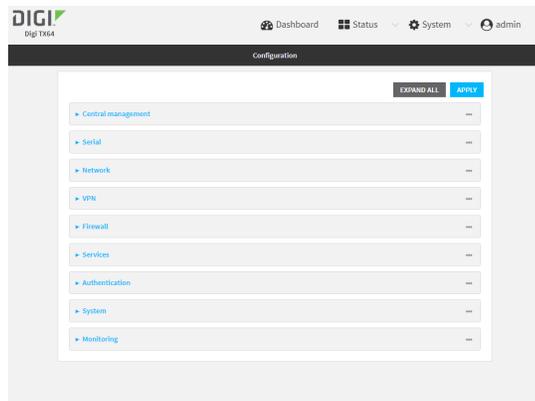

3. Click **VPN > OpenVPN > Clients**.
4. For **Add**, type a name for the OpenVPN client and click **+**.

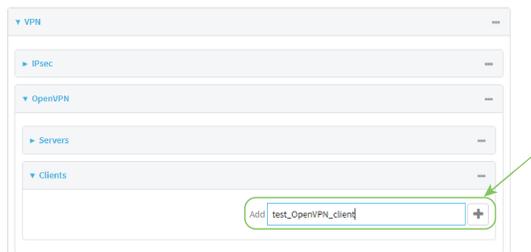

The new OpenVPN client configuration is displayed.

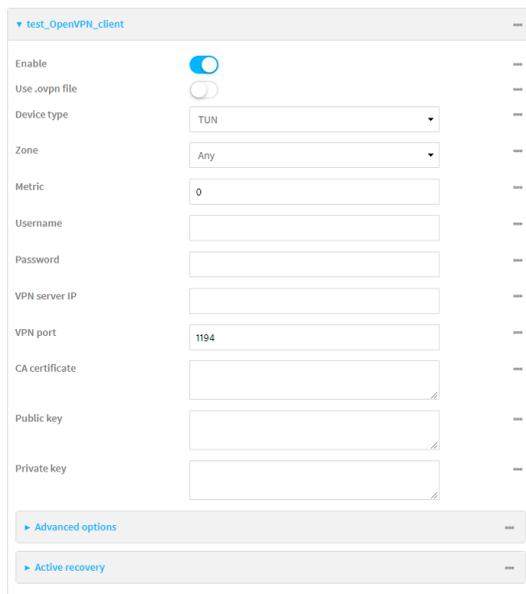

5. The OpenVPN client is enabled by default. To disable, click **Enable**.
6. The default behavior is to use an OVPN file for client configuration. To disable this behavior and configure the client manually, click **Use .ovpn file** to disable.
7. For **Device type**, select the mode used by the OpenVPN server, either **TUN** or **TAP**.

8. For **Zone**, select the firewall zone for the OpenVPN client.
9. (Optional) Select the **Metric** for the OpenVPN client. If multiple active routes match a destination, the route with the lowest metric will be used.
10. (Optional) For **Username** and **Password**, type the login credentials as configured on the OpenVPN server.
11. For **VPN server IP**, type the IP address of the OpenVPN server.
12. (Optional) Set the **VPN port** used by the OpenVPN server. The default is **1194**.
13. Paste the contents of the **CA certificate** (usually in a ca.crt file), the **Public key** (for example, client.crt), and the **Private key** (for example, client.key) into their respective fields. The contents will be hidden when the configuration is saved.
14. (Optional) Click to expand **Advanced Options** to manually set additional OpenVPN parameters.
 - a. Click **Enable** to enable the use of additional OpenVPN parameters.
 - b. Click **Override** if the additional OpenVPN parameters should override default options.
 - c. For **OpenVPN parameters**, type the additional OpenVPN parameters. For example, to override the configuration by using a configuration file, enter **--config filename**, for example, **--config /etc/config/openvpn_config**.
15. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. At the config prompt, type:

```
(config)> add vpn openvpn client name
(config vpn openvpn client name)>
```

where *name* is the name of the OpenVPN server.

The OpenVPN client is enabled by default. To disable the client, type:

```
(config vpn openvpn client name)> enable false
(config vpn openvpn client name)>
```

4. The default behavior is to use an OVPN file for client configuration. To disable this behavior and configure the client manually:

```
(config vpn openvpn client name)> use_file false
(config vpn openvpn client name)>
```

5. Set the mode used by the OpenVPN server:

```
(config vpn openvpn client name)> device_type value
(config vpn openvpn client name)>
```

where *value* is either **tun** or **tap**. The default is **tun**.

6. Set the firewall zone for the OpenVPN client:

```
(config vpn openvpn client name)> zone value
(config vpn openvpn client name)>
```

To view a list of available zones:

```
(config vpn openvpn client name)> zone ?
```

Zone: The zone for the openvpn client interface.

Format:

```
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

Current value:

```
(config vpn openvpn client name)>
```

7. (Optional) Set the route metric for the OpenVPN server. If multiple active routes match a destination, the route with the lowest metric will be used.

```
(config vpn openvpn client name)> metric value
(config vpn openvpn client name)>
```

where *value* is an interger between **0** and **65535**. The default is **0**.

8. (Optional) Set the login credentials as configured on the OpenVPN server:

```
(config vpn openvpn client name)> username value
(config vpn openvpn client name)> password value
(config vpn openvpn client name)>
```

9. Set the IP address of the OpenVPN server:

```
(config vpn openvpn client name)> server ip_address
(config vpn openvpn client name)>
```

10. (Optional) Set the port used by the OpenVPN server:

```
(config vpn openvpn client name)> port port
(config vpn openvpn client name)>
```

The default is **1194**.

11. Paste the contents of the CA certificate (usually in a ca.crt file) into the value of the **cacert** parameter:

```
(config vpn openvpn client name)> cacert value
(config vpn openvpn client name)>
```

12. Paste the contents of the public key (for example, client.crt) into the value of the **public_cert** parameter:

```
(config vpn openvpn client name)> public_cert value
(config vpn openvpn client name)>
```

13. Paste the contents of the private key (for example, client.key) into the value of the **private_key** parameter:

```
(config vpn openvpn client name)> private_key value
(config vpn openvpn client name)>
```

14. (Optional) Set additional OpenVPN parameters.

- a. Enable the use of additional OpenVPN parameters:

```
(config vpn openvpn client name)> advanced_options enable true
(config vpn openvpn client name)>
```

- b. Configure whether the additional OpenVPN parameters should override default options:

```
(config vpn openvpn client name)> advanced_options override true
(config vpn openvpn client name)>
```

- c. Set the additional OpenVPN parameters:

```
(config vpn openvpn client name)> advanced_options extra parameters
(config vpn openvpn client name)>
```

15. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

16. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure active recovery for OpenVPN

You can configure the TX64 device to regularly probe OpenVPN client connections to determine if the connection has failed and take remedial action.

Required configuration items

- A valid OpenVPN client configuration. See [Configure an OpenVPN client by using an .ovpn file](#) or [Configure an OpenVPN client without using an .ovpn file](#) for configuration instructions.
- Enable OpenVPN active recovery.
- The behavior of the TX64 device upon OpenVPN failure: either
 - Restart the OpenVPN interface
 - Reboot the device.

Additional configuration items

- The interval between connectivity tests.
- Whether the interface should be considered to have failed if one of the test targets fails, or all of the test targets fail.
- The number of probe attempts before the OpenVPN connection is considered to have failed.
- The amount of time that the device should wait for a response to a probe attempt before considering it to have failed.


To configure the TX64 device to regularly probe the OpenVPN connection:

≡ WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

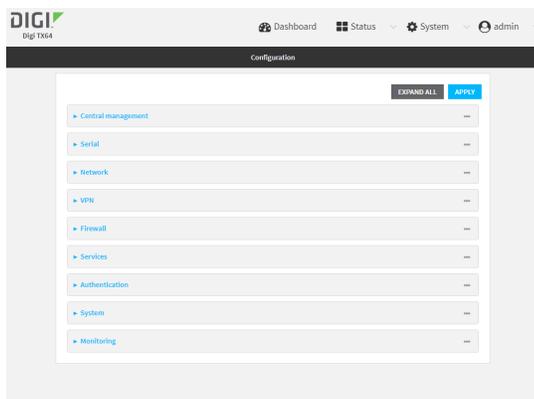

3. Click **VPN > OpenVPN > Clients**.
4. Create a new OpenVPN client or select an existing one:
 - To create a new OpenVPN client, see [Configure an OpenVPN client by using an .ovpn file](#) or [Configure an OpenVPN client without using an .ovpn file](#).
 - To edit an existing OpenVPN client, click to expand the appropriate client.
5. After creating or selecting the OpenVPN client, click **Active recovery**.

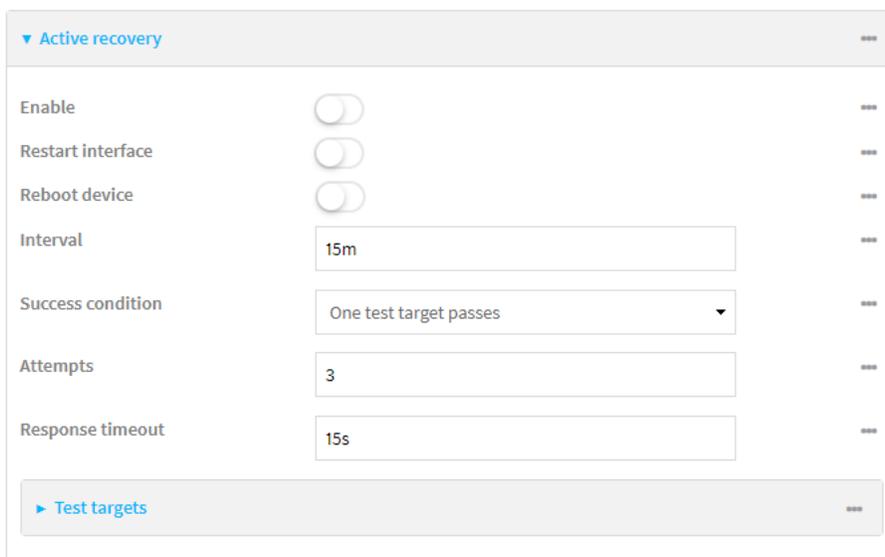

6. **Enable** active recovery.
7. For **Restart interface**, enable to configure the device to restart the interface when its connection is considered to have failed. This is useful for interfaces that may regain connectivity after restarting, such as a cellular modem.
8. For **Reboot device**, enable to instruct the device to reboot when the WAN connection is considered to have failed.
9. Change the **Interval** between connectivity tests.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.

For example, to set **Interval** to ten minutes, enter **10m** or **600s**.

The default is 15 minutes.


10. For **Success condition**, determine whether the interface should fail over based on the failure of one of the test targets, or all of the test targets.
11. For **Attempts**, type the number of probe attempts before the WAN is considered to have failed.
12. For **Response timeout**, type the amount of time that the device should wait for a response to a probe attempt before considering it to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.

For example, to set **Response timeout** to ten minutes, enter **10m** or **600s**.

The default is 15 seconds.

13. Add a test target:
 - a. Click to expand **Test targets**.

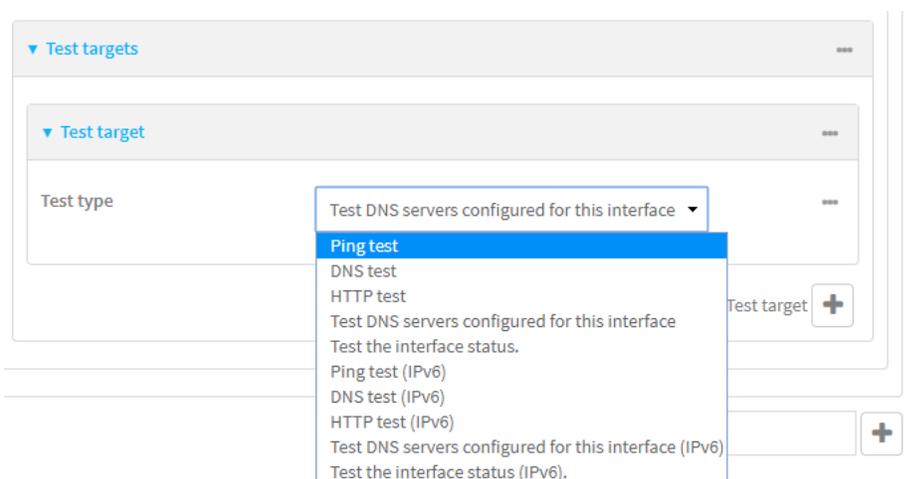

- b. For **Add Test target**, click **+**.
 - c. Select the **Test type**:
 - **Ping test** or **Ping test (IPv6)**: Tests connectivity by sending an ICMP echo request to the hostname or IP address specified in **Ping host**. You can also optionally change the number of bytes in the **Ping payload size**.
 - **DNS test** or **DNS test (IPv6)**: Tests connectivity by sending a DNS query to the specified **DNS server**.
 - **HTTP test** or **HTTP test (IPv6)**: Tests connectivity by sending an HTTP or HTTPS GET request to the URL specified in **Web servers**. The URL should take the format of **http[s]://hostname/[path]**.
 - **Test DNS servers configured for this interface** or **Test DNS servers configured for this interface (IPv6)**: Tests connectivity by sending a DNS query to the DNS servers configured for this interface.
 - **Test the interface status** or **Test the interface status IPv6**: The interface is considered to be down based on:

- **Down time:** The amount of time that the interface can be down before this test is considered to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.

For example, to set **Down time** to ten minutes, enter **10m** or **600s**.

The default is 60 seconds.

- **Initial connection time:** The amount of time to wait for an initial connection to the interface before this test is considered to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.

For example, to set **Initial connection time** to ten minutes, enter **10m** or **600s**.

The default is 60 seconds.

14. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:


```
> config
(config)>
```
3. Create a new OpenVPN client, or edit an existing one:
 - To create a new OpenVPN client, see [Configure an OpenVPN client by using an .ovpn file](#) or [Configure an OpenVPN client without using an .ovpn file](#).
 - To edit an existing OpenVPN client, change to the OpenVPN client's node in the configuration schema. For example, for an OpenVPN client named **openvpn_client1**, change to the **openvpn_client1** node in the configuration schema:


```
(config)> vpn openvpn client openvpn_client1
(config vpn openvpn client openvpn_client1)>
```

4. Enable active recovery:

```
(config vpn openvpn client openvpn_client1)> connection_monitor enable true
(config vpn openvpn client openvpn_client1)>
```

- To configure the device to restart the interface when its connection is considered to have failed:

```
(config vpn openvpn client openvpn_client1)> connection_monitor restart
true
(config vpn openvpn client openvpn_client1)>
```

This is useful for interfaces that may regain connectivity after restarting, such as a cellular modem.

- To configure the device to reboot when the interface is considered to have failed:

```
(config vpn openvpn client openvpn_client1)> connection_monitor reboot
enable
(config vpn openvpn client openvpn_client1)>
```

- Set the **Interval** between connectivity tests:

```
(config vpn openvpn client openvpn_client1)> connection_monitor interval
value
(config vpn openvpn client openvpn_client1)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **interval** to ten minutes, enter either **10m** or **600s**:

```
(config vpn openvpn client openvpn_client1)> connection_monitor interval
600s
(config vpn openvpn client openvpn_client1)>
```

The default is 15 minutes.

- Determine whether the interface should fail over based on the failure of one of the test targets, or all of the test targets:

```
(config vpn openvpn client openvpn_client1)> connection_monitor success_
condition value
(config vpn openvpn client openvpn_client1)>
```

Where *value* is either **one** or **all**.

- Set the number of probe attempts before the WAN is considered to have failed:

```
(config vpn openvpn client openvpn_client1)> connection_monitor attempts
num
(config vpn openvpn client openvpn_client1)>
```

The default is **3**.

- Set the amount of time that the device should wait for a response to a probe attempt before considering it to have failed:

```
(config vpn openvpn client openvpn_client1)> connection_monitor timeout
value
(config vpn openvpn client openvpn_client1)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **timeout** to ten minutes, enter either **10m** or **600s**:

```
(config vpn openvpn client openvpn_client1)> connection_monitor interval
600s
(config vpn openvpn client openvpn_client1)>
```

The default is 15 seconds.

11. Configure test targets:

a. Add a test target:

```
(config vpn openvpn client openvpn_client1)> add connection_monitor
target end
(config vpn openvpn client openvpn_client1 connection_monitor target 0)>
```

b. Set the test type:

```
(config vpn openvpn client openvpn_client1 connection_monitor target 0)>
test value
(config vpn openvpn client openvpn_client1 connection_monitor target 0)>
```

where *value* is one of:

- **ping** (IPv4) or **ping6** (IPv6): Tests connectivity by sending an ICMP echo request to a specified hostname or IP address.

- Specify the hostname or IP address by using **ping_host** or **ping_host6**:

```
(config vpn openvpn client openvpn_client1 connection_monitor
target 0)> ping_host host
(config vpn openvpn client openvpn_client1 connection_monitor
target 0)>
```

- (Optional) Set the size, in bytes, of the ping packet by using **ping_size** or **ping_size6**:

```
(config vpn openvpn client openvpn_client1 connection_monitor
target 0)> ping_size [num]
(config vpn openvpn client openvpn_client1 connection_monitor
target 0)>
```

- **dns** (IPv4) or **dns6** (IPv6): Tests connectivity by sending a DNS query to the specified DNS server.

- Specify the DNS server. Allowed value is the IP address of the DNS server.

```
(config vpn openvpn client openvpn_client1 connection_monitor
target 0)> dns_server ip_address
(config vpn openvpn client openvpn_client1 connection_monitor
target 0)>
```

- **dns_configured** (IPv4) or **dns_configured6** (IPv6): Tests connectivity by sending a DNS query to the DNS servers configured for this interface.

- **http** (IPv4) or **http6** (IPv6): Tests connectivity by sending an HTTP or HTTPS GET request to the specified URL.

- Specify the url. Allowed value uses the format **http[s]://hostname/[path]**.

```
(config vpn openvpn client openvpn_client1 connection_monitor
target 0)> http_url url
(config vpn openvpn client openvpn_client1 connection_monitor
target 0)>
```

- **interface_up** (IPv4) or **interface_up6** (IPv6): : The interface is considered to be down based on the interfaces down time, and the amount of time an initial connection to the interface takes before this test is considered to have failed.

- (Optional) Set the amount of time that the interface can be down before this test is considered to have failed:

```
(config vpn openvpn client openvpn_client1 connection_monitor
target 0)> interface_down_time value
(config vpn openvpn client openvpn_client1 connection_monitor
target 0)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **interface_down_time** to ten minutes, enter either **10m** or **600s**:

```
(config openvpn client openvpn_client1 connection_monitor
target 0)> interface_down_time 600s
(config openvpn client openvpn_client1 connection_monitor
target 0)>
```

The default is 60 seconds.

- (Optional) Set the amount of time to wait for an initial connection to the interface before this test is considered to have failed:

```
(config vpn openvpn client openvpn_client1 connection_monitor
target 0)> interface_timeout value
(config vpn openvpn client openvpn_client1 connection_monitor
target 0)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **interface_timeout** to ten minutes, enter either **10m** or **600s**:

```
(config network interface my_wwan ipv4 connection_monitor
target 0)> interface_timeout 600s
(config network interface my_wwan ipv4 connection_monitor
target 0)>
```

The default is 60 seconds.

12. Save the configuration and apply the change:

```
(config openvpn client openvpn_client1 connection_monitor target 0)> save
Configuration saved.
>
```

13. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show OpenVPN server status and statistics

You can view status and statistics for OpenVPN servers from either the web interface or the command line:

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the menu, select **Status > OpenVPN > Servers**.
The **OpenVPN Servers** page appears.
3. To view configuration details about an OpenVPN server, click the  (configuration) icon in the upper right of the OpenVPN server's status pane.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. To display details about all configured OpenVPN servers, type the following at the prompt:

```
> show openvpn server all
```

Server	Enable	Type	Zone	Address	Port
OpenVPN_server1	true	tun	internal	192.168.30.1/24	1194
OpenVPN_server2	false	tun	internal	192.168.40.1/24	1194

```
>
```

3. To display details about a specific server:

```
> show openvpn server name OpenVPN_server1
```

```
Server           : OpenVPN_server1
Enable           : true
Type             : tun
Zone             : internal
Address          : 192.168.30.1/24
Port             : 1194
Use File         : true
```

```

Metric                : 0
Protocol              : udp
First IP              : 80
Last IP               : 99

```

>

4. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show OpenVPN client status and statistics

You can view status and statistics for OpenVPN clients from either web interface or the command line:

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the menu, select **Status > OpenVPN > Clients**.
The **OpenVPN Clients** page appears.
3. To view configuration details about an OpenVPN client, click the  (configuration) icon in the upper right of the OpenVPN client's status pane.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. To display details about all configured OpenVPN clients, type the following at the prompt:

```
> show openvpn client all
```

Client	Enable	Status	Username	Use File	Zone
OpenVPN_Client1	true	connected		true	internal
OpenVPN_Client2	true	pending		true	internal

>

3. To display details about a specific server:

```
> show openvpn client name OpenVPN_client1
```
4. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Generic Routing Encapsulation (GRE)

Generic Routing Encapsulation (GRE) is an IP packet encapsulation protocol that allow for networks and routes to be advertized from one network device to another. You can use GRE to encapsulate a wide variety of network layer protocols inside virtual point-to-point links over an IP network.

Configuring a GRE tunnel

Configuring a GRE tunnel involves the following items:

Required configuration items

- A GRE loopback endpoint interface.
- GRE tunnel configuration:
 - Enable the GRE tunnel.
The GRE tunnels are enabled by default.
 - The local endpoint interface.
 - The IP address of the remote device/peer.

Additional configuration items

- A GRE key.
- Enable the device to respond to keepalive packets.


Task One: Create a GRE loopback endpoint interface

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

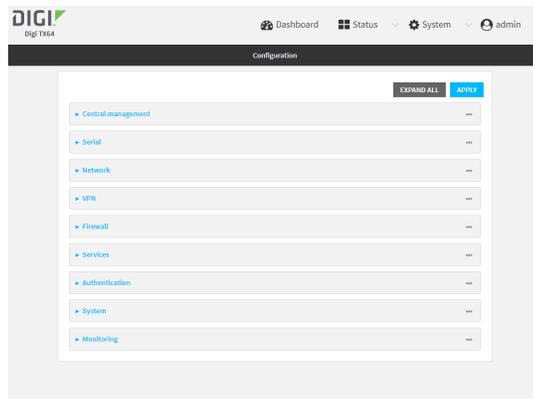

3. Click **Network > Interfaces**.
4. For **Add Interface**, type a name for the GRE loopback endpoint interface and click **+**.
5. **Enable** the interface.
New interfaces are enabled by default. To disable, or to enable if it has been disabled, click **Enable**.
6. For **Interface type**, select **Ethernet**.
7. For **Zone**, select **Internal**.
8. For **Device**, select **Ethernet: Loopback**.
9. Click to expand **IPv4**.
10. For **Address**, enter the IP address and subnet mask of the local GRE endpoint, for example **10.10.1.1/24**.
11. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add the GRE endpoint interface. For example, to add an interface named **gre_endpoint**:

```
(config)> add network interface gre_interface
(config network interface gre_interface)>
```

4. Set the interface zone to **internal**:

```
(config network interface gre_interface)> zone internal
(config network interface gre_interface)>
```

5. Set the interface device to **loopback**:

```
(config network interface gre_interface)> device /network/device/loopback
(config network interface gre_interface)>
```

6. Set the IP address and subnet mask of the local GRE endpoint. For example, to set the local GRE endpoint's IP address and subnet mask to **10.10.1.1/24**:

```
(config network interface gre_interface)> ipv4 address 10.10.1.1/24
(config network interface gre_interface)>
```

7. Save the configuration and apply the change:

```
(config network interface gre_interface)> save
Configuration saved.
>
```


8. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.


Task Two: Configure the GRE tunnel

≡ WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

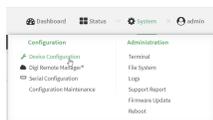

The **Configuration** window is displayed.

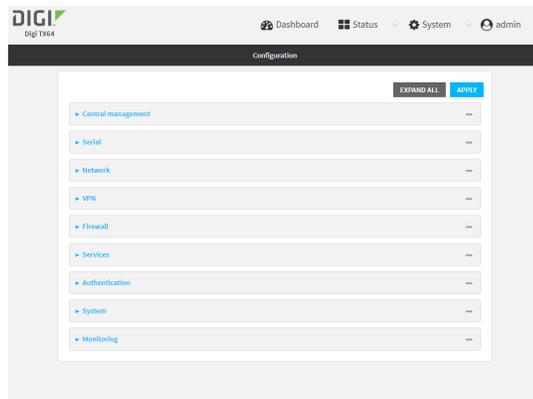

3. Click **VPN > IP Tunnels**.
4. For **Add IP tunnel**, type a name for the GRE tunnel and click **+**.
5. **Enable** the tunnel.
New tunnels are enabled by default. To disable, or to enable if it has been disabled, click **Enable**.
6. For **Local endpoint**, select the GRE endpoint interface created in [Task One](#).
7. For **Remote endpoint**, type the IP address of the GRE endpoint on the remote peer.
8. (Optional) For **Key**, enter a key that will be inserted in GRE packets created by this tunnel. It must match the key set by the remote endpoint. Allowed value is an interger between 0 and 4294967295, or an IP address.
9. (Optional) **Enable keepalive reply** to enable the device to reply to Cisco GRE keepalive packets.
10. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add the GRE endpoint tunnel. For example, to add a tunnel named **gre_example**:

```
(config)> add vpn iptunnel gre_example
(config vpn iptunnel gre_example)>
```

GRE tunnels are enabled by default. To disable:

```
(config vpn iptunnel gre_example)> enable false
(config vpn iptunnel gre_example)>
```

4. Set the local endpoint to the GRE endpoint interface created in [Task One](#), for example:

```
(config vpn iptunnel gre_example)> local /network/interface/gre_endpoint
(config vpn iptunnel gre_example)>
```

To view configured interfaces and proper syntax:

```
(config vpn iptunnel gre_example)> local ?
```

Local endpoint: The local network interface to connect to peer device.

Format:

```
/network/interface/aview
/network/interface/defaultip
/network/interface/defaultlinklocal
/network/interface/gre_endpoint
/network/interface/lan1
/network/interface/loopback
/network/interface/wan1
/network/interface/wwan1
/network/interface/wwan2
```

Current value:

```
(config vpn iptunnel gre_example)>
```

5. Set the IP address of the GRE endpoint on the remote peer:

```
(config vpn iptunnel gre_example)> remote ip_address
(config vpn iptunnel gre_example)>
```

6. (Optional) Set a key that will be inserted in GRE packets created by this tunnel.

The key must match the key set by the remote endpoint.

```
(config vpn iptunnel gre_example)> key value
(config vpn iptunnel gre_example)>
```

where value is an interger between 0 and 4294967295, or an IP address.

7. (Optional) Enable the device to reply to Cisco GRE keepalive packets:

```
(config vpn iptunnel gre_example)> keepalive true
(config vpn iptunnel gre_example)>
```

8. Save the configuration and apply the change:

```
(config vpn iptunnel gre_example)> save  
Configuration saved.  
>
```

9. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show GRE tunnels

To view information about currently configured GRE tunnels:

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the menu, click **Status > IP tunnels**.
The **IP Tunnels** page appears.
3. To view configuration details about a GRE tunnel, click the  (configuration) icon in the upper right of the tunnel's status pane.

Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Use the **show vpn iptunnel** command:

```
(config)> show vpn iptunnel
gre_tunnel
  enable true
  keepalive false
  no key
  local /network/interface/gre_endpoint
  remote 172.168.1.2
  type gre
(config)>
```

4. Type **cancel** to exit configuration mode:

```
(config)> cancel
>
```

5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example: GRE tunnel over an IPsec tunnel

The TX64 device can be configured as an advertised set of routes through an IPsec tunnel. This allows you to leverage the dynamic route advertisement of GRE tunnels through a secured IPsec tunnel.

The example configuration provides instructions for configuring the TX64 device with a GRE tunnel through IPsec.



TX64-1 configuration tasks

1. Create an IPsec tunnel named **ipsec_gre1** with:
 - A pre-shared key.
 - **Remote endpoint** set to the public IP address of the TX64-2 device.
 - A policy with:
 - **Local network** set to the IP address and subnet of the local GRE tunnel, **172.30.0.1/32**.
 - **Remote network** set to the IP address and subnet of the remote GRE tunnel, **172.30.0.2/32**.
2. Create an IPsec endpoint interface named **ipsec_endpoint1**:
 - a. **Zone** set to **Internal**.
 - b. **Device** set to **Ethernet: Loopback**.
 - c. IPv4 Address set to the IP address of the local GRE tunnel, **172.30.0.1/32**.
3. Create a GRE tunnel named **gre_tunnel1**:
 - a. **Local endpoint** set to the IPsec endpoint interface, **Interface: ipsec_endpoint1**.
 - b. Remote endpoint set to the IP address of the GRE tunnel on TX64-2, **172.30.0.2**.
4. Create an interface named **gre_interface1** and add it to the GRE tunnel:
 - a. **Zone** set to **Internal**.
 - b. **Device** set to **IP tunnel: gre_tunnel1**.
 - c. IPv4 Address set to a virtual IP address on the GRE tunnel, **172.31.0.1/30**.

TX64-2 configuration tasks

1. Create an IPsec tunnel named **ipsec_gre2** with:
 - The same pre-shared key as the **ipsec_gre1** tunnel on TX64-1.
 - **Remote endpoint** set to the public IP address of TX64-1.
 - A policy with:
 - **Local network** set to the IP address and subnet of the local GRE tunnel, **172.30.0.2/32**.
 - **Remote network** set to the IP address of the remote GRE tunnel, **172.30.0.1/32**.

2. Create an IPsec endpoint interface named **ipsec_endpoint2**:
 - a. **Zone** set to **Internal**.
 - b. **Device** set to **Ethernet: Loopback**.
 - c. IPv4 Address set to the IP address of the local GRE tunnel, **172.30.0.2/32**.
3. Create a GRE tunnel named **gre_tunnel2**:
 - a. **Local endpoint** set to the IPsec endpoint interface, **Interface: ipsec_endpoint2**.
 - b. Remote endpoint set to the IP address of the GRE tunnel on TX64-1, **172.30.0.1**.
4. Create an interface named **gre_interface2** and add it to the GRE tunnel:
 - a. **Zone** set to **Internal**.
 - b. **Device** set to **IP tunnel: gre_tunnel2**.
 - c. IPv4 Address set to a virtual IP address on the GRE tunnel, **172.31.1.1/30**.

Configuration procedures

Configure the TX64-1 device


Task one: Create an IPsec tunnel

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

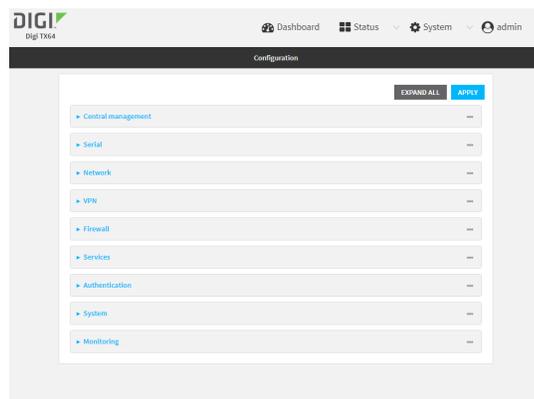

3. Click **VPN > IPsec > Tunnels**.

- For **Add IPsec Tunnel**, type **ipsec_gre1** and click **+**.



- Click to expand **Authentication**.
- For **Pre-shared key**, type **testkey**.




- Click to expand **Remote endpoint**.
- For **Hostname**, type public IP address of the TX64-2 device.



- Click to expand **Policies**.
- For **Add Policy**, click **+** to add a new policy.



- Click to expand **Local network**.
- For **Type**, select **Custom network**.
- For **Address**, type the IP address and subnet of the local GRE tunnel, **172.30.0.1/32**.
- For **Remote network**, type the IP address and subnet of the remote GRE tunnel, **172.30.0.2/32**.

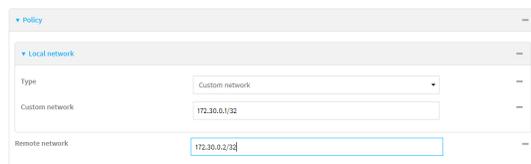

- Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add an IPsec tunnel named **ipsec_gre1**:

```
(config)> add vpn ipsec tunnel ipsec_gre1
(config vpn ipsec tunnel ipsec_gre1)>
```

4. Set the pre-shared key to **testkey**:

```
(config vpn ipsec tunnel ipsec_gre1)> auth secret testkey
(config vpn ipsec tunnel ipsec_gre1)>
```

5. Set the remote endpoint to public IP address of the TX64-2 device:

```
(config vpn ipsec tunnel ipsec_gre1)> remote hostname 192.168.101.1
(config vpn ipsec tunnel ipsec_gre1)>
```

6. Add a policy:

```
(config vpn ipsec tunnel ipsec_gre1)> add policy end
(config vpn ipsec tunnel ipsec_gre1 policy 0)>
```

7. Set the local network policy type to **custom**:

```
(config vpn ipsec tunnel ipsec_gre1 policy 0)> local type custom
(config vpn ipsec tunnel ipsec_gre1 policy 0)>
```

8. Set the local network address to the IP address and subnet of the local GRE tunnel, **172.30.0.1/32**:

```
(config vpn ipsec tunnel ipsec_gre1 policy 0)> local custom 172.30.0.1/32
(config vpn ipsec tunnel ipsec_gre1 policy 0)>
```

9. Set the remote network address to the IP address and subnet of the remote GRE tunnel, **172.30.0.2/32**:

```
(config vpn ipsec tunnel ipsec_gre1 policy 0)> remote network 172.30.0.2/32
(config vpn ipsec tunnel ipsec_gre1 policy 0)>
```

10. Save the configuration and apply the change:

```
(config ipsec tunnel ipsec_gre1 policy 0)> save
Configuration saved.
>
```

Task two: Create an IPsec endpoint interface

WebUI


1. Click **Network > Interface**.
2. For **Add Interface**, type **ipsec_endpoint1** and click **+**.



3. For **Zone**, select **Internal**.
4. For **Device**, select **Ethernet: loopback**.



5. Click to expand **IPv4**.
6. For **Address**, type the IP address of the local GRE tunnel, **172.30.0.1/32**.

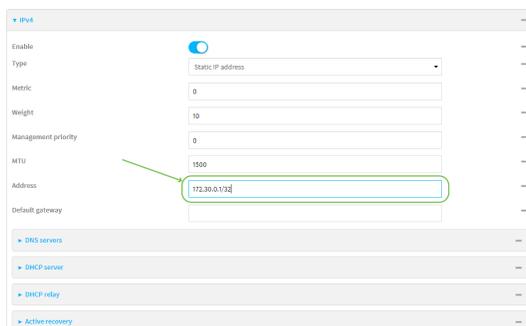

7. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

2. Add an interface named **ipsec_endpoint1**:

```
(config)> add network interface ipsec_endpoint1
(config network interface ipsec_endpoint1)>
```

3. Set the zone to **internal**:

```
(config network interface ipsec_endpoint1)> zone internal
(config network interface ipsec_endpoint1)>
```

4. Set the device to **/network/device/loopback**:

```
(config network interface ipsec_endpoint1)> device /network/device/loopback
(config network interface ipsec_endpoint1)>
```

5. Set the IPv4 address to the IP address of the local GRE tunnel, **172.30.0.1/32**:

```
(config network interface ipsec_endpoint1)> ipv4 address 172.30.0.1/32
(config network interface ipsec_endpoint1)>
```

6. Save the configuration and apply the change:

```
(config vpn ipsec tunnel ipsec_endpoint1 policy 0)> save
Configuration saved.
>
```

Task three: Create a GRE tunnel

WebUI

1. Click **VPN > IP Tunnels**.
2. For **Add IP Tunnel**, type **gre_tunnel1** and click **+**.



3. For **Local endpoint**, select the IPsec endpoint interface created in [Task two](#) (**Interface: ipsec_endpoint1**).

- For **Remote endpoint**, type the IP address of the GRE tunnel on TX64-2, **172.30.0.2**.

The screenshot shows a configuration page for a GRE tunnel. The 'Remote endpoint' field is highlighted with a blue border and contains the IP address '172.30.0.2'. Other fields include 'Local endpoint' set to 'Interface: ipsec_endpoint', 'Mode' set to 'GRE', and 'Enable keepalive reply' set to 'off'.

- Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Add a GRE tunnel named **gre_tunnel1**:

```
(config)> add vpn iptunnel gre_tunnel1
(config vpn iptunnel gre_tunnel1)>
```

- Set the local endpoint to the IPsec endpoint interface created in [Task two](#) (**/network/interface/ipsec_endpoint1**):

```
(config vpn iptunnel gre_tunnel1)> local /network/interface/ipsec_endpoint1
(config vpn iptunnel gre_tunnel1)>
```

- Set the remote endpoint to the IP address of the GRE tunnel on TX64-2, **172.30.0.2**:

```
(config vpn iptunnel gre_tunnel1)> remote 172.30.0.2
(config vpn iptunnel gre_tunnel1)>
```

- Save the configuration and apply the change:

```
(config vpn iptunnel gre_tunnel1)> save
Configuration saved.
>
```

Task four: Create an interface for the GRE tunnel device

WebUI


1. Click **Network > Interfaces**.
2. For **Add Interface**, type **gre_interface1** and click **+**.



3. For **Zone**, select **Internal**.
4. For **Device**, select the GRE tunnel created in [Task three](#) (**IP tunnel: gre_tunnel1**).



5. Click to expand **IPv4**.
6. For **Address**, type **172.31.0.1/30** for a virtual IP address on the GRE tunnel.

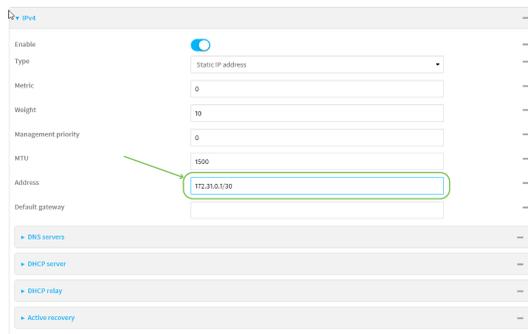

7. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

2. Add an interface named **gre_interface1**:

```
(config)> add network interface gre_interface1
(config network interface gre_interface1)>
```

3. Set the zone to **internal**:

```
(config network interface gre_interface1)> zone internal
(config network interface gre_interface1)>
```

4. Set the device to the GRE tunnel created in [Task three \(/vpn/iptunnel/gre_tunnel1\)](#):

```
(config network interface gre_interface1)> device /vpn/iptunnel/gre_tunnel1
(config network interface gre_interface1)>
```

5. Set **172.31.0.1/30** as the virtual IP address on the GRE tunnel:

```
(config network interface gre_interface1)> ipv4 address 172.31.0.1/30
(config network interface gre_interface1)>
```

6. Save the configuration and apply the change:

```
(config network interface gre_interface1)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the TX64-2 device


Task one: Create an IPsec tunnel

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

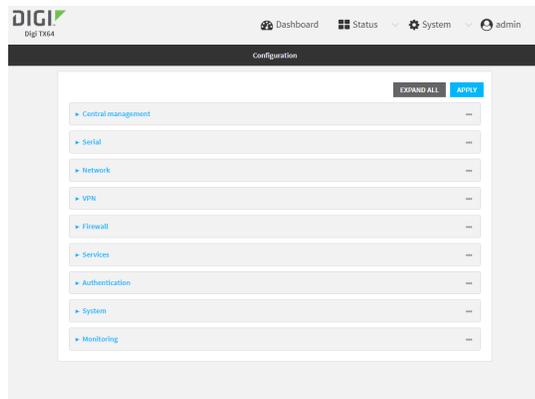


3. Click **VPN > IPsec > Tunnels**.
4. For **Add IPsec Tunnel**, type **ipsec_gre2** and click **+**.




5. Click to expand **Authentication**.
6. For **Pre-shared key**, type the same pre-shared key that was configured for the TX64-1 (**testkey**).

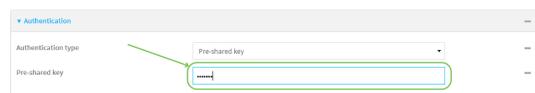

7. Click to expand **Remote endpoint**.
8. For **Hostname**, type public IP address of the TX64-1 device.

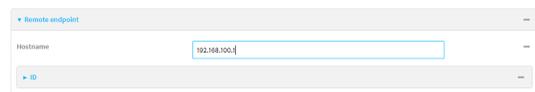

9. Click to expand **Policies**.
10. For **Add Policy**, click **+** to add a new policy.

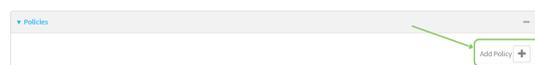

11. Click to expand **Local network**.
12. For **Type**, select **Custom network**.
13. For **Address**, type the IP address and subnet of the local GRE tunnel, **172.30.0.2/32**.
14. For **Remote network**, type the IP address and subnet of the remote GRE tunnel, **172.30.0.1/32**.

15. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add an IPsec tunnel named **ipsec_gre2**:

```
(config)> add vpn ipsec tunnel ipsec_gre2
(config vpn ipsec tunnel ipsec_gre2)>
```

4. Set the pre-shared key to the same pre-shared key that was configured for the TX64-1 (**testkey**):

```
(config vpn ipsec tunnel ipsec_gre2)> auth secret testkey
(config vpn ipsec tunnel ipsec_gre2)>
```

5. Set the remote endpoint to public IP address of the TX64-1 device:

```
(config vpn ipsec tunnel ipsec_gre2)> remote hostname 192.168.100.1
(config vpn ipsec tunnel ipsec_gre2)>
```

6. Add a policy:

```
(config vpn ipsec tunnel ipsec_gre2)> add policy end
(config vpn ipsec tunnel ipsec_gre2 policy 0)>
```

7. Set the local network policy type to **custom**:

```
(config vpn ipsec tunnel ipsec_gre2 policy 0)> local type custom
(config vpn ipsec tunnel ipsec_gre2 policy 0)>
```

- Set the local network address to the IP address and subnet of the local GRE tunnel,
172.30.0.2/32:

```
(config vpn ipsec tunnel ipsec_gre2 policy 0)> local custom 172.30.0.2/32
(config vpn ipsec tunnel ipsec_gre2 policy 0)>
```

- Set the remote network address to the IP address and subnet of the remote GRE tunnel,
172.30.0.1/32:

```
(config vpn ipsec tunnel ipsec_gre2 policy 0)> remote network 172.30.0.1/32
(config vpn ipsec tunnel ipsec_gre2 policy 0)>
```

- Save the configuration and apply the change:

```
(config vpn ipsec tunnel ipsec_gre2 policy 0)> save
Configuration saved.
>
```

Task two: Create an IPsec endpoint interface

WebUI

- Click **Network > Interfaces**.
- For **Add Interface**, type **ipsec_endpoint2** and click **+**.



- For **Zone**, select **Internal**.
- For **Device**, select **Ethernet: loopback**.



- Click to expand **IPv4**.

- For **Address**, type the IP address of the local GRE tunnel, **172.30.0.2/32**.

- Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.

Command line

- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Add an interface named **ipsec_endpoint2**:

```
(config)> add network interface ipsec_endpoint2
(config network interface ipsec_endpoint2)>
```

- Set the zone to **internal**:

```
(config network interface ipsec_endpoint2)> zone internal
(config network interface ipsec_endpoint2)>
```

- Set the device to **/network/device/loopback**:

```
(config network interface ipsec_endpoint2)> device /network/device/loopback
(config network interface ipsec_endpoint2)>
```

- Set the IPv4 address to the IP address of the local GRE tunnel, **172.30.0.2/32**:

```
(config network interface ipsec_endpoint2)> ipv4 address 172.30.0.2/32
(config network interface ipsec_endpoint2)>
```

- Save the configuration and apply the change:

```
(config vpn ipsec tunnel ipsec_endpoint2)> save
Configuration saved.
>
```


Task three: Create a GRE tunnel

WebUI

- Click **VPN > IP Tunnels**.
- For **Add IP Tunnel**, type **gre_tunnel2** and click **+**.



- For **Local endpoint**, select the IPsec endpoint interface created in [Task two](#) (**Interface: ipsec_endpoint2**).
- For **Remote endpoint**, type the IP address of the GRE tunnel on TX64-1, **172.30.0.1**.

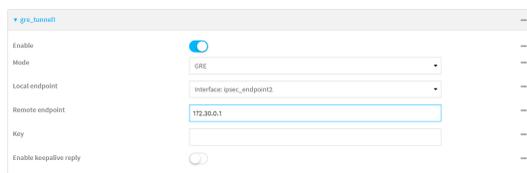

- Click **Apply** to save the configuration and apply the change. The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Add a GRE tunnel named **gre_tunnel2**:

```
(config)> add vpn iptunnel gre_tunnel2
(config vpn iptunnel gre_tunnel2)>
```

- Set the local endpoint to the IPsec endpoint interface created in [Task two](#) (**/network/interface/ipsec_endpoint2**):

```
(config vpn iptunnel gre_tunnel2)> local /network/interface/ipsec_endpoint2
(config vpn iptunnel gre_tunnel2)>
```

- Set the remote endpoint to the IP address of the GRE tunnel on TX64-1, **172.30.0.1**:

```
(config vpn iptunnel gre_tunnel2)> remote 172.30.0.1
(config vpn iptunnel gre_tunnel2)>
```

- Save the configuration and apply the change:

```
(config vpn iptunnel gre_tunnel2)> save
Configuration saved.
>
```

Task four: Create an interface for the GRE tunnel device

WebUI

- Click **Network > Interfaces**.
- For **Add Interface**, type **gre_interface2** and click **+**.



- For **Zone**, select **Internal**.
- For **Device**, select the GRE tunnel created in [Task three](#) (**IP tunnel: gre_tunnel2**).



- Click to expand **IPv4**.

- For **Address**, type **172.31.1.1/30** for a virtual IP address on the GRE tunnel.

- Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Add an interface named **gre_interface2**:

```
(config)> add network interface gre_interface2
(config network interface gre_interface2)>
```

- Set the zone to **internal**:

```
(config network interface gre_interface2)> zone internal
(config network interface gre_interface2)>
```

- Set the device to the GRE tunnel created in [Task three \(/vpn/iptunnel/gre_tunnel2\)](#):

```
(config network interface gre_interface2)> device /vpn/iptunnel/gre_tunnel2
(config network interface gre_interface2)>
```

- Set **172.31.0.1/30** as the virtual IP address on the GRE tunnel:

```
(config network interface gre_interface2)> ipv4 address 172.31.1.1/30
(config network interface gre_interface2)>
```

6. Save the configuration and apply the change:

```
(config network interface gre_interface2)> save  
Configuration saved.  
>
```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Services

This chapter contains the following topics:

Allow remote access for web administration and SSH	382
Configure the web administration service	386
Configure SSH access	394
Use SSH with key authentication	401
Configure telnet access	404
Configure DNS	409
Simple Network Management Protocol (SNMP)	416
Location information	422
System time	444
Configure the system time	444
Network Time Protocol	447
Configure the device as an NTP server	447
Configure a multicast route	453
Enable service discovery (mDNS)	456
Use the iPerf service	459

Allow remote access for web administration and SSH

By default, only devices connected to the TX64's LAN have access to the device via web administration and SSH. To enable these services for access from remote devices:


- The TX64 device must have a publicly reachable IP address.
- The **External** firewall zone must be added to the web administration or SSH service. See [Firewall configuration](#) for information on zones.
- See [Set the idle timeout for TX64 users](#) for information about setting the inactivity timeout for the web administration and SSH services.

To allow web administration or SSH for the External firewall zone:


Add the External firewall zone to the web administration service

≡ WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

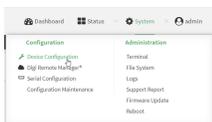


The **Configuration** window is displayed.

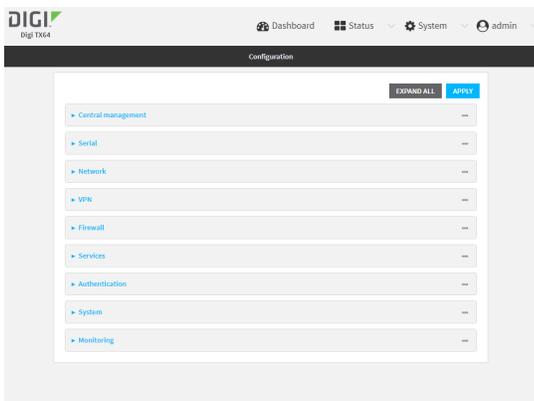


3. Click **Services > Web administration > Access Control List > Zones**.

- For **Add Zone**, click **+**.

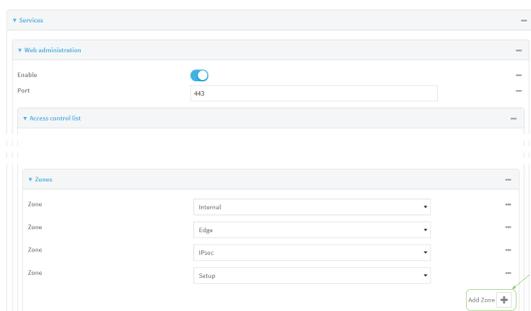

- Select **External**.

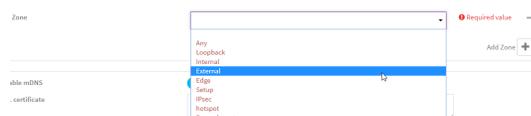

- Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Add the external zone to the web administration service:

```
(config)> add service web_admin acl zone end external
(config)>
```

- Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.


Add the External firewall zone to the SSH service

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

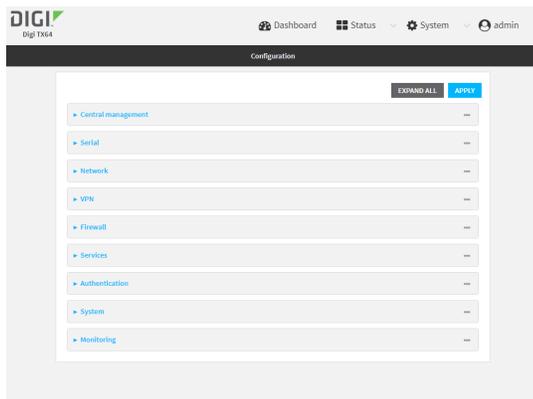

3. Click **Configuration > Services > SSH > Access Control List > Zones**.
4. For **Add Zone**, click **+**.

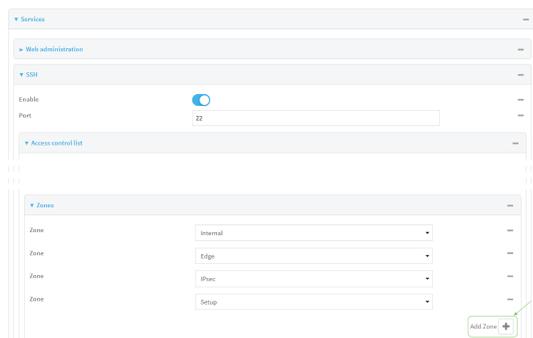

5. Select **External**.



6. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



 **Command line**

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add the **External** zone to the SSH service:

```
(config)> add service ssh acl zone end external
(config)>
```

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the web administration service

The web administration service allows you to monitor and configure the TX64 device by using the WebUI, a browser-based interface.

By default, the web administration service is enabled and uses the standard HTTPS port, 443. The default access control for the service uses the **Internal** firewall zone, which means that only devices connected to the TX64's LAN can access the WebUI. If this configuration is sufficient for your needs, no further configuration is required. See [Allow remote access for web administration and SSH](#) for information about configuring the web administration service to allow access from remote devices.

Required configuration items

- The web administration service is enabled by default.
- Configure access control for the service.

Additional configuration items

- Port to use for web administration service communication.
- Multicast DNS (mDNS) support.
- An SSL certificate to use for communications with the service.
- Support for legacy encryption protocols.

See [Set the idle timeout for TX64 users](#) for information about setting the inactivity timeout for the web administration services.

Enable or disable the web administration service


The web administration service is enabled by default. To disable the service, or enable it if it has been disabled:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

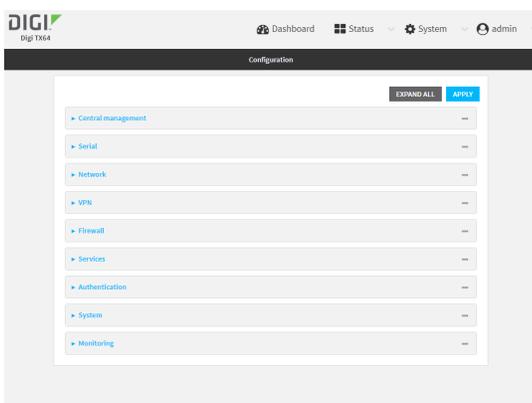

3. Click **Services > Web administration**.
4. Click **Enable**.
5. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable or disable the web administration service:

- To enable the service:

```
(config)> service web_admin enable true
(config)>
```

- To disable the service:

```
(config)> service web_admin enable false
(config)>
```

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.


Configure the service

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

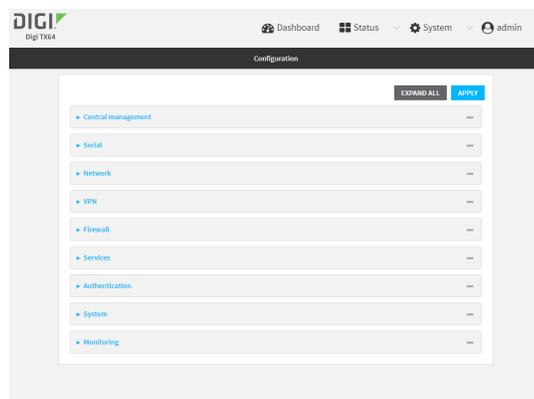

3. Click **Services > Web administration**.
4. (Optional) For **Port**, enter the port number for the service. Normally this should not be changed.
5. Click **Access control list** to configure access control:
 - To limit access to specified IPv4 addresses and networks:

- a. Click **IPv4 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv4 address or network that can access the device's web administration service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - **any**: No limit to IPv4 addresses that can access the web administration service.
 - d. Click **+** again to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click **IPv6 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv6 address or network that can access the device's web administration service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - **any**: No limit to IPv6 addresses that can access the web administration service.
 - d. Click **+** again to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the TX64 device:
 - a. Click **Interfaces**.
 - b. For **Add Interface**, click **+**.
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click **+** again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click **Zones**.
 - b. For **Add Zone**, click **+**.
 - c. For **Zone**, select the appropriate firewall zone from the dropdown.
See [Firewall configuration](#) for information about firewall zones.
 - d. Click **+** again to allow access through additional firewall zones.
6. Multicast DNS (mDNS) is enabled by default. mDNS is a protocol that resolves host names in small networks that do not have a DNS server. To disable mDNS, or enable it if it has been disabled, click **Enable mDNS**.
 7. For **SSL certificate**, if you have your own signed SSL certificate, type the certificate and private key in PEM format. If **SSL certificate** is blank, the device will use an automatically-generated, self-signed certificate.
 8. For **Allow legacy encryption protocols**, enable this option to allow clients to connect to the HTTPS session by using encryption protocols older than TLS 1.2, in addition to TLS 1.2 and later protocols. This option is disabled by default, which means that only TLS 1.2 and later encryption protocols are allowed with HTTPS connections.
 9. **View** is set to **Auto** by default and normally should not be changed.

10. **Legacy port redirection** is used to redirect client HTTP requests to the HTTPS service. Legacy port redirection is enabled by default, and normally these settings should not be changed. To disable legacy port redirection, click to expand **Legacy port redirection** and deselect **Enable**.
11. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Configure access control:

- To limit access to specified IPv4 addresses and networks:

```
(config)> add service web_admin acl address end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- **any**: No limit to IPv4 addresses that can access the web administration service.

Repeat this step to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:

```
(config)> add service web_admin acl address6 end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- **any**: No limit to IPv6 addresses that can access the web administration service.

Repeat this step to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:

```
(config)> add service web_admin acl interface end value
(config)>
```

Where *value* is an interface defined on your device.

Display a list of available interfaces:

Use ... **network interface ?** to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

```
-----
defaultip           Default IP
defaultlinklocal    Default Link-local IP
lan1                 LAN1
loopback            Loopback
wan1                 WAN1
wwan1                WWAN1
wwan2                WWAN2
```

```
(config)>
```

Repeat this step to list additional interfaces.

- To limit access based on firewall zones:

```
(config)> add service web_admin acl zone end value
```

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... **firewall zone ?** at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

```
-----
any
dynamic_routes
edge
external
hotspot
internal
```

```
ipsec
loopback
setup

(config)>
```

Repeat this step to list additional firewall zones.

4. (Optional) If you have your own signed SSL certificate, set the certificate and private key in PEM format. If not set, the device will use an automatically-generated key.

```
(config)> service web_admin cert cert.pem
(config)>
```

5. (Optional) Configure Multicast DNS (mDNS):

mDNS is a protocol that resolves host names in small networks that do not have a DNS server. mDNS is enabled by default. To disable mDNS, or enable it if it has been disabled:

- To enable the mDNS protocol:

```
(config)> service web_admin mdns enable true
(config)>
```

- To disable the mDNS protocol:

```
(config)> service web_admin mdns enable false
(config)>
```

6. (Optional) Set the port number for this service.

The default setting of 443 normally should not be changed.

```
(config)> service web_admin port 444
(config)>
```

7. (Optional) Configure the device to allow legacy encryption protocols.

Legacy encryption protocols allow clients to connect to the HTTPS session by using encryption protocols older than TLS 1.2, in addition to TLS 1.2 and later protocols. This option is disabled by default, which means that only TLS 1.2 and later encryption protocols are allowed with HTTPS connections.

To enable legacy encryption protocols:

```
(config)> service web_admin legacy_encryption true
(config)>
```

8. (Optional) Disable legacy port redirection.

Legacy port redirection is used to redirect client HTTP requests to the HTTPS service. Legacy port redirection is enabled by default, and normally these settings should not be changed.

To disable legacy port redirection:

```
(config)> service web_admin legacy enable false
(config)>
```

9. Save the configuration and apply the change:

```
(config)> save  
Configuration saved.  
>
```

10. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure SSH access

The TX64's default configuration has SSH access enabled, and allows SSH access to the device from authorized users within the **Internal** firewall zone. If this configuration is sufficient for your needs, no further configuration is required. See [Allow remote access for web administration and SSH](#) for information about configuring the SSH service to allow access from remote devices.

Required configuration items

- Enable SSH access.
- Configure access control for the SSH service.

Additional configuration items

- Port to use for communications with the SSH service.
- Multicast DNS (mDNS) support.
- A private key to use for communications with the SSH service.

See [Set the idle timeout for TX64 users](#) for information about setting the inactivity timeout for the SSH service.

Enable or disable the SSH service


The SSH service is enabled by default. To disable the service, or enable it if it has been disabled:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

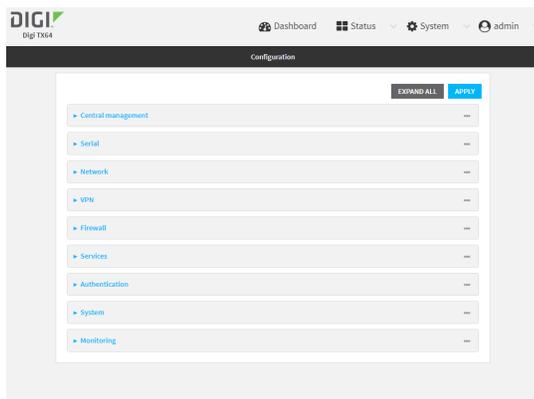

3. Click **Services > SSH**.

4. Click **Enable**.
5. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable or disable the SSH service:

- To enable the service:

```
(config)> service ssh enable true
(config)>
```

- To disable the service:

```
(config)> service ssh enable false
(config)>
```

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the service


WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.

- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

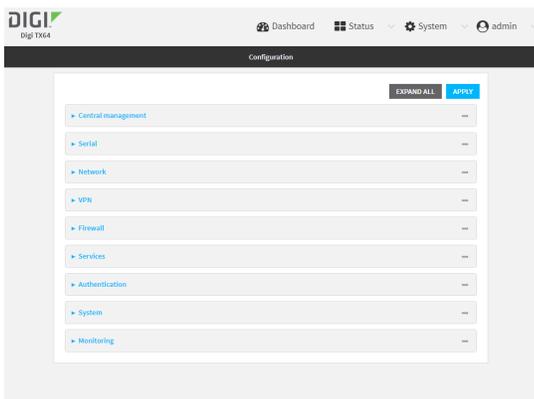

- Click **Services > SSH**.
- (Optional) For **Port**, enter the port number for the service. Normally this should not be changed.
- Click **Access control list** to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - Click **IPv4 Addresses**.
 - For **Add Address**, click **+**.
 - For **Address**, enter the IPv4 address or network that can access the device's SSH service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - **any**: No limit to IPv4 addresses that can access the SSH service.
 - Click **+** again to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - Click **IPv6 Addresses**.
 - For **Add Address**, click **+**.
 - For **Address**, enter the IPv6 address or network that can access the device's SSH service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - **any**: No limit to IPv6 addresses that can access the SSH service.
 - Click **+** again to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:
 - a. Click **Interfaces**.
 - b. For **Add Interface**, click **+**.
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click **+** again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click **Zones**.
 - b. For **Add Zone**, click **+**.
 - c. For **Zone**, select the appropriate firewall zone from the dropdown.
See [Firewall configuration](#) for information about firewall zones.
 - d. Click **+** again to allow access through additional firewall zones.
6. Multicast DNS (mDNS) is enabled by default. mDNS is a protocol that resolves host names in small networks that do not have a DNS server. To disable mDNS, or enable it if it has been disabled, click **Enable mDNS**.
 7. For **Private key**, type the private key in PEM format. If **Private key** is blank, the device will use an automatically-generated key.
 8. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Configure access control:

- To limit access to specified IPv4 addresses and networks:

```
(config)> add service ssh acl address end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- **any**: No limit to IPv4 addresses that can access the SSH service.

Repeat this step to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:

```
(config)> add service ssh acl address6 end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- **any**: No limit to IPv6 addresses that can access the SSH service.

Repeat this step to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:

```
(config)> add service ssh acl interface end value
(config)>
```

Where *value* is an interface defined on your device.

Display a list of available interfaces:

Use **... network interface ?** to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

defaultip	Default IP
defaultlinklocal	Default Link-local IP
lan1	LAN1
loopback	Loopback
wan1	WAN1
wwan1	WWAN1
wwan2	WWAN2

```
(config)>
```

Repeat this step to list additional interfaces.

- To limit access based on firewall zones:

```
(config)> add service ssh acl zone end value
```

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type **... firewall zone ?** at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup

(config)>

Repeat this step to list additional firewall zones.

4. (Optional) Set the private key in PEM format. If not set, the device will use an automatically-generated key.

```
(config)> service ssh key key.pem
(config)>
```

5. (Optional) Configure Multicast DNS (mDNS)

mDNS is a protocol that resolves host names in small networks that do not have a DNS server. mDNS is enabled by default. To disable mDNS, or enable it if it has been disabled:

- To enable the mDNS protocol:

```
(config)> service ssh mdns enable true
(config)>
```

- To disable the mDNS protocol:

```
(config)> service ssh mdns enable false
(config)>
```

6. (Optional) Set the port number for this service.

The default setting of 22 normally should not be changed.

```
(config)> service ssh port 24
(config)>
```

7. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

8. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Use SSH with key authentication

Rather than using passwords, you can use SSH keys to authenticate users connecting via SSH, SFTP, or SCP. SSH keys provide security and scalability:

- **Security:** Using SSH keys for authentication is more secure than using passwords. Unlike a password that can be guessed by an unauthorized user, SSH key pairs provide more sophisticated security. A public key configured on the TX64 device is paired with a private key on the user's PC. The private key, once generated, remains on the user's PC.
- **Scalability:** SSH keys can be used on more than one TX64 device.

Generating SSH key pairs

On a Microsoft Windows PC, you can generate SSH key pairs using a terminal emulator application, such as **PuTTY** or **Tera Term**.

On a Linux host, an SSH key pair is usually created automatically in the user's **.ssh** directory. The private and public keys are named **id_rsa** and **id_rsa.pub**. If you need to generate an SSH key pair, you can use the **ssh-keygen** application.

For example, the following entry generates an RSA key pair in the user's **.ssh** directory:

```
ssh-keygen -t rsa -f ~/.ssh/id_rsa
```

The private key file is named **id_rsa** and the public key file is named **id_rsa.pub**. (The **.pub** extension is automatically appended to the name specified for the private key output file.)

Required configuration items

- Name for the user
- SSH public key for the user

Additional configuration items


- If you want to access the TX64 device using SSH over a WAN interface, configure the access control list for the SSH service to allow SSH access for the **External** firewall zone.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

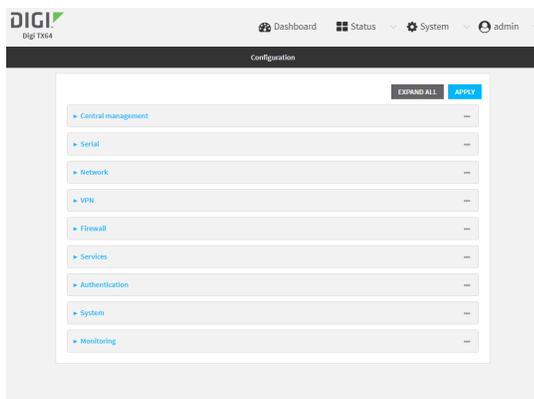

3. Click **Authentication > Users**.
4. Select an existing user or create a new user. See [User authentication](#) for information about creating a new user.
5. Click **SSH keys**.
6. In **Add SSH key**, enter a name for the SSH key and click **+**.
7. Enter the public SSH key by pasting or typing a public encryption key that this user can use for passwordless SSH login.
8. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

You can add configure passwordless SSH login for an existing user or include the support when creating a new user. See [User authentication](#) for information about creating a new user. These instructions assume an existing user named **temp_user**.

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add an SSH key for the user by using the `ssh_key` command and pasting or typing a public encryption key:

```
(config)> add auth user maria ssh_key key_name key
(config)>
```

where:

- *key_name* is a name for the key.
- *key* is a public SSH key, which you can enter by pasting or typing a public encryption key that this user can use for passwordless SSH login

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure telnet access

By default, the telnet service is disabled.

Note Telnet is an insecure protocol and should only be used for backward-compatibility reasons, and only if the network connection is otherwise secured.

Required configuration items

- Enable telnet access.
- Configure access control for the telnet service.

Additional configuration items

- Port to use for communications with the telnet service.
- Multicast DNS (mDNS) support.

See [Set the idle timeout for TX64 users](#) for information about setting the inactivity timeout for the telnet service.

Enable the telnet service


The telnet service is disabled by default. To enable the service:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

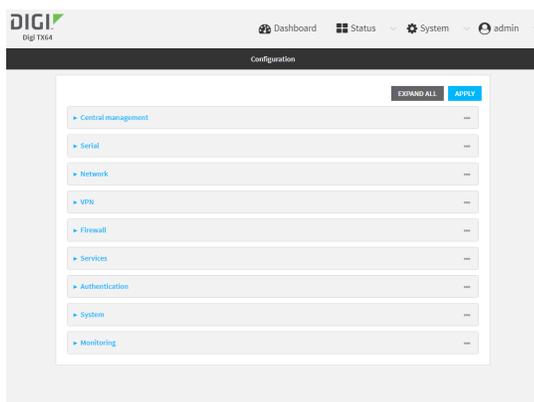

3. Click **Services > telnet**.
4. Click **Enable**.

- Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Enable the telnet service:

```
(config)> service telnet enable true
(config)>
```

- Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.


Configure the service

WebUI

- Log into the TX64 WebUI as a user with full Admin access rights.
- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

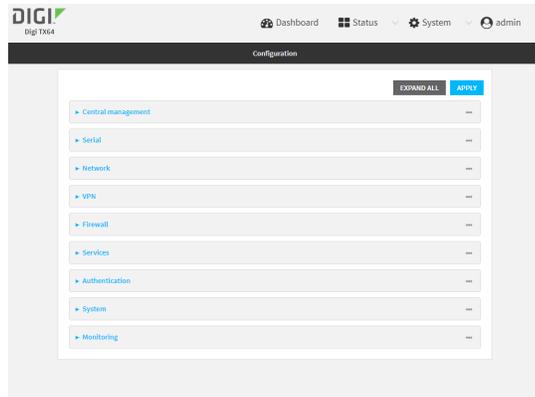

3. Click **Services > telnet**.
4. (Optional) For **Port**, enter the port number for the service. Normally this should not be changed.
5. Click **Access control list** to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click **IPv4 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv4 address or network that can access the device's telnet service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - **any**: No limit to IPv4 addresses that can access the telnet service.
 - d. Click **+** again to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click **IPv6 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv6 address or network that can access the device's telnet service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - **any**: No limit to IPv6 addresses that can access the telnet service.
 - d. Click **+** again to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the TX64 device:
 - a. Click **Interfaces**.
 - b. For **Add Interface**, click **+**.
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click **+** again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click **Zones**.
 - b. For **Add Zone**, click **+**.

- c. For **Zone**, select the appropriate firewall zone from the dropdown.
See [Firewall configuration](#) for information about firewall zones.
 - d. Click **+** again to allow access through additional firewall zones.
6. Multicast DNS (mDNS) is disabled by default. mDNS is a protocol that resolves host names in small networks that do not have a DNS server. To enable mDNS, click **Enable mDNS**.
7. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Configure access control:

- To limit access to specified IPv4 addresses and networks:

```
(config)> add service telnet acl address end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- **any**: No limit to IPv4 addresses that can access the telnet service.

Repeat this step to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:

```
(config)> add service telnet acl address6 end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- **any**: No limit to IPv6 addresses that can access the telnet service.

Repeat this step to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:

```
(config)> add service telnet acl interface end value
(config)>
```

Where *value* is an interface defined on your device.

Display a list of available interfaces:

Use ... **network interface ?** to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

```
-----
defaultip           Default IP
defaultlinklocal    Default Link-local IP
lan1                 LAN1
loopback            Loopback
wan1                 WAN1
wwan1                WWAN1
wwan2                WWAN2
```

```
(config)>
```

Repeat this step to list additional interfaces.

- To limit access based on firewall zones:

```
(config)> add service telnet acl zone end value
```

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... **firewall zone ?** at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

```
-----
any
dynamic_routes
edge
external
hotspot
internal
```

```

ipsec
loopback
setup

(config)>

```

Repeat this step to list additional firewall zones.

4. (Optional) Configure Multicast DNS (mDNS)

mDNS is a protocol that resolves host names in small networks that do not have a DNS server. mDNS is disabled by default. To enable:

```

(config)> service telnet mdns enable true
(config)>

```

5. (Optional) Set the port number for this service.

The default setting of 23 normally should not be changed.

```

(config)> service telnet port 25
(config)>

```

6. Save the configuration and apply the change:

```

(config)> save
Configuration saved.
>

```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure DNS

The TX64 device includes a caching DNS server which forwards queries to the DNS servers that are associated with the network interfaces, and caches the results. This server is used within the device, and cannot be disabled. Use the access control list to restrict external access to this server.

Required configuration items

- Configure access control for the DNS service.

Additional configuration items

- Whether the device should cache negative responses.
- Whether the device should always perform DNS queries to all available DNS servers.
- Whether to prevent upstream DNS servers from returning private IP addresses.
- Additional DNS servers, in addition to the ones associated with the device's network interfaces.
- Specific host names and their IP addresses.


To configure the DNS server:

≡ WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

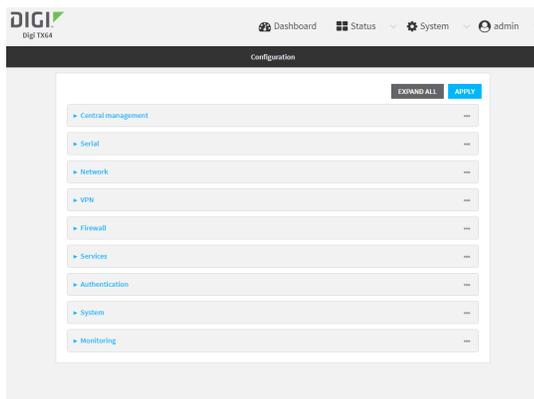

3. Click **Services > DNS**.
4. Click **Access control list** to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click **IPv4 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv4 address or network that can access the device's DNS service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - **any**: No limit to IPv4 addresses that can access the DNS service.
 - d. Click **+** again to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click **IPv6 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv6 address or network that can access the device's DNS service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.

- **any**: No limit to IPv6 addresses that can access the DNS service.
- d. Click **+** again to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the TX64 device:
 - a. Click **Interfaces**.
 - b. For **Add Interface**, click **+**.
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click **+** again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click **Zones**.
 - b. For **Add Zone**, click **+**.
 - c. For **Zone**, select the appropriate firewall zone from the dropdown.
See [Firewall configuration](#) for information about firewall zones.
 - d. Click **+** again to allow access through additional firewall zones.
 5. (Optional) **Cache negative responses** is enabled by default. Disabling this option may improve performance on networks with transient DNS results, when one or more DNS servers may have positive results. To disable, click **Cache negative responses**.
 6. (Optional) **Query all servers** is enabled by default. This option is useful when only some DNS servers will be able to resolve hostnames. To disable, click **Query all servers**.
 7. (Optional) **Rebind protection**, if enabled, prevents upstream DNS servers from returning private IP addresses. To enable, click **Rebind protection**.
 8. (Optional) **Allow localhost rebinding** is enabled by default if **Rebind protection** is enabled. This is useful for Real-time Black List (RBL) servers.
 9. (Optional) To add additional DNS servers:
 - a. Click **DNS servers**.
 - b. For **Add Server**, click **+**.
 - c. (Optional) Enter a label for the DNS server.
 - d. For **DNS server**, enter the IP address of the DNS server.
 - e. **Domain** restricts the device's use of this DNS server based on the domain. If no domain are listed, then all queries may be sent to this server.
 10. (Optional) To add host names and their IP addresses that the device's DNS server will resolve:
 - a. Click **Additional DNS hostnames**.
 - b. For **Add Host**, click **+**.
 - c. Type the **IP address** of the host.
 - d. For **Name**, type the hostname.
 11. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Configure access control:
 - To limit access to specified IPv4 addresses and networks:

```
(config)> add service dns acl address end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- **any**: No limit to IPv4 addresses that can access the DNS service.

Repeat this step to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:

```
(config)> add service dns acl address6 end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- **any**: No limit to IPv6 addresses that can access the DNS service.

Repeat this step to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:

```
(config)> add service dns acl interface end value
(config)>
```

Where *value* is an interface defined on your device.

Display a list of available interfaces:

Use **... network interface ?** to display interface information:

```
(config)> ... network interface ?
```

```
Interfaces
```

```
Additional Configuration
```

```
-----
defaultip           Default IP
defaultlinklocal    Default Link-local IP
lan1                LAN1
loopback            Loopback
wan1                WAN1
wwan1               WWAN1
wwan2               WWAN2
```

```
(config)>
```

Repeat this step to list additional interfaces.

- To limit access based on firewall zones:

```
(config)> add service dns acl zone end value
```

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... **firewall zone ?** at the config prompt:

```
(config)> ... firewall zone ?
```

```
Zones: A list of groups of network interfaces that can be
referred to by packet
filtering rules and access control lists.
```

```
Additional Configuration
```

```
-----
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

```
(config)>
```

Repeat this step to list additional firewall zones.

4. (Optional) Cache negative responses

By default, the device's DNS server caches negative responses. Disabling this option may improve performance on networks with transient DNS results, when one or more DNS servers

may have positive results. To disable:

```
(config)> service dns cache_negative_responses false
(config)>
```

5. (Optional) Query all servers

By default, the device's DNS server queries all available DNS servers. Disabling this option may improve performance on networks with transient DNS results, when one or more DNS servers may have positive results. To disable:

```
(config)> service dns query_all_servers false
(config)>
```

6. (Optional) Rebind protection

By default, rebind protection is disabled. If enabled, this prevents upstream DNS servers from returning private IP addresses. To enable:

```
(config)> service dns stop_dns_rebind false
(config)>
```

7. (Optional) Allow localhost rebinding

By default, localhost rebinding is enabled by default if rebind protection is enabled. This is useful for Real-time Black List (RBL) servers. To disable:

```
(config)> service dns rebind_localhost_ok false
(config)>
```

8. (Optional) Add additional DNS servers

a. Add a DNS server:

```
(config)> add service dns server end
(config service dns server 0)>
```

b. Set the IP address of the DNS server:

```
(config service dns server 0)> address ip-addr
(config service dns server 0)>
```

c. To restrict the device's use of this DNS server based on the domain, use the **domain** command. If no domain are listed, then all queries may be sent to this server.

```
(config service dns server 0)> domain domain
(config service dns server 0)>
```

d. (Optional) Set a label for this DNS server:

```
(config service dns server 0)> label label
(config service dns server 0)>
```

9. (Optional) Add host names and their IP addresses that the device's DNS server will resolve

a. Add a host:

```
(config)> add service dns host end
(config service dns host 0)>
```

- b. Set the IP address of the host:

```
(config service dns host 0)> address ip-addr
(config service dns host 0)>
```

- c. Set the host name:

```
(config service dns host 0)> name host-name
(config service dns host 0)>
```

10. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

11. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Simple Network Management Protocol (SNMP)

Simple Network Management Protocol (SNMP) is a protocol for remotely managing and monitoring network devices. Network administrators can use the SNMP architecture to manage nodes, including servers, workstations, routers, switches, hubs, and other equipment on an IP network, manage network performance, find and solve network problems, and plan for network growth.

The TX64 device supports SNMPv3, read-only mode. SNMPv1 and v2 are not supported.

SNMP Security

By default, the TX64 device automatically blocks SNMP packets from being received over WAN and LAN interfaces. As a result, if you want a TX64 device to receive SNMP packets, you must configure the SNMP access control list to allow the device to receive the packets. See [Configure Simple Network Management Protocol \(SNMP\)](#).

Configure Simple Network Management Protocol (SNMP)

Required configuration items

- Enable SNMP.
- Firewall configuration using access control to allow remote connections to the SNMP agent.
- The user name and password used to connect to the SNMP agent.

Additional configuration items

- The port used by the SNMP agent.
- Authentication type (either MD5 or SHA).
- Privacy protocol (either DES or AES).
- Privacy passphrase, if different than the SNMP user password.
- Enable Multicast DNS (mDNS) support.


To configure the SNMP agent on your TX64 device:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

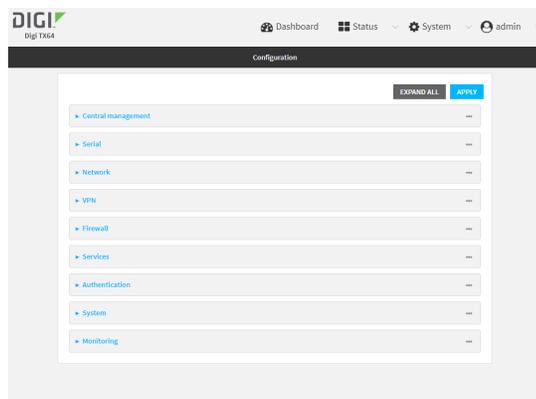

3. Click **Services > SNMP**.
4. Click **Enable**.
5. Click **Access control list** to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click **IPv4 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv4 address or network that can access the device's SNMP agent. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - **any**: No limit to IPv4 addresses that can access the SNMP agent.
 - d. Click **+** again to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click **IPv6 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv6 address or network that can access the device's SNMP agent. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - **any**: No limit to IPv6 addresses that can access the SNMP agent.
 - d. Click **+** again to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the TX64 device:
 - a. Click **Interfaces**.
 - b. For **Add Interface**, click **+**.
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click **+** again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click **Zones**.
 - b. For **Add Zone**, click **+**.

- c. For **Zone**, select the appropriate firewall zone from the dropdown.
See [Firewall configuration](#) for information about firewall zones.
 - d. Click **+** again to allow access through additional firewall zones.
6. Type the **Username** used to connect to the SNMP agent.
 7. Type the **Password** used to connect to the SNMP agent.
 8. (Optional) For **Port**, type the port number. The default is **161**.
 9. (Optional) Multicast DNS (mDNS) is disabled by default. mDNS is a protocol that resolves host names in small networks that do not have a DNS server. To enable mDNS, click **Enable mDNS**.
 10. (Optional) Select the **Authentication type**, either **MD5** or **SHA**. The default is **MD5**.
 11. (Optional) Type the **Privacy passphrase**. If not set, the password, entered above, is used.
 12. (Optional) Select the **Privacy protocol**, either **DES** or **AES**. The default is **DES**.
 13. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable the SNMP agent:

```
(config)> service location snmp true
(config)>
```

4. Configure access control:

- To limit access to specified IPv4 addresses and networks:

```
(config)> add service snmp acl address end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- **any**: No limit to IPv4 addresses that can access the SNMP service.

Repeat this step to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:

```
(config)> add service snmp acl address6 end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- **any**: No limit to IPv6 addresses that can access the SNMP service.

Repeat this step to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:

```
(config)> add service snmp acl interface end value
(config)>
```

Where *value* is an interface defined on your device.

Display a list of available interfaces:

Use **... network interface ?** to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

```
-----
defaultip           Default IP
defaultlinklocal    Default Link-local IP
lan1                 LAN1
loopback            Loopback
wan1                 WAN1
wwan1               WWAN1
wwan2               WWAN2
```

```
(config)>
```

Repeat this step to list additional interfaces.

- To limit access based on firewall zones:

```
(config)> add service snmp acl zone end value
```

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type **... firewall zone ?** at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup

(config)>

Repeat this step to list additional firewall zones.

5. Set the name of the user that will be used to connect to the SNMP agent.

```
(config)> service snmp username name
(config)>
```

6. Set the password for the user that will be used to connect to the SNMP agent:

```
(config)> service snmp password pwd
(config)>
```

7. (Optional) Set the port number for the SNMP agent. The default is **161**.

```
(config)> service snmp port port
(config)>
```

8. (Optional) Configure Multicast DNS (mDNS)

mDNS is a protocol that resolves host names in small networks that do not have a DNS server. For the SNMP agent, mDNS is disabled by default. To enable:

```
(config)> service snmp mdns enable true
(config)>
```

9. (Optional) Set the authentication type. Allowed values are **MD5** or **SHA**. The default is **MD5**.

```
(config)> service snmp auth_type SHA
(config)>
```

10. (Optional) Set the privacy passphrase. If not set, the password, entered above, is used.

```
(config)> service snmp privacy pwd
(config)>
```

- (Optional) Set the privacy protocol, either **DES** or **AES**. The default is **DES**.

```
(config)> service snmp privacy_protocol AES
(config)>
```

- Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Download MIBs

This procedure is available from the WebUI only.

Required configuration items

- Enable SNMP.

To download a .zip archive of the SNMP MIBs supported by this device:

WebUI

- Log into the TX64 WebUI as a user with Admin access.
- Enable SNMP.
See [Configure Simple Network Management Protocol \(SNMP\)](#) for information about enabling and configuring SNMP support on the TX64 device.
- On the main menu, click **Status**. Under **Services**, click **SNMP**.



The **SNMP** page is displayed.



- Click **Download**.

Location information

The TX64 device contains a Global Navigation Satellite System (GNSS) module that provides information about the current location of the device. The device can also be configured to:

- Dead reckoning by using an external USB GNSS receiver. External dead reckoning USB GNSS receivers are available to be purchased separately from Digi International Inc..
- Accept location messages from other location-enabled devices.
- Forward location messages, either from the TX64 device or from external sources, to a remote host.

This section contains the following topics:

Configure the location server	423
Enable or disable the internal GNSS module	427
Use a dead reckoning external USB GNSS receiver	429
Configure the device to accept location messages from external sources	430
Forward location information to a remote host	436
Show location information	443

Configure the location server


The location server is enabled by default. You can disable it, or you can enable it if it has been disabled. You can also optionally configure the UDP listening port for location information.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

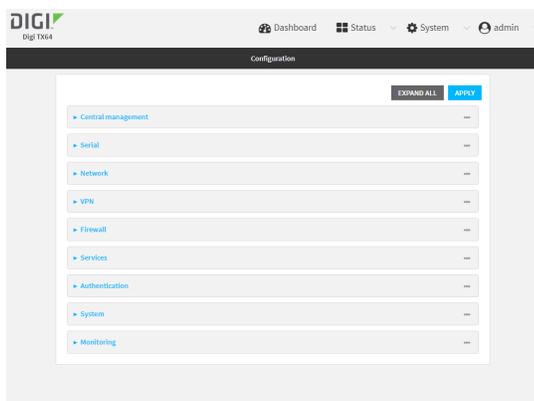

3. Click **Services > Location**.
4. The location server is enabled by default. To disable, or to enable if it has been disabled, click **Enable the location server**.
5. (Optional) For **Location server port**, type the port number that should be used to listen for location messages. The default is **2948**.
6. (Optional) Configure the **Access control list**:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click **IPv4 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv4 address or network that can access the device's service-type. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - **any**: No limit to IPv4 addresses that can access the service-type.
 - d. Click **+** again to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:
 - a. Click **IPv6 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv6 address or network that can access the device's service-type. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - **any**: No limit to IPv6 addresses that can access the service-type.
 - d. Click **+** again to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the TX64 device:
 - a. Click **Interfaces**.
 - b. For **Add Interface**, click **+**.
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click **+** again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click **Zones**.
 - b. For **Add Zone**, click **+**.
 - c. For **Zone**, select the appropriate firewall zone from the dropdown.
See [Firewall configuration](#) for information about firewall zones.
 - d. Click **+** again to allow access through additional firewall zones.
7. See [Enable or disable the internal GNSS module](#) for more information about **Enable GNSS module**.
 8. See [Use a dead reckoning external USB GNSS receiver](#) for more information about **Enable USB GNSS module**.
 9. (Optional) For **Location update interval**, set the amount of time that the TX64 device will wait between updating location information, and sending location information to a destination server.
Allowed values are any number of hours, minutes, or seconds, and take the format **number {h|m|s}**.
For example, to set **Location update interval** to ten minutes, enter **10m** or **600s**.
The default is 10 seconds.
 10. See [Forward location information to a remote host](#) for more information about **Destination servers**.
 11. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable or disable the GNSS module:

- To enable the module:

```
(config)> service location gnss true
(config)>
```

- To disable the module:

```
(config)> service location gnss false
(config)>
```

4. (Optional) Set the port number that should be used to listen for location messages.

```
(config)> service location port port_num
(config)>
```

where *port_num* is the port number of the listening port. The default is **2948**.

5. (Optional) Configure access control:

- To limit access to specified IPv4 addresses and networks:

```
(config)> add service location acl address end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- **any**: No limit to IPv4 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:

```
(config)> add service location acl address6 end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- **any**: No limit to IPv6 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:

```
(config)> add service location acl interface end value
(config)>
```

Where *value* is an interface defined on your device.

Display a list of available interfaces:

Use ... **network interface ?** to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

```
-----
defaultip           Default IP
defaultlinklocal   Default Link-local IP
lan1                LAN1
loopback            Loopback
wan1                WAN1
wwan1               WWAN1
wwan2               WWAN2
```

```
(config)>
```

Repeat this step to list additional interfaces.

- To limit access based on firewall zones:

```
(config)> add service location acl zone end value
```

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... **firewall zone ?** at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

```
-----
any
dynamic_routes
edge
external
hotspot
internal
```

```

ipsec
loopback
setup

(config)>
    
```

Repeat this step to list additional firewall zones.

- (Optional) Set the amount of time that the TX64 device will wait between updating location information, and sending location information to a destination server:

```

(config)> service location interval value
(config)>
    
```

where *value* is any number of hours, minutes, or seconds, and takes the format **number{h|m|s}**. For example, to set **interval** to ten minutes, enter either **10m** or **600s**:

```

(config)> service location interval 600s
(config)>
    
```

The default is 10 seconds.

- Save the configuration and apply the change:

```

(config)> save
Configuration saved.
>
    
```

- Type **exit** to exit the Admin CLI. Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Enable or disable the internal GNSS module

The internal GNSS module is enabled by default. You can disable it, or you can enable it if it has been disabled.


Note In order for the GNSS module to be able to provide location information, you must connect an antenna to the GNSS antenna connector.

WebUI

- Log into the TX64 WebUI as a user with full Admin access rights.
- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

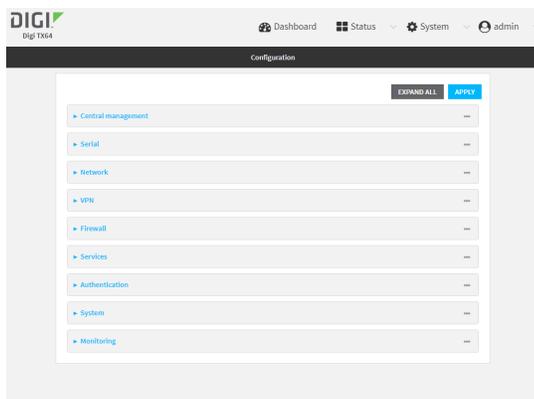

3. Click **Services > Location**.
4. Click **Enable GNSS module** to disable the internal GNSS module, or to enable it if it has been disabled.
5. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable or disable the GNSS module:

- To enable the module:

```
(config)> service location gnss true
(config)>
```

- To disable the module:

```
(config)> service location gnss false
(config)>
```

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Use a dead reckoning external USB GNSS receiver

The TX64 device supports an external USB GNSS receiver to provide dead reckoning-based location information. The USB GNSS receiver is available for purchase from Digi International Inc..

The ability to use an external USB GNSS receiver is enabled by default. After purchasing the USB GNSS receiver, plug it into a USB port on the TX64, and it will begin providing location information.

Note If both the internal GNSS module and the external dead reckoning USB receiver are used simultaneously, the TX64 device will determine the device's location by using the source that returns the information first. Therefore, if you want to guarantee that the dead reckoning USB receiver is used to return the device's location, you should either remove the GNSS antenna from the device, or disable the internal GNSS module. See [Enable or disable the internal GNSS module](#) for further information.


To disable support for the external GNSS receiver, or enable it if it has been disabled:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

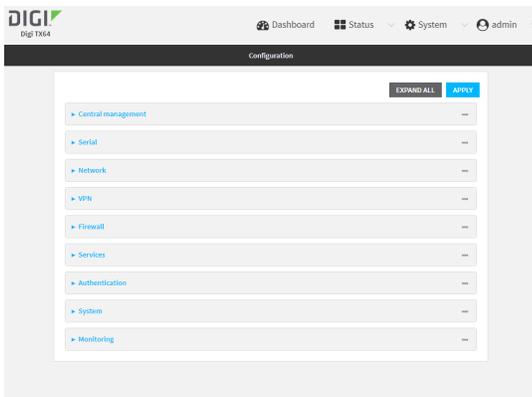

3. Click **Services > Location**.

4. Click **Enable USB GNSS module** to disable the USB GNSS receiver, or to enable it if it has been disabled.
5. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable or disable the USB GNSS receiver:

- To enable the USB GNSS receiver:

```
(config)> service location usb true
(config)>
```

- To disable the USB GNSS receiver:

```
(config)> service location usb false
(config)>
```

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the device to accept location messages from external sources

You can configure the TX64 device to accept NMEA or TAIP messages from external sources. For example, location-enabled devices connected to the TX64 device can forward their location information to the device, and then the TX64 device can serve as a central repository for this location information and forward it to a remote host. See [Forward location information to a remote host](#) for information about configuring the TX64 device to forward location messages.

This procedure configures a UDP port on the TX64 device that will be used to listen for incoming messages.

Note The location server functionality is enabled by default on the TX64 device. However, because the default configuration of the access control list for the location server only allows connections for the loopback firewall zone, the location server by default can only collect information from the device's local GNSS module. To enable the device to receive location messages from external hosts, you must modify the access control list to allow the hosts to connect to the location server's UDP port.

Required configuration items

- The location server must be enabled.
- UDP port that the TX64 device will listen to for incoming location messages.
- Access control list configuration to provide access to the port through the firewall.


Additional configuration items

- Location update interval, which determines how often the device will poll the specified UDP port for incoming location messages.


To configure the device to accept location messages from external sources:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

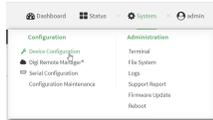

The **Configuration** window is displayed.

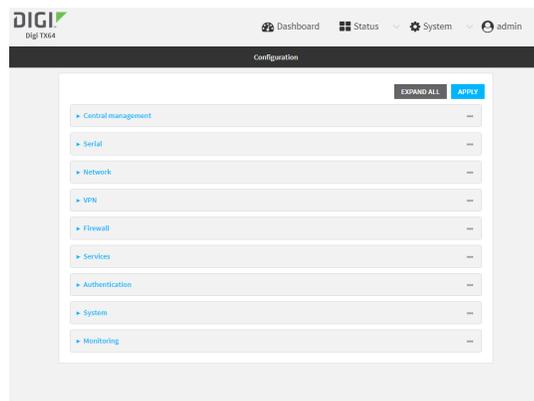

3. Click **Services > Location**.
4. The location server is enabled by default. If it has been disabled, enable the server by clicking **Enable the location server**.
5. For **Location server port**, type the number of the UDP port that will receive incoming location messages. The default is **2948**.
6. Click **Access control list** to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click **IPv4 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv4 address or network that can access the device's location server UDP port. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - **any**: No limit to IPv4 addresses that can access the location server UDP port.
 - d. Click **+** again to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click **IPv6 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv6 address or network that can access the device's location server UDP port. Allowed values are:

- A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - **any**: No limit to IPv6 addresses that can access the location server UDP port.
- d. Click **+** again to list additional IP addresses or networks.
- To limit access to hosts connected through a specified interface on the TX64 device:
 - a. Click **Interfaces**.
 - b. For **Add Interface**, click **+**.
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click **+** again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click **Zones**.
 - b. For **Add Zone**, click **+**.
 - c. For **Zone**, select the appropriate firewall zone from the dropdown.
See [Firewall configuration](#) for information about firewall zones.
 - d. Click **+** again to allow access through additional firewall zones.
7. (Optional) For **Location update interval**, type the amount of time to wait between polling the specified UPD port for incoming location messages. The default is ten seconds.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Location update interval** to ten minutes, enter **10m** or **600s**.
 8. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:


```
> config
(config)>
```
3. The location server is enabled by default. If it has been disabled, enable the server:


```
(config)> service location enable true
(config)>
```
4. Set the UDP port that will receive incoming location messages. The default is **2948**.

```
(config)> service location port 8000
(config)>
```

5. Click **Access control list** to configure access control:

- To limit access to specified IPv4 addresses and networks:

```
(config)> add service location acl address end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- **any**: No limit to IPv4 addresses that can access the location server UDP port.

Repeat this step to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:

```
(config)> add service location acl address6 end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- **any**: No limit to IPv6 addresses that can access the location server UDP port.

Repeat this step to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:

```
(config)> add service location acl interface end value
(config)>
```

Where *value* is an interface defined on your device.

Display a list of available interfaces:

Use **... network interface ?** to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

```
-----
defaultip           Default IP
defaultlinklocal    Default Link-local IP
lan1                 LAN1
loopback             Loopback
wan1                 WAN1
wwan1                WWAN1
wwan2                WWAN2
```

```
(config)>
```

Repeat this step to list additional interfaces.

- To limit access based on firewall zones:

```
(config)> add service location acl zone end value
```

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... **firewall zone ?** at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

```
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

```
(config)>
```

Repeat this step to list additional firewall zones.

6. (Optional) Set the amount of time to wait between polling the specified UPD port for incoming location messages. The default is ten seconds.

```
(config)> service location interval value
(config)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **the location update interval** to ten minutes, enter either **10m** or **600s**:

```
(config)> service location interval 600s
(config)>
```

3. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

4. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Forward location information to a remote host

You can configure location clients on the TX64 device that forward location messages in either NMEA or TAIP format to a remote host.

Depending on how the TX64 device's location feature is enabled, you can forward the device's location information based on its GNSS module, or location information from an external source, or both:

- If the location server is enabled, location information from external sources is forwarded.
- If the GNSS module is enabled, the device's location information based on its GNSS module is forwarded.

Required configuration items

- Enable either the location server, or the GNSS module, or both.
- The hostname or IP address of the remote host to which the location messages will be forwarded.
- The destination UDP port on the remote host to which the messages will be forwarded.
- Protocol type of the messages being forwarded, either NMEA or TAIP.

Additional configuration items

- Additional remote hosts to which the location messages will be forwarded.
- Location update interval, which determines how often the device will forward location information to the remote hosts.
- A description of the remote hosts.
- Specific types of NMEA or TAIP messages that should be forwarded.
- Text that will be prepended to the forwarded message.
- A vehicle ID that is used in the TAIP ID message and can also be prepended to the forwarded message.


Configure the TX64 device to forward location information:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

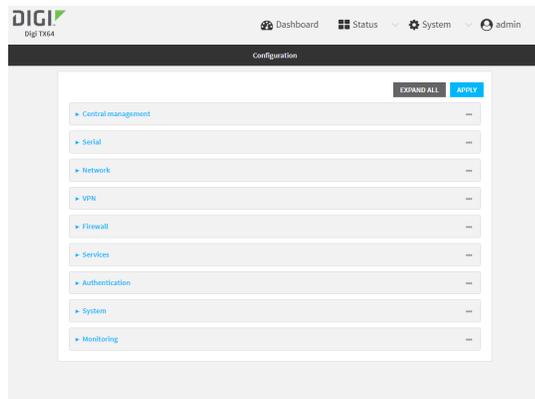

3. Click **Services > Location**.
4. Location features are enabled by default. If they have been disabled, enable the appropriate features:
 - Click **Enable the location server** to forward information that the TX64 device receives from external location sources. See [Configure the device to accept location messages from external sources](#) for more information.
 - Click **Enable GNSS module** to forward the device's location information based on its GNSS module.
5. (Optional) For **Location update interval**, type the amount of time to wait to forward location information to remote hosts. The default is ten seconds.
 Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
 For example, to set **Location update interval** to ten minutes, enter **10m** or **600s**.
6. Click **Destination servers**.
7. For **Add destination server**, click **+**.
8. (Optional) For **Label**, type a description of the location destination server.
9. For **Destination server**, enter the hostname or IP address of the remote host to which location messages will be sent.
10. For **Destination server port**, enter the UDP port on the remote host to which location messages will be sent.
11. For **Outgoing message type**, select the protocol type for the messages, either **TAIP** or **NMEA**.
12. (Optional) For **NMEA** and **TAIP filters**, select the filters that represent the types of messages that will be forwarded. By default, all message types are forwarded.
 - To remove a filter:
 - a. Click the down arrow (▼) next to the appropriate message type.
 - b. Click **Delete**.
 - To add a message type:
 - a. For **Add NMEA filter** or **Add TAIP filter**, click **+**.
 - b. Select the message type.

Allowed values depend on the protocol type:

- If the protocol type is **NMEA**, allowed values are:
 - **GGA**: Reports time, position, and fix related data.
 - **GLL**: Reports position data: position fix, time of position fix, and status.
 - **GSA**: Reports GPS DOP and active satellites.
 - **GSV**: Reports the number of SVs in view, PRN, elevation, azimuth, and SNR.
 - **RMC**: Reports position, velocity, and time.
 - **VTG**: Reports direction and speed over ground.
 - If the protocol type is **TAIP**, allowed values are:
 - **AL**: Reports altitude and vertical velocity.
 - **CP**: Compact position: reports time, latitude, and longitude.
 - **ID**: Reports the vehicle ID.
 - **LN**: Long navigation: reports the latitude, longitude, and altitude, the horizontal and vertical speed, and heading.
 - **PV**: Position/velocity: reports the latitude, longitude, and heading.
13. (Optional) For **Prepend text**, enter text to prepend to the forwarded message. Two variables can be included in the prepended text:
- **%s**: Includes the TX64 device's serial number in the prepended text.
 - **%v**: Includes the vehicle ID in the prepended text.

For example, to include both the device's serial number and vehicle ID in the prepend message, you can enter the following in the **Prepend** field:

```
__|%s|__|%v|__
```

14. Type a four-digit alphanumeric **Vehicle ID** that will be included with to location messages. If no vehicle ID is configured, this setting defaults to 0000.
15. Click **Apply** to save the configuration and apply the change.
- The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights. Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Location features are enabled by default. If they have been disabled, enable the appropriate features:

- Enable the TX64 device to forward information that it receives from external location sources:

```
(config)> service location enable true
(config)>
```

See [Configure the device to accept location messages from external sources](#) for more information.

- Configure the TX64 device to forward the device's location information based on its GNSS module:

```
(config)> service location gnss true
(config)>
```

4. (Optional) Set the amount of time to wait to forward location information to remote hosts. The default is ten seconds.

```
(config)> service location interval value
(config)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **the location update interval** to ten minutes, enter either **10m** or **600s**:

```
(config)> service location interval 600s
(config)>
```

5. Add a remote host to which location messages will be sent:

```
(config)> add service location forward end
(config service location forward 0)>
```

6. Set the hostname or IP address of the remote host to which location messages will be sent:

```
(config service location forward 0)> server host
(config service location forward 0)>
```

7. Set the UDP port on the remote host to which location messages will be sent:

```
(config service location forward 0)> server_port 8000
(config service location forward 0)>
```

8. Set the protocol type for the messages. Allowed values are **taip** or **nmea**; the default is **taip**:

```
(config service location forward 0)> type nmea
(config service location forward 0)>
```

9. (Optional) Set the text to prepend to the forwarded message. Two variables can be included in the prepended text:

- **%s**: Includes the TX64 device's serial number in the prepended text.
- **%v**: Includes the vehicle ID in the prepended text.

```
(config service location forward 0)> prepend _|s|_|v|_
(config service location forward 0)>
```

10. (Optional) Set the vehicle ID.

Allowed value is a four digit alphanumeric string (for example, 01A3 or 1234). If no vehicle ID is configured, this setting defaults to 0000.

```
(config service location forward 0)> vehicle-id 1234
(config service location forward 0)>
```

11. (Optional) Provide a description of the remote host:

```
(config service location forward 0)> label "Remote host 1"
(config service location forward 0)>
```

12. (Optional) Specify types of messages that will be forwarded. Allowed values vary depending on the protocol type. By default, all message types are forwarded.

- If the protocol type is NMEA:

Allowed values are:

- **gga**: Reports time, position, and fix related data.
- **gll**: Reports position data: position fix, time of position fix, and status.
- **gsa**: Reports GPS DOP and active satellites.
- **gsv**: Reports the number of SVs in view, PRN, elevation, azimuth, and SNR.
- **rmc**: Reports position, velocity, and time.
- **vtg**: Reports direction and speed over ground.

To remove a message type:

- a. Use the **show** command to determine the index number of the message type to be deleted:

```
(config service location forward 0)> show filter_nmea
0 gga
1 gll
2 gsa
3 gsv
4 rmc
5 vtg
(config service location forward 0)>
```

- b. Use the index number to delete the message type. For example, to delete the **gsa** (index number 2) message type:

```
(config service location forward 0)> del filter_nmea 2
(config service location forward 0)>
```

To add a message type:

- a. Change to the **filter_nmea** node:

```
(config service location forward 0)> filter_nmea
(config service location forward 0 filter_nmea)>
```

- b. Use the **add** command to add the message type. For example, to add the **gsa** message type:

```
(config service location forward 0 filter_nmea)> add gsa end
(config service location forward 0 filter_nmea)>
```

- If the protocol type is TAIP:

Allowed values are:

- **al**: Reports altitude and vertical velocity.
- **cp**: Compact position: reports time, latitude, and longitude.
- **id**: Reports the vehicle ID.
- **ln**: Long navigation: reports the latitude, longitude, and altitude, the horizontal and vertical speed, and heading.
- **pv**: Position/velocity: reports the latitude, longitude, and heading.

To remove a message type:

- a. Use the **show** command to determine the index number of the message type to be deleted:

```
(config service location forward 0)> show filter_taip
0 al
1 cp
2 id
3 ln
4 pv
(config service location forward 0)>
```

- b. Use the index number to delete the message type. For example, to delete the **id** (index number 2) message type:

```
(config service location forward 0)> del filter_taip 2
(config service location forward 0)>
```

To add a message type:

- a. Change to the **filter_taip** node:

```
(config service location forward 0)> filter_taip
(config service location forward 0 filter_taip)>
```

- b. Use the **add** command to add the message type. For example, to add the **id** message type:

```
(config service location forward 0 filter_taip)> add id end
(config service location forward 0 filter_taip)>
```

13. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

14. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show location information

You can view status and statistics about location information from either the WebUI or the command line.

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. At the **Status** page, click **Location**.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Use the **show location** command at the system prompt:

```
> show location
```

```
Location Status
```

```
-----  
State           : enabled  
Source          : 192.168.2.3  
Latitude        : 40* 49' 20.000" N (40.822245)  
Longitude       : 73* 12' 32.000" E (-73.209048)  
Altitude        : 15 meters  
Velocity        : 0 meters per second  
Direction       : None  
Quality         : Standard GNSS (2D/3D)  
UTC Date and Time : Sat, 30 November 2019 13:22:15 03  
No. of Satellites : 7
```

```
>
```

3. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

System time

By default, the TX64 device synchronizes the system time by periodically connecting to the Digi NTP server, **time.devicecloud.com**. In this mode, the device queries the time server based on following events and schedule:

- At boot time.
- Once a day.

The default configuration has the system time zone set to UTC. No additional configuration is required for the system time if the default configuration is sufficient. However, you can change the default time zone and the default NTP server, as well as configuring additional NTP servers. If multiple servers are configured, a number of time samples are obtained from each of the servers and a subset of the NTP clock filter and selection algorithms are applied to select the best of these. See [Configure the system time](#) for details about changing the default configuration.

The TX64 device can also be configured to use Network Time Protocol (NTP). In this configuration, the device serves as an NTP server, providing NTP services to downstream devices. See [Network Time Protocol](#) for more information about NTP server support.

Configure the system time

This procedure is optional.

The TX64 device's default system time configuration uses the Digi NTP server, **time.devicecloud.com**, and has the time zone set to **UTC**. You can change the default NTP server and the default time zone, as well as configuring additional NTP servers.

Required Configuration Items


- The time zone for the TX64 device.
- At least one upstream NTP server for synchronization.

Additional Configuration Options


- Additional upstream NTP servers.

≡ WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

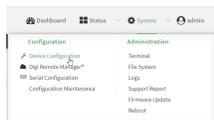

The **Configuration** window is displayed.

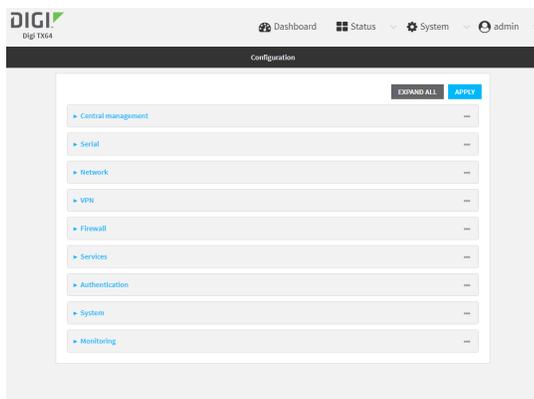

3. Click **System > Time**
4. (Optional) Select the **Timezone** for the location of your TX64 device.
5. (Optional) Add upstream NTP servers that the device will use to synchronize its time. The default setting is **time.devicecloud.com**.
 - To change the default value of the NTP server:
 - a. Click **NTP servers**.
 - b. For **Server**, type a new server name.
 - To add an NTP server:
 - a. Click **NTP servers**.
 - b. For **Add Server**, click **+**.
 - c. For **Server**, enter the hostname of the upstream NTP server that the device will use to synchronize its time.
 - d. Click **+** to add additional NTP servers. If multiple servers are included, servers are tried in the order listed until one succeeds.

Note This list is synchronized with the list of servers included with NTP server configuration, and changes made to one will be reflected in the other. See [Configure the device as an NTP server](#) for more information about NTP server configuration.

6. Click **Apply** to save the configuration and apply the change.
 The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. (Optional) Set the timezone for the location of your TX64 device. The default is **UTC**.

```
(config)> system time timezone value
(config)>
```

Where *value* is the timezone using the format specified with the following command:

```
(config)> system time timezone ?
```

Timezone: The timezone for the location of this device. This is used to adjust the time for log messages. It also affects actions that occur at a specific time of day.

Format:

```
Africa/Abidjan
Africa/Accra
Africa/Addis_Ababa
...
```

```
(config)>
```

4. (Optional) Add an upstream NTP server that the device will use to synchronize its time to the appropriate location in the list of NTP servers. The default setting is **time.devicecloud.com**.

- To delete the default NTP server, **time.devicecloud.com**:

```
(config)> del service ntp server 0
```

- To add the NTP server to the beginning of the list, use the index value of **0** to indicate that it should be added as the first server:

```
(config)> add service ntp server 0 time.server.com
(config)>
```

- To add the NTP server to the end of the list, use the index keyword **end**:

```
(config)> add service ntp server end time.server.com
(config)>
```

- To add the NTP server in another location in the list, use an index value to indicate the appropriate position. For example:

```
(config)> add service ntp server 1 time.server.com
(config)>
```

Note This list is synchronized with the list of servers included with NTP server configuration, and changes made to one will be reflected in the other. See [Configure the device as an NTP server](#) for more information about NTP server configuration.

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Network Time Protocol

Network Time Protocol (NTP) enables devices connected on local and worldwide networks to synchronize their internal software and hardware clocks to the same time source. The TX64 device can be configured as an NTP server, allowing downstream hosts that are attached to the device's Local Area Networks to synchronize with the device.

When the device is configured as an NTP server, it also functions as an NTP client. The NTP client will be consistently synchronized with one or more upstream NTP servers, which means that NTP packets are transferred every few seconds. A minimum of one upstream NTP server is required. Additional NTP servers can be configured. If multiple servers are configured, a number of time samples are obtained from each of the servers and a subset of the NTP clock filter and selection algorithms are applied to select the best of these.

See [Configure the device as an NTP server](#) for information about configuring your device as an NTP server.

Configure the device as an NTP server

Required Configuration Items

- Enable the NTP service.
- At least one upstream NTP server for synchronization. The default setting is the Digi NTP server, **time.devicecloud.com**.

Additional Configuration Options


- Additional upstream NTP servers.
- Access control list to limit downstream access to the TX64 device's NTP service.
- The time zone setting, if the default setting of UTC is not appropriate.

To configure the TX64 device's NTP service:


WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.

- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

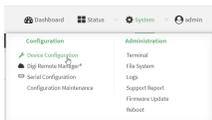

The **Configuration** window is displayed.

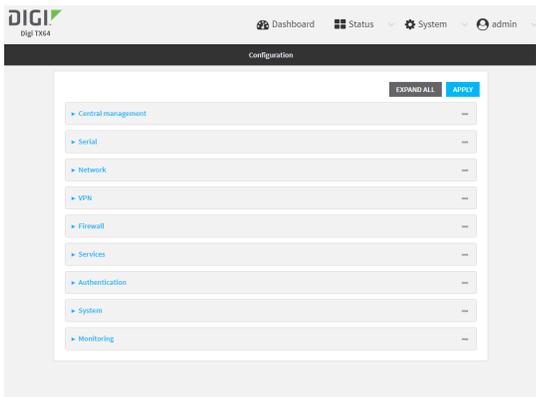

- Click **Services > NTP**.
- Enable the TX64 device's NTP service by clicking **Enable**.
- (Optional) Configure the access control list to limit downstream access to the TX64 device's NTP service.
 - To limit access to specified IPv4 addresses and networks:
 - Click **IPv4 Addresses**.
 - For **Add Address**, click **+**.
 - For **Address**, enter the IPv4 address or network that can access the device's NTP service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - **any**: No limit to IPv4 addresses that can access the NTP service.
 - Click **+** again to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - Click **IPv6 Addresses**.
 - For **Add Address**, click **+**.
 - For **Address**, enter the IPv6 address or network that can access the device's NTP service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - **any**: No limit to IPv6 addresses that can access the NTP service.
 - Click **+** again to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:
 - a. Click **Interfaces**.
 - b. For **Add Interface**, click **+**.
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click **+** again to allow access through additional interfaces.
- To limit access based on firewall zones:
 - a. Click **Zones**.
 - b. For **Add Zone**, click **+**.
 - c. For **Zone**, select the appropriate firewall zone from the dropdown.
See [Firewall configuration](#) for information about firewall zones.
 - d. Click **+** again to allow access through additional firewall zones.

Note By default, the access control list for the NTP service is empty, which means that all downstream hosts connected to the TX64 device can use the NTP service.

6. (Optional) Add upstream NTP servers that the device will use to synchronize its time. The default setting is **time.devicecloud.com**.
 - To change the default value of the NTP server:
 - a. Click **NTP servers**.
 - b. For **Server**, type a new server name.
 - To add an NTP server:
 - a. Click **NTP servers**.
 - b. For **Add Server**, click **+**.
 - c. For **Server**, enter the hostname of the upstream NTP server that the device will use to synchronize its time.
 - d. Click **+** to add additional NTP servers. If multiple servers are included, servers are tried in the order listed until one succeeds.

Note This list is synchronized with the list of servers included with NTP client configuration, and changes made to one will be reflected in the other. See [Configure the system time](#) for more information about NTP client configuration.

7. (Optional) Configure the system time zone. The default is **UTC**.
 - a. Click **System > Time**
 - b. Select the **Timezone** for the location of your TX64 device.
8. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



 **Command line**

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
 2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

 3. Enable the NTP service:

```
(config)> service ntp enable true
(config)>
```

 4. (Optional) Add an upstream NTP server that the device will use to synchronize its time to the appropriate location in the list of NTP servers. The default setting is **time.devicecloud.com**.
 - To delete the default NTP server, **time.devicecloud.com**:

```
(config)> del service ntp server 0
```

 - To add the NTP server to the beginning of the list, use the index value of **0** to indicate that it should be added as the first server:

```
(config)> add service ntp server 0 time.server.com
(config)>
```

 - To add the NTP server to the end of the list, use the index keyword **end**:

```
(config)> add service ntp server end time.server.com
(config)>
```

 - To add the NTP server in another location in the list, use an index value to indicate the appropriate position. For example:

```
(config)> add service ntp server 1 time.server.com
(config)>
```

- Note** This list is synchronized with the list of servers included with NTP client configuration, and changes made to one will be reflected in the other. See [Configure the system time](#) for more information about NTP client configuration.
5. (Optional) Configure the access control list to limit downstream access to the TX64 device's NTP service.
 - To limit access to specified IPv4 addresses and networks:

```
(config)> add service ntp acl address end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- **any**: No limit to IPv4 addresses that can access the NTP server agent.

Repeat this step to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:

```
(config)> add service ntp acl address6 end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- **any**: No limit to IPv6 addresses that can access the NTP server agent.

Repeat this step to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:

```
(config)> add service ntp acl interface end value
(config)>
```

Where *value* is an interface defined on your device.

Display a list of available interfaces:

Use **... network interface ?** to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

```
-----
defaultip           Default IP
defaultlinklocal    Default Link-local IP
lan1                 LAN1
loopback             Loopback
wan1                 WAN1
wwan1                WWAN1
wwan2                WWAN2
```

```
(config)>
```

Repeat this step to list additional interfaces.

- To limit access based on firewall zones:

```
(config)> add service ntp acl zone end value
```

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type **... firewall zone ?** at the config prompt:

```
(config)> ... firewall zone ?
```

```
Zones: A list of groups of network interfaces that can be
referred to by packet
filtering rules and access control lists.
```

```
Additional Configuration
```

```
-----
```

```
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

```
(config)>
```

Repeat this step to list additional firewall zones.

Note By default, the access control list for the NTP service is empty, which means that all downstream hosts connected to the TX64 device can use the NTP service.

6. (Optional) Set the timezone for the location of your TX64 device. The default is **UTC**.

```
(config)> system time timezone value
(config)>
```

Where *value* is the timezone using the format specified with the following command:

```
(config)> system time timezone ?
```

```
Timezone: The timezone for the location of this device. This is used to
adjust the time for log
messages. It also affects actions that occur at a specific time of day.
```

```
Format:
```

```
Africa/Abidjan
Africa/Accra
Africa/Addis_Ababa
...
```

```
(config)>
```

7. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a multicast route

Multicast routing allows a device to transmit data to a single multicast address, which is then distributed to a group of devices that are configured to be members of that group.


To configure a multicast route:

WebUI

- Log into the TX64 WebUI as a user with full Admin access rights.
- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

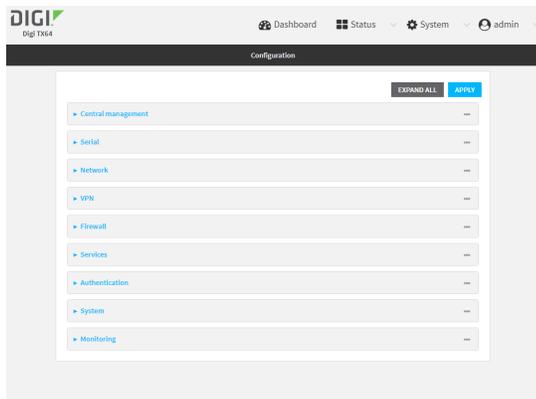

- Click **Services > Multicast**.
- For **Add Multicast route**, type a name for the route and click **+**.
- The new route is enabled by default. To disable, uncheck **Enable**.
- Type the **Source address** for the route. This must be a multicast IP address between 224.0.0.1 and 239.255.255.255.
- Type the **Source port**. Ensure the port is not used by another protocol.
- Select a **Source interface** where multicast packets will arrive.
- Select a **Destination interface** that the TX64 device will use to send mutlicast packets.
- Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of

the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add the multicast route. For example, to add a route named **test**:

```
(config)> add service multicast test
(config service multicast test)>
```

4. The multicast route is enabled by default. If it has been disabled, enable the route:

```
(config service multicast test)> enable true
(config service multicast test)>
```

5. Set the source address for the route. This must be a multicast IP address between 224.0.0.1 and 239.255.255.255.

```
(config service multicast test)> dst ip-address
(config service multicast test)>
```

6. Set the source port for the route. Ensure the port is not used by another protocol.

```
(config service multicast test)> port port
(config service multicast test)>
```

7. Set the source interface for the route where multicast packets will arrive:

- a. Use the **?** to determine available interfaces:

```
(config service multicast test)> src_interface ?
```

Source interface: Where the multicast packets will arrive. IP routes do not have an effect in the incoming stream.

Format:

```
/network/interface/defaultip
/network/interface/defaultlinklocal
/network/interface/lan1
/network/interface/lan_hotspot
/network/interface/loopback
```

```

/network/interface/wan1
/network/interface/wwan1
/network/interface/wwan2
Current value:

```

```
(config service multicast test)> src_interface
```

- b. Set the interface. For example:

```

(config service multicast test)> src_interface /network/interface/wan1
(config service multicast test)>

```

8. Set the destination interface that the TX64 device will use to send mutlicast packets.

```

(config service multicast test)> interface interface
(config service multicast test)>

```

- a. Use the **?** to determine available interfaces:

```
(config service multicast test)> interface ?
```

Destination interface: Which interface to send the multicast packets.

Format:

```

/network/interface/defaultip
/network/interface/defaultlinklocal
/network/interface/lan1
/network/interface/lan_hotspot
/network/interface/loopback
/network/interface/wan1
/network/interface/wwan1
/network/interface/wwan2

```

Current value:

```
(config service multicast test)> interface
```

- b. Set the interface. For example:

```

(config service multicast test)> interface /network/interface/wan1
(config service multicast test)>

```

9. Save the configuration and apply the change:

```

(config)> save
Configuration saved.
>

```

10. Type **exit** to exit the Admin CLI.


Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Enable service discovery (mDNS)


Multicast DNS mDNS is a protocol that resolves host names in small networks that do not have a DNS server. You can enable the TX64 device to use mDNS.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

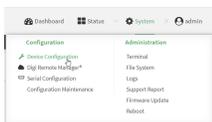

The **Configuration** window is displayed.

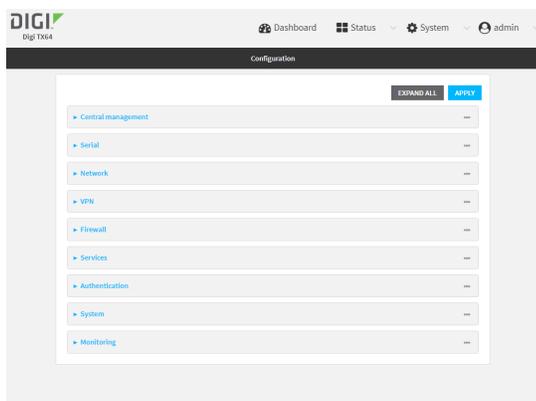

3. Click **Services > Service Discovery (mDNS)**.
4. **Enable** the mDNS service.
5. Click **Access control list** to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click **IPv4 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv4 address or network that can access the device's mDNS service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - **any**: No limit to IPv4 addresses that can access the mDNS service.
 - d. Click **+** again to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click **IPv6 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv6 address or network that can access the device's mDNS service. Allowed values are:

- A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - **any**: No limit to IPv6 addresses that can access the mDNS service.
 - d. Click **+** again to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the TX64 device:
 - a. Click **Interfaces**.
 - b. For **Add Interface**, click **+**.
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click **+** again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click **Zones**.
 - b. For **Add Zone**, click **+**.
 - c. For **Zone**, select the appropriate firewall zone from the dropdown.
See [Firewall configuration](#) for information about firewall zones.
 - d. Click **+** again to allow access through additional firewall zones.
6. Click **Apply** to save the configuration and apply the change.
- The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable the mDNS service:

```
(config)> service mdns enable true
(config)>
```

4. Configure access control:

- To limit access to specified IPv4 addresses and networks:

```
(config)> add service mdns acl address end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- **any**: No limit to IPv4 addresses that can access the mDNS service.

Repeat this step to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:

```
(config)> add service mdns acl address6 end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- **any**: No limit to IPv6 addresses that can access the mDNS service.

Repeat this step to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:

```
(config)> add service mdns acl interface end value
(config)>
```

Where *value* is an interface defined on your device.

Display a list of available interfaces:

Use **... network interface ?** to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

defaultip	Default IP
defaultlinklocal	Default Link-local IP
lan1	LAN1
loopback	Loopback
wan1	WAN1
wwan1	WWAN1
wwan2	WWAN2

```
(config)>
```

Repeat this step to list additional interfaces.

- To limit access based on firewall zones:

```
(config)> add service mdns acl zone end value
```

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type **... firewall zone ?** at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

```
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

```
(config)>
```

Repeat this step to list additional firewall zones.

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Use the iPerf service

Your TX64 device includes an iPerf3 server that you can use to test the performance of your network. IPerf3 is a command-line tool that measures the maximum network throughput an interface can handle. This is useful when diagnosing network speed issues, to determine, for example, whether a cellular connection is providing expected throughput.

The TX64 implementation of iPerf3 supports testing with both TCP and UDP.

Note Using iPerf clients that are at a version earlier than iPerf3 to connect to the TX64 device's iPerf3 server may result in unpredictable results. As a result, Digi recommends using an iPerf client at version 3 or newer to connect to the TX64 device's iPerf3 server.

Required configuration items

- Enable the iPerf server on the TX64 device.
- An iPerf3 client installed on a remote host. iPerf3 software can be downloaded at <https://iperf.fr/iperf-download.php>.

Additional configuration Items

- The port that the TX64 device's iPerf server will use to listen for incoming connections.
- The access control list for the iPerf server.

When the iPerf server is enabled, the TX64 device will automatically configure its firewall rules to allow incoming connections on the configured listening port. You can restrict access by configuring the access control list for the iPerf server.


To enable the Iperf3 server:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

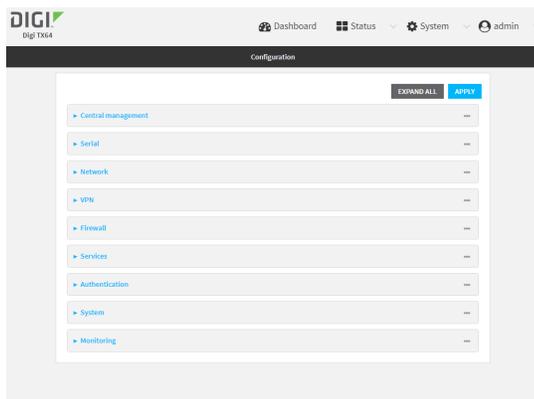

3. Click **Services > IPerf**.
4. Click **Enable**.
5. (Optional) For **Iperf Server Port**, type the appropriate port number for the iPerf server listening port.
6. (Optional) Click to expand **Access control list** to restrict access to the iPerf server:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click **IPv4 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv4 address or network that can access the device's service-type. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - **any**: No limit to IPv4 addresses that can access the service-type.
 - d. Click **+** again to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click **IPv6 Addresses**.
 - b. For **Add Address**, click **+**.
 - c. For **Address**, enter the IPv6 address or network that can access the device's service-type. Allowed values are:

- A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - **any**: No limit to IPv6 addresses that can access the service-type.
- d. Click **+** again to list additional IP addresses or networks.
- To limit access to hosts connected through a specified interface on the TX64 device:
 - a. Click **Interfaces**.
 - b. For **Add Interface**, click **+**.
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click **+** again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click **Zones**.
 - b. For **Add Zone**, click **+**.
 - c. For **Zone**, select the appropriate firewall zone from the dropdown.
See [Firewall configuration](#) for information about firewall zones.
 - d. Click **+** again to allow access through additional firewall zones.
7. Click **Apply** to save the configuration and apply the change.
- The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:


```
> config
(config)>
```
3. Enable the iPerf server:


```
(config)> service iperf enable true
(config)>
```
4. (Optional) Set the port number for the iPerf server listening port. The default is 5201.


```
(config)> service iperf port port_number
(config)>
```
5. (Optional) Set the access control list to restrict access to the iPerf server:
 - To limit access to specified IPv4 addresses and networks:

```
(config)> add service iperf acl address end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- **any**: No limit to IPv4 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:

```
(config)> add service iperf acl address6 end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- **any**: No limit to IPv6 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:

```
(config)> add service iperf acl interface end value
(config)>
```

Where *value* is an interface defined on your device.

Display a list of available interfaces:

Use **... network interface ?** to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

```
-----
defaultip           Default IP
defaultlinklocal    Default Link-local IP
lan1                 LAN1
loopback             Loopback
wan1                 WAN1
wwan1                WWAN1
wwan2                WWAN2
```

```
(config)>
```

Repeat this step to list additional interfaces.

- To limit access based on firewall zones:

```
(config)> add service iperf acl zone end value
```

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... **firewall zone ?** at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

```
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

```
(config)>
```

Repeat this step to list additional firewall zones.

6. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example performance test using Iperf3

On a remote host with Iperf3 installed, enter the following command:

```
$ iperf3 -c device_ip
```

where *device_ip* is the IP address of the TX64 device. For example:

```
$ iperf3 -c 192.168.2.1
Connecting to host 192.168.2.1, port 5201
[ 4] local 192.168.3.100 port 54934 connected to 192.168.1.1 port 5201
[ ID] Interval          Transfer      Bandwidth    Retr  Cwnd
[ 4]  0.00-1.00        sec   26.7 MBytes  224 Mbits/sec    8   2.68 MBytes
[ 4]  1.00-2.00        sec   28.4 MBytes  238 Mbits/sec   29   1.39 MBytes
[ 4]  2.00-3.00        sec   29.8 MBytes  250 Mbits/sec    0   1.46 MBytes
[ 4]  3.00-4.00        sec   31.2 MBytes  262 Mbits/sec    0   1.52 MBytes
[ 4]  4.00-5.00        sec   32.1 MBytes  269 Mbits/sec    0   1.56 MBytes
```

[4]	5.00-6.00	sec	32.5 MBytes	273 Mbits/sec	0	1.58 MBytes
[4]	6.00-7.00	sec	33.9 MBytes	284 Mbits/sec	0	1.60 MBytes
[4]	7.00-8.00	sec	33.7 MBytes	282 Mbits/sec	0	1.60 MBytes
[4]	8.00-9.00	sec	33.5 MBytes	281 Mbits/sec	0	1.60 MBytes
[4]	9.00-10.00	sec	33.2 MBytes	279 Mbits/sec	0	1.60 MBytes

[ID]	Interval		Transfer	Bandwidth	Retr	
[4]	0.00-10.00	sec	315 MBytes	264 Mbits/sec	37	sender
[4]	0.00-10.00	sec	313 MBytes	262 Mbits/sec		receiver

iperf Done.
\$

Applications

The TX64 supports Python 3.6 and provides you with the ability to run Python applications on the device interactively or from a file. You can also specify Python applications and other scripts to be run each time the device system restarts, at specific intervals, or at a specified time.

This chapter contains the following topics:

Configure applications to run automatically	467
Run a Python application at the shell prompt	473
Start an interactive Python session	475
Digidevice module	477

Configure applications to run automatically

You can configure an application to run automatically when the system restarts, at specific intervals, or at a specified time.

Required configuration items

- Upload or create the Python application.
- Enable the Python application to be run automatically.
- Select whether the application should run:
 - When the device boots.
 - At a specified time.
 - At a specified interval.
 - During system maintenance.


Additional configuration items

- A label used to identify the application.
- The action to take if the Python application finishes. The actions that can be taken are:
 - None.
 - Restart the script.
 - Reboot the device.
- The arguments for the Python application.
- Whether to write the application output and errors to the system log.
- The memory available to be used by the application.
- Whether the script should run one time only.


Task one: Upload the application

≡ WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the menu, click **System**. Under **Administration**, click **File System**.

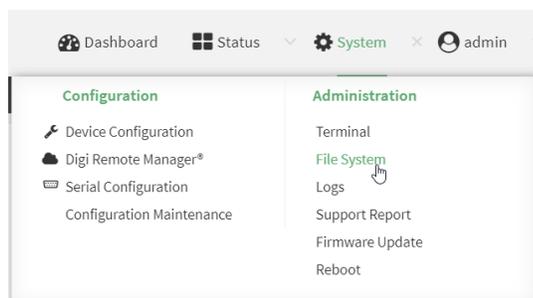

The **File System** page appears.

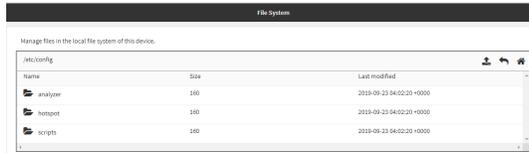

3. Highlight the **scripts** directory and click to open the directory.
4. Click (upload).
5. Browse to the location of the script on your local machine. Select the file and click **Open** to upload the file.

The uploaded file is uploaded to the **/etc/config/scripts** directory.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, use the **scp** command to upload the Python application script to the TX64 device:

```
> scp host hostname-or-ip user username remote remote-path local local-path
to local
```

where:

- *hostname-or-ip* is the hostname or ip address of the remote host.
- *username* is the name of the user on the remote host.
- *remote-path* is the path and filename of the file on the remote host that will be copied to the TX64 device.
- *local-path* is the location on the TX64 device where the copied file will be placed.

For example:

To upload a Python application from a remote host with an IP address of 192.168.4.1 to the **/etc/config/scripts** directory on the TX64 device, issue the following command:

```
> scp host 192.168.4.1 user admin remote /home/admin/bin/test.py local
/etc/config/scripts/ to local
admin@192.168.4.1's password: adminpwd
test.py                               100%   36MB   11.1MB/s   00:03
>
```

3. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Note You can also create Python applications by using the **vi** command when logged in with shell access.

Task two: Configure the application to run automatically


Note This feature does not provide syntax or error checking. Certain commands can render the device inoperable. Use with care.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

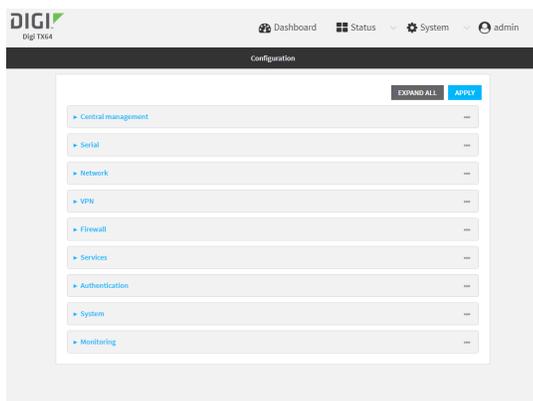

3. Click **Applications**.
Scripts created here are also automatically entered in **System > Scheduled tasks > Custom scripts**.
4. For **Add Script**, click **+**.



The schedule script configuration window is displayed.

Scheduled scripts are enabled by default. To disable, click **Enable** to toggle off.

5. (Optional) For **Label**, provide a label for the script.
6. For **Run mode**, select the mode that will be used to run the script. Available options are:
 - **On boot**: The script will run once each time the device boots.
 - If **On boot** is selected, select the action that will be taken when the script completes in **Exit action**. Available options are:
 - **None**: Action taken when the script exits.
 - **Restart script**: Runs the script repeatedly.
 - **Reboot**: The device will reboot when the script completes.
 - **Interval**: The script will start running at the specified interval, within 30 seconds after the configuration change is saved.
 - If **Interval** is selected, in **Interval**, type the interval.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number{w|d|h|m|s}*.
For example, to set **Interval** to ten minutes, enter **10m** or **600s**.
 - Click to enable **Run single** to run only a single instance of the script at a time.
If **Run single** is not selected, a new instance of the script will be started at every interval, regardless of whether the script is still running from a previous interval.
 - **Set time**: Runs the script at a specified time of the day.
 - If **Set Time** is selected, specify the time that the script should run in **Run time**, using the format *HH:MM*.
 - **During system maintenance**: The script will run during the system maintenance time window.
7. For **Commands**, enter the commands that will execute the script.
If the script begins with **#!**, then the script will be invoked in the location specified by the path for the script command. Otherwise, the default shell will be used (equivalent to **#!/bin/sh**).
8. Script logging options:
 - a. Click to enable **Log script output** to log the script's output to the system log.
 - b. Click to enable **Log script errors** to log script errors to the system log.
 If neither option is selected, only the script's exit code is written to the system log.
9. For **Maximum memory**, enter the maximum amount of memory available to be used by the script and its subprocesses, using the format *number{b|bytes|KB|k|MB|MB|M|GB|G|TB|T}*.

10. Click to enable **Once** to configure the script to run only once at the specified time.
If **Once** is enabled, rebooting the device will cause the script to not run again. The only way to re-run the script is to:
 - Remove the script from the device and add it again.
 - Make a change to the script.
 - Uncheck **Once**.
11. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a script:

```
(config)> add system schedule script end
(config system schedule script 0)>
```

Scheduled scripts are enabled by default. To disable:

```
(config system schedule script 0)> enable false
(config system schedule script 0)>
```

4. (Optional) Provide a label for the script.

```
(config system schedule script 0)> label value
(config system schedule script 0)>
```

where *value* is any string. if spaces are used, enclose *value* within double quotes.

5. Set the mode that will be used to run the script:

```
(config system schedule script 0)> when mode
(config system schedule script 0)>
```

where *mode* is one of the following:

- **boot**: The script will run once each time the device boots.
 - If **boot** is selected, set the action that will be taken when the script completes:

```
(config system schedule script 0)> exit_action action
(config system schedule script 0)>
```

where *action* is one of the following:

- **none**: Action taken when the script exits.
 - **restart**: Runs the script repeatedly.
 - **reboot**: The device will reboot when the script completes.
- **interval**: The script will start running at the specified interval, within 30 seconds after the configuration change is saved. If **interval** is selected:

- Set the interval:

```
(config system schedule script 0)> on_interval value
(config system schedule script 0)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **on_interval** to ten minutes, enter either **10m** or **600s**:

```
(config system schedule script 0)> on_interval 600s
(config system schedule script 0)>
```

- (Optional) Configure the script to run only a single instance at a time:

```
(config system schedule script 0)> once true
(config system schedule script 0)>
```

If **once** is set to **false**, a new instance of the script will be started at every interval, regardless of whether the script is still running from a previous interval.

- **set_time**: Runs the script at a specified time of the day.
 - If **set_time** is set, set the time that the script should run, using the format *HH:MM*:

```
(config system schedule script 0)> run_time HH:MM
(config system schedule script 0)>
```

- **maintenance_time**: The script will run during the system maintenance time window.

6. Set the commands that will execute the script:

```
(config system schedule script 0)> commands filename
(config system schedule script 0)>
```

where *filename* is the path and filename of the script, and any related command line information.

If the script begins with **#!**, then the script will be invoked in the location specified by the path for the script command. Otherwise, the default shell will be used (equivalent to **#!/bin/sh**).

7. Script logging options:

- To log the script's output to the system log:

```
(config system schedule script 0)> syslog_stdout true
(config system schedule script 0)>
```

- To log script errors to the system log:

```
(config system schedule script 0)> syslog_stderr true
(config system schedule script 0)>
```

If **syslog_stdout** and **syslog_stderr** are not enabled, only the script's exit code is written to the system log.

8. Set the maximum amount of memory available to be used by the script and its subprocesses:

```
(config system schedule script 0)> max_memory value
(config system schedule script 0)>
```

where *value* uses the syntax **number{b|bytes|KB|k|MB|MB|M|GB|G|TB|T}**.

9. To run the script only once at the specified time:

```
(config system schedule script 0)> once true
(config system schedule script 0)>
```

If **once** is enabled, rebooting the device will cause the script to run again. The only way to re-run the script is to:

- Remove the script from the device and add it again.
- Make a change to the script.
- Disable **once**.

10. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

11. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Run a Python application at the shell prompt


Python applications can be run from a file at the shell prompt. The Python application will run until it completes, displaying output and prompting for additional user input if needed. To interrupt the application, enter **CTRL-C**.

Note Python applications cannot be run from the Admin CLI. You must access the device shell in order to run Python applications from the command line. See [Authentication groups](#) for information about configuring authentication groups that include shell access.

1. Upload the Python application to the TX64 device:

WebUI

- a. Log into the TX64 WebUI as a user with Admin access.
- b. On the menu, click **System**. Under **Administration**, click **File System**.

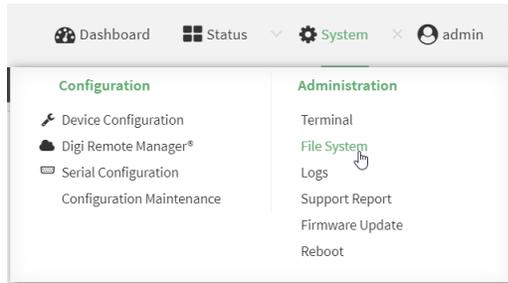

The **File System** page appears.



- c. Highlight the **scripts** directory and click to open the directory.
- d. Click (upload).
- e. Browse to the location of the script on your local machine. Select the file and click **Open** to upload the file.

The uploaded file is uploaded to the **/etc/config/scripts** directory.

Command line

- a. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- b. At the command line, use the **scp** command to upload the Python application script to the TX64 device:

```
> scp host hostname-or-ip user username remote remote-path local local-path to local
```

where:

- *hostname-or-ip* is the hostname or ip address of the remote host.
- *username* is the name of the user on the remote host.
- *remote-path* is the path and filename of the file on the remote host that will be copied to the TX64 device.
- *local-path* is the location on the TX64 device where the copied file will be placed.

For example:

To upload a Python application from a remote host with an IP address of 192.168.4.1 to the `/etc/config/scripts` directory on the TX64 device, issue the following command:

```
> scp host 192.168.4.1 user admin remote /home/admin/bin/test.py local
/etc/config/scripts/ to local
admin@192.168.4.1's password: adminpwd
test.py                100%   36MB   11.1MB/s   00:03
>
```

- c. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Note You can also create Python applications by using the **vi** command when logged in with shell access.

- Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
- Use the **python** command to run the Python application. In the following example, the Python application, **test.py**, takes 3 parameters: **120**, **ports** and **storage**:

```
# python test.py 120 ports storage
```

Start an interactive Python session

Use the **python** command without specifying any parameters to start an interactive Python session. The Python session operates interactively using REPL (Read Evaluate Print Loop) to allow you to write Python code on the command line.

Note The Python interactive session is not available from the Admin CLI. You must access the device shell in order to run Python applications from the command line. See [Authentication groups](#) for information about configuring authentication groups that include shell access.

- Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
- At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

- Type Python commands at the Python prompt. For example, to view help for the `digidevice` module, type:

```
>>> help("digidevice")
Help on package digidevice:

NAME
    digidevice - Digi device python extensions

DESCRIPTION
    This module includes various extensions that allow Python
    to interact with additional features offered by the device.
    ...
```

4. Use **Ctrl-D** to exit the Python session. You can also exit the session using **exit()** or **quit()**.

Digidevice module

The Python **digidevice** module provides platform-specific extensions that allow you to interact with the device's configuration and interfaces. The following submodules are included with the **digidevice** module:

This section contains the following topics:

Use digidevice.cli to execute CLI commands	478
Use digidevice.datapoint to upload custom datapoints to Digi Remote Manager	479
Use digidevice.config for device configuration	481
Use Python to respond to Digi Remote Manager SCI requests	483
Use digidevice runtime to access the runtime database	492
Using Python to upload the device name to Digi Remote Manager	494
The digidevice led submodule	496

Use digidevice.cli to execute CLI commands

Use the **digidevice.cli** Python module to issue CLI commands from Python to retrieve status and statistical information about the device.

For example, to display the system status and statistics by using an interactive Python session, use the **show system** command with the **cli** module:

1. Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the **cli** submodule:

```
>>> from digidevice import cli
>>>
```

4. Execute a CLI command using the **cli.execute(command)** function. For example, to print the system status and statistics to stdout using the **show system** command:

```
>>> response = cli.execute("show system")
>>>
>>> print (response)
```

Model	: Digi TX64
Serial Number	: TX64-000000
Hostname	: TX64
MAC	: 00:40:D0:13:35:36
Hardware Version	: 50001947-01 1P
Firmware Version	: 19.11.72.53
Bootloader Version	: 1
Current Time	: 19-11-30-13.22.15 +0000
CPU	: 0.9
Uptime	: 3 days, 0 hours, 49 minutes, 8 seconds (262148s)
Temperature	: 39C
Contact	: Techpubs

```
>>>
```

5. Use **Ctrl-D** to exit the Python session. You can also exit the session using **exit()** or **quit()**.

Help for using Python to execute TX64 CLI commands

Get help executing a CLI command from Python by accessing help for **cli.execute**:

1. Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the **cli** submodule:

```
>>> from digidevice import cli
>>>
```

4. Use the help command with **cli.execute**:

```
>>> help(cli.execute)
Help on function execute in module digidevice.cli:

execute(command, timeout=5)
Execute a CLI command with the timeout specified returning the results.
...
```

5. Use **Ctrl-D** to exit the Python session. You can also exit the session using **exit()** or **quit()**.

Use digidevice.datapoint to upload custom datapoints to Digi Remote Manager

Use the **datapoint** Python module to upload custom datapoints to Digi Remote Manager.

The following characteristics can be defined for a datapoint:

- Stream ID
- Value
- (Optional) Data type
 - integer
 - long
 - float
 - double
 - string
 - binary
- Units (optional)
- Timestamp (optional)

- Location (optional)
 - Tuple of latitude, longitude and altitude
- Description (optional)
- Quality (optional)
 - An integer describing the quality of the data point

For example, to use an interactive Python session to upload datapoints related to velocity, temperature, and the state of the emergency door:

1. Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the **datapoint** submodule and other necessary modules:

```
>>> from digidevice import datapoint
>>> import time
>>>
```

4. Upload the datapoints to Remote Manager:

```
>>> datapoint.upload("Velocity", 69, units="mph")
>>> datapoint.upload("Temperature", 24, geo_location=(54.409469, -1.718836,
129))
>>> datapoint.upload("Emergency_Door", "closed", timestamp=time.time())
```

5. Use **Ctrl-D** to exit the Python session. You can also exit the session using **exit()** or **quit()**.

Once the datapoints have been uploaded to Remote Manager, they can be viewed via Remote Manager or accessed using Web Services calls. See the [Digi Remote Manager Programmers Guide](#) for more information on web services and datapoints.

Help for using Python to upload custom datapoints to Remote Manager

Get help for uploading datapoints to your Digi Remote Manager account by accessing help for **datapoint.upload**:

1. Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the **datapoint** submodule and other necessary modules:

```
>>> from digidevice import datapoint
>>>
```

4. Use the help command with **datapoint.upload**:

```
>>> help(datapoint.upload)
Help on function upload in module digidevice.datapoint:

upload(stream_id:str, data, *, description:str=None, timestamp:float=None,
units:str=None,
geo_location:Tuple[float, float, float]=None, quality:int=None,
data_type:digidevice.datapoint.DataType=None, timeout:float=None)
...
```

5. Use **Ctrl-D** to exit the Python session. You can also exit the session using **exit()** or **quit()**.

Use digidevice.config for device configuration

Use the **config** Python module to access and modify the device configuration.

Read the device configuration

Use the **get()** method to read the device configuration:

1. Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the **config** submodule:

```
>>> from digidevice import config
>>>
```

4. Use **config.load()** and the **get()** method to return the device's configuration:

```
>>> cfg = config.load()
>>> print(cfg)
```

```

...
network.interface.lan1.device=/network/bridge/lan1
network.interface.lan1.enable=true
network.interface.lan1.ipv4.address=192.168.2.1/24
network.interface.lan1.ipv4.connection_monitor.attempts=3
...
>>> interfaces = cfg.get("network.interface")
>>> print(interfaces.keys())
['defaultip', 'defaultlinklocal', 'lan1', 'loopback', 'wan1', 'wwan1',
'wwan2']
>>> print(interfaces.get("lan.ipv4.address"))
192.168.2.1/24
>>>

```

Modify the device configuration

Use the **set()** and **commit()** methods to modify the device configuration:

1. Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```

# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>

```

3. Import the **config** submodule:

```

>>> from digidevice import config
>>>

```

4. Use **config.load(writable=True)** to enable write mode for the configuration:

```

>>> cfg = config.load(writable=True)
>>>

```

5. Use the **set()** method to make changes to the configuration:

```

>>> cfg.set("system.name", "New-Name")
>>>

```

6. Use the **commit()** method to save the changes:

```

>>> cfg.commit()
True
>>>

```

- Use the **get()** method to verify the change:

```
>>> print(cfg.get("system.name"))
New-Name
>>>
```

Help for using Python to read and modify device configuration

Get help for reading and modifying the device configuration by accessing help for **digidevice.config**:

- Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
- At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

- Import the **config** submodule:

```
>>> from digidevice import config
>>>
```

- Use the help command with **config**:

```
>>> help(config)
Help on module acl.config in acl:

NAME
acl.config - Python interface to ACL configuration (libconfig).
...
```

- Use **Ctrl-D** to exit the Python session. You can also exit the session using **exit()** or **quit()**.

Use Python to respond to Digi Remote Manager SCI requests

The **device_request** Python module allows you to interact with Digi Remote Manager by using Remote Manager's Server Command Interface (SCI), a web service that allows users to access information and perform commands that relate to their devices.

Use Remote Manager's SCI interface to create SCI requests that are sent to your TX64 device, and use the **device_request** module to send responses to those requests to Remote Manager.

See the [Digi Remote Manager Programmers Guide](#) for more information on SCI.

Task one: Use the `device_request` module on your TX64 device to create a response

1. Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the **device_request** module:

```
>>> from digidevice import device_request
>>>
```

4. Create a function to handle the request from Remote Manager:

```
>>> def handler(target, request):
...     print ("received request %s for target %s" % (request, target))
...     return "OK"
...
>>>
```

5. Register a callback function that will be called when the device receives a SCI request from Remote Manager:

```
>>> device_request.register("myTarget", handler)
>>>
```

Note Leave the interactive Python session active while completing task two, below. Once you have completed task two, exit the interactive session by using **Ctrl-D**. You can also exit the session using **exit()** or **quit()**.

Task two: Create and send an SCI request from Digi Remote Manager

The second step in using the **device_request** module is to create an SCI request that Remote Manager will forward to the device. For example, you can create in SCI request a the Remote Manager API explorer:

1. In Remote Manager, click **Documentation > API Explorer**.
2. Select the device to use as the SCI target:
 - a. Click **SCI Targets**.
 - b. Click **Add Targets**.
 - c. Enter or select the device ID of the device.
 - d. Click **Add**.
 - e. Click **OK**.

3. Click **Examples > SCI > Data Service > Send Request**.

Code similar to the following will be displayed in the HTTP message body text box:

```
<sci_request version="1.0">
  <data_service>
    <targets>
      <device id="00000000-00000000-0000FFFF-A83CF6A3"/>
    </targets>
    <requests>
      <device_request target_name="myTarget">
        my payload string
      </device_request>
    </requests>
  </data_service>
</sci_request>
```

Note The value of the **target_name** parameter in the **device_request** element must correspond to the **target** parameter of the **device_request.register** function in the Python script. In this example, the two are the same.

4. Click **Send**.

Once that the request has been sent to the device, the handler on the device is executed.

- On the device, you will receive the following output:

```
>>> received request
      my payload string
      for target myTarget
```

- In Remote Manager, you will receive a response similar to the following:

```
<sci_reply version="1.0">
  <data_service>
    <device id="00000000-00000000-0000FFFF-A83CF6A3"/>
    <requests>
      <device_request target_name="myTarget" status="0">OK</device_
request>
    </requests>
  </device>
</data_service>
</sci_request>
```

Example: Use **digidevice.cli** with **digidevice.device_request**

In this example, we will use the **digidevice.cli** module in conjunction with the **digidevice.device_request** module to return information about multiple devices to Remote Manager.

1. Create a Python application, called `showsystem.py`, that uses the **digidevice.cli** module to create a response containing information about device and the **device_request** module to respond with this information to a request from Remote Manager:

```

from digidevice import device_request
from digidevice import cli
import time

def handler(target, request):
    return cli.execute("show system verbose")

def status_cb(error_code, error_description):
    if error_code != 0:
        print("error handling showSystem device request: %s" % error_
description)

device_request.register("showSystem", handler, status_callback = status_cb)

# Do not let the process finish so that it handles device requests
while True:
    time.sleep(10)

```

2. Upload the showsystem.py application to the /etc/config/scripts directory on two or more Digi devices. In this example, we will upload it to two devices, and use the same request in Remote Manager to query both devices.

See [Configure applications to run automatically](#) for information about uploading Python applications to your device. You can also create the script on the device by using the **vi** command when logged in with shell access.


3. For both devices:
 - a. Configure the device to automatically run the showsystem.py application on reboot, and to restart the application if it crashes. This can be done from either the WebUI or the command line:

WebUI


- i. Log into the TX64 WebUI as a user with full Admin access rights.
- ii. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

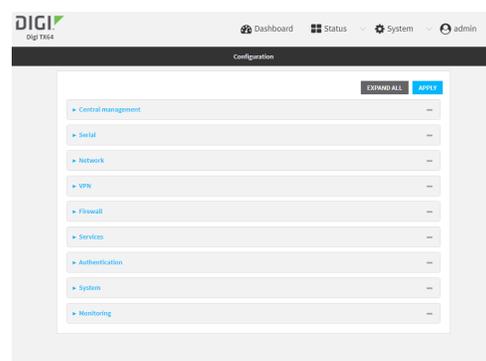

- iii. Click **System > Scheduled tasks > Custom scripts**.
- iv. Click **+** to add a custom script.

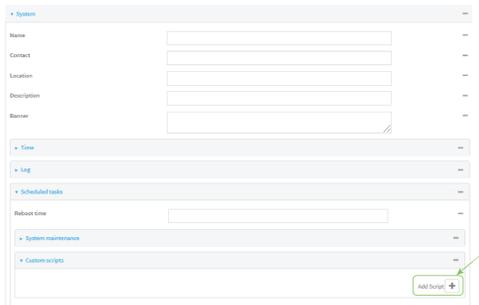

- v. For **Label**, type **Show system application**.
- vi. For **Run mode**, select **On boot**.
- vii. For **Exit action**, select **Restart script**.
- viii. For **Commands**, type **python /etc/config/scripts/showsystem.py**.

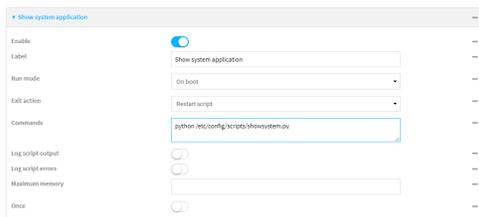

- ix. Click **Apply** to save the configuration and apply the change.
- The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- i. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- ii. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- iii. Add an application entry:

```
(config)> add system schedule script end
(config system schedule script 0)>
```

Scheduled scripts are enabled by default. To disable:

```
(config system schedule script 0)> enable false
(config system schedule script 0)>
```

- iv. Provide a label for the script:

```
(config system schedule script 0)> label "Show system application"
```

- v. Configure the application to run automatically when the device reboots:

```
(config system schedule script 0)> when boot
(config system schedule script 0)>
```

- vi. Configure the application to restart if it crashes:

```
(config system schedule script 0)> exit_action restart
(config system schedule script 0)>
```

- vii. Set the command that will execute the application:

```
(config system schedule script 0)> commands "python
/etc/config/scripts/showsystem.py"
(config system schedule script 0)>
```

- viii. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- b. Run the showsystem.py application. You can run the application by either rebooting the device, or by running it from the shell prompt.

- To reboot the device:

- i. From the WebUI:

- i. From the main menu, click **System**.

- ii. Click **Reboot**.

- ii. From the command line, at the Admin CLI prompt, type:

```
> reboot
```

- To run the application from the shell prompt:

- i. Log into the TX64 command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

- ii. Type the following at the shell prompt:

```
# python /etc/config/scripts/showsystem.py &
#
```

- iii. Exit the shell:

```
# exit
```

4. In Remote Manager, click **Documentation > API Explorer**.
5. Select the devices to use as the SCI target:
 - a. Click **SCI Targets**.
 - b. Click **Add Targets**.
 - c. Enter or select the device ID of one of the devices.
 - d. Click **Add**.
 - e. Enter or select the device ID of the second device and click **Add**.
 - f. Click **OK**.
6. Click **Examples > SCI > Data Service > Send Request**.

Code similar to the following will be displayed in the HTTP message body text box:

```
<sci_request version="1.0">
  <data_service>
    <targets>
      <device id="00000000-00000000-0000FFFF-A83CF6A3"/>
      <device id="00000000-00000000-0000FFFF-485740BC"/>
    </targets>
    <requests>
      <device_request target_name="myTarget">
        my payload string
      </device_request>
    </requests>
  </data_service>
</sci_request>
```

7. For the **device_request** element, replace the value of **target_name** with **showSystem**. This matches the **target** parameter of the **device_request.register** function in the `showsystem.py` application.

```
<device_request target_name="showSystem">
```

8. Click **Send**.

You should receive a response similar to the following:

```
<sci_reply version="1.0">
  <data_service>
    <device id="00000000-00000000-0000FFFF-A83CF6A3"/>
    <requests>
      <device_request target_name="showSystem" status="0">Model
        : Digi TX64
        Serial Number : TX64-000068
    </device_request>
    </requests>
  </data_service>
</sci_reply>
```

```

      Hostname           : TX64
      MAC                : 00:40:D0:13:35:36

      Hardware Version   : 50001959-01 A
      Firmware Version   : 19.11.72.53
      Bootloader Version : 1
      Firmware Build Date : Sat, 30 November 2019 13:22:15
      Schema Version     : 461

      Timezone           : UTC
      Current Time       : Sat, 30 November 2019 21:14:12
      CPU                : 1.1
      Uptime             : 1 day, 21 hours, 49 minutes, 47
seconds (164987s)
      Temperature       : 39C

      Contact            : Jane Smith

      Disk
      ----
      Load Average      : 0.10, 0.05, 0.00
      RAM Usage          : 85.176MB/250.484MB (34%)
      Disk /etc/config Usage : 0.068MB/13.416MB (1%)
      Disk /opt Usage    : 47.724MB/5309.752MB (1%)
      Disk /overlay Usage : MB/MB (%)
      Disk /tmp Usage    : 0.004MB/40.96MB (0%)
      Disk /var Usage    : 0.820MB/32.768MB (3%)</device_request>
</requests>
</device>
<device id="00000000-00000000-0000FFFF-485740BC"/>
<requests>
  <device_request target_name="showSystem" status="0">Model
  : Digi TX64
  Serial Number       : TX64-000023
  Hostname            : TX64
  MAC                 : 0040D026791C

  Hardware Version   : 50001959-01 A
  Firmware Version   : 19.11.72.53
  Bootloader Version : 1
  Firmware Build Date : Sat, 30 November 2019 13:22:15
  Schema Version     : 461

  Timezone           : UTC
  Current Time       : Sat, 30 November 2019 21:14:12
  CPU                : 1.1
  Uptime             : 4 day, 13 hours, 43 minutes, 22
seconds (395002s)
  Temperature       : 37C

  Contact            : Omar Ahmad
  Disk
  ----
  Load Average      : 0.10, 0.05, 0.00
  RAM Usage          : 85.176MB/250.484MB (34%)
  Disk /etc/config Usage : 0.068MB/13.416MB (1%)
  Disk /opt Usage    : 47.724MB/5309.752MB (1%)

```

```

        Disk /overlay Usage      : MB/MB(%)
        Disk /tmp Usage          : 0.004MB/40.96MB(0%)
        Disk /var Usage          : 0.820MB/32.768MB(3%)</device_request>
    </requests>
</device>
</data_service>
</sci_request>

```

Help for using Python to respond to Digi Remote Manager SCI requests

Get help for respond to Digi Remote Manager Server Command Interface (SCI) requests by accessing help for **digidevice.device_request**:

1. Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```

# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>

```

3. Import the **device_request** submodule:

```

>>> from digidevice import device_request
>>>

```

4. Use the help command with **device_request**:

```

>>> help(device_request)
Help on module digidevice.device_request in digidevice:

NAME
digidevice.device_request - APIs for registering device request handlers
...

```

You can also use the help command with available **device_request** functions:

- Use the help command with **device_request.register**:

```

>>> help(device_request.register)
Help on function register in module digidevice.device_request:

register(target:str, response_callback:Callable[[str, str], str],
status_callback:Callable[[int, str], NoneType]=None, xml_
encoding:str='UTF-8')
...

```

- Use the help command with **device_request.unregister**:

```
>>> help(device_request.unregister)
Help on function unregister in module digidevice.device_request:

unregister(target:str) -> bool
...

```

5. Use **Ctrl-D** to exit the Python session. You can also exit the session using **exit()** or **quit()**.

Use digidevice runtime to access the runtime database

Use the **runt** submodule to access and modify the device runtime database.

Read from the runtime database

Use the **keys()** and **get()** methods to read the device configuration:

1. Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>

```

3. Import the **runt** submodule:

```
>>> from digidevice import runt
>>>

```

4. Use **start()** method to open the runtime database:

```
>>> runt.start()
>>>

```

5. Display available keys in the runtime database:

```
>>> print(runt.keys(""))
['advanced', 'drm', 'firmware', 'location', 'manufacture', 'metrics', 'mm',
'network', 'pam', 'serial', 'system']
>>> print(runt.keys("system"))
['boot_count', 'chassis', 'cpu_temp', 'cpu_usage', 'disk', 'load_avg',
'local_time', 'mac', 'mcu', 'model', 'ram', 'serial', 'uptime']
>>> print(runt.get("system.mac"))
00:40:D0:13:35:36

```

6. Close the runtime database:

```
>>> runt.stop()
>>>
```

Modify the runtime database

Use the **set()** method to modify the runtime database:

1. Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the **runt** submodule:

```
>>> from digidevice import runt
>>>
```

4. Use **start()** method to open the runtime database:

```
>>> runt.start()
>>>
```

5. Use the **set()** method to make changes to the runtime database:

```
>>> runt.set("my-variable", "my-value")
>>>
```

6. Use the **get()** method to verify the change:

```
>>> print(runt.get("my-variable"))
my-variable
>>>
```

7. Close the runtime database:

```
>>> runt.stop()
>>>
```

8. Use **Ctrl-D** to exit the Python session. You can also exit the session using **exit()** or **quit()**.

Help for using Python to access the runtime database

Get help for reading and modifying the device runtime database by accessing help for **digidevice.runt**:

1. Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the **runt** submodule:

```
>>> from digidevice import runt
>>>
```

4. Use the help command with **runt**:

```
>>> help(runt)

Help on module acl.runt in digidevice:

NAME
acl.runt - Python interface to ACL runtime database (runt).
...
```

5. Use **Ctrl-D** to exit the Python session. You can also exit the session using **exit()** or **quit()**.

Using Python to upload the device name to Digi Remote Manager

The **name** submodule can be used to upload a custom name for your device to Digi Remote Manager. When you use the **name** submodule to upload a custom device name to Remote Manager, the following issues apply:

- If the name is being used by to another device in your Remote Manager account, the name will be removed from the previous device and added to the new device.
- If Remote Manager is configured to apply a profile to a device based on the device name, changing the name of the device may cause Remote Manager to automatically push a profile onto the device.

Together, these two features allow you to swap one device for another by using the **name** submodule to change the device name, while guaranteeing that the new device will have the same configuration as the previous one.

Note Because causing a profile to be automatically pushed from Remote Manager may change the behavior of the device, including overwriting existing usernames and passwords, the **name** submodule should be used with caution. As a result, support for this functionality is disabled by default on Remote Manager.

Enable support on Digi Remote Manager for uploading custom device names

1. In Remote Manager, select **Documentation > API Explorer**.
2. For **Path**, type `/ws/v1/settings/inventory/AllowDeviceToSetOwnNameEnabled`.
3. For **HTTP Method**, select **POST**.
4. In the HTTP message body text box, type the following:

```
{
  "name" : "AllowDeviceToSetOwnNameEnabled",
  "value" : "true"
}
```

5. Click **Send**.

Upload a custom name

1. Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the **name** submodule:

```
>>> from digidevice import name
```

4. Upload the name to Remote Manager:

```
>>> name.upload("my_name")
```

Use **Ctrl-D** to exit the Python session. You can also exit the session using **exit()** or **quit()**.

- 5.

Help for upload the device name to Digi Remote Manager

Get help for uploading the device name to Digi Remote Manager by accessing help for **digidevice.name**:

1. Log into the TX64 command line as a user with shell access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the **name** submodule:

```
>>> from digidevice import name
>>>
```

4. Use the help command with **name**:

```
>>> help(name)

Help on module digidevice.name in digidevice:

NAME
digidevice.name - API for uploading name from the device
...
```

5. Use **Ctrl-D** to exit the Python session. You can also exit the session using **exit()** or **quit()**.

The digidevice led submodule

Use the **led** submodule to redefine the purpose of any front-panel LED on the TX64 device. With this submodule, you can:

- Gain control of the LED with the `led.acquire()` function.
- Define the state of the LED with the `led.set()` function.
- Use the `use()` function to create a function that acquires, sets, and releases an LED.
- Optionally release control of the LED with the `led.release()` function.

See [Use Python to set the state of LEDs](#) for instructions on using these methods.

Available LEDs

LED	Available colors	Attribute name
Power	Blue	Led.POWER
GNSS	Green	Led.GNSS
WIFI1	Green	Led.WIFI1
WIFI2	Green	Led.WIFI2
WWAN1 Signal	Green Yellow	Led.WWAN1_SIG_GREEN Led.WWAN1_SIG_YELLOW
WWAN1 Service	Green Yellow	Led.WWAN1_SERV_GREEN Led.WWAN1_SERV_YELLOW

LED	Available colors	Attribute name
WWAN2 Signal	Green Yellow	Led.WWAN2_SIG_GREEN Led.WWAN2_SIG_YELLOW
WWAN2 Service	Green Yellow	Led.WWAN2_SERV_GREEN Led.WWAN2_SERV_YELLOW
All available LEDs		Led.ALL

Available LED states

State	Attribute name
Solid on	State.ON
Off	State.OFF
Flashing	State.FLASH
Fast flash	State.FLASH_FAST

Use Python to set the state of LEDs

The following example uses an interactive Python session to set the state of all LEDs to flashing:

1. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.6.10 (default, Jan 31 2020, 08:45:19)
[GCC 8.3.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

2. Import the **led** submodule:

```
>>> from digidevice import led
```

3. Import the **Led** and **State** objects from the **led** submodule:

```
>>> from digidevice.led import Led, State
```

4. Use `led.acquire()` to gain control of the all LEDs:

```
>>> led.acquire(Led.ALL)
```

5. Use `led.set()` to set the state of the LEDs:

```
>>> led.set(Led.ALL, State.FLASH)
```

6. (Optional) Use `led.release()` to release the LEDs to system control:

```
>>> led.release(Led.ALL)
```

7. Use **Ctrl-D** to exit the Python session. You can also exit the session using **exit()** or **quit()**.

The use(led) function

The use(led) function can be used to acquire control of LEDs and then release them back to system control.

To create a function that acquires control of the power LED, sets it to a state of fast flashing, and then releases control when the function has completed, use the following code in a python application:

```
with use(Led.POWER) as pwr:  
    pwr(State.FLASH)
```

Releasing the LEDs to system control

During a Python interactive session, or from within a Python script, you can release control of the LED from Python to system control using the led.release() method.

If the Python script or session terminates prior to releasing control to the system, the LEDs will continue to have the state that Python set to them, until the device is rebooted. See [Configure applications to run automatically](#) for information about configuring the device so that the LED state is controlled by the Python script even after reboot.

If any system processes attempt to take control of the LED while Python is in control of it, the state information from the system process is recorded but the LED state is not updated until Python releases control of the LED. When the LED is returned to system control, the state of the LED will reflect the correct, recorded state information.

User authentication

This chapter contains the following topics:

TX64 user authentication	500
User authentication methods	500
Authentication groups	508
Local users	519
Terminal Access Controller Access-Control System Plus (TACACS+)	532
Remote Authentication Dial-In User Service (RADIUS)	539
Disable shell access	545
Set the idle timeout for TX64 users	547
Example user configuration	550

TX64 user authentication

User authentication on the TX64 has the following features and default configuration:

Feature	Description	Default configuration
Idle timeout	Determines how long a user session can be idle before the system automatically disconnects.	<ul style="list-style-type: none"> 10 minutes.
Allow shell	<p>If disabled, prevents all authentication prohibits access to the shell prompt for all authentication groups. This does not prevent access to the Admin CLI.</p> <hr/> <p>Note If shell access is disabled, re-enabling it will erase the device's configuration and perform a factory reset.</p> <hr/>	<ul style="list-style-type: none"> Enabled.
Methods	Determines how users are authenticated for access: local users , TACACS+ , or RADIUS .	<ul style="list-style-type: none"> local users.
Groups	Associates access permissions for a group. . You can modify the released groups and create additional groups as needed for your site. A user can be assigned to more than one group.	<ul style="list-style-type: none"> admin: Provides the logged-in user with administrative and shell access. serial: Provides the logged-in user with access to serial ports.
Users	Local users for the TX64.	<ul style="list-style-type: none"> admin: Belongs to both the admin and serial groups.
TACACS+	Terminal Access Controller Access-Control System Plus servers and users.	<ul style="list-style-type: none"> Not configured.
RADIUS	Remote Authentication Dial-In User Service servers and users.	<ul style="list-style-type: none"> Not configured.

User authentication methods

Authentication methods determine how users of the TX64 device are authenticated. Available authentication methods are:

- **Local users:** User are authenticated on the local device.
- **RADIUS:** Users authenticated by using a remote RADIUS server for authentication.
See [Remote Authentication Dial-In User Service \(RADIUS\)](#) for information about configuring RADIUS authentication.
- **TACACS+:** Users authenticated by using a remote TACACS+ server for authentication.
See [Terminal Access Controller Access-Control System Plus \(TACACS+\)](#) for information about configuring TACACS+ authentication.

Add a new authentication method


Required configuration items

- The types of authentication method to be used:


To add an authentication method:

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

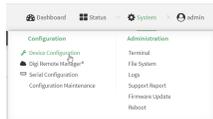

The **Configuration** window is displayed.

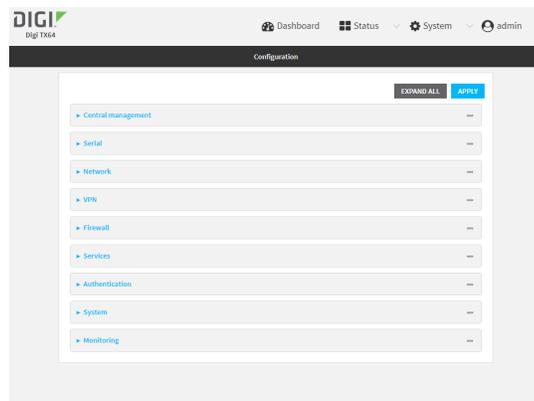

3. Click **Authentication > Methods**.
4. For **Add Method**, click **+**.

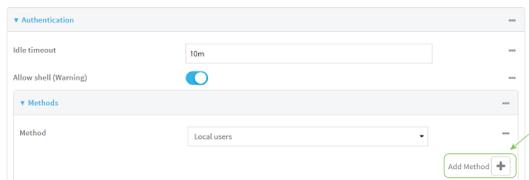

5. Select the appropriate authentication type for the new method from the **Method** drop-down.



Note Authentication methods are attempted in the order they are listed until the first successful authentication result is returned. See [Rearrange the position of authentication methods](#) for information about how to reorder the authentication methods.

6. Repeat these steps to add additional methods.
7. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

Authentication methods are attempted in the order they are listed until the first successful authentication result is returned. This procedure describes how to add methods to various places in the list.

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add the new authentication method to the appropriate location in the list:
 - To determine the current list of authentication methods:
 - a. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
 - b. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- c. Use the **show auth method** command to display the current authentication methods configuration:

```
(config)> show auth method
0 local
(config)>
```

- To add the new authentication method to the beginning of the list, use the index value of **0** to indicate that it should be added as the first method:

```
(config)> add auth method 0 auth_type
(config)>
```

where *auth_type* is one of **local**, **radius**, or **tacacs+**.

- To add the new authentication method to the end of the list, use the index keyword **end**:

```
(config)> add auth method end auth_type
(config)>
```

where *auth_type* is one of **local**, **radius**, or **tacacs+**.

- To add the new authentication in another location in the list, use an index value to indicate the appropriate position. For example:

```
(config)> add auth method 1 auth_type
(config)>
```

where *auth_type* is one of **local**, **radius**, or **tacacs+**.

- You can also use the **move** command to rearrange existing methods. See [Rearrange the position of authentication methods](#) for information about how to reorder the authentication methods.

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.


Delete an authentication method

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

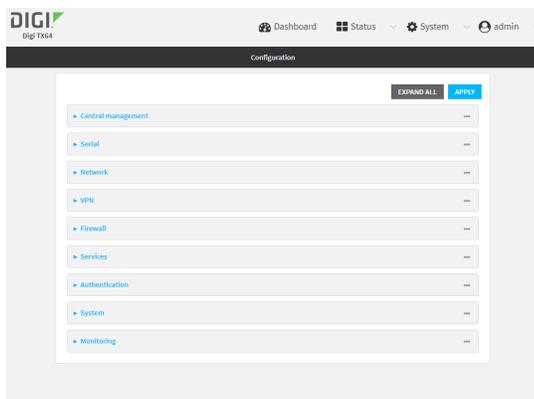

- 3. Click **Authentication > Methods**.
- 4. Click the menu icon (...) next to the method and select **Delete**.

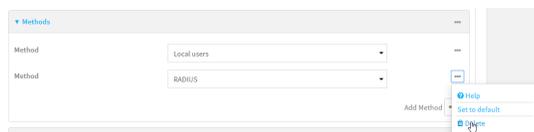

- 5. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- 1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Use the **show auth method** command to determine the index number of the authentication method to be deleted:

```
(config)> show auth method
0 local
1 radius
2 tacacs+
(config)>
```

4. Delete the appropriate authentication method:

```
(config)> del auth method n
```

Where *n* is index number of the authentication method to be deleted. For example, to delete the TACACS+ authentication method as displayed by the example **show** command, above:

```
(config)> del auth method 2
```

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.


Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Rearrange the position of authentication methods

WebUI


Authentication methods are reordered by changing the method type in the **Method** drop-down for each authentication method to match the appropriate order.

For example, the following configuration has **Local users** as the first method, and **RADIUS** as the second.

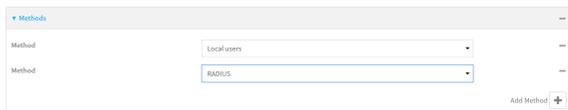


To reorder these so that **RADIUS** is first and **Local users** is second:

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

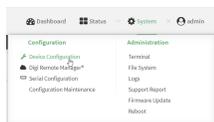

The **Configuration** window is displayed.

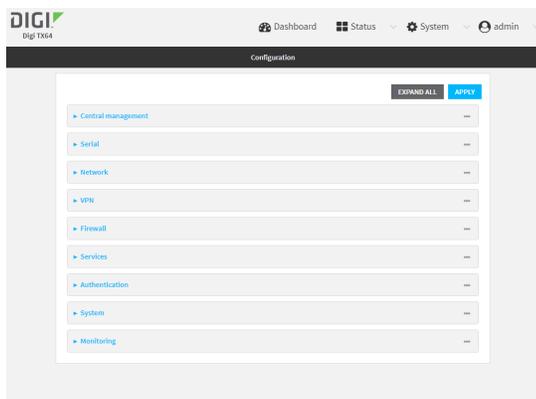

3. Click to expand the first **Method**.
4. In the **Method** drop-down, select **RADIUS**.



5. Click to expand the second **Method**.
6. In the **Method** drop-down, select **Local users**.



7. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Use the **show** command to display current configuration:

```
(config)> show auth method
0 local
1 radius
(config)>
```

4. Use the **move** command to rearrange the methods:

```
(config)> move auth method 1 0
(config)>
```

5. Use the **show** command again to verify the change:

```
(config)> show auth method
0 radius
1 local
(config)>
```

6. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Authentication groups

Authentication groups are used to assign access rights to TX64 users. Three types of access rights can be assigned:

- **Admin access:** Users with Admin access can be configured to have either:
 - The ability to manage the TX64 device by using the WebUI or the Admin CLI.
 - Read-only access to the WebUI and Admin CLI.
- **Shell access:** Users with Shell access have the ability to access the shell when logging into the TX64 via ssh, telnet, or the serial console.
Shell access is not available if the **Allow shell** parameter has been disabled. See [Disable shell access](#) for more information about the **Allow shell** parameter.
- **Serial access:** Users with Serial access have the ability to log into the TX64 device by using the serial console.

Preconfigured authentication groups

The TX64 device has two preconfigured authentication groups:

- The **admin** group is configured by default to have full **Admin access** and **Shell access**.
Shell access is not available if the **Allow shell** parameter has been disabled. See [Disable shell access](#) for more information about the **Allow shell** parameter.

- The **serial** group is configured by default to have **Serial access**.

The preconfigured authentication groups cannot be deleted, but the access rights defined for the group are configurable.

This section contains the following topics:

Change the access rights for a predefined group	510
Add an authentication group	512
Delete an authentication group	516

Change the access rights for a predefined group


By default, two authentication groups are predefined: **admin** and **serial**. To change the access rights of the predefined groups:

≡ WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

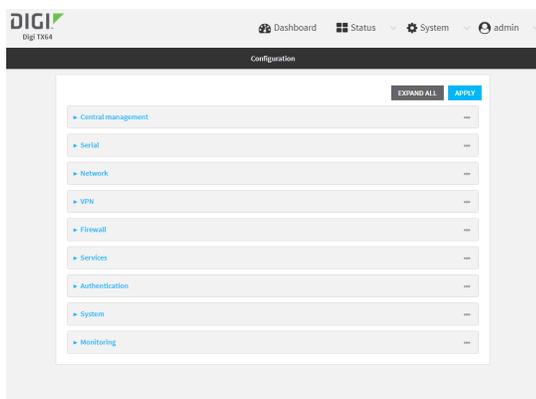

3. Click **Authentication > Groups**.
4. Click the authentication group to be changed, either **admin** or **serial**, to expand its configuration node.
5. Click the box next to the following options, as appropriate, to enable or disable access rights for each:

- **Admin access**

For groups assigned Admin access, you can also determine whether the **Access level** should be **Full access** or **Read-only access**.


- **Full access** provides users of this group with the ability to manage the TX64 device by using the WebUI or the Admin CLI.
- **Read-only access** provides users of this group with read-only access to the WebUI and Admin CLI.

The default is **Full access**.

- **Interactive shell access**

Shell access is not available if the **Allow shell** parameter has been disabled. See [Disable shell access](#) for more information about the **Allow shell** parameter.

- **Serial access**

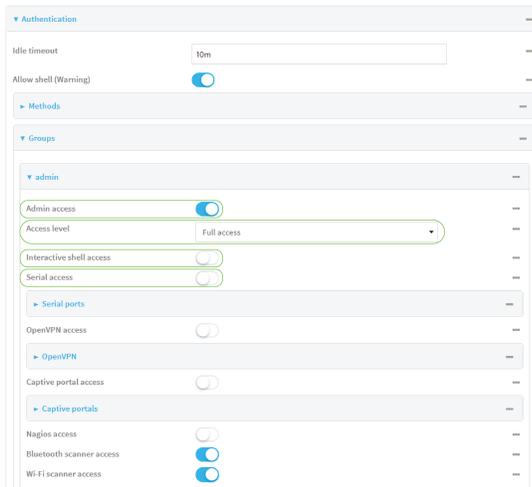

6. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable or disable access rights for the group. For example:

- Admin access:
 - To set the access level for Admin access of the **admin** group:

```
(config)> auth group admin acl admin level value
(config)>
```

where *value* is either:

- **full**: provides users of this group with the ability to manage the TX64 device by using the WebUI or the Admin CLI.
- **read-only**: provides users of this group with read-only access to the WebUI and Admin CLI.

The default is **full**.

- To disable Admin access for the **admin** group:

```
(config)> auth group admin acl admin enable false
(config)>
```

- Shell access:

- To enable Shell access for the **serial** group:

```
(config)> auth group serial acl shell enable true
(config)>
```

Shell access is not available if the **Allow shell** parameter has been disabled. See [Disable shell access](#) for more information about the **Allow shell** parameter.

- Serial access:

- To enable Serial access for the **admin** group:

```
(config)> auth group admin acl serial enable true
(config)>
```

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Add an authentication group

Required configuration items

- The access rights to be assigned to users that are assigned to this group.

Additional configuration items

- Access rights to OpenVPN tunnels, and the tunnels to which they have access.
- Access rights to captive portals, and the portals to which they have access.
- Access rights to query the device for Nagios monitoring.

To add an authentication group:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.

- **Read-only access read-only**: provides users of this group with read-only access to the WebUI and Admin CLI.

The default is **Full access full**.

- **Shell access**

Shell access is not available if the **Allow shell** parameter has been disabled. See [Disable shell access](#) for more information about the **Allow shell** parameter.

- **Serial access**

- (Optional) Configure OpenVPN access. See for further information.
- (Optional) Configure captive portal access:
 - Enable captive portal access rights for users of this group by checking the box next to **Captive portal access**.
 - Click **Captive portals** to expand the **Captive portal** node.
 - For **Add Captive portal**, click **+**.
 - In the **Captive portal** dropdown, select a captive portal to which users of this group will have access.
 - Click **+** again to add additional captive portals.
- (Optional) Enable users that belong to this group to query the device for Nagios monitoring by checking the box next to **Nagios access**.
- (Optional) Enable users that belong to this group to access the Bluetooth scanning service by checking the box next to **Bluetooth scanner access**.
- (Optional) Enable users that belong to this group to access the Wi-Fi scanning service by checking the box next to **Wi-Fi scanner access**.
- Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:


```
> config
(config)>
```
- Use the **add auth group** command to add a new authentication. For example, to add a group named **test**:

```
(config)> add auth group test
(config auth group test)>
```

4. Enable access rights for the group:

■ Admin access:

```
(config auth group test)> acl admin enable true
(config)>
```

■ Set the access level for Admin access:

```
(config)> auth group admin acl admin level value
(config)>
```

where *value* is either:

- **full**: provides users of this group with the ability to manage the TX64 device by using the WebUI or the Admin CLI.
- **read-only**: provides users of this group with read-only access to the WebUI and Admin CLI.

The default is **full**.

■ Shell access:

```
(config auth group test)> acl shell enable true
(config)>
```

Shell access is not available if the **Allow shell** parameter has been disabled. See [Disable shell access](#) for more information about the **Allow shell** parameter.

■ Serial access:

```
(config auth group test)> acl serial enable true
(config)>
```

5. (Optional) Configure captive portal access:

a. Return to the config prompt by typing three periods (...):

```
(config auth group test)> ...
(config)>
```

b. Enable captive portal access rights for users of this group:

```
(config)> auth group test acl portal enable true
(config)>
```

c. Add a captive portal to which users of this group will have access:

i. Determine available portals:

```
(config)> show firewall portal
portal1
    auth none
    enable true
```

```
http redirect
no interface
no message
no redirect_url
no terms
timeout 24h
no title
(config)>
```

- ii. Add a captive portal:

```
(config)> add auth group test acl portal portals end portal1
(config)>
```

6. (Optional) Configure Nagios monitoring:

```
(config)> auth group test acl nagios enable true
(config)>
```

7. (Optional) Enable users that belong to this group to access the Bluetooth scanning service:

```
(config)> auth group test acl bluetooth_scanner enable true
(config)>
```

8. (Optional) Enable users that belong to this group to access the Wi-Fi scanning service:

```
(config)> auth group group test acl wifi_scanner enable true
(config)>
```

9. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

10. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.


Delete an authentication group

By default, the TX64 device has two preconfigured authentication groups: **admin** and **serial**. These groups cannot be deleted.


To delete an authentication group that you have created:



1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

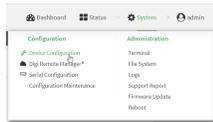

The **Configuration** window is displayed.

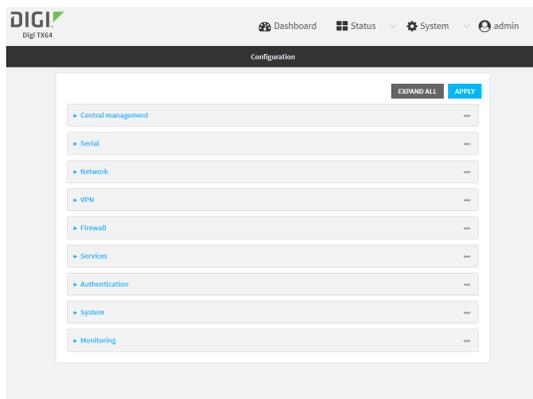

3. Click **Authentication > Groups**.
4. Click the menu icon (...) next to the group to be deleted and select **Delete**.



5. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. At the config prompt, type:

```
(config)> del auth group groupname
```

4. Save the configuration and apply the change:

```
(config)> save  
Configuration saved.  
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Local users

Local users are authenticated on the device without using an external authentication mechanism such as TACACS+ or RADIUS. Local user authentication is enabled by default, with one preconfigured default user.

Default user

At manufacturing time, each TX64 device comes with a default user configured as follows:

- Username: **admin**.
- Password: The default password is displayed on the label on the bottom of the device.

Note The default password is a unique password for the device, and is the most critical security feature for the device. If you reset the device to factory defaults, you must log in using the default user and password, and you should immediately [change the password](#) to a custom password. Before deploying or mounting the TX64 device, record the default password, so you have the information available when you need it even if you cannot physically access the label on the bottom of the device.

The default **admin** user is preconfigured with both Admin and Serial access. You can configure the **admin** user account to fit with the needs of your environment.

This section contains the following topics:

Change a local user's password	520
Configure a local user	522
Delete a local user	529

Change a local user's password


To change a user's password:

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

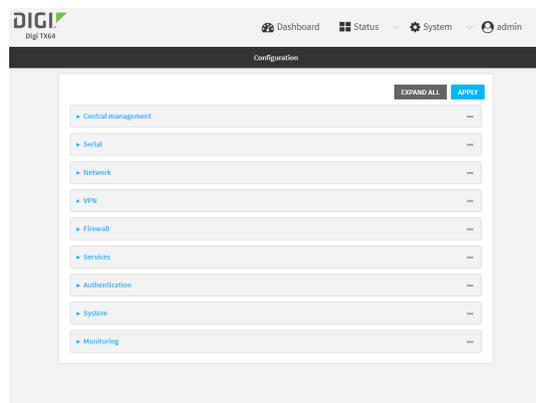

3. Click **Authentication > Users**.
4. Click the username to expand the user's configuration node.
5. For **Password**, enter the new password.

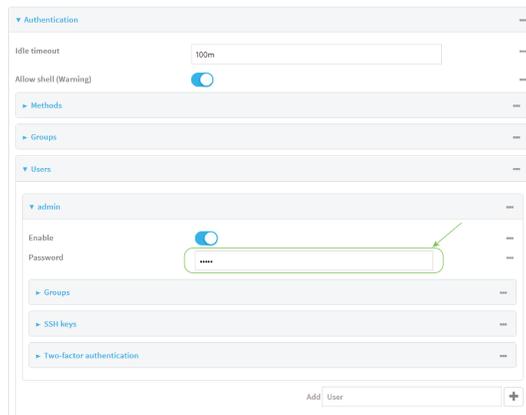

You can also change the password for the active user by clicking the user name in the menu bar:

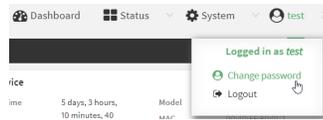

The active user must have full Admin access rights to be able to change the password.

6. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. At the config prompt, type:

```
(config)> auth user username password pwd
```

Where:

- *username* is the name of the user.
- *pwd* is the new password for the user.

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a local user

Required configuration items

- A username.
- A password. For security reasons, passwords are stored in hash form. There is no way to get or display passwords in clear-text form, although prior to saving the configuration, the password can be shown by clicking **Reveal**.
- The authentication group or groups from which the user will inherit access rights. See [Authentication groups](#) for information about configuring groups.

Additional configuration items

- An optional public ssh key, to authenticate the user when using passwordless SSH login.
- Two-factor authentication information for user login over SSH, telnet, and the serial console:
 - The verification type for two-factor authentication: Either time-based or counter-based.
 - The security key.
 - Whether to allow passcode reuse (time based verification only).
 - The passcode refresh interval (time based verification only).
 - The valid code window size.
 - The login limit.

- The login limit period.
- One-time use eight-digit emergency scratch codes.


To configure a local user:

≡ WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

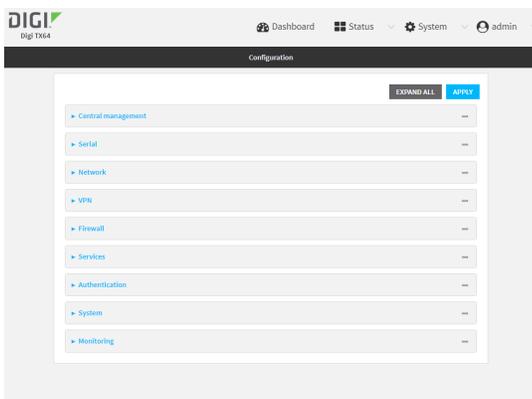

3. Click **Authentication > Users**.
4. In **Add User**, type a name for the user and click **+**.

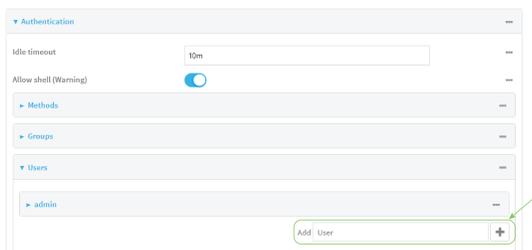

The user configuration window is displayed.

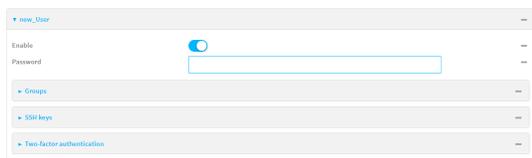

The user is enabled by default. To disable, click to toggle off **Enable**.

5. Enter a password for the user.

6. Add groups for the user.

Groups define user access rights. See [Authentication groups](#) for information about configuring groups.

- a. Click **Groups**.
- b. For **Add Group**, click **+**.



- c. For **Group**, select an appropriate group.




Note Every user must be configured with at least one group. You can add multiple groups to a user by clicking **Add** again and selecting the next group.

7. (Optional) Add SSH keys for the user to use passwordless SSH login:

- a. Click **SSH keys**.
- b. In **Add SSH key**, paste or type a public encryption key that this user can use for passwordless SSH login and click **+**.

8. (Optional) Configure two-factor authentication for SSH, telnet, and serial console login:

- a. Click **Two-factor authentication**.
- b. Check **Enable** to enable two-factor authentication for this user.
- c. Select the **Verification type**:
 - **Time-based (TOTP)**: Time-based One-Time Password (TOTP) authentication uses the current time to generate a one-time password.
 - **Counter-based (HOTP)**: HMAC-based One-Time Password (HOTP) uses a counter to validate a one-time password.
- d. Generate a **Secret key**:
 - i. Click **...** next to the field label and select **Generate secret key**.

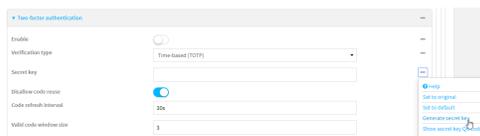

- ii. To display the QR code for the secret key, click **...** next to the field label and select **Show secret key QR code**.
- iii. Copy the secret key, or scan or copy the QR code, for use with an application or mobile device to generate passcodes.

Note To copy the QR code, right-click the QR code and select your browser's save image functionality.

- e. For time-based verification only, select **Disallow code reuse** to prevent a code from being used more than once during the time that it is valid.
 - f. For time-based verification only, in **Code refresh interval**, type the amount of time that a code will remain valid.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**. For example, to set **Code refresh interval** to ten minutes, enter **10m** or **600s**.
 - g. In **Valid code window size**, type the allowed number of concurrently valid codes. In cases where TOTP is being used, increasing the **Valid code window size** may be necessary when the clocks used by the server and client are not synchronized.
 - h. For **Login limit**, type the number of times that the user is allowed to attempt to log in during the **Login limit period**. Set **Login limit** to **0** to allow an unlimited number of login attempts during the **Login limit period**.
 - i. For **Login limit period**, type the amount of time that the user is allowed to attempt to log in.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**. For example, to set **Login limit period** to ten minutes, enter **10m** or **600s**.
 - j. Scratch codes are emergency codes that may be used once, at any time. To add a scratch code:
 - i. Click **Scratch codes**.
 - ii. For **Add Code**, click **+**.
 - iii. For **Code**, enter the scratch code. The code must be eight digits, with a minimum of 10000000.
 - iv. Click **+** again to add additional scratch codes.
9. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a user. For example, to create a user named **new_user**:

```
(config)> add auth user new_user
(config auth user new_user)>
```

The user is enabled by default. To disable the user, type:

```
(config auth user new_user)> enable false
(config auth user new_user)>
```

4. Assign a password to the user:

```
(config auth user new_user> password pwd
(config auth user new_user)>
```

5. Add groups for the user.

Groups define user access rights. See [Authentication groups](#) for information about configuring groups.

- a. Add a group to the user. For example, to add the admin group to the user:

```
(config auth user new_user> add group end admin
(config auth user new_user)>
```

Note Every user must be configured with at least one group.

- b. (Optional) Add additional groups by repeating the add group command:

```
(config auth user new_user> add group end serial
(config auth user new_user)>
```

To remove a group from a user:

- a. Use the **show** command to determine the index number of the group to be deleted:

```
(config auth user new_user> show group
0 admin
1 serial
(config auth user new_user>
```

- b. Type the following:

```
(config auth user new_user)> del group n
(config auth user new_user)>
```

Where *n* is index number of the authentication method to be deleted. For example, to delete the serial group as displayed by the example **show** command, above:

```
(config auth user new_user)> del group 1
(config auth user new_user)>
```

6. (Optional) Add SSH keys for the user to use passwordless SSH login:
 - a. Change to the user's `ssh_key` node:

```
(config auth user new_user)> ssh_key
(config auth user new_user ssh_key)>
```

- b. Add the key by using the `ssh_key` command and pasting or typing a public encryption key that this user can use for passwordless SSH login:

```
(config auth user new_user ssh_key)> ssh_key key
(config auth user new_user ssh_key)>
```

7. (Optional) Configure two-factor authentication for SSH, telnet, and serial console login:
 - a. Change to the user's two-factor authentication node:

```
(config auth user new_user)> 2fa
(config auth user new_user 2fa)>
```

- b. Enable two-factor authentication for this user:

```
(config auth user new_user 2fa)> enable true
(config auth user new_user 2fa)>
```

- c. Configure the verification type. Allowed values are:
 - **totp**: Time-based One-Time Password (TOTP) authentication uses the current time to generate a one-time password.
 - **hotp**: HMAC-based One-Time Password (HOTP) uses a counter to validate a one-time password.

The default value is **totp**.

```
(config auth user new_user 2fa)> type totp
(config auth user new_user 2fa)>
```

- d. Add a secret key:

```
(config auth user new_user 2fa)> secret key
(config auth user new_user 2fa)>
```

This key should be used by an application or mobile device to generate passcodes.

- e. For time-based verification only, enable **disallow_reuse** to prevent a code from being used more than once during the time that it is valid.

```
(config auth user new_user 2fa)> disallow_reuse true
(config auth user new_user 2fa)>
```

- f. For time-based verification only, configure the code refresh interval. This is the amount of time that a code will remain valid.

```
(config auth user new_user 2fa)> refresh_interval value
(config auth user new_user 2fa)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format ***number*{w|d|h|m|s}**.

For example, to set **refresh_interval** to ten minutes, enter either **10m** or **600s**:

```
(config auth user name 2fa)> refresh_interval 600s
(config auth user name 2fa)>
```

The default is **30s**.

- g. Configure the valid code window size. This represents the allowed number of concurrently valid codes. In cases where TOTP is being used, increasing the valid code window size may be necessary when the clocks used by the server and client are not synchronized.

```
(config auth user new_user 2fa)> window_size 3
(config auth user new_user 2fa)>
```

- h. Configure the login limit. This represents the number of times that the user is allowed to attempt to log in during the Login limit period. Set to 0 to allow an unlimited number of login attempts during the Login limit period

```
(config auth user new_user 2fa)> login_limit 3
(config auth user new_user 2fa)>
```

- i. Configure the login limit period. This is the amount of time that the user is allowed to attempt to log in.

```
(config auth user new_user 2fa)> login_limit_period value
(config auth user new_user 2fa)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format ***number*{w|d|h|m|s}**.

For example, to set **login_limit_period** to ten minutes, enter either **10m** or **600s**:

```
(config auth user name 2fa)> login_limit_period 600s
(config auth user name 2fa)>
```

The default is **30s**.

- j. Scratch codes are emergency codes that may be used once, at any time. To add a scratch code:

- i. Change to the user's scratch code node:

```
(config auth user new_user 2fa)> scratch_code
(config auth user new_user 2fa scratch_code)>
```

- ii. Add a scratch code:

```
(config auth user new_user 2fa scratch_code)> add end code
(config auth user new_user 2fa scratch_code)>
```

Where code is an digit number, with a minimum of 10000000.

iii. To add additional scratch codes, use the **add end code** command again.

8. Save the configuration and apply the change:

```
(config auth user new 2fa scratch_code)> save
Configuration saved.
>
```

9. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a local user


To delete a user from your TX64:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

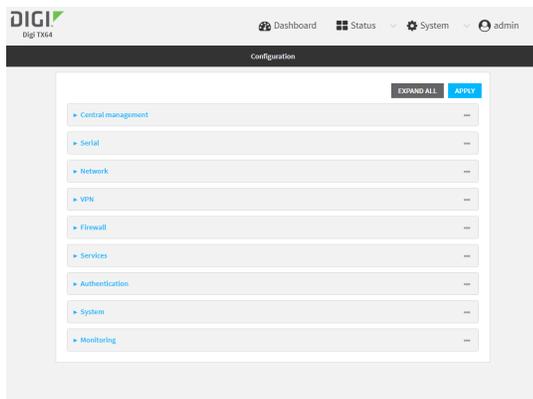

3. Click **Authentication > Users**.
4. Click the menu icon (...) next to the name of the user to be deleted and select **Delete**.



5. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of

the page to locate it.



 **Command line**

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. At the config prompt, type:

```
(config)> del auth user username
```

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Terminal Access Controller Access-Control System Plus (TACACS+)

Your TX64 device supports Terminal Access Controller Access-Control System Plus (TACACS+), a networking protocol that provides centralized authentication and authorization management for users who connect to the device. With TACACS+ support, the TX64 device acts as a TACACS+ client, which sends user credentials and connection parameters to a TACACS+ server over TCP. The TACACS+ server then authenticates the TACACS+ client requests and sends back a response message to the device.

When you are using TACACS+ authentication, you can have both local users and TACACS+ users able to log in to the device. To use TACACS+ authentication, you must set up a TACACS+ server that is accessible by the TX64 device prior to configuration. The process of setting up a TACACS+ server varies by the server environment.

This section contains the following topics:

TACACS+ user configuration	533
TACACS+ server failover and fallback to local authentication	534
Configure your TX64 device to use a TACACS+ server	534

TACACS+ user configuration

After setting up the TACACS+ server, you will need to configure one or more users on the server. When configured with TACACS+ support, the TX64 device uses the TACACS+ server for authentication (password verification) and authorization (assigning the access level of the user).

Example TACACS+ Configuration

With TACACS+, users are defined in the server configuration file. On Ubuntu, the default location and filename for the server configuration file is `/etc/tacacs+/tac_plus.conf`.

Note TACACS+ configuration, including filenames and locations, may vary depending on your platform and installation. This example assumes a Ubuntu installation.

To define users:

1. Open the TACACS+ server configuration file in a text editor. For example:

```
$ sudo gedit /etc/tacacs+/tac_plus.conf
```

2. Add users to the file using the following format. This example will create two users, one with admin and serial access, and one with only serial access.

```
user = user1 {
    name = "User1 for TX64"
    pap = cleartext password1
    service = system {
        groupname = admin,serial
    }
}
user = user2 {
    name = "User2 for TX64"
    pap = cleartext password2
    service = system {
        groupname = serial
    }
}
```

The value of the groupname attribute must correspond to authentication groups configured on your TX64 device. See [Authentication groups](#) for more information about authentication groups. The groupname attribute can contain one group or multiple groups in a comma-separated list.

3. Save and close the file.
4. Verify that your changes did not introduce any syntax errors:

```
sudo tac_plus -C /etc/tacacs+/tac_plus.conf -P
```

If successful, this command will echo the configuration file to standard out. If the command encounters any syntax errors, a message similar to this will display:

```
Error: Unrecognised token on line 1
```

5. Restart the TACACS+ server:

```
sudo /etc/init.d/tacacs_plus restart
```

TACACS+ server failover and fallback to local authentication

In addition to the primary TACACS+ server, you can also configure your TX64 device to use backup TACACS+ servers. Backup TACACS+ servers are used for authentication requests when the primary TACACS+ server is unavailable.

Falling back to local authentication

With user authentication methods, you can configure your TX64 device to use multiple types of authentication. For example, you can configure both TACACS+ authentication and local authentication, so that local authentication can be used as a fallback mechanism if the primary and backup TACACS+ servers are unavailable. Additionally, users who are configured locally but are not configured on the TACACS+ are still able to log into the device. Authentication methods are attempted in the order they are listed until the first successful authentication result is returned; therefore if you want to ensure that users are authenticated first through the TACACS+ server, and only authenticated locally if the TACACS+ server is unavailable or if the user is not defined on the TACACS+ server, then you should list the TACACS+ authentication method prior to the Local users authentication method.

See [User authentication methods](#) for more information about authentication methods.

If the TACACS+ servers are unavailable and the TX64 device falls back to local authentication, only users defined locally on the device are able to log in. TACACS+ users cannot log in until the TACACS+ servers are brought back online.

Configure your TX64 device to use a TACACS+ server

This section describes how to configure a TX64 device to use a TACACS+ server for authentication and authorization.

Required configuration items


- Define the TACACS+ server IP address or domain name.
- Define the TACACS+ server shared secret.
- The group attribute configured in the TACACS+ server configuration.
- The service field configured in the TACACS+ server configuration.
- Add TACACS+ as an authentication method for your TX64 device.

Additional configuration items


- Define the TACACS+ server port. It is configured to 49 by default.
- Add additional TACACS+ servers in case the first TACACS+ server is unavailable.

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

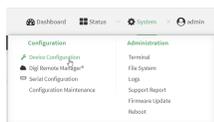


The **Configuration** window is displayed.

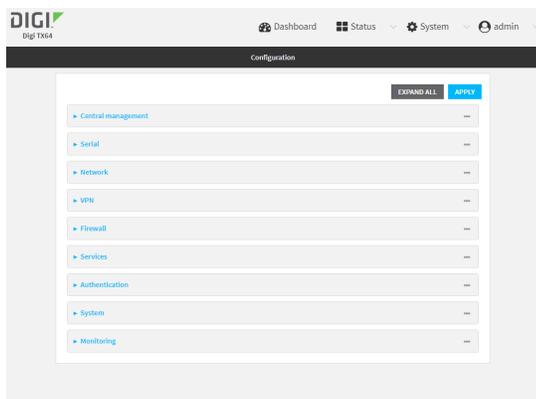

3. Click **Authentication > TACACS+ > Servers**.
4. For **Add server**, click **+**.

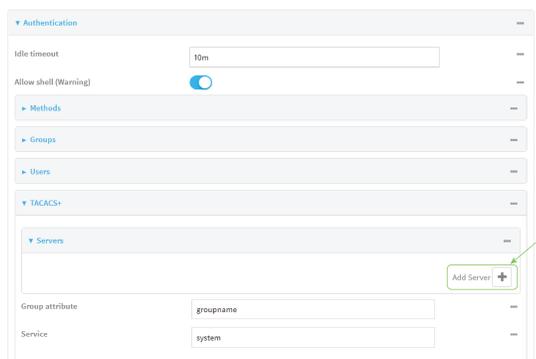

The TACACS+ server configuration window is displayed.

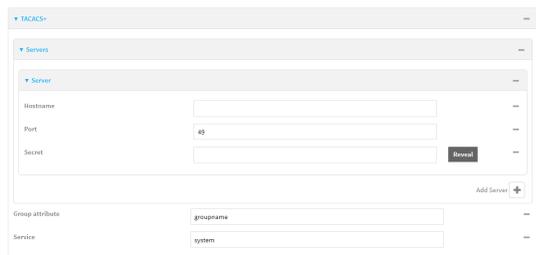


5. For **Hostname**, type the hostname or IP address of the TACACS+.
6. (Optional) Change the default **Port** setting to the appropriate port.
7. For **Secret**, type the TACACS+ server's shared secret. This is configured in the key parameter of the TACACS+ server's tac_plus.conf file, for example:


```
key = testing123
```

8. (Optional) For **Group attribute**, type the name of the attribute used in the TACACS+ server's configuration to identify the TX64 authentication group or groups that the user is a member of. For example, in [TACACS+ user configuration](#), the group attribute in the sample tac_plus.conf file is **groupname**, which is also the default setting in the TX64 configuration.

9. (Optional) For **Service**, type the value of the **service** attribute in the the TACACS+ server's configuration. For example, in [TACACS+ user configuration](#), the value of the **service** attribute in the sample tac_plus.conf file is **system**, which is also the default setting in the TX64 configuration.
10. (Optional) Click **+** again to add additional TACACS+ servers.
11. Add TACACS+ to the authentication methods:
 - a. Click **Authentication > Methods**.
 - b. For **Add method**, click **+**.

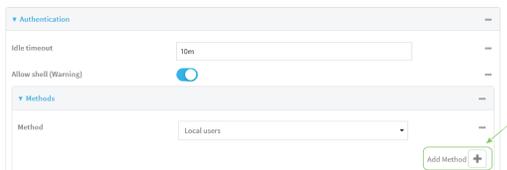

- c. Select **TACACS+** for the new method from the **Method** drop-down.

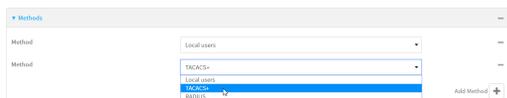

Authentication methods are attempted in the order they are listed until the first successful authentication result is returned.

12. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a TACACS+ server:

```
(config)> add auth tacacs+ server end
(config auth tacacs+ server 0)>
```

4. Enter the server IP address or hostname:

```
(config auth tacacs+ server 0)> hostname hostname|ip-address
(config auth tacacs+ server 0)>
```

5. (Optional) Change the default port setting to the appropriate port:

```
(config auth tacacs+ server 0)> port port
(config auth tacacs+ server 0)>
```

6. Enter the TACACS+ server's shared secret. This is configured in the key parameter of the TACACS+ server's tac_plus.conf file. For example:

```
(config auth tacacs+ server 0)> secret testing123
(config auth tacacs+ server 0)>
```

7. Return to the config prompt by typing three periods:

```
(config auth tacacs+ server 0)> ...
(config)>
```

8. (Optional) Configure the group_attribute. This is the name of the attribute used in the TACACS+ server's configuration to identify the TX64 authentication group or groups that the user is a member of. For example, in [TACACS+ user configuration](#), the group attribute in the sample tac_plus.conf file is **groupname**, which is also the default setting for the group_attribute in the TX64 configuration.

```
(config)> auth tacacs+ group_attribute attribute-name
(config)>
```

9. (Optional) Configure the type of service. This is the value of the **service** attribute in the the TACACS+ server's configuration. For example, in [TACACS+ user configuration](#), the value of the **service** attribute in the sample tac_plus.conf file is **system**, which is also the default setting in the TX64 configuration.

```
(config)> auth tacacs+ service service-name
(config)>
```

10. (Optional) Repeat the above steps to add additional TACACS+ servers.
11. Add TACACS+ to the authentication methods. Authentication methods are attempted in the order they are listed until the first successful authentication result is returned. This example will add TACACS+ to the end of the list. See [User authentication methods](#) for information about adding methods to the beginning or middle of the list.

```
(config)> add auth method end tacacs+
(config)>
```

12. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

13. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Remote Authentication Dial-In User Service (RADIUS)

Your TX64 device supports Remote Authentication Dial-In User Service (RADIUS), a networking protocol that provides centralized authentication and authorization management for users who connect to the device. With RADIUS support, the TX64 device acts as a RADIUS client, which sends user credentials and connection parameters to a RADIUS server over UDP. The RADIUS server then authenticates the RADIUS client requests and sends back a response message to the device.

When you are using RADIUS authentication, you can have both local users and RADIUS users able to log in to the device. To use RADIUS authentication, you must set up a RADIUS server that is accessible by the TX64 device prior to configuration. The process of setting up a RADIUS server varies by the server environment. An example of a RADIUS server is FreeRADIUS.

This section contains the following topics:

RADIUS user configuration	540
RADIUS server failover and fallback to local configuration	540
Configure your TX64 device to use a RADIUS server	541

RADIUS user configuration

After setting up the RADIUS server, you will need to configure one or more users on the server. When configured with RADIUS support, the TX64 device uses the RADIUS server for authentication (password verification) and authorization (assigning the access level of the user).

Example FreeRADIUS Configuration

With FreeRADIUS, users are defined in the **users** file in your FreeRADIUS installation. To define users:

1. Open the FreeRadius user file in a text editor. For example:

```
$ sudo gedit /etc/freeradius/3.0/users
```

2. Add users to the file using the following format:

```
user1 Cleartext-Password := "user1"
      Unix-FTP-Group-Names := "admin"

user2 Cleartext-Password := "user2"
      Unix-FTP-Group-Names := "serial"
```

The value of the Unix-FTP-Group-Names attribute must correspond to authentication groups configured on your TX64. See [Authentication groups](#) for more information about authentication groups. The groupname attribute can contain one group or multiple groups in a comma-separated list.

3. Save and close the file.
4. Verify that your changes did not introduce any syntax errors:

```
sudo freeradius -CX
```

This should return a message that completes similar to:

```
...
Configuration appears to be OK
```

5. Restart the FreeRADIUS server:

```
sudo /etc/init.d/freeradius restart
```

RADIUS server failover and fallback to local configuration

In addition to the primary RADIUS server, you can also configure your TX64 device to use backup RADIUS servers. Backup RADIUS servers are used for authentication requests when the primary RADIUS server is unavailable.

Falling back to local authentication

With user authentication methods, you can configure your TX64 device to use multiple types of authentication. For example, you can configure both RADIUS authentication and local authentication, so that local authentication can be used as a fallback mechanism if the primary and backup RADIUS servers are unavailable. Additionally, users who are configured locally but are not configured on the RADIUS are still able to log into the device. Authentication methods are attempted in the order they are listed until the first successful authentication result is returned; therefore if you want to ensure that users are authenticated first through the RADIUS server, and only authenticated locally if the

RADIUS server is unavailable or if the user is not defined on the RADIUS server, then you should list the RADIUS authentication method prior to the Local users authentication method.

See [User authentication methods](#) for more information about authentication methods.

If the RADIUS servers are unavailable and the TX64 device falls back to local authentication, only users defined locally on the device are able to log in. RADIUS users cannot log in until the RADIUS servers are brought back online.

Configure your TX64 device to use a RADIUS server

This section describes how to configure a TX64 device to use a RADIUS server for authentication and authorization.

Required configuration items


- Define the RADIUS server IP address or domain name.
- Define the RADIUS server shared secret.
- Add RADIUS as an authentication method for your TX64 device.

Additional configuration items


- Define the RADIUS server port. It is configured to 1812 by default.
- Add additional RADIUS servers in case the first RADIUS server is unavailable.
- The server NAS ID. If left blank, the default value is used:
 - If you are access the TX64 device by using the WebUI, the default value is for NAS ID is **httpd**.
 - If you are access the TX64 device by using ssh, the default value is **sshd**.
- Time in seconds before the request to the server times out. The default is 3 seconds and the maximum possible value is 60 seconds.
- Enable additional debug messages from the RADIUS client.

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

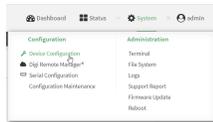


The **Configuration** window is displayed.

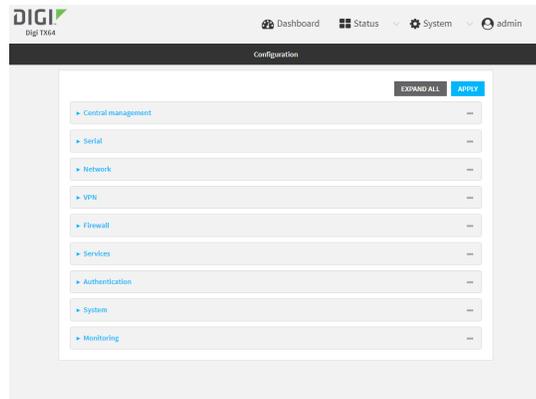

3. Click **Authentication > RADIUS > Servers**.
4. For **Add server**, click **+**.

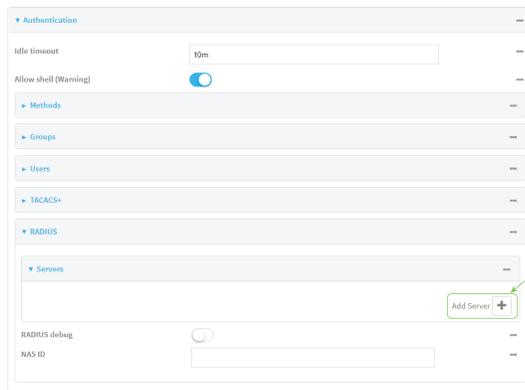

The RADIUS server configuration window is displayed.

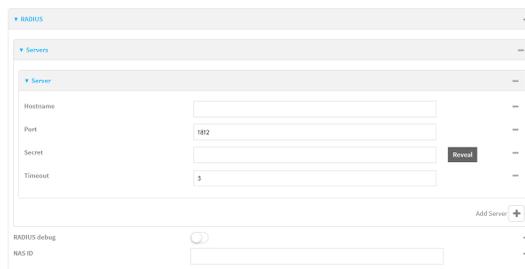


5. For **Hostname**, type the hostname or IP address of the RADIUS.
6. (Optional) Change the default **Port** setting to the appropriate port.
7. For **Secret**, type the RADIUS server's shared secret. This is configured in the secret parameter of the RADIUS server's client.conf file, for example:

```
secret=testing123
```

8. For **Timeout**, type or select amount of time in seconds to wait for the RADIUS server to respond. Allowed value is any integer from **3** to **60**. The default value is **3**.
9. (Optional) Click **RADIUS debug** to enable additional debug messages from the RADIUS client.
10. (Optional) For **NAS ID**, type the unique identifier for this network access server (NAS). You can use the fully-qualified domain name of the NAS or any arbitrary string. If not set, the default value is used:
 - If you are accessing the TX64 device by using the WebUI, the default value is for NAS ID is **httpd**.
 - If you are accessing the TX64 device by using ssh, the default value is **sshd**.
11. (Optional) Click **+** again to add additional RADIUS servers.
12. Add RADIUS to the authentication methods:
 - a. Click **Authentication > Methods**.
 - b. For **Add method**, click **+**.



- c. Select **RADIUS** for the new method from the **Method** drop-down.

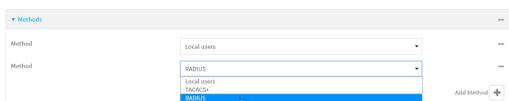

Authentication methods are attempted in the order they are listed until the first successful authentication result is returned.

13. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a RADIUS server:

```
(config)> add auth radius server end
(config auth radius server 0)>
```

4. Enter the server IP address or hostname:

```
(config auth radius server 0)> hostname hostname|ip-address
(config auth radius server 0)>
```

5. (Optional) Change the default port setting to the appropriate port:

```
(config auth radius server 0)> port port
(config auth radius server 0)>
```

6. Enter the RADIUS server's shared secret. This is configured in the secret parameter of the RADIUS server's client.conf file. For example:

```
(config auth radius server 0)> secret testing123
(config auth radius server 0)>
```

7. Configure the amount of time in seconds to wait for the RADIUS server to respond. Allowed value is any integer from **3** to **60**. The default value is **3**.

```
(config auth radius server 0)> timeout value
(config)>
```

8. Return to the config prompt by typing three periods:

```
(config auth radius server 0)> ...
(config)>
```

9. (Optional) Enable debug messages from the RADIUS client:

```
(config)> auth radius debug true
```

10. (Optional) Configure the NAS ID. This is a unique identifier for this network access server (NAS). You can use the fully-qualified domain name of the NAS or any arbitrary string. If not set, the default value is used:

- If you are accessing the TX64 device by using the WebUI, the default value is for NAS ID is **httpd**.
- If you are accessing the TX64 device by using ssh, the default value is **sshd**.

```
(config)> auth radius nas_id id
(config)>
```

11. (Optional) Repeat the above steps to add additional RADIUS servers.
12. Add RADIUS to the authentication methods. Authentication methods are attempted in the order they are listed until the first successful authentication result is returned. This example will add RADIUS to the end of the list. See [User authentication methods](#) for information about adding methods to the beginning or middle of the list.

```
(config)> add auth method end radius
(config)>
```

13. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

14. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Disable shell access

To prohibit access to the shell prompt for all authentication groups, disable the **Allow shell** parameter.. This does not prevent access to the Admin CLI.


Note If shell access is disabled, re-enabling it will erase the device's configuration and perform a factory reset.

≡ WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

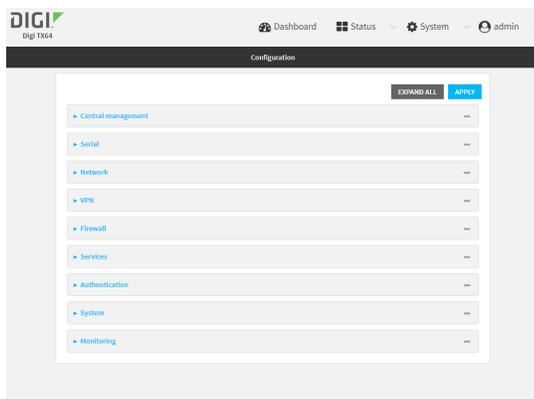

- 3. Click **Authentication**.
- 4. Click to disable **Allow shell**.



Note If shell access is disabled, re-enabling it will erase the device's configuration and perform a factory reset.

- 5. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- 1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Set the **allow_shell** parameter to **false**:

```
(config)> auth allow_shell false
```

Note If shell access is disabled, re-enabling it will erase the device's configuration and perform a factory reset.

- Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Set the idle timeout for TX64 users

To configure the amount of time that the user's active session can be inactive before it is automatically disconnected, set the **Idle timeout** parameter.


By default, the Idle timeout is set to 10 minutes.

WebUI

- Log into the TX64 WebUI as a user with full Admin access rights.
- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

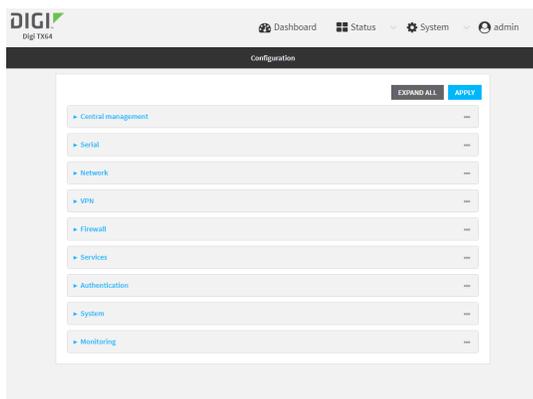

- Click **Authentication**.
- For **Idle timeout**, enter the amount of time that the active session can be idle before the user is automatically logged out.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.

For example, to set **Idle timeout** to ten minutes, enter **10m** or **600s**.



5. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. At the config prompt, type:

```
(config)# auth idle_timeout value
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **idle_timeout** to ten minutes, enter either **10m** or **600s**:

```
(config)> auth idle_timeout 600s
(config)>
```

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example user configuration

Example 1: Administrator user with local authentication


Goal: To create a user with administrator rights who is authenticated locally on the device.

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

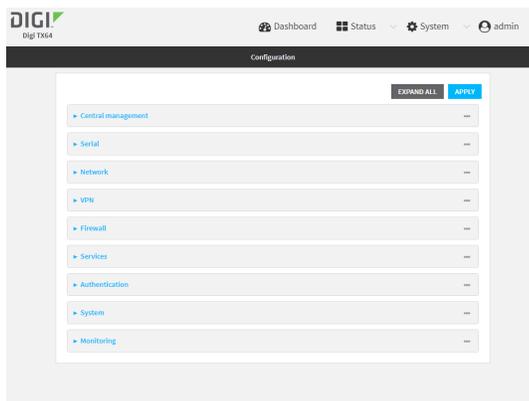

3. Click **Authentication > Users**.
4. In **Add User**: enter a name for the user and click **+**.

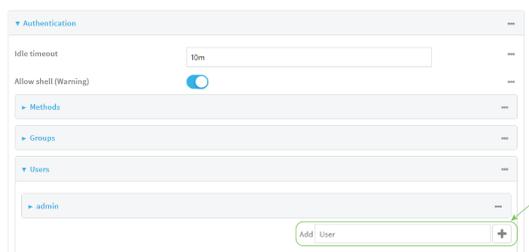

The user configuration window is displayed.

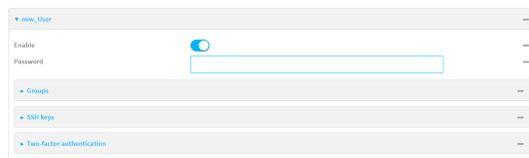

5. Enter a **Password** for the user.
6. Assign the user to the **admin** group:
 - a. Click **Groups**.
 - b. For **Add Group**, click **+**.
 - c. For **Group**, select the **admin** group.
 - d. Verify that the **admin** group has full administrator rights:
 - i. Click **Authentication > Groups**.
 - ii. Click **admin**.
 - iii. Verify that the admin group has **Admin access** enabled. If not, click **Admin access** to enable.
 - iv. Verify that **Access level** is set to **Full access**. If not, select **Full access**.
 - e. Verify that **Local users** is one of the configured authentication methods:
 - i. Click **Authentication > Methods**.
 - ii. Verify that **Local users** is one of the methods listed in the list. If not:
 - i. For **Add Method**, click **+**.
 - ii. For **Method**, select **Local users**.
7. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Verify that the **admin** group has full administrator rights:

```
(config)> show auth group admin acl
admin
    enable true
    level full
...
(config)>
```

If **admin > enable** is set to false:

```
(config)> auth group admin acl admin enable true
(config)>
```

If **admin > level** is set to read-only:

```
(config)> auth group admin acl admin level full
(config)>
```

4. Verify that **local** is one of the configured authentication methods:

```
(config)> show auth method
0 local
(config)>
```

If **local** is not listed:

```
(config)> add auth method end local
(config)>
```

5. Create the user. In this example, the user is being created with the username **adminuser**:

```
(config)> add auth user adminuser
(config auth user adminuser)>
```

6. Assign a password to the user:

```
(config auth user adminuser)> password pwd
(config auth user adminuser)>
```

7. Assign the user to the **admin** group:

```
(config auth user adminuser)> add group end admin
(config auth user adminuser)>
```

8. Save the configuration and apply the change:

```
(config auth user adminuser)> save
Configuration saved.
>
```

9. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example 2: RADIUS, TACACS+, and local authentication for one user

Goal: To create a user with administrator rights who is authenticated by using all three authentication methods.

In this example, when the user attempts to log in to the TX64 device, user authentication will occur in the following order:

1. The user is authenticated by the RADIUS server. If the RADIUS server is unavailable,
2. The user is authenticated by the TACACS+ server. If both the RADIUS and TACACS+ servers are unavailable,
3. The user is authenticated by the TX64 device using local authentication.

This example uses a FreeRadius 3.0 server running on ubuntu, and a TACACS+ server running on ubuntu. Server configuration may vary depending on the platforms or type of servers used in your environment.

WebUI

1. Configure a user on the RADIUS server:
 - a. On the ubuntu machine hosting the FreeRadius server, open the **/etc/freeradius/3.0/users** file:

```
$ sudo gedit /etc/freeradius/3.0/users
```

- b. Add a RADIUS user to the **users** file:

```
admin1 Cleartext-Password := "password1"
      Unix-FTP-Group-Names := "admin"
```

In this example:

- The user's username is **admin1**.
- The user's password is **password1**.
- The authentication group on the TX64 device, **admin**, is identified in the **Unix-FTP-Group-Names** parameter.

- c. Save and close the **users** file.

2. Configure a user on the TACACS+ server:

- a. On the ubuntu machine hosting the TACACS+ server, open the **/etc/tacacs+/tac_plus.conf** file:

```
$ sudo gedit /etc/tacacs+/tac_plus.conf
```

- b. Add a TACACS+ user to the **tac_plus.conf** file:

```
user = admin1 {
    name = "Admin1 for TX64"
    pap = cleartext password1
    service = system {
        groupname = admin
    }
}
```


In this example:

- The user's username is **admin1**.
- The user's password is **password1**.
- The authentication group on the TX64 device, **admin**, is identified in the **groupname** parameter.


- c. Save and close the **tac_plus.conf** file.

3. Log into the TX64 WebUI as a user with full Admin access rights.


4. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

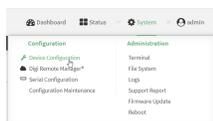


The **Configuration** window is displayed.

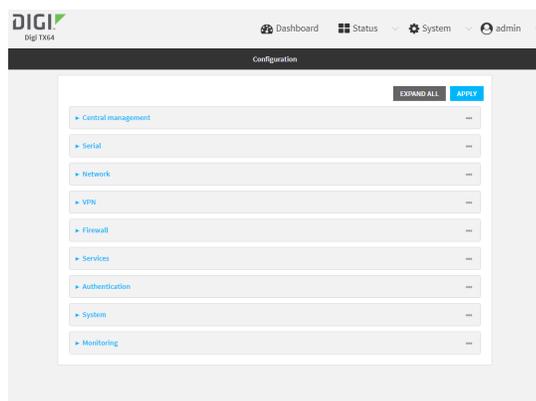

- 5. Configure the authentication methods:
 - a. Click **Authentication > Methods**.
 - b. For **Method**, select **RADIUS**.
 - c. For **Add Method**, click **+** to add a new method.
 - d. For the new method, select **TACACS+**.
 - e. Click **+** to add another new method.
 - f. For the new method, select **Local users**.

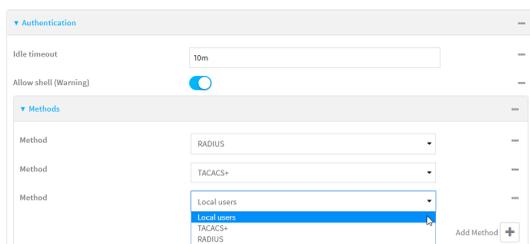


- 6. Create the local user:
 - a. Click **Authentication > Users**.
 - b. In **Add User:**, type **admin1** and click **+**.

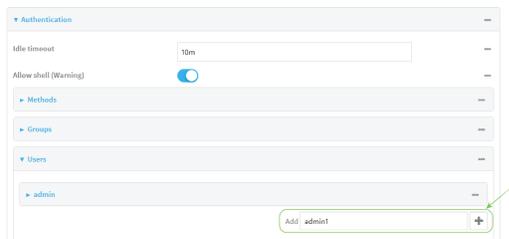

- c. For **password**, type **password1**.

- d. Assign the user to the **admin** group:
 - i. Click **Groups**.
 - ii. For **Add Group**, click **+**.

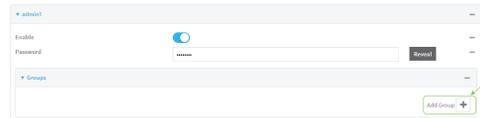

- iii. For **Group**, select the **admin** group.



- c. Verify that the **admin** group has full administrator rights:
 - i. Click **Authentication > Groups**.
 - ii. Click **admin**.
 - iii. Verify that the admin group has **Admin access** enabled. If not, click **Admin access** to enable.
 - iv. Verify that **Access level** is set to **Full access**. If not, select **Full access**.
7. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Configure a user on the RADIUS server:
 - a. On the ubuntu machine hosting the FreeRadius server, open the **/etc/freeradius/3.0/users** file:

```
$ sudo gedit /etc/freeradius/3.0/users
```

- b. Add a RADIUS user to the **users** file:

```
admin1 Cleartext-Password := "password1"
      Unix-FTP-Group-Names := "admin"
```

In this example:

- The user's username is **admin1**.
- The user's password is **password1**.
- The authentication group on the TX64 device, **admin**, is identified in the **Unix-FTP-Group-Names** parameter.

- c. Save and close the **users** file.
2. Configure a user on the TACACS+ server:
 - a. On the ubuntu machine hosting the TACACS+ server, open the **/etc/tacacs+/tac_plus.conf** file:

```
$ sudo gedit /etc/tacacs+/tac_plus.conf
```

- b. Add a TACACS+ user to the **tac_plus.conf** file:

```
user = admin1 {  
    name = "Admin1 for TX64"  
    pap = cleartext password1  
    service = system {  
        groupname = admin  
    }  
}
```

In this example:

- The user's username is **admin1**.
 - The user's password is **password1**.
 - The authentication group on the TX64 device, **admin**, is identified in the **groupname** parameter.
- c. Save and close the **tac_plus.conf** file.
 3. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
 4. At the command line, type **config** to enter configuration mode:

```
> config  
(config)>
```

5. Configure the authentication methods:
 - a. Determine the current authentication method configuration:

```
(config)> show auth method  
0 local  
(config)>
```

This output indicates that on this example system, only local authentication is configured.

- b. Add RADIUS authentication to the beginning of the list:

```
(config)> add auth method 0 radius  
(config)>
```

- c. Add TACACS+ authentication second place in the list:

```
(config)> add auth method 1 tacacs+(config)>
```

- d. Verify that authentication will occur in the correct order:

```
(config)> show auth method
0 radius
1 tacacs+
2 local
(config)>
```

6. Verify that the **admin** group has full administrator rights:

```
(config)> show auth group admin acl
admin
    enable true
    level full
...
(config)>
```

If **admin > enable** is set to false:

```
(config)> auth group admin acl admin enable true
(config)>
```

If **admin > level** is set to read-only:

```
(config)> auth group admin acl admin level full
(config)>
```

7. Configure the local user:

- a. Create a local user with the username **admin1**:

```
(config)> add auth user admin1
(config auth user admin1)>
```

- b. Assign a password to the user:

```
(config auth user adminuser)> password password1
(config auth user adminuser)>
```

- c. Assign the user to the **admin** group:

```
(config auth user adminuser)> add group end admin
(config auth user adminuser)>
```

8. Save the configuration and apply the change:

```
(config auth user adminuser)> save
Configuration saved.
>
```

9. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Firewall

This chapter contains the following topics:

Firewall configuration	560
Port forwarding rules	566
Packet filtering	574
Configure custom firewall rules	582
Configure captive portals	585
Configure Quality of Service options	590
Web filtering	602

Firewall configuration

Firewall configuration includes the following configuration options:

- **Zones:** A zone is a firewall access group to which network interfaces can be added. You then use zones to configure packet filtering and access control lists for interfaces that are included in the zone. Preconfigured zones include:
 - **Any:** Matches any network interface, even if they are not assigned to this zone.
 - **Loopback:** Zone for interfaces that are used for communication between processes running on the device.
 - **Internal:** Used for interfaces connected to trusted networks. By default, the firewall will allow most access from this zone.
 - **External:** Used for interfaces to connect to untrusted zones, such as the internet. This zone has Network Address Translation (NAT) enabled by default. By default, the firewall will block most access from this zone.
 - **Edge:** Used for interfaces connected to trusted networks, where the device is a client on the edge of the network rather than a router or gateway.
 - **Setup:** Used for interfaces involved in the initial setup of the device. By default, the firewall will only allow this zone to access administration services.
 - **IPsec:** The default zone for IPsec tunnels.
 - **hotspot:** The default zone for hotspots.
 - **Dynamic routes:** Used for routes learned using routing services.
- **Port forwarding:** A list of rules that allow network connections to the TX64 to be forwarded to other servers by translating the destination address.
- **Packet filtering:** A list of packet filtering rules that determine whether to accept or reject network connections that are forwarded through the TX64.
- **Custom rules:** A script that is run to install advanced firewall rules beyond the scope/capabilities of the standard device configuration.
- **Captive portals:** A list of captive portals that restrict traffic on network interfaces until access is granted. Captive portals are commonly used on public-access networks to require users to login or accept terms and conditions before accessing the internet.
- **Quality Of Service:** Quality of Service (QOS) options for bandwidth allocation and policy-based traffic shaping and prioritizing.

Create a custom firewall zone

In addition to the preconfigured zones, you can create your custom zones that can be used to configure packet filtering and access control lists for network interfaces.


To create a zone:



1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

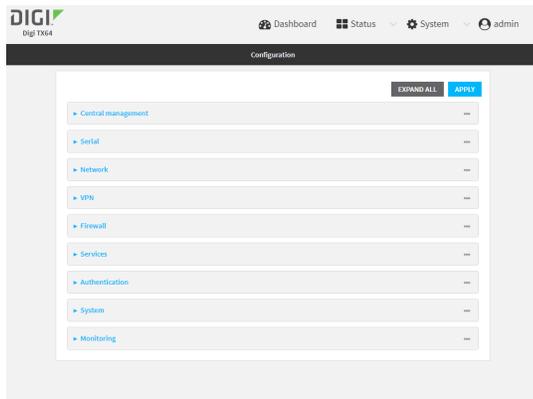

3. Click **Firewall > Zones**.
4. In **Add Zone**, enter a name for the zone and click **+**.



The firewall configuration window is displayed.



5. (Optional) If traffic on this zone will be forwarded from a private network to the internet, enable Network Address Translation (NAT).
6. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



See [Configure the firewall zone for a network interface](#) for information about how to configure network interfaces to use a zone.

Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:


```
> config
(config)>
```
3. Add the new zone. For example, to add a zone named **my_zone**:


```
(config)> add firewall zone my_zone
(config firewall zone my_zone)>
```
4. (Optional) Enable Network Address Translation (NAT):


```
(config firewall zone my_zone)> src_nat true
(config firewall zone my_zone)>
```
5. Save the configuration and apply the change:


```
(config firewall zone my_zone)> save
Configuration saved.
>
```
6. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

See [Configure the firewall zone for a network interface](#) for information about how to configure network interfaces to use a zone.

Configure the firewall zone for a network interface

Firewall zones allow you to group network interfaces for the purpose of packet filtering and access control. There are several preconfigured firewall zones, and you can create custom zones as well. The firewall zone that a network interfaces uses is selected during interface configuration.


This example procedure uses an existing network interface named **LAN1** and changes the firewall zone from the default zone, **Internal**, to **External**.

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

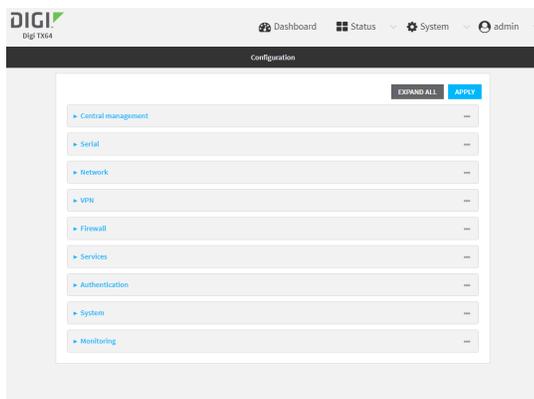

- 3. Click **Network > Interfaces > LAN1**.
- 4. For **Zone**, select **External**.

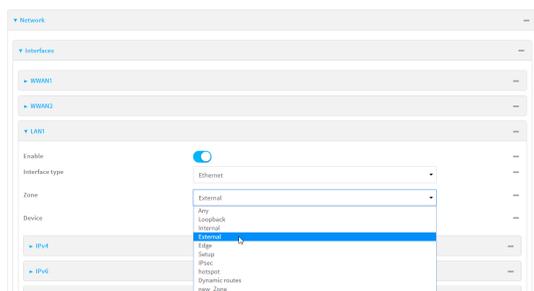

- 5. Click **Apply** to save the configuration and apply the change. The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- 1. Log into the TX64 command line as a user with full Admin access rights. Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. At the config prompt, type:

```
(config)> network interface lan1 zone my_zone
(config)>
```

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a custom firewall zone


You cannot delete preconfigured firewall zones. To delete a custom firewall zone:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

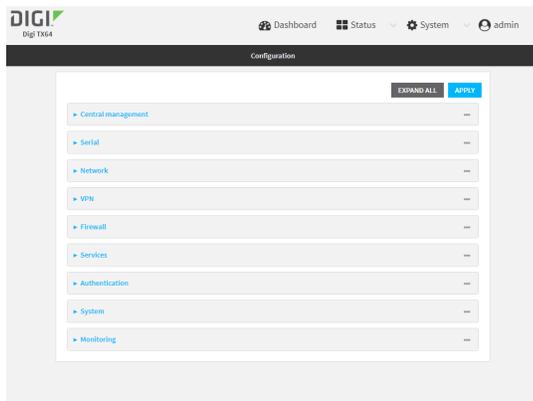

3. Click **Firewall > Zones**.
4. Click the menu icon (...) next to the appropriate custom firewall zone and select **Delete**.



5. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of

the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Use the **del** command to delete a custom firewall rule. For example:

```
(config)> del firewall zone my_zone
```

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Port forwarding rules

Most computers are protected by a firewall that prevents users on a public network from accessing servers on the private network. To allow a computer on the Internet to connect to a specific server on a private network, set up one or more port forwarding rules. Port forwarding rules provide mapping instructions that direct incoming traffic to the proper device on a LAN.

Configure port forwarding

Required configuration items

- The network interface for the rule.
Network connections will only be forwarded if their destination address matches the IP address of the selected network interface.
- The public-facing port number that network connections must use for their traffic to be forwarded.
- The IP address of the server to which traffic should be forwarded.
- The port on the server to which traffic should be forwarded.

Additional configuration items

- A label for the port forwarding rule.
- The IP version (either IPv4 or IPv6) that incoming network connections must match.
- The protocols that incoming network connections must match.

- A white list of devices, based on either IP address or firewall zone, that are authorized to leverage this forwarding rule.


To configure a port forwarding rule:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

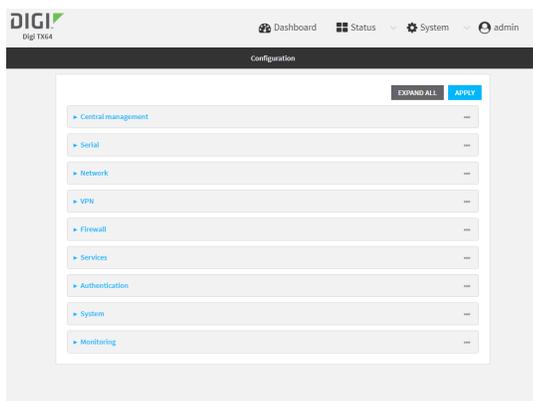

3. Click **Firewall > Port forwarding**.
4. For **Add port forward**, click **+**.



The port forwarding rule configuration window is displayed.

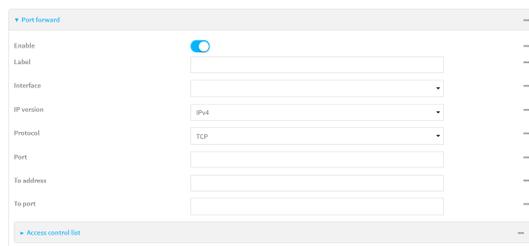

Port forwarding rules are enabled by default. To disable, click to toggle off **Enable**.

5. (Optional) Type a **Label** that will be used to identify the rule.

6. For **Interface**, select the network interface for the rule.
Network connections will only be forwarded if their destination address matches the IP address of the selected network interface.
7. For **IP version**, select either **IPv4** or **IPv6**.
Network connections will only be forwarded if they match the selected IP version.
8. For **Protocol**, select the type of internet protocol.
Network connections will only be forwarded if they match the selected protocol.
9. For **Port**, type the public-facing port number that network connections must use for their traffic to be forwarded.
10. For **To Address**, type the IP address of the server to which traffic should be forwarded.
11. For **To port**, type the port number of the port on the server to which traffic should be forwarded.
12. (Optional) Click **Access control list** to create a white list of devices that are authorized to leverage this forwarding rule, based on either the IP address or firewall zone:
 - To white list IP addresses:
 - a. Click **Addresses**.
 - b. For **Add Address**, enter an IP address and click **+**.
 - c. Repeat for each additional IP address that should be white listed.
 - To specify firewall zones for white listing:
 - a. Click **Zones**.
 - b. For **Add zone**, click **+**.
 - c. For **Zone**, select the appropriate zone.
 - d. Repeat for each additional zone.
13. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. At the config prompt, type:

```
(config)> add firewall dnat end
(config firewall dnat 0)>
```

Port forwarding rules are enabled by default. To disable the rule:

```
(config firewall dnat 0)> enable false
(config firewall dnat 0)>
```

4. Set the network interface for the rule.

```
(config firewall dnat 0)> interface eth2
(config firewall dnat 0)>
```

Network connections will only be forwarded if their destination address matches the IP address of this network interface.

- a. Use the **?** to determine available interfaces:

```
(config firewall dnat 0)> interface ?
```

Interface: Network connections will only be forwarded if their destination address matches the IP address of this network interface.

Format:

```
defaultip
defaultlinklocal
lan1
lan_hotspot
loopback
wan1
wwan1
wwan2
```

Current value:

```
(config firewall dnat 0)> interface
```

- b. Set the interface. For example:

```
(config firewall dnat 0)> interface wan1
(config firewall dnat 0)>
```

5. Set the IP version. Allowed values are **ipv4** and **ipv6**. The default is **ipv4**.

```
(config firewall dnat 0)> ip_version ipv6
(config firewall dnat 0)>
```

6. Set the public-facing port number that network connections must use for their traffic to be forwarded.

```
(config firewall dnat 0)> port port
(config firewall dnat 0)>
```

7. Set the type of internet protocol.

```
(config firewall dnat 0)> protocol value
(config firewall dnat 0)>
```

Network connections will only be forwarded if they match the selected protocol. Allowed values are **custom**, **tcp**, **tcpudp**, or **udp**. The default is **tcp**.

8. Set the IP address of the server to which traffic should be forwarded:

- For IPv4 addresses:

```
(config firewall dnat 0)> to_address ip-address
(config firewall dnat 0)>
```

- For IPv6 addresses:

```
(config firewall dnat 0)> to_address6 ip-address
(config firewall dnat 0)>
```

9. Set the public-facing port number that network connections must use for their traffic to be forwarded.

```
(config firewall dnat 0)> to_port port
(config firewall dnat 0)>
```

10. (Optional) To create a white list of devices that are authorized to leverage this forwarding rule, based on either the IP address or firewall zone, change to the acl node:

```
(config firewall dnat 0)> acl
(config firewall dnat 0 acl)>
```

- To white list an IP address:

- For IPv4 addresses:

```
(config firewall dnat 0 acl> add address end ip-address
(config firewall dnat 0 acl)>
```

- For IPv6 addresses:

```
(config firewall dnat 0 acl> add address6 end ip-address
(config firewall dnat 0 acl)>
```

Repeat for each appropriate IP address.

- To specify the firewall zone for white listing:

```
(config firewall dnat 0 acl)> add zone end zone
```

Repeat for each appropriate zone.

To view a list of available zones:

```
(config firewall dnat 0 acl)> .. .. .. zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

```
Additional Configuration
```

```
-----
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

```
(config firewall dnat 0 acl)>
```

11. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

12. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a port forwarding rule


To delete a port forwarding rule:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

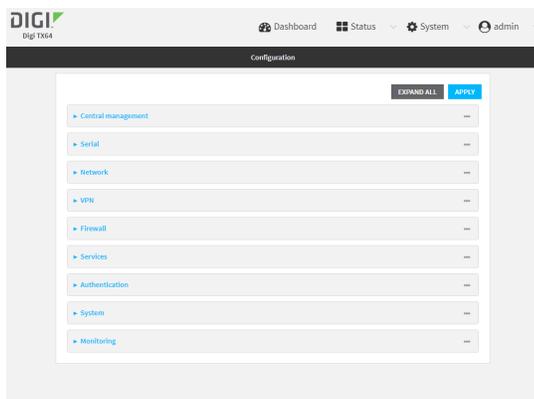

3. Click **Firewall > Port forwarding**.
4. Click the menu icon (...) next to the appropriate port forwarding rule and select **Delete**.



5. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Determine the index number of the port forwarding rule you want to delete:

```
(config)> show firewall dnat
0
    acl
        no address
        no zone
    enable true
    interface eth2
```

```
ip_version ipv4
label IPv4 port forwarding rule
port 10000
protocol tcp
to_address6 10.10.10.10
to_port 10001

1
acl
    no address6
    no zone
enable false
interface eth2
ip_version ipv6
label IPv6 port forwarding rule
port 10002
protocol tcp
to_address6 c097:4533:bd63:bb12:9a6f:5569:4b53:c29a
to_port 10003
(config)>
```

4. To delete the rule, use the index number with the **del** command. For example:

```
(config)> del firewall dnat 1
```

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Packet filtering

By default, there are two preconfigured packet filtering rules:

- **Allow all outgoing traffic:** Monitors traffic going to and from the TX64 device. The predefined settings are intended to block unauthorized inbound traffic while providing an unrestricted flow of outgoing data.
- **Allow Hotspot to External:** Allows traffic that uses the **hotspot** firewall zone to be forwarded to interfaces that use the **External** zone. You should not modify this packet filtering rule.

Configure packet filtering

Required configuration items

- The action that the packet filtering rule will perform, either **Accept**, **Reject**, or **Drop**.
- The source firewall zone: Packets originating from interfaces on this zone will be monitored by this rule.
- The destination firewall zone: Packets destined for interfaces on this zone will be accepted, rejected, or dropped by this rule.

Additional configuration requirements

- A label for the rule.
- The IP version to be matched, either **IPv4**, **IPv6**, or **Any**.
- The protocol to be matched, one of:
 - **TCP**
 - **UDP**
 - **ICMP**
 - **ICMP6**
 - **Any**


To configure a packet filtering rule:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

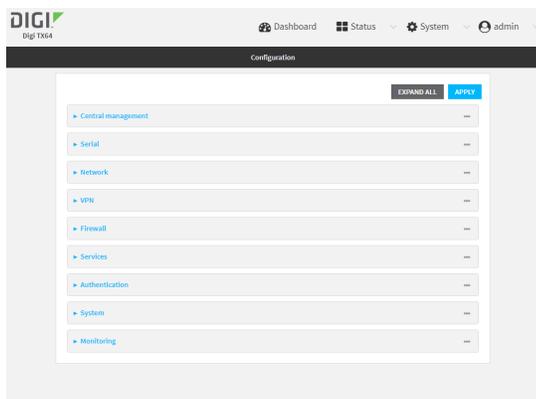


3. Click **Firewall > Packet filtering**.

- To create a new packet filtering rule, for **Add packet filter**, click **+**.



- To edit the default packet filtering rule or another existing packet filtering rule, click to expand the rule.

The packet filtering rule configuration window is displayed.

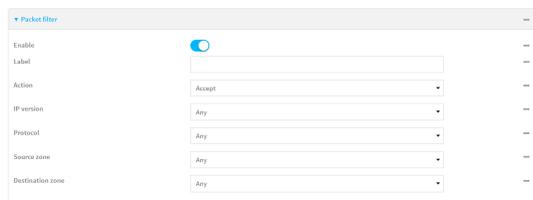

Packet filters are enabled by default. To disable, click to toggle off **Enable**.

- (Optional) Type a **Label** that will be used to identify the rule.
- For **Action**, select one of:
 - **Accept**: Allows matching network connections.
 - **Reject**: Blocks matching network connections, and sends an ICMP error if appropriate.
 - **Drop**: Blocks matching network connections, and does not send a reply.
- Select the **IP version**.
- Select the **Protocol**.
- For **Source zone**, select the firewall zone that will be monitored by this rule for incoming connections from network interfaces that are a member of this zone.
See [Firewall configuration](#) for more information about firewall zones.
- For **Destination zone**, select the firewall zone. Packets destined for network interfaces that are members of this zone will either be accepted, rejected or dropped by this rule.
See [Firewall configuration](#) for more information about firewall zones.

- Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

To edit the default packet filtering rule or another existing packet filtering rule:

- Determine the index number of the appropriate packet filtering rule:

```
(config)> show firewall filter
0
    action accept
    dst_zone any
    enable true
    ip_version any
    label Allow all outgoing traffic
    protocol any
    src_zone internal
1
    action drop
    dst_zone internal
    enable true
    ip_version any
    label myfilter
    protocol any
    src_zone external
(config)>
```

- Select the appropriate rule by using its index number:

```
(config)> firewall filter 1
(config firewall filter 1)>
```

To create a new packet filtering rule:

```
(config)> add firewall filter end
```

```
(config firewall filter 1)>
```

Packet filtering rules are enabled by default. To disable the rule:

```
(config firewall filter 1)> enable false
(config firewall filter 1)>
```

3. (Optional) Set the label for the rule.

```
(config firewall filter 1)> label "My filter rule"
(config firewall filter 1)>
```

4. Set the action to be performed by the filter rule.

```
(config firewall filter 1)> action value
(config firewall filter 1)>
```

where *value* is one of:

- **accept**: Allows matching network connections.
- **reject**: Blocks matching network connections, and sends an ICMP error if appropriate.
- **drop**: Blocks matching network connections, and does not send a reply.

5. Set the firewall zone that will be monitored by this rule for incoming connections from network interfaces that are a member of this zone:

See [Firewall configuration](#) for more information about firewall zones.

```
(config firewall filter 1)> src_zone my_zone
(config firewall filter 1)>
```

6. Set the destination firewall zone. Packets destined for network interfaces that are members of this zone will either be accepted, rejected or dropped by this rule.

See [Firewall configuration](#) for more information about firewall zones.

```
(config firewall filter 1)> dst_zone my_zone
(config firewall filter 1)>
```

7. Set the IP version.

```
(config firewall filter 1)> ip_version value
(config firewall filter 1)>
```

where *value* is one of:

- **any**
- **ipv4**
- **ipv6**
- The default is **any**.

8. Set the protocol.

```
(config firewall filter 1)> protocol value
(config firewall filter 1)>
```

where value is one of:

- any
- icmp
- icmpv6
- tcp
- upd

The default is **any**.

9. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

10. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Enable or disable a packet filtering rule


To enable or disable a packet filtering rule:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

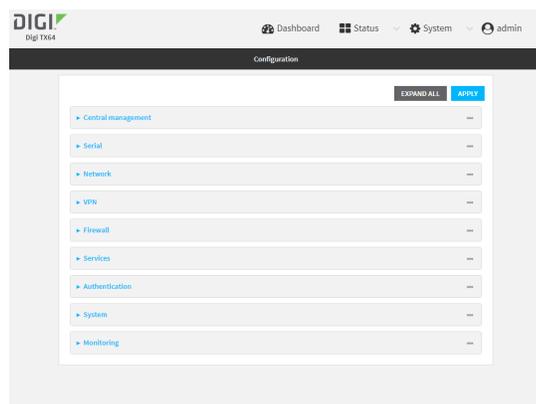

3. Click **Firewall > Packet filtering**.
4. Click the appropriate packet filtering rule.

- Click **Enable** to toggle the rule between enabled and disabled.

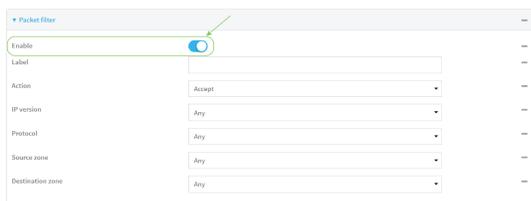

- Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Determine the index number of the appropriate port forwarding rule:

```
(config)> show firewall filter
0
  action accept
  dst_zone any
  enable true
  ip_version any
  label Allow all outgoing traffic
  protocol any
  src_zone internal
1
  action drop
  dst_zone internal
  enable true
  ip_version any
  label My packet filter
  protocol any
  src_zone external
(config)>
```

- To enable a packet filtering rule, use the index number with the **enable true** command. For example:

```
(config)> firewall filter 1 enable true
```

- To disable a packet filtering rule, use the index number with the **enable false** command. For example:

```
(config)> firewall filter 1 enable false
```

- Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.


Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a packet filtering rule


To delete a packet filtering rule:

WebUI

- Log into the TX64 WebUI as a user with full Admin access rights.
- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

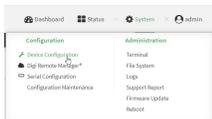

The **Configuration** window is displayed.

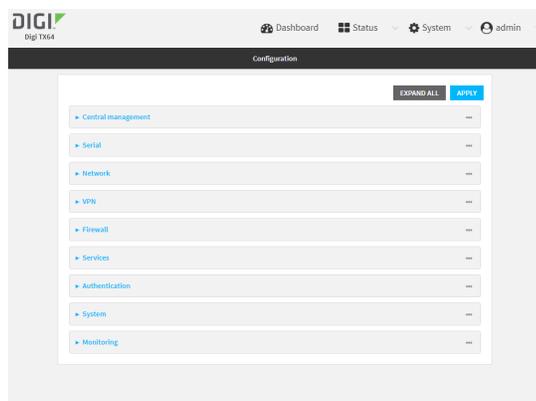

- Click **Firewall > Packet filtering**.

- Click the menu icon (...) next to the appropriate packet filtering rule and select **Delete**.



- Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Determine the index number of the packet filtering rule you want to delete:

```
(config)> show firewall filter
0
  action accept
  dst_zone any
  enable true
  ip_version any
  label Allow all outgoing traffic
  protocol any
  src_zone internal
1
  action drop
  dst_zone internal
  enable true
  ip_version any
  label My packet filter
  protocol any
  src_zone external
(config)>
```

- To delete the rule, use the index number with the **del** command. For example:

```
(config)> del firewall filter 1
```

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure custom firewall rules

Custom firewall rules consist of a script of shell commands that can be used to install firewall rules, ipsets, and other system configuration. These commands are run whenever system configuration changes occur that might cause changes to the firewall.


To configure custom firewall rules:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

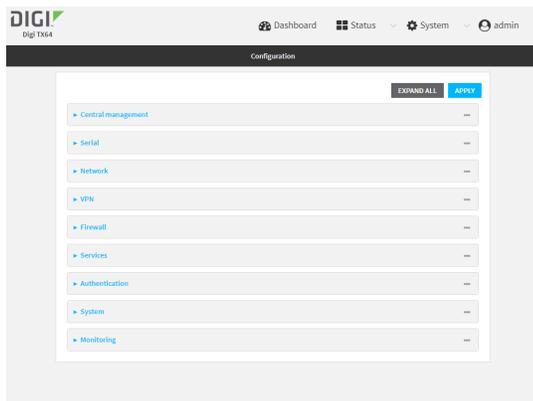

3. Click **Firewall > Custom rules**.



4. **Enable** the custom rules.
5. (Optional) Enable **Override** to override all preconfigured firewall behavior and rely solely on the custom firewall rules.
6. For **Rules**, type the shell command that will execute the custom firewall rules script.
7. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



 **Command line**

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config  
(config)>
```

3. Enable custom firewall rules:

```
(config)> firewall custom enable true  
(config)>
```

4. (Optional) Instruct the device to override all preconfigured firewall behavior and rely solely on the custom firewall rules:

```
(config)> firewall custom override true  
(config)>
```

5. Set the shell command that will execute the custom firewall rules script:

```
(config)> firewall custom rules shell-command  
(config)>
```

6. Save the configuration and apply the change:

```
(config)> save  
Configuration saved.  
>
```

7. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure captive portals

Captive portals are commonly used on public-access networks to require users to login or accept terms and conditions before accessing the internet.


To configure captive portals:

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

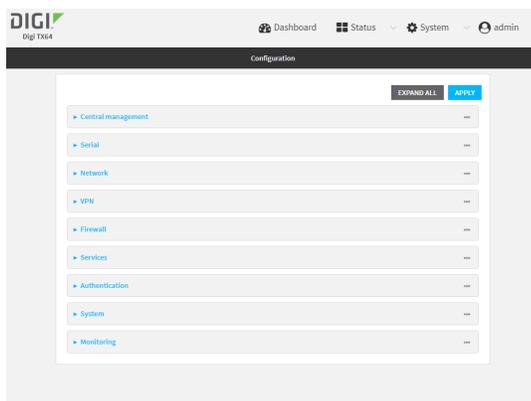

3. Click **Firewall > Captive portals**.
4. For **Add captive portal**, enter a name for the portal and click **+**.

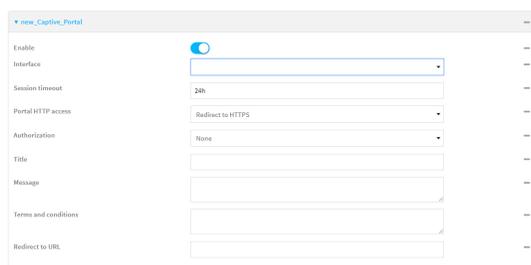

The captive portal configuration window is displayed.

The captive portal is enabled by default. To disable, click to toggle off **Enable**.

5. For **Interface**, select the network interface for the portal.
Traffic received on this interface's network device will not be forwarded unless the client has been granted access.

6. For **Session timeout**, type the amount of time that a user session remains valid. After the session times out, the user will be required to log in again.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Session timeout** to ten minutes, enter **10m** or **600s**.
7. For **Portal HTTP access**, configure whether the portal can be accessed over an insecure connection.
 - **Allow**: Allows access to the portal page over an insecure connection (HTTP port 80).
 - **Redirect to HTTPS**: Automatically redirects the request to a secure connection (HTTPS port 443).
 - **Disallow**: Does not allow access over an insecure connection (HTTP port 80).

Note This setting does not affect access to HTTP port 80 after the client has been granted access to the portal.

8. For **Authorization**, select the method that will be used to authorize the user:
 - **None**: Users are not required to enter any information to access the portal.
 - **User login**: Users are required to authenticate with an account on this device. Users must be part of a user group that allows access to this portal.
 - **Collect user information**: Users are required to complete a form to continue. The form fields may be customize.
9. (Optional) For **Title**, enter the title of the portal page that the user will see when accessing the portal.
10. (Optional) For **Message**, enter a message that will appear on the portal page.
11. (Optional) For **Terms and Conditions**, enter the terms and conditions that will appear on the portal page. Users will be required to agree to the terms and conditions before being granted access to the portal.
12. (Optional) For **Redirect to URL**, enter the URL to which the user will be directed when granted access to the portal. If left blank, the user will be directed to the domain of the URL in the original access request.
13. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. To create an active portal called **portal1**:

```
(config)> add firewall portal portal1
(config firewall portal portal1)>
```

Captive portals are enabled by default. To disable the portal:

```
(config firewall portal portal1)> enable false
(config firewall portal portal1)>
```

4. Set the network interface for the portal. Traffic received on this interface's network device will not be forwarded unless the client has been granted access.
 - a. Use the **?** to determine available interfaces:

```
(config firewal portal portal1)> interface ?
```

Interface: The network interface to run the portal on. Traffic received on this interface's network device will not be forwarded unless the client has been granted access.

Format:

```
/network/interface/defaultip
/network/interface/defaultlinklocal
/network/interface/lan1
/network/interface/lan_hotspot
/network/interface/loopback
/network/interface/wan1
/network/interface/wwan1
/network/interface/wwan2
```

Current value:

```
(config firewal portal portal1)> interface
```

- b. Set the interface. For example:

```
(config firewal portal portal1)> interface /network/interface/wan1
(config firewal portal portal1)>
```

5. Set the amount of time that a user session remains valid. After the session times out, the user will be required to log in again.

```
(config firewall portal portal1)> timeout value
(config firewall portal portal1)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **Session timeout** to ten minutes, enter either **10m** or **600s**:

```
(config firewall portal portal1)> timeout 600s
(config firewall portal portal1)>
```

6. Configure whether the portal can be accessed over an insecure connection.

```
(config firewall portal portal1)> http value
(config firewall portal portal1)>
```

where *value* is one of:

- **allow**: Allows access to the portal page over an insecure connection (HTTP port 80).
- **redirect**: Automatically redirects the request to a secure connection (HTTPS port 443).
- **disallow**: Does not allow access over an insecure connection (HTTP port 80).

Note This setting does not affect access to HTTP port 80 after the client has been granted access to the portal.

7. Set the method that will be used to authorize the user:

```
(config firewall portal portal1)> auth value
(config firewall portal portal1)>
```

where *value* is one of:

- **none**: Users are not required to enter any information to access the portal.
- **login**: Users are required to authenticate with an account on this device. Users must be part of a user group that allows access to this portal.
- **info**: Users are required to complete a form to continue. The form fields may be customize.

8. (Optional) Set the title of the portal page that the user will see when accessing the portal:

```
(config firewall portal portal1)> title "Corporate portal"
(config firewall portal portal1)>
```

9. (Optional) Set a message that will appear on the portal page:

```
(config firewall portal portal1)> message "Welcome to the corporate web
portal"
(config firewall portal portal1)>
```

10. (Optional) Set the terms and conditions that will appear on the portal page. Users will be required to agree to the terms and conditions before being granted access to the portal.

```
(config firewall portal portal1)> terms "Accept the terms and conditions of
this portal"
(config firewall portal portal1)>
```

11. (Optional) Set the URL to which the user will be directed when granted access to the portal. If left blank, the user will be directed to the domain of the URL in the original access request.

```
(config firewall portal portal1)> url https://myportal.com
(config firewall portal portal1)>
```

- Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete captive portals


To delete captive portals:

WebUI

- Log into the TX64 WebUI as a user with full Admin access rights.
- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

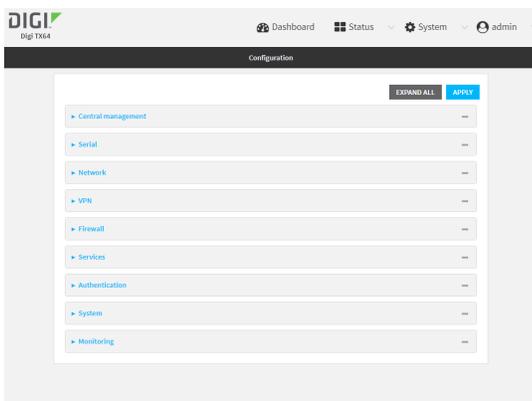

- Click **Firewall > Captive portals**.
- Click the down caret (▼) next to the appropriate captive portal and select **Delete**.
- Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:


```
> config
(config)>
```
3. To delete a captive portal, use the **del** command. For example:


```
(config)> del firewall portal portal1
```
4. Save the configuration and apply the change:


```
(config)> save
Configuration saved.
>
```
5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure Quality of Service options

Quality of Service (QoS) options allow you to manage the traffic performance of various services, such as Voice over IP (VoIP), cloud computing, traffic shaping, traffic prioritizing, and bandwidth allocation. When configuring QoS, you can only control the queue for outgoing packets on each interface (egress packets), not what is received on the interface (packet ingress).

A QoS *binding* contains the policies and rules that apply to packets exiting the TX64 device on the binding's interface. By default, the TX64 device has two preconfigured QoS bindings, **Outbound** and **Inbound**. These bindings are an example configuration designed for a typical VoIP site:

- **Outbound** provides an example of matching packets as they are routed from the device onto the WAN interface.
- **Inbound** provides an example of matching packets as they are routed from the device onto a LAN interface.

These example bindings are disabled by default.


Enable the preconfigured bindings

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

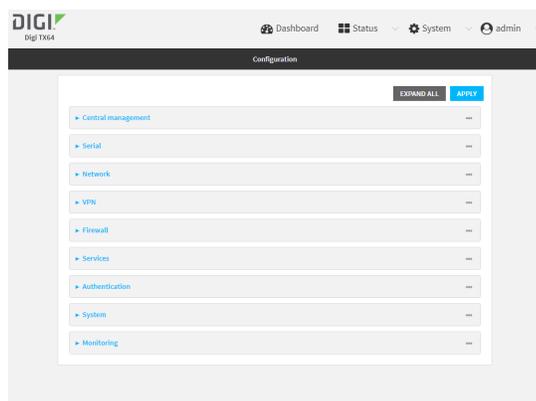

3. Click **Firewall > Quality of Service**.
4. Click to expand either **Outbound** or **Inbound**.
5. **Enable** the binding.
6. Select an **Interface**.
7. Examine the remaining default settings and modify as appropriate for your network.
8. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable one of the preconfigured bindings:
 - To enable the Outbound binding:

```
(config)> firewall qos 0 enable true
(config)>
```

- To enable the Inbound binding:

```
(config)> firewall qos 1 enable true
(config)>
```

4. Set the interface for the binding. Use the index number of the binding; for example, to set the interface for the Outbound binding:

- a. Use the ? to determine available interfaces:

```
(config)> firewall qos 0 interface ?
```

Interface: The network interface.

Format:

```
/network/interface/defaultip
/network/interface/defaultlinklocal
/network/interface/lan1
/network/interface/lan_hotspot
/network/interface/loopback
/network/interface/wan1
/network/interface/wwan1
/network/interface/wwan2
```

Current value:

```
(config)> firewall qos 0 interface
```

- b. Set the interface. For example:

```
(config)> firewall qos 0 interface /network/interface/wan1
(config)>
```

5. Examine the remaining default settings and modify as appropriate for your network.
6. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.


Create a new binding

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

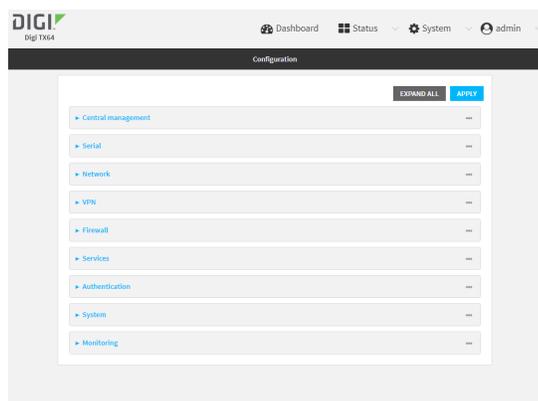

3. Click **Firewall > Quality of Service**.
4. For **Add Binding**, click **+**.



The quality of service binding configuration window is displayed.




5. **Enable** the binding.
6. (Optional) Type a **Label** for the binding.
7. Select an **Interface** to queue egress packets on. The binding will only match traffic that is being sent out on this interface.
8. (Optional) For **Interface bandwidth (Mbit)**, set the maximum egress bandwidth of the interface, in megabits, allocated to this binding. Typically, this should be 95% of the available bandwidth. Allowed value is any integer between **1** and **1000**.
9. Create a policy for the binding:
At least one policy is required for each binding. Each policy can contain up to 30 rules.

- a. Click to expand **Policy**.
- b. For **Add Policy**, click **+**.



The QoS binding policy configuration window is displayed.

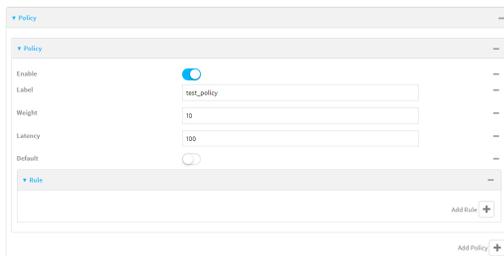


New QoS binding policies are enabled by default. To disable, click **Enable**.

- c. (Optional) Type a **Label** for the binding policy.
- d. For **Weight**, type a value for the amount of available bandwidth allocated to the policy, relative to other policies for this binding.

The larger the weight, with respect to the other policy weights, the larger portion of the maximum bandwidth is available for this policy. For example, if a binding contains three policies, and each policy contains a weight of 10, each policy will be allocated one third of the total interface bandwidth.

- e. For **Latency**, type the maximum delay before the transmission of packets. A lower latency means that the packets will be scheduled more quickly for transmission.
- f. Select **Default** to identify this policy as a fall-back policy. The fall-back policy will be used for traffic that is not matched by any other policy. If there is no default policy associated with this binding, packets that do not match any policy rules will be dropped.
- g. If **Default** is disabled, you must configure at least one rule:
 - i. Click to expand **Rule**.
 - ii. For **Add Rule**, click **+**.

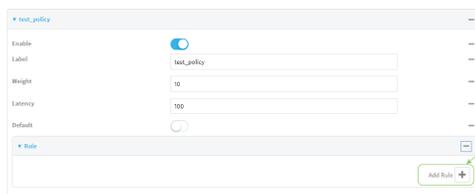

The QoS binding policy rule configuration window is displayed.

New QoS binding policy rules are enabled by default. To disable, click **Enable**.

- iii. (Optional) Type a **Label** for the binding policy rule.
- iv. For **Type Of Service**, type the value of the Type of Service (ToS) packet header that defines packet priority. If unspecified, this field is ignored.
See <https://www.tucny.com/Home/dscp-tos> for a list of common TOS values.
- v. For **Protocol**, select the IP protocol matching criteria for this rule.
- vi. For **Source port**, type the port, or **any**, as a source traffic matching criteria.
- vii. For **Destination port**, type the port, or **any**, as a destination traffic matching criteria.
- viii. Click to expand **Source address** and select the **Type**:
 - **Any**: Source traffic from any address will be matched.
 - **Interface**: Only traffic from the selected **Interface** will be matched.
 - **IPv4 address**: Only traffic from the IP address typed in **IPv4 address** will be matched. Use the format **IPv4_address[/netmask]**, or use **any** to match any IPv4 address.
 - **IPv6 address**: Only traffic from the IP address typed in **IPv6 address** will be matched. Use the format **IPv6_address[/prefix_length]**, or use **any** to match any IPv6 address.
 - **MAC address**: Only traffic from the MAC address typed in **MAC address** will be matched.
- ix. Click to expand **Destination address** and select the **Type**:
 - **Any**: Traffic destined for anywhere will be matched.
 - **Interface**: Only traffic destined for the selected **Interface** will be matched.
 - **IPv4 address**: Only traffic destined for the IP address typed in **IPv4 address** will be matched. Use the format **IPv4_address[/netmask]**, or use **any** to match any IPv4 address.
 - **IPv6 address**: Only traffic destined for the IP address typed in **IPv6 address** will be matched. Use the format **IPv6_address[/prefix_length]**, or use **any** to match any IPv6 address.

Repeat to add a new rule. Up to 30 rules can be configured.

10. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a binding:

```
(config)> add firewall qos end
(config firewall qos 2)>
```

New binding are enabled by default. To disable:

```
(config firewall qos 2)> enable false
(config firewall qos 2)>
```

4. (Optional) Set a label for the new binding:

```
(config firewall qos 2)> label my_binding
(config firewall qos 2)>
```

5. Set the interface to queue egress packets on. The binding will only match traffic that is being sent out on this interface:
 - a. Use the **?** to determine available interfaces:

```
(config firewall qos 2)> interface ?
```

Interface: The network interface.

Format:

```
/network/interface/defaultip
/network/interface/defaultlinklocal
/network/interface/lan1
/network/interface/lan_hotspot
/network/interface/loopback
/network/interface/wan1
/network/interface/wwan1
/network/interface/wwan2
```

Current value:

```
(config firewall qos 2)> interface
```

- b. Set the interface. For example:

```
(config firewall qos 2)> interface /network/interface/wan1
(config firewall qos 2)>
```

6. (Optional) Set the maximum egress bandwidth of the interface, in megabits, allocated to this binding.

```
(config firewall qos 2)> bandwidth int
(config firewall qos 2)>
```

where *int* is an integer between **1** and **1000**. Typically, this should be 95% of the available bandwidth. The default is **95**.

7. Create a policy for the binding:

At least one policy is required for each binding. Each policy can contain up to 30 rules.

a. Change to the policy node of the configuration:

```
(config firewall qos 2)> policy
(config firewall qos 2 policy)>
```

b. Add a policy:

```
(config firewall qos 2 policy)> add end
(config firewall qos 2 policy 0)>
```

New QoS binding policies are enabled by default. To disable:

```
(config firewall qos 2 policy 0)> enable false
(config firewall qos 2 policy 0)>
```

c. (Optional) Set a label for the new binding policy:

```
(config firewall qos 2 policy 0)> label my_binding_policy
(config firewall qos 2 policy 0)>
```

d. Set a value for the amount of available bandwidth allocated to the policy, relative to other policies for this binding.

The larger the weight, with respect to the other policy weights, the larger portion of the maximum bandwidth is available for this policy. For example, if a binding contains three policies, and each policy contains a weight of 10, each policy will be allocated one third of the total interface bandwidth.

```
(config firewall qos 2 policy 0)> weight int
(config firewall qos 2 policy 0)>
```

where *int* is any integer between **1** and **65535**. The default is **10**.

e. Set the maximum delay before the transmission of packets. A lower number means that the packets will be scheduled more quickly for transmission.

```
(config firewall qos 2 policy 0)> latency int
(config firewall qos 2 policy 0)>
```

where *int* is any integer, **1** or greater. The default is **100**.

f. To identify this policy as a fall-back policy:

```
(config firewall qos 2 policy 0)> default true
(config firewall qos 2 policy 0)>
```

The fall-back policy will be used for traffic that is not matched by any other policy. If there is no default policy associated with this binding, packets that do not match any policy rules will be dropped. If the policy is not a fall-back policy, you must configure at least one rule:

- i. Change to the rule node of the configuration:

```
(config firewall qos 2 policy 0)> rule
(config firewall qos 2 policy 0 rule)>
```

- ii. Add a rule:

```
(config firewall qos 2 policy 0 rule)> add end
(config firewall qos 2 policy 0 rule 0)>
```

New QoS binding policy rules are enabled by default. To disable:

```
(config firewall qos 2 policy 0 rule 0)> enable false
(config firewall qos 2 policy 0 rule 0)>
```

- iii. (Optional) Set a label for the new binding policy rule:

```
(config firewall qos 2 policy 0 rule 0)> label my_binding_policy_
rule
(config firewall qos 2 policy 0 rule 0)>
```

- iv. Set the value of the Type of Service (ToS) packet header that defines packet priority. If unspecified, this field is ignored.

```
(config firewall qos 2 policy 0 rule 0)> tos value
(config firewall qos 2 policy 0 rule 0)>
```

where *value* is a hexadecimal number. See <https://www.tucny.com/Home/dscp-tos> for a list of common TOS values.

- v. Set the IP protocol matching criteria for this rule:

```
(config firewall qos 2 policy 0 rule 0)> protocol value
(config firewall qos 2 policy 0 rule 0)>
```

where *value* is one of **tcp**, **udp**, or **any**.

- vi. Set the source port to define a source traffic matching criteria:

```
(config firewall qos 2 policy 0 rule 0)> srcport value
(config firewall qos 2 policy 0 rule 0)>
```

where *value* is the IP port number, a range of port numbers using the format *IP_port-IP_port*, or **any**.

- vii. Set the destination port to define a destination matching criteria:

```
(config firewall qos 2 policy 0 rule 0)> dstport value
(config firewall qos 2 policy 0 rule 0)>
```

where *value* is the IP port number, a range of port numbers using the format *IP_port-IP_port*, or **any**.

viii. Set the source address type:

```
(config network qos 2 policy 0 rule 0)> src type value
(config network qos 2 policy 0 rule 0)>
```

where *value* is one of:

- **any**: Source traffic from any address will be matched.
See [Firewall configuration](#) for more information about firewall zones.
- **interface**: Only traffic from the selected interface will be matched. Set the interface:
 - i. Use the **?** to determine available interfaces:

```
(config network qos 2 policy 0 rule 0)> src interface ?
```

Interface: Match the IP address with the specified interface's network address.

Format:

```
/network/interface/defaultip
/network/interface/defaultlinklocal
/network/interface/lan1
/network/interface/lan_hotspot
/network/interface/loopback
/network/interface/wan1
/network/interface/wwan1
/network/interface/wwan2
```

Current value:

```
(config network qos 2 policy 0 rule 0)> src interface
```

- ii. Set the interface. For example:

```
(config network qos 2 policy 0 rule 0)> src interface
/network/interface/wan1
(config network qos 2 policy 0 rule 0)>
```

- **address**: Only traffic from the IP address typed in **IPv4 address** will be matched. Set the address that will be matched:

```
(config network qos 2 policy 0 rule 0)> src address value
(config network qos 2 policy 0 rule 0)>
```

where *value* uses the format **IPv4_address**[*netmask*], or **any** to match any IPv4 address.

- **address6**: Only traffic from the IP address typed in **IPv6 address** will be matched. Set the address that will be matched:

```
(config network qos 2 policy 0 rule 0)> src address6 value
(config network qos 2 policy 0 rule 0)>
```

where value uses the format *IPv6_address[/prefix_length]*, or **any** to match any IPv6 address.

- **mac:** Only traffic from the MAC address typed in **MAC address** will be matched. Set the MAC address to be matched:

```
(config network qos 2 policy 0 rule 0)> src mac MAC_address
(config network qos 2 policy 0 rule 0)>
```

- ix. Set the destination address type:

```
(config network qos 2 policy 0 rule 0)> dst type value
(config network qos 2 policy 0 rule 0)>
```

where *value* is one of:

- **any:** Traffic destined for anywhere will be matched. See [Firewall configuration](#) for more information about firewall zones.
- **interface:** Only traffic destined for the selected **Interface** will be matched. Set the interface:
 - i. Use the **?** to determine available interfaces:

```
(config network qos 2 policy 0 rule 0)> dst interface ?
```

Interface: Match the IP address with the specified interface's network address.

Format:

```
/network/interface/defaultip
/network/interface/defaultlinklocal
/network/interface/lan1
/network/interface/lan_hotspot
/network/interface/loopback
/network/interface/wan1
/network/interface/wwan1
/network/interface/wwan2
```

Current value:

```
(config network qos 2 policy 0 rule 0)> dst interface
```

- ii. Set the interface. For example:

```
(config network qos 2 policy 0 rule 0)> dst interface
/network/interface/wan1
(config network qos 2 policy 0 rule 0)>
```

- **address:** Only traffic destined for the IP address typed in **IPv4 address** will be matched. Set the address that will be matched:

```
(config network qos 2 policy 0 rule 0)> src address value
(config network qos 2 policy 0 rule 0)>
```

where value uses the format *IPv4_address[/netmask]*, or **any** to match any IPv4 address.

- **address6**: Only traffic destined for the IP address typed in **IPv6 address** will be matched. Set the address that will be matched:

```
(config network qos 2 policy 0 rule 0)> src address6 value
(config network qos 2 policy 0 rule 0)>
```

where value uses the format **IPv6_address[/prefix_length]**, or **any** to match any IPv6 address.

Repeat to add a new rule. Up to 30 rules can be configured.

8. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

9. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Web filtering

Web filtering allows you to control access to services that can be accessed through the TX64 device by forwarding all Domain Name System (DNS) traffic to a web filtering service. This allows the network security administrator to configure a set of policies with the web filtering service that are applied to all routing devices with web filtering enabled. For example, a policy may allow or deny access to a specific service or type of service such as social media, gaming, and so on.

Your TX64 device supports two methods for configuring web filtering:

- Cisco Umbrella (formally known as OpenDNS).
- Manual DNS server entry.

Configure web filtering with Cisco Umbrella

Required configuration items

- Enable web filtering.
- A Cisco Umbrella account.
See <https://umbrella.cisco.com> for information about how to create a Cisco Umbrella account. A 14 day trial account is available.
- A customer-specific API token.

Task one: Generate a Cisco Umbrella API token

1. Log into the Cisco Umbrella Dashboard (<https://dashboard.umbrella.com>).
2. On the menu, select **Admin > API Keys**.
The **API Keys** page displays.
3. Click **+** (**Create**).
4. Select **Legacy Network Devices**.

5. Click **Create**.
6. Copy the token.


Task two: Configure web filtering

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

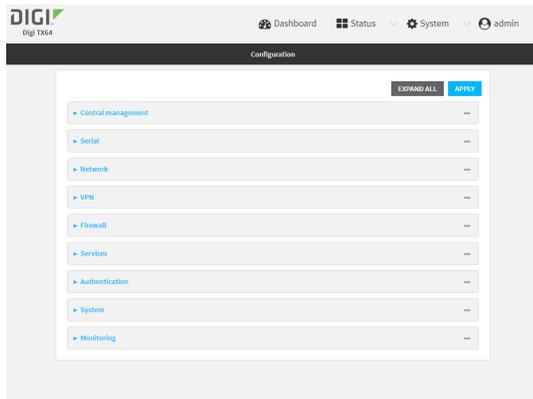

3. Click **Firewall > Web filtering service**.

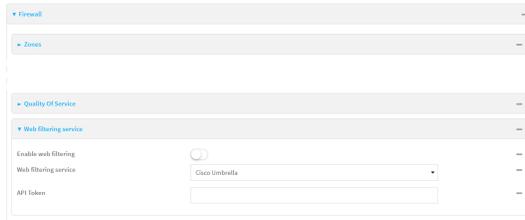

4. Click **Enable web filtering** to enable.
5. For **Web filtering service**, select **Cisco Umbrella**.
6. Paste the **API token** that was generated in [Task one: Generate a Cisco Umbrella API token](#).
7. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable web filtering:

```
(config)> firewall web-filter enable true
(config)>
```

4. Set the web filter service type to **umbrella**:

```
(config)> firewall web-filter service umbrella
(config)>
```

5. Set `umbrella_token` to the API token generated in [Task one: Generate a Cisco Umbrella API token](#):

```
(config)> firewall web-filter umbrella_token token
(config)>
```

6. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

7. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Clear the Cisco Umbrella device ID

If the Cisco Umbrella device ID being used by your TX64 is invalid, you can clear the device ID.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

- At the Admin CLI prompt, use the `rm` command to delete the **web-filter-id** file, and confirm the deletion:

```
> rm /etc/config/web-filter-id
rm: remove '/etc/config/web-filter-id'? yes
>
```

- Restart the web filtering service:

```
> config firewall web-filter enable false
> config firewall web-filter enable true
>
```

Configure web filtering with manual DNS servers

Required configuration items

- Enable web filtering.
- The IP address of one or more DNS servers. Cisco provides two open DNS servers for web filtering:
 - 208.67.222.220
 - 208.67.220.222

See <https://www.opendns.com/setupguide/> for more information about using Cisco DNS servers for web filtering.


To configure web filtering with manual DNS servers:

≡ WebUI


- Log into the TX64 WebUI as a user with full Admin access rights.
- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

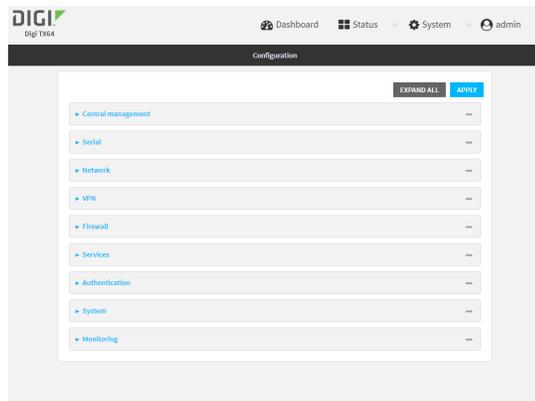


3. Click **Firewall > Web filtering service**.

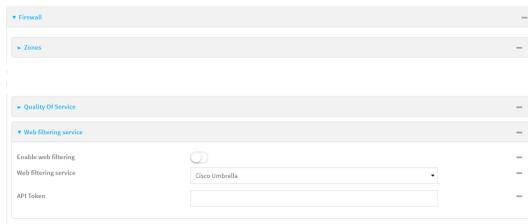

- 4. Click **Enable web filtering** to enable.
- 5. For **Web filtering service**, select **Manual**.
- 6. Click to expand **Servers**.
- 7. Click **+** to add a server.



8. For **IP address**, enter the IP address of the DNS server.

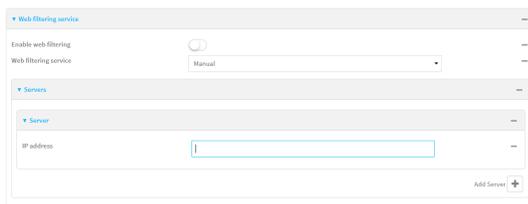

- 9. (Optional) Repeat for additional DNS servers.
- 10. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable web filtering:

```
(config)> firewall web-filter enable true
(config)>
```

4. Set the web filter service type to **manual**:

```
(config)> firewall web-filter service manual
(config)>
```

5. Add a DNS server:

```
(config)> add firewall web-filter server end
(config firewall web-filter server 0)>
```

6. Set the DNS server's IP address:

```
(config firewall web-filter server 0)> ip ip_address
(config firewall web-filter server 0)>
```

7. (Optional) Repeat for additional DNS servers.

For example, to configure manual web-filtering using Cisco's open DNS servers:

- a. Enable web filtering:

```
(config)> firewall web-filter enable true
(config)>
```

- b. Set the web filter service type to **manual**:

```
(config)> firewall web-filter service manual
(config)>
```

- c. Add the first DNS server:

- i. Add the server:

```
(config)> add firewall web-filter server end
(config firewall web-filter server 0)>
```

- ii. Set the server's IP address:

```
(config firewall web-filter server 0)> ip 208.67.222.220
(config firewall web-filter server 0)>
```

- d. Add the second DNS server:

- i. Move back one node in the configuration tree:

```
(config firewall web-filter server 0)> ..
(config firewall web-filter server)>
```

- ii. Add the server:

```
(config firewall web-filter server)> add end
(config firewall web-filter server 1)>
```

- iii. Set the server's IP address:

```
(config firewall web-filter server 1)> ip 208.67.222.222
(config firewall web-filter server 0)>
```

8. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

9. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Verify your web filtering configuration

If your web filtering implementation has the service set to Cisco Umbrella, or if it is configured to use manual DNS servers and uses the Cisco open DNS servers, you can verify the web filtering implementation by using the Cisco test site www.internetbadguys.com.


To verify the implementation:

WebUI


This procedure assumes you have already configured web filtering to use either Cisco Umbrella or the Cisco open DNS servers.

- See [Configure web filtering with Cisco Umbrella](#) for information about configuring web filtering with Cisco Umbrella.
- See [Configure web filtering with manual DNS servers](#) for information about configuring web filtering to use Cisco open DNS servers.

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

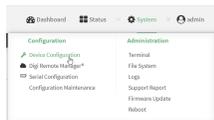

The **Configuration** window is displayed.

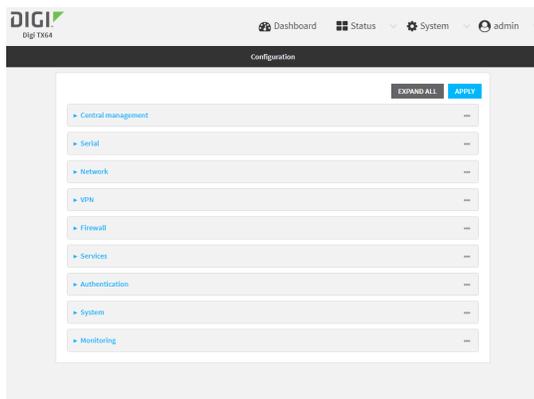

3. Disable web filtering:
 - a. Click **Firewall > Web filtering service**.
 - b. Click **Enable web filtering** to disable.



- c. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



4. From a new tab in your browser, attempt to connect to the Cisco test URL <http://www.internetbadguys.com>.

The connection should be successful.

5. Return to the TX64 WebUI and enable web filtering:
 - a. Click **Firewall > Web filtering service**.
 - b. Click **Enable web filtering** to enable.
 - c. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the

top of the page to locate it.



- From your browser, attempt to connect to <http://www.internetbadguys.com> again. The connection attempt should fail with the message, "This site is blocked due to a phishing threat."

Command line

This procedure assumes you have already configured web filtering to use either Cisco Umbrella or the Cisco open DNS servers.

- See [Configure web filtering with Cisco Umbrella](#) for information about configuring web filtering with Cisco Umbrella.
- See [Configure web filtering with manual DNS servers](#) for information about configuring web filtering to use Cisco open DNS servers.

- Log into the TX64 command line as a user with Admin access. Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- Disable web filtering:

```
> config firewall web-filter enable false
>
```

- Attempt to connect to the Cisco test URL <http://www.internetbadguys.com> by using either a web browser or the **curl** command from a Linux shell:

```
$ curl -I http://www.internetbadguys.com
HTTP/1.1 200 OK
Server: Apache
Content-Type: text/html; charset=UTF-8
Accept-Ranges: bytes
Date: Sat, 30 November 2019 21:14:12
X-Varnish: 4201397492
Age: 0
Via: 1.1 varnish
Connection: keep-alive

$
```

You should receive an "HTTP/1.1 200 OK" message, as highlighted above.

- Return to the Admin CLI and enable web filtering:

```
> config firewall web-filter enable true
>
```

5. Attempt to connect to <http://www.internetbadguys.com> again:

```
$ curl -I www.internetbadguys.com
HTTP/1.1 403 Forbidden
Server: openresty/1.9.7.3
Date: Sat, 30 November 2019 21:14:12
Content-Type: text/html
Connection: keep-alive

$
```

You should receive an "HTTP/1.1 403 Forbidden" message, as highlighted above.

Show web filter service information

To view information about the web filter service:

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the Admin CLI prompt, use the [show web filter](#) command to view information about the web-filter service:

```
> show web-filter

Enabled      : true
Service      : umbrella
Device ID    : 0004b5s63f5e2de7aa

>
```

If the device is configured to use Cisco Umbrella for web filtering, a device ID is displayed. The device ID is a unique ID assigned to the device by Cisco Umbrella. If there is a problem with the device ID, you can clear the ID. See [Clear the Cisco Umbrella device ID](#) for instructions.

System administration

This chapter contains the following topics:

Review device status	613
Configure system information	614
Update system firmware	616
Update cellular module firmware	618
Reboot your TX64 device	619
Reset the device to factory defaults	621
Configure power delays for power ignition sensor	624
Configure power button behavior	626
Configure automatic reboot behavior for temporary power drop	629
Configuration files	631
Schedule system maintenance tasks	636

Review device status

You can review the system of your device from either the **Status** page of the Web interface, or from the command line:

WebUI

To display system information:

1. Log into the TX64 WebUI as a user with Admin access.
2. On the main menu, click **Status**.
A secondary menu appears, along with a status panel.
3. On the secondary menu, click to display the details panel for the status you want to view.

Command line

To display system information, use the [show system](#) command.

- Show basic system information:

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Enter **show system** at the prompt:

```
> show system

Hostname           : TX64
FW Version         : 19.11.72.53
MAC                : 00:40:D0:13:35:36
Model              : Digi TX64
Current Time       : Sat, 30 November 2019 21:14:12 +0000
Uptime             : 21 days, 21 hours, 22 minutes, 44 seconds
(336164s)

>
```

- Show more detailed system information:

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Enter **show system verbose** at the prompt:

```
> show system verbose

Hostname           : TX64 FW Version           : 19.5.166.0
FW Build Date     : Sat, 30 November 2019 21:14:12 +0000
Schema Version    : 445
MAC               : 00:40:D0:13:35:36
Model             : Digi TX64
Timezone          : UTC
```

```

Current Time           : Sat, 30 November 2019 21:14:12 +0000
Uptime                 : 21 days, 21 hours, 23 minutes, 44 seconds
(336224s)

```

Disk

```
----
```

```

Load Average          : 0.15, 0.11, 0.03
RAM Usage              : 266.580MB/1926.688MB (13%)
Disk /etc/config Usage : 10.920MB/5309.752MB (0%)
Disk /opt Usage        : 10.920MB/5309.752MB (0%)
Disk /overlay Usage    : MB/MB(%)
Disk /tmp Usage        : 0.004MB/262.144MB (0%)
Disk /var Usage        : 1.132MB/262.144MB (0%)

```

```
>
```

Configure system information

You can configure information related to your TX64 device, such as providing a name and location for the device.


Configuration items

- A name for the device.
- The name of a contact for the device.
- The location of the device.
- A description of the device.
- A banner that will be displayed when users access terminal services on the device.


To enter system information:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

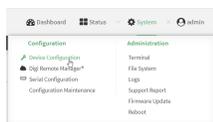


The **Configuration** window is displayed.

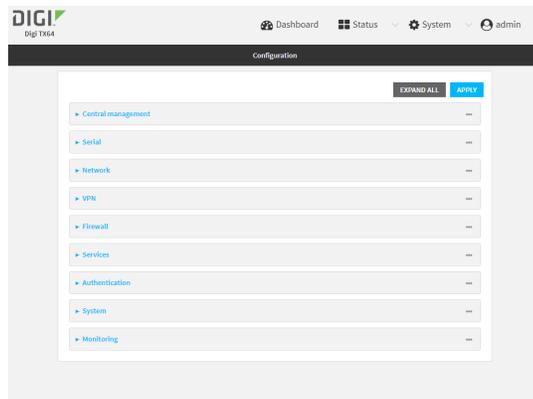

3. Click **System**.
4. For **Name**, type a name for the device. This name will appear in log messages and at the command prompt.
5. For **Contact**, type the name of a contact for the device.
6. For **Location**, type the location of the device.
7. For **Banner**, type a banner message that will be displayed when users log into terminal services on the device.
8. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.

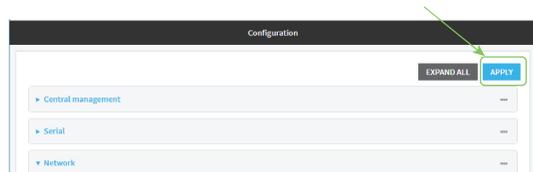

Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:


```
> config
(config)>
```
3. Set a name for the device. This name will appear in log messages and at the command prompt.


```
(config)> system name 192.168.3.1
192.168.3.1(config)>
```
4. Set the contact for the device:


```
192.168.3.1(config)> system contact "Jane User"
192.168.3.1(config)>
```

5. Set the location for the device:

```
192.168.3.1(config)> system location "9350 Excelsior Blvd., Suite 700,  
Hopkins, MN"  
192.168.3.1(config)>
```

6. Set the banner for the device. This is displayed when users access terminal services on the device.

```
192.168.3.1(config)> system banner "Welcome to the Digi TX64."  
192.168.3.1(config)>
```

7. Save the configuration and apply the change:

```
192.168.3.1(config)> save  
Configuration saved.  
192.168.3.1>
```

8. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Update system firmware

The TX64 operating system firmware images consist of a single file with the following naming convention:

platform-version.bin

For example, **TX64-19.11.72.53.bin**.

Manage firmware updates using Digi Remote Manager

If you have a network of many devices, you can use Digi Remote Manager **Profiles** to manage firmware updates. Profiles ensure all your devices are running the correct firmware version and that all newly installed devices are updated to that same version. For more information, see the **Profiles** section of the [Digi Remote Manager User Guide](#).

Certificate management for firmware images

The system firmware files are signed to ensure that only Digi-approved firmware load onto the device. The TX64 device validates the system firmware image as part of the update process and only successfully updates if the system firmware image can be authenticated.

WebUI

1. Download the TX64 operating system firmware from the Digi Support FTP site to your local machine.
2. Log into the TX64 WebUI as a user with Admin access.
3. On the main menu, click **System**.
4. In the **Device Firmware** section, for **Firmware Image**, click **Choose File**.

5. Browse to the system firmware file location and select the file.
6. Click **Update Firmware**.

Command line

1. Download the TX64 operating system firmware from the Digi Support FTP site to your local machine.
2. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
3. Load the firmware image onto the device:

```
> scp host hostname-or-ip user username remote remote-path local local-path
to local
```

where:

- *hostname-or-ip* is the hostname or ip address of the remote host.
- *username* is the name of the user on the remote host.
- *remote-path* is the path and filename of the file on the remote host that will be copied to the TX64 device.
- *local-path* is the location on the TX64 device where the copied file will be placed.

For example:

```
> scp host 192.168.4.1 user admin remote /home/admin/bin/TX64-
19.11.72.53.bin local /etc/config/ to local
admin@192.168.4.1's password: adminpwd
TX64->19.11.72.53.bin          100%   36MB   11.1MB/s   00:03
>
```

4. Verify that the firmware file has been successfully uploaded to the device:

```
> ls /etc/config/
-rw-r--r--   1 root   root       37511229 May 16 20:10 TX64-
19.11.72.53.bin
-rw-r--r--   1 root   root         2580 May 16 16:44 accns.json
drw-----   2 root   root         4096 Apr 29 18:51 analyzer
-rw-r--r--   1 root   root          47 Apr 30 06:59 dhcp.leases
drwxr-xr-x   2 root   root         4096 May 15 17:53 fcron
...
>
```

5. Update the firmware by entering the [update firmware](#) command, specifying the firmware file name:

```
> update firmware file TX64-19.11.72.53.bin
36632K
netflash: got "/etc/config/TX64-19.11.72.53.bin", length=37511229
netflash: authentication successful
netflash: programming FLASH device /dev/flash/image
36633K 100%
```

```
Firmware update completed, reboot device
>
```

6. Reboot the device to run the new firmware image using the `reboot` command.

```
> reboot
Rebooting system
>
```

7. Once the device has rebooted, log into the TX64's command line as a user with Admin access and verify the running firmware version by entering the `show system` command.

```
> show system

Hostname           : TX64
FW Version         : 19.11.72.53
MAC                : 0040FF800120
Model              : Digi TX64
Current Time       : Sat, 30 November 2019 21:14:12 +0000
Uptime             : 42 seconds (42s)

>
```


Update cellular module firmware

You can update modem firmware by downloading firmware from the Digi firmware repository, or by uploading firmware from your local storage onto the device.


WebUI

This operation is available from the WebUI only. There is no equivalent functionality at the CLI.

1. (Optional) Download the appropriate modem firmware from the Digi repository to your local machine.
2. Log into the TX64 WebUI as a user with Admin access.
3. From the main menu, click **Status > Modems**.
4. Click the modem firmware version.

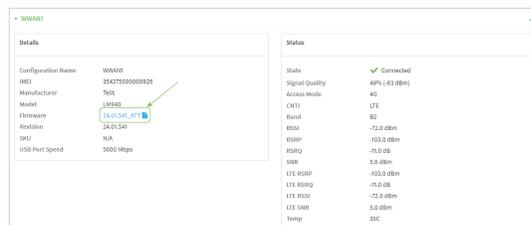

The **Modem firmware update** window opens.

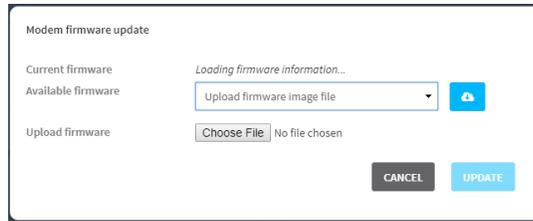

5. To update using firmware from the Digi firmware repository:
 - a. Click  to view available versions.
 - b. For Available firmware, select the firmware.
6. To update using firmware from your local filesystem:
 - a. Click **Choose File**.
 - b. Select the firmware.
7. Click **Update**.

Reboot your TX64 device


You can reboot the TX64 device immediately or schedule a reboot for a specific time every day.

Note You may want to save your configuration settings to a file before rebooting. See [Save configuration to a file](#).

Reboot your device immediately

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. From the main menu, click **System**.
3. Click **Reboot**.

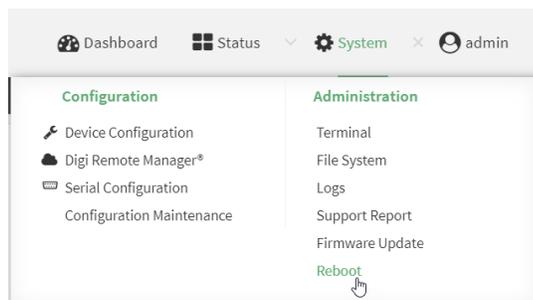

4. Click **Reboot** to confirm that you want to reboot the device.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the prompt, type:

```
> reboot
```


Schedule reboots of your device

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

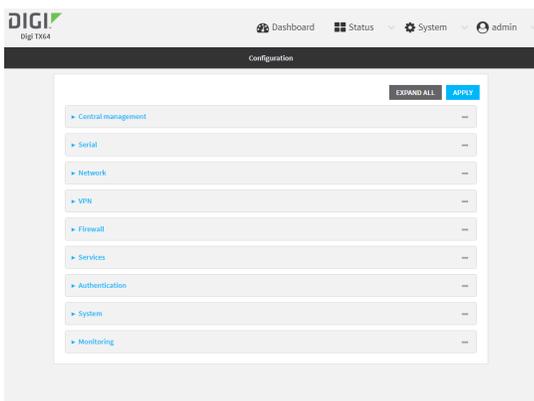

3. Select **System > Scheduled tasks**.
4. For **Reboot time**, enter the time of the day that the device should reboot, using the format *HH:MM*. The device will reboot at this time every day.
If a value is set for **Reboot time** but the device is unable to synchronize its time with an NTP server, the device will reboot after it has been up for 24 hours. See [System time](#) for information about configuring NTP servers.

5. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Set the reboot time:

```
(config>> system schedule reboot_time time
(config)>
```

where *time* is the time of the day that the device should reboot, using the format *HH:MM*. For example, the set the device to reboot at two in the morning every day:

```
(config>> system schedule reboot_time 02:00
(config)>
```

If a value is set for **reboot_time** but the device is unable to synchronize its time with an NTP server, the device will reboot after it has been up for 24 hours. See [System time](#) for information about configuring NTP servers.

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Reset the device to factory defaults

Resetting the device to factory defaults performs the following actions:

- Clears all configuration settings. When the device restarts, it uses the default configuration.
- Deletes all user files including Python scripts.
- Erases all automatically generated keys.
- Clears event and system log files.


You can reset the device in the WebUI, at the command line, or by using the **Reset** button on the device. You can also reset the device to the default configuration without removing scripts, keys, and logfiles by using the **revert** command.



1. Log into the TX64 WebUI as a user with Admin access.
2. On the main menu, click **System**. Under **Configuration**, click **Configuration Maintenance**.



The **Configuration Maintenance** window is displayed.

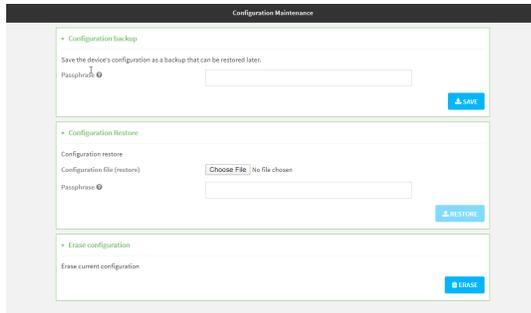

3. In the **Erase configuration** section, click **ERASE**.



4. Click **CONFIRM**.
5. After resetting the device:
 - a. Connect to the TX64 by using the serial port or by using an Ethernet cable to connect the TX64 **LAN1** port to your PC.
 - b. Log into the TX64:

User name: Use the default user name: **admin**.

Password: Use the unique password printed on the bottom label of the device (or the printed label included in the package).
 - c. Reset the default password for the admin account. See [Reset default password for the default admin user](#) for further information.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Enter the following:

```
> system factory-erase
```

3. After resetting the device:
 - a. Connect to the TX64 by using the serial port or by using an Ethernet cable to connect the TX64 **LAN1** port to your PC.
 - b. Log into the TX64:

User name: Use the default user name: **admin**.

Password: Use the unique password printed on the bottom label of the device (or the printed label included in the package).
 - c. Reset the default password for the admin account. See [Reset default password for the default admin user](#) for further information.

Reset the device by using the RESET button.

1. Locate the **RESET** button on your device.



2. Press and hold the **RESET** button perform a device reset. The **RESET** button has two modes:
 - **Configuration reset:**
 - Press and release the **RESET** button.
 - Press and hold the **RESET** button for **5** seconds.
 - The device reboots automatically and resets to factory defaults. This does not remove any automatically generated certificates and keys.
 - **Full device reset:**
 - After the device reboots from the first button press, immediately press and hold the **RESET** button for **5** seconds again.
 - The device reboots again and resets to factory defaults, as well as also removing generated certificates and keys.
3. After resetting the device:
 - a. Connect to the TX64 by using the serial port or by using an Ethernet cable to connect the TX64 **LAN1** port to your PC.
 - b. Log into the TX64:

User name: Use the default user name: **admin**.

Password: Use the unique password printed on the bottom label of the device (or the printed label included in the package).
 - c. Reset the default password for the admin account. See [Reset default password for the default admin user](#) for further information.

Reset the device with the revert command

You can reset the device to the default configuration without removing scripts, keys, and logfiles by using the **revert** command:

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. At the config prompt, enter **revert**:

```
(config)> revert
(config)>
```

4. Set the password for the admin user prior to saving the changes:

```
(config)> auth user admin password pwd
(config)>
```

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.


Configure power delays for power ignition sensor

By default, the TX64 device automatically powers on when it detects power on the ignition sensor, and powers off when it detects that there is no power on the ignition sensor, and there is no delay for either power on or power off based on the power ignition sensor.


You can configure delays for powering on or off the system based on the state of the ignition sensor.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

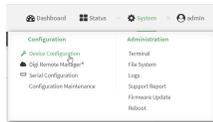

The **Configuration** window is displayed.

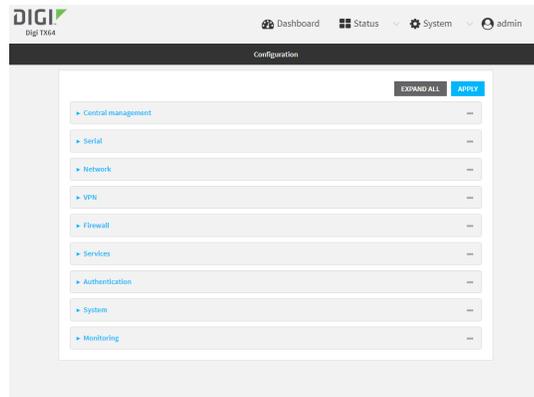

3. Click **System > Power > Ignition sense control**.
4. For **Ignition power on delay**, type the amount of time to wait to power on the device, after the device detects that there is power on the ignition sensor.

Allowed values are any number of hours, minutes, or seconds, and take the format **number {h|m|s}**.

For example, to set **Ignition power on delay** to ten minutes, enter **10m** or **600s**.

The default is **0s**, meaning that there is no power on delay.

5. For **Ignition power off delay**, type the amount of time to wait to power off the device, after the device detects that there is no longer power on the ignition sensor.

Allowed values are any number of hours, minutes, or seconds, and take the format **number {h|m|s}**.

For example, to set **Ignition power off delay** to ten minutes, enter **10m** or **600s**.

The default is **0s**, meaning that there is no power off delay.

6. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. To set the ignition power on delay:

```
(config)> system power ignition on_delay value
```

where *value* is any number of hours, minutes, or seconds, and takes the format **number{h|m|s}**.
For example, to set **the ignition power on delay** to ten minutes, enter either **10m** or **600s**:

```
(config)> system power ignition on_delay 600s
(config)>
```

The default is **0s**, meaning that there is no power on delay.

4. To set the ignition power off delay:

```
(config)> system power ignition off_delay value
```

where *value* is any number of hours, minutes, or seconds, and takes the format **number{h|m|s}**.
For example, to set **the ignition power off delay** to ten minutes, enter either **10m** or **600s**:

```
(config)> system power ignition off_delay 600s
(config)>
```

The default is **0s**, meaning that there is no power off delay.

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure power button behavior

The TX64 device's front panel includes a **Power** button.


- If the device is off, pressing the **Power** button will turn on the device.
- If the device is on, the **Power** button includes two options to power down the device: short-press and long-press options. By default, both short-press and long-press **Power** button actions will shut down the device.

You can disable the short-press power down behavior, to prevent powering down the device when the **Power** button is accidentally pressed. You can also disable the power button entirely, so that both the


short- and long-press power down behavior is disabled and the device cannot be powered down by using the **Power** button.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

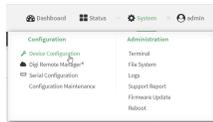

The **Configuration** window is displayed.

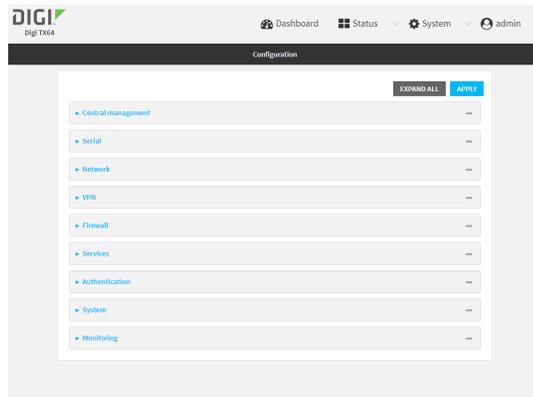

3. Click **System > Power**.
4. For **Power button control**, select one of the following options:
 - **Normal operation**—The default behavior, in which both short-press and long-press **Power** button actions shut down the device.
 - **Graceful shutdown disabled**—Disables the short-press behavior of the **Power** button. A long-press action will still shut down the device.
 - **Disabled**—Disables the **Power** button entirely, so that neither the short- or long-press actions will shut down the device.
5. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- At the config prompt, type:

```
(config)> system power button value
```

where *value* is one of:

- **normal**—The default behavior, in which both short-press and long-press **Power** button actions shut down the device.
 - **forced_only**—Disables the short-press behavior of the **Power** button. A long-press action will still shut down the device.
 - **disabled**—Disables the **Power** button entirely, so that neither the short- or long-press actions will shut down the device.
- Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure automatic reboot behavior for temporary power drop

By default, the TX64 device will automatically reboot if the ignition sense line is high and the device experiences a temporary power drop.


To disable the automatic reboot behavior:

WebUI

- Log into the TX64 WebUI as a user with full Admin access rights.
- On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

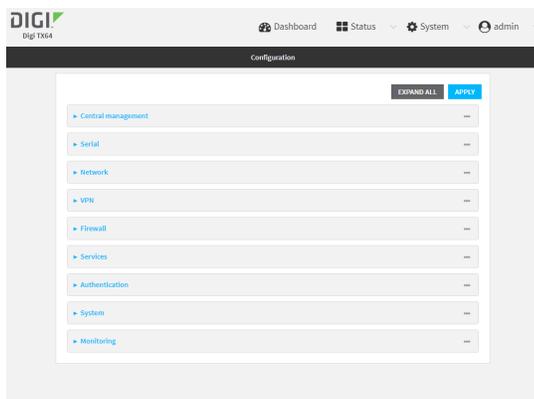

3. Click **System > Power**.
4. Click **Auto reboot** to disable.
5. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:


```
> config
(config)>
```
3. At the config prompt, type:


```
(config)> system power auto_reboot false
```
4. Save the configuration and apply the change:


```
(config)> save
Configuration saved.
>
```
5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configuration files

The TX64 configuration file, `/etc/config/accns.json`, contains all configuration changes that have been made to the device. It does not contain the complete device configuration; it only contains changes to the default configuration. Both the default configuration and the changes contained in the `accns.json` file are applied when the device reboots.

Save configuration changes


When you make changes to the TX64 configuration, the changes are not automatically saved. You must explicitly save configuration changes, which also applies the changes. If you do not save configuration changes, the system discards the changes.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

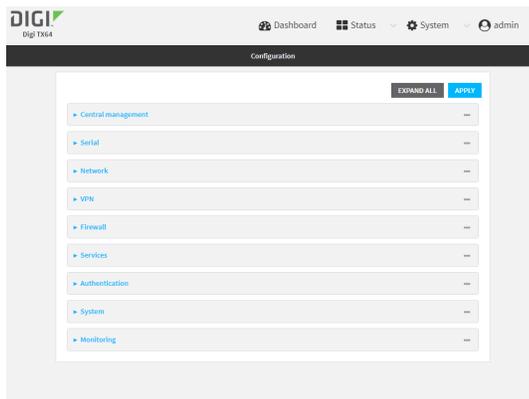

3. Make any necessary configuration changes.
4. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Make any necessary configuration changes.
4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.


Save configuration to a file

You can save your TX64 device's configuration to a file and use this file to restore the configuration, either to the same device or to similar devices.


WebUI

This procedure creates a binary archive file containing the device's configuration, certificates and keys, and other information.

1. Log into the TX64 WebUI as a user with Admin access.
2. On the main menu, click **System**. Under **Configuration**, click **Configuration Maintenance**.

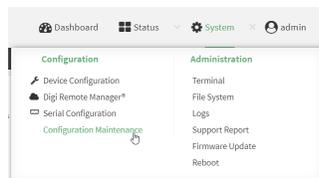

The **Configuration Maintenance** windows is displayed.

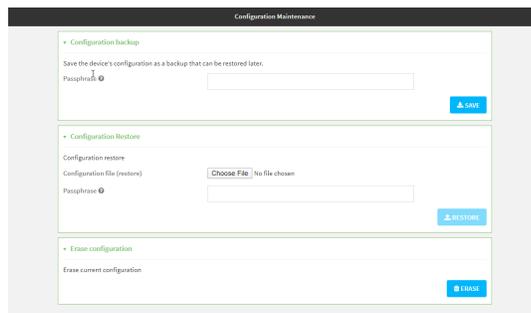

3. In the **Configuration backup** section:
 - a. (Optional) To encrypt the configuration using a passphrase, for **Passphrase (save/restore)**, enter the passphrase.
 - b. Click **SAVE**.

The file will be downloaded using your browser's standard download process.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Enter the following:

```
> system backup path [passphrase passphrase] type type
```

where

- *path* is the location on the TX64's filesystem where the configuration backup file should be saved.
- *passphrase* (optional) is a passphrase used to encrypt the configuration backup.
- *type* is the type of backup, either:
 - **archive**: Creates a binary archive file containing the device's configuration, certificates and keys, and other information.
 - **cli-config**: Creates a text file containing only the configuration changes.

For example:

```
> system backup /etc/config/ type archive
```

3. (Optional) Use **scp** to copy the file from your device to another host:

```
> scp host hostname-or-ip user username remote remote-path local local-path  
to remote
```

where:

- *hostname-or-ip* is the hostname or ip address of the remote host.
- *username* is the name of the user on the remote host.
- *remote-path* is the location on the remote host where the file will be copied.
- *local-path* is the path and filename on the TX64 device.

For example:

```
> scp host 192.168.4.1 user admin remote /home/admin/bin/ local  
/etc/config/backup-archive-0040FF800120-19.05.17-19.01.17.bin to remote
```

Restore the device configuration


You can restore a configuration file to your TX64 device by using a backup from the device, or a backup from a similar device.

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the main menu, click **System**. Under **Configuration**, click **Configuration Maintenance**.



The **Configuration Maintenance** window is displayed.

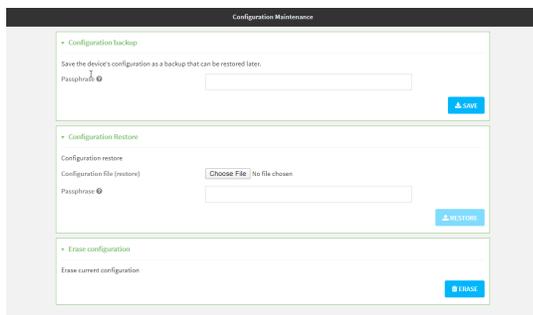

3. In the **Configuration Restore** section:
 - a. If a passphrase was used to create the configuration backup, for **Passphrase (save/restore)**, enter the passphrase.
 - b. Under **Configuration Restore**, click **Choose File**.
 - c. Browse to the system firmware file location on your local computer and select the file.
 - d. Click **RESTORE**.
4. Click **CONFIRM**.
The configuration will be restored and the device will be rebooted.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. If the configuration backup is on a remote host, use **scp** to copy the file from the host to your device:

```
> scp host hostname-or-ip user username remote remote-path local local-path
to local
```

where:

- *hostname-or-ip* is the hostname or ip address of the remote host.
- *username* is the name of the user on the remote host.
- *remote-path* is the path and filename of the file on the remote host that will be copied to the TX64 device.
- *local-path* is the location on the TX64 device where the copied file will be placed.

For example:

```
> scp host 192.168.4.1 user admin remote /home/admin/bin/backup-archive-0040FF800120-19.05.17-19.01.17.bin local /etc/config/ to local
```

3. Enter the following:

```
> system restore path [passphrase passphrase]
```

where

- *path* is the location of configuration backup file on the TX64's filesystem (*local-path* in the previous step).
- *passphrase* (optional) is the passphrase to restore the configuration backup, if a passphrase was used when the backup was created.

For example:

```
> system restore /etc/config/
```

Schedule system maintenance tasks

You can configure tasks and custom scripts to be run during a specified maintenance window.

Required configuration items

- The time that the system maintenance tasks will start.
- The duration window during which the system maintenance tasks can run.
- The frequency (either daily or weekly) that the tasks will run.
- The tasks to be performed. Options are:
 - Modem firmware update.
 - Configuration check.

Additional configuration items


- Custom scripts that should be run as part of the configuration check.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

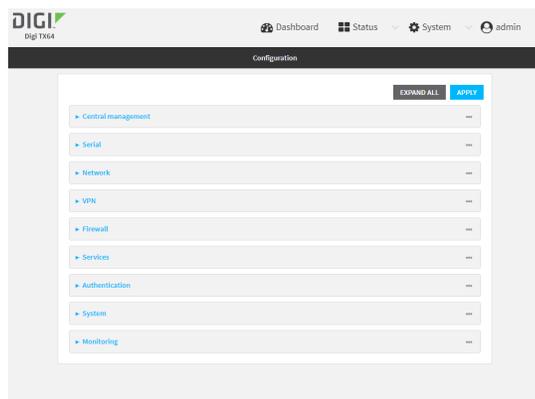


3. Click **System** > **Scheduled tasks** > **System maintenance**.
4. For **Start time**, type the time of day that the maintenance window should start, using the syntax **HH:MM**. If **Start time** is not set, maintenance tasks are not scheduled and will not be run.

The behavior of **Start time** varies depending on the setting of **Duration window**, which is configured in the next step.


- If **Duration window** is set to **Immediately**, all scheduled tasks will begin at the exact time specified in **Start time**.
 - If **Duration window** is set to **24 hours**, **Start time** is effectively obsolete and the maintenance tasks will be scheduled to run at any time. Setting **Duration window** to **24 hours** can potentially overstress the device and should be used with caution.
 - If **Duration window** is set to any value other than to **Immediately** or **24 hours**, the maintenance tasks will run at a random time during the time allotted for the duration window.
 - If **Duration window** is set to one or more hours, the minutes field in **Start time** is ignored and the duration window will begin at the beginning of the specified hour.
5. For **Duration window**, select the amount of time that the maintenance tasks will be run. If **Immediately** is selected, all scheduled tasks will begin at the exact time specified in **Start time**.
 6. For **Frequency**, select either **Daily** or **Weekly** for the frequency that the maintenance tasks should be run.
 7. (Optional) Click to enable **Modem firmware update** to instruct the system to look for any updated modem firmware during the maintenance window. If updated firmware is found, it will then be installed. **Modem firmware update** looks for updated firmware both on the local device and over the network, using either a WAN or cellular connection.
 8. (Optional) Click to enable **Configuration check** to allow for the configuration to be updated, including by custom scripts, during the maintenance window.
 9. (Optional) To schedule custom scripts:
 - a. Click **Custom scripts**.

Note This feature does not provide syntax or error checking. Certain commands can render the device inoperable. Use with care. Scripts created here are also automatically entered in **Configuration > Applications**.

- b. For **Add Script**, click **+**.

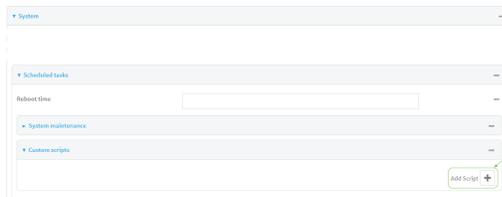

The schedule script configuration window is displayed.

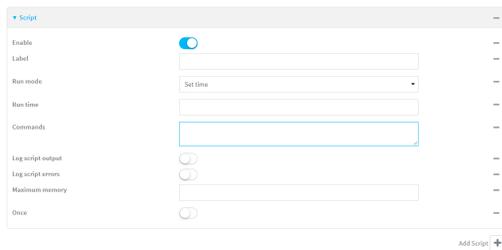

Scheduled scripts are enabled by default. To disable, click **Enable** to toggle off.

- c. (Optional) For **Label**, provide a label for the script.
 - d. For **Run mode**, select the mode that will be used to run the script. Available options are:
 - **On boot**: The script will run once each time the device boots.
 - If **On boot** is selected, select the action that will be taken when the script completes in **Exit action**. Available options are:
 - **None**: Action taken when the script exits.
 - **Restart script**: Runs the script repeatedly.
 - **Reboot**: The device will reboot when the script completes.
 - **Interval**: The script will start running at the specified interval, within 30 seconds after the configuration change is saved.
 - If **Interval** is selected, in **Interval**, type the interval.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number{w|d|h|m|s}*.
For example, to set **Interval** to ten minutes, enter **10m** or **600s**.
 - Click to enable **Run single** to run only a single instance of the script at a time.
If **Run single** is not selected, a new instance of the script will be started at every interval, regardless of whether the script is still running from a previous interval.
 - **Set time**: Runs the script at a specified time of the day.
 - If **Set Time** is selected, specify the time that the script should run in **Run time**, using the format *HH:MM*.
 - **During system maintenance**: The script will run during the system maintenance time window.
 - e. For **Commands**, enter the commands that will execute the script.
If the script begins with **#!**, then the script will be invoked in the location specified by the path for the script command. Otherwise, the default shell will be used (equivalent to **#!/bin/sh**).
 - f. Script logging options:
 - i. Click to enable **Log script output** to log the script's output to the system log.
 - ii. Click to enable **Log script errors** to log script errors to the system log.
 If neither option is selected, only the script's exit code is written to the system log.
 - g. For **Maximum memory**, enter the maximum amount of memory available to be used by the script and its subprocesses, using the format *number {b|bytes|KB|k|MB|MB|M|GB|G|TB|T}*.
 - h. Click to enable **Once** to configure the script to run only once at the specified time.
If **Once** is enabled, rebooting the device will cause the script to not run again. The only way to re-run the script is to:
 - Remove the script from the device and add it again.
 - Make a change to the script.
 - Uncheck **Once**.
10. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Schedule system maintenance:
 - a. Configure the time of day that the maintenance window should start, using the syntax *HH:MM*. If the start time is not set, maintenance tasks are not scheduled and will not be run.

```
(config)> system schedule maintenance from HH:MM
(config)>
```

The behavior of the start time varies depending on the setting of the duration length, which is configured in the next step.

- If the duration length is set to **0**, all scheduled tasks will begin at the exact time specified in the start time.
 - If the duration length is set to **24 hours**, the start time is effectively obsolete and the maintenance tasks will be scheduled to run at any time. Setting the duration length to **24 hours** can potentially overstress the device and should be used with caution.
 - If the duration length is set to any value other than to **0** or **24 hours**, the maintenance tasks will run at a random time during the time allotted for the duration window.
 - If the duration length is set to one or more hours, the minutes field in the start time is ignored and the duration window will begin at the beginning of the specified hour.
- b. Configure the duration length (the amount of time that the maintenance tasks will be run). If **0** is used, all scheduled tasks will begin at the start time, defined in the previous step.

```
system schedule maintenance length num
(config)>
```

where *num* is any whole number between **0** and **24**.

- c. Configure the frequency that the maintenance tasks should be run:

```
system schedule maintenance frequency value
(config)>
```

where *value* is either **daily** or **weekly**. **Daily** is the default.

- d. Configure the device to look for any updated modem firmware during the maintenance window. If updated firmware is found, it will then be installed. The device will look for updated firmware both on the local device and over the network, using either a WAN or cellular connection.

```
system schedule maintenance modem_fw_update value
(config)>
```

where *value* is either **true** or **false**. **yes** or **no**, and **1** or **0** are also allowed.

- e. Allow for the configuration to be updated, including by custom scripts, during the maintenance window:

```
system schedule maintenance config_check value
(config)>
```

where *value* is either **true** or **false**. **yes** or **no**, and **1** or **0** are also allowed.

4. (Optional) Schedule custom scripts:

- a. Add a script:

```
(config)> add system schedule script end
(config system schedule script 0)>
```

Scheduled scripts are enabled by default. To disable:

```
(config system schedule script 0)> enable false
(config system schedule script 0)>
```

- b. (Optional) Provide a label for the script.

```
(config system schedule script 0)> label value
(config system schedule script 0)>
```

where *value* is any string. if spaces are used, enclose *value* within double quotes.

- c. Set the mode that will be used to run the script:

```
(config system schedule script 0)> when mode
(config system schedule script 0)>
```

where *mode* is one of the following:

- **boot**: The script will run once each time the device boots.
 - If **boot** is selected, set the action that will be taken when the script completes:

```
(config system schedule script 0)> exit_action action
(config system schedule script 0)>
```

where *action* is one of the following:

- **none**: Action taken when the script exits.
- **restart**: Runs the script repeatedly.
- **reboot**: The device will reboot when the script completes.
- **interval**: The script will start running at the specified interval, within 30 seconds after the configuration change is saved. If **interval** is selected:

- Set the interval:

```
(config system schedule script 0)> on_interval value
(config system schedule script 0)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **on_interval** to ten minutes, enter either **10m** or **600s**:

```
(config system schedule script 0)> on_interval 600s
(config system schedule script 0)>
```

- (Optional) Configure the script to run only a single instance at a time:

```
(config system schedule script 0)> once true
(config system schedule script 0)>
```

If **once** is set to **false**, a new instance of the script will be started at every interval, regardless of whether the script is still running from a previous interval.

- **set_time**: Runs the script at a specified time of the day.
 - If **set_time** is set, set the time that the script should run, using the format *HH:MM*:

```
(config system schedule script 0)> run_time HH:MM
(config system schedule script 0)>
```

- **maintenance_time**: The script will run during the system maintenance time window.

- d. Set the commands that will execute the script:

```
(config system schedule script 0)> commands filename
(config system schedule script 0)>
```

where *filename* is the path and filename of the script, and any related command line information.

If the script begins with **#!**, then the script will be invoked in the location specified by the path for the script command. Otherwise, the default shell will be used (equivalent to **#!/bin/sh**).

e. Script logging options:

- To log the script's output to the system log:

```
(config system schedule script 0)> syslog_stdout true
(config system schedule script 0)>
```

- To log script errors to the system log:

```
(config system schedule script 0)> syslog_stderr true
(config system schedule script 0)>
```

If **syslog_stdout** and **syslog_stderr** are not enabled, only the script's exit code is written to the system log.

f. Set the maximum amount of memory available to be used by the script and its subprocesses:

```
(config system schedule script 0)> max_memory value
(config system schedule script 0)>
```

where *value* uses the syntax **number{b|bytes|KB|k|MB|MB|M|GB|G|TB|T}**.

g. To run the script only once at the specified time:

```
(config system schedule script 0)> once true
(config system schedule script 0)>
```

If **once** is enabled, rebooting the device will cause the script to run again. The only way to re-run the script is to:

- Remove the script from the device and add it again.
- Make a change to the script.
- Disable **once**.

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Monitoring

This chapter contains the following topics:

intelliFlow	644
Configure NetFlow Probe	651
Enable the Bluetooth scanner	656
Enable the Wi-Fi scanner	663

intelliFlow

intelliFlow monitors system information, network data usage, and traffic information, and displays the information in a series of charts available in the local WebUI. To use intelliFlow, the TX64 must be powered on and you must have access to the local WebUI. Once you enable intelliFlow, the **Status > intelliFlow** option is available in the main menu. By default, intelliFlow is disabled.

intelliFlow provides charts on the following information:

- System utilisation
- Top data usage by host
- Top data usage by server
- Top data usage by service
- Host data usage over time

intelliFlow charts are dynamic; at any point, you can click inside the chart to drill down to view more granular information, and menu options allow you to change various aspects of the information being displayed.

Note When intelliFlow is enabled, it adds an estimated 50MB of data usage for the device by reporting the metrics to Digi Remote Manager.

Enable intelliFlow

Required configuration items

- Enable intelliFlow.


Additional configuration items

- The firewall zone for internal clients being monitored by intelliFlow.


To enable intelliFlow:

≡ WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

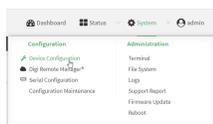

The **Configuration** window is displayed.

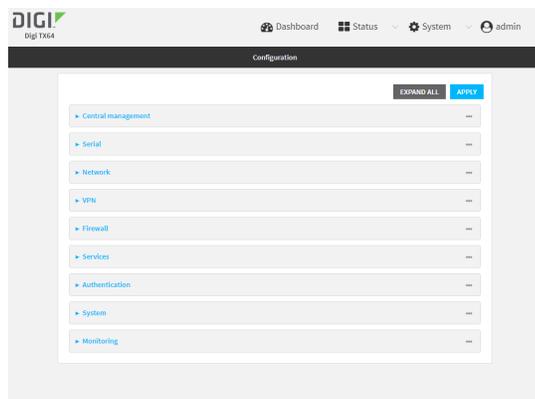

3. Click **Monitoring > intelliFlow**.

The intelliFlow configuration window is displayed.



4. Click **Enable intelliFlow**.
5. For **Zone**, select the firewall zone. Internal clients that are being monitored by IntelliFlow should be present on the specified zone.
6. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable IntelliFlow:

```
(config)> monitoring intelliflow enable true
```

4. Set the firewall zone. Internal clients that are being monitored by IntelliFlow should be present on the specified zone:

- a. Determine available zones:

```
(config)> monitoring intelliflow zone ?
```

```
Zone: The firewall zone which is assigned to the network interface(s)
that
intelliFlow will see as internal clients. intelliFlow relies on an
internal to
external relationship, where the internal clients are present on the
zone specified.
```

```
Format:
```

```
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

```
Default value: internal
```

```
Current value: internal
```

```
(config)>
```

- b. Set the zone to be used by IntelliFlow:

```
(config)> monitoring intelliflow zone my_zone
```

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Use intelliFlow to display average CPU and RAM usage


This procedure is only available from the WebUI.

To display display average CPU and RAM usage:

WebUI


1. Log into the TX64 WebUI as a user with Admin access.
2. If you have not already done so, enable intelliFlow. See [Enable intelliFlow](#).
3. From the menu, click **Status > intelliFlow**.

The System Utilisation chart is displayed:

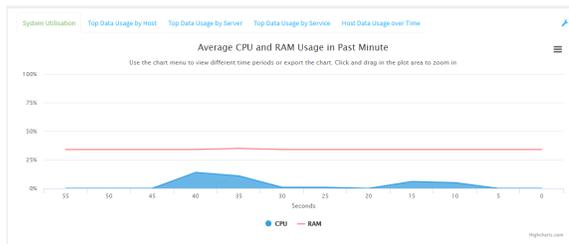


■ Display more granular information:


1. Click and drag over an area in the chart to zoom into that area and provide more granular information.

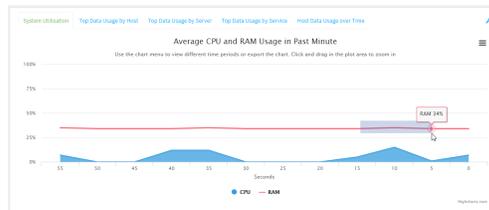


2. Release to display the selected portion of the chart:

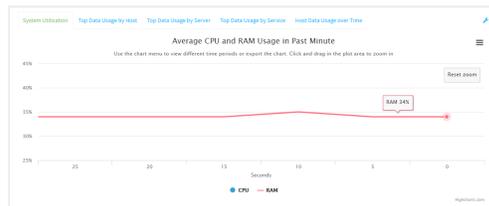

3. Click **Reset zoom** to return to the original display:

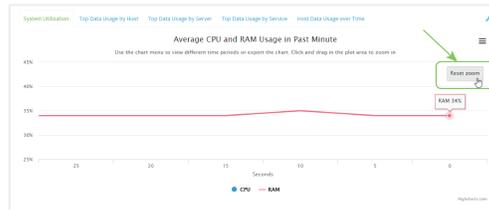

- Change the time period displayed by the chart.
By default, the **System utilisation** chart displays the average CPU and RAM usage over the last minute. You can change this to display the average CPU and RAM usage:
 - Over the last hour.
 - Over the last day.
 - Over the last 30 days.
 - Over the last 180 days.
 1. Click the menu icon (☰).
 2. Select the time period to be displayed.

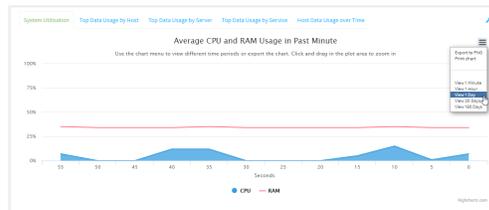

- Save or print the chart.
 1. Click the menu icon (☰).
 2. To save the chart to your local filesystem, select **Export to PNG**.
 3. To print the chart, select **Print chart**.

Use intelliFlow to display top data usage information

With intelliFlow, you can display top data usage information based on the following:

- Top data usage by host
- Top data usage by server
- Top data usage by service


To generate a top data usage chart:

☰ WebUI


1. Log into the TX64 WebUI as a user with Admin access.
2. If you have not already done so, enable intelliFlow. See [Enable intelliFlow](#).
3. From the menu, click **Status > intelliFlow**.

4. Display a data usage chart:


- To display the **Top Data Usage by Host** chart, click **Top Data Usage by Host**.

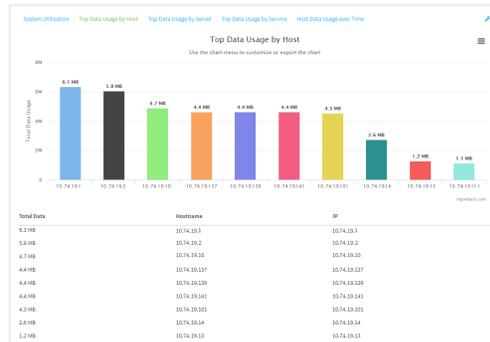

- To display the **Top Data Usage by Server** chart, click **Top Data Usage by Server**.

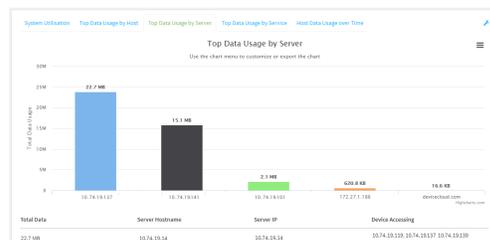


- To display the **Top Data Usage by Service** chart, click **Top Data Usage by Service**.

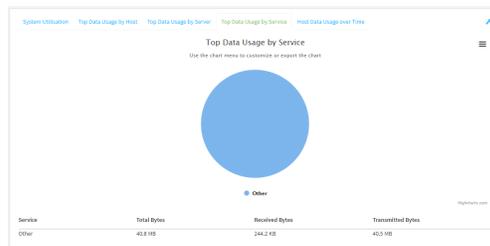

5. Change the type of chart that is used to display the data:


- Click the menu icon (☰).
- Select the type of chart.

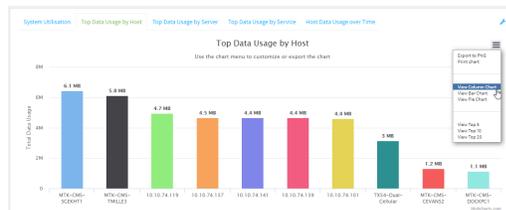

6. Change the number of top users displayed.

You can display the top five, top ten, or top twenty data users.

- a. Click the menu icon (☰).
- b. Select the number of top users to displayed.

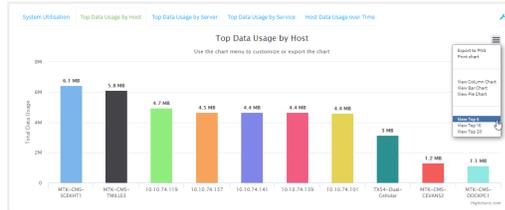


7. Save or print the chart.
 - a. Click the menu icon (☰).
 - b. To save the chart to your local filesystem, select **Export to PNG**.
 - c. To print the chart, select **Print chart**.

Use intelliFlow to display data usage by host over time


To generate a chart displaying a host's data usage over time:

☰ WebUI


1. Log into the TX64 WebUI as a user with Admin access.
2. If you have not already done so, enable intelliFlow. See [Enable intelliFlow](#).
3. From the menu, click **Status > intelliFlow**.
4. Click **Host Data Usage Over Time**.

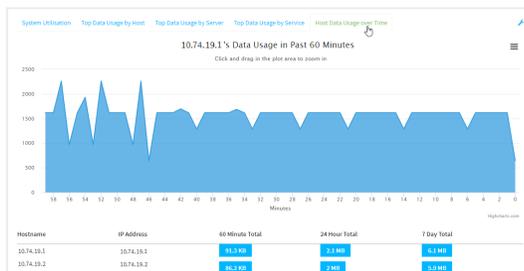


- Display more granular information:
 - a. Click and drag over an area in the chart to zoom into that area and provide more granular information.

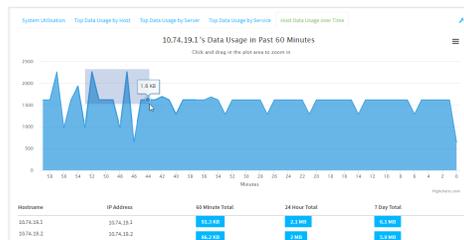

b. Release to display the selected portion of the chart:

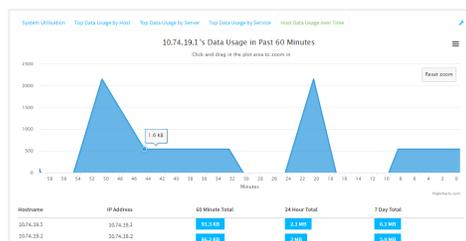

c. Click **Reset zoom** to return to the original display:

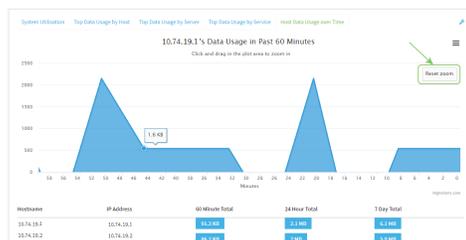

- Save or print the chart.
 - a. Click the menu icon (☰).
 - b. To save the chart to your local filesystem, select **Export to PNG**.
 - c. To print the chart, select **Print chart**.

Configure NetFlow Probe

NetFlow probe is used to probe network traffic on the TX64 device and export statistics to NetFlow collectors.

Required configuration items

- Enable NetFlow.
- The IP address of a NetFlow collector.

Additional configuration items

- The NetFlow version.
- Enable flow sampling and select the flow sampling technique.
- The number of flows from which the flow sampler can sample.
- The number of seconds that a flow is inactive before it is exported to the NetFlow collectors.
- The number of seconds that a flow is active before it is exported to the NetFlow collectors.
- The maximum number of simultaneous flows.
- A label for the NetFlow collector.
- The port of the NetFlow collector.
- Additional NetFlow collectors.


To probe network traffic and export statistics to NetFlow collectors:

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

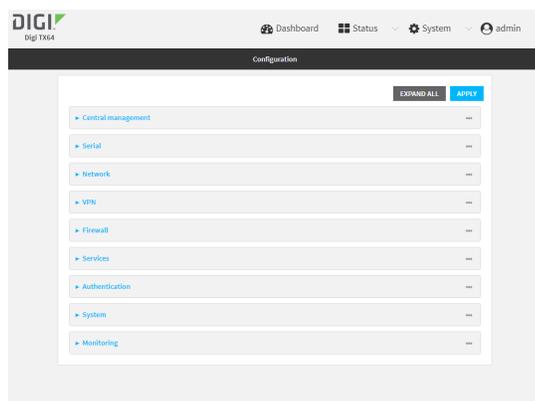

3. Click **Monitoring > NetFlow probe**.

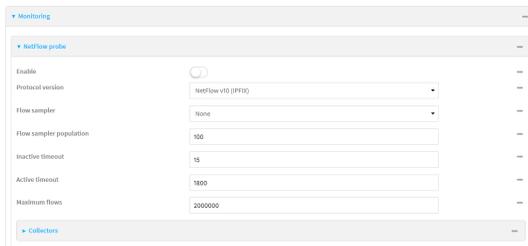

4. **Enable** NetFlow probe.
5. **Protocol version:** Select the **Protocol version**. Available options are:
 - **NetFlow v5**—Supports IPv4 only.
 - **NetFlow v9**—Supports IPv4 and IPv6.
 - **NetFlow v10 (IPFIX)**—Supports both IPv4 and IPv6 and includes IP Flow Information Export (IPFIX).

The default is **NetFlow v10 (IPFIX)**.

6. Enable **Flow sampler** by selecting a sampling technique. Flow sampling can reduce flow processing and transmission overhead by providing a representative subset of all flows. Available options are:
 - **None**—No flow sampling method is used. Each flow is accounted.
 - **Deterministic**—Selects every *n*th flow, where *n* is the value of **Flow sampler population**.

- **Random**—Randomly selects one out of every n flows, where n is the value of **Flow sampler population**.
 - **Hash**—Randomly selects one out of every n flows using the hash of the flow key, where n is the value of **Flow sampler population**.
7. For **Flow sampler population**, if you selected a flow sampler, enter the number of flows for the sampler. Allowed value is any number between **2** and **16383**. The default is **100**.
 8. For **Inactive timeout**, type the the number of seconds that a flow can be inactive before sent to a collector. Allowed value is any number between **1** and **15**. The default is **15**.
 9. For **Active timeout**, type the number of seconds that a flow can be active before sent to a collector. Allowed value is any number between **1** and **1800**. The default is **1800**.
 10. For **Maximum flows**, type the maximum number of flows to probe simultaneously. Allowed value is any number between **0** and **2000000**. The default is **2000000**.
 11. Add collectors:
 - a. Click to expand **Collectors**.
 - b. For **Add Collector**, click **+**.
 - c. (Optional) Type a **Label** for the collector.
 - d. For **Address**, type the IP address of the collector.
 - e. (Optional) For **Port**, enter the port number used by the collector. The default is 2055.
 Repeat to add additional collectors.
 12. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable NetFlow:

```
(config)> monitoring netflow enable true
(config)>
```

4. Set the protocol version:

```
(config)> monitoring netflow protocol version
                                     (config)>
```

where *version* is one of:

- **v5**—NetFlow v5 supports IPv4 only.
- **v9**—NetFlow v9 supports IPv4 and IPv6.
- **v10**—NetFlow v10 (IPFIX) supports both IPv4 and IPv6 and includes IP Flow Information Export (IPFIX).

The default is **v10**.

4. Enable flow sampling by selecting a sampling technique. Flow sampling can reduce flow processing and transmission overhead by providing a representative subset of all flows.

```
(config)> monitoring netflow sampler type
(config)>
```

where *type* is one of:

- **none**—No flow sampling method is used. Each flow is accounted.
- **deterministic**—Selects every *n*th flow, where *n* is the value of the flow sample population.
- **random**—Randomly selects one out of every *n* flows, where *n* is the value of the flow sample population.
- **hash**—Randomly selects one out of every *n* flows using the hash of the flow key, where *n* is the value of the flow sample population.

5. If you are using a flow sampler, set the number of flows for the sampler:

```
(config)> monitoring netflow sampler_population value
(config)>
```

where *value* is any number between **2** and **16383**. The default is **100**.

6. Set the number of seconds that a flow can be inactive before sent to a collector:

```
(config)> monitoring netflow inactive_timeout value
(config)>
```

where *value* is any is any number between **1** and **15**. The default is **15**.

7. Set the number of seconds that a flow can be active before sent to a collector:

```
(config)> monitoring netflow active_timeout value
(config)>
```

where *value* is any is any number between **1** and **1800**. The default is **1800**.

8. Set the maximum number of flows to probe simultaneously:

```
(config)> monitoring netflow max_flows value
(config)>
```

where *value* is any is any number between **0** and **2000000**. The default is **2000000**.

9. Add collectors:

a. Add a collector:

```
(config)> add monitoring netflow collector end  
(config monitoring netflow collector 0)>
```

b. Set the IP address of the collector:

```
(config monitoring netflow collector 0)> address ip_address  
(config monitoring netflow collector 0)>
```

c. (Optional) Set the port used by the collector:

```
(config monitoring netflow collector 0)> port port  
(config monitoring netflow collector 0)>
```

d. (Optional) Set a label for the collector:

```
(config monitoring netflow collector 0)> label "This is a collector."  
(config monitoring netflow collector 0)>
```

Repeat to add additional collectors.

10. Save the configuration and apply the change:

```
(config monitoring netflow collector 0)> save  
Configuration saved.  
>
```

11. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Enable the Bluetooth scanner

The Bluetooth scanner allows you to configure your TX64 device to detect BLE-enabled devices that are nearby, and can be configured to open an SSH port that remote hosts can access to read basic information about those devices.

For users to view the output of the Bluetooth scanner, they must be a member of an authentication group that has **Bluetooth scanner access** enabled. See [Add an authentication group](#) for authentication group configuration information.

Required configuration

- Enable the Bluetooth scanner.

Additional configuration

- The amount of time that the record of a device connection is kept before the device is considered out of range, and the record is expired from the database.
- A remote host to view the output of the service.
- The SSH port used by the Bluetooth scanner to stream output to a remote host.
- The access control list for the SSH port used by the Bluetooth scanner to stream output to a remote host.

When the Bluetooth scanner is enabled, the TX64 device will automatically configure its firewall rules to allow incoming connections on the configured listening port. You can restrict access by configuring the access control list for the Bluetooth scanner's listening port.


- Multicast DNS (mDNS) support.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

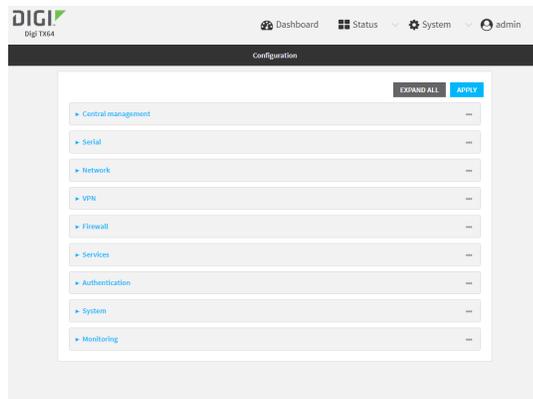

3. Click **Monitoring** > **Bluetooth scanner**.




4. Click **Enable**.
5. (Optional) For **Update interval**, type the amount of time that the record of a device connection is kept before the device is considered out of range, and the record is expired from the database.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.

For example, to set **Update interval** to ten minutes, enter **10m** or **600s**.

The minimum value is **5** seconds, and the default is **15** seconds.

6. Configure the device to open an SSH port that remote hosts can access:
 - a. Click to expand **SSH stream service**.

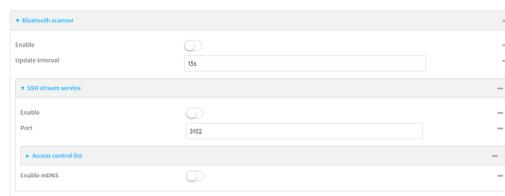

- b. Click **Enable**.
- c. (Optional) For **Port**, type the port that the Bluetooth scanner will use. The default is **3102**.
- d. Click **Access control list** to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - i. Click **IPv4 Addresses**.
 - ii. For **Add Address**, click **+**.

- iii. For **Address**, enter the IPv4 address or network that can access the device's SSH service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - **any**: No limit to IPv4 addresses that can access the SSH service.
 - iv. Click **+** again to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - i. Click **IPv6 Addresses**.
 - ii. For **Add Address**, click **+**.
 - iii. For **Address**, enter the IPv6 address or network that can access the device's SSH service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - **any**: No limit to IPv6 addresses that can access the SSH service.
 - iv. Click **+** again to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the TX64 device:
 - i. Click **Interfaces**.
 - ii. For **Add Interface**, click **+**.
 - iii. For **Interface**, select the appropriate interface from the dropdown.
 - iv. Click **+** again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - i. Click **Zones**.
 - ii. For **Add Zone**, click **+**.
 - iii. For **Zone**, select the appropriate firewall zone from the dropdown.
See [Firewall configuration](#) for information about firewall zones.
 - iv. Click **+** again to allow access through additional firewall zones.
7. Multicast DNS (mDNS) is disabled by default. mDNS is a protocol that resolves host names in small networks that do not have a DNS server. To enable mDNS, click **Enable mDNS**.
8. Confirm that users who will use the Bluetooth scanner server are members of an authentication group that has **Bluetooth scanner access** enabled. See [Add an authentication group](#) for authentication group configuration information.
9. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable the Bluetooth scanner:

```
(config> monitoring bluetooth_scanner enable true
(config)>
```

4. (Optional) Set the number of seconds between scans:

```
(config)> monitoring bluetooth_scanner update_interval value
(config)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **update_interval** to ten minutes, enter either **10m** or **600s**:

```
(config)> monitoring bluetooth_scanner update_interval 600s
(config)>
```

The minimum value is **5** seconds, and the default is **15** seconds.

5. Enable the device to open an SSH port that remote hosts can access:

```
(config> monitoring bluetooth_scanner ssh enable true
(config)>
```

6. (Optional) Set the number of the port that the Bluetooth scanner will use. The default is **3102**.

```
(config)> monitoring bluetooth_scanner ssh port port
(config)>
```

7. Configure access control:

- To limit access to specified IPv4 addresses and networks:

```
(config)> add monitoring bluetooth_scanner ssh acl address end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- **any**: No limit to IPv4 addresses that can access the SSH service.

Repeat this step to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:

```
(config)> add monitoring bluetooth_scanner ssh acl address6 end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- **any**: No limit to IPv6 addresses that can access the SSH service.

Repeat this step to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:

```
(config)> add monitoring bluetooth_scanner ssh acl interface end value
(config)>
```

Where *value* is an interface defined on your device.

Display a list of available interfaces:

Use **... network interface ?** to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

```
-----
defaultip           Default IP
defaultlinklocal    Default Link-local IP
lan1                 LAN1
loopback            Loopback
wan1                 WAN1
wwan1                WWAN1
wwan2                WWAN2
```

```
(config)>
```

Repeat this step to list additional interfaces.

- To limit access based on firewall zones:

```
(config)> add monitoring bluetooth_scanner ssh acl zone end value
```

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type **... firewall zone ?** at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet

```
filtering rules and access control lists.
```

```
Additional Configuration
```

```
-----
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup

(config)>
```

Repeat this step to list additional firewall zones.

8. (Optional) Configure Multicast DNS (mDNS)

mDNS is a protocol that resolves host names in small networks that do not have a DNS server. mDNS is disabled by default. To enable:

```
(config)> monitoring bluetooth_scanner ssh mdns enable true
(config)>
```

9. Confirm that users who will use the Bluetooth scanner server are members of an authentication group that has **Bluetooth scanner access** enabled. See [Add an authentication group](#) for authentication group configuration information.
10. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

11. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Display the output of the Bluetooth scanner.

You can use one of the following methods to view the output of the Bluetooth scanner:

- From the **Status** page of the WebUI.
- From the **System Logs** page of the WebUI. You can also search the output, as well as download the output in text format, from the **System Logs** page.
- From the command line when logged into the TX64 device.
- From a remote host, by connecting to the TX64 device by using the scanner's SSH port.

To view the output of the Bluetooth scanner, you must first enable the service. See [Enable the Bluetooth scanner](#) for instructions. For users to view the output of the Bluetooth scanner, they must

be a member of an authentication group that has **Bluetooth scanner access** enabled. See [Add an authentication group](#) for authentication group configuration information.

WebUI

To view the output of the Bluetooth scanner from the **Status** page:

1. Log into the TX64 WebUI as a user with Admin access.
2. On the menu, select **Status > Bluetooth**.
The **Bluetooth scanner** page displays.

Note The **Bluetooth scanner** status page does not update automatically. You must refresh the page to display the latest output from the Bluetooth scanner.

To view the output of the Bluetooth scanner from the **System Logs** page:

1. Log into the TX64 WebUI as a user with Admin access.
2. On the menu, select **System > Logs**.
3. Click to expand **Bluetooth Scanner Logs**.
4. To search the output for a text string:
 - a. In the **Find** text box, type the search string.
 - b. Press **Enter**.
The displayed output will be filtered to only display those items in the search string.
 - c. To return to displaying the entire output log, delete the search string from the **Find** text box.
5. To download the output, click the download () icon. The output will be downloaded to your local filesystem in text format.

See [Bluetooth scanner output](#) for information about the displayed fields.



Command line

To view output of the Bluetooth scanner from the command line, the user must be a member of an authentication group that has **Bluetooth scanner access** enabled. See [Add an authentication group](#) for details.

1. Log into the TX64 command line.
2. At the Access selection menu, type **bluetooth**.
The **bluetooth** option is only available if the Bluetooth scanner is enabled. See [Enable the Bluetooth scanner](#) for instructions.

See [Bluetooth scanner output](#) for information about the displayed fields.

View the Bluetooth scanner output from a remote host

Use SSH from a remote host to connect to the device by using the configure Bluetooth scanner port. For example, to view the output of the scanner by using the default Bluetooth scanner port of **3102**:

```
$ ssh user@device-ip -p 3102
Password:
```

After logging into your device, it will display the output from the Bluetooth scanner in your shell. For example:

```
TX64|Hopkins, MN|2019-06-28 17:08:57|38-97-31-8C-EF-7C|Unknown
Manufacturer|VOID|VOID|-62
TX64|Hopkins, MN|2019-06-28 17:08:58|26-20-A5-7B-0F-61|Apple, Inc.|VOID|VOID|-80
TX64|Hopkins, MN|2019-06-28 17:08:59|EF-C8-3E-D3-65-04|Digi International Inc
(R)|VOID|VOID|-55
TX64|Hopkins, MN|2019-06-28 17:08:59|B6-21-0B-23-AE-FC|Apple, Inc.|VOID|VOID|-75
```

Bluetooth scanner output

The output from the Bluetooth scanner includes the following information:

Field	Description
Field 1	The name of the device, as configured for the system.
Field 2	The location of the device, as configured for the system.
Field 3	The date and time of the connection attempt.
Field 4	MAC address of the Bluetooth device that attempted the connection.
Field 5	The Bluetooth manufacturer ID.
Field 6	The device type.
Field 7	The device class.
Field 8	The Received Signal Strength Indicator (RSSI).

Enable the Wi-Fi scanner

The Wi-Fi scanner allows you to configure your device to detect Wi-Fi-enabled devices that are nearby, and then opens an SSH port that remote hosts can access to read basic information about those devices.

For users to view the output of the Wi-Fi scanner, they must be a member of an authentication group that has **Wi-Fi scanner access** enabled. See [Add an authentication group](#) for authentication group configuration information.

Required configuration

- Enable the Wi-Fi scanner.
- The wireless radio to use for scanning.

Additional configuration


- The SSH port used by the Wi-Fi scanner for reporting information to the remote host.
- The Wi-Fi channels to be scanned.
- The frequency with which the service hops from one channel to the next.
- The number of seconds that the service waits before updating its output.

- Whether to use the secondary Wi-Fi antenna in addition to the primary antenna.
- A remote host to view the output of the service.
- The SSH port used by the Wi-Fi scanner to stream output to a remote host.
- The access control list for the SSH port used by the Wi-Fi scanner to stream output to a remote host.


When the Wi-Fi scanner is enabled, the TX64 device will automatically configure its firewall rules to allow incoming connections on the configured listening port. You can restrict access by configuring the access control list for the Wi-Fi scanner's listening port.

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

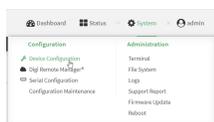

The **Configuration** window is displayed.

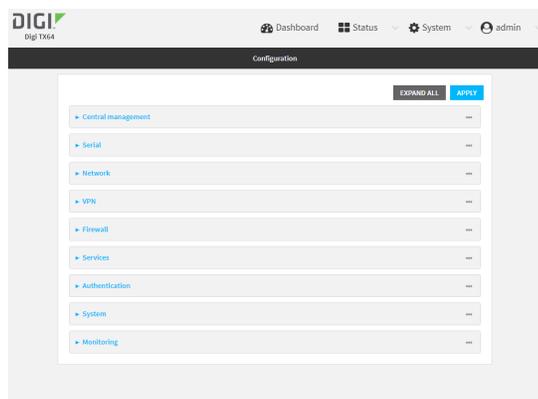


3. Click **Monitoring > Wi-Fi scanner**.

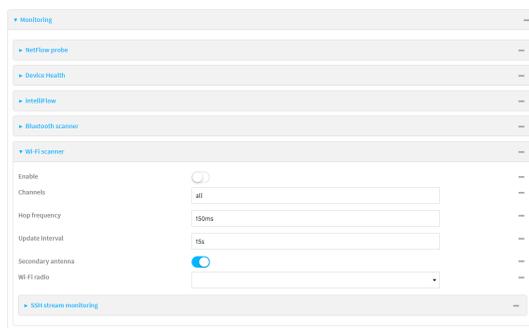

4. Click **Enable**.
5. (Optional) For **Channels**, type the Wi-Fi channels that will be scanned by this instance of the service.

Allowed value is a comma-separated list of channel numbers, or **all** to scan all channels. The default is **all**.

6. (Optional) For **Hop frequency**, type the frequency, in milliseconds, that the Wi-Fi scanner will hop from one channel to the next during scanning.
Allowed values are any number of seconds or milliseconds, and take the format **number{s|ms}**. For example, to set **Hop frequency** to one second, enter **1s** or **1000ms**.
The default is **150ms**, and the maximum is **10000ms (10s)**.
7. (Optional) For **Update interval**, type the number of seconds between scans.
Allowed values are any number of hours, minutes, or seconds, and take the format **number {h|m|s}**.
For example, to set **Update interval** to ten minutes, enter **10m** or **600s**.
The default is **15** seconds.
8. (Optional) Click **Secondary antenna** to disable the use of the secondary Wi-Fi antenna.
9. For **Wi-Fi Radio**, select the appropriate Wi-Fi radio.
10. Configure the device to open an SSH port that remote hosts can access:
 - a. Click to expand **SSH stream monitoring**.

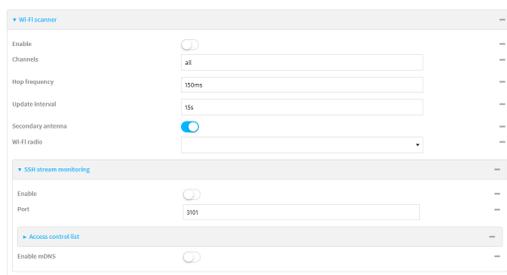

- b. Click **Enable**.
- c. (Optional) For **Port**, type the port that the Wifi scanner will use. The default is **3102**.
- d. Click **Access control list** to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - i. Click **IPv4 Addresses**.
 - ii. For **Add Address**, click **+**.
 - iii. For **Address**, enter the IPv4 address or network that can access the device's SSH service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - **any**: No limit to IPv4 addresses that can access the SSH service.
 - iv. Click **+** again to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - i. Click **IPv6 Addresses**.
 - ii. For **Add Address**, click **+**.
 - iii. For **Address**, enter the IPv6 address or network that can access the device's SSH service. Allowed values are:

- A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - **any**: No limit to IPv6 addresses that can access the SSH service.
- iv. Click **+** again to list additional IP addresses or networks.
- To limit access to hosts connected through a specified interface on the TX64 device:
 - i. Click **Interfaces**.
 - ii. For **Add Interface**, click **+**.
 - iii. For **Interface**, select the appropriate interface from the dropdown.
 - iv. Click **+** again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - i. Click **Zones**.
 - ii. For **Add Zone**, click **+**.
 - iii. For **Zone**, select the appropriate firewall zone from the dropdown.
See [Firewall configuration](#) for information about firewall zones.
 - iv. Click **+** again to allow access through additional firewall zones.
11. Confirm that users who will use the Wi-Fi scanner server are members of an authentication group that has **Wi-Fi scanner access** enabled. See [Add an authentication group](#) for authentication group configuration information.
 12. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable the Wi-Fi scanner:

```
(config> monitoring wifi_scanner enable true
(config)>
```

4. Set the appropriate Wi-Fi radio:

```
(config)> monitoring wifi_scanner radio value
(config)>
```

where *value* is either **wifi1** or **wifi2**.

5. (Optional) Set the Wi-Fi channels that will be scanned by this instance of the service:

```
(config)> monitoring wifi_scanner channels value
(config)>
```

where *value* is a comma-separated list of channel numbers, or **all** to scan all channels. The default is **all**.

6. (Optional) Set the frequency, in milliseconds, that the Wi-Fi scanner will hop from one channel to the next during scanning:

```
(config)> monitoring wifi_scanner hop_frequency value
```

The default is **150**.

7. (Optional) Set the number of seconds between scans.

```
(config)> monitoring wifi_scanner update_interval value
```

where *value* is any number of hours, minutes, or seconds, and takes the format **number{h|m|s}**. For example, to set **update_interval** to ten minutes, enter either **10m** or **600s**:

```
(config)> monitoring wifi_scanner update_interval 600s
(config)>
```

The default is **15** seconds.

8. (Optional) Disable the use of the secondary Wi-Fi antenna:

```
(config)> monitoring wifi_scanner enable false
```

9. Enable the device to open an SSH port that remote hosts can access:

```
(config)> monitoring wifi_scanner ssh enable true
(config)>
```

10. (Optional) Set the number of the port that the Wi-Fi scanner will use. The default is **3101**.

```
(config)> monitoring wifi_scanner ssh port port
(config)>
```

11. Configure access control:

- To limit access to specified IPv4 addresses and networks:

```
(config)> add wifi scanner ssh acl address end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- **any**: No limit to IPv4 addresses that can access the SSH service.

Repeat this step to list additional IP addresses or networks.

- To limit access to specified IPv6 addresses and networks:

```
(config)> add wifi scanner ssh acl address6 end value
(config)>
```

Where *value* can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- **any**: No limit to IPv6 addresses that can access the SSH service.

Repeat this step to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the TX64 device:

```
(config)> add wifi scanner ssh acl interface end value
(config)>
```

Where *value* is an interface defined on your device.

Display a list of available interfaces:

Use **... network interface ?** to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

defaultip	Default IP
defaultlinklocal	Default Link-local IP
lan1	LAN1
loopback	Loopback
wan1	WAN1
wwan1	WWAN1
wwan2	WWAN2

```
(config)>
```

Repeat this step to list additional interfaces.

- To limit access based on firewall zones:

```
(config)> add wifi scanner ssh acl zone end value
```

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type **... firewall zone ?** at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

```
Additional Configuration
```

```
-----
```

```
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

```
(config)>
```

Repeat this step to list additional firewall zones.

12. Confirm that users who will use the Wi-Fi scanner server are members of an authentication group that has **Wi-Fi scanner access** enabled. See [Add an authentication group](#) for authentication group configuration information.
13. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

14. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Display the output of the Wi-Fi scanner.

You can use one of the following methods to view the output of the Wi-Fi scanning service:

- From the **Status** page of the WebUI.
- From the **System Logs** page of the WebUI. You can also search the output, as well as download the output in text format, from the **System Logs** page.
- From the command line when logged into the TX64 device.
- From a remote host, by connecting to the TX64 device by using the scanning service's SSH port.

To view the output of the Wi-Fi scanning service, you must first enable the service. See [Enable the Wi-Fi scanner](#) for instructions. For users to view the output of the Wi-Fi scanner, they must be a member of an authentication group that has **Wi-Fi scanner access** enabled. See [Add an authentication group](#) for authentication group configuration information.



To view the output of the Wi-Fi scanning service from the **Status** page:

1. Log into the TX64 WebUI as a user with Admin access.
2. On the menu, select **Status > Wi-Fi**.

The **Wi-Fi scanner** page displays.

To view the output of the Wi-Fi scanning service from the **System Logs** page:

1. Log into the TX64 WebUI as a user with Admin access.
2. On the menu, select **System > Logs**.
3. Click to expand **Wi-Fi Scanner Logs**.
4. To search the output for a text string:
 - a. In the **Find** text box, type the search string.
 - b. Press **Enter**.
The displayed output will be filtered to only display those items in the search string.
 - c. To return to displaying the entire output log, delete the search string from the **Find** text box.
5. To download the output, click the download (📄) icon. The output will be downloaded to your local filesystem in text format.

See [Wi-Fi scanning service output](#) for information about the displayed fields.



Command line

To view output of the Wi-Fi scanner from the command line, the user must be a member of an authentication group that has **Wi-Fi scanner access** enabled. See [Add an authentication group](#) for details.

1. Log into the TX64 command line.
2. At the Access selection menu, type **Wi-Fi**.

The **Wi-Fi** option is only available if the Wi-Fi scanning service is enabled. See [Enable the Wi-Fi scanner](#) for instructions.

See [Wi-Fi scanning service output](#) for information about the displayed fields.

View the Wi-Fi scanning service output from a remote host

Use SSH from a remote host to connect to the device by using the configure Wi-Fi scanning service port. For example, to view the output of the scanner by using the default Wi-Fi scanning service port of **3101**:

```
$ ssh user@device-ip -p 3101
Password:
```

After logging into your device, it will display the output from the Wi-Fi scanning service in your shell. For example:

```
TX64|Hopkins, MN|1561754337|D0-81-C0-D5-E3-B0|D0-81-C0-D5-E3-B0|48|<hidden-ssid>|
-1
TX64|Hopkins, MN|1561754369|27-96-16-79-C9-0C|27-96-16-79-C9-0C|48|TX64-000488-
1|-76
TX64|Hopkins, MN|1561754304|DA-3C-0E-CA-6F-78||48||-78
TX64|Hopkins, MN|1561754292|85-94-36-14-CF-34||48||-84
```

Wi-Fi scanning service output

The output from the Wi-Fi scanner includes the following information:

Field	Description
Field 1	The name of the device, as configured for the system.
Field 2	The location of the device, as configured for the system.
Field 3	The most recent time this device was seen by the scanner. Time is in seconds since January 1, 1970.
Field 4	The MAC address of the Wi-Fi access point or the Wi-Fi client.
Field 5	If the device is a Wi-Fi client, the MAC address of the access point to which the Wi-Fi client is connected.
Field 6	The channel being used by the access point or the client. If the device is a Wi-Fi access point that uses a hidden SSID, the channel will be listed as -1 .
Field 7	If the device is a Wi-Fi access point, the SSID of the access point.
Field 8	The Received Signal Strength Indicator (RSSI).

Central management with Digi Remote Manager

This chapter contains the following topics:

Digi Remote Manager support	673
Configure Digi Remote Manager	673
Collect device health data and set the sample interval	677
Log into Digi Remote Manager	679
Use Digi Remote Manager to view and manage your device	680
Add a device to Digi Remote Manager	681
View Digi Remote Manager connection status	681
Use the Digi Remote Manager mobile app	682
Configure multiple devices using profiles	683
Learn more	683

Digi Remote Manager support

Digi Remote Manager is a hosted remote configuration and management system that allows you to remotely manage a large number of devices. Remote Manager includes a web-based interface that you can use to perform device operations, such as viewing and changing device configurations and performing firmware updates. Remote Manager servers also provide a data storage facility.

To use Remote Manager, you must set up a Remote Manager account. To set up a Remote Manager account and learn more about Digi Remote Manager, go to www.digi.com/products/cloud/digi-remote-manager.

To learn more about Remote Manager features and functions, see the [Digi Remote Manager User Guide](#).

Configure Digi Remote Manager

By default, your TX64 device is configured to use central management using Digi Remote Manager.

Additional configuration options

These additional configuration settings are not typically configured, but you can set them as needed:

- Disable the Digi Remote Manager connection if it is not required. You can also configure an alternate cloud-based central management application.
- Change the reconnection timer.
- The non-cellular keepalive timeout.
- The cellular keepalive timeout.
- The keepalive count before the Remote Manager connection is dropped.
- SMS support.


To configure Digi Remote Manager:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

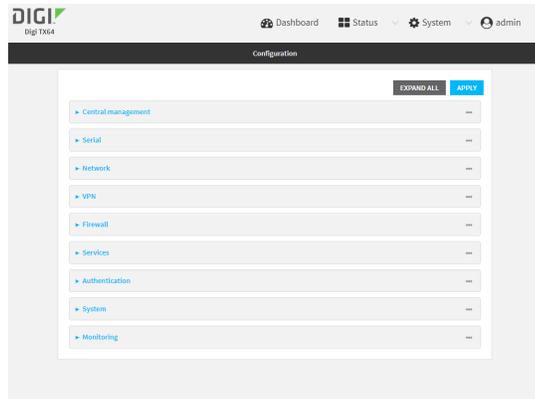

3. Click **Central management**.

The Central management configuration window is displayed.

Digi Remote Manager support is enabled by default. To disable, click **Enable central management**.

4. (Optional) For **Management server**, type the URL for the central management server. The default is the Digi Remote Manager server, my.devicecloud.com.
5. (Optional) For **Retry interval**, type the amount of time that the TX64 device should wait before reattempting to connect to the Digi Remote Manager server after being disconnected. The default is 30 seconds.

Allowed values are any number of hours, minutes, or seconds, and take the format **number {h|m|s}**.

For example, to set **Retry interval** to ten minutes, enter **10m** or **600s**.

6. (Optional) For **Keep-alive interval**, type the amount of time that the TX64 device should wait between sending keep-alive messages to the Digi Remote Manager when using a non-cellular interface. The default is 60 seconds.

Allowed values are any number of hours, minutes, or seconds, and take the format **number {h|m|s}**.

For example, to set **Keep-alive interval** to ten minutes, enter **10m** or **600s**.

7. (Optional) For **Cellular keep-alive interval**, type the amount of time that the TX64 device should wait between sending keep-alive messages to the Digi Remote Manager when using a cellular interface. The default is 290 seconds.

Allowed values are any number of hours, minutes, or seconds, and take the format **number {h|m|s}**.

For example, to set **Cellular keep-alive interval** to ten minutes, enter **10m** or **600s**.

8. (Optional) For **Allowed keep-alive misses**, type the number of allowed keep-alive misses. The default is **3**.
9. (Optional) Configure the TX64 device to communicate with Digi Remote Manager by using SMS:
- Click to expand **Short message service**.
 - Enable** SMS messaging.
 - For **Destination phone number**, type the phone number for Digi Remote Manager.
 - (Optional) Type the **Service identifier**.
10. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Digi Remote Manager support is enabled by default. To disable Digi Remote Manager support:

```
(config)> cloud enable false
(Config)>
```

4. (Optional) Set the URL for the central management server. The default is the Digi Remote Manager server, my.devicecloud.com.

```
(config)> cloud drm drm_url url
(config)>
```

5. (Optional) Set the amount of time that the TX64 device should wait before reattempting to connect to the Digi Remote Manager server after being disconnected. The minimum value is ten seconds. The default is 30 seconds.

```
(config)> cloud drm retry_interval value
```

where *value* is any number of hours, minutes, or seconds, and takes the format **number{h|m|s}**.
For example, to set **the retry interval** to ten minutes, enter either **10m** or **600s**:

```
(config)> cloud drm retry_interval 600s
(config)>
```

6. (Optional) Set the amount of time that the TX64 device should wait between sending keep-alive messages to the Digi Remote Manager when using a non-cellular interface. Allowed values are from 30 seconds to two hours. The default is 60 seconds.

```
(config)> cloud drm keep_alive value
(config)>
```

where *value* is any number of hours, minutes, or seconds, and takes the format **number{h|m|s}**.
For example, to set **the keep-alive interval** to ten minutes, enter either **10m** or **600s**:

```
(config)> cloud drm keep_alive 600s
(config)>
```

7. (Optional) Set the amount of time that the TX64 device should wait between sending keep-alive messages to the Digi Remote Manager when using a cellular interface. Allowed values are from 30 seconds to two hours. The default is 290 seconds.

```
(config)> cloud drm cellular_keep_alive value
(config)>
```

where *value* is any number of hours, minutes, or seconds, and takes the format **number{h|m|s}**. For example, to set **the cellular keep-alive interval** to ten minutes, enter either **10m** or **600s**:

```
(config)> cloud drm cellular_keep_alive 600s
(config)>
```

8. Set the number of allowed keep-alive misses. Allowed values are any integer between **2** and **64**. The default is **3**.

```
(config)> cloud drm keep_alive_misses integer
(config)>
```

9. (Optional) Configure the TX64 device to communicate with Digi Remote Manager by using SMS:
 - a. **Enable** SMS messaging:

```
(config)> cloud drm sms enable true
(config)>
```

- b. Set the phone number for Digi Remote Manager:

```
(config)> cloud drm sms destination drm_phone_number
(config)>
```

- c. (Optional) Set the service identifier:

```
(config)> cloud drm sms service_id id
(config)>
```

10. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

11. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Collect device health data and set the sample interval

You can enable or disable the collection of device health data to upload to Digi Remote Manager, and configure the interval between health sample uploads. By default, device health data upload is enabled, and the health sample interval is set to 60 minutes.


To disable the collection of device health data or enable it if it has been disabled, or to change the health sample interval:



1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

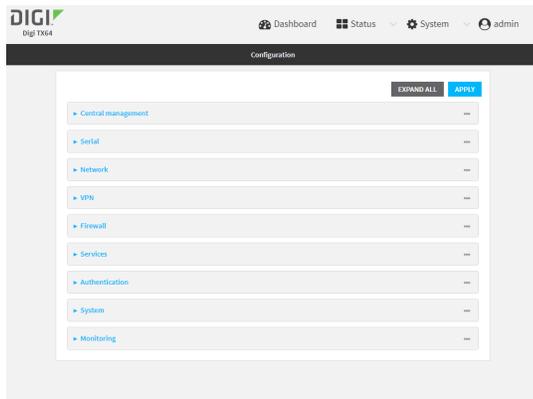

3. Click **Monitoring > Device Health**.



Device health data upload is enabled by default. To disable, click to toggle off **Enable Device Health samples upload**.

4. For **Health sample interval**, select the interval between health sample uploads.
5. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Device health data upload is enabled by default. To enable or disable:

- To enable:

```
(config)> monitoring devicehealth enable true
(config)>
```

- To disable:

```
(config)> monitoring devicehealth enable false
(config)>
```

4. The interval between health sample uploads is set to 60 minutes by default. To change:

```
(config)> monitoring devicehealth interval value
```

where *value* is one of **1**, **5**, **15**, **30**, or **60**, and represents the number of minutes between uploads of health sample data.

5. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Log into Digi Remote Manager


To start Digi Remote Manager

1. If you have not already done so, click [here](#) to sign up for a Digi Remote Manager account.
2. Check your email for Digi Remote Manager login instructions.
3. Go to remotemanager.digi.com.
4. Log into your Digi Remote Manager account.


Use Digi Remote Manager to view and manage your device

To view and manage your device:

1. If you have not already done so, connect to your Digi Remote Manager account.
2. Click **Device Management** to display a list of your devices.
3. Use the Search bar to locate the device you want to manage.

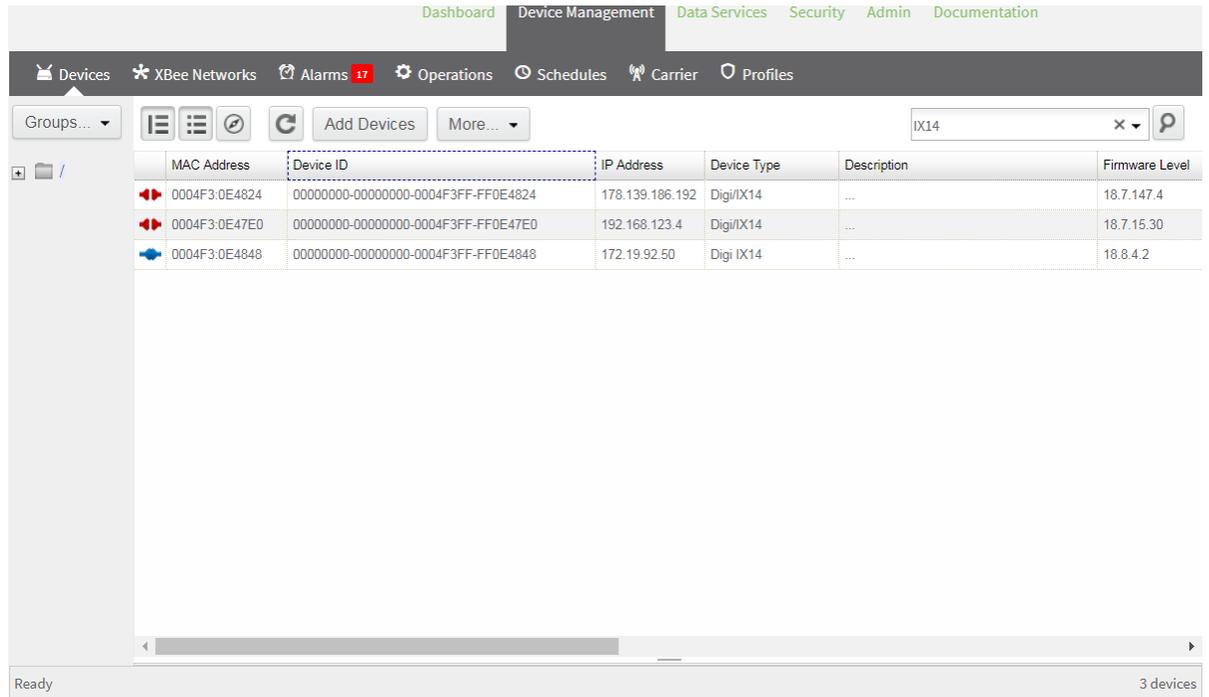

4. Select the device and click **Properties** to view general information for the device.
5. Click the **More** menu to perform a task.

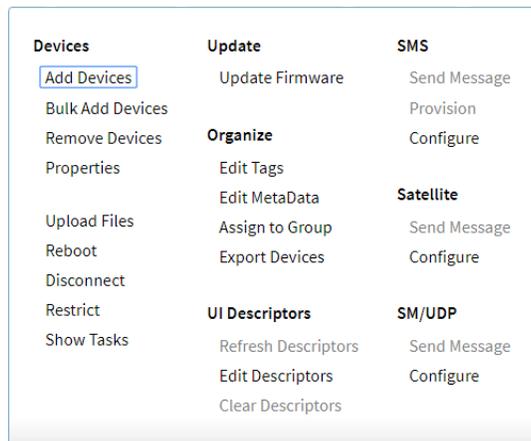

Add a device to Digi Remote Manager

1. If you have not already done so, connect to your Digi Remote Manager account.
2. Click **Device Management** to display a list of your devices.
3. Click **Add Devices**.
4. Select **MAC Address** and enter the Ethernet MAC address for your device.
5. For **Install Code**, enter the default password on the printed label packaged with your device. The same default password is also shown on the label affixed to the bottom of the device.
6. Click **Add**.
7. Click **OK**.


Digi Remote Manager adds your TX64 device to your account and it appears in the **Device Management** view.

View Digi Remote Manager connection status

To view the current Digi Remote Manager configuration:

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. The dashboard includes a Digi Remote Manager status pane:

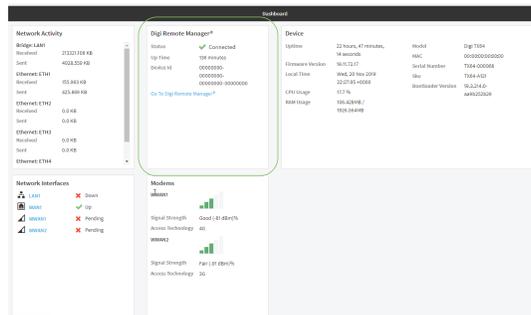

Command line

1. Log into the TX64 command line as a user with full Admin access rights. Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. View the central management configuration:

```
(config)> show cloud
drm
    cellular_keep_alive 290s
    drm_url my.devicecloud.com
    keep_alive 60s
    keep_alive_misses 3
    retry_interval 30s
enable true
(config)>
```

1. Type **cancel** to exit configuration mode:

```
(config)> cancel
>
```

2. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

To view the status of your device's connection to Remote Manager, use the [show cloud](#) command at the command line:

Command line

```
> show cloud

Device Cloud Status
-----

Status      : Connected
Server      : my.devicecloud.com
Device ID   : 00000000-00000000-0040FFFF-FF0F4594
>
```

The **Device ID** is the unique identifier for the device, as used by the Remote Manager.

Use the Digi Remote Manager mobile app

If you have a smart phone or tablet, you can use the Digi Remote Manager mobile app to automatically provision a new devices and monitor devices in your account.

To download the mobile app:

- For iPhone, go to the [App Store](#)
- For Android phones, go to [Google Play](#)

To sign up for a new Digi Remote Manager account using the mobile app:

1. From the menu, click **Log in or Sign Up**.
2. Click **Sign up** to create a new account.

3. You'll receive an email with login instructions.
4. From the **Digi Remote Manager** mobile app, click **Log in** and log into your new account.

To register a new device:

1. From the menu, select **Install a device with a QR or bar code** and scan the installation QR code on the label.
2. Follow the prompts to complete your TX64 registration.

Digi Remote Manager registers your TX64 and adds it to your Digi Remote Manager device list. You can now manage the device remotely using Digi Remote Manager.

Configure multiple devices using profiles

Digi recommends you take advantage of Digi Remote Manager profiles to manage multiple TX64 routers. Typically, if you want to provision multiple TX64 routers:

1. Using the TX64 local WebUI, configure one TX64 router to use as the model configuration for all subsequent TX64s you need to manage.
2. Register the configured TX64 device in your Digi Remote Manager account.
3. In Digi Remote Manager, create a profile based on the configured TX64.
4. Apply the profile to the TX64 devices you need to configure.

Digi Remote Manager provides multiple methods for applying profiles to registered devices. You can also include site-specific settings with a profile to override settings on a device-by-device basis.

Learn more

- For information on using Digi Remote Manager to configure and manage TX64 routers, see the [Digi Remote Manager User Guide](#).
- For information on using Digi Remote Manager APIs to develop custom applications, see the [Digi Remote Manager Programmer Guide](#).

File system

This chapter contains the following topics:

The TX64 local file system	685
Display directory contents	685
Create a directory	686
Display file contents	687
Copy a file or directory	687
Move or rename a file or directory	688
Delete a file or directory	689
Upload and download files	690

The TX64 local file system

The TX64 local file system has approximately 4.5 GB of space available for storing files, such as Python programs, alternative configuration files and firmware versions, and release files, such as cellular module images. The writable directories within the filesystem are:

- /tmp
- /opt
- /etc/config


Files stored in the /tmp directory do not persist across reboots. Therefore, /tmp is a good location to upload temporary files, such as files used for firmware updates. Files stored in /opt and /etc/config do persist across reboots, but are deleted if a factory reset of the system is performed. See [Reset the device to factory defaults](#) for more information.

Display directory contents


To display directory contents by using the WebUI or the Admin CLI:

≡ WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the menu, click **System**. Under **Administration**, click **File System**.

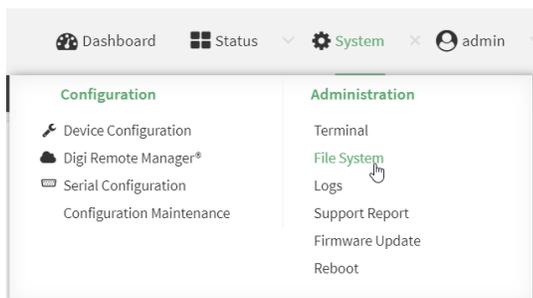

The **File System** page appears.

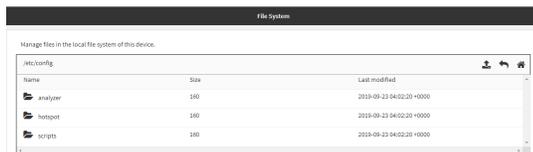

3. Highlight a directory and click to open the directory and view the files in the directory.

⌨ Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the Admin CLI prompt, type **ls /path/dir_name**. For example, to display the contents of the **/etc/config** directory:

```
> ls /etc/config
-rw-r--r--    1 root    root           856 Nov 20 20:12 accns.json
drw-----    2 root    root           160 Sep 23 04:02 analyzer
drwxr-xr-x    3 root    root           224 Sep 23 04:02 cc_acl
-rw-r--r--    1 root    root            47 Sep 23 04:02 dhcp.leases
...
>
```

3. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Create a directory

Command line

This procedure is not available through the WebUI. To make a new directory, use the **mkdir** command, specifying the name of the directory.

For example:

1. Log into the TX64 command line as a user with Admin access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type **mkdir /path/dir_name**. For example, to create a directory named **temp** in **/etc/config**:

```
> mkdir /etc/config/temp
>
```

3. Verify that the directory was created:

```
> ls /etc/config
...
-rw-r--r--    1 root    root           1436 Aug 12 21:36 ssl.crt
-rw-----    1 root    root           3895 Aug 12 21:36 ssl.pem
-rw-r--r--    1 root    root             10 Aug  5 06:41 start
drwxr-xr-x    2 root    root            160 Aug 25 17:49 temp
>
```

4. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Display file contents

This procedure is not available through the WebUI. To display the contents of a file by using the Admin CLI, use the [more](#) command, specifying the name of the directory.

For example:

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the Admin CLI prompt, type **more /path/filename**. For example, to view the content of the file **accns.json** in **/etc/config**:

```
> more /etc/config/accns.json
{
  "auth":
    "user": {
      "admin": {
        "password":
"$2a$05$W1s1s1oxsadf/n4J0XT.Rgr6ewr1yerHtXQdbafsatGswKg0YUm"
      }
    },
  "schema": {
    "version": "461"
  }
}
>
```

3. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Copy a file or directory

This procedure is not available through the WebUI. To copy a file or directory by using the Admin CLI, use the [cp](#) command, specifying the existing path and filename followed by the path and filename of the new file, or specifying the existing path and directory name followed by the path and directory name of the new directory.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the Admin CLI prompt, type **cp /path/filename|dir_name /path[f filename]|dir_name**. For example:

- To copy the file **/etc/config/accns.json** to a file named **backup_cfg.json** in a directory named **/etc/config/test**, enter the following:

```
> cp /etc/config/accns.json /etc/config/test/backup_cfg.json
>
```

- To copy a directory named **/etc/config/test** to **/opt**:

```
> cp /etc/config/test/ /opt/
>
```

3. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Move or rename a file or directory

This procedure is not available through the WebUI. To move or rename a file or directory by using the Admin CLI, use the **mv** command.

Command line

To rename a file named **test.py** in **/etc/config/scripts** to **final.py**:

1. Log into the TX64 command line as a user with Admin access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type:

```
> mv /etc/config/scripts/test.py /etc/config/scripts/final.py
>
```

3. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

To move **test.py** from **/etc/config/scripts** to **/opt**:

1. Log into the TX64 command line as a user with Admin access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type:

```
> mv /etc/config/scripts/test.py /opt/
>
```

3. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a file or directory


To delete a file or directory by using the WebUI or the Admin CLI:

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the menu, click **System**. Under **Administration**, click **File System**.



The **File System** page appears.

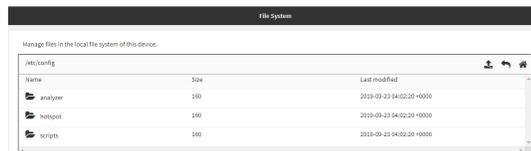

3. Highlight the directory containing the file to be deleted and click to open the directory.
4. Highlight the file to be deleted and click .
5. Click **OK** to confirm.

Command line

To delete a file named **test.py** in **/etc/config/scripts**:

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the Admin CLI prompt, type:

```
> rm /etc/config/scripts/test.py
rm: remove '/etc/config/scripts/test.py'? yes
>
```

3. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

To delete a directory named **temp** from **/opt**:

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

- At the Admin CLI prompt, type:

```
> rm /opt/temp/
rm: descend into directory '/opt/temp'? yes
rm: remove directory '/opt/temp'? yes
>
```

- Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.


Upload and download files

You can download and upload files by using the WebUI or from the command line by using the [scp](#) Secure Copy command, or by using a utility such as SSH File Transfer Protocol (SFTP) or an SFTP application like FileZilla.


Upload and download files by using the WebUI

Upload files

- Log into the TX64 WebUI as a user with Admin access.
- On the menu, click **System**. Under **Administration**, click **File System**.

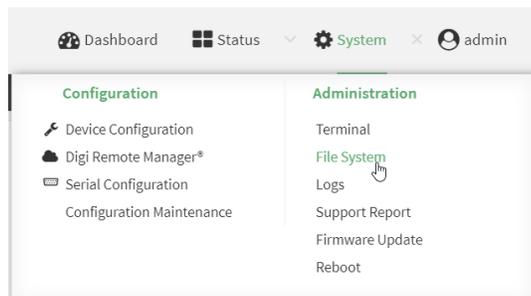


The **File System** page appears.

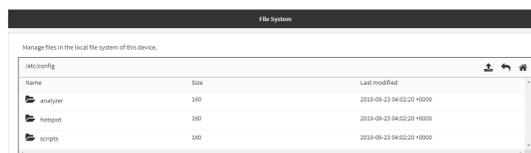

- Highlight the directory to which the file will be uploaded and click to open the directory.
- Click (upload).
- Browse to the location of the file on your local machine. Select the file and click **Open** to upload the file.

Download files

1. Log into the TX64 WebUI as a user with Admin access.
2. On the menu, click **System**. Under **Administration**, click **File System**.

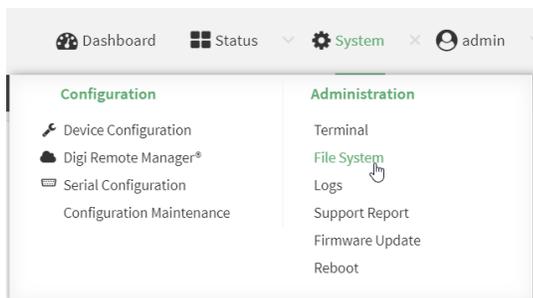

The **File System** page appears.



3. Highlight the directory to which the file will be uploaded and click to open the directory.
4. Highlight the appropriate file and click (download).

Upload and download files by using the Secure Copy command

Copy a file from a remote host to the TX64 device

To copy a file from a remote host to the TX64 device, use the `scp` command as follows:

```
> scp host hostname-or-ip user username remote remote-path local local-path to local
```

where:

- *hostname-or-ip* is the hostname or ip address of the remote host.
- *username* is the name of the user on the remote host.
- *remote-path* is the path and filename of the file on the remote host that will be copied to the TX64 device.
- *local-path* is the location on the TX64 device where the copied file will be placed.

For example:

To copy firmware from a remote host with an IP address of 192.168.4.1 to the `/etc/config` directory on the TX64 device, issue the following command:

```
> scp host 192.168.4.1 user admin remote /home/admin/bin/TX64-19.11.72.53.bin
local /etc/config/ to local
admin@192.168.4.1's password: adminpwd
TX64-19.11.72.53.bin          100%   36MB   11.1MB/s   00:03
>
```

Transfer a file from the TX64 device to a remote host

To copy a file from the TX64 device to a remote host, use the `scp` command as follows:

```
> scp host hostname-or-ip user username remote remote-path local local-path to
remote
```

where:

- *hostname-or-ip* is the hostname or ip address of the remote host.
- *username* is the name of the user on the remote host.
- *remote-path* is the location on the remote host where the file will be copied.
- *local-path* is the path and filename on the TX64 device.

For example:

To copy a support report from the TX64 device to a remote host at the IP address of 192.168.4.1:

1. Use the **system support-report** command to generate the report:

```
> system support-report /etc/config/
Saving support report to /etc/config/support-report-0040D0133536-19-11-30-
13.22.15.bin
Support report saved.
>
```

2. Use the **scp** command to transfer the report to a remote host:

```
> scp host 192.168.4.1 user admin remote /home/admin/temp/ local
/etc/config/support-report-00:40:D0:13:35:36-19-11-30-13.22.15.bin to
remote
admin@192.168.4.1's password: adminpwd
support-report-0040D0133536-19-11-30-13.22.15.bin
>
```

Upload and download files using SFTP

Transfer a file from a remote host to the TX64 device

This example uploads firmware from a remote host to the TX64 device with an IP address of **192.168.2.1**, using the username **ahmed**:

```
$ sftp ahmed@192.168.2.1
Password:
Connected to 192.168.2.1
sftp> put TX64-19.11.72.53
Uploading TX64-19.11.72.53 to TX64-19.11.72.53
TX64-19.11.72.53
 100% 24M 830.4KB/s 00:00
sftp> exit
$
```

Transfer a file from the TX64 device to a remote host

This example downloads a file named **test.py** from the TX64 device at the IP address of **192.168.2.1** with a username of **ahmed** to the local directory on the remote host:

```
$ sftp ahmed@192.168.2.1
Password:
Connected to 192.168.2.1
sftp> get test.py
Fetching test.py to test.py
test.py
 100% 254   0.3KB/s   00:00
sftp> exit
$
```

Diagnostics

This chapter contains the following topics:


Generate a support report	695
View system event logs	696
Configure syslog servers	701
Configure options for the event and system logs	703
Analyze network traffic	708
Use the ping command to troubleshoot network connections	721
Use the traceroute command to diagnose IP routing problems	721

Generate a support report

To generate and download a support report:

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the main menu, click **System**. Under **Administration**, click **Support Report**.

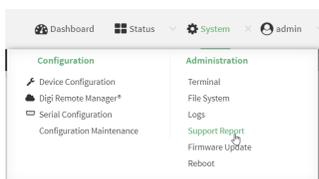

3. Click  to generate and download the support report.



Attach the support report to any support requests.

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Use the **system support-report** command to generate the report:

```
> system support-report /etc/config/
Saving support report to /etc/config/support-report-0040D0133536-19-11-30-
13.22.15.bin
Support report saved.
>
```

3. Use the **scp** command to transfer the report to a remote host:

```
> scp host 192.168.4.1 user admin remote /home/admin/temp/ local
/etc/config/support-report-00:40:D0:13:35:36-19-11-30-13.22.15.bin to
remote
admin@192.168.4.1's password: adminpwd
support-report-0040D0133536-19-11-30-13.22.15.bin
>
```

4. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.


View system event logs

See [Configure options for the event and system logs](#) for information about configuring the information displayed in event and system logs.


View System Logs



1. Log into the TX64 WebUI as a user with Admin access.
2. On the main menu, click **System > Logs**.

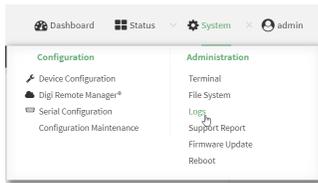


The system log displays:

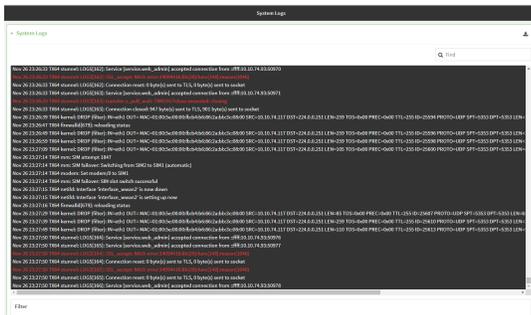

3. Limit the display in the system log by using the **Find** search tool.



4. Use filters to configure the types of information displayed in the system logs.

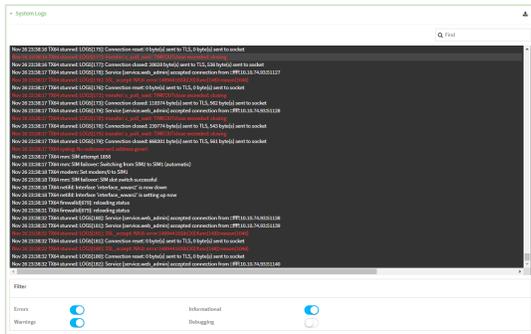

5. Click  to download the system log.



Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use **show log** at the Admin CLI prompt:

```
> show log

Timestamp      Message
-----
--
Nov 26 21:54:34 TX64 netifd: Interface 'interface_wan' is setting up now
Nov 26 21:54:35 TX64 firewalld[621]: reloading status
...
>
```

3. (Optional) Use the **show log number num** command to limit the number of lines that are displayed. For example, to limit the log to the most recent ten lines:

```
> show log number 10

Timestamp      Message
-----
--
Nov 26 21:54:34 TX64 netifd: Interface 'interface_wan' is setting up now
Nov 26 21:54:35 TX64 firewalld[621]: reloading status
...
>
```

4. (Optional) Use the **show log filter value** command to limit the number of lines that are displayed. Allowed values are **critical**, **warning**, **info**, and **debug**. For example, to limit the event list to only info messages:

```
> show log filter info


Timestamp      Type      Category  Message
-----
---
Nov 26 22:01:26 info     user
name=admin~service=cli~state=opened~remote=192.168.1.2
Nov 26 22:01:25 info     user
name=admin~service=cli~state=closed~remote=192.168.1.2
...
>
```

5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.


View Event Logs

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the main menu, click **System > Logs**.

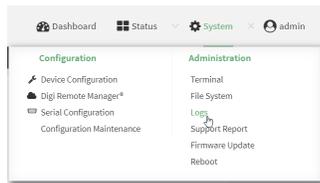

3. Click **System Logs** to collapse the system logs viewer, or scroll down to **Events**.
4. Click **Events** to expand the event viewer.

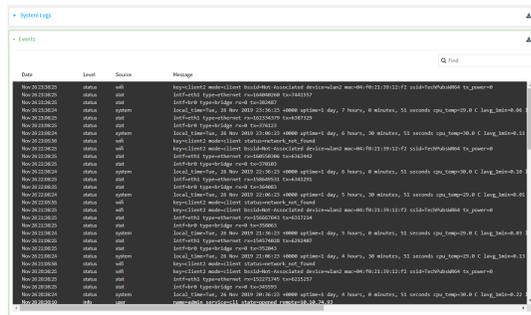

5. Limit the display in the event log by using the **Find** search tool.



6. Click  to download the event log.



Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Use `show event` at the Admin CLI prompt:

```
> show event
```

```

Timestamp      Type      Category  Message
-----
Nov 26 21:42:37 status  stat
intf=eth1~type=ethernet~rx=11332435~tx=5038762
Nov 26 21:42:35 status  system   local_time=Thu, 08 Aug 2019 21:42:35
+0000~uptime=3 hours, 0 minutes, 48 seconds
...
>

```

3. (Optional) Use the **show event number num** command to limit the number of lines that are displayed. For example, to limit the event list to the most recent ten lines:

```

> show event number 10

Timestamp      Type      Category  Message
-----
Nov 26 21:42:37 status  stat
intf=eth1~type=ethernet~rx=11332435~tx=5038762
Nov 26 21:42:35 status  system   local_time=Thu, 08 Aug 2019 21:42:35
+0000~uptime=3 hours, 0 minutes, 48 seconds
...
>

```

4. (Optional) Use the **show event table value** command to limit the number of lines that are displayed. Allowed values are **error**, **info**, and **status**. For example, to limit the event list to only info messages:

```

> show event table info

Timestamp      Type      Category  Message
-----
Nov 26 22:01:26 info     user
name=admin~service=cli~state=opened~remote=192.168.1.2
Nov 26 22:01:25 info     user
name=admin~service=cli~state=closed~remote=192.168.1.2
...
>

```

5. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure syslog servers


You can configure remote syslog servers for storing event and system logs.

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

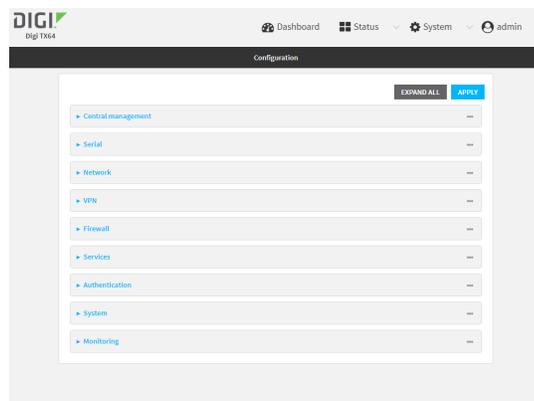

3. Click **System > Log**.



4. Add and configure a remote syslog server:
 - a. Click to expand **Server list**.
 - b. For **Add Server**, click **+**.



The log server configuration window is displayed.



Log servers are enabled by default. To disable, click to toggle off **Enable**.

- c. Type the host name or IP address of the **Server**.
 - d. Select the event categories that will be sent to the server.
5. Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. (Optional) To configure remote syslog servers:

- a. Add a remote server:

```
(config)> add system log remote end
(config system log remote 1)>
```

- b. Enable the server:

```
(config system log remote 1)> enable true
(config system log remote 1)>
```

- c. Set the host name or IP address of the server:

```
(config system log remote 1)> server hostname
(config system log remote 1)>
```

- d. The event categories that will be sent to the server are automatically enabled when the server is enabled. To disable:

- To disable informational event messages:

```
(config system log remote 1)> info false
(config system log remote 1)>
```

- To disable status event messages:

```
(config system log remote 1)> status false
(config system log remote 1)>
```

- To disable informational event messages:

```
(config system log remote 1)> error false
(config system log remote 1)>
```

4. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure options for the event and system logs

The default configuration for event and system logging is:

- The heartbeat interval, which determines the amount of time to wait before sending a heartbeat event if no other events have been sent, is set to 30 minutes.
- All event categories are enabled.


To change or disable the heartbeat interval, or to disable event categories, and to perform other log configuration:

WebUI


1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

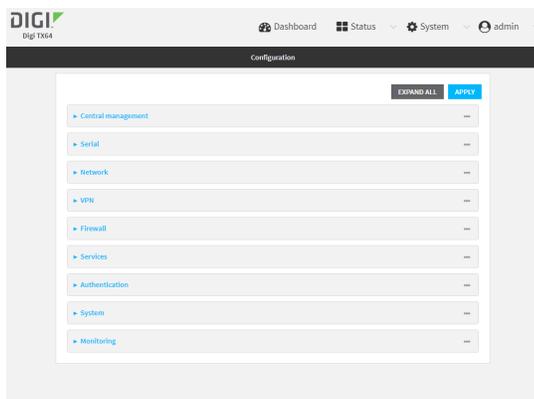

3. Click **System > Log**.

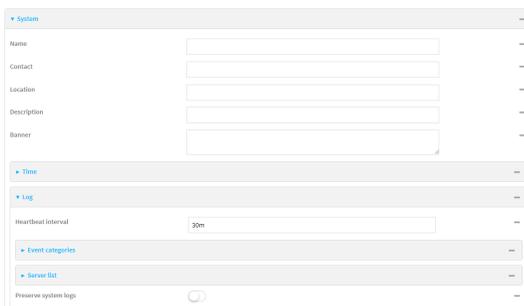

4. (Optional) To change the **Heartbeat interval** from the default of 30 minutes, type a new value. The heartbeat interval determines the amount of time to wait before sending a heartbeat event if no other events have been sent. Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**. For example, to set **Heartbeat interval** to ten minutes, enter **10m** or **600s**. To disable the **Heartbeat interval**, enter **0s**.
5. (Optional) To disable event categories, or to enable them if they have been disabled:
- Click to expand **Event Categories**.
 - Click an event category to expand.
 - Depending on the event category, you can enable or disable informational events, status events, and error events. Some categories also allow you to set the **Status interval**, which is the time interval between periodic status events.
6. (Optional) See [Configure syslog servers](#) for information about configuring remote syslog servers to which log messages will be sent.
7. Enable **Preserve system logs** to save the current session's system log after a reboot. By default, the TX64 device erases system logs each time the device is powered off or rebooted.

Note You should only enable **Preserve system logs** temporarily to debug issues. Once you are finished debugging, immediately disable **Preserve system logs** to avoid unnecessary wear to the flash memory.

- Click **Apply** to save the configuration and apply the change.

The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- (Optional) To change the heartbeat interval from the default of 30 minutes, set a new value. The heartbeat interval determines the amount of time to wait before sending a heartbeat event if no other events have been sent.

```
(config)> system log heartbeat_interval value
(config)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **the heartbeat interval** to ten minutes, enter either **10m** or **600s**:

```
(config)> system log heartbeat_interval 600s
(config)>
```

To disable the heartbeat interval, set the value to **0s**

- Enable preserve system logs functionality to save the current session's system log after a reboot. By default, the TX64 device erases system logs each time the device is powered off or rebooted.

Note You should only enable **Preserve system logs** temporarily to debug issues. Once you are finished debugging, immediately disable **Preserve system logs** to avoid unnecessary wear to the flash memory.

```
(config)> system log persistent true
(config)>
```

5. (Optional) To disable event categories, or to enable them if they have been disabled:
 - a. Use the question mark (?) to determine available event categories:

```
(config)> system log event ?

Event categories: Settings to enable individual event categories.

Additional Configuration
-----
-----
arping                ARP ping
config                Configuration
dhcpserver            DHCP server
firmware              Firmware
location              Location
modem                 Modem
netmon                Active recovery
network               Network interfaces
openvpn               OpenVPN
portal                Captive portal
remote                Remote control
restart               Restart
serial                Serial
sms                   SMS commands
speed                 Speed
stat                  Network statistics
user                  User
wireless              WiFi
wol                   Wake-On-LAN

(config)> system log event
```

- b. Depending on the event category, you can enable or disable informational events, status events, and error events. Some categories also allow you to set the status interval, which is the time interval between periodic status events. For example, to configure DHCP server logging:
 - i. Use the question mark (?) to determine what events are available for DHCP server logging configuration:

```
(config)> system log event dhcpserver ?
...
DHCP server: Settings for DHCP server events. Informational events
are generated
when a lease is obtained or released. Status events report the
current list of
leases.

Parameters                Current Value
-----
-----
```

info	true	Enable informational events
status	true	Enable status events
status_interval	30m	Status interval

```
(config)> system log event dhcpserver
```

- ii. To disable informational messages for the DHCP server:

```
(config)> system log event dhcpserver info false  
(config)>
```

- iii. To change the status interval:

```
(config)> system log event dhcpserver status_interval value  
(config)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **the status interval** to ten minutes, enter either **10m** or **600s**:

```
(config)> system log event dhcpserver status_interval 600s  
(config)>
```

6. (Optional) See [Configure syslog servers](#) for information about configuring remote syslog servers to which log messages will be sent.
7. Save the configuration and apply the change:

```
(config)> save  
Configuration saved.  
>
```

8. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Analyze network traffic

The TX64 device includes a network analyzer tool that captures data traffic on any interface and decodes the captured data traffic for diagnostics. You can capture data traffic on multiple interfaces at the same time and define capture filters to reduce the captured data. You can capture up to 10 MB of data traffic in two 5 MB files per interface.

To perform a more detailed analysis, you can download the captured data traffic from the device and view it using a third-party application.

Note Data traffic is captured to RAM and the captured data is lost when the device reboots unless you save the data to a file. See [Save captured data traffic to a file](#).

This section contains the following topics:

Configure packet capture for the network analyzer	709
Example filters for capturing data traffic	713
Capture packets from the command line	714
Stop capturing packets	715
Show captured traffic data	716
Save captured data traffic to a file	717
Download captured data to your PC	718
Clear captured data	719

Configure packet capture for the network analyzer

To use the network analyzer, you must create one or more packet capture configuration.

Required configuration items

- The interface used by this packet capture configuration.


Additional configuration items

- The filter expression for this packet capture configuration.
- Schedule the analyzer to run based on a specified event or at a particular time:
 - The events or time that will trigger the analyzer to run, using this capture configuration.
 - The amount of time that the analyzer session will run.
 - The frequency with which captured events will be saved.


To configure a packet capture configuration:

WebUI

1. Log into the TX64 WebUI as a user with full Admin access rights.
2. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.

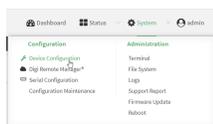


The **Configuration** window is displayed.

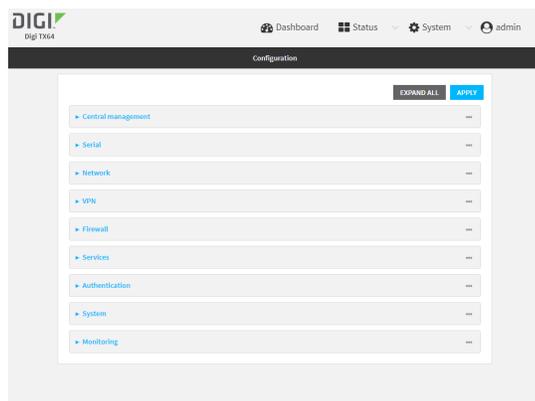


3. Click **Network > Analyzer**.

4. For **Add Capture settings**, type a name for the capture filter and click **+**.

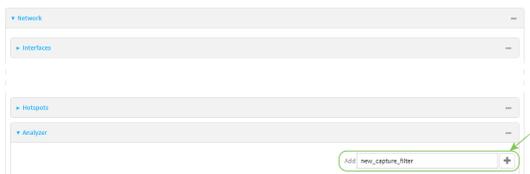

The new capture filter configuration is displayed.

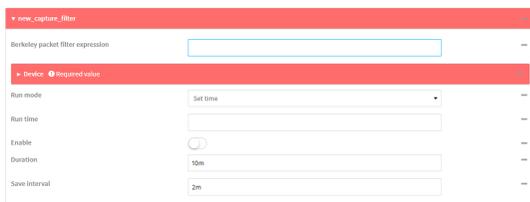

5. Add one or more interface to the capture filter:
 - a. Click to expand **Device**.
 - b. Click **+** to add an interface to the capture setting instance.



- c. For **Interface**, select an interface.
 - d. Repeat to add additional interfaces to the capture filter.
6. (Optional) For **Berkeley packet filter expression**, type a filter using Berkeley Packet Filter (BPF) syntax. See [Example filters for capturing data traffic](#) for examples of filters using BPF syntax.
7. (Optional) Schedule the analyzer to run, using this capture filter, based on a specified event or at a particular time:
 - a. For **Run mode**, select the mode that will be used to run the capture filter. Available options are:
 - **On boot**: The capture filter will run once each time the device boots.
 - **Interval**: The capture filter will start running at the specified interval, within 30 seconds after the configuration change is saved.
 - If **Interval** is selected, in **Interval**, type the interval.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Interval** to ten minutes, enter **10m** or **600s**.
 - **Set time**: Runs the capture filter at a specified time of the day.
 - If **Set Time** is selected, specify the time that the capture filter should run in **Run time**, using the format **HH:MM**.
 - **During system maintenance**: The capture filter will run during the system maintenance time window.
 - b. **Enable** the capture filter schedule.

- c. For **Duration**, type the amount of time that the scheduled analyzer session will run.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Duration** to ten minutes, enter **10m** or **600s**.
 - d. For **Save interval**, type the frequency with which captured events will be saved.
Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number{w|d|h|m|s}**.
For example, to set **Save interval** to ten minutes, enter **10m** or **600s**.
8. Click **Apply** to save the configuration and apply the change.
The **Apply** button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.



Command line

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a new capture filter:

```
(config)> add network analyzer name
(config network analyzer name)>
```

4. Add an interface to the capture filter:

```
(config network analyzer name)> add interfaces end device
(config network analyzer name)>
```

Determine available devices and the proper syntax.

To determine available devices and proper syntax, use the space bar autocomplete feature:

```
(config network analyzer name)> add interface end /network/device/<space>
/network/device/eth1    /network/device/eth2    /network/device/eth3
/network/device/eth4    /network/device/loopback
(config network analyzer name)> add interface end /network/device/
```

Repeat to add additional interfaces.

5. (Optional) Set a filter for the capture filter:

```
(config network analyzer name)> filter value
(config network analyzer name)>
```

where *value* is a filter using Berkeley Packet Filter (BPF) syntax. Values that contain spaces must be enclosed in double quotes ("").

See [Example filters for capturing data traffic](#) for examples of filters using BPF syntax.

6. (Optional) Schedule the analyzer to run, using this capture filter, based on a specified event or at a particular time:
 - a. Enable scheduling for this capture filter:

```
(config network analyzer name)> schedule enable true
(config network analyzer name)>
```

- b. Set the mode that will be used to run the capture filter:

```
(config network analyzer name)> when mode
(config network analyzer name)>
```

where *mode* is one of the following:

- **boot**: The script will run once each time the device boots.
- **interval**: The script will start running at the specified interval, within 30 seconds after the configuration change is saved. If **interval** is selected, set the interval:

```
(config add network analyzer name)> on_interval value
(config add network analyzer name)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **on_interval** to ten minutes, enter either **10m** or **600s**:

```
(config network analyzer name)> on_interval 600s
(config network analyzer name)>
```

- **set_time**: Runs the script at a specified time of the day. If **set_time** is set, set the time that the script should run, using the format **HH:MM**:

```
(config network analyzer name)> run_time HH:MM
(config network analyzer name)>
```

- **maintenance_time**: The script will run during the system maintenance time window.

- c. Set the amount of time that the scheduled analyzer session will run:

```
(config network analyzer name)> duration value
(config network analyzer name)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **duration** to ten minutes, enter either **10m** or **600s**:

```
(config network analyzer name)> save_interval 600s
(config network analyzer name)>
```

- d. Set the frequency with which captured events will be saved:

```
(config network analyzer name)> save_interval value
(config network analyzer name)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format **number{w|d|h|m|s}**.

For example, to set **save_interval** to ten minutes, enter either **10m** or **600s**:

```
(config network analyzer name)> save_interval 600s
(config network analyzer name)>
```

7. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

8. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example filters for capturing data traffic

The following are examples of filters using Berkeley Packet Filter (BPF) syntax for capturing several types of network data. See <https://biot.com/capstats/bpf.html> for detailed information about BPF syntax.

Example IPv4 capture filters

- Capture traffic to and from IP host 192.168.1.1:

```
ip host 192.168.1.1
```

- Capture traffic from IP host 192.168.1.1:

```
ip src host 192.168.1.1
```

- Capture traffic to IP host 192.168.1.1:

```
ip dst host 192.168.1.1
```

- Capture traffic for a particular IP protocol:

```
ip proto protocol
```

where *protocol* is a number in the range of **1** to **255** or one of the following keywords: **icmp**, **icmp6**, **igmp**, **pim**, **ah**, **esp**, **rrp**, **udp**, or **tcp**.

- Capture traffic to and from a TCP port 80:

```
ip proto tcp and port 80
```

- Capture traffic to UDP port 53:

```
ip proto udp and dst port 53
```

- Capture traffic from UDP port 53:

```
ip proto udp and src port 53
```

- Capture to and from IP host 10.0.0.1 but filter out ports 22 and 80:

```
ip host 10.0.0.1 and not (port 22 or port 80)
```

Example Ethernet capture filters

- Capture Ethernet packets to and from a host with a MAC address of 00:40:D0:13:35:36:

```
ether host 00:40:D0:13:35:36
```

- Capture Ethernet packets from host 00:40:D0:13:35:36:

```
ether src 00:40:D0:13:35:36:
```

- Capture Ethernet packets to host 00:40:D0:13:35:36:

```
ether dst 00:40:D0:13:35:36
```

Capture packets from the command line

You can start packet capture at the command line with the [analyzer start](#) command. Alternatively, you can schedule the network analyzer to run based on a specified event or at a particular time. See [Configure packet capture for the network analyzer](#) for information about scheduling packet capturing. Additional analyzer commands allow you to:

- [Stop capturing packets.](#)
- [Save captured data traffic to a file.](#)
- [Clear captured data.](#)

Required configuration items

- A configured packet capture. See [Configure packet capture for the network analyzer](#) for packet capture configuration information.

To start packet capture from the command line:

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Type the following at the Admin CLI prompt:

```
> analyzer start name capture_filter
>
```

where *capture_filter* is the name of a packet capture configuration. See [Configure packet capture for the network analyzer](#) for more information.

To determine available packet capture configurations, use the **?**:

```
> analyzer start name ?
```

name: Name of the capture filter to use.

Format:

```
test_capture
capture_ping
```

```
> analyzer start name
```

You can capture up to 10 MB of data traffic in two 5 MB files per interface.

Note Data traffic is captured to RAM and the captured data is lost when the device reboots unless you save the data to a file. See [Save captured data traffic to a file](#).

Stop capturing packets

You can stop packet capture at the command line with the [analyzer stop](#) command.

To stop packet capture from the command line:

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Type the following at the Admin CLI prompt:

```
> analyzer stop name capture_filter
>
```

where *capture_filter* is the name of a packet capture configuration. See [Configure packet capture for the network analyzer](#) for more information.

To determine available packet capture configurations, use the **?**:

```
> analyzer stop name ?
```

name: Name of the capture filter to use.

Format:

```
test_capture
capture_ping

> analyzer stop name
```

Show captured traffic data

To view captured data traffic, use the `show analyzer` command. The command output show the following information for each packet:

- The packet number.
- The timestamp for when the packet was captured.
- The length of the packet and the amount of data captured.
- Whether the packet was sent or received by the device.
- The interface on which the packet was sent or received.
- A hexadecimal dump of the packet of up to 256 bytes.
- Decoded information of the packet.

To show captured data traffic:

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Type the following at the Admin CLI prompt:

```
> show analyzer name capture_filter
```

Packet 1 : Nov-30-2019 20:34:19.287682, Length 60 bytes (Captured Length 60 bytes)

Received on interface eth1

```

00 40 ff 80 01 20 b4 b6 86 21 b5 73 08 00 45 00  .@... .. .!.s..E.
00 28 3d 36 40 00 80 06 14 bc 0a 0a 4a 82 0a 0a  .(=6@... ....J..
4a 48 cd ae 00 16 a4 4b ff 5f ee 1f d8 23 50 10  JH.....K ._...#P.
08 02 c7 40 00 00 00 00 00 00 00 00          ...@.... ....
```

```

Ethernet Header
  Destination MAC Addr : 00:40:D0:13:35:36
  Source MAC Addr      : fb:03:53:05:11:2f
  Ethernet Type        : IP (0x0800)
IP Header
  IP Version           : 4
  Header Length        : 20 bytes
  ToS                  : 0x00
  Total Length         : 40 bytes
  ID                   : 15670 (0x3d36)
```

```

Flags                : Do not fragment
Fragment Offset      : 0 (0x0000)
TTL                  : 128 (0x80)
Protocol             : TCP (6)
Checksum            : 0x14bc
Source IP Address    : 10.10.74.130
Dest. IP Address     : 10.10.74.72
TCP Header
Source Port          : 52654
Destination Port     : 22
Sequence Number      : 2756443999
Ack Number           : 3995064355
Data Offset          : 5
Flags                : ACK
Window               : 2050
Checksum             : 0xc740
Urgent Pointer       : 0
TCP Data
00 00 00 00 00 00           .....

```

>

where *capture_filter* is the name of a packet capture configuration. See [Configure packet capture for the network analyzer](#) for more information.

To determine available packet capture configurations, use the **?**:

```

> show analyzer name ?

name: Name of the capture filter to use.
Format:
    test_capture
    capture_ping

```

```

> show analyzer name

```

Save captured data traffic to a file

Data traffic is captured to RAM and when the device reboots, the data is lost. To retain the captured data, first save the data to a file and then upload the file to a PC.

To save captured traffic data to a file, use the [analyzer save](#) command:

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Type the following at the Admin CLI prompt:

```

> analyzer save filename name capture_filter
>

```

where:

- *filename* is the name of the file that the captured data will be saved to.

Determine filenames already in use:

Use the tab autocomplete feature to determine filenames that are currently in use:

```
> analyzer save name <tab>
test1_analyzer_capture      test2_analyzer_capture
> analyzer save name
```

- *capture_filter* is the name of a packet capture configuration. See [Configure packet capture for the network analyzer](#) for more information.

To determine available packet capture configurations, use the **?**:

```
> analyzer save name ?
```

name: Name of the capture filter to use.

Format:

```
test_capture
capture_ping
```

```
> analyzer save name
```


The file is stored in the **/etc/config/analyzer** directory. To transfer the file to your PC, see [Download captured data to your PC](#).

Download captured data to your PC

After saving captured data to a file (see [Save captured data traffic to a file](#)), you can download the file from the WebUI or from the command line by using the **scp** (secure copy file) command.

WebUI

1. Log into the TX64 WebUI as a user with Admin access.
2. On the menu, click **System**. Under **Administration**, click **File System**.

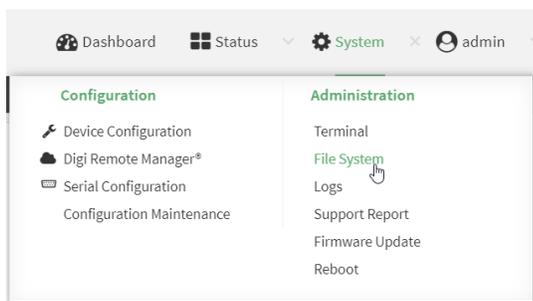

The **File System** page appears.



3. Highlight the **analyzer** directory and click to open the directory.
4. Select the saved analyzer report you want to download and click (download).

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Type **scp** to use the Secure Copy program to copy the file to your PC:

```
> scp host hostname-or-ip user username remote remote-path local local-path
to remote
```

where:

- *hostname-or-ip* is the hostname or ip address of the remote host.
- *username* is the name of the user on the remote host.
- *remote-path* is the location on the remote host where the file will be copied.
- *local-path* is the path and filename on the TX64 device.

For example:

To download the traffic saved in the file **/etc/config/analyzer/eth0.pcpng** to a PC with the IP **192.168.210.2**, for a user named **maria**, to the **/home/maria** directory:

```
> scp host 192.168.210.2 user maria remote /home/maria local
/etc/config/analyzer/eth0.pcpng to remote
```

```
maria@192.168.210.2's password:
```

```
eth0.pcpng 100% 11KB 851.3KB/s 00:00
```

Clear captured data

To clear captured data traffic in RAM, use the **analyzer clear** command:

Command line

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. Type the following at the Admin CLI prompt:

```
> analyzer clear name capture_filter
>
```

where *capture_filter* is the name of a packet capture configuration. See [Configure packet capture for the network analyzer](#) for more information.

To determine available packet capture configurations, use the **?**:

```
> analyzer clear name ?
```

```
name: Name of the capture filter to use.
```

```
Format:
```

```
test_capture
```

```
capture_ping
```

```
> analyzer clear name
```

Note You can remove data traffic saved to a file using the [rm](#) command.

Use the ping command to troubleshoot network connections

Use the [ping](#) command to troubleshoot connectivity problems.

Ping to check internet connection

To check your internet connection:

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the Admin CLI prompt, type the ping command followed by the host name or IP address of the server to be pinged:

```
> ping 8.8.8.8
PING 8.8.8.8 (8.8.8.8) 56(84) bytes of data.
64 bytes from 8.8.8.8: icmp_seq=1 ttl=54 time=11.1 ms
64 bytes from 8.8.8.8: icmp_seq=2 ttl=54 time=10.8 ms
64 bytes from 8.8.8.8: icmp_seq=3 ttl=54 time=10.7 ms
...
>
```

3. Type **exit** to exit the Admin CLI.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Stop ping commands

To stop pings when the number of pings to send (the **count** parameter) has been set to a high value, enter **Ctrl+C**.

Use the traceroute command to diagnose IP routing problems

Use the **traceroute** command to diagnose IP routing problems. This command traces the route to a remote IP host and displays results. The **traceroute** command differs from [ping](#) in that traceroute shows where the route fails, while ping simply returns a single error on failure.

See the [traceroute](#) command description for command syntax and examples. The **traceroute** command has several parameters. Only **host** is required.

- **host**: The IP address of the destination host.
- **bypass**: Send directly to a host on an attached network.
- **debug**: Enable socket level debugging.
- **dontfragment**: Do not fragment probe packets.
- **first_ttl**: Specifies with what TTL to start. (Default: 1)
- **gateway**: Route the packet through a specified gateway.
- **icmp**: Use ICMP ECHO for probes.
- **interface**: Specifies the interface.

- **ipchecksums**: Calculate ip checksums.
- **max_ttl**: Specifies the maximum number of hops. (Default: 30)
- **nomap**: Do not map IP addresses to host names
- **nqueries**: Sets the number of probe packets per hop. (Default: 3)
- **packetlen**: Total size of the probing packet. (Default: -1)
- **pausesecs**: Minimal time interval between probes (Default: 0)
- **port**: Specifies the destination port. (Default: -1)
- **src_addr**: Chooses an alternative source address.
- **tos**: Set Type of Service. (Default: -1)
- **verbose**: Verbose output.
- **waittime**: Max wait for a response to a probe. (Default: 5)

Example

This example shows using **traceroute** to verify that the TX64 device can route to host **8.8.8.8** (www.google.com) through the default gateway. The command output shows that **15** routing hops were required to reach the host:

1. Log into the TX64 command line as a user with Admin access.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the Admin CLI prompt, use the **traceroute** command to view IP routing information:

```
> traceroute 8.8.8.8
traceroute to 8.8.8.8 (8.8.8.8), 30 hops max, 52 byte packets
 1  192.168.8.1 (192.168.8.1)  0 ms  0 ms  0 ms
 2  10.10.10.10 (10.10.10.10)  0 ms  2 ms  2 ms
 3  * 10.10.8.23 (10.10.8.23)  1 ms  1 ms
 4  96.34.84.22 (96.34.84.22)  1 ms  1 ms  1 ms
 5  96.34.81.190 (96.34.81.190)  2 ms  2 ms  2 ms
 6  * * *
 7  96.34.2.12 (96.34.2.12)  11 ms  11 ms  11 ms
 8  * * *
 9  8.8.8.8 (8.8.8.8)  11 ms  11 ms  11 ms
>
```

By entering a **whois** command on a Unix device, the output shows that the route is as follows:

1. **192/8**: The local network of the TX64 device.
2. **192.168.8.1**: The local network gateway to the Internet.
3. **96/8**: Charter Communications, the network provider.
4. **216/8**: Google Inc.

Stop the traceroute process

To stop the traceroute process, enter **Ctrl-C**.

Digi TX64 regulatory and safety statements

RF exposure statement

In order to comply with RF exposure limits established in the ANSI C95.1 standards, the distance between the antenna or antennas and the user should not be less than **20 cm**.

Federal Communication (FCC) Part 15 Class B

Radio Frequency Interference (RFI) (FCC 15.105)

The Digi TX64 has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet that is on a circuit different from the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Labeling Requirements (FCC 15.19)

TX64 complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If the FCC ID is not visible when installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module FCC ID.

Modifications (FCC 15.21)

Changes or modifications to this equipment not expressly approved by Digi may void the user's authority to operate this equipment.

European Community - CE Mark Declaration of Conformity (DoC)

Digi has issued Declarations of Conformity for the TX64 concerning emissions, EMC, and safety. For more information, see www.digi.com/resources/certifications.

Important note

Digi customers assume full responsibility for learning and meeting the required guidelines for each country in their distribution market. Refer to the radio regulatory agency in the desired countries of operation for more information.

CE mark (Europe)


The TX64 is certified for use in several European countries. For information, visit www.digi.com/resources/certifications.

If the TX64 is incorporated into a product, the manufacturer must ensure compliance of the final product with articles 3.1a and 3.1b of the RE Directive (Radio Equipment Directive). A Declaration of Conformity must be issued for each of these standards and kept on file as described in the RE Directive (Radio Equipment Directive). Furthermore, the manufacturer must maintain a copy of the (product name) user manual documentation and ensure the final product does not exceed the specified power ratings, antenna specifications, and/or installation requirements as specified in the user manual.

OEM labeling requirements

The 'CE' marking must be affixed to a visible location on the OEM product.

CE labeling requirements

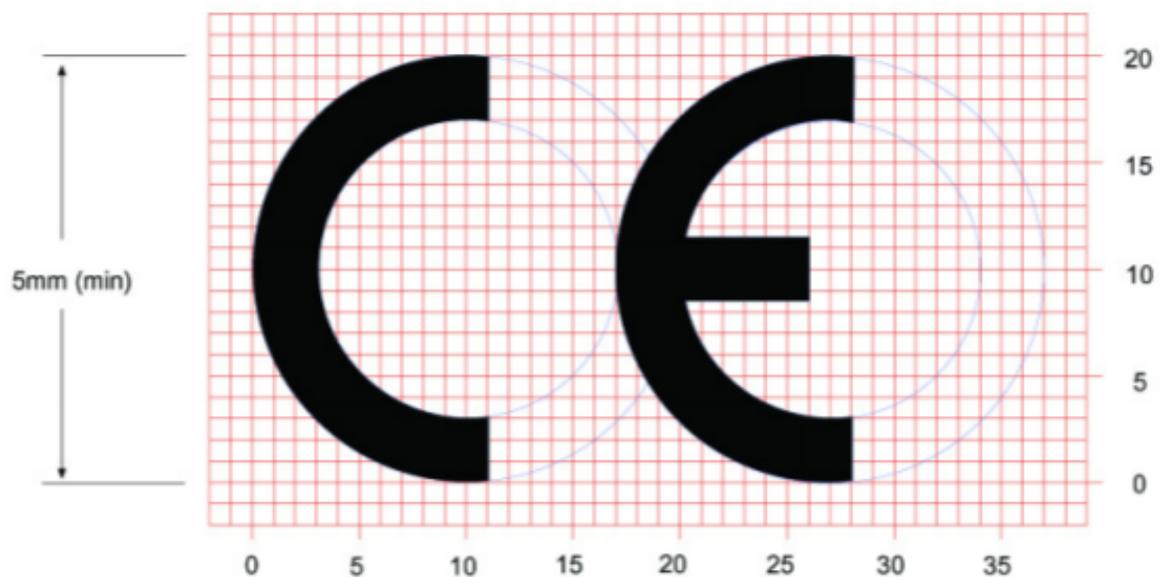

The CE mark shall consist of the initials “CE” taking the following form:

- If the CE marking is reduced or enlarged, the proportions given in the above graduated drawing must be respected.
- The CE marking must have a height of at least 5mm except where this is not possible on account of the nature of the apparatus.
- The CE marking must be affixed visibly, legibly, and indelibly.

Maximum transmit power for radio frequencies

The following tables show the maximum transmit power for frequency bands.

Cellular frequency bands

Frequency bands	Maximum transmit power
Cellular LTE 700 MHz Cellular LTE 800 MHz Cellular LTE 850 MHz Cellular LTE 900 MHz Cellular LTE 1700 MHz Cellular LTE 1800 MHz Cellular LTE 1900 MHz Cellular LTE 2100 MHz	200 mW
Cellular LTE 2600 MHz Cellular LTE 2300 MHz Cellular LTE 2500 MHz	158.49 mW

Wi-Fi frequency bands

Frequency bands	Maximum transmit power
13 overlapping channels at 22 MHz or 40 MHz wide spaced at 5 MHz Centered at 2.412 MHz to 2.472 MHz	651.784 mW
165 overlapping channels at 22 MHz or 40 MHz or 80 MHz wide spaced at 5 MHz Centered at 5180 MHz to 5825 MHz	351.295 mW

Innovation, Science, and Economic Development Canada (IC) certifications

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class B prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

RoHS compliance statement

All Digi International Inc. products that are compliant with the RoHS Directive (EU Directive 2002/95/EC and subsequent amendments) are marked as **RoHS COMPLIANT**. RoHS COMPLIANT means that the substances restricted by the EU Directive 2002/95/EC and subsequent amendments of the European Parliament are not contained in a finished product above threshold limits mandated by EU Directive 2002/95/EC and subsequent amendments, unless the restrictive substance is subject of an exemption contained in the RoHS Directive. Digi International Inc., cannot guarantee that inventory held by distributors or other third parties is RoHS compliant.

Safety notices

- Read all instructions before installing and powering the router. You should keep these instructions in a safe place for future reference.
- If the power supply shows signs of damage or malfunction, stop using it immediately, turn off the power and disconnect the power supply before contacting your supplier for a repair or replacement.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Use only the accessories, attachments, and power supplies provided by the manufacturer-connecting non-approved antennas or power supplies may damage the router, cause interference or create an electric shock hazard, and will void the warranty.
- Do not attempt to repair the product. The router contains no electronic components that can be serviced or replaced by the user. Any attempt to service or repair the router by the user will void the product warranty.
- Ports that are capable of connecting to other apparatus are defined as SELV ports. To ensure conformity with IEC60950 ensure that these ports are only connected to ports of the same type on other apparatus.

Safety statements



WARNING! RISK OF EXPLOSION IF BATTERY IS REPLACED BY INCORRECT BATTERY TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.



ATTENTION! IL Y A RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UNE BATTERIE DE TYPE INCORRECT. METTRE AU REBUT LES BATTERIES USAGÉES CONFORMÉMENT AUX INSTRUCTIONS



WARNING! For ambient temperatures above 60° C, this equipment must be installed in a Restricted Access Location only.



AVERTISSEMENT! Cet équipement est destiné à être installé dans un lieu d'accès restreint uniquement.



CAUTION! Hot parts!

To avoid burns when handling device parts, wait at least one half hour after switching off the device before handling parts.



PRUDENCE! Pièces chaudes!

Doigts brûlés lors de la manipulation des pièces. Attendez une demi-heure après la mise hors tension avant de manipuler les pièces

Special safety notes for wireless routers

Digi International products are designed to the highest standards of safety and international standards compliance for the markets in which they are sold. However, cellular-based products contain radio devices which require specific consideration. Take the time to read and understand the following guidance. Digi International assumes no liability for an end user's failure to comply with these precautions.



Wireless routers incorporate a wireless radio module. Users should ensure that the antenna(s) is (are) positioned at least 1 meter away from themselves and other persons in normal operation.

When in a hospital or other health care facility, observe the restrictions on the use of mobile phones. Do not use the router in areas where guidelines posted in sensitive areas instruct users to switch off mobile phones. Medical equipment may be sensitive to RF energy.

The operation of cardiac pacemakers, other implanted medical equipment and hearing aids can be affected by interference from cellular terminals such as the wireless routers when placed close to the device. If in doubt about potential danger, contact the physician or the manufacturer of the device to verify that the equipment is properly shielded. Pacemaker patients are advised to keep the wireless router away from the pacemaker while it is on.



Wireless routers must NOT be operated on aircraft. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communications systems. Failure to observe these instructions may lead to the suspension or denial of cellular services to the offender, legal action, or both.



As with any electrical equipment, do not operate the router in the presence of flammable gases, fumes or potentially explosive atmospheres. Do not use radio devices anywhere that blasting operations occur.



Wireless routers receive and transmit radio frequency energy when power is on. Interference can occur when using the router close to TV sets, radios, computers or inadequately shielded equipment. Follow any special regulations and always power off your router wherever forbidden or when it may cause interference or danger.



SOS IMPORTANT! Wireless routers operate using radio signals and cellular networks cannot be guaranteed to connect in all possible conditions. Therefore, never rely solely upon any wireless device for life critical communications.

Product disposal instructions

The WEEE (Waste Electrical and Electronic Equipment: 2002/96/EC) directive has been introduced to ensure that electrical/ electronic products are recycled using the best available recovery techniques to minimize the impact on the environment.



This product contains high quality materials and components which can be recycled. At the end of its life this product **MUST NOT** be mixed with other commercial waste for disposal. Check with the terms and conditions of your supplier for disposal information.

Digi International Ltd WEEE Registration number: WEE/HF1515VU

DigiTX64 Certifications

International EMC (Electromagnetic Compatibility) and safety standards

This product complies with the requirements of the following Electromagnetic Compatibility standards.

There are no user-serviceable parts inside the product. Contact your Digi representative for repair information.

Certification category	Standards
Electromagnetic Compatibility (EMC) compliance standards	<ul style="list-style-type: none"> ■ EN 300 328 v1.8.1 ■ EN 301 893 v1.7.2 ■ EN 301 489 ■ FCC Part 15 Subpart B Class B
Safety compliance standards	EN 62368
E-UTRA CA, E-UTRA FDD, E-UTRA TDD, UMTS FDD	PTCRB
Cellular carriers	See the current list of carriers on the TX64 datasheet, available on the Digi TX64 Specifications page .

Command line interface

This chapter contains the following topics:

Access the command line interface	731
Log in to the command line interface	731
Exit the command line interface	732
Execute a command from the web interface	732
Display help for commands and parameters	733
Auto-complete commands and parameters	735
Available commands	737
Use the scp command	738
Display status and statistics using the show command	739
Device configuration using the command line interface	741
Execute configuration commands at the root Admin CLI prompt	741
Configuration mode	743
Command line reference	765

Access the command line interface

You can access the TX64 command line interface using an SSH connection, a telnet connection, or a serial connection. You can use an open-source terminal software, such as PuTTY or TeraTerm, to access the device through one of these mechanisms.

You can also access the command line interface in the WebUI by using the **Terminal**, or the Digi Remote Manager by using the **Console**.

To access the command line, your device must be configured to allow access, and you must log in as a user who has been configured for the appropriate access. For further information about configuring access to these services, see:

- Serial: [Configure the serial port](#)
- WebUI: [Configure the web administration service](#)
- SSH: [Configure SSH access](#)
- Telnet: [Configure telnet access](#)

Log in to the command line interface

Command line

1. Connect to the TX64 device by using a serial connection, SSH or telnet, or the **Terminal** in the WebUI or the **Console** in the Digi Remote Manager. See [Access the command line interface](#) for more information.
 - For serial connections, the default configuration is:
 - **115200** baud rate
 - **8** data bits
 - **no** parity
 - **1** stop bit
 - **no** flow control
 - For SSH and telnet connections, the default IP address of the device is **192.168.2.1** on the ETH2, ETH3, and ETH4 Ethernet ports.
2. At the login prompt, enter the username and password of a user with Admin access:

```
login: admin
Password: *****
```

The default username is **admin**. The default unique password for your device is printed on the device label.

3. Depending on the device configuration, you may be presented with another menu, for example:

```
Access selection menu:
```

```
a: Admin CLI
s: Shell
q: Quit
```

```
Select access or quit [admin] :
```

Type **a** or **admin** to access the TX64 command line.

You will now be connected to the Admin CLI:

```
Connecting now, 'exit' to disconnect from Admin CLI ...
```

```
>
```

See [Command line interface](#) for detailed instructions on using the command line interface.

Exit the command line interface

Command line

1. At the command prompt, type **exit**.

```
> exit
```

2. Depending on the device configuration, you may be presented with another menu, for example:

```
Access selection menu:
```

```
  a: Admin CLI
```

```
  s: Shell
```

```
  q: Quit
```

```
Select access or quit [admin] :
```

Type **q** or **quit** to exit.

Execute a command from the web interface

1. Log into the TX64 WebUI as a user with Admin access.
2. At the main menu, click **Terminal**. The device console appears.

```
TX64 login:
```

3. Log into the TX64 command line as a user with Admin access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

The Admin CLI prompt appears.

```
>
```

Display help for commands and parameters

The help command

When executed from the root command prompt, **help** displays information about autocomplete operations, how to move the cursor on the TX64 command line, and other keyboard shortcuts:

```
> help

Commands
-----
?          Show commands help
<Tab>     Tab completion, displays all valid commands to complete command,
          if only one command is possible, it is used
<Space>   Like tab except shortest prefix is used if command is valid
<Enter>   Enter an input. If quoting then a new line is created instead. If
          the input is invalid then characters will be deleted until a
          prefix for a valid command is found.

Ctrl + A  Move cursor to start of line
Ctrl + E  Move cursor to end of line
Ctrl + W  Delete word under cursor until start of line or [\',", ,\,/,.]
Ctrl + R  If the current input is invalid then characters will be deleted
          until a prefix for a valid command is found.

Ctrl + left  Jump cursor left until start of line or [\',", ,\,/,.]
Ctrl + right Jump cursor right until start of line or [\',", ,\,/,.]

>
```

The question mark (?) command

When executed from the root command prompt, **?** displays available commands:

```
> ?

Commands
-----
config  View and modify the configuration
exit    Exit the CLI
analyzer Analyzer commands.
cp      Copy a file or directory.
help    Show CLI editing and navigation commands.
ls      List a directory.
mkdir   Create a directory.
modem   Modem commands.
more    View a file.
mv      Move a file or directory.
ping    Ping a host.
reboot  Reboot the system.
rm      Remove a file or directory.
scp     Copy a file or directory over SSH.
show    Show instance statistics.
system  System commands.
traceroute Print the route packets trace to network host.
update  Update firmware.

>
```

>

Display help for individual commands

When included with a command name, both **?** and **help** provide further information about the command. For example:

1. To display further information about the **show** command, type either **show ?** or **show help**:

```
> show ?
```

```
Commands
```

```
-----
arp          Show ARP tables
cloud        Show drm statistics
config       Show config deltas.
dhcp-lease   Show DHCP leases.
event        Show event list
ipsec        Show IPsec statistics.
location     Show loction information.
log          Show syslog.
manufacture  Show manufacturer information.
modem        Show modem statistics.
network      Show network interface statistics.
openvpn      Show OpenVPN statistics.
route        Show IP routing information.
serial       Show serial statistics.
system       Show system statistics.
version      Show firmware version.
wifi         Show Wi-Fi statistics.
```

```
> show
```

2. To display additional information about a specific command:

```
> show wifi ?
```

```
Commands
```

```
-----
ap          Show Wi-Fi access points.
client      Show Wi-Fi client mode connections.
```

```
> show wifi
```

3. To display a syntax diagram and parameter information:

```
> show wifi ap ?
```

```
Display details for Wi-Fi access points.
```

```
Syntax: ap [all] [name {digi_ap1|digi_ap2}]
```

```

Parameters
-----
all          Display all Wi-Fi access points.
name        Investigate a Wi-Fi access point

> show wifi ap

```

Use the Tab key or the space bar to display abbreviated help

When executed from the root command prompt, pressing the **Tab** key or the space bar displays an abbreviated list of available commands:

```

><space>
config      exit      cp          help        ls          mkdir       modem
more        mv         ping       reboot      rm          scp         show
system      traceroute update
>

```

Similar behavior is available with any command name:

```

> config network interface <space>
..          ...          defaultip    defaultlinklocal lan1
loopback   wan1          wwan1       wwan2
> config network interface

```

Auto-complete commands and parameters

When entering a command and parameter, press the **Tab** key to cause the command line interface to auto-complete as much of the command and parameter as possible. Typing the space bar has similar behavior. If multiple commands are available that will match the entered text, auto-complete is not performed and the available commands are displayed instead.

Auto-complete applies to these command elements only :

- Command names. For example, typing **net<Tab>** auto-completes the command as **network**.
- Parameter names. For example:
 - **ping hostname int<Tab>** auto-completes the parameter as **interface**.
 - **system b<Tab>** auto-completes the parameter as **backup**.
- Parameter values, where the value is one of an enumeration or an on|off type; for example:

```
(config)> serial port1 enable t<Tab>
```

auto-completes to

```
(config)> serial port1 enable true
```

Auto-complete does not function for:

- Parameter values that are string types.
- Integer values.

- File names.
- Select parameters passed to commands that perform an action.

Available commands

The following commands are available from the Admin CLI prompt:

Command	Description
config	Used to view and modify the configuration. See Device configuration using the command line interface for more information about using the config command.
exit	Exits the CLI.
cp	Copies a file or directory.
help	Displays: <ul style="list-style-type: none"> ■ CLI editing and navigation commands, when executed from the root of the Admin CLI prompt. ■ Available commands, syntax diagram, and parameter information, when executed in conjunction with another command. See Display help for commands and parameters for information about the help command.
ls	Lists the contents of a directory.
mkdir	Creates a directory.
modem	Executes modem commands.
more	Displays the contents of a file.
mv	Moves a file or directory.
ping	Pings a remote host using Internet Control Message Protocol (ICMP) Echo Request messages.
reboot	Reboots the TX64 device.
rm	Removes a file.
scp	Uses the secure copy protocol (SCP) to transfer files between the TX64 device and a remote host. See Use the scp command for information about using the scp command.
show	Displays information about the device and the device's configuration. See Display status and statistics using the show command for more information about the show command.
system	Issues commands related to system functionality.
traceroute	Sends and tracks route packets to a destination host.
update	Updates the device firmware.

Note For commands that operate on the TX64's file system, such as the **cp**, **ls**, and **mkdir** commands, see [File system](#) for information about the file system, including how to copy, move and delete files and directories.

Use the scp command

The **scp** command uses Secure Copy Protocol (SCP) to transfer files between the TX64 device and a remote host.

Required configuration items

- The hostname or IP address of the remote host.
- The username and password of the user on the remote host.
- Whether the file is being copied to the TX64 device from a remote host, or to the remote host from the TX64 device.
 - If the file is being copied to the TX64 device from a remote host:
 - The path and filename of the file on the remote host that will be copied to the TX64 device.
 - The location on the TX64 device where the file will be copied.
 - If the file is being copied to a remote host from the TX64 device:
 - The path and filename of the file on the TX64 device that will be copied to the remote host.
 - The location on the remote host where the file will be copied.

Copy a file from a remote host to the TX64 device

To copy a file from a remote host to the TX64 device, use the **scp** command as follows:

```
> scp host hostname-or-ip user username remote remote-path local local-path to local
```

where:

- *hostname-or-ip* is the hostname or ip address of the remote host.
- *username* is the name of the user on the remote host.
- *remote-path* is the path and filename of the file on the remote host that will be copied to the TX64 device.
- *local-path* is the location on the TX64 device where the copied file will be placed.

For example:

To copy firmware from a remote host with an IP address of 192.168.4.1 to the /etc/config directory on the TX64 device, issue the following command:

```
> scp host 192.168.4.1 user admin remote /home/admin/bin/TX64-19.11.72.53.bin
local /etc/config/ to local
admin@192.168.4.1's password: adminpwd
TX64-19.11.72.53.bin          100%   36MB   11.1MB/s   00:03
>
```

Transfer a file from the TX64 device to a remote host

To copy a file from the TX64 device to a remote host, use the `scp` command as follows:

```
> scp host hostname-or-ip user username remote remote-path local local-path to
remote
```

where:

- *hostname-or-ip* is the hostname or ip address of the remote host.
- *username* is the name of the user on the remote host.
- *remote-path* is the location on the remote host where the file will be copied.
- *local-path* is the path and filename on the TX64 device.

For example:

To copy a support report from the TX64 device to a remote host at the IP address of 192.168.4.1:

1. Use the **system support-report** command to generate the report:

```
> system support-report /etc/config/
Saving support report to /etc/config/support-report-0040D0133536-19-11-30-
13.22.15.bin
Support report saved.
>
```

2. Use the **scp** command to transfer the report to a remote host:

```
> scp host 192.168.4.1 user admin remote /home/admin/temp/ local
/etc/config/support-report-00:40:D0:13:35:36-19-11-30-13.22.15.bin to
remote
admin@192.168.4.1's password: adminpwd
support-report-0040D0133536-19-11-30-13.22.15.bin
>
```

Display status and statistics using the show command

The TX64 **show** command display status and statistics for various features.

For example:

show config

The `show config` command displays all the configuration settings for the device that have been changed from the default settings. This is a particularly useful when troubleshooting the device.

```
> show config

auth tacacs+ service "login"
auth user admin password
"$2a$05$WlJQhquI7BgstypobKhaeLPtWraGANBcr`EaJX/wJv63JENW/H0u"
add auth user test
add auth user test group end "admin"
add auth user test group end "serial"
auth user test password
"$2a$05$RdGYz1sLKbWrqe6cZjlsd.otg03JZR6n9939XV6EYWUSP0tMAz05W"
```

```
network interface lan ipv4 type "dhcp"
network interface lan zone "external"
network interface modem modem apn 0 apn "10569.mcs"
network interface modem modem apn_lock "true"
schema version "445"
```

>

show system

The [show system](#) command displays system information and statistics for the device, including CPU usage.

```
> show system
```

```
Model                : Digi TX64
Serial Number        : TX64-000068
Hostname             : TTX64
MAC                 : 00:40:D0:13:35:36

Hardware Version     : 50001947-01 1P
Firmware Version     : 19.11.72.53
Bootloader Version   : 1

Current Time         : Sat, 30 November 2019 21:14:12
CPU                  : 2.7
Uptime               : 23 hours, 30 minutes, 21 seconds (84621s)
Temperature          : 38C

Description          : Digi TX64
Contact              : username
```

>

show network

The [show network](#) command displays status and statistics for network interfaces.

```
> show network
```

Interface	Proto	Status	Address
defaultip	IPv4	up	192.168.210.1/24
defaultlinklocal	IPv4	up	169.254.100.100/16
lan1	IPv4	up	192.168.2.1
lan1	IPv6	up	0:0:0:0:0:ffff:c0a8:301
loopback	IPv4	up	127.0.0.1/8
wan1	IPv4	up	192.168.3.1/24
wan1	IPv6	up	fd00:2704::240:ffff:fe80:120/64
wwan1	IPv4	up	192.168.4.1/24
wwan1	IPv6	up	0:0:0:0:0:ffff:c0a8:501/64
wwan2	IPv4	down	
wwan2	IPv6	down	

>

Device configuration using the command line interface

The **config** command allows for device configuration from the command line. All configuration tasks that can be performed by using the WebUI can also be performed by using the **config** command.

There are two ways to invoke the **config** command from the CLI:

- Execute the **config** command and parameters at the root prompt. See [Execute configuration commands at the root Admin CLI prompt](#) for more information.
- Enter configuration mode by executing the **config** command without any parameters. See [Configuration mode](#) for more information.

Execute configuration commands at the root Admin CLI prompt

You can execute the **config** command at the root Admin CLI prompt with any appropriate parameters. When the **config** command is used in this way, changes to the device's configuration are automatically saved when the command is executed.

For example, to disable the SSH service from the root prompt, enter the following command:

```
> config service ssh enable false
>
```

The TX64 device's ssh service is now disabled.

Note When the **config** command is executed at the root prompt, certain configuration actions that are available in configuration mode cannot be performed. This includes validating configuration changes, canceling and reverting configuration changes, and performing actions on elements in lists. See [Configuration mode](#) for information about using configuration mode.

Display help for the config command from the root Admin CLI prompt

Display additional configuration commands, as well as available parameters and values, by entering the question mark (?) character after the **config** command.

1. For example:

```
> config ?
```

Will display the following help information:

```
> config ?
```

Additional Configuration

application	Custom scripts
auth	Authentication
cloud	Central management
firewall	Firewall
monitoring	Monitoring
network	Network
serial	Serial

```

service      Services
system      System
vpn          VPN
    
```

Run "config" with no arguments to enter the configuration editing mode.

```
> config
```

2. You can then display help for the additional configuration commands. For example, to display help for the **config service** command:

```
> config service ?
Services
```

Additional Configuration

```

dns          DNS
mdns         Service Discovery (mDNS)
multicast    Multicast
ntp          NTP
remote_control Remote control
snmp         SNMP
ssh          SSH
telnet       Telnet
web_admin    Web administration
    
```

```
> config service
```

3. Next, display help for the **config service ssh** command:

```
> config service ssh ?
```

SSH: An SSH server for managing the device.

Parameters	Current Value	
enable	true	Enable
key	[private]	Private key
port	22	Port

Additional Configuration

```

acl          Access control list
mdns
    
```

```
> config service ssh
```

4. Lastly, display the allowed values and other information for the **enable** parameter:

```
> config service ssh enable ?
```

Enable: Enable the service.

```
Format: true, false, yes, no, 1, 0
Default value: true
Current value: true
```

```
> config service ssh enable
```

Configuration mode

Configuration mode allows you to perform multiple configuration tasks and validate the changes prior to saving them. You can cancel all changes without saving them at any time. Configuration changes do not take effect until the configuration is saved.

Enable configuration mode

To enable configuration mode, at the root prompt, enter the **config** command without any parameters:

```
> config
(config)>
```

When the command line is in configuration mode, the prompt will change to include **(config)**, to indicate that you are currently in configuration mode.

Enter configuration commands in configuration mode

There are two ways to enter configuration commands while in configuration mode:

- Enter the full command string from the config prompt.
For example, to disable the ssh service by entering the full command string at the config prompt:

```
(config)> service ssh enable false
(config)>
```

- Execute commands by moving through the configuration schema.
For example, to disable the ssh service by moving through the configuration and then executing the **enable false** command:

1. At the **config** prompt, enter **service** to move to the **service** node:

```
(config)> service
(config service)>
```

2. Enter **ssh** to move to the **ssh** node:

```
(config service)> ssh
(config service ssh)>
```

3. Enter **enable false** to disable the **ssh** service:

```
(config service ssh)> enable false
(config service ssh)>
```

See [Move within the configuration schema](#) for more information about moving within the configuration.

Save changes and exit configuration mode

To save changes that you have made to the configuration while in configuration mode, use **save**. The save command automatically validates the configuration changes; the configuration will not be saved if it is not valid. Note that you can also validate configuration changes at any time while in configuration mode by using the **validate** command.

```
(config)> save
Configuration saved.
>
```

After using **save** to save changes to the configuration, you will automatically exit configuration mode. To return to configuration mode, type **config** again.

Exit configuration mode without saving changes

You can discard any unsaved configuration changes and exit configuration mode by using the **cancel** command:

```
(config)> cancel
>
```

After using **cancel** to discard unsaved changes to the configuration, you will automatically exit configuration mode.

Configuration actions

In configuration mode, configuration actions are available to perform tasks related to saving or canceling the configuration changes, and to manage items and elements in lists. The commands can be listed by entering a question mark (?) at the **config** prompt.

The following actions are available:

Configuration actions	Description
cancel	Discards unsaved configuration changes and exits configuration mode.
save	Saves configuration changes and exits configuration mode.
validate	Validates configuration changes.
revert	Reverts the configuration to default settings. See The revert command for more information.
show	Displays configuration settings.

Configuration actions	Description
add	Adds a named element, or an element in a list. See Manage elements in lists for information about using the add command with lists.
del	Deletes a named element, or an element in a list. See Manage elements in lists for information about using the del command with lists.
move	Moves elements in a list. See Manage elements in lists for information about using the move command with lists.

Display command line help in configuration mode

Display additional configuration commands, as well as available parameters and values, by entering the question mark (?) character at the **config** prompt. For example:

1. Enter **?** at the **config** prompt:

```
(config)> ?
```

This will display the following help information:

```
(config)> ?
```

```
Additional Configuration
```

```
-----
application      Custom scripts
auth              Authentication
cloud             Central management
firewall          Firewall
monitoring        Monitoring
network           Network
serial            Serial
service           Services
system            System
vpn               VPN
```

```
(config)>
```

2. You can then display help for the additional configuration commands. For example, to display help for the **config service** command, use one of the following methods:
 - At the **config** prompt, enter **service ?**:

```
(config)> service ?
```

- At the **config** prompt:
 - a. Enter **service** to move to the **service** node:

```
(config)> service
(config service)>
```

- b. Enter **?** to display help for the **service** node:

```
(config service)> ?
```

Either of these methods will display the following information:

```
config> service ?
```

Services

Additional Configuration

```
-----
dns                DNS
mdns               Service Discovery (mDNS)
multicast          Multicast
ntp                NTP
remote_control     Remote control
snmp               SNMP
ssh                SSH
telnet             Telnet
web_admin          Web administration
```

```
(config)> service
```

3. Next, to display help for the **service ssh** command, use one of the following methods:

- At the **config** prompt, enter **service ssh ?**:

```
(config)> service ssh ?
```

- At the **config** prompt:
 - a. Enter **service** to move to the **service** node:

```
(config)> service
(config service)>
```

- b. Enter **ssh** to move to the **ssh** node:

```
(config service)> ssh
(config service ssh)>
```

- c. Enter **?** to display help for the **ssh** node:

```
(config service ssh)> ?
```

Either of these methods will display the following information:

```
(config)> service ssh ?

SSH: An SSH server for managing the device.

Parameters                Current Value
-----
enable                    true           Enable
key                       [private]     Private key
port                      22           Port

Additional Configuration
-----
acl                       Access control list
mdns
```

```
(config)> service ssh
```

4. Lastly, to display allowed values and other information for the **enable** parameter, use one of the following methods:

- At the **config** prompt, enter **service ssh enable ?**:

```
(config)> service ssh enable ?
```

- At the **config** prompt:

- a. Enter **service** to move to the **service** node:

```
(config)> service
(config service)>
```

- b. Enter **ssh** to move to the **ssh** node:

```
(config service)> ssh
(config service ssh)>
```

- c. Enter **enable ?** to display help for the **enable** parameter:

```
(config service ssh)> enable ?
(config service ssh)>
```

Either of these methods will display the following information:

```
(config)> service ssh enable ?

Enable: Enable the service.
Format: true, false, yes, no, 1, 0
Default value: true
Current value: true

(config)> service ssh enable
```

Move within the configuration schema

You can perform configuration tasks at the CLI by moving within the configuration.

- Move forward one node in the configuration by entering the name of an Additional Configuration option:

1. At the **config** prompt, type **service** to move to the **service** node:

```
(config)> service
(config service)>
```

2. Type **ssh** to move to the **ssh** node:

```
(config service)> ssh
(config service ssh)>
```

3. Type **acl** to move to the **acl** node:

```
(config service ssh)> acl
(config service ssh acl)>
```

4. Type **zone** to move to the **zone** node:

```
(config service ssh acl)> zone
(config service ssh acl zone)>
```

You can also enter multiple nodes at once to move multiple steps in the configuration:

```
(config)> service ssh acl zone
(config service ssh acl zone)>
```

- Move backward one node in the configuration by entering two periods (..):

```
(config service ssh acl zone)> ..
(config service ssh acl)>
```

You can also move back multiples nodes in the configuration by typing multiple sets of two periods:

```
(config service ssh acl zone)> .. .. ..
(config service)>
```

- Move to the root of the config prompt from anywhere within the configuration by entering three periods (...):

```
(config service ssh acl zone)> ...
(config)>
```

Manage elements in lists

While in configuration mode, you can use the **add**, **del**, and **move** action commands to manage elements in a list. When working with lists, these actions require an index number to identify the list item that will be acted on.

Add elements to a list

When used with parameters that contains lists of elements, the **add** command is used to add an element to the list.

For example, to add an authentication method:

1. Display current authentication method by using the **show** command:

```
(config)> show auth method
0 local
(config)>
```

2. Add an authentication method by using the **add index_item** command. For example:

- To add the TACACS+ authentication method to the beginning of the list, use the index number **0**:

```
(config)> add auth method 0 tacacs+
(config)> show auth method
0 tacacs+
1 local
(config)>
```

- To add the TACACS+ authentication method to the end of the list, use the **end** keyword:

```
(config)> add auth method end tacacs+
(config)> show auth method
0 local
1 tacacs+
(config)>
```

The end keyword

As demonstrated above, the **end** keyword is used to add an element to the end of a list. Additionally, the **end** keyword is used to add an element to a list that does not have any elements.

For example, to add an authentication group to a user that has just been created:

1. Use the **show** command to verify that the user is not currently a member of any groups:

```
(config)> show auth user new-user group
(config)>
```

2. Use the **end** keyword to add the admin group to the user's configuration:

```
(config)> add auth user new-user group end admin
(config)>
```

3. Use the **show** command again to verify that the admin group has been added to the user's configuration:

```
(config)> show auth user new-user group
0 admin
(config)>
```

Delete elements from a list

When used with parameters that contains lists of elements, the **del** command is used to delete an element in the list.

For example, to delete an authentication method:

1. Use the **show** command to display current authentication method configuration:

```
(config)> show auth method
0 local
1 tacacs+
2 radius
(config)>
```

2. Delete one of the authentication methods by using the **del index_number** command. For example:
 - a. To delete the local authentication method, use the index number **0**:

```
(config)> del auth method 0
(config)>
```

- b. Use the **show** command to verify that the local authentication method was removed:

```
(config)> show auth method
0 tacacs+
1 radius
(config)>
```

Move elements within a list

Use the **move** command to reorder elements in a list.

For example, to reorder the authentication methods:

1. Use the **show** command to display current authentication method configuration:

```
(config)> show auth method
0 local
1 tacacs+
2 radius
(config)>
```

2. To configure the device to use TACACS+ authentication first to authenticate a user, use the **move index_number_1 index_number_2** command:

```
(config)> move auth method 1 0
(config)>
```

3. Use the **show** command again to verify the change:

```
(config)> show auth method
0 tacacs+
1 local
2 radius
(config)>
```

The revert command

The **revert** command is used to revert changes to the TX64 device's configuration and restore default configuration settings. The behavior of the revert command varies depending on where in the configuration hierarchy the command is executed, and whether the optional **path** parameter is used. After executing the revert command, you must save the configuration changes by using the **save** command. You can also discard the configuration changes by using the **cancel** command.



CAUTION! The **revert** command reverts all changes to the default configuration, not only unsaved changes.

Revert all configuration changes to default settings

To discard all configuration changes and revert to default settings, use the **revert** command at the config prompt without the optional **path** parameter:

1. At the config prompt, enter **revert**:

```
(config)> revert
(config)>
```

2. Set the password for the admin user prior to saving the changes:

```
(config)> auth user admin password pwd
(config)>
```

3. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

4. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Revert a subset of configuration changes to the default settings

There are two methods to revert a subset of configuration changes to the default settings.

- Enter the **revert** command with the **path** parameter. For example, to revert all changes to the authentication methods configuration:

1. Enter the **revert** command with the **path** set to **auth method**:

```
(config)> revert auth method
(config)>
```

2. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

3. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

- Move to the location in the configuration and enter the **revert** command without the **path** parameter. For example:
 1. Change to the auth method node:

```
(config)> auth method
(config auth method)>
```

2. Enter the **revert** command:

```
(config auth method)> revert
(config auth method)>
```

3. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

4. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

- You can also use a combination of both of these methods:
 1. Change to the **auth** node:

```
(config)> auth
(config auth)>
```

2. Enter the **revert** command with the **path** set to **method**:

```
(config auth)> revert method
(config auth)>
```

3. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

4. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Enter strings in configuration commands

For string parameters, if the string value contains a space, the value must be enclosed in quotation marks. For example, to assign a descriptive name for the device using the **system** command, enter:

```
(config)> system description "Digi TX64"
```

Example: Create a new user by using the command line

In this example, you will use the TX64 command line to create a new user, provide a password for the user, and assign the user to authentication groups.

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. At the config prompt, create a new user with the username **user1**:
 - Method one: Create a user at the root of the config prompt:

```
(config)> add auth user user1
(config auth user user1)>
```

- Method two: Create a user by moving through the configuration:
 - a. At the config prompt, enter **auth** to move to the **auth** node:

```
(config)> auth
(config auth)>
```

- b. Enter **user** to move to the **user** node:

```
(config auth)> user
(config auth user)>
```

- c. Create a new user with the username **user1**:

```
(config auth user)> add user1
(config auth user user1)>
```

4. Configure a password for the user:

```
(config auth user user1)> password pwd1
(config auth user user1)>
```

5. List available authentication groups:

```
(config auth user user1)> show .. .. group
```

```
admin
  acl
    admin
      enable true
    nagios
      enable false
    openvpn
      enable false
      no tunnels
```

```

portal
  enable false
  no portals
serial
  enable false
  no ports
shell
  enable false

serial
  acl
    admin
      enable true
    nagios
      enable false
    openvpn
      enable false
      no tunnels
    portal
      enable false
      no portals
    serial
      enable true
      ports
        0 port1
    shell
      enable false
(config auth user user1)>

```

6. Add the user to the admin group:

```

(config auth user user1)> add group end admin
(config auth user user1)>

```

7. Save the configuration and apply the change:

```

(config auth user user1)> save
Configuration saved.
>

```

8. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example: Configure multiple WANs and LANs by using the command line


The default configuration of the TX64 consists of one WAN (WAN1), two Wireless WANs (WWAN1 and WWAN2), and one LAN (LAN1). The WANs are configured to use the following devices:

- WAN1: WAN/ETH1 Ethernet port
- WWAN1: WWAN1 cellular modem
- WWAN2: WWAN2 cellular modem.

LAN1 is configured to use the LAN1 bridge. Its default IP address is 192.168.2.1, and it has its DHCP server enabled. . The default configuration of the LAN1 bridge consists of the following devices:

- ETH2
- ETH3
- ETH4
- WWAN2 cellular modem.
- WWAN2 cellular modem

In this example, we will use the command line to create a second bridge, called LAN2. We will then create a second LAN, LAN2, and configure LAN2 to use the new bridge. We will also create a second WAN that uses the ETH4 Ethernet port to provide additional redundant failover WAN capabilities.

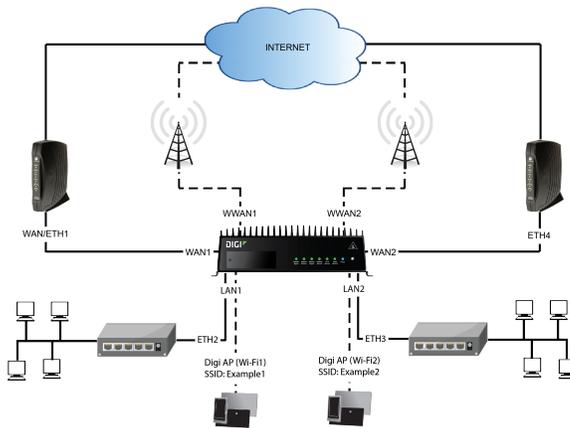


Note To avoid potential problems with access to the device while performing these procedures, you should use the serial port to perform these tasks, or, if you are using an Ethernet connection, it should be connected to LAN1 through the ETH2 Ethernet port.

Task one: Configure bridges

In this task, we will create a new bridge and configure the LAN1 and LAN2 bridges to use the following devices:

- LAN1 bridge:
 - ETH2
 - WWAN2 cellular modem.
- LAN2 bridge:
 - ETH3
 - Digi AP (Wi-Fi2)

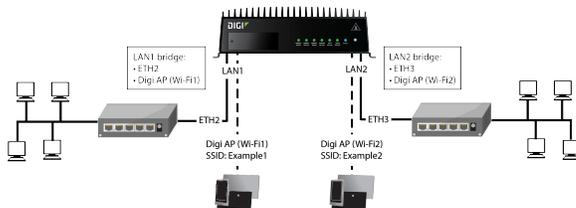

In task two, we will assign the new LAN2 bridge to a LAN.

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Display a list of devices currently configured for the LAN1 bridge:
 - Method one: Enter the full command at the config prompt:

```
(config)> show network bridge lan1 device
0 /network/device/eth2
1 /network/device/eth3
2 /network/device/eth4
3 /network/wireless/ap/digi_ap1
4 /network/wireless/ap/digi_ap2
(config)>
```

- Method two: Move within the configuration to the **network bridge lan1 device** location and the use the **show** command display the list of devices:

- a. Change to the **network** node:

```
(config)> network
(config network)>
```

- b. Change to the **bridge** node:

```
(config network)> bridge
(config network bridge)>
```

- c. Change to the **lan1** node:

```
(config network bridge)> lan1
(config network bridge lan1)>
```

- d. Change to the **device** node:

```
(config network bridge lan1)> device
(config network bridge lan1 device)>
```

- e. Enter **show**:

```
(config network bridge lan1 device)> show
0 /network/device/eth2
1 /network/device/eth3
2 /network/device/eth4
3 /network/wireless/ap/digi_ap1
4 /network/wireless/ap/digi_ap2
(config network bridge lan1 device)>
```

Note For the rest of this example configuration, command line examples will use a single command entered at the root **config** prompt (method one above). However, any command line example in this example configuration can also be performed by moving within the configuration to the appropriate location (method two above).

4. Remove devices from the LAN1 bridge that will be used by other interfaces in this configuration.
- Remove the Digi AP (Wi-Fi2) access point (/network/wireless/ap/digi_ap2) from the bridge, using its index number, **4**, as determined above with the show command:

```
(config)> del network bridge lan1 device 4
(config)>
```

- Remove the ETH4 device (/network/device/eth4) from the bridge, using its index number, **2**, as determined above with the show command:

```
(config)> del network bridge lan1 device 2
(config)>
```

- Remove the ETH3 device (/network/device/eth3) from the bridge, using its index number, **1**, as determined above with the show command:

```
(config)> del network bridge lan1 device 1
(config)>
```

- Use the show command again to verify that the LAN1 bridge now has only two devices, ETH2 and Digi AP (Wi-Fi1):

```
(config)> show network bridge lan1 device
0 /network/device/eth2
1 /network/wireless/ap/digi_ap1
(config)>
```

5. Create a new bridge, named LAN2:

```
(config)> add network bridge LAN2
(config network bridge LAN2)>
```

6. Add devices to the bridge:

- View available devices and the proper syntax by using the add device command with the **TAB** autocomplete feature:

```
(config network bridge LAN2)> add device end <TAB>
(config network bridge LAN2)> add device end /network/<TAB>
/network/device/eth1          /network/device/eth2
/network/device/eth3
/network/device/eth4          /network/device/loopback
/network/bridge/LAN2
/network/bridge/lan1         /network/wireless/ap/digi_ap1
/network/wireless/ap/digi_ap2
(config network bridge LAN2)>
```

- b. Add the ETH3 device to the bridge:

```
(config network bridge LAN2)> add device end /network/device/eth3
(config network bridge LAN2)>
```

- c. Add the Digi AP (Wi-Fi2) access point to the bridge:

```
(config network bridge LAN2)> add device end /network/wireless/ap/digi_
ap2
(config network bridge LAN2)>
```

- d. Use the show command again to verify that the LAN2 bridge now has two devices, ETH3 and Digi AP (Wi-Fi2):

```
(config network bridge LAN2)> show network bridge lan2 device
0 /network/device/eth3
1 /network/wireless/ap/digi_ap2
(config network bridge LAN2)>
```

7. Save the configuration and apply the change:

```
(config network bridge LAN2)> save
Configuration saved.
>
```

8. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Task two: Create a new LAN

In this task, we will create a new LAN, named LAN2, to use the LAN2 bridge created in task one.

- Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a new network interface named LAN2:

```
(config)> add network interface LAN2
(config network interface LAN2)>
```

4. Configure the device for the LAN2 interface:

- a. Enter **device ?** to view available devices and the proper syntax.

```
(config network interface LAN2)> device ?
```

Device: The network device used by this network interface.

Format:

```
/network/device/eth1
/network/device/eth2
/network/device/eth3
/network/device/eth4
/network/device/loopback
/network/bridge/LAN2
/network/bridge/lan1
/network/wireless/ap/digi_ap1
/network/wireless/ap/digi_ap2
```

Current value:

```
(config network interface LAN2)> device
```

- b. Set the device for the LAN2 interface to the LAN2 bridge created in task one:

```
(config network interface LAN2)> device /network/bridge/LAN2
(config network interface LAN2)>
```

5. Configure the firewall zone for the LAN2 interface to **internal**:

```
(config network interface LAN2)> zone internal
(config network interface LAN2)>
```

6. Configure the IPv4 address for the LAN2 interface:

```
(config network interface LAN2)> ipv4 address 192.168.3.1/24
(config network interface LAN2)>
```

7. Enable the DHCP server for the LAN2 interface:

```
(config network interface LAN2)> ipv4 dhcp_server enable true
(config network interface LAN2)>
```

8. Enable the access points and set the SSIDs:

- a. Move to the root of the configuration schema by typing three periods (...):

```
(config network interface LAN2)> ...
(config)>
```

- b. Enable the Digi AP (Wi-Fi1) access point:

```
(config)> network wifi ap digi_ap1 enable true
(config)>
```

- c. Set the SSID for the Digi AP (Wi-Fi1) access point:

```
(config)> network wifi ap digi_ap1 ssid Example1
(config)>
```

- d. Set the password for the Digi AP (Wi-Fi1) access point:

```
(config)> network wifi ap digi_ap1 encryption key_psk2 password1
(config)>
```

- e. Enable the Digi AP (Wi-Fi2) access point:

```
(config)> network wifi ap digi_ap2 enable true
(config)>
```

- f. Set the SSID for the Digi AP (Wi-Fi2) access point:

```
(config)> network wifi ap digi_ap1 ssid Example2
(config)>
```

- g. Set the password for the Digi AP (Wi-Fi2) access point:

```
(config)> network wifi ap digi_ap2 encryption key_psk2 password2
(config)>
```

9. Save the configuration and apply the change:

```
(config network bridge LAN2)> save
Configuration saved.
>
```

10. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Task three: Create a new WAN

In this task, we will create a second WAN interface, named WAN2, using the ETH4 device.

1. Log into the TX64 command line as a user with full Admin access rights.
Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add the WAN2 network interface:

```
(config)> add network interface WAN2
(config network interface WAN2)>
```

4. Enter **device ?** to view available devices and the proper syntax.

```
(config network interface WAN2)> device ?
```

Device: The network device used by this network interface.

Format:

```
/network/device/eth1
/network/device/eth2
/network/device/eth3
/network/device/eth4
/network/device/loopback
/network/bridge/LAN2
/network/bridge/lan1
/network/wireless/ap/digi_ap1
/network/wireless/ap/digi_ap2
```

Current value:

```
(config network interface WAN2)> device
```

5. Configure the WAN to use the eth4 device:

```
(config network interface WAN2)> device /network/device/eth4
(config network interface WAN2)>
```

6. Change the zone for the WAN to **external**:

```
(config network interface WAN2)> zone external
(config network interface WAN2)>
```

7. Configure the WAN as an IPv4 DHCP client:

- a. Enter **ipv4 ?** to determine the available settings for ipv4 (the appropriate setting is highlighted in the example output):

```
(config network interface WAN2)> ipv4 ?
```

IPv4

Parameters	Current Value	
address		Address
enable	true	Enable
gateway		Default gateway
metric	0	Metric
mgmt	0	Management priority
mtu	1500	MTU
type	static	Type

```

weight                10                Weight
-----
Additional Configuration
-----
connection_monitor    Active recovery
dhcp_relay             DHCP relay
dhcp_server           DHCP server
dns                   DNS servers

(config network interface WAN2)> ipv4

```

- b. Enter **ipv4 type ?** to determine available settings for the ipv4 type:

```

(config network interface WAN2)> ipv4 type ?

Type: The method for configuring IPv4 on this interface.
Format:
  dhcp
  static
Default value: static
Current value: static

(config network interface WAN2)> ipv4 type

```

- c. Set the IPv4 type to **dhcp**:

```

(config network interface WAN2)> ipv4 type dhcp
(config network interface WAN2)>

```

8. Configure the IPv4 WAN priority.

Because the TX64 device now has two WANs, we need to determine which WAN will be the default route when both WANs are active. In this example configuration, WAN1 should be the primary WAN, and WAN2 only used when WAN1 is down. Additionally, the Wireless WANs will provide additional failover capabilities and will be used only when both WAN1 and WAN2 are unable to connect to the internet.

To do this, we will set the **metric** for WAN2 to a value that is higher than the **metric** for WAN1, and lower than the **metric** for the WWANs.

- a. Determine the metric for WAN1:

```

(config network interface WAN2)> show .. wan1 ipv4 metric
1
(config network interface WAN2)>

```

- b. Determine the metric for WWAN1:

```

config network interface WAN2)> show .. wwan1 ipv4 metric
3
(config network interface WAN2)>

```

- c. Determine the metric for WWAN2:

```
config network interface WAN2> show .. wwan2 ipv4 metric
3
(config network interface WAN2)>
```

- d. Set the metric for WAN2 to **2**, which is higher than the WAN1 metric and lower than the WWAN metrics:

```
(config network interface WAN2)> ipv4 metric 2
(config network interface WAN2)>
```

9. Save the configuration and apply the change:

```
(config network bridge bridge2)> save
Configuration saved.
>
```

10. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Task four: Verify the new configuration

The final step in this example is to verify the new configuration.

1. Connect an Ethernet cable from an internet-connected modem to WAN1 through the WAN/ETH1 Ethernet port.
2. Verify that WAN1 and LAN1 are operating correctly:
 - a. Connect a device to LAN1 through the ETH2 Ethernet port, or by connecting to the Digi AP (Wi-Fi1) access point.
 - b. Verify that the device has been provided an IP address from the LAN1 DHCP server in the 192.168.2.* subnet.
 - c. Verify that the device has access to the internet.
3. Verify that LAN2 is operating correctly:
 - a. Connect a device to LAN2 through the ETH3 Ethernet port, or by connecting to the Digi AP (Wi-Fi2) access point.
 - b. Verify that the device has been provided an IP address from the LAN2 DHCP server in the 192.168.3.* subnet.
 - c. Verify that the device has access to the internet.
4. Verify that WAN priority and failover are operating correctly between WAN1 and WAN2:
 - a. Connect an Ethernet cable from an alternate internet-connected modem to WAN2 through the ETH4 Ethernet port.
 - b. Verify that when both WANs are connected to the internet, devices connected to the TX64 have internet access through WAN1.
 - c. Verify that failover functions correctly between WAN1 and WAN2:
 - i. Disconnect the WAN1 Ethernet cable from the WAN/ETH1 Ethernet port and verify that devices connected to the TX64 have internet access through WAN2.

- ii. Reconnect the WAN1 Ethernet cable to the WAN/ETH1 Ethernet port and verify that devices connected to the TX64 have internet access through WAN1.
 - d. Verify that failover functions correctly if both WAN1 and WAN2 are not working:
 - i. Insert at least one SIM in one of the cellular modems.
 - ii. When the WWAN's Service LED indicates that the device is connected to the cellular network, unplug both the WAN1 Ethernet cable from the WAN/ETH1 Ethernet port, and the WAN2 Ethernet cable from the ETH4 Ethernet port.
 - iii. Verify that devices connected to the TX64 have internet access through the WWAN.

Command line reference

analyzer	766
cp	768
help	769
ls	770
mkdir	771
modem	772
more	777
mv	778
ping	779
reboot	780
rm	781
scp	782
show	783
system	791
traceroute	793
update	796

analyzer

Analyzer commands.

analyzer clear name STRING

Clears the traffic captured by the analyzer.

Parameters

name

Name of the capture filter to use.

Ref: /network/analyzer

Type: string

analyzer save filename STRING name STRING

Saves the current captured traffic to a file.

Parameters

filename

The filename to save captured traffic to. The file will be saved to the device's /etc/config/analyzer directory.

Type: string

name

Name of the capture filter to use.

Ref: /network/analyzer

Type: string

analyzer start name STRING

Start a capture session of packets on this devices interfaces.

Parameters

name

Name of the capture filter to use.

Ref: /network/analyzer

Type: string

analyzer stop name STRING

Stops the traffic capture session.

Parameters

name

Name of the capture filter to use.

Ref: /network/analyzer

Type: string

cp

cp commands.

[force] SOURCE DESTINATION

Copy a file or directory.

Parameters***force***

Do not ask to overwrite the destination file if it exists.

Syntax: {*True|False*}

Type: boolean

source

The source file or directory to copy.

Type: string

destination

The destination path to copy the source file or directory to.

Type: string

help

Show CLI editing and navigation commands.

Parameters

None

ls

ls [show-hidden] PATH

List a directory.

Parameters

show-hidden

Show hidden files and directories. Hidden filenames begin with '!'.
Syntax: {*True|False*}

Type: boolean

Type: boolean

References

List files and directories under this path.

Type: string

mkdir

***mkdir* PATH**

Create a directory. Parent directories are created as needed.

Parameters

References

The directory path to create.

Type: string

modem

Modem commands.

modem at [imei STRING] [name STRING] CMD

Send an AT command to the modem and display the response.

Parameters

imei

The IMEI of the modem to execute this CLI command on.

Optional: True

Type: string

name

The configured name of the modem to execute this CLI command on.

Optional: True

Ref: /network/modem

Type: string

cmd

The AT command string.

Type: string

modem at-interactive [imei STRING] [name STRING]

Start an AT command session on the modem's AT serial port.

Parameters

imei

The IMEI of the modem to execute this CLI command on.

Optional: True

Type: string

name

The configured name of the modem to execute this CLI command on.

Optional: True

Ref: /network/modem

Type: string

modem pin

PIN commands.

pin change [imei STRING] [name STRING] OLD-PIN NEW-PIN

Change the SIM's PIN code. Warning: Attempting to use an incorrect PIN code may PUK lock the SIM.

Parameters**imei**

The IMEI of the modem to execute this CLI command on.

Optional: True

Type: string

name

The configured name of the modem to execute this CLI command on.

Optional: True

Ref: /network/modem

Type: string

old-pin

The SIM's PIN code.

Type: string

new-pin

The PIN code to change to.

Type: string

pin disable [imei *STRING*] [name *STRING*] PIN

Disable the PIN lock on the SIM card that is active in the modem. Warning: Attempting to use an incorrect PIN code may PUK lock the SIM.

Parameters**imei**

The IMEI of the modem to execute this CLI command on.

Optional: True

Type: string

name

The configured name of the modem to execute this CLI command on.

Optional: True

Ref: /network/modem

Type: string

pin

The SIM's PIN code.

Type: string

pin enable [imei *STRING*] [name *STRING*] PIN

Enable the PIN lock on the SIM card that is active in the modem. The SIM card will need to be unlocked before each use. Warning: Attempting to use an incorrect PIN code may PUK lock the SIM.

Parameters**imei**

The IMEI of the modem to execute this CLI command on.

Optional: True

Type: string

name

The configured name of the modem to execute this CLI command on.

Optional: True

Ref: /network/modem

Type: string

pin

The SIM's PIN code.

Type: string

pin status [imei *STRING*] [name *STRING*]

Print the PIN lock status and the number of PIN enable/disable/unlock attempts remaining. The SIM will be PUK locked when there are no remaining retries

Parameters**imei**

The IMEI of the modem to execute this CLI command on.

Optional: True

Type: string

name

The configured name of the modem to execute this CLI command on.

Optional: True

Ref: /network/modem

Type: string

pin unlock [imei *STRING*] [name *STRING*] PIN

Temporarily unlock the SIM card with a PIN code. Set the PIN field in the modem interface's configuration to unlock the SIM card automatically before use. Warning: Attempting to use an incorrect PIN code may PUK lock the SIM.

Parameters**imei**

The IMEI of the modem to execute this CLI command on.

Optional: True

Type: string

name

The configured name of the modem to execute this CLI command on.

Optional: True

Ref: /network/modem

Type: string

pin

The SIM's PIN code.

Type: string

modem puk

PUK commands.

puk status [imei *STRING*] [name *STRING*]

Print the PUK status and the number of PUK unlock attempts remaining.

Parameters**imei**

The IMEI of the modem to execute this CLI command on.

Optional: True

Type: string

name

The configured name of the modem to execute this CLI command on.

Optional: True

Ref: /network/modem

Type: string

puk unlock [imei *STRING*] [name *STRING*] PUK NEW-PIN

Unlock the SIM with a PUK code from the SIM provider.

Parameters**imei**

The IMEI of the modem to execute this CLI command on.

Optional: True

Type: string

name

The configured name of the modem to execute this CLI command on.

Optional: True

Ref: /network/modem

Type: string

puk

The SIM's PUK code.

Type: string

new-pin

The PIN code to change to.

Type: string

modem reset [imei STRING] [name STRING]

Reset the modem hardware (reboot it). This can be useful if the modem has stopped responding to the network or is behaving inconsistently.

Parameters***imei***

The IMEI of the modem to execute this CLI command on.

Optional: True

Type: string

name

The configured name of the modem to execute this CLI command on.

Optional: True

Ref: /network/modem

Type: string

modem sim-slot [imei STRING] [name STRING] SLOT

Show or change the modem's active SIM slot. This applies only to modems with multiple SIM slots.

Parameters***imei***

The IMEI of the modem to execute this CLI command on.

Optional: True

Type: string

name

The configured name of the modem to execute this CLI command on.

Optional: True

Ref: /network/modem

Type: string

slot

The SIM slot to change to.

Syntax: (1|2|show)

Type: string

more

more PATH

View a file.

Parameters

References

The file to view.

Type: string

mv

Move a file or directory.

mv [force] SOURCE DESTINATION

Parameters

force

Do not ask to overwrite the destination file if it exists.

Syntax: {*True|False*}

Type: boolean

source

The source file or directory to move.

Type: string

destination

The destination path to move the source file or directory to.

Type: string

ping

Ping a host using ICMP echo.

ping [ipv6] [countINTEGER] [interfaceSTRING] [sizeINTEGER] HOST

Parameters

count

The number of ICMP ping requests to send before terminating.

Default: 100

Minimum: 1

Syntax: {*Integer*}

Type: integer

interface

The network interface to send ping packets from when the host is reachable over a default route. If not specified, the system's primary default route will be used.

Optional: True

Ref: /network/interface

Type: string

ipv6

Use the host's IPv6 address if a hostname is given as the 'host' argument.

Syntax: {*True|False*}

Type: boolean

size

The number of bytes sent in the ICMP ping request.

Default: 56

Minimum: 0

Syntax: {*Integer*}

Type: integer

host

The name or address of the remote host to send ICMP ping requests to.

Syntax: {*hostname|IPv4_address|IPv6_address*}

Type: string

reboot

Reboot the system.

Parameters

None

rm

Remove a file or directory.

rm [force] PATH

Parameters

force

Force the file to be removed without asking.

Syntax: {*True*|*False*}

Type: boolean

References

The path to remove.

Type: string

scp

Copy a file or directory over SSH.

scp hostSTRINGlocalSTRING [portINTEGER] remoteSTRINGtoSTRINGuserSTRING

Parameters**host**

The name or address of the remote host.

Syntax: {hostname|IPv4_address|IPv6_address}

Type: string

local

The file to copy to or from on the local device.

Type: string

port

The SSH port to use to connect to the remote host.

Default: 22

Maximum: 65535

Minimum: 1

Syntax: {Integer}

Type: integer

remote

The file to copy to or from on the remote host.

Type: string

to

Copy the file from the local device to the remote host, or from the remote host to the local device.

Syntax: (remote|local)

Type: string

user

The username to use when connecting to the remote host.

Type: string

show

Show instance status statistics.

show analyzer name STRING

Show packets from a specified analyzer capture.

Parameters***name***

Name of the capture filter to use.

Ref: /network/analyzer

Type: string

show arp [ipv4|ipv6|verbose]

Show ARP tables, if no IP version is specified IPv4 IPV6 will be displayed.

Parameters***ipv4***

Display IPv4 routes. If no IP version is specified IPv4 IPV6 will be displayed

Syntax: {*True|False*}

Type: boolean

ipv6

Display IPv6 routes. If no IP version is specified IPv4 IPV6 will be displayed

Syntax: {*True|False*}

Type: boolean

verbose

Display more information (less concise, more detail).

Syntax: {*True|False*}

Type: boolean

show cloud

Show drm status statistics.

Parameters

None

show config

Show changes made to default configuration.

Parameters

None

show dhcp-lease [all|verbose]

Show DHCP leases.

Parameters***all***

Show all leases (active and inactive (not in etc/config/dhcp.*lease)).

Syntax: {*True|False*}

Type: boolean

verbose

Display more information (less concise, more detail).

Syntax: {*True|False*}

Type: boolean

show event [number INTEGER] [table STRING]

Show event list (high level).

Parameters***number***

Number of lines to retrieve from log.

Default: 20

Minimum: 1

Syntax: {*Integer*}

Type: integer

table

Type of event log to be displayed (status, error, info).

Optional: True

Syntax: (*status|error|info*)

Type: string

show hotspot [ip STRING] [name STRING]

Show hotspot statistics.

Parameters***ip***

IP address of a specific client, to limit the status display to only this client.

Optional: True

Syntax: *IPv4_address*

Type: string

name

The configured instance name of the hotspot.

Optional: True
Ref: /network/hotspot
Type: string

show ipsec [all] [tunnel STRING]

Show IPsec status statistics.

Parameters

all

Display all tunnel including disabled tunnel.

Syntax: {*True|False*}

Type: boolean

tunnel

Display more details and config data for a specific IPsec tunnel.

Optional: True

Ref: /vpn/ipsec/tunnel

Type: string

show location

Show location information.

Parameters

None

show log [filter STRING] [number INTEGER]

Show system log (low level).

Parameters

filter

Filters for type of log message displayed (critical, warning, info, debug). Note, filters from the number of messages retrieved not the whole log (this can be very time consuming). If you require more messages of the filtered type, increase the number of messages retrieved using 'number'.

Optional: True

Syntax: (*critical|warning|debug|info*)

Type: string

number

Number of lines to retrieve from log.

Default: 20

Minimum: 1

Syntax: {*Integer*}

Type: integer

show manufacture [verbose]

Show manufacturer information.

Parameters***verbose***

Display more information (less concise, more detail).

Syntax: {*True*|*False*}

Type: boolean

show modem [verbose] [imei STRING] [name STRING]

Show modem status and statistics.

Parameters***imei***

The IMEI of the modem to execute this CLI command on.

Optional: True

Type: string

name

The configured name of the modem to execute this CLI command on.

Optional: True

Ref: /network/modem

Type: string

verbose

Display more information (less concise, more detail).

Syntax: {*True*|*False*}

Type: boolean

show network [all|verbose] [interface STRING]

Show network interface status and statistics.

Parameters***all***

Display all interfaces including disabled interfaces.

Syntax: {*True*|*False*}

Type: boolean

interface

Display more details and config data for a specific network interface.

Optional: True

Ref: /network/interface

Type: string

verbose

Display more information (less concise, more detail).

Syntax: {*True|False*}

Type: boolean

show openvpn

Show OpenVPN status and statistics.

openvpn client [all] [name STRING]

Show OpenVPN client status statistics.

Parameters**all**

Display all clients including disabled clients.

Syntax: {*True|False*}

Type: boolean

name

Display more details and config data for a specific OpenVPN client.

Optional: True

Ref: /vpn/openvpn/client

Type: string

openvpn server [all] [name STRING]

Show OpenVPN server status and statistics.

Parameters**all**

Display all servers including disabled servers.

Syntax: {*True|False*}

Type: boolean

name

Display more details and config data for a specific OpenVPN server.

Optional: True

Ref: /vpn/openvpn/server

Type: string

show route [ipv4|ipv6|verbose]

Show IP routing information.

Parameters***ipv4***

Display IPv4 routes.

Syntax: {*True|False*}

Type: boolean

ipv6

Display IPv6 routes.

Syntax: {*True|False*}

Type: boolean

verbose

Display more information (less concise, more detail).

Syntax: {*True|False*}

Type: boolean

show serial PORT

Show serial status and statistics.

Parameters***port***

Display more details and config data for a specific serial port.

Optional: True

Ref: /serial

Type: string

show system [verbose]

Show system status and statistics.

Parameters***verbose***

Display more information (disk usage, etc)

Syntax: {*True|False*}

Type: boolean

show usb

Show USB information.

Parameters

None

show version [verbose]

Show firmware version.

Parameters**verbose**

Display more information (build date)

Syntax: {*True*|*False*}

Type: boolean

show web-filter

Show web filter status and statistics.

Parameters

None

show wifi

Show Wi-Fi status and statistics.

wifi ap [*all*] [*name STRING*]

Display details for Wi-Fi access points.

Parameters**all**

Display all Wi-Fi access points including disabled Wi-Fi access points.

Syntax: {*True*|*False*}

Type: boolean

name

Display more details for a specific Wi-Fi access point.

Optional: True

Ref: /network/wifi/ap

Type: string

wifi client [*all*] [*name STRING*]

Display details for Wi-Fi client mode connections.

Parameters**all**

Display all Wi-Fi clients including disabled Wi-Fi client mode connections.

Syntax: {*True*|*False*}

Type: boolean

name

Display more details for a specific Wi-Fi client mode connection.

Optional: True

Ref: /network/wifi/client

Type: string

system

System commands.

system backup [passphrase STRING] type STRING PATH

Save the device's configuration to a file. Archives are full backups including generated SSH keys and dynamic DHCP lease information. Command backups are a list of CLI commands required to build the device's configuration.

Parameters

passphrase

Encrypt the archive with a passphrase.

Depend: 1/type = archive

Optional: True

Type: string

type

The type of backup file to create. Archives are full backups including generated SSH keys and dynamic DHCP lease information. CLI configuration backups are a list of CLI commands used to build the device's configuration.

Default: archive

Syntax: (cli-config|archive)

Type: string

References

The file path to save the backup to.

Type: string

system disable-cryptography

Erase the device's configuration and reboot into a limited mode with no cryptography available. The device's shell will be accessible over Telnet (port 23) at IP address 192.168.210.1. To return the device to normal operation, perform the configuration erase procedure with the device's ERASE button twice consecutively.

Parameters

system factory-erase

Erase the device to restore to factory defaults. All configuration and automatically generated keys will be erased.

Parameters

system restore [passphrase STRING] PATH

Restore the device's configuration from a backup archive or CLI commands file.

Parameters

passphrase

Decrypt the archive with a passphrase.

Optional: True

Type: string

References

The path to the backup file.

Type: string

system support-report PATH

Save a support report to a file and include with support requests.

Parameters

References

The file path to save the support report to.

Type: string

traceroute

Print the route packets trace to network host.

```
traceroute [bypass]debug [dontfragment]icmp [ipchecksums]nomap [verbose] [first_ttlINTEGER] [gatewaySTRING] [interfaceSTRING] [max_ttlINTEGER] [nqueriesINTEGER] [packetlenINTEGER] [pausesecsINTEGER] [portINTEGER] [src_addrSTRING] [tosINTEGER] [waittimeINTEGER] HOST
```

Parameters

bypass

Bypass the normal routing tables and send directly to a host on an attached network.

Syntax: {*True*|*False*}

Type: boolean

debug

Enable socket level debugging.

Syntax: {*True*|*False*}

Type: boolean

dontfragment

Do not fragment probe packets.

Syntax: {*True*|*False*}

Type: boolean

first_ttl

Specifies with what TTL to start.

Default: 1

Minimum: 1

Syntax: {*Integer*}

Type: integer

gateway

Tells traceroute to add an IP source routing option to the outgoing packet that tells the network to route the packet through the specified gateway

Optional: True

Syntax: {*IPv4_address*|*IPv6_address*}

Type: string

icmp

Use ICMP ECHO for probes.

Syntax: {*True*|*False*}

Type: boolean

interface

Specifies the interface through which traceroute should send packets. By default, the interface is selected according to the routing table.

Optional: True

Ref: /network/interface

Type: string

ipchecksums

Calculate ip checksums.

Syntax: {*True|False*}

Type: boolean

max_ttl

Specifies the maximum number of hops (max time-to-live value) traceroute will probe.

Default: 30

Minimum: 1

Syntax: {*Integer*}

Type: integer

nomap

Do not try to map IP addresses to host names when displaying them.

Syntax: {*True|False*}

Type: boolean

nqueries

Sets the number of probe packets per hop. A value of -1 indicated

Default: 3

Minimum: 1

Syntax: {*Integer*}

Type: integer

packetlen

Total size of the probing packet. Default 60 bytes for IPv4 and 80 for Ipv6. A value of -1 specifies that the default value will be used.

Default: -1

Minimum: -1

Syntax: {*Integer*}

Type: integer

pausesecs

Minimal time interval between probes

Default: 0

Minimum: 0

Syntax: {*Integer*}

Type: integer

port

Specifies the destination port base traceroute will use (the destination port number will be incremented by each probe). A value of -1 specifies that no specific port will be used.

Default: -1

Minimum: -1

Syntax: *{Integer}*

Type: integer

src_addr

Chooses an alternative source address. Note that you must select the address of one of the interfaces. By default, the address of the outgoing interface is used.

Optional: True

Syntax: *{IPv4_address|IPv6_address}*

Type: string

tos

For IPv4, set the Type of Service (TOS) and Precedence value. Useful values are 16 (low delay) and 8 (high throughput). Note that in order to use some TOS precedence values, you have to be super user. For IPv6, set the Traffic Control value. A value of -1 specifies that no value will be used.

Default: -1

Minimum: -1

Syntax: *{Integer}*

Type: integer

verbose

Verbose output.

Syntax: *{True|False}*

Type: boolean

waittime

Determines how long to wait for a response to a probe.

Default: 5

Minimum: 1

Syntax: *{Integer}*

Type: integer

host

The host that we wish to trace the route packets for.

Syntax: *{hostname|IPv4_address|IPv6_address}*

Type: string

update

Update firmware.

update firmware file STRING

Update device firmware

Parameters

file

Firmware filename and path.

Type: string