



Operations Manager OM12xx, OM22xx, OM12xx-L, and and OM22xx-L



REGISTER

This Quick Start Guide covers basic installation and configuration of the OM1200 and OM2200. For in-depth guidance, consult the Operations Manager User Manual.

Register your product: <https://opengear.com/product-registration>

When you register, you:

- Activate your warranty
- Get notified when firmware updates are released. For licensing information and access to source code visit: <https://opengear.com/software-licenses>

WHAT'S IN THE BOX?

- 1 x OM1200 or OM2200 Device
- 1 x 450031 – Power supply
- 1 x OM1200 Rackmount Kit
- 1 x 319015 - Cisco straight pinout RJ45 to DB9F crossover serial adapter
- 1 x 440016 - 5ft/1.5m Cat 5 RJ45 to RJ45 UTP straight cable

Cellular Enabled Units

- 2 x 569041 – 4G LTE-A Pro Antennas

ASSEMBLE



By default, interface NET1 and NET2 are IPv4/v6 DHCP enabled. NET1 is statically set for 192.168.0.1/24 and NET2 is assigned an address via DHCP.


USB ports A and B are USB 2.0 and ports C and D are USB 3.0.

1. For cellular enabled (-L) models, attach the included antennas or external mount to the CELL (M) and CELL (A) connectors. If you have a data plan, insert a carrier-provided mini-SIM into the first (1) SIM CARD slot with contacts facing upward. You will hear a click when it is correctly inserted.
2. Connect other devices to the serial and USB ports.
3. Plug in power adapter to the unit.

LOG IN

WebUI

Using a computer connected to the same subnet, open your browser and type in <https://IPaddress> of the device to access the WebUI.

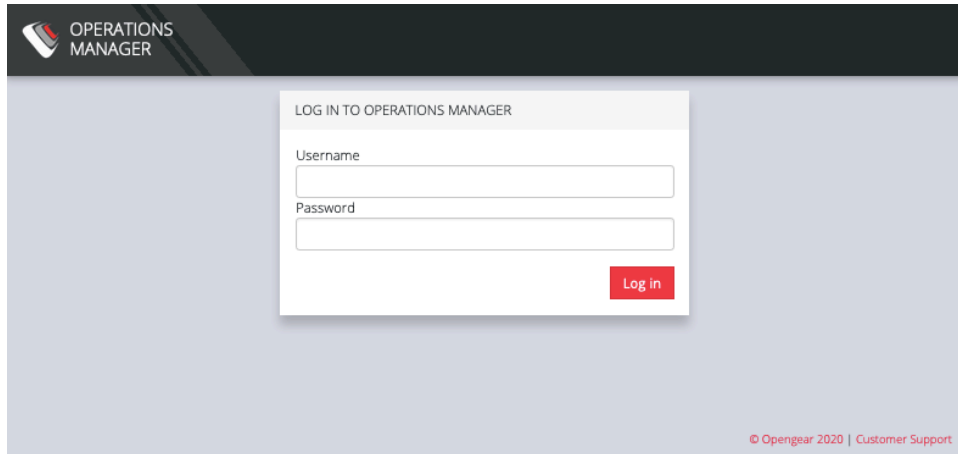


To log in the first time, use the username **root** and password **default**.

NOTE: During your first log in, you will be directed to change the root password.

Command Line Interface (CLI)

The unit can also be accessed through an SSH client using the device IP address over port 22.

Change Root Password

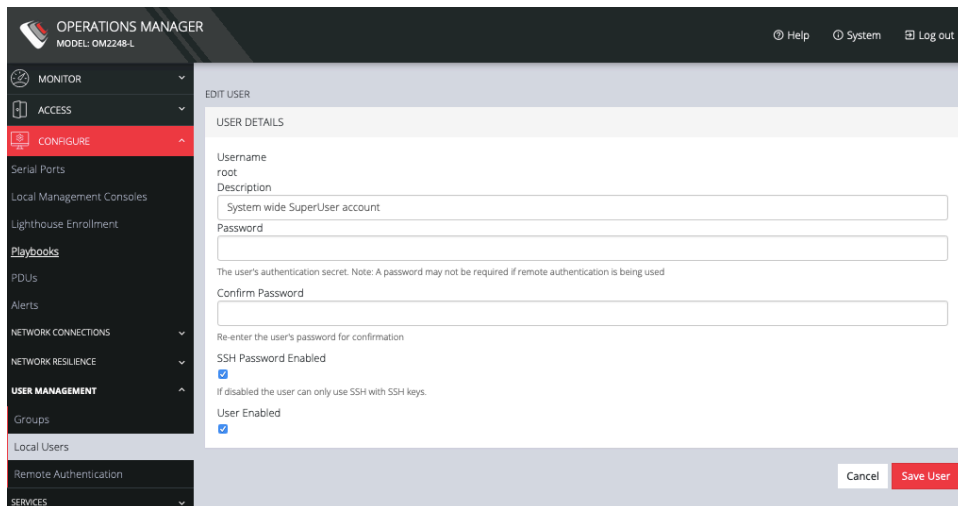

Click **CONFIGURE > User Management > Local Users**.

Click the **Edit User** button next to the root user. On the **User Details** page, enter and confirm the new password. Scroll to the bottom of the page and click **Save User**.

BASIC CONFIGURATION

Serial Ports

Port #	Label	Mode	Parameters	Port Pinout	Actions	
<input type="checkbox"/>	1	Port-1	Console Server	9600-8-N-1	X2	
<input type="checkbox"/>	2	Port-2	Console Server	9600-8-N-1	X2	
<input type="checkbox"/>	3	Port-3	Console Server	9600-8-N-1	X2	
<input type="checkbox"/>	4	Port-4	Console Server	9600-8-N-1	X2	
<input type="checkbox"/>	5	Port-5	Console Server	9600-8-N-1	X2	
<input type="checkbox"/>	6	Port-6	Console Server	9600-8-N-1	X2	
<input type="checkbox"/>	7	Port-7	Console Server	9600-8-N-1	X2	
<input type="checkbox"/>	8	Port-8	Console Server	9600-8-N-1	X2	
<input type="checkbox"/>	9	Port-9	Console Server	9600-8-N-1	X2	

CONFIGURE > Serial Ports

By default, all serial interfaces are enabled with the following settings:

- Pin Out – X2
- Baud Rate – 9600
- Data Bits – 8
- Parity – None
- Stop Bits – 1

Local Console

In all Operations Manager OM1200 units, serial port 1 must be enabled as the local console port. The port will need to be configured to be setup as a local console under **CONFIGURE > Serial Ports**

Network

Interface	IPv4 connections	IPv6 connections
NET1 - 1G Copper/SFP	2 IPv4 connections 1 Automatic 1 Static	1 IPv6 connections 1 Automatic 0 Static
NET2 - 1G Copper/SFP	1 IPv4 connections 1 Automatic 0 Static	1 IPv6 connections 1 Automatic 0 Static
Cellular Interface (LTE)		

CONFIGURE > Network Connections > Network Interfaces.

Physical Interfaces: NET1 and NET2


Both interfaces are DHCP enabled for IPv4 and IPv6. NET1 is statically set for 192.168.0.1/24 and NET2 is assigned an address via DHCP.

Wireless Interfaces: Cellular

If your unit has a cellular modem, it is disabled by default. Before enabling the modem please follow steps under assembly to ensure a good signal strength. If your carriers require an APN it must be entered before a successful cellular connection can be established.

Connecting to Lighthouse Centralized Management

To enroll your device, you must enter information to connect to a Lighthouse instance under **CONFIGURE > Lighthouse Enrollment**

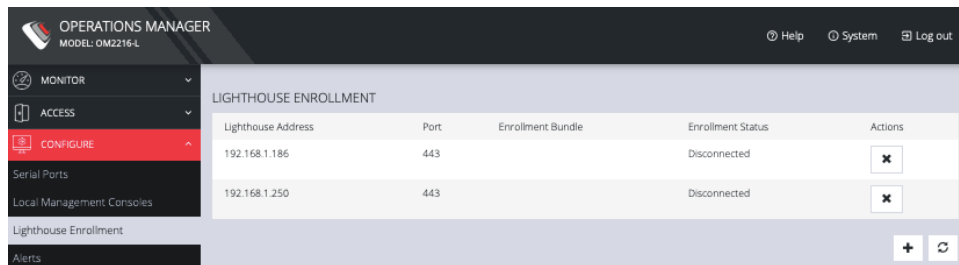

Note: Enrollment of a node can also be performed from Lighthouse using **Add Node** functionality.

Support Report

The Support Report contains information that enables the support team to troubleshoot and expedite the solution to your support issue. The report can be generated by hovering your mouse over the **Help** icon on the top right of the WebUI then clicking **Technical Support Report**. This opens the support page of the device where you can review the support file and download it.

Verifying Serial Number and Firmware Version

Verify the serial number of the device and firmware version by hovering your mouse over the **System Icon** on the top right of the WebUI.

Upgrade

System firmware can either be upgraded via HTTP/HTTPS Server or by uploading the file to the device **CONFIGURE > System > System Upgrade**

The latest firmware is located here:

http://ftp.opengear.com/download/operations_manager/current/

Factory Reset

Devices can be set to factory default by navigating to **CONFIGURE > System > Factory Reset**.

Unless a backup of the configuration has been performed for the device, all settings will be lost.