

Energizer[®]



Motion Sensor


QUICK START GUIDE

Thank you for choosing the *Energizer*® Smart Motion Sensor. This quick setup guide will help you install and setup your Motion Sensor.

Package includes:


- 1 – Motion Sensor with stand
- 1 – Mounting screws and adhesive
- 1 – Power adapter with cable
- 1 – Quick Start Guide

Indicator Light

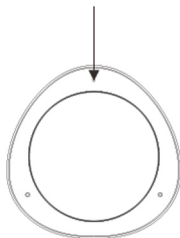

Micro USB Port

Reset Button

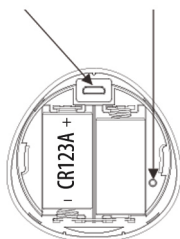

Note: Your phone or tablet must be connected to your 2.4ghz WiFi network. ***Energizer*®** Connect devices can only be added to the app while on a 2.4ghz WiFi network.

Installing the Motion Sensor

1) Download the **Energizer® Connect** app from the Apple App Store (for iPhones) or Google Play Store (for Android phones). Before opening the app, make sure your phone is connected to the WiFi network your motion sensor will be placed on.



2) Open the app and create an account by following the on screen instructions.

3) Using the provided cable and power adapter, plug your motion sensor into a power outlet. Insert two CR123A batteries (not included) for **limited backup power**.




Note: The indicator light on the motion sensor should start flashing quickly (about 4 times per second) for EZ pairing mode.

4) After logging in, click “+” on the top right of the screen.

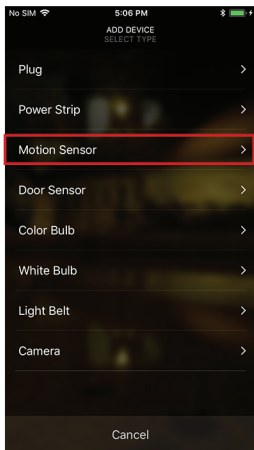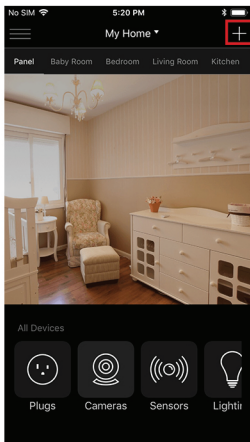


5) Select “Motion Sensor”



6) Confirm the indicator light on your motion sensor is flashing quickly, then click next.

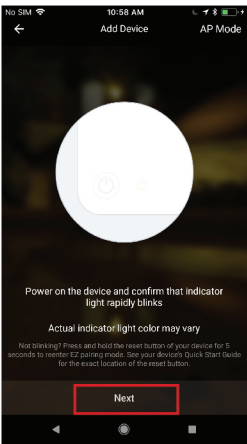

7) Confirm that the network WiFi displayed is your 2.4ghz WiFi network, enter your WiFi password and click confirm.

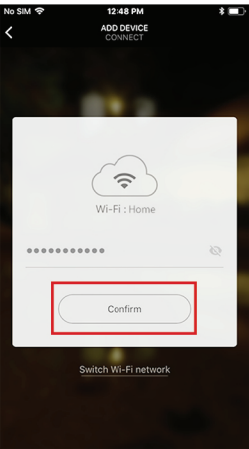

8) Your motion sensor will now be connected to the network. Click finish device setup.

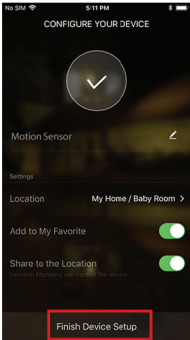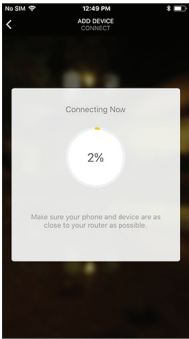

Your **Energizer®** Motion Sensor is now ready to use. You can now get alerts when motion is detected. You can also automate other **Energizer®** Connect devices. We hope you enjoy using your **Energizer®** Motion Sensor . For frequently asked questions and instruction videos, please visit our website at www.energizerconnect.com.

Definition of Indicator Light



AP MODE	Slowly blinking (about 2 times per sec)
EZ MODE	Rapidly blinking (about 4 times per sec)

Troubleshooting:



If you need to reset or troubleshoot your device, simply hold down on the reset button for 5 seconds. The device will cycle between AP Mode and EZ Mode every time you hold down the reset button.

Installation:



1. Power on (battery or USB)

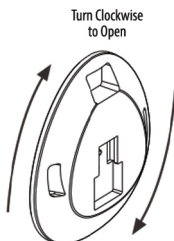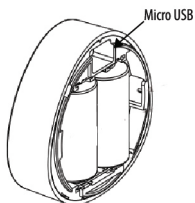

2. Install the sensor's holder in desired location with screws or 3M glue.

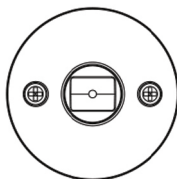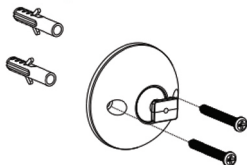

3. Insert the multi-sensor into its holder by placing it in and up.

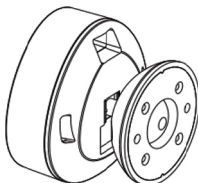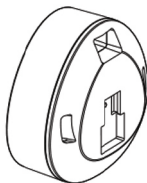

CAUTION: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

RADIO AND TELEVISION INTERFERENCE

This equipment has been tested and found to comply with the limits, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You may also find helpful the following booklet, prepared by the FCC: "How to Identify and Resolve Radio-TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402.

Changes and Modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission's rules.