



RAZER BASE STATION V2 CHROMA

MASTER GUIDE

Improve the functionality and flair of your gaming setup with the **Razer Base Station V2 Chroma**—a central device that lets you plug in all your gaming gear. Powered by Razer Chroma RGB, this USB hub doubles up as a headset stand and has a newly added 3.5mm combo port that supports 7.1 surround sound.

 
CONTENTS

1. WHAT'S INSIDE / WHAT'S NEEDED	3
2. LET'S GET YOU COVERED	5
3. TECHNICAL SPECIFICATIONS.....	6
4. SETTING UP THE HEADSET STAND	7
5. CUSTOMIZING YOUR HEADSET STAND VIA RAZER SYNAPSE 3.....	9
6. SAFETY AND MAINTENANCE	19
7. LEGALESE.....	20

1. WHAT'S INSIDE / WHAT'S NEEDED

WHAT'S INSIDE

- Razer Base Station V2 Chroma

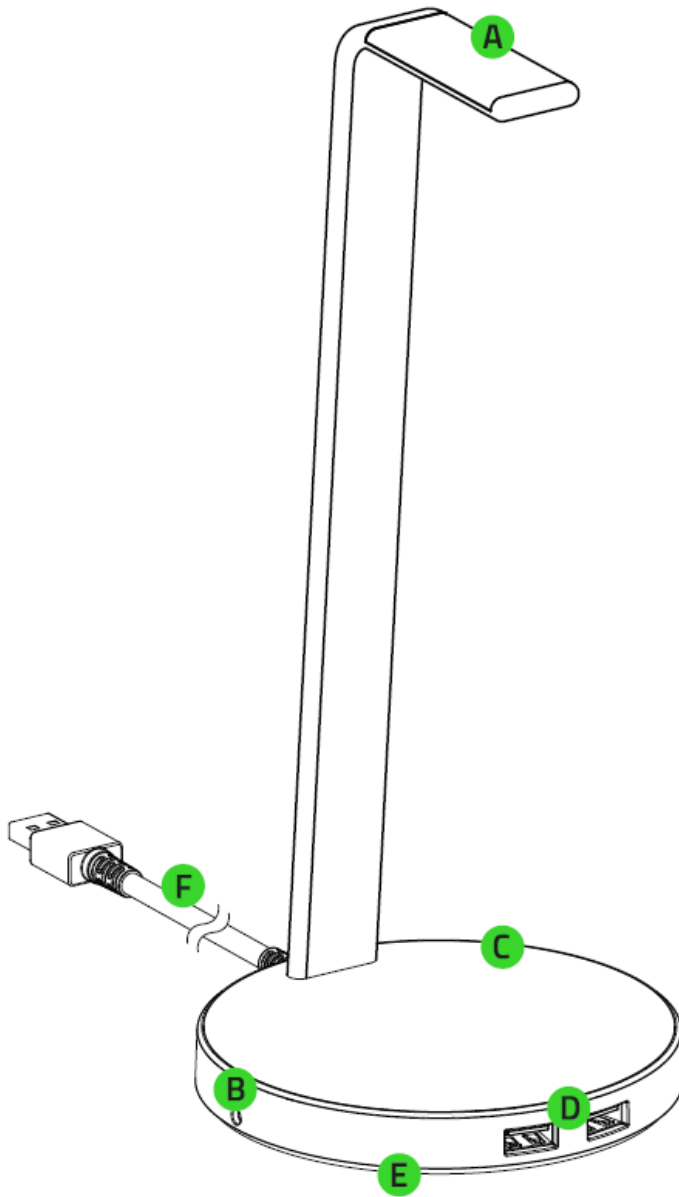

- A. Headset stand
- B. 3.5mm combo port with built-in DAC
- C. Underglow lighting
- D. USB 3.1 ports
- E. Non-slip rubber base
- F. USB 3.1 Type A connector

- Important Product Information Guide

WHAT'S NEEDED

PRODUCT REQUIREMENTS

- PC with a free USB 3.1 port*

 
RAZER SYNAPSE REQUIREMENTS

- Windows® 7 64-bit (or higher)
- Internet connection for software installation

**Also works with USB 2.0 ports.*

2. LET'S GET YOU COVERED

You've got a great device in your hands, complete with a 1-year limited warranty coverage. Now maximize its potential and score exclusive Razer benefits by registering at razerid.razer.com

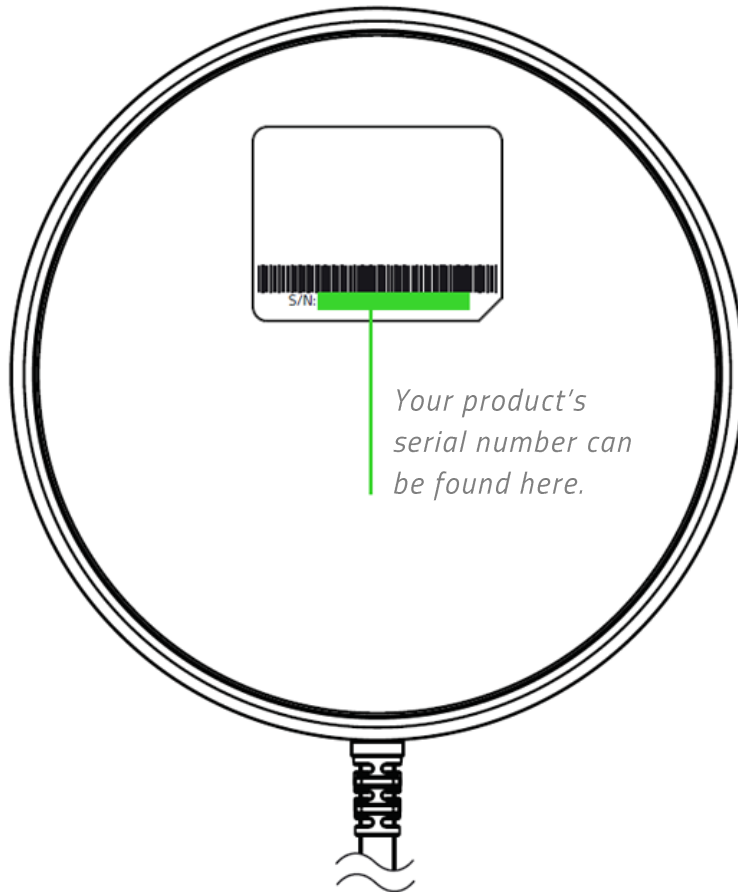

Got a question? Ask the Razer Support Team at support.razer.com

3. TECHNICAL SPECIFICATIONS

TECHNICAL SPECIFICATIONS

 
- 2 x USB 3.1 ports
- 1 x 3.5mm combo port with built-in DAC
- 7.1 surround sound
- Razer Chroma RGB
- All-new aluminum construction
- Enhanced height for larger headsets
- Anti-slip base

APPROXIMATE SIZE & WEIGHT

- Length: 120 mm / 4.72 in
- Height: 278 mm / 10.94 in
- Weight: 460 g / 1.01 lbs

4. SETTING UP THE HEADSET STAND

1. Connect the headset stand to the USB 3.1 Type A port of your PC.

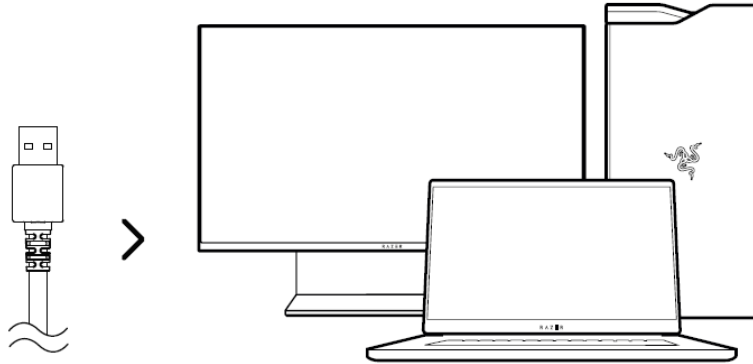


i Although compatible with a USB 2.0 port, it's recommended that you still connect the headset stand to a USB 3.1 port to ensure adequate performance and power is provided to all connected devices.

2. Connect your headset (not included) to the 3.5mm combo port and then place it on the stand.




(Optional) Plug in your device(s) to any of the available USB 3.1 Type A ports as needed.

 3. On your PC, right-click on the sound icon on the system tray, and then select **Open Sound settings**.

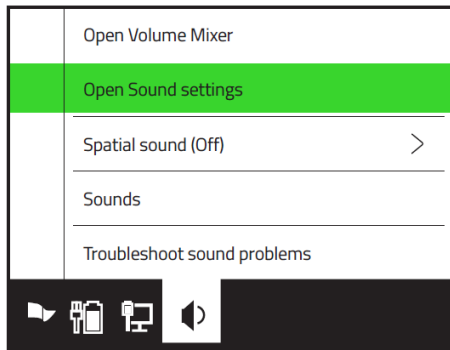

 4. Under **Sound**, set the **Razer Base Station V2 Chroma** as the default **Output** and **Input** device.

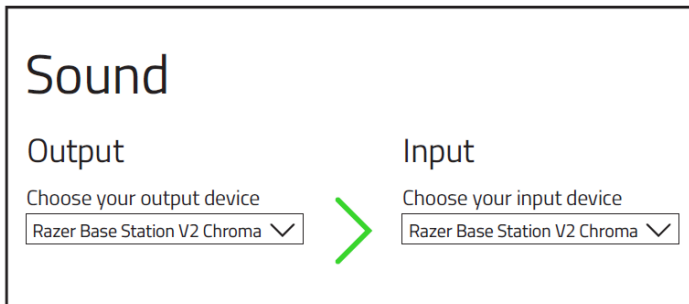

5. Use the Razer Synapse* app to customize your headset stand's lighting for an immersive gaming experience that's truly yours.

**Install Razer Synapse when prompted or download the installer from [razer.com/synapse](https://www.razer.com/synapse).*

ACTIVATE THE 7.1 SURROUND SOUND*

Experience accurate positional sound that's specifically designed for games, movies, and music.

1. Download the 7.1 Surround Sound software from [razer.com/7.1-surround-sound](https://www.razer.com/7.1-surround-sound).
2. Register your product at [razerid.razer.com/products](https://www.razerid.razer.com/products) to get your activation code sent to your email.

**Only available on Windows® 10 64-bit*

5. CUSTOMIZING YOUR HEADSET STAND VIA RAZER SYNAPSE 3

 
i *Internet connection is required for installation, updates and cloud-based features. Registering for a Razer ID account is recommended, but optional. All listed features are subject to change based on the current software version, connected device(s), and supported apps and software.*

SYNAPSE TAB

The Synapse tab is your default tab when you first launch Razer Synapse. This tab allows you to navigate the Dashboard subtab.


Dashboard

The Dashboard subtab is an overview of your Razer Synapse where you can access all your Razer devices, modules, and online services.

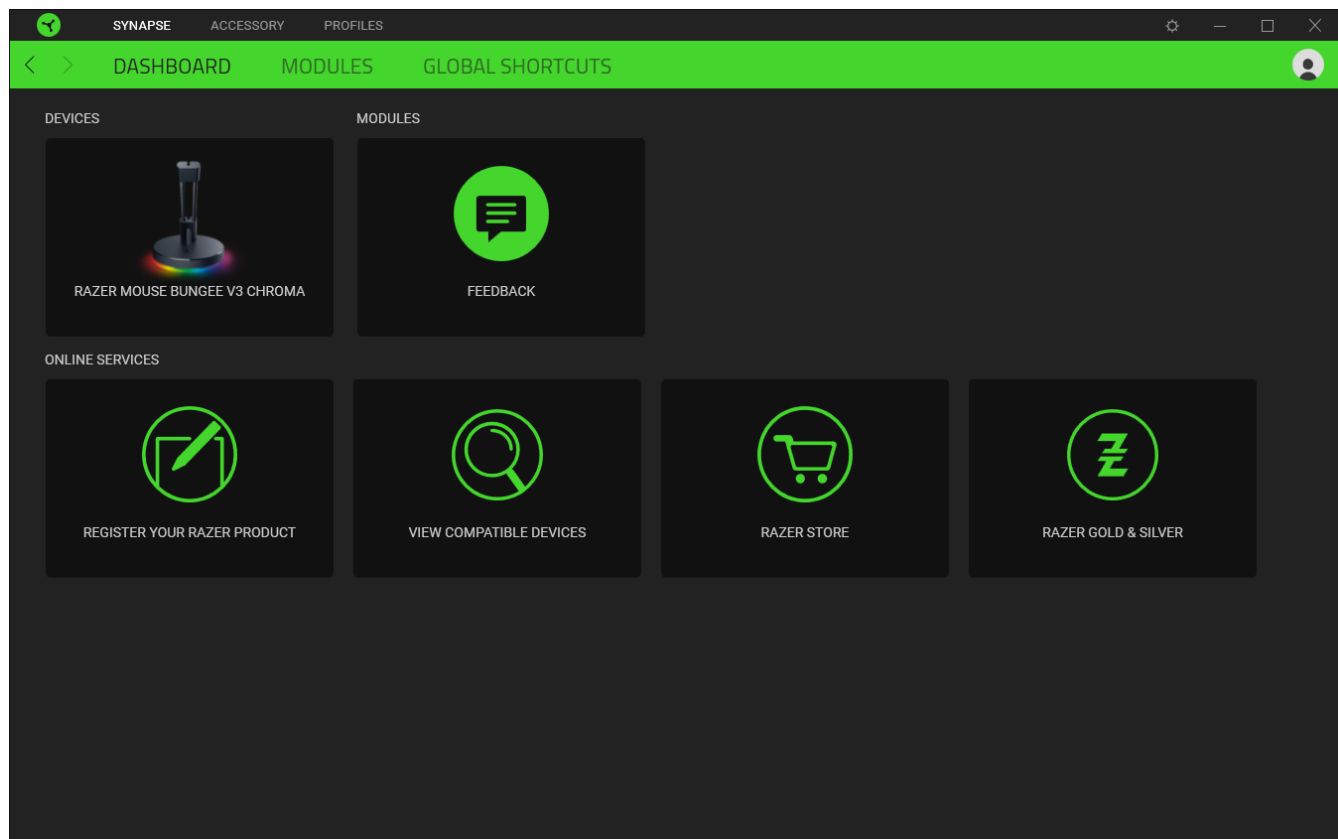

Modules

 
The Modules subtab displays all installed and available modules for installation.

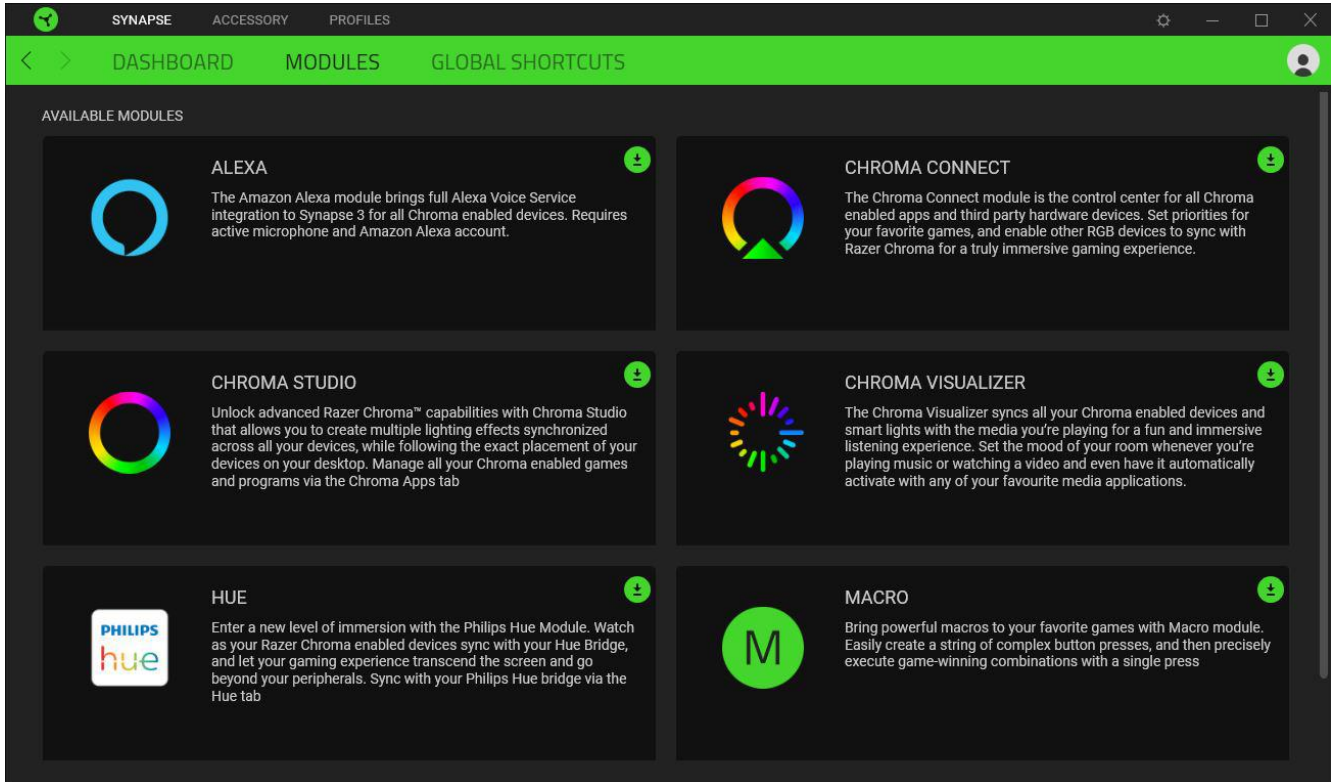

Global Shortcuts

Bind operations or Razer Synapse functions to custom key-combinations from any Razer Synapse-enabled device inputs which apply across all device profiles. [Learn more about Profiles](#)

 ! *Only Razer Synapse-enabled device inputs will be recognized.*

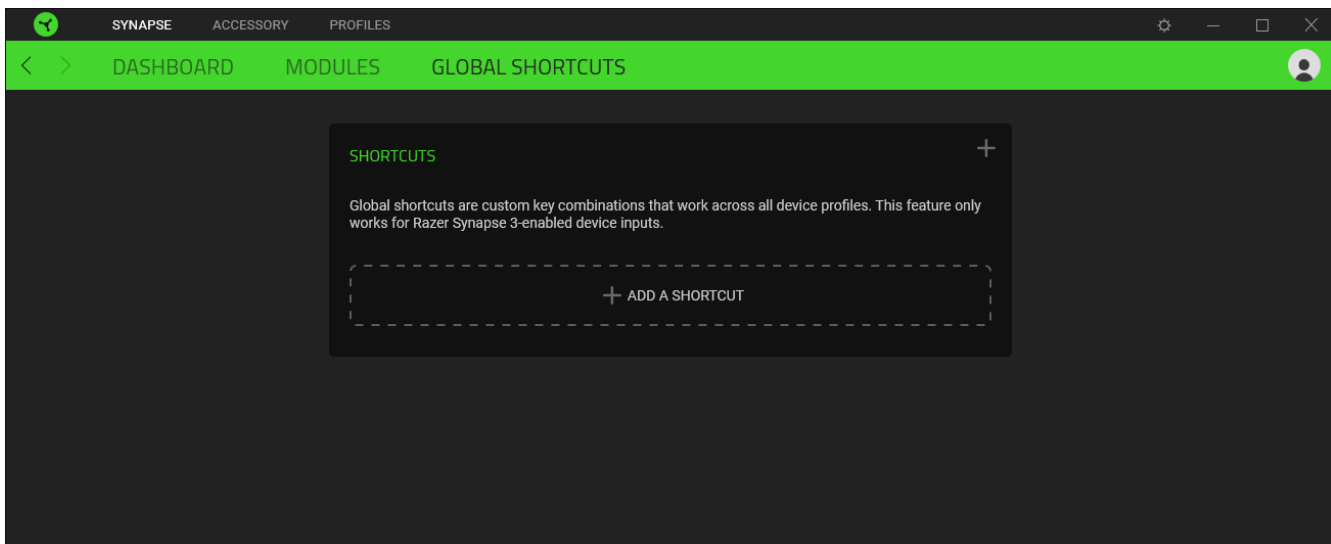


ACCESSORY TAB

The Accessory tab is the main tab for your Razer Base Station V2 Chroma where you'd be able to adjust its volume and customize its lighting. Changes made under this tab are automatically saved to your system and cloud storage.

Audio

 The Audio subtab allows you to adjust the output volume of your device and even access your system's sound properties.

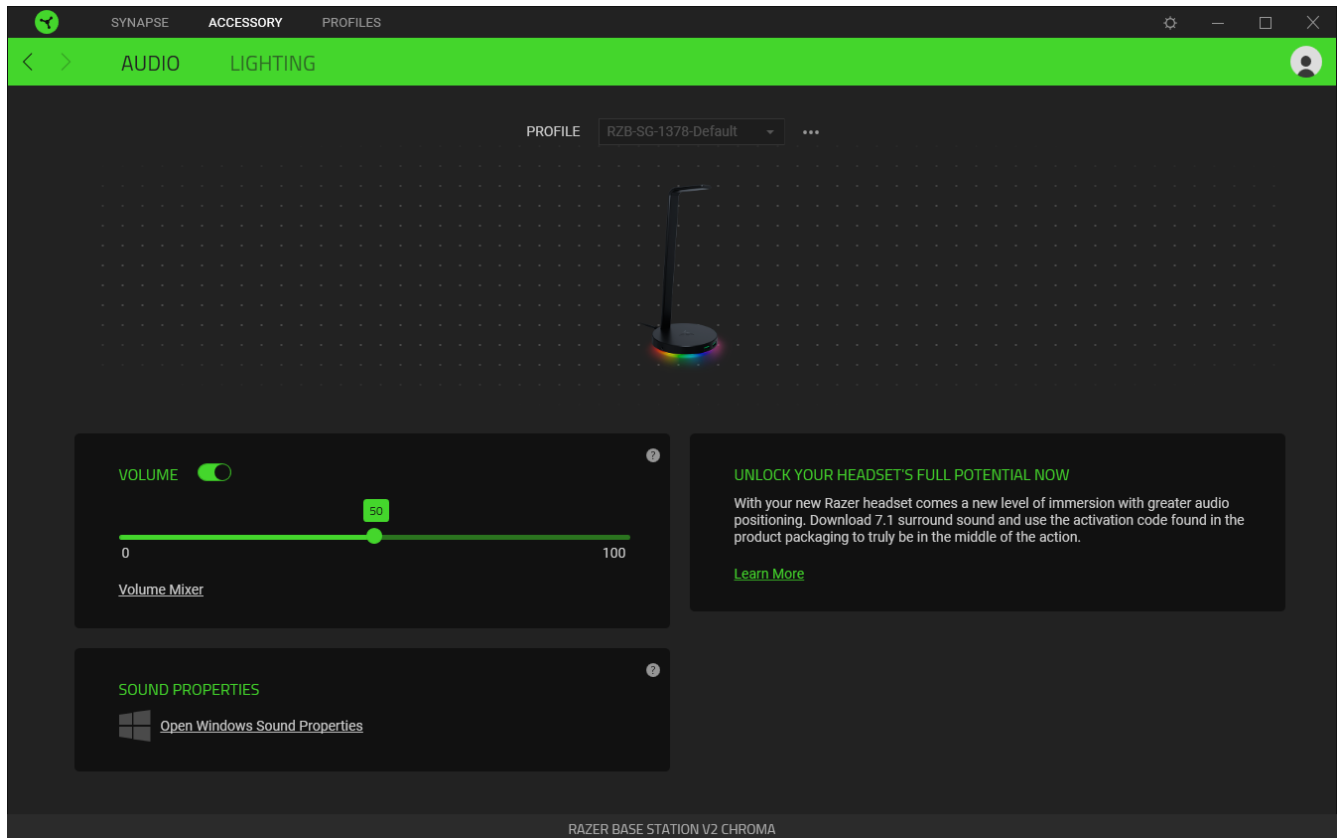

Profile

A Profile is a data storage for keeping all your Razer devices' settings. By default, the profile name is based on your system's name. To add, import, rename, duplicate, export, or delete a profile, simply press the profile's corresponding Miscellaneous button (●●●).

Volume

 
You can mute the device by toggling the Volume option or adjust the audio volume of the device using the slider.

Sound Properties

Access the Windows Sound Properties link to manage the sound settings of your system such as modifying its playback and recording device settings, sound scheme and default communications activity.

Lighting

The Lighting subtab enables you to customize the lighting of your Razer device.

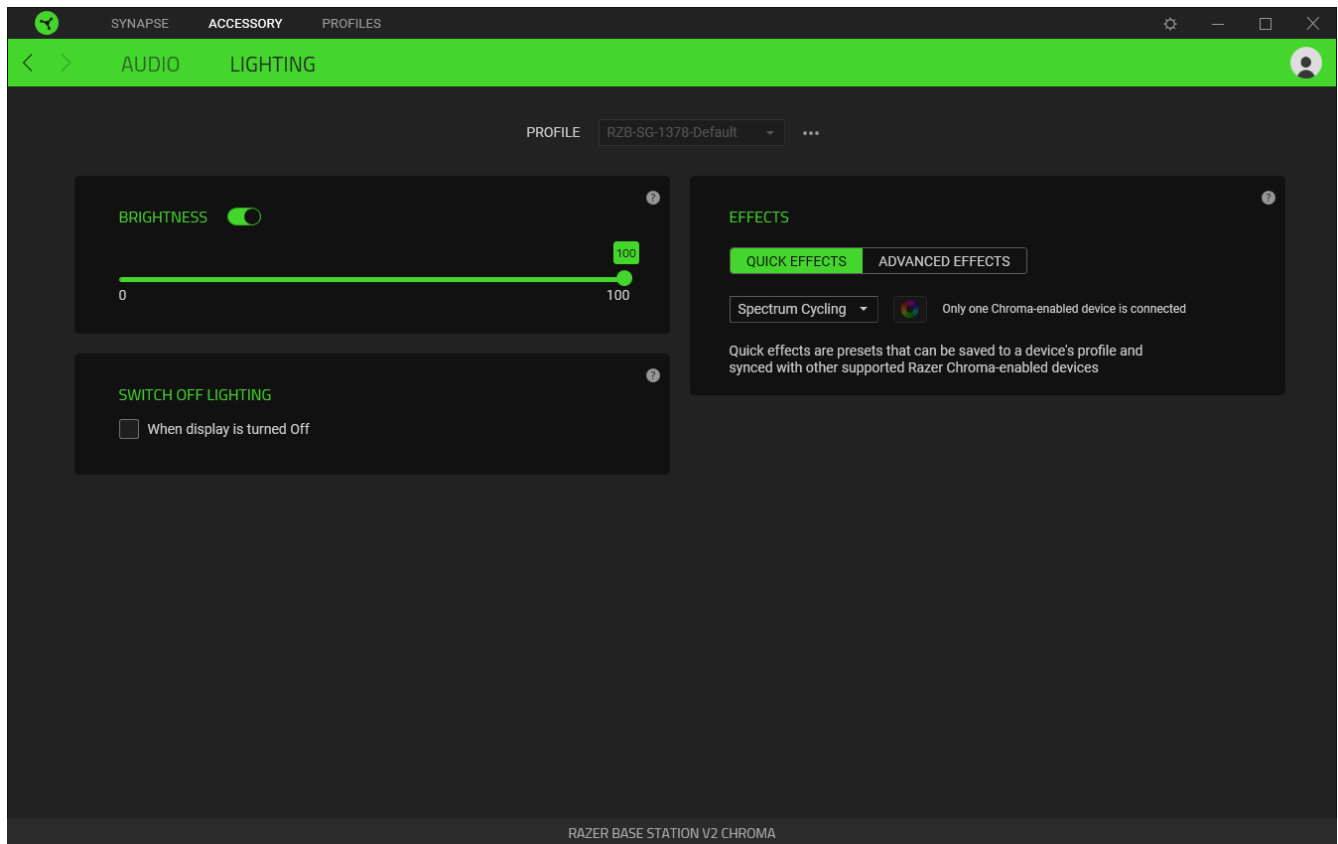

Brightness







You can turn off your Razer device's lighting by toggling the Brightness option or increase/decrease its luminance using the slider.


Switch Off Lighting

Enable this power saving option to disable your device's lighting in response to your system's display turning off.

Quick Effects


A number of quick effects can be selected and applied to your device's lighting, as listed here:

	Name	Description	How to set up
	Audio meter	The device will light up according to the audio level with a default spectrum of colors	Select a Color Boost level
	Breathing	The lighting will fade in and out of the selected color(s)	Select up to 2 colors or randomize colors
	Spectrum cycling	The lighting will cycle between 16.8 million colors indefinitely	No further customization required
	Starlight	Each LED will have a chance of fading in and out at a random time and duration	Select up to 2 colors or randomize colors and select a duration
	Static	The device will remain lit in the selected color	Select a color
	Wave	The lighting will scroll in the direction selected	Select either clockwise or counter-clockwise wave direction

If you have other supported Razer Chroma-enabled devices, you can synchronize their quick effects with your Razer device by clicking the Chroma Sync button ().

 *Only devices that support the selected lighting effect will synchronize.*

 Advanced Effects


The Advanced Effects option allows you to choose a Chroma Effect you want to use on your Razer Chroma-enabled device. To start making your own Chroma Effect, simply press the Chroma Studio button ().




PROFILES TAB

The Profiles tab is a convenient way of managing all your profiles and linking them to your games and applications.

 Devices

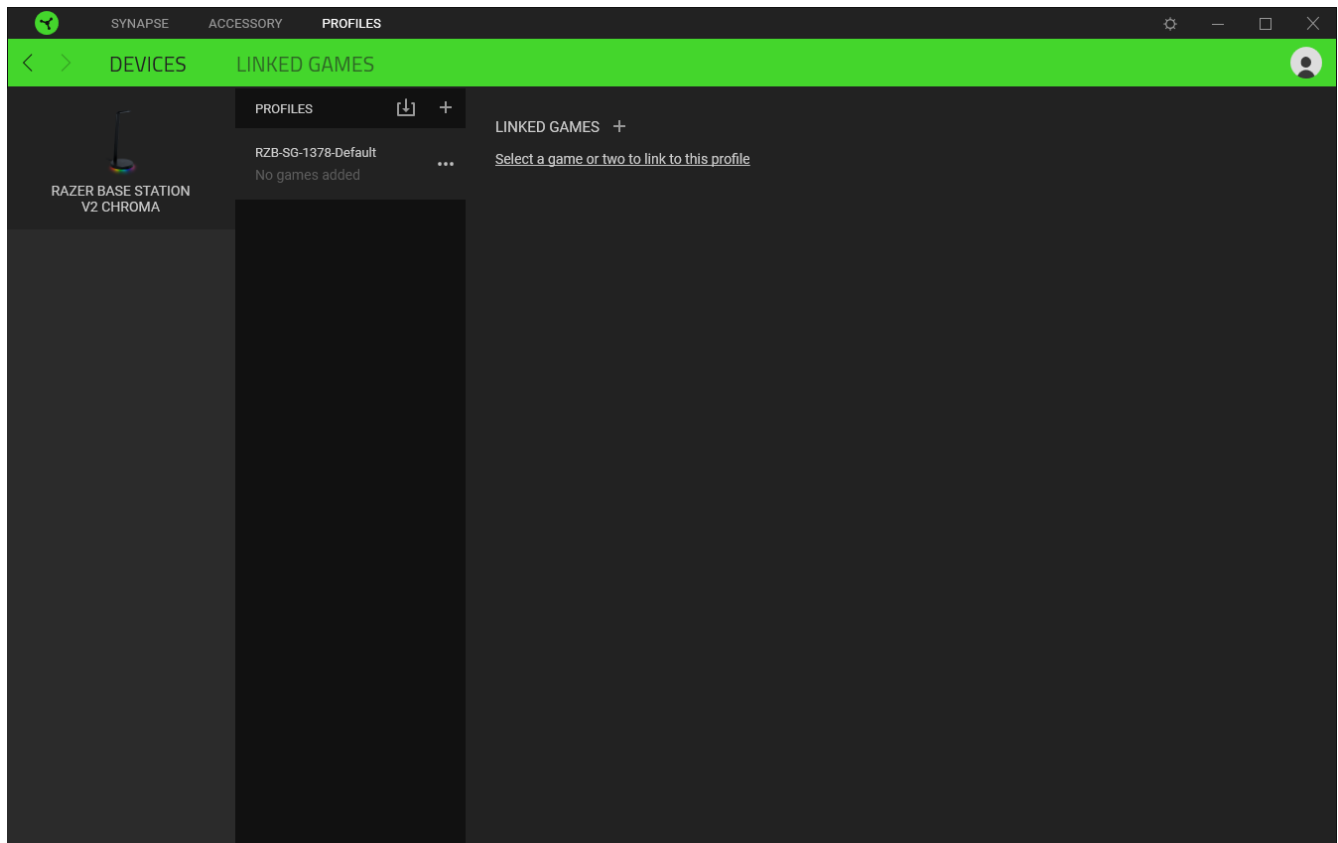
View which games are linked to each device's profiles or which Chroma Effect is linked to specific games using the Devices subtab.



You can import Profiles from your computer or from the cloud through the import button () or create new profiles within the selected device using the add button (). To rename, duplicate, export, or delete a profile, simply press the Miscellaneous button (). Each profile can be set to automatically activate when you run an application using the Linked Games option.

Linked Games

 
The Linked Games subtab gives you the flexibility to add games, view devices that are linked to games, or search for added games. You can also sort games based on alphabetical order, last played, or most played. Added games will still be listed here even if it is not linked to a Razer device.

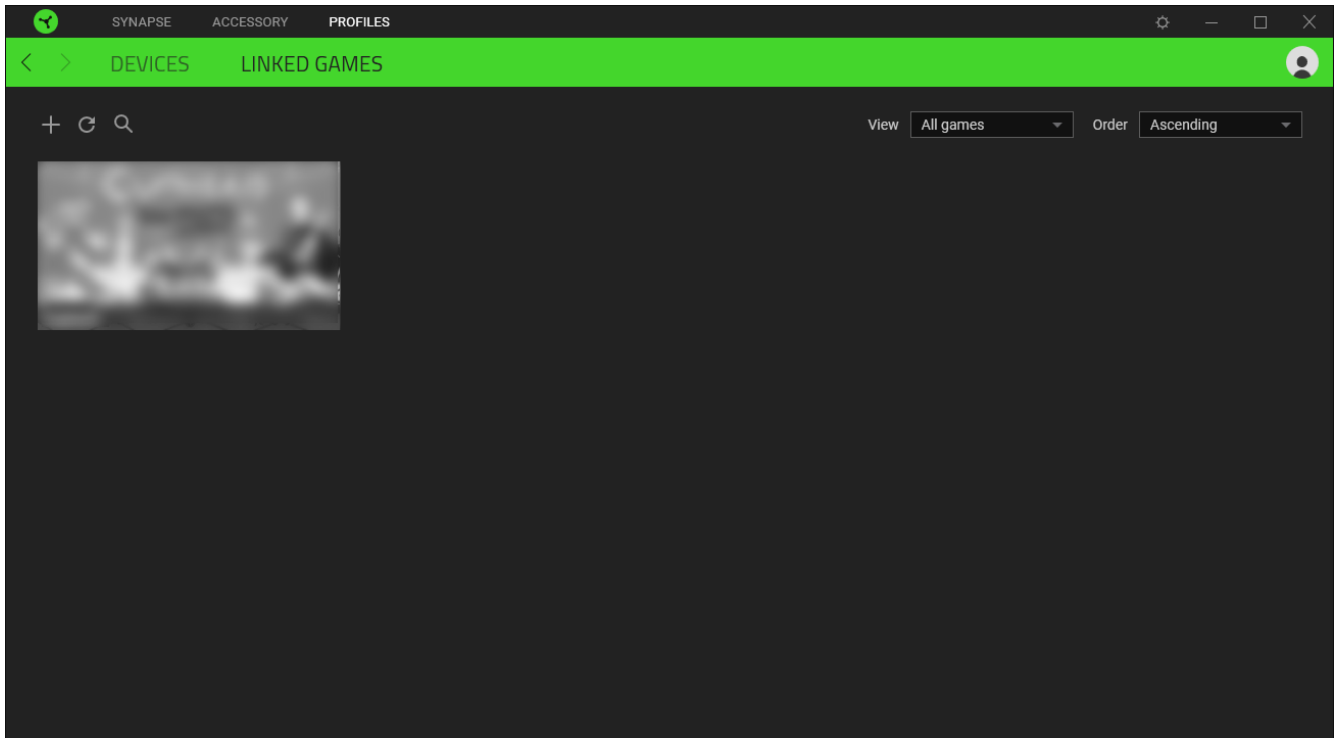

To link games to connected Razer devices or Chroma Effects, simply click on any game from the list, and then click **Select a device and its profile to launch automatically during gameplay** to select the Razer device or Chroma Effect it will link with. Once linked, you may click on the Miscellaneous button (●●●) of the corresponding Chroma Effect or device to select a specific Chroma Effect or profile.

SETTINGS WINDOW

 The Settings window, accessible by clicking the (⚙️) button on Razer Synapse, enables you to configure the startup behavior and display language of Razer Synapse, view the master guides of each connected Razer device, or perform factory reset on any connected Razer device.

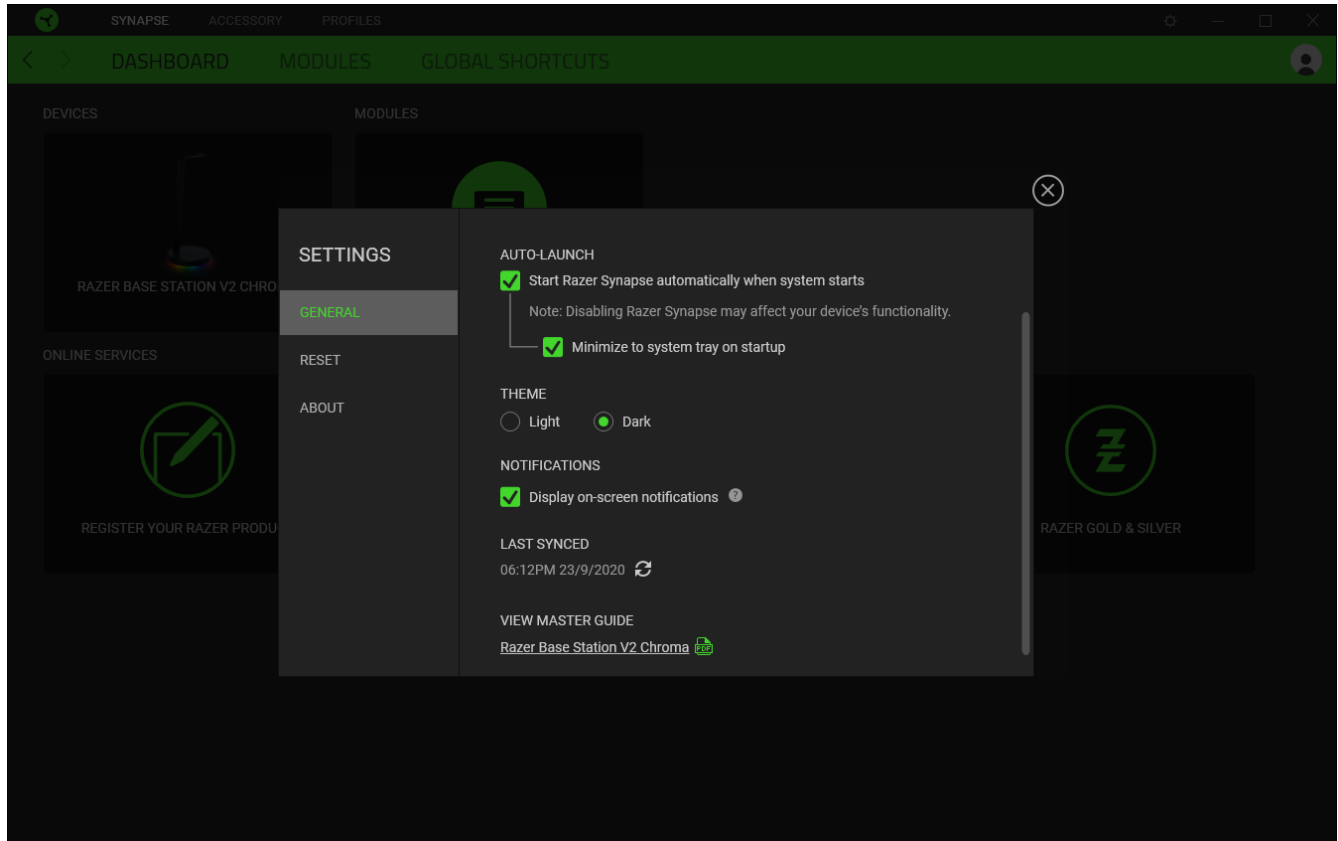

General tab

The default tab of the Settings window. The General tab enables you to change the software's display language, start-up behavior, display theme, and on-screen notifications display. You may also manually sync your profiles to the cloud (↻) or view the master guide of all connected Razer devices and installed modules.

Reset tab

The Reset tab allows you to perform a factory reset on all connected Razer devices with on-board memory and/or reset Razer Synapse tutorials to acquaint yourself again with Razer Synapse's new features on its next launch.



By resetting a Razer device, all profiles stored on the selected device's on-board memory will be erased.

About tab

The About tab displays brief software information, copyright statement and provides relevant links for its terms of use. You may also use this tab to check for software updates, or as a quick access to Razer's social communities.

6. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

To achieve maximum safety while using your Razer Base Station V2 Chroma, we suggest that you adopt the following guidelines:

Should you have trouble using the wireless charger properly and troubleshooting does not work, unplug the charger and contact the Razer hotline or go to support.razer.com for support. Don't attempt to service or fix the charger yourself at any time.

Don't take apart the device and don't attempt to operate it under abnormal current loads. Doing so will void your warranty.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

Listening to excessively loud volumes over extended periods of time can damage your hearing. Furthermore, legislation of certain countries permits a maximum sound level of 86db to affect your hearing for 8 hours a day. We therefore recommend that you reduce the volume to a comfortable level when listening for prolonged periods of time. Please, take good care of your hearing.

MAINTENANCE AND USE

The Razer Base Station V2 Chroma requires minimum maintenance to keep it in optimum condition. Once a month, we recommend you unplug it from your computer, remove all connected devices (if any), and gently clean it using a soft cloth or cotton swab to prevent dirt buildup. Don't use soap or harsh cleaning agents.

7. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2020 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, “For Gamers. By Gamers.”, and “Powered by Razer Chroma” logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks and trade names are the property of their respective owners and other company and product names mentioned herein may be trademarks of their respective companies.

Windows and the Windows logo are trademarks or registered trademarks of the Microsoft group of companies.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Base Station V2 Chroma (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit [razer.com/warranty](https://www.razer.com/warranty).

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.