



MG41/41E Installation Guide

By Unni Rajagopalan

About this Guide

This guide provides instruction on how to install and configure your MG41/MG41E series device. This guide also provides mounting instructions and limited troubleshooting procedures. For more MX device installation guides, refer to the [MX installation guides section](#) on our documentation website.

Product Overview

Connectivity is critical for any organization that depends on reliable internet access in order to function. Wireless WAN connectivity options, such as cellular networks, serve as a reliable backup internet uplink in the event of a primary uplink failure.


The gigabit capable MG41/MG41E cellular gateway simplifies the path to wireless WAN connectivity and makes cellular a viable uplink option for many networks. The MG41/MG41E acts as a gateway to cellular networks by converting LTE signal from a cellular provider to an Ethernet handoff, which can be used as an internet uplink for a variety of use-cases.

Product View and Physical Features


Front Panel




Back Panel

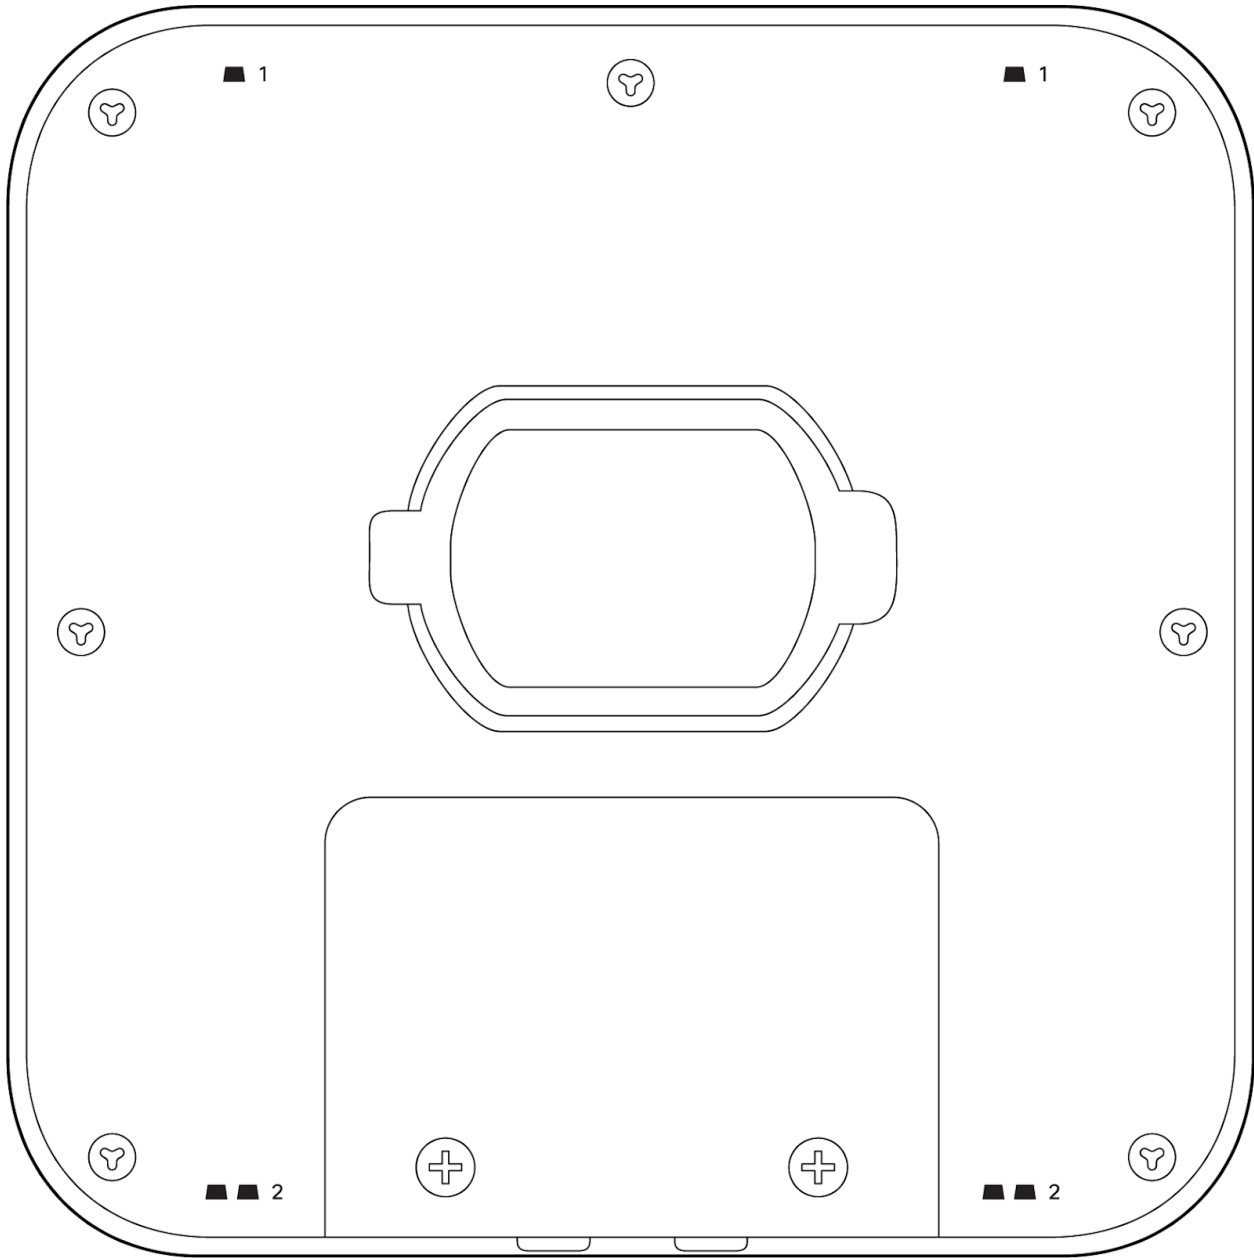

Side Panels

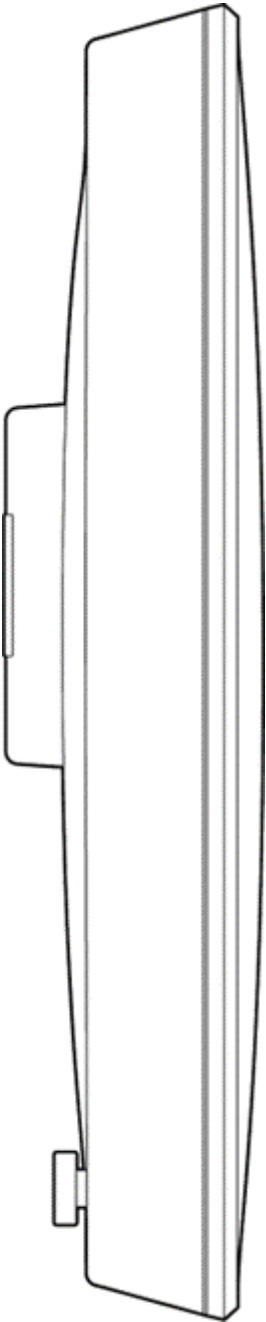

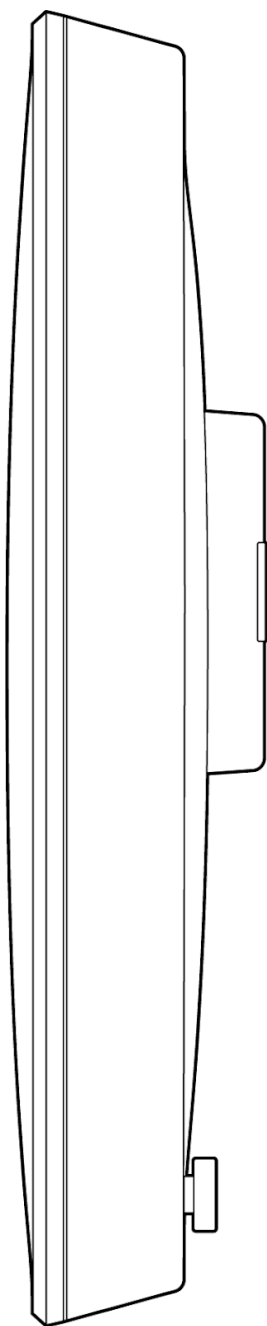

Status Indicator

The MG series of devices use an LED to inform the user of the device's status. LED patterns and their meanings are described below.

LED Status	Meaning
Solid orange	Power is applied but the appliance is not connected to the Meraki Dashboard
Rainbow Colors	The appliance is attempting to connect to Meraki Dashboard

Flashing White	Firmware upgrade in progress
Solid White	Fully operational/connected to LAN
Solid Purple	Fully operational/connected to cellular network

Ethernet Port

The MG41/MG41E features two Ethernet ports. Port 1 can be reconfigured to [Safe Mode for troubleshooting](#) and diagnostics. Brand new units will ship with both ports configured as LAN, which is the default, normal operating mode.

The port labeled “PoE” (Port 1 & 2) accepts 802.3af power.



AC Adapter Power Port

In the event that the MG cannot be powered by POE, the MG has an AC adapter port that can be used to power it up with the 30watt (12V 2.5A) [AC adapter](#) (sold separately).

Factory Reset

To reset an MG cellular gateway to the factory defaults, press the button labeled 'Reset' on the back panel of the appliance for at least 10 seconds. This will clear all the local configuration settings done via the local status page. Please be aware that after resetting the unit, the local status page requires reconfiguration, and the device will need to download its latest configuration from the dashboard cloud. Please be patient as this could take up to 5 - 10 minutes.

Package Contents

Model	Contents
MG41	1 x MG41-HW 1 x Mounting plate and screw set
MG41E	1 x MG41E-HW 1 x Mounting plate and screw set 4 x dipole antennas



Note: Non-Meraki antennas are not supported. The socket is a reversed RP-SMA that is designed to detect the official MG smart dipole antennas and smart patch antenna. Usage of non-Meraki accessories may damage the MG and degrade performance. The Cisco Meraki antennas are designed for the maximum allowable gain without exceeding the EIRP for local regulatory domains on their supported bands.

Safety and Warnings

These operations are to be taken with respect to all local laws. Please take the following into consideration for safe operation:

- Power off the unit before you begin. Read the installation instructions before connecting the system to a power source.
- Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.
- Read the mounting instructions carefully before beginning installation. Failure to use the correct hardware or to follow the correct procedures could result in a hazardous situation to people and damage to the system.
- This product relies on the building's installation for short-circuit (over current) protection. Ensure that the protective device is rated not greater than: 15 A, 125 Vac, or 10A, 240 Vac.
- Please only power the device with the provided power cables to ensure regulatory compliance.

Pre-install Preparation

You should complete the following steps before going on-site to perform an installation.

Configure the Dashboard Network

The following is a brief overview only of the steps required to add an MG41/MG41E to your network. For detailed instructions about creating, configuring and managing Meraki networks, refer to our [online documentation portal](#).

1. Login to <http://dashboard.meraki.com> and select the intended organization. If this is your first time using the Meraki dashboard, [create a new account](#).
2. [Claim the device](#) to your organization inventory. You will need your Meraki order number (found on your invoice) or the serial number of each MG, which looks like **Qxxx-xxxx-xxxx**, and is found on the bottom of the unit. You will also need to [claim your Enterprise license](#) key, which you should have received via email.
3. Find or [create the network](#) to which you plan to add your MG41/MG41E.
4. [Add your MG41/MG41E to the network](#).

Check and Set Firmware

To ensure your MG41/MG41E performs optimally immediately following installation, it is recommended that you facilitate a firmware upgrade prior to using your MG41/MG41E.




1. Insert an active nano (4FF) SIM card/cards into the SIM trays before powering up the device.
2. Connect your MG41/MG41E to power.
3. The MG41/MG41E will turn on and the power LED will glow solid orange until it comes online.
4. If the unit requires a firmware upgrade after coming online, the power LED will begin blinking white until the upgrade is complete, at which point the LED will turn solid white. You should allow at least a few minutes for the firmware upgrade to complete, depending on the speed of your internet connection.


Check and Configure Upstream Firewall Settings

If you are testing [safe mode](#) on port 1 and have an upstream firewall in place, the firewall must allow outgoing connections on particular ports to specific IP addresses. The most current list of outbound ports and IP addresses for your organization can be found on the **Help > Firewall Information page** in your dashboard.

Collect Tools

You will need the following tools to perform an installation:

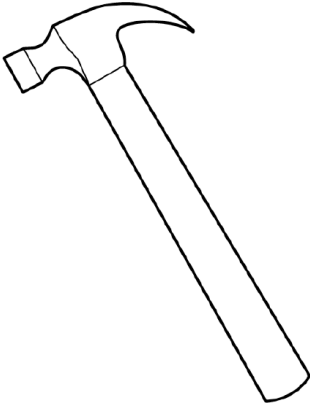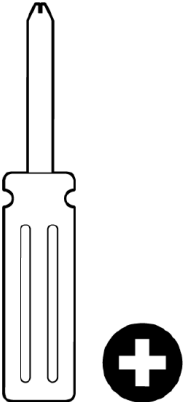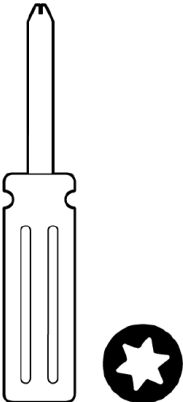


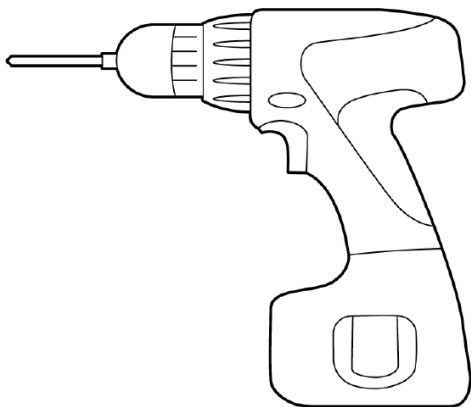


T8 Torx screwdriver, Phillips screwdriver, Hammer, Drill with 1/4" (6.3mm) bits

Collect Additional Hardware for Installation

You will need the following hardware to perform an installation:



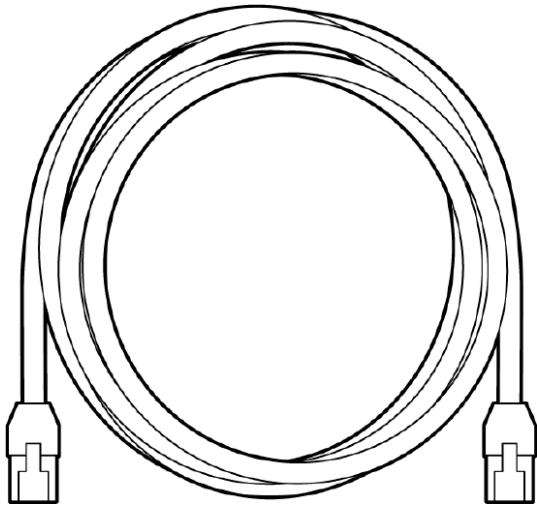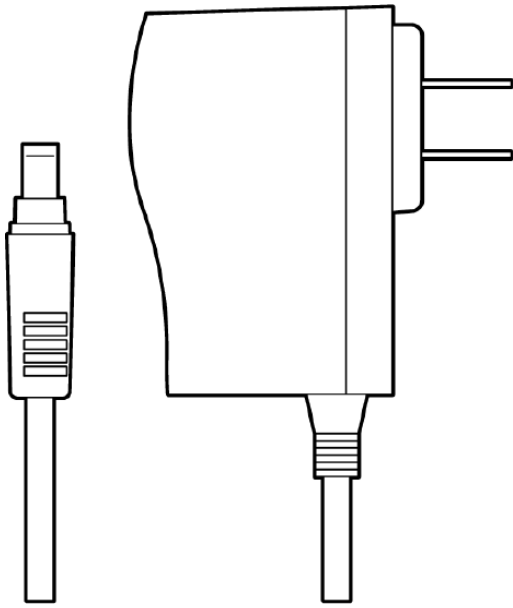

802.3af PoE source (either PoE switch or Meraki 802.3af PoE injector), AC adapter, Network cables RJ45 connectors long enough for your particular mounting location

Installation Instructions


Mounting Hardware




The supplied wall screws and anchors allow you to mount the appliance on a drywall surface, either vertically or horizontally. For mounting on drywall, use a 1/4-inch drill bit, then insert the plastic and screw assemblies.

- For mounting on wood or a similar surface, use only the screws.
 - Allow the heads of the screws to stick out far enough to be inserted securely into the back of the MG.
-



Plan Ahead: When mounting the MG cellular gateway in hard to reach areas, it is recommended that Ethernet cables are run to both ports as a redundant method to access both ports in the case of physical failure of a port or cable.

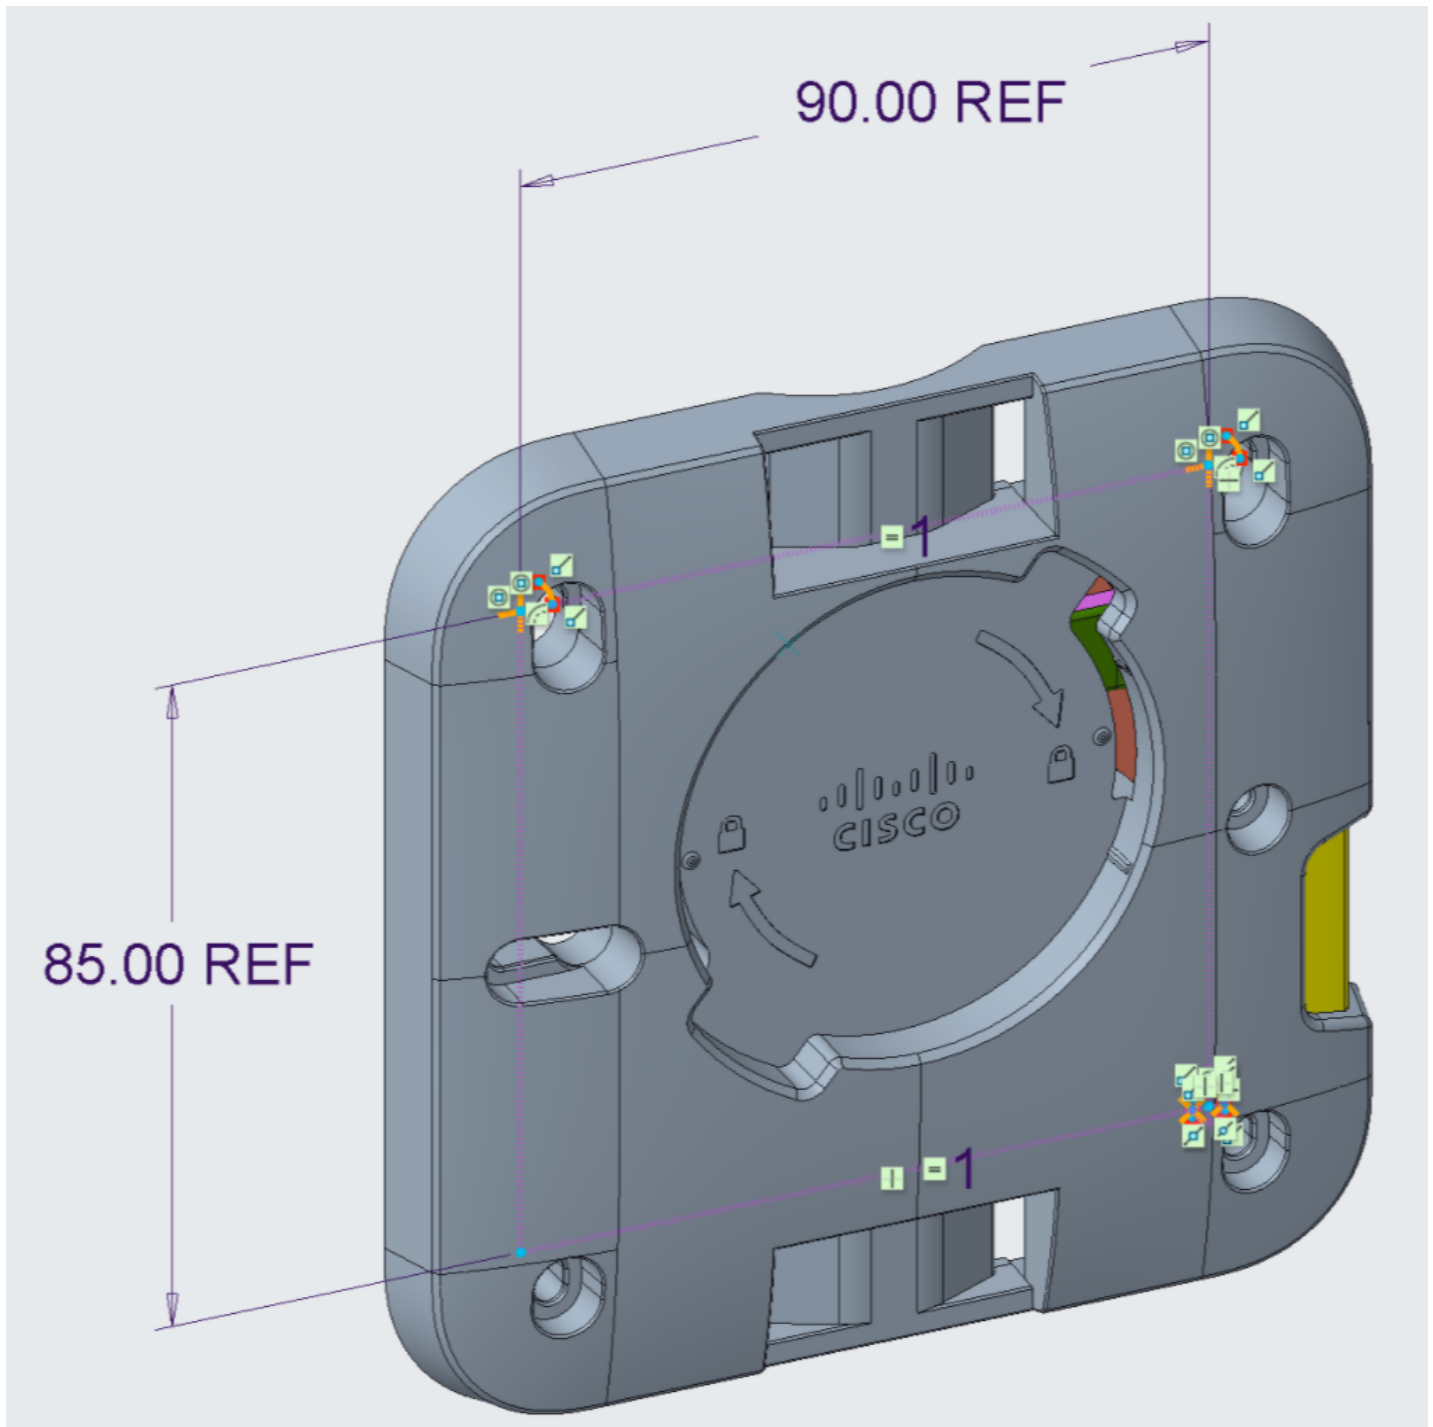

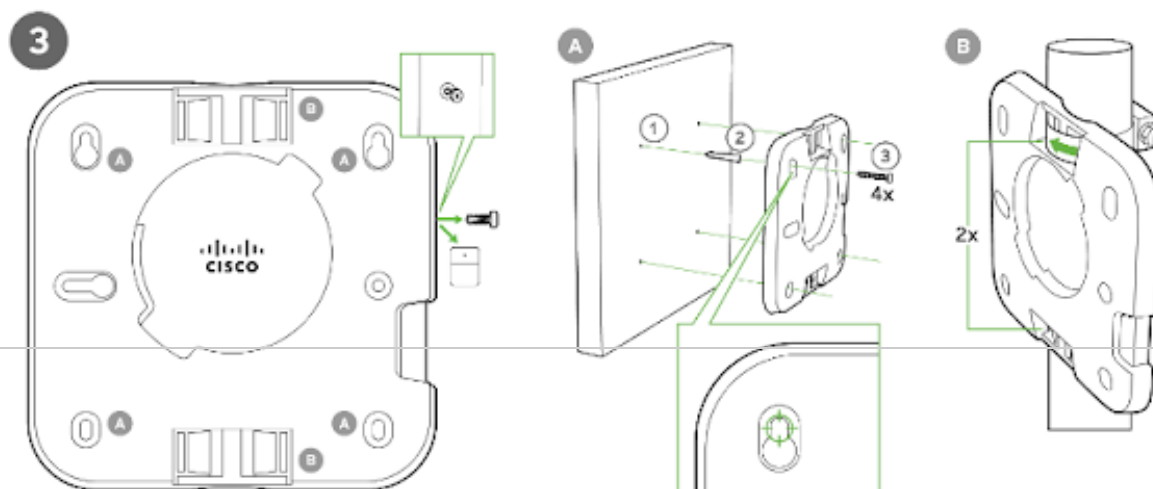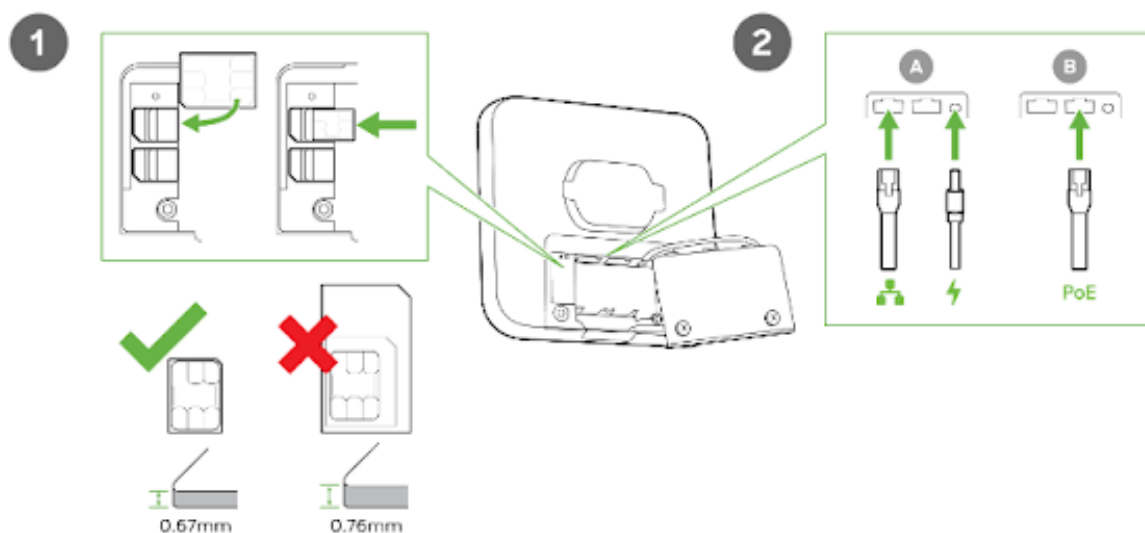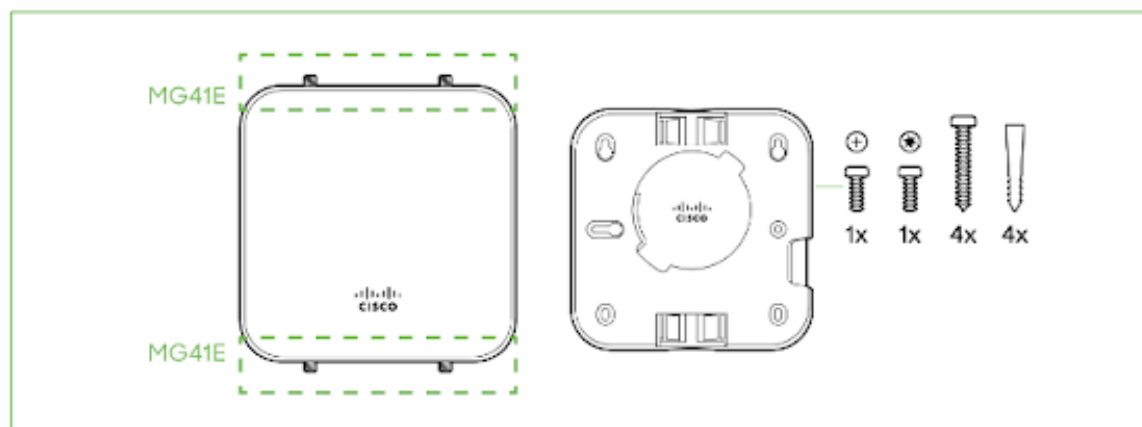

Connecting to WAN

All Meraki MG devices must have an IP address. This section describes how to configure the WAN interface before you deploy it. A local management web service running on the appliance is accessed through a browser running on a client PC. This web service is used for configuring and monitoring basic ISP/WAN connectivity.



Note: All the settings below are accessible only via the [local status page](#).

Setting up Cellular Connection



Warning: To ensure that the client PC is redirected to the local web service in the following steps, you must disable all other network services (ex: wi-fi) on your client machine.

Follow the steps below to configure basic connectivity and other cellular gateway parameters on the MG41/MG41E:

1. Using a client machine such as a laptop, connect directly to LAN interface of the MG.
2. Find the client's IP address and default gateway. Using a browser on the client machine, access the appliance's built-in web service by browsing to mg.meraki.com or the default gateway IP (You do not have to be connected to the Internet to reach this address).
3. Click the Configuration tab under the local status tab. The default credentials are the Serial Number of the device (all upper-case *with* dashes) as the username and a blank password field.
4. Configure additional bearer values like APN if required by your carrier under the Configuration tab.

Configuring Ethernet Ports

To configure physical link settings on the Ethernet ports, click on Ethernet tab. You can enable half duplex, full duplex, and auto-negotiation, as well as set 10 or 100 or 1000-Mbps data rates on Ethernet ports.

Grounding and Surge Protections

Grounding of Outdoor Mounted MG's

It is strongly recommended that all outdoor mounting installations be properly grounded to ensure effective dissipation of high-voltage discharge events, such as lightning strikes, away from network equipment. Proper grounding serves as a pathway for electrical current, similar to how water flows through areas of least resistance, and helps direct harmful electrical surges away from sensitive components. Without proper grounding, there is a risk of the electrical discharge traveling through unprotected conduits, potentially reaching and damaging internal equipment, such as the connected MX.

The MG is made of mostly plastic which helps insulate and not have it targeted by electrostatic discharge (ESD) events. It was tested to IEC 6100-4-2 ESD standards and passed with a rating of up to 30kV of air discharge and up to 30kV of contact discharge.

Electrostatic Discharge (ESD) events, such as lightning strikes, typically target points of least resistance. Since the MG and its patch antenna are primarily made of plastic, these devices are less likely to attract such events. However, we recommend grounding the data and power pathways to protect other connected equipment. This approach is similar to using surge protectors or power conditioners to safeguard MS switches or MX security appliances from power surges.

Proper grounding helps mitigate potential damage from electrical events and ensures the longevity of the equipment.

An MG device mounted outdoors on a pole is classified as a Separated or Safety Extra-Low Voltage (SELV) device. From a circuit board perspective, this means the device is designed to proactively isolate certain sections of the board to prevent operational issues. While this design offers protection, it does not guarantee the device will always survive a direct lightning strike or other large electrostatic discharge (ESD) events. However, the MG has been equipped with adequate grounding to effectively handle most ESD events.

Surge Protection

Network Signal Surge Protector Arresters are devices that can be installed inline to protect against excess amperage that may enter the cable during an electrostatic discharge (ESD) event. These devices must be properly grounded to effectively protect against ESD-related damage. We recommend following the vendor's guidelines for correct installation and deployment to ensure optimal protection.

Adding a Network Signal Surge Protector Arrester should not have any negative effects, provided that the cabling standards are properly adhered to throughout the run. When correctly implemented, these devices do not impact throughput between the MG and downstream devices.

Basic Troubleshooting

The following steps can be used for troubleshooting basic connectivity issues with your MG:

- MG devices require a valid and active data plan, so make sure the SIM and data plan are active. SIM size for MG41/41E is nano (4FF).
- Some carriers require specific APNs, usernames/passwords. Ensure the values are correct if required.
- Validate signal quality is sufficient by checking the RSRP and RSRQ values on the Connection tab of the [local status page](#).
- Swap the SIM card to the secondary SIM slot from the primary slot (A new unit will treat SIM slot 1 as primary unless changed via dashboard/local status page)
- Try connecting the MG in [Safe Mode](#) and check if it comes online on Dashboard.
- Try a soft reset by pressing the reset button for 1 second to delete a downloaded configuration and reboot the MG.
- Try a factory reset by holding the factory reset button for at least 10 seconds.
- Try switching cables, or testing your cables on another device.

Device power issue

- If device fails to turn on, check the power source to make sure it is adequately supplying power to the MG.
- If there are no LED lights even though there is power at the outlet, check the MG to make sure everything is plugged in properly.
- If device isn't coming after trying both AC adapter and POE, check that the power options also work on other devices in a similar or matching setup.

If you are still experiencing hardware issues, please contact Cisco Meraki Support by logging in to dashboard and using the **Help > Get Help** option at the top of the page, then opening an email case or calling the Meraki Support center using the contact information on that page.

Warranty

MG Warranty coverage periods are as follows:

Product	Warranty Period	Warranty Information
MG41/MG41E	Lifetime	Full lifetime hardware warranty with next-day advanced replacement included. Applies to MG41 and MG41E hardware
MG Accessories	1 Year	The following are considered accessories: Includes mounting kits, antenna, and additional power cords

Additional warranty information can be found on the [Return Policy and Requesting a RMA](#) page of the Cisco Meraki website.

If your Cisco Meraki device fails and the problem cannot be resolved by troubleshooting, contact support to address the issue. Once support determines that the device is in a failed state, they can process an RMA and send out a replacement device free of charge. In most circumstances, the RMA will include a pre-paid shipping label so the faulty equipment can be returned.

 In order to initiate a hardware replacement for non-functioning hardware that is under warranty, you must have access to the original packaging the hardware was shipped in. The original hardware packaging includes device serial number and order information, and may be required for return shipping.

 Meraki MG41 and MG41E devices have been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Support and Additional Information

If issues are encountered with device installation or additional help is required, contact Meraki Support by logging in to dashboard.meraki.com and opening a case by visiting the **Help > Get Help** page.

- The equipment is intended for industrial or other commercial activities.
- The equipment is used in areas without exposure to harmful and dangerous production factors, unless otherwise specified in the operational documentation and/or on the equipment labeling.
- The equipment is not for domestic use. The equipment is intended for operation without the constant presence of maintenance personnel.
- The equipment is subject to installation and maintenance by specialists with the appropriate qualifications, sufficient specialized knowledge, and skills.
- Rules and conditions for the sale of equipment are determined by the terms of contracts concluded by Cisco or authorized Cisco partners with equipment buyers.
- Disposal of a technical device at the end of its service life should be carried out in accordance with the requirements of all state regulations and laws.
- Do not throw in the device with household waste. The technical equipment is subject to storage and disposal in accordance with the organization's disposal procedure.
- The equipment should be stored in its original packaging in a room protected from atmospheric precipitation. The permissible temperature and humidity ranges during storage are specified in the Operation (Installation) Manual.

- Transportation of equipment should be carried out in the original packaging in covered vehicles by any means of transport. The temperature and humidity during transportation must comply with the permissible established ranges of temperature and humidity during storage (in the off state) specified in the Operation Manual (Installation).

For additional information on Meraki hardware and for other installation guides, please refer to documentation.meraki.com