SAMSUNG

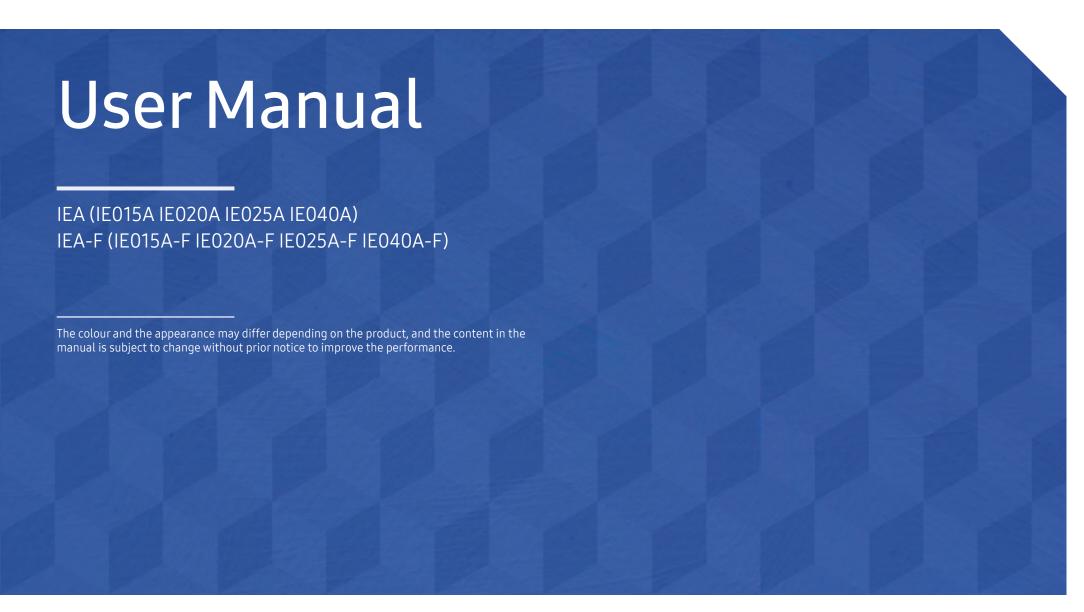


Table of contents

Before Using the Product

Safety Precautions	3
Safety symbols	3
Electricity and Safety	4
Installation	5
Operation	6
Cleaning	7

Preparations

Ports	8
IEA	8
IEA-F	9

Connecting Devices

Precautions when handling the cabinets	10
Installing the cabinets	11
Removing the protective brackets	11
Connecting to cabinets	12
Supported resolutions per installation	13
Connecting the Power Cable	14
Maximum DAISY CHAIN connection	14

Specifications

General	15

Appendix

Responsibility for the Pay Service (Cost to			
Customers)	17		
Not a product defect	17		
A Product damage caused by customer's			
fault	17		
Others	17		
Licence	18		

Chapter 01 Before Using the Product

Safety Precautions

The following safety instructions are to ensure your personal safety and prevent property damage. Please read the following to ensure the proper use of the product.

Safety symbols

Symbol	Name	Meaning	
	Warning	A serious or fatal injury may result if instructions are not followed.	
<u>^</u>	Caution	Personal injury or damage to properties may result if instructions are not followed.	
0	Prohibition	Do NOT attempt.	
0	Instruction	Follow directions.	

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.

À	This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.	\sim	AC voltage: Rated voltage marked with this symbol is AC voltage.
Î	This symbol indicates that this product has included important literature concerning operation and maintenance.	===	DC voltage: Rated voltage marked with this symbol is DC voltage.
	Class II product: This symbol indicates that a safety connection to electrical earth (ground) is not required. If this symbol is not present on a product with a mains lead, the product MUST have a reliable connection to protective earth (ground).	Ai	Caution. Consult instructions for use: This symbol instructs the user to consult the user manual for further safety related information.

Electricity and Safety

Marning

- Do not use a damaged power cord or plug, or a loose power socket.

 An electric shock or fire may result.
- O not use multiple products with a single power socket.
 - Overheated power sockets may cause a fire.
- Do not touch the power plug with wet hands. Otherwise, an electric shock may result.
- Do not bend or pull the power cord with force. Be careful not to leave the power cord under a heavy object.
 - Damage to the cord may result in a fire or electric shock.
- Oo not place the power cord or product near heat sources.
 - A fire or electric shock may result.
- Insert the power plug all the way in so it is not loose.
 - An unsecure connection may cause a fire.
- Connect the power plug to a grounded power socket (type1 insulated devices only).

 An electric shock or injury may result.
- Clean any dust around the pins of the power plug or the power socket with a dry cloth.

 A fire may result.

Caution

occurs.

- O not disconnect the power cord while the product is being used.
 - The product may become damaged by an electric shock.
- Only use the power cord provided with your product by Samsung. Do not use the power cord with other products.
 - A fire or electric shock may result.
- Keep the power socket where the power cord is connected unobstructed.

 The power cord must be disconnected to cut off power to the product when an issue
- Hold the plug when disconnecting the power cord from the power socket.

 An electric shock or fire may result.

Installation



DO NOT PLACE CANDLES, INSECT REPELLANTS OR CIGARETTES ON TOP OF THE PRODUCT. DO NOT INSTALL THE PRODUCT NEAR HEAT SOURCES.

A fire may result.

- Do not install the product in poorly ventilated spaces such as a bookcase or closet.

 An increased internal temperature may cause a fire.
- Do not install the product on an unstable or vibrating surface (insecure shelf, sloped surface, etc.)
 - The product may fall and become damaged and/or cause an injury.
 - Using the product in an area with excess vibration may damage the product or cause a fire.
- Do not expose the product to direct sunlight, heat, or a hot object such as a stove.

 The product lifespan may be reduced or a fire may result.
- O not install the product within the reach of young children.

The product may fall and injure children.

- Edible oil, such as soybean oil, can damage or deform the product. Do not install the product in a kitchen or near a kitchen counter.
- Have a technician install the wall-mount hanger.
 - Installation by an unqualified person can result in an injury.
 - Install the Cabinet using the frame kit provided by the manufacturer.
- Install the product at least 10 cm away from the wall to allow ventilation.

An increased internal temperature may cause a fire.

- Keep the plastic packaging out of the reach of children.
 - Children may suffocate.
- Do not install the product in a vehicle or a place exposed to dust, moisture (water drips, etc.), oil, or smoke.

A fire or electric shock may result.

- Following installation, it is recommended to dehumidify the LED Signage product before use.
 - This helps prevent moisture damage and maintain optimal performance.
 - For product dehumidification, refer to the supplied installation manual.
 The installation manual is available for download at www.samsung.com/displaysolutions.



O not set down the product on its front.

The screen may become damaged.

- When installing the product on a cabinet or shelf, make sure that the bottom edge of the front of the product is not protruding.
 - The product may fall and become damaged and/or cause an injury.
 - Install the product only on cabinets or shelves of the right size.
- Do not drop the product while moving. Product failure or personal injury may result.
- Set down the product gently.

Product failure or personal injury may result.

Installing the product in an unusual place (a place exposed to a lot of fine dust, chemical substances, extreme temperatures or a significant presence of moisture, or a place where the product will operate continuously for an extended period of time) may seriously affect its performance.

Be sure to consult Samsung Customer Service Centre if you want to install the product at such a place.

Operation

Marning

- There is a high voltage inside the product. Never disassemble, repair or modify the product yourself.
 - A fire or electric shock may result.
 - Contact Samsung Customer Service Centre for repairs.
- If the product is dropped or the outer case is damaged, turn off the power switch and disconnect the power cord. Then contact Samsung Customer Service Centre.

Continued use can result in a fire or electric shock.

- On not leave heavy objects or items that children like (toys, sweets, etc.) on top of the product.
 - The product or heavy objects may fall as children try to reach for the toys or sweets resulting in a serious injury.
- O not move the product by pulling the power cord or any cable.
 - Product failure, an electric shock or fire may result from a damaged cable.
- Do not lift or move the product by pulling the power cord or any cable.

 Product failure, an electric shock or fire may result from a damaged cable.
- Ensure the vents are not blocked by tablecloths or curtains.

An increased internal temperature may cause a fire.

- Do not insert metallic objects (chopsticks, coins, hairpins, etc) or objects that burn easily (paper, matches, etc) into the product (via the vent or input/output ports, etc).
 - Be sure to power off the product and disconnect the power cord when water or other foreign substances have entered the product. Then contact Samsung Customer Service Centre.
 - Product failure, an electric shock or fire may result.

- On not place objects containing liquid (vases, pots, bottles, etc) or metallic objects on top of the product.
 - Be sure to power off the product and disconnect the power cord when water or other foreign substances have entered the product. Then contact Samsung Customer Service Centre.
 - Product failure, an electric shock or fire may result.
- Before moving the product, turn off the power switch and disconnect the power cable and all other connected cables.

Damage to the cord may result in a fire or electric shock.

- If the product generates abnormal sounds, a burning smell or smoke, disconnect the power cord immediately and contact Samsung Customer Service Centre.
 - An electric shock or fire may result.
- During a lightning or thunderstorm, power off the product and remove the power cable.

 A fire or electric shock may result.
- Do not drop objects on the product or apply impact.

A fire or electric shock may result.

- If a gas leakage is found, do not touch the product or power plug. Also, ventilate the area immediately.
 - Sparks can cause an explosion or fire.
- ① Do not use or keep combustible spray or an inflammable substance near the product.

 An explosion or fire may result.



- The screen is bright. Keep a sufficient distance from the screen.
 - Continuously looking at the screen up close is bad for your eyes.
 - Recommended viewing distance (ITU-R: Maintain viewing distance of Screen vertical height x approx 3.2) or more.
 e.g. For IE025A: 1080 x 2.5 x 3.2 = a distance of at least 8.6 m is recommended
- O not use humidifiers or stoves around the product.

A fire or electric shock may result.

- Do not touch the screen when the product has been turned on for an extended period of time as it will become hot.
- O not place heavy objects on the product.

Product failure or personal injury may result.

Disconnect the power cord from the power socket if you do not plan on using the product for an extended period of time (vacation, etc).

Dust accumulation combined with heat can cause a fire, electric shock or electric leakage.

Store small accessories out of the reach of children.

Cleaning

The LED structure is revealed on the front of the monitor. Exercise caution to ensure that you do not touch the structure. There is a risk that the LED element may fall or become damaged.

To clean the exterior, use the soft cleaning cloth that came with the monitor to wipe the exterior gently.

(The installation manual is available for download at www.samsung.com/displaysolutions.)


Contact Customer Service Centre if the inside of the product needs cleaning (service fee will be charged).

Chapter 02 Preparations

Ports

IEA

The colour and shape of parts may differ from what is shown. Specifications are subject to change without notice to improve quality.

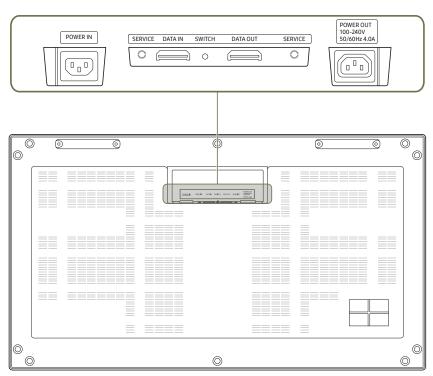


Parts	Description
POWER IN	Connects to an AC power.
SERVICE	Dedicated to service technicians.
DATA IN	Connects to the DATA OUT port on an Interface Gender (I/G) or on the previous cabinet to receive video data.
SWITCH	Enters factory mode (press and hold for 5 seconds) or factory reset mode (press and hold for 10 seconds).
DATA OUT	Connects to the DATA IN port on the next cabinet.
POWER OUT 100-240V~50/60Hz 4.0A	Connects the power cable to the next cabinet to support AC power.

For additional install information, refer to the supplied installation manual.

The installation manual is available for download at www.samsung.com/displaysolutions.

IEA-F

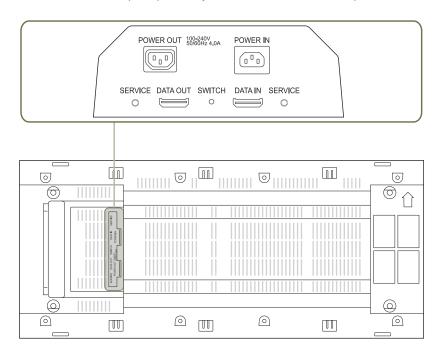

Parts	Description		
POWER OUT 100-240V~50/60Hz 4.0A	Connects the power cable to the next cabinet to support AC power.		
POWER IN	Connects to an AC power.		
SERVICE	Dedicated to service technicians.		
DATA OUT	Connects to the DATA IN port on the next cabinet.		
SWITCH	Enters factory mode (press and hold for 5 seconds) or factory reset mode (press and hold for 10 seconds).		
DATA IN	Connects to the DATA OUT port on an Interface Gender (I/G) or on the previous cabinet to receive video data.		

For additional install information, refer to the supplied installation manual.

The installation manual is available for download at www.samsung.com/displaysolutions.

Chapter 03 **Connecting Devices**

Precautions when handling the cabinets



[Caution to prevent external shock and dropping of the product]

After removing the protective brackets, be careful not to expose the product to external shocks or vibrations. Make sure that the product is not dropped from any height.



[Caution to prevent damage to the LED]

Be careful not to expose the product to vibrations or external shocks when it is lying flat on the floor.



[Caution to prevent damage to the LED]


After removing the protective brackets, do not place the product on the floor with the LED facing down.



[Caution to prevent damage to the LED from static] Do not touch the product without anti-static gloves.

• Be sure to wear anti-static gloves when touching the product.



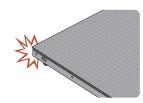

[Caution to prevent damage to corners]

Take extra care to ensure that the corners of a cabinet do not get damaged.


Installing the cabinets

- Make sure you entrust the installation to a professional installation service provider. For further information regarding installation, contact the dealer you purchased the product from.
- Install the cabinet using the frame kit provided by the manufacturer.

 For more information about how to install the frame kit, refer to the user manual that comes with it.
- Samsung shall not be liable for any damage to the product and any injury to the users or others that may be incurred while the users install the product by themselves.

Removing the protective brackets

Remove the safety bracket before proceeding to installation.

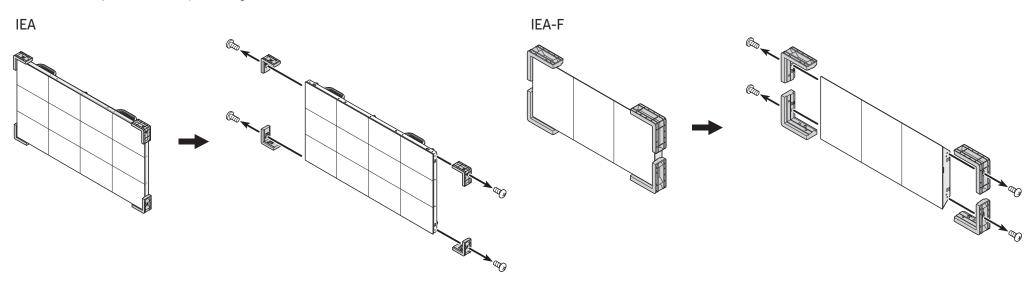


Connecting to cabinets

Connect the S-Box (SNOW-1810U) and the cabinet to the installed cabinet for video signal transmission.

- Before connecting power to the cabinets, connect the Interface Gender (I/G) to the cabinets first.
- Connect only one type of LED pitch cabinets to a single S-Box. Normal picture quality may not be obtained if different types of cabinets are connected. Do NOT use different types of LED pitch cabinets together.

- 1 Connect the HDBT ports on the S-Box and I/G cards using a LAN cable.
- 2 Connect I/G cards and cabinets using OCM cables.
- Use a cable of CAT 6 (*STP type) or higher.*STP: Shielded Twisted Pair
- Connect the HDBT by using a LAN cable that is 15–100 m in length. If you use a cable that is out of specified length range, the signal quality may be unstable.
- Use the LAN cables recommended on the HDBaseT website (http://hdbaset.org/hdbaset-recommended-cables). If a LAN cable that is not recommended is used, the HDBT signals may become unstable.

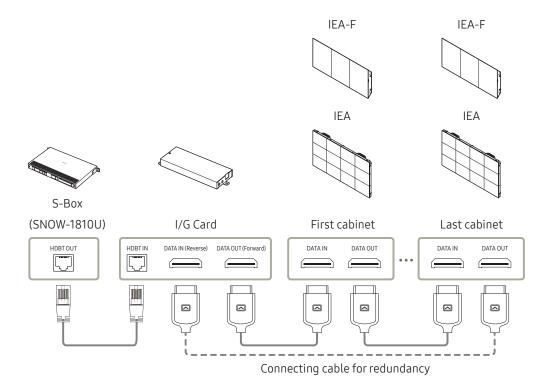

Supported resolutions per installation

IE015A

Resolution	640 x 360	1920 x 1080	3840 x 2160
Quantity of cabinets	1	3 x 3	6 x 6

IE015A-F

Resolution	160 x 360
------------	-----------

IE020A

Resolution	480 x 270	1920 x 1080	3840 x 2160
Quantity of cabinets	1	4 x 4	8 x 8

IE020A-F

Resolution	120 x 270
------------	-----------

IE025A

Resolution	384 x 216	1920 x 1080	3840 x 2160		
Quantity of cabinets	1	5 x 5	10 x 10		

IE025A-F

Resolution	96 x 216
------------	----------

IE040A

Resolution	240 x 135	1920 x 1080	3840 x 2160		
Quantity of cabinets	1	8 x 8	16 x 16		

IE040A-F

Resolution	60 x 135

One S-Box (SNOW-1810U) supports up to UHD resolution because it has four built-in HDBT OUT ports. To enjoy resolutions that exceed UHD resolution, you need to add S-Box (SNOW-1810U) to the configuration.

Connecting the Power Cable


- Connect the power cable after all cables are connected.
- Before connecting external devices, be sure to disconnect the power cable.

Maximum DAISY CHAIN connection

Model Name		Operating voltage			
		110V	220V		
IEA —	IE015A IE020A IE025A IE040A	3	6		
	IE015A-F IE020A-F IE025A-F IE040A-F	10	20		

Precautions when connecting power

- In case of powering IEA and IEA-F together, adjust cabinet number so that total Power consumption is under 600W for 110V, 1000W for 220V.
- Exceeding the recommended maximum number of devices may produce overvoltage, causing the circuit breaker to trip down or the product to be damaged. Make sure that the number of connected devices does not exceed the recommended maximum number.
- Samsung is not liable for any problems incurred by connecting devices that exceed the recommended maximum number.
- The label info which is attached behind product shows rated power of cabinet and rated current of outlet.

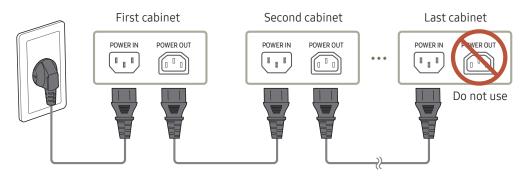

- Transfer power by daisy chain with extension power cable.
- Do not use POWER OUT socket of last Cabinet.

Chapter 04 Specifications

General

Model Name		IE015A	IE015A-F	IE020A	IE020A-F	IE025A	IE025A-F	IE040A	IE040A-F	
	Refresh rate	3840Hz								
	Pixel Pitch	1.5	mm	2.0	2.0 mm		2.5 mm		4.0 mm	
	LED pixel configuration	3 in 1 (RGB)								
Cabinet	LED pixel size (W x H)	1.2 mm x 1.2 mm			2.1 mm x 2.1 mm					
	Pixels (Row x Column)	640 x 360 pixels	160 x 360 pixels	480 x 270 pixels	120 x 270 pixels	384 x 216 pixels	96 x 216 pixels	240 x 135 pixels	60 x 135 pixels	
	Aspect ratio (W:H)	16:9	4:9	16:9	4:9	16:9	4:9	16:9	4:9	
Synchronization	Video Frame rate	50/60Hz								
Power Supply AC100-240V~ 50/60Hz Refer to the label at the back of the product as the standard voltage can vary in diff			y in different count	ries.						
Environmental considerations	Operating	Temperature : 0 °C - 40 °C (32 °F - 104 °F) Humidity : 10% - 80%, non-condensing								
	Storage	Temperature : -20 °C - 45 °C (-4 °F - 113 °F) Humidity : 5% - 95%, non-condensing * Applicable before the product package is unpacked.								

- Plug-and-Play
 - This monitor can be installed and used with any Plug-and-Play compatible systems. Two-way data exchange between the monitor and PC system optimises the monitor settings. Monitor installation takes place automatically. However, you can customise the installation settings if desired.
- When cabinets are installed in Pivot configuration, the image quality on the right and left sides may vary depending on the viewing angle.
- For detailed device specifications, visit the Samsung website.

Chapter 05 Appendix

Responsibility for the Pay Service (Cost to Customers)

When the service is requested, in spite of in warranty, we may charge you for a visit from a service technician in the following cases.

Not a product defect

Cleaning of the product, Adjustment, Explanation, Re-installation and etc.

- If a service technician gives instructions on how to use product or simply adjusts options without disassembling product.
- If a defect is caused by external environmental factors (Internet, Antenna, Wired Signal, etc.)
- If a product is reinstalled or devices are connected additionally after installing the purchased product for the first time.
- If a product is reinstalled to move to a different spot or to move to a different house.
- If customer requests instructions on how to use because of another company's product.
- If customer requests instructions on how to use the network or another company's programme.
- If customer requests software installation and setup for the product.
- If a service technician removes/cleans dusts or foreign materials inside of the product.
- If customer requests an installation additionally after purchasing a product through homeshopping or online.

A Product damage caused by customer's fault

Product damage caused by customer's mishandling or wrong repair

If a product damage is caused by;

- External impact or drop.
- Use of supplies or separately sold product unspecified by Samsung.
- Repair from a person besides an engineer of outsourcing service company or partner of Samsung Electronics Co., Ltd.
- Remodeling or repairing the product by customer.
- Using it with incorrect voltage or non-authorised electrical connections.
- Not following the "cautions" in User Manual.

Others

- If product fails by natural disaster. (lightning, fire, earthquake, flood damage, etc)
- If consumable components are all used up. (Battery, Toner, Fluorescent lights, Head, Vibrator, Lamp, Filter, Ribbon, etc.)
- If customer requests a service in case the product has no defect, service fee may be charged. So please read User Manual first.

Licence

Open Source Licence Notice

Some software components of this product incorporate source code covered under the GNU General Public Licence (GPL), the GNU Lesser General Public Licence (LGPL) etc.

You may obtain the complete Corresponding Source code from us for a period of three years after our last shipment of this product.

If you want to obtain the complete Corresponding Source code in the physical medium such as CD-ROM, the cost of physically performing source distribution may be charged.

You may find a copy of the source at following website.

http://opensource.samsung.com

http://software-dl.ti.com/processor-sdk-linux/esd/AM335X/latest/exports/software_manifest.htm