

# QuickStart Guide

FortiAP 431F / 433F

# Before you begin

Register your device to access FortiGuard updates, cloud management, firmware upgrades, technical support and warranty coverage.

<https://support.fortinet.com>



This guide covers: FAP-431F, FAP-433F


April 3, 2023


Copyright © 2023 Fortinet, Inc. All rights reserved. Fortinet®, FortiGate®, FortiCare® and FortiGuard®, and certain other marks are registered trademarks of Fortinet, Inc., in the U.S. and other jurisdictions, and other Fortinet names herein may also be registered and/or common law trademarks of Fortinet. All other product or company names may be trademarks of their respective owners. Performance and other metrics contained herein were attained in internal lab tests under ideal conditions, and actual performance and other results may vary. Network variables, different network environments and other conditions may affect performance results. Nothing herein represents any binding commitment by Fortinet, and Fortinet disclaims all warranties, whether express or implied, except to the extent Fortinet enters a binding written contract, signed by Fortinet's General Counsel, with a purchaser that expressly warrants that the identified product will perform according to certain expressly-identified performance metrics and, in such event, only the specific performance metrics expressly identified in such binding written contract shall be binding on Fortinet. For absolute clarity, any such warranty will be limited to performance in the same ideal conditions as in Fortinet's internal lab tests. In no event does Fortinet make any commitment related to future deliverables, features or development, and circumstances may change such that any forward-looking statements herein are not accurate. Fortinet disclaims in full any covenants, representations, and guarantees pursuant hereto, whether express or implied. Fortinet reserves the right to change, modify, transfer, or otherwise revise this publication without notice, and the most current version of the publication shall be applicable.

For Product License Agreement / EULA and Warranty Terms, visit <https://www.fortinet.com/content/dam/fortinet/assets/legal/EULA.pdf>

# The Essentials

## Default Logins

 <https://192.168.1.2>  
Username: **admin**  
Password: **leave blank**

 <http://fortilcloud.com>  
Username: **user-defined**  
Password: **user-defined**

## Fortinet Documents Library

For a detailed Administration Guide, up-to-date Hardware documentation and Reference Manuals, visit <https://docs.fortinet.com/>

## Customer Service

For contracts, licensing, product registration and account management, contact FortiCare Support at <https://www.fortinet.com/support/contact>

## Technical Support

To access our Resource Center, Professional Services and Technical Support Services, visit <https://www.fortinet.com/support>

Thank you for choosing Fortinet

# Contents

**FortiAP 431F / 433F**  
FAP-431\*, FAP-433F\*\*



 
QuickStart Guide




FortiAP Device\*



FortiAP  
Antenna Device\*\*




9/16" Ceiling  
Mounting Bracket

 

15/16" Ceiling  
Mounting Bracket



 8x Mounting Screws  
with 8x Anchors




5x Antennas\*\*  
(2.4/5.0GHz)

# Setup Options

 
Power the FortiAP device with a 802.3 af/at PoE injector, FortiGate PoE port or the optional (not included) 12V 2.5A power adapter.

## FortiLAN Cloud

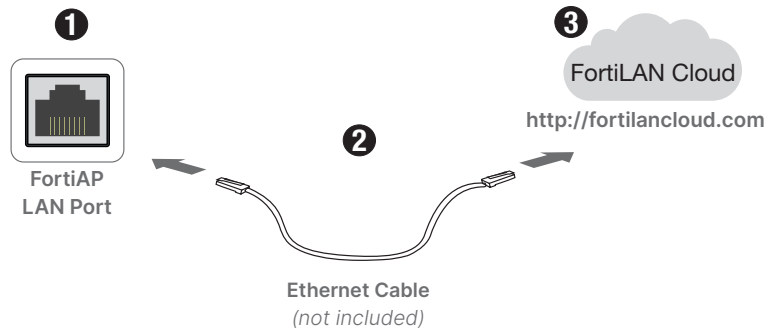


**Note:** Use your FortiCloud credentials to log in, then click Inventory, Import AP Key and enter the Cloud Key on the device sticker

## Direct Connection

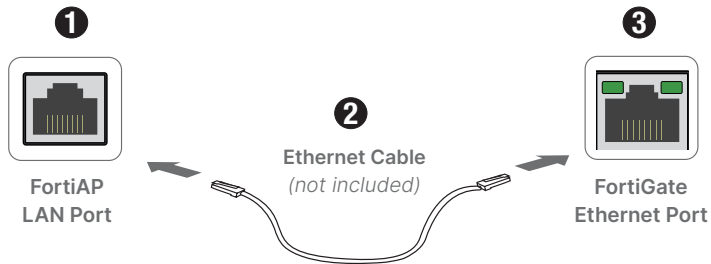 

**Note:** To self-configure, preauthorize the FortiAP on your FortiGate. Otherwise once connected, wait for the FortiAP to appear on the Managed FortiAP page in FortiOS.

## Network Connection

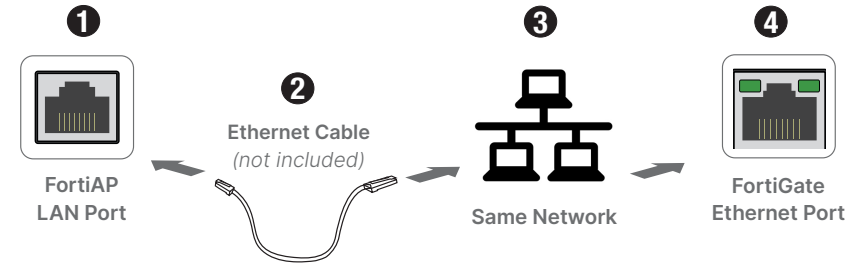 

**Note:** Connect to the FortiAP using 192.168.1.2 with username *admin* and set a password. Specify the FortiGate IP using:


```
cfg -a AC_IPADDR=0.0.0.0  
cfg -c
```

where 0.0.0.0 is the FortiGate IP.


## Bracket Installation

 The FortiAP mounts on a ceiling using the provided T-rail mounting brackets which come in two standard sizes: 1.43cm (9/16in) and 2.38cm (15/16in).

1. Select the bracket for the T-rail size: 1.43cm (9/16in) or 2.38cm (15/16in)
2. With the ports facing you, slide the bracket left to right

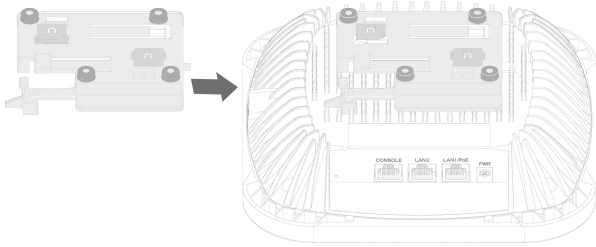


 3. Hold the device against the ceiling T-rail and push until it snaps into place

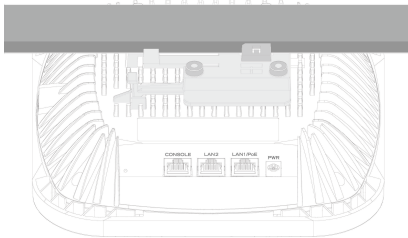

## Antenna Installation (FAP-433F only)

 1. Insert the antenna base firmly into the appropriate antenna mount
2. Securely hand tighten the antenna fastening collar
3. Repeat for the remaining antennas

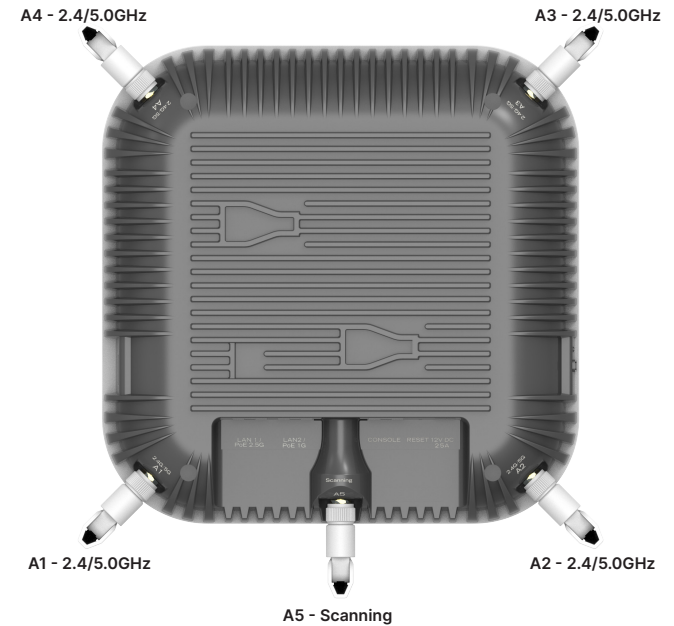

**Note:** Antennas A1 to A4 radiate Radio1/Radio2 at 2.4/5.0GHz and Antenna A5 scans at 2.4/5.0GHz.

# Interfaces - FAP 431F/433F



## 1 LED STATUS

POWER PoE 802.3at or 12VDC 2.5A

- Green: Device is on
- Flashing Green: Booting up
- Amber: Reserved for customizations
- Off: Device is off

LAN1 (RJ45) 2.5 Gbps 802.3at PoE

- Green: Link established
- Flashing Green: Transmitting at 2.5 Gbps
- Flashing Amber: Transmitting at 1 Gbps/100Mbps
- Off: Link not established

LAN2 (RJ45) 1 Gbps 802.3at PoE

- Green: Link established
- Flashing Green: Transmitting at 1 Gbps
- Flashing Amber: Transmitting at 100Mbps
- Off: Link not established

LAN2 (RJ45) 1 Gbps 802.3at PoE

- Green: Link established
- Flashing Green: Transmitting at 1 Gbps
- Flashing Amber: Transmitting at 100Mbps
- Off: Link not established

WiFi (5GHz/2.4GHz) Radio 1 & 2

- Blue: Radio 1 is on
- Flashing Blue: Radio 1 transmitting
- Amber: Radio 2 is on
- Flashing Amber: Radio 2 transmitting
- Green: Radio 1 & 2 are on
- Flashing Green: Radio 1 & 2 transmitting
- Off: Radio 1 & 2 are off

WiFi & BLE (6GHz/5GHz/2.4GHz) Radio 3

- Blue: BLE is on
- Flashing Blue: BLE transmitting
- Amber: Radio 3 is on
- Flashing Amber: Radio 3 transmitting
- Green: BLE & Radio 3 are on
- Flashing Green: BLE & Radio 3 transmitting
- Off: Radio 3 is off

2 LAN2 / POE 1G (RJ-45) 1 Gbps 802.3at PoE Ethernet interface

3 LAN1 / POE 2.5G (RJ-45) 2.5 Gbps 802.3at PoE Ethernet interface

4 CONSOLE (RJ-45) CLI management

5 RESET system reset

6 OPTIONAL POWER (12V DC) Optional 12V DC 2.5A adapter



## UK Conformity Assessed (UKCA) – United Kingdom

The product transmits within the frequency ranges and less than or equal to the power listed below:

2402-2480MHz less than 20dBm (BT/BLE)  
2405-2480MHz less than 20dBm (Zigbee)  
2412-2472MHz less than 20dBm  
5180-5240MHz less than 23dBm \*  
5260-5320MHz less than 23dBm \*  
5500-5700MHz less than 30dBm \*

Note: \* Only with DFS bands certification.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This product is in compliance with Statutory Instrument 1206 Radio Equipment Regulations 2017

The full Declaration of Conformity for this product is available in the link below:

<https://site.fortinet.com/ProductRegulatory/UK>

The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range in the following countries:





