

USER'S MANUAL



X200

Digital Voice Recorder



TABLE OF CONTENTS

INTRODUCTION	4
RECORDER FUNCTIONS	6
BASIC OPERATION GUIDE	9
POWER ON/OFF	9
RECORDING	9
DELETING FILES	10
TRANSFERRING FILES TO A COMPUTER	12
PLAYBACK OF RECORDINGS AND SONGS	13
1. Playback of the recordings	13
2. Playback of the songs	13
3. Next/previous and fast forward/fast backward	14
4. Volume settings	15
5. A-B repeat	15
6. Additional playback menu	15
MENU OPTIONS	16
RECORDER	16
1. Recordings library	16
2. Recording bit rate	17
3. Noise cancellation	17
4. Recording scene	18
5. Recording segmentation	19
6. Voice-activated recording	21
7. Recording monitor	22
8. Auto recording	22
BLUETOOTH	25
1. Music mode	26
2. Phone mode	29


SETTINGS	34
1. Language	34
2. Date & Time	35
3. Brightness	37
4. Backlight and screen saver	37
5. Idle shutdown	39
6. Device information	41
7. Storage information	41
8. Factory settings	41
9. Rescan files	42
10. Formatting	43
11. Password protection	44
MUSIC	46
All songs	47
Last played	47
Artists	47
Albums	47
Favorites	47
Additional playback menu	47
FOLDERS	51
EBOOK	52
TROUBLESHOOTING	53
MAINTENANCE	55
CHARGING	55
SAFETY RULES	55
RECYCLING	57
SPECIFICATIONS	58
THANK YOU	59

INTRODUCTION

Thank you for purchasing **DICTOPRO X200** recorder. **X200** provides an amazing recording quality with intelligent environmental noise cancellation. Recorder lightweight and compact design allows you to carry it wherever you go and have it ready to record at any time.

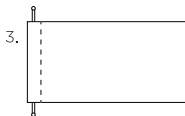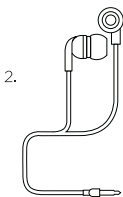

Recorder
Earphones
Gift bag
Charging/Data cable
User Manual

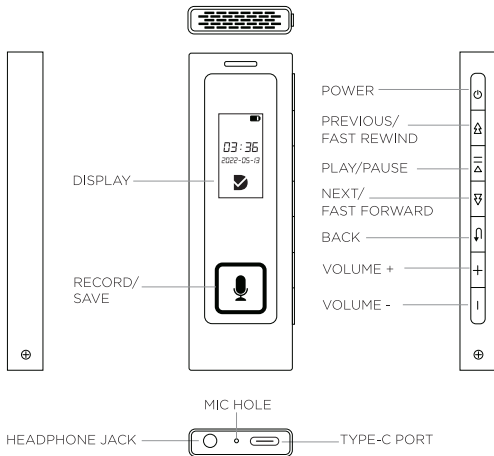

RECORDER FUNCTIONS

Function	Operation
Power on	Press and hold the POWER button for 2 seconds.
Power off	Press and hold the POWER button for 2 seconds.
Turn off the screen	Press the POWER button while the recorder is turned on.
Turn on the screen	Press either the POWER button or the REC button while the recorder is turned on but the screen is turned off.
Exit screensaver	Press any button.
Recording	Press and hold the REC button for 2 seconds.
Pause/resume recording	Press the PLAY button while recording.
Stop and save recording	Press and hold the REC button for 2 seconds while recording.

Play	Press the PLAY button after selecting the required file.
-------------	---

Pause	Press the PLAY button while playing the file.
--------------	--

Play next	Press the NEXT button while playing the file.
------------------	--

Play previous	Press the PREVIOUS button while playing the file.
----------------------	--

Fast forward	Press and hold the NEXT button as long as necessary while playing the file.
---------------------	--

Fast backward	Press and hold the PREVIOUS button as long as necessary while playing the file.
----------------------	--

Volume +	Press the + button.
-----------------	----------------------------

Volume -	Press the - button.
-----------------	----------------------------

Navigate through menu options

Press the **NEXT** button or the **PREVIOUS** button.

Change the value

Press the **+** button (to increase) or the **-** button (to decrease).

Confirm selection

Press the **PLAY** button.

Return one step back

Press the **BACK** button.

Return to the main menu

Press and hold the **BACK** button for 2 seconds.

BASIC OPERATION GUIDE

Press and hold the **POWER** button for 2 seconds. The recorder will turn on and you will see the splash screen.

Press and hold the **POWER** button for 2 seconds. You will see the "GOOD BYE!" screen and the device will turn off.

Note: If the recorder is not being used for more than 5 minutes (by default), it will turn off automatically. (For more details, refer to the **Idle shutdown** section of this manual.)




RECORDING

1) Place the recorder in a way so that its built-in microphones (bottom part of recorder) are pointed towards the recording source. Press and hold the **REC** button for 2 seconds. You will see the recording screen.


2) Press the **PLAY** button to pause recording. Press the **PLAY** button again to resume recording.

3) Press the **REC** button for 2 seconds to stop and save the recording.

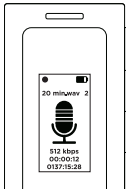

Note: For the best recording quality, select the respective **Recording scene** in the **Recorder** menu. (For more details, refer to the **Recorder** section of this manual.)

The environmental noise cancellation microphone is located inside the headphone jack. Keep this port uncovered while using the **Noise cancellation** feature.

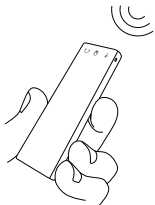

DELETING FILES

Note: Once a file is deleted, you **CANNOT** restore it.

To delete recording/recordings:

- 1) Navigate to the **Recorder** menu using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.
- 2) In the Recorder menu, select the **Recording library** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.
- 3) In the **Recording library**, select the file you want to delete using the **NEXT** button or the **PREVIOUS** button.
- 4) While standing on the selected file, press and hold the **PLAY** button for 2 seconds.

- 5) In the opened screen, using the **NEXT** button or the **PREVIOUS** button, select **Delete** if you want to delete this particular recording, or select **Delete all** to delete all recordings. Confirm the selection by pressing the **PLAY** button.
- 6) In the confirmation screen, select **YES** and press the **PLAY** button to confirm.
- 7) The recording/recordings will be deleted.

To delete file/folder:

- 1) Navigate to the **Folder** menu using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.
- 2) In the **Folder** menu, navigate to the file/folder you would like to delete using the **NEXT** button or the **PREVIOUS** button.
- 3) While standing on the selected file/folder, press and hold the **PLAY** button for 2 seconds.
- 4) In the confirmation screen, select **YES** and press the **PLAY** button to confirm.
- 5) The file/folder will be deleted.



Note: The easiest way to manage files and folders and to delete them is to connect **X200** to a computer as a USB Flash memory.

TRANSFERRING FILES TO A COMPUTER

You can transfer the files and folders from your **DICTOPRO X200** to a computer and back. To do so:

- 1) Connect the **X200** to your computer using the supplied Type-C cable.
- 2) In the opened screen on the recorder, select the **Charge & Transfer** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.
- 3) The **DICTOPRO X200** will appear in your Computer Menu as an external drive (just like an ordinary flash drive).
- 4) Drag and drop the files or folders you want to edit, delete, or copy from or to the **X200** (just like an ordinary flash drive).
- 5) Disconnect the recorder from the computer by following the specific instructions of disconnecting external drives for your OS.

Note: Do not disconnect the **X200** by removing the Type-C data cable. This can damage the files stored in the recorder's internal memory.

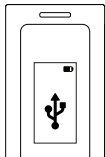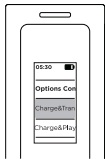

PLAYBACK OF RECORDINGS AND SONGS

You can play both recordings and audio files stored on the **DICTOPRO X200** via the built-in speaker or using the supplied earphones/wireless headphones in your possession.


1. Playback of the recordings

1) Navigate to the **Recorder** menu using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.

2) In the **Recorder** menu, select the **Recording library** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.

3) In the **Recording library**, select the file you want to play using the **NEXT** button or the **PREVIOUS** button.

4) Press the **PLAY** button to start the playback.

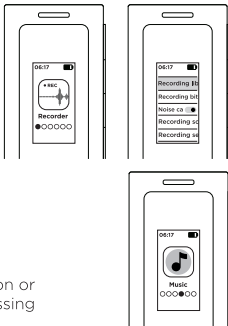

2. Playback of the songs

1) Navigate to the **Music** menu using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.

2) In the **Music** menu, select the **All songs** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.

3) In **All songs**, select the file you want to play using the **NEXT** button or the **PREVIOUS** button.

4) Press the **PLAY** button to start the playback.

Note: Recordings and songs can play in background. Make sure to pause the playback before going to the previous/main menu.




3. Next/previous and fast forward/fast backward

1) Press the **NEXT** button while playing the file to switch to the next recording/song.

2) Press the **PREVIOUS** button while playing the file to switch to the previous recording/song.

3) Press and hold the **NEXT** button while playing the file (as long as necessary) to fast forward.

4) Press and hold the **PREVIOUS** button while playing the file (as long as necessary) to fast backward.

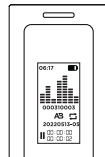

4. Volume settings

To adjust the volume, press the **+** button (to increase) or the **-** button (to decrease) while playing a file


5. A-B repeat

The recorder supports **A-B repeat** feature.

- 1) While listening to an audio file, shortly press the **REC** button. This will set the **A** point. The **AB** icon in the middle of the screen will turn green.
- 2) Press the **REC** button once again to set the **B** point. The **AB** icon in the middle of the screen will turn blue.
- 3) The A-B segment will start playing automatically.
- 4) To disable this feature, press the **REC** button once again. The **AB** icon in the middle of the screen will turn white.

6. Additional playback menu

See the **Additional playback** menu point in the **Music** section (page 47).

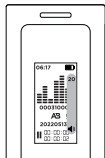

MENU OPTIONS

RECORDER

Navigate to the **Recorder** menu using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. You will see the following options:

Recordings library
Recording bit rate
Noise cancellation
Recording scene


Recording segmentation
Voice-activated recording
Recording monitor
Auto recording

1. Recordings library

In the **Recorder** menu, navigate to the **Recordings library** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.

If there are some saved recordings, you will see a full list of all the recordings.

If there are no saved recordings, the **No recording files found** notification will appear on the screen, and the system will get back to the **Recorder** menu.

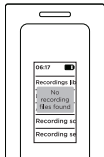

2. Recording bit rate

While **X200** can record in WAV format only, you still can select the file bit rate. The bit rate value defines the recording quality. The bigger the number is, the better the recording quality is, and the greater space is taken by the recording.

In the **Recorder** menu, navigate to the **Recording bit rate** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. You will see the following options:

512kbps
1536kbps
3072kbps


Select the required bit rate using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.

3. Noise cancellation

This feature allows to enable the second microphone that is designed to analyze and cut off the environmental noises to ensure the best recording quality.

To enable this feature, in the **Recorder** menu, navigate to the **Noise cancellation** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. The toggle will move to the enabled position.

To disable the **Noise cancellation** feature, in the **Recorder** menu, navigate to the **Noise cancellation** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. The toggle will move to the disabled position.

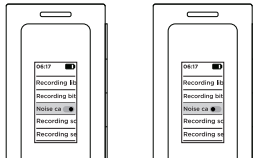

4. Recording scene

In the **Recorder** menu, navigate to the **Recording scene** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. You will see the following options:

Normal
Interview
Meeting
Station
Teaching

Each option allows to set the recorder sensitivity settings according to the respective recording environment where:

- **Normal** — scenario, when you talk directly to the microphone.
- **Interview** — scenario, when the recorder is sitting on the table and two persons talk, the environment is quiet.
- **Meeting** — scenario, when the recorder is sitting on the table in a conference room and several persons talk from different corners.
- **Station** — scenario, where you are recording in an open space (on the street for example).
- **Teaching** — scenario, when you are recording in a big class in the university.

Select the required **Recording scene** setting using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.

5. Recording segmentation

In the **Recorder** menu, navigate to the **Recording segmentation** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. You will see the following options:

Single file

30min

60min

120min

These settings allow to set the maximum recording length before it will be automatically saved to the recorder, where:

- **Single file** — the entire recording session will be saved as a single file only after you manually stop the recording by pressing and holding the **REC** button for 2 seconds.
- **30min** — the recording session will be saved as separate 30-minute files. In case the last segment will be shorter than 30 minutes, you will still need to stop the recording manually by pressing and holding the **REC** button for 2 seconds.
- **60min** — the recording session will be saved as separate 60-minute files. In case the last segment will be shorter than 60 minutes, you will still need to stop the recording manually by pressing and holding the **REC** button for 2 seconds.
- **120min** — the recording session will be saved as separate 120-minute files. In case the last segment will be shorter than 120 minutes, you will still need to stop the recording manually by pressing and holding the **REC** button for 2 seconds.

Select the required **Recording segmentation** setting using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.



6. Voice-activated recording

When the **Voice-activated recording** (also known as **Voice operated recording** or **VOR**) mode is on, the device will record only when it picks up sounds. If no sounds are detected, **X200** will not record to reduce blank time and save storage.

To enable it, in the **Recorder** menu, navigate to the **Voice-activated recording** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. The toggle will move to the enabled position.

To start recording in the **Voice-activated recording** mode, press and hold the **REC** button for 2 seconds.


To disable the **VOR** feature, in the **Recorder** menu, navigate to the **Voice-activated recording** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. The toggle will move to the disabled position.

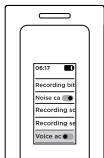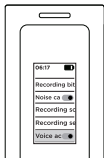

7. Recording monitor

This feature allow to use earphones to listen to what is recorded. It is used to evaluate whether the recording quality and recording settings are ideal for the current environment.

To enable this feature, in the **Recorder** menu, navigate to the **Recording monitor** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. The toggle will move to the enabled position.

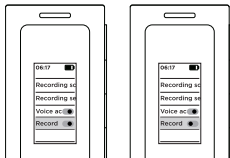

To it, in the **Recorder** menu, navigate to the **Recording monitor** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. The toggle will move to the disabled position

8. Auto recording

The **Auto recording** feature allows the **X200** to start and stop the recording automatically, according to the time settings input by a user. The scheduled recording can be performed both in normal and in the **VOR** modes (to save the disc space).

Note: For this feature to work correctly, make sure that the correct data and time are set in the **Settings**. (For more details, see the **Date & time** section of this manual.)

In the **Recorder** menu, using the **NEXT** button or the **PREVIOUS** button, navigate to the **Auto recording** option. Confirm the selection by pressing the **PLAY** button. There you will see the following options:

Auto recording (toggle)
Start time

Finish time
Auto recording cycle



Auto recording on/off

To enable the **Auto recording** feature, select the **Auto recording** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. The toggle will move to the enabled position.

To disable it, select the **Auto recording** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. The toggle will move to the disabled position.



Start time

To set the auto recording start time:

1. In the **Auto recording** submenu, navigate to the **Start time** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.
2. Adjust the hours (**HH**) value using the **+** button or the **-** button.
3. Switch to the minutes (**MM**) value using the **NEXT** button or the **PREVIOUS** button. You can press the **NEXT** button again to get back to the **HH** settings.
4. Adjust the minutes (**MM**) value using the **+** button or the **-** button.
5. Press **PLAY** button to confirm the start time.

Finish time

To set the auto recording finish time:

1. In the **Auto recording** submenu, navigate to the **Finish time** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.
2. Adjust the hours (**HH**) value using the **+** button or the **-** button.
3. Switch to the minutes (**MM**) value using the **NEXT** button. You can press the **PREVIOUS** button to get back to the **HH** setting.
4. Adjust the minutes (**MM**) value using the **+** button or the **-** button.
5. Press the **PLAY** button to confirm the finish time.

Auto recording cycle

In the **Auto recording** submenu, navigate to the **Auto recording cycle** option using the **NEXT** button or the **PREVIOUS** button. There you will see the following options:

Once
Daily
Working days

These settings allow to set the periodicity of the auto recording, where:

Once — the recording will start automatically on the closest date when the set **Start time** is possible (for example, if you set the **Start time** to 10AM and now it is 2PM already, the recording will start automatically tomorrow at 10AM).

Daily — the recording will start automatically every day at the set **Start time**.

Working days — the recording will start automatically only on the days from Monday through Friday.

BLUETOOTH

The recorder supports wireless connection to the wireless headphones (to output the sound) or to the smart device (to record the phone calls).

From the main menu, navigate to the **Bluetooth** option and confirm the selection by pressing the **PLAY** button. There are two modes available in the **Bluetooth** menu:

Music mode (headphones icon)

Phone mode (phone icon)

1. Music mode


The **Music mode** is designed to connect to wireless headphones to output the sound.

Note: The **X200** recorder **CANNOT** record via the headphones microphone. If you start the recording with the wireless headphones connected to the recorder, the headphones will automatically disconnect and connect back after the recording is finished.

To connect the wireless headphones:

1) In the **Bluetooth** menu, select the **Music mode** (the headphones icon will be highlighted in blue) using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.

2) Navigate to the **Bluetooth** option (with toggle) using the **NEXT** button or the **PREVIOUS** button and press the **PLAY** button to enable it. The toggle will move to the enabled position.

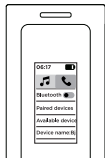


3) Once the **Music mode** is enabled, the headphones icon will be highlighted in green and the Bluetooth icon will start flashing next to the battery level indicator in the right top corner of the display.

4) Power on your wireless headphones and put them into the pairing mode (for more details, see the user's guide that came with your headphones).

5) On the recorder, navigate to the **Available devices** using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. You will see the list of the available wireless devices.

6) Select your wireless headphones from the list of available devices using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.

7) Once the headphones are connected, the flashing Bluetooth icon will become steady blue.

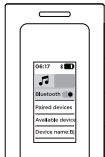

You can pair the recorder with multiple wireless headphones (**not simultaneously**).

To choose between the paired headphones:

1) In the **Music mode** section, navigate to the **Paired devices** option using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.

- 2) Make sure that the recorder is not connected to any headphones.
- 3) In the opened list of devices, select the headphones you want to connect to using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.
- 4) In the opened screen, select **Connect** option using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button

To disconnect from the headphones:

- 1) In the **Music mode** section, navigate to the **Paired devices** option using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.
- 2) In the opened list of devices, select the headphones you want to disconnect from using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.
- 3) In the opened screen, select **Disconnect** option using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button

To forget the paired device:

- 1) In the **Music mode** section, navigate to the **Paired devices** option using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.

- 2) In the opened list of devices, select the headphones you want to unpair using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.
- 3) In the opened screen, select the **Unpair** option using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.

To disable the **Music mode**:

- 1) In the **Music mode** section, navigate to the **Bluetooth** option (with toggle) using the **NEXT** button or the **PREVIOUS** button.
- 2) Press the **PLAY** button to disable it. The toggle will move to the disabled position and the **Bluetooth** icon will disappear from the right top corner of the display (next to the battery indicator).

2. Phone mode

The **Phone mode** is intended to record the phone calls from the smart device or to turn the recorder to the wireless headset. In the **Phone mode**, you can make calls using the recorder built-in microphone to pick up your voice and the speaker (or wired earphones) to hear the person you are talking to.

To connect the recorder to the smart device:

1) In the **Bluetooth** menu, select the **Phone mode** (the phone icon will be highlighted in blue) using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.

2) Navigate to the **Bluetooth** option (with toggle) using the **NEXT** button or the **PREVIOUS** button and press the **PLAY** button to enable it. The toggle will move to the enabled position.



3) Once the **Phone mode** is enabled, the phone icon will be highlighted in green and the Bluetooth icon will start flashing next to the battery level indicator in the right top corner of the display.

4) Turn on **Bluetooth** on your smart device and make it visible for search (for more details, see the user's guide that came with your smart device).

5) On the smart device, scan for new devices and select the **X200_fb** from the device list. Press Yes/Pair if prompted.


The recorder should automatically connect to the smart device.

6) Once the recorder is connected to the smart device, the flashing **Bluetooth** icon will become steady blue.

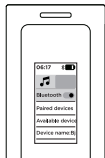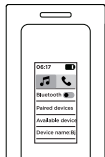

To start recording a call:

- 1) If it is an outgoing call, the recorder will automatically start recording once the person on the other side picks up the phone.
- 2) If it is an incoming call, you will see the respective notification on the display. To pick up the call - press the **PLAY** button during the incoming call. The recorder will automatically start recording once you pick up the phone.
- 3) To reject the call, press and hold the **PLAY** button for 2 seconds during the incoming call. In such case the phone call will not be recorded.

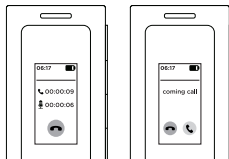

You can pair the recorder with multiple smart devices (**not simultaneously**).

To choose between the paired smart devices:

- 1) In the **Phone mode** section, navigate to the **Paired devices** option using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.
- 2) Make sure that the recorder is not connected to any smart device.
- 3) In the opened list of devices, select the smart device you want to connect to using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the

PLAY button.

4) In the opened screen, select **Connect** option using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.

To disconnect from the smart device:

1) In the **Phone mode** section, navigate to the **Paired devices** option using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.

2) In the opened list of devices, select the smart device you want to disconnect from using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.

3) In the opened screen, select the **Disconnect** option using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.

To forget the paired device:

1) In the **Phone mode** section, navigate to the **Paired devices** option using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.

2) In the opened list of devices, select the smart device you want to unpair using the **NEXT** button or the **PREVIOUS** button and confirm the selection by pressing the **PLAY** button.

3) In the opened screen, select the **Unpair** option using the **NEXT** button or the

PREVIOUS button and confirm the selection by pressing the **PLAY** button.

To disable the **Phone mode**:

- 1) In the **Phone mode** section, navigate to the **Bluetooth** option (with toggle) using the **NEXT** button or the **PREVIOUS** button.
- 2) Press the **PLAY** button to disable it. The toggle will move to the disabled position and the **Bluetooth** icon will disappear from the right top corner of the display (next to the battery indicator).

SETTINGS

From the main menu, choose Settings using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. You will see the following options:

Language
Date & time
Brightness
Backlight and screen saver
Idle shutdown
Device information

Storage information
Factory settings
Rescan files
Formatting
Password protection

1. Language

In the Settings menu, select **Language** by pressing the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. There are 7 language options available:

English
Chinese
Hebrew
French

German
Italian
Spanish

Scroll through the languages using the **NEXT** button or the **PREVIOUS** button and press **PLAY** to select the corresponding language.

After changing the language, all the text warnings and menu options will be displayed in a new language. The changes will be applied instantly.

2. Date & Time

This setting is used to set up the correct date and time. It is critical to use the correct data, as the time settings will affect the timestamps on the recordings.

From the **Settings** menu, select the **Date & Time** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. You will see the following options:

Set the date
Set the time

Select the needed option using the **NEXT** button or the **PREVIOUS**. Confirm the selection by pressing the **PLAY** button.

Set the date

1. Adjust the year (**YY**) value using the **+** button or the **-** button.
2. Switch to the month (**MM**) value using the **NEXT** button. You can press the **PREVIOUS** button again to get back to the **YY** setting.
3. Adjust the month (**MM**) value using the **+** button or the **-** button.
4. Switch to the day (**DD**) value using the **NEXT** button. You can press the **PREVIOUS** button again to get back to the **MM** setting.
5. Adjust the month (**DD**) value using the **+** button or the **-** button.
6. Press the **PLAY** button to save the date setting.

Set Time

1. Adjust the hours (**HH**) value using the **+** button or the **-** button.
2. Switch to the minutes (**MM**) value using the **NEXT** button. You can press the **PREVIOUS** button to get back to the **HH** setting.
3. Adjust the minutes (**MM**) value using the **+** button or the **-** button.
4. Switch to the seconds (**SS**) value using the **NEXT** button. You can press the **PREVIOUS** button to get back to the **MM** setting.
5. Adjust the seconds (**SS**) value using the **+** button or the **-** button.
6. Press the **PLAY** button to save the time setting.

3. Brightness

To adjust the brightness:

- 1) From the **Settings** menu, select the **Brightness** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.
- 2) Select the required brightness level from 10 through 100 using the **NEXT** button or the **PREVIOUS** button.
- 3) Confirm the brightness level by pressing the **PLAY** button.

4. Backlight and screen saver

From the **Settings** menu, select the **Backlight and screen saver** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. You will see the following options:

Always ON
Backlight time
Screen saver
Screen saver time

Always ON

This toggle allows to keep the screen on all the time, until you turn it off manually by pressing the **POWER** button.

To enable it, from the **Backlight and screen saver** submenu, select the **Always ON** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. The toggle will move to the enabled position.

To disable the **Always ON** setting, press the **PLAY** button once again. The toggle will move to the disabled position.

Backlight time

- 1) From the **Backlight and screen saver** submenu, select the **Backlight time** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.
- 2) Select after how many seconds (from 10 to 100) the backlight should go off using the **NEXT** button or the **PREVIOUS** button.
- 3) Confirm the brightness level by pressing the **PLAY** button.

Screen saver

This toggle allows to turn on/off the screen saver (as in the picture).

To enable it, from the **Backlight and screen saver** submenu, select the **Screen saver** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. The toggle will move to the enabled position.

To disable the **Screen saver** setting, press the **PLAY** button once again. The toggle will move to the disabled position.



Screen saver time

- 1) From the **Backlight and screen saver** submenu, select the **Screen saver time** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.
- 2) Select after how many seconds (from 10 to 100) the screen saver will go on using the **NEXT** button or the **PREVIOUS** button.
- 3) Confirm the brightness level by pressing the **PLAY** button.

5. Idle shutdown

From the Settings menu, select the Idle shutdown option using the **NEXT** button

or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. You will see the following options:

Idle shutdown

Idle shutdown time

Idle shutdown

This toggle allows to enable the automatic power off after some particular time. To enable it, from the **Idle shutdown** submenu, select the **Idle shutdown** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. The toggle will move to the enabled position.

To disable the **Idle shutdown** setting, press the **PLAY** button once again. The toggle will move to the disabled position.

Idle shutdown time

- 1)** From the **Idle shutdown** submenu, select the **Idle shutdown time** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.
- 2)** Using the **NEXT** button or the **PREVIOUS** button, select after how many minutes (from 1 to 60) should pass before the recorder turns off automatically.
- 3)** Confirm the shutdown time by pressing the **PLAY** button.

6. Device information

This option contains the data about your **DICTOPRO X200**, such as **Model**, software version, etc.

To see it, from the **Settings** menu, select the **Device information** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.

7. Storage information

This option contains the data about the total and available space on your **DICTOPRO X200**.

To see it, from the **Settings** menu, select the **Storage information** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.

8. Factory settings

This option restores **X200** back to the factory settings. In case of misuse or confusion, this function helps to get **DICTOPRO X200** back to its default state.

Restoring back to the **Factory Settings** does not affect the files stored in the internal memory. However, we recommend backing up all important files to avoid any loss.

To perform it, from the **Settings** menu, select the **Factory settings** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. In the appeared screen, you will see two options:

Yes

No

Using the **NEXT** button or the **PREVIOUS** button, select the required option and press **PLAY** to confirm.

Yes — The restoring will start immediately (it takes a few seconds).

No — The recorder will automatically get back to the previous menu.

9. Rescan files

This setting allows to refresh the files database in case you feel that the respective files are on the recorder but are not displayed in the corresponding section (**Recording library**, **Music** and so on).

To perform it, from the **Settings** menu, select the **Rescan files** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. In the appeared screen, you will see two options:

Yes

No

Using the **NEXT** button or the **PREVIOUS** button, select the required option and press **PLAY** to confirm.

Yes — The internal storage will be rescanned.

No — The recorder will automatically get back to the previous menu.

10. Formatting

This option will format the disk and erase all the data on the device. Please make sure to back up all important files to avoid any loss.

To perform it, from the **Settings** menu, select the **Formatting** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. In the appeared screen, you will see two options:

Yes

No

Using the **NEXT** button or the **PREVIOUS** button, select the required option and press **PLAY** to confirm.

Yes — The formatting will start immediately (it takes a few seconds depending on the number of files being stored).

No — The recorder will automatically get back to the previous menu.

11. Password protection

From the **Settings** menu, select the **Password protection** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. You will see the following options:

Password protection
Change password

Password protection

This toggle allows to protect the **X200** with a 4-digit password. By default, this option is off.

To enable it, from the **Password protection** submenu, select the **Password protection** option using the **NEXT** button or the **PREVIOUS** button. Confirm the

selection by pressing the **PLAY** button. The toggle will move to the enabled position.

To disable the **Password protection** setting, press the **PLAY** button once again. The toggle will move to the disabled position.

Change password

The **Password protection** should be turned on before making adjustments (please refer to the previous point).

1. From the **Password protection** submenu, select the **Change password** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.
2. Using the **NEXT** button or the **PREVIOUS** button, enter the original password (7890) confirming each digit by pressing the **PLAY** button.
3. To confirm, navigate to the check mark sign and press the **PLAY** button. To adjust the entered password, use the backspace button in the right bottom corner of screen.
4. In the next screen, using the **NEXT** button or the **PREVIOUS** button, enter the new password confirming each digit by pressing the **PLAY** button.
5. To confirm, navigate to the check mark sign and press the **PLAY** button. To adjust the entered password, use the **backspace** button in the right bottom corner of screen.

6. In the next screen, using the **NEXT** button or the **PREVIOUS** button, enter the new password once again confirming each digit by pressing the **PLAY** button.
7. To confirm, navigate to the check mark sign and press the **PLAY** button. To adjust the entered password, use the **backspace** button in the right bottom corner of screen.

MUSIC

From the main menu, navigate to the **Music** menu using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. There you will see the following options:

- **All songs**
- **Last played**
- **Artists**
- **Albums**
- **Favorites**

All songs

This option displays the full list of all songs that are stored in the **DICTOPRO X200** recorder (except for the recorded ones).

Last played

This option will immediately turn on the last played track.

Artists

This option will allow to sort the songs by artists.

Albums

This option will allow to sort the songs by albums.

Favorites

Here all the songs/recordings added to the favorites will be displayed. (For more details about adding to the favorites, see the following section).

Additional playback menu

During the playback, press and hold the **PLAY** button for 2 seconds. The **Additional playback** menu will be displayed. There you will see 6 options:

- Back to the main page**

- Playback speed**

- **Repeat**
- **Bookmark**
- **Add to favorites**
- **Equalizer**

Use the **NEXT** and **PREVIOUS** buttons to navigate the menu and press **PLAY** to enter.

Back to the main menu

Allows to return to the main menu.

Playback speed

This option allows to speed up or slow down the playback.

To do so:

- 1) From the **Additional playback menu**, select **Playback speed** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button.
- 2) Select the required speed setting and save it by pressing the **PLAY** button.

Repeat

This option allows to set the repeat cycle of the played audio file.

From the **Additional playback menu**, select **Playback speed** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. You will see the following options:

- **Loop all** — entire playlist will be repeated after it comes to the end.
- **Shuffle** — all audio files will be played in a random order.
- **Loop single** — one file will be repeated all over again.
- **Repeat off** — when playlist comes to an end, the playback will be paused.

Bookmark

This option allows to set a bookmark to the particular section of an audio file. In total, you can create 5 bookmarks.

To create a bookmark:

- 1) While listening to the audio file, open the **Additional playback** menu by pressing and holding the **PLAY** button for 2 seconds.
- 2) In the appeared screen, select the **Bookmark** option using the **NEXT** button or the **PREVIOUS** button.

- 3) Select one of five available bookmarks.
- 4) When the audio file comes to the required section, press the **PLAY** button to save the bookmark.

To play from the created bookmark:

- 1) From the **Bookmark** option, select the required bookmark using the **NEXT** button or the **PREVIOUS** button.
- 2) To start playing, press the **PLAY** button.

Add to favorites

This option is used to add favorite audio files that then will appear in the **Favorites** option of the **Music** menu.

Equalizer

Here you can adjust the output sound effects.

From the **Additional playback menu**, select **Equalizer** option using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. You will see the following options:

Normal
Pop
Rock
Jazz

Classical
Dance
Country

Using the **NEXT** button or the **PREVIOUS** button select the required sound effect and press the **PLAY** button to save it.

FOLDERS

This option will display all the folders and files stored in the **X200** recorder.

Use the **NEXT** button or the **PREVIOUS** button to navigate through the files and folders.

To open the file or folder, press the **PLAY** button. Press the **BACK** button to return one step back.

To delete the file or folder, select the required file/folder using the **NEXT** button or the **PREVIOUS** button. Once the required file/folder is selected, press and hold the **PLAY** button for 2 seconds. In the confirmation screen, select **Yes**, if you want to delete the file/folder, or **No**, if you changed your mind.

EBOOK

This option allows to read/view text files, stored in **X200** internal memory. The supported format is TXT only.

From the main menu, navigate to the **Ebook** menu using the **NEXT** button or the **PREVIOUS** button. Confirm the selection by pressing the **PLAY** button. There you will see the list of the supported books.

To open the file, select the required book using the **NEXT** button or the **PREVIOUS** button and press the **PLAY** button.

To see the **Ebook** menu settings, press and hold the **PLAY** button while reading some book. Here you will see the following options:

Page auto-turning time — option that allows to specify the time (from 3 to 30 seconds), in which the recorder will go to the next page automatically. To enable/disable this feature, press the **PLAY** button while reading. Once enabled, you will see the **Play** icon, once disabled – the **Pause** icon.

Background color — option that allows to change the book background between black, white and yellow.

Select page — option that allows to jump to some particular page.

Bookmark — option that allows to set a bookmark to the particular section of a book. In total, you can create 5 bookmarks.

TROUBLESHOOTING

Problem	Solution
Not powering on	Make sure the DICTOPRO X200 is fully charged. Charge for 2 hours, if necessary.
Files cannot be transferred to the computer	Make sure you are using the Type-C cable that supports data transfer. Regular charging cables do not support the data transfer. Make sure the computer is not protected with firewall systems that prevent or block the data transfer. Make sure the recorder is not locked with a password.
Settings are not working properly	Restore the X200 back to the factory settings. Set up the desired options again.
File is not supported	Check if the file is supported by DICTOPRO X200 . Restore the recorder back to the factory settings.

Disk error

Transfer all files from **DICTOPRO X200** to your computer. Format the device.

**Wrong password/
Forget the password**

Turn the recorder off then turn it on again. Use the master-password **7890**. After entering the system this way, restore the factory setting.

MAINTENANCE

CHARGING

DICTOPRO X200 is enabled with the rechargeable Li-ion Battery. One full battery charge provides up to 17 hours of recording time.

To charge the recorder, plug one end of the supplied cable into the Type-C charging port. Plug the other end of the charging cable into a standard USB port. It takes up to 2 hours to charge it fully.

Be sure to use the 5V DC, 0.5-1A adapter or charger. Using a power source with lower power will increase the overall charging time.

When not in use, unplug **X200** from the charging cable and the cable - from the power source.

If the recorder is left unused, even a fully charged battery will lose its charge over time. We recommend a full charge of the **DICTOPRO X200** at least twice a month to maintain the sufficient battery life.

SAFETY RULES

Don't disassemble or modify the recorder for any reason. Doing this may cause it to malfunction or explode. The damage of your device can void the manufacturer's warranty.

Make sure **DICTOPRO X200** is completely dry before charging. Charging a wet device may cause serious damage.

Clean only with a dry cloth.

Avoid exposing **DICTOPRO X200** to extreme temperatures (below 37°F / 3°C or above 112°F / 45°C). Extreme temperatures can cause deformation of X200 components, and reduce the battery life and the lifespan of the Recorder.

RECYCLING

The recorders can be recycled, and they should be in order to keep our planet clean. Where should you bring them?

In the US, there is a couple of options:

Best Buy has a recycling program. Just take a broken device when you visit a BestBuy store. This link will help you find the best location:
<https://www.bestbuy.com/site/store-locator/>.

Check for other possible locations next to you on these websites (just enter your ZIP to find a location):

<https://www.call2recycle.org>
<https://7search.earth911.com>
<https://7recyclenation.com/find>
<https://www.cta.tech/Consumer-Resources/Greener-Gadgets>

In Canada, please visit the following websites:

<https://www.return-it.ca/electronics/>
<https://www.call2recycle.ca/>

In the UK, please visit the links below for help:

<https://www.recycle-more.co.uk/>
<https://www.recyclenow.com/local-recycling>

SPECIFICATIONS

Display:	160 x 80, TFT, 262,144 colors
Battery:	250mAh 3.7V, rechargeable Li-Ion, input 5V/1A
Charging time:	2 hours
Charging/data port:	Type-C
Internal memory:	32GB
Recording time:	512kbps – 137h32m 1536kbps – 45h50m 3072kbps – 22h55m
Music formats:	MP3/WAV/WMA/APE/FLAC
Recording format:	WAV
Operating systems:	Windows, MAC OS

THANK YOU

We truly appreciate that you chose **DICTOPRO** as your trusted brand of digital voice recorders. Our team sincerely hopes you enjoy the seamless usability **DICTOPRO X200** provides. We love making our customers happy by providing true value to our products. If for any reason you are not completely satisfied with your purchase or have any questions, please let us know by visiting www.dictopro.com/contact_us. We care about our customers above all and are always here to serve you.



1 YEAR WARRANTY
Parts and Labor Warranty.

Please visit www.dictopro.com
to register your product.

Manufactured by: Productech Corp

Made In China



WARNING: Cancer and Reproductive
Harm - www.P65Warnings.ca.gov

X200

Digital Voice Recorder

