

LIC022A-R3 LIC023A-R3 LIC024A-R3 LIC025A-R3 LIC026A-R3

MultiPower Industrial Media Converters

Choose from four different ways to power these hardened media converters.



Customer Support Information Order toll-free in the U.S.: Call 877-877-BBOX (outside U.S. call 724-746-5500) FREE technical support 24 hours a day, 7 days a week: Call 877-877-2269 or fax 724-746-0746 • Mailing address: Black Box Corporation, 1000 Park Drive, Lawrence, PA 15055-1018 • Web site: www.blackbox.com • E-mail: info@blackbox.com

TRADEMARKS USED IN THIS MANUAL

Black Box and the Black Box logo type and mark are registered trademarks of BB Technologies, Inc.

Any other trademarks mentioned in this manual are acknowledged to be the property of the trademark owners.

FCC and Industry Canada RF Interference Statements

Class A (using DC terminal power or Power over Ethernet (PoE). This equipment has been tested and found to comply with the limits for a Class B computing device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or telephone reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an experienced radio/TV technician for help.

Class B (using any DC jack options). This equipment has been tested and found to comply with the limits for a Class B computing device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or telephone reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To meet FCC requirements, shielded cables and power cords are required to connect this device to a personal computer or other Class B certified device.

This digital apparatus does not exceed the Class B limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of Industry Canada.

Certifications

CE

Class 1 Laser product, Luokan 1 Laserlaite, Laser Klasse 1, Appareil A'Laser de Classe

European Directive 2002/96/EC (WEEE) requires that any equipment that bears this symbol on product or packaging must not be disposed of with unsorted municipal waste. This symbol indicates that the equipment should be disposed of separately from regular household waste. It is the consumer's responsibility to dispose of this and all equipment so marked through designated collection facilities appointed by government or local authorities. Following these steps through proper disposal and recycling will help prevent potential negative consequences to the environment and human health. For more detailed information about proper disposal, please contact local authorities, waste disposal services, or the point of purchase for this equipment.



Table of Contents

Part Nu	mbers	6
1.	Specifications	7
2.	Overview: About the MultiPower Industrial Media Converters	8
3.	Install the MultiPower Industrial Media Converters	9
3.1	DIN Rail Mounting	9
3.2	Cascading DC Power	9
3.3	Powering the MultiPower Industrial Media Converters	10
3.4	About Power over Ethernet (PoE) and MultiPower Industrial Media	
	Converters	10
3.5	DC Terminal Block Wiring Instructions	10
4.	Operation	.11
5.	Contacting Black Box	.12
6.	Fiber Optic Cleaning Guidelines	.13
7.	Electrostatic Discharge Precautions	14

Part Numbers

Part Number	Description
LIC022A-R3	TP-TX/FX-MM1300-ST (5 km)
LIC023A-R3	TP-TX/FX-MM1300-SC (5 km)
LIC024A-R3	TP-TX/FX-SM1310/PLUS-ST (30 km)
LIC025A-R3	TP-TX/FX-SM1310/PLUS-SC (30 km)
LIC026A-R3	TP-TX/FX-SM1310/LONG-ST (80 km)

1. Specifications

Ethernet Connections	 10/100 BaseT Auto Negotiation Auto-Cross Flow Control 1916 MTU Full Line-Rate Forwarding
DC terminal	7 to 50 VDC, 1 to0.1A
DC (jack)	5 VDC
PoE	When MultiPower Industrial Media Converters use PoE technology to be a PD, the maximum supply voltage is 50V
AC Wall Adapter	100 to 240 ±10% VAC input, 5 VDC output, 2A max.
Power Consumption (Typical)	500mA @ 5 VDC
Operating Temperature	
DC configurations	-13°F to +185°F (-25°C to +85°C)
With AC wall adapter	+14°F to +122°F (-10°C to +50°C)
Storage Temperature	-40°F to +185°F (-40°C to +85°C)
Humidity	5% to 95% (non-condensing)
Dimensions	0.83"Hx1.80"Wx3.35"D (2.11x4.57x8.51 cm)

NOTE: The media converters are now compliant to EN62368.

2. Overview: About the MultiPower Industrial Media Converters

The MultiPower Industrial Media Converters provide a single conversion between 10/100 Base-T twisted pair and 100 Base-SX/FX fiber. This device Auto Negotiates speed and duplex on the copper port and the fiber is 100Mbps, FDX. The unit supports jumbo frames up to 1916 MTU.

The MultiPower Industrial Media Converters are fixed fiber transceiver models that include one 10/100 Mbps RJ-45 connector and one 10/100 Mbps SC fiber connector which can support Single Mode fiber or Multi Mode fiber in Dual Strand or Single Strand fiber.

The MultiPower Industrial Media Converters are Industrial Ethernet devices which allows for extended temperature operation of -25° C to $+85^{\circ}$ C for DC power, or (-10° C to $+50^{\circ}$ C when using the AC adapter). When installing the MultiPower Industrial Media Converters in an 18 slot tray or using DC power, the temperature range supported is -13° F to $+185^{\circ}$ F (-25° F to $+85^{\circ}$ F).

3. Install the MultiPower Industrial Media Converters

The MultiPower Industrial Media Converters install virtually anywhere as standalone devices in locations with extremely limited space. Installation options include:

- Velcro strips
- DIN rail mounting with DIN Rail clips
- PowerTray/18 for high density applications

3.1 DIN Rail Mounting

The MultiPower Industrial Media Converters ship from the factory with DIN clips, allowing installation on a DIN rail. Depending on the installation, the MultiPower Industrial Media Converters can be mounted parallel or perpendicular to the DIN rail. Use the supplied screws to attach the DIN clips to the MultiPower Industrial Media Converters, and then snap the converter to the DIN rail.

To remove the converter from the DIN rail, use a flat-head screwdriver in the slot to gently pry the converter from the rail.



NOTE

The DIN clips are designed for use on a DIN-35 rail.

3.2 Cascading DC Power

When installing multiple MultiPower Industrial Media Converters on a DIN rail, the end user can connect to one DC input source, and then cascade from one DC block to the next, until reaching the maximum current available.



3.3 Powering the MultiPower Industrial Media Converters

The MultiPower Industrial Media Converters include multiple powering options:

 
- A country-specific, high-reliability AC power adapter (included)
- The IEEE 802.3af Power over Ethernet standard; draws power from power sourcing equipment
- The 4-terminal DC power block
- IE PowerTray 18-Slot AC for Rack Mounting
- USB cable
- IE-5V DIN rail mount Power Supply

3.4 About Power over Ethernet (PoE) and MultiPower Industrial Media Converters

Power over Ethernet technology allows the MultiPower Industrial Media Converters to be Powered Devices (PD) and draw power when connected to Power Sourcing Equipment (PSE). Power Sourcing Equipment distributes an electrical current across existing copper data cabling.

3.5 DC Terminal Block Wiring Instructions

The MultiPower Industrial Media Converters can also be powered with the DC terminal block. From a power source, connect to any one positive and any one negative terminal on the MultiPower Industrial Media Converters.




NOTE

When using stranded wire, the leads must be tinned and equivalent to a 16 AWG solid conductor. The DC terminal block is protected against mis-wiring. If the unit is miswired, positive power lead to the negative terminal and negative power lead to the positive terminal, it will not function. When powering a unit with voltages near the upper limit of the device's specification (for example: 48 volts) take precautions to limit the voltage at the units terminal block. When turning on high voltage DC circuits, initial voltages may momentarily exceed the unit's specification.

4. Operation

The MultiPower Industrial Media Converters include two LEDs, located on the RJ-45 connector.

 LED functions are as follows:



LED functions are as follows (above illustration is representative):

FX LNK/ACT	Glows green when a link is established on the fiber port; blinks green when activity is detected on the fiber port.
TX LNK/ACT	Glows amber when a link is established on the copper port; blinks amber when activity is detected on the copper port.

5. Contacting Black Box

Black Box Customer Service

Order toll-free in the U.S.: Call 877-877-BBOX (outside U.S. call 724-746-5500)

Free technical support, 24 hours a day, 7 days a week. Call: 877-877-2269 or Fax: 724-746-0746

Mail order: Black Box Corporation 1000 Park Drive, Lawrence, PA 15055-1018

Web site: www.blackbox.com

E-mail: info@blackbox.com

6. Fiber Optic Cleaning Guidelines

Fiber Optic transmitters and receivers are extremely susceptible to contamination by particles of dirt or dust, which can obstruct the optic path and cause performance degradation. Good system performance requires clean optics and connector ferrules.

- 1. Use fiber patch cords (or connectors, if you terminate your own fiber) only from a reputable supplier; low-quality components can cause many hard-todiagnose problems in an installation.
- 2. Dust caps are installed at Black Box to ensure factory-clean optical devices. These protective caps should not be removed until the moment of connecting the fiber cable to the device. If you need to disconnect the fiber device, reinstall the protective dust caps.
- Store spare caps in a dust-free environment such as a sealed plastic bag or box so that when reinstalled they do not introduce any contamination to the optics.
- 4. If you suspect that the optics have been contaminated, alternate between blasting with clean, dry, compressed air and flushing with methanol to remove particles of dirt.

7. Electrostatic Discharge Precautions


Electrostatic discharge (ESD) can cause damage to any product, add-in modules or stand alone units, containing electronic components. Always observe the following precautions when installing or handling these kinds of products.

- 1. Do not remove unit from its protective packaging until ready to install.
- 2. Wear an ESD wrist grounding strap before handling any module or component. If the wrist strap is not available, maintain grounded contact with the system unit throughout any procedure requiring ESD protection.
- 3. Hold the units by the edges; do not touch the electronic components or gold connectors.
- 4. After removal, always place the boards on a grounded, static-free surface, ESD pad or in a proper ESD bag. Do not slide the modules or stand alone units over any surface.



WARNING! Integrated circuits and fiber optic components are extremely susceptible to electrostatic discharge damage. Do not handle these components directly unless you are a qualified service technician and use tools and techniques that conform to accepted industry practices.

Black Box Tech Support: FREE! Live. 24/7.

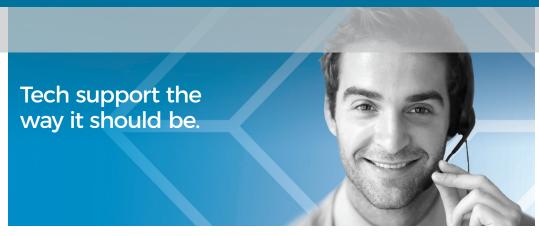

Great tech support is just 60 seconds away at 877-877-2269 or blackbox.com.

About Black Box

Black Box[®] is a trusted IT solutions provider delivering cutting-edge technology products and world-class consulting services to businesses across the globe in every industry. The breadth of our global reach and depth of our expertise accelerate customer success by bringing people, ideas, and technology together to solve real-world business problems.

© Copyright 2022. Black Box Corporation. All rights reserved. Black Box® and the Black Box logo type and mark are registered trademarks of BB Technologies, Inc. Any third-party trademarks appearing in this manual are acknowledged to be the property of their respective owners.

LIC022A-R3_user_Rev1.pdf

877-877-2269 | blackbox.com