

START


1 Remove Bezel and Accessories

Release from the bottom left corner first.




2 Install / Remove Optional Port Covers

Install the speaker cover plugs for improved dust and water resistance if desired.

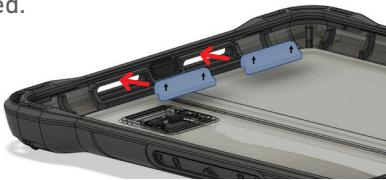


Alternatively, for a more native device experience the port covers can be removed by pulling them firmly out.

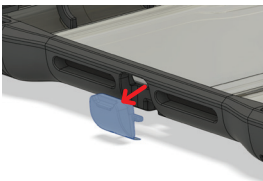


3 Remove protective overlay film

If using the optional overlay, remove the packaging film from both sides. If not using, skip to step 3.

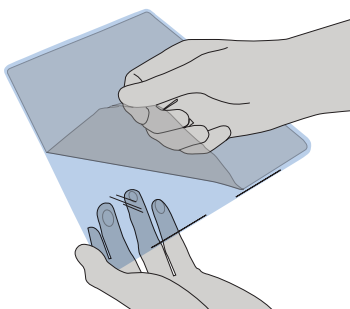

4 Align overlay with the bezel

Make sure home button is aligned, and that the small notch on the overlay sits on the right side (aligned with the corresponding notch on the bezel) Failure to align may cause bubbling.

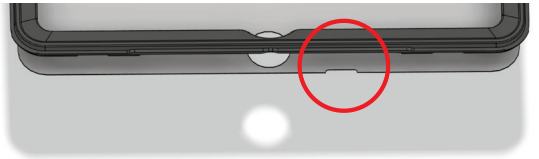

5 Install bezel

Slide the tab marked #1 in first near the power button. Then massage the bezel evenly into place around the case.



5 Optional Accessories

If using the modular logo plate or stylus holder, firmly press in with logo aligned.

The optional shoulder strap can install on any corner. See detailed item instructions.

