

Please scan this QR code
to visit the product page.

Long-Extension Full Motion TV Wall Mount



HAVE QUESTIONS?

Monday - Friday from 8:00am - 4:00pm PST



support@mount-it.com



(855) 925-5668



www.mount-it.com

Thank you for choosing Mount-It!

EN  Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact Mount-It! for assistance.



CAUTION: Use with products heavier than the rated weights indicated may result in instability causing possible injury.

- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by professionals.
- This product is designed to be installed on solid concrete walls, masonry walls or wood stud walls.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and DO NOT OVER TIGHTEN mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact Mount-It! for a replacement.

MAINTENANCE: Check that the product is secure and safe to use at regular intervals (at least every three months).

DE  Lesen Sie die gesamte Bedienungsanleitung, bevor Sie mit der Installation und Montage beginnen. Wenn Sie Fragen zur Anleitung oder Warnungen haben, wenden Sie sich bitte an Ihren örtlichen Händler.



VORSICHT: Die Verwendung mit Produkten, die schwerer als die angegebenen Nenngewichte sind, kann zu Instabilität führen und zu möglichen Verletzungen führen.

- Bitte befolgen Sie die Montageanleitung genau. Eine unsachgemäße Installation kann zu Schäden oder schweren Verletzungen führen.
- Sicherheitsausrüstung und geeignete Werkzeuge müssen verwendet werden. Dieses Produkt sollte nur von Fachleuten installiert werden.
- Dieses Produkt ist auf massiven Betonwänden oder Mauerwerkswänden zu montieren.
- Stellen Sie sicher, dass die Auflagefläche das Gesamtgewicht des Geräts und aller angeschlossenen Hardware und Komponenten sicher trägt.
- Verwenden Sie die mitgelieferten Befestigungsschrauben und die Befestigungsschrauben NICHT ZU FEST ANZIEHEN.
- Dieses Produkt enthält Kleinteile, die beim Verschlucken eine Erstickungsgefahr darstellen können. Halten Sie diese Gegenstände von Kindern fern.
- Dieses Produkt ist nur für den Innenbereich bestimmt. Die Verwendung dieses Produkts im Freien kann zu Produktversagen und Verletzungen führen.

WICHTIG: Stellen Sie vor der Installation sicher, dass Sie alle Teile gemäß der Komponenten-Checkliste erhalten haben. Bei beschädigten oder fehlenden Teilen, wenden Sie sich an Ihre Verkaufsstelle, um Ersatz zu erhalten.

WARTUNG: Überprüfen Sie das Produkt in regelmäßigen Abständen auf Sicherheit und Stabilität (am besten alle drei Monate).

FR  Lisez entièrement le guide d'utilisateur avant de commencer l'installation et le montage. Si vous avez des questions concernant les instructions ou les avertissements, veuillez contacter votre distributeur local pour une assistance.



ATTENTION: L'utilisation de produits plus lourds que les poids nominaux indiqués peut entraîner une instabilité causant des blessures potentielles.

Les supports doivent être joints comme spécifié dans les instructions de montage. Une mauvaise installation peut entraîner des dommages ou de graves blessures aux personnes.

- Un équipement de sécurité et les outils appropriés doivent être utilisés. Ce produit devrait être installé uniquement par des professionnels.
- Ce produit est conçu pour être installé sur des murs avec poteaux en bois, des murs en béton massif ou murs en brique.
- Assurez-vous que la surface de soutien supporte en sécurité le poids combiné de l'équipement et de tous les matériaux et composants associés.
- Utilisez les vis de montage fournies et NE SERREZ PAS TROP les vis de montage.
- Ce produit contient de petites pièces qui peuvent causer un étouffement si elles sont avalées. Eloignez ces pièces des enfants.
- Ce produit est prévu uniquement pour une utilisation à l'intérieur. L'utilisation de ce produit à l'extérieur peut entraîner une défaillance du produit ou des blessures aux personnes.

IMPORTANT: Avant l'installation, assurez-vous que vous avez reçu toutes les pièces selon la liste de vérification des composants. Si une pièce est manquante ou endommagée, téléphonez à votre distributeur local pour qu'il la remplace.

MAINTENANCE: A intervalles réguliers (au moins tous les trois mois) vérifiez que le support est d'utilisation sûre et fiable.

RU  Перед началом установки и сборки прочитайте руководство по установке. Если у Вас возникли какие-либо вопросы относительно инструкций или предупреждений, свяжитесь с Вашим локальным распространителем для получения помощи.



Внимание: Использование продуктов, вес которых превышает указанный расчетный вес, может привести к неустойчивости и возможным травмам.

- Опоры должны быть установлены, как это показано в монтажных инструкциях. Неправильная установка может привести к получению серьезных травм.
- Необходимо использовать предохранительное устройство и специальные инструменты. Продукт должен устанавливаться только профессионалами.
- Продукт предназначен для установки на деревянные каркасные стены, твердые цементные стены или кирпичные стены.

• Убедитесь, что несущая поверхность выдержит вес всего установленного оборудования и комплектующих.

- Необходимо использовать монтажные винты, входящие в комплект поставки, и НЕ ПЕРЕТЯГИВАТЬ монтажные винты.
- Данный продукт содержит маленькие детали, которые представляют опасность удушья при проглатывании. Такие детали необходимо хранить в недоступном для детей месте.
- Данный продукт предназначен только для эксплуатации в помещениях. Использование данного продукта на улице может привести к поломке продукта и получению травм.

ВАЖНО: Перед установкой убедитесь, что Вы получили все детали в соответствии со списком комплектующих. Если не хватает каких-либо деталей или они поломаны, свяжитесь с Вашим местным распространителем по вопросу замены.

ТЕХНИЧЕСКОЕ ОБСЛУЖИВАНИЕ: Необходимо регулярно проверять (как минимум, раз в три месяца), чтобы кронштейн был зафиксирован, и его использование было безопасным.

ES  Lea todo el manual de instrucciones antes de comenzar la instalación y ensamble de la unidad. Si tiene alguna inquietud con respecto a las instrucciones o advertencias, comuníquese con su distribuidor local.



PRECAUCIÓN: utilizar con productos de mayor peso al indicado en los límites de peso podría ocasionar inestabilidad y posibles heridas personales.

- Los soportes deben acoplarse tal como se indica en las instrucciones de ensamble. Una incorrecta instalación podría ocasionar daños y serias heridas personales.
- Utilice las herramientas y equipo de seguridad adecuados. Este producto solo debe ser instalado por profesionales.
- Este producto está diseñado para instalaciones en paredes de madera sólida, concreto sólido o bloques.
- Asegúrese de que la superficie de fijación sostenga de manera segura el peso total del equipo y todos sus componentes y hardware.
- Utilice los tornillos de ensamble suministrados y NO aplique demasiada tensión a los tornillos.
- Este producto contiene piezas pequeñas que representan un riesgo de asfixia. Mantenga estas piezas fuera del alcance de los niños.
- Este producto está diseñado para uso en interiores solamente. Utilizar este producto en exteriores podría ocasionar fallas y heridas personales.

IMPORTANTE: Asegúrese de que haya recibido todas las piezas según la lista de verificación de componentes para la instalación. Si falta alguna de las partes, o está dañada, comuníquese con su distribuidor.

MANTENIMIENTO: Compruebe periódicamente que el soporte esté asegurado y listo para usar (al menos cada tres meses).

PT  Leia todo o manual de instruções antes de iniciar a instalação e montagem. Se você tiver alguma dúvida sobre quaisquer uma das instruções ou avisos, por favor, entre em contato com o seu distribuidor local para assistência.



ATENÇÃO: O uso com produtos mais pesados do que os pesos indicados pode resultar em instabilidade, causando possíveis danos.

- Os suportes devem ser anexados como especificado nas instruções de montagem. A instalação incorreta pode causar danos ou sérias lesões pessoais.
- Equipamentos de segurança e ferramentas adequadas devem ser utilizadas. Este produto só deve ser instalado por profissionais.
- Este produto é projetado para ser instalado em pilares verticais de paredes de madeira, paredes de concreto sólido ou de tijolos.
- Certifique-se que a superfície de suporte suportará com segurança o peso combinado do equipamento e todas as ferragens e componentes anexados.
- Use os parafusos de montagem fornecidos e NÃO APERTE EXCESSIVAMENTE os mesmos.
- Este produto contém pequenas peças que podem causar asfixia se ingeridas. Mantenha esses itens longe do alcance de crianças.
- Este produto destina-se somente para uso interno. Usá-lo em ambiente externo pode causar falhas no produto e lesões pessoais.

IMPORTANTE: Assegure-se que você recebeu todas as peças, de acordo com a lista de componentes, antes da instalação. Se alguma peça estiver faltando ou é defeituosa, contate o seu distribuidor local para substituição.

MANUTENÇÃO: Certifique-se que o suporte seja seguro e protegido para o uso em intervalos regulares (pelo menos a cada três meses).

COMPATIBLE VESA SIZES

100x100~800x400

COMPATIBLE WITH
TVs UP TO



 
FLAT/CURVED




TV Mounting Hardware

- A-  (M4x16)-4pcs
- B-  (M5x16)-4pcs
- C-  (M6x16)-4pcs
- D-  (M8x25)-4pcs
- E-  ($\phi 16 \times \phi 6.2 \times 1.5$)-4pcs
- F-  Security Bolt M5x8 -4pcs


Wall Mounting Hardware

- G-  (M8x45)-4pcs
- H-  Lag Screw M8x65 -6pcs
- AA -  Security Clip -4pcs
- I-  Wrench -1pcs
- J-  Lag Washer -6pcs
- BB -  Wall Template -1pcs
- K-  Concrete Ancho -6pcs

Mount and Accessories

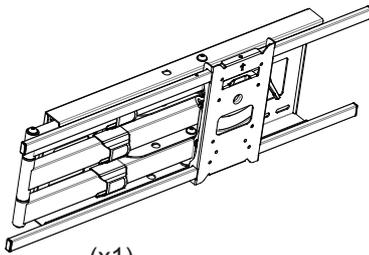

(x1)
J: Wall Mount

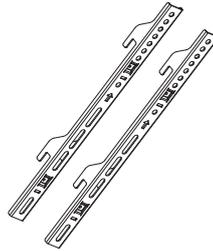

(x1)
K: VESA Arms




(x1)
L: VESA Bars for VESA ≤ 400x400

Check carefully to make sure there are no missing or defective parts. Some hardware provided may not be used. Use the correct wall mounting and TV mounting hardware suitable for your installation.

CHOKING HAZARD. Package includes small parts.
Not for children under 3 years. Adult supervision is required.


Missing Parts? Call us at (855) 925-5668 and we will ship replacement parts free of charge.

DIMENSIONS

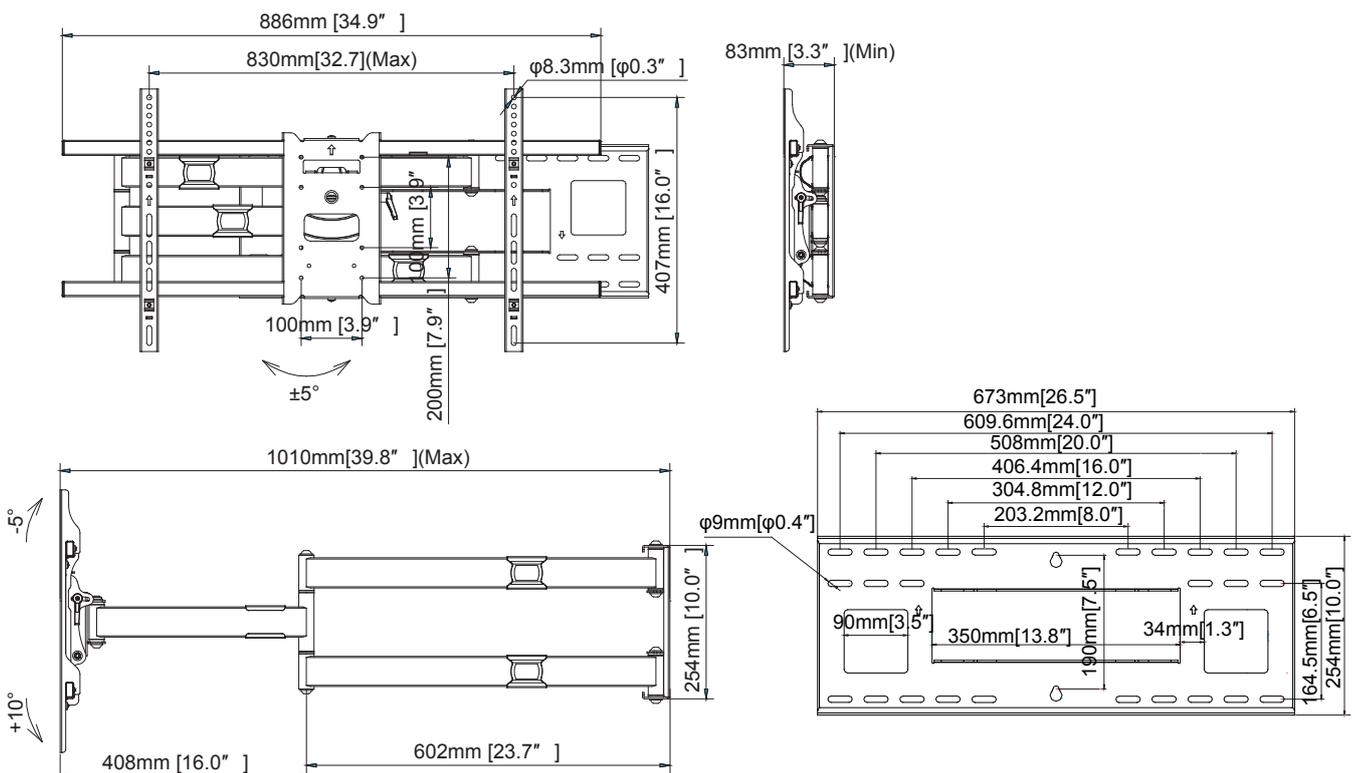

Step 1

Replacing VESA Bars for Smaller TVs

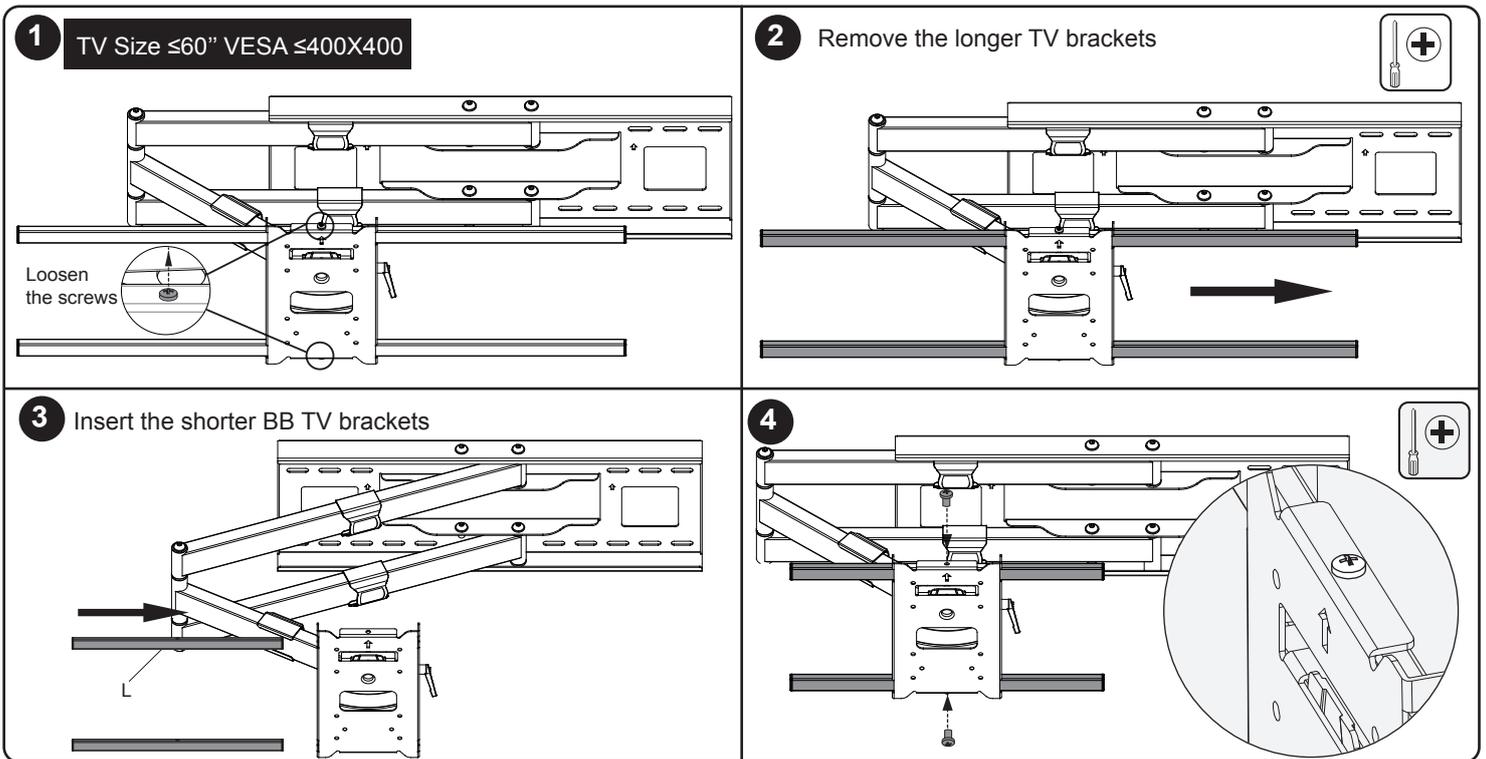


This mount comes with longer bars for VESA patterns greater than 400x400 preinstalled. If your TV is less than or equal to 400x400mm VESA pattern you will need to replace the preinstalled bars and replace them with the shorter VESA Bars (#C). Secure the shorter bars in place using the screw from the longer preinstalled bars.

Position the VESA Bars

TV Size $\geq 60''$ VESA $\geq 400 \times 400$

Loosen the screws

Tighten the screws



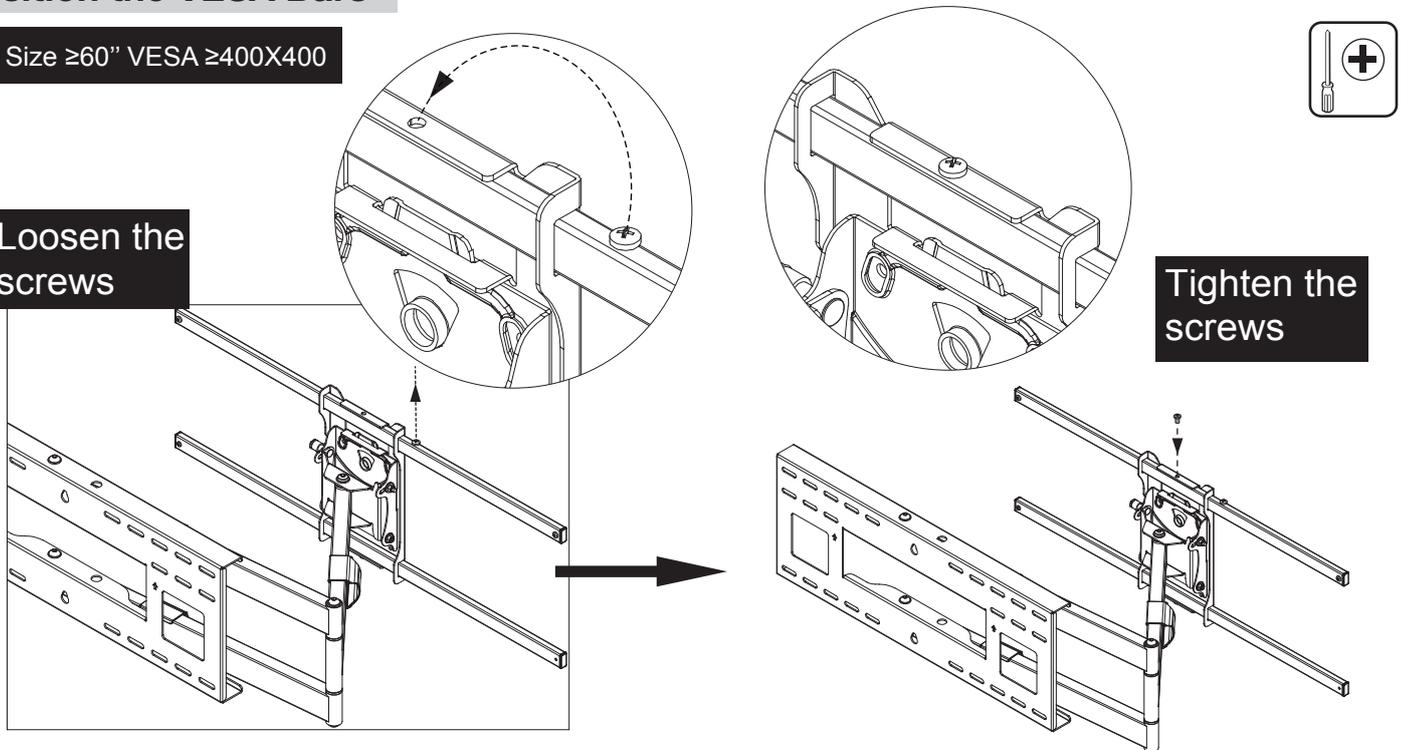


The VESA Bars are packed for compact transportation and require repositioning before use. Skip to Step 2 if the VESA pattern of your TV is 400x400 or smaller. Remove the screws on the VESA Bars and slide them until the screw holes align with the middle holes on the top and bottom of the center plate, then reinstall the screws to secure the bars in place. Note: Ensure both the top and bottom VESA Bars have been repositioned before continuing to the next step.

Step 2a

Concrete/Brick Wall Installation Option

1. Hold, tape or secure the Wall Template (#BB) to the wall at the desired installation location.
2. Use a bubble level to ensure the straightness of the Wall Template (#BB) and mark the locations for the 6 Lag Screws as shown. Once marked, remove the Wall Template (#BB)
3. Use a 3/8" drill bit and drill on the marked locations to a depth of 2.6". Note: Do not drill mounting holes into mortar (such as between bricks or stones) only drill and install into solid stone or concrete surfaces.
4. Clear any dust and debris from the holes and insert the 6 Concrete Anchors (#I). Hold the Mount (#J) to the wall over the holes and secure to the wall using all 6 Lag Screws (#H) and Lag Washers (#L).

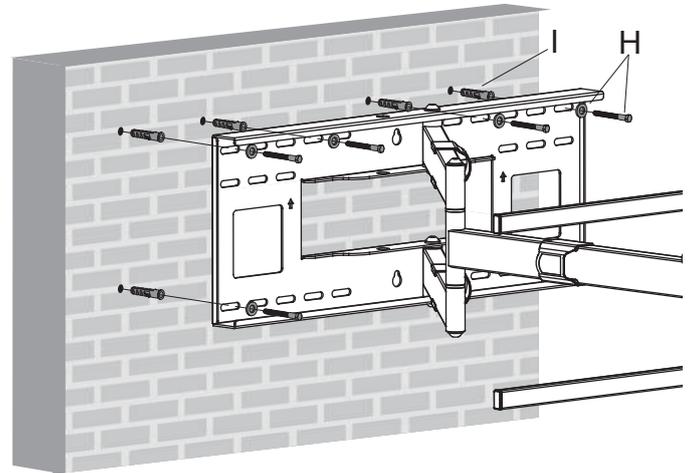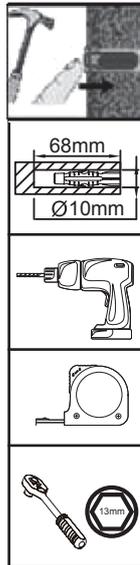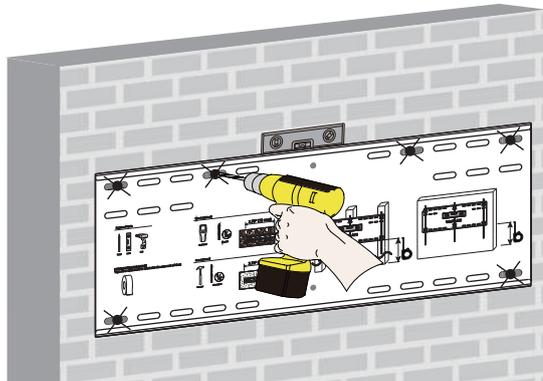

⚠ WARNING




Tighten screws so that wall plate is firmly attached, but do not overtighten. Overtightening can damage screws, greatly reducing their holding power.

Insert 6 x Wall Anchors (I) into holes. Secure the Wall Plate to the wall with 6 x Lag Bolts (H) and 6 x Washers (H).

Step 2b

Wood Stud/Solid Wood Stud Installation Option (Suitable for 16" or 24" apart studs)

1. Use a stud finder to locate the dry wall studs and mark their location with a pencil.
2. Hold, tape or secure the Wall Template (#BB) to the wall at the desired installation location.
3. Use a bubble level to ensure the straightness of the Wall Template (#BB) and on the center of each stud mark the locations for the 6 Lag Screws as shown. Once marked, remove the Wall Template (#BB)
4. Use a 7/32" drill bit and drill on the marked locations to a depth of 2.6".
5. Hold the Mount (#J) to the wall over the holes and secure to the wall using all 6 Lag Screws (#H) and Lag Washers (#H).

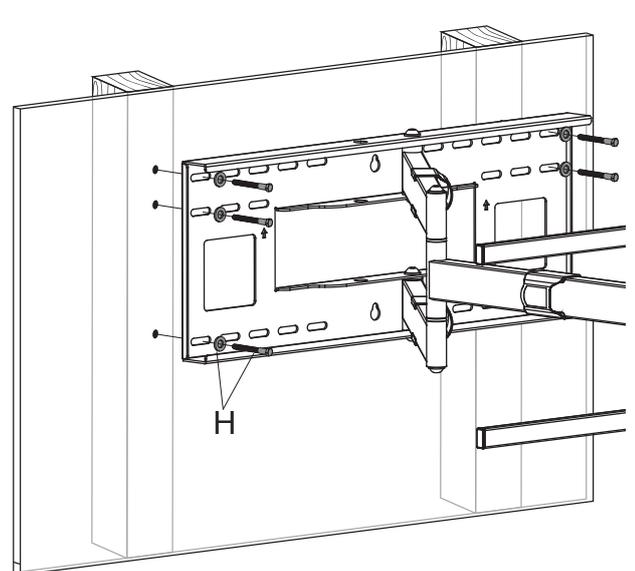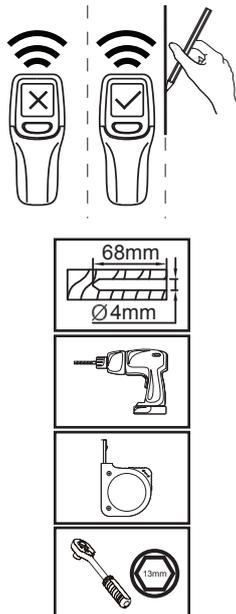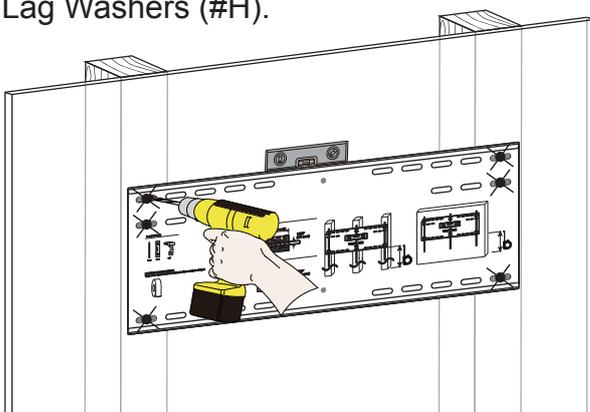

⚠ WARNING

Tighten screws so that wall plate is firmly attached, but do not overtighten. Overtightening can damage screws, greatly reducing their holding power.

Secure the Wall Plate to the wall with 6 x Lag Bolts (H) and 6 x Washers (H).

NOTE: Do not use Wall Anchor (I) for wood stud installation.

Step 3


Attaching the TV to the VESA Plate

INSTRUCTIONS: Select the appropriate size mounting bolt (Select one size #A, B, C, D, G) and washer (#E) for your display's mounting holes and verify the length of the VESA bolt is not too long. If you are unsure of the correct bolt size for your display refer to your TV user manual or contact the TV manufacturer for sizing information.


For TVs with VESA patterns 200x100 or greater use VESA Arm's (#K) and the appropriate bars (#L) chosen in Step 1. For VESA patterns 100x200 and smaller use the center plate as pictured on the right.

VESA(200X100-800X400)

A+E or B+E or C+E
Or D or G

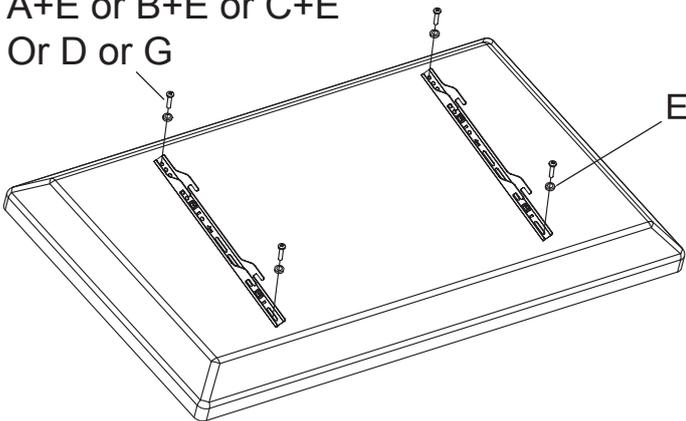

VESA(100X100-100X200)


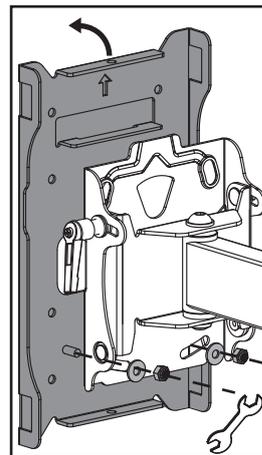


A+E or B+E or C+E

Attach the 2 x TV Brackets to the back of the TV by using screws A+E or B+E or C+E or D or G. **NOTE:** The hardware packet provided fits most TVs in the market. If your TV requires different hardware, please contact us at mount-it.com to procure additional hardware kits.

Step 4



Hanging TV On The Wall Mount Arms

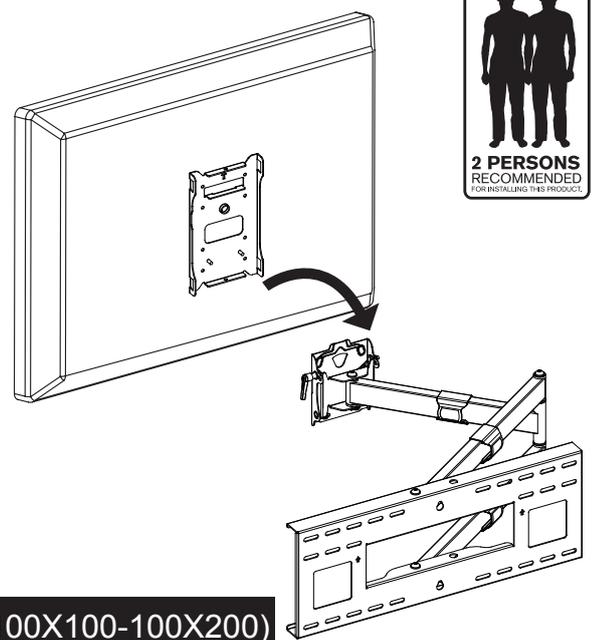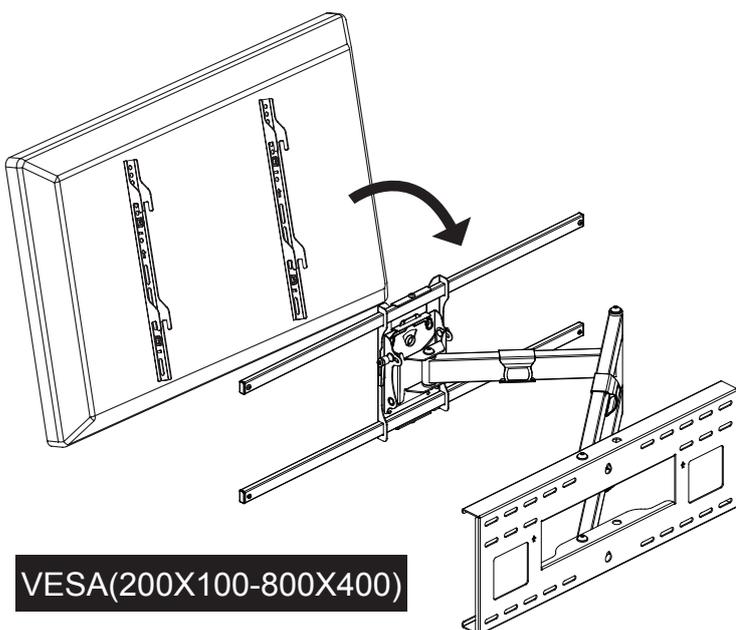


INSTRUCTIONS: Hang the TV on the mount arms as shown in the diagram. Caution: Two persons recommended for safe lifting and easier installation.

Step 5

Securing The TV On The Mount

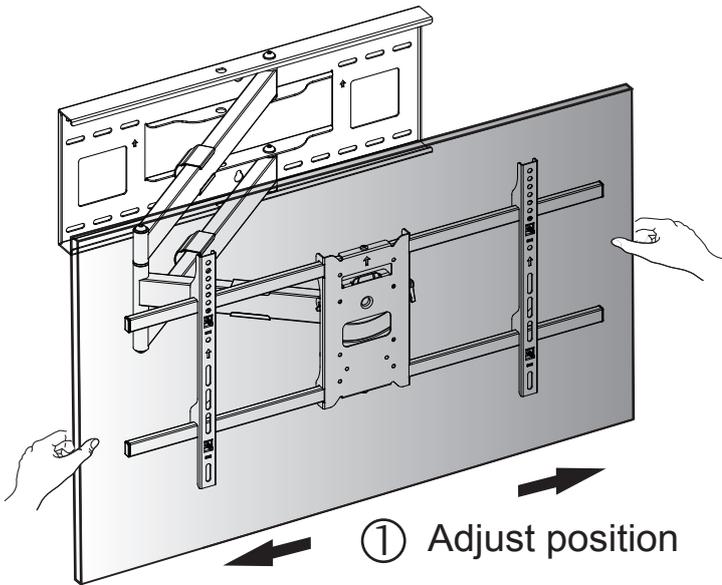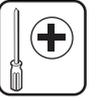

1.Center the TV on the mount arm so that the weight of the TV is balanced.

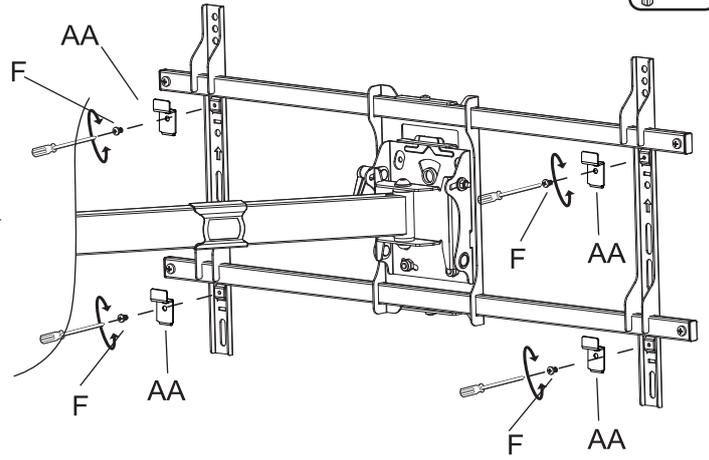


② Fixed locking plate

2.Attach Security Clips (#AA) in the locations shown and secure in place using Security Bolt (#F)


CAUTION: Failure to install Security Clips (#AA) can result in accidental damage, fall, or personal injury.

Step 6

Tilt adjustment -5° - $+10^{\circ}$

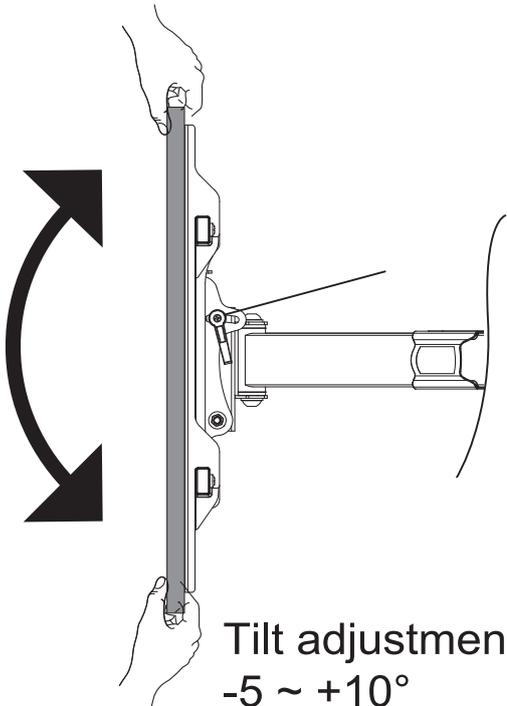

Tilt adjustment
 $-5 \sim +10^{\circ}$

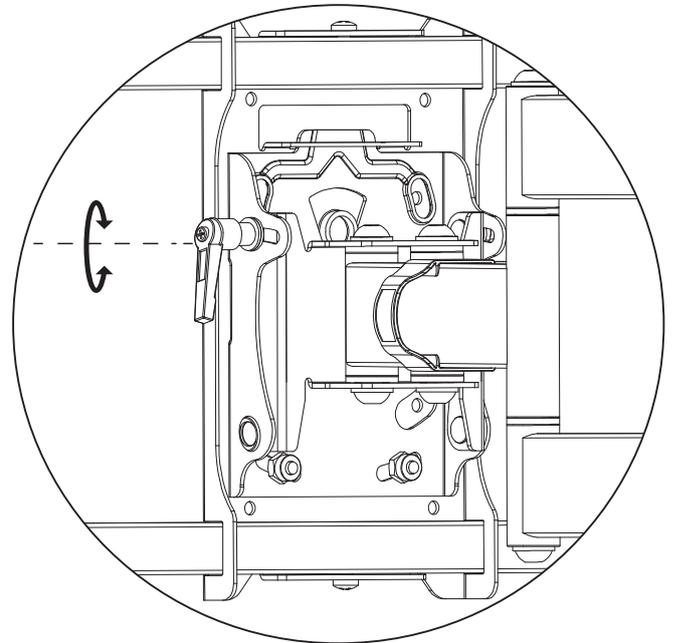


INSTRUCTIONS: The mount can tilt down up to 10 degrees and up 5 degrees. To adjust the tilt angle of the TV, loosen the tilt adjustment lever shown here then adjust the tilt to the desired angle and tighten the tilt adjustment lever back down.

Note: If the screen tilts down slowly over time adjust the screen back to the proper angle and ensure the tilt adjustment lever and the nut on the opposite side are firmly tightened.

Step 7

Leveling adjustment -5° - +5°

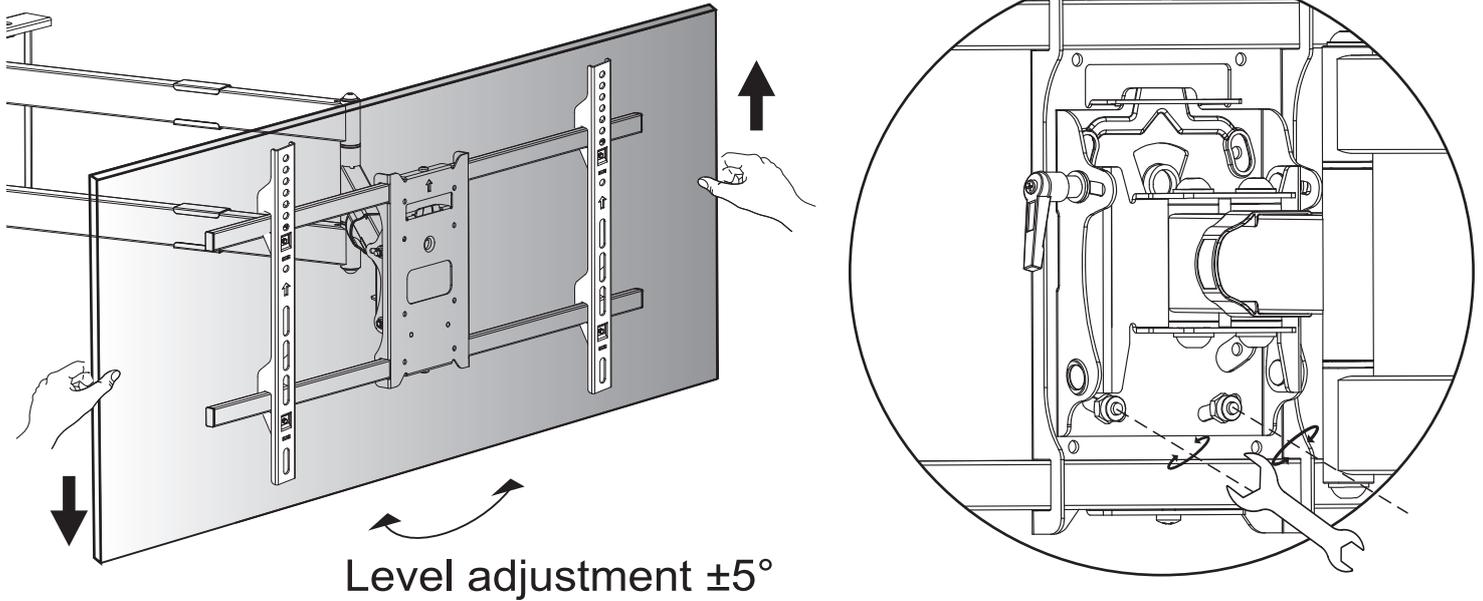


INSTRUCTIONS: The mount allows up to 5 degrees of levelling adjustment post installation. To adjust the level of the TV, place a bubble level on top of the TV, loosen the 2 nuts located behind the VESA plate (shown in the magnification bubble) level the TV and tighten the 2 nuts again to lock the TV in position.

Step 8

Cable Management

Use the integrated cable management clips on the arms to route cables to the back or side of the TV.

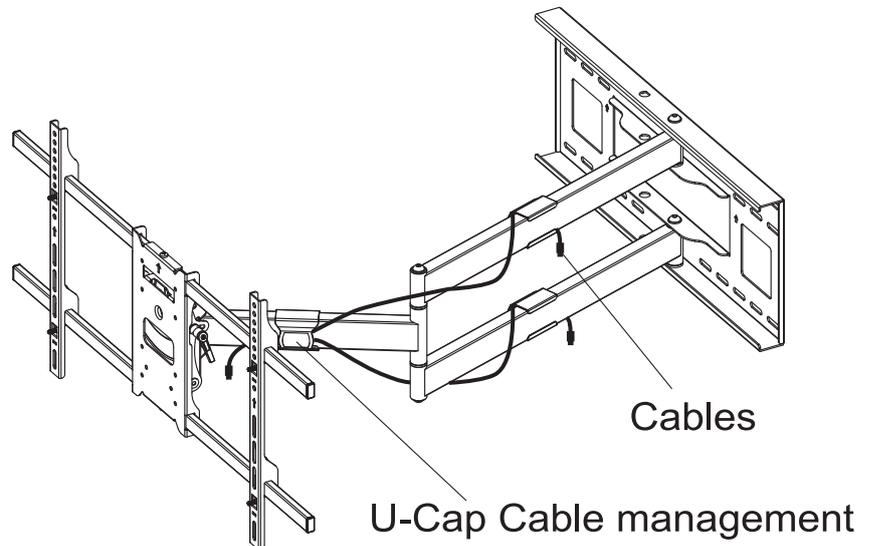

Visit us at www.mount-it.com for product registration and warranty information.

Our US based customer service team is standing by to answer any questions you have about your Mount-It! product.

Available by phone **Monday - Friday from 8:00am to 4:00pm PST.**

Chat live with an agent on our website!



support@mount-it.com



(855) 925-5668



www.mount-it.com