


BOSTITCH®

Bluetooth Speaker LED Desk Lamp

MODEL VLED1817WHITE-BOS

Congratulations on the purchase of your Bostitch® product!

Please read these instructions completely and carefully before using this product. Keep this instruction sheet for future reference.

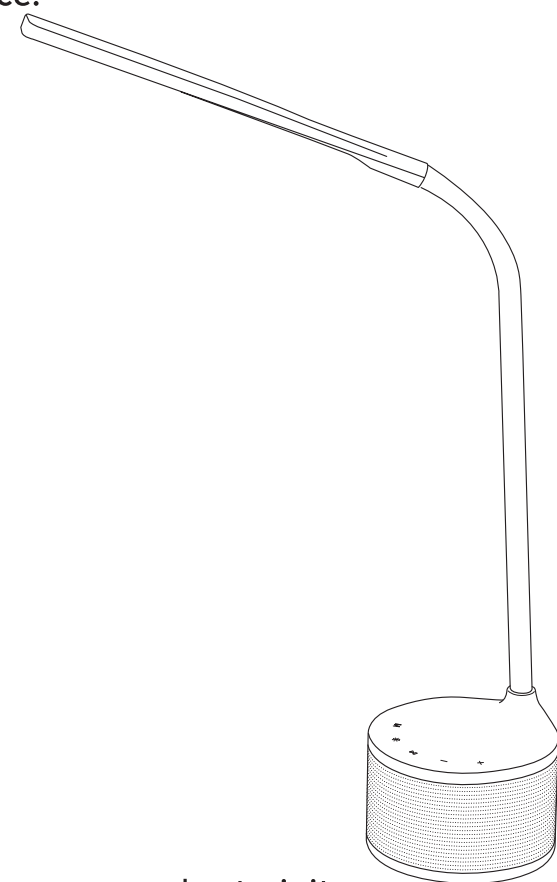

To register your product visit BostitchOffice.com/New-Product

SAFETY GUIDELINES - DEFINITIONS

It is important for you to read and understand this manual. The information it contains relates to protecting YOUR SAFETY and PREVENTING PROBLEMS. The symbols below are used to help you recognize this information.

⚠ DANGER: Indicates an imminently hazardous situation, which if not avoided, will result in death or serious injury and/or property damage.

⚠ WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury and/or property damage.

⚠ CAUTION: Indicates a potentially hazardous situation, which if not avoided, may result in minor or moderate injury and/or property damage.

NOTICE: Used without the safety alert symbol indicates potentially hazardous situation which, if not avoided, may result in property damage.

IMPORTANT SAFEGUARDS

Bostitch Desk Lamps are intended for indoor office and home use and have not been tested for operation at different voltages or use outdoors. Each of these misuses could damage the light and/or create unsafe operating conditions.

TO REDUCE THE RISK OF INJURY

Before any use, be sure everyone using this light reads and understands all safety instructions and other information contained in this manual.

⚠ CAUTION: Failure to comply with the recommendations outlined in this instruction manual will void warranty.

⚠ WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE

⚠ WARNING: To reduce the risks associated with impact and hazardous voltage which, if not avoided, could result in death or serious injury and/or property damage.

- Use indoors and in dry locations only; keep all liquids away from the light
- Avoid putting the light on an uneven surface to prevent toppling or damage
- Do not alter or modify the light, ground plug, or polarized plug blades
- Do not use light with other adapters or voltage supplies
- Plug the light into grounded, polarized electrical outlet; contact a qualified electrician if a polarized outlet is not available
- Do not use the light if the power cord or the enclosure is damaged
- If an extension cord is used, ensure that it is properly rated for your application
- Do not attempt to disassemble light; product is to be serviced by qualified service personnel only—there are no user serviceable parts inside
- Always power off and unplug light before cleaning
- Clean exterior only with a dry, clean cloth; do not immerse light in water to clean
- Do not use force when adjusting light
- Do not insert objects into light
- If any irregularities are detected during use, turn off the switch and unplug the light.

⚠ WARNING: To reduce the risks associated with excessive heat and fire which, if not avoided, could result in death or serious injury and/or property damage.

- Avoid usage in high temperature areas.(104°F/40°C)
- Avoid putting light next to heater.
- Lights should not be covered with flammable objects. (cloth, paper, etc.)

⚠ CAUTION: To reduce the risks associated with environmental contamination which, if not avoided, could result in minor or moderate injury:

- Dispose of task lights in accordance with applicable local government regulations.


INTENDED USE: Bostitch Desk Lamps are intended to provide task lighting indoors. Use in any other application has not been evaluated by Bostitch and may lead to an unsafe condition.

POWER ADAPTER STANDARDS: Input: 100-240V~50/60Hz 0.4A/Output: 5V 2A 10W Max/ Efficiency Level VI

PRODUCT FEATURES

Product may vary slightly from what is illustrated.

- A. Adjustable Lamp Head
- B. Control Panel
- C. Status Indicator Light
- D. DC 5V Input
- E. Power Indicator
- F. USB Output
- G. Audio Line-In
- H. Audio Cable (Not Pictured)

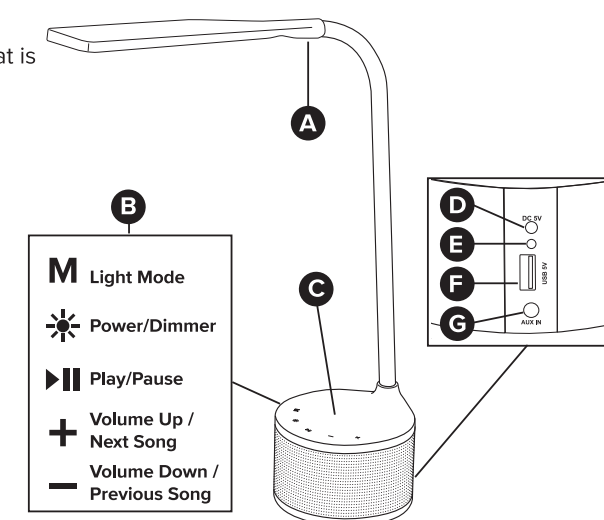

| CURRENT MODE | FUNCTION | BUTTON | OPERATION | STATUS INDICATOR |
|----------------|-------------------------------|--------|-------------------------|------------------|
| Power Off | Power On | ▶▶ | Hold Down | Flashes Rapidly |
| Power On | Power Off | ▶▶ | Hold Down | Off |
| Power On | Bluetooth Pairing | | Manually Pair | Flashes Rapidly |
| Power On | Bluetooth Paired Successfully | | Automatically Pair | Flashes Slowly |
| Play Mode | Volume Up | + | Hold Down | |
| Play Mode | Volume Down | - | Hold Down | |
| Play Mode | Previous Song | - | Touch Once | |
| Play Mode | Next Song | + | Touch Once | |
| Play Mode | Pause/Play/Mute | ▶▶ | Touch Once | |
| Bluetooth Mode | AUX Line In | | Insert Audio Cable | On |
| Bluetooth Mode | Disconnect Bluetooth | ▶▶ | Hold Down for 2 Seconds | |
| Power On | Lamp On/Off | ☀ | Touch Once | |
| Lamp On | Dimming | ☀ | Hold Down | |
| Lamp On | Light Mode Switch | M | Touch Once | |

BLUETOOTH PLAYBACK

- 1 Hold down Play/Pause button to turn on the speaker; The status indicator light will flash quickly and the speaker will beep to indicate it's turned on.
- 2 Navigate to your phone or tablet's Bluetooth settings and scan for available devices; Search for the speaker (HITING) and select to pair; If a pairing code is required enter 0000.
- 3 After successfully pairing, the speaker will beep and the status indicator light will flash slowly to indicate it's ready to play music wirelessly; Press the Play/Pause button to play music.
- 4 Keep your paired device in range (within 26') at all times to ensure streaming connectivity.
- 5 If the pairing times out or status indicator stops flashing, please turn off the power to restart and repeat steps 1-3.
- 6 To disconnect your device, hold down the Play/Pause button for two seconds; To repair the previous device touch the Play/Pause button again; Hold down the Play/Pause button to turn off the Bluetooth.

AUDIO INPUT: The speaker will automatically switch to audio input mode when the audio cable is inserted into the audio line-in and the status indicator is on. To achieve the best sound, ensure that the other end of the audio cable is securely inserted into a cell phone, tablet, iPod, MP3 player or other audio device.

POWERING THE LIGHT/USING THE DIMMER: Tap the Power/Dimmer button once to turn the light on; Tap it again to turn the light off; Press and hold the Power/Dimmer button to cycle through brightness levels.

USING THE COLOR MODES: Ensure that the light is powered on; Press the Light Mode button to cycle through color modes.

USB CHARGING PORT: USB charging port (5V, 2A) charges the batteries of most standard USB compatible devices.

| SENSITIVITY | FREQUENCY | DISTORTION |
|-------------|--------------|------------|
| ≥ 60DB | 100HZ- 20kHz | ≤ 0.5% |

| LUMENS | EFFICACY | KELVIN | WATTS | CRI |
|--------|----------|-----------|-------|-----|
| 120 | 22 | 2700-6500 | 5.5 | 90 |

USAGE + CARE

- Don't pick up and carry light by its arm
- Always hold the light base while adjusting the arm
- Lights should not be covered with flammable objects (cloth, paper, etc.)
- Avoid putting the light on an uneven surface to prevent toppling or damage
- Avoid usage in high temperature areas (104°F/40°C)
- Avoid usage in humid and wet areas (showers, outdoors, etc.)
- Avoid putting next to a heater
- Do not use force when adjusting the light arm
- Do not use the light with other adapters
- Do not use the light with other voltage supplies
- Do not attempt to dismantle, modify, or force the light apart
- Do not insert objects into the light
- If not in use for a prolonged period of time, unplug light from power source
- Do not come in contact with the light, cord, plug, and/or socket with wet hands
- If any irregularities are detected during use, turn off and remove from power source immediately

MAINTENANCE: Always remove light from power source before performing any maintenance. Light cannot be washed in water. If dirty, unplug from power source and wipe with a clean cloth.

THREE-YEAR LIMITED WARRANTY

Effective July 1, 2018 Amax Inc. warrants to the original retail purchaser that the product purchased is free from defects in material and workmanship, and agrees to repair or replace, at Amax's option, any defective Bostitch® branded desk lamp three (3) years from the date of purchase. Warranty is not transferable. Proof of purchase date required. This warranty covers only damage resulting from defects in material or workmanship; it does not cover conditions or malfunctions resulting from normal wear, neglect, abuse, accident, or repairs attempted or made by other than our national repair center or authorized warranty service centers. You are responsible for the costs of shipping the defective product to Amax Inc.

THIS WARRANTY IS THE EXCLUSIVE WARRANTY OF AMAX INC., AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURCHASE. AMAX INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country. For information on our warranty claim procedure, please contact us at 800-343-9329.

For troubleshooting, questions and customer care, please visit us at BostitchOffice.com or contact us at 1-800-343-9329.

USA & Canada:
Manufactured under license by:
Amax Incorporated
East Greenwich, RI 02818
800.343.9329
A01237

Copyright © 2018 Amax Incorporated

