



美商海盗船



# VOID RGB ELITE WIRELESS



# VOID RGB ELITE WIRELESS

具有 7.1 声道环绕立体声的优质无线游戏耳机  
Premium Wireless Gaming Headset with 7.1 Surround Sound



美商海盗船

官方网站: [corsair.com](https://corsair.com)

技术服务热线: 400 841 7130

支持: [support.corsair.com](mailto:support.corsair.com)

博客: [corsair.com/blog](https://corsair.com/blog)

论坛: [forum.corsair.com](https://forum.corsair.com)

微信: CorsairRMA

© 2019-2021 CORSAIR MEMORY, Inc. 版权所有。  
实物可能与所示图片不同。进口商: 可赛尔 (深圳) 贸易有限公司  
产地: 越南 | 产品: 耳机 | 49-001920 AB  
© 2019-2021 CORSAIR MEMORY, Inc. All rights reserved.

 
 
 




中文 .....	1
ENGLISH .....	5

## 控件和功能

- A** 头带调节
- B** 电源按钮
- C** 静音按钮
- D** RGB 灯 (用户可编程)
- E** 麦克风防风泡棉 (可拆卸)
- F** 麦克风 LED 灯 (静音)
- G** 状态 LED 灯 (RF、电池)
- H** 飞梭旋钮 (音量 + EQ)
- I** 充电端口
- J** 无线同步 LED 指示灯
- K** 配对按钮 (默认配对发射器)

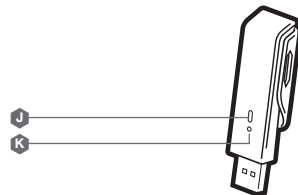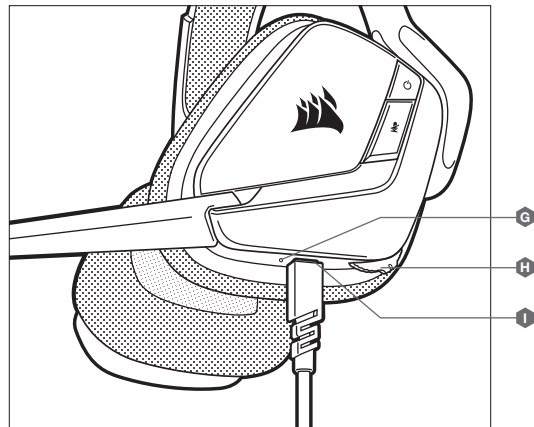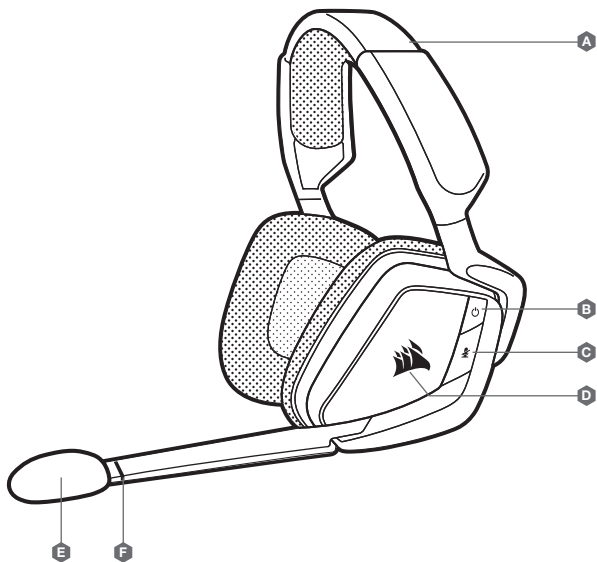

## 开始使用 VOID RGB ELITE 无线耳机

将无线 USB 发射器连接到 PC 上可正常工作的任何 USB 端口。耳机可在与无线发射器相距达 12 米 (40 英尺) 的范围内工作, 但其他无线设备、电子设备及其他障碍 (例如墙) 可能会影响这款耳机的无线工作范围。

**重要提示:** 初次在 PC 上使用美商海盗船 VOID RGB ELITE 无线耳机时, 操作系统会自动安装设备驱动程序。我们建议在设备驱动程序加载后重新启动 PC, 然后再开始使用耳机。长时间以高音量收听音频可能会损害听力。应每隔一段时间休息一下, 而且刚开始时应尽可能将音量调至较低水平, 然后再调高。

## iCUE

请访问 [corsair.com/support/downloads](https://corsair.com/support/downloads) 下载 iCUE 软件。  
使用 iCUE 软件可启用耳机的全套功能。



**注意:** 如果不使用软件的情况下使用耳机, 某些功能将禁用。

- > 在运行 Windows 7、Windows 8.1、Windows 10 或更高版本的 PC 上安装 iCUE 软件。
- > 安装完成后, 重新启动 PC, 然后启动 iCUE。

iCUE 软件可用于

- > 选择 RGB 颜色偏好和灯光亮度。
- > 选择和自定义音频均衡器 (EQ) 设置。
- > 调节麦克风输入音量和麦克风侧音。
- > 打开或关闭 7.1 声道环绕声。

软件随附的文档更详细地介绍了如何使用耳机的功能。

## 状态 LED 指示:

单闪红灯	= 已连接, 电池电量低
单闪绿灯	= 已连接, 电池电量正常
单闪绿灯	= 已中断连接, 电池电量低
快闪绿灯	= 已中断连接, 电池电量正常
持续亮琥珀灯	= 电池充电中
持续亮绿灯	= 电池已充满
快闪琥珀灯	= 配对模式

## 正在充电

美商海盗船 VOID RGB ELITE 无线耳机在初次使用之前必须充满电。

- > 将 USB 充电线连接到 PC 上可正常工作的任何 USB 端口。
- > 将 USB 充电线连接到美商海盗船 VOID RGB ELITE 无线耳机。

美商海盗船 VOID RGB ELITE 无线耳机的电池没有“记忆效应”, 因此, 重新充电前无需完全放电。

请记住, USB 充电线需要使用高功率 (USB 2.0 或更好) 端口。旧式设备上的一些 USB 端口不支持 USB 2.0。

## 音频设置

- 短按 (0.1-0.5 秒) 飞梭旋钮开关均衡器。
- 按住 (0.6-2 秒) 飞梭旋钮开关 7.1 环绕声。

## 麦克风控制

- 短按 (0.1-0.5 秒) 麦克风静音按钮开启/关闭静音。
- 长按 (2 秒 - 4 秒) 麦克风静音按钮开启和关闭侧音。

 
 
**注意:** iCUE 软件也可用于控制这些功能。

## 为了获得更好的无线性能

- > 将无线 USB 接收器基座放置在无障碍的开阔区域。
- > 确保在首次使用之前给电池充满电。
- > 不要让电池长期保持完全放电状态。使电池保留有部分电量可更大程度地延长电池续航时间。
- > 如果 RGB 照明效果对您而言不重要, 则可以通过 iCUE 禁用, 以延长电池使用时间。
- > 耳机充满电后, 立即拔掉 USB 充电线。
- > 将耳机放置在室温环境中 (20-30°C 或 68-86°F)。

## CONTROLS AND FEATURES

- A** Headband adjustment
- B** Power button
- C** Mute button
- D** RGB light (user programmable)
- E** Microphone foam windscreen (removable)
- F** Mic LED (mute)
- G** Status LED (RF, battery)
- H** Jog dial (volume + EQ)
- I** Charging port
- J** Wireless sync LED indicator
- K** Pairing button (transmitter paired by default)

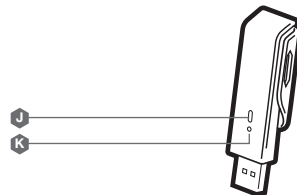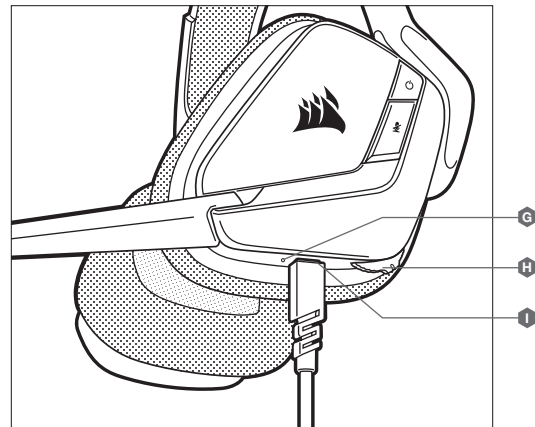

## GETTING STARTED WITH YOUR VOID RGB ELITE WIRELESS HEADSET

Connect the wireless USB transmitter to any working USB port on your PC. The headset is designed to operate at a range of up to 40 feet (12m) from the wireless transmitter, but other wireless devices, electronics, and obstructions such as walls may reduce wireless range.

**IMPORTANT:** The first time you use the CORSAIR VOID RGB ELITE WIRELESS Headset on a PC, the operating system will automatically install the device driver. After the device driver loads, we recommend you reboot your PC before use. Prolonged listening at high volumes may adversely affect your hearing. Take breaks between sessions and always begin with the volume at the lowest possible level before increasing.

## iCUE

Go to [corsair.com/support/downloads](https://corsair.com/support/downloads) to download the iCUE Software. Using the iCUE software will enable the full feature set of your headset.



**NOTE:** If the headset is used without software, some features will be disabled.

- > Install the iCUE software on a PC running Windows 7, Windows 8.1, Windows 10 or later.
- > After installation is complete, reboot your PC, and launch iCUE.

### iCUE SOFTWARE CAN BE USED TO

- > Choose your RGB color preference and light intensity.
- > Select and customize audio equalizer (EQ) settings.
- > Adjust microphone input volume, and microphone sidetone.
- > Set 7.1 surround sound on or off.

The software's built-in documentation explains how to use the headset's features in greater detail.

## STATUS LED INDICATIONS

Single blink red	= connected, battery low
Single blink green	= connected, battery normal
Rapid blink red	= disconnected, battery low
Rapid blink green	= disconnected, battery normal
Solid amber	= battery charging
Solid green	= battery charged
Rapid blink amber	= pairing mode

## CHARGING

The CORSAIR VOID RGB ELITE WIRELESS Headset must be fully charged before its first use.

- > Connect the USB charging cable to any working USB port on your PC.
- > Connect the USB charging cable to the CORSAIR VOID RGB ELITE WIRELESS Headset.

The CORSAIR VOID RGB ELITE WIRELESS Headset battery has no "memory effect", so there is no need to completely discharge it before recharging.

Remember that the USB charging cable requires a high power (USB 2.0 or better) port. Some USB ports found on older devices do not support USB 2.0.

## AUDIO SETTINGS

Short key press (.1-.5 seconds) on JOG DIAL toggles EQ.

Medium key press (.6-2 seconds) on JOG DIAL toggles 7.1 surround sound.

## MIC CONTROL

Short key press (.1-.5 seconds) on mic mute button toggles mute on and off.

Long key press (2-4 seconds) on mic mute button toggles sidetone on and off.

**NOTE:** iCUE software can also be used to control these features.

## FOR OPTIMAL WIRELESS PERFORMANCE

- > Place the wireless USB transmitter in an open, unobstructed area.
- > Make sure the battery is fully charged before initial use.
- > Do not leave the battery fully discharged for long periods. Battery life is maximized by keeping the battery in a partially charged state.
- > If RGB lighting effects are unimportant to you, they can be disabled with iCUE to extend battery life.
- > Remove the USB charging cable promptly after the headset has been fully charged.
- > Keep the headset at room temperature (20-30°C or 68-86°F).