 




TrueReach
HDMI Wireless EXTENDER
4K/60Hz Point to Point Extender

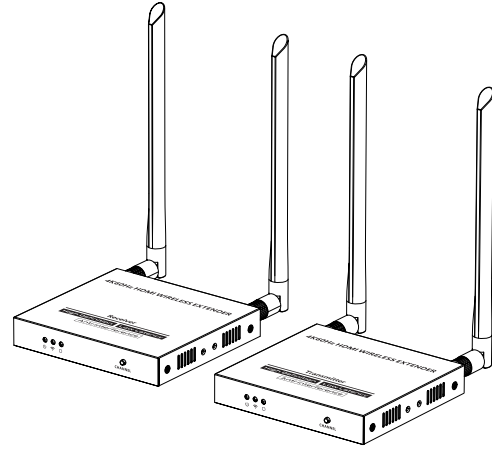

User Manual
Y10G005-B1



Important Safety Instructions:

- Do not expose this device to rain or place it near water. Any liquid that goes into the device may cause a device failure, fire, or electric shock.
- Do not insert any objects into the open parts of this device. This may cause a danger of electric shock.
- Do not place this device near or over a radiator or heat register, or where it is exposed to direct sunlight.
- The device should be repaired only by a qualified technicians.
- If a third-party power supply is used, please ensure that the power supply specifications meet the product requirements.

Introduction

The Rocstor TrueReach 4K@60Hz HDMI wireless extender, includes a transmitter and a receiver. It provides ipcolor PIXEL technology which provides a high definition and low-latency transmission. It is based on the 5G wireless frequency bandwidth, with stable anti-interference and safety performance. It supports 1-to-1 wireless transmission, and the transmission distance can reach 164 ft (50m). Effectively solving problems caused by complicated wiring. It's an ideal wireless video transmission solution for video conferences, home entertainment, multimedia education, and more.

Note:

- Transmission distances may vary depending on the environment.
- Signals may be reduced or completely lost by solid structures such as walls, bricks, and glass.
- The surrounding wireless signal may cause certain interference to the transmission, and the channel can be switched to reduce the interference.

Features

- Includes ipcolor PIXEL technology for a high definition and low-latency transmission.
- Supports up to 3840x2160@60Hz resolution, backward compatible.
- Supports wireless transmission up to 164 ft (50m) line of sight.
- The transmitter supports HDMI loop out.
- In case of multiple sets of products in the same area, this device supportd SSID pairing and channel switching to avoid interference.
- Supports IR passback.
- Supports 5G wireless frequency bands for a strong anti-interference.
- Supports firmware upgrade via Micro USB port.

 
Package Contents




Transmitter x1




Receiver x1



5V 2A power adapter x2

 

IR receiver extension cable x1

 

IR blaster extension cable x1



Antenna x4



Mounting ear x4



Screw x10



Grounding screw x2



 
User manual x1

Installation Requirements

- HDMI source device (DVD, game console, PC, etc.)
- HDMI display device (TV, projector, LED screen, etc.)

Panel Description

1. Transmitter (TX)

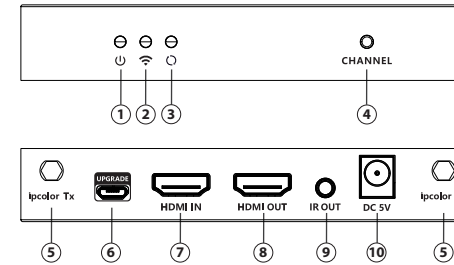


1	Power indicator	The indicator will turn blue when the power is turned on
2	WiFi indicator	a) Slow flash: waiting for connection b) Steady on: connection succeeded c) Quick flash: SSID Pairing mode
3	Signal indicator	a) Light off: no HDMI signal b) Steady on: HDMI signal is transmitting c) Quick flash: restore factory settings
4	Channel switch button	a) press to switch channels b) Press and hold 5s for SSID pairing c) Press and hold 10s for restore factory settings

Panel Description

5	Antenna connectors	Connect with antennas
6	Micro USB port	Used for firmware upgrade
7	HDMI input	Connect with HDMI source device with HDMI cable
8	HDMI output	Connect with local HDMI display device with HDMI cable
9	IR out	Connect with IR blaster extension cable
10	Power input	Connect with DC 5V/2A power adapter

 2. Receiver (RX)

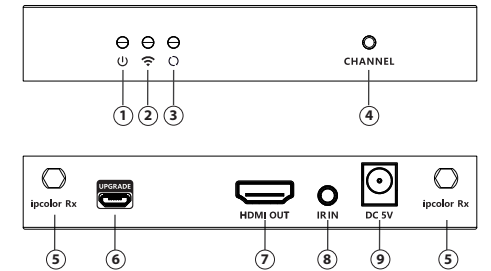

1	Power indicator	The indicator will turn blue when the power is turned on
2	WiFi indicator	a) Slow flash: waiting for connection b) Steady on: connection succeeded c) Quick flash: SSID Pairing mode

Panel Description		
3	Signal indicator	a) Light off: no HDMI signal b) Steady on: HDMI signal is transmitting c) Quick flash: restore factory settings
4	Channel switch button	a) After connecting with TX, press to switch channels b) Press and hold 5s for SSID pairing c) Press and hold 10s for restore factory settings
5	Antenna connectors	Connect with antennas
6	Micro USB port	Used for firmware upgrade
7	HDMI output	Connect with HDMI display device with HDMI cable
8	IR in	Connect with IR receiver extension cable
9	Power input	Connect with DC 5V/2A power adapter

Installation Procedures

1. Connection Diagrams

One to one connection

6

Installation Procedures

2. Connection Instructions

- Connect the source device to the HDMI IN port of the transmitter with an HDMI cable, and connect the HDMI OUT port of the receiver to the display device with another HDMI cable.
- If using the IR passback function, connect the IR blaster extension cable into the IR OUT port of the transmitter, and connect the IR receiver extension cable into the IR IN port of the receiver.
 - The emitter of the IR blaster extension cable should be as close as possible to the IR receiving window of the source device.
 - Point the remote control at the receiving head of the IR receiver extension cable to operate.
- Plug the power supply into the devices to get started.
- In the case of multiple sets being used at the same time in the same area, switch each set of transmitters and receivers to a different channel after they have been manually paired with the SSID to prevent interference,

3. SSID Pairing

- Enter the SSID pairing mode by holding the transmitter and receiver's channel switch buttons for five seconds. Both WiFi connection indicators will flash quickly in blue.
- When the SSID pairing is successful, the WiFi indicators on the transmitter and receiver will change from quick flashing to slow flashing or steady ON.

NO.	Frequency
Channel 1	5.180 GHz
Channel 2	5.200 GHz
Channel 3	5.220 GHz
Channel 4	5.240 GHz

7

FAQ

Q: Why the receiver and transmitter cannot be connected, showing "Search Tx..." on the screen?
 A: 1) Move transmitter and receiver closer.
 2) Re-power the transmitter or receiver.
 3) Re-pair the transmitter and receiver.

Q: Why the Wi-Fi indicator is steady on but showing "Please check the TX input signal" ?
 A: 1) Make sure the TX has HDMI input and that the resolution is within the specified range.
 2) Try to connect the signal source directly to the display device, or change the signal source and HDMI cable and test again.

Q: Why is the display stuttering or unstable?
 A: 1) Place the transmitter or receiver within the signal coverage and minimize obstructions between the transmitter and receiver.
 2) Switch to a different channel to avoid interference from other wireless signals.
 3) Re-power the receiver or transmitter.

Disclaimer

©2023 Rocstroge, Inc. Rocstor is registered trademark of Rocstorage, Inc. The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. The product name and brand name may be registered trademark of related manufactures.™ and ® may be omitted on the user manual. The pictures in this user manual are just for reference. We reserve the rights to make changes without further notice to a product or system described herein to improve reliability, function or design.

8

Specification

Items	Specifications	
Power Supply	Voltage/Current	DC 5V/2A
	Power consumption	TX ≤ 6W, RX ≤ 4W
HDMI Performance and Interface	HDMI version	HDMI 2.0
	HDCP version	HDCP 1.4/HDCP 2.2
	Maximum transfer rate	18Gbps
	Resolution supported	3840x2160@24/30/50/60Hz, 1080P@50/60Hz, 720P@50/60Hz, 1920x1200, 2560x1440, 2560x1600
	Input and output TMDS signal	0.7~1.2Vp-p (TMDS)
	Input and output DDC signal	5Vp-p (TTL)
Transmission	Wi-Fi Frequency bands	5.18~5.24 GHz
	Transmission distance	≤ 50m
	Latency	130~180ms
	Connection types	One-to-one
	SSID pairing	Supported
Protection Level	ESD protection	
	1a Contact discharge level 3 1b Air discharge level 3 Standard: IEC61000-4-2	
IR Performance	Infrared frequency	20~60kHz
	Receiving range	≤ 5m
Operating Environment	Working temperature	-20~60°C
	Storage temperature	-30~70°C
	Humidity (no condensation)	0~90% RH

9

Specification

Physical Properties	Dimension	TX: 115(W) x 125(L) x 20.6(H) mm RX: 115(W) x 125(L) x 20.6(H) mm
	Color	Black
	Material	Iron
	Net weight	TX: 353g; RX: 346g

Contact Information

Corporate Headquarters
 12979 Arroyo Ave
 San Fernando, CA 91340 - USA

Office: +1 (818) 727-7000
 Fax: +1 (818) 875-0002
 Email: info@Rocstor.com

Technical Support / RMA
 Hours: 9:00 am - 5:00 pm PST
 Mon - Fri (excluding holidays)

Sales Info
 Hours: 8:00 am - 5:00 pm PST
 Mon - Fri (excluding holidays)

Tell: +1 (818) 727-7000 (DOM/INTL)
 Fax: +1 (818) 875-0002
 Email: support@Rocstor.com

Tell: +1 (818) 727-7000 (DOM/INTL)
 Fax: +1 (818) 875-0002
 Email: support@Rocstor.com

Corporate, Government and Academic Customers
 Our Corporate Sales Team's goal is to help our U.S.A. and Canadian customers find a storage solution that best serves their needs. We will help you determine your best purchasing options. For more information please contact the appropriate department below or call us at +1 (818) 727-7000.

General sales information: sales@Rocstor.com
 Corporate sales information: corporate_sales@Rocstor.com
 Educational sales information: academic_sales@Rocstor.com
 Federal, State & Local government sales information: government_sales@Rocstor.com

Resellers/Business Development/OEM Partners
 All Channel National and International Resellers, VARs, Consultants ...
 contact Rocstor Channel Sales: call: +1 (818) 727-7000
 Email: reseller_info@Rocstor.com

10