

US UK

Dear user

Thank you for you choosing **REDRAGON** Brand, to protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot stick) and spare parts replacement are no included in our warranty.

1

OS support

Windows XP/Vista/Win7/Win8/Win10/Win11

Function Introduction

1. With standard USB interfaces, the keyboard can be used on computers without any software or driver installation.
2. 26 keys non conflict: Q,A,Z,W,S,X,E,D,C,R,F,V,T,G,B,M,Space,Tab,Ctrl-L,Alt-L,Shift-L, ↑, ↓, ←, →, caps lock.
3. There are 6 backlight effects including one for user's definition:

Operation	Backlight Mode	Description
[FN]+[Insert]	Gradient	Backlight changes gradually as the following sequence automatically: red, yellow, green, cyan, blue, purple, white
[FN]+[Home]	Single Color	Color changes for each strike as this sequence: Red, yellow, green, cyan, blue, purple, white.
[FN]+[Page Up]	For user's Definition	(See Note below)
[FN]+[Delete]	Running & Neon Light	Light runs like neon light
[FN]+[End]	Breathing Backlight	Single color breathing or Gradient breathing
[FN]+[Page Down]	Activate Radiate	Color changes as the following sequence : red, yellow, green, cyan, blue, purple, white

2

Note:Press [FN]+[PageUp] twice to start backlight setting.The three LED indicators flashes at the same time. Press [FN]+[1]~[6] once or repeatedly to set the backlight color in different part of the keyboard from left to right or vise versa. Press [FN]+[PageUp] once again to save the setting.

4. Press [FN] + [Win] To disable or enable the [Win] key.
5. Press [FN] + [←] to slow down the speed of breathing backlight .
6. Press [FN] + [→] to add up the speed of breathing backlight.
7. Press [FN] + [↑] to increase the backlight brightness of the keyboard.
8. Press [FN] + [↓] to decrease the backlight brightness of the keyboard.
9. Marco recording function:
 - 1)The default setting of the five G keys are the same as F1~F5 correspondingly.
 - 2)Macro recording function:
 - Step 1: Press [Rec] to start record (The three LEDs flash simultaneously).
 - Step 2: Press one of the five G keys (G1~G5).
 - Step 3: Press any keys to be recorded. E.g.
 - Step 4: Press [Rec] once again to save the recording.For example, record "123" on G1: [Rec]→ G1→123→[Rec].
 - 3)How to clear the record:
 - 3.1) To clear a single recorded macro key: Press [Rec], then press desired G key(G1~G5), finally press [Rec] once again to clear the record.
For example, to clear Marco record "123" on G1: [Rec]→G1→[Rec].
 - 3.2) To clear all macro keys (G1~G5):Press and hold FN+ [Rec] for about 5 seconds, the three LEDs flashes once.
10. Press [FN] + [ESC]+[F1]+[F3]+[F5] to set the keyboard to default setting.This will clear all macro settings and backlight settings.
11. Shortcut keys:
 - 1) Stop
 - 2) Previous track
 - 3) Play /Pause
 - 4) Next track

3

12. Multi-media keys (FN+F1~F12)

- FN+F1 Media player
- FN+F2 Volume down
- FN+F3 Volume up
- FN+F4 Mute
- FN+F5 My computer
- FN+F6 Favorite
- FN+F7 Search
- FN+F8 Refresh
- FN+F9 E-mail
- FN+F10 Home
- FN+F11 Lock/Unlock the Keyboard
- FN+F12 Calculator

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboards USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.



4

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

California Proposition 65

⚠ WARNING: Risk of Cancer from [Name of one or more chemicals known to cause cancer] And Reproductive Harm From [Name of one or more chemicals known to cause reproductive toxicity] Exposure - www.P65Warnings.ca.gov

5

ES

Estimado usuario

Gracias por elegir **REDRAGON** Lite. Para proteger sus derechos y obtener un mejor servicio al cliente, le pedimos que preste atención a las reglas de la garantía.

1. Dentro del periodo de garantía, la reparación está garantizada por fallas debido a problemas en el circuito eléctrico. Los daños causados por el hombre, como desmontaje, impactos fuertes, inmersión en agua, conexión a una corriente o a un voltaje incorrecto y los daños causados por desastres naturales como incendios, inundaciones o terremotos no están incluidos.
2. Las partes consumibles (tal como un bastón) y el reemplazo de repuestos no está incluido en nuestra garantía.

1

Soporte técnico

Windows XP/Vista/Win7/Win8/Win10/Win11

Introducción a las funciones

1. Con las interfaces USB estándares, el teclado se puede utilizar en computadoras sin necesidad de instalar ningún software o controlador.
2. 26 teclas sin conflicto: Q, A, Z, W, S, X, E, D, C, R, F, V, T, G, B, M, espacio, tabulador, Ctrl-L, Alt-L, Mayús-L, ↑, ↓, ←, →, Bloq. Mayús.
3. Hay 6 efectos de retroiluminación que incluyen uno definido por el usuario:

Operación	Modo de retroiluminación	Descripción
[FN] + [Insertar]	Gradual	La retroiluminación cambia en la secuencia siguiente de forma automática: rojo, amarillo, verde, cian, azul, púrpura, blanco
[FN] + [Inicio]	De un solo color	El color cambia por cada pulsación según la secuencia siguiente: rojo, amarillo, verde, cian, azul, púrpura, blanco
[FN] + [Re. Pág.]	Para definición del usuario	(Ver la nota a continuación)
[FN] + [Suprimir]	Cambiar a luz de neón	La luz cambia a luz de neón
[FN] + [Fin]	Retroiluminación intermitente	Intermitente de un solo color o intermitente gradual
[FN] + [Av. Pág.]	Activar radiar	El color cambia según la secuencia siguiente: rojo, amarillo, verde, cian, azul, púrpura, blanco

2

Nota: Presione [FN] + [Re. Pág.] dos veces para iniciar la configuración de la contraluz. Los tres indicadores LED destellarán al mismo tiempo. Presione [FN] + [1] ~ [6] una o varias veces para configurar el color de la retroiluminación en diferentes partes del teclado de izquierda a derecha o viceversa. Presione [FN] + [Re. Pág.] una vez más para guardar la configuración.

4. Presione [FN] + [Win] para deshabilitar o habilitar la tecla [Win].
5. Presione [FN] + [←] para disminuir la velocidad de la contraluz intermitente.
6. Presione [FN] + [→] para aumentar la velocidad de la contraluz intermitente.
7. Presione [FN] + [↑] para aumentar el brillo de la contraluz intermitente del teclado.
8. Presione [FN] + [↓] para disminuir el brillo de la contraluz intermitente del teclado.
9. Función de grabación con macros:
 - 1)La configuración predeterminada de las cinco teclas G es la misma que para F1~F5.
 - 2)Función de grabación con macros:
 - Paso 1: Presione [Rec] para iniciar la grabación (los tres LED destellarán a la vez).
 - Paso 2: Presione una de las cinco teclas G (G1 ~ G5).
 - Paso 3: Presione cualquier tecla para grabar. P. ej.
 - Paso 4: Presione [Rec] una vez más para guardar la grabaciónPor ejemplo, grabe "123" en G1: [Rec] → G1 → 123 → [Rec].
 - 3)Cómo borrar el registro:
 - 3.1)Para borrar una sola tecla de macro grabada: presione [Rec], luego presione la tecla G deseada (G1~G5), después presione [Rec] de nuevo para borrar el registro. Por ejemplo, para borrar el registro de macro "123" en G1: [Rec] → G1 → [Rec].
 - 3.2)Para borrar todas las teclas de macros (G1~G5): mantenga presionado FN + [Rec] durante unos 5 segundos, los tres LED destellarán una vez.
10. Presione [FN] + [ESC] + [F1] + [F3] + [F5] para configurar el teclado a la configuración predeterminada. Esto borrará todas las configuraciones de macros y configuraciones de retroiluminación.
11. Teclas de acceso directo
 - 1) Detener

3

4) Pista siguiente

12. Teclas de multimedia (FN + F1 ~ F12)
 - FN+F1 Reproductor de medios
 - FN+F2 Bajar volumen
 - FN+F3 Subir volumen
 - FN+F4 Silenciar
 - FN+F5 Mi PC
 - FN+F6 Favorito
 - FN+F7 Buscar
 - FN+F8 Actualizar
 - FN+F9 Correo electrónico
 - FN+F10 Inicio
 - FN+F11 Bloquear/desbloquear el teclado
 - FN+F12 Calculadora

Preguntas y respuestas

1. Si el teclado no reacciona, por favor controle que la interfaz esté correctamente insertado en el puerto USB correspondiente de la computadora, o intente insertar la interfaz del teclado en otro puerto USB de la computadora.
2. Si derrama un líquido sobre el teclado por error, por favor extraiga la interfaz del teclado de la computadora inmediatamente, limpie el líquido derramado en el teclado y deje secar el teclado al sol hasta que el líquido se haya evaporado por completo para poder utilizarlo.



4



REDRAGON
ADITYA
REDRAGON WIRED GAMING KEYBOARD
WITH MACRO KEYS



Please scan here to download user manual

Wired Gaming Keyboard
Operating Instructions

1

2

3

4

5