

Rocstor® Volt® C42 Charging Cart

 
User Manual



General Use


•The product is designed to charge up to 32 devices, Chromebook®, Netbooks, Laptops or Tablets, holds up to 16 inch Display .

1. Product Specifications	1
2. Package Contents	2
3. Feature & Product Overview	3, 4, 5
4. Cable Management and charge mode	6
5. Safty & Cautions	7

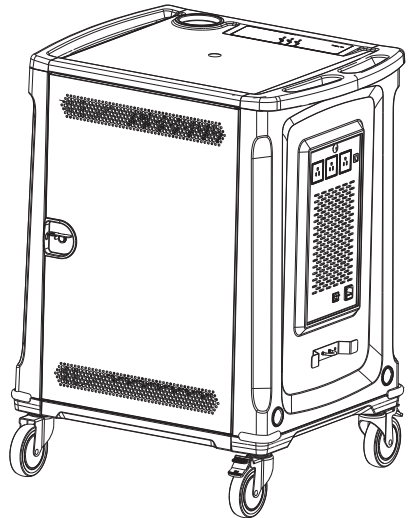


1. Product Specification

 ■ Volt® C42

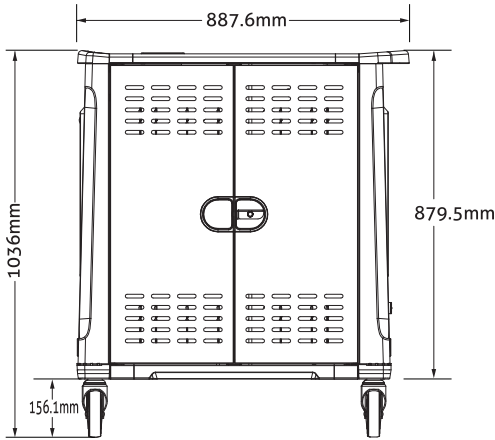

 34 x 348 x 260 mm
(1.3" x 13.7" x 10.2")

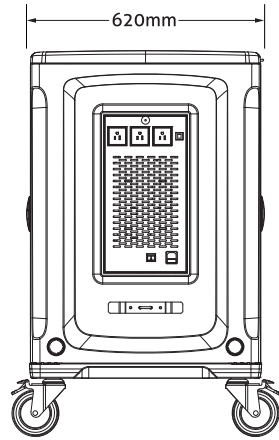


Product SPEC

Model Name	Volt®C42	Charging Type	Power receptacle
Capacity	42 Devices	Support Device	Chromebook®, Laptops or Tablets, up to 16 inch
Dim. with Packing	W950 x D710 x H1088 mm	Slot	H260 x D388 x W34 mm H10.24" x D15.28" x W1.34"
N.W. / G.W.	80 / 95 kgs (176.4 / 209.5 lbs)	Power Specification	Input: AC 100-125V, 50/60Hz, 12A AC 220-240V, 50/60Hz, 10A Output: AC 100-125V, 50/60Hz, 11A AC 220-240V, 50/60Hz, 9A

- Caution: 1. Adult operation and supervision is recommended at all times.
2. To reduce Risk of electric shock use only indoors.

 
2. Package Contents

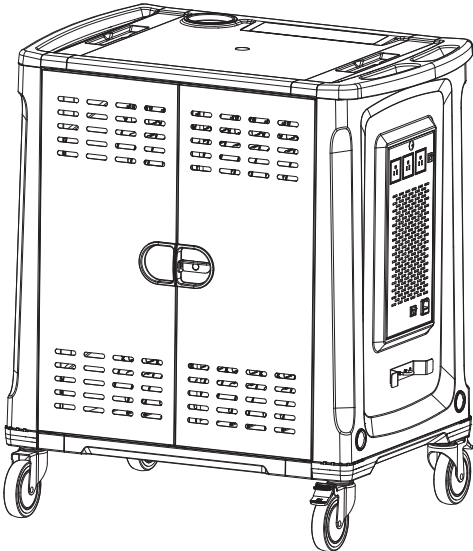


Package Contents



 Cable Ties x 42 Units



User Manual x 1 Unit

 

Power Cords x 1 Unit

Suggestion



For 100~125V 50/60Hz 12A



For 200~240V 50/60Hz 10A

3. Feature

1. Charge and store up to 42 Chromebooks, Netbooks, Laptops and Tablets.
2. **5" Healthcare grade Casters with brake lock (2 rigid / 2 swiveling).**
3. 3-point locking mechanism for security.
4. Smart charging mode will keep detect and identify the power current status and switch the charging mode automatically in full charge or cycle charge.
5. 3 external outlets to power all your peripherals from one standard wall outlet.
6. Sliding drawers for easy access to devices.
7. Over current / voltage protection.



A safety lock can be mounted door handle.



3 extra power outlets for external use.

 
 


5" Healthcare grade Casters with Brake lock (2 rigid / 2 swiveling).



Wire management for quick and easy storage of cable when not in use.

● Product Overview

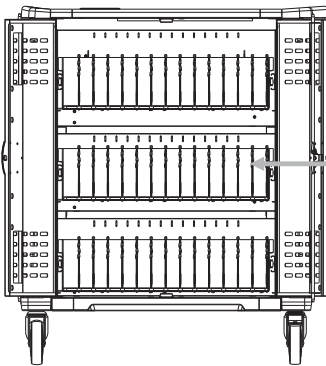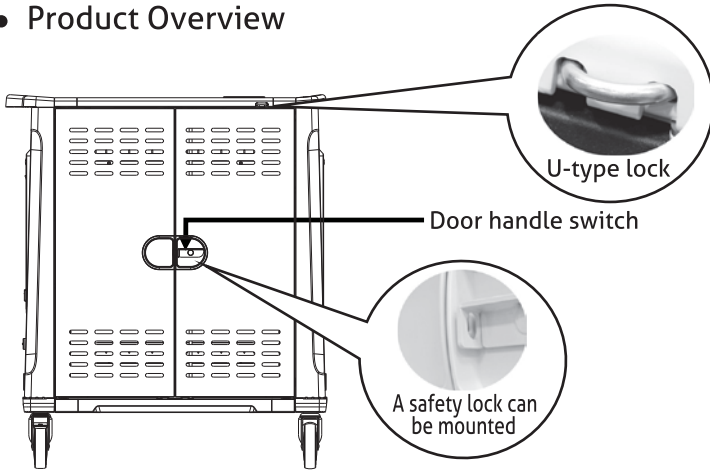


Storage compartments

Slot dimension : H10.24" x D15.28" x W1.34"


Quantity of storage compartments:
14 compartments each layer may
accommodate up to 42 laptops or
tablet PCs

 ● Back View of Inside

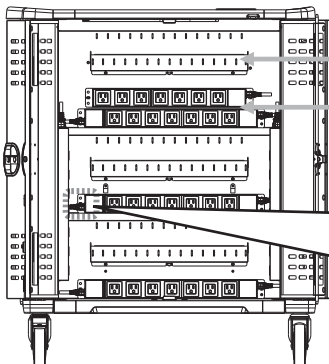


Storage compartments
You may use a cable fix the cables not in use

 US TYPE PDU

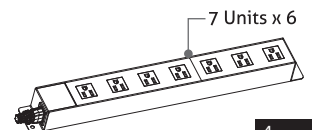



U chain security locking

 - ▶ Two U hooks on the top & bottom of the charging cart provided security, the hook can be used to chain down the cart.

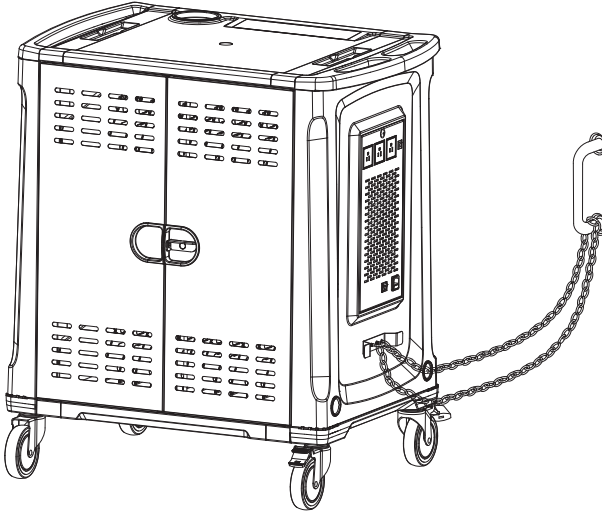


4. Cable Management and charge mode

  ■ Cable clips for cable management

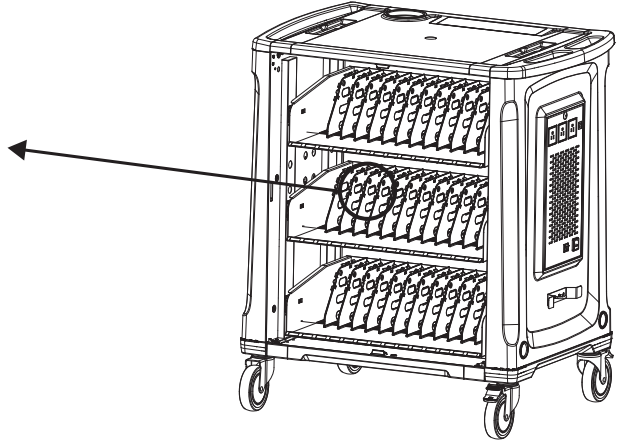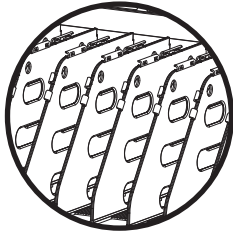


■ Top side of cart

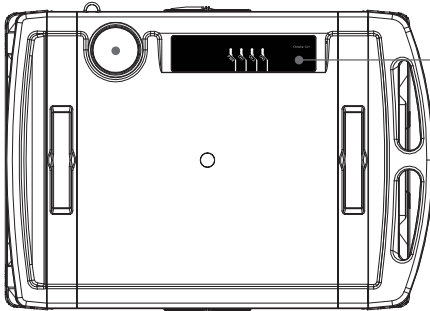 

Led indicator

 PWR : Color green → Power on
CH1-CH3 : Color white → charging

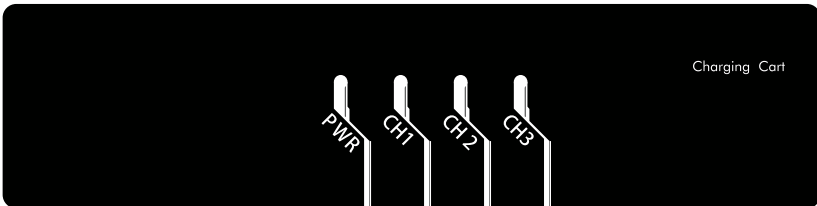

Charging Cart

Smart charging

The built-in smart charging system monitors all 42 devices, and determines the best charging sequence. No programming required, the MCU(Micro Control Unit) controls power charging simultaneously on all the outlets to avoid overloading. It is automatic, safe, and Intelligent!

5. Safty & Cautions

Electrical Safety:



WARNING: Failure to observe the following Electrical Safety notices can result in fire or death by electric shock.

1. Inspect power cables carefully before each use.
2. Always turn OFF the power to the product before plugging IN or OUT.
3. Do not unplug by pulling on the cable.
4. Do not unplug the power cord from the outlet when your hands are wet.
5. Do not use cables that are damaged.
6. Do not walk or drive or place objects over the power cable.
7. Do not plug the cable into an extensive cable.
8. Keep the door closed and locked when in use.
9. Keep the Cart away from water.
10. Do not place the Cart close to flammable liquids or gases.

Safe Use Guideline and Recommendations



WARNING: Failure to observe the following Cart Use Safety notices may result in serious personal injury or equipment damage.

1. This product is designed to be used indoors only.
2. This product is not designed to be operated by a child or student. Only Adult operation and supervision is needed at all times.
3. Do not allow anyone to sit, stand or climb on the product.
4. Do not place TV or monitor or any heavy objects on top of the product.
5. Do not use the product to store liquids or cleaning supplies.
6. Move / Push the Cart with caution. (Do not pull the Cart)
7. Keep the door closed and locked when in use and when it is unattended.
8. Keep the castors locked when Cart is not in transit.
9. Keep the ventilation holes unblock for air circulation.
10. Disconnect the power cable from the wall before relocate the main unit.

Cautions when moving the Cart:

Before moving the Cart

1. Disconnect the power cable from the wall.
2. Make sure the cable is wrapped and secure.
3. Close and lock the doors.
4. Unlock the casters.
5. Move / Push the Cart with caution.
6. Do not move the Cart across rough, uneven or irregular surfaces/floor.

Cautions when parking the Cart:

1. Do not park the Cart in areas of heavy traffics.
2. Do not leave Cart in unattended areas where children have access.
3. Keep Cart doors closed and locked whenever it is unattended or parked for charging or storage.
4. Keep Cart casters locked whenever it is unattended or parked for charging or storage.



c  US
LISTED
I.T.E.
E341990



Ver.1, Mar. 2017

Rocstor

12979 Arroyo Street
2nd Floor
San Fernando, CA, 91340
www.rocstor.com
+1 (818) 727 7000

